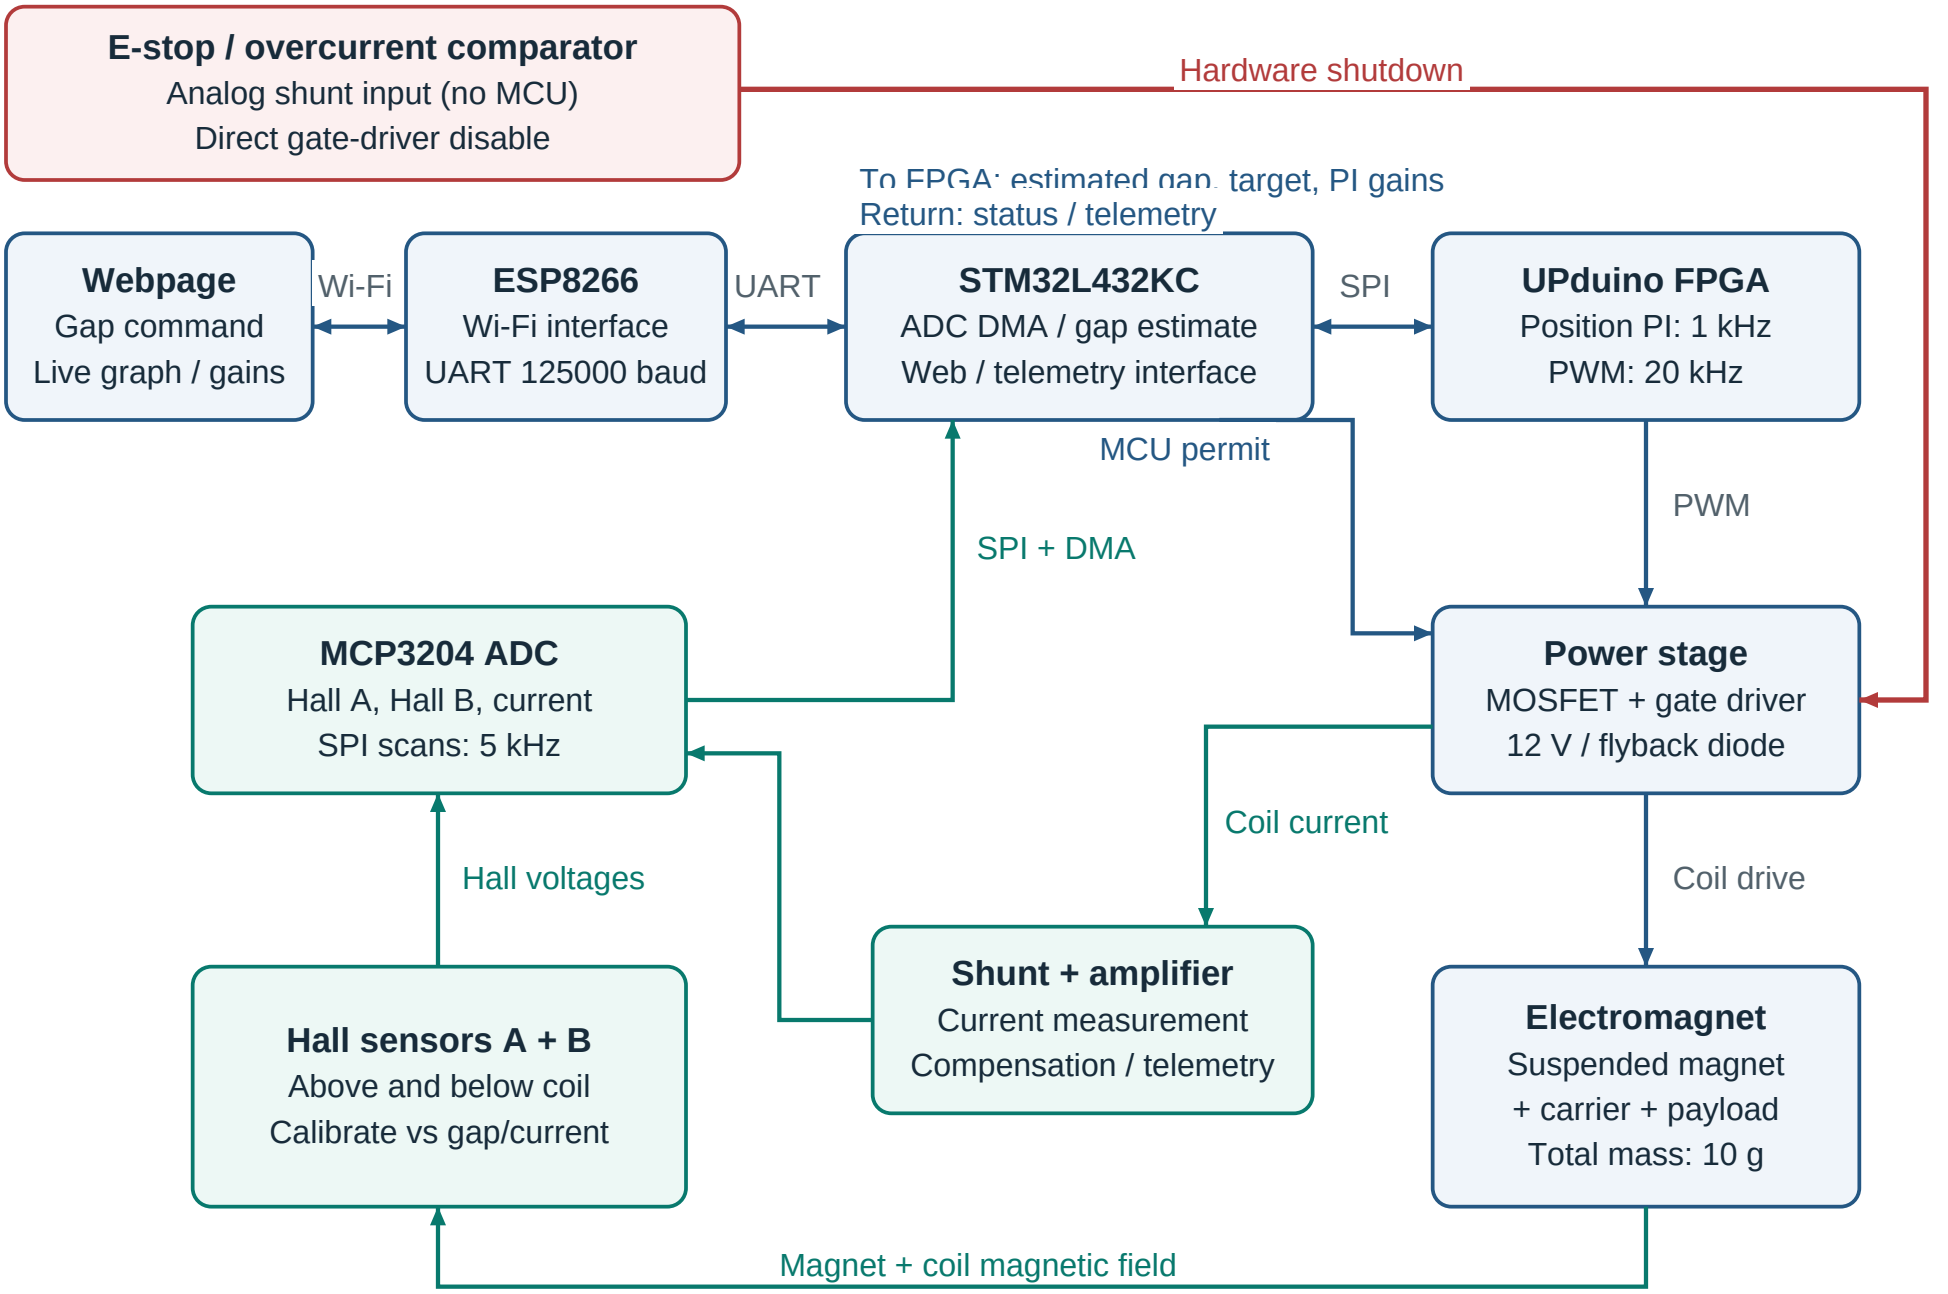Magnetic levitation: position PI drives PWM duty directly