Test

#### **Side Channel Attacks and Countermeasures**

#### M. Tehranipoor

Introduction to Hardware Security & Trust University of Florida

**Acknowledgement:** Several slides are obtained from Josep Balasch, KU Leuven ESAT / COSIC from his 5th International COSIC Course

#### **Outline**

- Introduction
- Side-Channel Emissions
- Attacks Using Side-Channel Information
  - Countermeasures
- Side-Channel Attacks on Microcontrollers
  - Countermeasures


February 22, 2024

#### Introduction

- Classic cryptography views the secure problems with mathematical abstractions
- The classic cryptanalysis has had a great success and promise
  - Analyzing and quantifying crypto algorithms' resilience against attacks
- Recently, many of the security protocols have been attacked through physical attacks
  - Exploit weaknesses in the cryptographic system hardware implementation aimed to recover the secret parameters

February 22, 2024

## Traditional Model (simplified view)

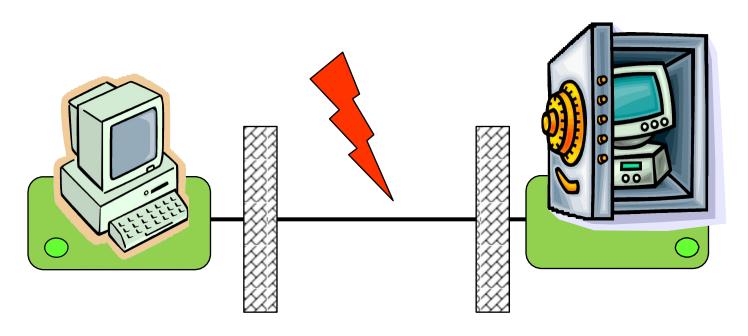

- Attack on channel between communicating parties
- Encryption and cryptographic operations in black boxes
- Protection by strong mathematic algorithms and protocols
- Computationally secure

## **Embedded Cryptographic Devices**

 A cryptographic device is an electronic device that implements a cryptographic algorithm and stores a cryptographic key. It is capable of performing cryptographic operations using that key.

#### **IDENTIFICATION PAYMENT**



#### MULTIMEDIA










- Embedded: it is <u>exposed</u> to adversaries in a <u>hostile</u> environment; full physical access, no time constraints
  - O Remark: the adversary might be a legitimate user!

#### **How is Embedded Security Affected?**

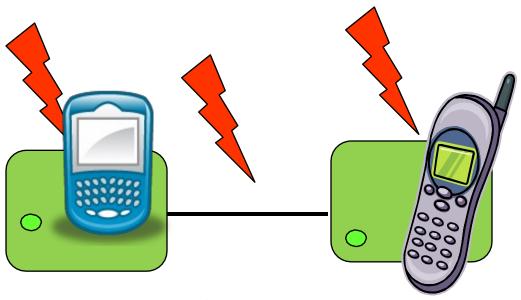


- New Model (also simplified view):
  - Attack on channel and endpoints
  - Encryption and cryptographic operations in gray boxes
  - Protection by strong mathematic algorithms and protocols
  - Protection by secure implementation
- Need secure implementations not only algorithms

## **Keep in Mind**

# A system is as secure as its weakest link

#### A system is as secure as its weakest link

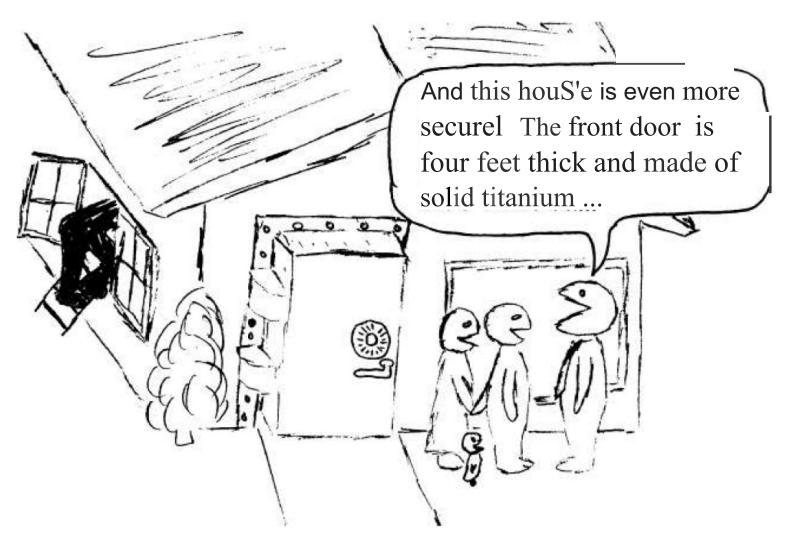


source: Paul Kocher

## Side-Channel Leakage

#### Physical attacks ≠ Cryptanalysis

(gray box, physics) (black box, maths)

Does not tackle the algorithm's math

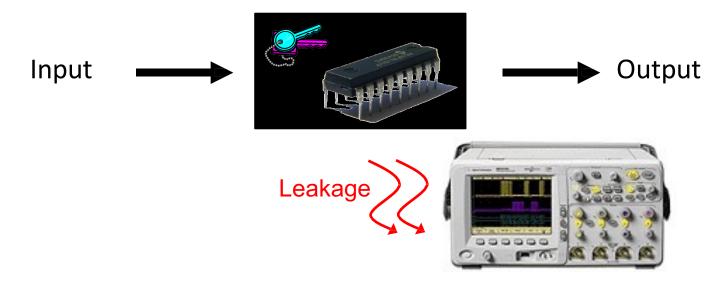


 Observe physical quantities in the device's vincinity and use additional information during cryptanalysis


## Some Side-Channels (not exhaustive)

- Passive:
  - Timing
    - Overall or "local" execution time

- execution time time
- Power, Electromagnetic (EM) radiation
  - Predominant CMOS technology
  - Dynamic power consumption
  - Electric current induces an EM field

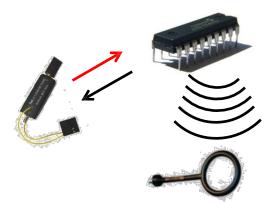

- More exotic but shown to be practical
  - Sound, temperature, ...
- <u>Invasive</u>: Photonic emissions

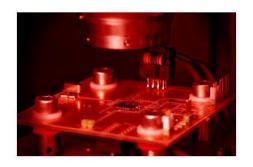


#### **Invasive Attacks**


- Passive: micro-probing
  - Probe the bus with a very thin needle
  - Read out data from bus or individual cells directly
  - Several needles concurrently



- Connect or disconnect security mechanism
  - Disconnect security sensors
  - RNG stuck at a fixed value
  - Reconstruct blown fuses
- Cut or paste tracks with laser or focused ion beam
- Add probe pads on buried layers

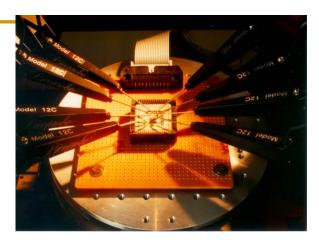

source: Helena Handschuh

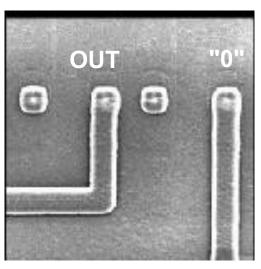


[www.fa-mal.com]

**RNG** 

## Fault Injection Attacks (I)

Non-(semi)invasive: apply combination of unaccounted environmental conditions

- o Vcc
- Glitch
- Clock
- Temperature
- o UV
- Light
- X-Rays
- O ...

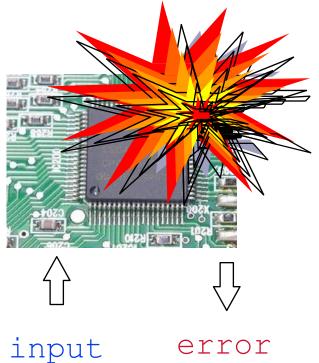

And bypass security mechanisms or infer secrets

slide source: Helena Handschuh

## Fault Injection Attacks (II)

 Invasive: exploit faulty behavior provoked by physical stress applied to the device

- Laser fault injection allows to target a relatively small surface area of the target device
- Laser pulse frequency ~ 50Hz
- Fully automated scan of chip surface
- Once you have a weak spot: perturbate and exploit



## Side-Channel Emissions In This Lecture

- □ Power Consumption -- Logic circuits typically consume differing amounts of power based on their input data.
- Electro-Magnetic -- EM emissions, particularly via near-field inductive and capacitive coupling, can also modulate other signals on the die.
- Optical -- The optical properties of silicon can be modulated by altering the voltage or current in the silicon.
- □ **Timing and Delay** -- Timing attacks exploit data-dependent differences in calculation time in cryptographic algorithms.
- □ Acoustic -- The acoustic emissions are the result of the piezoelectric properties of ceramic capacitors for power supply filtering and AC to DC conversion.


## So What Really is Side-Channel Attack?

- Side-Channel attacks aim at side-channel inputs and outputs, bypassing the theoretical strength of cryptographic algorithms
- Five commonly exploited side-channel emissions:
  - Power Consumption
  - Electro-Magnetic
  - Optical
  - Timing and Delay
  - Acoustic

## **Measuring Power Consumption**




- Instantaneous power over time
  - Trace or curve, many samples

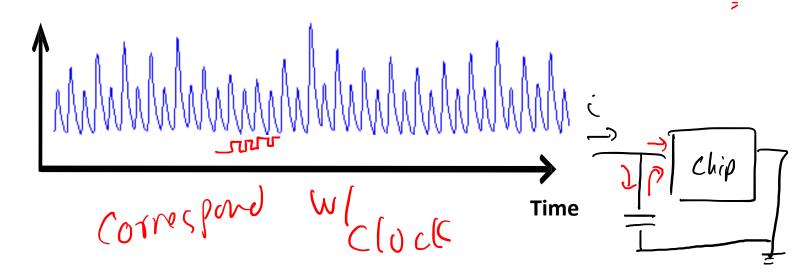

## **Measuring Power Consumption**


#### Typical (automated) measurement setup

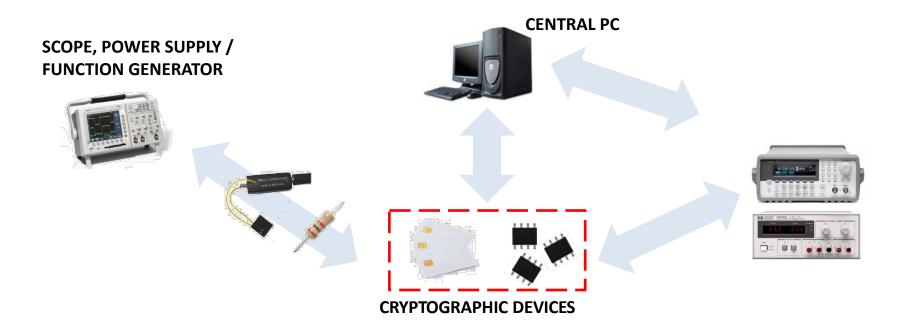

## **Measuring Power Consumption**


• **Logic**: constant supply voltage, supply current varies

- Predominant technology: CMOS
  - Low static power consumption
  - Relatively high dynamic power consumption
  - Power consumption depends on input

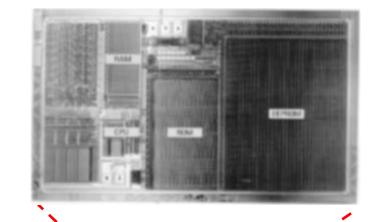

CMOS inverter:


Input	Output	Current
0 \rightarrow 0	1 → 1	Low
0 → 1	1 → 0	Discharge
1 → 0	0 → 1	Charge
1 → 1	0 → 0	Low

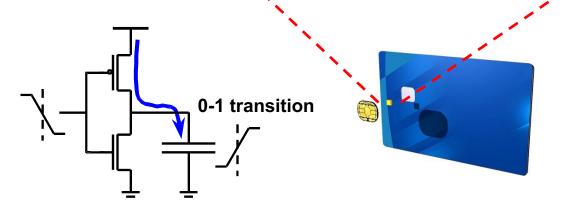

## **Hardware Targets**

- Two common victims of hardware cryptanalysis are smart cards and FPGAs
  - Attacks on smart cards are applicable to any general purpose processor with a fixed bus architecture.
  - Attacks on FPGAs are also reported.
     FPGAs represent application specific devices with parallel computing opportunities.



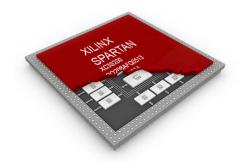


#### **Smart Cards**



- Smart cards have a small processor (8bit in general) with ROM, EEPROM and a small RAM
- Eight wires connect the processor to the outside world
- Power supply: There is no internal battery
- Clock: There is no internal clock
- Typically equipped with a shield that destroys the chip if a tampering happens

#### **FPGAs**

- FPGAs allow parallel computing
- Multiple programmable configuration bits

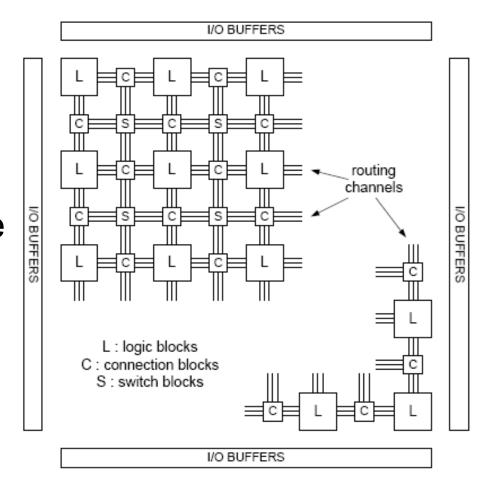

## **Attack Model / Assumptions**

- Consider a device capable of implementing the cryptographic function
- The key is usually stored in the device and protected
- Modern cryptography is based on Kerckhoffs's assumption → all of the data required to operate a chip is entirely hidden in the key

Attacker only needs to extract the key

#### **Attack Phases**


- Such attacks are usually composed of two phases:
  - Interaction phase: interact with the hardware system under attack and obtain the physical characteristics of the device
  - Analysis phase: analyze the gathered information to recover the key

## Principle of divide-and-conquer attack

- The divide-and-conquer (D&C) attack attempts at recovering the key by parts
- The idea is that an observed characteristic can be correlated with a partial key
  - The partial key should be small enough to enable exhaustive search
- Once a partial key is validated, the process is repeated for finding the remaining keys
- D&C attacks may be iterative or independent

#### **Power Attacks**

 Measure the circuit's processing time and current consumption to infer what is going on inside it.

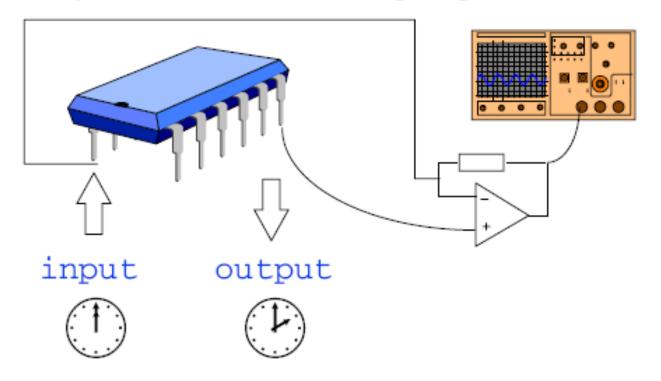

## **Measuring Phase**

- The task is usually straightforward
  - Easy for smart cards: the energy is provided by the terminal and the current can be read
- Relatively inexpensive (<\$1000) equipment can digitally sample voltage differences at high rates (1GHz++) with less than 1% error
- Device's power consumption depends on many things, including its structure and data being processed

## Simple Power Analysis (SPA)


- Originally proposed by Paul Kocher, 1996
- Monitor the device's power consumption to deduce information about data and operation
- Example: SPA on DES smart cards
  - The internal structure is shown on the next slide
- Summary of DES a block cipher
  - a product cipher
  - 16 rounds iterations
    - substitutions (for confusion)
    - permutations (for diffusion)
  - Each round has a round key
    - Generated from the user-supplied key

February 22, 2024 30

Known


#### **DES Basic Structure**

- Input: 64 bits (a block)
- Li/Ri– left/right half (32 bits) of the input | block for iteration i– subject to substitution S and permutation P
- K user-supplied key
- Ki round key:
  - 56 bits used +8 unused
     (unused for encryption but often used for error checking)
- Output: 64 bits (a block)
- Note: Ri becomes L(i+1)
- All basic op's are simple logical ops
  - Left shift / XOR

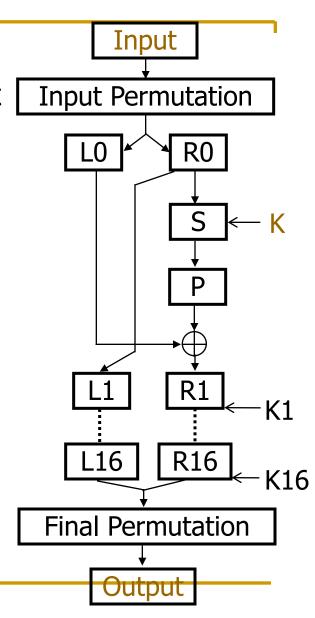

February 22, 2024

## SPA on DES (cont'd)

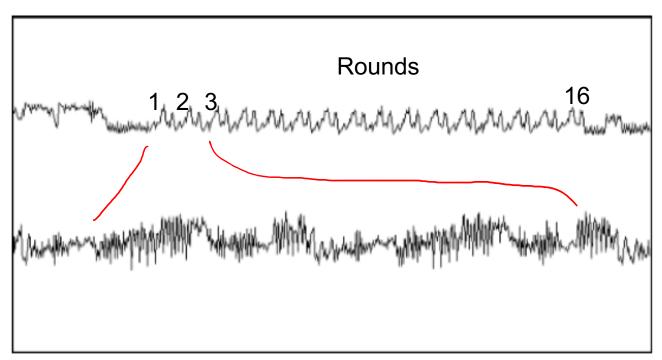


- The upper trace entire encryption, including the initial phase, 16 DES rounds, and the final permutation
- The lower trace detailed view of the second and third rounds
- The power trace can reveal the instruction sequence

#### **SPA**


- SPA can be used to break cryptographic implementations (execution path, instruction, key change, etc.)
  - DES key schedule: Involves rotating 28-bit key registers
  - DES permutation: involves conditional branching
  - Comparison: Involves string and memory comparison operations performing a conditional branch when a mismatch is found
  - Multipliers: Involves modular multiplication The leakage function depends on the multiplier design but strongly correlated to operand values and Hamming weights
  - Exponentiators: Involves squaring operation and multiplication
- SPA Countermeasure:
  - Avoid procedures that use secret intermediates or keys for conditional branching operation

#### **SPA**

- The DES structure and 16 rounds are known
- Instruction flow depends on data → power signature
- Example: Modular exponentiation in DES is often implemented by square and multiply algorithm
- Typically the square operation is implemented differently compared with the multiply (for speed purposes)
- Then, the power trace of the exponentiation can directly yields the corresponding value
- All programs involving conditional branching based on the key values are at risk!

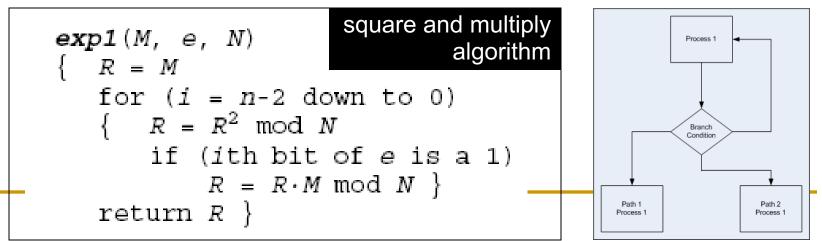

## Timing-Based SPA

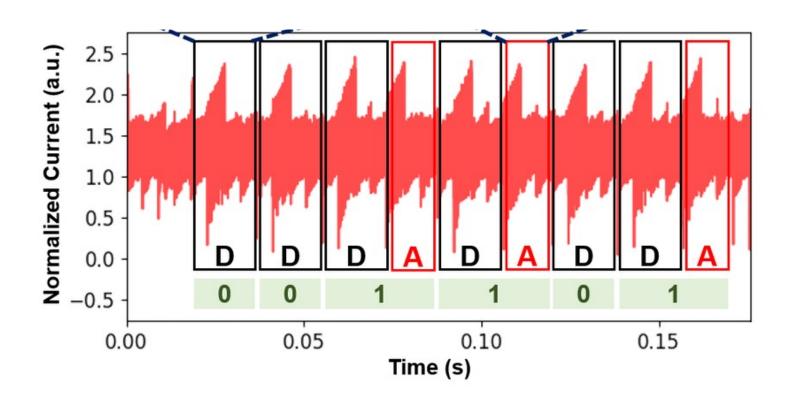

## **RSA Cryptosystem**

- Key generation:
  - Generate large (say, 2048-bit) primes p, q
  - Compute n=pq and φ(n)=(p-1)(q-1)
  - $\Box$  Choose small e, relatively prime to  $\varphi(n)$ 
    - Typically, e=3 (may be vulnerable) or e=2<sup>16</sup>+1=65537 (why?)
  - □ Compute unique d such that ed = 1 mod  $\varphi(n)$
  - Public key = (e, n); private key = (d, n)
    - Security relies on the assumption that it is difficult to factor n into p and q
- Encryption of m: c = me mod n
- Decryption of c: c<sup>d</sup> mod n = (m<sup>e</sup>)<sup>d</sup> mod n = m

## **How Does RSA Decryption Work?**

- RSA decryption: compute y<sup>x</sup> mod n
  - This is a modular exponentiation operation
- Naive algorithm: square and multiply

```
Let s_0 = 1.

For k = 0 upto w - 1:

If (\text{bit } k \text{ of } x) is 1 then

Let R_k = (s_k \cdot y) \mod n.

Else

Let R_k = s_k.

Let s_{k+1} = R_k^2 \mod n.

EndFor.

Return (R_{w-1}).
```

#### **Kocher's Observation**

Whether iteration takes a long time depends on the k<sup>th</sup> bit of secret exponent For 
$$k=0$$
 upto  $w-1$ :

If  $\text{bit } k \text{ of } x)$  is 1 then to compute to compute Let  $R_k = (s_k \cdot y) \mod n$ .

Else Let  $R_k = s_k$ . This is instantaneous Let  $s_{k+1} = R_k^2 \mod n$ .


EndFor. Return  $(R_{w-1})$ .

#### **Outline of Kocher's Attack**

- Idea: guess some bits of the exponent and predict how long decryption will take
- If guess is correct, we will observe correlation; if incorrect, then prediction will look random
  - This is a signal detection problem, where signal is timing variation due to guessed exponent bits
  - The more bits you already know, the stronger the signal, thus easier to detect (error-correction property)
- Start by guessing a few top bits, look at correlations for each guess, pick the most promising candidate and continue

- Another option for HW is to use more gates to accelerate slow (square and multiply) algorithms to run in the same time.
  - Eliminates timing-based attacks.
  - But causes power-consumption problems.


### Power-Based SPA

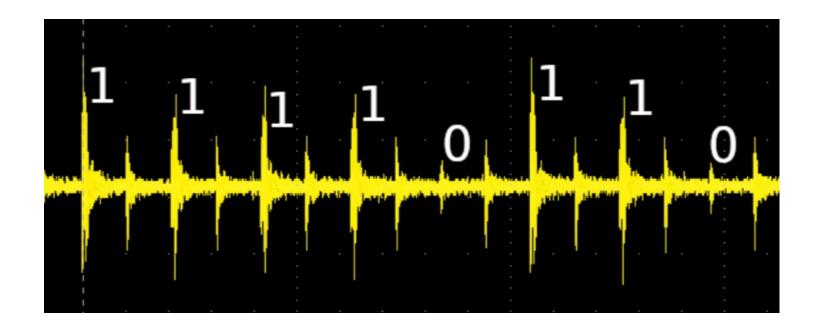


# Differential Power Analysis (DPA)

- SPA targets variable instruction flow
- DPA targets data-dependence
  - Different operands present different power
- Difference between smart cards and FPGAs
  - In smart cards, one operation running at a time
    - → Simple power tracing is possible
  - In FPGAs, typically parallel computations prevent visual SPA inspection → DPA



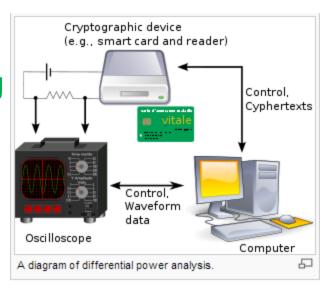

# **DES**

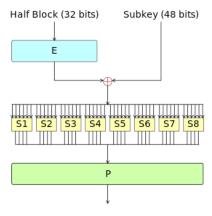

# **DES Sbox**

S <sub>5</sub>		Middle 4 bits of input															
		0000	0001	0010	0011	0100	0101	0110	0111	1000	1001	1010	1011	1100	1101	1110	1111
Outer bits	00	0010	1100	0100	0001	0111	1010	1011	0110	1000	0101	0011	1111	1101	0000	1110	1001
	01	1110	1011	0010	1100	0100	0111	1101	0001	0101	0000	1111	1010	0011	1001	1000	0110
	10	0100	0010	0001	1011	1010	1101	0111	1000	1111	1001	1100	0101	0110	0011	0000	1110
	11	1011	1000	1100	0111	0001	1110	0010	1101	0110	1111	0000	1001	1010	0100	0101	0011


Control hidden Flys (f) Kry input Was 100Nove 0000 0000 0000 "higher" 1013 0000 1111

() 0*00* 

1010 1010 (1) Special

(z) mode (of power consumption


#### **Power Attacks**

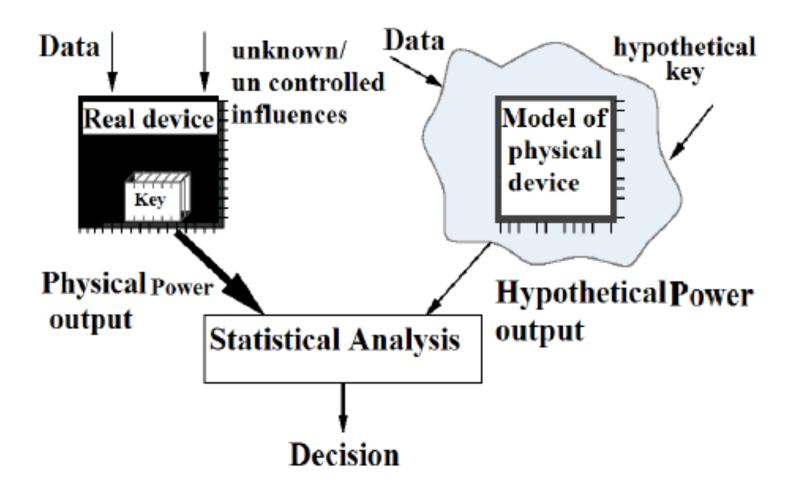

# **Measuring Power Consumption**


• **Logic**: constant supply voltage, supply current varies

- Predominant technology: CMOS
  - Low static power consumption
  - Relatively high dynamic power consumption
  - Power consumption depends on input

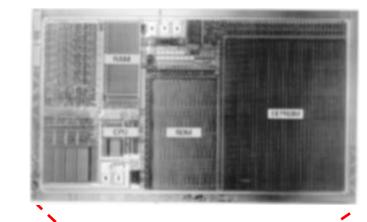


CMOS inverter:

Input	Output	Current
0 → 0	1 → 1	Low
0 → 1	1 → 0	Discharge
1 → 0	0 → 1	Charge
1 → 1	0 \rightarrow 0	Low

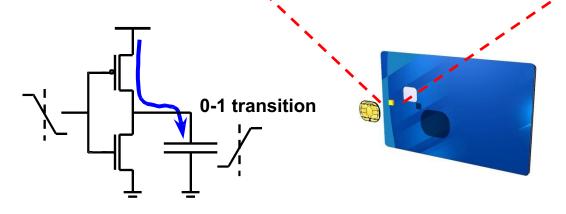


#### **DPA**

- DPA can be performed on any algorithm that has the operation β=S(α⊕K),
  - $oxed{\square}$   $\alpha$  is known and K is the segment key

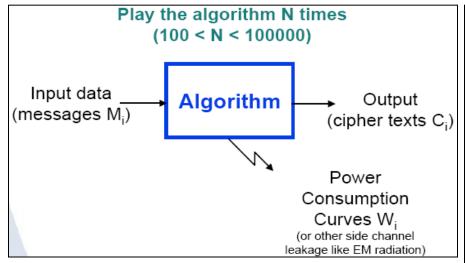

The waveforms are captured by a scope and sent to a computer for analysis

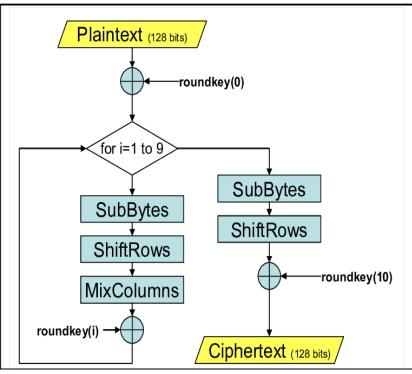

### What is available after acquisition?

After data collection, what is available?


N plain and/or cipher random texts

00 B688EE57BB63E03E

01 185D04D77509F36F

02 C031A0392DC881E6 ...

N corresponding power consumption waveforms

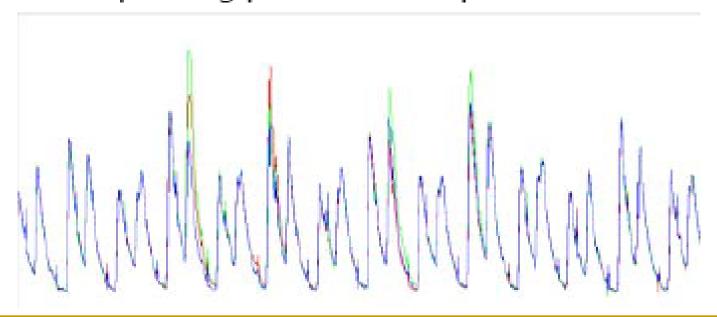

- Assume the data are processed by a known deterministic function f (transfer, permutation...)
- Knowing the data, one can re-compute off line its image through f

 $M_i \longrightarrow f \longrightarrow M'_i = f[M_i]$ 


- Now select a single bit among M' bits (in M' buffer)
- One can predict the true story of its variations

i	Message	bit	
0	B688EE57BB63E03E	1	
1	185D04D77509F36F	0	
2	C031A0392DC881E6	1	

The bit will classify the wave wi

- Hypothesis 1: bit is zero
- Hypothesis 2: bit is one
- A differential trace will be calculated for each bit!


 Partition the data and related curves into two packs, according to the selection bit value...

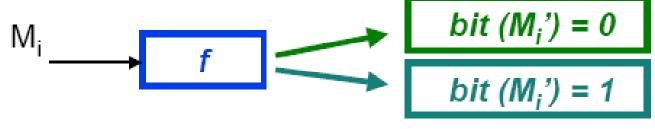

0	B688EE57BB63E03E	1	
1	185D04D77509F36F	0	
2	C031A0392DC881E6	1	

- Sum the signed consumption curves and normalise
- <=> Difference of averages  $(N_0 + N_1 = N)$


$$DPA = \frac{\sum W_1}{N_1} - \frac{\sum W_0}{N_0}$$

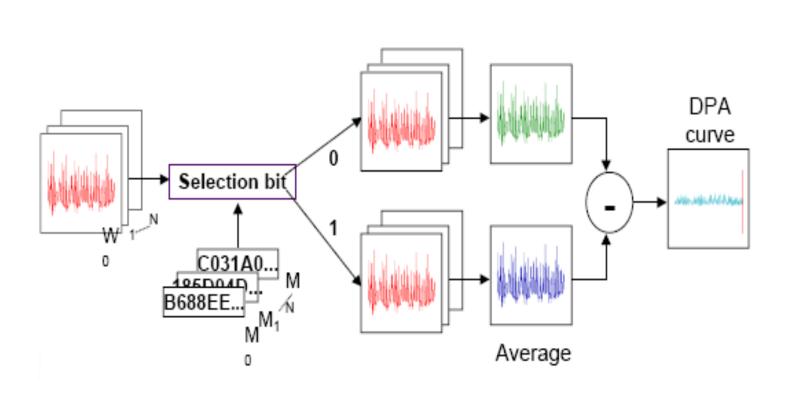


$$\Delta_n = \frac{\sum_{w_i \in S_0} w_i}{|S_0|} - \frac{\sum_{w_i \in S_1} w_i}{|S_1|}$$

### **DPA** -- testing


The right guess provides the highest spikes!

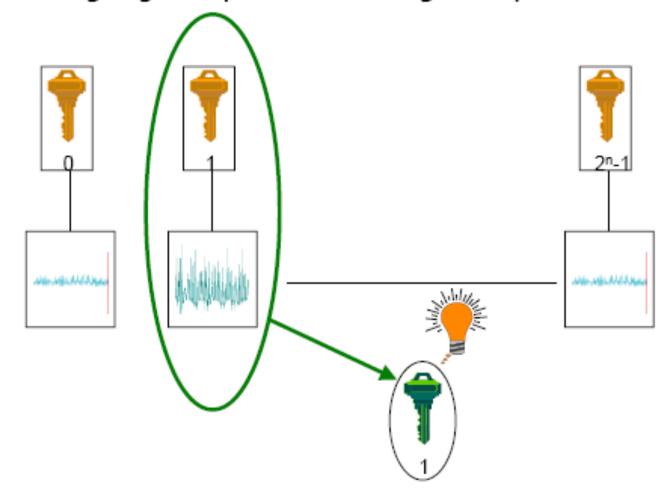


### DPA -- testing

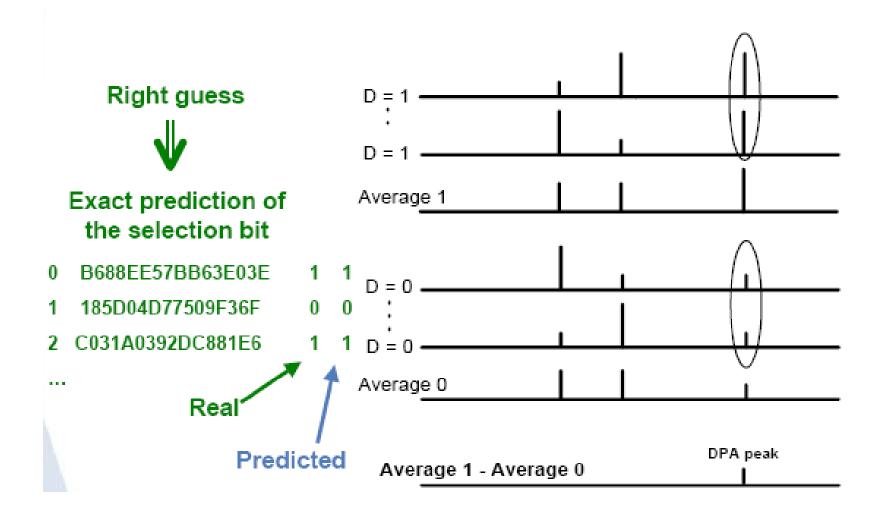

# **DPA** – the wrong guess

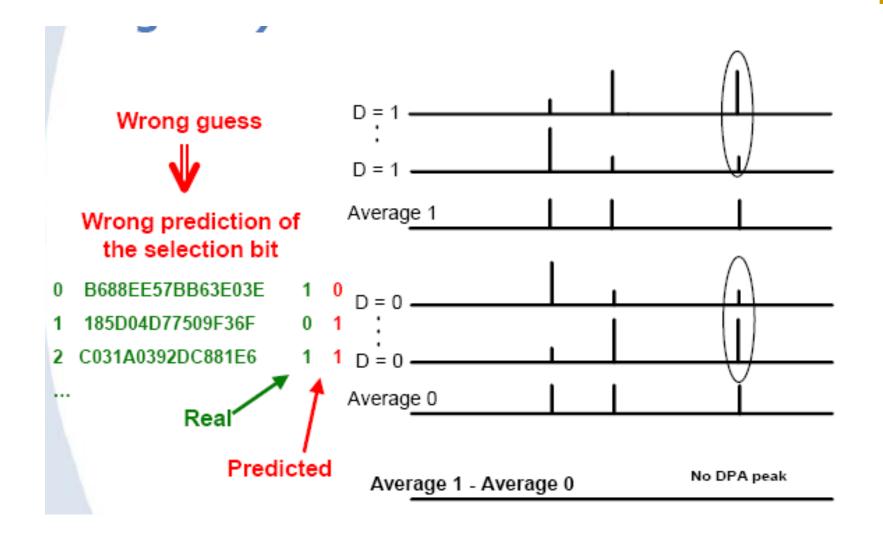

 The DPA waveform with the highest peak will validate the hypothesis

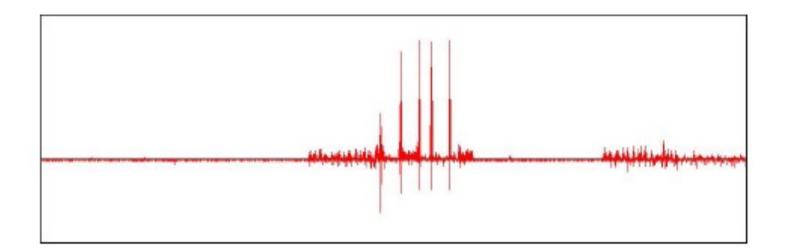



### Example: DPA on DES

- Assumption: Attacker presumes detailed knowledge of the DES
- Divide-and-conquer strategy, comparing powers for different inputs
  - Record large number of inputs and record the corresponding power consumption
  - Start with round 15 -- We have access to R<sub>15</sub>, that entered the last round operation, since it is equal to L<sub>16</sub>
  - □ Take this output bit (called M'<sub>i</sub>) at the last round and classify the curves based on the bit
    - 6 specific bits of R<sub>15</sub> will be XOR'd with 6 bits of the key, before entering the S-box
    - By guessing the 6-bit key value, we can predict the bit b, or an arbitrary output bit of an arbitrary S-box output

Thus, with 16 partitions, one for each possible key, we can break the cipher much faster


A closer look at HW Implementation of DES

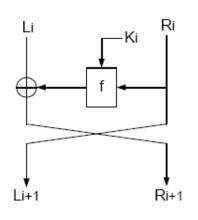

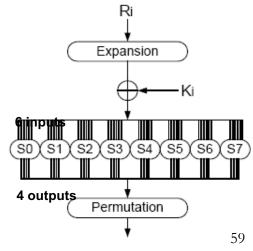


# Attacking a secret key algorithm

- DPA works thanks to the perfect prediction of the selection bit
- How to break a key?

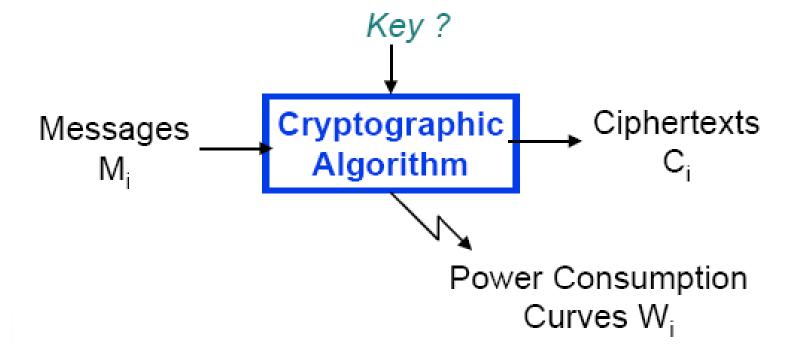


# **Typical DPA Target**

 Basic mechanism in Secret Key algorithms (AES, DES...)

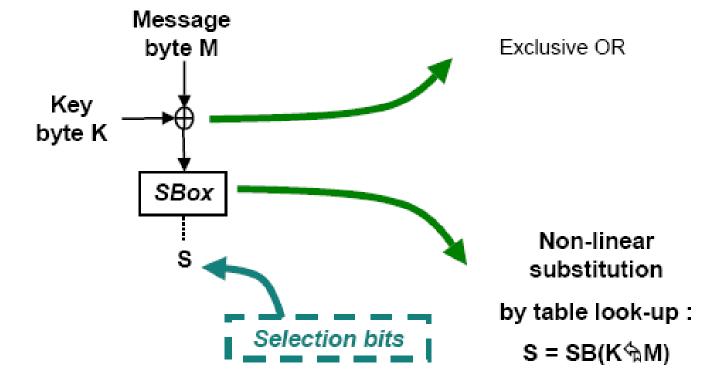


### Example – DPA on AES

- Example : AES 128 bits key = 16 bytes K<sub>i</sub> (i = 1 to 16)
  - Test 256 guesses per K<sub>i</sub> with 256 DPA
  - 128 key bits disclosed with 16 x 256 = 4096 DPA ( << 2<sup>128</sup>!)

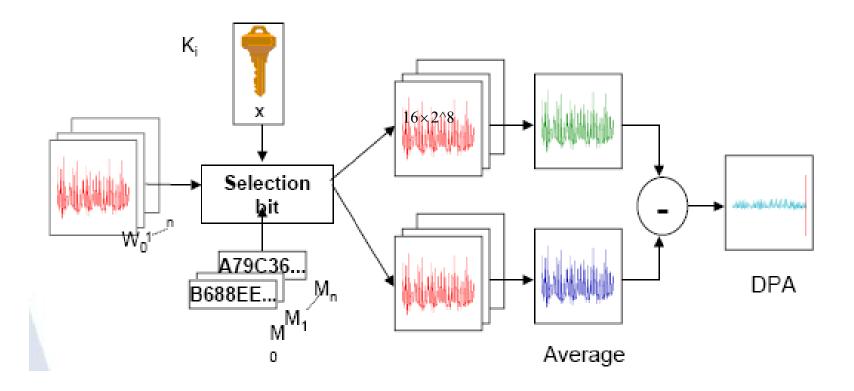

# Example – hypothesis testing

DPA on AES:  $1^{st}$  round and  $1^{st}$  byte (right guess = 1)

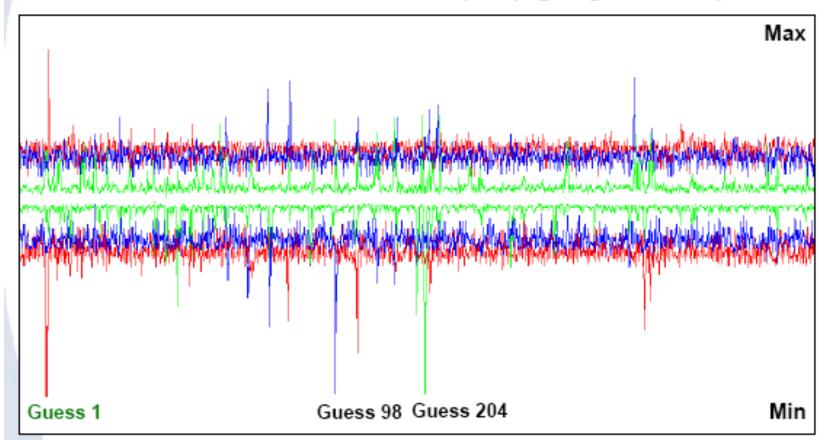

#### **General Countermeasures**


- Hiding -- reduce the SNR by either increasing the noise or reducing the signal
  - Noise Generators, Balanced Logic Styles, Asynchronous Logic, Low Power Design and Shielding
- Masking/Blinding -- remove the correlation between the input data and the side-channel emissions from intermediate nodes in the functional block
- Design Partitioning -- separate regions of the chip that operate on plaintext from regions that operate on ciphertext
- Physical Security and Anti-Tamper -- denial of proximity, access, and possession

#### **Anti-DPA countermeasures**

- Applicative counter-measures : make message free randomization impossible !
  - Fix some message bytes
  - Constrain the variable bytes (ex : transaction counter)
- Decorrelate power curves from data
  - by hardware : current scramblers (additive noise)
  - by software : data whitening
- Desynchronise the N traces (curves misalignment)
  - software random delays
  - software random orders (ex : SBoxes in random order)
  - hardware wait states (dummy cycles randomly added by the CPU)
  - hardware unstable internal clock (phase shift)
  - DPA is powerful, generic (to many algorithms) and robust (to model errors)...
  - but there are counter-measures!

### **Anti-DPA**

#### Internal clock phase shift

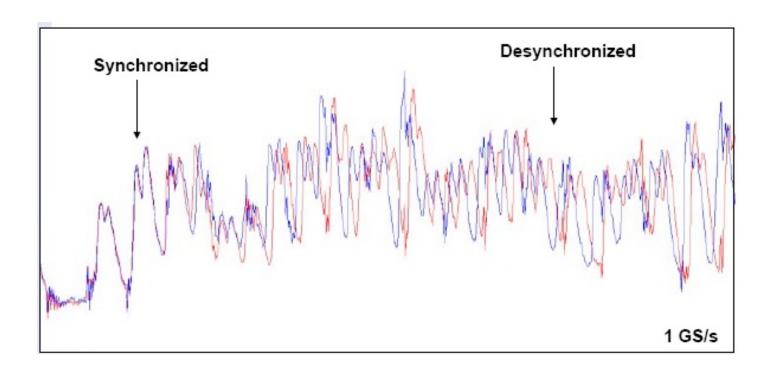

# Timing attacks

- Running time of a crypto processor can be used as an information channel
- The idea was proposed by Kocher, Crypto'96
  - You put \$28 in one of the pots and \$10 in the other:





- Question: Compute
  - Blue \* 10 + Red \*7
  - Tell me if the result is odd or even.
- Is your answer enough to reveal what's in each pot?

# Timing attacks (cont'd)

Well, normally not :

$$28*7 + 10*10 = 296$$

is an even number


and

$$10 * 7 + 28 * 10 = 350$$

is also even...

 However, just by monitoring the time it takes to give the answer one can tell where each amount is!

# **Electromagnetic Power Analysis**

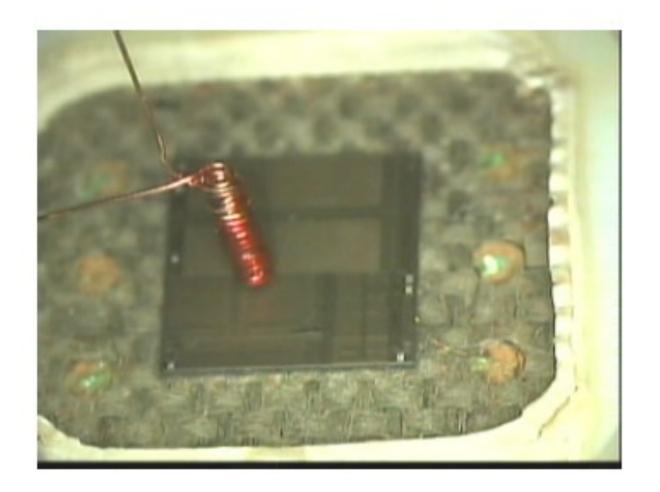


# EMA – probe design

- Hamming distance model for information leakage
   Correlated to the number of flipping bits (CMOS, VLSI)
- Electrical transitions disturb EM near field (and its flow φ)
- Captation by inductive probe
  - Handmade solenoid  $V = -\frac{d\phi}{dt}$


(Diameter = 150 to 500 μm)

- Difficult to calibrate
   (Bandwidth > 100 MHz, low voltage, parasitic effects)
- Good acquisition chain required, but no Faraday cage (Sampling at 1GHz)

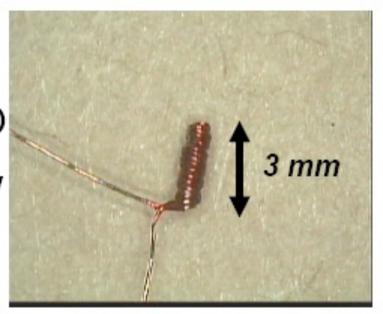

# **EMA** signal

- Raw signals (TIA: transfer into accumulator instruction)
  - Power is less noisy
  - But EM signatures are sharper!

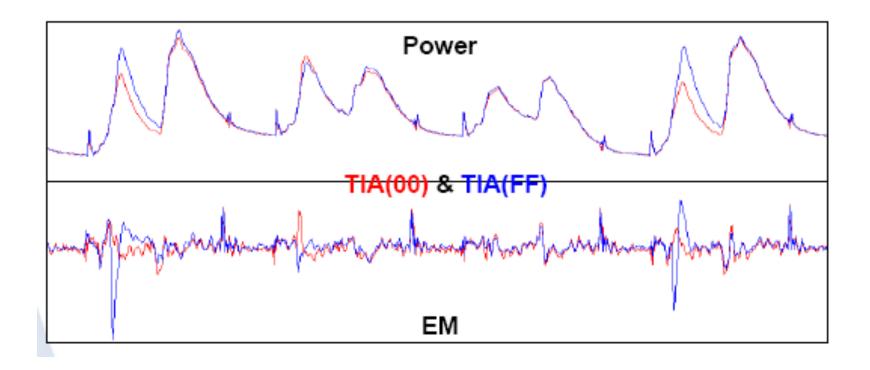



# **Spatial Positioning**

Horizontal cartography (XY plane)


to pinpoint instruction related areas

better if automated

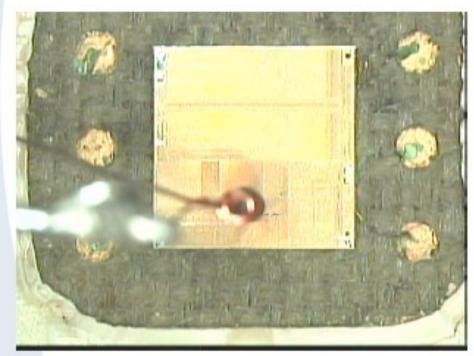

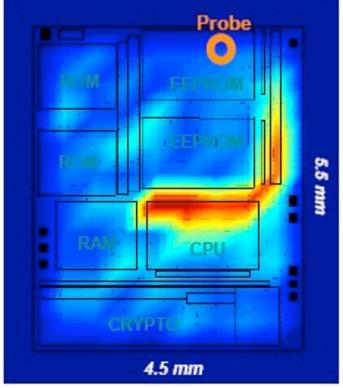


# Spectral density of the chip surface

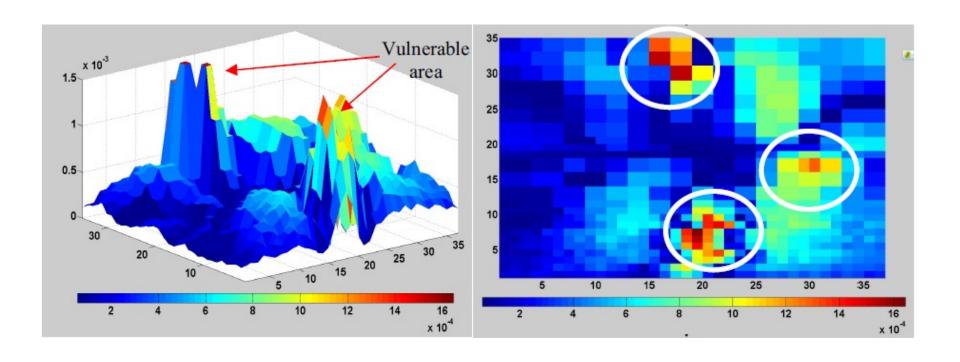

# **Spatial Positioning**

EM signals versus XY probe position
 Differential traces between (00h ⊕ 00h) and (FFh ⊕ 00h) picked up at different locations

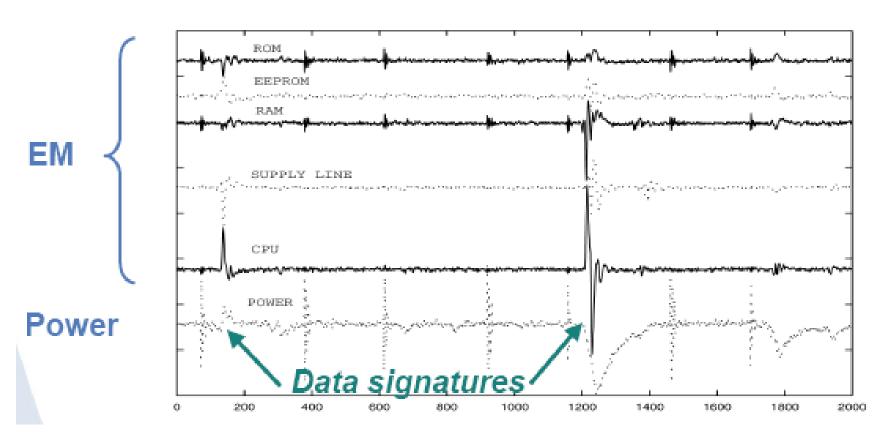

# EMA (cont'd)

#### Advantage of EMA versus PA

- Local information more "data correlated"
- EMA bypasses current smoothers
- EMA goes through HW countermeasures: shields, randomized logic

#### Drawbacks


- Experimentally more complicated
- Geometrical scanning can be tedious
- Low level and noisy signals (decapsulation required)

#### Countermeasures

- Software (crypto routines)
  - Coding techniques
  - Same as anti DPA/SPA (data whitening...)
- Hardware (chip designers)
  - Confine the radiation (metal layer)
  - Blur the radiation (e.g. by an active emitting grid)
  - Reduce the radiation (technology trends to shrinking)
  - Cancel the radiation (dual logic)

### Side-Channel Attacks and Countermeasures for Embedded Microcontrollers


# Source of side-channel leakage in a microcontroller

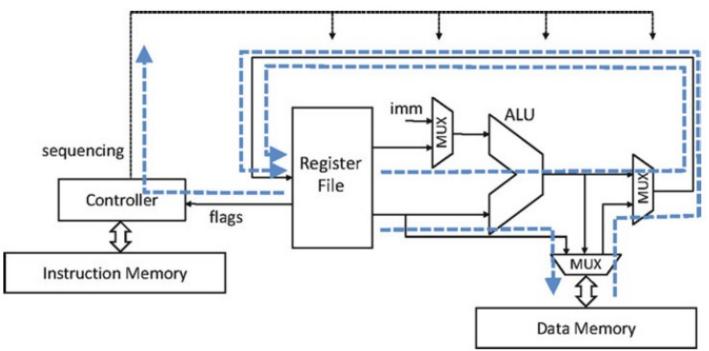

- Memory-store instructions
- Memory-load instructions
- Arithmetic instructions
- Control-flow instructions

#### Side-Channel Attacks on Microcontrollers

#### Crypto-algorithm

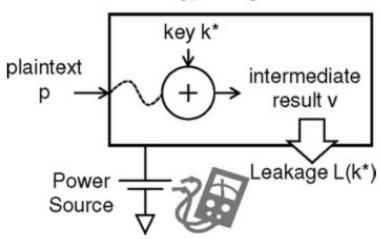


Objective: retrieve the internal secret key  $k^*$  of a crypto-algorithm

□ The leakage caused by  $\nu$  is a function of the key value  $k^*$ , and it can be expressed as follows:

$$L(k^*) = f_{k^*}(p) + \varepsilon$$

The function  $f_{k^*}$  is dependent on the crypto-algorithm as well as on the nature of the implementation in hardware and software. The error  $\mathcal E$  is an independent noise variable.

#### Side-Channel Attacks on Microcontrollers

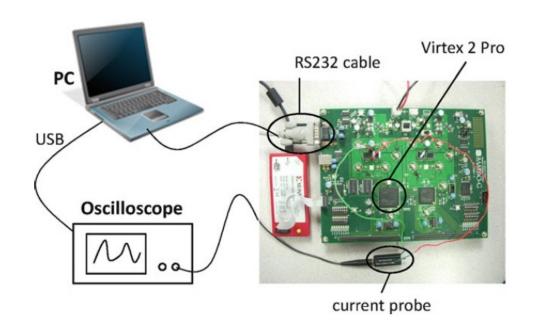

The PC sends a sample plaintext to the PowerPC on the FPGA for encryption. During the encryption, the digital oscilloscope captures the power consumption from the board. After the encryption is completed, the PC downloads the resulting power trace from the oscilloscope, and proceeds with the next sample plaintext.

### **CPA: Correlation Power Analysis**


- Two important aspects of a practical CPA:
  - The selection of the power model

The power model is chosen so that it has a dependency on a part of the secret key. A good candidate is the output of the substitution step.

The definition of the attack success metric

Measurements to Disclosure (MTD): the more measurements that are required to successfully attack a cryptographic design with side-channel analysis, the more secure that design is.

### **Practical Hypothesis Tests**

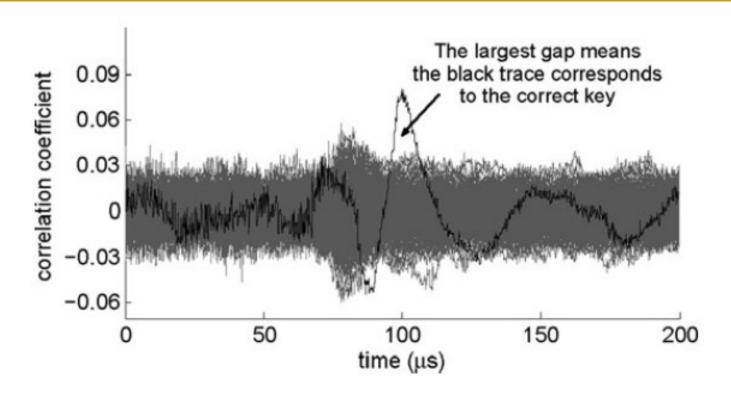

An example of 256 correlation coefficient traces. Around time 100 us, the black trace which corresponds to the correct key byte emerges from all the other 255 traces.

# Side Channel Countermeasures for Microcontrollers


- Two different kinds of countermeasures:
  - Algorithm-Level Countermeasures

Transform the C program so that the generation of dangerous side-channel leakage is avoided.

Architecture-Level Countermeasures

Create a better microcontroller, for example using special circuit techniques, so that no side-channel leakage is generated.


# **Dual Rail Precharge**

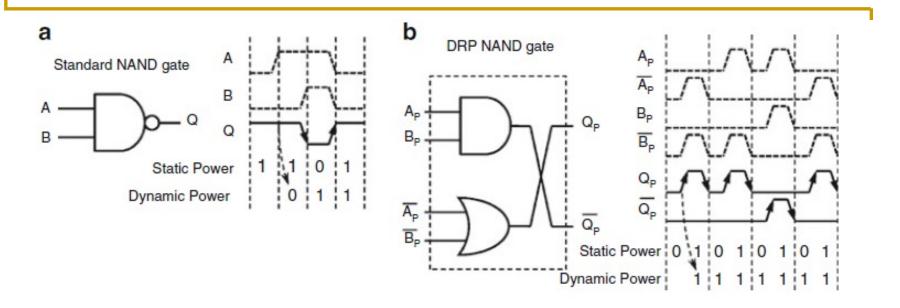

- (a) A CMOS standard NAND has data-dependent power dissipation;
- (b) A DRP NAND gate has a data-independent power dissipation

DRP requires the execution of the direct and complementary data paths in parallel.

### **VSC:** Porting DRP into software

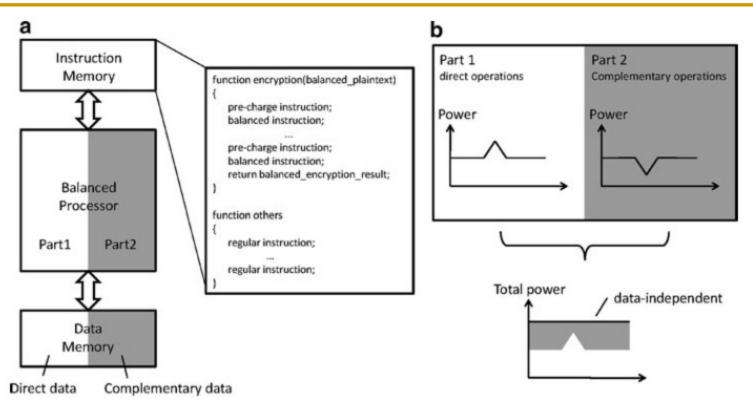

- (a) Concept of balanced processor and VSC programming;
  - (b) The balanced processor does not show side-channel leakage
- The power dissipation from the direct operation always has a complementary counterpart from the complementary operation. The sum of these two is a constant.

#### References

- [1] M. Tehranipoor and C. Wang. Introduction to Hardware Security and Trust. Springer, pp.175-191, 263-281, 2012
- [2] Weaver J, Horowitz M (2007) Measurement of supply pin current distributions in integrated circuit packages. IEEE Electrical Performance of Electronic Packaging, October 2007
- [3] Kocher P, Jaffe J, Jun B (1999) Differential power analysis. In: 19th Annual International
- Cryptology Conference (CRYPTO), vol 2139. Springer-Verlag, Berlin, Heidelberg, New York, August 1999
- [4] Daemen J, Rijmen V (2002) The Design of Rijndael. Secaucus, NJ, USA: Springer, New York, Inc.
- [5] Tiri K, Verbauwhede I (2003) Securing encryption algorithms against DPA at the logic level: next generation smart card. In: CHES 2003, vol LNCS 2779, pp. 125–136
- [6] Biham E (1997) A fast new DES implementation in software. In: FSE' 97: Proceedings of the 4th International Workshop on Fast Software Encryption. Springer, London, UK, pp. 260–272.
- [7] Chen Z, Sinha A, Schaumont P (2010) Implementing virtual secure circuit using a custom-instruction approach. In: Proceedings of the 2010 international conference on Compilers, architectures and synthesis for embedded systems, CASES' 10. ACM, New York, NY, USA, pp. 57–66

#### Videos

https://www.youtube.com/watch?v=OIX-p4AGhWs&t=3638s

#### **Announcements**

- Please submit your course evaluations
- Final Exam scheduled on April 25
  - A set of practice problems will be uploaded in Canvas by tomorrow
  - For EDGE students, an exam will be created and students will be able to select their time
  - Everything covered by Thursday are included
  - Only materials covered after midterm is included
- Grad only term paper (individual) is due on April 28. NO extension.
- Makeup class lecture will be posted later (by Thuursday).