




CRANKSHAFT, PISTON AND BALANCER

- | | | |
|-----------------------|-------------------|------------------|
| ① Balancer gear | ⑨ Bearing | ⑰ Bush |
| ② Bearing | ⑩ Piston ring | ⑱ Connecting rod |
| ③ Key | ⑪ Piston pin clip | ⑲ Crank pin |
| ④ Balancer | ⑫ Piston | ⑳ Bearing |
| ⑤ Bearing | ⑬ Piston pin | ㉑ Crank (Left) |
| ⑥ Balancer drive gear | ⑭ Bearing | ㉒ Key |
| ⑦ Oil seal | ⑮ Key | ㉓ Bearing |
| ⑧ Collar | ⑯ Crank (Right) | ㉔ Oil seal |

A	PISTON-TO-CYLINDER CLEARANCE: 0.035 ~ 0.040 mm (0.0014 ~ 0.0016 in)
B	END GAP (INSTALLED): 0.20 ~ 0.35 mm (0.008 ~ 0.014 in)
C	SIDE CLEARANCE: 0.03 ~ 0.05 mm (0.0012 ~ 0.0020 in)

D	CRANKSHAFT:
A:	57.90 ~ 57.95 mm (2.280 ~ 2.281 in)
C:	0.03 mm (0.0012 in)
D:	0.4 ~ 0.7 mm (0.016 ~ 0.028 in)
E:	0.021 ~ 0.035 mm (0.0008 ~ 0.0014 in)
F:	0.8 ~ 1.0 mm (0.03 ~ 0.04 in)

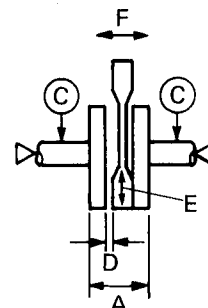

4

