


**NOTE:**

- Hold the rotor (CDI magneto) by the Rotor Holder ① to tighten the nuts (Primary drive gear ② and balancer gear ③).

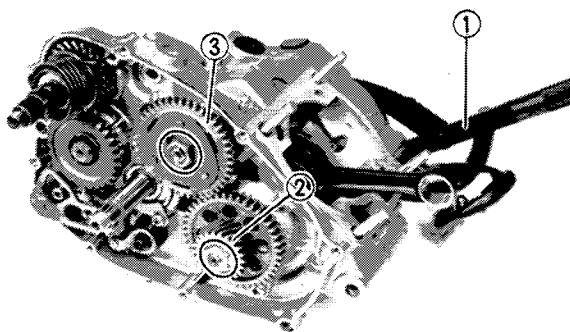

Rotor Holder:
P/N YU-01235
P/N 90890-01235

- Tighten both the nuts simultaneously (Primary drive gear and balancer gear).



Nut (Primary Drive Gear):
80 Nm (8.0 m·kg, 58 ft·lb)


Nut (Balancer Gear):
55 Nm (5.5 m·kg, 40 ft·lb)

2. Bend the lock washer tab.

⚠ WARNING:

Always use a new lock washer.

4

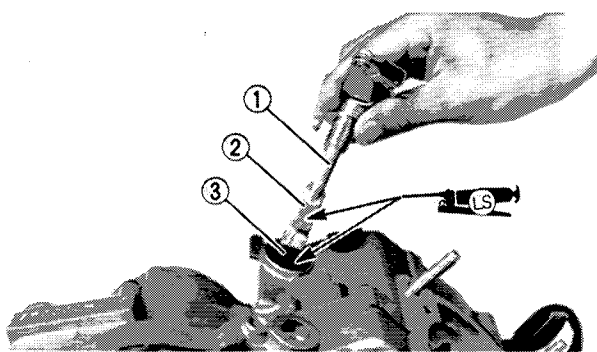**CLUTCH**

1. Install:

- Push lever ①

2. Apply:

- Lithium soap base grease
To push lever surface ② and bearing ③.