




4. Install:

- Crankcase cover ① (Left)



Bolts (Crankcase Cover — Left):
10 Nm (1.0 m·kg, 7.2 ft·lb)

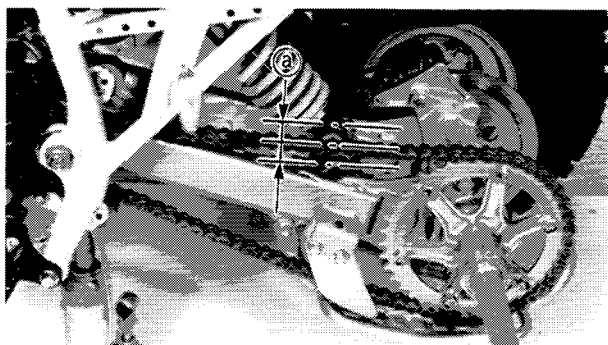


5. Adjust:

- Drive chain slack ②



Drive Chain Slack:
30 ~ 40 mm (1.18 ~ 1.57 in)

Refer to "DRIVE CHAIN SLACK ADJUSTMENT" section in CHAPTER 3.

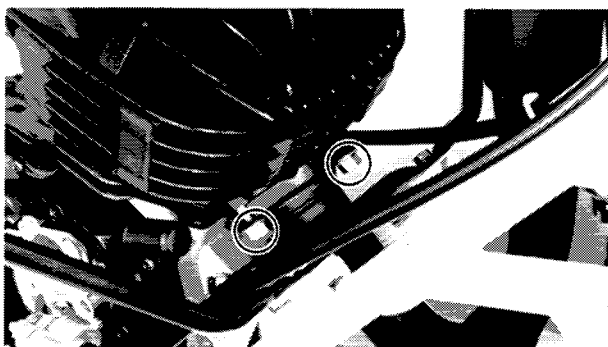


6. Install:

- Exhaust pipe



Nuts (Exhaust Pipe):
21 Nm (2.1 m·kg, 15 ft·lb)

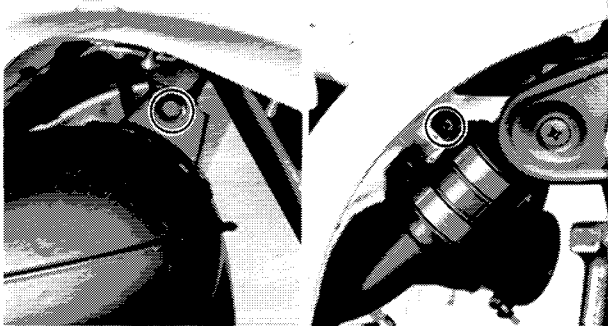

7. Connect:

- Oil hose ⑤
- Oil delivery hose ⑥

8. Air bleed:

- Autolube pump

Refer to "AUTOLUBE PUMP AIR BLEEDING" section in CHAPTER 3.

