





9. Install:

- Cover ① (Autolube pump)

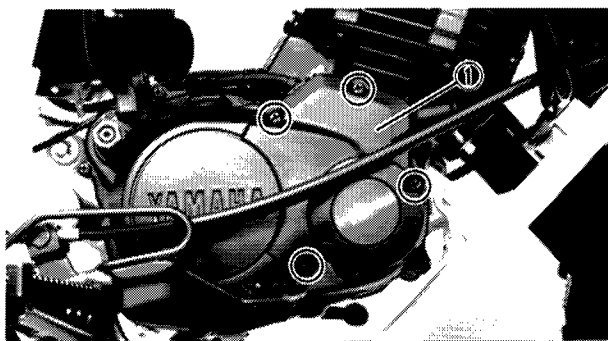

Bolts (Autolube Pump Cover):
7 Nm (0.7 m·kg, 5.1 ft·lb)

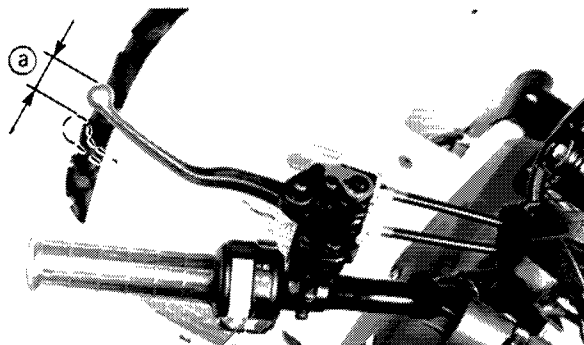


10. Adjust:

- Clutch lever free play ②



Clutch Lever Free Play:
5 ~ 8 mm (0.20 ~ 0.31 in)

4

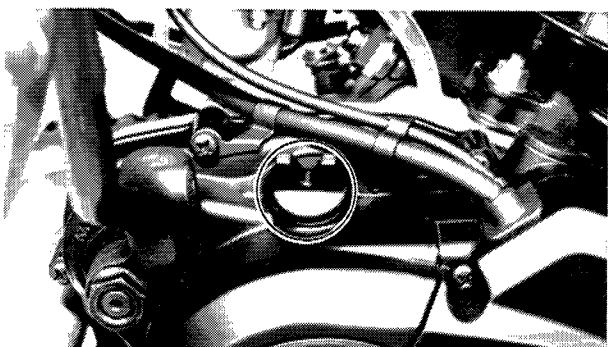

11. Fill:

- Crankcase



Total Amount:
0.70 L (0.62 Imp qt, 0.74 US qt)

Refer to "TRANSMISSION OIL REPLACEMENT" section in CHAPTER 3.