




3. Carburetor switch conduct

- Disconnect the carburetor switch coupler ① (Yellow/Black and Black).
- Connect the Pocket Tester ($\Omega \times 1$) to the carburetor switch coupler.

Tester (+) Lead → Yellow/Black ② Lead
Tester (–) Lead → Black ③ Lead

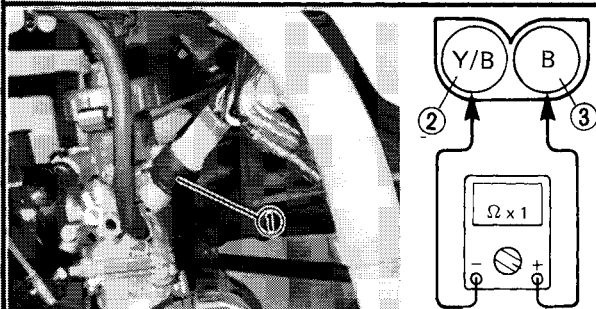

- Turn the throttle lever to open and close.
- Check the carburetor switch for continuity.

Throttle lever	Good condition	Bad condition		
Open	X	○	X	○
Close	○	X	X	○

○ : Continuity X : Nocontinuity

BAD CONDITION

Carburetor switch is faulty, replace it.



GOOD CONDITION

4. Wiring connection (Entire ignition control system)

- Check entire ignition control system for connections.
Refer to "WIRING DIAGRAM" section.

POOR CONNECTION

Correct.



CORRECT

Control unit is faulty, replace it.

7