


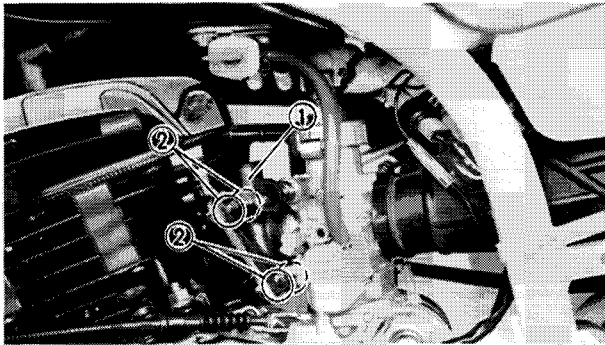

CARBURETOR JOINT INSPECTION

1. Inspect:


- Carburetor joint ①
Cracks/Damage → Replace.
Refer to the "REED VALVE " section
in the CHAPTER 5 for replacement.

2. Check the tightening torque of the carburetor joint securing bolts ② .



Bolt (Carburetor Joint):
8 Nm (0.8 m·kg, 5.8 ft·lb)


3

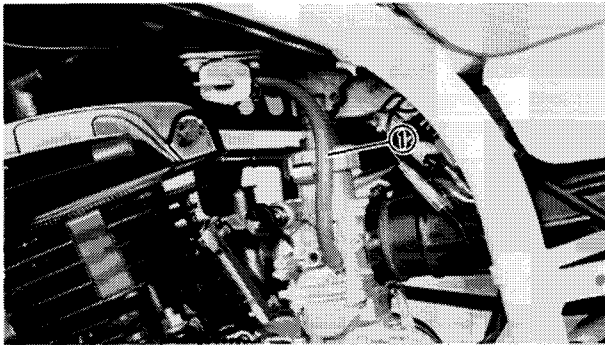

FUEL LINE INSPECTION

1. Inspect:

- Fuel hose ①
Cracks/Damage → Replace.

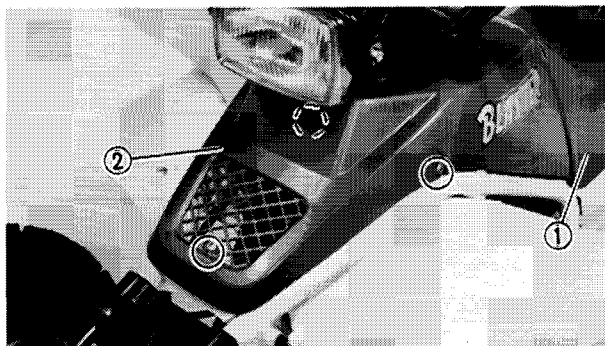


CRANKCASE VENTILATION HOSE INSPECTION

1. Turn the fuel cock to the "OFF".

2. Remove:

- Seat ①
- Front cover ②

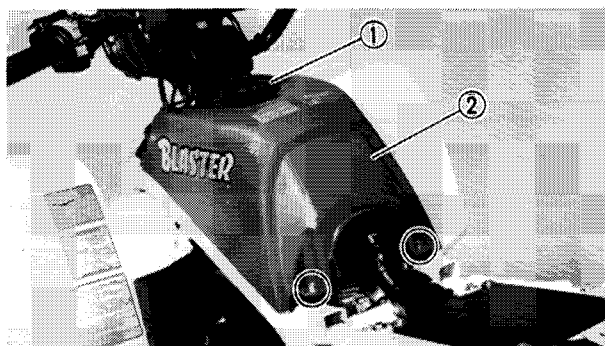

3. Remove:

- Fuel tank cap ①
- Fuel tank cover ②