


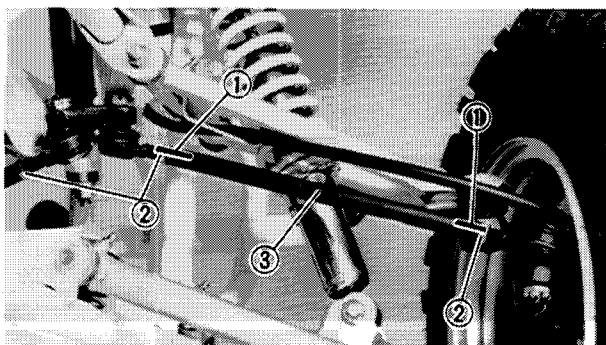

3. Adjust:

- Toe-in

Adjustment steps:

- Place a confirmation marks ① on the both tie-rods end.
- Loosen the rod end locknuts ② of both tie-rods.
- The same number of turns should be given to both tie-rods ③ right and left until the specified toe-in is obtained, so that the lengths of the rods will be kept the same.
- Tighten the rod end locknuts ② of both tie-rods.



Locknut (Rod end):
30 Nm (3.0 m·kg, 22 ft·lb)
USE LOCTITE®

⚠ WARNING:

- Be sure that both tie-rods are turned by the same amount. If not, the machine will go right or left even though the handlebar is positioned straight and it may lead to mis-handling and accident.
- After setting the toe-in to specification, run the machine slowly for some distance with the hands lightly on the handlebar and check that the handlebar responds correctly. If not, turn either the right or left tie-rod within the toe-in specification.

FRONT SHOCK ABSORBER ADJUSTMENT

⚠ WARNING:

Always adjust both front shock absorber spring preload to the same setting. Uneven adjustment can cause poor handling and loss of stability.