



CABLE INSPECTION AND LUBRICATION

⚠ WARNING:


Damaged cable sheath may cause corrosion and interfere with the cable movement. An unsafe condition may result so replace such cable as soon as possible.

1. Inspect:

- Cable sheath
Damage → Replace.

2. Check:

- Cable operation
Unsmooth operation → Lubricate or replace.

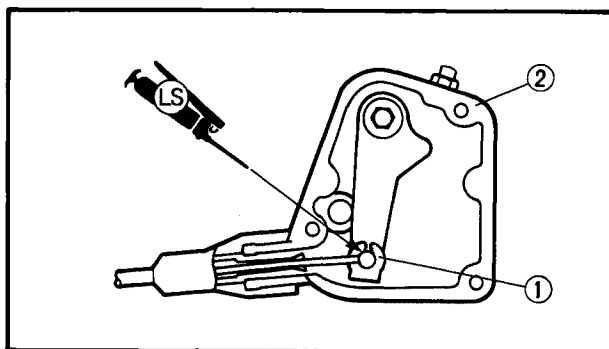

Recommended Lubricant:
SAE 10W30 Motor Oil

NOTE:

Hold cable end high and apply several drops of lubricant to cable.

- #### 3. Apply the grease to the throttle cable end
- ① at inside of the throttle housing ② .




Lithium Soap Base Grease

LEVER AND PEDAL LUBRICATION

- #### 1. Lubricate the pivoting parts of each lever and pedal.



Recommended Lubricant:
SAE 10W30 Motor Oil

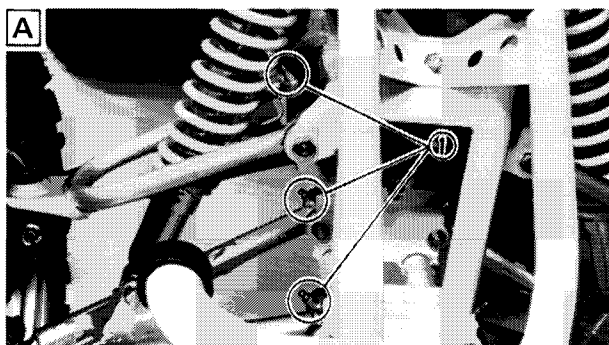

FRONT SUSPENSION LUBRICATION

- #### 1. Inject grease from the nipples ① using a grease gun until slight over flow is observed from the thrust covers.



**Lightweight Lithium-soap
Base Grease**

A Right side

3