


THROTTLE CABLE FREE PLAY ADJUSTMENT/ SPEED LIMITER ADJUSTMENT



THROTTLE CABLE FREE PLAY ADJUSTMENT

NOTE:

Before adjusting the throttle cable free play, the engine idle speed should be adjusted.

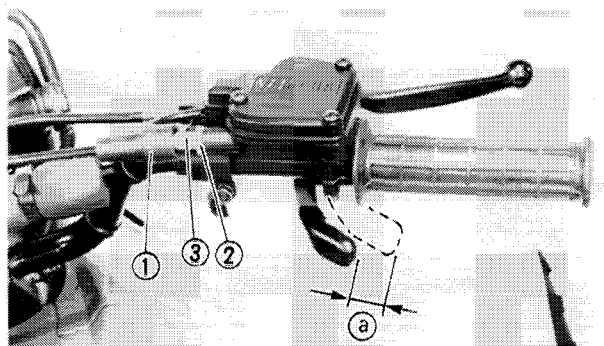

1. Check:

- Throttle cable free play ①
Out of specification → Adjust.



Throttle Cable Free Play:
4 ~ 6 mm (0.16 ~ 0.24 in)

2. Adjust:



- Throttle cable free play

Adjustment steps:

- Pull back the adjuster cover ①.
- Loosen the locknut ②.
- Turn the adjuster ③ clockwise or counterclockwise until proper free play is attained.

Clockwise	Free play is increased.
Counterclockwise	Free play is decreased.

- Tighten the locknut.

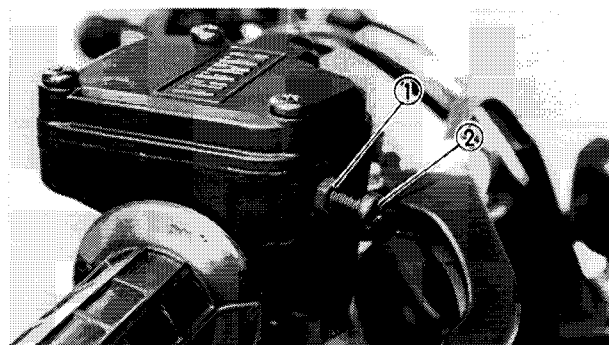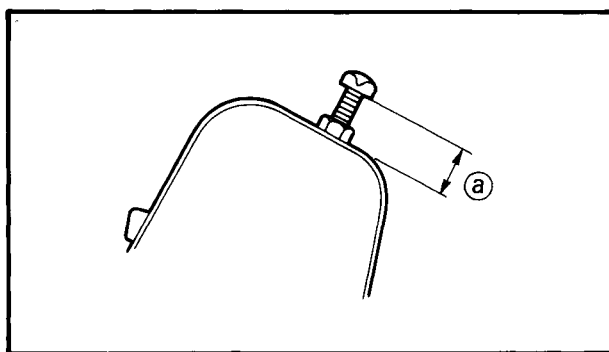

SPEED LIMITER ADJUSTMENT

The speed limiter keeps the carburetor throttle from becoming full-open even when the throttle lever is turned to a maximum. Screwing in the adjuster stops the engine speed from increasing.

1. Adjust:

- Speed limiter length ①

Adjustment steps:

- Loosen the locknut ①.
- Turn the adjuster ② clockwise or counterclockwise until proper length is attained.



Speed Limiter Length:
12 mm (0.47 in)

- Tighten the locknut ①.

3