




CLUTCH ADJUSTMENT

Clutch Cable Free Play Adjustment

1. Pull back the adjuster cover ① .

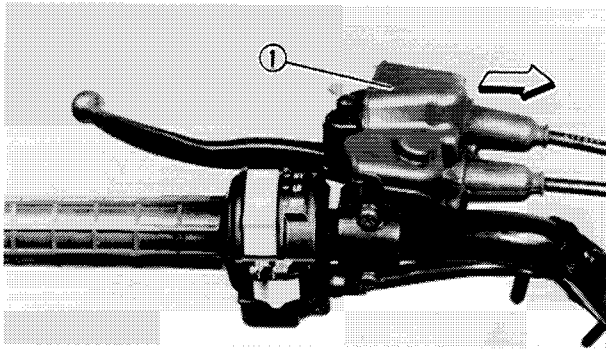

2. Check:

- Clutch cable free play ②
- Out of specification → Adjust.



Clutch Cable Free Play:
5 ~ 8 mm (0.20 ~ 0.31 in)

3. Adjust:

- Clutch cable free play

Adjustment steps:

- Loosen the locknut ① .
- Turn the adjuster ② clockwise or counter-clockwise until proper free play is attained.

Clockwise	Free play is increased.
Counterclockwise	Free play is decreased.

- Tighten the locknut.


4. Set the adjuster cover.

Mechanism Adjustment

1. Drain the transmission oil.

Refer to the "TRANSMISSION OIL REPLACEMENT" section.

2. Pull back the adjuster cover.

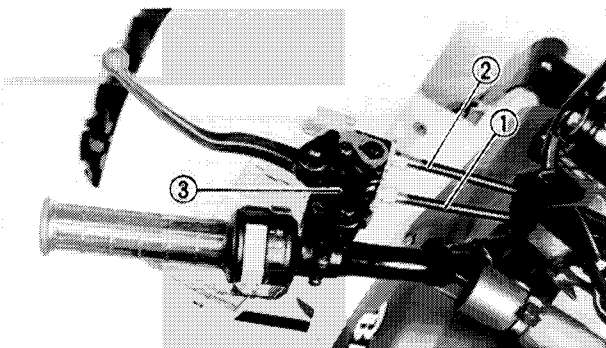

3. Loosen:

- Clutch cable ①

4. Disconnect:

- Parking brake cable ②
- (from parking brake cable holder ③)