




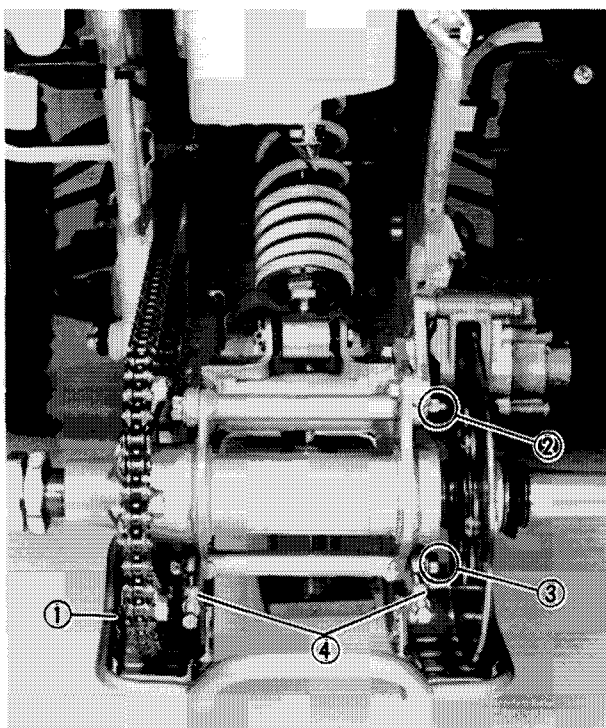


9. Remove:
 - Under guard ①
10. Loosen:
 - Nut ② (Rear axle hub – Upper)
 - Nut ③ (Rear axle hub – Lower)
11. Loosen:
 - Adjusters ④ (Chain tensioner)

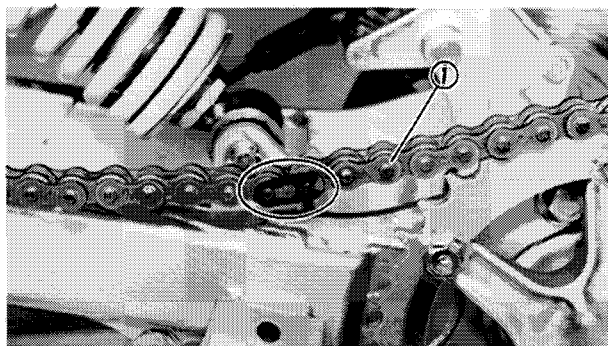

12. Remove:
 - Drive chain assembly ①
 Refer to the “DRIVE CHAIN AND SPROCKET – REMOVAL” section.

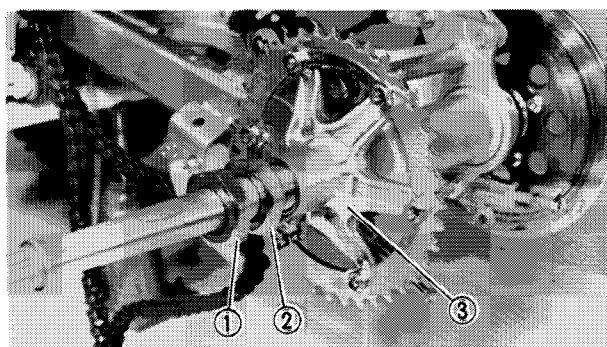

13. Remove:
 - Nut ① (Rear axle – Outer)
 - Nut ② (Rear axle – Inner)
 - Sprocket hub ③ (Driven sprocket)

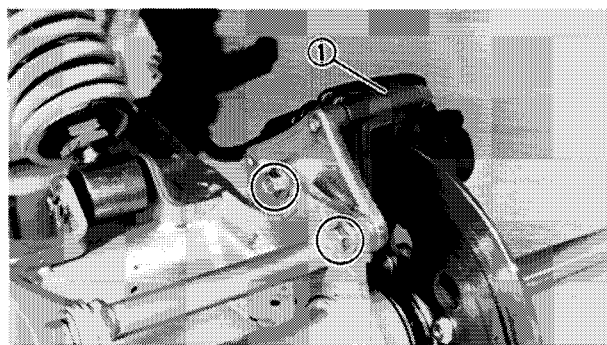

14. Release the parking brake.
15. Remove:
 - Brake caliper assembly ① (Rear)

NOTE:

Do not depress the parking brake lever and brake pedal when the brake caliper is off the disc otherwise the brake pads will be forced shut.