





5. Install:
- Brake caliper assembly ① (Rear)

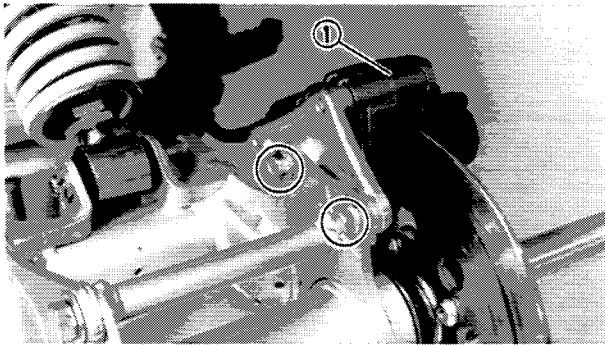


Bolt (Brake Caliper Assembly):
28 Nm (2.8 m·kg, 20 ft·lb)

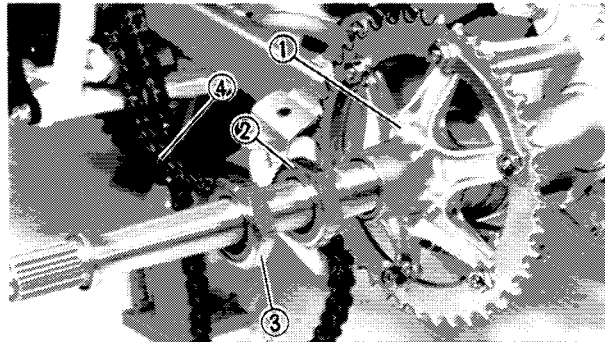

6. Install:
- Sprocket hub ① (Driven sprocket)
 - Nut ② (Rear axle – Inner)
 - Nut ③ (Rear axle – Outer)
 - Drive chain ④

NOTE:

At this time, the rear axle nuts should not be screwed on.

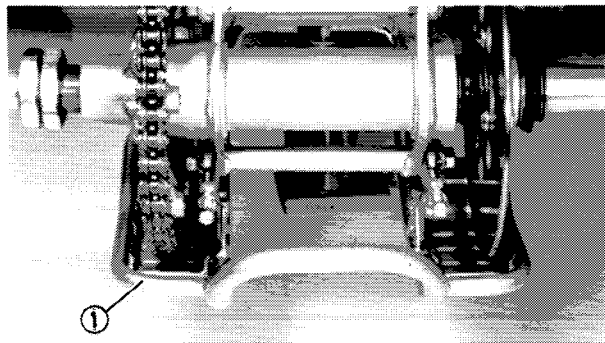


7. Install:
- Under guard ①



Bolt (Under Guard):
23 Nm (2.3 m·kg, 17 ft·lb)

6

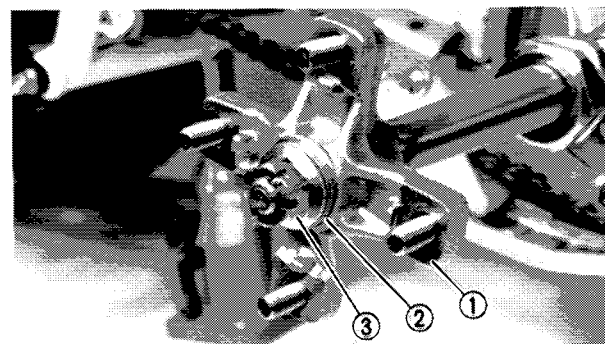

8. Apply the parking brake.

9. Install:
- Wheel hub ①
 - Plate washer ②
 - Nut ③ (Wheel hub)



Nut (Wheel Hub):
120 Nm (12 m·kg, 87 ft·lb)

10. Install:
- Cotter pins (New) ①

NOTE:

Do not loosen the axle nut after torque tightening. If the axle nut groove is not aligned with the cotter pin hole, align groove with the hole by tightening up on the axle nut.



WARNING:

Always use a new cotter pin.

