




11. Tighten:

- Bolts ① (Handlebar holder)

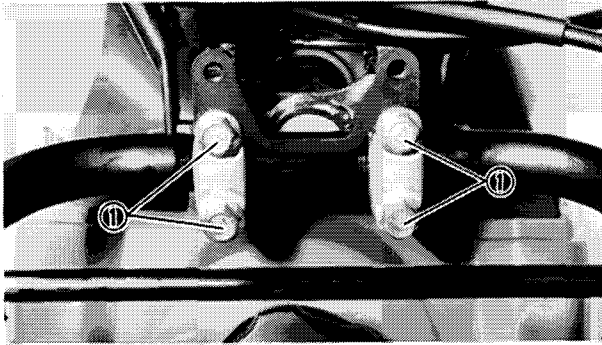



Bolt (Handlebar Holder):
20 Nm (2.0 m · kg, 14 ft · lb)

NOTE:

Be sure the upper handlebar holder mark ① face to front.

CAUTION:

First tighten the bolts ② on the front side of the handlebar holder, and then tighten the bolts ③ on the rear side.

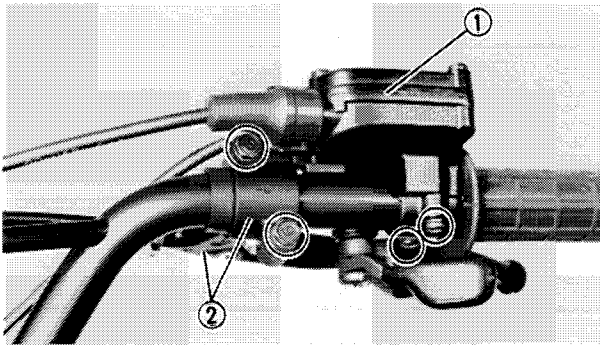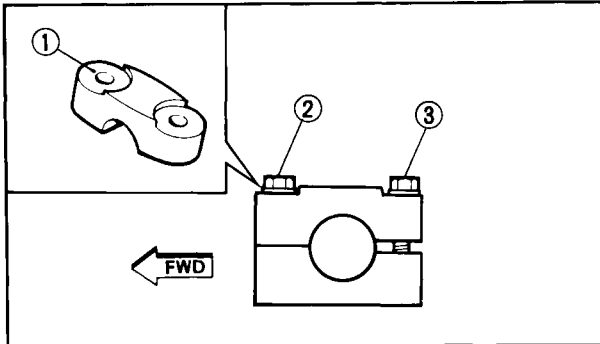

12. Install:


- Throttle housing ①
- Front brake lever ②



Bolt (Front Brake Lever):
10 Nm (1.0 m · kg, 7.2 ft · lb)

NOTE:

Fit the throttle housing projection ① onto the indent ② on the front brake lever.

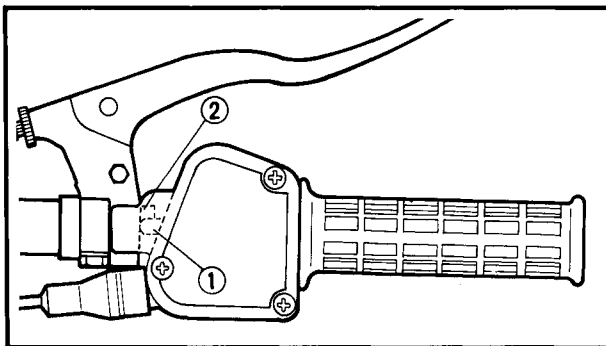**WARNING:**

Proper cable and lead routing is essential to assure safe machine operation. Refer to the "CABLE ROUTING" section in the CHAPTER 2.