


HANDLING NOTES

⚠ WARNING:

This shock absorber contains highly compressed nitrogen gas. Read and understand the following information before handling the shock absorber. The manufacturer cannot be held responsible for property damage or personal injury that may result from improper handling.

- Do not tamper or attempt to open the cylinder assembly.
- Do not subject shock absorber to an open flame or other high heat. This may cause the unit to explode due to excessive gas pressure.
- Do not deform or damage the cylinder in any way. Cylinder damage will result in poor damping performance.
- Take care not to scratch the contact surface of the piston rod with the cylinder; or oil could leak out.
- When scrapping the shock absorber, follow the "NOTES ON DISPOSAL".

6

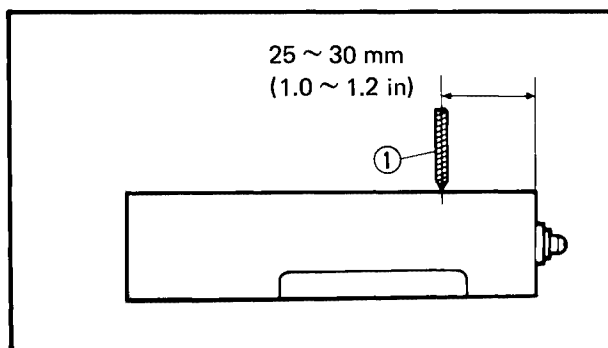

NOTES ON DISPOSAL

Shock absorber disposal steps:

Gas pressure must be released before disposing of shock absorber. To do so, drill ① a 2 ~ 3 mm (0.08 ~ 0.12 in) hole through the gas chamber wall at a point 25 ~ 30 mm (1.0 ~ 1.2 in) from the bottom end of the gas chamber.

⚠ CAUTION:

Wear eye protection to prevent eye damage from escaping gas and/or metal chips.