





INSPECTION

1. Measure:

- 10-link length ① (Drive chain)
Out of specification → Replace drive chain.

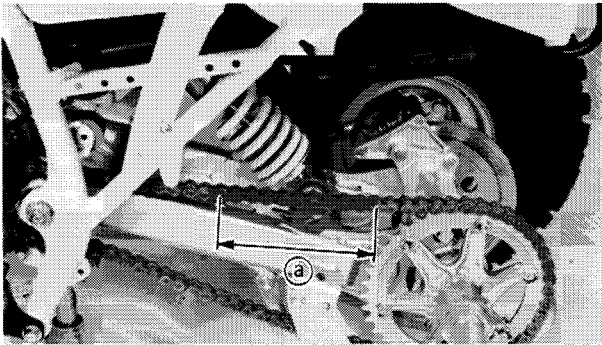


10-Link Length Limit:
150.1 mm (5.91 in)

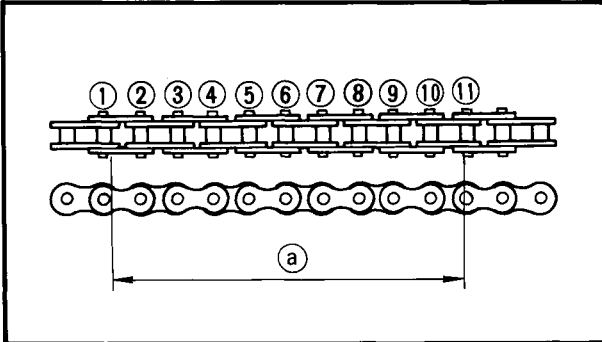


NOTE:

- For measurement make the chain tense by finger.
- 10-link length is a measurement between the insides of the ① and ⑪ rollers as shown.
- Two or three different 10-link lengths should be measured.

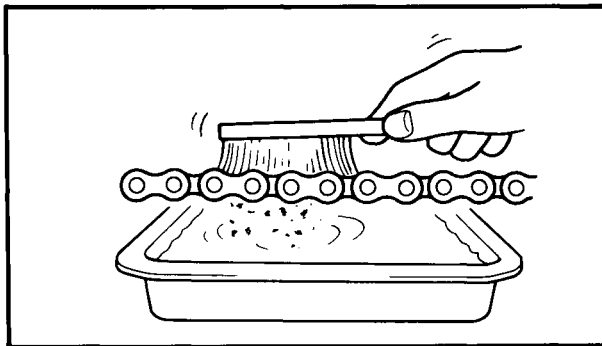


2. Clean:

- Drive chain
Place it in kerosene, and brush off as much dirt as possible. Then remove the chain from the kerosene and dry the chain.

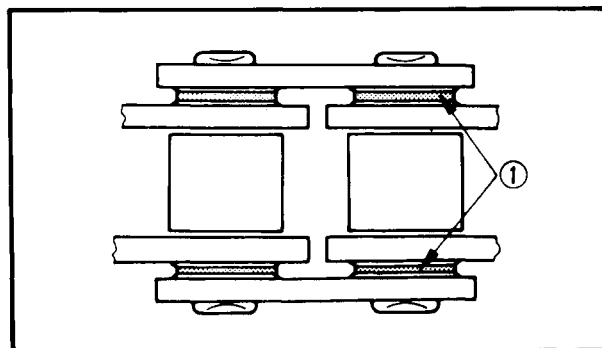

CAUTION:

This machine has a drive chain with small rubber O-rings ① between the chain plates. Steam cleaning, high-pressure washes, and certain solvent can damage these O-rings. Use only kerosene to clean the drive chain.

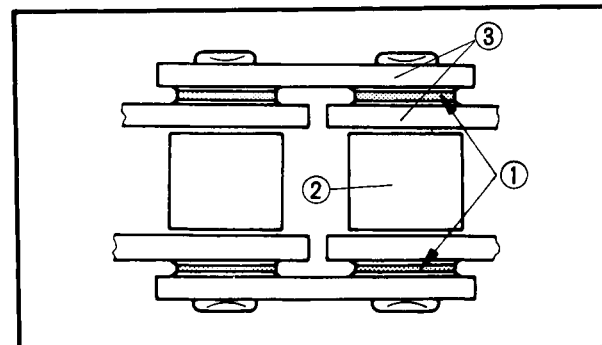

3. Inspect:

- O-rings ① (Drive Chain)
Damage → Replace drive chain.
- Rollers ②
- Side plates ③
Damage/Wear → Replace drive chain.