

7. Inspect:

- Chain guide ①
 - Chain guide rollers ②
 - Collars ③ (Guide roller)
- Wear/Damage → Replace.

INSTALLATION

Reverse the "REMOVAL" procedure.
Note the following points.

1. Lubricate:

- Collars (Inner surface)





Molybdenum Disulfide Grease

2. Tighten:

- Bolts (Chain guide rollers)



Bolt (Chain Guide Roller):
9 Nm (0.9 m · kg, 6.8 ft · lb)

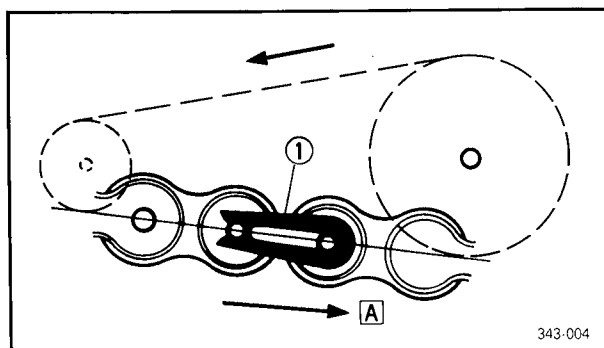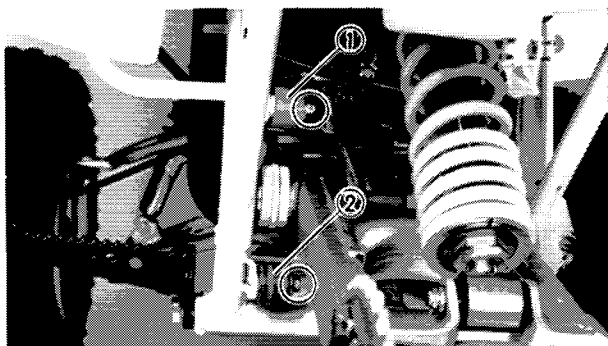

- ① Upper
- ② Lower

3. Install:

- Drive chain

NOTE:

During reassembly, the master link clip ① must be installed with the rounded end facing the direction of travel.

A Turning direction

4. Tighten:

- Bolts (Under guard)
- Nuts (Rear wheel)
- Bolts (Drive sprocket holder)
- Screws (Crankcase cover – Left)
- Bolts (Change pedal)