

Inverse Kinematics of the Main Arm

We start with the diagrams of the arm, split into a top view and a side view

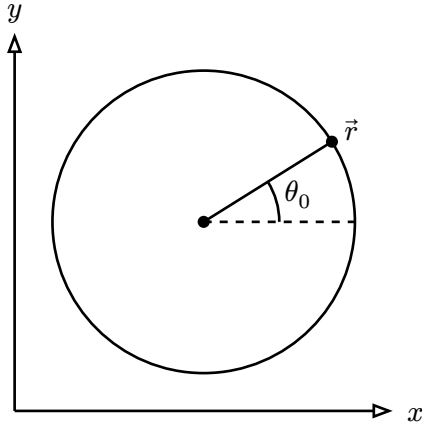


Figure 1: Top View

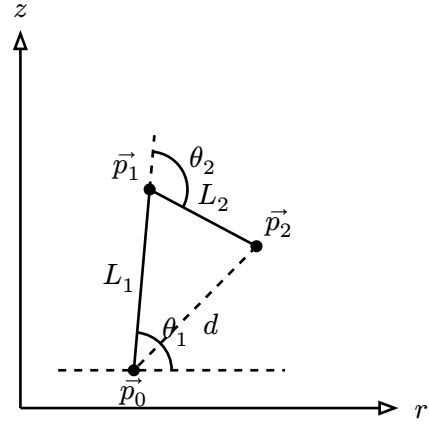


Figure 2: Side View

We already know L_1 and L_2 , as they are the lengths of the robot's arms which are given. $\vec{p}_0$ and $\vec{p}_2$ are also known as they are the position of the base which is static and the goal position of the end effector.

We are trying to solve for θ_0 , θ_1 and θ_2 , which are the joint angles the robot needs to reach the desired positions.

To solve this first notice that $\vec{p}_0$, $\vec{p}_1$, and $\vec{p}_2$ make a triangle. We also know all 3 side lengths so we can use the law of cosines to figure out each of the interior angles and then convert them into the angles we need with some more simple math.

Definition: The Law of Cosines - $c^2 = a^2 + b^2 - 2ab \cos(C)$ where C is the angle opposite side c

$$d = |\vec{p}_2 - \vec{p}_0|$$

Solve for θ_2

$$\begin{aligned} d^2 &= L_1^2 + L_2^2 - 2L_1L_2 \cos(\pi - \theta_2) \\ 2L_1L_2 \cos(\pi - \theta_2) &= L_1^2 + L_2^2 - d^2 \\ \cos(\pi - \theta_2) &= \frac{L_1^2 + L_2^2 - d^2}{2L_1L_2} \\ -\cos(\theta_2) &= \frac{L_1^2 + L_2^2 - d^2}{2L_1L_2} \\ \theta_2 &= \cos^{-1} \left(\frac{d^2 - L_1^2 - L_2^2}{2L_1L_2} \right) \end{aligned}$$

Solve for θ_1

First we solve for the interior angle of the triangle, opposite to L_2 , the same way as we did for θ_2 then to get the angle from the r -axis to $\vec{p}_2$, we can do $\text{atan2}(\vec{p}_2)$. Therefore

$$\theta_1 = \text{atan2}(\vec{p}_2) + \cos^{-1} \left(\frac{L_1^2 + d^2 - L_2^2}{2L_1d} \right)$$

And finally, to solve for θ_0 we can just do

$$\theta_0 = \text{atan2}(\vec{r})$$

To put it all together, to find the joint angles needed to get the end effector to $\vec{p}_2$, we have the following equations

$$\begin{aligned}\theta_0 &= \text{atan2}(\vec{p}_{2_y}, \vec{p}_{2_x}) \\ \theta_1 &= \text{atan2}\left(\vec{p}_{2_z}, \sqrt{\vec{p}_{2_x}^2 + \vec{p}_{2_y}^2}\right) + \cos^{-1}\left(\frac{L_1^2 + |\vec{p}_2 - \vec{p}_0|^2 - L_2^2}{2L_1 |\vec{p}_2 - \vec{p}_0|}\right) \\ \theta_2 &= \cos^{-1}\left(\frac{|\vec{p}_2 - \vec{p}_0|^2 - L_1^2 - L_2^2}{2L_1 L_2}\right)\end{aligned}$$

Forward Kinematics of the Main Arm

forward kinematics of the arm can be calculated pretty easily, starting with 2D, we can just use basic trigonometry, making sure to convert the joint angles, into angles relative to the r -axis

$$\vec{p}_2 = \begin{bmatrix} \cos(\theta_1) \\ \sin(\theta_1) \end{bmatrix} + \begin{bmatrix} \cos(\theta_1 + \theta_2) \\ \sin(\theta_1 + \theta_2) \end{bmatrix}$$