# Vectorworks Augment3d

## Plug-in Installation Guide

Part Number: 4250M2120 Rev: D

Released: 2022-04

To view a list of ETC trademarks and patents, go to etcconnect.com/ip. All other trademarks, both marked and not marked, are the property of their respective owners.

ETC intends this document, whether printed or electronic, to be provided in its entirety.

# Vectorworks Augment3d Plug-in

This installation guide provides information on the installation and setup of the Augment3d Plug-in for Vectorworks 2019, 2020, 2021, and 2022, intended for use with Eos v3.0.0 and later.


This is an ETC-made plug-in for the Vectorworks program intended to export fixtures from Vectorworks for import into Augment3d.

## Vectorworks System Requirements


For the most up-to-date requirements, please reference vectorworks.net/sysreq.

## Installing the Vectorworks Augment3d Plug-in

1. Download the appropriate plug-in for your operating system (Windows or macOS) from etcconnect.com, and extract it. The folder will contain a copy of these instructions and the Vectorworks Augment3d Plug-in as a .vwlibrary file.
2. Open Vectorworks and navigate to **Tools > Plug-ins > Plug-in Manager > Third-party Plug-ins.**

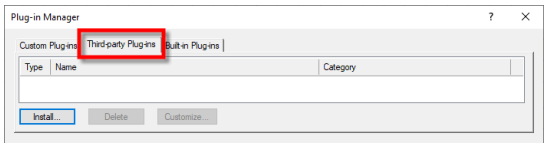



3. Select **{Install}** and choose the .vwlibrary plug-in file you extracted in Step 1.
4. Restart Vectorworks when prompted. After relaunch, the installed plug-in will appear in the Built-in Plug-ins tab.

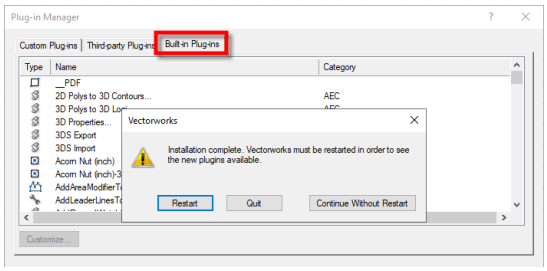


# Configuring Vectorworks to use the Augment3d Plug-in

1. Launch Vectorworks.
2. Configure your Vectorworks workspace.
   a. Open the Workspace Editor. Navigate to **Tools > Workspaces > Edit Current Workspace**.
   b. Expand the ETC node in the Commands panel:

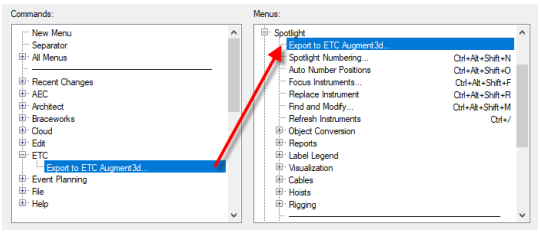


   c. Drag "Export to ETC Augment3d" to the Spotlight node.
   d. Select **{OK}** to close the Workspace Editor.
3. In **Vectorworks 2019**, you must map the information you want to export to Augment3d. (**Vectorworks 2020** and later do not have this option; skip to step 4.) If exporting for the first time, or to change export preferences, navigate to **File > Document Settings > Spotlight Preferences**.
   a. Select **Edit Visualizer Data Mapping**. Recommended mapping below:

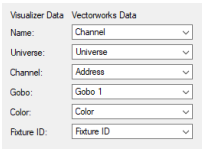


   b. Select **{OK}** to close the Data Mapping window.
4. Navigate to **Spotlight > Export to ETC Augment3d** and follow the prompt.

Vectorworks will export a .a3d file containing your information for import into Augment3d.

---

**CAUTION:** *Layers containing lights must be visible in the Vectorworks file in order to export to Augment3d. If no lights are visible, a pop-up will notify you that the file is empty, and cannot be exported.*


---

# Importing to Augment3d


1. In Eos, navigate to **File > Import > Augment3d (from Vectorworks)**, and select your .a3d file.
2. Click **{Map Devices}**.




3. Select a device from the Source File column and choose its matching Eos fixture profile.

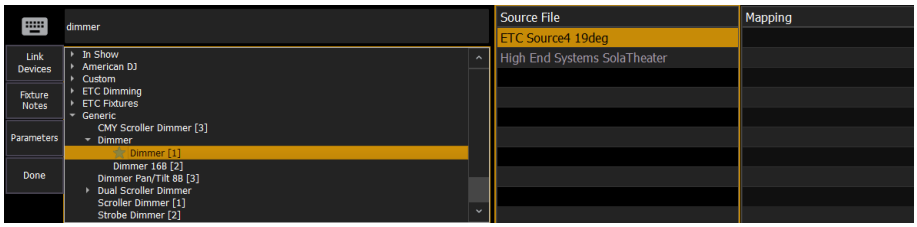


4. Click **{Link Devices}**.

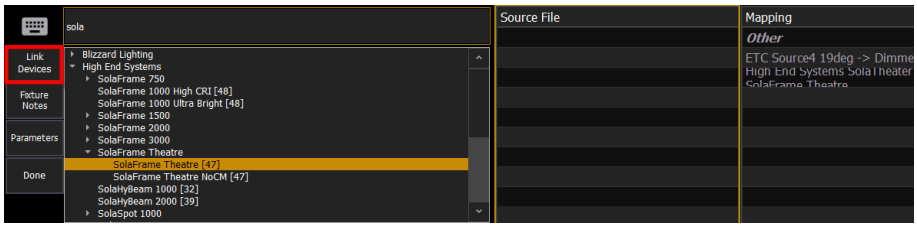


5. Repeat steps 3 and 4 until all devices have been associated with fixture profiles.
6. When complete, click **{Done}**, then **{OK}**.Your devices and their associated position information will now appear in Patch and Augment3d.

| Chan | Address | Type | Label | Position | Orientation |
|---|---|---|---|---|---|
| 1 | 1/1 | Dimmer | | | |
| 2 | 1/2 | Dimmer | | | |
| 3 | 1/3 | Dimmer | | | |
| 4 | 1/4 | Dimmer | | | |
| 11 | 2/1-47 | SolaFrame Theatre | | (-3.0504, 0.079, 6.096) | (0, 0, 0) |
| 12 | 2/51-97 | SolaFrame Theatre | | (-1.38, -0.291, 6.096) | (0, 0, 0) |
| 13 | 2/101-147 | SolaFrame Theatre | | (0.2903, -0.9226, 6.096) | (0, 0, 0) |
| 14 | 2/151-197 | SolaFrame Theatre | | (1.9607, -0.291, 6.096) | (0, 0, 0) |
| 15 | 2/201-247 | SolaFrame Theatre | | (3.631, 0.079, 6.096) | (0, 0, 0) |

## Options

The following options are available before import:

- **Starting / Ending Channel** - defines a specific range of channels to be imported
- **Overwrite** - overwrites the data in the show file when enabled, and merges the data when disabled
- **Do not update fixture types** - disables the updating of fixture types in the show file
- **Only import Augment3d XYZ location** - enables import of just Augment3d location data
- **Import Text/Notes/Labels/Gels Only** - enables import of just the patch database text

## Exporting Scenery

The Vectorworks Augment3d Plug-in only supports the export of fixtures.

Follow the steps below if you have scenery in your Vectorworks file that you would also like to export.

1. Hide all fixtures in the Vectorworks workspace.
2. Expose only the scenery you wish to export, then export as a Collada file by navigating to File > Export > Export COLLADA (3D Only).
3. In Augment3d, import the Collada file. For more information on importing Augment3d objects, refer to the Eos Family Operations Manual chapter on Augment3d.



**Corporate Headquarters** ■ Middleton, WI, USA | +1 608 831 4116
**Global Offices** ■ London, UK | Rome, IT | Holzkirchen, DE | Paris, FR | Hong Kong | Dubai, UAE | Singapore
New York, NY | Orlando, FL | Los Angeles, CA | Austin, TX
**Web** etcconnect.com | **Support** support.etcconnect.com | **Contact** etcconnect.com/contactETC
© 2022 Electronic Theatre Controls, Inc. | Trademark and patent info: etcconnect.com/ip
Product information and specifications subject to change. ETC intends this document to be provided in its entirety.
**4250M2120** Rev D Released 2022-04