Precautions

- Care should be taken to connect the terminals of ammeters, voltmeters, and dc power supplies with right polarity.
- The collector and emitter terminals of the transistor must not be interchanged.


PROCEDURE

- The connections are given as shown in the diagram.
- The current and voltage at the input and output regions can be varied by adjusting the DC power supply.

(i) Input characteristic curve: V_{BE} vs I_B (V_{CE} constant)

- The collector-emitter voltage V_{CE} is kept constant.
- The base-emitter voltage V_{BE} is varied in steps of 0.1V and the corresponding base current (I_B) is noted. The readings are taken till V_{CE} reaches a constant value.
- The same procedure is repeated for different values of V_{CE}. The readings are tabulated.
- A graph is plotted by taking V_{BE} along x-axis and I_B along y-axis for both the values of V_{CE}.
- The curves thus obtained are called the input characteristics of a transistor.
- The reciprocal of the slope of these curves gives the input impedance of the transistor.

S. No	V_{CE} = 1V		V_{CE} = 2V	
	V_{BE} (V)	I_B (μA)	V_{BE} (V)	I_B (μA)

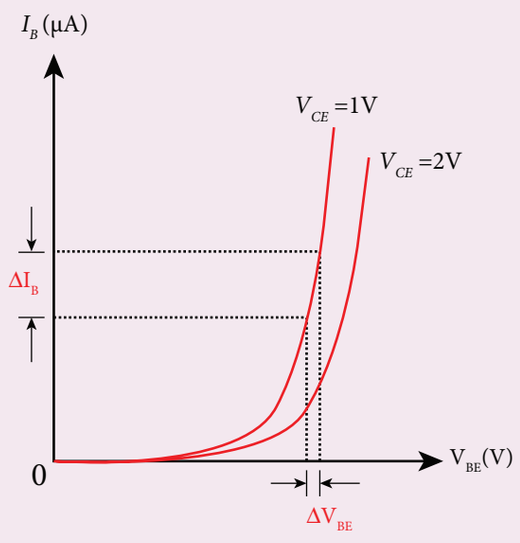

$$\text{Slope} = \frac{\Delta I_B}{\Delta V_{BE}}$$

$$\text{Input impedance} = \frac{1}{\text{slope}}$$

XII-Physics_Vol-1) PRACTICAL.indd 311 08-12-2022 11:00:43