8 CHARACTERISTICS OF A NPN-JUNCTION TRANSISTOR IN COMMON EMITTER CONFIGURATION

AIM

To study the characteristics and to determine the current gain of a NPN junction transistor in common emitter configuration.

APPARATUS REQUIRED

Transistor - BC 548/BC107, bread board, micro ammeter, milli ammeter, voltmeters, variable DC power supply and connecting wires.

FORMULA

$$r_i = \left[\frac{\Delta V_{BE}}{\Delta I_B}\right]_{V_{CE}} (\Omega), \quad r_o = \left[\frac{\Delta V_{CE}}{\Delta I_C}\right]_{I_B} (\Omega), \quad \beta = \left[\frac{\Delta I_C}{\Delta I_B}\right]_{V_{CE}} \text{(No unit)}$$

Where, r_i → Input impedance (Ω)

ΔV_{BE} → The change in base-emitter voltage (volt)

ΔI_B → The change in base current (μA)

r_o → Output impedance (Ω)

ΔV_{CE} → The change in collector-emitter voltage (volt)

ΔI_C → The change in collector current (mA)

β → Current gain of the transistor (No unit)

CIRCUIT DIAGRAM

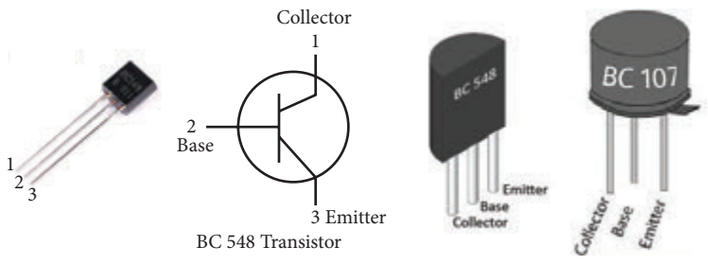


Figure (a) NPN - Junction transistor and its symbol (Transistor is held with the flat surface facing us)

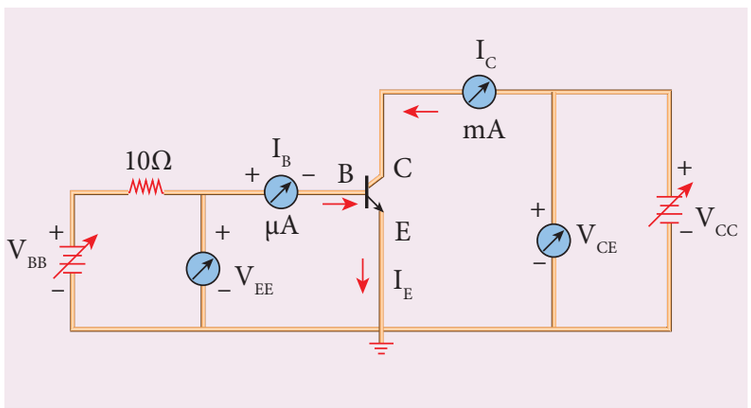


Figure (b) NPN junction transistor in CE configuration

Note

A resistor is connected in series with the base to prevent excess current flowing into the base.

XII-Physics_Vol-1) PRACTICAL.indd 327 04-03-2019 11:06:50