

### WATER TEMPERATURE MODELING

Isaac Mudge, MS

**U.S. Army Corps of Engineers, New Orleans District** 

**U.S. Army Engineer Research and Development Center, Environmental Laboratory** 

**CE-QUAL-W2 Workshop** 

August 16 - 18, 2022









# **Heat and Temperature**

	Coffee	Constituent (e.g., salinity)	Heat Balance
Extensive	sugar	mass	heat
Intensive	sweetness	concentration	temperature
Relationship	lumps/cup	mass/volume	Heat/(density*specific heat capacity*volume)

## **Advection-Dispersion Equation Balance**

$$\frac{\partial B\Phi}{\partial t} + \frac{\partial UB\Phi}{\partial x} + \frac{\partial WB\Phi}{\partial z} - \frac{\partial}{\partial x} \left[ BD_x \frac{\partial \Phi}{\partial x} \right] - \frac{\partial}{\partial z} \left[ BD_z \frac{\partial \Phi}{\partial z} \right] = q_{\Phi}B + S_{\Phi}B$$
 (4-12)

#### where:

 $\Phi$  = laterally averaged constituent concentration,  $g m^{-3}$ 

 $D_x$  = longitudinal temperature and constituent dispersion coefficient,  $m^2$  sec<sup>-1</sup>

 $D_z$  = vertical temperature and constituent dispersion coefficient,  $m^2$  sec<sup>-1</sup>

 $q_{\Phi}$  = lateral inflow or outflow mass flow rate of constituent per unit volume,  $g m^{-3} sec^{-1}$ 


 $S_{\Phi}$  = laterally averaged source/sink term,  $g m^{-3} sec^{-1}$ 

Substitute H into the equation for Φ, which relates to temperature as:


$$T = \frac{H}{\rho C_p V}$$

$$H = \rho C_p V T$$

Units:

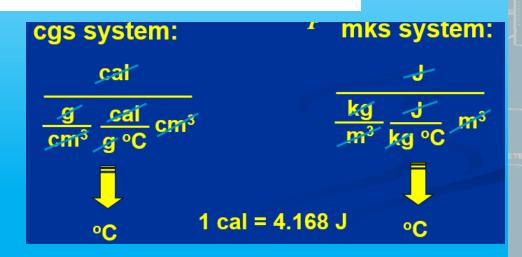

### Rates

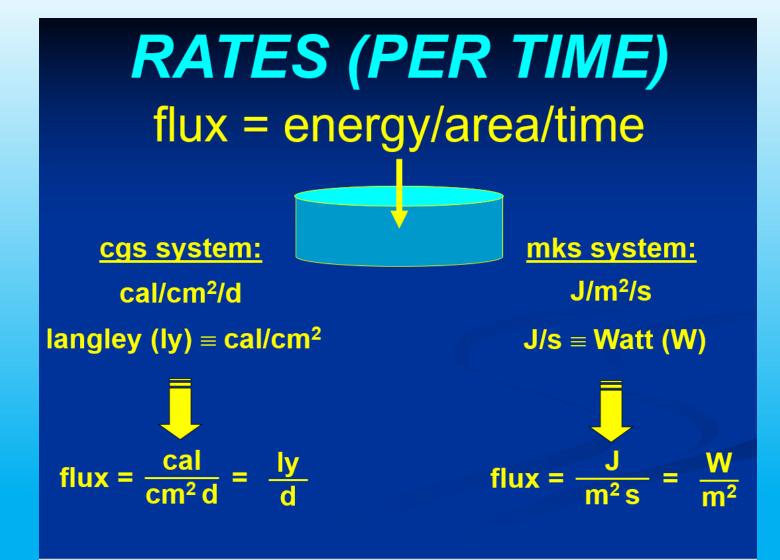

Blue slide images from Heat, Temperature, and Stratification lecture, Steve Chapra (2019)


### **Sources and Sinks**

#### Sources:

- Short-wave solar radiation
- Long-wave atmospheric radiation
- Conduction of heat from the atmosphere to the water
- Direct heat inputs


#### Sinks:

- Long-wave radiation emitted by the water
- Evaporation
- Conduction of heat from the water to the atmosphere

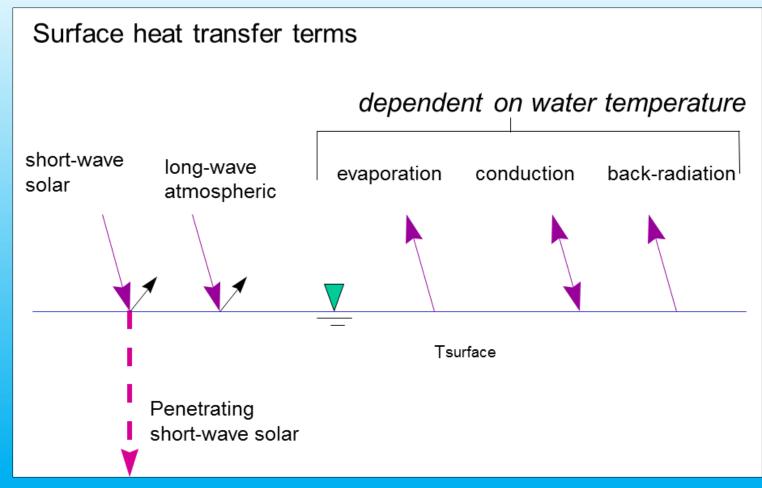

Source: CE-QUAL-W2 User's Manual

## **Energy Balance**

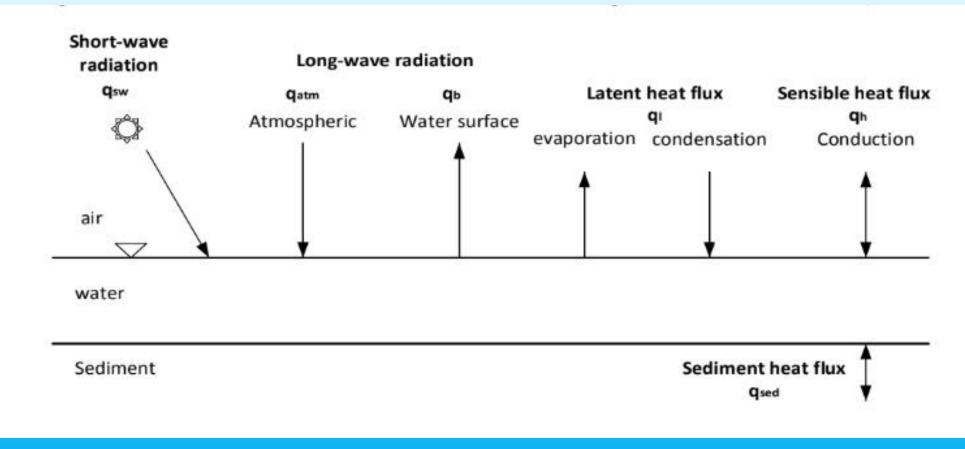

From ERDC-ELTR-16-1

### Radiation

Everything that has a temperature gives off electromagnetic radiation (light).

Shortwave radiation contains higher amounts of energy, and longwave radiation contains a smaller amount of energy.

Therefore, the sun gives off shortwave radiation, as it is extremely hot and has a lot of energy to give.

On the other hand, Earth's energy is emitted as longwave radiation, as it is much cooler but still emits radiation.

Source: North Carolina Climate Office

### Latent vs. Sensible Heat

### Sensible Heat:

Sensible heat is when energy is transferred as heat to an object, changing the temperature but not its state. If you can measure the temperature of the heat, it is sensible. A body (solid, liquid, or gas) of mass, m, and specific heat, c, is heated to change its temperature from T1 to T2 without changing its state. Indeed, the volume or the pressure of the body is unchanged. The energy received by the body responsible for its risen temperature is given by the relation:

- $Q = m^*c^*(T2 T1)$ , in joules
- Q = m\*c\*(T2 T1)\*1055.06, in BTU

### Latent Heat:


In contrast to sensible heat, latent heat is the energy released or absorbed that changes the state of a body during a constant temperature process. This process leaves temperature unaffected – it won't get higher or lower. The most common forms of latent heat are fusion at vaporization.

Source: hvacbrain.com

### Convection vs. Conduction

Convection and conduction are both mechanisms of heat transfer.

- Convection: Heat is transferred through the flow of material.
- Conduction: Heat is transferred through collisions of particles that make up the material.

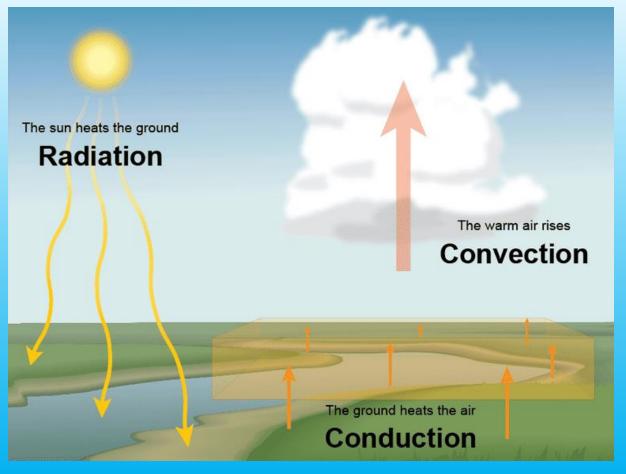

Source: University Corporation for Atmospheric Research (UCAR)

## **Surface Heat Exchange**

The surface heat exchange is computed as:

$$\Phi_n = \Phi_s - \Phi_{sr} + \Phi_a - \Phi_{ar} - \Phi_{br} - \Phi_e - \Phi_c$$

 $\phi_n$  = net surface heat flux, W m<sup>-2</sup>

 $\phi_s$  = incoming short-wave solar radiation,  $W \, \text{m}^{-2}$ 

 $\phi_{\rm sr}$  = reflected short-wave solar radiation,  $W \, {\rm m}^{-2}$ 

 $\phi_{\rm sn}$  = net short-wave solar radiation,  $\phi_{\rm s}$ - $\phi_{\rm sr}$ , W m<sup>-2</sup>


 $\phi_a$  = incoming long-wave atmospheric radiation, W m<sup>-2</sup>

 $\phi_{ar}$  = reflected atmospheric long-wave radiation,  $W \, \text{m}^{-2}$ 

 $\phi_{br}$  = back long-wave radiation,  $W \, \text{m}^{-2}$ 

 $\phi_e$  = evaporative heat loss,  $W \, \text{m}^{-2}$ 

 $\phi_c$  = conductive heat loss,  $W \, \text{m}^{-2}$ 

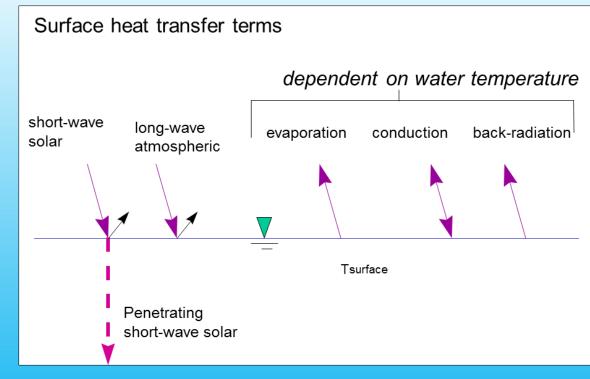

Source: CE-QUAL-W2 User's Manual

### **Short-Wave Solar Radiation**

#### Short-wave solar radiation is

- Measured directly by a pyranograph or another instrument and contained in a data file with units W/m<sup>2</sup>
  - Flawed because we don't know all details regarding how data was collected... Does it account for reflection? Is data measuring all radiation, including long-wave?
- Computed based on sun angle, according to the following equation:

$$\phi_s = 24(2.044A_o + 0.1296A_o^2 - 1.941E - 3A_o^3 + 7.591E - 6A_o^4) * 0.1314$$

- This is the EPA formulation based on empirical methods, similar to the Bird Clear Sky Model (https://www.nrel.gov/grid/solar-resource/clear-sky.html).
  - Calculates for radiation at sea-level. Elevation adjustments are made according to Annear and Wells 2007.
  - Assumes clear day radiation, meaning we must subsequently correct for cloud cover and shading from mountains and/or trees.
  - Calculates net radiation includes reflection from surface.

#### Terms:

- Solar Altitude (A<sub>o</sub>)
- Local Hour Angle (H)
- Equation of time –
   difference between
   true solar time and
   mean solar time
   (EQT)
- Local hour and lat/long terms
- Solar Declination Angle (δ)
- Angular Fraction of the Year (τ<sub>d</sub>)


Source: CE-QUAL-W2 User's Manual, Chapter 4

## **Shading**

- Shading of the waterbody can occur from cloud cover or nearby physical features, such as trees, mountains, or buildings.
- The W2 model uses the following equation:

$$\phi_{s\_net} = \phi_{s\_clearsky}(1 - 0.65C^2)$$

- Where C is defined in the met.npt file as 'cloud'
- And shading from physical features on the ground is defined in the shade.npt file as 'dynshade'

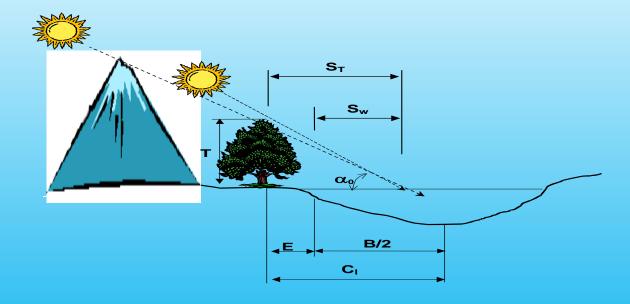

UNCLASSIFIED

12

## **Short-Wave Solar Radiation Penetration Depth**

Short wave solar radiation penetrates the surface and decays exponentially with depth

according to Beer's Law:

$$\phi_{\scriptscriptstyle S}(z) = (1 - \beta)\phi_{\scriptscriptstyle S} e^{-\eta z}$$


#### where:

 $\phi_s(z)$  = short wave radiation at depth z, W m<sup>-2</sup>

 $\beta$  = fraction absorbed at the water surface

 $\eta$  = extinction coefficient, m<sup>-1</sup>

 $\phi_{sn}$  = net short-wave radiation reaching the surface, W m<sup>-2</sup>

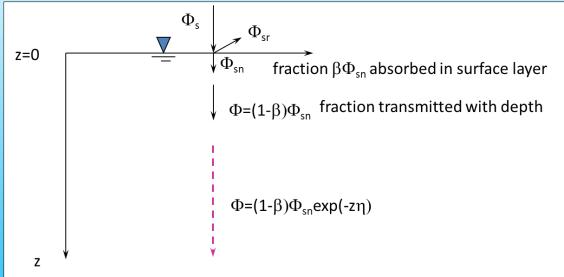

## **Long-Wave Atmospheric Radiation**

The long wave atmospheric radiation is computed from air temperature and cloud cover or air vapor pressure using Brunt's formula. The right-hand terms are all water surface temperature dependent.

$$DLR = \sigma \varepsilon_a T_a^{\ 4} \tag{26}$$

where  $\sigma$  is the Stefan–Boltzmann constant.  $\varepsilon_a$  and  $T_a(K)$  are the clear-sky air emissivity and the screen level (approximately 2 m above the surface) temperature, respectively. In meteorological parameter-based models, the air emissivity  $\varepsilon_a$  is a function of the screen-level water <u>vapor pressure</u> e and the screen-level temperature  $T_a$  or of  $T_a$  alone. Thus, the surface DLR can be estimated using the screen-level temperature and humidity by these models. The detailed information of the eight selected models is presented in **Table 11**.

Table 11. Eight meteorological parameter-based methods for estimating the surface DLR

Model source	Algorithm
Angstrom (1918)	$arepsilon_a = 0.83 - 0.18  imes 10^{(-0.067e)}$
Brunt (1932)	$\varepsilon_a = 0.605 + 0.048e^{0.5}$

#### Source:

S. Liang, D. Wang, X. Tao, J. Cheng, Y. Yao, X. Zhang, T. He, 2.12 - Methodologies for Integrating Multiple High-Level Remotely Sensed Land Products, Editor(s): Shunlin Liang, *Comprehensive Remote Sensing*, Elsevier, 2018

## **Water-Emitted Long-Wave Radiation**

Water surface back-radiation is computed as:

$$\phi_{br} = \varepsilon \sigma (T_S + 273.15)^4$$

### where:

 $\varepsilon$  = emissivity of water, 0.97

 $\sigma$  = Stephan-Boltzmann constant, 5.67 x 10<sup>-8</sup> W m<sup>-2</sup> °K<sup>-4</sup>

 $T_s$  = water surface temperature, °C

UNCLASSIFIED

15

## **Evaporative Heat Loss**

Also called latent heat loss, will not change the temperature, but the heat content will change, because of the energy it takes to change phases.

Evaporative heat loss is computed as:

$$\phi_e = f(W_z)(e_s - e_a)$$

where:

 $f(W_z)$  = evaporative wind speed function at wind height of z,  $W m^{-2} mm Hg^{-1}$ 

 $e_s$  = saturation vapor pressure at the water surface, mm Hg

 $e_a$  = atmospheric vapor pressure, mm Hg

### **Conductive/Convective Heat Loss**

Surface heat conduction is computed as:

$$\phi_c = C_c f(W_z) (T_s - T_a)$$

where:

 $C_c$  = Bowen's coefficient, 0.47 mm Hg  $^{\circ}$ C<sup>-1</sup>

 $T_a$  = air temperature, °C

### **Wind Function**

The model user can include different evaporation formulations using an evaporation wind speed formula of the form:

```
f(W_z) = a + bW_z^c
```

where:

 $f(W_z)$  = wind speed function with wind measured at height z,  $W \, \text{m}^{-2} \, \text{mm Hg}^{-1}$ 


a = empirical coefficient, default = 9.2

b = empirical coefficient, 0.46 default = 0.46

c = empirical coefficient, default = 2

 $W_z$  = wind speed measured at 2 m above the ground, m s<sup>-1</sup>

# **Questions?**

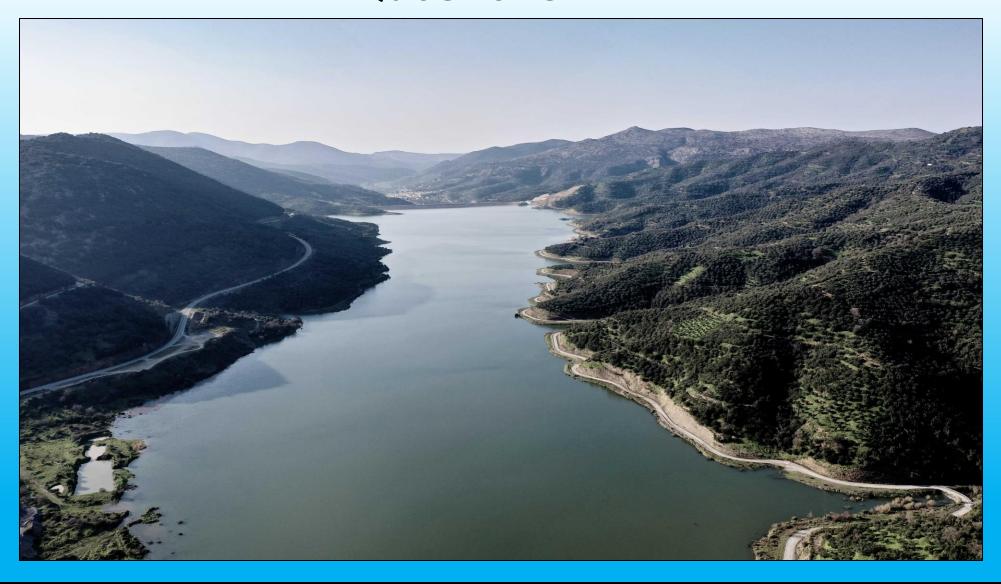

US Army Corps of Engineers • Engineer Research and Development Center