

CE-QUAL-W2: A Two-Dimensional, Laterally Averaged, Hydrodynamic and Water Quality Model, Version 4.5

User Manual: Part 5 – Model Utilities

Edited by

Scott A. Wells
Professor
Department of Civil and Environmental Engineering
Portland State University
Portland, OR 97207-0751

Department of Civil and Environmental Engineering Portland State University Portland, OR 97207-0751

CONTENTS

Contents

Contents	ii
List of Figures	
List of Tables	
Preface	
1. Introduction	
2. Water Balance Utility	
How to use the water balance utility GUI application	
Running the water balance program	
Incorporating the computed flows into the simulation	
Example from Tom Cole	
How to use the water balance utility console application	12
Input File: "WatBal.npt"	
Output File: "WatBal Errors.opt"	
Output File: "el_stats.opt"	
Output File from water balance	
How to Run the Console Water Balance Utility	13
3. Control File Converter for CE-QUAL-W2	14
4. GUI Interface for CE-QUAL-W2 for Versions 3.7-4.20	19
Introduction	19
Installing the GUI Interface	19
Opening the GUI Interface	20
Menus	20
Button Bar	20
Editing the Control File	
Editing the Bathymetry File	23
Merging or Splitting Segments or Layers	
Running the Preprocessor within the GUI	
A Note on Saving Files	
Typical Errors with the GUI	26
Command Line Processing	
Using the GUI W2Control on Touchscreen Laptops and Monitors	
5. Post-Processor for CE-QUAL-W2 by DSI, Inc.	
6. Excel Macro Utility for CE-QUAL-W2	
7. W2 V4.5 Bug Fixes, Enhancements, and User Manual Changes	
8. W2 Known Code Limitations	
9. Appendix A: Differences between CE-QUAL-W2 Versions	
Differences between Version 4.22 and 4.5	
Differences between Version 4.2.2 and Version 4.2.1	
Differences between Version 4.2.1 and Version 4.2	
Differences between Version 4.2 and Version 4.1	46

CONTENTS

Differences between Version 4.1 and Version 4.0	46
Differences between Version 4.0 and Version 3.72	46
Differences between Version 3.72 and Version 3.71	47
Differences between Version 3.71 and Version 3.7	47
Differences between Version 3.7 and Version 3.6	47
Differences between Version 3.6 and Version 3.5	56
Differences between Version 3.2 and Version 3.5	58
Differences between Version 3.1 and Version 3.2	70
10. Appendix B: BUG FIXES AND ENHANCEMENTS BETWEEN	
VERSIONS	75
W2 V4.2 Bug Fixes, Enhancements, and User Manual Changes	75
W2 V4.1 Bug Fixes, Enhancements, and User Manual Changes	85
W2 V4.0 Bug Fixes, Enhancements, and User Manual Changes	100
W2 V3.7 Bug Fixes, Enhancements and User Manual Changes	104
W2 V3.6 Bug Fixes, Enhancements, and User Manual Changes	121
W2 V3.5 Bug Fixes, Enhancements, and User Manual Changes	135
W2 V3.2 Bug Fixes, Enhancements, and User Manual Changes	

List of Figures

Figure 1. Dialog box for water balance utility	8
Figure 2. Dialog box for water balance utility if successful completion	8
Figure 3. An example of an existing w2_con.xlsm file. Columns A and B are not us	ed in
the control file and we will be pasting the w2_con45.csv into column C1, not A	.114
Figure 4. An example of the w2_con45.csv file from the converter utility	15
Figure 5. Location in Excel template where the constituent order is shown. In this	
example, the required number of constituents is 30. This is a formula compute	d in
the Excel sheet. Make sure that you have that same number in the list that foll	ows.
There is guidance on another tab in the Excel file on the required order based	
your dimensioning of number of algal groups, BOD groups, macrophyte group	
periphyton groups, suspended solids groups, and generic constituent groups.	
note that in column A, guidance is given on setting the number of columns nee	
in this section.	
Figure 6. Location in Excel file where the number of rows needs to be increased in	
there are more than 5 structures.	
Figure 7. Location in Excel file where the number of rows needs to be increased in	
there are more than 5 epiphyton/periphyton groups	
Figure 8. Location in Excel file where the number of rows needs to be increased in	
there are more than 5 zooplankton groups.	
Figure 9. Location in Excel file where the number of rows needs to be increased in	
there are more than 5 macrophyte groups	
Figure 10. About W2 Control GUI preprocessor.	
Figure 11. Dialog box menu.	
Figure 12. Menu of w2control	
Figure 13. Example of w2control menu.	
Figure 14. Dialog box example.	
Figure 15. Dialog box example.	
Figure 16. Bathymetry dialog box example	
Figure 17. Segments of a model dialog box.	
Figure 18. Splitting or merging layers example.	
Figure 19. Merge/split dialog box	
Figure 20. Running dialog box within w2control	
Figure 21. Splash screen for W2_Post.	
Figure 22. Menu for w2 post.exe post-processing tool from DSI	28

List of Tables

Table 1. List of bug fixes and enhancement code changes since CE-QUAL-W2 V	ersion
4.5 was released. Note that shaded areas toggle between release versions	31
Table 2. Known bugs in code.	35
Table 3. List of bug fixes and enhancement code changes since CE-QUAL-W2 V	ersion
4.2 was released. Note that shaded areas toggle between release versions	75
Table 4. Bug fixes and enhancements for Version 4.1.	85
Table 5. Bug fixes and enhancements for Version 4.0.	100
Table 6. Bug fixes and enhancements for Version 3.7.	104
Table 7. Bug fixes and enhancements for Version 3.6.	121
Table 8. Bug fixes and enhancements for Version 3.5.	135
Table 9 Bug fixes and enhancements for Version 3.2	153

Preface

This manual documents the two-dimensional, laterally averaged, hydrodynamic and water quality model CE-QUAL-W2. As in all complex models, there have been many contributors. This re-write of the User Manual was based on prior User Manuals: Environmental and Hydraulic Laboratories (1986), Cole and Buchak (1995) Version 2, and Cole and Wells (2000) Version 3.0 through Cole and Wells (2019) Version 4.1. Hence, one can think of the primary author as merely an editor of past documents, rather than reflecting one person's sole authorship. This updated User Manual contains numerous corrections, new figures, new sections, additional documentation, and improvements in organization and presentation of information compared to Cole and Wells (2019).

This section of the User Manual Part 5 documents the model utilities used in supporting the model, the model release notes and a detailed list of bug fixes.

The other sections of the User Manual are divided into multiple sections for ease of updating and editing:

- User Manual Part 1: Introduction to CE-QUAL-W2, Model download package, how to run the model, model versions, changes between model versions
- User Manual Part 2: Theoretical basis for CE-QUAL-W2: hydrodynamics and water quality, particle transport and numerical scheme
- User Manual Part 3: Model input and output file descriptions and input/output file examples
- User Manual Part 4: Model examples
- User Manual Part 5: Release notes, bug fixes, differences in model versions, history of bug fixes, and other user manuals such as for the GUI interface, the water balance algorithm, and other external codes.

This report should be cited as follows:

Wells, S. A., editor (2022) "CE-QUAL-W2: A two-dimensional, laterally averaged, hydrodynamic and water quality model, version 4.5, user manual part 5, model utilities and release notes," Department of Civil and Environmental Engineering, Portland State University, Portland, OR.

Or for a specific section:

Cole, Tom (2022) "Water Balance Utility," in "CE-QUAL-W2: A two-dimensional, laterally averaged, hydrodynamic and water quality model, version 4.5, user manual part 5, model utilities and release notes," ed. S. Wells, Department of Civil and Environmental Engineering, Portland State University, Portland, OR.

1. Introduction

Several useful CE-QUAI-W2 model utilities are available for editing the control file, post-processing model results, and setting up model input files. A description of these utilities is included in this part of the User Manual.

Also, this document shows model changes and bug fixes, model changes between versions, and a history of bug fixes in earlier versions.

Hence, this section of the User Manual includes the following sections:

- Model utilities
 - Water balance utility
 - Converter utility from w2 con.npt control file to Excel version
 - o GUI control file editor and bathymetry viewer for Versions 3.7-4.22
 - o Post-processor provided by DSI, Inc. including a bathymetry viewer
 - Excel macro utility for writing out input files for CE-QUAL-W2
- Model release notes
 - Current Bug fixes
 - Model Know Limitations
 - o Model changes between versions
 - Model bug fixes between versions

2. Water Balance Utility

Primary author: Tom Cole

How to use the water balance utility GUI application

Running the water balance program

When the executable is run, a window appears that allows the following inputs (note that the executable runs under the Windows operating system only) as shown in Figure 1.

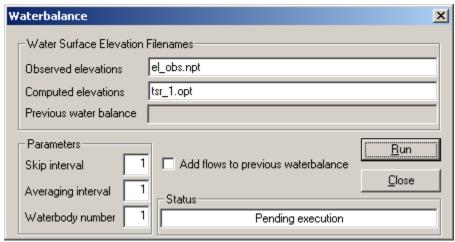


Figure 1. Dialog box for water balance utility.

:

When the dialog box first appears, default values populate the edit boxes. The user can then edit each one if the default values are not correct. Selecting Run will run the waterbalance utility to completion as shown in the following dialog box (Figure 2).

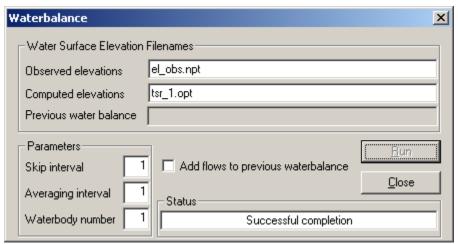


Figure 2. Dialog box for water balance utility if successful completion.

Observed elevations filename. This file consists of a Julian day and observed elevation as in the following example:

2000-2001 Oologah Reservoir observed water surface elevations

JDAY ELO
90.792 195.453
90.833 195.456
90.875 195.459
90.917 195.441
90.958 195.444
91.000 195.450
91.042 195.441

```
91.083 195.441
91.125 195.447
91.167 195.441
91.208 195.444
91.250 195.438
91.292 195.432
```

This example skips the first 3 lines and is of a similar format to all other CE-QUAL-W2 time-varying inputs with a fixed format with eight columns each for the JDAY and ELO values. However, the utility will read in values using variable field lengths so long as the JDAY and ELO values are separated by a space. Data need not be at regular intervals that might cause a repeat of the same values. Sometimes better results have been obtained if the same values that repeat over a time interval are not included (such as the water surface elevation at day 91.083 above).

Also note that the degree of accuracy in the observed elevations can have an impact on the computed flows. It is up to the user to decide the necessary precision used in the observed water surface elevations.

Computed elevations filename. The following shows an example output file from a time series file (the columns to the right have not been shown):

```
DLT,
92.000.
      456.39,
            195.37, .....
      952.28,
93.000,
           195.28, ......
      494.28,
94.000,
            195.27, .....
95.000,
      34.43,
            195.17, ......
96.000,
      170.88,
           195.08, .....
      211.93,
97.000,
           194.99, ......
98.000,
      255.11,
            194.92, .....
99.000,
     1459.08,
            194.78, .....
```

The water balance utility reads in the [JDAY] and [ELWS] values and uses these in the water balance computations. The user must turn on time series output in the model control file and specify the segment at which the water surface elevation values are output (typically the segment next to the dam for reservoirs). Information on how to accomplish this is given in the User's Manual under the Time Series output file discussion.

Add to previous water balance. For various reasons, the water balance utility may not perfectly close the water balance the first time through the computations. Depending upon the discrepancies between computed and observed elevations, the utility may need to be used iteratively by rerunning the model using output from the first run of the water balance utility and then rerunning the water balance utility on the water surface elevations output in the new time series file. For a system with multiple branches, each iteration of the utility and the resulting output file can be saved as a separate file that is then incorporated as a distributed tributary for branch 2, then branch 3, etc. In the case of a system with only one branch, this approach cannot be used. Rather, the new flows generated at the second iteration need to be added to the previously computed flows and incorporated as an "improved" distributed tributary inflow file. This option allows the user to continue adding flows to the same inflow file.

The computed flows are contained in the "qwb.opt" file. For most simulations, these flows will generate water surface elevations sufficiently close to the observed elevations such that further refinement is unnecessary. However, as mentioned above, the solution may need to be iterated. Rarely, manual adjustment of the generated flows may be required. This is usually only needed when observed water surface elevations change significantly over a short time period.

Previous water balance filename. If the "Add to previous water balance" option is used, you must specify the existing water balance output file for the computed flows to be added to.

Skip interval. Some reservoirs have a lot of noise in the observed water surface elevation data, such as in peaking hydropower operations, and this option allows the user to specify how many observed elevations are ignored when computing the flows between observed elevations. For example, if water surface elevations are available on an hourly interval, the resulting flows generated by the water balance utility can have large + and – flows that are completely unrealistic as opposed to using observed elevations on a daily basis taken during periods of no hydropower generation. In order to smooth out the computed flows, a skip factor of 24 would result in computed flows being output on a daily basis with all of the "noise" generated by hydropower operations ignored over the 24-hour period.

Averaging interval. This option computes a running average of the water surface elevation based on the input value. This is an additional aid to smooth out water surface elevation "noise". For example, consider the case in which there is no inflow/outflow to the system, but there is considerable wind seiching. The water balance utility would compute alternating inflows and outflows from the system that, depending on the amount of seiching, could be very large when in reality there should not be any flows added to or subtracted from the system. Using a running average alone or in combination with skipping over a number of observed elevations specified in (4) can help alleviate many of the problems caused by an automated water balance computation.

Waterbody number. In the case of multiple waterbodies each of which has a separate bathymetry input file, the user must specify which waterbody (and thus which bathymetry file) the water balance is being computed for. This capability is necessary for modeling systems with multiple reservoirs.

Incorporating the computed flows into the simulation

The water balance utility can be used for lakes and reservoirs in which water surface elevations are a function of inflows and controlled outflows from the system. The utility computes the flows necessary to match observed water surface elevations (typically taken at the dam) and outputs them to the "qwb.opt" file. This file is composed of a Julian date and an inflow (m³ sec⁻¹). The flows can be either positive or negative. Temperatures and/or constituent concentrations must also be provided in the corresponding temperature and constituent concentration input files if the computed flows are incorporated as inflows to the system. *The water balance utility does not provide this information*, but this information needs to be provided by the user depending upon how the computed flows are incorporated into the simulation. Considerable thought should go into how best to incorporate temperature and constituent concentrations and is discussed in more detail below.

Note that negative flows use temperatures/concentrations in the waterbody when calculating the impact on the system of these flows rather than the temperatures/concentrations in the corresponding inflow temperature and constituent concentration files. This ensures that negative flows generate no change in temperature or constituent concentrations. However, positive flows can impact simulation results and care must be taken as to how the flows are incorporated into the simulation.

The flows required to complete the water balance are computed as a step function. If they are incorporated into the model as an additional inflow or outflow whose current values are being linearly interpolated, such as a branch inflow, then the resulting water balance will not be correct. Typically, the flows in the qwb.opt file are first included as a distributed tributary inflow assigned to the mainstem branch and interpolation [DTRIC] is turned "OFF". The corresponding distributed tributary inflow temperatures are

usually set to air temperatures in the qdt_br1.npt file. When running water quality, care must be taken as to what constituents should be included in the corresponding inflow constituent concentration file. Typically, only DO values are included if the distributed tributary option of incorporation is used, and they are set to saturated values corresponding to the observed air temperatures. Keep in mind that if the water balance flows are incorporated as branch inflows, then the mass loading of organic matter and nutrients will be increased as well.

The branch corresponding to the distributed tributary inflow is usually assigned to the mainstem branch of a reservoir. Using a distributed tributary minimizes the impact of the flow, temperature, and/or water quality associated with the distributed tributary by distributing the flow throughout all segments in a branch weighted by surface area. Be aware that large flows as a result of large errors in inflow/outflow measurements can and have had a significant impact on temperature and water quality calibration in the surface layers. Usually, this is not a problem, but sensitivity analyses should be conducted to see if the flow and associated temperature/constituent concentrations have an impact on the simulation results. If so, then the following discussion is of particular relevance.

As emphasized previously, a great deal of thought should go into how the flows generated from the water balance utility are incorporated into the simulation. As discussed previously, these are typically incorporated as distributed tributary inflows so as to minimize the impact of the flows on the simulation. However, this may not always be the best, most accurate, or most realistic method. For example, suppose that the water balance flows are consistently negative. This would indicate that either inflows are consistently overestimated or outflows are consistently underestimated. Obviously, incorporating the flows as a positive increase in the outflows as opposed to subtracting them from the inflows can potentially have a very significant impact on simulation results. In this case, sensitivity analyses should be conducted to determine which method improves the simulation results. If, say, hypolimnetic temperatures are consistently being underestimated, then incorporating the flows into a hypolimnetic outflow could improve the simulation results. Conversely, if hypolimnetic temperatures were being overpredicted, then the inflows should probably be reduced. The key point to keep in mind is that there are a number of different ways to incorporate the computed flows, and they generally should all be tested to determine the best way to incorporate the computed flows into the simulation.

As another example, consider the case in which the generated flows are consistently positive and a branch in which sometimes significant inflows are ungauged. In this case, a sensitivity analyses should be performed to determine if incorporating the flows or a portion of the flows into the ungauged branch inflow improves model results. Oftentimes, the model can be used as a guide as to how best to incorporate the computed flows into the simulation.

Example from Tom Cole

Walter F. George is a U.S. Army Corps of Engineer reservoir located on the Chattahoochee River in Alabama. The reservoir is operated as a peaking hydropower facility. During calibration, the model consistently underpredicted hypolimnetic temperatures by 0.5-1°C. Wind sheltering could be adjusted to increase hypolimnetic temperatures, but this adjustment always adversely impacted thermocline depth. After considerable thought, it was concluded that including possible seepage at the dam might improve hypolimnetic temperature predictions. A portion of the distributed tributary flows were incorporated as an additional outflow at the bottom of the dam. The final value used was 5 m³ sec⁻¹, which was less than 1% of the average outflows and brought hypolimnetic temperatures into almost exact agreement with observed temperatures. Further investigation of the outflows revealed that during times of no power generation, an additional flow of 5.1 m³ sec⁻¹ was specified in a file that was not originally sent as part of

the outflow data. Thus, the model pointed the way as to how best to incorporate the computed flows and was a surprisingly accurate indicator of what was occurring in the prototype.

How to use the water balance utility console application

A console application that reads an input file is also available to perform the waterbalance. This new console version of the water balance code provides the following updates:

- 1. This is not a windows dialog box driven code so it can easily be used in batch files.
- 2. There is now an input file for model parameters for the water balance utility and an output file for model errors.
- 3. There are several enhancements: one has more flexibility over file naming, the number of header lines to skip in input files, and the number of waterbodies to use in the analysis.

Input File: "WatBal.npt"

The new input file, "WatBal.npt" has the following format:

```
Water Balance input file for Console Application
"el_obs.npt" , file for observations, time and water level time series in 2 columns "tsr_8_seg36.opt" , tsr file for model predictions-assuming only one line skipped in
file header
                     , Output file name
"gwb1.npt"
                    , NSKIPS - number of skips of data
                     , NAV - averaging interval, number of data points to average
1.1
         , waterbody to perform water balance: JW1:STARTWB, JW2:ENDWB:1,2=WB1&2;1,1==WB1
3
          , number of lines to skip in the header for the water level data file
                  , past water balance PWB file: Yes==1, No==0
"qwb.npt"
                   , Previous Water Balance file name
```

The explanations of each line are shown in the example file above. If performing over multiple waterbodies, keep in mind that all waterbodies must have the same grid (i.e., ELBOT and vertical spacing must be the same). Currently all the flow correction is given to only 1 water balance file. A later option will be for multiple WB files so that one can distribute them across several waterbodies.

Output File: "WatBal Errors.opt"

If there are errors, any errors will be shown in this text file. If no errors, then this file will not be written to the disk.

An example of the error file output is shown below:

```
Could not open simulated elevations file tsr 8 seg39.opt
```

Output File: "el stats.opt"

This output file displays model error statistics of the water level and average flow rate in the qwb output file. Typical output from this program are shown below: N Mean Error Absolute ME

```
0.00
                              0.00
Average water balance flow correction = .00 m^3/s for period covering Julian day 1.04 to
239.94
```

RMS Error

Output File from water balance

The main output file from the water balance utility is a time series of flows necessary to match the water level.

A typical output file is shown below:

```
Computed flow to complete water balance
     1
   JDAY
           QWB
  1.040
          0.00
  2.000 24.34
  3.000
          2.33
  4.000
          2.34
  5.000
          3.72
          2.33
  6.000
  7.000
          4.67
  8.000
          2.34
  9.000
           3.71
          3.29
 10.000
 11.000
          4.66
          2.34
 12.000
 13.000
 14.000
          2.34
 15.000
          3.32
 16.000
           3.31
 17.000
           3.49
```

How to Run the Console Water Balance Utility

The water balance utility is run by executing the exe file for 32 (WBconsole32.exe) or 64 bit (WBconsole64.exe) Windows operating system. One also needs the input file WatBal.npt in the directory of the executable.

3. Control File Converter for CE-QUAL-W2

This section outlines the steps required to convert a legacy application control file, **w2_con.npt**, and its companion **graph.npt** file into the Excel version of the control file or to convert a w2_con.csv file from 4.1 or 4.22 to 4.5.

This is a relatively simple process that involves these steps:

- Copy ConverterControlFile.exe into the directory of a legacy application or copy the three files read by the program (w2_con.npt, graph.npt, and the bathymetry file) into a directory with the executable. If you are just converting a 4.1 or 4.22 w2_con.csv file to the new format, just copy w2_con.csv and the bathymetry file into a new directory. After execution (double click the converter executable), the following files are written to the directory:
 - a. **w2_con45.csv** this is a csv file format of the control file. This will then need to be copied into a Version 4.5 example **w2_con.xlsm** template.
 - b. A csv form of the bathymetry file (if the bathymetry file was not already in csv format). The output bathymetry file is named **bthX.csv**, where X is the waterbody number. This new format is much easier for editing and analysis than the older file format. The file name in the w2_con.csv is also changed to bthX.csv.
- 2. Copy **w2_con.csv** into an existing Version 4.5 example file *.xlsm from another application (you can use one from the W2 Model Examples) by following these steps:
 - a. Open the file w2_con.xlsm (or it may have a different descriptive name, such as w2_con_DeGray.xslm) from an existing example problem supplied in the CE-QUAL-W2 example problems.

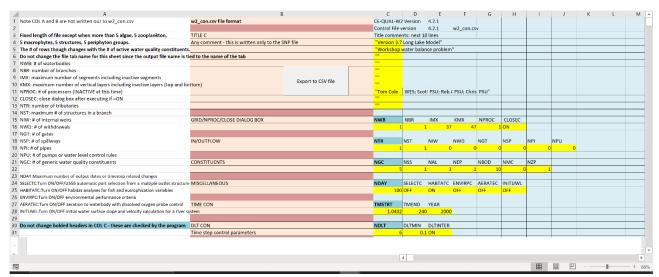


Figure 3. An example of an existing w2_con.xlsm file. Columns A and B are not used in the control file and we will be pasting the w2_con45.csv into column C1, not A1.

 The easiest option is to open the file w2_con45.csv from the converter utility in Excel. Select the columns and rows with data. Do not select the entire sheet

since you cannot copy and paste these into Cell C1 in **w2_con.xlsm**. Select the rows and columns necessary to select all the data. Be careful you select all the columns – especially for the SOD specification per segment. You will need to select as many columns as the # of segments (IMX).

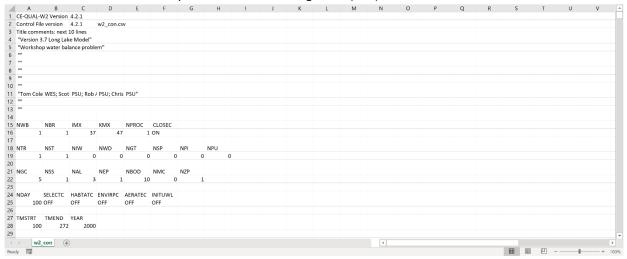


Figure 4. An example of the w2_con45.csv file from the converter utility.

- ii. Then Copy the selected cells from w2_con45.csv and paste to w2_con.xlsm cell C1 using Paste Values and Number Formatting so that the colors and other formatting are preserved in the original document.
- b. The next step is to adjust rows for the number of constituents. The template file you used w2_con.xlsm had an assumed number of water quality constituents that may be different from the number you will use. Go to approximately row 384 as shown below and delete or add cells in only column A and B only to match the specified number in the formula. So, if you need to add cells, then select the correct number of cells in column A and B, right click your mouse and choose 'Insert', then 'shift cells down.' If you need to delete cells, then select the correct number of cells in column A and B, right click your mouse, choose 'Delete', then select 'move cells up'. Now the information in column A and B should line up with what is written in Column C.



Figure 5. Location in Excel template where the constituent order is shown. In this example, the required number of constituents is 30. This is a formula computed in the Excel sheet. Make sure that you have that same number in the list that follows. There is guidance on another tab in the Excel file on the required order based on your dimensioning of number of algal groups, BOD groups, macrophyte groups, periphyton groups, suspended solids groups, and generic constituent groups. Also note that in column A, guidance is given on setting the number of columns needed in this section.

- c. If you have more than 5 structures, 5 epiphyton/periphyton groups, 5 algae groups, 5 macrophyte groups, or 5 zooplankton groups, you will have to add additional rows where necessary only in columns A and B. You can search in Column A for "increase # of rows" for where these areas are located.
 - i. For structures, look at rows 136-165 there are notes in Col A and B describing where to add rows if more than 5 structures.

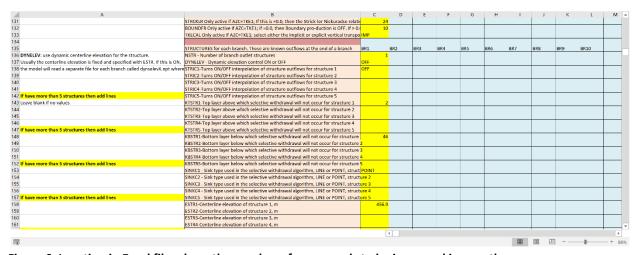


Figure 6. Location in Excel file where the number of rows needs to be increased in case there are more than 5 structures.

ii. For more than 5 epiphyton/periphyton groups, look in the epiphyton section (search for epiphyton).

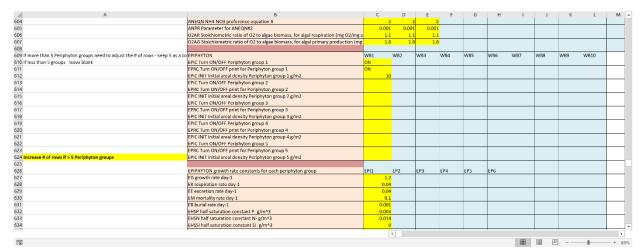


Figure 7. Location in Excel file where the number of rows needs to be increased in case there are more than 5 epiphyton/periphyton groups..

iii. For more than 5 algae and 5 zooplankton groups, look in the zooplankton section (search for zooplankton).

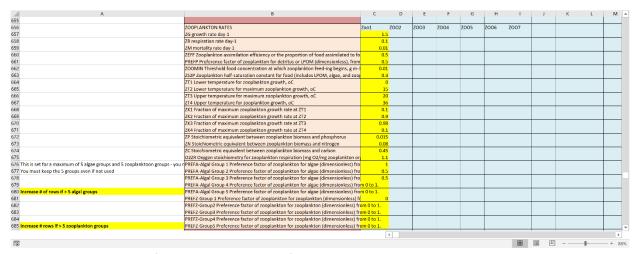


Figure 8. Location in Excel file where the number of rows needs to be increased in case there are more than 5 zooplankton groups.

iv. For more than 5 macrophyte groups, look in the macrophyte section (search for macrophyte).

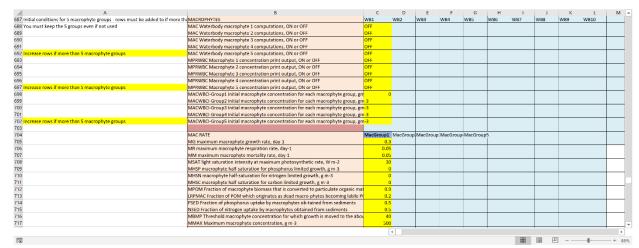


Figure 9. Location in Excel file where the number of rows needs to be increased in case there are more than 5 macrophyte groups.

- d. You will need to put quotes around the TITLE field, HNAME field, CNAME field, and CDNAME field. This can be done by setting up a formula using the existing cells as '=char(34)&[CELLREF]&char(34)' where CELLREF is the cell reference number of the original text. Then paste the values with the double quotes to the locations in the control file. If anyone figures out an easier way to do this let me know! Frustratingly, Excel drops the double quotes on importing them.
- e. The w2_con.xlsm file should now be working. As edits are made in this file, you will push the button on the top of the file in Column B to export it to w2_con.csv, which is read in by the W2 model. The preprocessor will 'yell' at you in case there is an error in the set up.

4. GUI Interface for CE-QUAL-W2 for Versions 3.7-4.20

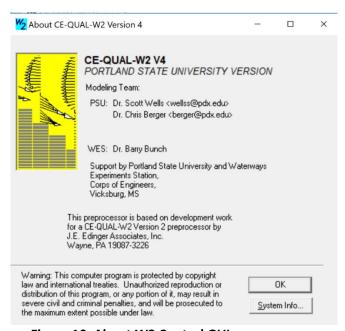


Figure 10. About W2 Control GUI preprocessor.

Introduction

This section describes the GUI interface that is released with CE-QUAL-W2. This works with the old version of the control file, w2_con.npt (only up to Version 4.2) but does work with the Excel version of the control file (w2_con.csv). The w2_post program shown in the next section has a bathymetry viewer that can be used with the w2_con.csv control file.

The manual describes the uses of the GUI for editing the control file (w2_con.npt) and the bathymetry file (user-defined filename, typically called bth.npt or bth.csv). Please note that the model files can be edited using a text editor or in Excel, and the GUI is therefore not required to run the model. The GUI though may be very helpful for the new CE-QUAL-W2 user as is the Excel version of the control file. The bathymetry editor is very useful in viewing the model grid and making changes to the grid (e.g., grid refinement). The bathymetry editor though does not assist in setting up the bathymetry. The model user must have already developed the bathymetry file using other programs. The bathymetry editor only edits an existing bathymetry file. Often the bathymetry is developed using GIS software or programs like SURFER or other 3-D contour plotting software packages.

Installing the GUI Interface

After downloading the GUI interface setup files and unzipping them, from Windows Explorer double-click on 'setup.exe' to guide you in the set-up process.

Opening the GUI Interface

By double-clicking on the W2 icon from the Desktop or from Windows Explorer, the user is presented with the following screen:



Figure 11. Dialog box menu.

This interface is meant to be simple and uncomplicated.

Menus

The user has 3 menus: File, Window, and Help. The File menu controls which control file to open and to save. The user can only open a CE-QUAL-W2 control file – such as w2_con.npt. Opening any other file type will result in an error. The File save button and file open buttons and menu items only affect the control file and the associated files (bathymetry and graph files). Note that when you save a file, you overwrite the original file with which you started. The GUI program though copies the original output file to a similar name but with a number designator. This allows the user always to go back and track changes made over time to the control file or bathymetry files.

Button Bar

The buttons become active as the user opens the files that affect the buttons. For example, once the bathymetry file is opened, the 4 grid viewing options are then displayed (see more information below). The open file button opens the w2_con.npt file or another file that is in the format of the control file. The save button becomes active once a file is opened and changes are made. The print button prints the current screen (I would not use this since it is not a very useful print out. It is much more convenient to just print the text file directly from Notepad or other text editor.) The next buttons are described below.

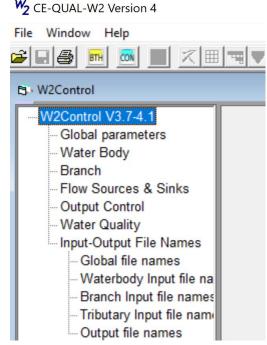


Figure 12. Menu of w2control.

Editing the Control File

Once you have chosen a control file to open (w2 con.npt), open it and adjust the window so that the window options are visible. If the file does not open there may be serious formatting errors in the file or you may have not chosen a CE-QUAL-W2 control file. Check the file for errors using the CE-QUAL-W2 preprocessor (a separate program released with W2).

You will notice that the BTH button is now active, meaning that you can also open the bathymetry file. The left pane now has 7 headings – each subheadings that can be shown by double-clicking on the main heading. For example, several of the subheadings have been expanded, as shown to your right.

By double-clicking on a subheading, the user can edit the information in a cell. Information about each model parameter is shown in Appendix C in the User Manual.

Once you have edited the cells (either by changing a number or

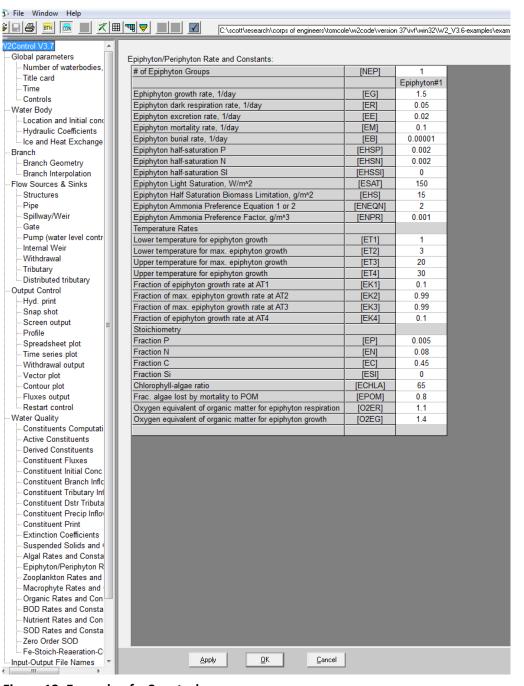


Figure 13. Example of w2control menu.

changing a menu parameter), there are 2 buttons at the bottom of the page as shown below.

The Apply button is used to set the parameters of the table. For example above, the # of epiphyton groups is '1". If one wanted to change this to "2". One would enter 2 in the cell for NEP and then press "Apply". The table will be re-drawn as shown below.

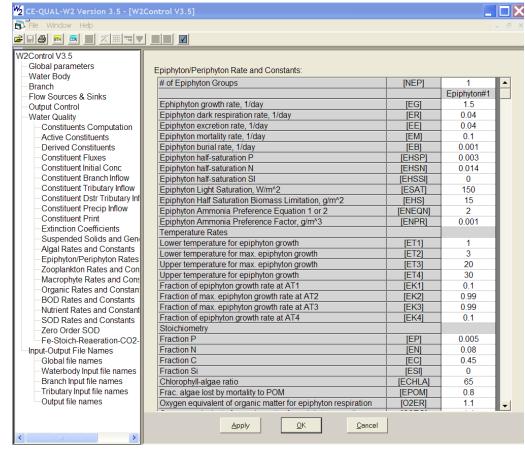


Figure 14. Dialog box example.

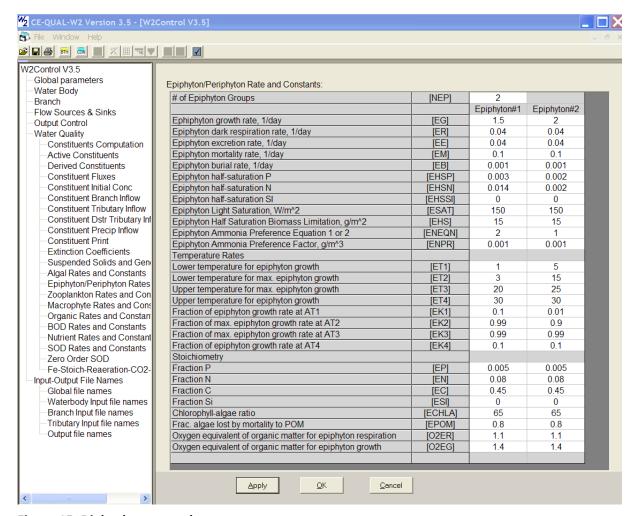


Figure 15. Dialog box example.

Then after making changes, the OK button MUST be pressed. But this does not SAVE the file to the hard disk. The User must also then press the SAVE button on the button bar above (or the menu FILE/SAVE file) to save these changes to the disk. The save button will be highlighted after a selection is changed.

Editing the Bathymetry File

After opening the control file, the bathymetry file can be opened by clicking the BTH button. Note that the bathymetry file name is under the 'INPUT-OUTPUT FILE NAMES' Menu and the submenu 'WATERBODY INPUT FILE NAMES'. At this point there are 4 views that become active: Side View, Top View, Data View, End View.

The buttons on the top allow one to toggle between the different bathymetric views. By expanding the Top View, one can enlarge the view by holding down the left mouse button and scrolling from right to left (see example below). To decrease the image size, hold down the left mouse button and scroll from right to left.

To change the active segment and layer, you must place the mouse cursor in the Data View at a segment and layer of interest and click the 'Refresh View' button. This affects which segment is shown in the End View and which segment is highlighted in the Side View.

To edit the bathymetry, click on the variable and change its value. Then the user must click the 'OK' button to accept these changes. Using the SAVE button saves all the user files.

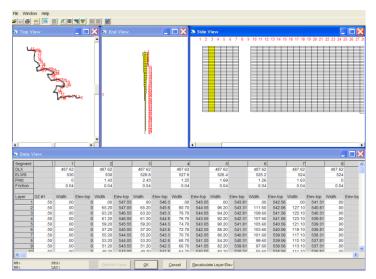


Figure 16. Bathymetry dialog box example.

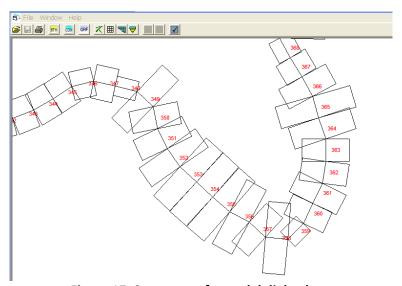


Figure 17. Segments of a model dialog box.

Merging or Splitting Segments or Layers

In order to perform this operation, open the Data View and select the range of layers and/or segments to merge or split by highlighting them with the mouse. You will notice in the left hand corner a box shows what segments and layers have been selected.

In the example below I have selected layers 5-14 and segments 2 and 3. You will also now notice that the layer and segment merge/split buttons are now active. To merge or split segments, click on the Merge/Split segment button. A small dialog box will come up with options for merging or splitting the segments (see below). You then have the option to merge the 2 segments or split them into many more segments. The control file (w2 con.npt) will automatically adjust segment numbers when using this option. But keep in

mind that the following files will need to be edited to adjust them for changes in the number of model segments: the wind sheltering coefficient file (wsc.npt) and the shading file (shade.npt).

A similar process is followed for merging or splitting layers. 250.2 250.2 250.2 250.2 250.2 250.2 41.63 4.21 0.04 41.63 41.5 4.37 41.37 41.23 41.1 3.48 40.97 40.84 3.41 0.04 0.04 0.04 0.04 0.04 DZ #1 DZ #2 Layer 1.00 1.00 .00 .00 .00 51.03 .00 .00 50.64 .00 50.51 .00 307.73 307.73 373.35 373.35 1.00 1.00 00 284.76 284.76 50.16 49.16 50.03 49.9 48.9 236.76 236.76 49.77 48.77 249.74 49.64 325.37 49.51 420.67 1.00 1.00 49.03 249.74 325.37 420.67 1.00 1 00 1.00 .00 284.76 48 16 307.73 48.03 373.35 373.35 47.9 236.76 236.76 47.77 46.77 249.74 47.64 325.37 47.51 420.67 47. 46. 44. 42. 41. 40. 39. 37. 36. 37. 36. 37. 29. 22. 22. 21. 22. 21. 18. 17. 16. 17. 16. 17. 17. 1.00 45.9 45.77 325.37 1.00 1.00 1.00 .00 46.03 373.35 236.76 249.74 45.64 45.51 420.67 1.00 1.00 373.35 373.35 236.76 236.76 249.74 249.74 325.37 325.37 420.67 420.67 1.00 44.03 43.9 43.77 43.64 43.51 373.35 373.35 42.9 41.9 42.77 41.77 42.64 41.64 325.37 325.37 1.00 43.03 236.76 420.67 .00 .00 .00 236.76 249.74 420.67 1.00 1.00 1.00 42.03 1.00 1.00 1.00 41.03 373.35 373.35 40.9 236.76 236.76 40.77 249.74 249.74 40.64 325.37 325.37 40.51 420.67 420.67 39.64 40.03 39.9 39.77 39.51 1.00 1.00 1.00 1.00 39.03 38.03 373.35 365.51 236.76 227.49 38.77 37.77 249.74 38.64 37.64 325.37 401.30 378.97 235.22 296.11 37.16 36.16 35.16 37.03 36.03 35.03 36.9 35.9 34.9 36.64 35.64 34.64 1.00 1.00 1.00 .00 296.9E 358.02 220.05 36.77 35.77 34.77 33.77 32.77 31.77 30.77 226.26 213.84 270.19 36.51 35.51 34.51 33.51 32.51 31.51 258.89 173.75 1.00 1.00 343.54 209.81 240.60 1.00 1.00 1.00 242.47 188.69 196.98 180.43 33.9 32.9 31.9 30.9 29.9 28.9 32.64 31.64 30.64 1.00 1.00 1.00 33.16 33.03 24.13 22 53 1.00 32.16 31.16 32.03 31.03 1.00 1.00 30.51 1.00 1.00 1.00 .00 30.16 29.16 30.03 29.03 .00 .00 29.77 28.77 .00 .00 29.64 28.64 29.51 28.51 1.00 27.9 26.9 25.9 24.9 1.00 1.00 1.00 1.00 .00 .00 28.16 27.16 28.03 27.03 00 00 27.77 26.77 27.64 26.64 27.51 26.51 26.16 25.16 24.16 23.16 1.00 1.00 1.00 .00 .00 26.03 25.03 25.77 24.77 00 25.64 24.64 25.51 24.51 .00 .00 .00 .00 .00 .00 .00 1.00 1.00 .00 .00 .00 00 00 00 23.9 22.9 21.9 20.9 23.77 22.77 23.64 22.64 23.51 22.51 1.00 1.00 24.03 1.00 1.00 23.03 21.64 20.64 19.64 1.00 1.00 1.00 22.16 21.16 22 03 .00 1.00 20.16 19.9 19.51 1.00 1.00 .00 20.03 19.77 1.00 1.00 .00 19.16 18.16 19.03 18.03 18.9 17.9 00 00 18.64 17.64 18.51 17.51 1.00 1.00 1.00 16.64 15.64 16.51 15.51 1.00 .00 17.03 00 00 16.9 15.9 1.00 16.03 1.00 1 00 1.00 nn nn 15.16 15.03 00 149 14.77 13.77 00 00 14.64 13.64 14.51 13.51 14.03 1.00 1.00 1.00 13.9 1.00 1.00 1.00 13.16 13.03 12.9 12.77 12.64 12.51 <u>0</u>K Refresh Views Recalculate Layer Elev

Figure 18. Splitting or merging layers example.

Note that in the bottom left corner of the above screen shot, the layers and segments that were selected is shown.

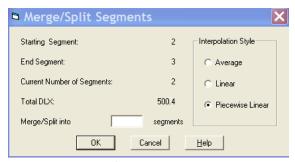


Figure 19. Merge/split dialog box.

Running the Preprocessor within the GUI

The preprocessor which checks all input files can be executed from within the GUI by clicking on the CHECK button. At which point a dialogue box will pop up with information about running the preprocessor. The preprocessor executable must be in the root directory with the input files.

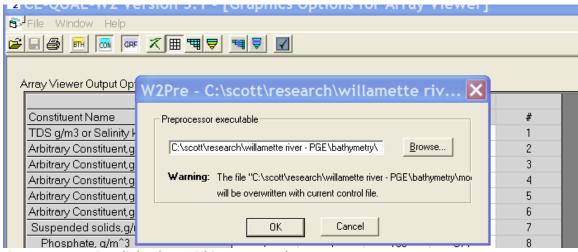


Figure 20. Running dialog box within w2control.

A Note on Saving Files

The GUI interface makes a backup copy of each file opened during a session. It will add an integer number to the files opened. This integer is based on whether previous backup files have been created or not. For example, the 1st time the GUI opens the files, w2_con.npt, graph.npt, and bth.npt; the program will write as backup copies of the unaltered original files: w2_con.npt2, graph.npt2, and bth.npt2. The next time the program opens these files, the files w2_con.npt3, graph.npt3, and bth.npt3 will be created (if you have already deleted the *.*2 files from your hard disk, the GUI will again use the integer '2' rather than '3').

Typical Errors with the GUI

Sometimes the GUI cannot read a control file because of the format of the text. UNIX/Linux systems often use a line-feed at the end of a line, while Windows text files include a carriage-return and a line-feed. You must convert the file to a Windows text file for the GUI to work properly. In a text editor you can view all the characters and verify you have the proper Windows format if the GUI is having problems reading the file. Many text editors automatically convert files from one type to the other (such as the text editor 'Note-pad ++').

It is recommended that you use the W2 preprocessor to catch errors in the set-up files first before using the GUI. The W2 preprocessor though will not catch the line-feed error noted above and will read the files correctly whether in UNIX/Linux or Windows format.

Command Line Processing

The GUI also can be controlled by command line passing of the working directory and file. In a batch program or from the command line in a DOS box you can execute the GUI as follows:

"C:\scott\research\corps of engineers\tomcole\w2code\GUI36\w2control\w2control4.exe" C:\scott\w2workshop\2009 workshop\waterqual\problem1\w2 con.npt

The first string in quotes executes the GUI (this shows the path to the GUI – your path to the GUI will be different). The command line argument is NOT in quotes. This program was developed in VB6 and does not take quotes around the command line. Note that this is different than the FORTRAN command line argument. So the above command will open the GUI and load the control file automatically from the directory "C:\scott\w2workshop\2009 workshop\waterqual\problem1".

Using the GUI W2Control on Touchscreen Laptops and Monitors

The software, W2Control, is a GUI preprocessor for the W2 model. It works fine on non-touch enabled monitors. But for touch screen monitors, like many of the latest laptops, the opening "treeview" menu does not work because of a software incompatibility with VB6, the source code. W2Control can though be used on a touch screen laptop by doing the following:

Go to Services by typing 'Services' in the command line or Cortana line. In the list choose 'Touch keyboard and Handwriting Panel Service'. Right click your mouse and choose Properties and change 'Automatic' to 'Disabled'. Then click STOP in the Service Status to stop the service. Click APPLY. The W2Control then works as expected.

5. Post-Processor for CE-QUAL-W2 by DSI, Inc.

Paul Craig at DSI, Inc. has generously provided a software system for evaluating model results. There is a short user's manual produced by DSI that documents the software utility and this is a separate pdf file download. This post-processor currently works for Version 3.7 to the current version. This post-processor, as shown in Figure 21 and Figure 22, allows the user to look at model bathymetry, show time series, profile plots, contour plots, velocity vectors, and animations with up to 4 simultaneous state variables.



Quick Guide for the CE-QUAL-W2 Post Processor W2_Post

July 2012 Updates June 2016

W2_Post

A post-processor for CE-QUAL-W2 Version3/4 that provides the user with a broad range of visualization and analyses of the model results. W2_Post provides for rapid visualization and assessment of W2 model results. W2_Post uses a binary file generated by the CE-QUAL-W2 (i.e. the "W2L" file extension) for all of its model data analysis. No need to output multiple types of output from W2. The post-processor provides extensive model calibration / measured data comparison tools and statistics. The following are summaries of each major type of post-processing available.

Figure 21. Splash screen for W2_Post.

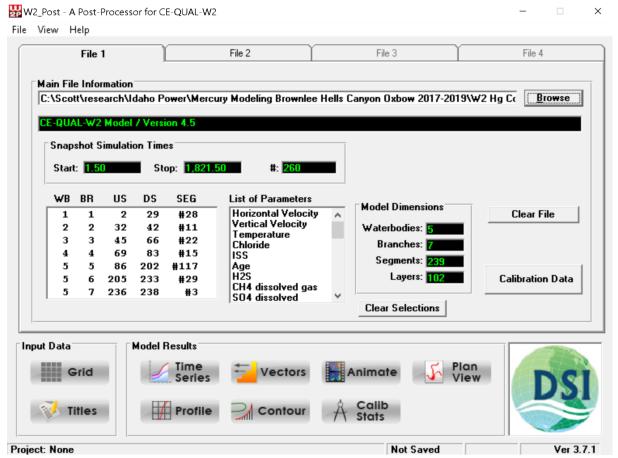



Figure 22. Menu for w2_post.exe post-processing tool from DSI.

6. Excel Macro Utility for CE-QUAL-W2


This Excel macro was written by Jeffrey Gregory, P.E., Civil Engineer, USACE, Nashville District and updated by Scott Wells, PSU.

The Excel macro, "w2tools_examples.xlsm", can be used to develop and write out input files for the CE-QUAL-W2 model. This can be especially useful if the model user develops an Excel workbook with separate tabs for the different input files for the model.

For example, consider the input file for wind sheltering using the new free format (or csv) formatting option. You develop a workbook for this as shown below. The coloring in the workbook is optional and is just an aid to developing your work.

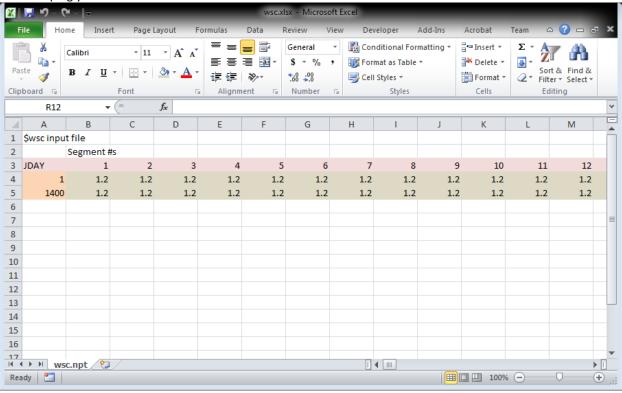

Now one opens "w2tools_examples2.xlsm" and 'Enables Macros". Once this file is opened, the user will notice that the sheet now has a header termed "Add-Ins". Clicking this header one obtains the following options as shown below: "Modify Selection", "Export Selection", or "Run EXE".

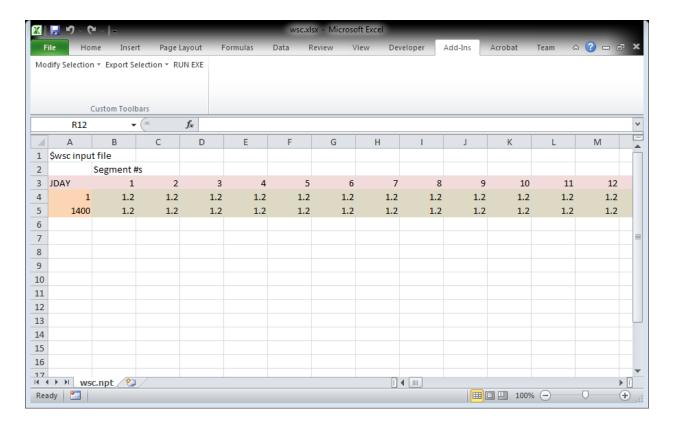

The user then selects by highlighting the portion of the file to export or modify. By selecting "Export Selection" then "Any selection to csv format". The file is written as a free-format csv file with the file name based on the worksheet name, i.e. in this case "wsc.npt". There are many other export file formats that can be used that are compatible with CE-QUAL-W2. Also, the worksheets in the "w2tools_examples.xlsm" generally show how to use the different macro features. These sheets are only used to show examples of the use of the Add-In macros.

This set of tools also allow you to modify a selection by multiplying, adding, interpolating data gaps, rounding, and transposing. Select the area of the spreadsheet that you want to modify, then select Add-Ins, Modify Selection, and one of the tools, such as Interpolate (either the X column or the Y column of a 2 column selection).

7. W2 V4.5 Bug Fixes, Enhancements, and User Manual Changes

Table 1 shows a list of model bug fixes since the release of CE-QUAL-W2 Version 4.5.

Table 1. List of bug fixes and enhancement code changes since CE-QUAL-W2 Version 4.5 was released. Note that shaded areas toggle between release versions.

#	Code: W2 or PREW2 or	Fix or En- hancement	Description of Bug/Enhancement	Date Fixed or Enhancement
	GUI	Туре		added
1	W2/PREW2	Release	Initial code release	7/26/2021
2	W2/PREW2	Update	Re-release fixing minor read error in sediment diagenesis	7/30/2021
3	W2	Sediment diagenesis bug fix – critical fix	The sediment temperature for the aerobic layer and anaerobic layers were re-written. There were a couple mistakes in the earlier version since Version 4.0. These have been tested and are working fine now. Also 2 diagenesis files are now produced showing the model temperature in the aerobic layer and the anaerobic layers over time and segment.	8/30/2021
4	Converter	Bug fix	The converter utility output formats were adjusted to avoid character overflow in the output file and a bug in reading the w2_con.npt file was corrected in case epiphyton were set to zero.	8/30/2021
5	W2	With- drawal.f90	A parentheses error was found by Stewart Rounds that has been corrected. Old code: IF ((WSEL-EL(KBOT,ID)-ELR) /= 0.0) THEN Updated code: IF (WSEL-(EL(KBOT,ID)-ELR) /= 0.0) THEN This code error would not have affected any simulation with zero slope which includes all lakes and reservoirs.	11/19/2021
6	W2	Sediment diagenesis	More output files were added to evaluate the computations within the sediment diagenesis model, these include porewater concentrations of NO3, NH3, PO4, and SO4 in both aerobic and anaerobic layers. The user manual was also updated.	11/19/2021
7	Converter	Bug fix	There was a bug fix for older bathymetry file formats. This has been fixed.	12/17/2021
8	W2	C vs Organic matter	The input variables when all organics are in terms of C basis was adjusted in the code to mimic the existing organic matter decay paths. Some of the additional functionality of this will be added in a subsequent release when the organic matter and C species are done similarly.	12/17/2021
9	Waterbal- ance	Csv file type output	A few minor changes were made to prevent spurious error messages and changing the GUI version to write out csv files rather than fixed format. Also, the console version had a couple errors that were fixed in variable type.	12/20/2021
10	PreW2	Preprocessor water balance	An error was fixed in the output for pre.opt file showing the waterbalance flows if there were multiple withdrawals and tributaries	12/28/2021

	1470			40/00/000
11	W2	Gates	There was no bug fix, just a refinement in the gate algorithm when the gamma variable was set equal to zero in the rating curve. In this case the rating curve is similar to a spillway rather than a gate where the term B raised to the gamma power is assumed to be '1'. In the code this was forced to '1' rather than being calculated from the exponentiation. This avoids a problem if the gate opening is zero raised to the zero power. Fortran will equate this to zero, not 1.	12/28/2021
12	W2	ICE=ONWB	When Ice=ONWB, the volume balance calculation was not correct in the SNP output and in the last column of the flowbalance.csv output file. Changed line of code for ice balance from temperature subroutine to main program code since it apples to the next rather than current time step: !VolIce(jb)=VolIce(jb)+iceqss(i)*dlt ! since this flow is not exercised until the next time step - moved code to main program calculation of qss	1/13/2022
13	W2	DO for gates and spillways	Added another option for DO at gates and spill-ways. Reaeration is increased by a fraction of the input dissolved oxygen. In many cases dams have turbine venting or other processes that introduce air into the turbine discharge. The model user can specify when this occurs by submitting a time series file of fractions that are multiplied by the incoming dissolved oxygen concentrations. The W2 code, preprocessor and User Manual has been updated.	1/18/2022
14	Prew2	pre.opt	More variables were output to pre.opt such as the gate and spillway gas equations to allow for a more thorough review of input variables.	1/18/2022
15	W2	Restart	Restart input files may have had an incorrect Julian day if the number was greater than 8 digits. That has been fixed for all restart time series.	2/15/2022
16	W2	Restart with ONH	A variable was not initialized properly for cases where the WITHDRAWAL OUTPUT file was set to ONH implying hourly or ONS implying seconds for the output frequency.	3/12/2022
17	W2	Sediment Diagenesis	Fixed output for PO4 and SO4 from sediment diagenesis output files. Also, added new output files for reduced Fe, Mn, and CH4 in the aerobic and anaerobic layers.	5/24/2022

18	W2	CH4	The sediment model had CH4 in O2 equivalents	5/24/2022
			while the water column model had CH4 in as C	3, = 3, = 3 = =
			units. The water column concentrations were ad-	
			justed to a more common reporting unit of mg/l	
			as CH4 and the link between the sediment and	
			water column was fixed.	
19	W2	Lowering layer output of SED in TSR file	The model has an algorithm to create a deep slot in a segment in case the water layer is too low. This keeps the segment hydrated during low flow events. When using the first order sediment model in a shallow stream, the values of SED, SEDC, SEDP, and SEDN were set to zero for this	5/26/2022
			new lower layer. The output for SED in the tsr file was updated using the value for the current bot-	
20	14/2	6	tom layer rather than the fictious lower layer.	7/42/2022
20	W2	Constriction	The input file User Manual description was inconsistent. Fixed code and User Manual to agree with spreadsheet template for constriction.	7/12/2022
21	W2	Water Quality	The Generic constituent's new feature of release based on SOD was not implemented correctly. This was fixed. The MNII reduction computation used the FeII reduction rate rather than the MnII reduction rate. This was fixed. Many thanks to Cory McDonald at Hydros in Boulder for finding those!	7/21/2022

8. Frequently Asked Questions

This is a list of common questions and answers for debugging your model applications.

Question topic	Question	Response
Numerical Stability	I'm modeling a canal system with high flows (~80 cms) that has a series of gates and pumps to control the flows. I don't have flow rating data on the gates, so I'm using structures to control the flows. I have data on flow rates at the pumps and infer flows at the gates. At higher flows, the model gets unstable and crashes. Is there something withing the structure algorithms that would cause a crash or would you infer that it's just a model construct?	I would force DLTMAX lower during the high velocity period – there is no way a priori to exactly predict the numerical stability for a non-linear PDE – it is just an estimate. Also make sure you don't set all inflows to be placed by density (PQC) and use the implicit turbulence closure scheme rather than explicit (AZSLC).

9. W2 Known Code Limitations

Table 2 shows known bugs and issues with the current release of the code:

Table 2. Known bugs in code.

#	Item	Description
1	Water levels in a "bowl"	If water levels decrease in a waterbody shaped like a "bowl", the removal of model layers as the water level decreases will cause the
		model to bomb if an upstream segment dries up.
2	Pipes under high	The pipes algorithm does not handle well high-head, high-speed, dy-
	head	namic flow conditions in a pipe as a result of numerical stability.
3	Time step limitation in a complex system model	The time step for stability in a system model is governed by the lowest time step for numerical stability. If you have a very dynamic river with several reservoirs, the time step for the river will control. This can result in very long run times. One can still break apart the model and run the pieces separately using the WDOUT files to provide boundary conditions for downstream waterbodies.
4	Partitioning	The partitioning coefficient for sorption is currently constant for all organic and inorganic compartments
5	Internal weir at a Dam segment	Putting an internal weir at a Dam segment does not affect the outflow from the selective withdrawal structure. One must limit selective withdrawal rather than use an internal weir at the dam segment. Remember the internal weir works for the right-hand-face of a model layer.
6	W2 multiple file er- ror check	If the model user accidentally enters duplicate file names for an input file, the w2 executable will "bomb" because it will try to read the file in more than once. The first use of the file will lock its availability for the second instance. The W2 error message that comes on the screen (traceback error) should mention the file name that has problems. The W2 preprocessor should catch this potential error.

#	Item	Description
7	Raising level of spill- way/weir above grid	The preprocessor will say there is an error if the user raises the weir, spillway, gate, water level control or any other hydraulic element above the current top-of-the-grid. The w2 code will still run properly though. But more correctly, the model user should increase the DZ of the upper-most layer to a value that would eliminate this problem. Keep in mind that the segment widths from the top layer then extend upward at that same width.
8	Internal weirs	The internal weir algorithm does not work when all vertical layers of a segment are blocked by the weir.
9	Multiple dams into one downstream reach	Currently, the code will allow one dam inflow to a downstream branch by a user-specified outflow file. The code though does allow multiple dams inflowing to a common downstream branch if the outflow is specified as a hydraulic structure.
10	Problems reading file in GUI or in W2 pre- processor of in W2 model	Sometimes the control file or bathymetry file or an input file cannot be read properly. This can be a result of the text editor used to produce the file or file conversions that occur when transferring files from workstations running Linux or from email. There may be a problem with the end of line character in the file. For Windows files, the standard end of line is a carriage return followed by a line feed: <cr><lf>. For UNIX systems it is usually only a Line Feed <lf>. To convert this from a UNIX system to a Windows system text file, use Notepad++ (a free windows text editor), go to EDIT/EOL Conversion and select Windows. Another issue common in reading text files is that the editor adds 'tabs'. All 'tabs' must be converted to 'spaces' for the file to be read properly.</lf></lf></cr>

10. Appendix A: Differences between CE-QUAL-W2 Versions

Differences between Version 4.22 and 4.5

In a large departure from keeping the version form almost static, Version 4.5 has many differences in the fixed format text file and the Excel xlsm file that has the w2_con.csv version of the control file.

Below are the changes in the w2_con.npt file, but comparable ones are found in the Excel input file version. Only areas with new variables are highlighted:

MISCELL	NDAY 100	SELECTC OFF	HABTATC ON		AERATEC OFF	INITUWL OFF	ORGCC OFF	SEDIAG OFF	
Eliminate			riables (JQB and I	DQB:				
BRANCH G BR1	US 2		UHS 0			SLOPE 0.00000			
TSR SEG	ITSR 31	ITSR	ITSR	ITSR	ITSR	ITSR	ITSR	ITSR	ITSR
TSR LAYE	ETSR 0.00000	ETSR	ETSR	ETSR	ETSR	ETSR	ETSR	ETSR	ETSR
WLOUT	WLC ON	WLFREQ 0.5							
FLOWBAL	FLOWBC ON	FBFREQ 7.0							
NPBAL	NPBALC ON	NPBFREQ 7.0							
WITH OUT	WDOC ON		NIWDO 1						
RSO FREQ	RSOF	RSOF	RSOF	RSOF	RSOF	RSOF	RSOF	RSOF	RSOF
CST COMP	CCC	LIMC ON	CUF 3		CO2YRLY ON				
ATMDEP WB1	ATMDPC OFF	ATMDPIN ON							
CST ACTIV TDS Gen1 Gen2	E CAC ON ON ON								

CST ACTIVE									
TDS	ON								
Gen1	ON								
Gen2	ON								
Gen3	ON								
ISS1	ON								
WATERAGE									
	OFF								
BACTERIA	OFF								
DGP	OFF								
N2	OFF								
H2S	OFF								
CH4	OFF								
SO4	OFF								
FEII	OFF								
FEOOH	OFF								
MNII	OFF								
MNO2	OFF								
PO4	ON								
NH4	ON								
NO3	ON								
DSI	OFF								
PSI	OFF								
FE	ON								
LDOM	ON								
RDOM									
	ON								
LPOM	ON								
RPOM	OFF								
ALG1	ON								
DO	ON								
TIC	ON								
ALK	ON								
Z001	OFF								
LDOM P	OFF								
RDOM P	OFF								
LPOM P	OFF								
_									
RPOM_P	OFF								
LDOM_N	OFF								
RDOM_N	OFF								
LPOM_N	OFF								
RPOM_N	OFF								
MICROCY	OFF								
CYLINDR	OFF								
ANATOXIN	OFF								
SAXITOXN	OFF								
DIMITOM	OLL								
CST DERI	CDWBC	CDWBC	CDWBC	CDWBC	CDWBC	CDWBC	CDWBC	CDWBC	CDWBC
		CDWDC	CDVVDC	CDWDC	CDVVDC	CDWDC	CDWDC	CDWDC	CDMPC
DOC	OFF								
POC	OFF								
moo.	037								
TOC	ON								
DON	OFF								
DON PON	OFF OFF								
DON	OFF								
DON PON	OFF OFF								
DON PON TON	OFF OFF OFF								
DON PON TON TKN	OFF OFF OFF								
DON PON TON TKN TN NH3	OFF OFF OFF ON ON								
DON PON TON TKN TN NH3 DOP	OFF OFF OFF ON ON OFF								
DON PON TON TKN TN NH3 DOP POP	OFF OFF OFF ON ON OFF OFF								
DON PON TON TKN TN NH3 DOP POP	OFF OFF OFF ON ON OFF OFF								
DON PON TON TKN TN NH3 DOP POP TOP	OFF OFF OFF ON ON OFF OFF OFF								
DON PON TON TKN TN NH3 DOP TOP TOP	OFF OFF OFF ON ON OFF OFF OFF OFF								
DON PON TON TKN TN NH3 DOP POP TOP TP APR CHLA	OFF OFF ON ON OFF OFF OFF OFF OFF								
DON PON TON TKN TN NH3 DOP POP TOP TP APR CHLA ATOT	OFF OFF OFF ON ON OFF OFF OFF OFF OFF OF								
DON PON TON TKN TN NH3 DOP POP TOP TP APR CHLA ATOT % DO	OFF OFF OFF ON ON OFF OFF OFF OFF OFF OF								
DON PON TON TKN TN NH3 DOP POP TOP TP APR CHLA ATOT	OFF OFF OFF ON ON OFF OFF OFF OFF OFF OF								
DON PON TON TKN TN NH3 DOP POP TOP TP APR CHLA ATOT % DO	OFF OFF OFF ON ON OFF OFF OFF OFF OFF OF								
DON PON TON TKN TN NH3 DOP POP TOP TP APR CHLA ATOT %DO TDG	OFF								

TISS CBOD pH CO2 HCO3 CO3 SECCHI	OFF OFF OFF OFF OFF								
CST FLUX TISSIN TISSOUT	CFWBC OFF OFF	CFWBC							
PO4AR	OFF								
PO4AG	OFF								
PO4AP	OFF								
PO4ER PO4EG	OFF OFF								
PO4EP	OFF								
PO4POM	OFF								
PO4DOM PO4OM	OFF OFF								
PO4SED	OFF								
PO4SOD	OFF								
PO4SET	OFF								
NH4NITR NH4AR	OFF OFF								
NH4AG	OFF								
NH4AP	OFF								
NH4ER NH4EG	OFF OFF								
NH4EP	OFF								
NH4POM	OFF								
NH4DOM	OFF								
NH4OM NH4SED	OFF OFF								
NH4SOD	OFF								
NH3GAS	ON								
NO3DEN NO3AG	OFF OFF								
NO3EG	OFF								
NO3SED	OFF								
DSIAG DSIEG	OFF OFF								
DSIPIS	OFF								
DSISED	OFF								
DSISOD DSISET	OFF OFF								
PSIAM	OFF								
PSINET	OFF								
PSIDK	OFF								
LDOMDK LRDOM	OFF OFF								
RDOMDK	OFF								
LDOMAP	OFF								
LDOMEP LPOMDK	OFF OFF								
LRPOM	OFF								
RPOMDK	OFF								
LPOMAP LPOMEP	OFF OFF								
LPOMSET	OFF								
RPOMSET	OFF								
CBODDK DOAP	OFF OFF								
DOEP	OFF								
DOAR	OFF								
DOER	OFF								
DOPOM	OFF								

```
DODOM
            OFF
DOOM
            OFF
DONITR
            OFF
DOCBOD
            OFF
DOREAR
            ON
DOSED
            ON
DOSOD
            OFF
TICAG
            OFF
TICEG
            OFF
SEDDK
            OFF
            OFF
SEDAS
SEDLPOM
            OFF
SEDSET
            OFF
SODDK
            OFF
CST ICON C2IWB
                 C2IWB C2IWB C2IWB C2IWB C2IWB C2IWB
                                                                      C2IWB
      51.0000
TDS
        100.000
Gen1
Gen2
        0.00000
        10.0000
Gen3
       2.00000
ISS1
WATERAGE
         0.0
BACTERIA
           0.0
DGP
           0.0
N2
H2S
           0.0
CH4
           0.0
SO4
           0.0
           0.0
0.0
0.0
FEII
FEOOH
MNII
           0.0
MNO2
        0.00100
PO4
        0.00200
NH4
NO3
        0.14000
        0.00000
DSI
PSI
        0.00000
        0.70000
LDOM
RDOM
        2.02200
LPOM
        0.10000
RPOM
        0.00000
ALG1
        -1.0000
DO
        -1.0000
TIC
        11.9100
        31.0000
ALK
Z001
        0.1000
LDOM P
         0.0005
RDOM P
         0.0005
         0.0005
LPOM P
RPOM P
         0.0005
LDOM N
         0.0080
RDOM N
         0.0080
LPOM N
         0.0080
RPOM N
         0.0080
MICROCYS
          0.0
CYLINDRO
           0.0
ANATOXIN
           0.0
SAXITOXN
           0.0
CST PRIN CPRWBC CPRWBC CPRWBC CPRWBC CPRWBC CPRWBC CPRWBC CPRWBC
TDS
          ON
Gen1
             ON
Gen2
            OFF
            OFF
Gen3
ISS1
            ON
WATERAGE
            OFF
BACTERIA
            OFF
DGP
            OFF
```

N2	OFF				
H2S	OFF				
CH4	OFF				
SO4	OFF				
FEII	OFF				
FEOOH	OFF				
MNII	OFF				
MNO2	OFF				
PO4	ON				
NH4	ON				
NO3	ON				
DSI	OFF				
PSI	OFF				
LDOM	ON				
RDOM	ON				
LPOM	ON				
RPOM	OFF				
ALG1	ON				
DO	ON				
TIC	OFF				
ALK	OFF				
Z001	OFF				
LDOM_P	OFF				
RDOM_P	OFF				
LPOM_P	OFF				
RPOM_P	OFF				
LDOM_N	OFF				
RDOM_N	OFF				
LPOM_N	OFF				
RPOM_N	OFF				
MICROCYST					
CYLINDROS:					
ANATOXIN	OFF				
SAXITOXIN	OFF				
CIN CON	CINDDC	CINDDC	CINDEC	CINDRO	CIMPPO
CIN CON	CINBRC ON	CINBRU	CINBKC	CINBRC	CINBRU
TDS					
Gen1 Gen2	ON OFF				
Genz Gen3					
ISS1	ON ON				
WATERAGE	OFF				
WAIERAGE	OFF				

CIN CON TDS	CINBRC ON	CINBRC							
Gen1	ON								
Gen2	OFF								
Gen3 ISS1	ON ON								
WATERAGE	OFF								
BACTERIA	OFF								
DGP	OFF								
N2	OFF								
H2S	OFF								
CH4	OFF								
SO4	OFF								
FEII	OFF								
FEOOH	OFF								
MNII	OFF								
MNO2	OFF								
PO4	ON								
NH4	ON								
NO3	ON								
DSI	OFF								
PSI	OFF								
LDOM	ON								
RDOM	ON								
LPOM	ON								
RPOM	OFF								
ALG1	ON								
DO	ON								
TIC	ON								
ALK	ON								
Z001	OFF								
LDOM_P	OFF								

```
RDOM P
             OFF
LPOM P
             OFF
RPOM P
             OFF
LDOM N
             OFF
RDOM N
             OFF
\texttt{LPOM}^- \texttt{N}
             OFF
RPOM N
             OFF
MICROCYSTIN
             OFF
CYLINDROSP
             OFF
ANATOXIN
             OFF
SAXITOXIN
             OFF
                  CTRTRC CTRTRC CTRTRC CTRTRC CTRTRC CTRTRC CTRTRC
          CTRTRC
CTR CON
TDS
              ON
                      OFF
              ON
                      OFF
Gen1
Gen2
             OFF
                      OFF
Gen3
              ON
                      OFF
ISS1
              ON
                      OFF
WATERAGE
             OFF
                      OFF
BACTERIA
             OFF
                      OFF
DGP
             OFF
                      OFF
             OFF
N2
                      OFF
H2S
             OFF
                      OFF
CH4
             OFF
                      OFF
SO4
             OFF
                      OFF
FEII
             OFF
                      OFF
             OFF
                      OFF
FEOOH
MNII
             OFF
                      OFF
MNO2
             OFF
                      OFF
PO4
              ON
                      OFF
NH4
                      OFF
              ON
NO3
              ON
                      OFF
             OFF
DSI
                      OFF
PSI
             OFF
                      OFF
LDOM
              ON
                      OFF
RDOM
              ON
                      OFF
LPOM
              ON
                      OFF
RPOM
             OFF
                      OFF
ALG1
              ON
                      OFF
DO
              ON
                      OFF
TIC
              ON
                      OFF
ALK
              ON
                      OFF
Z001
             OFF
                      OFF
LDOM P
             OFF
                      OFF
RDOM P
             OFF
                      OFF
LPOM P
             OFF
                      OFF
RPOM P
             OFF
                      OFF
LDOM N
             OFF
                      OFF
RDOM N
             OFF
                      OFF
LPOM N
             OFF
                      OFF
RPOM N
             OFF
                      OFF
MICROCYSTIN
             OFF
                      OFF
CYLINDROSP
             OFF
                      OFF
ANATOXIN
             OFF
                      OFF
SAXITOXIN
             OFF
                      OFF
CDT CON
          CDTBRC
                  CDTBRC
                           CDTBRC CDTBRC CDTBRC CDTBRC CDTBRC CDTBRC
TDS
              ON
                      OFF
Gen1
              ON
                      OFF
Gen2
             OFF
                      OFF
              ON
                      OFF
Gen3
ISS1
              ON
                      OFF
WATERAGE
             OFF
                      OFF
BACTERIA
             OFF
                      OFF
DGP
             OFF
                      OFF
             OFF
                      OFF
N2
H2S
             OFF
                      OFF
CH4
             OFF
                      OFF
```

SO4	OFF	OFF		
FEII	OFF	OFF		
FEOOH	OFF	OFF		
MNII	OFF	OFF		
MNO2	OFF	OFF		
PO4	ON	OFF		
NH4	ON	OFF		
NO3	ON	OFF		
DSI	OFF	OFF		
PSI	OFF	OFF		
LDOM	ON	OFF		
RDOM	ON	OFF		
LPOM	ON	OFF		
RPOM	OFF	OFF		
ALG1	ON	OFF		
DO	ON	OFF		
TIC	ON	OFF		
ALK	ON	OFF		
Z001	OFF	OFF		
LDOM P	OFF	OFF		
RDOM P	OFF	OFF		
LPOM P	OFF	OFF		
RPOM P	OFF	OFF		
LDOM N	OFF	OFF		
RDOM N	OFF	OFF		
LPOM N	OFF	OFF		
RPOM N	OFF	OFF		
MICROCYSTIN	OFF	OFF		
CYLINDROSP	OFF	OFF		
ANATOXIN	OFF	OFF		
SAXITOXIN	OFF	OFF		
CPR CON CI	PRBRC	CPRBRC	CPRBRC	CPRE
TDS	ON	ON		
Gen1	ON	OFF		
Gen2	OFF	OFF		
Gen3	ON	OFF		
ISS1	ON	OFF		

CPR CON	CPRBRC								
TDS	ON	ON							
Gen1	ON	OFF							
Gen2	OFF	OFF							
Gen3	ON	OFF							
ISS1	ON	OFF							
WATERAGE	OFF	OFF							
BACTERIA	OFF	OFF							
DGP	OFF	OFF							
N2	OFF	OFF							
H2S	OFF	OFF							
CH4	OFF	OFF							
SO4	OFF	OFF							
FEII	OFF	OFF							
FEOOH	OFF	OFF							
MNII	OFF	OFF							
MNO2	OFF	OFF							
PO4	ON	OFF							
NH4	ON	OFF							
NO3	ON	OFF							
DSI	OFF	OFF							
PSI	OFF	OFF							
LDOM	ON	OFF							
RDOM	ON	OFF							
LPOM	ON	OFF							
RPOM	OFF	OFF							
ALG1	ON	OFF							
DO	ON	OFF							
TIC	ON	OFF							
ALK	ON	OFF							
Z001	OFF	OFF							
LDOM_P	OFF	OFF							
RDOM_P	OFF	OFF							
LPOM_P	OFF	OFF							
RPOM_P	OFF	OFF							

LDOM_N RDOM_N LPOM_N RPOM_N MICROCYST CYLINDROS ANATOXIN SAXITOXIN	SP OFF OFF	OFF OFF OFF OFF OFF OFF							
GENERIC CG 1 CG 2 CG 3	0.00000	CG0DK 0.00000 -1.0000 0.00000	0.00000	0.00000	CGLDK 0.0 0.0 0.0	CGKLF 0.0 0.0 0.0	CGCS 0.0 0.0 0.0	CGR 0.0 0.0 0.0	
S SOLIDS SS# 1	SSS 1.00000	SEDRC OFF	TAUCR 0.00000	SSCS 0.0					
BACTERIA WB1	BACTQ10 1.025		BACTS 0.00	BACTLDK 0.050					
H2S WB1	H2SR 0.005	H2SQ10 1.04	H2S1DK 0.10	SO4R 0.050					
CH4 WB1	CH4R 0.004	CH4Q10 1.0400	CH41DK 0.05						
FE WB1	FEIIR 0.004	KFEOXID 1.0400	KFERED 0.05	HalfSat 0.10					
MN WB1	MNIIR 0.004	KMNOXID 1.0400	KMNRED 0.05	HalfSat 0.1					
ALGAL RAT		AR 0.04000	AE 0.04000	AM 0.10000		AHSP 0.00300		AHSSI 0.00000	ASAT 100.000
ALG STOI ALG1	ALGP 0.00500	ALGN 0.08000	ALGC 0.45000	ALGSI 0.00000	ACHLA 0.06500	ALPOM 0.80000	~	ANPR 0.00100	AVERT_M OFF
OM STOIC WB 1	ORGP 0.00500	ORGN 0.08000	ORGC 0.45000	ORGSI 0.18000					
OM RATE WB 1	OMT1 4.00000	OMT2 30.0000	OMK1 0.10000	OMK2 0.99000					
TURBSEC WB1	COEFFA 1.10	COEFFB 0.05	SECCHI 1.5						
CBOD BOD 1	KBOD 0.25000	TBOD 1.01500	RBOD 1.85000	CBOD:					
REAERATION	ON TYPE LAKE	~				COEF4 0.00000			
MET FILE	 met.npt				METFN.	• • • • • • • •	• • • • • • • •		
EXT FILE WB 1	 ext_1.np		• • • • • • • •		EXTFN.	• • • • • • • •	• • • • • • • •	• • • • • • • • •	• • • • • • • • • • • • • • • • • • • •
ATD FILE WB 1 6	atm_dep_	wb1.csv							
VPR FILE WB 1	vpr.npt		• • • • • • •		VPRFN.	• • • • • • •	• • • • • • •		• • • • • • •

Also, there are many changes in the other input files for activating different processes in Version 4.5. See the User Manual Part 3 for the new format for these ancillary input files.

Differences between Version 4.2.2 and Version 4.2.1


Version 4.2.2 has 2 new variables, [CO2PPM] and [CO2YRLY], that were added to the main control file, w2_con.npt and w2_con.csv. The old fixed format card in w2_con.npt is shown below:

RSO DATE	RSOD	RSOD	RSOD	RSOD	RSOD	RSOD	RSOD	RSOD	RSOD
RSO FREQ	RSOF	RSOF	RSOF	RSOF	RSOF	RSOF	RSOF	RSOF	RSOF
CST COMP	CCC ON	LIMC OFF	CUF 10						
CST ACTIVE	CAC								
TDS	ON								
Gen1	ON								
ISS1	ON								
ISS2	ON								

The Version 4.2.2 file, **w2_con.npt** is shown below with the changes highlighted:

RSO DATE	RSOD	RSOD	RSOD	RSOD	RSOD	RSOD	RSOD	RSOD	RSOD
RSO FREQ	RSOF	RSOF	RSOF	RSOF	RSOF	RSOF	RSOF	RSOF	RSOF
CST COMP	CCC ON	LIMC ON	CUF 10	CO2PPM 400.	CO2YRLY ON				
CST ACTIVE	CAC								
TDS	ON								
Gen1	ON								
ISS1	ON								
ISS2	ON								

In the Excel macro version, the new variables are shown below:

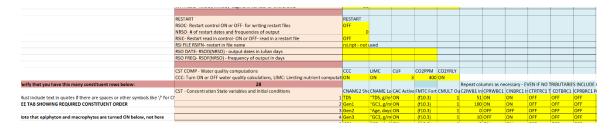

Differences between Version 4.2.1 and Version 4.2

Version 4.2.1 is file compatible except that the **multiple_wb.npt** format has changed. Also, a new input file, **w2_con.csv**, can be read by the model. This file is developed using the Excel file **w2_con.xslm**.

Differences between Version 4.2 and Version 4.1

Version 4.2 is file compatible with Version 4.1. There are no changes in the main control file. There are new control files though that control new processes: (1) Multiple processor simulation for cascade of waterbodies (multiple_wb.npt), (2) SYSTDG Total Dissolved Gas algorithm for spillways (systdg.npt).

Differences between Version 4.1 and Version 4.0

Version 4.1 is file compatible with Version 4.0. There are no changes in the main control file. There is only 1 new input file, 'particle.csv', that serves as an input file to the particle tracking algorithm.

Differences between Version 4.0 and Version 3.72

Version 4 is file compatible with Version 3.72, even though there are new options in the main control file, w2_con.npt, and new input files whose presence or absence is detected by the model. For example, for ICEC control the options now include ON, ONWB, and OFF, where ONWB is a new option. New input files include a file for sediment diagenesis, 'W2_CEMA_Input.npt', and a file for the dynamic alkalinity calculation, 'pH_buffering.npt'

Control file differences are in the Generic Constituent Section of the Code where new variables were added to the control file to allow for phot-degradation and the new N2 state variable for TDG:

GENERIC	CGQ10	CG0DK	CG1DK	CGS	CGLDK	CGKLF	CGS	
CG 1	0.00000	0.00000	0.00000	0.00000	0.00000	1.03400	-1.0000	! TDG
CG 2	0.00000	-1.0000	0.00000	0.00000	0.00000	0.00000	0.00000	
CG 3	1.04000	0.00000	1.40000	0.00000	0.00000	0.00000	0.00000	

Differences between Version 3.72 and Version 3.71

These 2 codes are file compatible. Besides a few bug fixes since the last release of Version 3.71, Version 3.72 includes the USGS automatic port selection code. This can be activated by setting SELECTC='USGS' in the control file w2_con.npt. In Version 3.71, only 'ON' or 'OFF' were input variables for SELECTC. If one sets SELECTC='USGS', the format of the file w2_selective.npt is also changed from Version 3.71. Details of this and examples are provided in the User's Manual and on-line.

Differences between Version 3.71 and Version 3.7

There is only one change in the control file between Version 3.7 and 3.71. There is a new option for outlet structures – dynamic centerline elevation. In the control file, there is an ON/OFF option after declaring the # of structures for each branch:

EDDY VISC	AZC	AZSLC	AZMAX	FBC	E	ARODI	STRCKLR	BOUNDFR	TKECAL
WB 1	TKE	IMP	1.00000	3	9.53500	0.43100	0.00000	0.00000	IMP
N STRUC	NSTR	DYNELEV							
BR1	17	ON							
BR2	0	<mark>0FF</mark>							
BR3	0	<mark>0FF</mark>							
STR INT	STRIC	STRIC	STRIC	STRIC	STRIC	STRIC	STRIC	STRIC	STRIC

If these fields are missing the model will assume that DYNELEV=OFF.

Differences between Version 3.7 and Version 3.6

Even though there are some cases where a Version 3.7 executable will run Version 3.6 and Version 3.5 files fine, there are updates required to the w2_con.npt file that need to be made. The preprocessor will catch these errors.

Control file changes: w2_con.npt

The main changes to the W2 control file are additional flags to turn ON/OFF new control file options and the addition of new state variables for water quality, BOD-N and BOD-P for each BOD group. Below is a list of changes in the control file with the card image header for each line changed (highlighted options are new in V3.7). Descriptions of these new features are in the W2 User's Manual.

1. MISCELL

MISCELL	NDAY	SELECTC	HABTATC	ENVIRPC	AERATEC	INITUWL
	100	OFF	OM	ON	ON	OFF

Five new variables, SELECTC, HABITATC, ENVIRPC, AERATEC, and INITUWL, are 5 new control variables that turn ON/OFF the use of automatic selective withdrawal, fish habitat volumes, environmental performance criteria, artificial aeration, and the initial water surface and velocity computations, respectively. If using an old Version 3.6 control file, all of these would default to 'OFF' if they were left blank. Also the model preprocessor would flag these are missing variables.

DLT CON

DLT CON NDT DLTMIN DLTINTR
1 1.00000 OFF

where DLTINTR is a control for interpolating the the time step DLTMAX and DLTF rather than use as a step function

3. BRANCH G

BRANCH G US UHS DHS SLOPE DS UOB DOB NTMTN Br 1 2 59 0 0 0 0 1 0.0

where SLOPEC is the hydraulic equivalent slope for a river channel that affects the momentum equation.

4. GATE WEIR

GATE WEIR GTA1 GTB1 GTA2 GTB2 DYNVAR GTIC Gate1 1.00000 1.50000 1.50000 FLOW ON

where GTIC is an interpolation control for the specified DYNVAR for the GATE-WEIR.

Dynamic pipe

PIPES IUPI LATPIC DYNPIPE TDPT EUPI EDPI WPI DLXPI FPT FMINPI Pi 1 24 28 28.0 27.0 0.5 230.0 0.065 0.1

where DYNPIPE controls whether the pipe is controlled by time series of an ON/OFF or partially open gate

Dynamic pump

PUMPS 1 IUPU IDPU EPU STRTPU ENDPU EONPU EOFFPU QPU WTHLC DYNPUMP 111 0 440. 1.00 366. 441.0 435.0 1.0 DOWN ON

where DYNPUMP controls the EPU, EONPU, EOFFPU, and QPU over time by reading in a time series file

7. INIT CND

INIT CND TEMPI ICEI WTYPEC GRIDC
WB 1 -1.0000 0.00000 FRESH RECT

where GRIDC controls whether the grid is interpreted as rectangular in depth or trapezoidal.

8. CST ACTIVE [Note that this change only appears if NBOD>0]

CST ACTIVE	CAC
TDS	ON
Gen1	ON
Gen2	OFF
Gen3	OFF
Gen4	OFF
Gen5	OFF
ISS1	ON
PO4	ON
NH4	ON
NO3	ON
DSI	OFF
PSI	OFF
FE	OFF
LDOM	ON
RDOM	ON
LPOM	ON
RPOM	ON
1CBOD	ON
2CBOD	ON
3CBOD	ON
	ON
4CBOD	
5CBOD	ON
6CBOD	ON
7CBOD	ON
8CBOD	ON
9CBOD	ON
10CBOD	ON
1CBODP	ON
	ON
2CBODP	
3CBODP	ON
3CBODP 4CBODP	ON ON
3CBODP 4CBODP 5CBODP	ON
3CBODP 4CBODP	ON ON
3CBODP 4CBODP 5CBODP 6CBODP	ON ON ON
3CBODP 4CBODP 5CBODP 6CBODP 7CBODP	ON ON ON ON
3CBODP 4CBODP 5CBODP 6CBODP 7CBODP 8CBODP	ON ON ON ON ON
3CBODP 4CBODP 5CBODP 6CBODP 7CBODP	ON ON ON ON
3CBODP 4CBODP 5CBODP 6CBODP 7CBODP 8CBODP 9CBODP	ON ON ON ON ON ON
3CBODP 4CBODP 5CBODP 6CBODP 7CBODP 8CBODP 9CBODP 10CBODP	ON ON ON ON ON ON
3CBODP 4CBODP 5CBODP 6CBODP 7CBODP 8CBODP 9CBODP 1OCBODP 1CBODN	ON
3CBODP 4CBODP 5CBODP 6CBODP 7CBODP 8CBODP 9CBODP 1OCBODP 1CBODN 2CBODN	ON
3CBODP 4CBODP 5CBODP 6CBODP 7CBODP 8CBODP 9CBODP 1OCBODP 1CBODN	ON
3CBODP 4CBODP 5CBODP 6CBODP 7CBODP 8CBODP 9CBODP 1OCBODP 1CBODN 2CBODN 3CBODN	ON
3CBODP 4CBODP 5CBODP 6CBODP 7CBODP 8CBODP 9CBODP 1OCBODP 1CBODN 2CBODN 3CBODN 4CBODN	ON O
3CBODP 4CBODP 5CBODP 6CBODP 7CBODP 8CBODP 9CBODP 1OCBODP 1CBODN 2CBODN 3CBODN 4CBODN	ON O
3CBODP 4CBODP 5CBODP 6CBODP 7CBODP 8CBODP 9CBODP 10CBODP 1CBODN 2CBODN 3CBODN 4CBODN 4CBODN 5CBODN 6CBODN	ON O
3CBODP 4CBODP 5CBODP 6CBODP 7CBODP 8CBODP 9CBODP 10CBODP 1CBODN 2CBODN 3CBODN 4CBODN 4CBODN 5CBODN 6CBODN	ON O
3CBODP 4CBODP 5CBODP 6CBODP 7CBODP 8CBODP 9CBODP 10CBODP 1CBODN 2CBODN 3CBODN 4CBODN 5CBODN 6CBODN 7CBODN	ON O
3CBODP 4CBODP 5CBODP 6CBODP 7CBODP 8CBODP 9CBODP 10CBODP 1CBODN 2CBODN 3CBODN 4CBODN 5CBODN 6CBODN 7CBODN 8CBODN	ON O
3CBODP 4CBODP 5CBODP 6CBODP 7CBODP 8CBODP 9CBODP 1OCBODP 1CBODN 2CBODN 3CBODN 4CBODN 5CBODN 6CBODN 6CBODN 7CBODN 8CBODN 9CBODN	ON O
3CBODP 4CBODP 5CBODP 6CBODP 7CBODP 8CBODP 9CBODP 10CBODP 1CBODN 2CBODN 3CBODN 4CBODN 5CBODN 6CBODN 7CBODN 8CBODN	ON O
3CBODP 4CBODP 5CBODP 6CBODP 7CBODP 8CBODP 9CBODP 1OCBODP 1CBODN 2CBODN 3CBODN 4CBODN 5CBODN 6CBODN 7CBODN 8CBODN 9CBODN 10CBODN	ON O
3CBODP 4CBODP 5CBODP 6CBODP 7CBODP 8CBODP 9CBODP 1OCBODP 1CBODN 2CBODN 3CBODN 4CBODN 5CBODN 6CBODN 7CBODN 8CBODN 8CBODN 9CBODN 1OCBODN 1OCBODN	ON O
3CBODP 4CBODP 5CBODP 6CBODP 7CBODP 8CBODP 9CBODP 1OCBODP 1CBODN 2CBODN 3CBODN 4CBODN 5CBODN 6CBODN 7CBODN 8CBODN 9CBODN 1OCBODN 1OCBODN ALG1 ALG2	ON O
3CBODP 4CBODP 5CBODP 6CBODP 7CBODP 8CBODP 9CBODP 1OCBODP 1CBODN 2CBODN 3CBODN 4CBODN 5CBODN 6CBODN 7CBODN 8CBODN 8CBODN 9CBODN 1OCBODN 1OCBODN	ON O
3CBODP 4CBODP 5CBODP 6CBODP 7CBODP 8CBODP 9CBODP 1OCBODP 1CBODN 2CBODN 3CBODN 4CBODN 5CBODN 6CBODN 7CBODN 8CBODN 9CBODN 1OCBODN 1OCBODN ALG1 ALG2	ON O
3CBODP 4CBODP 5CBODP 6CBODP 6CBODP 8CBODP 9CBODP 10CBODP 1CBODN 2CBODN 3CBODN 4CBODN 5CBODN 6CBODN 6CBODN 9CBODN 10CBODN 10CBODN 10CBODN ALG1 ALG2 ALG3 DO	ON O
3CBODP 4CBODP 5CBODP 6CBODP 6CBODP 8CBODP 9CBODP 1OCBODP 1CBODN 2CBODN 3CBODN 4CBODN 5CBODN 6CBODN 6CBODN 9CBODN 1OCBODN 1OCBODN 1ALG1 ALG2 ALG3 DO TTIC	ON O
3CBODP 4CBODP 5CBODP 6CBODP 7CBODP 8CBODP 9CBODP 10CBODN 2CBODN 3CBODN 4CBODN 5CBODN 6CBODN 7CBODN 8CBODN 10CBODN 10CBODN 10CBODN ALG1 ALG2 ALG3 DO TIC ALK	ON O
3CBODP 4CBODP 5CBODP 6CBODP 6CBODP 8CBODP 9CBODP 1OCBODP 1CBODN 2CBODN 3CBODN 4CBODN 5CBODN 6CBODN 6CBODN 9CBODN 1OCBODN 1OCBODN 1ALG1 ALG2 ALG3 DO TTIC	ON O
3CBODP 4CBODP 5CBODP 6CBODP 7CBODP 8CBODP 9CBODP 10CBODN 2CBODN 3CBODN 4CBODN 5CBODN 6CBODN 6CBODN 7CBODN 8CBODN 10CBODN 10CBODN ALG1 ALG2 ALG3 DO TIC ALK ZOO1	ON O
3CBODP 4CBODP 5CBODP 6CBODP 7CBODP 8CBODP 9CBODP 10CBODN 2CBODN 3CBODN 4CBODN 5CBODN 6CBODN 6CBODN 7CBODN 8CBODN 10CBODN 10CBODN ALG1 ALG2 ALG3 DO TIC ALK ZOO1 LDOM_P	ON O
3CBODP 4CBODP 5CBODP 6CBODP 7CBODP 9CBODP 10CBODP 10CBODN 2CBODN 3CBODN 4CBODN 6CBODN 6CBODN 7CBODN 8CBODN 10CBODN 10CBODN ALG1 ALG2 ALG3 DO TIC ALK ZOO1 LDOM_P RDOM_P	ON O
3CBODP 4CBODP 5CBODP 6CBODP 7CBODP 9CBODP 10CBODP 10CBODN 2CBODN 3CBODN 4CBODN 6CBODN 6CBODN 7CBODN 8CBODN 10CBODN 10CBODN ALG1 ALG2 ALG3 DO TIC ALK ZOO1 LDOM_P RDOM_P	ON O
3CBODP 4CBODP 5CBODP 6CBODP 6CBODP 7CBODP 9CBODP 10CBODP 1CBODN 3CBODN 4CBODN 6CBODN 7CBODN 8CBODN 9CBODN 10CBODN 10CBODN 11CBODN 11CB	ON O
3CBODP 4CBODP 5CBODP 6CBODP 6CBODP 7CBODP 10CBODP 10CBODP 1CBODN 3CBODN 4CBODN 6CBODN 6CBODN 7CBODN 8CBODN 10CBODN 10CBODN 11CBODN 11C	ON O
3CBODP 4CBODP 5CBODP 6CBODP 6CBODP 7CBODP 9CBODP 10CBODP 11CBODN 2CBODN 3CBODN 4CBODN 5CBODN 6CBODN 6CBODN 7CBODN 10CBODN 10CBODN 11CBODN 11CB	ON O
3CBODP 4CBODP 5CBODP 6CBODP 7CBODP 8CBODP 9CBODP 10CBODP 1CBODN 2CBODN 3CBODN 4CBODN 5CBODN 6CBODN 6CBODN 10CBODN 10CBODN 11CBODN 11CB	ON O
3CBODP 4CBODP 5CBODP 6CBODP 6CBODP 7CBODP 9CBODP 10CBODP 11CBODN 2CBODN 3CBODN 4CBODN 5CBODN 6CBODN 6CBODN 7CBODN 10CBODN 10CBODN 11CBODN 11CB	ON O
3CBODP 4CBODP 5CBODP 6CBODP 7CBODP 8CBODP 9CBODP 10CBODP 1CBODN 2CBODN 3CBODN 4CBODN 5CBODN 6CBODN 6CBODN 10CBODN 10CBODN 11CBODN 11CB	ON O

9. CST ICON, CST PRIN, CIN CON, CTR CON, CDT CON and CPR CON

CST ICON	C2IWB								
TDS	0.0								
AGE TRACER	0.0								
COL1	0.0								
Conduct	0.0								
Chlorine	0.0								
ISS1 PO4	0.0								
NH4	0.03								
NOx	0.3								
DSi	0.0								
PSi TFe	0.0								
LDOM	0.1								
RDOM	0.1								
LPOM	0.1								
RPOM 1CBOD	0.1								
2CBOD	0.0								
3CBOD	0.0								
4CBOD	0.0								
5CBOD 6CBOD	0.0								
7CBOD	0.0								
8CBOD	0.0								
9CBOD 10CBOD	0.0								
1CBODP	0.0								
2CBODP	0.0								
3CBODP	0.0								
4CBODP 5CBODP	0.0								
6CBODP	0.0								
7CBODP	0.0								
8CBODP	0.0								
9CBODP 10CBODP	0.0								
1CBODN	0.0								
2CBODN	0.0								
3CBODN 4CBODN	0.0								
5CBODN	0.0								
6CBODN	0.0								
7CBODN	0.0								
8CBODN 9CBODN	0.0								
10CBODN	0.0								
ALG1	0.1								
ALG2 ALG3	0.1								
DO DO	12.0								
TIC	5.0								
ALK	19.8								
ZOO1 LDOM P	0.0								
RDOM_P	0.0005								
LPOM_P	0.0005								
RPOM_P LDOM N	0.0005								
RDOM_N	0.0080								
LPOM_N	0.0080								
RPOM_N	0.0080								
CST PRIN	CPRWBC								

TDS	ON								
AGE	ON								
TRACER	ON								
COL1	ON								
Conduct	ON								
Chlorine ISS1	ON								
PO4	ON ON								
NH4									
NOX	ON ON								
DSi	OFF								
PSi	OFF								
TFe	OFF								
LDOM	ON								
RDOM	ON								
LPOM	ON								
RPOM	ON								
1CBOD	ON								
2CBOD	ON								
3CBOD	ON								
4CBOD	ON								
5CBOD	ON								
6CBOD	ON								
7CBOD	ON								
8CBOD	ON								
9CBOD	ON								
10CBOD	ON								
1CBODP	ON								
2CBODP	ON								
3CBODP	ON								
4CBODP	ON								
5CBODP	ON								
	ON								
6CBODP	OIN								
7CBODP	ON								
7CBODP 8CBODP	ON ON								
7CBODP 8CBODP 9CBODP	ON ON ON								
7CBODP 8CBODP 9CBODP 10CBODP	ON ON ON								
7CBODP 8CBODP 9CBODP 10CBODP 1CBODN	ON ON ON ON								
7CBODP 8CBODP 9CBODP 10CBODP 1CBODN 2CBODN	ON ON ON ON ON								
7CBODP 8CBODP 9CBODP 10CBODP 1CBODN 2CBODN 3CBODN	ON ON ON ON ON								
7CBODP 8CBODP 9CBODP 10CBODP 1CBODN 2CBODN 3CBODN 4CBODN	ON ON ON ON ON ON								
7CBODP 8CBODP 9CBODP 10CBODP 1CBODN 2CBODN 3CBODN 4CBODN 5CBODN	ON ON ON ON ON ON ON								
7CBODP 8CBODP 9CBODP 10CBODP 1CBODN 2CBODN 3CBODN 4CBODN 5CBODN 6CBODN	ON								
7CBODP 8CBODP 9CBODP 10CBODP 1CBODN 2CBODN 3CBODN 4CBODN 5CBODN 6CBODN 7CBODN	ON								
7CBODP 8CBODP 9CBODP 10CBODP 1CBODN 2CBODN 3CBODN 4CBODN 5CBODN 6CBODN 7CBODN 8CBODN	ON								
7CBODP 8CBODP 9CBODP 10CBODP 1CBODN 2CBODN 3CBODN 4CBODN 5CBODN 6CBODN 7CBODN 8CBODN 9CBODN	ON								
7CBODP 8CBODP 9CBODP 10CBODP 1CBODN 2CBODN 3CBODN 4CBODN 6CBODN 7CBODN 8CBODN 9CBODN 10CBODN	ON O								
7CBODP 8CBODP 9CBODP 10CBODP 1CBODN 2CBODN 3CBODN 4CBODN 6CBODN 7CBODN 8CBODN 9CBODN 10CBODN ALG1	ON O								
7CBODP 8CBODP 9CBODP 10CBODP 1CBODN 2CBODN 3CBODN 4CBODN 5CBODN 6CBODN 7CBODN 8CBODN 9CBODN 10CBODN ALG1 ALG2	ON O								
7CBODP 8CBODP 9CBODP 10CBODP 1CBODN 2CBODN 3CBODN 4CBODN 6CBODN 7CBODN 8CBODN 9CBODN 10CBODN ALG1 ALG2 ALG3	ON O								
7CBODP 8CBODP 9CBODP 10CBODP 1CBODN 2CBODN 3CBODN 4CBODN 6CBODN 7CBODN 8CBODN 9CBODN 10CBODN ALG1 ALG2 ALG3 DO	ON O								
7CBODP 8CBODP 9CBODP 10CBODP 1CBODN 2CBODN 3CBODN 4CBODN 6CBODN 7CBODN 8CBODN 9CBODN 10CBODN ALG1 ALG2 ALG3	ON O								
7CBODP 8CBODP 9CBODP 10CBODP 1CBODN 2CBODN 3CBODN 4CBODN 5CBODN 6CBODN 7CBODN 8CBODN 9CBODN 10CBODN ALG1 ALG2 ALG3 DO	ON O								
7CBODP 8CBODP 9CBODP 10CBODP 1CBODN 2CBODN 3CBODN 4CBODN 6CBODN 7CBODN 8CBODN 9CBODN 10CBODN ALG1 ALG2 ALG3 DO TIC ALK	ON O								
7CBODP 8CBODP 9CBODP 10CBODP 1CBODN 2CBODN 3CBODN 4CBODN 5CBODN 6CBODN 7CBODN 8CBODN 10CBODN 10CBODN ALG1 ALG2 ALG3 DO TIC ALK ZOO1	ON O								
7CBODP 8CBODP 9CBODP 10CBODP 1CBODN 2CBODN 3CBODN 4CBODN 5CBODN 6CBODN 7CBODN 8CBODN 10CBODN ALG1 ALG2 ALG3 DO TIC ALK ZOO1 LDOM_P	ON O								
7CBODP 8CBODP 9CBODP 10CBODP 1CBODN 2CBODN 3CBODN 4CBODN 5CBODN 6CBODN 7CBODN 8CBODN 9CBODN 10CBODN ALG1 ALG2 ALG3 DO TIC ALK ZOO1 LDOM_P RDOM_P	ON O								
7CBODP 8CBODP 9CBODP 10CBODP 1CBODN 2CBODN 3CBODN 4CBODN 6CBODN 7CBODN 8CBODN 10CBODN ALG1 ALG2 ALG3 DO TIC ALK ZOO1 LDOM_P RDOM_P LPOM_P	ON O								
7CBODP 8CBODP 9CBODP 10CBODP 1CBODN 2CBODN 3CBODN 4CBODN 6CBODN 7CBODN 8CBODN 10CBODN 10CBODN ALG1 ALG2 ALG3 DO TIC ALK ZOO1 LDOM_P RDOM_P LPOM_P RPOM_P	ON O								
7CBODP 8CBODP 9CBODP 10CBODP 1CBODN 2CBODN 3CBODN 4CBODN 6CBODN 7CBODN 8CBODN 10CBODN 10CBODN ALG1 ALG2 ALG3 DO TIC ALK ZOO1 LDOM_P RDOM_P LPOM_P LPOM_P LDOM_N	ON O								
7CBODP 8CBODP 9CBODP 10CBODP 1CBODN 2CBODN 3CBODN 4CBODN 5CBODN 6CBODN 7CBODN 8CBODN 10CBODN 10CBODN ALG1 ALG2 ALG3 DO TIC ALK ZOO1 LDOM_P RDOM_P LPOM_P LPOM_P LDOM_N RDOM_N	ON O								
7CBODP 8CBODP 9CBODP 10CBODP 10CBODN 2CBODN 3CBODN 4CBODN 5CBODN 6CBODN 7CBODN 8CBODN 10CBODN 10CBODN ALG1 ALG2 ALG3 DO TIC ALK ZOO1 LDOM_P RDOM_P LPOM_P LPOM_P LPOM_N RPOM_N RPOM_N	ON O								
7CBODP 8CBODP 9CBODP 10CBODP 10CBODP 1CBODN 2CBODN 3CBODN 4CBODN 6CBODN 7CBODN 8CBODN 10CBODN 10CBODN ALG1 ALG2 ALG3 DO TIC ALK ZOO1 LDOM_P RDOM_P LPOM_P LPOM_P RPOM_P LDOM_N RDOM_N RPOM_N RPOM_N RPOM_N RPOM_N	ON O		CINBRC						
7CBODP 8CBODP 9CBODP 10CBODP 1CBODN 2CBODN 3CBODN 4CBODN 5CBODN 6CBODN 7CBODN 8CBODN 10CBODN 10CBODN ALG1 ALG2 ALG3 DO TIC ALK ZOO1 LDOM_P RDOM_P LPOM_P LPOM_P LDOM_N RDOM_N RDOM_N RPOM_N RPOM_N	ON O	ON	CINBRC						
7CBODP 8CBODP 9CBODP 10CBODP 10CBODP 1CBODN 2CBODN 3CBODN 4CBODN 6CBODN 7CBODN 8CBODN 10CBODN 10CBODN ALG1 ALG2 ALG3 DO TIC ALK ZOO1 LDOM_P RDOM_P LPOM_P LPOM_P RPOM_P LDOM_N RDOM_N RPOM_N RPOM_N RPOM_N RPOM_N	ON O		CINBRC						

TDS

ON

COL1	OFF	OFF							
Conduct	ON	ON							
Chlorine	OFF	OFF							
ISS1	ON	ON							
PO4	ON	ON							
NH4	ON	ON							
NOx	ON	ON							
DSi	OFF	OFF							
PSi	OFF	OFF							
TFe	OFF	OFF							
LDOM	ON	ON							
RDOM	ON	ON							
LPOM	ON	ON							
RPOM	ON	ON							
1CBOD	ON	ON							
2CBOD	ON	ON							
3CBOD	ON	ON							
4CBOD	ON	ON							
5CBOD	ON	ON							
6CBOD	ON	ON							
7CBOD	ON	ON							
8CBOD	ON	ON							
9CBOD	ON	ON							
10CBOD	ON	ON							
1CBODP	ON	ON							
2CBODP	ON	ON							
3CBODP	ON	ON							
4CBODP	ON	ON							
5CBODP	ON	ON							
6CBODP	ON	ON							
7CBODP	ON	ON							
8CBODP	ON	ON							
9CBODP	ON	ON							
10CBODP	ON	ON							
1CBODN	ON	ON							
2CBODN	ON	ON							
3CBODN	ON	ON							
4CBODN	ON	ON							
5CBODN	ON	ON							
6CBODN	ON	ON							
7CBODN	ON	ON							
8CBODN	ON	ON							
9CBODN	ON	ON							
10CBODN	ON	ON							
ALG1	ON	ON							
ALG2	ON	ON							
ALG3	ON	ON							
DO	ON	ON							
TIC	ON	ON							
ALK	ON	ON							
Z001	OFF	OFF							
LDOM_P	ON	ON							
RDOM_P	ON	ON							
LPOM_P	ON	ON							
RPOM_P	ON	ON							
LDOM_N	ON	ON							
RDOM_N	ON	ON							
LPOM_N	ON	ON							
RPOM_N	ON	ON							
CMD COM	CMD MD C	CMDMD C	CMD mp.c	OMD MD C	CMD MD C	OMD MD C	CMD MD C	CMD MD C	OFF
CTR CON	CTRTRC	CTRTE							
TDS	ON	ON							
AGE	OFF	OFF							
TRACER	ON	ON							
COL1	ON	ON							
Conduct Chlorine	ON	ON ON							
ISS1	ON								
1001	ON	ON							

PO4 NH4	ON ON	ON ON							
NOx	ON	ON							
DSi	OFF	OFF							
PSi	OFF	OFF							
TFe	OFF	OFF							
LDOM	ON	ON							
RDOM LPOM	ON ON	ON ON							
RPOM	ON	ON							
1CBOD	ON	ON							
2CBOD	ON	ON							
3CBOD	ON	ON							
4CBOD	ON	ON							
5CBOD	ON	ON							
6CBOD	ON	ON							
7CBOD	ON	ON							
8CBOD	ON	ON							
9CBOD	ON	ON							
10CBOD	ON	ON							
1CBODP 2CBODP	ON ON	ON ON							
3CBODP	ON	ON							
4CBODP	ON	ON							
5CBODP	ON	ON							
6CBODP	ON	ON							
7CBODP	ON	ON							
8CBODP	ON	ON							
9CBODP	ON	ON							
10CBODP	ON	ON							
1CBODN	ON	ON							
2CBODN	ON	ON							
3CBODN	ON	ON							
4CBODN	ON	ON							
5CBODN 6CBODN	ON ON	ON ON							
7CBODN	ON	ON							
8CBODN	ON	ON							
9CBODN	ON	ON							
10CBODN	ON	ON							
ALG1	ON	ON							
ALG2	ON	ON							
ALG3	ON	ON							
DO	ON	ON							
TIC	ON	ON							
ALK ZOO1	ON OFF	ON OFF							
LDOM P	OFF	OFF							
RDOM P	ON	ON							
LPOM P	ON	ON							
RPOM P	ON	ON							
LDOM N	ON	ON							
RDOM_N	ON	ON							
LPOM_N	ON	ON							
RPOM_N	ON	ON							
CDIII COM	CDMDDC	CDTBRC	CDMDDC	CDTBRC	CDEDDC	CDTBRC	CDTBRC	CDTBRC	CDMDDC
CDT CON	CDTBRC ON	ON	CDTBRC	CDIBKC	CDTBRC	CDTBRC	CDTBRC	CDIBRC	CDTBRC
TDS AGE	OFF	OFF							
TRACER	ON	ON							
COL1	ON	ON							
Conduct	ON	ON							
Chlorine	ON	ON							
ISS1	ON	ON							
PO4	ON	ON							
NH4	ON	ON							
NOx	ON	ON							

```
OFF
DSi
                      OFF
PSi
             OFF
                      OFF
TFe
             OFF
                      OFF
LDOM
               ON
                       ON
RDOM
               ON
                       ON
LPOM
               ON
                       ON
RPOM
               ON
                       ON
1CBOD
               ON
                       ON
2CBOD
               ON
                       ON
3CBOD
               ON
                       ON
4CBOD
               ON
                       ON
5CBOD
               ON
                       ON
6CBOD
               ON
                       ON
7CBOD
               ON
                       ON
8CBOD
               ON
                       ON
9CBOD
               ON
                       ON
10CBOD
               ON
                       ON
1CBODP
               ON
                       ON
2CBODP
               ON
                       ON
3CBODP
                       ON
               ON
4CBODP
               ON
                       ON
5CBODP
               ON
                       ON
6CBODP
               ON
                       ON
7CBODP
              ON
                       ON
8CBODP
                       ON
               ON
9CBODP
              ON
                       ON
10CBODP
               ON
                       ON
1CBODN
               ON
                       ON
2CBODN
               ON
                       ON
3CBODN
               ON
                       ON
4CBODN
               ON
                       ON
5CBODN
               ON
                       ON
6CBODN
                       ON
               ON
7CBODN
               ON
                       ON
8CBODN
               ON
                       ON
9CBODN
               ON
                       ON
10CBODN
               ON
                       ON
ALG1
               ON
                       ON
ALG2
               ON
                       ON
ALG3
               ON
                       ON
               ON
                       ON
DO
TIC
               ON
                       ON
ALK
              ON
                       ON
Z001
              OFF
                      OFF
LDOM_P
              ON
                       ON
RDOM P
               ON
                       ON
LPOM P
               ON
                       ON
RPOM_P
               ON
                       ON
LDOM N
               ON
                       ON
RDOM N
               ON
                       ON
LPOM N
               ON
                       ON
RPOM N
               ON
                       ON
CPR CON
          CPRBRC
                   CPRBRC
                           CPRBRC CPRBRC CPRBRC CPRBRC CPRBRC CPRBRC
TDS
              ON
                       ON
AGE
              OFF
                      OFF
TRACER
              ON
                       ON
COL1
               ON
                       ON
Conduct
               ON
                       ON
Chlorine
               ON
                       ON
ISS1
               ON
                       ON
PO4
               ON
                       ON
NH4
              ON
                       ON
NOx
              ON
                       ON
DSi
             OFF
                      OFF
             OFF
PSi
                      OFF
TFe
             OFF
                      OFF
LDOM
              ON
                       ON
```

RDOM	ON	ON
LPOM	ON	ON
RPOM	ON	ON
1CBOD	ON	ON
2CBOD	ON	ON
3CBOD	ON	ON
4CBOD	ON	ON
5CBOD	ON	ON
6CBOD	ON	ON
7CBOD	ON	ON
	ON	ON
8CBOD		
9CBOD	ON	ON
10CBOD	ON	ON
1CBODP	ON	ON
2CBODP	ON	ON
3CBODP	ON	ON
4CBODP	ON	ON
5CBODP	ON	ON
6CBODP	ON	ON
7CBODP	ON	ON
8CBODP	ON	ON
9CBODP	ON	ON
10CBODP	ON	ON
1CBODN	ON	ON
2CBODN	ON	ON
3CBODN	ON	ON
4CBODN	ON	ON
5CBODN	ON	ON
6CBODN	ON	ON
7CBODN	ON	ON
8CBODN	ON	ON
9CBODN	ON	ON
10CBODN	ON	ON
ALG1	ON	ON
ALG2	ON	ON
ALG3	ON	ON
DO	ON	ON
TIC	ON	ON
ALK	ON	ON
Z001	OFF	OFF
LDOM P	ON	ON
RDOM_P	ON	ON
LPOM P	ON	ON
_		
RPOM_P	ON	ON
LDOM_N	ON	ON
RDOM_N	ON	ON
LPOM_N	ON	ON
RPOM_N	ON	ON

New control files

Based on the options the user turns ON or OFF, new control files are required. These new control files are named:

- 1. w2_selective.npt new variables controlling the selective withdrawal algorithm to select temperature targets
- 2. w2_habitat.npt new variables controlling fish habitat limits for temperature and dissolved oxygen and surface and segment volume weighted eutrophication state variables
- 3. w2_envirpf.npt new variables controlling setting environmental performance criteria
- 4. w2_aerate.npt variables describing use of dissolved oxygen addition to enhance dissolved oxygen levels through diffusers

Details of these new control files are in the CE-QUAL-W2 User Manual.

Differences between Version 3.6 and Version 3.5

Version 3.6 can be run without changing any of the input files, even though the preprocessor will identify errors in the control file because of missing variables. Below is a highlighted list of locations in the file w2_con.npt where additional variables have been added. There are no other changes in the input files for Version 3.6.

The TKE algorithm has been updated with new algorithms that match experimental tank data for kinetic energy and dissipation. This is based on a Master's degree project by Sam Gould at Portland State University. A new user option is the TKE1 algorithm, in add addition to the legacy algorithm TKE. This results in several new input variables on the following line of the w2_con.npt file that are only active if TKE1 is chosen for AZC:

EDDY VISC	AZC	AZSLC	AZMAX	FBC	E	ARODI	STRCKLR	BOUNDFR	TKECAL
WB 1	W2	IMP	1.00000	3	9.535	0.430	24.0	10.00	IMP

The roughness height of the water for correction of the vertical velocity wind profile is now a user-defined input, z_0 . Prior to this the model had hardwired the value of z_0 =0.003 m for wind speed correction at 2m (for evaporation where wind height at 2 m is typical) and z_0 =0.01 m for wind at 10 m (for shear stress calculations where wind height of 10 m is typical). For consistency, both conversions now use the same value of roughness height. If the user does not specify the value of z_0 (for example if he/she leaves the spaces blank for z_0 using a V3.5 control file), the code uses 0.001 m.

```
HYD COEF AX DX CBHE TSED FI TSEDF FRICC WB 1 1.00000 1.00000 0.30000 11.5000 0.01000 1.00000 MANN 0.001
```

A new option for output is in the format required for TECPLOT. For TECPLOT animation there is only a flag in the CPL output line. This allows for easy model animation of the variables U, W, T, RHO, and all active constituents at the frequency specified by the CPL file as a function of distance and elevation.

```
CPL PLOT CPLC NCPL TECPLOT WB 1 ON 1 ON
```

A new variable for determining the fraction of NO3-N that is diffused into the sediments that becomes organic matter, or SED-N was introduced. According to one study, only about 37% of NO₃-N that diffuses into the sediments becomes incorporated into organic matter in the sediments. The rest is denitrified.

NITRATE	NO3DK	NO3S	FNO3SED
Wb 1	0.05	0.0	0.37
Wh 2	0.05	0.0	0.37

In V3.5 the model computed an average decay coefficient of the sediments based on what was deposited. The user now has the option to dynamically compute that decay rate or to have it fixed and controlled by the model user. A new variable was introduced called DYNSEDK which is either ON/OFF to allow or not allow dynamic computation of the sediment decay rate.

SEDIMENT	SEDC	PRNSC	SEDCI	SEDK	SEDS	FSOD	FSED	SEDBR	DYNSEDK
Wh 1	OM	OM	0 0	0 1	0 0	1 0	1 0	0 001	OFF

Wb 2 ON ON 0.0 0.1 0.0 1.0 1.0 0.001 OFF

The User can now specify the # of processors to use on the host computer. Most users find that setting NPROC=2 gets the best results. Sometimes setting this greater than 2 results in slower model performance. Also, the CLOSEC control closes the windows dialog box after the model completes its simulation. This is useful in using the windows version of the release code in batch simulations. These are specified in the control file as follows:

GRID NWB NBR IMX KMX NPROC CLOSEC 1 4 66 117 2 ON

Differences between Version 3.2 and Version 3.5

The differences in V3.5 and V3.2 input files are found in the control file: **w2_con.npt** and in the **graph.npt** file. All other files are the same between the 2 versions.

w2_con.npt

Below is an example of parts of the control file from V3.5 where all new variables are highlighted. Most of these changes have to do with the new zooplankton, macrophyte, and new state variables added to the model. See the User Manual for a list of changes between V3.2 and V 3.5 in the version history. Also there were some deletions from the V3.2 w2_con.npt file. These are shown below.

New variables added to the control file are highlighted

ivew variab	ies auu	ea to the	Control	ille are i	ngningnie	<u>:u</u>		
•								
IN/OUTFL	NTR	NST	NIW	NWD	NGT	NSP	NPI	NPU
	1	1	0	0	0	0	0	0
CONSTITU	NGC	NSS	NAL	NEP	NBOD	NMC	NZP	
	5	1	1	1	5	0	1	
MISCELL	NDAY							
	100							
•								
· COM COMP	000	TTMC	CHE					
CST COMP	CCC	LIMC	CUF					
	ON	ON	10					
CST ACTIVE	CAC							
TDS	OFF							
Gen1	OFF							
Gen2	OFF							
Gen3	OFF							
Gen4	OFF							
Gen5	OFF							
ISS1	OFF							
PO4	OFF							
NH4	OFF							
NO3	OFF							
DSI	OFF							
PSI	OFF							
FE	OFF							
LDOM	OFF							
RDOM	OFF							
LPOM	OFF							
RPOM	OFF							
BOD1	OFF							
BOD2	OFF							
BOD3	OFF							
BOD4	OFF							
BOD5	OFF							
ALG1	OFF							
DO	OFF							
TIC	OFF							
ALK	OFF							
Z001	OFF							
LDOM_P	OFF							
RDOM_P	OFF							

LPOM_P RPOM_P LDOM_N RDOM_N LPOM_N	OFF OFF OFF OFF OFF								
CST DERI DOC POC TOC DON PON TON TKN TN DOP POP TOP TP APR CHLA ATOT %DO TSS TISS CBOD PH CO2 HCO3 CO3	CDWBC OFF OFF OFF OFF OFF OFF OFF OFF OFF OF	CDWBC							
CST FLUX TISSIN TISSOUT PO4AR PO4AG PO4AG PO4AP PO4ER PO4EG PO4EP PO4POM PO4OM PO4SED PO4SED PO4SET NH4NITR NH4AR NH4AG NH4AP NH4ER NH4EG NH4EP NH4POM NH4DOM NH4OM NH4SED NO3DEN NO3DEN NO3AG NO3EG DSIAG DSIEG DSIPIS DSISED	CFWBC OFF OFF OFF OFF OFF OFF OFF OFF OFF OF	CFWBC							

```
OFF
DSISOD
DSISET
            OFF
PSIAM
            OFF
PSINET
            OFF
PSIDK
            OFF
            OFF
FESET
FESED
            OFF
LDOMDK
            OFF
LRDOM
            OFF
RDOMDK
            OFF
LDOMAP
            OFF
LDOMEP
            OFF
LPOMDK
            OFF
LRPOM
            OFF
RPOMDK
            OFF
LPOMAP
            OFF
LPOMEP
            OFF
LPOMSET
            OFF
RPOMSET
            OFF
            OFF
CBODDK
DOAP
            OFF
            OFF
DOAR
DOEP
            OFF
DOER
            OFF
DOPOM
            OFF
DODOM
            OFF
            OFF
DOOM
DONITR
            OFF
DOCBOD
            OFF
DOREAR
            OFF
DOSED
            OFF
DOSOD
            OFF
TICAG
            OFF
            OFF
TICEG
SEDDK
            OFF
SEDAS
            OFF
SEDLPOM
            OFF
SEDSET
            OFF
SODDK
            OFF
CST ICON C2IWB
                  C2IWB C2IWB C2IWB C2IWB C2IWB C2IWB
                                                                         C2IWB
TDS
      0.00000
        0.00000
Gen1
Gen2
        0.00000
        0.00000
Gen3
        0.00000
Gen4
        0.00000
Gen5
ISS1
        0.00000
PO4
        0.03000
NH4
        0.01000
NO3
        0.30000
        0.00000
DST
PSI
        0.00000
FE
        0.00000
LDOM
        0.10000
RDOM
        0.10000
LPOM
        0.10000
RPOM
        0.10000
        0.00000
BOD1
BOD2
        0.00000
BOD3
        0.00000
BOD4
        0.00000
        0.00000
BOD5
        0.10000
ALG1
DO
        12.0000
        5.00000
TIC
      19.8000
ALK
Z001 0.1000
```

LDOM_P RDOM_P LPOM_P RPOM_P LDOM_N RDOM_N LPOM_N RPOM_N	0.0005 0.0005 0.0005 0.0005 0.0080 0.0080 0.0080								
CST PRIN TDS Gen1 Gen2 Gen3 Gen4 Gen5 ISS1 PO4 NH4 NO3 DSI PSI FE LDOM RDOM LPOM RDOM BOD1 BOD2 BOD3 BOD4 BOD5 ALG1 DO TIC ALK ZOO1 LDOM_P RDOM_P LPOM_P LPOM_P LPOM_P LPOM_P LDOM_N RDOM_N LPOM_N RDOM_N LPOM_N RPOM_N RPOM_N	CPRWBC OFF ON OFF OFF OFF OFF OFF OFF OFF OFF	CPRWBC							
CIN CON TDS Gen1 Gen2 Gen3 Gen4 Gen5 ISS1 PO4 NH4 NO3 DSI PSI FE LDOM RDOM LPOM RPOM BOD1 BOD2 BOD3	CINBRC ON OFF ON ON ON ON ON ON OFF OFF OFF ON ON ON ON ON ON ON ON ON	CINBRC							

```
BOD4
              ON
BOD5
              ON
ALG1
              ON
DO
              ON
TIC
              ON
ALK
              ON
Z001
             OFF
LDOM_P
             OFF
RDOM_P
LPOM_P
             OFF
             OFF
RPOM_P
             OFF
LDOM N
             OFF
RDOM N
             OFF
LPOM N
             OFF
RPOM_N
             OFF
CTR CON
          CTRTRC
                  CTRTRC
                          CTRTRC CTRTRC CTRTRC CTRTRC CTRTRC CTRTRC
              ON
TDS
                      ON
             OFF
                      OFF
Gen1
Gen2
              ON
                       ON
Gen3
              ON
                       ON
              ON
Gen4
                       ON
Gen5
              ON
                       ON
ISS1
              ON
                       ON
PO4
              ON
                       ON
NH4
              ON
                       ON
              ON
NO3
                       ON
DSI
             OFF
                      OFF
PST
             OFF
                      OFF
FE
             OFF
                      OFF
LDOM
              ON
                      ON
RDOM
              ON
                       ON
LPOM
              ON
                       ON
              ON
RPOM
                       ON
BOD1
              ON
                       ON
BOD2
              ON
                       ON
BOD3
              ON
                       ON
BOD4
              ON
                       ON
BOD5
              ON
                       ON
ALG1
              ON
                       ON
              ON
DO
                       ON
TIC
              ON
                       ON
ALK
              ON
                       ON
Z001
             OFF
                      OFF
LDOM_P
             OFF
                      OFF
RDOM_P
             OFF
                      OFF
LPOM_P
RPOM_P
             OFF
                      OFF
             OFF
                      OFF
LDOM_N
RDOM_N
             OFF
                      OFF
             OFF
                      OFF
LPOM_N
RPOM_N
             OFF
                      OFF
             OFF
                      OFF
CDT CON
          CDTBRC CDTBRC CDTBRC CDTBRC CDTBRC CDTBRC CDTBRC CDTBRC
TDS
              ON
Gen1
             OFF
Gen2
              ON
Gen3
              ON
Gen4
              ON
Gen5
              ON
ISS1
              ON
PO4
              ON
NH4
              ON
NO3
              ON
DSI
             OFF
             OFF
PSI
FE
             OFF
LDOM
              ON
```

```
RDOM
               ON
LPOM
               ON
RPOM
               ON
BOD1
               ON
BOD2
               ON
BOD3
               ON
BOD4
BOD5
               ON
ALG1
               ON
DO
              ON
TIC
               ON
ALK
              ON
Z001
             OFF
LDOM P
              OFF
RDOM_P
             OFF
LPOM P
              OFF
RPOM_P
LDOM_N
             OFF
             OFF
RDOM_N
LPOM_N
             OFF
             OFF
RPOM N
              OFF
CPR CON
          CPRBRC
                   CPRBRC CPRBRC CPRBRC CPRBRC CPRBRC CPRBRC CPRBRC
TDS
              ON
              OFF
Gen1
              ON
Gen2
               ON
Gen3
               ON
Gen4
Gen5
               ON
ISS1
               ON
PO4
              ON
NH4
               ON
ио3
              ON
DSI
              OFF
PSI
             OFF
FΕ
             OFF
LDOM
              ON
RDOM
              ON
LPOM
               ON
RPOM
               ON
BOD1
               ON
BOD2
               ON
BOD3
               ON
BOD4
               ON
BOD5
              ON
ALG1
               ON
DO
               ON
TIC
               ON
ALK
              ON
Z001
              OFF
LDOM P
             OFF
RDOM P
             OFF
LPOM P
              OFF
RPOM_P
             OFF
LDOM N
             OFF
RDOM N
             OFF
LPOM_N
             OFF
RPOM N
             OFF
EX COEF
           EXH20
                     EXSS
                             EXOM
                                      BETA
                                                EXC
                                                       EXIC
WB 1
         0.45000 0.01000 0.40000 0.45000
                                                OFF
                                                        OFF
             EXA
ALG EX
                      EXA
                               EXA
                                       EXA
                                                EXA
                                                        EXA
         0.10000
                               EXZ
                                                EXZ EXZ
ZOO EX
                      EXZ
                                       EXZ
              EXZ
                      0.2
```


MACRO EX	EXM 0.0100	EXM	EXM	EXM	EXM	EXM			
	0.00000 0.00000 1.04000 0.00000	-1.0000 0.00000 0.00000 0.00000	CG1DK 0.00000 0.00000 0.50000 0.00000 0.00000	0.00000 0.00000 0.00000 0.00000					
S SOLIDS SS1	SSS 1.50000		TAUCR 0.00						
ALGAL RAT				AM 0.05000		AHSP 0.00500			ASAT 50.0000
ALGAL TEN						AK2 0.99000			
ALG STOI ALG1				ALGSI 0.00000		ALPOM 0.80000		ANPR 0.00100	
EPIPHYTE EPI1	EPIC OFF	EPIC	EPIC	EPIC	EPIC	EPIC	EPIC	EPIC	EPIC
EPI PRIN EPI1	EPRC OFF	EPRC	EPRC	EPRC	EPRC	EPRC	EPRC	EPRC	EPRC
EPI INIT EPI1		EPICI	EPICI	EPICI	EPICI	EPICI	EPICI	EPICI	EPICI
EPI RATE EPI1						EHSP 0.00200			
EPI HALF EPI1		EHS 40.0000	~	ENPR 0.00200					
EPI TEMP EPI1		ET2 5.00000	ET3 20.0000			EK2 0.99000			
EPI STOI EPI1			EC 0.45000	ESI 0.00000		EPOM 0.80000			
ZOOP RATE	ZG 1.50		ZM 0.010	ZEFF 0.50		ZOOMIN 0.0100	ZS2P 0.30		
ZOOP ALGI Zoo1	P PREFA 1.00	PREFA 0.50	PREFA 0.50	PREFA	PREFA	PREFA	PREFA	PREFA	PREFA
Z00P Z001 Z001	P PREFZ 0.00	PREFZ 0.00	PREFZ 0.00	PREFZ	PREFZ	PREFZ	PREFZ	PREFZ	PREFZ
ZOOP TEM	ZT1 0.0	ZT2 15.0	ZT3 20.0	ZT4 36.0	ZK1 0.1	ZK2 0.9			
ZOOP STO		ZN 0.08000	ZC 0.45000						
MACROPHY: Mac1	r macwbc On	MACWBC OFF	MACWBC OFF	MACWBC	MACWBC	MACWBC	MACWBC	MACWBC	MACWBC
MAC PRINT	MPRWBC ON	MPRWBC OFF	MPRWBC OFF	MPRWBC	MPRWBC	MPRWBC	MPRWBC	MPRWBC	MPRWBC
MAC INI Mac1	MACWBCI 0.00000			MACWBCI	MACWBCI	MACWBCI	MACWBCI	MACWBCI	MACWBCI

MAC RATE Mac 1	MG 0.30	MR 0.05	MM 0.05	MSAT 30.0	MHSP 0.0	MHSN 0.0	MHSC 0.0	MPOM 0.9	LRPMAC 0.2
MAC SED MAC 1	PSED 0.5	NSED 0.5							
MAC DIST Mac 1	MBMP 40.0	MMAX 500.0							
MAC DRAG Mac 1	CDSTEM 2.0	DWV 7e4	DMSA 8.00	ANORM 0.80					
MAC TEMP Mac 1	MT1 7.0	MT2 15.0	MT3 24.0	MT4 34.0	MK1 0.1	MK2 0.99	MK3 0.99	MK4 0.01	
MAC STOI Mac 1	CH MP 0.005	MN 0.08	MC 0.45						
DOM WB 1	LDOMDK 0.10000	RDOMDK 0.00100	LRDDK 0.00100						
POM WB 1	LPOMDK 0.08000	RPOMDK 0.00100	LRPDK 0.00100	POMS 0.10000					
OM STOIC		ORGN 0.08000	ORGC 0.45000	ORGSI 0.18000					
OM RATE WB 1	OMT1 4.00000	OMT2 30.0000	OMK1 0.10000	OMK2 0.99000					
CBOD BOD 1 BOD 2 BOD 3 BOD 4 BOD 5	0.13020 0.04690 0.08800	TBOD 1.01470 1.01470 1.01470 1.01470	1.00000 1.00000 1.00000	CBODS 0.0 0.0 0.0 0.0					
CBOD STO BOD 1 BOD 2 BOD 3 BOD 4 BOD 5	0.00500 0.00500 0.00500 0.00500	BODN 0.08000 0.08000 0.08000 0.08000 0.08000	0.45000 0.45000 0.45000						
PHOSPHOR WB 1		PARTP 0.00000							
AMMONIUM WB 1		NH4DK 0.50000							
NH4 RATE WB 1									
NITRATE WB 1									
NO3 RATE WB 1									
SILICA WB 1									
IRON WB 1		FES 0.00000							
SED CO2 WB 1									


STOICH 1 02NH4 WB 1 4.57000								
STOICH 2								
STOICH 3 O2ER EPI1 1.10000								
STOICH 4 02ZR Z001 1.10000								
STOICH 5 O2MR MAC1 1.1								
02 LIMIT KDO 0.10000								
SEDIMENT SEDC WB 1 ON					FSOD 1.00000 1			
SOD RATE SODT1 WB 1 4.00000								
S DEMAND SOD 0.6 0.6 0.6 0.6 0.6	0.6 0.6 0.6	SOD 0.6 0.6 0.6	0.6 0.6 0.6	0.6 0.6 0.6	0.6 0.6	0.6 0.6 0.6	0.6 0.6 0.6	SOD 0.6 0.6 0.6
REAERATION TYPE WB1 LAKE	EQN#	COEF1	COEF2	COEF3	COEF4			

<u>Lines removed from the V3.2 control file:</u> These are a result of eliminating the pumpback and line printer settings.

Here is the part of the V3.2 control file that was deleted:

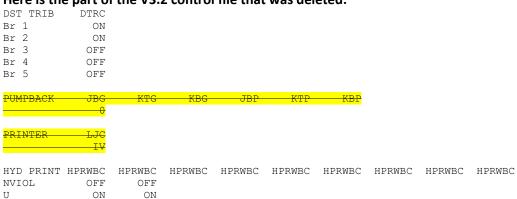

<u>Graph.npt file changes.</u> These changes are a result of the new state variables in W2 and are highlighted below.



#

Timestep violations [NVIOL]	(I10)	1.0	-1.0	1.0	OFF
Horizontal velocity [U], m/s 2	(1PE10.1)	1.0	1000	0.15	OFF
Vertical velocity [W], m/s	(1PE10.1)	1.0	1E-6	-0.01	OFF
Temperature [T1], <o></o> C	(F10.2)	1.0	-10.0	-26.0	ON
Density [RHO], g/m^3	(F10.3)	1.0	997.0	1005.0	OFF
Vertical eddy viscosity [AZ], m^2/s	(F10.3)	1.0	-1E-08	0.01	OFF
Velocity shear stress [SHEAR], 1/s^2	(F10.3)	1.0	-1E-08	0.01	OFF
Internal shear [ST], m^3/s	(F10.3)	1.0	-1E-08	0.01	OFF
8 Bottom shear [SB], m^3/s	(F10.3)	1.0	-1E-08	0.01	OFF
9 Longitudinal momentum [ADMX], m^3/s 10	(F10.3)	1.0	-1E-08	0.01	OFF
Longitudinal momentum [DM], m^3/s	(F10.3)	1.0	-1E-08	0.01	OFF
11 Horizontal density gradient [HDG], m^3/s	(F10.3)	1.0	-1E-08	0.01	OFF
12 Vertical momentum [ADMZ], m^3/s 13	(F10.3)	1.0	-1E-08	0.01	OFF
Horizontal pressure gradient [HPG], m^3/s	(F10.3)	1.0	-1E-08	10.0	OFF
Gravity term channel slope [GRAV], m^3/s 15	(F10.3)	1.0	0.0	0.0	OFF
	FMTC	CMULT	CMIN	CMAX	CPLTC
# TDS, g/m^3	(F10.3)	1.0	-1.0	200.0	OFF
1 Age, days	(F10.3)	1.0	-1.0	-200.0	ON
Tracer, g/m^3	(F10.3)	1.0	-20.000	100.0	OFF
3 Bacteria, col/100ml	(F10.3)	1.0	-20.000	100.0	OFF
4 Conductivity, mhos 5	(F10.3)	1.0	-20.000	100.0	OFF
Chloride, mg/l	(F10.3)	1.0	-20.000	100.0	OFF
ISS, g/m^3	(F10.3)	1.0	-20.000	100.0	OFF
Phosphate, g/m^3	(F10.3)	1000.0	-1.0	500.0	OFF
Ammonium, g/m^3	(F10.3)	1000.0	-0.1000	300.0	OFF
Nitrate-Nitrite, g/m^3	(F10.3)	1.0	-0.1000	5.0	OFF
10 Dissolved silica, g/m^3	(F10.3)	1.0	-1.0	10.0	OFF
11 Particulate silica, g/m^3	(F10.3)	1.0	-0.2000	15.0	OFF
12 Total iron, g/m^3	(F10.3)	1.0	-0.1000	2.0	OFF
13 Labile DOM, g/m^3	(F10.3)	1.0	-0.1000	-3.0	OFF
14 Refractory DOM, g/m^3	(F10.3)	1.0	-0.1000	-4.0	OFF
15 Labile POM, g/m^3	(F10.3)	1.0	-0.1000	-3.0	OFF
16					
Refractory POM, g/m^3 17	(F10.3)	1.0	-0.1000	-4.0	OFF

CBOD1, g/m^3 18	(F10.3)	1.0	-0.0100	3.0	OFF
CBOD2, g/m^3 19	(F10.3)	1.0	-0.0100	3.0	OFF
CBOD3, g/m^3 20	(F10.3)	1.0	-0.0100	3.0	OFF
CBOD4, g/m^3 21	(F10.3)	1.0	-0.0100	3.0	OFF
CBOD5, g/m^3 22	(F10.3)	1.0	-0.0100	3.0	OFF
22 Algae, g/m^3 23	(F10.3)	1.0	-0.0100	3.0	OFF
Dissolved oxygen, g/m^3	(F10.3)	1.0	-0.0100	-1.0	OFF
Inorganic carbon, g/m^3	(F10.3)	1.0	-0.0100	3.0	OFF
25 Alkalinity, g/m^3 26	(F10.3)	1.0	-0.0100	3.0	OFF
zooplankton1, mg/m^3 27	(g10.3)	1000.0	-0.0100	1.0	OFF
LDOM P, mg/m^3 28	(g10.3)	1000.0	0.0	1.0	OFF
RDOM P, mg/m^3	(g10.3)	1000.0	0.0	1.0	OFF
LPOM P, mg/m^3 30	(g10.3)	1000.0	0.0	1.0	OFF
RPOM P, mg/m^3	(g10.3)	1000.0	0.0	1.0	OFF
LDOM N, mg/m^3 32	(g10.3)	1000.0	0.0	1.0	OFF
RDOM N, mg/m^3 33	(g10.3)	1000.0	0.0	1.0	OFF
LPOM N, mg/m^3	(g10.3)	1000.0	0.0	1.0	OFF
<u>34</u>					
34 RPOM N, mg/m^3 35	(g10.3)	1000.0	0.0	1.0	OFF
	(g10.3) FMTCD	1000.0	0.0 CDMIN	1.0 CDMAX	OFF CDPLTC
RPOM N, mg/m^3 35CDNAME# Dissolved organic carbon, g/m^3					
RPOM N, mg/m^3 35CDNAME# Dissolved organic carbon, g/m^3 1 Particulate organic carbon, g/m^3	FMTCD	CDMULT	CDMIN	CDMAX	CDPLTC
RPOM N, mg/m^3 35	FMTCD (F10.3)	CDMULT	CDMIN -1.0	CDMAX 25.0	CDPLTC OFF
RPOM N, mg/m^3 35	FMTCD (F10.3) (F10.3)	CDMULT 1.0 1.0	CDMIN -1.0 -1.0	CDMAX 25.0 50.0	CDPLTC OFF OFF
RPOM N, mg/m^3 35	FMTCD (F10.3) (F10.3) (F10.3)	CDMULT 1.0 1.0	CDMIN -1.0 -1.0	CDMAX 25.0 50.0 25.0	CDPLTC OFF OFF
RPOM N, mg/m^3 35	FMTCD (F10.3) (F10.3) (F10.3)	CDMULT 1.0 1.0 1.0	CDMIN -1.0 -1.0 -1.0 -1.0 -1.0	CDMAX 25.0 50.0 25.0 25.0	CDPLTC OFF OFF OFF
RPOM N, mg/m^3 35	FMTCD (F10.3) (F10.3) (F10.3) (F10.3)	CDMULT 1.0 1.0 1.0 1.0 1.0	CDMIN -1.0 -1.0 -1.0 -1.0 -1.0 -1.0	CDMAX 25.0 50.0 25.0 25.0	CDPLTC OFF OFF OFF
RPOM N, mg/m^3 35	FMTCD (F10.3) (F10.3) (F10.3) (F10.3) (F10.3)	CDMULT 1.0 1.0 1.0 1.0 1.0 1.0	CDMIN -1.0 -1.0 -1.0 -1.0 -1.0 -1.0 -1.0	CDMAX 25.0 50.0 25.0 25.0 25.0 50.0	CDPLTC OFF OFF OFF OFF
RPOM N, mg/m^3 35	FMTCD (F10.3) (F10.3) (F10.3) (F10.3) (F10.3) (F10.3)	CDMULT 1.0 1.0 1.0 1.0 1.0 1.0 1.0	CDMIN -1.0 -1.0 -1.0 -1.0 -1.0 -1.0 -1.0	CDMAX 25.0 50.0 25.0 25.0 25.0 50.0	CDPLTC OFF OFF OFF OFF OFF
RPOM N, mg/m^3 35	FMTCD (F10.3) (F10.3) (F10.3) (F10.3) (F10.3) (F10.3) (F10.3)	CDMULT 1.0 1.0 1.0 1.0 1.0 1.0 1.0 1.	CDMIN -1.0 -1.0 -1.0 -1.0 -1.0 -1.0 -1.0 -1.0	CDMAX 25.0 50.0 25.0 25.0 25.0 50.0 15.0	CDPLTC OFF OFF OFF OFF OFF
RPOM N, mg/m^3 35	FMTCD (F10.3) (F10.3) (F10.3) (F10.3) (F10.3) (F10.3) (F10.3)	CDMULT 1.0 1.0 1.0 1.0 1.0 1.0 1.0 1.	CDMIN -1.0 -1.0 -1.0 -1.0 -1.0 -1.0 -1.0 -1.0	CDMAX 25.0 50.0 25.0 25.0 25.0 50.0 15.0 25.0	CDPLTC OFF OFF OFF OFF OFF OFF
RPOM N, mg/m^3 35	FMTCD (F10.3) (F10.3) (F10.3) (F10.3) (F10.3) (F10.3) (F10.3) (F10.3) (F10.3)	CDMULT 1.0 1.0 1.0 1.0 1.0 1.0 1.0 1.	CDMIN -1.0 -1.0 -1.0 -1.0 -1.0 -1.0 -1.0 -1.0	CDMAX 25.0 50.0 25.0 25.0 25.0 15.0 15.0 25.0 -1.0	CDPLTC OFF OFF OFF OFF OFF OFF OFF
RPOM N, mg/m^3 35	FMTCD (F10.3) (F10.3) (F10.3) (F10.3) (F10.3) (F10.3) (F10.3) (F10.3) (F10.3)	CDMULT 1.0 1.0 1.0 1.0 1.0 1.0 1.0 1.	CDMIN -1.0 -1.0 -1.0 -1.0 -1.0 -1.0 -1.0 -1.0	CDMAX 25.0 50.0 25.0 25.0 25.0 50.0 15.0 15.0 25.0 -1.0 5.0	CDPLTC OFF OFF OFF OFF OFF OFF

(F10.3)	1.0	-1.0	60.0	OFF
(F10.3)	1.0	-1.0	50.0	OFF
(F10.3)	1.0	-1.0	5.0	OFF
(F10.3)	1.0	-1.0	20.0	OFF
(F10.3)	1.0	5.0	9.0	OFF
(F10.3)	1.0	-1.0	10.0	OFF
(F10.3)	1.0	-1.0	10.0	OFF
(F10.3)	1.0	-1.0	10.0	OFF
(F10.3)	0.0	0.0	0.0	OFF
	(F10.3) (F10.3) (F10.3) (F10.3) (F10.3) (F10.3)	(F10.3) 1.0 (F10.3) 1.0 (F10.3) 1.0 (F10.3) 1.0 (F10.3) 1.0 (F10.3) 1.0 (F10.3) 1.0	(F10.3) 1.0 -1.0 (F10.3) 1.0 -1.0 (F10.3) 1.0 -1.0 (F10.3) 1.0 -1.0 (F10.3) 1.0 -1.0 (F10.3) 1.0 -1.0 (F10.3) 1.0 -1.0	(F10.3) 1.0 -1.0 50.0 (F10.3) 1.0 -1.0 5.0 (F10.3) 1.0 -1.0 20.0 (F10.3) 1.0 5.0 9.0 (F10.3) 1.0 -1.0 10.0 (F10.3) 1.0 -1.0 10.0 (F10.3) 1.0 -1.0 10.0

Differences between Version 3.1 and Version 3.2

There are minor differences in 2 input files between the 2 versions: **w2_con.npt** and the **graph.npt** file. All other files are the same between the 2 versions.

w2_con.npt

The only section where there is a slight difference in the control file is in the section where the inorganic suspended solids group settling velocities are entered. In Version 3.1, this section looks like this:

ALG EX	EXA 0.10000	EXA	EXA	EXA	EXA	EXA			
GENERIC CG 1 CG 2 CG 3 CG 4 CG 5	0.00000 1.04000 0.00000	CG0DK -1.0000 0.00000 0.00000 0.00000 0.00000	0.00000 0.50000 0.00000	0.00000 0.00000 0.00000					
S SOLIDS	SSS 1.50000	SSS	SSS	SSS	SSS	SSS	SSS	SSS	SSS
ALGAL RA ALG1	TE AG 2.00000	AR 0.12000	AE 0.02000	AM 0.05000	AS 0.04000	AHSP 0.00500	AHSN 0.00500	AHSSI 0.00000	ASAT 50.0000

In Version 3.2, there is now a sediment resuspension capability for wind driven resuspension along the shores of lakes and reservoirs. The Version 3.2 control file has the following lines in this same section of the control file:

ALG EX	EXA 0.10000	EXA	EXA	EXA	EXA	EXA			
GENERIC CG 1 CG 2 CG 3 CG 4 CG 5	0.00000 1.04000 0.00000	CGODK -1.0000 0.00000 0.00000 0.00000	0.00000 0.00000 0.50000 0.00000	0.00000 0.00000 0.00000					
S SOLIDS SS1	SSS 1.50000	SEDRC OFF	TAUCR 0.00						
ALGAL RA ALG1		AR 0.12000	AE 0.02000	AM 0.05000	AS 0.04000	AHSP 0.00500	AHSN 0.00500	AHSSI 0.00000	ASAT 50.0000

For Version 3.2, SSS is the settling velocity for particle group 1, SEDRC is the control which turns ON or OFF sediment resuspension, and TAUCR is the critical shear stress at which resuspension occurs. For Version 3.2, each line represents 1 SS group, while in Version 3.1, each group settling velocity is in the next 8 columns moving across the page.

graph.npt

The graph file controls output formatting and the graphing parameters used in Array Viewer (only for the PC platform). The files have been rearranged significantly. A Version 3.1 graph file is shown below:

Constituent, hydrodynamic, and derived constituent names, formats, multipliers, and array viewer controls

	CMULT CMIN CMAX	CPLTC	#
TDS g/m^3 or Salinity kg/m^3	1.00000 -1.0000 200.000	OFF	1
Generic Constituent,g/m^3, #1	1.00000 -1.0000 -200.00	ON	2
Generic Constituent,g/m^3, #2	1.00000 -1.0000 1000.00	OFF	3
Generic Constituent,g/m^3, #3	1.00000 -1.0000 5.00000	OFF	4
Generic Constituent, g/m^3, #4	1.00000 -1.0000 -300.00	OFF	5
Generic Constituent, g/m^3, #5	1.00000 -1.0000 -3.0000	OFF	6
Suspended solids, g/m^3, #1	1.00000 -1.0000 15.0000	OFF	7
Phosphate, g/m^3	1000.00 -1.0000 -50.000	OFF	8
Ammonium, g/m^3	1000.00 -0.1000 -300.00	OFF	9
Nitrate-Nitrite, g/m^3	1.00000 -0.1000 -5.0000	OFF	10
Dissolved silica, g/m^3	1.00000 -1.0000 10.0000	OFF	11
Particulate silica, g/m^3	1.00000 -0.2000 15.0000	OFF	12
Total iron, g/m^3	1.00000 -0.1000 2.00000	OFF	13
Labile DOM, g/m^3	1.00000 -0.1000 -3.0000	OFF	14
Refractory DOM, g/m^3	1.00000 -0.1000 4.00000	OFF	15
Labile POM, g/m^3	1.00000 -0.1000 3.00000	OFF	16
Refractory POM, g/m^3	1.00000 -0.1000 4.00000	OFF	17
CBOD, g/m^3, #1	1.00000 -0.1000 10.0000	OFF	18
CBOD, g/m^3, #2	1.00000 -0.1000 10.0000	OFF	19
CBOD, g/m^3, #3	1.00000 -0.1000 10.0000	OFF	20
CBOD, g/m^3, #4	1.00000 -0.1000 10.0000	OFF	21
CBOD, g/m^3, #5	1.00000 -0.1000 10.0000	OFF	22
Algae, g/m ³ , #1	1.00000 -0.0100 -3.0000	OFF	23
Dissolved oxygen, g/m^3	1.00000 -2.0000 15.0000	OFF	24
Inorganic carbon, g/m^3	1.00000 -1.0000 10.0000	OFF	25
Alkalinity, q/m^3	1.00000 -1.0000 200.000	OFF	26
Alkalinicy, g/m 3	1.00000 1.0000 200.000	OFF	20
HNAME	. HFMT HMIN HMAX	טחד יייר	#
		HPLTC OFF	1
Timestep violations [NVIOL] Horizontal velocity [U], m/s	(F10.0) -1.0000 100000 (1PE10.1) -0.0100 0.10000		2
Vertical velocity [W], m/s	(1PE10.1) -0.0100 0.10000 (1PE10.1)10E-06 0.01000	ON	3
		OFF	4
Temperature [T1], <o></o> C	(F10.2) -2.0000 -30.000	ON	5
Density [RHO], g/m^3	(F10.2) 997.000 1005.00	OFF	
Vertical eddy viscosity [AZ], m^2/s	(1PE10.1) -1E-08 0.00100	OFF	6
Velocity shear stress [SHEAR], 1/s^2	(1PE10.1) -1E-08 0.01000	OFF	7
Internal shear [ST], m^3/s	(1PE10.1) -1E-08 0.01000	OFF	8
Bottom shear [SB], m^3/s	(1PE10.1) -1E-08 0.01000	OFF	9
Longitudinal momentum [ADMX], m^3/s	(1PE10.1) -1E-08 0.01000	OFF	10
Longitudinal momentum [DM], m^3/s	(1PE10.1) -1E-08 0.01000	OFF	11
Horizontal density gradient [HDG], m^3/s	(1PE10.1) -1E-08 0.01000	OFF	12
Vertical momentum [ADMZ], m^3/s	(1PE10.1) -1E-08 0.01000	OFF	13
Horizontal pressure gradient [HPG], m^3/s	(1PE10.1) -1E-08 0.01000	OFF	14
Gravity term channel slope [GRAV], m^3/s	(1PE10.1) -1E-08 10.0000	OFF	15
		CDPLTC	#
Dissolved organic carbon, g/m^3	1.00000 -1.0000 3.00000	OFF	1
Particulate organic carbon, g/m^3	1.00000 -1.0000 25.0000	OFF	2
Total organic carbon, g/m^3	1.00000 -1.0000 50.0000	OFF	3
Dissolved organic nitrogen, g/m^3	1.00000 -1.0000 25.0000	OFF	4
Particulate organic nitrogen, g/m^3	1.00000 -1.0000 25.0000	OFF	5
Total organic nitrogen, g/m^3	1.00000 -1.0000 25.0000	OFF	6
Total Kheldahl Nitrogen, g/m^3	1.00000 -1.0000 5.00000	OFF	7
Total nitrogen, g/m^3	1.00000 -1.0000 50.0000	OFF	8
Dissolved organic phosphorus, mg/m^3	1000.00 -1.0000 15.0000	OFF	9
Particulate organic phosphorus, mg/m^3	1000.00 -1.0000 15.0000	OFF	10
Total organic phosphorus, mg/m^3	1000.00 -1.0000 25.0000	OFF	11
Total phosphorus, mg/m^3	1000.00 -1.0000 -1.0000	OFF	12
Algal production, g/m^2/day	1.00000 -1.0000 5.00000	OFF	13

Chlorophyll a, mg/m^3	1000.00 -1.0000	-70.000	OFF	14
Total algae, g/m^3	1.00000 -1.0000	5.00000	OFF	15
Oxygen % Gas Saturation	1.00000 -5.0000	145.000	OFF	16
Total suspended Solids, g/m^3	1.00000 -1.0000	60.0000	OFF	17
Total Inorganic Suspended Solids, g/m^3	1.00000 -1.0000	50.0000	OFF	18
Carbonaceous Ultimate BOD, g/m^3	1.00000 -1.0000	20.0000	OFF	19
рН	1.00000 6.00000	9.00000	OFF	20
CO2	1.00000 -1.0000	10.0000	OFF	21
HCO3	1.00000 -1.0000	10.0000	OFF	22
CO3	1.00000 -1.0000	10.0000	OFF	23

An example of the same graph file but for Version 3.2 is shown below:

Hydrodynamic, constituent, and derived constituent names, formats, multipliers, and array viewer controls

HNAME	FMTH	HMULT	HMIN	HMAX	HPLTC
# Timestep violations [NVIOL]	(I10)	1.0	-1.0	1.0	OFF
1 Horizontal velocity [U], m/s	(Z10.8)	1.0	1000	0.15	ON
2 Vertical velocity [W], m/s	(Z10.8)	1.0	1E-6	-0.01	OFF
3 Temperature [T1], <o></o> C	(Z10.8)	1.0	-10.0	-26.0	ON
Density [RHO], g/m^3	(Z10.8)	1.0	997.0	1005.0	OFF
5 Vertical eddy viscosity [AZ], m^2/s	(Z10.8)	1.0	-1E-08	0.01	OFF
6 Velocity shear stress [SHEAR], 1/s^2 7	(Z10.8)	1.0	-1E-08	0.01	OFF
Internal shear [ST], m^3/s	(Z10.8)	1.0	-1E-08	0.01	OFF
Bottom shear [SB], m^3/s	(Z10.8)	1.0	-1E-08	0.01	OFF
9 Longitudinal momentum [ADMX], m^3/s	(Z10.8)	1.0	-1E-08	0.01	OFF
10 Longitudinal momentum [DM], m^3/s 11	(Z10.8)	1.0	-1E-08	0.01	OFF
Horizontal density gradient [HDG], m^3/s	(Z10.8)	1.0	-1E-08	0.01	OFF
12 Vertical momentum [ADMZ], m^3/s	(Z10.8)	1.0	-1E-08	0.01	OFF
13 Horizontal pressure gradient [HPG], m^3/s	(Z10.8)	1.0	-1E-08	10.0	OFF
14 Gravity term channel slope [GRAV], m^3/s 15	(Z10.8)	1.0	0.0	0.0	OFF
CNAME	FMTC	CMULT	CMIN	CMAX	CPLTC
# TDS, g/m^3	(Z10.8)	1.0	-1.0	200.0	OFF
1 Age, days	(Z10.8)	1.0	-1.0	-200.0	ON
2 Tracer, g/m^3	(Z10.8)	1.0	-20.000	100.0	OFF
3 Bacteria, col/100ml	(Z10.8)	1.0	-20.000	100.0	OFF
4 Conductivity, mhos	(Z10.8)	1.0	-20.000	100.0	OFF
5 Chloride, mg/l	(Z10.8)	1.0	-20.000	100.0	OFF
6 ISS, g/m^3	(Z10.8)	1.0	-20.000	100.0	OFF
7 Phosphate, g/m^3 8	(Z10.8)	1000.0	-1.0	500.0	OFF

Ammonium, g/m^3	(Z10.8)	1000.0	-0.1000	300.0	OFF
9 Nitrate-Nitrite, g/m^3	(Z10.8)		-0.1000	5.0	OFF
10 Dissolved silica, g/m^3	(Z10.8)	1.0	-1.0	10.0	OFF
11 Particulate silica, g/m^3	(Z10.8)	1.0	-0.2000	15.0	OFF
12 Total iron, g/m ³	(Z10.8)	1.0	-0.1000	2.0	OFF
13 Labile DOM, g/m^3	(Z10.8)		-0.1000	-3.0	OFF
14 Refractory DOM, g/m^3	(Z10.8)	1.0	-0.1000	-4.0	OFF
15 Labile POM, g/m^3	(Z10.8)	1.0	-0.1000	-3.0	OFF
16 Refractory POM, g/m^3	(Z10.8)		-0.1000	-4.0	OFF
17 CBOD1, g/m^3	(Z10.8)		-0.0100	3.0	OFF
18 CBOD2, g/m^3	(Z10.8)		-0.0100	3.0	OFF
19 CBOD3, g/m^3	(Z10.8)		-0.0100	3.0	OFF
20 CBOD4, g/m^3	(Z10.8)		-0.0100	3.0	OFF
21 CBOD5, q/m^3	(Z10.8)		-0.0100	3.0	OFF
22 Algae, g/m ³	(Z10.8)		-0.0100	3.0	OFF
Dissolved oxygen, g/m^3	(Z10.8)		-0.0100	-1.0	OFF
24 Inorganic carbon, g/m^3	(Z10.8)		-0.0100	3.0	OFF
	(210.0)	1.0	0.0100	3.0	OFF
25	/710 O\	1 0	0 0100	2 0	OFF
Alkalinity, g/m^3	(Z10.8)	1.0	-0.0100	3.0	OFF
Alkalinity, g/m^3		1.0	-0.0100	3.0 CDMAX	OFF CDPLTC
Alkalinity, g/m^3 26CDNAME# Dissolved organic carbon, g/m^3					
Alkalinity, g/m^3 26CDNAME# Dissolved organic carbon, g/m^3 1 Particulate organic carbon, g/m^3	FMTCD	CDMULT	CDMIN	CDMAX	CDPLTC
Alkalinity, g/m^3 26	FMTCD (F10.3)	CDMULT	CDMIN -1.0	CDMAX 25.0	CDPLTC OFF
Alkalinity, g/m^3 26CDNAME# Dissolved organic carbon, g/m^3 1 Particulate organic carbon, g/m^3 2	FMTCD (F10.3) (F10.3)	CDMULT 1.0 1.0	CDMIN -1.0 -1.0	CDMAX 25.0 50.0	CDPLTC OFF OFF
Alkalinity, g/m^3 26	FMTCD (F10.3) (F10.3) (F10.3)	CDMULT 1.0 1.0	CDMIN -1.0 -1.0	CDMAX 25.0 50.0 25.0	CDPLTC OFF OFF
Alkalinity, g/m^3 26	FMTCD (F10.3) (F10.3) (F10.3)	CDMULT 1.0 1.0 1.0	CDMIN -1.0 -1.0 -1.0 -1.0	CDMAX 25.0 50.0 25.0 25.0	CDPLTC OFF OFF OFF
Alkalinity, g/m^3 26	FMTCD (F10.3) (F10.3) (F10.3) (F10.3)	CDMULT 1.0 1.0 1.0 1.0	CDMIN -1.0 -1.0 -1.0 -1.0 -1.0	CDMAX 25.0 50.0 25.0 25.0	CDPLTC OFF OFF OFF OFF
Alkalinity, g/m^3 26	FMTCD (F10.3) (F10.3) (F10.3) (F10.3) (F10.3)	1.0 1.0 1.0 1.0 1.0	CDMIN -1.0 -1.0 -1.0 -1.0 -1.0 -1.0	CDMAX 25.0 50.0 25.0 25.0 25.0 50.0	CDPLTC OFF OFF OFF OFF
Alkalinity, g/m^3 26	FMTCD (F10.3) (F10.3) (F10.3) (F10.3) (F10.3) (F10.3)	CDMULT 1.0 1.0 1.0 1.0 1.0 1.0 1.0	CDMIN -1.0 -1.0 -1.0 -1.0 -1.0 -1.0 -1.0	CDMAX 25.0 50.0 25.0 25.0 25.0 50.0	CDPLTC OFF OFF OFF OFF OFF
Alkalinity, g/m^3 26	FMTCD (F10.3) (F10.3) (F10.3) (F10.3) (F10.3) (F10.3) (F10.3)	CDMULT 1.0 1.0 1.0 1.0 1.0 1.0 1.0 1.	CDMIN -1.0 -1.0 -1.0 -1.0 -1.0 -1.0 -1.0	CDMAX 25.0 50.0 25.0 25.0 25.0 50.0 15.0	CDPLTC OFF OFF OFF OFF OFF OFF
Alkalinity, g/m^3 26	FMTCD (F10.3) (F10.3) (F10.3) (F10.3) (F10.3) (F10.3) (F10.3)	CDMULT 1.0 1.0 1.0 1.0 1.0 1.0 1.0 1.	CDMIN -1.0 -1.0 -1.0 -1.0 -1.0 -1.0 -1.0 -1.0	CDMAX 25.0 50.0 25.0 25.0 25.0 50.0 15.0 25.0	CDPLTC OFF OFF OFF OFF OFF OFF
Alkalinity, g/m^3 26	FMTCD (F10.3) (F10.3) (F10.3) (F10.3) (F10.3) (F10.3) (F10.3) (F10.3)	CDMULT 1.0 1.0 1.0 1.0 1.0 1.0 1.0 1.	CDMIN -1.0 -1.0 -1.0 -1.0 -1.0 -1.0 -1.0 -1.0	CDMAX 25.0 50.0 25.0 25.0 25.0 15.0 15.0 25.0 -1.0	CDPLTC OFF OFF OFF OFF OFF OFF OFF
Alkalinity, g/m^3 26	FMTCD (F10.3) (F10.3) (F10.3) (F10.3) (F10.3) (F10.3) (F10.3) (F10.3) (F10.3)	CDMULT 1.0 1.0 1.0 1.0 1.0 1.0 1.0 1.	CDMIN -1.0 -1.0 -1.0 -1.0 -1.0 -1.0 -1.0 -1.0	CDMAX 25.0 50.0 25.0 25.0 25.0 50.0 15.0 15.0 25.0 -1.0 5.0	CDPLTC OFF OFF OFF OFF OFF OFF OFF
Alkalinity, g/m^3 26	FMTCD (F10.3)	CDMULT 1.0 1.0 1.0 1.0 1.0 1.0 1.0 1.	CDMIN -1.0 -1.0 -1.0 -1.0 -1.0 -1.0 -1.0 -1.0	CDMAX 25.0 50.0 25.0 25.0 25.0 15.0 15.0 25.0 25.0 25.0 20.0	CDPLTC OFF OFF OFF OFF OFF OFF OFF OFF

Total algae, g/m^3	(F10.3)	1.0	-1.0	60.0	OFF
Oxygen % Gas Saturation 16	(F10.3)	1.0	-1.0	50.0	OFF
Total suspended Solids, g/m^3	(F10.3)	1.0	-1.0	5.0	OFF
Total Inorganic Suspended Solids,g/m^3	(F10.3)	1.0	-1.0	20.0	OFF
Carbonaceous Ultimate BOD, g/m^3	(F10.3)	1.0	5.0	9.0	OFF
рн 20	(F10.3)	1.0	-1.0	10.0	OFF
CO2	(F10.3)	1.0	-1.0	10.0	OFF
21 HCO3	(F10.3)	1.0	-1.0	10.0	OFF
22 CO3	(F10.3)	0.0	0.0	0.0	OFF
23					

In Version 3.2, the user has format control of all output variables, as well as MULT control (see User Manual). In Version 3.1, some groups had one but not the other. Also, in Version 3.2, the groups (HNAME, CNAME, CDNAME) were reordered.

11. Appendix B: BUG FIXES AND ENHANCEMENTS BETWEEN VERSIONS

There have been many updates and bug fixes between model versions. Even though some model updates have not been documented, we have tried to be diligent in outlining code updates since Version 3.7 between model versions. We have included below a series of tables with code fixes for multiple versions of CE-QUAL-W2 as a reference to earlier versions.

W2 V4.2 Bug Fixes, Enhancements, and User Manual Changes

Table 3 shows a list of model bug fixes since the prior release of CE-QUAL-W2 Version 4.1. Note that some of these fixes were documented before the first release of Version 4.2.

Table 3. List of bug fixes and enhancement code changes since CE-QUAL-W2 Version 4.2 was released. Note that shaded areas toggle between release versions.

#	Code: W2 or	Fix or En-	Description of Bug/Enhancement	Date Fixed or
	PREW2 or	hancement		Enhancement
	GUI	Type		added
1	W2	Particle track- ing	Fixed a bug when a particle was in the "air" above the water surface when in a river a 'deep slot' was added to the river bathymetry to keep it hydrated. Also, fixed a reflection error off the surface for vertical movement of the particle.	12/26/2018
2	W2	Particle track- ing	For file output for finalparticle.csv, adjusted header so that it would be general for any number of monitoring stations. Previously the header was hard-wired to write only 3 monitoring locations in the title. This does not affect prior model output information only the title header.	1/3/2019
3	PREW2	Pipe invert	The preprocessor gave a 'false' error for an invert elevation being below the grid in some rare cases. This has been fixed. The model was not affected.	1/21/2019
4	W2	TN	There was a bug in the calculation of TN when large concentrations of zooplankton were present. If zooplankton were not simulated or they were a small population, there would be no impact of this TN bug. Bug fixed.	1/29/2019

#	Code: W2 or PREW2 or	Fix or En- hancement	Description of Bug/Enhancement	Date Fixed or Enhancement
5	W2	Type Epiphyton periphyton burial and conversion to LPOM and sediments	The User Manual showed that the epiphyton parameter EB, burial rate, was in units of m/day. The model implemented this and also computed the cell layer burial rate as EB*EC (concentration of biomass per cell volume) * Surface area/Volume of a cell or EB*EC/H where H is the layer thickness. In reality though it should be the thickness of the periphyton layer. But	added 3/5/2019
			that layer thickness is not predicted by the model. Hence, the decision was to change the burial rate to units of 1/day such that the loss of epiphyton by burial would follow a first order decay process (similar to the first order sediment model) as EB*EC. Hence, this burial rate is no longer a function of the grid. Also, there was the conversion of organic matter and nutrients at death to the sediment P, N and C compartments whereas they should go directly to LPOM first. Hence only burial goes directly into the sediment compartments.	
6	W2	Output files	Code was written to print the initial condition in output files at time t=0 at the start of the simulation.	3/5/2019
7	W2	Restart with Sediment Dia- genesis	Prior to this date, the restart option did not work with sediment diagenesis turned ON. This enhancement has been coded and debugged and is now working.	7/1/2019
8	W2	Dynamic load- ing	This is a new feature in CE-QUAL-W2 and applies to linear waterbodies in series. For example, if one has a river system with 9 waterbodies, the model user can break the model into 9 separate models and run them all in parallel where the downstream model dynamically updates its boundary conditions as the upstream model moves forward in time. This has resulted in significant time savings for model runs (90%).	7/1/2019
9	W2	Sediment Diagenesis	Output files were updated to write csv files that can be plotted easily in Excel. The older output files for sediment diagenesis were hard to graph formatted text output files. All internal writes for warnings are now written to the W2 warning file, w2.wrn, and all errors are written to the w2.err output file.	7/1/2019
10	W2	Sediment Diagenesis	Bug fixes were made to the scour section of the model. The code had several errors based on the documentation from CEMA. These have been fixed and synchronized with the description in the CEMA sediment diagenesis report. Thanks to Lindsay Bearup at the USBR! Also, the scour model was not set-up for both Chezy and Manning's friction factors. This code was generalized.	7/1/2019
11	W2	Output files	Output files were not initialized properly for w2.wrn during a restart. This was fixed allowing the w2.wrn file to be appended to rather than over-written.	7/1/2019

#	Code: W2 or	Fix or En-	Description of Bug/Enhancement	Date Fixed or
	PREW2 or GUI	hancement Type		Enhancement added
12	W2	Code updates	Pointers were allocated memory in the ALLOCATE command. This was non-standard Fortran usage and was fixed. There were extra calls to Kinetic_Rates and Temperature_Rates subroutines that were unnecessary during layer addition and in the INIT subroutine.	7/1/2019
13	W2	TDG	A new algorithm for TDG production at spillways, SYSTDG, was implemented in Version 4.2. This is a more detailed TDG correlation equation compared with the existing algorithms in Version 4.1 and before. The primary application was for the Columbia and Snake River dams. A separate technical memo is included with the User Manual on this new process.	7/1/2019
14	W2	opt to csv	Flux output files were changed from a file type opt to csv to facilitate graphing in Excel. Structure output files for the auto port selection were changed from opt to csv.	7/1/2019
15	W2	Contour out- put	The Tecplot and regular Contour output was not working for cases when branches went inactive. This has been fixed.	7/1/2019
16	W2	Sediment diagenesis	The input file for sediment diagenesis has been changed from w2_CEMA_input.npt to w2_diagenesis.npt for clarity of naming files. All output files have also been changed to include 'Diagenesis' as the first word and eliminating 'CEMA'. For example the file CEMALogFile.opt was changed to DiagenesisLogFile.opt.	7/1/2019
17	W2	Withdrawal	In the withdrawal subroutine, the kt index needed to be defined twice. Below is an example of the fix in 2 places: (1) ELR = SINA(JB)*DLX(ID)*0.5 ! CB 10/14/11	8/1/2019
18	W2	Branch inac- tive	The BR_INACTIVE flag that skips output in a branch that was inactive was dimensioned with the wrong variable for the CPL output (Tecplot output). This has been corrected.	8/27/2019
19	W2	Tecplot Branch	There is a new input file to specify what branches the user wants for Tecplot output, called TecplotBr.csv. This allows the user to only pick some of the branches rather than all of them for Tecplot output.	8/27/2019

#	Code: W2 or PREW2 or GUI	Fix or En- hancement Type	Description of Bug/Enhancement	Date Fixed or Enhancement added
20	Prew2	False warning	A false warning was sometimes activated for pipes for DYNPIPE when in fact was ON or OFF as required. This was fixed. Below is final code fix: IF ((DYNPIPE(JP) /= ' ON') .AND. (DYNPIPE(JP) /= ' OFF')) THEN CALL ERRORS WRITE (ERR,FMTI) 'Pipe DYNAMIC PIPE control [DYNPIPE='//DYNPIPE(JP)(4:8)//'] must be either "ON" or "OFF" for pipe	8/27/2019
21	W2	str_brX.opt	Structure output file, str_brX.opt, for automatic port selection was changed from a text delimited *.opt file to a comma delimited *.csv file	8/28/2019
22	W2	Auto Port Se- lection	The split algorithm for the auto port selection based on temperature now can read an input file of dynamic temperatures rather than relying on multiple rules with different fixed temperatures.	8/30/2019
23	W2	Tecplot	Tecplot output under the CPL output was not set up for restart properly. Tecplot output files now should work for cases where there are model restarts.	9/4/2019
24	W2	Water age	The code below for water age correction as a result of evaporation (a very minor adjustment) was incorrect: The old code was IF (AERATEC == "ON") CALL AERATEMASS IF (EVAPORATION (JW) .AND. WATER_AGE_ACTIVE) THEN ! CORRECT WATER AGE FOR EVAPORATION SR 7/27/2017 DO I=IU, ID JC=NGCS+JG_AGE-1 CSSB(KT,I,JC)=CSSB(KT,I,JC)-EV(I)*CG(KT,I,JC) ENDDO ENDIF The updated code is IF (AERATEC == "ON") CALL AERATEMASS IF (EVAPORATION (JW) .AND. WATER_AGE_ACTIVE) THEN ! CORRECT WATER AGE FOR EVAPORATION SR 7/27/2017 DO I=IU, ID JC=NGCS+JG_AGE-1 CSSB(KT,I,JC)=CSSB(KT,I,JC)-EV(I)*CG(KT,I,JG_AGE) ENDDO ENDIF	10/17/2019
25	W2	Pipe algorithm	The pipe algorithm was revised to reduce issues with pipe algorithm instabilities. There is error trapping to reduce the prevalence of growing instabilities from a water surface slope that becomes unstable.	11/1/2019

#	Code: W2 or PREW2 or GUI	Fix or En- hancement Type	Description of Bug/Enhancement	Date Fixed or Enhancement added
26	W2	W2 fixes	Small fixes that do not affect the model user: Eliminated the unused variable PHISET and changed INTEGER*8 variables in the SYSTDG algorithm to INTEGER*4. Thanks to Stewart Rounds USGS for noting these items.	11/13/2019
27	W2	Turbidity	Turbidity can be used through the sediment diagenesis model as a derived variable. This will shortly be moved to a derived constituent in W2 and taken out of the sediment diagenesis subroutine. There was a coding error in the turbidity routine that was fixed: !CellTSSValue = C1(K,SegNumI,6) !CellTSSValue = TOTSS(K,SegNumI) !SW 11/15/2019	11/15/2019
28	W2	Examples and User Manual	The kinetic flux output order for DOEP and DOAR was reversed in a couple of the input files in the model example files (in w2_con.npt) and in one place in the User Manual. These were corrected.	11/15/2019

#	Code: W2 or PREW2 or GUI	Fix or En- hancement Type	Description of Bug/Enhancement	Date Fixed or Enhancement added
29	W2	Branch Active	In the process of setting inflows to upstream inactive branches to branches that were still active, the following code was updated for complex, multi-waterbody systems: [Chris Berger] IF (BR INACTIVE (JB)) THEN! CONVERT INFLOWS TO TRIBS SET TO THE CUS (1) LOCATION JTT=JTT+1 !IF (JTT)=CUS (1)! HARDWIRED TO FIRST BRANCH ITR (JTT)=CUS (jbdn(jw))! changed HARDWIRE TO JBDN BRANCH! cb 11/20/19 QTR (JTT) = QIN (JB) ! including tributary flows for inactive branches DO JW=1, NWB ! cb 11/20/19 KT = KTWB (JW) DO JB=BS (JW), BE (JW) IF (BR INACTIVE (JB)) then IU = CUS (JB) ID = DS (JB) IF (TRIBUTARIES) THEN DO JT=1, JTT !********** Inflow fractions IF (JB == JBTR (JT)) THEN I = cus (jbdn (jw)) ! placing tributary flows in upstream end of main branch QTRF (KT:KB (I), JT) = 0.0 KTTR (JT) = KB (I) KTTR (JT) = KB (I) KTTR (JT) = MAX (KT, KTTR (JT)) KBTR (JT) = MAX (KT, KTTR (JT)) IF (KBTR (JT) = MAX (KT, KTTR (JT)) BHSUM = 0.0 DO K=KTTR (JT), KBTR (JT) QTRF (K, JT) = BH2 (K, I) / BHSUM END DO DO K=KTTR (JT), KBTR (JT) QTRF (K, JT) = BH2 (K, I) / BHSUM END DO DO K=KTTR (JT), KBTR (JT) QSS (K, I) = QSS (K, I) + QTR (JT) / QTRF (K, JT) END IF END DO END IF end if end do end do end do	11/22/2019

#	Code: W2 or PREW2 or GUI	Fix or En- hancement Type	Description of Bug/Enhancement	Date Fixed or Enhancement added
30	W2	Type WRN output	The warning output format was improved when there were volume balance errors — thanks to Stewart Rounds, who defies retirement to provide model improvements!! In the subroutine, balances.f90, the new code is shown below: If (VOLUME_WARNING) THEN WRITE (WRN, '(A,F0.4,/A,I0,A,I0,A,I0,3(:/A,E15.8,A))') 'COMPUTATIONAL WARNING AT JULIAN DAY = ',JDAY, & 'WATERBODY=', JW, ', BRANCH=', JB, ', KT=', KT, & 'SPATIAL CHANGE =', VOLSBR(JB), 'M^3', & 'VOLUME ERROR =', VOLSBR(JB), 'M^3', & 'VOLUME ERROR =', VOLSBR(JB)-VOLTBR(JB), 'M^3', 'SR 11/16/19 WRITE (WRN,*) 'LAYER CHANGE:', LAYERCHANGE(JW) WRITE (WRN,*) 'SZ', SZ (CUS(JB):DS(JB)), 'Z', Z (CUS(JB):DS(JB)), 'H2KT', H2 (KT,CUS(JB):DS(JB)), 'WSE', ELWS(CUS(JB):DS(JB)), 'Q', Q (CUS(JB):DS(JB)), 'ELWS(CUS(JB):DS(JB)), 'T1', T1 (KT,CUS(JB):DS(JB)), 'T1', T1 (KT,CUS(JB):DS(JB)), 'T1', T2 (KT,CUS(JB):DS(JB)), 'QIN', QINSUM(JB), & 'QTR', QTR, 'QWD', QWD !SR 11/16/19	12/2/2019
			WARNING_OPEN = .TRUE.	

#	Code: W2 or	Fix or En-	Description of Bug/Enhancement	Date Fixed or
	PREW2 or	hancement		Enhancement
	GUI	Туре		added
31	W2	W2 Error Dump	The W2ErrorDump.opt file output format was changed to be easier to analyze. The file was changed to W2ErrorDump .csv to facilitate opening in Excel and for general plotting. The new code is from Stewart Rounds and is found in endsimulation.f90. Old code: !OPEN(W2ERR,FILE='W2Errordump.opt',status='unknown') !WRITE(w2err,*)'JDAY',jday,'SZ',sz,'Z',z,'H2KT',h2(kt,1:imx),'H1KT',h1(kt,1:imx),'BHR1',bhr1(kt,1:imx),'BHR2',bhr2(kt,1:imx),'W5E',elws,'Q',q,'QC',qc,'QERR',qerr,'T1',t1(kt,1:imx),'T2',t2(kt,1:imx),'SUKT',su(kt,1:imx),& ! 'UKT',u(kt,1:imx),'QIN',qin,'QTR',qtr,'QWD',qwd New Code: OPEN (W2ERR,FILE='W2Errordump.csv',status='unknown')	12/30/2019
			END DO END DO END DO	
32	W2	Multiple Wa-	Stewart Rounds improved on the code presented in	1/2/2020
		terbody	Version 4.2. Instead of writing and reading restart	, ,
		,	files, the code waited for the updates before proceed-	
			ing. This led to code changes in many subroutines.	
			Also, the downstream model can now wait for input	
			from multiple upstream files rather than just one. This	
			update is described in the User Manual and is part of	
			the Version 4.2.1 model update because of a new in-	
			put file format for the multiple waterbody input file.	

#	Code: W2 or	Fix or En-	Description of Bug/Enhancement	Date Fixed or
	PREW2 or GUI	hancement Type		Enhancement added
33	PREW2	Preprocessor	A new feature was added to the preprocessor — a new windows pops up with errors if they are present. This avoids having to open the pre.err file in a word processor in case there were errors.	3/15/2020
34	W2	Pump	Added features were added to the pump algorithm. This allows for the flow through a pump to be controlled by the downstream water level, rather than just the upstream level. If this is the case, then a negative downstream segment number is used. This also changes the logic of ELON and ELOFF. This has been updated in the User Manual also.	3/15/2020
35	W2/PREW2	Control file	A new control file option was created in Excel using a comma delimited control file, w2_con.csv. This control file is a lot simpler to use than the text file w2_con.npt because (1) strict formatting by spaces is not required, (2) easier to cut and paste large sections withing Excel, (3) variable explanations are available in Column A, (4) the graph.npt file is no longer required and is incorporated into the Excel based input file, and (5) there is a one-button function to write the input file into csv format for reading into the W2 code. This file also has many other advantages in setting up output and more intuitive variable placement (i.e., the order of the old w2_con.npt is not strictly followed.) The only negative is that it breaks the GUI W2_Control which is not necessary other than the nice visualization bathymetry tools. But many of those are in the w2Tools post-processor. There is currently not a converter from the old format to the new one. But the model executable and preprocessor work with either control file.	4/16/2020
36	W2	TSR	TSR model output headers were improved. The P, N, and Light limitation for algae headers (APLIM, ANLIM, ALLIM) now show the algae group number rather than	5/3/2020
37	Converter	Control file	a generic header, such as PLIM_ALG1. A control file converter utility and description was added to the download package. This utility converts the control file (w2_con.npt) to a format using Excel.	5/22/2020
39	PreW2	More checks	Several additional model checks were added to the preprocessor to improve its skill set.	5/22/2020 6/15/2020

#	Code: W2 or PREW2 or	Fix or En- hancement	Description of Bug/Enhancement	Date Fixed or Enhancement
	GUI	Туре		added
40	W2	Tecplot out- put	A new input file Tecplotbr.csv is now used to specify which branches are output to the Tecplot contour map. Before, all model branch information was output to the Tecplot file. Now the user can control this more precisely to eliminate a lot of post-processing of the data file. This is described in the User Manual.	5/22/2020
41	W2	CO2 in atmosphere	As the basis for Version 4.2.2, the CO2 gas saturation was redone. See User Manual Part 2 under TIC.	8/10/2020
42	Converter		Fixed a bug in writing out the csv format for the control file in case there were more than 1 withdrawals.	8/27/2020
43	W2	SPR ONV	Whenever the SPR was set equal to ONV for a w2_con.csv file, this output was not implemented correctly. For the input file w2_con.npt this worked as expected.	10/8/2020
44	Converter		Fixed a bug when NTR was exactly 9 (this bug also affected cases where NWB=9 or NBR=9). Also fixed some of the output formatting.	11/27/2020
45	W2	Pipe	A dimensioning bug was found when there were no pipes. This did not affect model results with the executable but did show up using the debugger in the Intel environment. This has been fixed. Many thanks to Jun Ma for noticing that!!	12/20/2020
46	W2/Pre/Con verter	Csv input	When converting to the Excel macro utility for the control file and when modeling a system with no tributaries, the columns read for distributed inflows and precipitation may have been read incorrectly. This was adjusted by fixing the converter utility, the preprocessor and W2 code.	2/17/2021
47	W2	Kinetic Flux	When there are layer subtractions, the Kinetic flux in the surface layer terms can not account for the mass. This did not affect the mass balance of the constituents, just the flux variables used for output. Many thanks for Taylor Adams of Hydros for finding that error. In layeraddsubtract.f90: KF(KT,I,KFCN(1:NAF(JW),JW)) = (KF(KT-1,I,KFCN(1:NAF(JW),JW))*VOL(KT-1,I)+KF(KT,I,KFCN(1:NAF(JW),JW))*VOL(KT-1,I)+KF(KT,I,KFCN(1:NAF(JW),JW))*VOL(KT-1,I)+VOL(KT,I)) ! SW Fix suggested by Taylor Adams Hydros 25Feb2021 ! KF is in units of g/m3/s KFS(KT-1,I,KFCN(1:NAF(JW),JW))+KFS(KT,I,KFCN(1:NAF(JW),JW)) ! SW Fix suggested by Taylor Adams Hydros 25Feb2021 ! KFS is in units of g KFS=KF*VOL*DT C1(KT-1,I,CN(1:NAC)) = 0.0	2/25/2021

W2 V4.1 Bug Fixes, Enhancements, and User Manual Changes

Table 4. Bug fixes and enhancements for Version 4.1.

1	Code: W2 or PREW2 or GUI PREW2	Fix or Enhancement Type Additional checks	Description of Bug/Enhancement Additional checks were added to the preprocessor for sediment decay temperature coefficients and stoichiometric coefficients. Concentration summaries in downstream and upstream head boundary conditions	Date Fixed or Enhance- ment added 5/19/2017
2	W2	DO Satura- tion	were added to the pre.opt file. The equation for computing dissolved oxygen saturation was a function of elevation and temperature. If the user set the water body type to SALT, the TDS or salinity was used to correct the dissolved oxygen saturation. The TDS correction for dissolved oxygen saturation was added to the fresh water computation also. The new code is highlighted below: SATO = EXP (7.7117- 1.31403*(LOG (T+45.93))*P IF (SALT_WATER) THEN SATO = EXP (LOG (SATO) - SAL*(1.7674E-2- 1.0754E1/(T+273.15)+2.1407E3/(T+273.15)** 2))	5/21/2017
3	W2	Sediment diagenesis output	Another line was added to the sediment diagenesis input file for the frequency of output. Prior to this it used the TSR output frequency and wrote out duplicate results if there was more than 1 waterbody.	5/25/2017
4	W2	Initialize var- iables	DLVOL, VOLTBR, EVBR, and QSUM were added to the initialized variables in INIT.F90. This only affects the Fortran compiler when it is in debug model. In the release executable all variables are initialized to zero even if not explicitly set to zero.	7/24/2017

#	Code: W2 or PREW2	Fix or En- hancement	Description of Bug/Enhancement	Date Fixed or Enhance-
	or GUI	Туре		ment added
5	W2	Sediment diagenesis code updates	We have deleted unused variables and array initializations. This has improved the speed of running the model with sediment diagenesis. These code areas are: !SP CEMA if(sediment_diagenesis)then If(CEMARelatedCode .and. IncludeBedConsolidation)Call ComputeCEMARelatedSourceSinks ! If(CEMARelatedCode .and. Include-CEMASedDiagenesis)Call ComputeCEMADiagenesisSourceSinks SW 6/27/2017 end if !End SP CEMA !SP CEMA !SP CEMA	7/24/2017
			! If(CEMARelatedCode .and. In- cludeBedConsolidation)TSS = 0.0 ! SW 7/27/2017 !end if !End SP CEMA !SP CEMA !if(sediment_diagenesis)then ! CEMATSSCopy = TSS !end if !End SP CEMA	
6	PREW2	Sediment diagenesis	Additional error checking for the sediment diagenesis model was added to the preprocessor. In this case, whenever SOD was not set to zero, an error is displayed.	7/24/2017
7	W2	Assorted code improvements	Stewart Rounds of the USGS suggested a few minor updates: eliminated extra right-parentheses in a format description for time series output (the Intel compiler allowed them!), added WARNING_OPEN and ERROR_OPEN = .TRUE. in several cases where output is written to these files, and eliminated a situation where the derived output file at a withdrawal point was not written out if the file is empty. Also, for water age, evaporation should not concentrate the 'age'. Hence code was added to recognize water age and to eliminate the effect of evaporation on water age.	7/27/2017
8	W2	Branch ac- tive or inac- tive	In the W2 model, if a model branch became dehydrated, the model would not continue running. In order to allow for wide varieties of water levels, users would often have to add numerous deep fictitious layers to keep a branch hydrated. Now the model can handle branches becoming active or inactive automatically. Code was added to allow branches to become active as they fill up or to become inactive if they lose their water. Also, any branch inflows or tributaries entering inactive branches are automatically moved to the current active segment of the nearest hydrated branch.	7/27/2017

#	Code: W2 or PREW2 or GUI	Fix or En- hancement Type	Description of Bug/Enhancement	Date Fixed or Enhance- ment added
9	W2	RPOMN	Stewart Rounds, USGS, found this one. The if test below used NRPOMP rather than NRPOMN. Usually both NRPOMN and NRPOMP are both 'ON', so for most applications this should not affect the model user. OLD Code: IF(CAC(NRPOMP) == 'ON')THEN IF(RPOM(K,I).GT.0.0)THEN ORGNRP(K,I)=RPOMN(K,I)/RPOM(K,I) NEW Code: IF(CAC(NRPOMN) == 'ON')THEN IF(RPOM(K,I).GT.0.0)THEN ORGNRP(K,I)=RPOMN(K,I)/RPOM(K,I)	8/2/2017
10	W2	Screen Dia- log Box	Under some unique conditions, exiting the W2 dialog box reinitializes some of the output files. Added code was inserted to STOP program execution after closing the dialog box.	8/23/2017
11	W2	Sediment Diagenesis	Flux rates for P, NH3, and NO3 were added to the MASSBAL output file from sediment diagenesis so that a complete N and P balance can be evaluated for a waterbody.	8/31/2017
12	W2	Particle Tracking	Particle tracking algorithm has been added and documentation in a separate report added to the model release	8/31/2017
13	W2	Opt to csv file	Changed flowbal.opt and massbal.opt to flowbal.csv and massbal.csv in order to facilitate opening inn Excel.	8/31/2017
14	W2	Gate file	The gate file was inadvertently not converted over to a csv format in the earlier Version 4.0 code. The 4.1 code was updated to include csv gate files.	9/26/2017

#	Code: W2 or PREW2	Fix or En- hancement	Description of Bug/Enhancement	Date Fixed or Enhance-
	or GUI	Туре		ment added
15	W2	Shading	Added code to allow for a canopy shading in addition to dynamic shading. The DYNSH in the shade input file can now be a negative number between -1 and 0. This will activate dynamic shading and taking the absolute value of this number will reduce the short wave solar radiation by a fixed fraction as if some of the channel has a canopy. Of course canopy cover is more complex than this small correction since it also affects longwave radiation transfer. New code is highlighted below: SN = MIN (HT*ABS (SIN (ABS (PHI0(I)-AZ00)))/TAN (A0)-EDGE,BI(KT,I)) SFACT = SRED*SN/BI(KT,I) 100 CONTINUE SHADE(I) = MAX (0.0,1-SFACT) SHADE(I) = MIN(ABS(SHADEI(I)),SHADE(I)) ! SN 10/2/2017 Allows for fixed canopy cover over top of channel - only used if shade is less than shadei only valid for -0.99 and 0.0 Hence if DYNSH (or SHADEI) in the code were -0.9 and the dynamic shading algorithm computed the shade factor as 0.95 (which is a 5% reduction in short wave solar), the code would use 0.9 or a 10% reduction in short-wave solar. If the dynamic shade algorithm computed the shade recovery than the fixed rate the minimum short-wave solar. If the dynamic shade algorithm computed the shade recovery than the fixed rate the minimum short-wave solar. If the dynamic shade algorithm computed the shade recovery than the fixed rate the minimum short-wave solar.	10/3/2017
1.6	14/2	Cadina aut Di	putes a shade greater than the fixed rate, the minimum of these is used.	10/2/2017
16	W2	Sediment Diagenesis	Changed back to the original segment width at the bottom for sediment diagenesis so that this algorithm replicates the original CEMA sediment diagenesis algorithm. Pulled out the CellArea as a dimensioned variable computed only once rather than for each cell at each time step. Also, added a control variable to turn ON/OFF Bubbles calculation. This saves much computational time and until the Bubbles subroutine is vetted we do not recommend its use. Also several code fixes were made in the sediment diagenesis module for mistakes in the original algorithm.	10/3/2017, 10/22/2017
17	W2	User Manual	The User Manual was updated fixing minor errors and typos and adding discussion of new features of Version 4.1. This is Revision 1 of the 4.1 Manual but includes updates and fixed typos from the Version 4.0 Manual and explanations of new features.	10/3/2017
18	W2	Kinetic fluxes for ADD Layer	A bug was corrected in the Kinetic Flux layer addition code as shown below: KFS(KT,I,KFCN(1:NAF(JW),JW)) = KFS(KT+1,I,KFCN(1:NAF(JW),JW)) !KF(KT+1,I,KFCN(1:NAF(JW),JW)) CODE ERROR FIX SW 10/24/2017 This does not affect fluxes in the TSR file, only the cumulative fluxes (KFS) during an add layer event for the surface layer only.	10/24/2017

#	Code: W2 or PREW2 or GUI	Fix or En- hancement Type	Description of Bug/Enhancement	Date Fixed or Enhance- ment added
19	W2	Header	Changed header for flux for DO reaeration from just source to source/sink which can occur during supersaturation. KFNAME(64) = 'DO reaeration - source/sink, kg/day	10/24/2017
20	W2	Fluxes	In the file, kfl_wbX.opt where X is the waterbody number, the fluxes are presented in the same format as a snapshot file. The headers showed fluxes in kg/d but they were in kg. This has been corrected. The fluxes in kg/d in the file kflux_wbX.opt were already in the correct units of kg/d. Also, added the following code since KT would have been from the prior waterbody rather than the current waterbody: DO JW=1,NWB KT = KTWB(JW) ! SW 10/25/2017 IF (FLUX(JW)) CALL KINETIC_FLUXES END DO	10/24/2017
21	W2	Pumps	Changed some of the logic for pumps to avoid settings for older values influencing the current settings. The following code was added to hydroinout.f90: ILAT = 0 JWW = NWD withdrawals = jww > 0 if(nwdt>nwd)qwd(nwd+1:nwdt)=0.0 ! SW 10/30/2017 JTT = NTR tributaries = jtt > 0 if(ntrt>ntr)qtr(ntr+1:ntrt)=0.0 ! SW 10/30/2017 JSS = NSTR	10/30/2017

#	Code: W2 or PREW2 or GUI	Fix or En- hancement Type	Description of Bug/Enhancement	Date Fixed or Enhance- ment added
22	W2	TDG at spill- way	Since the new implementation of the TDG algorithm, the withdrawal.f90 algorithm at spillways had not been updated properly. This fix applies to the computation of TDG at spillways and gates. The old and new code are shown below: !if(tdgon)then ! cb 11/6/17 !cdavg(js,jb,16) = (cavg(js,jb,ndo)/exp(7.7117- 1.31403*(log(tavg(js,jb)+45.93)))*palt(id))*1 00.0 dosat=exp(7.7117- 1.31403*(log(tavg(js,jb)+45.93)))*palt(id) cdavg(js,jb,16)=(cavg(js,jb,ndo)/dosat)*100.0 IF(ngctdg /= 0)THEN EA = DEXP(2.3026D0*(7.5D0*TDEW(JW)/(TDEW(JW)+237.3 D0)+0.6609D0))*0.001316 ! in mm Hg 0.0098692atm=7.5006151mmHg !cdavg(js,jb,NDC) = (cavg(js,jb,NGN2)/(1.5568D06*0.79*(PALT(ID)-EA)*(1.8816D-5 - 4.116D-7 * Tavg(js,jb) + 4.6D-9 * Tavg(js,jb)**2)))*100.0 ! SW 10/27/15 n2sat=1.5568D06*0.79*(PALT(ID)-EA)*(1.8816D-5 - 4.116D-7 * Tavg(js,jb) + 4.6D-9 * Tavg(js,jb)**2) cdavg(js,jb,NDC) = 100.*(0.79*(cavg(js,jb,NGN2)/n2sat) +	11/8/2017
			0.21*(cavg(js,jb,ndo)/dosat)) ENDIF !end if	
23	W2 Control	Updated GUI	A new version of W2Control has been made to account for a large number of small refinements in the control file to bring it up to Version 4.1. Otherwise, some of these changes had to be implemented by editing the text file, w2_con.npt. Also, guidance was added to the release notes how to use the GUI with a touch-screen laptop or desktop in cases where the touch screen does not work with the GUI.	3/10/2018

#	Code: W2	Fix or En-	Description of Bug/Enhancement	Date Fixed
	or PREW2	hancement		or Enhance-
	or GUI	Туре		ment added
24	W2	Csv file input for shade file	Updated reading in csv file for shade file to be compatible with preprocessor. Sometimes one needs to add an extra column of commas in a csv input file. New code:	3/14/2018
			<pre>IF(INFORMAT=='\$')THEN READ(SHD,'(/)') DO I=1,IMX READ (SHD,*)J,SHADEI(I) ! SW 3/14/2018 ADDED TO BE COMPATIBLE WITH PREPROCESSOR IF(SHADEI(I)<0.0)THEN BACKSPACE(SHD)</pre>	
			READ (SHD,*) J,SHADEI(I),TTLB(I),TTRB(I),CLLB(I),CLRB(I),S RLB1(I),SRLB2(I),SRRB1(I),SRRB2(I),(TOPO(I,J) ,J=1,IANG),SRFJD1(I),SRFJD2(I) ENDIF ENDDO	
25	W2	TSR file out- put	When the model user sets the elevation as a negative value, the model outputs variables at that layer only. When the water level went below that layer, the output was fixed at the old value of the variable until the water level rose into the layer. To eliminate issues with misinterpreting or having to edit out constant values, whenever the water level is below the layer, now a -99 is written out showing that there is no water in the layer specified.	4/5/2018
26	PREW2	More checks	Added checks for NaN in input files for meteorological files and flow, temperature and concentration files for inflows, distributed tributaries, precipitation, and tributaries. Previously, the preprocessor read input files even with NaN without reporting an error since this is a proper numerical value.	4/10/2018
27	W2	WDO output	The Withdrawal files are often used for downstream models. The withdrawal output frequency is in days. In order to make this more precise numerically, the output frequency can also be entered in hours and seconds. The problem was that 1 hour is 0.04167 days and due to round off error for long term runs of many years, the hourly frequency output would not be at the same hour. The variable WDOC now can be ON/OFF/ONS/ONH where ONS means the output frequency is in sec and ONH means the output frequency is in hours. The User Manual, GUI, and Preprocessor have been updated.	4/10/2018
28	Water-bal- ance	Water-bal- ance	A new waterbalance utility was released that is a console application and can be used in batch file processing. It also has more features than the old water balance utility allowing the use of multiple waterbodies in the calculation of flows. There is a new file directory for this application in the download section as well as executables and a User Manual for this utility.	4/10/2018

#	Code: W2	Fix or En-	Description of Bug/Enhancement	Date Fixed
"	or PREW2	hancement	bescription of bug, Emuneement	or Enhance-
	or GUI	Туре		ment added
29	PREW2	More checks	Several more preprocessor enhancements were added to the preprocessor to check for Unix file type where an EOL is a <cr> and not the windows <cr><lf>. Also a few more descriptions were added to the error output to clarify where a problem may be.</lf></cr></cr>	4/18/2018
30	Water-bal- ance	Water-bal- ance	Some refinements to the water balance utility console application were made.	6/5/2018
31	W2	Sediment Resuspen- sion	The sediment resuspension algorithm computed sediment resuspension in all model layers except the surface layer. The fix below adds resuspension for the surface layer (highlighted code is new). IF (SEDIMENT_RESUSPENSION(J)) THEN FETCH = FETCHD(I,JB) IF (COS(PHI(JW)-PHIO(I)) < 0.0) FETCH = FETCHU(I,JB) FETCH = MAX(FETCH,BI(KT,I),DLX(I)) U2 = WIND(JW)*WSC(I)*WIND(JW)*WSC(I)*NONZERO COEF1 = 0.53 *(G*DEPTHB(KT,I)/U2)**0.75 COEF2 = 0.0125*(G*FETCH/U2)**0.42 COEF3 = 0.833* (G*DEPTHB(KT,I)/U2)**0.375 COEF4 = 0.077* (G*FETCH/U2)**0.25 HS = 0.283 *U2/G*0.283*TANH(COEF1)*TANH(COEF2/TANH(COEF1)) !TS = 2.0*PI*Sqrt(U2)/G*1.2* TANH(COEF3)*TANH(COFF4/TANH(COEF3)) ! cb 7/15/14 L0 = G*TS*TS/(2.0*PI) L1 = L0 ! SW 6/28/2018 Allow for resuspension of surface layer L = L0*TANH(2.0*PI*DEPTHB(KT,I)/L1) DO WHILE (ABS(L-L1) > 0.001) L1 = L L = L0*TANH(2.0*PI*DEPTHB(KT,I)/L1) UORB = PI*HS/TS*100.0/SINH(COEF) TAU = 0.003*UORB*UORB IF (TAU-TAUCR(J)) > 0.0 EPSILON = MAX(0.0,0.008/49.0*(TAU-TAUCR(J))**3*10000.0/DLT) SSR = EPSILON*DLX(I)*(BI(KT,I)-BD IF SSSS(KT,I,J) = - SSS(J)*SS(KT,I,J)*BI(KT,I)/BH2(KT,I)+SSR Added 'FECURSIVE' to the subtroutine definition as it	6/28/2018
32	W2	Sediment Flux	Added 'RECURSIVE' to the subroutine definition as it calls itself and recent updates to the Intel compiler flagged this as an error. RECURSIVE Subroutine CEMASedimentDiagenesis Use MAIN Use GLOBAL Use GEOMC Use SCREENC	6/28/2018
33	PREW2	Added checks	Assorted minor updates to error checks	7/1/2018

#	Code: W2	Fix or En-	Description of Bug/Enhancement	Date Fixed
"	or PREW2	hancement	Description of Bug, Emiliansement	or Enhance-
	or GUI	Туре		ment added
34	PREW2	Consolida- tion	Update to checking code in sediment diagenesis for consolidation. New code: Read(5000,*)MessageTemp, Lay- erAddThkFrac Read(5000,*)MessageTemp, NumCon- solidRegns if(IncludeBedConsolidation .and. NumCon- solidRegns == 0)then ! CB 7/9/2018 changed .or. to .and. CALL ERRORS	7/9/2018
35	W2	Sediment	The sediment model allows for first order sediment decay in the layers above the bottom layer. If a modeler set as an initial condition a finite value for the initial concentration of sediment, then the amount in layer kb would be there and not transfer eventually to the sediment diagenesis layer as downward sloughing occurs. Hence, if the model user sets an initial concentration of the first order sediment model and has turned on sediment diagenesis, then the code sets the value of sediment in layer kb to zero. The code fixe for SED is shown below: SED (KT, I) = SED (KT, I) /H2 (KT, I) If (CEMARelatedCode .and. Include-CEMASedDiagenesis) then ! cb 07/23/18 SED (KT+1:KB(I)-1, I) /H2 (KT+1:KB(I)-1, I) sed (kb(i), i) = 0.0 else SED (KT+1:KB(I), I) = SED (KT+1:KB(I), I) = SED (KT+1:KB(I), I) /H2 (KT+1:KB(I), I) end if END DO Similar code fixes were applied to SEDP, SEDC and SEDN.	7/23/2018
36	W2	TSR output	When a branch goes inactive, the TSR output file continued to write output information even though the segment was not hydrated. Logic was added to skip output for a TSR file if the segment was inactive or if the fixed layer was above the surface layer. DO J=1,NIKTSR I = ITSR(J) ! find out if segment is inactive OR cell is inactive for fixed layer - do not write out tsr file ! SW 7/24/2018 IF(BR_INACTIVE(JBTSR(J)))CYCLE IF(CUS(JBTSR(J)) > I)CYCLE DO JW=1,NWB IF (I >= US(BS(JW))-1 .AND. I <= DS(BE(JW))+1) EXIT END DO IF(ETSR(J) < 0)THEN ! SW 7/24/2018 IF(INT(ABS(ETSR(J))) < KTWB(JW))CYCLE ENDIF	7/24/2018

#	Code: W2 or PREW2	Fix or En- hancement	Description of Bug/Enhancement	Date Fixed or Enhance-
	or GUI	Туре		ment added
37	W2	WRN	When a branch becomes ACTIVE, it is now written out to the WRN file (this was previously written out to the SNP file and only when INACTIVE to the WRN file).	7/24/2018
38	W2	SO4 in Sedi- ment	The code was updated to compute SO4 in both the aerobic and anaerobic layers and to allow diffusion from the water column to the sediment. This was previously not implemented. Also, updates were made to the bed consolidation routine in the sediment diagenesis model.	8/1/2018
39	W2, PREW2	Constriction	This is a model enhancement: The model user can specify a maximum width between segments by specifying that in a new input file called 'constriction.csv'. This does not affect the volume of the segments – it only affects the right hand side face width. Whereas an internal weir blocks all the flow, this allows for a reduced area and eliminates the need to insert a short segment of small width that can cause stability and lowered time step issues. The new input file is 'constiction.csv' and has the following format: Line 1: Comment Line 2: # of constrictions Line 3: Comment Line 4: [Repeated by # of constrictions] Segment # of constriction, Maximum width in m of constriction # of Constrictions 1 Seg # Max width, m 10 115 The W2 code looks for 'constriction.csv' – if it is found, then it reads the file and applies this to the right hand side width between 2 segments. Updates were made to the User Manual, Preprocessor and W2 Executables	8/3/2018
40	W2	Restart	If there were WDO output files, the RESTART option may not have worked properly. A code fix was implemented for a RESTART with WDO output files.	8/3/2018
41	W2	Envir Perf	The environmental performance output was updated to include the descriptive terms: 'Sum of fractions' and 'Average'. The User Manual was updated.	8/6/2018
42	W2	Particle Transport	Tracking the time history of temperature, velocity and depth of particles was added to the particle transport algorithm. The file 'particle.csv' now includes information on histogram output for each particle released into the waterbody. The User Manual and Preprocessor were also updated for this new feature.	8/6/2018

43	or PREW2 or GUI W2	hancement Type Layer sub- tract	Description of Bug/Enhancement When the W2 model adds a deep slot in shallow rivers, the variable AVHR in layeraddsub.f90 was defined	Date Fixed or Enhance- ment added 8/6/2018
43		Layer sub-	ers, the variable AVHR in layeraddsub.f90 was defined	ment added
43		Layer sub-	ers, the variable AVHR in layeraddsub.f90 was defined	
			for an inactive segment incorrectly. This code was cleaned up. New code is shown below: DEPTHM(KTWB(JW),I)=(H1(KTWB(JW),I)- (EL(KBI(I)+1,I)-EL(KB(I)+1,I))*0.5 ! SW 1/23/06 IF(I<=DS(JB))THEN ! SW 8/6/2018 AVHR(KT,I)=(H1(KT,I)- (EL(KBI(I)+1,I)-EL(KB(I)+1,I)) + (H1(KT,I+1)- (EL(KBI(I)+1,I+1)-EL(KB(I)+1,I+1))& -H1(KT,I+1)-EL(KBI(I)+1,I-1)& -H1(KT,I)+(EL(KBI(I)+1,I)-EL(KB(I)+1,I))*0.5*DLX(I) EL(KB(I)+1,I))/(0.5*(DLX(I)+DLX(I+1))*0.5*DLX(I) ELSE AVHR(KT,I)=AVHR(KT,I-1) ENDIF	
44	W2	Input bathymetry	If the model user in the bathymetry input file gives the water surface (or FRIC, or PHIO, or DLX) of inactive segments a '0', the code in the first time step may set the KT layer incorrectly because of using ELWS of an inactive segment. The code though fixes it on the 2nd time step. This does not really affect the model run as it gets started other than an unnecessary change in the surface layer designation. If the model user gave the inactive segments the same values as the active ones, the code ran normally from the first time step. In order to standardize this and allow the model user to keep inactive segment ELWS, DLX, FRIC, and PHIO set to zero, these values are initialized with the neighboring segment value. READ (BTH(JW), '(/(10F8.0))') (DLX(I), I=US(BS(JW))-1,DS(BE(JW))+1) READ (BTH(JW), '(/(10F8.0))') (ELWS(I), I=US(BS(JW))-1,DS(BE(JW))+1) READ (BTH(JW), '(/(10F8.0))') (FRIC(I), I=US(BS(JW))-1,DS(BE(JW))+1) READ (BTH(JW), '(/(10F8.0))') (H(K,JW), K=1,KMX) DO I=US(BS(JW))-1,DS(BE(JW))+1 READ (BTH(JW), '(/(10F8.0))') (B(K,I), K=1,KMX) H2(:,I) = H(:,JW) END DO endif ! Set water surface of inactive segments to those active cells next to them SW 8/6/2018 DO JB=BS(JW),BE(JW) ELWS(US(JB)-1)=ELWS(US(JB)) DLX(US(JB)-1)=DLX(US(JB)) DLX(US(JB)-1)=DLX(US(JB)) PHIO(US(JB)-1)=PHIO(US(JB)) PHIO(US(JB)-1)=PHIO(US(JB)) PRIO(US(JB)-1)=FRIC(US(JB)) FRIC(US(JB)-1)=FRIC(US(JB))	8/6/2018
45	W2	Particle	Added the ability of particles to be passed to other branches by connections of gates, pumps or spillways between upstream and downstream branches aligned linearly along a river.	8/7/2018

#	Code: W2	Fix or En-	Description of Bug/Enhancement	Date Fixed
	or PREW2	hancement		or Enhance-
	or GUI	Туре		ment added
46	W2	Flow Balance Output	The flow balance output file, flowbalance.csv, output was affected by Branches becoming active or inactive. Code was revised in balances.f90 to allow for the flow balances to properly account for cumulative flow sources/sinks. IF (VOLUME_BALANCE(JW)) THEN DO JB=BS(JW),BE(JW) IF(.NOT.BR_INACTIVE(JB))THEN ! SW 8/8/2018 VOLSBR(JB) = VOLSBR(JB)+DLVOL(JB) VOLTBR(JB) = VOLEV(JB)+VOLPR(JB)+VOLTRB(JB)+VOLDT(JB)+VOLWD(JB)+V OLUH(JB)+VOLDH(JB)+VOLIN(JB)+VOLOT(JB)+VOLICE(JB) if(sediment_diagenesis)then If(CEMARelatedCode .and. IncludeBedCon- solidation)Then VOLTBR(JB) = VOLTBR(JB)+ VOLCEMA(JB) End If ENDIF IF (ENERGY_BALANCE(JW)) THEN ESR(JW) = 0.0 ETR(JW) = 0.0 DO JB=BS(JW),BE(JW) IF(BR_INACTIVE(JB))CYCLE ! SW 8/8/2018 IF (MASS_BALANCE(JW)) THEN DO JB=BS(JW),BE(JW) IF(BR_INACTIVE(JBB))CYCLE ! SW 8/8/2018 DO JC=1,NAC	8/8/2018
47	W2	Particle Transport	In the particle tracking algorithm, the depth statistics of are now based on the particle depth. Before this, the depth statistics of a particle were based on water depth not particle depth.	8/24/2018

#	Code: W2	Fix or En-	Description of Bug/Enhancement	Date Fixed
	or PREW2	hancement		or Enhance-
	or GUI	Туре		ment added
48	W2	Long Profile Output	The volume weighted temperature was added to the longitudinal profile output. The User Manual was also updated. WRITE(NUNIT,'(1000(A,","))')'Seg#','ElevWaterSurf(m)','Q(m3/s)','SurfaceT-emp(oC)','Depth(m)','Width(m)','VolWeighTemp(oC)',(CNAME2(CN(JC)),JC=1,NAC),(CDNAME2(CDN(JD,JW)),JD=1,NACD(JW)) ELSE WRITE(NUNIT,'(1000(A,","))')'Seg#','ElevWaterSurf(m)','Q(m3/s)','SurfaceT-emp(oC)','Depth(m)','Width(m)','VolWeighTemp(oC)' ENDIF DO JJ=1,NWB K=KTWB(JJ) DO JB=BS(JJ),BE(JJ) ENDIF DO JB=BS(JJ),BE(JJ) PO J=CUS(JB),DS(JB) ! TEMP VOL WEIGHTED AVERAGE SW 8/30/2018 TVOLAVG=0.0 ! SW 8/30/2018 VOLTOT=0.0 DO KK=KTWB(JW),KB(I) VOLTOT=VOLTOT+VOL(KK,I) TVOLAVG=TVOLAVG+T1(KK,I)*VOL(KK,I) ENDDO IF(KB(I)>=KTWB(JW))tvolavg=tvolavg/voltot IF(CONSTITUENTS)THEN WRITE(NUNIT,'(IS,",",100(F12.3,","))'J,ELWS(I),QC(I),TCN(JAC))*CMULT(CN(JAC)),JAC=1,NAC),(CD(K,I,CDN(JD,JW))*CDMULT(CDN(JD,JW)),JD=1,NACD(JW)) ELSE WRITE(NUNIT,'(IS,",",100(F12.3,","))'J,ELWS(I),QC(I)),T2(K,I),DEPTHB(KB(I),I),B(KTI(I),I),TVOLAVG	8/30/2018
49	W2	SPR output	The spreadsheet output file now has an option to output volume weighted values at the locations and times specified. If the user enters 'ONV' in the control file in the following line: SPR PLOT SPRC NSPR NISPR WB 1 ONV 1 2 the output will include the regular SPR output and a separate file with the suffix '_volw.csv' for the volume weighted output. The User Manual has also been updated with the new feature.	9/28/2018
50	W2	User Manual	Updated the LPOM, LPOM-P, and LPOM-N source sink equations and the LPOM source sink stencil to be in agreement with the model code. These were old and did not reflect the addition of zooplankton ingestion and excretion/mortality.	10/9/2018
51	W2	Particle Tracking	Added an enhancement to add monitoring segments that record when the particle goes by the monitor or sensor. This would be useful for comparing to a dye study in a river for example.	11/14/2018
52	W2	SPR output	A volume weighted output bug for item 49 was fixed.	11/14/2018
53	W2	TSR flux out- put units	If flux output was ON, the instantaneous flux values for TSR output were in the incorrect units. These units were corrected to kg/day. Thanks to Binglei Gong at Anchor! All other flux files units were not affected.	12/10/2018

#	Code: W2 or PREW2 or GUI	Fix or En- hancement Type	Description of Bug/Enhancement	Date Fixed or Enhance- ment added
54	W2	Volume bal- ance	The volume balance when segments were added and subtracted because of a shallow location in the grid, caused the code to incorrectly compute the volume balance (if VBC is ON). This was corrected.	12/18/2018
55	W2	Internal solar radiation and angle of sun for shading	The internal solar radiation algorithm had a bug that if one used reference years many years from your simulation or made a simulation over 20 years, the solar maximum each year drifts. If you read in solar radiation, there are no issues or if one makes runs from 1-10 years – the drift is probably minimal. This mainly affects those who use a reference year far from the start date or run simulations over 20 years or longer while using the internal short wave solar algorithm. Fix from Dan Turner at USACE and Stewart Rounds USGS – many kudos!!	12/18/2018
56	W2	Energy and mass bal- ance	For a simulation with an initial BRANCH INACTIVE, the energy and mass balance if ON (EBC and MBC set to ON) starts off incorrectly. The layer subtraction algorithm when segments were subtracted in some cases where there were deeper holes followed by shallows incorrectly computed the energy and constituent mass balance. Also, a couple changes were made for the heat balance and mass balance for constituents when branches were changed from active to inactive.	12/18/2018
57	W2	Particle tracking	Fixed a bug when a particle was in the "air" above the water surface when in a river a 'deep slot' was added to the river bathymetry to keep it hydrated. Also, fixed a reflection error off the surface for vertical movement of the particle.	12/26/2018
58	W2	Particle tracking	For file output for finalparticle.csv, adjusted header so that it would be general for any number of monitoring stations. Previously the header was hard-wired to write only 3 monitoring locations in the title. This does not affect prior model output information only the title header.	1/3/2019
59	PREW2	Pipe invert	The preprocessor gave a 'false' error for an invert elevation being below the grid in some rare cases. This has been fixed. The model was not affected.	1/21/2019
60	W2	TN	There was a bug in the calculation of TN when large concentrations of zooplankton were present. If zooplankton were not simulated or they were a small population, there would be no impact of this TN bug. Bug fixed.	1/29/2019

#	Code: W2 or PREW2 or GUI	Fix or En- hancement Type	Description of Bug/Enhancement	Date Fixed or Enhance- ment added
61	W2	Epiphyton periphyton burial and conversion to LPOM and sediments	The User Manual showed that the epiphyton parameter EB, burial rate, was in units of m/day. The model implemented this and also computed the cell layer burial rate as EB*EC(concentration of biomass per cell volume)*Surface area/Volume of a cell or EB*EC/H where H is the layer thickness. In reality though it should be the thickness of the periphyton layer. But that layer thickness is not predicted by the model. Hence, the decision was to change the burial rate to units of 1/day such that the loss of epiphyton by burial would follow a first order decay process (similar to the first order sediment model) as EB*EC. Hence, this burial rate is no longer a function of the grid. Also, there was the conversion of organic matter and nutrients at death to the sediment P, N and C compartments whereas they should go directly to LPOM first. Hence only burial goes directly into the sediment compartments.	3/5/2019
62	W2	Output files	Code was written to print the initial condition in output files at time t=0 at the start of the simulation.	3/5/2019
63	W2	Restart with Sediment Diagenesis	Prior to this date, the restart option did not work with sediment diagenesis turned ON. This enhancement has been coded and debugged and is now working.	3/5/2019
64	W2	Dynamic loading	This is a new feature in CE-QUAL-W2 and applies to linear waterbodies in series. For example, if one has a river system with 9 waterbodies, the model user can break the model into 9 separate models and run them all in parallel where the downstream model dynamically updates its boundary conditions as the upstream model moves forward in time. This has resulted in significant time savings for model runs (90%). Documentation for this will be provided shortly.	3/5/2019
65	W2	User Manual	The existing User Manual will be frozen in its current version until a newly updated user manual will be released in the next couple months. Hence, the dynamic loading described above will be described in the new User Manual.	3/5/2019

W2 V4.0 Bug Fixes, Enhancements, and User Manual Changes

Table 5. Bug fixes and enhancements for Version 4.0.

#	Code: W2 or PREW2 or GUI	Fix or En- hancement Type	Description of Bug/Enhancement	Date Fixed or Enhance-ment added
1	PREW2	Additional model checks	Additional model checks were added for Profile and Spreadsheet output model seg- ments	6/7/16
2	User Man- ual	Updated	User Manual Rev 6 was released with many minor updates and better explanatory text	6/7/16
3	W2	Restart	Fixed restart to work for epiphyton and macrophytes. This was broken in case a model user used RESTART. Fixed restart for mass balance for nutrients output in the file massbal.opt.	6/7/16
4	W2	Location of compiler info file	Fixed location of W2 compiler information in case of using command line aware directory. File was written to the location of the model executable rather than the command line aware directory.	6/7/16
5	Waterbal- ance	Update for Version 4	The waterbalance utility uses a model tsr file for reading in water level over time. Since the Version 4 file format was updated with comma delimeted output files, the waterbalance utility has been updated. This utility is not compatible with earlier versions.	6/10/16
6	W2	Sediment Diagenesis	Initialized the sediment width (sedcellwidth) in subroutine CEMASedimentDiagenesis.	6/11/16
7	W2	Screen out- put	The text fields in the Windows dialog box may 'overflow' if you have more than 160 tributaries. The field size was increased to avoid this possibility. Old code: CHARACTER(1000) :: TEXT1 New code: CHARACTER(1700) :: TEXT1	6/24/16
8	W2	Profile out- put	The longitudinal profile output added depth at a segment as part of the longitudinal output. User Manual updated also.	7/11/2016
9	W2	Profile out- put	Changed file name of longitudinal file output from integer of the Julian day to Julian day in F8.2 format in case of multiple outputs on one day	7/16/2016

#	Code: W2 or PREW2 or GUI	Fix or En- hancement Type	Description of Bug/Enhancement	Date Fixed or Enhance-ment added
10	W2	TSR output	Changed TSR file so that the first 11 lines of header are eliminated to facilitate graphing. Also, the name of the filetype in the control file is now read and used for the output file. Hence, using the TSR FILENAME of 'tsr.csv' will produce csv files that are immediately opened in Excel for viewing again making it easier for post-processing.	8/1/2016
11	PRE	Met file checks	The preprocessor has been enhanced with more model file checks. This program now has summaries of meteorological data (min, max, average) for each waterbody in the pre.opt file as well as further logical checks on values of these averages. These summaries are another check on the correctness of the input met data file. A typical result in pre.opt is shown below: Meteorological Data Input Summary Parameter Waterbody Average Value Maximum Minimum Mi	10/30/16
12	PRE	Distributed concentration checks	Added checks for average, min, and max inflow concentrations for all distributed tributaries. These are written out to the pre.opt file	11/1/16
13	PRE	LPR input	For LPR file inputs for temperature, the preprocessor reports an error when using LPR input. The code incorrectly used KT rather than KTWB(JW). [This also affects V3.7 preprocessor.]	11/9/2016
14	W2	Model up- date	The model executables were updated from Intel Fortran Compiler # 14 to Intel Fortran compiler # 17. Also, the flag to initialize all variables to zero was enforced. There are many variables in the new sediment diagenesis model that need to be explicitly set to zero. These initializations will be made in the code in the future so that setting this flag will be unnecessary.	11/17/2016
15	W2 and PRE	Code up- dates	A couple code updates were made as a result of using the Intel Fortran Version 17 compiler. The new compiler did not like some of the older implementations. These were minor updates.	11/22/2016
16	W2	Output	Improved clarity of output headers for flux outputs, including units of kg/d in all header titles	11/28/2016

#	Code: W2	Fix or En-	Description of Bug/Enhancement	Date Fixed
	or PREW2	hancement		or Enhance-
	or GUI	Туре		ment added
17	W2	Output header	The order of the flux headings in the file 'kflux_jwX.opt' were switched. The header showed DOAP, DOAR, DOEP, DOER but it should have been DOAP, DOEP, DOAR, DOER. This is determined from the order in the example problem control files and the User Manual. The example problems and User Manual have all been updated.	11/28/2016
18	W2	Example problems	Updated example problems using FIX #10 above where tsr.opt filename was changed to tsr.csv allowing tsr files to open directly in Excel.	11/28/2016
19	W2	Algae-Si	The flux of Si from dying algae was incorrectly computed. This bug has existed since Version 3.0 when the algorithm was first added to W2. Below is the code fix: ENTRY PARTICULATE_SILICA PSIAM(:,IU:ID) = 0.0 DO I=IU,ID DO K=KT,KB(I) DO JA=1,NAL IF(ALG_CALC(JA))THEN PSIAM(K,I) = PSIAM(K,I)+AMR(K,I,JA)*ALG(K,I,JA)*ASI(JA) ! PSI(K,I) HA-Z 12/2016 ENDIF	12/5/2016
20	W2	WDO output	Enhancement: The Withdrawal output file name WDOFN was unused in the main program. Now the model reads this file and uses the file type for all WDO output files. Previously this was hard-wired to 'opt' output. Now if the user sets WDOFN to 'wdo.csv' all the files will be written with the 'csv' file type facilitating opening in Excel. The files are already in comma delimited format.	12/8/2016
21	W2	DLT INTER	There was a problem computing the interpolated value of DLTMAX and DLTF when the first value of DLTD was earlier than the start date of the model. This bug was fixed.	12/9/2016
22	User Man- ual	Updates	Assorted typos fixed, better explanatory text added, and added definitions and units of model parameters. This is REV8.	1/6/2017, 2/10/2017
23	W2	Output for- mat	Output format changed for Bioenergetics output file	1/6/2017
24	W2	TECPLOT output	Added derived variables to TECPLOT output files (See Contour Plot in User Manual). User Manual updated.	1/17/2017
25	PREW2	ENVIRPC	Checks were added for the ENVIRPC input file in the preprocessor.	2/16/2017
25	W2	ENVIRPC	Fixed several minor bugs in the ENVIRPC subroutine and added an enhancement to perform a histogram analysis of water depth. The User Manual was updated to reflect this new enhancement as well as the new csv output format and file names. The example problems were updated with new w2_envirprf.npt files.	2/16/2017

#	Code: W2 or PREW2 or GUI	Fix or En- hancement Type	Description of Bug/Enhancement	Date Fixed or Enhance- ment added
26	W2	Head BC input files	For head boundary condition input files (both upstream and downstream), the W2 code was updated to include new file formats for these boundary conditions (BCs). They include the older format, a new csv format and a new csv format in case conditions are not stratified at the BC. The User Manual was updated to show these new file formats.	3/3/2017
27	PREW2	Head BC checks	With the new file format for head BCs in #26 above, the preprocessor was updated to check these new input file formats. Also, additional checks were added to the head BCs.	3/3/2017
28	Water-bal- ance	Bug fixes/up- dates	The water balance utility was updated because of the new input format of TSR output files. See fix #10. Also, a bug was fixed in this code that affected cases when the water level was above the top of the grid.	3/17/2017
29	W2	CPL Tecplot	The CPL Tecplot output sometimes did not update the month in the contour plot text files. This has been fixed – thanks to Jung Ma, Hubei University of Technology in Wuhan, for finding it!	4/4/2017
30	Water-bal- ance	Waterbal- ance manual	The waterbalance manual was updated for Version 4.	4/14/2017
31	W2	TSR output	Refined the TSR output so that flux terms that were not specified are no longer written out. This cleans up the TSR output and reduces the active number of flux variables when sediment diagenesis is not on.	4/15/2017
32	W2	Derived variables	Fixed a code regression for derived variable TDG when the user stopped the code and pressed restart	4/15/2017
33	W2	Withdrawal output	When a user pressed restart and he/she specified withdrawal output files, the restarted files ignored the filetype of the WDO specification in the control file and used 'opt'.	4/15/2017

W2 V3.7 Bug Fixes, Enhancements and User Manual Changes

Table 6. Bug fixes and enhancements for Version 3.7.

#	Code: W2 or PREW2 or GUI	Fix or En- hancement Type	Description of Bug/Enhancement	Date Bug Fixed or En- hancement added
1	W2	Fish habitat limits	Changed temperature and DO criteria from t2(k,i) <fisht- emph(ii).and.t2(k,i)="">fishtempl(ii).and .o2(k,i)>fishdo(ii) to t2(k,i)<=fisht- emph(ii).and.t2(k,i)>fishtempl(ii).and .o2(k,i)>=fishdo(ii) This update is reflected in the manual. Hence the high temperature limit and the dissolved oxygen minimum is less than or equal to given value rather than less than.</fisht->	8/7/2012
2	W2	Structure, gate, pump, pipe, with- drawal out- put files	Added code to ensure that if flow is '0' in an outlet structure, that the corresponding temperature and concentration in the outlet file is written as '-99.0'. Previously this was not fully implemented in the code. Code such as this was inserted in several places in the subroutine outputa2.f90: IF(QGT(JS)==0.0)THEN TAVGW(JWD)=-99.0 CAVGW(JWD,:)=-99.0 CDAVGW(JWD,:)=-	8/13/2012
3	PREW2	Format up- dates	Several output updates were made for warnings and errors	8/16/2012
4	Resource files for W2	Compiling files	Updated some corrupted resource files that were used to compile the source code. Also, zipped up source code and compiler settings together so that file locations are correct for using the Intel compiler.	9/12/2012

#	Code: W2 or PREW2 or GUI	Fix or En- hancement Type	Description of Bug/Enhancement	Date Bug Fixed or En- hancement added
5	W2 and PREW2	Read csv files	By inserting the character '\$' as the first character of the first line, the following files can now be read in free-format or csv format: met, lpr, vpr, wsc, met, cin, ctr, cdtr, cpre, qot, and qwd. This is described in a Word document that accompanies the download package. The preprocessor has also been updated for file checks. This is part of the Version 3.71 update.	9/12/2012
6	W2	Read input file	An input format bug was fixed for a system with more than 9 waterbodies. DO JD=1,NDC !READ (CON,'(A8,(:9A8))') CDNAME2(JD), (CDWBC(JD,JW), JW=1,NWB) READ (CON,'(A8,(:9A8):/(8X,(:9A8)))') CDNAME2(JD), (CDWBC(JD,JW), JW=1,NWB) !cb 9/13/12 END DO READ (CON,'(/)') ! DO JF=1,NFL do jf=1,73 ! Fix this later !READ (CON,'(A8,(:9A8))') KFNAME2(JF), (KFWBC(JF,JW), JW=1,NWB) READ (CON,'(A8,(:9A8):/(8X,(:9A8)))') KFNAME2(JF), (KFWBC(JF,JW), JW=1,NWB) !cb 9/13/12 END DO This had the effect of turning OFF output for derived constituents for waterbody 10.	9/13/2012
7	GUI	Time series elevation	The GUI read in values of ETSR as integers rather than real numbers. This was fixed.	10/30/12
8	W2	Spillways Lateral	Lateral spillways when connected to other model segments were sometimes not connecting as a tributary to the downstream segment. This has been fixed.	10/30/12
9	W2	W2Tools output	In place of the Vector Plot Output (VPL), a new output was added that allows use of the W2Tools post-processing package. This is part of the Version 3.71 update.	10/30/12
10	W2	User Manual	The User Manual has been updated with the new model features as shown in 5 and 9 above. In addition a separate user manual file shows how to use the w2tools post-processor. This is in the directory for W2tools. This is the version 3.71 update.	10/30/12

#	Code: W2 or PREW2 or GUI	Fix or Enhancement Type	Description of Bug/Enhancement	Date Bug Fixed or En- hancement added
11	W2	Water quality and temperature	A new calculation technique was added that eliminates calling the Tri-diagonal subroutine. These were built into the temperature and water quality subroutines. This change results in improvements in computational speed of from less than 5% to over 20% for water quality models with lots of water quality state variables.	10/30/2012
12	PREW2	More checks	Added more error trapping for input files. This is an effort for the error trapping to occur before the code bombs. Fixed a couple of regression errors as a result of this fix.	11/2/2012, 11/5/2012
13	Excel macro util- ity		Added an Excel macro utility to aid in writing out input files to CE-QUAL-W2	11/5/2012

#	Code: W2 or PREW2 or GUI	Fix or En- hancement Type	Description of Bug/Enhancement	Date Bug Fixed or En- hancement added
14	W2	Withdrawal subroutine	Fixed an IF test that used the wrong variable in the dynamic port allocation algorithm. Also added code to allow the code to test for temperatures at the outlet levels specified.	11/13/12
			Deleted line of code is underlined followed by the fix.	
			DO J=1,NUMTSPLT !REODERING OUTLETS SO THAT HIGHEST ELEVATION STRUCTURE ON TOP (ASSUMING 2 SPLIT OUTLETS) ! IF(TCNTR(J) == ' ST')THEN IF(TSPLTCNTR(J) == ' ST')THEN ! cb 11/11/12 IF(ESTR(JSTSPLTT(J,1),TSPLTJB(J)) < ESTR(JSTSPLTT(J,2),TSPLTJB(J)))THEN JSTSPLT(J,1)=JSTSPLTT(J,2) JSTSPLT(J,2)=JSTSPLTT(J,1) END IF ! ELSE IF(TCNTR(J) == ' WD')THEN ELSE IF(TSPLTCNTR(J) == ' WD')THEN ! cb 11/11/12 IF(EWD(JSTSPLTT(J,1)) < EWD(JSTSPLTT(J,2)))THEN	
			IF (TSPLTJB(J) == JB .AND. TSPLTCNTR(J) == ' ST') THEN QALL=0.0 DO JJ=1, NOUTS(J)	
			QALL=QALL+QSTR(JSTSPLT(J,JJ),TSPLTJB(J)) ! SUM UP ALL THE FLOWS ELR = SINA(JB)*DLX(DS(JB))*0.5 DO K=KTWB(JW),KB(DS(JB)) IF (EL(K,DS(JB))-ELR < ESTR(JSTSPLT(J,JJ),TSPLTJB(J))) EXIT !SW 10/17/01 END DO KSTR = K-1 KSTRSPLT(JJ) = MIN(KSTR,KB(DS(JB))) ENDDO DO JJ=1,NOUTS(J) !	
			<pre>cb 11/11/12 dividing total flow between outlets for temperature test QSTR(JSTSPLT(J,JJ),TSPLTJB(J)) = qall/real(nouts(j))</pre>	

#	Code: W2 or PREW2 or GUI	Fix or En- hancement Type	Description of Bug/Enhancement	Date Bug Fixed or En- hancement added
15	W2	Reading in names of WQ variables	In case a user does not enter the units in graph.npt, the code improperly parses the WQ variable name. In this case the output name is a blank. To avoid this issue, extra code was added to preserve the variable name even if no units were added to the graph.npt list. L1 = SCAN (CNAME(JC),',')+2	12/3/2012
16	PREW2	SEDS and SEDK	The variable names were switched in reading the control file in the preprocessor perhaps leading to incorrect warnings/errors being tagged. The proper order was restored: !READ (CON,'(/A8/(8X,2A8,6F8.0,A8))', ERR=400) AID, (SEDC(JW), PRNSC(JW), SEDCI(JW), seds(jw), SEDDK(JW), FSOD(JW), ! FSED(JW), sedbr(jw), DYNSEDK(JW), JW=1,NWB) ! SW 6/1/07 READ (CON,'(/A8/(8X,2A8,6F8.0,A8))', ERR=400) AID, (SEDC(JW), PRNSC(JW), SEDCI(JW), SEDDK(JW), seds(jw), FSOD(JW), FSED(JW), sedbr(jw), DYNSEDK(JW), JW=1,NWB) ! cb 12/30/12	12/30/12
17	Excel macro util- ity w2tool	Integer/Long variables	Some loose ends were corrected in the Visual Basic code built into the Excel macros.	1/2/2013
18	W2	TDG output	A series of code changes were made to fix some issues that arose for computing the impact of a structure on downstream TDG. These fixes were made in subroutines Withdrawal, outputa2w2tools, w2modules, and hydroinout. These affected calculation of output of dissolved gas concentration for output files for spillways or gates that had dissolved gas equation.	1/23/2013

#	Code: W2 or PREW2 or GUI	Fix or Enhancement Type	Description of Bug/Enhancement	Date Bug Fixed or En- hancement added
19	W2	Reading in dynamic ex- tinction coef- ficient	For temperature only studies, the model did not update the dynamic light extinction coefficient correctly. This has been fixed by the added code below: DO JW=1,NWB IF (READ_EXTINCTION(JW))GAMMA(:,US(BS(JW)):D S(BE(JW))) = EXH2O(JW) ! SW 1/28/13 KT = KTWB(JW) IF (.NOT. NO_HEAT(JW)) THEN	1/28/2013
20	W2	Input format when 9 WBs	A specific input read error occurred when 9 waterbodies were present as a result of an earlier bug fix: The new read statements occur in 2 places: READ (CON,'(A8,9A8,/(:8X,9A8)))') CDNAME2(JD),(CDWBC(JD,JW), JW=1,NWB) !cb 9/13/12 sw 2/18/13 READ (CON,'(A8,9A8,/(:8X,9A8)))') KFNAME2(JF),(KFWBC(JF,JW), JW=1,NWB) !cb 9/13/12 sw2/18/13	2/18/13
21	PREW2	More checks added	Additional checks were added to warn users of gaps in meteorological data when interpolation may be inappropriate.	2/20/2013
22	W2 User Manual	Updated	Updated User Manual – many small additions and edits – REV3.	2/20/2013
23	PREW2	Improved an error check	Updated an error check for choosing inactive segments for ISNP output	3/21/2013
24	PREW2	More checks added	Added checks for inflow temperature and tributary temperatures	3/28/2013

#	Code: W2 or PREW2 or GUI	Fix or Enhancement Type	Description of Bug/Enhancement	Date Bug Fixed or En- hancement added
25	W2	Initial WL Calculation	Changed SLOPE to SLOPEC in init—u-elws.f90 routine since the normal depth should be based on SLOPEC. END IF FUNCVALUE=FLOW- XAREA*HRAD**0.6667*SLOPEC(JB)**0.5/FMANN ! SW 4/5/2013 RETURN END SUBROUTINE MANNINGS_EQN Also changed KB(I)-1 to KB(I)+1 for ELWS: IF(ABS(DX).LT.XACC .OR. FMID.EQ.0.)THEN ELWS(I)=RTBIS+EL(KB(I)+1,I) ! SW 4/5/13 RETURN Also changed KTTOP from REAL to an INTEGER: REAL :: XAREA, WSURF ! 4/5/13 SW INTEGER :: KTTOP ! 4/5/13 SW	4/5/2013
25	W2	Output for pumps, spill-ways, gates	If the LAT option was chosen, the output files index for JWD was incorrect. This may have affected output temperatures and concentrations.	5/17/2013
26	PRE-W2	Mass loading calculation	There were cases where the preprocessor bombed while calculating the mass loading for output to the pre.opt file. This error has been fixed.	6/21./2013
27	W2	Assorted code up-dates	Minor format errors (that were ignored by compiler), update to code comments, and faster code initializations to speed up model performance were performed in several subroutines: input_PAR.f90, temperature_PAR.f90, transport_PAR.f90, update.f90, and w2_37_win.f90. An example of an initialization code speed up from temperature_PAR.f90: New code: DO K=KT,KB(I) AT(K,I) = 0.0D0; CT(K,I) = 0.0D0; VT(K,I) = 0.0D0 ! SW CODE SPEEDUP 6/15/13 ENDDO Old code AT(:,I) = 0.0D0; CT(:,I) = 0.0D0; VT(:,I) = 0.0D0	6/21/2013
28	W2 tools Excel macro	Update	More robust tools release	6/21/2013
29	PRE-W2	Label error	A label error for one spillway error was fixed. It mistakenly used 'gate'.	7/2/2013

#	Code: W2 or PREW2 or GUI	Fix or Enhancement Type	Description of Bug/Enhancement	Date Bug Fixed or En- hancement added
30	W2	CPL output	A slight change in output format for the 'raw' cpl output file format was made. No change was made in the tecplot output format. DO I=CUS(JB), DS(JB) WRITE (CPL(JW), '(A38/(9(F10.3,2X)))') CDNAME(CDN(JD,JW)), (CD(K,I,CDN(JD,JW))*CDMULT(CDN(JD,JW)), K=KTWB(JW), KB(I)) ! cb 6/28/13 end do!WRITE (CPL(JW), '(A38/(9(F10.3,2X)))') CDNAME(CDN(JD,JW)), ((CD(K,I,CDN(JD,JW))*CDMULT(CDN(JD,JW)), (CD(K,I,CDN(JD,JW)))*CDMULT(CDN(JD,JW)), (CD(K,I,CDN(JD,JW)), (CD(K,I,CDN(JD,JW)))*CDMULT(CDN(JD,JW)), (CD(K,I,CDN(JD,JW)), (CD(K,I,CDN(JD,JW)))*CDMULT(CDN(JD,JW)), (CD(K,I,CDN(JD,JW)), (CD(K,I,CDN(JD,JW)))*CDMULT(CDN(JD,JW)), (CD(K,I,CDN(JD,JW)), (CD(K,I,CDN(JD,JW)))*CDMULT(CDN(JD,JW)), (CD(K,I,CDN(JD,JW)), (CD(K,I,CDN(JD,JW)), (CD(K,I,CDN(JD,JW)), (CD(K,I,CDN(JD,JW)), (CD(K,I,CDN(JD,JW)), (CD(K,I,CDN(JD,JW)), (CD(K,I,CDN(JD,JW)), (CD(K,I,CDN(JD,JW)), (CD(K,I,CDN	7/31/13
31	W2	Read input file	A regression error that cropped up when there were 9 or greater than 10 waterbodies has been fixed. This had to do with reading in derived and flux variables in the control file. DO JD=1,NDC If (nwb < 10) READ (CON,'(A8,(:9A8))') CDNAME2(JD), (CDWBC(JD,JW), JW=1,NWB) If (nwb >= 10) READ (CON,'(A8,9A8,/(:8X,9A8))') CDNAME2(JD), (CDWBC(JD,JW), JW=1,NWB) !cb 9/13/12 sw 2/18/13 6/16/13 END DO READ (CON,'(/)') ! DO JF=1,NFL do jf=1,73 ! Fix this later If (nwb < 10) READ (CON,'(A8,(:9A8))') KFNAME2(JF), (KFWBC(JF,JW), JW=1,NWB) If (nwb >= 10) READ (CON,'(A8,9A8,/(:8X,9A8))') KFNAME2(JF), (KFWBC(JF,JW), JW=1,NWB) !cb 9/13/12 sw2/18/13 6/16/13	8/13/13
32	W2	New com- piler	Upgraded to the Intel XE 13.1.3.198 compiler. New W2 executables for 32 bit and 64 bit.	8/13/13
33	W2	INIT WL	An error was fixed in the initial water level computation program for rivers. The code below should have the subscript JB instead of J. DO JJW=1, NWB DO JJB=BS(JJW), BE(JJW) IF(DHS(JB) > US(JJB) .AND. DHS(J) < DS(JJB))THEN JBD=JJB END IF END DO	8/20/13

#	Code: W2 or PREW2 or GUI	Fix or En- hancement Type	Description of Bug/Enhancement	Date Bug Fixed or En- hancement added
34	W2	INIT WL	There was an index error with gates in the initial water level computation. The old code is shown below: IF (ELWS (ID) < WSUP) THEN	8/21/2013
35	W2	GATE	Cleaning up some code in the gate algorithm. Old code: IF (A2GT(JG) /= 0.0 .AND. IDGT(JG) /= 0.0) THEN New code: IF (A2GT(JG) /= 0.0 .AND. IDGT(JG) /= 0) THEN	8/21/2013
36	W2	TSS computation	Updated the computation for the derived variable TSS to include zooplankton and the particulate form of CBOD. A formula was added to the User Manual reflecting this change. New code includes IF (CBODS (IBOD) > 0.0) TOTSS (K, I) = TOTSS (K, I) + CBOD (K, I, IBOD) / O2OM (JW) ! SW 9/5/13 Added particulate CBOD to TSS computation TOTSS (K, I) = TOTSS (K, I) + ZOO (K, I, JZ) ! SW 9/5/13 Added zooplankton to TSS computation	9/6/2013
37	W2	Spillway-LAT	When a spillway was defined with IDSP=0 and LAT, a tributary was defined incorrectly. The new code is shown below: IF (IDSP(JS) /= 0) then ! cb 9/11/13 JTT = JTT+1 QTR(JTT) = QSP(JS) ITR(JTT) = IDSP(JS) PLACE_QTR(JTT) = PDSPC(JS) == ' DENSITY' SPECIFY_QTR(JTT) = PDSPC(JS) == ' SPECIFY' IF (SPECIFY_QTR(JTT)) THEN ELTRT(JTT) = ETDSP(JS) ELTRB(JTT) = EDDSP(JS) END IF JBTR(JTT) = JBD end if ! cb 9/11/13	9/11/2013

#	Code: W2 or PREW2 or GUI	Fix or Enhancement Type	Description of Bug/Enhancement	Date Bug Fixed or En- hancement added
38	W2	32 bit exe on XP	Recompiled with new settings from Visual Studio 2012 to (hopefully) run on XP systems with 32 bit OS	9/11/2013
39	W2	End Simula- tion	Added new close open files in the end_simulation sub- routine. This is merely cleaning up the code to be con- sistent in closing all open files when a 'Stop' is exe- cuted. This should have no effect on the end user. Part of this new code is shown below: IF(SELECTC == ' ON')then ! SW 9/25/13 New Section on closing files ifile=1949 do jb=1,nbr if(nstr(jb) > 0)then ifile=ifile+1 close(ifile) endif enddo if(nwd > 0)then ifile=ifile+1 close(ifile) endif endif IF (DOWNSTREAM_OUTFLOW) THEN JFILE=0 DO JWD=1,NIWDO CLOSE(WDO(JWD,1)) CLOSE(WDO(JWD,2)) IF (CONSTITUENTS) THEN CLOSE (WDO(JWD,3)) END IF IF (DERIVED_CALC) THEN CLOSE(WDO(JWD,4)) END IF	9/25/13

#	Code: W2 or PREW2 or GUI	Fix or Enhancement Type	Description of Bug/Enhancement	Date Bug Fixed or En- hancement added
40	W2	Pumps – Lateral	Fixed several sections of code in the PUMP algorithm in the hydroinout.f90 routine. Under some conditions such as specifying "Lateral", the PUMP algorithm may not have moved the water from the upstream to the downstream segment correctly. This has been fixed and tested. Part of the code changes are shown below: IF (LATERAL_PUMP(JP)) THEN ELW = EL(KTWB(JWU), IUPU(JP))- Z(IUPU(JP))*COSA(JBU) ! JWW = JWW+1 ! SW 9/25/13 ! JBWD(JWW) = JUPU(JP) ELSE ELW = EL(KTWB(JWU), IUPU(JP))- Z(IUPU(JP))*COSA(JBU)- SINA(JBU)*DLX(IUPU(JP))*0.5 ! JSS(JBU) = JSS(JBU)+1 ! SW 9/25/13 END IF IF (PUMPON(JP)) THEN JLAT = 1 JWW = JWW+1 ! SW 9/25/13 CALL LATERAL_WITHDRAWAL ! (JWW) QSS(K,I) = QSS(K,I)-QSW(K,JWW) END DO IF (IDPU(JP) /= 0) THEN ! MOVED CODE SW 9/25/13 JTT = JTT+1 ELSE JSS(JBU) = JSS(JBU) JSS(JBU),JBU) = KTPU(JP)	9/25/13

42	W2	CPL output	A series of minor memory issues were cleaned up. This should have no impacts on current model runs. These were usually uninitialized memory. Code changes made include: READ (CON,'(/)') KFNAME2=' ' ! SW 9/27/13 INITIALIZE ENTIRE ARRAY KFWBC =' ' ! SW 9/27/13 INITIALIZE ENTIRE ARRAY READ (CON,'(/(:8X,918))') (KBWD(JW), JW=J,NND); TRC=' ' ! SW 9/27/13 INITIALIZATION SINCE ALLOCATION IS TO NTRT READ (CON,'(//(:8X,9A8))') (TRC(JT), JT=1,NTR) EHSN(JE), EHSSI(JE), JE=1,NEPT) !JE=1,NEP) SW 9/27/13 READ (CON,'(//(8X,2F8.0,18,F8.0))') (ESAT(JE), EHS(JE), ENEQN(JE), ENPR(JE), EXI(JE),	9/28/13
			OFF. IF(I /= DS(JB)+1)THEN IF(HABTATC == ' ON')THEN	

#	Code: W2 or PREW2 or GUI	Fix or En- hancement Type	Description of Bug/Enhancement	Date Bug Fixed or En- hancement added
			WRITE (CPL(JW),9999) X1(I),ELWS(I),U(K,I),- W(K,I),T1(K,I),RHO(K,I),HAB(K,I),(C2(K,I,CN(JC)) ,JC=1,NAC) ELSE WRITE (CPL(JW),9999) X1(I),ELWS(I),U(K,I),- W(K,I),T1(K,I),RHO(K,I),(C2(K,I,CN(JC)),JC=1,NAC)) ENDIF ELSE XDUM=-99.0 WRITE (CPL(JW),9999) X1(I),ELWS(I),XDUM,XDUM,XDUM,XDUM,XDUM,(XDUM,JJ=1,NAC) ENDIF DO K=KTWB(JW),KMX-1 IF(I /= DS(JB)+1 .AND. K <= KB(I))THEN IF(HABTATC == 'ON')THEN WRITE (CPL(JW),9999) X1(I),ELWS(I)-DEPTHM(K,I),U(K,I),- W(K,I),T1(K,I),RHO(K,I),HAB(K,I),(C2(K,I,CN(JC)),JC=1,NAC) ELSE WRITE (CPL(JW),9999) X1(I),ELWS(I)-DEPTHM(K,I),U(K,I),- W(K,I),T1(K,I),RHO(K,I),HAB(K,I),(C2(K,I,CN(JC)),JC=1,NAC) ELSE WRITE (CPL(JW),9999) X1(I),ELWS(I)-DEPTHM(K,I),U(K,I),-	
			<pre>W(K,I),T1(K,I),RHO(K,I),(C2(K,I,CN(JC)),JC=1,NAC) ENDIF IF(K == KB(I))THEN</pre>	
			<pre>IF(HABTATC == ' ON')THEN WRITE (CPL(JW),9999) X1(I),ELWS(I)-DEPTHB(K,I),U(K,I), - W(K,I),T1(K,I),RHO(K,I),HAB(K,I),(C2(K,I,CN(JC)) ,JC=1,NAC) ELSE WRITE (CPL(JW),9999) X1(I),ELWS(I)-DEPTHB(K,I),U(K,I), - W(K,I),T1(K,I),RHO(K,I),(C2(K,I,CN(JC)),JC=1,NAC)) ENDIF</pre>	
			<pre>WRITE (CPL(JW), *)'TITLE="CE-QUAL-W2"'</pre>	

#	Code: W2 or PREW2 or GUI	Fix or Enhancement Type	Description of Bug/Enhancement	Date Bug Fixed or En- hancement added
43	W2	SPECIFY TRIB	In specifying the elevation between top and bottom for an inflow tributary, the code put the inflow 1 layer below it should have been in many cases. This has been fixed by the additional code shown below: IF (SPECIFY_QTR(JT)) THEN KTTR(JT) = 2 DO WHILE (EL(KTTR(JT),I) > ELTRT(JT)) DO WHILE (EL(KTTR(JT),I) > ELTRT(JT) .and. EL(KTTR(JT)+1,I) > ELTRT(JT)) ! SW 10/3/13 KTTR(JT) = KTTR(JT)+1 END DO	10/3/2013
44	W2	CWO or CWDO out- put	Fixed a format overflow in writing out concentrations in a withdrawal output file. IF (QWDO(J) /= 0.0) CWDO(CN(JC),J) = CWDO(CN(JC),J)/QWDO(J) WRITE (CWDOC(CN(JC)),'(F8.3)') CWDO(CN(JC),J) ! SW 9/23/13 Changed format from G8.3 to F8.3 to avoid format overflow CWDOC(CN(JC)) = ADJUSTR(CWDOC(CN(JC))) IF (QWDO(J) /= 0.0) CDWDO(CDN(JD,JW),J) = CDWDO(CDN(JD,JW),J)/QWDO(J) WRITE (CDWDOC(CDN(JD,JW)),'(F8.3)') CDWDO(CDN(JD,JW),J) ! SW 9/23/13 Changed format from G8.3 to F8.3 to avoid format overflow CDWDOC(CDN(JD,JW)) = ADJUSTR(CDWDOC(CDN(JD,JW)))	10/4/2013
45	W2 and PREW2	Inflow, Trib- utary, Dis- tributary and Shade inputs	Added csv file format as a new file input format for flow and temperature files for inflows, tributaries and distributed tributaries. Also, the shade file is now in csv file format. This enhancement includes updates to the preprocessor and W2 codes. Also several minor bug fixes were made on the Preprocessor.	7/15/14
46	W2	Resuspension of inorganic solids	A resuspension formula was corrected. See the code change below: HS = 0.283 *U2/G*0.283*TANH (COEF1) *TANH (COEF2/TANH (COEF1)) !TS = 2.0*PI*U2/G*1.2* TANH (COEF3) *TANH (COEF4/TANH (COEF3)) TS = 2.0*PI*sqrt(U2)/G*1.2* TANH (COEF3) *TANH (COEF4/TANH (COEF3)) ! cb 5/9/14	7/15/14
47	W2	Tecplot out- put	When the user sets CPL output for Tecplot, the output format when HABITAC=OFF was incorrect. This has been fixed.	7/15/14

#	Code: W2 or PREW2 or GUI	Fix or Enhancement Type	Description of Bug/Enhancement	Date Bug Fixed or En- hancement added
48	PREW2	Warnings	Fixed a name inconsistency for developing warnings for input concentrations ! IF (NAME /= 'Residence time' .AND. NAME /= 'Water age') THEN	7/15/14
49	W2	TSR filename	The filename in w2_con.npt for TSR is used for the output filenames. In order to account for complex paths that include more than one '.', the following change was made with the BACK=.TRUE. command which checks from the right-hand-side rather than left-hand-side of the character string ! L1 = SCAN(TSRFN, '.') L1 = SCAN(TSRFN, '.', BACK=.TRUE.)	8/22/14
50	PREW2	Hydraulic structure warnings	Added many new hydraulic structure warnings (gates, spillways, pumps, pipes, internal weirs) for cases where KBSTR was less than KB and fixed a few error messages for these structure checks.	9/10/14
51	W2	TSR output	The time series file has added the surface heat flux terms (net, short wave solar net, long wave radiation net, back radiation heat flux, evaporation heat flux, conductive heat flux) to the output. The manual was also updated.	1/15/15
52	W2	Interpolation of wind direction	In some cases, the wind direction interpolation was incorrect. Code was added to reduce the wind direction angle to less than 2*pi before the interpolation is performed and to consider another possible interpolation case. Thanks to Wenwei Xu for pointing this out. New code is shown below: ! CONVERT PHIO AND PHINX TO LESS THAN 2*PI SW 2/13/15 DO WHILE(PHIO(JW)>2.*PI) PHIO(JW)=PHIO(JW)-2.*PI ENDDO DO WHILE(PHINX(JW)>2.*PI) PHINX(JW)=PHINX(JW)-2.*PI ENDDO IF (PHIO(JW)-PHINX(JW) > PI) THEN PHI(JW) = (1.0- RATIO)*(PHINX(JW)+2.0*PI)+RATIO*PHIO(JW) ELSEIF (PHIO(JW)-PHINX(JW) < -PI) THEN ! WX 2/13/15 PHI(JW) = (1.0- RATIO)*PHINX(JW)+RATIO*(PHIO(JW) +2.0*PI) ! WX 2/13/15 ELSE PHI(JW) = (1.0- RATIO)*PHINX(JW)+RATIO*(PHIO(JW) END IF	2/13/15

#	Code: W2 or PREW2 or GUI	Fix or Enhancement Type	Description of Bug/Enhancement	Date Bug Fixed or En- hancement added
53	W2	Withdrawal	Stewart Rounds: Extra check to avoid divide by zero in withdrawal algorithm (this or similar code occurs in 4 subroutines in withdrawal.f90) IF ((ELSTR-HSWB) > EL(KBOT+1,ID)) THEN	4/9/2015
54	W2	SELECTC	The USGS has developed a new automatic port selection algorithm. In the control file, w2_con.npt, one can use the new algorithm by setting SELECTC='USGS'. The old algorithm is used when this is set to SELECTC= 'ON'. There is new documentation in the User Manual for this new algorithm.	4/9/2015
55	W2	Restart out- put	Added code to write out a restart file (rso.opt) at the end of a run if restart_output is ON.	4/9/15
56	W2 Exam- ples	Added exam- ple problems	Added new example problem for the Spokane River using new csv file inputs and 4 example problems for using the USGS auto-port algorithm	4/9/15
57	W2	Restart for file vol- ume_wbX.op t	The file handler was not closed properly for volume_wbX.opt. Fixed it with additional code in endsimualtion.f90: if(nwd > 0)then ifile=ifile+1 close(ifile) endif do jw=1,nwb ! sw 4/20/15 ifile=ifile+1 ! sw 4/20/15 close(ifile) ! sw 4/20/15 enddo ! sw 4/20/15	4/20/15
58	W2	W2selec- tive.npt	Changed input format for critical temperatures for the output file volume_wbX.opt from a maximum of 10 waterbodies to 100. READ(1010, '(8X,100F8.0)')(TEMPCRIT(JW, J), JW=1, NWB) ! NOTE MAX OF 100 WATERBODIES sw 4/20/15	4/20/15
59	W2	Resuspen- sion of SS	Changed DO loop index in suspended solids resuspension in water_quality.f90 from DO K=KT-1,KB(I)-1 to DO K=KT+1,KB(I)-1 ! cb 9/29/14	5/14/2015

#	Code: W2 or PREW2 or GUI	Fix or En- hancement Type	Description of Bug/Enhancement	Date Bug Fixed or En- hancement added
60	W2	Wind at 2 m	The W2 model computes the wind at a 2 m height based on the used defined measurement height of the wind for evaporation computations. The formula for computing this variable was using a step function of the wind data rather than interpolation of the wind data when the user chose to interpolate meteorological data. For meteorological input data at short time intervals this is a very minor change. For meteorological data at large time intervals (like a day), this could affect the amount of evaporation. Hence, the calculation below was moved from the TVDS routine to the main routine so that the interpolated wind would be used. WIND2(I)=WIND(JW)*WSC(I)*DLOG(2.0D0/Z0(JW))/D	5/21/15
61	W2	TSR output	LOG(WINDH(JW)/ZØ(JW)) The TSR file output now also includes a volume weighted vertical average temperature for the segment that the TSR file is located. The manual has been	6/1/15
62	W2	Writing over output files	In some intermittent cases, when the dialog box closes, the model reinitializes some of the output files (effectively deleting the output). The following line of code was adding at the beginning of the main W2 code to prevent this: !** Task 1: Inputs ** !*********************************	6/26/15
63	W2	Output order for kinetic fluxes	The output columns for DOAR and DOER were switched in the output file kflux_jw*.opt. The model code was changed to fix this. ! DOAR => KF(:,:,56); DOEP => KF(:,:,57); DOER => KF(:,:,58); DOPOM => KF(:,:,59); DODOM => KF(:,:,60) DOEP => KF(:,:,56); DOAR => KF(:,:,57); DOER => KF(:,:,58); DOPOM => KF(:,:,59); DODOM => KF(:,:,60) ! cb 9/16/2015	9/16/15

W2 V3.6 Bug Fixes, Enhancements, and User Manual Changes

Table 7. Bug fixes and enhancements for Version 3.6.

#	Code: W2 or PREW2 or GUI	Fix or Enhancement Type	Description of Bug/Enhancement	Date Bug Fixed or En- hancement added
1	W2	TKE1 model	The variable STRICK was incorrectly allocated as an INTEGER rather than REAL.	10/11/2008
2	W2	PIPE	Code was streamlined in the subroutine ZBRENT where calls were made directly to CDFUNC rather than through the dummy function FUNC	10/11/2008
3	W2 Man- ual	ZO	The User Manual had Z0 in an incorrect line in the control file (w2_con.npt). The write up and example control file in the User Manual were corrected.	10/28/2008
4	W2	Longitudinal profile input	The W2 program did not read initial constituent concentrations in the longitudinal profile file when CCC was 'OFF'. This has been fixed.	12/4/2008
5	W2	TECPLOT output	When using TECPLOT output for multiple waterbodies, the output format did not allow loading the information into TECPLOT. Fixed.	1/26/2009
6	W2	Epiphyton in- put	For entering vertical profile data for periphyton, there was an index error: OLD CODE: IF (VERT_EPIPHYTON(JW,JE)) EPD(:,I,JE) = EPIVP(K,JW,JE) NEW CODE: IF (VERT_EPIPHYTON(JW,JE)) EPD(:,I,JE) = EPIVP(:,JW,JE)	5/21/2009
7	PreW2	Constituent loads	An enhancement was added to the Preprocessor to compute loads in kg/day for all inflow, tributary and distributed tributaries. Also, these are summed up for the model application. These are shown in the file "pre.opt". These are approximate loads since the concentration data are used to set the frequency of loading update. Flow rates at the time of the concentration input data are used to compute load.	5/21/2009

#	Code: W2 or PREW2 or GUI	Fix or Enhancement Type	Description of Bug/Enhancement	Date Bug Fixed or En- hancement added
8	W2	Gas transfer at spillways	A couple code fixes in the hydroinout.f90 subroutine: (1) CGAS needed to be initialized in some cases to CGAS=C2(K,ID,CN(JC)) prior to calling the subroutine TOTAL_DISSOLVED_GAS for use in the Butts and Evans (1983) equation: NEW CODE: CGAS=C2 (K, ID, CN (JC)) ! MM 5/21/2009 (2) Change logic in several lines from IF(CAC(NDO) == ' ON' to IF(CAC(NDO) == ' ON' .and. CN(JC)==NDO NEW CODE: IF (CN (JC) ==NDO .AND. CAC (NDO) == ' ON' .AND. GASSPC (JS) == ' ON' .AND. QSP (JS) > 0.0) THEN ! MM 5/21/2009	5/21/2009
9	W2	Reaeration from dams	An error was found in the formulae from Butts and Evans (1983). OLD CODE:	5/21/2009

#	Code: W2 or PREW2 or GUI	Fix or Enhancement Type	Description of Bug/Enhancement	Date Bug Fixed or En- hancement added
10	W2	Order of flux parameters	The order of flux parameters in the User Manual and output were incorrect. The control file has them in this order: RPOMSET CBODDK DOAP DOAR DOEP DOER DOPOM DODOM Whereas the code assumed they were in this order: RPOMSET CBODDK DOAP DOEP DOEP DOEP DOEP DOEP DOEP DOEP DOAR DOOAP DOOM This has been corrected. The User Manual and control file order is now reflected in the W2 code.	6/2/2009
11	Pre	False errors for inflow lo- cation	The preprocessor sometimes gave false errors in the pre.err for tributary, internal weirs, pipes, and other hydraulic features saying that the pipe or tributary was below the elevation of the bottom of the segment. The W2 model ran fine even with this error message given in the preprocessor. This has been fixed. Example of OLD CODE: IF (EBTR(JT) < EL(KB(ITR(JT)+1), ITR(JT))) THEN CALL ERRORS WRITE (ERR, FMTFI) 'Inflow placement bottom elevation [EBTR=', EBTR(JT),'] < bottom active cell elevation for tributary ', JT New CODE: IF (EBTR(JT) < EL(KB(ITR(JT))+1, ITR(JT))) THEN CALL ERRORS WRITE (ERR, FMTFI) 'Inflow placement bottom elevation [EBTR=', EBTR(JT),'] < bottom active cell elevation for tributary ', JT	6/18/09

#	Code: W2 or PREW2 or GUI	Fix or En- hancement Type	Description of Bug/Enhancement	Date Bug Fixed or En- hancement added
12	Pre	Additional error check- ing	Additional error checking was added to help debug an error in the bathymetry file when the problem was in the branch connectivity specifically BS and BE. Also, a false error was given when the temperature had an isothermal initial condition, constituents were OFF, and an initial concentration was set to "-2". This was fixed.	6/22/09
13	Pre	Command line pro- cessing and working di- rectory dis- played for windows	In the windows version of the preprocessor, the user can now supply a command line argument that sets the working directory of the code. Hence, one does not need to copy the preprocessor into every directory. In a batch file, for example, one can execute the following command: preW2_ivf.exe "C:\scott\w2workshop\2009 workshop\waterqual\problem3" The preprocessor now uses the supplied directory (in double quotes) as the working directory for all the files. The command line argument has one blank space between the end of the executable and the first quote. Also, the working directory is now displayed at the top of the window. Additional checks were also added for checking the grid linkage.	9/12/09
14	W2	# of processors	The model user can now control the # of physical processors the model uses. At this point, dual-processor model runs have shown an improvement of about 20% over a single processor. But, QUAD processors usually are slower. It is recommended that NPROC be set to 2 in the control file. The user can experiment on his/her own system. If this is not set by the user or is left blank, the model still runs but sets it to 2 processors. GRID NWB NBR IMX KMX NPROC CLOSEC 1 23 22	9/12/09

#	Code: W2 or PREW2 or GUI	Fix or En- hancement Type	Description of Bug/Enhancement	Date Bug Fixed or En- hancement added
15	W2	Command line pro- cessing for windows	In the windows version of the w2 model, the user can now supply a command line argument that sets the working directory of the code. Hence, one does not need to copy the model executable into every directory. In a batch file, for example, one can execute the following command: W2_ivf.exe "C:\scott\w2workshop\2009 workshop\waterqual\problem3" The w2 model now uses the supplied directory (in double quotes) as the working directory for all the files. The command line argument has one blank space between the end of the executable and the first quote. The working directory is displayed in a text box in the window.	9/12/09
16	W2	W2 window closed at end of successful execution	At the end of a windows run, the windows dialog box waits for the user to press 'close' to exit the window. This allows the user to examine the final run parameters. In the w2_con.npt file there is now an option to close this window when the run has completed. If this option is not set, then the dialog box will stay until the user clicks 'close'. This allows for efficient batch processing of the model, especially if user in conjunction with command line processing mentioned in #15. GRID NWB NBR IMX KMX NPROC CLOSEC O NW When CLOSEC is set to ON, then the dialog box will disappear once the run finishes. If it is set to OFF, then the dialog box will remain until the user clicks 'close'.	9/12/09
17	User Man- ual	Updates	Updates and changes to the control file (#13-#16) were reflected in an updated User Manual.	9/12/09

#	Code: W2 or PREW2 or GUI	Fix or En- hancement Type	Description of Bug/Enhancement	Date Bug Fixed or En- hancement added
18	GUI	Updates	The GUI was updated with the following: (1) new control file parameters NPROC and CLOSEC were added (see #14 and 16). There is also a SELECTC that will be used in V3.7 that has been included – ignore it for now. (2) The GUI also can be controlled by command line passing of the working directory and file. In a batch program or from the command line in a DOS box you can execute the GUI as follows: "C:\scott\research\corps of engineers\tomcole\w2code\GUI36\w2control\w2control36.exe" C:\scott\w2workshop\2009 workshop\waterqual\problem1\w2_con.npt The first string in quotes executes the GUI. The command line argument is NOT in quotes. This program was developed in VB6 and does not take quotes around the command line. Note that this is different than the FORTRAN command line argument. So the above command will open the GUI and load the control file automatically. (3) A text box now shows the file path and name of the file that you are working on (4) In file open, earlier all *.npt files were shown. Since only "w2_con.npt" files are loaded into the GUI, only the "w2_con.npt" file was shown for opening.	9/12/09

#	Code: W2 or PREW2 or GUI	Fix or En- hancement Type	Description of Bug/Enhancement	Date Bug Fixed or En- hancement
19	W2	Gates, spill- ways, pipes	Whenever DOWN was specified for a gate, spillway or pump, the model estimated the water level at the end of the segment, rather than using the branch center water level. This is important in sloping river systems where a long segment may have a water surface elevation drop between the segment center and the edge. In the past this was computed assuming the slope of the channel. This was updated to estimate the water surface elevation using linear interpolation rather than the grid slope. Below is an example of the code fix – in this case for GATES: OLD CODE: ELIU=ELWS (IUGT (JG)) - SINA (JBUGT (JG)) *DLX (IUGT (JG)) *0.5 NEW CODE: ELIU= ELWS (IUGT (JG)) + (ELWS (IUGT (JG)) - ELWS (IUGT (JG)) - 1)) / (0.5* (DLX (IUGT (JG)) + DLX (IUGT (JG) - 1)) *DLX (IUGT (JG)) *0.5	9/25/09
20	W2	New execut- able	A new executable was made using a new release of Intel Version 11 compiler that corrected problems with Windows 7 applications.	9/25/09

21	W2	ICE cover al-	There were a couple logic errors in the ice cover algo-	10/20/09
		gorithm	rithm. These were corrected below:	
			!****** Ice thickness	
			ICETH(I) = ICETH(I)+ICETHU+ICETH1+ICETH2	
			<pre>IF (ICETH(I) < ICE_TOL)</pre>	
			ICETH(I) = 0.0 IF (WINTER .AND. (.NOT.	
			ICE_IN(JB))) THEN	
			<pre>IF (.NOT. ALLOW_ICE(I)) ICETH(I) = 0.0</pre>	
			END IF ICE(I) = ICETH(I) > 0.0	
			<pre>IF (ICE(I))THEN !</pre>	
			3/27/08 SW ICESW(I) = 0.0	
			ELSE	
			<pre>ICESW(I) = 1.0 ENDIF</pre>	
			ICETHU = 0.0 ICETH1 = 0.0	
			ICETH2 = 0.0	
			IF (ICETH(I) < ICE_TOL .AND. ICETH(I) > 0.0) ICETH(I) = ICE TOL	
			ELSE	
			IF (TERM_BY_TERM(JW)) CALL EQUILIBRIUM_TEMPERATURE ! SW	
			10/20/09 Must call this first otherwise ET and CSHE are 0	
			HIA =	
			0.2367*CSHE(I)/5.65E-8 ! JM 11/08 convert SI units of m/s to	
			English (btu/ft2/d/F) and then back to SI	
			W/m2/C ! ICETH(I) =	
			MAX(0.0, ICETH(I)+DLT*((RIMT- ET(I))/(ICETH(I)/RK1+1.0/HIA)-(T2(KT,I)-	
			RIMT))/RHOIRL1) ! OLD CODE	
			ICETH(I) = MAX(0.0,ICETH(I)+DLT*((RIMT-	
			ET(I))/(ICETH(I)/RK1+1.0/HIA)-	
			HWI(JW)*(T2(KT,I)-RIMT))/RHOIRL1) ! SW 10/20/09 Revised missing HWI(JW)	
			<pre>ICE(I) = ICETH(I) > 0.0 ICESW(I) = 1.0</pre>	
			IF (ICE(I)) THEN	
			! TFLUX = 2.392E- 7*(RIMT-T2(KT,I))*BI(KT,I)*DLX(I) ! OLD	
			CODE	
			TFLUX = 2.392E-7*HWI(JW)*(RIMT-T2(KT,I))*BI(KT,I)*DLX(I)	
			! SW 10/20/09 Revised missing HWI(JW) TSS(KT,I) = TSS(KT,I)	
			+TFLUX	
			TSSICE(JB) = TSSICE(JB)+TFLUX*DLT	
			ICESW(I) = 0.0	
			END IF END IF	
			END DO END IF	
			END IF	
22	W2	Gates output	The following bug was found in defining which branch	3/24/10
		in QWD file	a gate was located. This affected the output for the	

#	Code: W2 or PREW2 or GUI	Fix or En- hancement Type	Description of Bug/Enhancement	Date Bug Fixed or En- hancement added
			<pre>withdrawals at a location where there were gates that were not tied to other branches. Old code: JWUGT (JG) = JW</pre>	dated
			<pre>New code: JWUGT(JG) = JW</pre>	

#	Code: W2 or PREW2 or GUI	Fix or En- hancement Type	Description of Bug/Enhancement	Date Bug Fixed or En- hancement added
23	PreW2	Reading of WSC	Reading in of the WSC file was limited to only 100 dates in the preprocessor. This limitation was fixed by the code shown below: ! DO J=1,100 28995 continue ! cb 3/26/10 READ (NPT,'(10F8.0:/(8X,9F8.0))',END=29000) SDAY, (WSC(I),I=1,IMX)	3/26/10
24	PreW2	Check on LAT or DOWN	Added an enhancement to do a check in case a spillway, pipe, pump, or gate was specified as 'DOWN'. In all cases where 'DOWN' is specified, the segment that the hydraulic structure originates must be at the end of a branch. Additional logic was added to check for this in all the hydraulic structures.	3/26/10
25	W2 Man- ual	Light extinc- tion, ice	Added more text to the section on computation of light extinction and inserted a missing reference. Revised an equation for clarity in ICE algorithm and added more explanation on how to estimate HICE.	4/13/2010
26	W2 Man- ual	Precipitation input file	The units of precipitation are in m/s. The example precipitation input file was changed to more realistic values.	4/14/2010

#	Code: W2 or PREW2 or GUI	Fix or En- hancement Type	Description of Bug/Enhancement	Date Bug Fixed or En- hancement added
27	W2	ICE	Added code to account for the need to compute long wave radiation in case user chose the equilibrium temperature approach. Fixed subscript error in ice melt computation. Also, made the variable TICE double precision since it is assumed double precision in the call to Surface_terms. New code: IF (ICE(I)) THEN TICE = TAIR(JW) DEL = 2.0 J = 1 if (tair(jw).ge.5.0) then ! SW 4/19/10 RANLW(JW) = 5.31E- 13*(273.15+TAIR(JW))**6*(1.0+0.0017*CLOUD (JW)**2)*0.97 else RANLW(JW) = 5.62E- 8*(273.15+TAIR(JW)))**4*(10.261*exp(-7.77E-4*TAIR(JW))**2))*(1.0+0.0017*CLOUD(JW)**2)*0.97 endif RN1=SRON(JW)/(REFL*RHOWCP)*SHADE(I)*(1.0-ALBEDO(JW))*BETAI(JW)+RANLW(JW)! SW 4/19/10 DO WHILE (DEL > 1.0 .AND. J < 500) CALL SURFACE_TERMS (TICE) RN(I) = RN1-RB(I)- RE(I)-RC(I) ! 4/19/10 ! RN(I) = RN1-RB(I)- RE(I)-RC(I) ! 0LD CODE DEL = RN(I)+RK1*(RIMT-TICE)/ICETH(I) IF (ABS(DEL) > 1.0) TICE = TICE+DEL/500.0 J = J+1	4/19/10
28	W2	Evaporation	Units for EV in the SNP file were given in m/s but were actually m^3/s	4/21/10

#	Code: W2 or PREW2 or GUI	Fix or En- hancement Type	Description of Bug/Enhancement	Date Bug Fixed or En- hancement added
29	W2	Ice	In the ice melt algorithm, SRON should not have been divided by RHOCP in computing RN1 and DEL in the DO WHILE loop should have been ABS(DEL) rather than DEL:	4/21/2010
			RN1=SRON(JW)/REFL*SHADE(I)*(1.0- ALBEDO(JW))*BETAI(JW)+RANLW(JW) ! SW 4/19/10 eliminate spurious divsion of SRO by RHOCP DO WHILE (ABS(DEL) > 1.0 .AND. J < 500) ! SW 4/21/10 Should have been ABS of DEL CALL SURFACE_TERMS (TICE)	
30	PRE	Constituent loading	The output from the preprocessor in the pre.opt file for constituent loading was in kg rather than the output header of kg/day. The output was updated to kg/day by adding the following lines of code:	5/10/10
			<pre>cdtload(incdt(1:NACdt(Jb), Jb), jb) = cdtload (incdt(1:NACdt(Jb), Jb), jb) / (jday-tstart) ! CB 5/10/10 Change units to kg/day</pre>	
			<pre>ctrload(trcn(1:NACtr(Jt),Jt),jt)=ctrload(trcn(1:NACtr(Jt),Jt),jt)/(JDAY-TSTART) !CB 5/11/10 convert to units of kg/day</pre>	

#	Code: W2 or PREW2 or GUI	Fix or En- hancement Type	Description of Bug/Enhancement	Date Bug Fixed or En- hancement added
31	W2	Gate, spill- ways, pipes	In the case where the user has specified that the flow is DOWN, in the case of reverse flow, the model did not assign the flow correctly if the user had no other tributaries or withdrawals specified in the control file. For this rare event, additional code was written to account for this fact. Also, a logic error was discovered in reverse flow for spillways and gates. This was corrected. New code added to hydroinout.f90: JWW = NWD withdrawals = jww > 0 ! 6/4/10 SW JTT = NTR tributaries = jtt > 0 ! 6/4/10 SW JSS = NSTR IF (SPILLWAY) THEN END IF tributaries = jtt > 0 ! 6/4/10 SW withdrawals = jww > 0 ! 6/4/10 SW	6/4/10
			DO JW=1, NWB KT = KTWB (JW) DO JB=BS (JW), BE (JW) New code in gate-spill-pipe.f90:	
			For spillway: IF (ISUB == 0) THEN DLEL = ELIU-ESP(JS) IF (ELID > ESP(JS)) DLEL = ELIU-ELID ! SW 6/7/10 IF (DLEL < 0.0) THEN	

#	Code: W2 or PREW2	Fix or En- hancement	Description of Bug/Enhancement	Date Bug Fixed or En-
	or GUI	Туре		hancement added
32	W2	Branch inter- sections with multiple wa- terbodies	In cases where there are branch intersections between waterbodies, it was possible that the variable KBI and KB were incorrectly set. Here is the fix: Move the statement defining KBI in the subroutine initgeom.f90 to the place shown below (delete the earlier reference): IF (B(K, ID+1) == 0.0) B(K, ID+1) = B(K-1, ID+1) IF (IEXIT == 1) EXIT	10/30/2010
			END IF END IF END DO END DO ! SW 1/23/06 END DO ! SW 1/23/06 bnew=b ! SW 1/23/06 KBI = KB ! SW 10/30/2010	
			<pre>!**** Upstream active segment and single layer ! 1/23/06 entire section moved SW DO JW=1,NWB KT = KTWB(JW) DO JB=BS(JW),BE(JW)</pre>	
33	W2	SS resuspension	The code index was incorrect in the loop for computing resuspension. This led in some compilers to an infinite loop. The corrected code is shown below: SSSS(KT,I,J) = - SSS(J)*SS(KT,I,J)*BI(KT,I)/BH2(KT,I)+SSR DO K=KT-1,KB(I)-1 DO K=KT,KB(I)-1 JP 2/3/12 IF (SEDIMENT_RESUSPENSION(J)) THEN Thanks to James Pasley for this bug report/fix.	2/3/2012

W2 V3.5 Bug Fixes, Enhancements, and User Manual Changes

Table 8. Bug fixes and enhancements for Version 3.5.

#	Code: W2	Fix or En-	Description of Bug/Enhancement	Date Bug Fixed
	or PREW2	hance-ment		or Enhance-
	or GUI	Туре		ment Added
1	W2	Zooplank-	Sign error in the zooplankton grazing on	8/23/06
		ton-algae	algae term	
2	W2	Input/output	Format for I/O was changed to allow bet-	8/23/06
			ter decimal precision of output	
3	W2	Sediment	The sediment settling rate was acci-	10/26/06
		settling rate	dentally used for POM settling. This was	
			fixed. The old and new code lines are	
			shown below:	
			OLD:	
			sedsum = sed-	
			sum+seds(JW)*(LPOM(K,I)*lpomdk(jw)+RPO M(K,I)*rpomdk(jw))*BI(K,I)/BH2(K,I)*(1 .0-BI(K+1,I)/BI(K,I))	
			NEW:	
			sedsum = sed-	
			sum+poms(JW)*(LPOM(K,I)*lpomdk(jw)+RPO	
			M(K,I)*rpomdk(jw))*BI(K,I)/BH2(K,I)*(1 .0-BI(K+1,I)/BI(K,I)) ! cb 10/22/06	
			This was an issue in the SEDIMENT,	
			SEDIMENT C, SEDIMENT P,	
			SEDIMENT N, and SEDIMENT DECAY	
			RATE subroutines.	

#	Code: W2 or PREW2 or GUI	Fix or En- hance-ment Type	Description of Bug/Enhancement	Date Bug Fixed or Enhance- ment Added
4	W2	Sediment burial	An algorithm was added for sediment burial. This is now a new parameter in the sediment part of the control file. An updated user manual description is forth-coming. The sediment burial rate SEDB (day ⁻¹) can be specified in the "SEDIMENT" card section of the control file. A different burial rate can be specified for each water body.	11/30/06
			OLD/NEW line (example): ! SED(K,I) = MAX(SED(K,I)+(LPOMEP(K,I)+SEDAS(K,I)+S EDOMS(K,I)+SEDNS(K,I)- SED(K,I)+SEDNS(K,I)- SED(K,I) = MAX(SED(K,I)+(sedem+SEDAS(K,I)+sedcb(K,I)+SEDOMS(K,I)+SEDNS(K,I)-SEDD(K,I)- sedbr(k,i)+SEDNS(K,I)-SEDD(K,I)- sedbr(k,i)+SEDT,0.0) ! cb 11/30/06	
5	Control File	Add burial rate for sedi- ment model	This is the change in #4 above implemented in the control file. The new variable SEDBR is added in f8 format after the FSED variable. SEDBR: sediment burial rate in units of per day. SEDIMENT SEDC SEDPRC SEDCI SEDK SEDS FSOD FSED SEDBR WB 1 ON ON 0.00000 0.10000 0.10000 0.1 1.00000 1.00000 1.0	

# Code: W2 or PREW2 or GUI	Fix or En- hance-ment Type	Description of Bug/Enhancement	Date Bug Fixed or Enhance- ment Added
6 W2	Sediment heating and sediment processes	If a model added and subtracted layers that resulted in segment addition and subtraction, there was the possibility that sediment fluxes were incorrectly computed. In the NO3 subroutine: Old code: NO3SED(K,I) = NO3(K,I)*NO3S(JW)*NO3TRM(K,I)*(BI(K,I))*(B	4/18/07

#	Code: W2 or PREW2 or GUI	Fix or En- hance-ment Type	Description of Bug/Enhancement	Date Bug Fixed or Enhance- ment Added
6	W2	(see above)	<pre>New code added for heat flux to channel bottom: if (kt == kb(i)) then ! SW 4/18/07</pre>	4/18/07
			<pre>if (k==kb(i)) then ! SW 4/18/07</pre>	
			New code added for sediment subroutine: if (k == kb(i)) then ! SW 4/18/07	

led
,

#	Code: W2	Fix or En-	Description of Bug/Enhancement	Date Bug Fixed
	or PREW2	hance-ment		or Enhance- ment Added
	or GUI	Туре		
9	W2	Array deallo-	The deallocate command on line 7557	6/4/2007
		cation	was commented out to avoid a dealloca-	
			tion error when the 'STOP' button is	
			pushed during execution on a PC.	
			! deallocate (sedbr, sedbrp, sedbrn, sed- brc) ! SW 6/4/07 No need to deallo-	
			cate pointers	
10	W2	Initialization	For code setting up an external head BC,	6/17/2007
		of IUT	the variable IUT was not initialized before	
			it was used. This was fixed below:	
			!**** Boundary bottom layers	
			! IF (UH_EXTERNAL(JB)) KB(IUT-1) = KB(IUT)	
			IF (UH_EXTERNAL(JB)) KB(IU-1) =	
			KB(IU) !cb 6/12/07	
			IF (UH INTERNAL(JB)) THEN	
			IF (JBUH(JB) >= BS(JW) .AND.	
			JBUH(JB) <= BE(JW)) THEN KB(IUT-1) =	
			MIN (KB (UHS (JB)), KB (IUT))	
			KB(IU-1) = MIN(VD(IUBC(ID)) VD(IU))	
			MIN(KB(UHS(JB)), KB(IU)) !cb 6/12/07	
			ELSE	
			! IF (EL(KB(IUT), IUT) >= EL(KB(UHS(JB)), UHS(JB))) THEN	
			<pre>IF (EL(KB(IU),IU) >=</pre>	
			EL(KB(UHS(JB)), UHS(JB))) THEN !cb 6/12/07	
			! $KB(IUT-1) = KB(IUT)$	
			KB(IU-1) = KB(IU) ELSE	
			! DO K=KT,KB(IUT)	
			! IF (EL(KB(UHS(JB)),UHS(JB)) >= EL(K,IUT))	
			THEN ! KB(IUT-1) = K; EXIT	
			DO K=KT,KB(IU) !cb 6/12/07	
			IF	
			(EL(KB(UHS(JB)), UHS(JB)) >= EL(K, IU)) THEN !cb 6/12/07	
			KB(IU-1) = K; EXIT	
	14/2	60.00	END IF	7/22/27
11	W2	CBOD set-	The CBOD settling rate earlier was not	7/23/07
		tling	converted from m/d in the control file to	
			m/s in the code.	
			Added	
			Added code:	
			cbods = cbods/day !cb 7/23/07	

#	Code: W2 or PREW2 or GUI	Fix or En- hance-ment Type	Description of Bug/Enhancement	Date Bug Fixed or Enhance-ment Added
12	W2	TSR output	The surface width was not correctly being output. Changed BI(KT) to BI(KTWB(JW)). FIX: BI(KTWB(JW),I),SHADE(I),ICETH(I),(ADJU STR(C2CH(JAC)),JAC=1,NAC), & ! CB 7/26/07	7/26/07
13	PREW2	Pumps	The pump control for DOWN or LAT was not being checked properly, also a check on IUPUC was incorrect. Fixed.	8/14/07
14	W2	Algae	The logic for negative settling velocities for algae had an error. Old code: !	8/27/07
15	GUI	NZOOP	When # of zooplankton was set equal to zero, there was an array dimensioning error that caused the writing of the control file to only proceed part way. Fixed.	9/17/07

#	Code: W2 or PREW2 or GUI	Fix or En- hance-ment Type	Description of Bug/Enhancement	Date Bug Fixed or Enhance- ment Added
16	W2	Open chan- nel flow	Variable passed between subroutines had inconsistent declaration between routines. ! REAL, ALLOCATABLE, DIMENSION(:) :: Y, D, B, V, CAREA, TOPW, BELEV, Q, VOLD, YOLD	10/4/07
			REAL, ALLOCATABLE, DIMENSION(:) :: Y, B, V, CAREA, TOPW, BELEV, Q, VOLD, YOLD ! cb 10/1/07 ! ALLOCATE (Y(NN), V(NN), CAREA(NN), TOPW(NN), BELEV(NN), Q(NN), VOLD(NN), YOLD(NN), D(NN), B(NN))	
			ALLOCATE (Y(NN), V(NN), CAREA(NN), TOPW(NN), BELEV(NN), Q(NN), VOLD(NN), YOLD(NN), B(NN)) ! cb 10/1/07	
			! DEALLOCATE (Y, V, CAREA, TOPW, BELEV, Q, VOLD, YOLD, D, B, YT, VT, VPR, YPR, TAREA, TOPWT, RT, INDX, AL, DAA)	
			DEALLOCATE (Y, V, CAREA, TOPW, BELEV, Q, VOLD, YOLD, B, YT, VT, VPR, YPR, TAREA, TOPWT, RT, INDX, AL, DAA) ! cb 10/1/07	
17	W2	TKE model	The TKE algorithm had several bugs that	10/4/07
			have been fixed, these included making	
			the loop over layers go to KBMIN (rather	
			than KB), the original code overwrote the	
			boundary conditions when using the	
			Thomas algorithm, the original code	
			overwrote vertical eddy viscosity at the	
			bed during the averaging process, Δz_k	
			changed to $\Delta z_{k+1/2}$, TKE array was initial-	
			ized to zero, TKE was implemented in	
			add/sub layers like AZ. Many of these fixes are a result of the work of Sam	
			Gould (Gould, 2006) who wrote an MS	
			project report at PSU entitled "k-e Turbu-	
			lence Model." Further recommendations	
			by Gould (2006) will be incorporated into	
			the next version of CE-QUAL-W2.	
			The old code is shown below as a refer-	
			ence to the new code in the release ver-	
			sion.	

#	Code: W2 or PREW2 or GUI	Fix or En- hance-ment Type	Description of Bug/Enhancement	Date Bug Fixed or Enhance- ment Added
	_		OLD CODE ENTRY CALCULATE_TKE	
			gc2=g*fric(i)*fric(i)/hrad**0.33333333 end if	

#	Code: W2	Fix or En-	Description of Bug/Enhancement	Date Bug Fixed
#	Code: W2 or PREW2 or GUI	Fix or Enhance-ment Type	<pre>! v3.5 end END IF PRHK = GC2/(0.5*B(K,I))*ABS(0.5*(U(K,I)+U(K,I)-1))**3.0 UNST = PRDK-TKE(K,I,2) UNSE = 1.44*TKE(K,I,2)/TKE(K,I,1)*PRDK- 1.92*(TKE(K,I,2)/TKE(K,I,1)*TKE(K,I,2)) TKE(K,I,1) = TKE(K,I,1)+DLT*(UNST+PRHK-BOUK) TKE(K,I,2) = TKE(K,I,2)+DLT*(UNSE+PRHE) END DO USTARB = SQRT(GC2)*ABS(0.5*(U(KB(I),I)+U(KB(I),I-1))) TKE(KB(I),I,1) = 0.5*(3.33*USTARB*USTARB+TKE(KB(I),I,1)) TKE(KB(I),I,2) = 0.5*(USTARB*USTARB*USTARB*5.0/H(KB(I),JW)+TKE(KB(I),I,2)) AT = 0.0; CT = 0.0; VT = 0.0; DT = 0.0 DO J=1,2 DO K=KT,KB(I) AT(K,I) = -DLT/BH1(K,I)*BB(K-1,I)/SIG(J)*AZ(K-1,I)/AVH1(K-1,I) CT(K,I) = - DLT/BH1(K,I)*BB(K,I)/SIG(J)*AZ(K,I)/AV H1(K,I) VT(K,I) = 1.0-AT(K,I)-CT(K,I) DT(K,I) = TKE(K,I,J) END DO CALL TRIDIAG(AT(:,I),VT(:,I),CT(:,I),DT(:,I),KT,KB(I),KMX,TKE(:,I,J)) END DO DO K=KT,KB(I) TKE(K,I,1) = MAX(TKE(K,I,2) = MAX(TKE(K,I,2),TKEMIN2)</pre>	Date Bug Fixed or Enhancement Added
			AZ(K,I) = 0.09*TKE(K,I,1)*TKE(K,I,1)/TKE(K,I,2) END DO ! Center at cell faces DO K=KT,KB(I)-1	
			AZ(K,I) = 0.5*(AZ(K,I)+AZ(K+1,I)) AZ(K,I) = MAX(AZMIN,AZ(K,I)) AZ(K,I) = MIN(AZMAX(JW),AZ(K,I)) DZ(K,I) = MAX(DZMIN,FRAZDZ*AZ(K,I)) END DO	
18	W2	Restart	Added TKE to restart variables written out and read in.	10/5/07

#	Code: W2 or PREW2	Fix or En- hance-ment	Description of Bug/Enhancement	Date Bug Fixed or Enhance-
	or GUI	Туре		ment Added
19	GUI	ET	The equilibrium temperature option in	10/9/07
			the drop down menu was 'EQT' rather	
			than 'ET'. Fixed.	
20	W2	Sediment	The SEDIMENT subroutine did not have any computational mistakes, just an error in assigning all array variables to the value at K,I. This resulted in excessive computational time. The fix is shown below: OLD sedbr = sedb(jw)*sed(k,i) NEW sedbr(K,I) = sedb(jw)*sed(k,i)	10/15/07

#	Code: W2 or PREW2 or GUI	Fix or En- hance-ment Type	Description of Bug/Enhancement	Date Bug Fixed or Enhance- ment Added
21	W2	TKE	Turbulence model had an improper averaging between layers. A new temporary variable was defined to temporarily store the values for AZ prior to averaging to the bottom/top of the layers and the horizontal layers. This also affected the computation of DZ. Fixed. New code defined AZT and allocated memory for it, such that AZT (K, I) = 0.09*TKE (K, I, 1)*TKE (K, I, 1)/T KE (K, I, 2) and AZ (K, I) = 0.5* (AZT (K, I) +AZT (K+1, I)) Similarly for the horizontal averaging and for DZ. Also, the values of DZ were fixed to be at the bottom of a cell and AZ was fixed to be at the bottom right-hand edge of a cell as shown below: CE-QUAL-W2 coordinate system * p,	12/17/07

#	Code: W2 or PREW2 or GUI	Fix or En- hance-ment Type	Description of Bug/Enhancement	Date Bug Fixed or Enhance-ment Added
22	W2	SS settling	The incorrect cell width was used for SSSO. BI(KT,I) was changed to BI(K,I). OLD CODE: SSSO(K,I) = (TOTSSO+FES(JW)*FPFE(K,I))*B I(KT,I)/BH2(K,I)*DO1(K,I) FPSS(K,I) = FPSS(K,I)*TISS(K,I) NEW CODE: SSSO(K,I) = (TOTSSO+FES(JW)*FPFE(K,I))*B I(K,I)/BH2(K,I)*DO1(K,I) FPSS(K,I) = FPSS(K,I)*TISS(K,I)	12/17/07
23	W2	Initial-ization of one-layer	The definition of KBMIN was not updated if the model started out in some segments with only one_layer. This has been fixed. Added code highlighted: DO I=IU, ID IF (KB(I)-KT < NL(JB)-1) IUT = I+1 ONE_LAYER(I) = KT == KB(I) END DO CUS(JB) = IUT ! reinitialize KBMIN DO I=IU-1, ID KBMIN(I) = MIN(KB(I), KB(I+1)) END DO KBMIN(ID+1) = KBMIN(ID) !**** Areas and bottom widths IF (.NOT. TRAPEZOIDAL(JW)) THEN	12/17/07

#	Code: W2 or PREW2 or GUI	Fix or En- hance-ment Type	Description of Bug/Enhancement	Date Bug Fixed or Enhance- ment Added
24	W2	Bottom processes	This is a couple more fixes related to bug fix #6 above. The Denitrification rate and epiphyton burial rates could be affected based on unique combinations of adding/subtracting segments that left the value of BI in an inactive layer below KB defined incorrectly. In order to prevent the possibility of problems, the following fixes were made: Old Code: SedNO3 (K, I) = NO3 (K, I) *NO3S (JW) *NO3TRM (K, I) * (BI (K, I) -BI (K+1, I)) / BH2 (K, I) EPM (K, I, J) = EPD (K, I, J) * (BI (K, I) -BI (K+1, I) +2.0*H1 (K, I)) * DLX (I) New code: if (k == kb(i)) then ! SW 12/16/07 sedNO3 (K, I) = NO3 (K, I) *NO3S (JW) *NO3TRM (K, I) * (BI (K, I)) / BH2 (K, I) else SedNO3 (K, I) = NO3 (K, I) *NO3S (JW) *NO3TRM (K, I) * (BI (K, I) +BI (K+1, I)) / BH2 (K, I) endif if (k == kb(i)) then ! SW 12/16/07 EPM (K, I, J) = EPD (K, I, J) * (BI (K, I) +2.0*H1 (K, I)) * DLX (I) else EPM (K, I, J) = EPD (K, I, J) * (BI (K, I) -BI (K+1, I) +2.0*H1 (K, I)) * DLX (I) endif	12/17/2007

#	Code: W2 or PREW2	Fix or En- hance-ment	Description of Bug/Enhancement	Date Bug Fixed or Enhance-
25	W2	CBODS	If the user defined particulate CBOD that settles to the bottom and had SED turned ON, the conversion from oxygen to organic matter was missing in the accumulation on the channel bottom or sides. OLD do jd=1,nbod SEDcb(K,I) = SEDcb(K,I) +MAX(cbods(jd),0.0)*cbod(K,I,Jd)*BI(K,I)/BH2(K,I)*(1.0-BI(K+1,I)/BI(K,I)) end do NEW do jd=1,nbod SEDcb(K,I) = SEDcb(K,I) +MAX(cbods(jd),0.0)*(cbod(K,I,Jd)/O2OM(JW))*BI(K,I)/BH2(K,I)*(1.0-BI(K+1,I)/BI(K,I)) ! 1/16/08	ment Added 1/18/08
26	W2	SEDBR	end do Eliminated a redundant definition of SEDBR in the Sediment routine since it is already defined in the Kinetic rates sub- routine.	1/18/08

#	Code: W2 or PREW2 or GUI	Fix or En- hance-ment Type	Description of Bug/Enhancement	Date Bug Fixed or Enhance-ment Added
27	W2	SEDDK	The first order sediment decay rate is an average of the decay rates of all the influxes of organic matter and their respective decay rates. There was an error in computing this average decay rate for CBOD treated as particulate. Code fix is shown below:	1/18/08
			<pre>OLD do jd=1,nbod</pre>	
			<pre>NEW do jd=1,nbod</pre>	
28	W2	SRO	There are some cases when segments were added/subtracted that the value of BI was not correctly initialized. This code is a fix to prevent such occurrences: OLD CODE: SRONET = SROIN-SROOUT SROSED = SROOUT*(1.0- BI(K+1,I)/BI(K,I))*TSEDF(JW) NEW CODE: SRONET = SROIN-SROOUT if(k /= kb(i)) then ! SW 1/18/08 SROSED = SROOUT*(1.0- BI(K+1,I)/BI(K,I))*TSEDF(JW) else SROSED = SROOUT*TSEDF(JW) endif	1/18/2008

#	Code: W2 or PREW2 or GUI	Fix or En- hance-ment Type	Description of Bug/Enhancement	Date Bug Fixed or Enhance-ment Added
29	W2	Water Quality	Added several calls to prevent computation of kinetic variables if epiphyton are defined in the control file with NEP=1 or more but is not ACTIVE or turned ON. If the kinetic expressions are non-zero and the initial concentration is given, then this could add source/sink terms to the oxygen balance. This is typical of the code changes – since several of this type were made: OLD CODE: DO JE=1,NEP PO4EG(K,I) = PO4EG(K,I)+EGR(K,I,JE)*EPC(K,I,JE)*EP(JE) PO4ER(K,I) = PO4ER(K,I)+ERR(K,I,JE)*EPC(K,I,JE)*EP(JE) END DO NEW CODE: IF (EPIPHYTON_CALC(JW,JE))then ! SW 1/18/2008 PO4EG(K,I) = PO4EG(K,I)+EGR(K,I,JE)*EPC(K,I,JE)*EP(JE) PO4ER(K,I) = PO4ER(K,I)+ERR(K,I,JE)*EPC(K,I,JE)*EP(JE)	1/18/2008
			endif	

#	Code: W2 or PREW2 or GUI	Fix or En- hance-ment Type	Description of Bug/Enhancement	Date Bug Fixed or Enhance- ment Added
30	W2	Bottom pro-	Continuation of bug fix #24 in such places	1/18/2008
		cesses	as	
			<pre>New code: IF(K == KB(I))THEN</pre>	
			SEDAS(K,I) = SEDAS(K,I) +MAX(AS(JA),0.0)*ALG(K,I,JA) *xdum ! SW 1/18/08	
			SEDOMS(K,I) = pomS(JW)*(LPOM(K,I)+RPOM(K,I))*xdum !sw 1/18/08 cb 10/22/06 IF(K=KB(I))THEN ! SW 1/18/08 SEDSO = 0.0 ELSE SEDSO = sedS(JW)*SED(K,I)*BI(K+1,I)/BH2(K,I)*(1.0-BI(K+1,I)/BI(K,I))	
			Endif DO K=KT,KB(I) IF(K == KB(I))THEN xdum=BI(K,I)/BH2(K,I) ! SW 1/18/08 ELSE	
			xdum=BI(K,I)/BH2(K,I)*(1.0- BI(K+1,I)/BI(K,I)) ENDIF DO JA=1,NAL	
			SEDASp(K,I) = SEDASp(K,I) +MAX(AS(JA),0.0)*ap(ja)*ALG (K,I,JA)*xdum ! SW 1/18/08 END DO DO JE=1,NEP	
			<pre>IF (EPIPHYTON_CALC(JW, JE))LPOMEPp(K, I) = LPOMEPp(K, I) +EPOM(JE) *ep(je) * (EMR(K, I, JE) *EPC(K, I, JE)) END DO do jd=1,nbod</pre>	
			This code is repeated similarly in many of	
			the sediment routines.	

#	Code: W2 or PREW2	Fix or En- hance-ment	Description of Bug/Enhancement	Date Bug Fixed or Enhance-
	or GUI	Туре		ment Added
31	W2	Add segment	The DEPTHM and DEPTHB were not ini-	1/27/08
		initial-ization	tialized correctly when a segment was	
			added – this does not affect internal com-	
			putations, just output for SPR and SNP	
			files.	
			OLD CODE:	
			BKT(I) = BH1(KT,I)/H1(KT,I)	
			DEPTHB(K,I) = H1(KT,I) !	
			DEPTHM(K,I) = H1(KT,I)*0.5	
			NEW CODE:	
			BKT(I) = BH1(KT,I)/H1(KT,I)	
			DEPTHB(KT,I) = H1(KT,I) !	
			SW 1/27/08	
			DEPTHM(KT,I) = H1(KT,I)*0.5	
			! SW 1/27/08	

W2 V3.2 Bug Fixes, Enhancements, and User Manual Changes

Table 9. Bug fixes and enhancements for Version 3.2.

#	Code: W2 or PREW2	Fix or En- hance-ment	Description of Bug/Enhancement	Date Bug Fixed or Enhance-
	or GUI	Туре		ment Added
1	W2	Waterbody- waterbody connection	When there was negative velocities at a waterbody-waterbody connection, there was a possibility (dependent on the bathymetry of the connection at the waterbody-waterbody intersection) that there could be temperature or concentration anomalies.	8/31/04

#	Code: W2 or PREW2 or GUI	Fix or En- hance-ment Type	Description of Bug/Enhancement	Date Bug Fixed or Enhance-ment Added
2	W2	Lateral_ withdrawal	Added limit to the DLRHOMAX function: Old code: DLRHOMAX=MAX(DLRHOT,DLRHOB) New code: DLRHOMAX=MAX(DLRHOT,DLRHOB,1.0E-10)	1/25/05
3	W2	Branch con- nectivity	Logic in branch connectivity set-up was fixed Old code: IF(UHS(JB) == DS(JJJB))EXIT New code: IF(abs(UHS(JB)) == DS(JJJB))EXIT	1/25/05
4	W2	Pumpback	Pumpback logic was corrected – this is legacy code that will probably be removed from later versions of W2 Old code: DO JB=1,NBR IF (JB == JBP) JWBP = JW END DO New code: DO JW=1,NWB DO JB=BS(JW),BE(JW) IF(JB == JBP) JWBP = JW END DO END DO	1/25/05
5	W2	CPL write	Switched order of implied DO loop on CPL write statement for output of constituents	1/25/05
6	W2	PRF write	Changed output format for PRF output for constituents from f10.2 to e13.6	1/25/05

#	Code: W2 or PREW2 or GUI	Fix or En- hance-ment Type	Description of Bug/Enhancement	Date Bug Fixed or Enhance-ment Added
7	W2	Heat balance	Added the Idso and Jackson long wave radiation equation when air temperatures are below 5C. The Swinbank model underpredicts long wave incoming radiation at low air temperatures by as much as 10%. The computation of long wave atmospheric radiation is done using the approach of Swinbank (1963) unless air temperatures are less than 5°C, when the Idso and Jackson (1969) formula is used (Wells, et al., 1982). The Swingbank formula for clear sky long wave atmospheric radiation is $\phi_{ac} = 5.31E - 13(T_a + 273)^6 \text{ where units are W/m}^2, °C \text{ at 2 m height.}$ Below 40°F (5°C) the formula of Idso and Jackson is recommended (above 10°C both equations are almost identical): $\phi_{ac} = \sigma(T_a + 273)^4 \left(1 - 0.261 \exp(-7.77E - 4T_a^2)\right)$ where units are W/m² and Ta is in units of °C. The Stefan-Boltzmann constant = $5.62E-8 \text{ W/m}^2/(^\circ\text{K})^4$.	1/25/05

#	Code: W2 or PREW2 or GUI	Fix or En- hance-ment Type	Description of Bug/Enhancement	Date Bug Fixed or Enhance- ment Added
7	W2	Layer addi- tion algo- rithm	Mistyped subscript K instead of I: Old code: IF (KB(I) > KBI(I)) THEN B(KB(K),I) = 0.0 DX(KB(I),I) = 0.0 KB(I) = KB(I)-1 IF (I /= DS(JB)+1) KBMIN(I) = MIN(KB(K),KB(I+1)) IF (I /= US(JB)-1) KBMIN(I-1) = MIN(KB(I-1),KB(I)) New Code: IF (KB(I) > KBI(I)) THEN B(KB(I),I) = 0.0 ! SW 3/2/05 DX(KB(I),I) = 0.0 KB(I) = KB(I)-1 IF (I /= DS(JB)+1) KBMIN(I) = MIN(KB(I),KB(I+1)) ! SW 3/2/05 IF (I /= US(JB)-1) KBMIN(I-1) = MIN(KB(I-1),KB(I))	3/2/05
8	W2	Variable initialize-tion	In some cases when there was a layer subtraction and a time step violation immediately afterward, the variable SW was not initialized properly. This caused problems in the Tomas Algorithm for the water surface computation. The following line of code was added to the SUB layer algorithm: SW (KT-1, IU-1:ID+1) = 0.0 !TC 3/9/05 Also, the variable AVHR was defined in the Update variables for DS+1. The following new code was added: AVHR (KT, DS (JB) +1) =H1 (KT, DS (JB) +1) !SW 03/08/05	3/9/05

#	Code: W2	Fix or En-	Description of Bug/Enhancement	Date Bug Fixed
	or PREW2	hance-ment		or Enhance-
	or GUI	Туре		ment Added
9	W2	Interpola-	Possible index error if there are multiple	5/10/05
		tion multipli-	waterbodies.	
		ers	Old code:	
			RATZ(K, JW) = AVH2(K- 1, I)/AVH2(K, I)	
			CURZ1(K,JW) =	
			2.0*H(K,JW)**2/(AVH2(K- 1,I)+AVH2(K,I))/AVH2(K-1,I)	
			CURZ2(K, JW) = - 2.0*H(K, JW) **2/(AVH2(K-1, I) *AVH2(K, I))	
			CURZ3 (K, JW) =	
			2.0*H(K,JW)**2/(AVH2(K- 1,I)+AVH2(K,I))/AVH2(K,I)	
			END DO	
			New code:	
			RATZ(K, JW) = AVH2(K- 1, DS(BE(JW)))/AVH2(K, DS(BE(JW)))	
			CURZ1(K, JW) =	
			2.0*H(K,JW)**2/(AVH2(K- 1,DS(BE(JW)))+AVH2(K,DS(BE(JW))))/AVH2	
			(K-1, DS (BE (JW))) CURZ2 (K, JW) = -	
			2.0*H(K,JW)**2/(AVH2(K-	
			1, DS (BE (JW))) *AVH2 (K, DS (BE (JW)))) CURZ3 (K, JW) =	
			2.0*H(K,JW)**2/(AVH2(K-	
			1, DS(BE(JW)))+AVH2(K, DS(BE(JW))))/AVH2 (K, DS(BE(JW)))	
10	W2	Spillway and	Older code in order to check if it was sub-	5/10/05
		Gates	merged or not used the elevation differ-	
			ence relative to the channel bed on ei-	
			ther side of the weir, rather than the weir	
			crest. Also removed code line: IF (ELDN>ESP (JS)) DH+ELUP-ELDN	
11	W2	Reaeration	Corrected formula errors in Thackston	5/10/05
			and Krenkel formula:	, ,
			Old code:	
			USTAR=SQRT (ADEPTH*SLOPE (JB) *32.2) **0.5	
			REAER(I) = 24.88*(1.0+SQRT(0.176*UAVG/SQRT(ADEPTH	
)))*USTAR	
			New code: USTAR=SQRT (ADEPTH*SLOPE (JB) *32.2)	
			REAER(I) =	
			24.88*(1.0+SQRT(0.176*UAVG/SQRT(ADEPTH)))*USTAR/ADEPTH	
			Similar changes were made to the updated	
			Thackston model (Eqn 10)	
12	W2	Violations	The variable BI and VOL was not initial-	8/25/05
		NV	ized properly during a time-step viola-	
			tion.	

#	Code: W2 or PREW2	Fix or En- hance-ment	Description of Bug/Enhancement	Date Bug Fixed or Enhance- ment Added
12	or GUI	Type	The variable BI was not initialized	
13	W2	ADD a layer		8/25/05
			properly during an ADD layer.	
14	W2	TRIDIAG sub-	Insert Deallocate Statement in Tridiag	10/17/05
		routine	SUBROUTINE TRIDIAG (A, V, C, D, S, E, N, U) USE PREC INTEGER, TENT (IN) :: S, E, N REAL (R8), INTENT (IN) :: A (E), V (E), C (E), D (E) REAL, INTENT (OUT) :: U (N) REAL (R8), ALLOCATABLE, DIMENSION(:) ALLOCATE (BTA (N), GMA (N)) BTA (S) = V (S) GMA (S) = D (S) DO I = S+1, E BTA (I) = V (I) - A (I) / BTA (I - 1) * C (I - 1) GMA (I) = D (I) - A (I) / BTA (I - 1) * GMA (I - 1) END DO U(E) = GMA (E) / BTA (E) DO I = E-1, S, -1 U(I) = (GMA (I) - C (I) * U (I + 1) / BTA (I) END DO Deallocate (BTA, GMA) < ! SW 10/17/05	
15	W2	SUB layer	In SUB Layer/Sub Seg - eliminate pa-	10/17/05
13	VVZ	30b layer	rentheses which caused a sign error	10/1//05
			IF (.NOT. TRAPEZOIDAL(JW)) THEN	
			BI(KT, IU-1) = B(KTI(IU-1), I) H1(KT, IU-1) = H(KT, JW) - Z(IU-1)	
			BH1(KT, IU-1) = B(KTI(IU- 1), IU-1)*(EL(KT, IU-1)-EL(KTI(IU-1)+1, IU-	
			1)-Z(IU-1)*COSA(JB))/COSA(JB) <	
			! SR 10/17/05 IF (KT >= KB(IU-1))	
			BH1(KT,IU-1) = B(KT,IU-1)*H1(KT,IU-1) DO K=KTI(IU-1)+1,KT	
			BH1(KT, IU-1) = BH1(KT, IU-	
			1) +BH1 (K, IU-1) END DO	
			ELSE	

Code: W2 or PREW2	Fix or En- hance-ment	Description of Bug/Enhancement	Date Bug Fixed or Enhance-
or GUI			ment Added
	hance-ment Type		•
		branch geometry: !**** Upstream active segment and single	
	or PREW2 or GUI	or PREW2 hance-ment Type W2 SUB layer for shallow sys-	Name

#	Code: W2	Fix or En-	Description of Bug/Enhancement	Date Bug Fixed
	or PREW2	hance-ment		or Enhance-
	or GUI	Туре		ment Added
17	W2	Shade algo-	No errors just an improvement in com-	10/17/05
		rithm	putational efficiency.	20, 27, 00
			Delete this from the SHADING subroutine:	
			!** Set the angles for which topographic	
			shade data are available DO II=1,IANG	
			ANG(II) = ((II-	
			1)*(360.0/FLOAT(IANG)))*PI/180.0 END DO	
			GAMMA = (2*PI)/IANG	
			and change the 2 occurrences of gamma to gama	
			(only in shading subroutine): ANG2 = (TOPO(I, J+1) -	
			TOPO(I,J))/GAMA SW 10/17/05</td <td></td>	
			TOPOANG = TOPO(I, J) +ANG2*ANG1	
			ENDIF END DO	
			IF (AZ00 > ANG(IANG) .AND. AZ00 <=	
			2*PI) THEN ANG1 = AZ00-ANG(IANG)	
			ANG2 = (TOPO(I,1)-	
			TOPO(I, IANG))/GAMA SW 10/17/05 ADD a line to the module SHADEC:</td <td></td>	
			MODULE SHADEC	
			PARAMETER (IANG=18)	
			REAL, PARAMETER :: GAMA=(3.1415926*2.)/REAL(IANG) SW</td <td></td>	
			10/17/05	
			REAL, DIMENSI ON (IANG):: ANG SW 10/17/05</td <td></td>	
			REAL, ALLOCATABLE,	
			DIMENSION(:) :: A00, DECL, HH, TTLB, TTRB, C	
			LLB, CLRB SW 10/17/05</td <td></td>	
			REAL, ALLOCATABLE,	
			DIMENSION(:) :: SRLB1, SRRB1, SRLB2, SRRB2, SRFJD1,	
			SRFJD2, SHADEI	
			REAL, ALLOCATABLE, DIMENSION(:,:) :: TOPO	
			LOGICAL, ALLOCATABLE, DIMENSION(:) ::	
			DATA ANG /0.00000, 0.34907, 0.69813,	
			1.04720, 1.39626, 1.74533, 2.09440,	
			2.44346,& 2.79253, 3.14159, 3.49066, 3.83972,	
			4.18879, 4.53786, 4.88692, 5.23599,	
			5.58505, 5.93412/ < ! SW10/17/05 END MODULE SHADEC	
			Delete allocation statement for ang:	
			ALLOCATE	
			(SRLB1(IMX), SRRB1(IMX), SRLB2(IMX), S RRB2(IMX), SRFJD1(IMX), SHADEI(IMX),	
			SRFJD2 (IMX))	
			ALLOCATE (TOPO(IMX, IANG)) < - !SW10/17/05	
			ALLOCATE (QSW(KMX,NWDT), CTR(NCT,NTRT),	
			HPRWBC (NHY, NWB))	
			Delete ang from the deallocate statement: DEALLOCATE (TTLB, TTRB, CLLB, SRLB1	
			, SRRB1, SRLB2, SRRB2, SRFJD1,	
			SHADEI, SRFJD2, TOPO, QSW, CTR) <- ! SW 10/17/05	
			: PM TO/TI/OD	

#	Code: W2 or PREW2 or GUI	Fix or En- hance-ment Type	Description of Bug/Enhancement	Date Bug Fixed or Enhance-ment Added
18	W2	Epiphyton algorithm	Several changes were made that corrected errors in shallow systems where adding and subtracting layers did not reinitialize macrophyte layers when the current KT was below KB; the epiphyton burial rate was greater than specified in the control file; epiphyton that are buried become part of the 1 st order organic sediment (as before); epiphyton mortality now becomes part of the LPOM pool (based on the EPOM fraction) and is settled and transported downstream rather than going into the organic 1 st order sediment model directly. Currently this is non-photosynthesizing – but we will change in the next version.	5/26/06
19	W2	ADD/SUB layers	There was a bug in addition and subtraction of layers that led to water quality variables not being initialized correctly during riverine shallow flow	5/26/06
20	User Man- ual	Typos cor- rected	The manual had a few typos that were corrected.	6/11/2006
21	W2	Waterbody- waterbody connection	The subroutine Upstream_velocity under specific conditions did not maintain flwo continuity across a waterbody-waterbody connection	6/29/2006
22	W2	SNP output	The algal limiting nutrient SNP output had a bug under specific conditions in writing out the information.	6/30/2006

#	Code: W2 or PREW2 or GUI	Fix or En- hance-ment Type	Description of Bug/Enhancement	Date Bug Fixed or Enhance- ment Added
23	or GUI W2	Sediment heating and sediment processes	If a model added and subtracted layers that resulted in segment addition and subtraction, there was the possibility that sediment fluxes were incorrectly computed. In the NO3 subroutine: Old code: NO3SED(K,I) = NO3(K,I) *NO3S(JW) *NO3TRM(K,I) * (BI(K,I) -BI(K+1,I)) / BH2(K,I) New code: if(k == kb(i)) then NO3SED(K,I) = NO3(K,I)*NO3S(JW)*NO3TRM(K,I)*(BI(K,I))/BH2(K,I) else NO3SED(K,I) = NO3(K,I)*NO3S(JW)*NO3TRM(K,I)*(BI(K,I)-BI(K+1,I))/BH2(K,I) else SODD(K,I) = SODD(K,I) = SOD(I) / BH2(K,I) *SODTRM(K,I) * BI(K,I) else SODD(K,I) = SOD(I) / BH2(K,I) * SODTRM(K,I) * (BI(K,I) - BI(K+1,I)) Endif New code added in suspended solids routine: if (k == kb(i)) then SSR = EPSILON*DLX(I)*BI(K,I) / VOL(K,I) else SSR = EPSILON*DLX(I)*(BI(K,I) - BI(K+1,I)) / VOL(K,I)	### ### ### ### ######################
			Endif	

#	Code: W2 or PREW2 or GUI	Fix or En- hance-ment Type	Description of Bug/Enhancement	Date Bug Fixed or Enhance-ment Added
23	W2	(see above)	<pre>New code added for heat flux to channel bottom: if (kt == kb(i)) then ! SW 4/18/07</pre>	4/18/07
			<pre>if(k==kb(i))then ! SW 4/18/07</pre>	
			New code added for sediment subrou- tine: if (k == kb(i)) then ! SW 4/18/07	
			BI(K,I)/BH2(K,I)(1.0- BI(K+1,I)/BI(K,I)) endif if(k == kb(i))then ! SW 4/18/07 SEDOMS(K,I) = POMS(JW)*(LPOM(K,I)+RPOM(K,I))*BI(K,I) /BH2(K,I) SEDSO = POMS(JW)*SED(K,I)*BI(K+1,I)/BH2(K,I) else	
			SEDOMS(K,I) = POMS(JW)*(LPOM(K,I)+RPOM(K,I))*BI(K,I) /BH2(K,I)*(1.0-BI(K+1,I)/BI(K,I)) SEDSO = POMS(JW)*SED(K,I)*BI(K+1,I)/BH2(K,I)*(1.0-BI(K+1,I)/BI(K,I)) endif	

#	Code: W2 or PREW2 or GUI	Fix or En- hance-ment Type	Description of Bug/Enhancement	Date Bug Fixed or Enhance-ment Added
24	W2	Algae	The logic for negative settling velocities for algae had an error. Old code: !	8/27/07