


HYBRID MODULAR INTERFACE

ANTENNA MOD

This mod will make the antenna more secure and also removable. All you need to add is an SMA male PCB connector. You can get one at an electronics or radio/walkie-talkie shop, or on [Aliexpress](https://www.aliexpress.com).

You will only need 1 of this

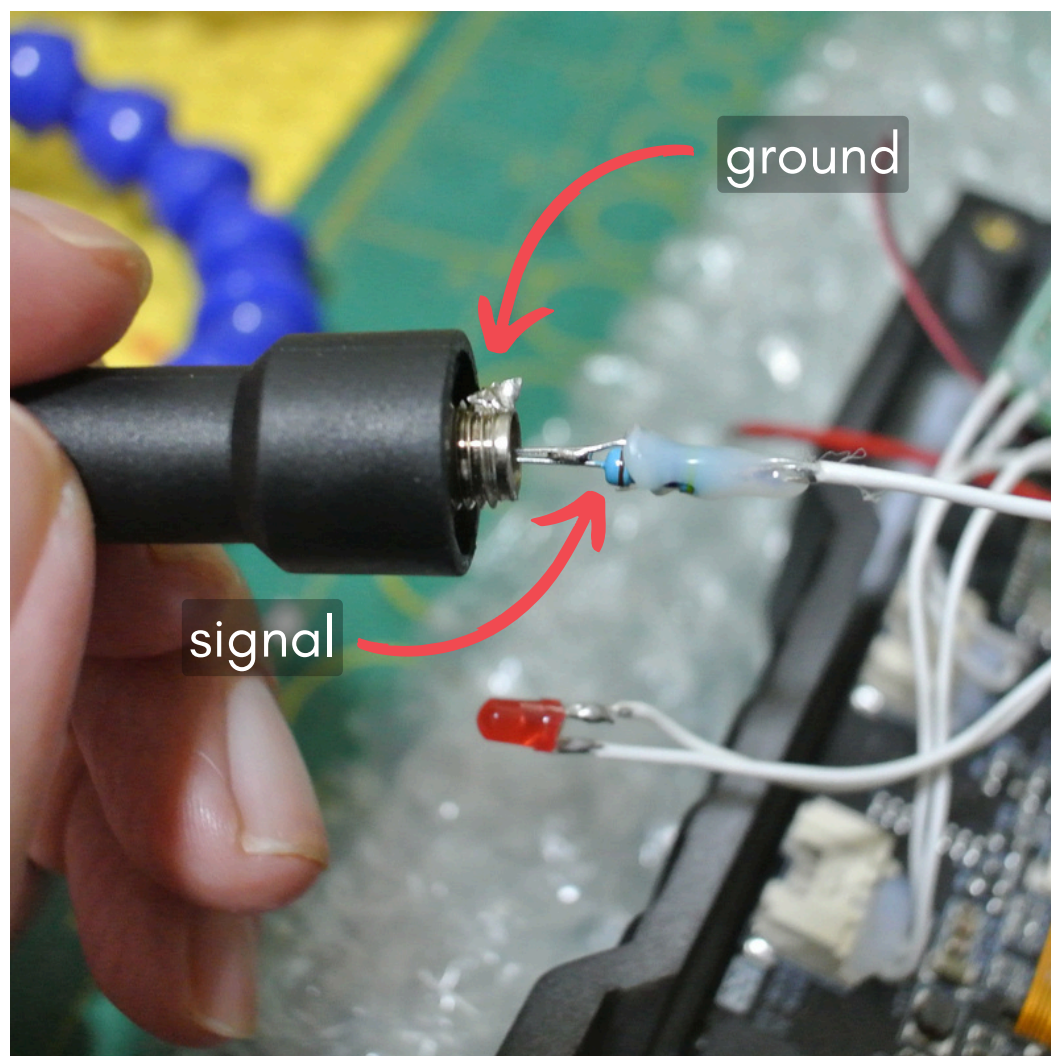



The first step is to remove the antenna and its wire from the casing. Use a soldering iron or heated knife to remove all the hot glue from the antenna hole (on the inside). Go slowly and remove it bit by bit, being careful around the antenna wires.

Use a soldering iron to remove the wires from the antenna, make sure any leftover solder on the antenna's threaded sides is removed. You can also use a small file to remove solder you can't reach. Be careful not to remove too much of the threads, or you may need to get a new antenna.





HYBRID MODULAR INTERFACE

Once the antenna and wires are separated from the casing, solder the wires to the new antenna connector. The signal wire goes to the middle pin and the ground wire goes to one of the legs.

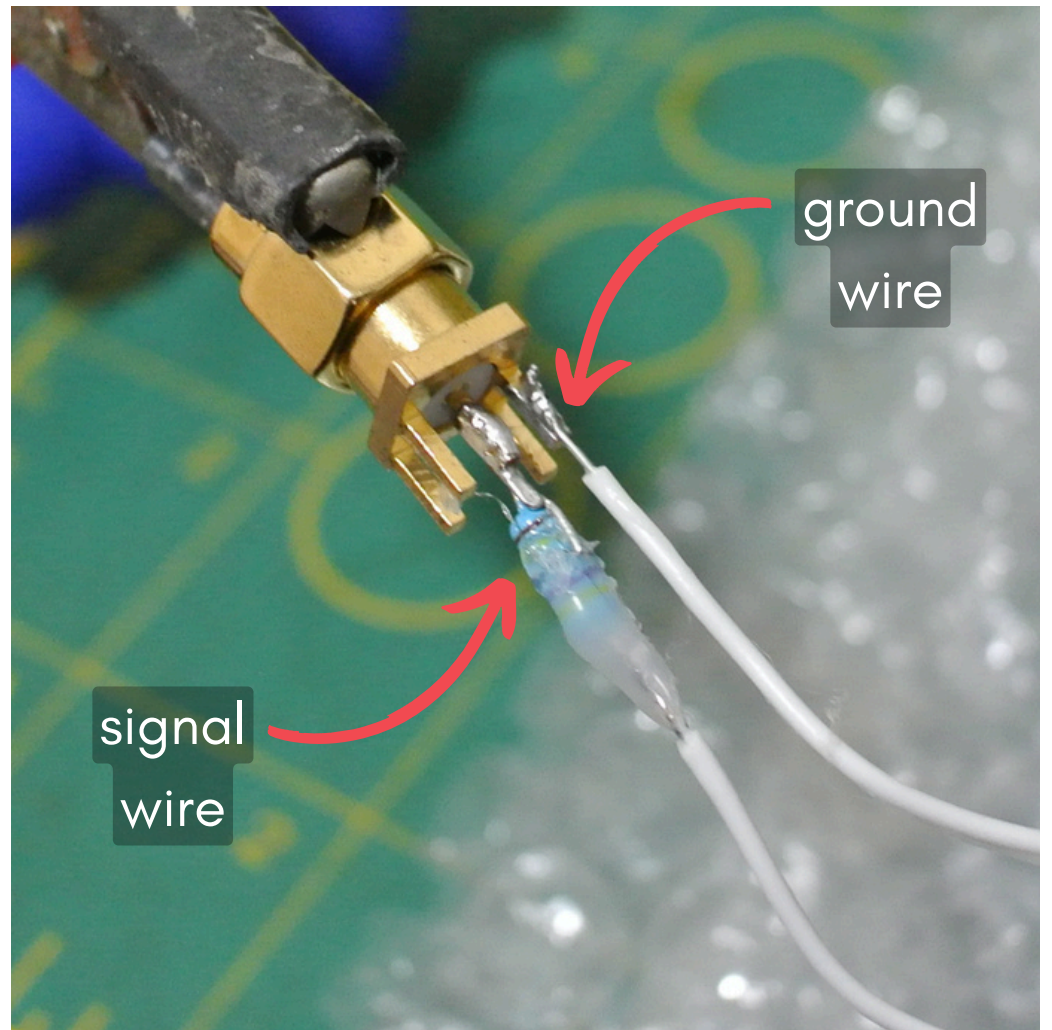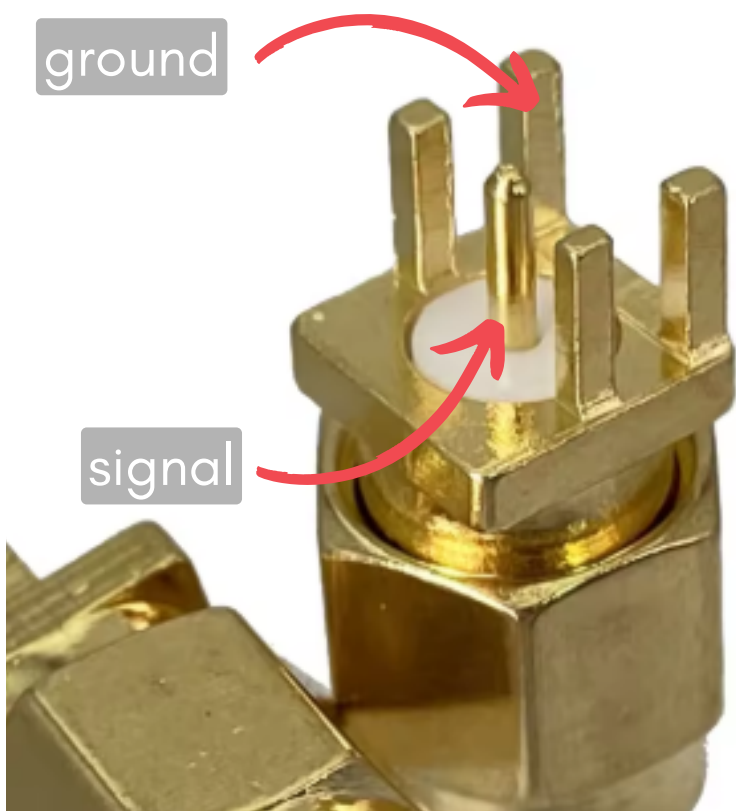

Use a rotary tool to widen the antenna hole. It needs to be large enough to fit the connector. Once it's in place, use epoxy or hot glue to secure it. It's up to you how much of the connector you want to leave on the outside, as this will affect how the antenna looks afterwards.

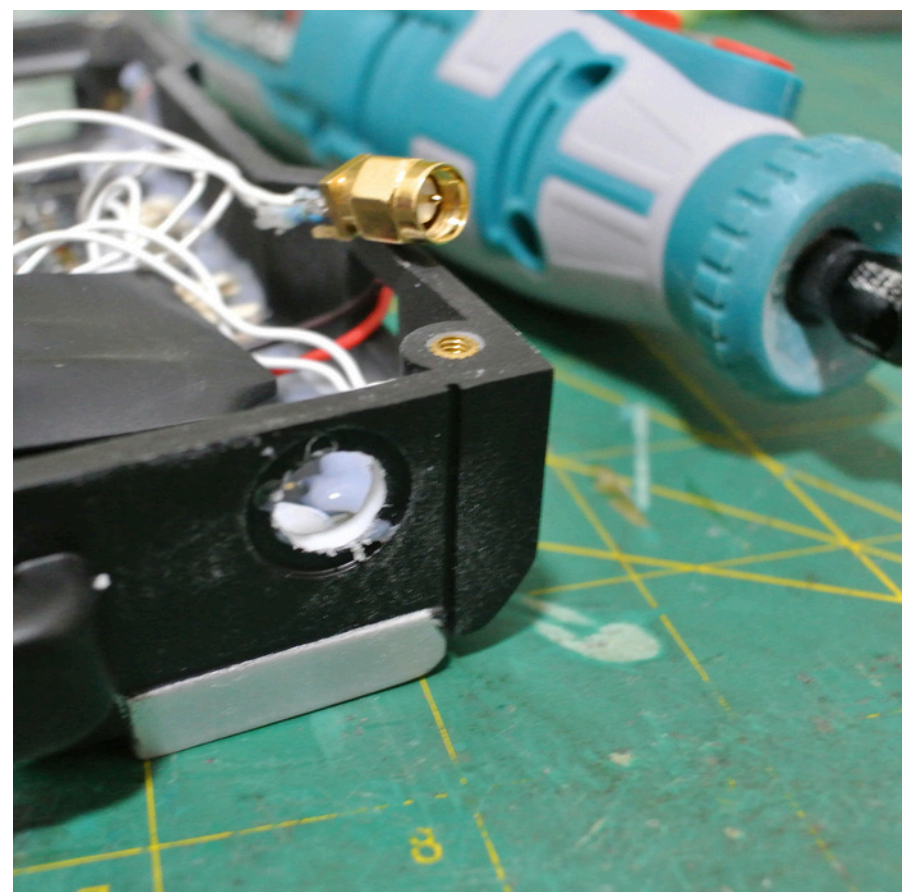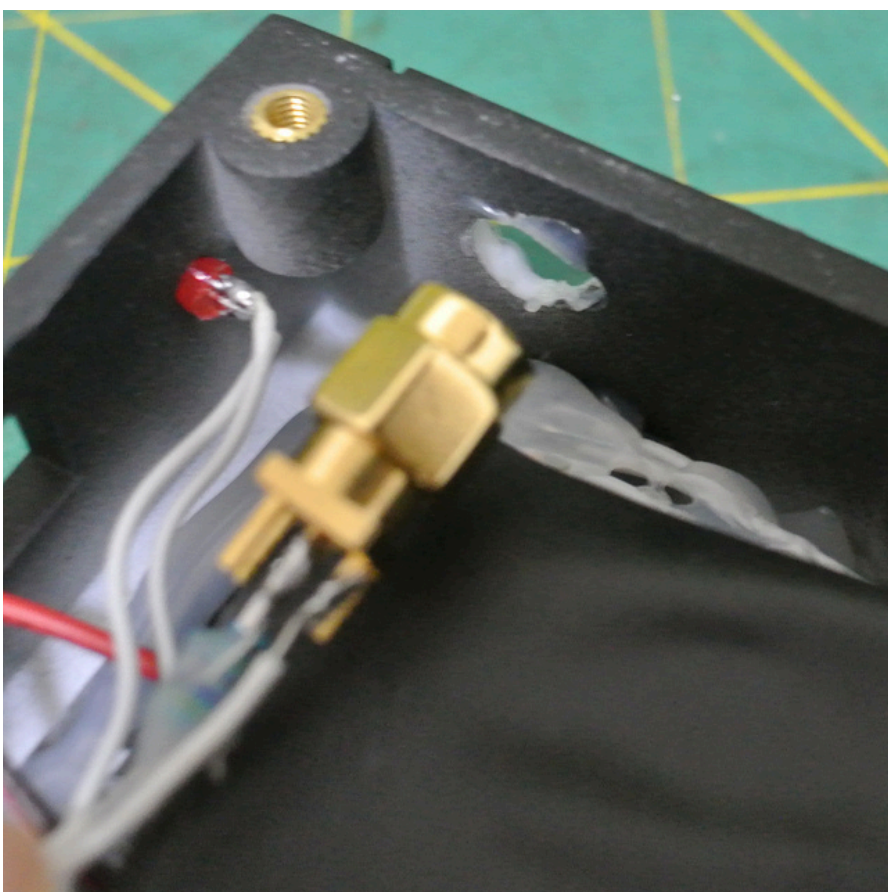

HYBRID MODULAR INTERFACE

Once the new connector is secured, simply screw in the antenna, and you're done!

