

Chapter 7

Cellular Networks

WiFi can provide high speed connectivity at low cost, but its coverage is limited to within a home or office building. In contrast, cellular networks are designed to provide wide area coverage to both static and mobile users. Cellular network is the oldest communications network technology, which has now gone through several generations of evolution. In this chapter, we shall first learn the fundamentals concepts of cellular networks before examining the advancements brought forth by each generation.

7.1 Beginning of Cellular Networks

Back in 1968, AT&T Bell Labs submitted a plan [Rappaport2002] to FCC that they could provide radio communication services to the entire nation with limited spectrum by dividing the spectrum into several frequency bands and then allocating them in hexagonal cells. No two adjacent cells would be using the same frequency. The entire nation would be using the limited spectrum efficiently.

Add WeChat [edu_assist_pro](https://eduassistpro.github.io/)

Figure 7.1 Reusing 7 frequencies to cover a large area with hexagonal cells. No two adjacent cells use the same frequency.

7.2 Initial Deployments of Cellular Systems in the US

In 1981, FCC set aside a total of 40MHz in 800MHz spectrum for cellular licensing [FCC800MHz]. For the initial deployment of cellular systems in US, the whole country was divided into 734 areas called Cellular Market Areas (CMAs). To avoid monopoly, it was decided that every CMA would be covered by two competing carriers, A and B. B stands for Bell, and A represents the *alternate*.

In the initial cellular deployments, uplink and downlink frequencies were different to avoid interference between transmit and receive antennas on the same device, i.e., Frequency Division Duplexing (FDD) was used. With FDD, a pair of frequencies therefore were needed to support a call. Each uplink/downlink channel was allocated 30kHz for a total of 60kHz for the duplex voice call [Rappaport2002].

7.3 Cell Sites

Cellular systems need to install radio towers (base stations) to transmit and receive calls. Where should they put the tower. In the beginning they were building towers from scratch in some places, which is very costly. Then the carriers wanted to use existing infrastructure, but due to wireless radiation as well as pollution of scenery, no one wanted cell towers near their house. There is this acronym NIMBY (not in my backyard). Finally, carrier started to install towers on roof tops of schools, churches, hotels, etc. as well on traffic lights, streetlamps and so on for a fee to the owners. For non-profit organizations, such as schools and churches, there was a great way of making money. Even some fake trees were planted to hide base stations as shown in Figure 7.2.

Assignment Project Exam Help

<https://eduassistpro.github.io/>

Figure 7.2 Base stations are erected on objects.

Add WeChat [edu_assist_pro](https://eduassistpro.github.io/)

Fixed tower sites are good for most of the time, but the increase in demand in a given area. To serve a sudden surge of people in a given area, such as a big circus or fair, the operators bring CoWs or Cell on Wheels. The whole base station is fitted on top of a van, so the van can go anywhere where there is a demand as shown in Figure 7.3.



Figure 7.3 Cell on Wheels

7.4 Macro, Micro, Pico, Femto Cells

As the population increased, they started to develop different sizes of cells to cover all users. So there are four types of cells:

<https://eduassistpro.github.io/>

Macro cells are the normal original cells with roughly 1Km radius. Micro cells are deployed in areas such as malls, airports, etc., covering an area of about 200m. Femto cells are installed inside a home or office covering 10m to provide good coverage (strong signals). Some operators provide femto cells for free to attract and retain customers.

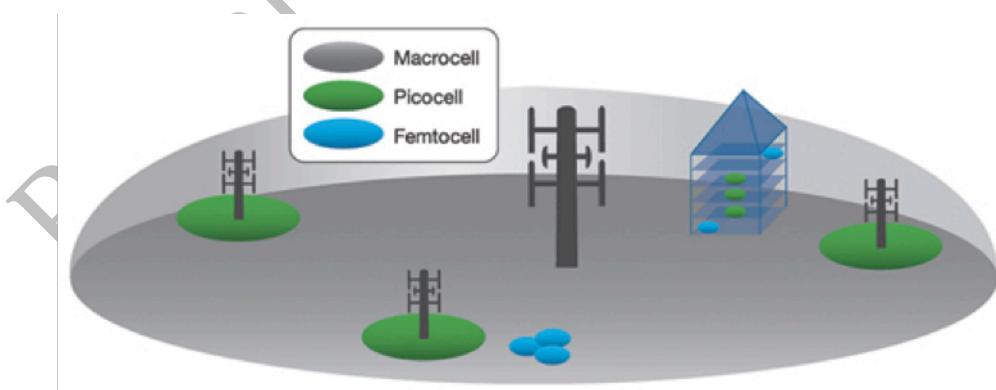


Figure 7.4 Macro, Micro, Pico, and Femto cells.

7.5 Cell geometry

Although there is no regular cell geometry in practice due to natural obstacles to radio propagations, a model is required for planning and evaluation purposes. A simple model would be for all cells to have identical geometry and tessellate perfectly to

avoid any coverage gaps in the service area. Radio propagation models lead to circular cells, but unfortunately circles do not tessellate!

As shown in Figure 7.5, three options for tessellation are considered: equilateral triangle, square, and regular hexagon. Hexagon has the largest area among the three; hence it is typically used for modelling cellular networks.

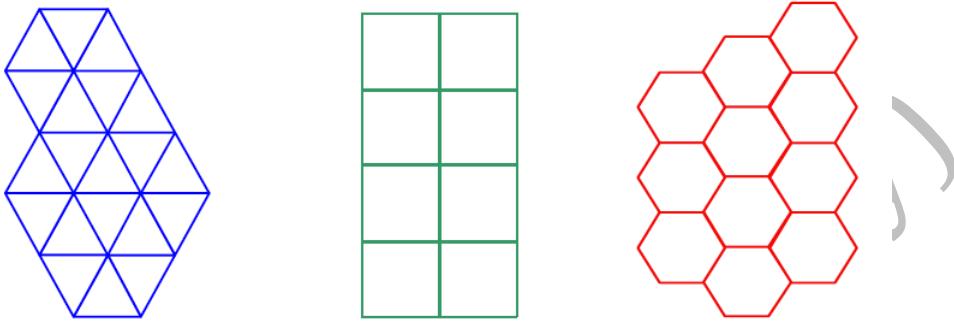


Figure 7.5 Tessellating cell shapes.

Assignment Project Exam Help

7.6 Frequency reuse and clustering

Earlier we discuss reusing only 7 frequencies. This simply means that a cell tower gets a signal from the other communications happening far away from

To keep the interference to a minimum, it's a common practice to reuse the same frequency in adjacent cells. To achieve this, the cells in the service area are grouped into many clusters. The total spectrum is then divided into sub-bands that are distributed among the cells within a cluster in such a way that two adjacent cells do not share the same sub-band. Figure 7.6 shows examples of clusters sizes of 4, 7 and 19 where N represents the cluster size and the cluster borders are shown with solid black lines.

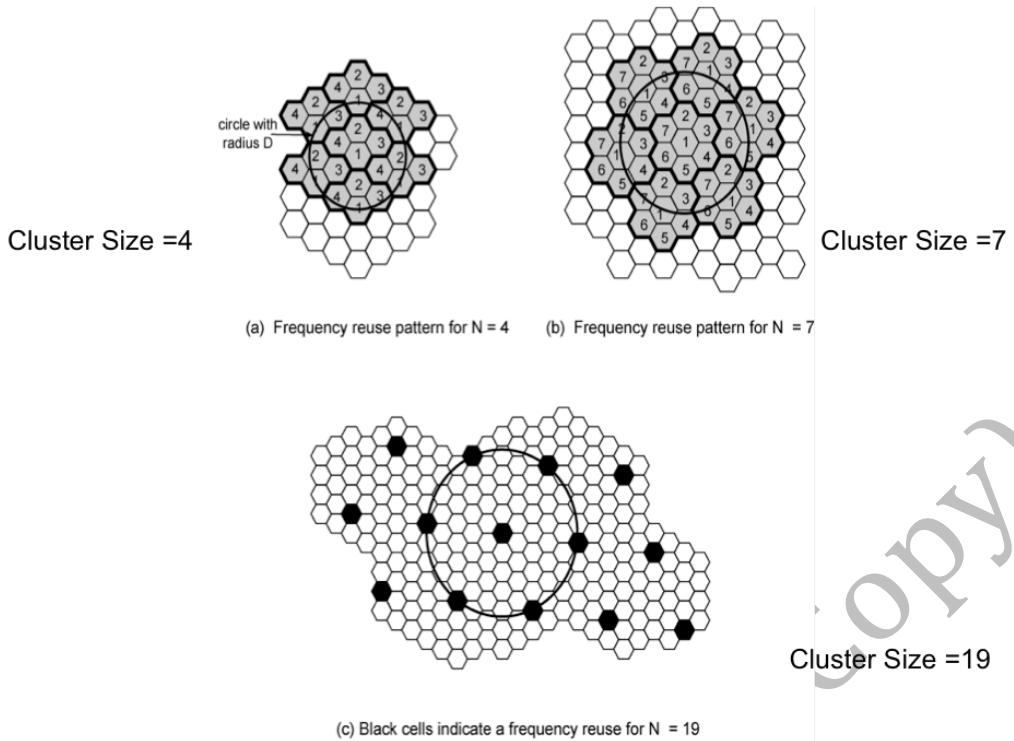


Figure 7.6 Frequency reuse with different cluster sizes.

Assignment Project Exam Help

7.7 Characterizing Frequency Reuse

The next question is the extent of frequency reuse and find out. Let us assume the following notations, illustrated in Figure 7.7:

Add WeChat edu_assist_pro

D = minimum distance between centers of cells
(a.k.a. co-channel cells)

is the extent of mathematics illustrated in

R = radius of a cell

d = distance between centers of adjacent cells. Note that $d < 2R$ due to the overlapping of cells, which enables seamless handover from cell to cell for a mobile user. The exact value is $d = R\sqrt{3}$.

N = number of cells in repetitious pattern (**Cluster**), also called the *reuse factor*¹; note that each cell in the cluster uses unique band of frequencies

For hexagonal cell pattern, N cannot assume arbitrary numbers. It is rather given by the following formula [Rappaport2002]:

$$N = I^2 + J^2 + (I \times J), \text{ where } I, J = 0, 1, 2, 3, \dots$$

Therefore, the possible values of N are 1, 3, 4, 7, 9, 12, 13, 16, 19, 21, and so on. Note that some values are not possible. For example, we cannot have a cluster size of 5, because there are no combinations of integers, or I and J, that will provide 5.

¹ Sometimes, the reuse factor is represented by the fraction 1/N.

Finally, D/R is called the **reuse ratio**. From hexagonal geometry, it can be shown that that $D/R = \sqrt{3N}$, which means $D/d = \sqrt{N}$.

Example 7.1

What would be the minimum distance between the centers of two cells with the same band of frequencies if cell radius is 1 km and the reuse factor is 1/12?

Solution:

$$R = 1 \text{ km}, N = 12$$

$$D/R = \sqrt{3N}$$

$$D = (3 \times 12)^{1/2} 1 \text{ km}$$

Assignment Project Exam Help

<https://eduassistpro.github.io/>

Add WeChat edu_assist_pro

Figure 7.7 Illustration of frequ

7.8 Locating co-channel cells

Given a tessellated hexagonal cellular pattern of cluster size N, can we identify the co-channel cells? Yes, we can do this using the following simple rule.

First, obtain the I and J values that make up N. For example, for N=4, we could have I=0 and J=2, or I=2 and J=0. Now, to identify the cochannel cell of a particular cell A, move I cells in any direction from the centre of A, turn 60° counterclockwise and then move J cells. Note that there are 6 possible directions in a hexagonal cell, each separated by 60 degrees from their neighbours as illustrated in Figure 7.8. For N=19, Figure 7.9 illustrates the rule for finding the cochannel cells in a hexagonal cellular network.

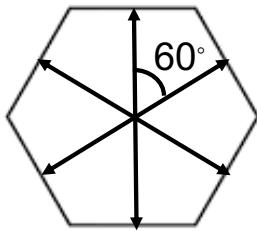


Figure 7.8 Six directions of a hexagon

Assignment Project Exam Help

<https://eduassistpro.github.io/>

Figure 7.9 Locating CP channel cells in hexagonal cluster (I₁, I₂, II₁, II₂).
Add WeChat [edu_assist_pro](#)

7.9 Spectrum distribution within cell cluster

We have learned that the spectrum available to a cellular operator can only be reused outside the cluster. Next, we are going to examine how the spectrum is distributed among the cells within the cluster.

For simplicity, it is assumed that the total spectrum is divided equally among all cells in the cluster. Let T denote the total number of available channels, N the cluster size, and K the number of channels per cell. Then we have $K = T/N$.

Cells are usually divided into sectors where a frequency received in one sector may not be received in another. Channels allocated to a cell are then further sub-allocated to different sectors according to the load or demand in each sector. Sectorized allocation of channels can also help minimize inter-cell interference, which is a major issue arising from spatial reuse of spectrum in cellular networks. For example, the cellular network in Figure 7.10 can reuse its spectrum with a cluster size of only 1 as two adjacent cell sectors do not use the same frequency.

7.10 Frequency Reuse Notation

To describe a given frequency reuse pattern for sectorized cells, we can use a notation like $N \times S \times K$, where N is the number of cells per cluster (cluster size), S is the number of sectors in a cell, and K is the number of frequency allocations per cell.

Figure 7.9 is an example of a $1 \times 3 \times 3$ frequency reuse pattern where different colors represent different frequencies. Note that in this example, the same frequencies are used in every cell ($N=1$). There are three sectors ($S=3$) in each cell, which is shown by dotted line dividing each cell into three equal geographical regions. Three frequencies have been allocated per cell ($K=3$).

In Figure 7.9, each sector uses one frequency, but in real life, multiple frequencies may be allocated to a given sector (heavily populated), while other sectors may have just one or even no frequency allocated. Here $K=3$ only means that three frequencies are allocated per cell, but how the frequencies are distributed between the sectors is not captured by the $N \times S \times K$ notation.

Assignment Project Exam Help

<https://eduassistpro.github.io/>

Add WeChat edu_assist_pro

Figure 7.10 An example of a frequency reuse with cluster size of 1 using sectorized antenna.

Figure 7.11 shows 6 more examples of frequency reuse notations. In this figure, frequencies are shown as numbers within the sector. Again, frequencies are evenly distributed among the sectors. For example, if a cell is allocated 3 frequencies, each sector is allocated a different frequency.

Figure 7.11 also shows the location of a subscriber station (SS) within the cell and which tower it is likely to get the signal from using a red arrow from tower to the SS. There is a red arrow from a tower if it is towards the sector with the same frequency. Let us examine how the SS receives signal from different towers by following the red arrows in the figure for different patterns.

For the first pattern (1x3x1), there is only one frequency. Given the current location of the SS shown in the figure, it can receive the same frequency signal from five other cells besides the current cell. Similarly, for 3x3x1, the SS is receiving frequency 2, so it will receive frequency 2 signal from 4 other cells. Fortunately, if the SS is located in the center of the cell, then the signal from the current cell tower will be the strongest, which will help it to connect to this tower without any confusion.

A problem arises when the SS is located close to the edge. If it receives the same frequency signals from both the cells, then the signal strengths may be close to each other creating confusion. This leads to a so-called *ping-pong effect*, where the SS may switch between towers as it moves.

Assignment Project Exam Help

<https://eduassistpro.github.io/>

Add WeChat edu_assist_pro

Figure 7.11 Examples of 6 different frequency reuse patterns

7.11 Fractional Frequency Reuse

The cell-edge problem can be addressed by a concept called *fractional frequency reuse*, which controls the signals strengths of the frequencies in a way such that some frequencies can only be heard in the center (not heard in the edge) while only one of them can be heard in the edge. This is shown in Figure 7.12. We can see that with fractional frequency reuse concept, stations in the edge no more has the confusion because no border uses the same frequency.

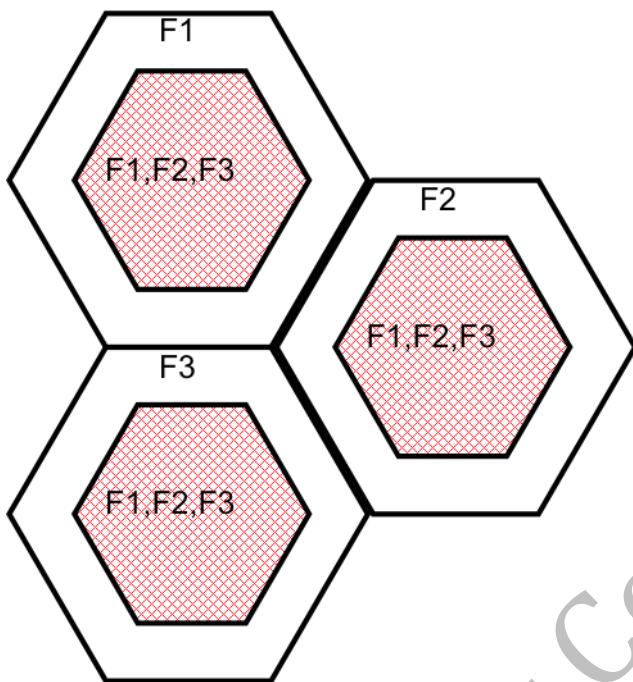


Figure 7.12 Fractional frequency reuse

7.12 Handoff Assignment Project Exam Help

User mobility p
coverage of a c
BS with a stron
one and connec
is illustrated in Figure 7.13.

tarts to leave the
connect to a new
connecting from
d handoff, which

<https://eduassistpro.github.io/>

Add WeChat edu_assist_pro

Figure 7.13 The handoff process in cellular networks.

To handoff successfully, the new BS must have available channels to support the ongoing call; otherwise the call will be dropped. Dropping an ongoing call is worse than rejecting a new call. BSs therefore usually reserve some channels, called guard channels, exclusively for supporting handoff calls. Unfortunately, guard channels increase the blocking probability of new calls. The number of guard channels is left to the operators to optimize, i.e., it is not part of the standard.

Example 7.2

A particular cellular system has the following characteristics: cluster size=7, uniform cell size, user density=100 users/sq km, allocated frequency spectrum = 900-949 MHz, bit rate required per user = 10 kbps uplink and 10 kbps downlink, and modulation code rate = 1 bps/Hz. How many users per cell can be supported and what cell sizes are required?

Solution:

$49 \text{ MHz}/7 = 7 \text{ MHz}/\text{cell}$; For symmetric bandwidth requirement in uplink/downlink, we have 3.5 MHz/uplink or downlink

$10 \text{ kbps}/\text{user} = 10 \text{ kHz}/\text{user}$ (1bps/Hz); $\text{users}/\text{cell} = 3.5 \text{ MHz}/10 \text{ kHz} = 350$

$100 \text{ users}/\text{km}^2$; to connect 350 users, the cell area has to be $350/100 = 3.5 \text{ km}^2$

$$\pi r^2 = 3.5; r = 1.056 \text{ km}$$

Example 7.3

A particular cellular system has the following characteristics: cluster size=7, uniform cell size, user density=100 users/sq km, allocated frequency spectrum = 900-949 MHz, bit rate required per user = 10 kbps uplink and 10 kbps downlink, and modulation code rate = 1 bps/Hz. If the available spectrum for uplink/downlink is divided in to 35 channels and TDMA is employed within each channel:

1. What is the b
2. How many ti <https://eduassistpro.github.io/> e required number of users?
3. If the TDMA frame is 10ms, how long is eac
4. How many bits are transmitted in each time s

Add WeChat edu_assist_pro

Solution:

1. $49 \text{ MHz}/7 = 7 \text{ MHz}/\text{cell}$; For symmetric bandwidth requirement in uplink/downlink, we have 3.5 MHz/uplink or downlink

$$3.5 \text{ MHz}/35 = 100 \text{ kHz}/\text{Channel} = 100 \text{ kbps per channel}$$

2. With 10 kbps/user, we have 10 users/channel

$$3. 10 \text{ ms}/10 = 1 \text{ ms}$$

$$4. 1 \text{ ms} \times 100 \text{ kbps} = 100 \text{ b/slot}$$

7.13 Cellular Telephony Generations

As we have discussed, cellular telephony started back in 1980s. That was called the first generation of cellular networks. Since then, the technology continued to evolve to meet the demand in terms of number of people and devices that want to connect as well as the nature of traffic they want to send, such as voice vs. data.

In cellular word, the major changes are marked as a generation (G), which roughly lasts for 10 years. Any major changes in between the 10 years is then marked as fraction of 10, such as 2.5G. Figure 7.14 shows the evolution of these generations. The figure shows how the evolution in terms of standardization is happening in the

US (or North America) and in Europe in the core technology, such as Analog vs. Digital, and in traffic types, such as voice vs. data.

Following are some of the key points to note:

Technology and Traffic: The first generation (1G) was analog and using FDMA to transmit only voice. It started digital transmission starting from 2G, but it was voice. Data could only be transmitted by converting it to voice signals using modems. Actual data transmission started from 2.5G and by now it is mostly data. Voice is now transmitted over data services.

Standardization in North America and Europe: North America and Europe continued using different standards until the end of 3G, when they converged to LTE (Long Term Evolution).

Assignment Project Exam Help

<https://eduassistpro.github.io/>

Add WeChat edu_assist_pro

Figure 7.14 Evolution of cellular telephony

Table 13.1 shows more details of each generation. Most of the standards, such as GPRS, EDGE, WCDMA and so on are now almost extinct. One standard that survived and very much in use worldwide including in North America is GSM.

Table 7.1 Cellular generations		
Generation	Traffic	Standards
1G - 1980s	Analog Voice. FDMA	<ul style="list-style-type: none">• AMPS: Advanced Mobile Phone System• TACS: Total Access Communications System
2G - 1990	Digital Voice. TDMA	<ul style="list-style-type: none">• cdmaOne: Qualcomm International

		<p>Standard IS-95.</p> <ul style="list-style-type: none"> • NA-TDMA • Digital AMPS (D-AMPS) • GSM: Global System for Mobile Communications
2.5G - 1995	Voice+data	<ul style="list-style-type: none"> • 1xEV-DO: Evolution Data Optimized • 1xEV-DV: Evolution Data and Voice • General Packet Radio Service (GPRS) • Enhanced Data Rate for GSM Evolution (EDGE)
3G - 2000	Voice+High-speed data. All CDMA	<ul style="list-style-type: none"> • CDMA2000: Qualcomm International Standard IS-2000. • W-CDMA: Wideband CDMA • TD-SCDMA: Time Division Synchronous Code Division Multiple Access (Chinese 3G) • 384 kbps to 2 Mbps
3.5G	Voice+Higher speed Data	<ul style="list-style-type: none"> • EDGE Evolution • High-Speed Packet Access (HSPA)
3.9G	High-speed data+VOIP. OFDMA	<ul style="list-style-type: none"> • Wi-Fi • Int'l. 4G wave • Long Term Evolution (LTE)
4G - 2013	Very High-speed Data	<ul style="list-style-type: none"> • WiMAX 16m or WiMAX2 • LTE-Advanced • 100 Mbps - 1 Gbps
5G - 2020	Ultra High-speed data + Ultra Low Latency + Massive connectivity	IP-based

7.14 GSM

GSM stands for Global System for Mobile Communications. It is now implemented in most cell phones world-wide and most countries are using GSM. A phone without GSM support therefore would not do much.

The interesting thing is that GSM was designed back in 1990. Three decades on, it is still a very popular technology. GSM uses Time-Division Multiple Access (**TDMA**) instead of Frequency Division Multiple Access (FDMA) used in 1G. Figure 7.15

shows the difference between FDMA and TDMA. In FDMA, once a frequency is allocated to a user, no one else was allowed to use that frequency. This wasted a lot of system capacity. With TDMA, the same frequency could be used by multiple users shared in time. This is possible because there are many silence periods in voice communication, which can be used for other users.

GSM is defined for all major frequency bands used throughout the world. Specifically, it supports the four bands, 850/900/1800/1900 MHz, hence called quad-band. Handsets not supporting quad-band may not operate in some countries.

The biggest invention of GSM was to separate the user from the handset. Prior to GSM, user subscription information was tied to the handset hardware. It made it difficult for people to change operators and share handsets. GSM introduced the concept of **Subscriber Identity Module (SIM)** card, which is a tiny plastic that contains user subscription information. Once inserted to a handset, that handset then is used for that user. With this concept, users can use the handset even when they switch subscriber.

Assignment Project Exam Help

<https://eduassistpro.github.io/>

Figure 7.15 Difference between

Add WeChat edu_assist_pro

7.15 GSM Cellular Architecture

GSM system has many components. The architecture of GSM is shown in Figure 7.16. The phone handset is called a Mobile Equipment (ME), which has a SIM inside it. The SIM contains a micro-controller and storage. It contains authentication, encryption, and accounting info.

Using radio or wireless links, the ME connects to a radio tower, which is called a Base Transceiver Station (BTS). There is one BTS per cell.

A Base Station Controller (BSC) controls several BTSs via wired backbone. It allocates radio channels among BTSs, manages call handoff between BTSs, as well as controls handset power levels. MEs that are far from the tower, will be asked to increase its power level, while the MEs closer to the tower will be instructed to use lower powers.

Many BSCs in turn are then connected to a Mobile Switching Center (MSC). Inside the switching center, which is usually a building housing many equipment, the MSC is connected to a range of other entities and functions such as Home Location Register (HLR) and Visitor Location Register (VLR), Equipment Identity Register (EIR), Authentication Center (AuC), and so on.

The AuC stores the secret keys of all SIM cards. The EIR stores the unique hardware numbers for each handset. Each handset has an International Mobile Equipment Identity (IMEI) number. If a phone is stolen and reported as stolen, then that information, i.e., the IMEI of that phone, is stored there. So, if a call is made from that phone, the MSC can detect that it is originated from a stolen phone (the hardware number is transmitted along with the SIM) and take some action.

The MSC is also connected to the wired telephony network, which is called the Public Switched Telephone Network (PSTN) via a very high speed wired connection.

Assignment Project Exam Help

<https://eduassistpro.github.io/>

Add WeChat [edu_assist_pro](#)

Figure 7.16 GSM cellular architecture

Figure 7.17 shows how the different functions are invoked when an end to end call is established between a caller and a callee. The functions invoked at both ends are symmetric.

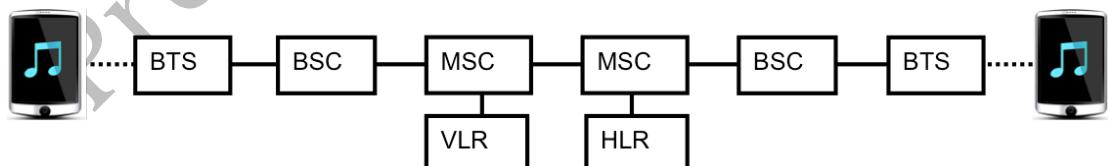


Figure 7.17 End-to-end call in GSM

7.16 GSM Radio Link

GSM supports 24 traffic channels over each frequency. The number 24 is for historical reason. In the beginning, 24 voice calls were carried over a T1 link. GSM therefore also started with combining 24 traffic channels into one multiframe.

This is achieved by dividing a frequency into a total of 26 equal-length time slots. The frame structure is shown in Figure 7.18. The frame is called a superframe because it supports many users. Basically, a superframe repeats every 120 ms. Therefore, each slot is 120/26 ms long. There are 24 slots used for carrying user traffic. Two out of 26 are not used for user traffic. One is used for control, and one is unused.

Each 120/26 ms traffic slot is divided into 8 Burst Period. Therefore, each Burst Period is one 8th of 120/26 or 15/26 ms long. One user is allocated to each burst period.

Assignment Project Exam Help

<https://eduassistpro.github.io/>

Add WeChat [edu_assist_pro](https://eduassistpro.github.io/)

GSM has separate frequencies for uplink and downlink. 25 MHz between 890-915 MHz is used for uplink and 25 MHz between 935-960 MHz for downlink. The 25 MHz bandwidth is divided in frequency domain into 125 channels, each 200kHz wide. Each of these 200kHz channel is then divided in time domain into 24 traffic slots.

The control channel is usually called Slow Associated Control Channel (SACCH). It uses one traffic slot of 120/26 ms. If the control traffic requires more bandwidth than this, then it can steal some bandwidth from user slots as follows.

Note in Figure 7.18, that each user burst has two bits reserved as “stealing bits”. The control channel can set these bits to indicate to the receiving end that half of the user burst has been stolen and now carries control information instead of user data. Because voice is error-tolerant, occasional loss of bits can still be tolerated within limit.

Interestingly, the reverse use is also possible with control channels. If the control channel has no control information to carry, then some user traffic could be sent over it. But it has to be very short. This is how the short message service (SMS) concept was developed. Now SMS is so popular that carriers probably are dimensioning more control channels to make profit from it.

Each 200 kHz channel is ultimately used by 8 user slots. Each 200 kHz channel is modulated to 270.8 kbps data rate. That gives $270.8/8 = 33.85$ kbps per user. After encryption and FEC, only 9.6kbps per slot. This means, if we send data over GSM, we can get 9.6kbps data rate!

Voice, on the other hand, does not need high FEC. Therefore, voice can use a higher bit rate. It turns out that voice use 16 kbps, which is a compressed version of the 64-kbps original voice. Note that original voice is 64 kbps because it is sampled at 8,000 samples per second and each sample is coded with 8 bits. The telephone system (PSTN) has a cutoff frequency at 4kHz because human voice does not carry very high frequency. Nyquist sampling theory says that we need sample at twice the frequency of the original analog signal to avoid loss of information. That's why voice signals are sampled at 8000 samples per second, which is twice the 4kHz bandwidth.

This means that if you play music from a CD player over the phone, the quality of the music will be very poor at the other end as music contains some very high frequency components which will be filtered out by the telephone system.

7.17 LTE Assignment Project Exam Help

LTE stands for Long Term Evolution. The whole world, Europe as well as North America converging with LTE. This is also the kick that coordinates the single body that coordinates it releases new documents. LTE was released as 3GPP Release

LTE is the precursor for 4G. Technically, for a network to be considered 4G, it has to meet all the requirements specified in International Telecommunication Union (IMT) Advanced Requirements in ITU M.2134-2008. LTE did not meet every criterion in that document, so it is sometimes called pre-4G or 3.9G cellular technology. LTE was then later revised to LTE Advanced or LTE-A to meet all the 4G specifications.

LTE supports all different bands, 700/1500/1700/2100/2600 MHz, to satisfy spectrum allocations in different regions in the world as well flexible bandwidth, 1.4/3/5/10/15/20 MHz, depending on the country [ASTELY2009]. The bandwidth can be allocated very flexibly. It can be divided to many users during peak hours, or the whole network bandwidth can be allocated a single user at off-peak time if there are no other user competing. The maximum data rate possible in LTE there can be very high.

LTE supports both Frequency Division Duplexing (FDD) and Time Division Duplexing (TDD). For FDD, paired spectrum allocation is required, which means that equal amount of spectrum or frequencies have to be allocated for uplinks and downlinks. This suits well when both uplink and downlink have equal usage, such voice. In voice calls, a person speaks 50% of the time and listens 50% of the time. However, for data, downlink is used more heavily than uplink, as we tend to download more data than upload, although upload traffic is

increasing rapidly due to pervasive availability of cameras and videos in mobile phone and use of social networks. TDD does not require paired allocation. It can be *unpaired* and use the spectrum more flexibly for up and down use, which suits data very well.

LTE supports 4x4 MIMO as well as multi-user collaborative MIMO. It supports beamforming only in the downlink. When using 4x4 MIMO with 20 MHz, i.e., the full capacity, LTE can achieve 326 Mbps for downlink and 86 Mbps for uplink. For modulation, it supports OFDM with QPSK, 16 QAM, and 64 QAM. LTE supports OFDMA for the downlink.

7.18 LTE Frame Structure

LTE superframes are 10 ms long. This means superframes just repeat every 10 ms. Each superframe contains 10 1-ms subframes as shown in Figure 7.19. Each subframe has two 0.5ms slots, one for downlink and one for uplink. This allows a very quick turnaround time, because a mobile handset can get an answer from the base station or vice versa within 0.5ms.

How many OFDM symbols can be sent per 0.5ms? This depends on the length of the cyclic prefix used for each symbol to address the multipath effect. Two types of cyclic prefixes are allowed. For small networks, cyclic prefix of 5.2 μ s for the 1st symbol and 4.7 μ s for others be transmitted in a 0.5ms slot. In larger multipath, extended cyclic prefix of 16.7 μ s is only 6 symbols longer and is shown in Figure 7.20.

Add WeChat edu_assist_pro

Figure 7.19 LTE Superframe structure. Each superframe contains 10 1-ms subframes

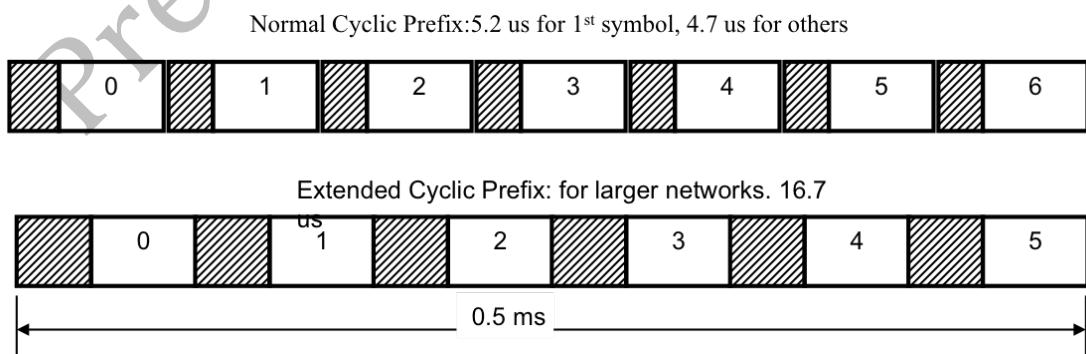


Figure 7.20 Two types of cyclic prefix.

7.19 LTE Resource Allocation

To transmit in the uplink or receive in the downlink, mobile handsets need to be allocated resources. Resources are defined by OFDM subcarriers (frequency) and slots (time). Each slot is 0.5ms (equivalent to 6 or 7 symbols) and Each subcarrier is 15 kHz.

With this definition of slots and subcarriers, a Physical Resource Block (PRB) is defined as a rectangle block of 12 subcarriers (180 kHz) over 1 time slot (0.5ms) in the resource map as shown in Figure 7.21.

Given that each user has a down link slot and an uplink slot in each subframe, the minimum allocation per subframe is 2 PRBs. However, these two PRBs do not have to be contiguous in the resource map but could be from anywhere. An example of two PRB allocations to a subframe, or a single user equipment (UE) is shown in Figure 7.22.

The allocation of the blocks changes every superframe, i.e., every 10ms, unless for some persist scheduling, where the same resource blocks may be allocated over a long time (over several superframes).

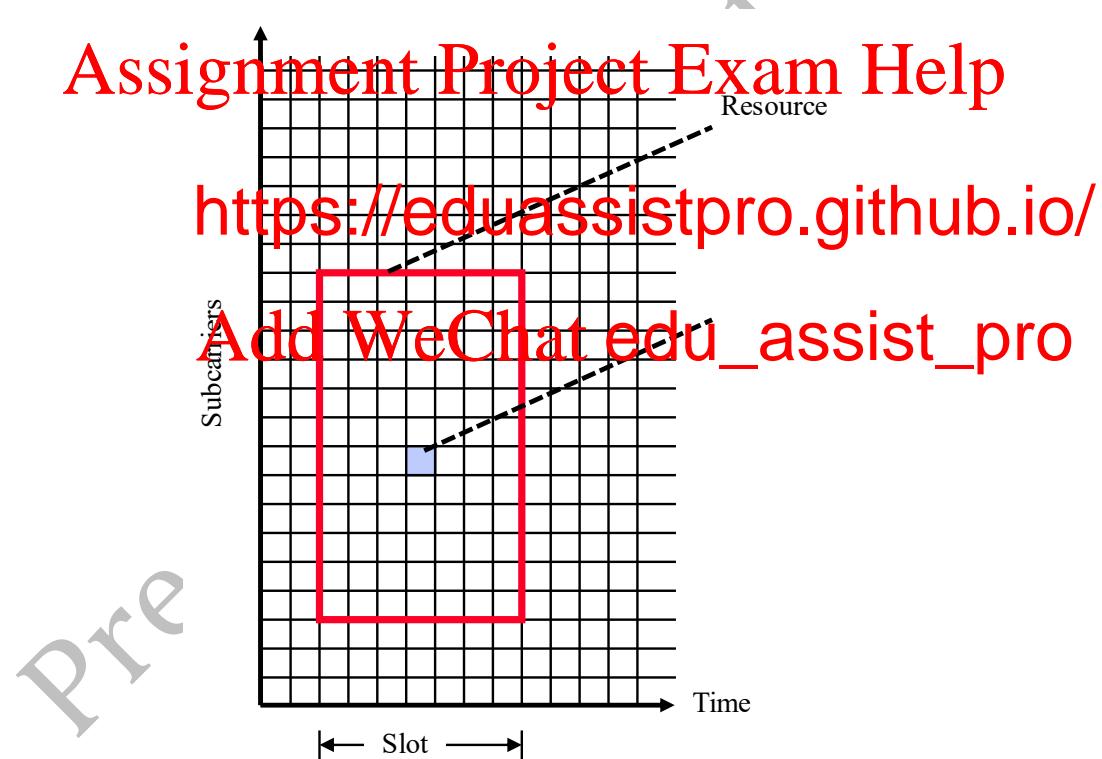


Figure 7.21 Physical Resource Block (PRB).

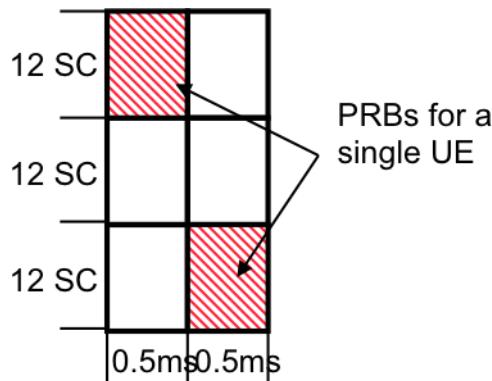


Figure 7.22 An example of two PRB allocations to a subframe (single UE).

Example 7.4

For *normal* cyclic prefix (CP), how many resource elements (REs) are there in 2 RBs?

Solution:

Assignment Project Exam Help

With normal CP, we have 7 symbols per slot

Number of REs

Number of REs

<https://eduassistpro.github.io/>

Example 7.5

Add WeChat edu_assist_pro

What is the *peak data rate* of downlink LTE?

Solution:

For peak data rate, we assume best conditions, i.e., 64 QAM (6 bits per symbol), short CP (7 symbols per 0.5ms slot), and 20 MHz channel

Each symbol duration = $0.5\text{ms} / 7 = 71.4\mu\text{s}$

Number of RB for 20 MHz = 100

Number of subcarriers per RB = 12

Number of subcarriers for 20 MHz channel = $100 \times 12 = 1200$

Number of bits transmitted per symbol time = 6×1200 bits

Data rate = $(6 \times 1200 \text{ bits}) / (71.4\mu\text{s}) = 100.8 \text{ Mbps}$ (without MIMO)

7.20 Chapter Summary

1. In a cellular cluster of size N, the minimum distance between co-channel cells is $D = R\sqrt{3N}$, where R represents the cell radius.

2. With sectorized antenna, it is possible to have a cluster size of just 1, i.e., two adjacent cells can reuse the same spectrum.
3. 1G was analog voice with FDMA
4. 2G was digital voice with TDMA. Most widely implemented 2G is GSM.
5. 3G was voice+data with CDMA.
6. LTE is the precursor of 4G. LTE uses a **super-frame** of 10 subframes of 1ms each. Each **subframe** has one 0.5ms **slot** for uplink and downlink each. Each subcarrier in LTE is 15kHz. 12 subcarriers (180kHz) over 1ms slot is used as a unit of resource in LTE.

References

[Rappaport2002] Theodore S. Rappaport, "Wireless Communications: Principles and Practice," Prentice Hall 2002.

[FCC800MHz] 800MHz Cellular Service – FCC [accessed 22 october 2001]

[ASTELY2009] D. Astely, E. Dahlman, A. Furuskär, Y. Jading, M. Lindström and S. Parkvall, "LTE: the evolution of mobile broadband," in *IEEE Communications Magazine*, vol. 47, no. 4, pp. 44-51, April 2009, doi: 10.1109/MCOM.2009.4907406.

End of Chapter <https://eduassistpro.github.io/>

Add WeChat edu_assist_pro