

How to Map 3D into Footprint

Step 1: In the Projects tab, double click the **PCBLIB** Source Document as below:

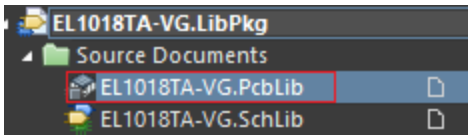



Note: Any variations of the PCB footprint are included in the Ultra Librarian download and footprint generation.

Step 2: Right Click > Select **Place** > **3D Body**.

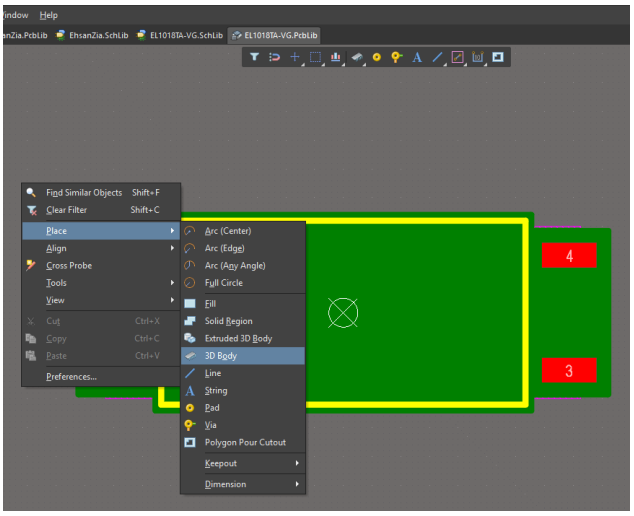

Step 3: In the Choose Model dialog box, select the .**step** file. Select **Open**.




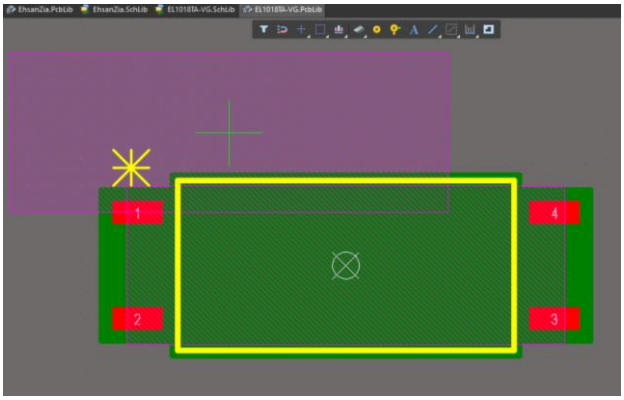


Note: If selected, this is included in the download from Ultra Librarian and is located in the folder beginning with the download date.

Select the center of the PCB Footprint.

Step 4: To view the 3D Model, Hit **3** on your keyboard

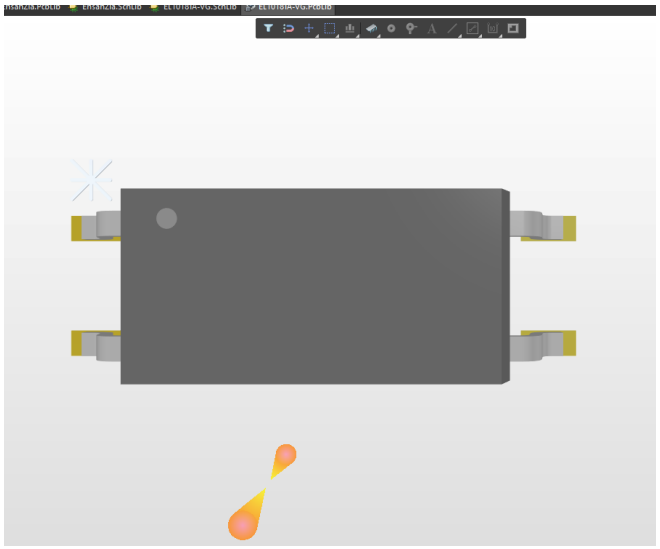

Note: if the 3D is not placed correctly you can change the rotation by X, Y, or Z axis based on the below picture. You can hit the 3D and see the properties as below:

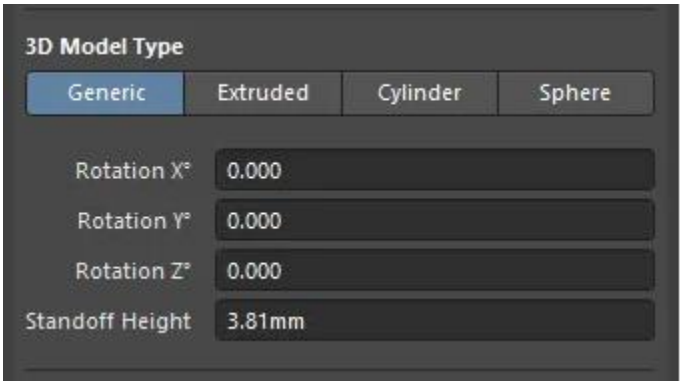

Note: You can hit **2** to go back to foot print.

Created by: Ehsan Zia