
How to Create a Foot print in Altium

Step 1:

File => New => Library => PCB Library

To change the units of distance measurement (from mm to inch(mil) and vice versa): hit "**Q**"

Use "**Shift + H** " to **show** or **hide** the Measurement Tool

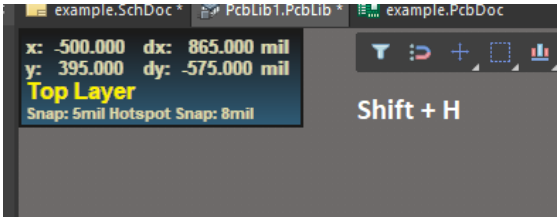


Set the Grid on PCB: Ctrl + Shift + G

R + M => Ruler

Set the Center Point: **E**dit > Set Re**f**erence > **C**enter OR Hit E + F + C


Step 2: Create a Body

Click on Mechanical layer:

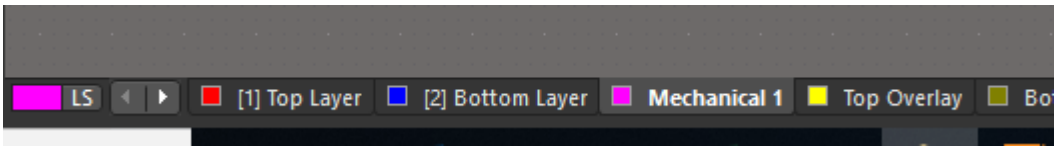





Step 3: Create a Pad:

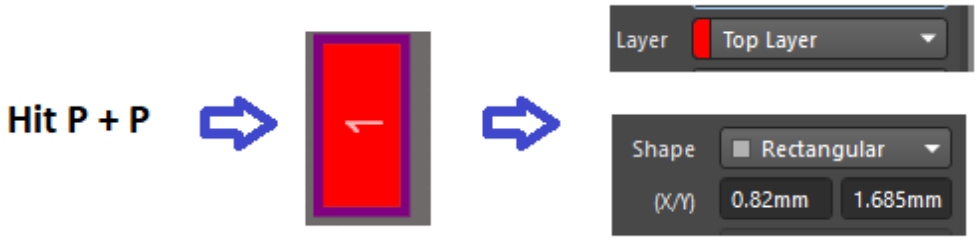

Step 4: Indicate Pin 1:

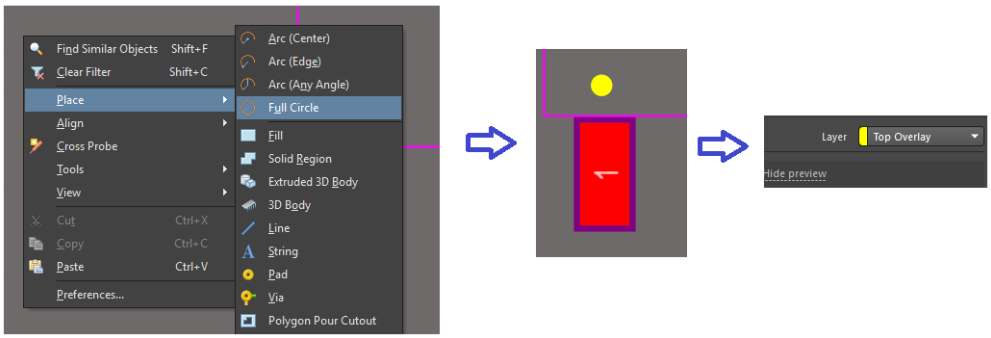


Step 5: Lock All the Pads:

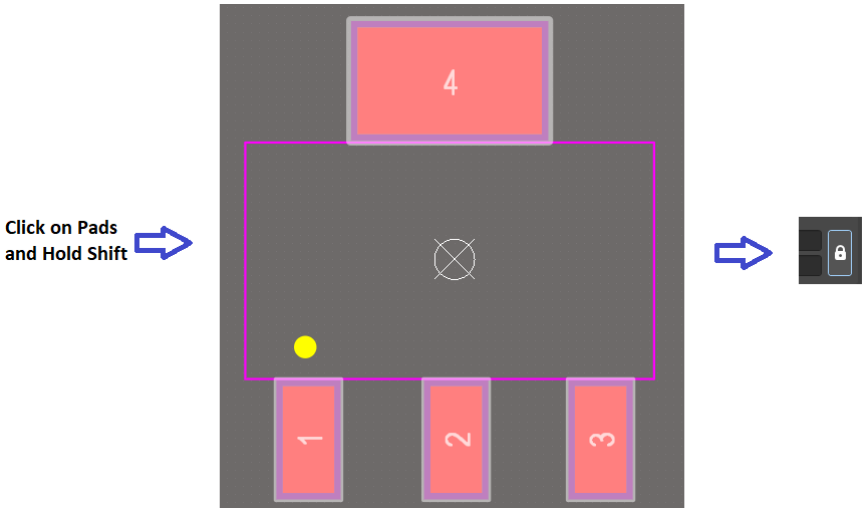

Step 6: Link Schematic with Footprint:

Go to Schematic > Click on Component > Go to Properties > Add Footprint> Browse where You Save Your Footprint in PCB Library

Set Pads in 1 line:

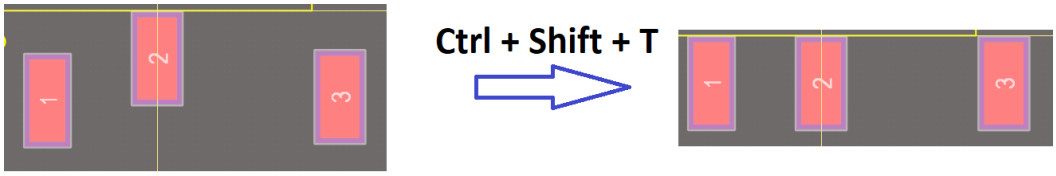

Created By: Ehsan Zia