The CPU: A very tall pile of simple

Ekansh Goenka

October 2026

Contents

The CPU: A very tall pile of simple 1
1 How to Read This Article 4
2 Circuits & Electricity 5
3 Switches, Relays, & Logic Gates 5
4 Counting With Wires 13
5 Addition 17
6 Storing a Bit 24
7 Buses 31
8 Organizing Data 35
9 The ALU 43
10 The Big Picture 46
11 Instructions Are Numbers 49

You can hear the phrase

"computers think in 1s and 0s"

a hundred times and still not understand how a computer actually works. By itself, this explains basically nothing. Sure, a wire can be high or low. Sure, a light can be on or off. But how does that become addition?

How does that become memory?

How does that become a program sitting in RAM, one instruction after another, telling a machine what to do?

Some resources stay extremely high-level, so you never really understand how a CPU actually works.

The deeper resources are amazing, but they are long, dense, and intimidating. And frankly, for someone who doesn't want that level of detail, a lot of it can often feel like too much.

My goal is to help you understand what is going on under the hood, without exploding your brain or eating weeks of time.

We start with a simple circuit turning a light bulb on and off, then work our way through logic gates, memory, and the basic circuits underneath them.

The key point is that nothing here is smart in isolation. A CPU is not one hard idea. It is a very tall pile of simple ones.

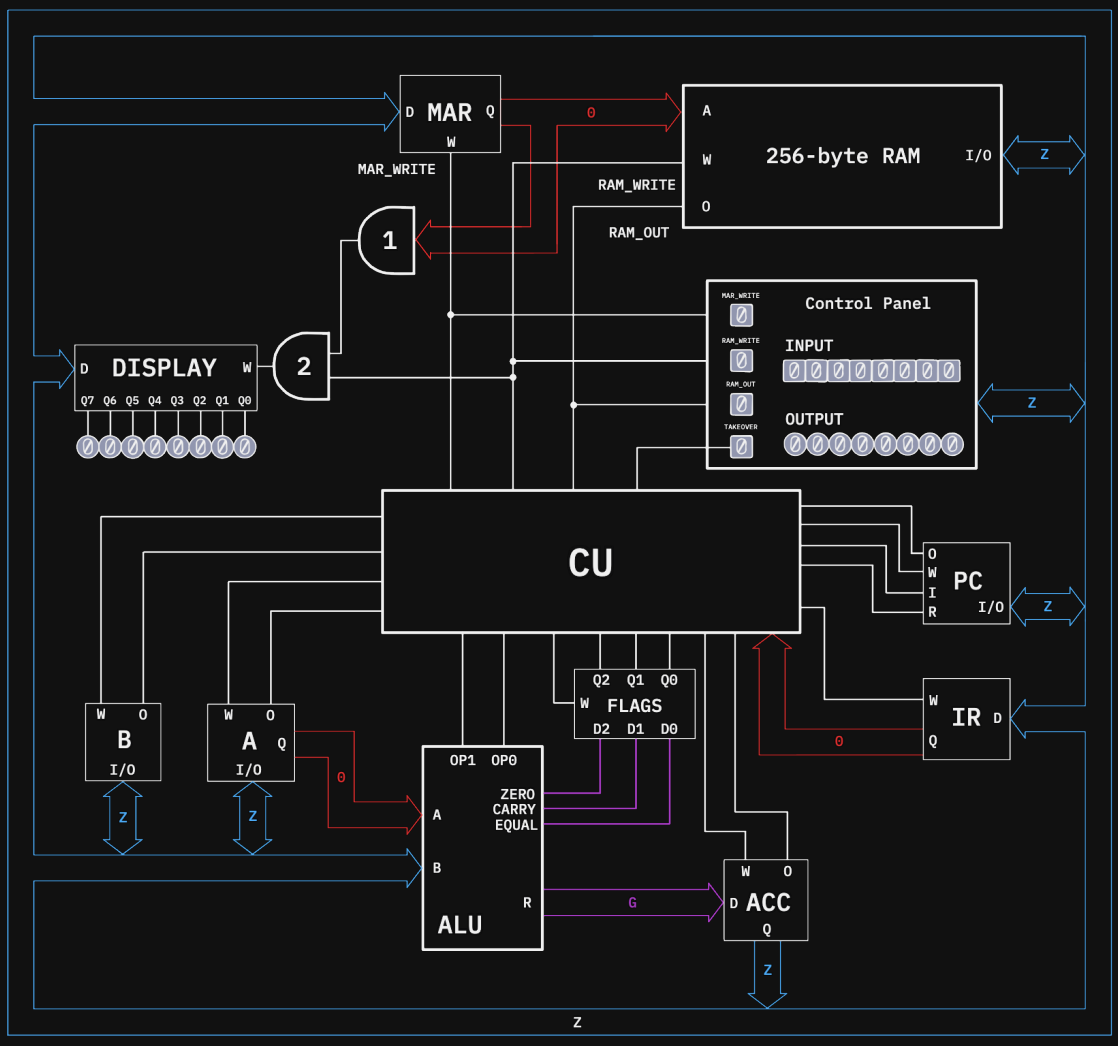


Diagram 1.1. The whole CPU.

We are going to try to understand this simple CPU. It is not a modern CPU with decades of optimization, but it has the same core functionality.

1 How to Read This Article

- If a diagram is hard to understand, click it and step through each frame one by one using the arrow keys, with the provided descriptions. This only works if you are reading on my website.
- Don't try to "memorize" every layout. Focus on the mental models, concepts, and what part each piece has to play.
- If a section feels dense or hard to understand, follow the diagrams first and try to get a feel for what is happening.

2 Circuits & Electricity

First, we need the basics of how electricity and circuits work.

Here is a simple circuit:

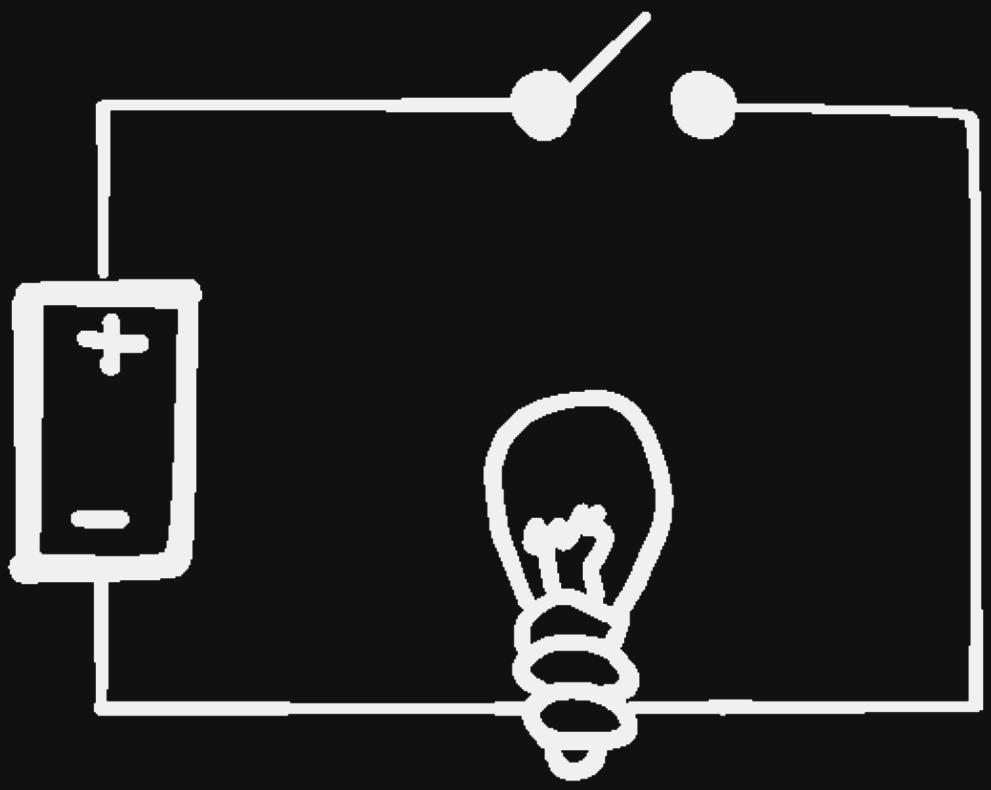


Diagram 3.1. A basic circuit with a battery, switch, and bulb.

We can think of the battery as being able to push charge around the loop. Current can only flow when this loop is completed.

If the loop is broken, nothing flows. A switch is simply a controlled break in the loop, allowing us to break and complete the loop whenever we want.

And a light bulb is just a simple light bulb. It glows when current flows through the filament.

Now we have a circuit that can do one yes/no thing. Current flows or it doesn't.

Now let's see if we can combine switches and relays so the circuit can "answer" slightly more interesting questions.

3 Switches, Relays, & Logic Gates

Say we want to build a simple dog washer circuit: a circuit that, based on some inputs, can tell us whether to wash our dog or not.

Our simple circuit is going to use a light bulb being on to mean yes, wash the dog. Light bulb off means no, don't wash the dog.

So we start with an extremely simple version with two switches.

In this first version, the switches are directly inside the bulb circuit. The person using the circuit can open or close each switch to answer a yes/no question.

Let's say switch 1 represents `STINKY`: whether the dog is stinky or not. Switch 2 represents `OLD_WASH`: has it been more than 5 days since the last wash.

So the rules for our first circuit are:

if `STINKY AND OLD_WASH`, the bulb is on.

Or in other words, if the dog is stinky and its last wash was over 5 days ago, then wash the dog.

Here is the circuit:

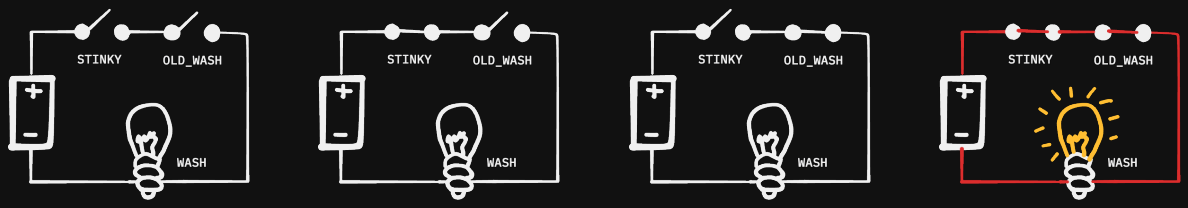


Diagram 4.1. The hand-switch version of AND.

This circuit shows a logical AND operation. A person is flipping the switches manually. The output turns on only when both inputs are true.

Now add a new input: `MUDDY`, if the dog is muddy.

Now the rules of the circuit change:

if `(MUDDY OR STINKY) AND OLD_WASH`

All this says is, if the dog is muddy or stinky and it's been at least 5 days since the dog's last wash, you should wash the dog.

Now let's focus on the (`MUDDY` OR `STINKY`) part of this circuit:

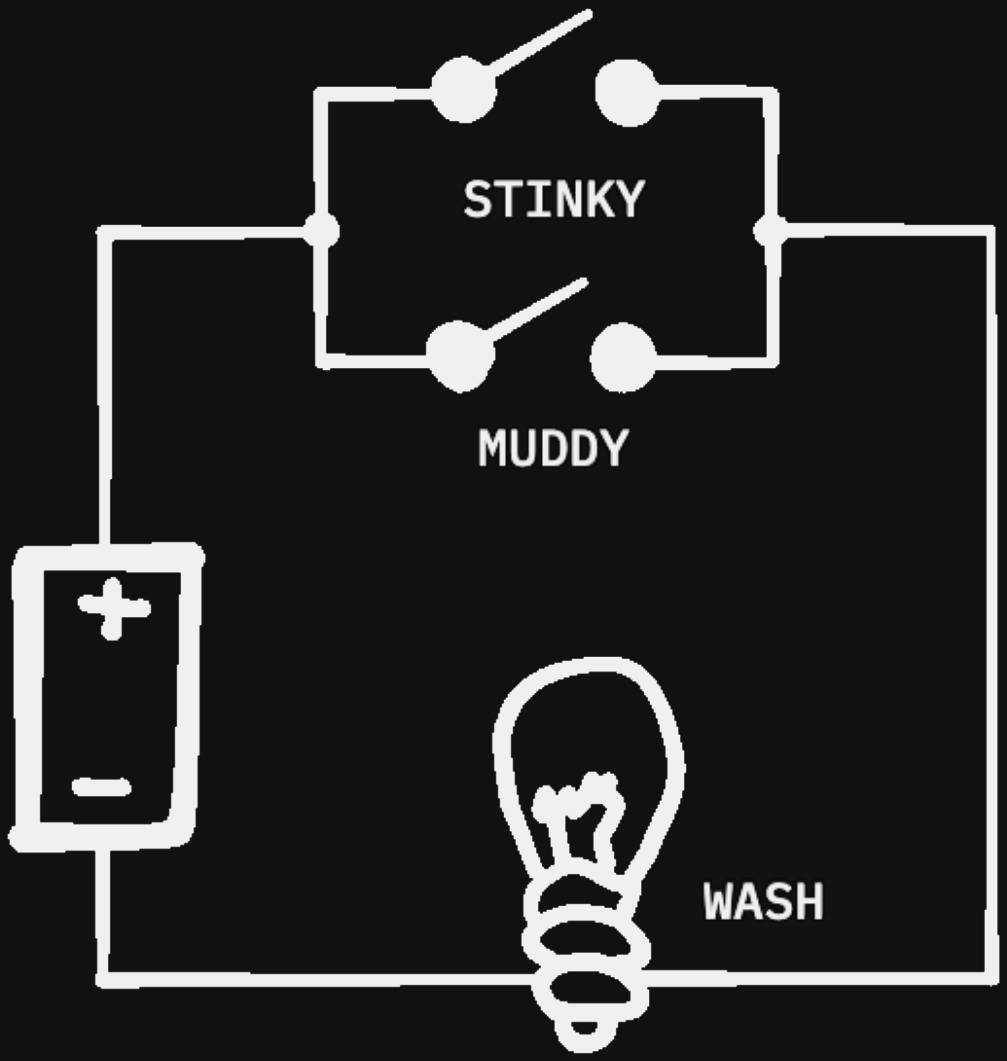


Diagram 4.2. The hand-switch version of OR.

This is a logical OR: either `MUDDY` or `STINKY` needs to be on for the bulb to turn on.

Before we combine these, let's tackle a bigger problem

So far, every switch is flipped by a human. If we ever want to build a computer, it needs to run by itself: electricity has to be able to flip a switch by itself! But how?

Electromagnetic relays, that's how. Or at least, that is one early solution to this problem. We will talk about other solutions a little more later on.

This probably sounds quite complicated, but it is just a magnet powered by electricity.

One thing to mention before the next diagram: if you see several little batteries in a circuit, don't interpret that as several totally separate power sources. I am using the battery drawing as a symbol for "this point is connected to power," so the diagram doesn't turn into spaghetti.

Here is how it works:

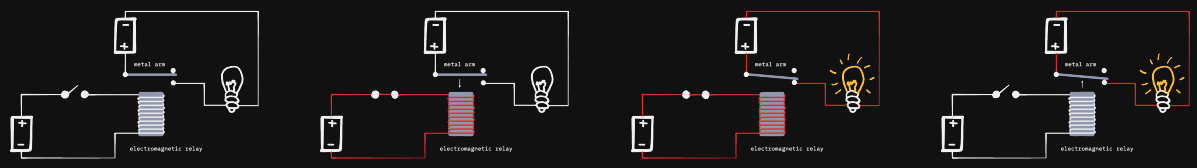


Diagram 4.3. An electromagnetic relay.

This relay is made from a coil of wire and a movable metal arm. When current flows through the coil, the coil becomes a magnet and pulls the arm down. When current stops, a spring pulls the arm back up.

A relay lets one circuit open or close a switch in another circuit. The two circuits stay separate, but the relay arm physically connects them.

Also, in this example, we end up using a switch in the input circuit anyway, but any kind of electrical signal could be used, like the output of another circuit. The switch is just there to demonstrate how the relay works.

As you can also tell by the diagram, there is a slight delay between the coil turning on and the metal arm moving. Relays are mechanical, so they do not switch instantly.

Now let's see how we can build an actual electrical AND gate that takes two input wires and outputs an electrical signal.

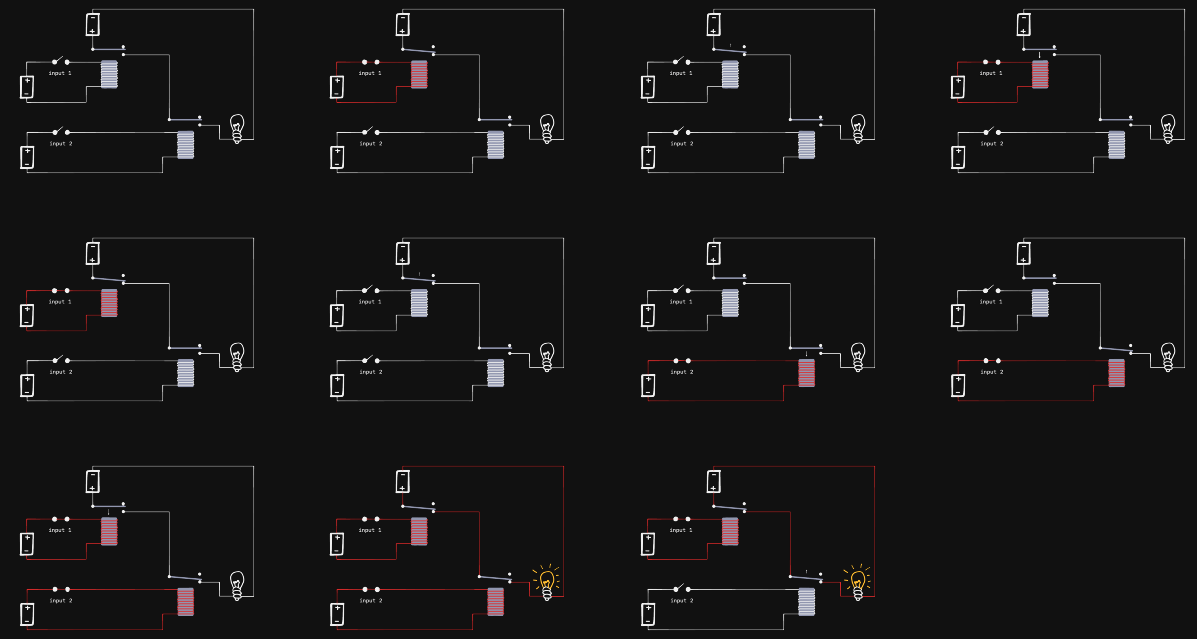


Diagram 4.4. An AND gate.

The output circuit has two breaks in it, one controlled by each input relay. Only when both inputs have signal do both relays close, completing the output loop.

Using these relays chained in clever ways, you can create every fundamental logic gate, such as the OR gate.

But before the next diagram, I am going to use one more new symbol: ground.

For the purposes of this article, the ground symbol will simply refer to the common return point of the circuit, usually connected to the negative side of the battery.

Every point marked with the ground symbol is connected together, as if there were hidden wires joining them underneath the drawing. It is not a new component. It is just a less messy way to draw the return path of the circuit.

The circuits are still loops. I am just not explicitly drawing the return wire anymore.

In a real schematic, the ground symbol itself would usually stay white. In these diagrams, I sometimes color it red when that return point is part of the active path for that frame. I think it makes the current path easier to follow visually.

This is how the ground symbol looks:

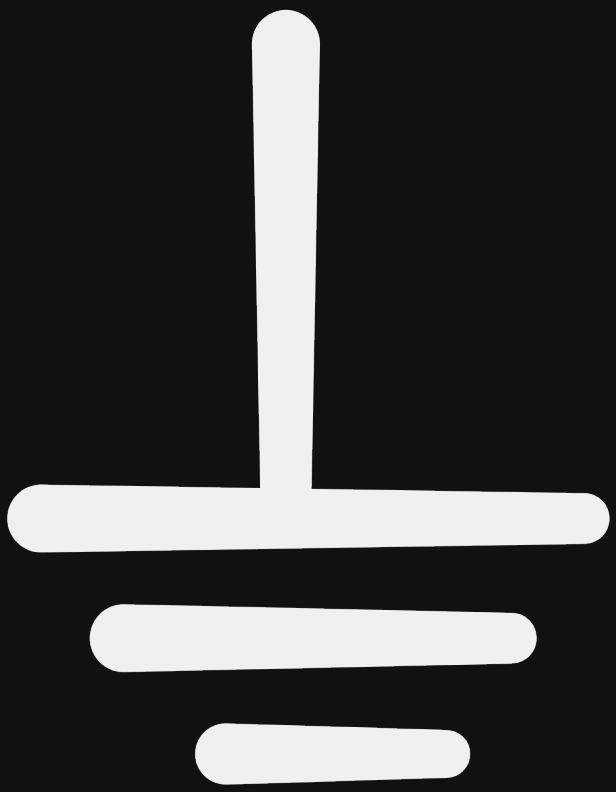


Diagram 4.5. The ground symbol.

Now here is the OR gate:

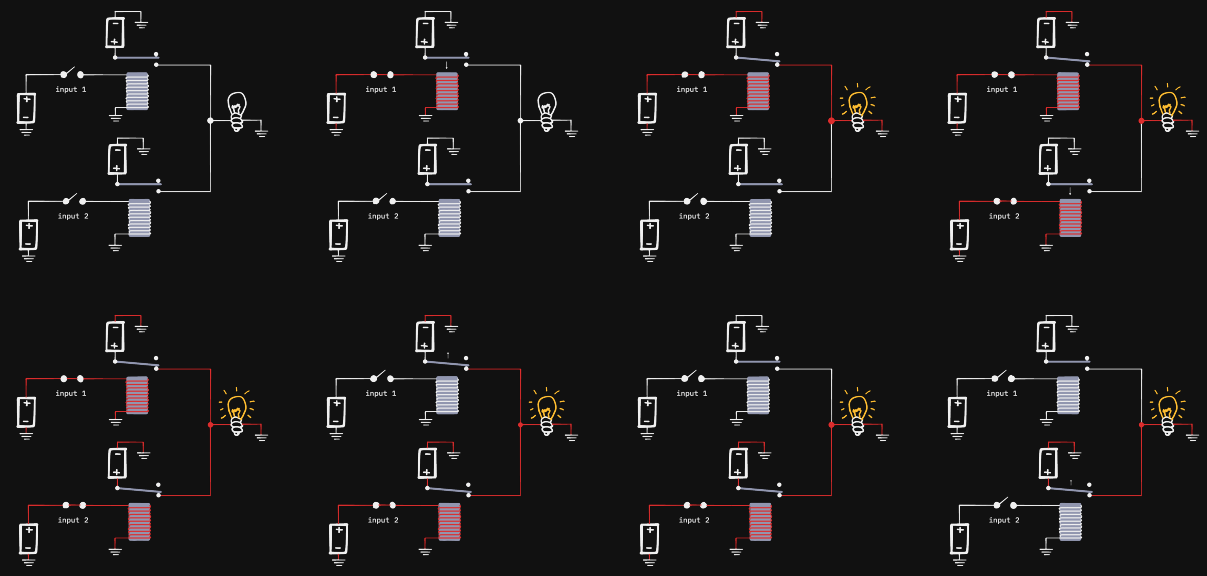


Diagram 4.6. An electronic OR gate.

That is an OR gate using relays. Now here is the full dog washer circuit up to this point:

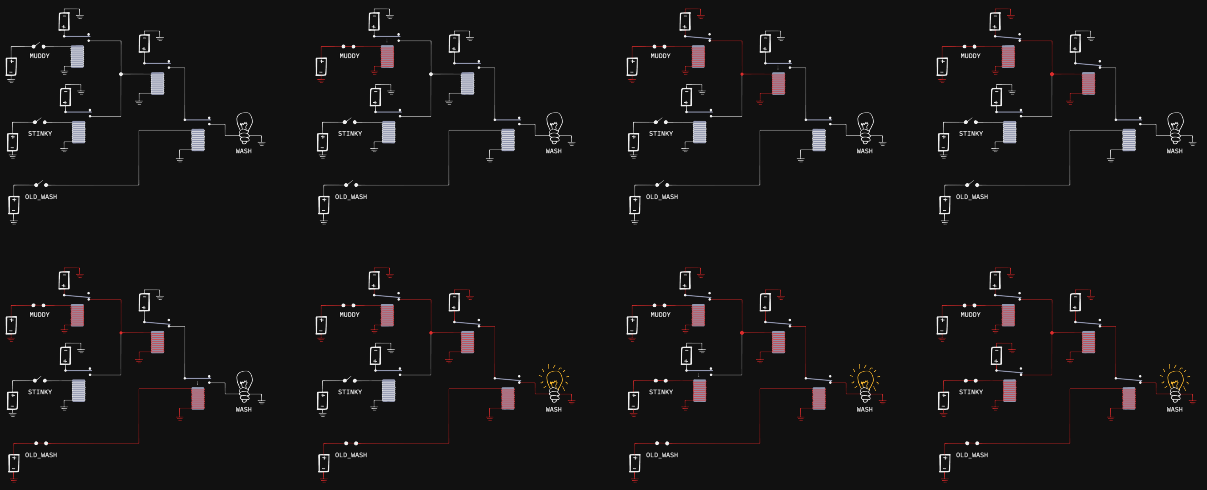


Diagram 4.7. The full dog washer circuit built with relays.

The animation does not show every possible combination of switches, only a handful. But in a nutshell, if `MUDDY` or `STINKY` is on, and `OLD_WASH` is also on, the bulb turns on.

Okay, now let's introduce one last input, or "sensor": `RAIN_SOON`, whether it is predicted to rain soon. The rules of the circuit change once again:

```
((MUDDY OR STINKY) AND OLD_WASH) AND NOT RAIN_SOON
```

The parentheses indicate order of operations. So in plain English:

If the dog is muddy or stinky and it's been at least 5 days since the dog's last wash and it's not going to rain soon, then wash the dog.

Let's focus on this NOT for a second. NOT just inverts a signal: if it receives signal, it outputs no signal; if it receives no signal, it outputs signal.

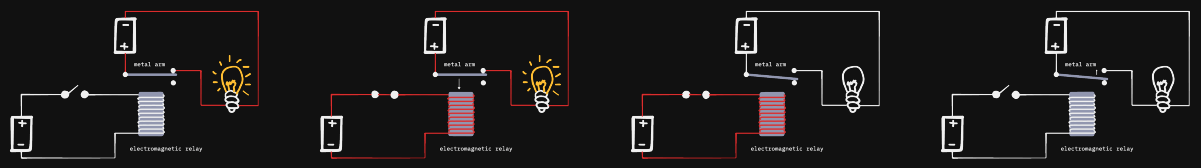


Diagram 4.8. A NOT gate.

Now let's clean up some of our understanding of circuits before we move on. We have been showing our outputs as a light bulb. For a bulb to be on, it needs to be connected to `+` and `-`, one on each side. That difference in voltage allows current to flow, turning on the bulb.

But a bulb is not always what we want. From now on, our gates' outputs will mostly feed other gates' inputs, so the output needs to be a wire, not a bulb. We can't just remove the bulb though; `+` connected directly to `-` would lead to a short-circuit. So what we do is either drive the wire up or down, so it is connected to either `+` or `-`. All of our relay gates can be simply adapted to do this.

A `1` output is a wire being driven high. A `0` output is not "nothing"; it is a wire being driven low. Remember this information; it will come in handy later on.

As you can see in the after example below, even when the relay is not pulling the arm, even when the output is 0, it is still touching the negative end of that battery, so it is being driven to `-`.

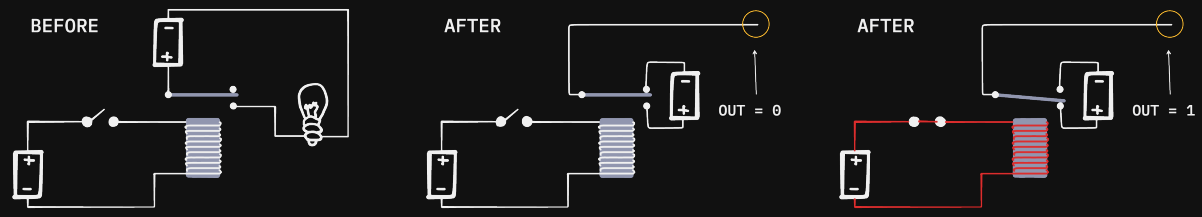


Diagram 4.9. Driving an output wire.

In this diagram, red wire means current is actively flowing. That's why `OUT = 1` is still white. Later when we stop drawing every logic gate, red wire will just mean high, or 1.

Now before we look at the completed circuit, let's learn some basic logic gate symbols.

An AND gate is drawn like this:

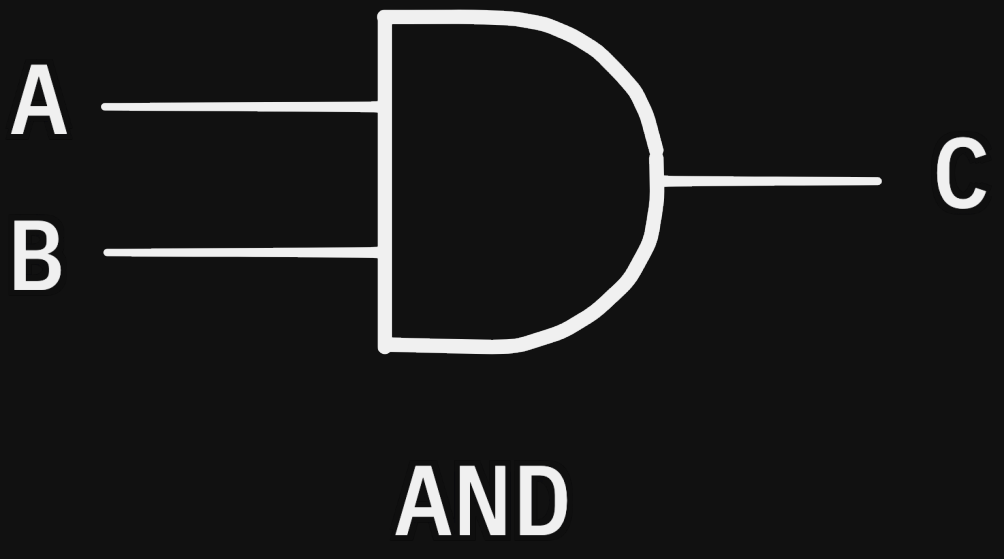


Diagram 4.10. An AND gate.

This symbol represents the AND circuit we made previously, except instead of turning a bulb on and off, it drives an output wire.

An OR gate is drawn like this:

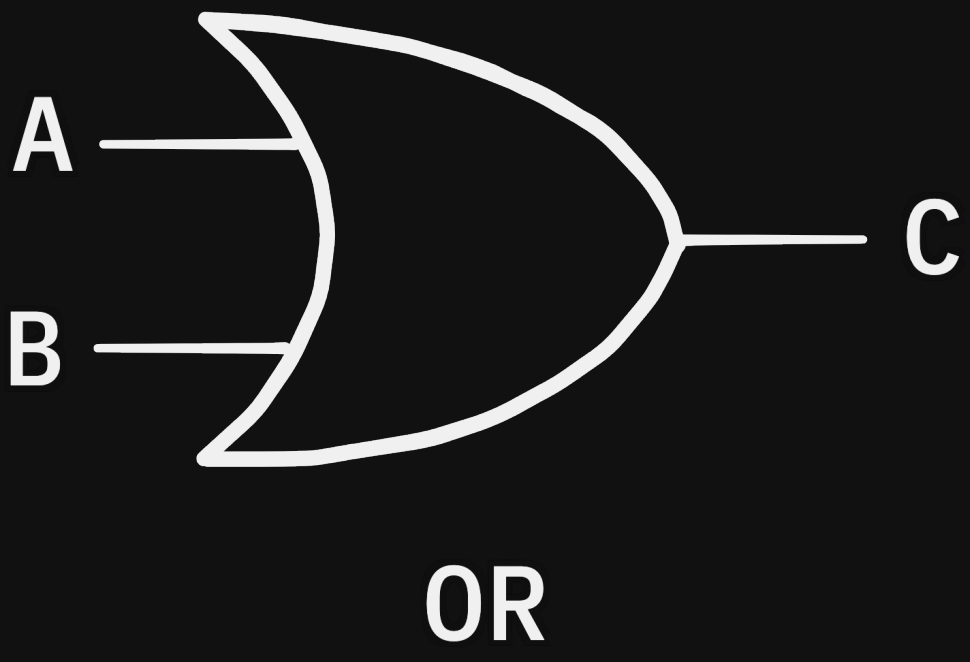


Diagram 4.11. An OR gate.

This symbol represents the OR circuit we made previously.

Whenever I use these symbols moving forward, they can almost directly translate to the circuits with the relays I showed you previously, but the internal components stay hidden for cleanliness.

Here are three more useful gate symbols:

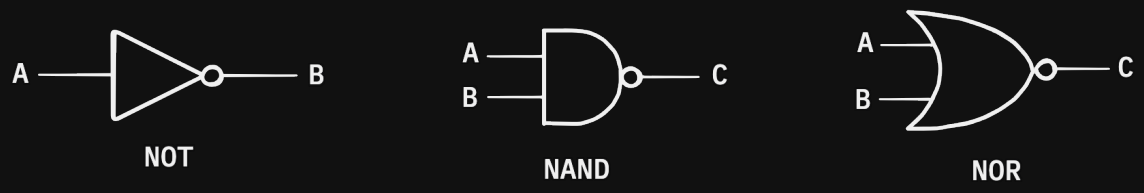


Diagram 4.12. NOT, NAND, NOR gates.

NAND is AND with the output flipped. NOR is OR with the output flipped.

That little circle at the end of a gate means "flip the output."

With our knowledge about logic gates, let's create the "should-I-wash-my-dog 5000" machine!

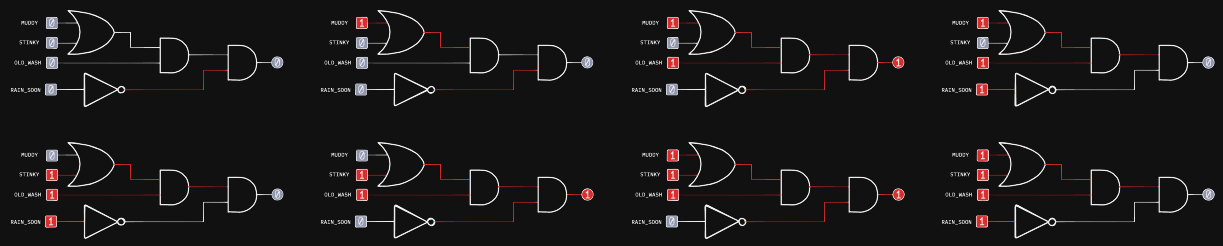


Diagram 4.13. The final dog washer circuit.

Again this animation doesn't cover all possible states.

Keep in mind these electromagnetic relays we used in the examples are quite big and slow.

Relays aren't the only solution. They are simply one of the early and intuitive methods to understand, and many real computers like the Harvard Mark I actually used these types of relays.

In modern computers, similar behavior is achieved by using transistors. If you want to learn more about transistor based logic gates: visit this site.

I don't know about you, but addition seems like a pretty logical next step to these logic gates. But not so fast.

This is how circuits make yes/no decisions. Not by understanding what `MUDDY` means, but by wiring simple gates so the output turns on only for the input pattern we care about.

A wire is just a wire. We gave these wires meaning. We decided that one wire means `STINKY`, another wire means `MUDDY`, and another means `RAIN_SOON`.

To make a CPU, we need to give wires a different kind of meaning: numbers. Before we can build a circuit that adds, we need a way to represent numbers using only on and off.

That is what the next section is about.

4 Counting With Wires

Before we continue with this section, let's define some terms.

A wire driven low is `0`, and a wire driven high is `1`. Let's call one wire, one bit. A bit can either be `0` or `1`.

These are just labels that represent the state of a wire.

A group of 8 bits is called a byte. With 8 bits, there are `2^8`, or 256, possible patterns. So if we use those patterns to represent non-negative numbers, one byte can represent 0 through 255.

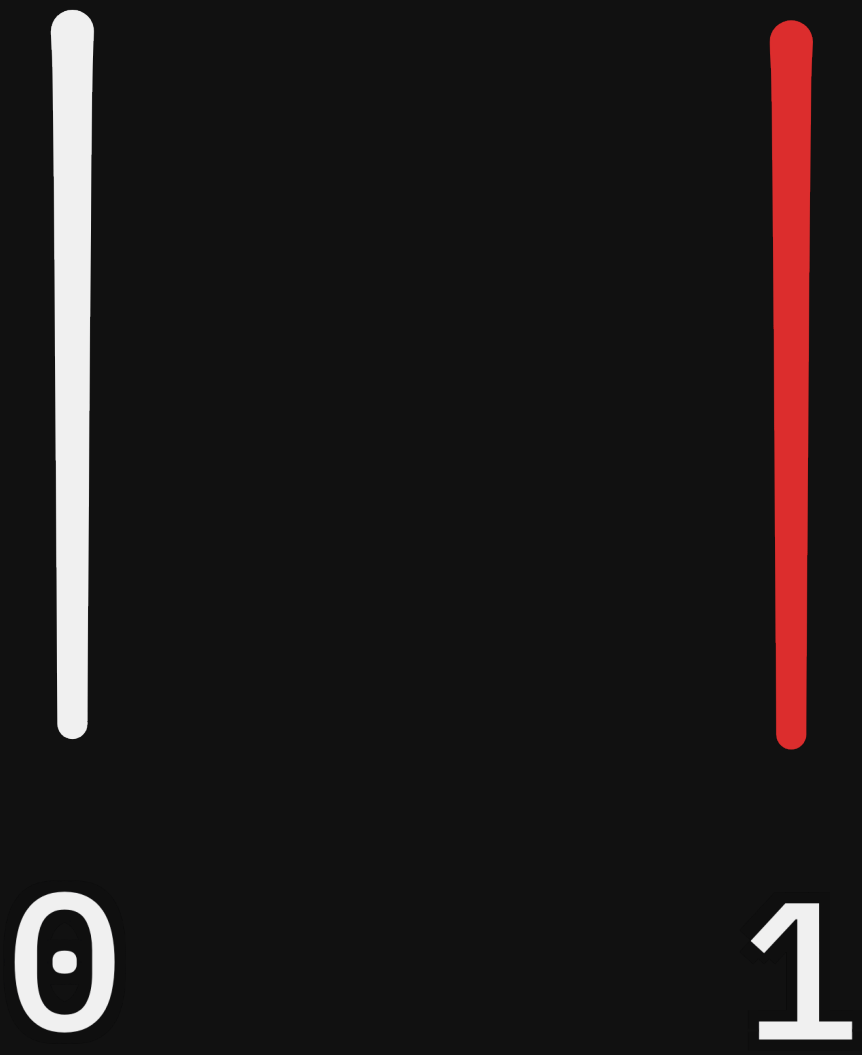


Diagram 5.1. One wire can represent two states: `0` or `1`.

If we want to represent numbers using wires, we are going to need more than one wire, because one wire can only represent up to two numbers, since it only has two possible states: `0` or `1`.

But two wires have `2^2`, or four states, and three wires have `2^3`, or eight states. That would allow us to represent more numbers.

Here are all the possible states we have with 3 wires:



Diagram 5.2. States with 3 wires.

We can represent 8 numbers just like this.

But, why does `010` mean 2? Why does `101` mean 5? Is it just randomly assigned?

Not exactly. To understand this, let's take a quick detour to decimal, a.k.a. base ten.

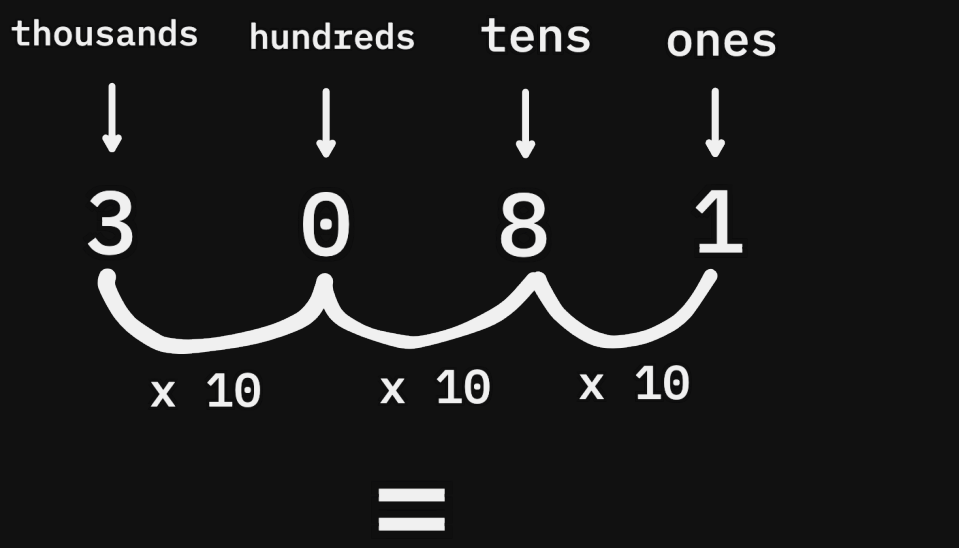


Diagram 5.3. The decimal system.

In our decimal counting system, each place value is a multiple of 10. That is because we have ten digits: 0-9.

This exact same place value logic can apply to the binary system too. We have two digits, 0 and 1, so each place is a multiple of 2.

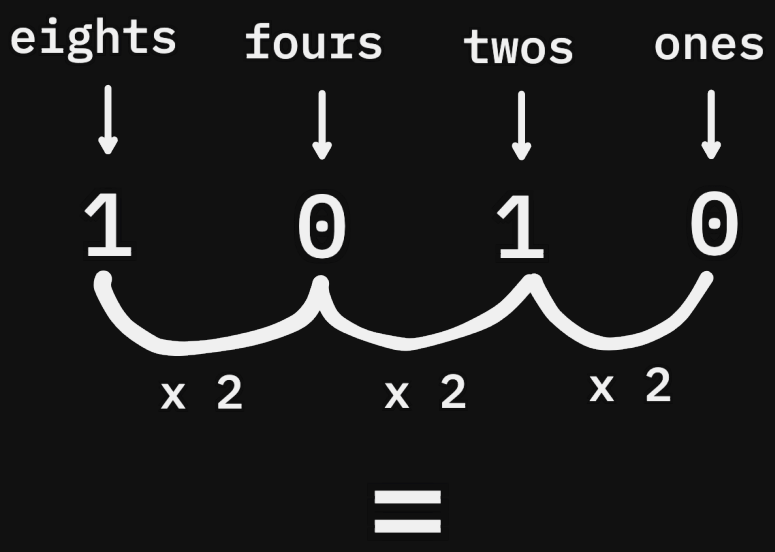


Diagram 5.4. The binary system.

So binary is, at the end of the day, decimal but with only two digits instead of ten.

A few examples:

- `101` means 5
- `1101` means 13
- `101010` means 42
- `1100011` means 99

You don't need to do these problems in your head, but I hope the idea of how binary works makes sense.

Let's walk through `1101` together.

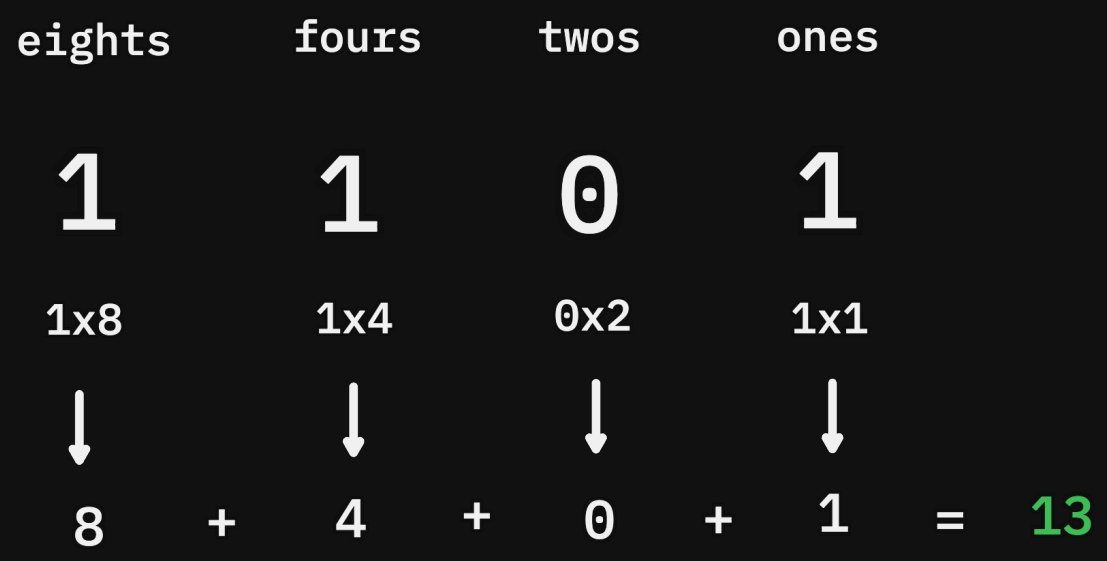


Diagram 5.5. An example in binary.

So now that we can represent numbers with wires, how can we add numbers together? That is what the next section is all about.

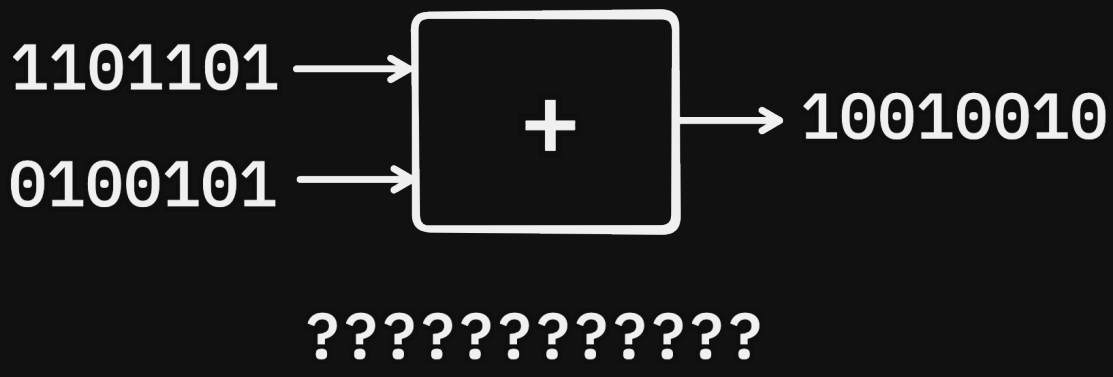


Diagram 5.6. Addition?

5 Addition

Let's start with a brief reminder of how we algorithmically add two decimal numbers.

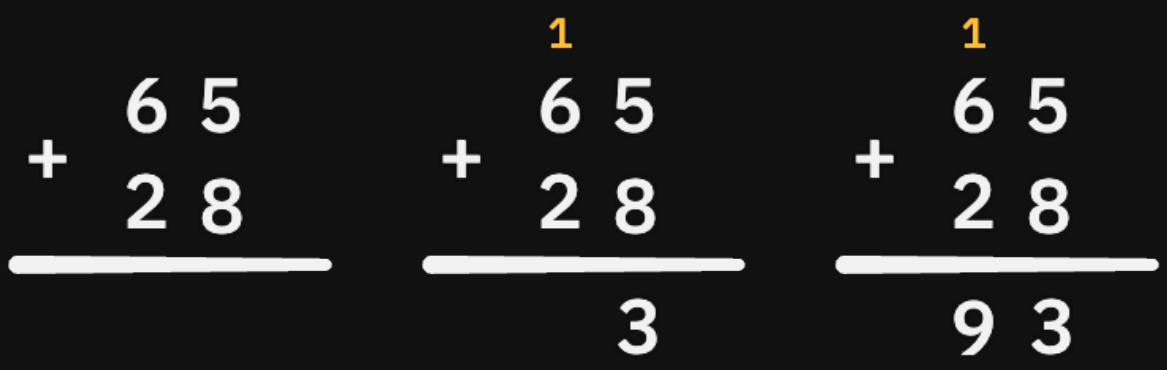


Diagram 6.1. Standard decimal addition.

We start at the rightmost column, do 5+8, get 13, we carry the 1. So we write 3 as the sum, and 1 as the carry. We then move left and repeat over and over remembering to add any carry-in values. Binary addition works the same way.

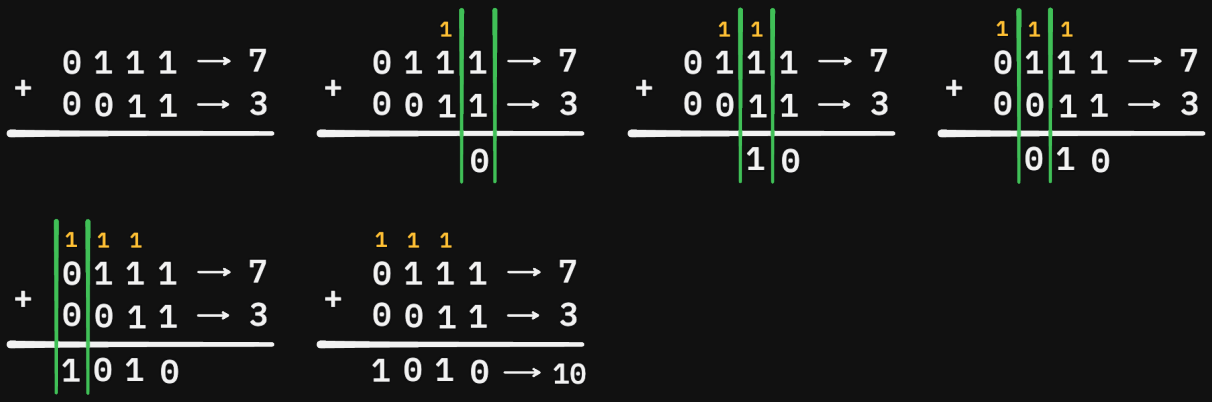


Diagram 6.2. Binary addition.

This works the same in binary.

`1 + 1` gives `10`, which is binary for 2.

So the sum bit for that column is `0`, and the carry is `1`.

`1 + 1 + 1` gives `11`, which is binary for 3. So the sum bit is `1`, and the carry is `1`.

How do we build a circuit using logic gates that performs this standard addition algorithm?

Well, let's start with the rightmost column. If we think about it, all the possible states are:

A	B	Sum	Carry
0	0	0	0
0	1	1	0
1	0	1	0
1	1	0	1

So just `0 + 0`, `1 + 0`, `1 + 1`, or `0 + 1`. If we can make a tiny circuit that takes two inputs, and produces two outputs that match these combinations, we have added the first column.

This is called a half adder. A half adder adds two bits, but it does not handle a carry-in value. That is the job of a full adder.

Let's first build this half adder.

Let's start by computing the sum, not the carry-out.

This is what we want our circuit to do:

A	B	Sum
0	0	0
0	1	1
1	0	1
1	1	0

The sum is 1 only when exactly one input is 1.

This is called XOR, short for exclusive OR.

If we combine an OR gate and a NAND gate, and AND them together we get XOR:

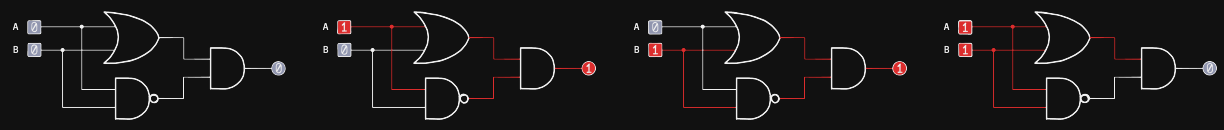


Diagram 6.3. Half adder sum / XOR.

OR checks that at least one input is on, and NAND makes sure that both inputs are not on.

Here is how an XOR gate looks:

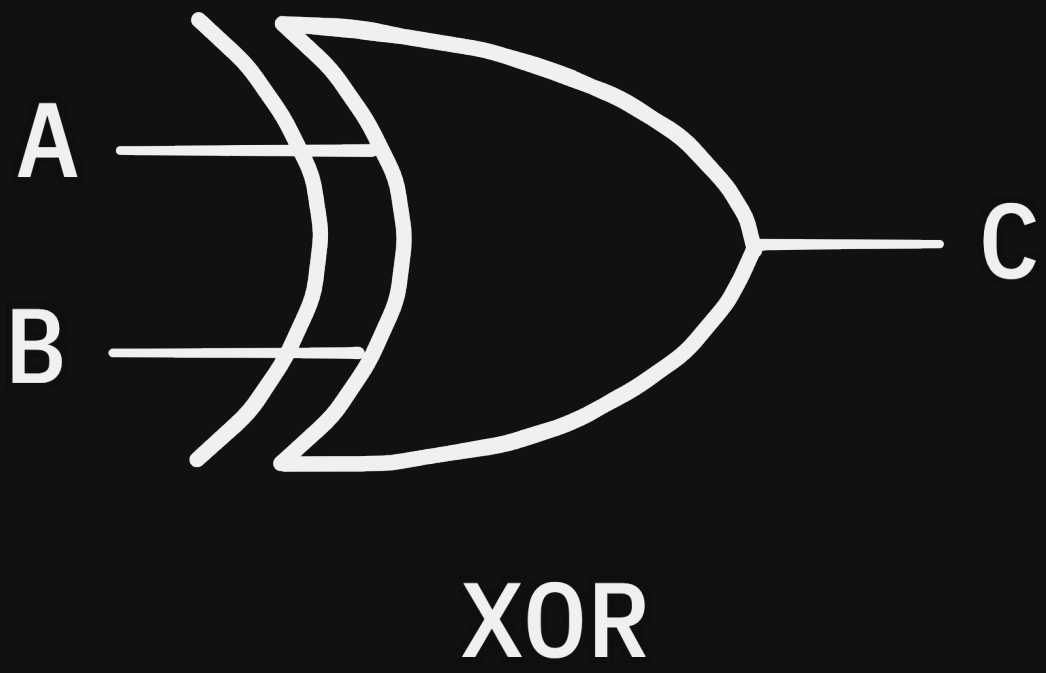


Diagram 6.4. An XOR gate.

Now let's do the carry value. The carry is simple! We only want to carry if we are doing `1 + 1`, so we just use an AND gate to check if both inputs are on.

Now here is our half adder:

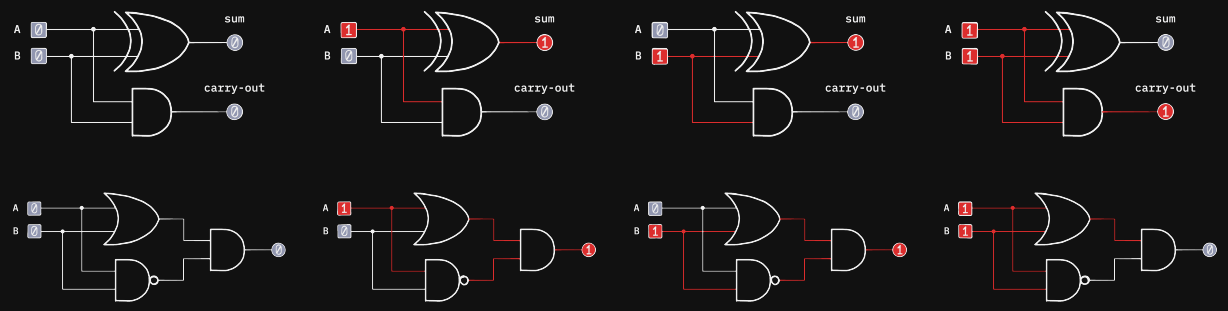


Diagram 6.5. A half adder.

As you can see it works! `0 + 0 = 0`, `1 + 0 = 1`, `0 + 1 = 1`, and `1 + 1 = 10`.

Now let's package up our half adder into a little box. From now on, I will call these packaged-up circuits chips:

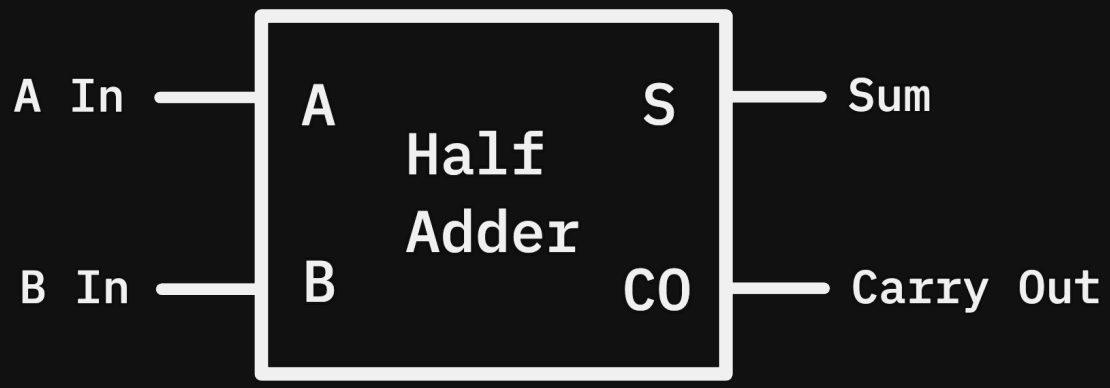


Diagram 6.6. A half adder chip.

Now that we have a half adder, we can add the rightmost column. That works because the rightmost column has no carry-in from a previous column. It only needs to add two bits.

So if we have a number like this:

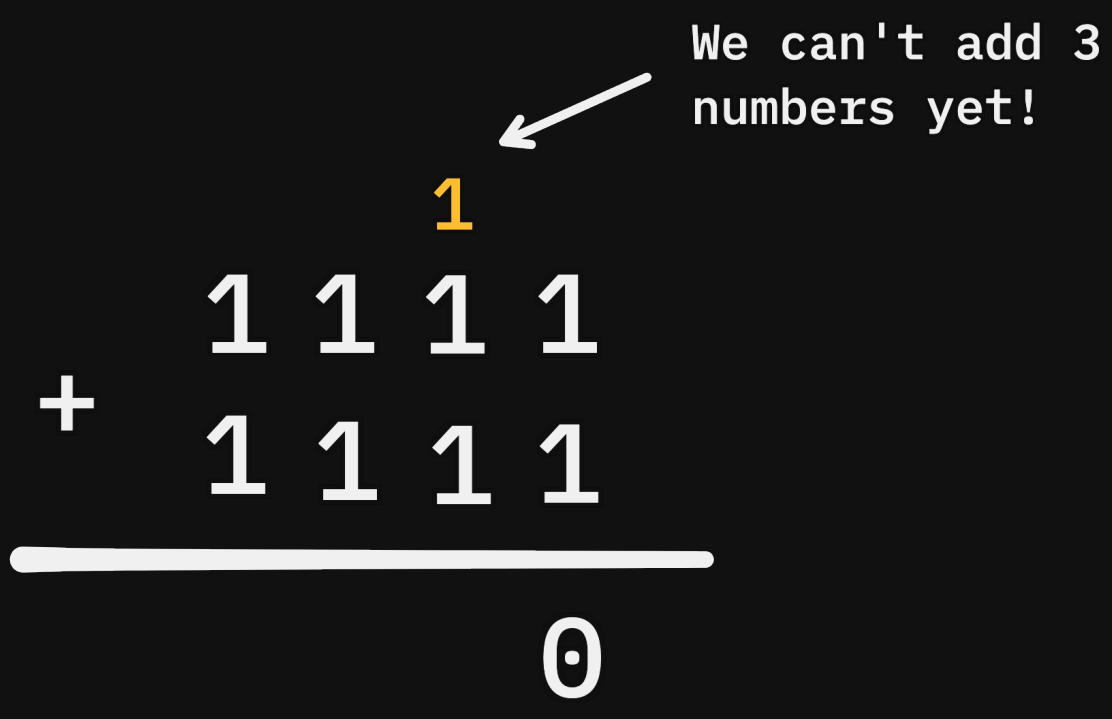


Diagram 6.7. The next column has to add two bits plus a carry-in.

The half adder can handle the first column: `1 + 1`. That gives us a sum bit of `0` and a carry-out of `1`.

But now the next column has three things to add: `1 + 1 + 1`. The two original bits, plus the carry from the previous column.

A half adder cannot do that. It only accepts two inputs. To continue adding up the other columns, we need a circuit that can take in three inputs: `A`, `B`, and `carry-in`.

To add three bits, we use two half adders and an OR gate:

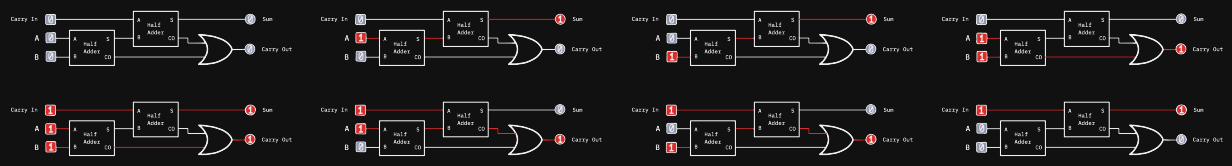


Diagram 6.8. A full adder.

This might look confusing at first. What if both half adders output a carry-out at the same time?

That actually never happens. If a half adder outputs a carry, the sum bit is always 0. So both can never output carries at the same time. Take a moment to think about this if you are confused.

So we can confidently OR the two carry outputs together. If either one is `1`, the full adder's carry-out is `1`.

Let's again package this up into a chip:

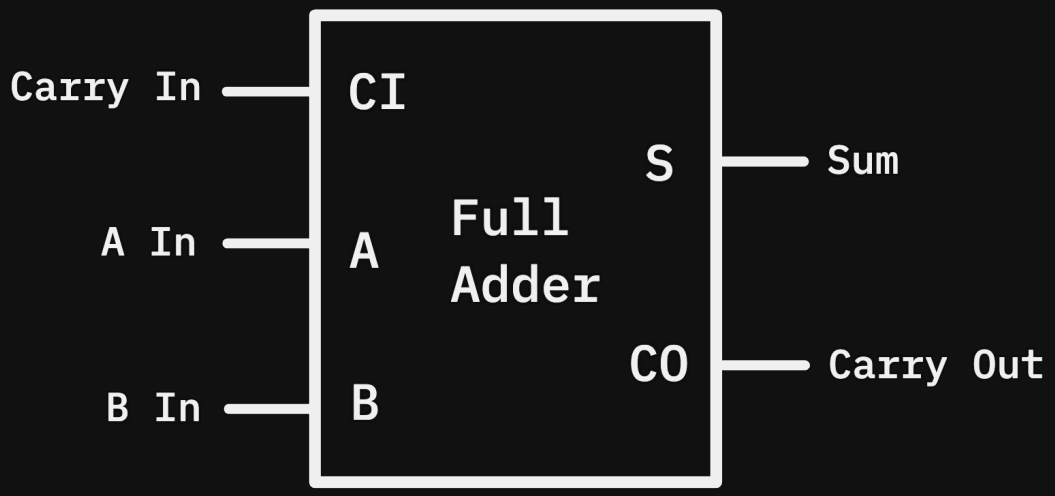


Diagram 6.9. A full adder chip.

We have made a full adder!

Now we can chain full adders together to add two 8-bit numbers. Since 8 bits make one byte, this is an adder that can add two one-byte numbers: anything from 0 to 255.

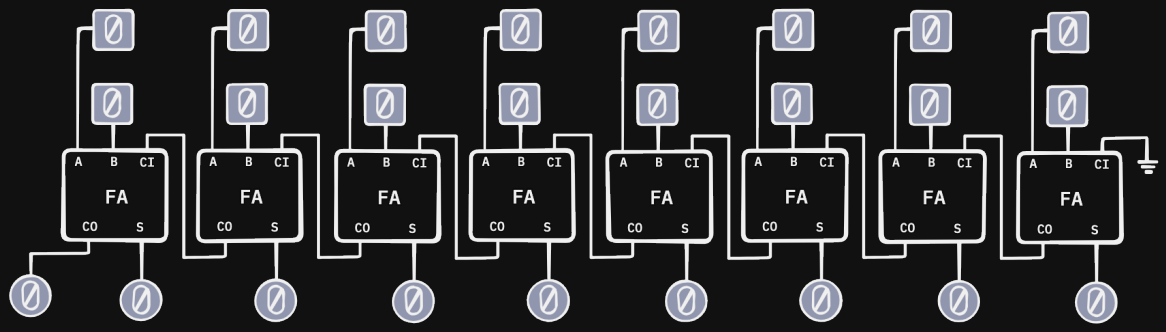


Diagram 6.10. An 8-bit adder.

Each full adder handles one column. The carry-out from one column becomes the carry-in for the next column. That is it! That is all addition is!

Keep in mind, carry-in for the first adder is set to ground, a.k.a. 0.

Also, notice how we have 9 outputs, not 8. That is because two 8-bit values can add up to a number too big to fit in eight bits. It's like how adding two 2-digit numbers could result in a three-digit number for us. Like `50+50=100`.

Now let's package this up into a chip once again:

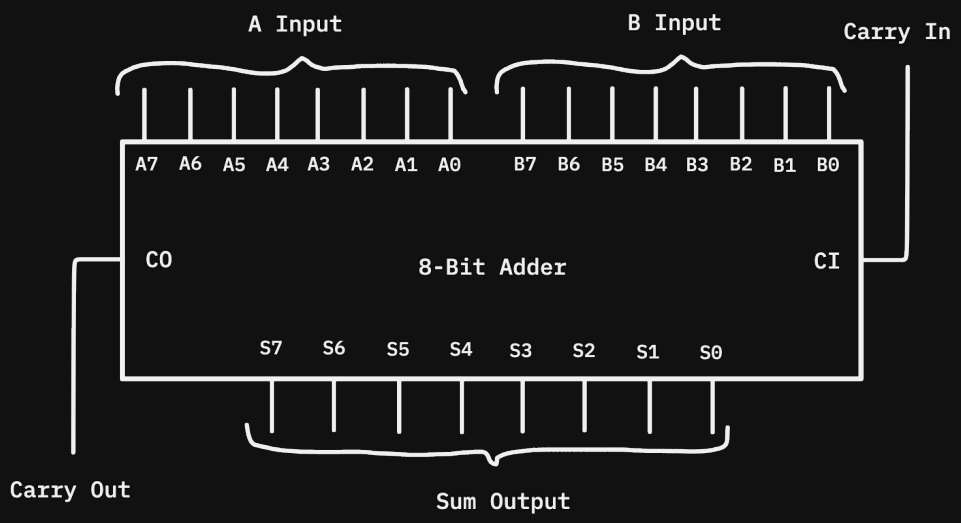


Diagram 6.11. An 8-bit adder chip.

Now we have the carry-out and carry-in as separate inputs and outputs and the whole adder nicely organized into this chip.

Let's have a look at some example problems:

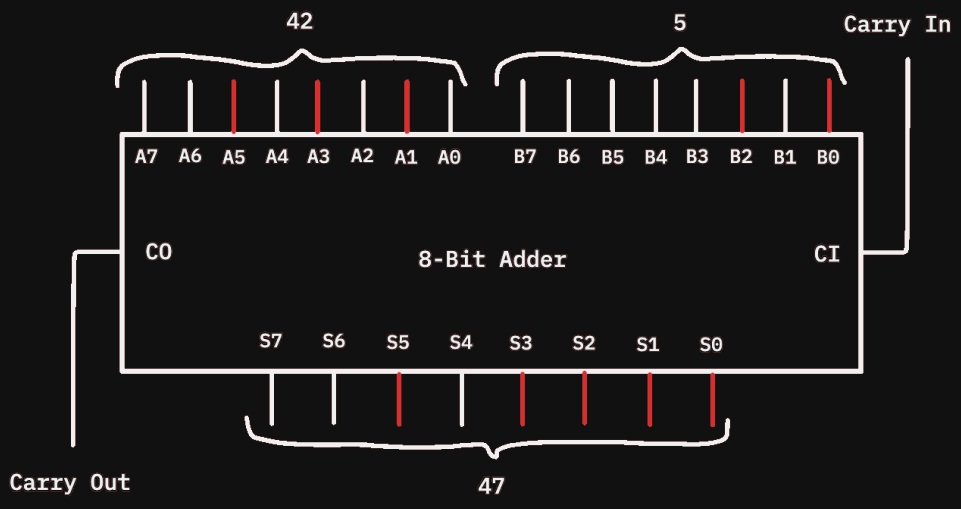


Diagram 6.12. Some examples on the adder.

As you can see in the third example, adding 1 to 255 turns every sum bit to `0` and turns the carry-out on.

This doesn't mean the adder got the wrong answer. In fact, `255 + 1` is `1 00000000` in binary: eight `0` output bits, plus one extra carry-out bit on the left. If we only look at the one-byte output, the result looks like `00000000`, or 0. If we also look at the carry-out, we can see that the real answer was 256.

That is called an overflow: the result was too large to fit inside one byte, so the extra information spilled out into the carry-out bit.

The adder can also produce little status wires, called flags.

For example, if the answer is `00000000`, a ZERO flag can turn on. If addition spills past one byte, a CARRY flag can turn on. So `11111111 + 00000001` gives `00000000` with carry-out `1`.

I don't want to go deep into flags yet. Just remember that the adder can output little yes/no facts about the sum. That matters later for instructions like "jump if zero." But let's not get ahead of ourselves.

We have just built addition! But we also need something else: storage.

For example, let's say we want to build a circuit that counts by ones, like 1, 2, 3, 4,...

The obvious idea is to feed the output of the adder back into one of its inputs. Start with `00000000`, add `00000001`, get `00000001`. Feed that back in, add `00000001` again, get `00000010`. Then `00000011`, then `00000100`, and so on.

That seems correct at first glance.

But there is a big problem. An adder just looks at its current inputs and computes an output.

So if we wire the output straight back into the input, there is no stable value anymore. The adder is basically being asked to make a number equal to itself plus one:

```
input = input + 1
```

That can never settle. As soon as the output changes, the input changes too, which means the output has to change again, which means the input changes again.

With relays, you might physically see this mess play out. With transistors, it would happen almost instantly.

There is no boundary between the old value and the new value.

There is no clean "step 1, step 2, step 3."

So this is not enough. We need a circuit that can hold a value still, then update it only when we tell it to.

That is the next problem: memory.

6 Storing a Bit

In the last section, wiring the output of a circuit back into its input led to chaos. But if we use a smarter configuration, we can use this trick to store a bit.

The circuit that stores a single bit is called an SR latch. SR stands for set-reset. The value `Q` is the output we really care about. If it is `1`, that means the latch is storing a `1`; if it is `0`, the latch is storing a `0`.

The diagram also shows a second output written as a Q with a bar over it. That is just how engineers write `NOT Q`, pronounced "not Q". It always holds the opposite of `Q`. I will write it as `NOT Q` in the text.

The two inputs are `SET` and `RESET`, drawn as little buttons in the diagram: gray means not pressed, red means pressed. Pressing `SET` forces `Q` to `1` and pressing `RESET` forces `Q` to `0`.

For this circuit to be used properly, set and reset should never be on at the same time.

The cool part is, if both set and reset are `0`, then `Q` is whatever we last did to it! The output loops back into the circuit, so the current state keeps reinforcing itself. This is the basic concept behind memory.

This diagram should help this make sense:

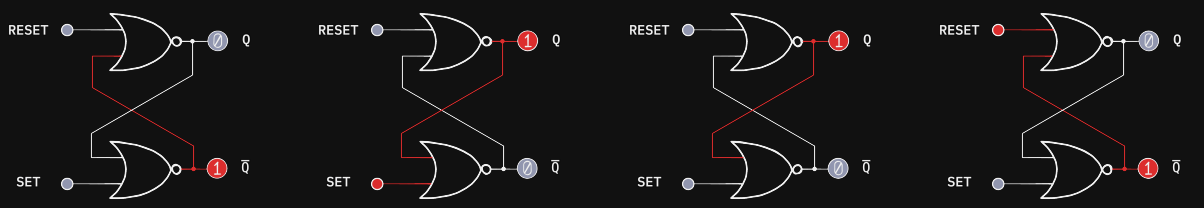


Diagram 7.1. An SR latch.

One quick reminder before we trace through this: a NOR gate only turns on when both of its inputs are off.

A simple way to think about this is:

If `SET` is on, the bottom NOR gate has to output `0`, because one of its inputs is on. That makes `NOT Q` equal to `0`.

Now the top NOR gate sees two `0` inputs: `RESET` is `0`, and `NOT Q` is `0`. So the top NOR gate outputs `1`, making `Q` equal to `1`.

Then even if we turn `SET` back off, the latch stays in that state. `Q` is still `1`, which keeps forcing `NOT Q` to `0`, and `NOT Q` being `0` allows `Q` to stay `1`.

`RESET` works the other way. If `RESET` is on, it forces `Q` to `0`, which allows `NOT Q` to become `1`. Then even after `RESET` turns off, `NOT Q` keeps forcing `Q` to stay `0`.

The circuit has state. Its output depends not only on the current input, but on what happened before.

Now that we have the core mechanism, let's refine the interface. Right now `SET` and `RESET` are super clunky. While they demonstrate the mechanism, what we would really like to have is two inputs.

- `Data` (`D`)
- `Enable` (`E`)

When the enable wire turns on, `Data` gets stored in `Q`. Or in other words, when we turn the `Enable` wire on, `Q` mirrors `D`. Then when we turn `E` off, `Q` stays stable with whatever `D` was last.

This type of latch is called a D latch, D meaning data. It can be made using the SR latch and a few extra logic gates.

It basically checks: if data is true and enable is true, set is true, and if data is false and enable is true, reset is true. That's it, so let's not worry about the exact implementation.

If you really want to know how it works, have a look at this site.

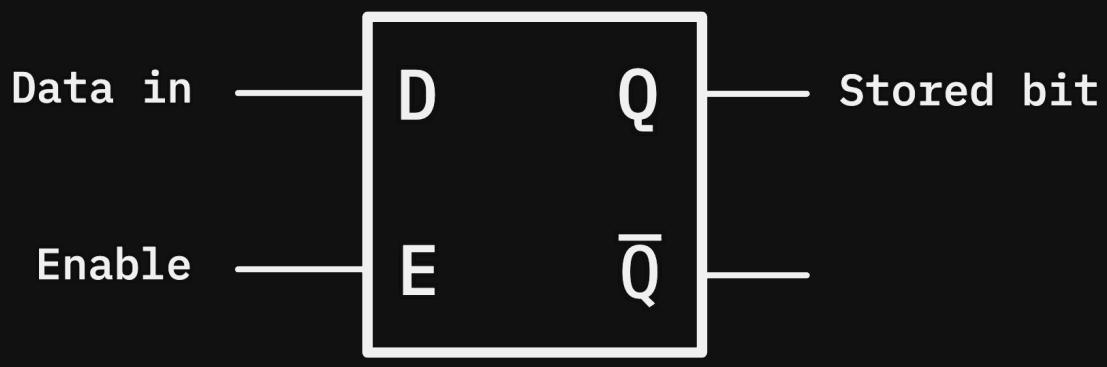


Diagram 7.2. D latch.

But we have a problem. Let's say we now try to use 8 of these D latches to hold the result from our adder, which would then feed back into the input for our accumulator. It still wouldn't work.

Here is the problem: say we have the enable wire hooked up to a button. When that button is pressed down, the enable wire is on, so `Q=D` for that time. But if `Q` feeds back into the adder, and the result of the adder `D` changes quickly enough, `Q` can change again, jumping unpredictably based on how long we hold that button for.

If we want the accumulator to work correctly, we need the enable wire to turn on for an instant and then turn back off. That is just hard to do.

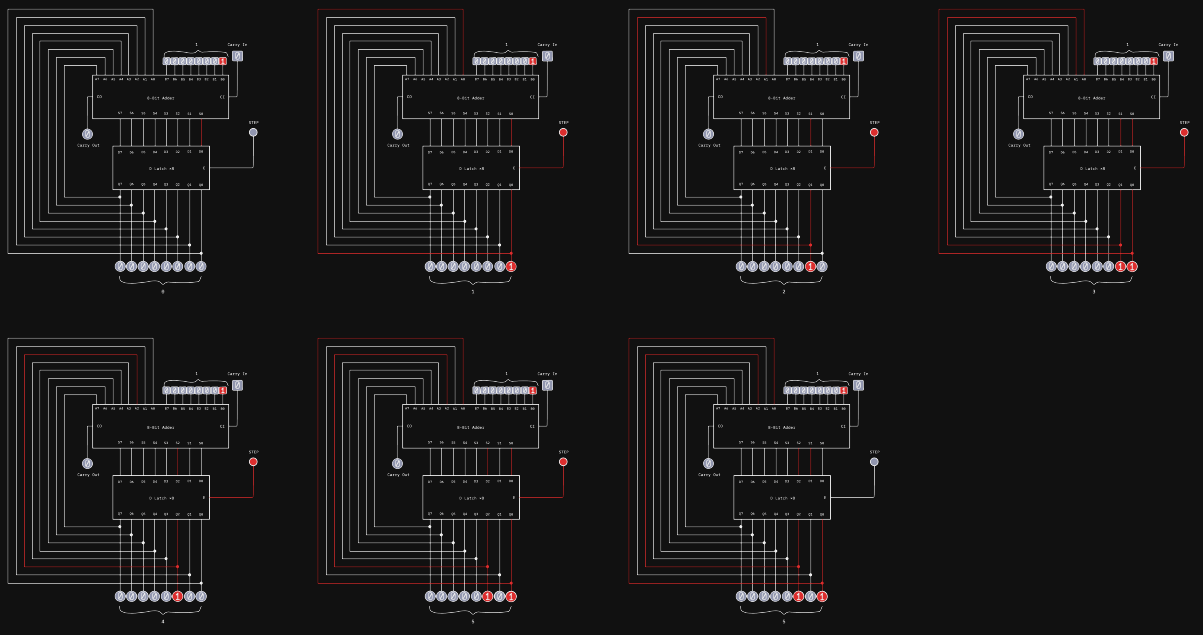


Diagram 7.3. D latch accumulator.

As you can see in this diagram, even pressing the button quickly jumps the result up by 5. With real transistors, even if you try to physically tap the button, it could count up by millions, overflowing these 8 bits thousands of times.

How long you hold the button decides the answer. It doesn't count in ones.

But what if we had a storage circuit that only copied `D` into `Q` at the exact instant `E` turns on?

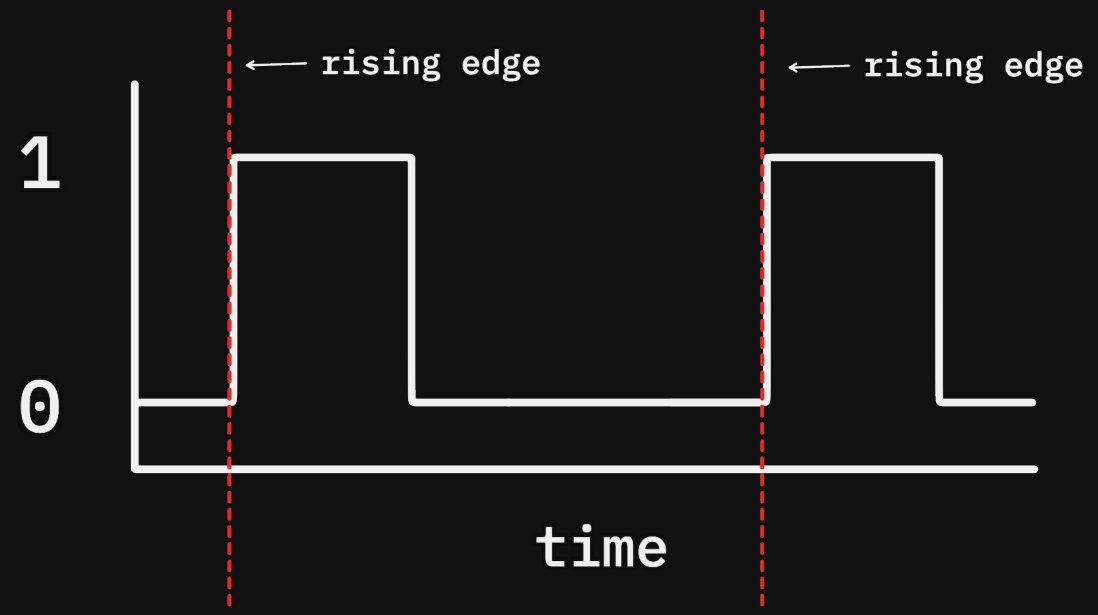


Diagram 7.4. The rising edge of a signal.

This graph shows the state of a wire. When the line is at the top, it is on. When it is at the bottom, it is off.

When a switch is flicked or a button is pressed, a transition happens. That transition is called an "edge", and when the wire turns from off to on, it is a rising edge.

Now what if we only set `Q` to `D` on that transition, at the rising edge? The edge is an instant of time, not a duration.

The circuit that does this is called a D-type edge-triggered flip-flop. This might sound like a mouthful, but D-type just means it takes in a data input, edge-triggered means it triggers on the edge of a signal, and flip-flop means it is a storage circuit similar to a latch, but usually edge-triggered.

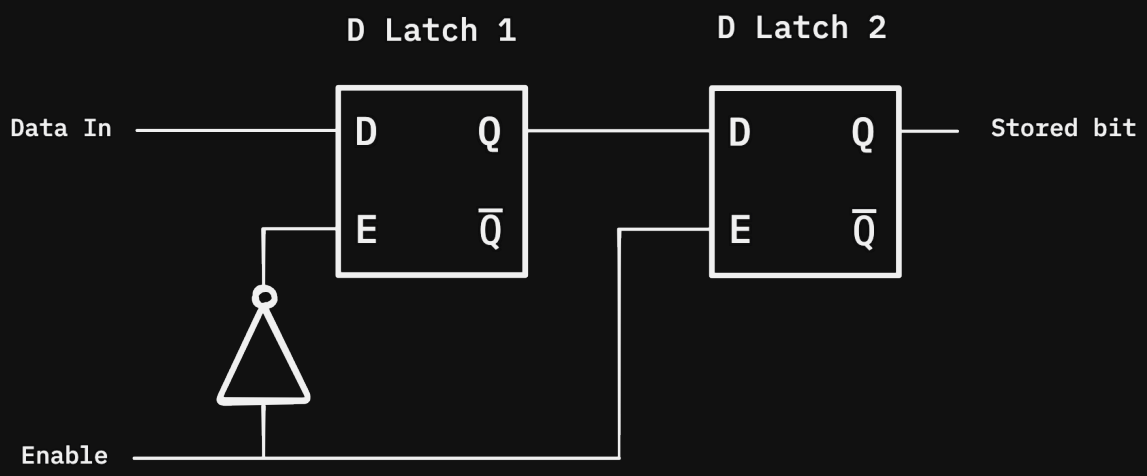


Diagram 7.5. A flip-flop.

How it works is, when the enable wire is off, the first latch mirrors `D`. That is because the NOT gate flips the enable signal, so the first latch sees it as on.

Then when enable turns on, the second latch stores the output of the first one. And because enable is now on, the first latch is locked, so it can't change!

So if `D` changes while enable is off, we are all good because the second latch is locked. But if `D` changes while enable is on, we are fine because the first latch is locked.

Here is one storage cell, which is just the flip-flop we showed above:

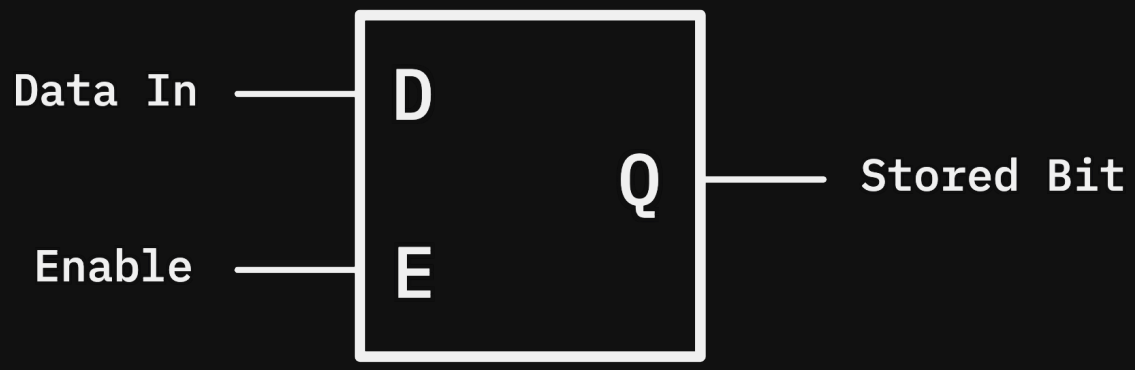


Diagram 7.6. A one-bit storage cell.

If we connect 8 of them side by side, we get one byte of storage:

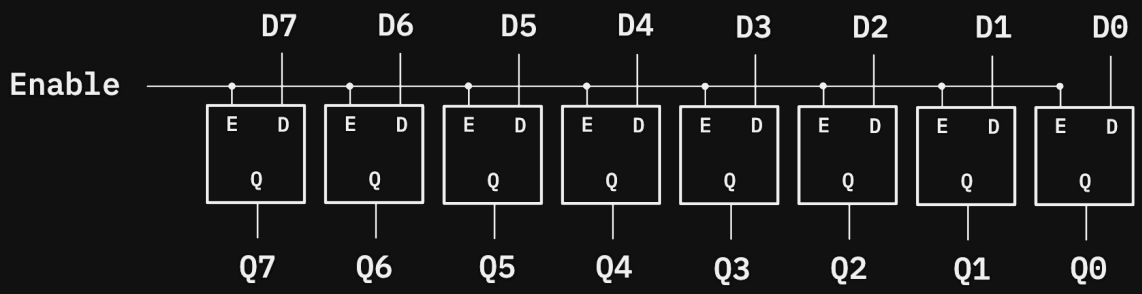


Diagram 7.7. Eight storage cells.

And we can put all that into a chip called an 8-bit register:

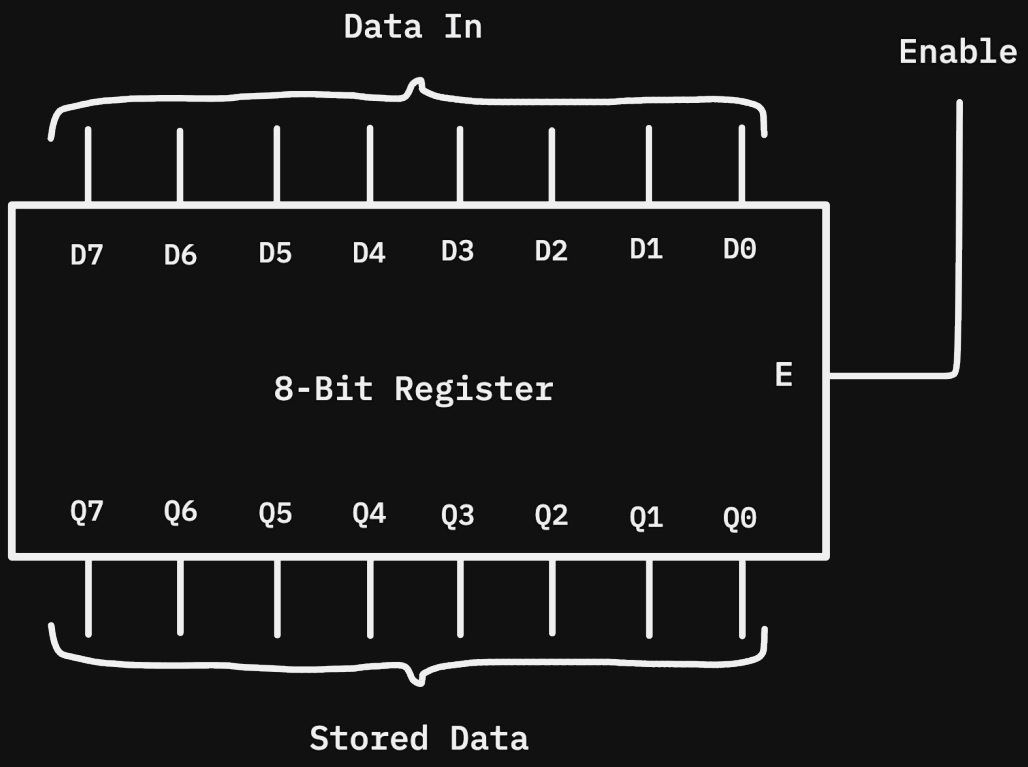


Diagram 7.8. An 8-bit register.

Now with this register, let's build a basic accumulator/adder circuit.

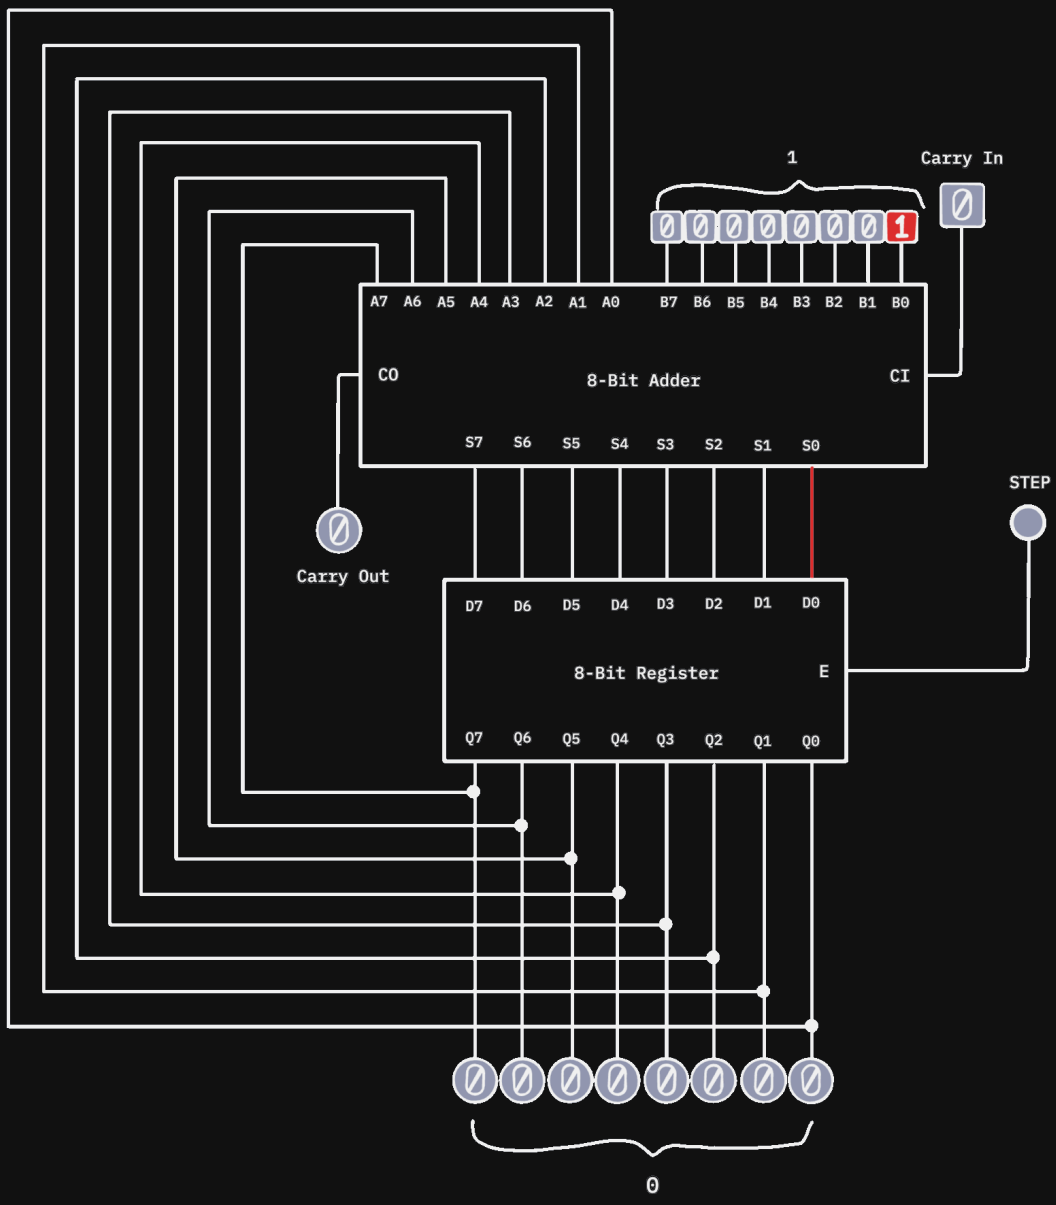


Diagram 7.9. Our full accumulator.

As you can see, the circuit kindly waits for us, and is incrementing by ones!

How this works is, when the STEP button is pressed, the output from the adder gets saved into the register on the rising edge of that press. This then changes the input to the adder, which changes its output, but the register holds its value because it only captures on the edge of the press. Holding STEP down does nothing special. So each press increments the register's value by, in this case, 1.

Now, a real computer would need to do these kinds of things millions and billions of times per second, and we don't have some human clicking a step button. What we have is a circuit that automatically goes on, off, on, off billions of times per second. This is called a clock. Each rising edge of the clock acts like one press of STEP.

Here is the basic concept of a clock:

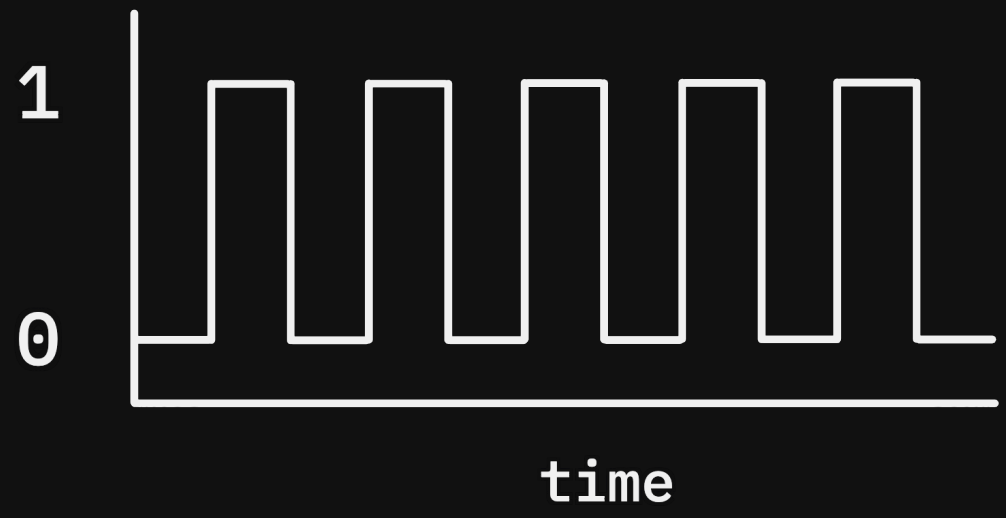


Diagram 7.10. A clock signal.

This repeating on-off behavior can be achieved in different ways. A rough toy example is feeding the output of a NOT gate back into its input, so the signal keeps trying to flip back and forth between on and off.

Real clocks are built in more sophisticated and reliable ways, often using crystals or other oscillator circuits. But we do not need to build the clock itself here. For now, we can treat it as a little chip that repeatedly produces the same on-off signal.

Just imagine the new accumulator with a clock signal instead of a `STEP` button. I am too lazy to draw it for you.

We now have some storage. A register that can hold a byte, and update exactly when we want.

But registers on their own are not enough. We need to be able to move numbers between registers, the adders, and the main memory, which we will build later.

7 Buses

One simple solution to move bytes around would be to give every component its own bundle of 8 wires to every other component, but that would become a mess very quickly.

A simpler solution is to have one single 8-bit data highway, where components can put data on and take data off. This collection of 8 wires is called a bus.

One more thing, moving forward when I want to draw a collection of 8 wires, instead of drawing each wire, I will just draw a thick arrow that represents 8 wires.

To show the state of the wires, I can write a number in the arrow; the number 0 for example means the wires are all off, and the number 2 would mean the wires are `00000010` which is 2 in binary.

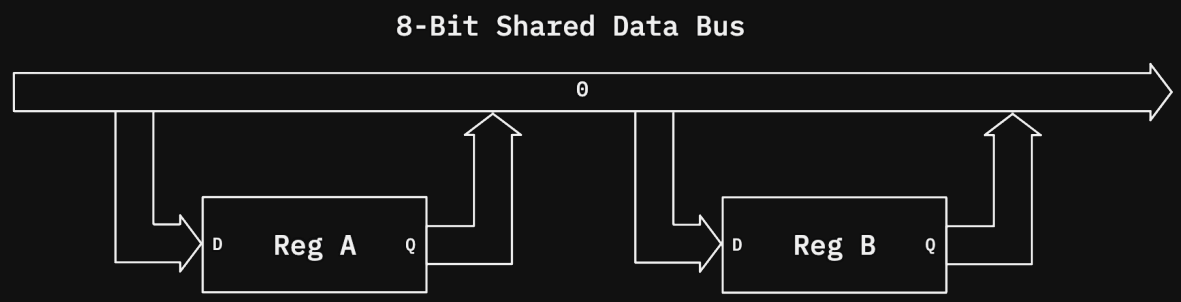


Diagram 8.1. Two registers sharing a bus.

But we have an issue: this diagram is technically not possible yet. Say register `A` is outputting `00000000` and register `B` is outputting `00000001`, both onto the same 8 wires. Look at the last wire. `A` is driving it low, so that wire is connected to `-`. `B` is driving the same wire high, so it is also connected to `+`. What happens?

Yep. A short-circuit.

We need a way to connect these registers to the bus, but also let them get out of the way when they are not supposed to actively drive a wire to `-` or `+`, like I discussed previously.

Just setting the output wires to `00000000` is not enough. On a shared bus `00000000` is not nothing. It is actively driving the bus to `-`.

One clean way to solve this problem is by using something called a tri-state buffer. It has two inputs, `E` and `D`, which stand for enable and data.

We have seen `E` before, in the context of "enable writing" but now we are using `E` in the context of "enable outputting".

If `E` is on, the output will just be whatever `D` is, so either `0` or `1`. If `E` is off, no matter the value of `D`, the output will be `Z`.

`Z` means the buffer's output is disconnected from the bus. It is not driving the bus to `+` or `-`, so another component can safely drive the bus without a clash or short-circuit.

Or in other words, this buffer is not touching the wire. `0` is very different: the component is actively pulling the wire down. So we have three states:

```
1: driven high
0: driven low
Z: disconnected
```

This relay diagram of how a tri-state buffer works should make this concept crystal clear.

Also I have drawn everything the output wire is currently touching in yellow. Yellow is just there so you can follow the path with your eyes, it doesn't mean anything.

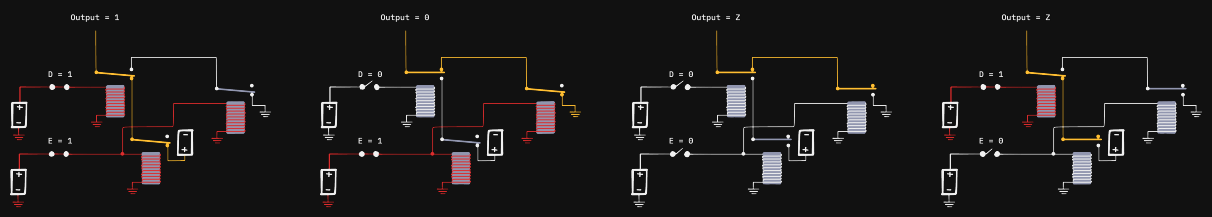


Diagram 8.2. A tri-state buffer built with relays.

This looks complicated, so let me break it down.

First, ignore the two relays on the right and look only at the `D` relay at the top. Its arm is attached to the output wire, and it works just like the output driver from before. When `D` is `1`, the arm is pulled down onto the wire that leads toward the battery, `+`. When `D` is `0`, the arm goes up onto the wire that leads toward ground. Remember, ground is just the `-` side.

The important idea is that neither of those wires is directly connected to `+` or `-`. Each one has a relay between it. Both of those relays are controlled by `E`.

When `E` is `1`, both gaps close. The output is now connected to whichever side `D` picked, so it is driven to `1` or `0`.

When `E` is `0`, both relays touch a point connected to nothing. Both wires lead to a dead end. The output wire is touching nothing. That is `Z`.

So we have three states:

E	D	Output
1	1	1
1	0	0
0	0	Z
0	1	Z

This is the logic gate diagram for a tri-state buffer:

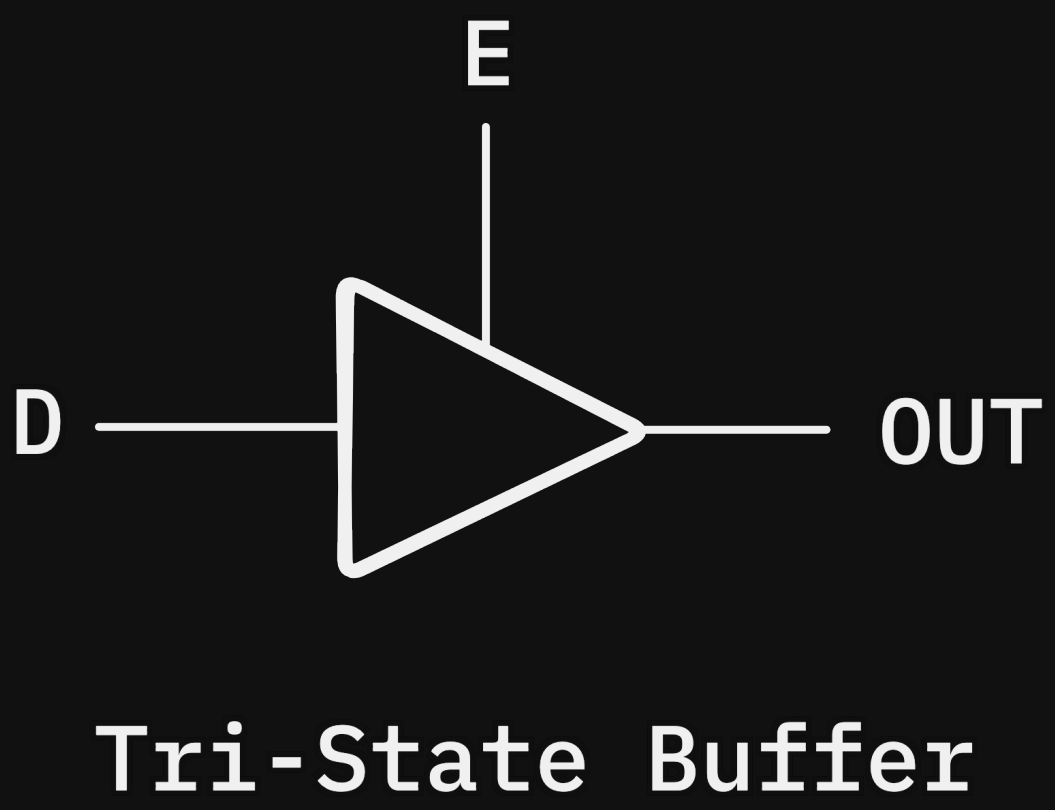


Diagram 8.3. A tri-state buffer logic gate.

Now let's address this enable conundrum. We now have two uses for the word enable, with completely different meanings and contexts. One means enabling writing, and the other means enabling output. From now on, we will use two separate terms to avoid confusion: `WRITE` and `OUT`.

So we can make a new type of register, one with `WRITE`, `OUT`, `data`, and a `Q` output that shows the stored bits 0-7. By `data`, I simply mean the input data that we can store when `WRITE` is enabled.

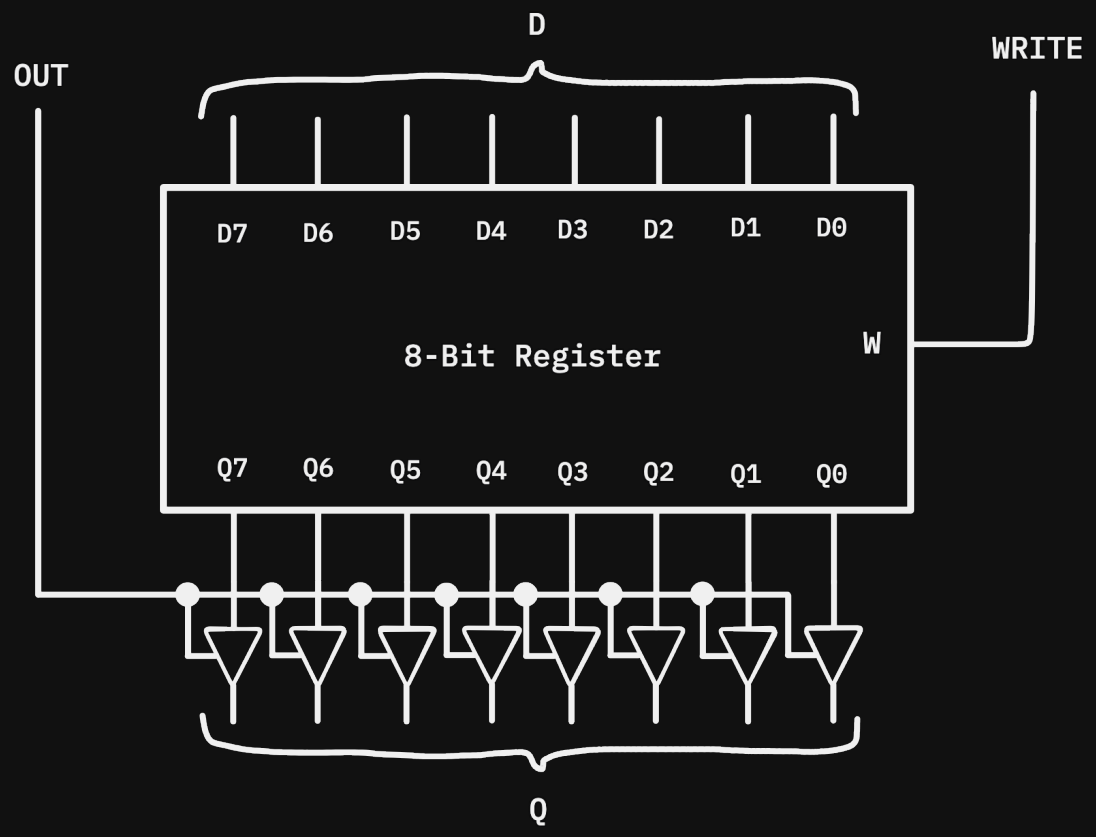


Diagram 8.4. Our register with an OUT input.

We are just connecting OUT to all of the enables in the tri-state buffers. So if `OUT` is `0`, `Q` will be all `Z`, and if `OUT` is `1`, `Q` will be whatever is stored in the register.

With that, we can use these new registers with a common bus to move data.

Here is an example where the content of register A gets copied into register B.

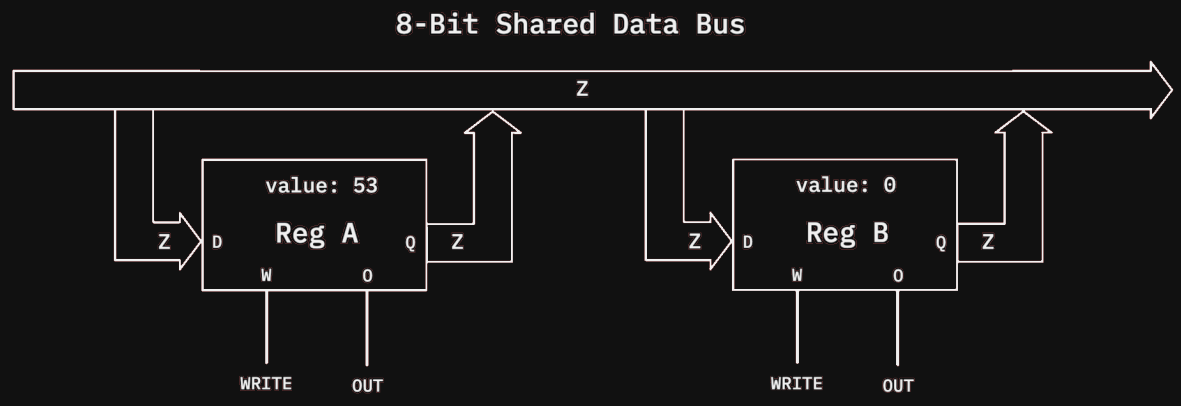


Diagram 8.5. Copying register A into register B through the shared bus.

I have some text inside the register that shows what it is storing. We of course have `W` and `O` which are `WRITE` and `OUT` as well as `D` and `Q` which are the inputs and outputs.

Of course, on the second frame, when `OUT` of register A is enabled the `D` wires of both registers are also going to be 53 because they are directly connected to the bus.

Also generally in this diagram, register `B`'s output is sometimes shown as `Z` even when the bus is 53. That is because register `B`'s `OUT` is off, so register `B` is not driving the bus. It may be connected to a bus currently at 53, but the 53 is coming from register `A`. So technically, those wires are at 53 but... it just looks better to keep them at `Z`.

By the end of this sequence, we have copied the value 53 to register B! We can have many more registers sharing a common bus, as long as only one is driving the bus at a time.

Now we can store a byte, compute a sum, and move bytes around!

The next problem is organization and scale. How do we organize many stored bytes so the machine can choose one slot, read it, and write back to it? A handful of registers aren't enough.

8 Organizing Data

We want to build a system that organizes data into a simple structure.

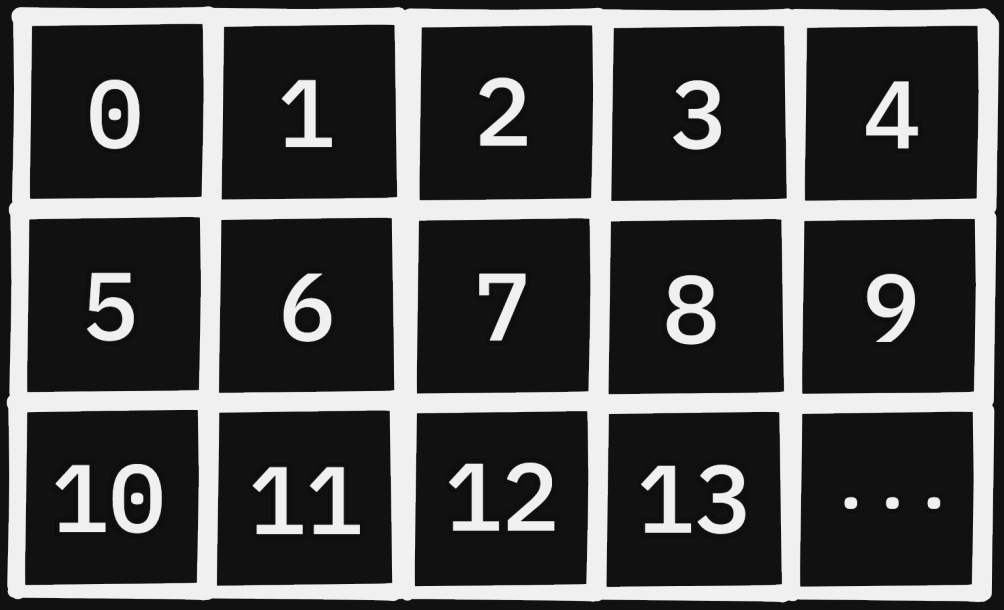


Diagram 9.1. Our data structure.

Many slots, each with its own address.

This system is known technically as RAM: Random Access Memory. It is called RAM because when the CPU wants to access a slot, it just knows the number and can access any slot at will. It is not like flipping through a book looking for the right page. It is more like grabbing a book from a bookshelf, where you already know exactly where the book sits.

Now let's think about exactly what we would want this `RAM` chip to do.

- `address`: the slot we wish to access
- `WRITE`: whether we want to write a value to this address
- `OUT`: whether we want to output the value onto the bus
- `data in`: the value we would like to write
- `data out`: the data output line

To be clear, `WRITE` and `OUT` are control signals, so just 1 input wire each.

For this demo `RAM`, `address` is only 4 input wires. `data in` and `data out` carry bytes and are both connected directly to the common bus.

This only works if no other part is driving the bus when `OUT` is enabled.

So we are going to build a minuscule 16-byte `RAM`: 16 addresses, with each address storing one byte. This design can be scaled up easily.

Our address will be 4 bits long, because `2^4` is 16.

We could do this as a tall stack of 16 registers, but a grid is nicer.

So we will split the 4-bit address in half. The bottom two bits pick the row, and the top two bits pick the column:

```
top 2 bits    = column
bottom 2 bits = row
```

Two bits can choose 4 values, so this gives us a 4×4 grid of memory slots. That is 16 total bytes!

Once the address selects a slot, two things can happen:

- If `WRITE` turns on, the selected slot stores `data in`.
- If `OUT` is on, the selected slot drives its stored byte onto `data out`.

Let's start with building a simple decoder. This decoder will take 2 bits of our address and, based on that number, turn on exactly one out of 4 wires.

In the diagram the top bit is the bigger bit, the 2's place, the bottom is the smaller bit, the 1's place.

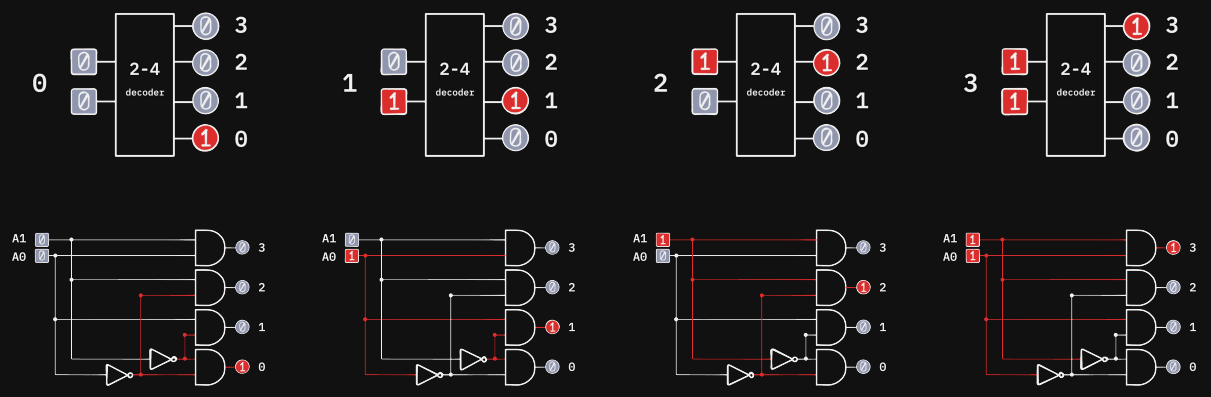


Diagram 9.2. How a decoder works.

As you can tell, no matter the inputs, exactly one output wire is on at a time.

We use one 2-to-4 decoder for the rows and another 2-to-4 decoder for the columns. Where the selected row and selected column cross, that is the byte we want to target.

This diagram shows a few addresses as examples. Each address gets its own little intersection.

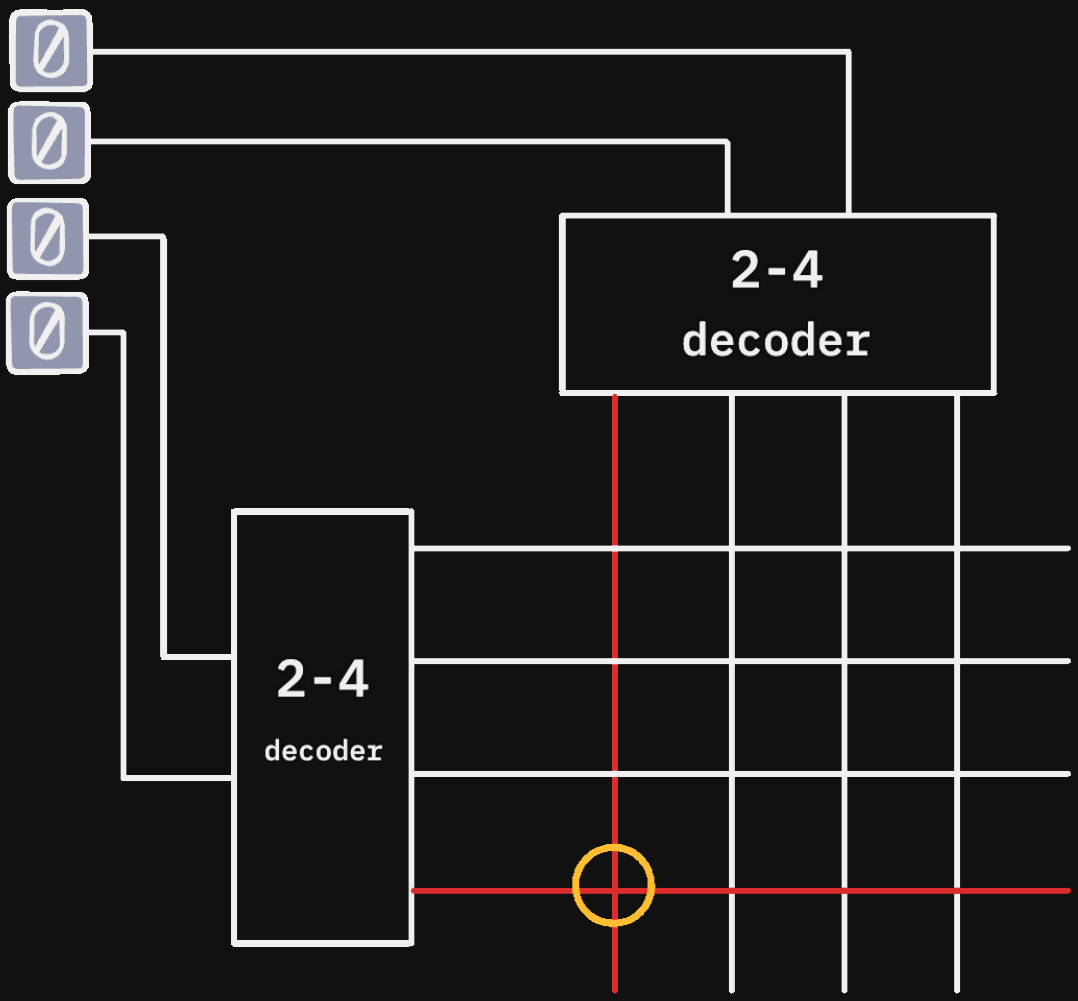


Diagram 9.3. Where the row and column meet.

How a decoder works is extremely simple. It just uses a bunch of logic gates to ask these simple questions.

- If `00` -> turn on wire 1
- If `01` -> turn on wire 2
- If `10` -> turn on wire 3
- If `11` -> turn on wire 4

Here is how it works if you care:

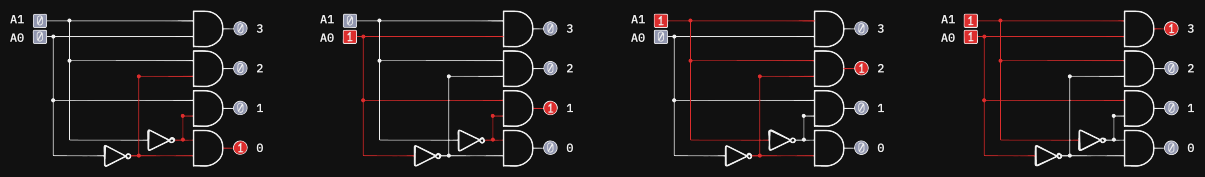


Diagram 9.4. 2-4 decoder internals.

Honestly? That's it. We can use two decoders, sixteen registers, some wires and buses all mashed together with some extra logic gates and BOOM! We have some `RAM`.

In this diagram, blue lines are 8-bit data buses. `OUT` is yellow, and `WRITE` is orange. They are still ordinary wires; the colors are only there to make the diagram easier to follow.

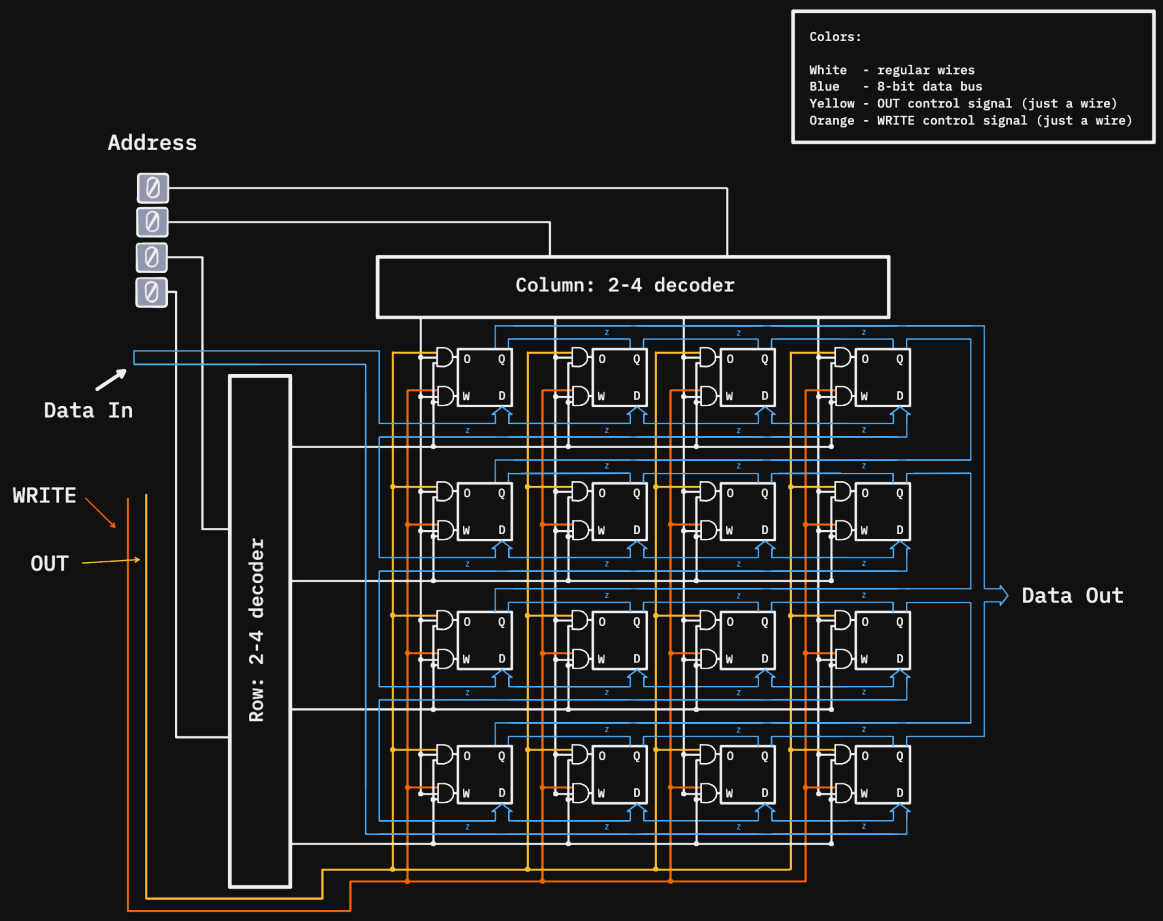


Diagram 9.5. A zoomed out RAM diagram.

This is kind of a lot to unpack, so let me explain the high level parts before we zoom in and take a closer look.

We have a blue data in bus that is fed into the bottom of all of the registers, we also have another blue data out bus that comes out of the top of all the registers and combines into one output. Every slot is connected to both buses, but only the selected slot is allowed to use them. If the slot's row and column are selected, it can either read from `data in` when `WRITE` is on, or drive `data out` when `OUT` is on.

Let's look at one cell more closely:

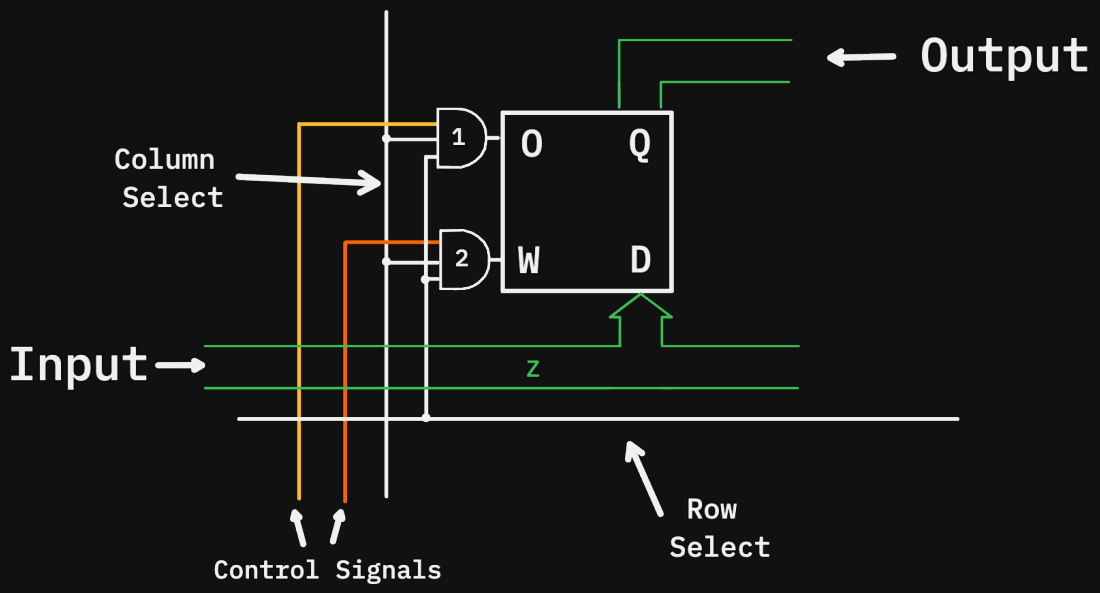


Diagram 9.6. A zoomed in RAM cell diagram.

What AND gate 1 checks is, if `Row Select` and `Column Select`, and `OUT` is on, then that means we have selected that register to output its value, thus we turn on `OUT` and the register will output something on the `Output` bus.

AND gate 2 checks, if `Row Select` and `Column Select`, and `WRITE` is on, then that means we have selected that register to write to, thus we turn on `WRITE` for that register, and it will write the data on the `Input` bus.

So yea, both AND gates take in 3 inputs, if you are wondering how that works, just think of two AND gates chained together.

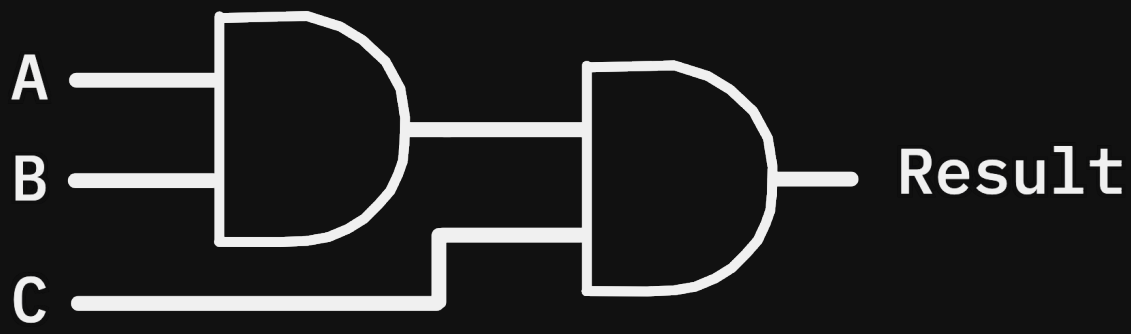


Diagram 9.7. A three input AND gate.

So now that we have built `RAM`, let's pretend that instead of 16 registers, we have a `RAM` array with 256 registers. The same logic can be copied, just with two 4-16 decoders instead of two 2-4 decoders and 8 address inputs rather than 4.



Diagram 9.8. Our RAM chip.

Technically, there are still two buses inside the RAM: a data-in path and a data-out path. That is basically what we saw with the register in the bus section.

But drawing two separate data buses every time is cumbersome. From the outside, we can abstract this as one shared data bus with a double-headed arrow called I/O, which stands for input/output.

It is practically just like having two buses, one for input, one for output.

If W is on, RAM copies the value from the data bus into the selected address.

If O is on, RAM drives the selected address's value onto the data bus.

So from now on, instead of drawing registers connected to a common bus like this, where we have a separate D and Q, we can just draw them like this:

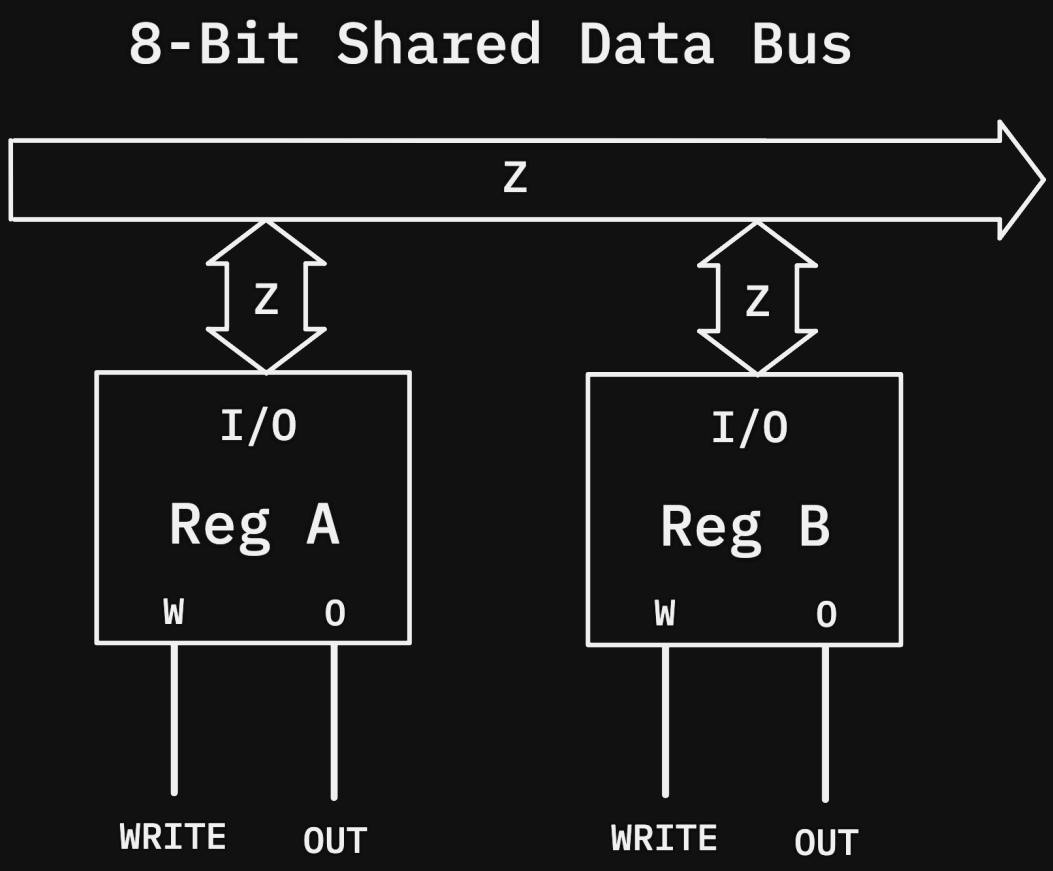


Diagram 9.9. I/O Registers.

They both are the same technically, just this is easier to draw, so moving forward, instead of drawing two buses for `D` and `Q` I'll just draw one double-headed `I/O` bus.

Now back to the `RAM` chip.

If you pay close attention to the diagram, you will notice that the address input is not directly connected to the common data bus.

That is intentional. The data bus is for moving values around the CPU. During a `RAM` operation, it needs to carry the value being written to `RAM` or the value being read from `RAM`. So it cannot also keep holding the address at the same time.

We need something to hold the address while the data bus is being used for the actual I/O.

This is called the Memory Address Register, or MAR.

The MAR is just a regular 8-bit register with no `OUT` control signal as it is always outputting directly into `RAM`.

We first put an address on the data bus and turn on `MAR_WRITE`. The MAR stores that address. Then the MAR keeps sending that address to `RAM`, leaving the data bus free to carry the value being read or written.

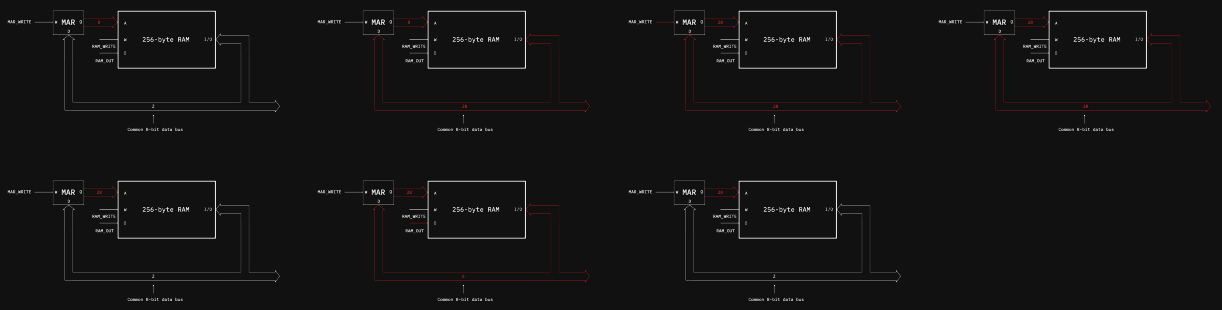


Diagram 9.10. How the MAR works.

So first, we put 28 onto the common bus. Enable `MAR_WRITE` and store that into the MAR. We then remove 28 from the common bus, and enable `RAM_OUT`, we get 6 as the value stored in slot 28. Cool.

9 The ALU

If we have a handful of registers and `RAM`, we can now move bytes around using this common data bus. But what we really need is a component that can "process" numbers, a component that can do arithmetic and logic. Thus we have "The Arithmetic and Logic Unit," or ALU for short.

Imagine a chip where we could input two numbers, an operation, and output a result, along with some other information.

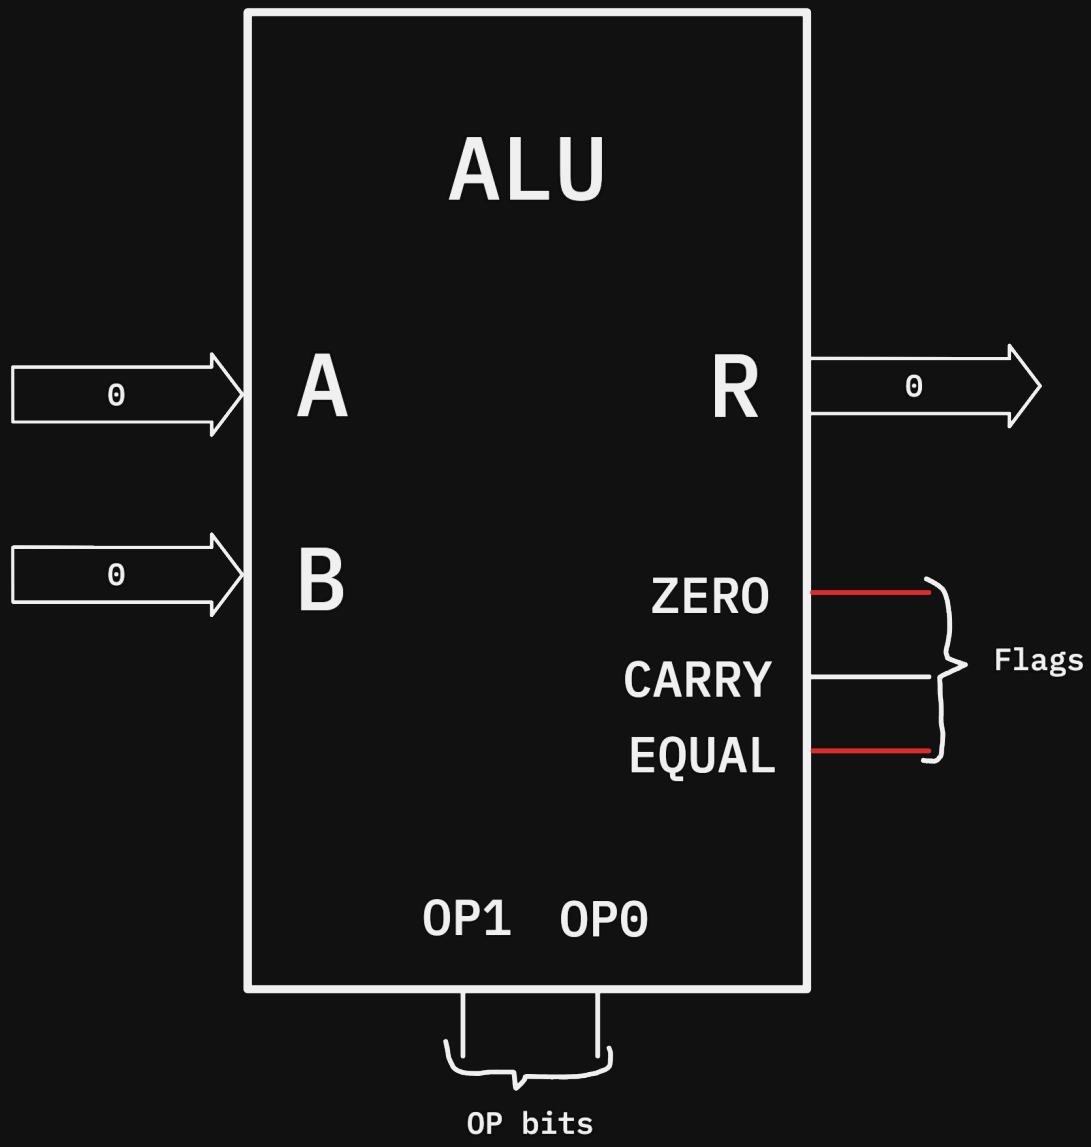


Diagram 10.1. The ALU chip.

For this CPU, I am keeping the ALU simple. It will have two operation-select bits, which gives us four possible operations:

OP	Operation	Meaning
00	ADD	output A + B
01	AND	output A AND B
10	OR	output A OR B
11	XOR	output A XOR B

The ALU will also output a few flags, which are just extra yes/no facts about the result or the inputs:

Flag	Turns on when
ZERO	the result is 00000000
CARRY	addition spills past 8 bits
EQUAL	A and B are the same

So, in the previous diagram, we did 0+0 which is 0, so the ZERO flag is on, and the EQUAL flag too because both inputs are equal.

This next diagram uses a new component. It is a mix of two registers we have already seen.

Remember the D latch, the first storage circuit we built? While its enable was on, Q simply equaled D. No edges wedges whatever involved. This new register is a D latch with the enable permanently on: it is always storing whatever value is on its input.

But like our newer registers, its output goes through tri-state buffers with an OUT control signal, so we still decide when it outputs.

So in total: a data input that is always being stored, an OUT control signal, and an output.

Also, you'll see me feeding two buses into a single logic gate. "How does that work?", you might think. Well, there are really just eight gates, one per bit. One gate takes A0 and B0, the next takes A1 and B1, and so on. Eight output wires, which is just another bus.

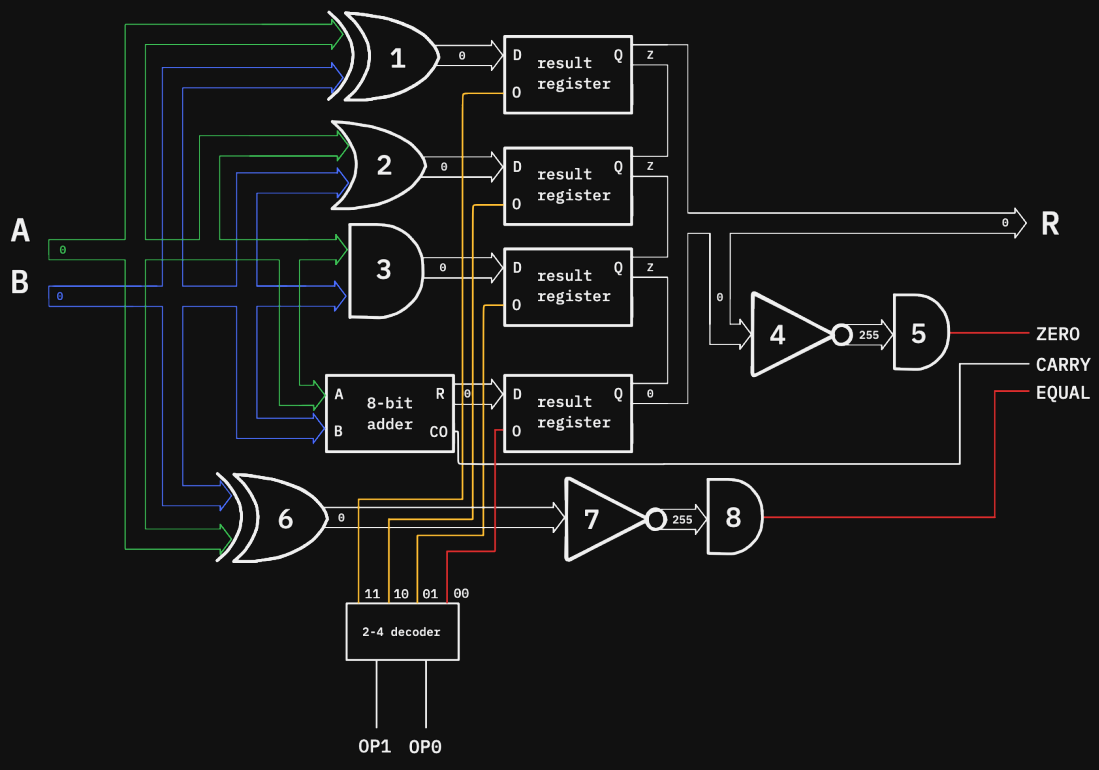


Diagram 10.2. ALU internals.

At its crux, the ALU works by routing A and B into all 4 operations at once, in this case XOR, OR, AND, and ADD. We store each of the results in a corresponding result register.

To decide which one to output, the OP bits go into a 2-4 decoder that enables exactly 1 of the result registers onto the R bus.

Now for the flags.

First, the `ZERO` circuitry. It consists of:

`NOT -> AND`

The NOT gate on the right, labeled 4, is just like before: there are actually eight NOT gates, each flipping one wire of the bus. So it takes in a bus, and outputs a bus.

But the AND gate next to it, labeled 5, takes in a bus and outputs just one wire. Like the three-input AND from the RAM section, this AND gate takes in 8 inputs and produces 1 output. It just checks if all of its inputs are on.

So if we flip each bit, and then check if all of them are on, we get the `ZERO` flag. This makes sense because all the bits going into the AND gate can only be on if they were originally `00000000`, a.k.a. zero!

Next, let's cover the `EQUAL` circuitry. It consists of:

`XOR -> NOT -> AND`

The XOR gate, labeled 6, is basically like last time: we XOR each pair of bits from `A` and `B`, and create an eight-bit bus. Remember, XOR outputs `0` when its two inputs are the same. So if `A` and `B` are equal, we get `00000000` as the output.

Then we flip the bits with gate 7, getting `11111111`, and if we AND them all together with gate 8, we can check if they are all true. If even one pair of bits differs, that wire ends up `0` after the flip, and the AND outputs `0`. Simple.

The `CARRY` flag is simple: we just connect the adder's Carry Out, `CO`, straight out. Of course, it only means anything when we are actually adding.

10 The Big Picture

Here is a big picture diagram of the whole CPU.

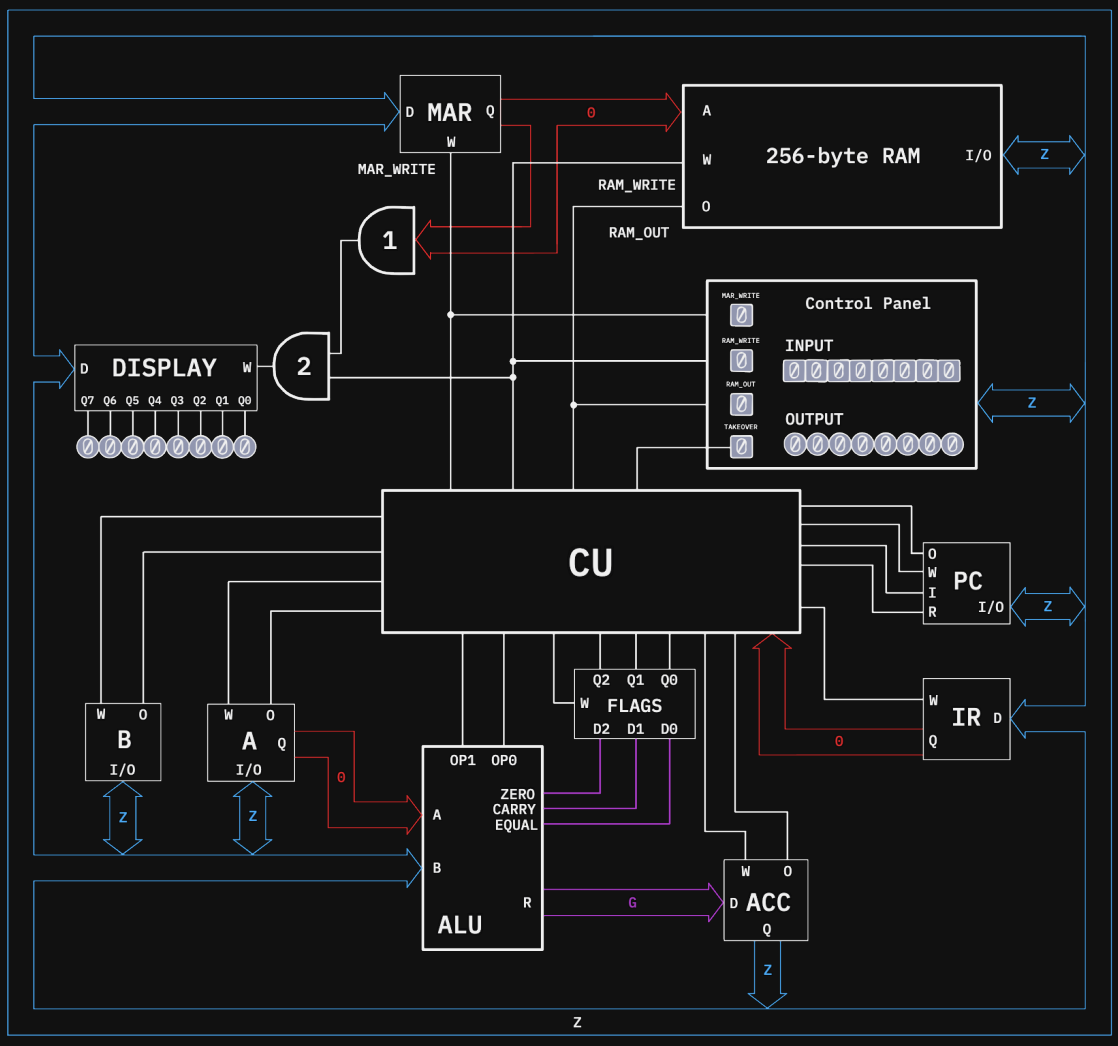


Diagram 11.1. The whole CPU.

Hey? Doesn't this diagram look familiar? Well, yes, we have come full circle from the intro, except this time the CPU isn't something completely foreign. Of course we still have a lot to learn and build, but wow. Just wow.

Some quick notes on the diagram before we dig in.

The 8-bit data buses are blue when not being driven, just like before. If a control wire is red, it means it's on. If a bus is red, it means it's being driven like normal. But we have something new here that we haven't seen before.

Purple wires and buses mean garbage. This is not the same as `Z`. A `Z` wire is one that nothing is driving, a `G` wire is being driven, with an actual value on it. That value is just nonsense, hence the name garbage. So where does that garbage value come from in this diagram?

Remember, the ALU never stops computing. It always takes its inputs and has a result instantly. One input comes from register `A` (we will talk more about how register `A` works later), but the other input comes from the bus, and when nothing is driving the bus, the input is sitting at `Z`. The thing is, in this CPU an input at `Z` would just behave like `0`. Our gates are built from relays, and a relay coil with nothing driving it is simply off, exactly as if you fed it `0`. So really, the ALU would be computing `A + 0` if the second input was `Z`.

But we mark it as garbage anyway, because in a real CPU made from transistors instead of relays, a `Z` value does not settle to a clean `0`; it drifts and can get really funky. That is why we treat those values as garbage: we just ignore them. If the bus is being driven then we can of course use those values.

Now back to the diagram.

Almost every single chip here, we have already built. The `RAM` and `MAR` combination, we have seen how that works previously. `A`, `B`, `ACC`, `IR`, `FLAGS`, and `DISPLAY` are all just slight variations of registers. `PC` is an accumulator style circuit, and we know how `ALU` in the bottom left works.

Let's examine each element of the CPU closely and see what details changed and why.

First register `B`. Register `B` is a normal tri-state 8-bit register with `W` and `O` control wires. We will talk about its use in more detail later.

We then have register `A`, which is just like register `B`, but it also has a `Q` output in addition to `I/O`. This `Q` output is simply the value stored inside the `A` register, bypassing the tri-state buffers and feeding directly into the first input of the ALU. So even though the output (`O`) control signal is off, that `Q` is still driving the ALU's first input, in this case to `0`.

Next we have the ALU. Its second input comes from the common bus, so the other number it works with is just whatever is on the bus at the time. Other than that it is as normal, but the flags are all going into a register called `FLAGS`. This register is just a 3-bit register: it only stores 3 bits. These three bits are just the values for each flag. This 3-bit register has no `O` control signal, thus no tri-state buffers, so it is always outputting.

Then we can see the result of the ALU operation is being fed into another regular 8-bit register called `ACC`. It is slightly different to register `B` because its input doesn't come from the common bus, but from the ALU, so it has two separate `Q` and `D` instead of just one `I/O`. It still has the regular `W` and `O` control signals though.

Register `IR` is a simple register without an `O` control signal. It just takes input from the bus, and outputs it into the `CU`. We will talk about what exactly the `CU` is and the jobs of these different parts a little later on.

Next we have `PC`, which is a combination of an adder and a register, something like what we have seen previously. The register part of `PC` has its regular control signals `W` and `O`, and the `STEP` button from before has been replaced with an `I` control signal, which stands for increment. We also have the `R` signal which just resets the register back to `0` with some more logic gates and wires. Nothing too fancy.

Our `MAR` and `RAM` are the same as before, but if all of the bits stored in `MAR` are 1, meaning the value stored is 255, then the output of that first AND gate in the diagram, labeled 1, would be on. So if we are selecting address 255 and `RAM_WRITE` is enabled, then we need to write to the `DISPLAY` register too.

What ends up happening is that `DISPLAY` stores whatever is stored in `RAM` address 255, and displays that value on 8 bulbs for us to see. You can think of this as our simple output for any programs we might write.

Lastly, we have the `Control Panel`. Its job is to load a program into `RAM` in the first place. It can read and write to any `RAM` address it wants.

How it works is, first you flip the `TAKEOVER` switch, which inside the `CU` basically freezes the computer and resets `PC`. Then, while `TAKEOVER` is on and the `RAM_OUT` button is off, the value on the panel's input switches is put onto the common bus. If `RAM_OUT` were on, then `RAM` would try to drive the bus at the same time as the control panel. That's why we need to make sure it's off before we can safely drive the bus.

From there you can hit `MAR_WRITE`, which stores that as the address you want to work with in `RAM`. To write, you then flip the switches to the value you want and press `RAM_WRITE`. To read, you instead press `RAM_OUT`, which makes the `Control Panel` stop driving the bus, because `RAM` will then drive the bus, and the output bulbs will turn on to that value.

Also, the panel's buttons only actually drive their control wires if `TAKEOVER` is on, using tri-state buffers. This is to ensure that while the CPU is running like normal, the `CU` and the panel don't drive the wires at the same time. This works the other way too: when `TAKEOVER` is on, the `CU` makes sure not to drive those `RAM` control wires, again using tri-state buffers.

Now, about this mysterious box labeled `CU`. What is it exactly? Well, it is the control unit. Think back to most of our previous demos. Turn `0` on, then `W`, flip this control signal and then flip this control signal. The `CU` does all of that flipping for us. It turns the control wires on and off in the right order, at the right times, to make the computer actually work.

But how exactly does the computer work in the first place?

First we load our program into `RAM`. A program is just a set of instructions that tell the CPU what to do, like "move this value here", "add these two numbers", etc. These instructions are coded as numbers.

The control unit then fetches the instruction from `RAM` at the address stored in `PC`, so if `PC` is `0`, it fetches the instruction at address `0` and stores it in `IR`. How? It copies `PC` into the `MAR` and flips on `RAM_OUT`, exactly like we have done before. Next it figures out what that instruction means, and executes a bunch of steps to actually do that instruction, then it increments or changes `PC` and repeats that whole cycle.

This is kind of a simplified version of what our CPU will do, but we will dive into it in the following sections. You can think of this cycle as fetch, decode, execute. Fetching gets us the instruction, decoding figures out what it means, and executing actually flips those control wires on and off to accomplish that instruction!

But, how does the `CU` know what wires to flip and when?

11 Instructions Are Numbers

Instructions tell the CPU what to do, and a list of instructions is a program. There are game programs, calculator programs, email programs, everything on your computer is a program. Just a long, long list of instructions telling the CPU to do simple things like, add these two numbers, move this value here, etc.

All programs are just a list of instructions stored in `RAM`, each instruction coded as a number.

So here is what number each instruction in our CPU translates to:

#	Binary	Mnemonic	Bytes	Action
0	0000	NOP	1	do nothing
1	0001	LOAD A, n	2	next byte -> A
2	0010	LOAD A, [addr]	2	RAM slot -> A
3	0011	STORE A, [addr]	2	A -> RAM slot
4	0100	MOV B, A	1	copy A into B
5	0101	MOV A, B	1	copy B into A
6	0110	JMP addr	2	addr -> PC
7	0111	JE addr	2	if EQUAL flag: addr -> PC
8	1000	ADD	1	A = A + B
9	1001	AND	1	A = A AND B
10	1010	OR	1	A = A OR B
11	1011	XOR	1	A = A XOR B
12	1100	JC addr	2	if CARRY flag: addr -> PC
13	1101	JZ addr	2	if ZERO flag: addr -> PC
14	1110	HALT	1	stop the clock

Table 12.1. The full instruction set.

So if we store `00000001` in address 0 of RAM. Then store `00000101` in address 1 of RAM. Then store `00000011` in address 2, then `11111111` in address 3, and finally `00001110` in address 4.

Our RAM looks like this:

```
0: 00000001
1: 00000101
2: 00000011
3: 11111111
4: 00001110
```

If `PC` starts at 0, which it does, then what do you think this program would do?

The first instruction loads a number into register `A`, that number is 5, we know that because the value stored in address 1 of RAM is binary for 5, so those two bytes make up the instruction:

```
LOAD A, 5
```

The first byte tells us what the instruction is, the second tells us what value to load. The next instruction is `3` which is `STORE A, [addr]` which basically puts the content of A, into the address of RAM that we specify. Again the first byte tells us the instruction and the second byte tells us the address in this case `11111111` which is address 255.

Hey? Isn't address 255 special from the rest? Yep, if we write to address 255 we also write to the `DISPLAY` register where we can see that value on some light bulbs. Have a look at this diagram for a recap.

The last byte is `14`, which the table says is `HALT`. It stops the clock, the whole machine freezes, and the program is over.

But, why do we even need to stop the CPU? Well, if we don't, the program would just continue, going through RAM, and RAM by default is all 0s, so just `NOP`s. So the computer would just do nothing, until `PC` wraps around to 0, and repeats our program. We need a way to stop.

So this program just puts 5 on the output and stops. Pretty simple.

As you can tell, some instructions take two bytes, and some only need one. A two-byte instruction is one where the first byte alone is not enough. `LOAD A, n` needs to know what value to load, so the next byte in `RAM` is that value.

One more thing: the order things are written in. For `MOV`, the destination comes first. `MOV B, A` copies A into B, not the other way around. `LOAD` and `STORE` are different, `LOAD A` means a value going into A, and `STORE A` means A going out into memory.

Now, about the jump instructions: `JMP`, `JE`, `JC`, and `JZ`. All of these instructions set `PC` to the address stored in the second byte.

`JE`, `JC`, and `JZ` each check one flag. The flags from the last ALU instruction sit in the `FLAGS` register until the next ALU instruction overwrites them. So to make a decision, you run an ALU instruction, then jump based on what it found. If the flag is on, the jump sets `PC` to that address. If not, the program just carries on to the next instruction. This is the core element used in creating programs that can decide stuff and loop. A fundamental part of what a computer can do relates to being able to run in a loop.

For example:

```
0: LOAD A, 1
2: STORE A, [255]
4: MOV B, A
5: ADD
6: JMP 2
```

This jumping back to the start of the loop is done with a jump instruction, so for example whenever `PC` reaches 6, it jumps back to 2 and repeats all over again. Each loop, this program displays `A`, copies `A` into `B`, and then adds. Both ALU inputs are the same number, so `A` doubles every loop, and the output shows 1, 2, 4, 8, 16, all the way up to 128. On the 8 output bulbs, that looks like a single lit bulb going across the display. Pretty neat.

But then 128 + 128 overflows: `A` wraps around to 0. And from that point on, the program is doubling 0 forever, so the display goes dark and stays dark. The CPU gets stuck in a weird spot.

One note: the number before each instruction is just the address in RAM where it would be stored, that is why you can see it jump in twos for two byte instructions.

To solve this overflow problem, and in general to make decisions, we can use the flags to jump to different parts of our program depending on what the last ALU instruction found.

```
0: LOAD A, 1
2: STORE A, [255]
4: MOV B, A
5: ADD
6: JC 0
8: JMP 2
```

Now, when the addition overflows, the `CARRY` flag turns on, and `JC` catches it: we jump back to the start of the program, address 0, which loads 1, and the program starts all over again. Forever. On every normal loop, `JC` checks the flag, finds it off, and the program just carries on to the `JMP`.

Because this computer is built from relays, and thus pretty slow, we can probably watch the light walk across the display with our own eyes. If we want to slow it down some, we can pad the program with some `NOP`s that waste clock cycles.

Real computers are insanely fast and usually have specialized timer hardware and such, but sometimes just run "do-nothing loops" that just waste clock cycles for a set time. Here is an example of a simple do-nothing delay loop:

```
0:  LOAD A, 1
2:  MOV B, A
3:  LOAD A, 0
5:  ADD
6:  JC 10
8:  JMP 5
10: (rest of the program)
```

All this loop does is add 1 to `A` over and over, 256 times, until the addition overflows and the `CARRY` flag lets it escape. It computes nothing useful, it just eats up time.

But we don't really need these for our slow computer. Just know real computers use a combination of timer hardware, little counter circuits that tick along with the clock, and loops like these to wait for the right amount of time. Some CPUs even have a sleep instruction that shuts them down completely until something wakes them up.

So basically, these jump instructions can help us branch on certain conditions letting our program decide stuff, and also run in loops.

But how would the CPU actually execute an instruction? What control wires would it flip and in what order. Let's take the `MOV B, A` instruction as an example.

First the `CU` would flip the `O` signal on the `A` register, driving the bus to whatever is stored in `A`. Then the `CU` would flip the `W` signal on register `B`, writing the value on the bus, into the register. Then it would turn off the `O` signal on register `A`, and boom, we are done. The `CU` had to take a few tiny micro-steps to execute that instruction. We will talk about micro-steps in more detail later on.

How does the `CU` know which wires to flip and when? That is what the next section is all about.