



Tutorial on Upgrading the C6 Firmware via P4


First, select a version of the Hosted component. Here, we'll choose version V2.12.3. The “slave” folder within the component contains the slave project. After selecting the ESP32-C6 chip, you can proceed to compile.

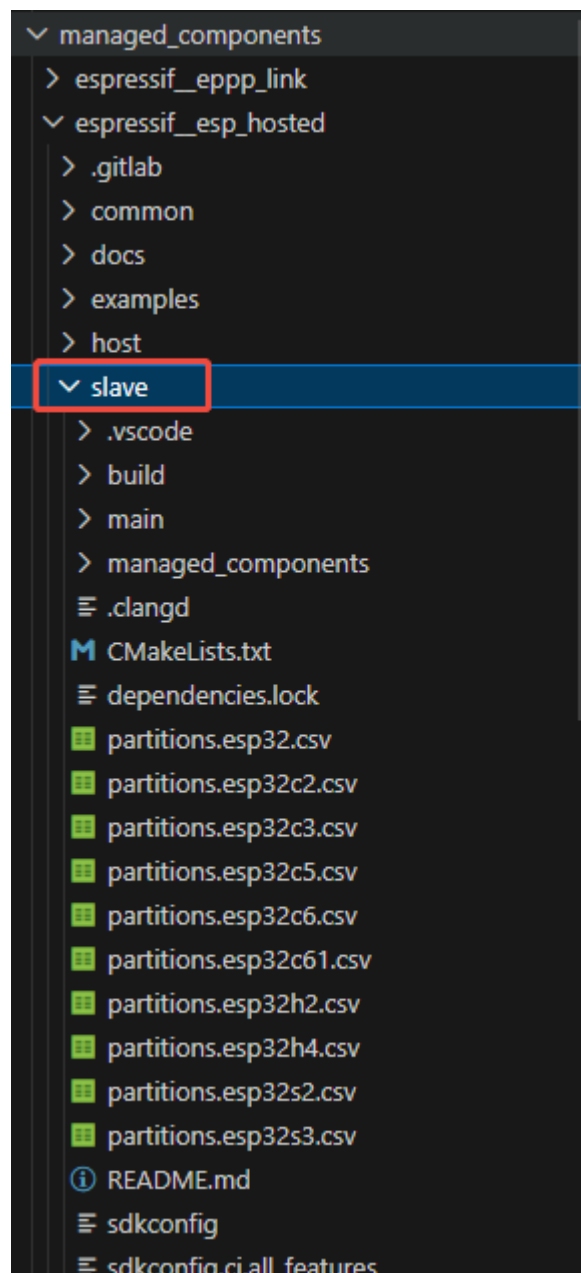

After compilation, a default `network_adapter.bin` file is generated in the build folder.

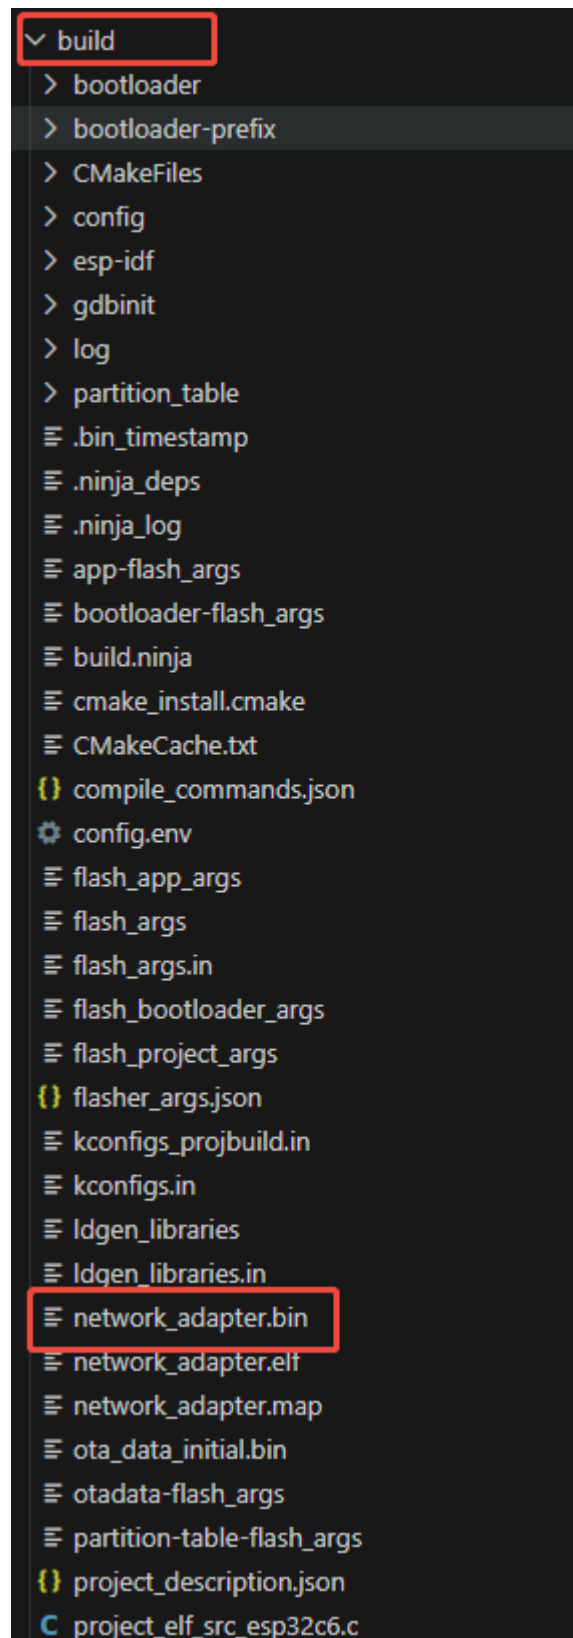

The 'host_performs_slave_ota' folder in the Hosted component is the OTA update project for the P4.

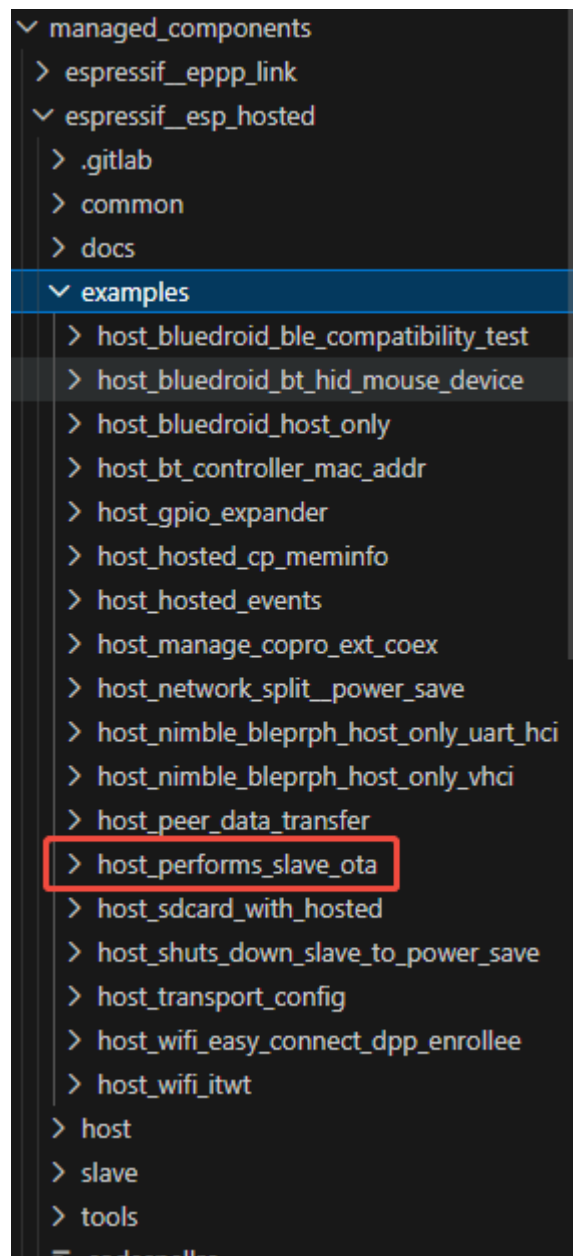

Add the following content to the 'sdkconfig.defaults' folder in the 'host_performs_slave_ota' project. Compile after modifying the default Hosted configuration. If the 'sdkconfig' file has already been generated, you can also make changes in 'menuconfig'.

P4 chip version select

CONFIG_ESP32P4_SELECTS_REV_LESS_V3=y

Host Slave OTA config

CONFIG_OTA_METHOD_LITTLEFS=y

Pin assignments vary by hardware version

Hosted slave config

7、 9、 10.1inch V1.0

```
CONFIG_ESP_HOSTED_SDIO_1_BIT_BUS=y
CONFIG_ESP_HOSTED_SDIO_BUS_WIDTH=1
CONFIG_ESP_HOSTED_SDIO_CLOCK_FREQ_KHZ=40000
CONFIG_ESP_HOSTED_PRIV_SDIO_PIN_CMD_SLOT_1=19
CONFIG_ESP_HOSTED_PRIV_SDIO_PIN_CLK_SLOT_1=18
CONFIG_ESP_HOSTED_PRIV_SDIO_PIN_D0_SLOT_1=14
CONFIG_ESP_HOSTED_PRIV_SDIO_PIN_D1_1BIT_BUS_SLOT_1=15
CONFIG_ESP_HOSTED_SDIO_GPIO_RESET_SLAVE=32
```


7、 9、 10.1inch V1.1

```
CONFIG_ESP_HOSTED_SDIO_SLOT_1=y
CONFIG_ESP_HOSTED_SDIO_4_BIT_BUS=y
CONFIG_ESP_HOSTED_SDIO_CLOCK_FREQ_KHZ=40000
CONFIG_ESP_HOSTED_PRIV_SDIO_PIN_CMD_SLOT_1=19
CONFIG_ESP_HOSTED_PRIV_SDIO_PIN_CLK_SLOT_1=18
CONFIG_ESP_HOSTED_PRIV_SDIO_PIN_D0_SLOT_1=17
CONFIG_ESP_HOSTED_PRIV_SDIO_PIN_D1_4BIT_BUS_SLOT_1=16
CONFIG_ESP_HOSTED_PRIV_SDIO_PIN_D2_4BIT_BUS_SLOT_1=15
CONFIG_ESP_HOSTED_PRIV_SDIO_PIN_D3_4BIT_BUS_SLOT_1=14
CONFIG_ESP_HOSTED_SDIO_GPIO_RESET_SLAVE=32
```

5inch V1.0

```
CONFIG_ESP_HOSTED_SDIO_SLOT_1=y
CONFIG_ESP_HOSTED_SDIO_4_BIT_BUS=y
```


```
CONFIG_ESP_HOSTED_SDIO_CLOCK_FREQ_KHZ=40000
CONFIG_ESP_HOSTED_PRIV_SDIO_PIN_CMD_SLOT_1=54
CONFIG_ESP_HOSTED_PRIV_SDIO_PIN_CLK_SLOT_1=53
CONFIG_ESP_HOSTED_PRIV_SDIO_PIN_D0_SLOT_1=52
CONFIG_ESP_HOSTED_PRIV_SDIO_PIN_D1_4BIT_BUS_SLOT_1=51
CONFIG_ESP_HOSTED_PRIV_SDIO_PIN_D2_4BIT_BUS_SLOT_1=50
CONFIG_ESP_HOSTED_PRIV_SDIO_PIN_D3_4BIT_BUS_SLOT_1=49
CONFIG_ESP_HOSTED_SDIO_GPIO_RESET_SLAVE=20
```

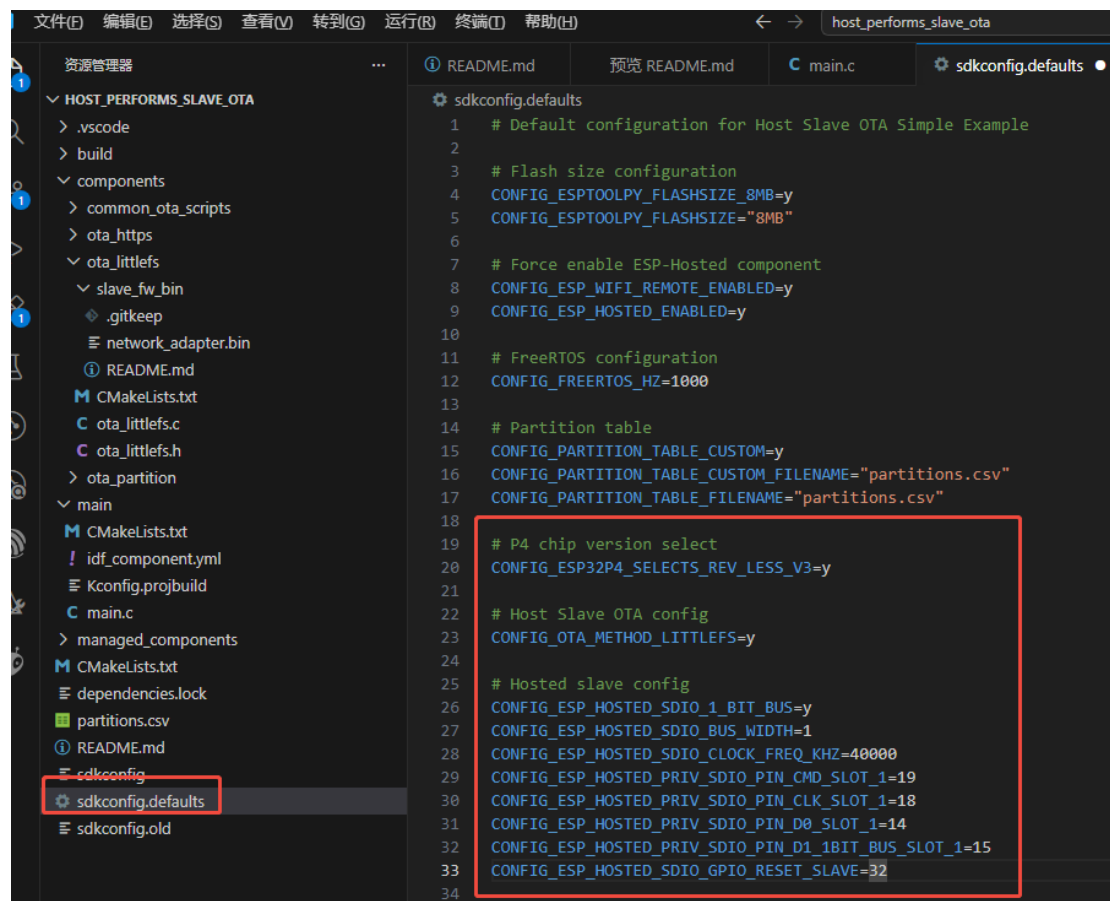

```
文件(F) 编辑(E) 选择(S) 查看(V) 转到(G) 运行(R) 终端(T) 帮助(H)  ← → host_performs_slave_ota
资源管理器
  HOST_PERFORMS_SLAVE_OTA
    > .vscode
    > build
    > components
    > common_ota_scripts
    > ota_https
    > ota_littlefs
    > slave_fw_bin
    > .gitkeep
    > network_adapter.bin
    > README.md
    > CMakeLists.txt
    > ota_littlefs.c
    > ota_littlefs.h
    > ota_partition
    > main
    > CMakeLists.txt
    > idf_component.yml
    > Kconfig.projbuild
    > main.c
    > managed_components
    > CMakeLists.txt
    > dependencies.lock
    > partitions.csv
    > README.md
    > sdkconfig
    > sdkconfig.defaults
    > sdkconfig.old
  ① README.md 预览 README.md C main.c sdkconfig.defaults ●

sdkconfig.defaults
1  # Default configuration for Host Slave OTA Simple Example
2
3  # Flash size configuration
4  CONFIG_ESPTOOLPY_FLASHSIZE_8MB=y
5  CONFIG_ESPTOOLPY_FLASHSIZE="8MB"
6
7  # Force enable ESP-Hosted component
8  CONFIG_ESP_WIFI_REMOTE_ENABLED=y
9  CONFIG_ESP_HOSTED_ENABLED=y
10
11 # FreeRTOS configuration
12 CONFIG_FREERTOS_HZ=1000
13
14 # Partition table
15 CONFIG_PARTITION_TABLE_CUSTOM=y
16 CONFIG_PARTITION_TABLE_CUSTOM_FILENAME="partitions.csv"
17 CONFIG_PARTITION_TABLE_FILENAME="partitions.csv"
18
19 # P4 chip version select
20 CONFIG_ESP32P4_SELECTS_REV_LESS_V3=y
21
22 # Host Slave OTA config
23 CONFIG_OTA_METHOD_LITTLEFS=y
24
25 # Hosted slave config
26 CONFIG_ESP_HOSTED_SDIO_1_BIT_BUS=y
27 CONFIG_ESP_HOSTED_SDIO_BUS_WIDTH=1
28 CONFIG_ESP_HOSTED_SDIO_CLOCK_FREQ_KHZ=40000
29 CONFIG_ESP_HOSTED_PRIV_SDIO_PIN_CMD_SLOT_1=19
30 CONFIG_ESP_HOSTED_PRIV_SDIO_PIN_CLK_SLOT_1=18
31 CONFIG_ESP_HOSTED_PRIV_SDIO_PIN_D0_SLOT_1=14
32 CONFIG_ESP_HOSTED_PRIV_SDIO_PIN_D1_1BIT_BUS_SLOT_1=15
33 CONFIG_ESP_HOSTED_SDIO_GPIO_RESET_SLAVE=32
34
```

Place the network_adapter.bin firmware generated by the slave project into the corresponding folder in the host_performs_slave_ota project.

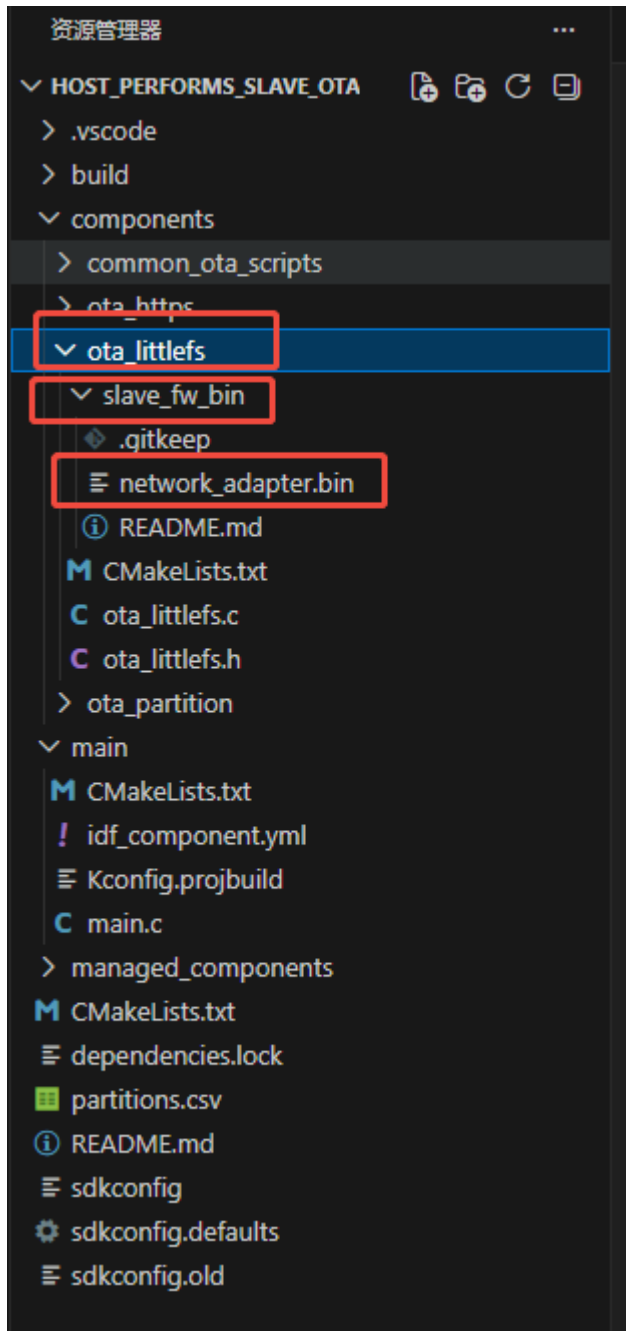

After that, select the ESP32-P4 chip, compile the host_performs_slave_ota project, and upload it to the ESP32-P4 Advance Board. Once the program runs, it will perform an OTA update of the C6 firmware.

Regarding the 1-bit and 4-bit options:

hosted

保存 丢弃 重置

SDIO

Hosted SDIO Configuration

RESET GPIO Config ⓘ

RESET: Active High

SDIO Receive Optimization ⓘ

Use Streaming Mode

SDIO Slot To Use ⓘ

Slot 1

☐ SDIO power supply comes from internal LDO IO (READ HELP!) ⓘ

SDIO Bus Width ⓘ

1 Bit

4 Bits

1 Bit

CMD GPIO number ⓘ

19

CLK GPIO number ⓘ

18

D0 GPIO number ⓘ

14

D1 GPIO number (Interrupt Line) ⓘ

15

GPIO pin for Resetting slave ESP ⓘ