

# **AS5047P**

14-bit On-Axis Magnetic Rotary
Position Sensor with 12-Bit Decimal &
Binary Incremental Pulse Count for
28krpm high speed capability

### **General Description**

The AS5047P is a high-resolution rotary position sensor for high speed (up to 28krpm) angle measurement over a full 360 degree range. This new position sensor is equipped with revolutionary integrated dynamic angle error compensation (DAEC™) with almost 0 latency and offers a robust design that suppresses the influence of any homogenous external stray magnetic field.

A standard 4-wire SPI serial interface allows a host microcontroller to read 14-bit absolute angle position data from the AS5047P and to program non-volatile settings without a dedicated programmer.

Incremental movements are indicated on a set of ABI signals with a maximum resolution of 4000 steps / 1000 pulses per revolution in decimal mode and 4096 steps / 1024 pulses per revolution in binary mode. The resolution of the ABI signal is programmable and can be reduced to 100 steps per revolution, or 25 pulses per revolution.

Brushless DC (BLDC) motors are controlled through a standard UVW commutation interface with a programmable number of pole pairs from 1 to 7. The absolute angle position is also provided as PWM-encoded output signal

The AS5047P is available as a single die in a compact 14-pin TSSOP package.

Ordering Information and Content Guide appear at end of datasheet.

### **Key Benefits & Features**

The benefits and features of AS5047P, 14-bit On-Axis Magnetic Rotary Position Sensor with 12-Bit Decimal & Binary Incremental Pulse Count for 28krpm high speed capability are listed below:

Figure 1: Added Value of using the AS5047P

Benefits	Features
High speed application	Up to 28krpm
Easy to use – saving costs on DSP	DAEC™ Dynamic angle error compensation
Good resolution for motor & position control	14-bit core resolution



Benefits	Features
Simple optical encoder replacement	ABI programmable decimal and binary pulse-count: 1000,500,400,300,200,100,50,25,1024,512,256 ppr
No programmer needed (via SPI command)	Zero position, configuration programmable
Versatile choice of the interface	Independent output interfaces: SPI, ABI, UVW, PWM
Lower system costs (no shielding)	Immune to external stray field


### **Applications**

The AS5047P is ideally suited to support BLDC motor commutation for the most challenging industrial applications such as factory automation, building automation, robotics, PMSM (permanent magnet synchronous motor) and stepper motors closed loop in as well optical encoder replacement.

### **Block Diagram**

The functional blocks of this device for reference are shown below:

Figure 2: AS5047P Block Diagram

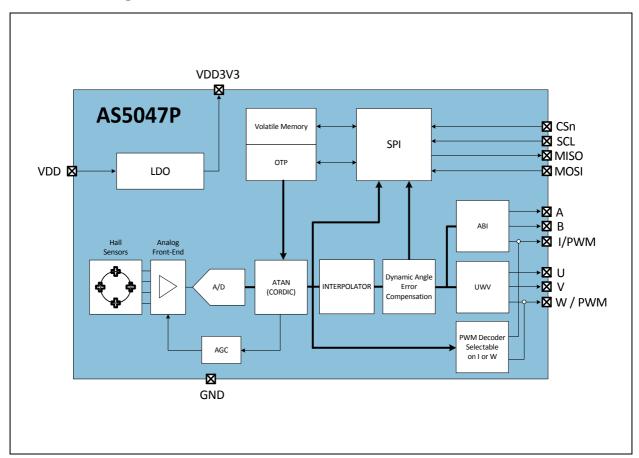

Page 2ams DatasheetDocument Feedback[v1-00] 2014-Oct-31



# **Pin Assignment**

Figure 3: TSSOP-14 Pin Assignment

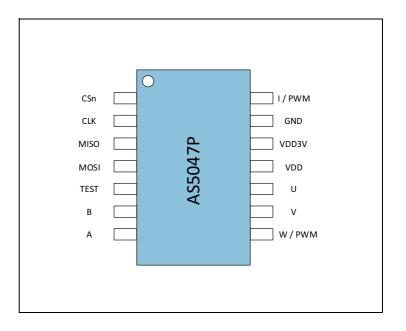


Figure 4: Pin Description

Pin Number	Pin Name	Pin Type	Description
1	CSn	Digital input	SPI chip select (active low)
2	CLK	Digital input	SPI clock
3	MISO	Digital output	SPI master data input, slave output
4	MOSI	Digital input	SPI master data output, slave input
5	Test		Test pin (connect to ground)
6	В	Digital output	Incremental signal B
7	А	Digital output	Incremental signal A

**ams Datasheet** [v1-00] 2014-Oct-31



Pin Number	Pin Name	Pin Type	Description
8	W/PWM	Digital output	Commutation signal W or PWM
9	V	Digital output	Commutation signal V
10	U	Digital output	Commutation signal U
11	VDD	Power supply	5V power supply voltage for on-chip regulator
12	VDD3V3	Power supply	3.3V on-chip low-dropout (LDO) output. Requires an external decoupling capacitor (1uF)
13	GND	Power supply	Ground
14	I	Digital output	Incremental signal I (index) or PWM

### Note(s) and/or Footnote(s):

- 1. Floating state of a digital input is not allowed.
- 2. If SPI is not used, an Pull up resistor on CSn is required.
- 3. If SPI is not used, an Pull down resistor on CLK is required.

Page 4ams DatasheetDocument Feedback[v1-00] 2014-Oct-31



# **Absolute Maximum Ratings**

Stresses beyond those listed under

"Absolute Maximum Ratings" may cause permanent damage to the device. These are stress ratings only. Functional operation of the device at these or any other conditions beyond those indicated under "Electrical Characteristics" is not implied. Exposure to absolute maximum rating conditions for extended periods may affect device reliability.

Figure 5: Absolute Maximum Ratings

Symbol	Parameter	Min	Max	Units	Note
VDD5	DC supply voltage at VDD pin	-0.3	7.0	V	
VDD3	DC supply voltage at VDD3V3 pin	-0.3	5.0	V	
V <sub>SS</sub>	DC supply voltage at GND pin	-0.3	0.3	V	
V <sub>in</sub>	Input pin voltage		VDD+0.3	V	
I <sub>scr</sub>	Input current (latch-up immunity)	-100	100	mA	Norm: AEC-Q100-004
ESD	Electrostatic discharge	±2		kV	Norm: AEC-Q100-002
P <sub>t</sub>	Total power dissipation (all supplies and outputs)		150	mW	
Ta5V0	Ambient temperature 5V0	-40	125	°C	In the 5.0V power supply mode only
Ta3V3	Ambient temperature 3V3	-40	125	°C	In the 3.3V power supply mode if NOISESET = 0
TaProg	Programming Temperature	5	45	°C	Programming @ Room temperature (25°C ± 20°C)
T <sub>strg</sub>	Storage temperature	-55	150	°C	
T <sub>body</sub>	Package body temperature		260	°C	Norm: IPC/JEDEC J-STD-020
	Humidity non-condensing	5	85	%	
	Moisture sensitivity level		3		Represents a maximum floor lifetime of 168h

ams Datasheet Page 5
[v1-00] 2014-Oct-31 Document Feedback



## **Electrical Characteristics**

All limits are guaranteed. The parameters with min and max values are guaranteed with production tests or SQC (Statistical Quality Control) methods.

Figure 6: **Electrical Characteristics** 

Symbol	Parameter	Conditions	Min	Тур	Max	Units
VDD	Positive supply voltage	5.0V operation mode	4.5	5.0	5.5	V
VDD3V3	Positive supply voltage	3.3V operation mode; only from -40 to 125°C	3.0	3.3	3.6	V
VDD_Burn	Positive supply voltage	Supply voltage required for programming in 3.3V operation	3.3		3.5	V
V <sub>REG</sub>	Regulated Voltage	Voltage at VDD3V3 pin if VDD ≠ VDD3V3	3.2	3.4	3.6	V
V <sub>porON</sub>	Internal POR-ON level	3V operation. Pin VDD5 & VDD3 shorted	2.3		2.85	V
V <sub>porOFF</sub>	Internal POR-OFF level	3V operation. Pin VDD5 & VDD3 shorted	2.05		2.65	V
V <sub>porh</sub>	Internal POR hysteresis		150		300	mV
I <sub>DD</sub>	Supply current				15	mA
V <sub>IH</sub>	High-level input voltage		0.7×VDD			V
V <sub>IL</sub>	Low-level input voltage				0.3×VDD	V
V <sub>OH</sub>	High-level output voltage		VDD-0.5			V
V <sub>OL</sub>	Low-level output voltage				V <sub>SS</sub> +0.4	V
I_Out	Current on digital output				1	mA
C_L	Capacitive load on digital output				50	pf

Page 6 ams Datasheet **Document Feedback** [v1-00] 2014-Oct-31



# **Magnetic Characteristics**

Figure 7:

**Magnetic Specifications** 

Symbol	Parameter	Conditions	Min	Max	Unit
Bz	Orthogonal magnetic field strength, normal operating mode	Required orthogonal component of the magnetic field strength measured at the die's surface along a circle of 1.1mm	35	70	mT

### Note(s) and/or Footnote(s):

1. it is possible to operate the AS5047P below 35mT with reduced noise performance.

# **System Characteristics**

Figure 8:

**System Specifications** 

Symbol	Parameter	Conditions	Min	Тур	Max	Units
RES	Core resolution			14		bit
RES_ABI	Resolution of the ABI interface	Programmable with register setting (ABIRES)	100		4096	Steps per revolution
INL <sub>OPT</sub> @ 25°C	Non-linearity, optimum placement of the magnet				±0.8	Deg
INL <sub>OPT+TEMP</sub>	Non-linearity optimum placement of the magnet over the full Temperature Range				±1	Deg
INL <sub>DIS+TEMP</sub>	Non-linearity @ displacement of magnet and temperature -40°C to 150°C	Assuming N35H Magnet (D=8mm, H=3mm) 500um displacement in x and y z-distance @ 2000um			±1.2	Deg
ONL	RMS output noise (1 sigma). Not tested, guaranteed by design.	Orthogonal component for the magnetic field within the specified range (Bz), NOISESET = 0			0.068	degree
ON_PWM	RMS output noise (1 sigma) on PWM interface	Orthogonal component for the magnetic field within the specified range (Bz)			0.068	degree
t <sub>delay</sub>	System propagation delay –core	Reading angle via SPI	90		110	μs

ams Datasheet Page 7 [v1-00] 2014-Oct-31 Document Feedback



Symbol	Parameter	Conditions	Min	Тур	Max	Units
t <sub>delay_</sub> DAEC	System propagation delay after dynamic angle error correction.	At ABI and UVW interfaces	1.5		1.9	μs
t <sub>sampl</sub>	Sampling rate	Refresh rate at SPI	202	222	247	ns
DAE <sub>1700</sub>	Dynamic angle error	At 1700 RPM constant speed			0.02	degree
DAE <sub>max</sub>	Dynamic angle error	At 14500 RPM constant speed			0.18	degree
DAE <sub>acc</sub>	Dynamic angle error at constant acceleration (25krad/s²)	25k radians/s² constant acceleration			0.175	degree
MS	Maximum speed				28000	RPM

**Reference magnet:** N35H, 8mm diameter; 3mm thickness.

# **Timing Characteristics**

Figure 9:

**Timing Specifications** 

Symbol	Parameter	Conditions	Min	Тур	Max	Units
t <sub>pon</sub>	Power-on time				10	ms

Page 8ams DatasheetDocument Feedback[v1-00] 2014-Oct-31



### **Detailed Description**

The AS5047P is a Hall-effect magnetic sensor using a CMOS lateral technology. The lateral Hall sensors convert the magnetic field component perpendicular to the surface of the chip into a voltage.

The signals from the Hall sensors are amplified and filtered by the analog front-end (AFE) before being converted by the analog-to-digital converter (ADC). The output of the ADC is processed by the hardwired CORDIC (coordinate rotating digital computer) block to compute the angle and magnitude of the magnetic vector. The intensity of the magnetic field (magnitude) is used by the automatic gain control (AGC) to adjust the amplification level for compensation of the temperature and magnetic field variations.

The internal 14-bit resolution is available by reading a register through the SPI interface. The resolution on the ABI output can be programmed from 4096 to 100 steps per revolution.

The Dynamic Angle Error Compensation block corrects the calculated angle for latency using a linear prediction calculation algorithm. At constant rotation speed the latency time is internally compensated by the AS5047P, reducing the dynamic angle error at the SPI, ABI and UVW outputs. The AS5047P allows to switch OFF the UVW output interface to display the absolute angle as PWM-encoded signal on the pin W.

At higher speeds, the interpolator fills in missing ABI pulses and generates the UVW signals with no loss of resolution. The non-volatile settings in the AS5047P can be programmed through the SPI interface without any dedicated programmer. The AS5047P is built for high speed application up to 28krpm.

### **Power Management**


The AS5047P can be either powered from a 5.0V supply using the on-chip low-dropout regulator or from a 3.3V voltage supply. The LDO regulator is not intended to power any other loads, and it needs a 1  $\mu$ F capacitor to ground located close to the chip for decoupling as shown in Figure 10.

In 3.3V operation, VDD and VREG must be tied together.

ams Datasheet Page 9
[v1-00] 2014-Oct-31 Document Feedback



Figure 10: 5.0V and 3.3V Power Supply Options

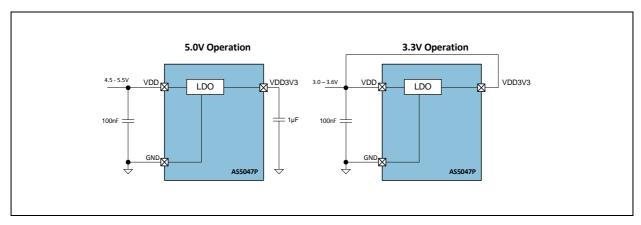

After applying power to the chip, the power-on time  $(t_{pon})$  must elapse before the AS5047P provides the first valid data.

### **Dynamic Angle Error Compensation**

The AS5047P uses 4 integrated Hall sensors which produce a voltage proportional to the orthogonal component of the magnetic field to the die. These voltage signals are amplified, filtered, and converted into the digital domain to allow the CORDIC digital block to calculate the angle of the magnetic vector. Propagation of these signals through the analog front-end and digital back-end generates a fixed delay between the time of measurement and the availability of the measured angle at the outputs. This latency generates a dynamic angle error represented by the product of the angular speed  $(\omega)$  and the system propagation delay  $(t_{delay})$ :

$$DAE = \omega \times t_{delay}$$

The dynamic angle compensation block calculates the current magnet rotation speed  $(\omega)$  and multiplies it with the system propagation delay  $(t_{delay})$  to determine the correction angle to reduce this error. At constant speed, the residual system propagation delay is  $t_{delay\_DAEC}$ .

The angle represented on the PWM interface is not compensated by the Dynamic Angle Error Compensation algorithm. it is also possible to disable the Dynamic Angle Error Compensation with the setting DAECDIS. Disabling the Dynamic Angle Error Compensation gives a noise benefit of 0.016 degree rms. This setting can be advantageous for low speed (under 100rpm) respectively static positioning applications.

Page 10

Document Feedback

[v1-00] 2014-Oct-31



### SPI Interface (slave)


The SPI interface is used by a host microcontroller (master) to read or write the volatile memory as well as to program the non-volatile OTP registers. The AS5047P SPI only supports slave operation mode. It communicates at clock rates up to 10 MHz.

The AS5047P SPI uses mode=1 (CPOL=0, CPHA=1) to exchange data. As shown in Figure 11, a data transfer starts with the falling edge of CSn (SCL is low). The AS5047P samples MOSI data on the falling edge of SCL. SPI commands are executed at the end of the frame (rising edge of CSn). The bit order is MSB first. Data is protected by parity.

### **SPI Timing**

The AS5047P SPI timing is shown in Figure 11.

Figure 11: SPI Timing Diagram

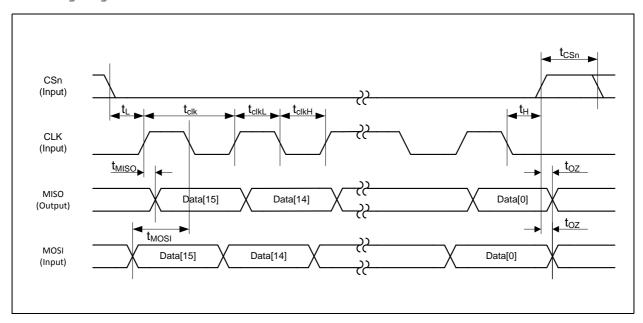

ams Datasheet Page 11
[v1-00] 2014-Oct-31 Document Feedback



### Figure 12: **SPI Timing**

Parameter	Description	Min	Max	Units
t <sub>L</sub>	Time between CSn falling edge and CLK rising edge	350		ns
t <sub>clk</sub>	Serial clock period	100		ns
t <sub>clkL</sub>	Low period of serial clock	50		ns
t <sub>clkH</sub>	High period of serial clock	50		ns
t <sub>H</sub>	Time between last falling edge of CLK and rising edge of CSn	tclk / 2		ns
t <sub>CSn</sub>	High time of CSn between two transmissions	350		ns
t <sub>MOSI</sub>	Data input valid to falling clock edge	20		ns
t <sub>MISO</sub>	CLK edge to data output valid		51	ns
t <sub>OZ</sub>	Release bus time after CS rising edge.		10	ns

### **SPI Transaction**

An SPI transaction consists of a 16-bit command frame followed by a 16-bit data frame. Figure 13 shows the structure of the command frame.

Figure 13: **SPI Command Frame** 

Bit	Name	Description
15	PARC	Parity bit (even) calculated on the command frame
14	R/W	0: Write 1: Read
13:0	ADDR	Address to read or write

To increase the reliability of communication over the SPI, an even parity bit PARC must be generated and sent. A wrong setting of the parity bit causes the PARERR bit in the error flag register to be set. The parity bit is calculated from the 16-bit command frame. The 16-bit command specifies whether the transaction is a read or a write and the address.

Page 12 ams Datasheet [v1-00] 2014-Oct-31



Figure 14 shows the read data frame.

Figure 14: SPI Read Data Frame

Bit	Name	Description
15	PARD	Parity bit (even) for the data frame
14	EF	0: No command frame error occurred 1: Error occurred
13:0	DATA	Data

The data is sent on the MISO pin. The parity bit PARD is calculated by the AS5047P for the 16-bit data frame. If an error is detected in the previous SPI command frame, the EF bit is set high. The SPI read is sampled on the rising edge of CSn and the data is transmitted on MISO with the next read command, as shown in Figure 15.

Figure 15: SPI Read

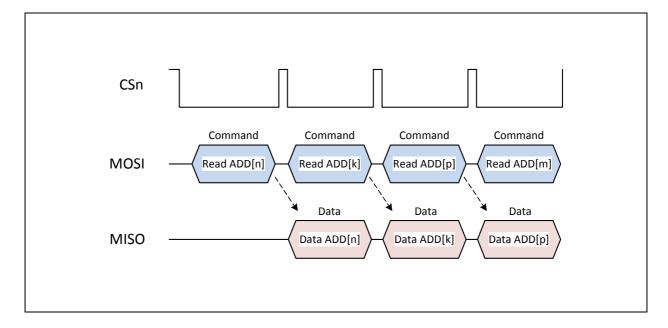


Figure 16: SPI Write Data Frame

Bit	Name	Description
15	PARD	Parity bit (even)
14	0	Always low
13:0	DATA	Data


ams Datasheet Page 13
[v1-00] 2014-Oct-31 Document Feedback



The parity bit PARD must be calculated from the 16-bit data.

In an SPI write transaction, the write command frame (e.g. Write ADD[n]) is followed by a data frame (e.g. DATA [x]). In addition to writing an address in the AS5047P, a write command frame causes the old contents of the addressed register (e.g. DATA [y]) to be sent on MISO in the following frame. This is followed by the new contents of the addressed register (DATA [x]) as shown in Figure 18.

Figure 17: SPI Write Transaction

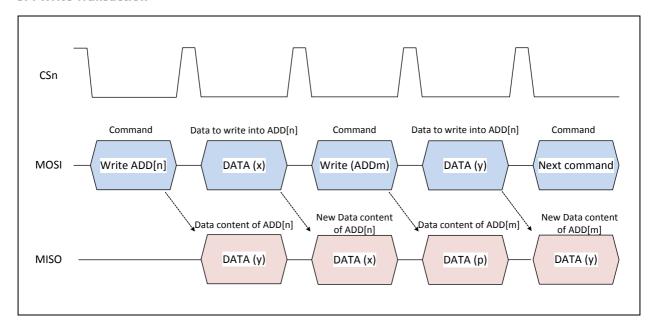

Page 14

Document Feedback

[v1-00] 2014-Oct-31



## **Volatile Registers**

The volatile registers are shown in Figure 18. Each register has a 14-bit address.

Figure 18: **Volatile Register Table** 

Address	Name	Default	Description
0x0000	NOP	0x0000	No operation
0x0001	ERRFL	0x0000	Error register
0x0003	PROG	0x0000	Programming register
0x3FFC	DIAAGC	0x0180	Diagnostic and AGC
0x3FFD	MAG	0x0000	CORDIC magnitude
0x3FFE	ANGLEUNC	0x0000	Measured angle without dynamic angle error compensation
0x3FFF	ANGLECOM	0x0000	Measured angle with dynamic angle error compensation

Reading the NOP register is equivalent to a nop (no operation) instruction for the AS5047P.

Figure 19: ERRFL (0x0001)

Name	Read/Write	Bit Position	Description
PARERR	R	2	Parity error
INVCOMM	R	1	Invalid command error: set to 1 by reading or writing an invalid register address
FRERR	R	0	Framing error: is set to 1 when a non-compliant SPI frame is detected

Reading the ERRFL register automatically clears its contents (ERRFL=0x0000).

ams Datasheet Page 15 [v1-00] 2014-Oct-31 Document Feedback



Figure 20: PROG (0x0003)

Name	Read/Write	Bit Position	Description
PROGVER	R/W	6	Program verify: must be set to 1 for verifying the correctness of the OTP programming
PROGOTP	R/W	3	Start OTP programming cycle
OTPREF	R/W	2	Refreshes the non-volatile memory content with the OTP programmed content
PROGEN	R/W	0	Program OTP enable: enables programming the entire OTP memory

The PROG register is used for programming the OTP memory. (See programming the zero position.)

Figure 21: DIAAGC (0x3FFC)

Name	Read/Write	Bit Position	Description
MAGH	R	11	Diagnostics: Magnetic field strength too low; AGC=0xFF
MAGL	R	10	Diagnostics: Magnetic field strength too high; AGC=0x00
COF	R	9	Diagnostics: CORDIC overflow
LF	R	8	Diagnostics: Offset compensation LF=0:internal offset loops not ready regulated LF=1:internal offset loop finished
AGC	R	7:0	Automatic gain control value

Figure 22: MAG (0x3FFD)

Name	Read/Write	Bit Position	Description
CMAG	R	13:0	CORDIC magnitude information

Figure 23: ANGLE (0x3FFE)

Name	Read/Write	Bit Position	Description
CORDICANG	R	13:0	Angle information without dynamic angle error compensation

Page 16ams DatasheetDocument Feedback[v1-00] 2014-Oct-31



Figure 24: ANGLECOM (0x3FFF)

Name	Read/Write	Bit Position	Description
DAECANG	R	13:0	Angle information with dynamic angle error compensation

## **Non-Volatile Registers (OTP)**

A nonvolatile memory (One-Time Programmable) is used store the zero position of the magnet and custom settings.

Figure 25: Non-Volatile Register Table

Address	Name	Default	Description
0x0016	ZPOSM	0x0000	Zero position MSB
0x0017	ZPOSL	0x0000	Zero position LSB /MAG diagnostic
0x0018	SETTINGS1	0x0000	Custom setting register 1
0x0019	SETTINGS2	0x0000	Custom setting register 2
0x001A	RED	0x0000	Redundancy register

Figure 26: ZPOSM (0x0016)

Name	Read/Write/Program	Bit Position	Description
ZPOSM	R/W/P	7:0	8 most significant bits of the zero position

Figure 27: ZPOSL (0x0017)

Name	Read/Write/Program	Bit Position	Description
ZPOSL	R/W/P	5:0	6 least significant bits of the zero position
comp_l_error_en	R/W/P	6	This bit enables the contribution of MAGH (Magnetic field strength too high) to the system_error
comp_h_error_en	R/W/P	7	This bit enables the contribution of MAGL (Magnetic field strength too low) to the system_error

ams Datasheet Page 17
[v1-00] 2014-Oct-31 Document Feedback



Figure 28: SETTINGS1 (0x0018)

Name	Read/Write/Program	Bit Position	Description
Factory Setting	R	0	Pre-Programmed to 1
NOISESET	R/W/P	1	Noise setting
DIR	R/W/P	2	Rotation direction
UVW_ABI	R/W/P	3	Defines the PWM Output (0 = ABI is operating, W is used as PWM 1 = UVW is operating, I is used as PWM)
DAECDIS	R/W/P	4	Disable Dynamic Angle Error Compensation (0 = DAE compensation ON, 1 = DAE compensation OFF)
ABIBIN	R/W/P	5	ABI decimal or binary selection of the ABI pulses per revolution
Dataselect	R/W/P	6	This bit defines which data can be read form address 16383dec (3FFFhex). 0->DAECANG 1->CORDICANG
PWMon	R/W/P	7 enables PWM (setting of UVW_ABI Bit necessary)	

Page 18ams DatasheetDocument Feedback[v1-00] 2014-Oct-31



Figure 29: SETTINGS2 (0x0019)

Name	Read/Write/Program	Bit Position	Description
UVWPP	R/W/P	2:0	UVW number of pole pairs (000 = 1, 001 = 2, 010 = 3, 011 = 4, 100 = 5, 101 = 6, 110 = 7, 111 = 7)
HYS	R/W/P	4:3	Hysteresis setting
ABIRES	R/W/P	7:5	Resolution of ABI

Figure 30: RED (0x001A)

Name	Read/Write/Program	Bit Position	Description
REDUNDANCY	R/W/P	4:0	Redundancy bits. This field enables with force to high one bit of the Non-Volatile register map after a non-successful burning. For more details please refer to the application note "AN5000 – AS5147_Redundancy_Bits"

ams Datasheet Page 19
[v1-00] 2014-Oct-31 Document Feedback



### **ABI Incremental Interface**

The AS5047P can send the angle position to the host microcontroller through an incremental interface. This interface is available simultaneously with the other interfaces. By default, the incremental interface is set to work at the highest resolution 4096 step per revolution, or 1024 pulses per revolution (ppr). It is possible to select between a decimal and binary pulses per revolution, respectively with the bit ABIBIN and select the pulses per revolution with the bit ABIRES as shown in Figure 31.

Figure 31: ABI Resolution Setting


ABIRES	ABIBIN	Steps per revolution	Pulses per revolution
000	0	4000	1000
001	0	2000	500
010	0	1600	400
011	0	1200	300
100	0	800	200
101	0	400	100
110	0	200	50
111	0	100	25
000	1	4096	1024
001	1	2048	512
010	1	1024	256

The phase shift between the signals A and B indicates the rotation direction: e.g. DIR-Bit = 0, clockwise (A leads, B follows) or counterclockwise (B leads, A follows). During the start-up time, after power ON to the chip, all three ABI signals are high.

Page 20
Document Feedback
[v1-00] 2014-Oct-31



Figure 32: ABI Signals at 11-Bit Resolution

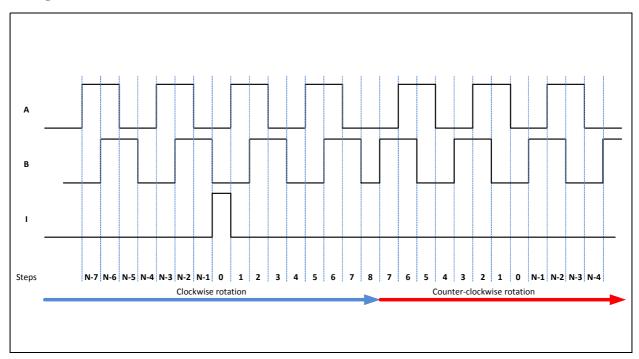

The Figure 32 shows the ABI signal flow if the magnet rotates in clockwise direction, placing the magnet on the top of the AS5047P and looking at the magnet from the top (DIR=0). With the bit DIR, it is possible to invert the rotation direction.

ams Datasheet Page 21
[v1-00] 2014-Oct-31 Document Feedback




### **UVW** Commutation Interface

The AS5047P can emulate the UVW signals generated by the three discrete Hall switches commonly used in BLDC motors. The UVWPP field in the SETTINGS register selects the number of pole pairs of the motor (from 1 to 7 pole pairs). The UVW signals are generated with 14-bit resolution.

During the start-up time, after power ON of the chip, the UVW signals are low.

Figure 33: UVW Signals

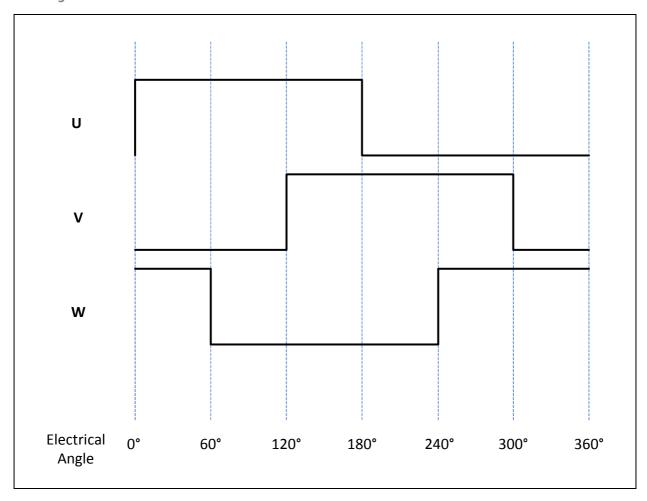

The Figure 33 shows the UVW signal flow if the magnet rotates in clockwise direction, placing the magnet on the top of the AS5047P and looking at the magnet from the top (DIR=0). With the bit DIR, it is possible to invert the rotation direction.

Page 22

Document Feedback

[v1-00] 2014-Oct-31



### **PWM**


The PWM can be enabled with the bit setting PWMon. The PWM encoded signal is displayed on the pin W or the pin I. The bit setting UVW\_ABI defines which output is used as PWM. The PWM output consists of a frame of 4119 PWM clock periods, as shown in Figure 34. The PWM frame has the following sections:

- 12 PWM Clocks for INIT
- 4 PWM Clocks for Error detection
- 16 PWM clock periods high
- 4095 PWM clock periods of data
- 8 PWM clock periods low

The angle is represented in the data part of the frame with a 12-bit resolution. One PWM clock period represents 0.088 degree and has a typical duration of 444 ns.

If the embedded diagnostic of the AS5047P detects any error the PWM interface displays only 12 clock periods high (0.3% duty-cycle).

Figure 34:
Pulse Width Modulation Encoded Signal

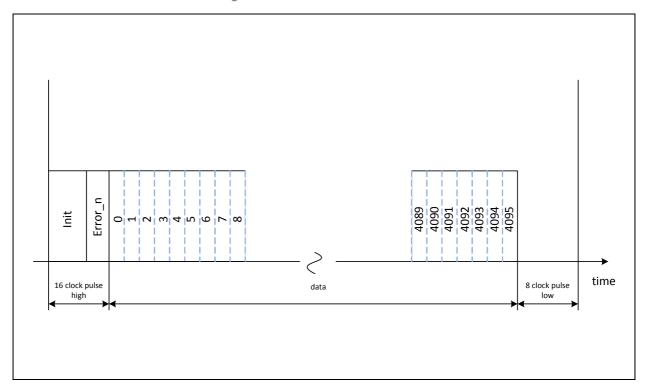

ams Datasheet Page 23
[v1-00] 2014-Oct-31 Document Feedback



### Hysteresis

The hysteresis can be programmed in the HYS bits if the SETTINGS2 register and depends on the chosen resolution of the incremental interface (ABIRES), as shown in the Figure 35.

Figure 35: Hysteresis Settings

HYS	Hysteresis related to 11 Bit ABI Resolution
00	3
01	2
10	1
11	0

# Automatic Gain Control (AGC) and CORDIC Magnitude

The AS5047P uses AGC to compensate for variations in the magnetic field strength due to changes of temperature, air gap between the chip and the magnet, and demagnetization of the magnet. The automatic gain control value can be read in the AGC field of the DIAAGC register. Within the specified input magnetic field strength (Bz), the Automatic Gain Control works in a closed loop and keeps the CORDIC magnitude value (MAG) constant. Below the minimum input magnetic field strength, the CORDIC magnitude decreases and the MAGL bit is set.

### **Diagnostic Features**

The AS5047P supports embedded self-diagnostics.

MAGL: magnetic field strength too high, set if AGC = 0xFF. This indicates the non-linearity error may be increased.

MAGH: magnetic field strength too low, set if AGC = 0x00. This indicates the output noise of the measured angle may be increased.

COF: CORDIC overflow. This indicates the measured angle is not reliable.

LF: offset compensation completed. At power-up, an internal offset compensation procedure is started, and this bit is set when the procedure is completed.

Page 24

Document Feedback [v1-00] 2014-Oct-31



### **OCF Error / COF Error**

In case of an OCF or COF error, all outputs are changing into a safe state:

SPI Output: Information in the DIAAGC (0x3FFC) register. The angle information is still valid.

PWM Output: PWM Clock Period 13 - 16 of the first 16 PWM Clock Periods = low. Additional there is no angle information valid (all 4096 clock periods = low)

ABI Output: The state of ABI is frozen to ABI = 111

UVW Output: The state of UVW is frozen to UVW = 000

#### **MAGH Error /MAGL Error**

Default diagnostic setting for MAGH error /MAGL error:

In case of a MAGH error or MAGL error, there is no safe state on the PWM,ABI or UVW outputs if comp\_h\_error\_en= 0 & comp\_h\_error\_en = 0. The device is operating with the performance as explained.

The error flags can be read out with the DIAAGC (0x3FFC) register.

Enhanced diagnosis setting for MAGH error / MAGL error:

In case of a MAGH error or MAGL error, the PWM,ABI or UVW outputs are going into a safe state if comp\_h\_error\_en = 1 & comp\_h\_error\_en = 1.

SPI Output: Information in the DIAAGC (0x3FFC) register. The angle information is still valid, if the MAGH or MAGL error flag is on.

PWM Output: PWM Clock Period 13 - 16 of the first 16 PWM Clock Periods = low. Additional there is no angle information valid (all 4096 clock periods = low)

ABI Output : The state of ABI is frozen to ABI = 111

UVW Output: The state of UVW is frozen to UVW = 000

**Important:** When comp\_(h/l)\_error\_en is enabled a marginal magnetic field input can cause toggling of MAGH or MAGL which will lead to toggling of the ABI/UVW outputs between operational mode and failure mode.

ams Datasheet Page 25
[v1-00] 2014-Oct-31 Document Feedback




# **Application Information**

## **Burn and Verification of the OTP Memory**

Step-by-step procedure to permanently program the non-volatile memory (OTP):

Figure 36: Minimum Programming Diagram for the AS5047P in 5 V Operation

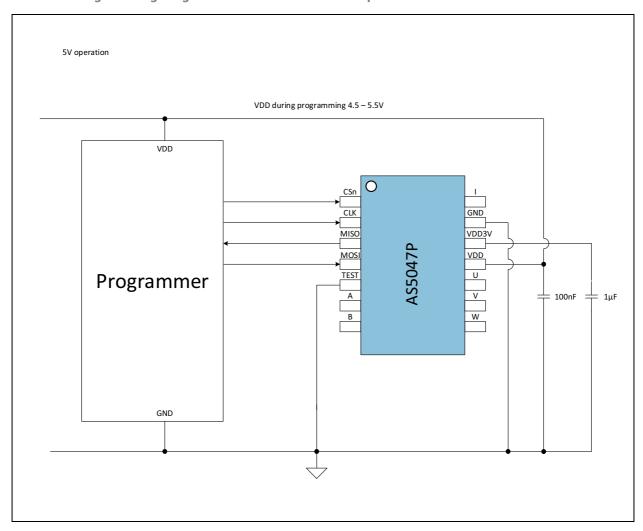


### Note(s) and/or Footnote(s):

 $1. \ In \ terms \ of \ EMC \ and \ for \ remote \ application, \ additional \ circuits \ are \ necessary.$ 

Page 26ams DatasheetDocument Feedback[v1-00] 2014-Oct-31



Figure 37:
Minimum Programming Diagram for the AS5047P in 3.3V Operation

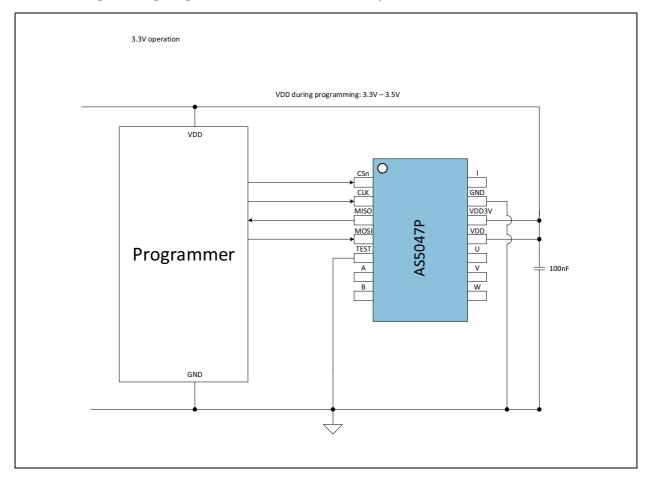

### Note(s) and/or Footnote(s):

1. In terms of EMC and for remote application, additional circuits are necessary.

Figure 38: Programming Parameter

Symbol	Parameter	Conditions	Min	Тур	Max	Units
T <sub>aProg</sub>	Programming temperature	Programming @ Room Temperature (25°C +-20°C	5		45	°
V <sub>DD</sub>	Positive supply voltage	5 V operation mode. Supply voltage during programming	4.5	5	5.5	٧
V <sub>DD</sub>	Positive supply voltage	3.3 V operation mode. Supply voltage during programming	3.3		3.5	V
I <sub>Prog</sub>	Current for programming	max current during OTP burn procedure.			100	mA

ams Datasheet Page 27
[v1-00] 2014-Oct-31 Document Feedback



The programming can either be performed in 5V operation using the internal LDO (1uF on regulator output pin), or in 3V Operation but using a supply voltage between 3.3V and 3.5V.

- 1. Power ON cycle
- 2. Write the SETTINGS1 and SETTINGS2 registers with the Custom settings for this application (Bit0 of Settings1 is a factory bit. For programming its mandatory to set this bit to 0).
- 3. Position the magnet at the desired zero position
- 4. Read out the measured angle from the ANGLE register
- 5. Write ANGLE [5:0] into the ZPOSL register and ANGLE [13:6] into the ZPOSM register
- 6. Read reg(0x0016) to reg(0x0019)  $\rightarrow$  Read register step1
- 7. Comparison of written content (settings and angle) with content of read register step1 (Removing of Bit0 of Settings1 from the comparison is mandatory. Bit0 is preprogrammed)
- 8. If point 7 is correct, enable OTP read / write by setting PROGEN = 1 in the PROG register
- 9. Start the OTP burn procedure by setting PROGOTP = 1 in the PROG register
- 10. Read the PROG register until it reads 0x0000 (Programming procedure complete)
- 11. Clear the memory content writing 0x00 in the whole non-volatile memory
- 12. Enable OTP read / write by setting PROGEN = 1 in the PROG register
- 13. Set the PROGVER = 1 to set the Guard band for the guard band test<sup>(1)</sup>.
- 14. Refresh the non-volatile memory content with the OTP content by setting OTPREF = 1

Page 28

Document Feedback

[v1-00] 2014-Oct-31



- 15. Read reg(0x0016) to reg(0x0019)  $\rightarrow$  Read register step2
- 16. Comparison of written content (settings and angle) with content of read register step2.
  Mandatory: guard band test (Removing of Bit0 of Settings1 from the comparison is mandatory. Bit0 is preprogrammed)
- 17. New power ON cycle, if **point 16** is correct. If **point 16** fails, the test with the guard band test<sup>1</sup> was not successful and the device is incorrectly programmed. A reprogramming is not allowed!
- 18. Read reg(0x0016) to reg(0x0019)  $\rightarrow$  Read register step3
- 19. Comparision of written content (settings and angle) with content of read register step3(Removing of Bit0 of Settings1 from the comparison is mandatory. Bit0 is preprogrammed).
- 20. If **point 19** is correct, the programming was successful. If **point 19** fails, device is incorrectly programmed. A reprogramming is not allowed

ams Datasheet Page 29
[v1-00] 2014-Oct-31 Document Feedback

<sup>1.</sup> Guard band test:

<sup>-</sup> Restricted to temperature range: 25 °C  $\pm$  20 °C

<sup>-</sup> Right after the programming procedure (max. 1 hour with same


<sup>-</sup> Conditions 25°C ± 20 °C)

<sup>-</sup> Same VDD voltage

The guard band test is only for the verification of the burned OTP fuses during the programming sequence. A use of the guard band in other cases is not allowed.



Figure 39: OTP Memory Burn and Verification Flowchart

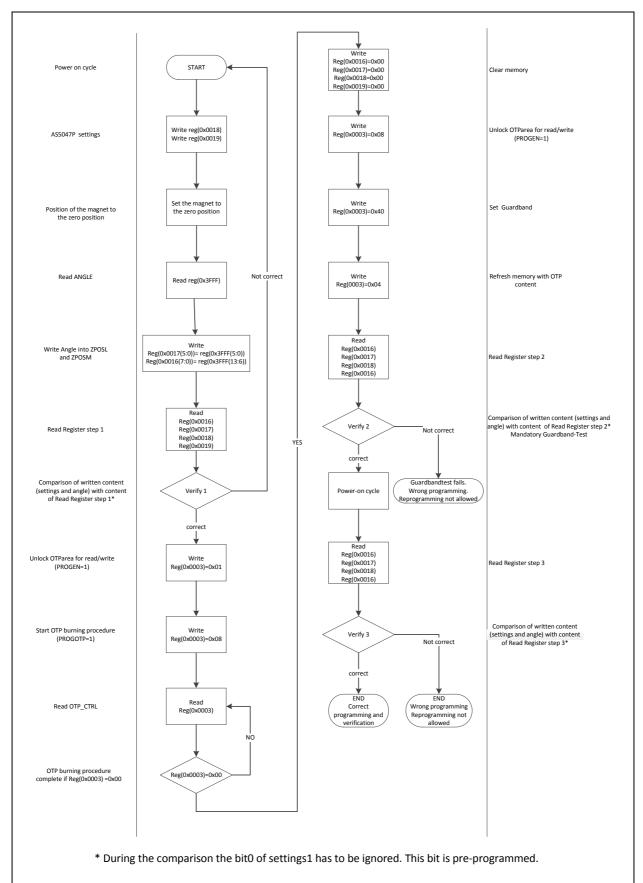


Page 30

Document Feedback

[v1-00] 2014-Oct-31



Figure 40: **Minimum Circuit Diagram for the AS5047P** 

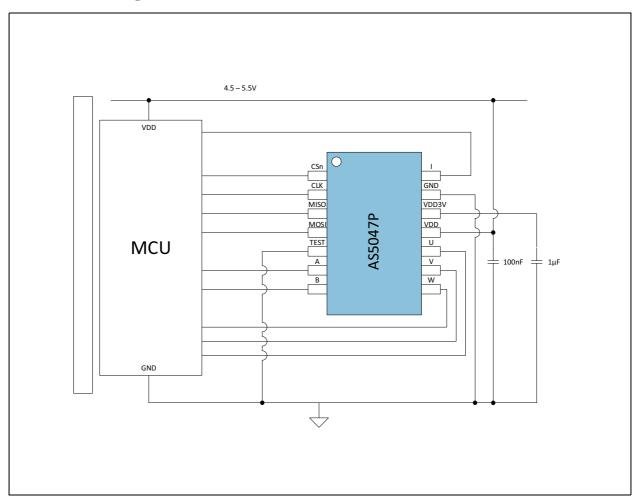

### Note(s) and/or Footnote(s):

1. In terms of EMC and for remote application, additional circuits are necessary.

ams Datasheet Page 31 **Document Feedback** 

0.05

0.20


14



# **Package Drawings & Markings**

The axis of the magnet must be aligned over the center of the package.

Figure 41: Package Outline Drawing

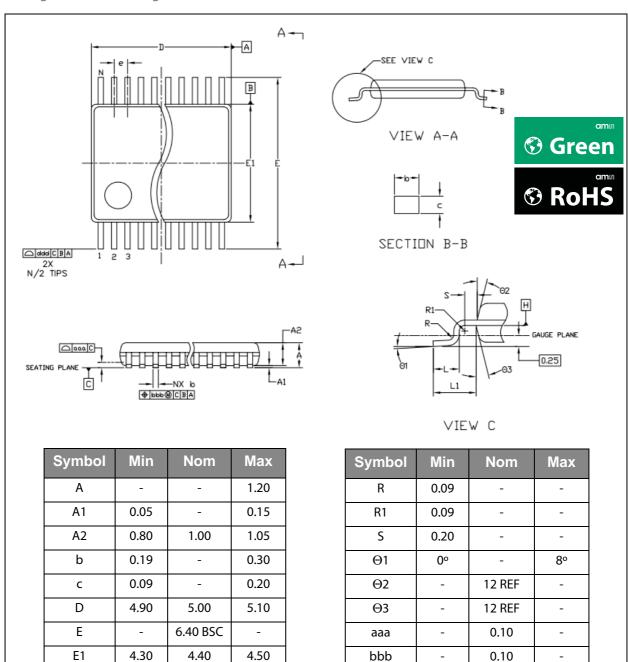

### Note(s) and/or Footnote(s):

e

L

L1

1. Dimensioning and tolerancing conform to ASME Y14.5M - 1994.

0.65 BSC

0.60

1.00 REF

0.75

2. All dimensions are in millimeters. Angles are in degrees.

0.45

3. N is the total number of terminals.

Page 32

Document Feedback

[v1-00] 2014-Oct-31

ccc

ddd


Ν



Figure 42: Packaging Code

YY	ww	M	ZZ	@
Last two digits of the current year	Manufacturing week	Plant identifier	Free choice / traceability code	Sublot identifier

Figure 43: Package Marking

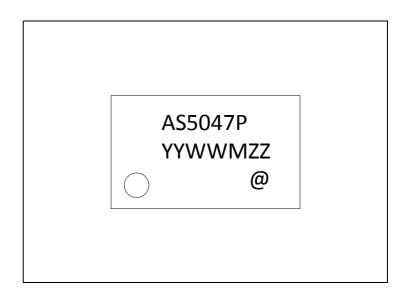


ams Datasheet Page 33
[v1-00] 2014-Oct-31 Document Feedback



## **Mechanical Data**

Figure 44:
Angle Detection by Default (no zero position programmed)

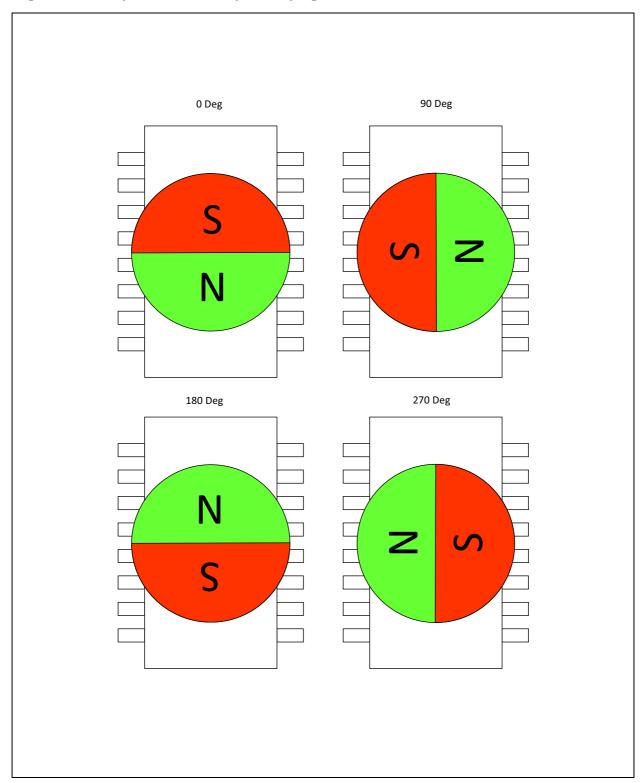

Page 34ams DatasheetDocument Feedback[v1-00] 2014-Oct-31



# **Ordering & Contact Information**

Figure 45: **Ordering Information** 

Ordering Code	Package	Marking	Delivery Form	Delivery Quantity
AS5047P-ATST	TSSOP-14	AS5047P	13" Tape & Reel in dry pack	4500
AS5047P-ATSM	TSSOP-14	AS5047P	7" Tape & Reel in dry pack	500

Buy our products or get free samples online at:

www.ams.com/ICdirect

Technical Support is available at: www.ams.com/Technical-Support

Provide feedback about this document at:

www.ams.com/Document-Feedback

For further information and requests, e-mail us at:

ams\_sales@ams.com

For sales offices, distributors and representatives, please visit: www.ams.com/contact

### Headquarters

ams AG Tobelbaderstrasse 30 8141 Unterpremstaetten Austria, Europe

Tel: +43 (0) 3136 500 0 Website: www.ams.com

ams Datasheet Page 35 **Document Feedback** 



# RoHS Compliant & ams Green Statement

**RoHS:** The term RoHS compliant means that ams AG products fully comply with current RoHS directives. Our semiconductor products do not contain any chemicals for all 6 substance categories, including the requirement that lead not exceed 0.1% by weight in homogeneous materials. Where designed to be soldered at high temperatures, RoHS compliant products are suitable for use in specified lead-free processes.

**ams Green (RoHS compliant and no Sb/Br):** ams Green defines that in addition to RoHS compliance, our products are free of Bromine (Br) and Antimony (Sb) based flame retardants (Br or Sb do not exceed 0.1% by weight in homogeneous material).

Important Information: The information provided in this statement represents ams AG knowledge and belief as of the date that it is provided. ams AG bases its knowledge and belief on information provided by third parties, and makes no representation or warranty as to the accuracy of such information. Efforts are underway to better integrate information from third parties. ams AG has taken and continues to take reasonable steps to provide representative and accurate information but may not have conducted destructive testing or chemical analysis on incoming materials and chemicals. ams AG and ams AG suppliers consider certain information to be proprietary, and thus CAS numbers and other limited information may not be available for release.

Page 36

Document Feedback

[v1-00] 2014-Oct-31



### **Copyrights & Disclaimer**

Copyright ams AG, Tobelbader Strasse 30, 8141 Unterpremstaetten, Austria-Europe. Trademarks Registered. All rights reserved. The material herein may not be reproduced, adapted, merged, translated, stored, or used without the prior written consent of the copyright owner.

Devices sold by ams AG are covered by the warranty and patent indemnification provisions appearing in its General Terms of Trade. ams AG makes no warranty, express, statutory, implied, or by description regarding the information set forth herein. ams AG reserves the right to change specifications and prices at any time and without notice. Therefore, prior to designing this product into a system, it is necessary to check with ams AG for current information. This product is intended for use in commercial applications. Applications requiring extended temperature range, unusual environmental requirements, or high reliability applications, such as military, medical life-support or life-sustaining equipment are specifically not recommended without additional processing by ams AG for each application. This product is provided by ams AG "AS IS" and any express or implied warranties, including, but not limited to the implied warranties of merchantability and fitness for a particular purpose are disclaimed.

ams AG shall not be liable to recipient or any third party for any damages, including but not limited to personal injury, property damage, loss of profits, loss of use, interruption of business or indirect, special, incidental or consequential damages, of any kind, in connection with or arising out of the furnishing, performance or use of the technical data herein. No obligation or liability to recipient or any third party shall arise or flow out of ams AG rendering of technical or other services.

ams Datasheet Page 37 **Document Feedback** 



# **Document Status**

Document Status	Product Status	Definition
Product Preview	Pre-Development	Information in this datasheet is based on product ideas in the planning phase of development. All specifications are design goals without any warranty and are subject to change without notice
Preliminary Datasheet	Pre-Production	Information in this datasheet is based on products in the design, validation or qualification phase of development. The performance and parameters shown in this document are preliminary without any warranty and are subject to change without notice
Datasheet	Production	Information in this datasheet is based on products in ramp-up to full production or full production which conform to specifications in accordance with the terms of ams AG standard warranty as given in the General Terms of Trade
Datasheet (discontinued)	Discontinued	Information in this datasheet is based on products which conform to specifications in accordance with the terms of ams AG standard warranty as given in the General Terms of Trade, but these products have been superseded and should not be used for new designs

Page 38ams DatasheetDocument Feedback[v1-00] 2014-Oct-31



# **Revision Information**

Changes from 0-02 (2014-Oct-30) to current revision 1-00 (2014-Oct-31)	Page
Initial version for release	

### Note(s) and/or Footnote(s):

- 1. Page and figure numbers for the previous version may differ from page and figure numbers in the current revision.
- $2. \ Correction \ of \ typographical \ errors \ is \ not \ explicitly \ mentioned.$

ams Datasheet Page 39 Document Feedback



### **Content Guide**

### 1 General Description

- 1 Key Benefits & Features
- 2 Applications
- 2 Block Diagram
- 3 Pin Assignment
- 5 Absolute Maximum Ratings
- **6 Electrical Characteristics**
- 7 Magnetic Characteristics
- 7 System Characteristics
- 8 Timing Characteristics

### 9 Detailed Description

- 9 Power Management
- 10 Dynamic Angle Error Compensation
- 11 SPI Interface (slave)
- 11 SPI Timing
- 12 SPI Transaction
- 15 Volatile Registers
- 17 Non-Volatile Registers (OTP)
- 20 ABI Incremental Interface
- 22 UVW Commutation Interface
- 23 PWM
- 24 Hysteresis
- 24 Automatic Gain Control (AGC) and CORDIC Magnitude
- 24 Diagnostic Features
- 25 OCF error / COF error
- 25 MAGH error /MAGL error

### 26 Application Information

- 26 Burn and Verification of the OTP Memory
- 32 Package Drawings & Markings
- 34 Mechanical Data
- 35 Ordering & Contact Information
- 36 RoHS Compliant & ams Green Statement
- 37 Copyrights & Disclaimer
- 38 Document Status
- 39 Revision Information

Page 40

Document Feedback

[v1-00] 2014-Oct-31