


Square Conti Energy: Cauchy Stress Components

Simple shear

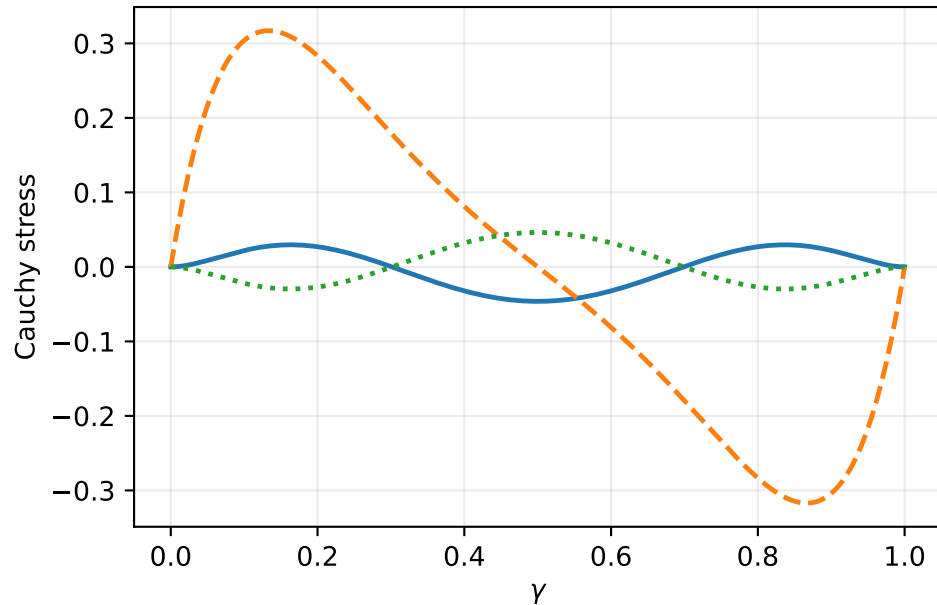

Pure shear

