


WEBENCH® Design Report

VinMin = 8.0V VinMax = 13.0V Vout = 3.3V Iout = 1.5A Device = LMZ14202TZ-ADJ/NOPB Topology = Buck Created = 2020-02-09 23:57:54.206 BOM Cost = \$8.29 BOM Count = 10 Total Pd = 0.75W


Design: 2 LMZ14202TZ-ADJ/NOPB LMZ14202TZ-ADJ/NOPB 8V-13V to 3.30V @ 1.5A


> Vout = 3.3V lout = 1.5A

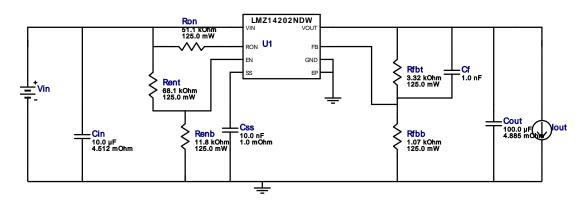



#### **Electrical BOM**


Name	Manufacturer	Part Number	Properties	Qty	Price	Footprint
Cf	MuRata	GRM1555C1H102JA01J Series= C0G/NP0	Cap= 1.0 nF VDC= 50.0 V IRMS= 0.0 A	1	\$0.01	0402 3 mm <sup>2</sup>
Cin	MuRata	GRM31CR61E106KA12L Series= X5R	Cap= 10.0 uF ESR= 4.512 mOhm VDC= 25.0 V IRMS= 2.447 A	1	\$0.12	1206_190 11 mm <sup>2</sup>
Cout	MuRata	GRM31CR60J107ME39L Series= X5R	Cap= 100.0 uF ESR= 4.885 mOhm VDC= 6.3 V IRMS= 4.4118 A	1	\$0.34	1206_190 11 mm <sup>2</sup>
Css	MuRata	GRM216R71H103KA01D Series= X7R	Cap= 10.0 nF ESR= 1.0 mOhm VDC= 50.0 V IRMS= 0.0 A	1	\$0.01	0805 7 mm <sup>2</sup>
Renb	Vishay-Dale	CRCW080511K8FKEA Series= CRCWe3	Res= 11.8 kOhm Power= 125.0 mW Tolerance= 1.0%	1	\$0.01	0805 7 mm <sup>2</sup>
Rent	Vishay-Dale	CRCW080568K1FKEA Series= CRCWe3	Res= 68.1 kOhm Power= 125.0 mW Tolerance= 1.0%	1	\$0.01	0805 7 mm <sup>2</sup>
Rfbb	Panasonic	ERJ-6ENF1071V Series= ERJ-6E	Res= 1.07 kOhm Power= 125.0 mW Tolerance= 1.0%	1	\$0.01	0805 7 mm <sup>2</sup>
Rfbt	Vishay-Dale	CRCW08053K32FKEA Series= CRCWe3	Res= 3.32 kOhm Power= 125.0 mW Tolerance= 1.0%	1	\$0.01	0805 7 mm <sup>2</sup>
Ron	Panasonic	ERJ-6ENF5112V Series= ERJ-6E	Res= 51.1 kOhm Power= 125.0 mW Tolerance= 1.0%	1	\$0.01	0805 7 mm <sup>2</sup>
U1	Texas Instruments	LMZ14202TZ-ADJ/NOPB	Switcher	1	\$7.76	NDW0007A 192 mm²

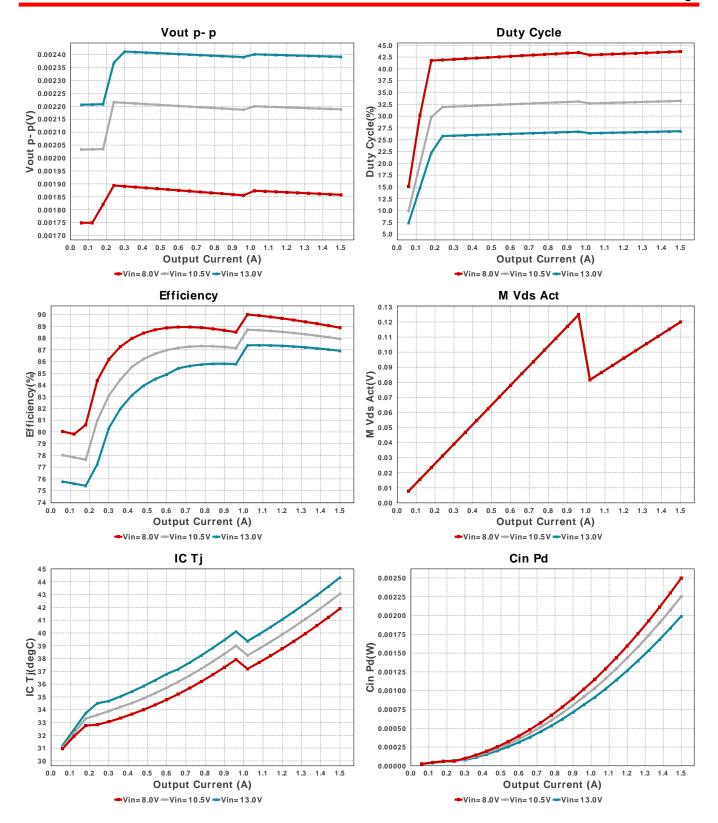

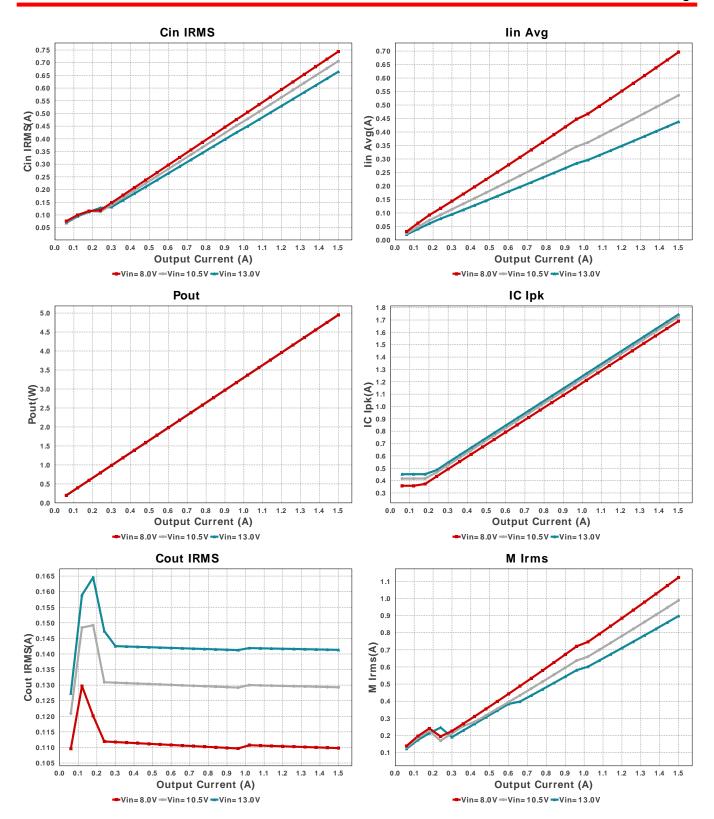

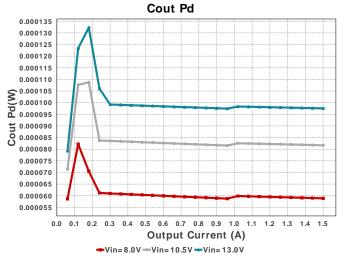

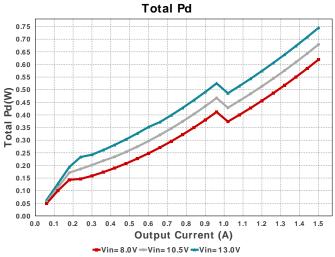

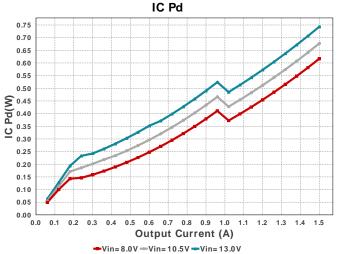

### **Operating Values**

#	Name	Value	Category	Description
1.	Cin IRMS	664.419 mA	Capacitor	Input capacitor RMS ripple current
2.	Cin Pd	1.992 mW	Capacitor	Input capacitor power dissipation
3.	Cout IRMS	141.317 mA	Capacitor	Output capacitor RMS ripple current
4.	Cout Pd	97.556 μW	Capacitor	Output capacitor power dissipation
5.	IC lpk	1.745 A	IC	Peak switch current in IC
6.	IC Pd	743.14 mW	IC	IC power dissipation
7.	IC Tj	44.343 degC	IC	IC junction temperature
8.	IC Tolerance	20.0 mV	IC	IC Feedback Tolerance
9.	ICThetaJA	19.3 degC/W	IC	IC junction-to-ambient thermal resistance
10.	lin Avg	438.09 mA	IC	Average input current
11.	M1 Irms	897.406 mA	Mosfet	Q lavg
12.	M Vds Act	120.0 mV	Mosfet	Voltage drop across the MosFET
13.	Cin Pd	1.992 mW	Power	Input capacitor power dissipation
14.	Cout Pd	97.556 μW	Power	Output capacitor power dissipation
15.	IC Pd	743.14 mW	Power	IC power dissipation
16.	Total Pd	745.213 mW	Power	Total Power Dissipation
17.	BOM Count	10	System	Total Design BOM count
			Information	
18.	Duty Cycle	26.805 %	System	Duty cycle
			Information	
19.	Efficiency	86.915 %	System	Steady state efficiency
			Information	
20.	FootPrint	257.0 mm <sup>2</sup>	System	Total Foot Print Area of BOM components
			Information	
21.	Frequency	496.764 kHz	System	Switching frequency
			Information	
22.	lout	1.5 A	System	lout operating point
			Information	
23.	Mode	CCM	System	Conduction Mode
			Information	
24.	Pout	4.95 W	System	Total output power
			Information	

#	Name	Value	Category	Description
25.	Total BOM	\$8.29	System Information	Total BOM Cost
26.	Vin	13.0 V	System Information	Vin operating point
27.	Vout	3.3 V	System Information	Operational Output Voltage
28.	Vout Actual	3.282 V	System Information	Vout Actual calculated based on selected voltage divider resistors
29.	Vout Tolerance	4.066 %	System Information	Vout Tolerance based on IC Tolerance (no load) and voltage divider resistors if applicable
30.	Vout p-p	2.391 mV	System Information	Peak-to-peak output ripple voltage

## **Design Inputs**

Name	Value	Description	
lout	1.5	Maximum Output Current	
VinMax	13.0	Maximum input voltage	
VinMin	8.0	Minimum input voltage	
Vout	3.3	Output Voltage	
base_pn	LMZ14202	Base Product Number	
source	DC	Input Source Type	
Та	30.0	Ambient temperature	

# WEBENCH® Assembly

#### Component Testing

Some published data on components in datasheets such as Capacitor ESR and Inductor DC resistance is based on conservative values that will guarantee that the components always exceed the specification. For design purposes it is usually better to work with typical values. Since this data is not always available it is a good practice to measure the Capacitance and ESR values of Cin and Cout, and the inductance and DC resistance of L1 before assembly of the board. Any large discrepancies in values should be electrically simulated in WEBENCH to check for instabilities and thermally simulated in WebTHERM to make sure critical temperatures are not exceeded.

#### Soldering Component to Board


If board assembly is done in house it is best to tack down one terminal of a component on the board then solder the other terminal. For surface mount parts with large tabs, such as the DPAK, the tab on the back of the package should be pre-tinned with solder, then tacked into place by one of the pins. To solder the tab town to the board place the iron down on the board while resting against the tab, heating both surfaces simultaneously. Apply light pressure to the top of the plastic case until the solder flows around the part and the part is flush with the PCB. If the solder is not flowing around the board you may need a higher wattage iron (generally 25W to 30W is enough).

#### Initial Startup of Circuit

It is best to initially power up the board by setting the input supply voltage to the lowest operating input voltage 8.0V and set the input supply's current limit to zero. With the input supply off connect up the input supply to Vin and GND. Connect a digital volt meter and a load if needed to set the minimum lout of the design from Vout and GND. Turn on the input supply and slowly turn up the current limit on the input supply. If the voltage starts to rise on the input supply continue increasing the input supply current limit while watching the output voltage. If the current increases on the input supply, but the voltage remains near zero, then there may be a short or a component misplaced on the board. Power down the board and visually inspect for solder bridges and recheck the diode and capacitor polarities. Once the power supply circuit is operational then more extensive testing may include full load testing, transient load and line tests to compare with simulation results.

#### Load Testing

The setup is the same as the initial startup, except that an additional digital voltmeter is connected between Vin and GND, a load is connected between Vout and GND and a current meter is connected in series between Vout and the load. The load must be able to handle at least rated output power + 50% (7.5 watts for this design). Ideally the load is supplied in the form of a variable load test unit. It can also be done in the form of suitably large power resistors. When using an oscilloscope to measure waveforms on the prototype board, the ground leads of the oscilloscope probes should be as short as possible and the area of the loop formed by the ground lead should be kept to a minimum. This will help reduce ground lead inductance and eliminate EMI noise that is not actually present in the circuit.

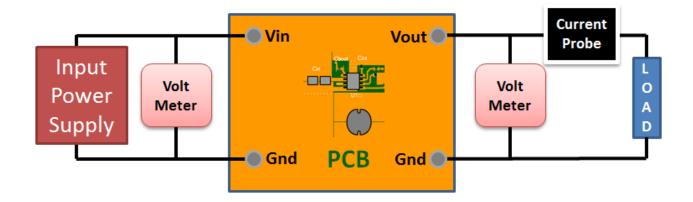


# **WEBENCH**<sup>®</sup> Electrical Simulation Report

Design Id = 2


 $sim_id = 2$ 

Simulation Type = Load Transient

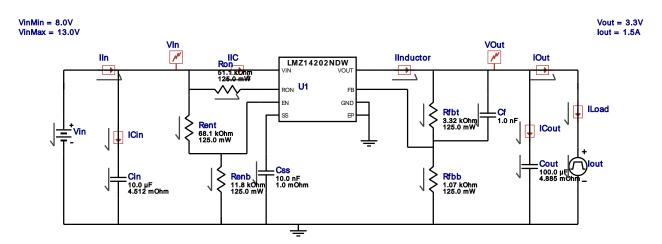

## Simulation Parameters

#	# Name Parameter Name		Description	Values
1.	lout	signal_type	Signal Type	PULSE
		V1	Initial Current	1.5 A
		V2	Peak Current	0.15 A
		Td	Initial Delay Time	100u Sec
		Tr	Rise Time	5u Sec
		Tf	Fall Time	5u Sec
		Pw	Pulse Width	850u Sec

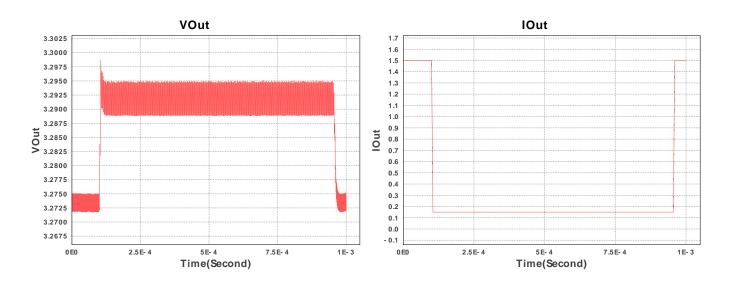

#### Design Assistance

- 1. Master key: 81D8CA41A7DE71F1[v1]
- 2. LMZ14202 Product Folder: http://www.ti.com/product/LMZ14202: contains the data sheet and other resources.

#### Important Notice and Disclaimer

TI provides technical and reliability data (including datasheets), design resources (including reference designs), application or other design advice, web tools, safety information, and other resources AS IS and with all faults, and disclaims all warranties. These resources are intended for skilled developers designing with TI products. You are solely responsible for (1) selecting the appropriate TI products for your application, (2) designing, validating and testing your application, and (3) ensuring your application meets applicable standards, and any other safety, security, or other requirements.

These resources are subject to change without notice. TI grants you permission to use these resources only for development of an application that uses the TI products described in the resource. Other reproduction and display of these resources is prohibited. No license is granted to any other TI intellectual property right or to any third party intellectual property right. TI disclaims responsibility for, and you will fully indemnify TI and its representatives against, any claims, damages, costs, losses, and liabilities arising out of your use of these resources.

Providing these resources does not expand or otherwise alter TI's applicable Terms of Sale or other applicable terms available either on ti.com or provided in conjunction with TI products.