


Building block, 75 V, Rg_on 2 ohm / Rg_off 0 ohm, Q3D parasitics (left and right FETs overlap)

QL turn-off at 139 A

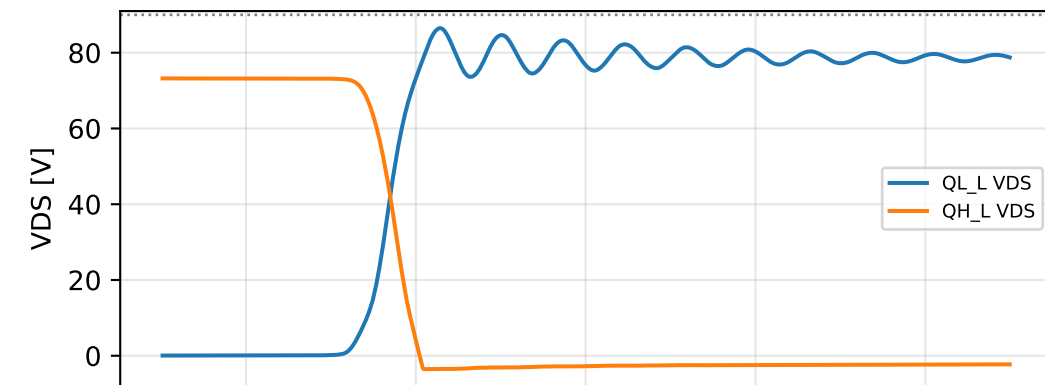

QL turn-on at 139 A

