## 

# Objective:

Based on the previous exercises, the objective here is to use existing fluid dynamics solvers in OpenFOAM® for certain problems. You will do hands-on exercise to build simulation cases, i.e., prepare a mesh, setup boundary conditions, specify initial conditions, and run the simulations. You will also do some variations as you may encounter in practice.

The requirement of this exercise is that you are comfortable with Linux command operations and familiar with OpenFOAM<sup>®</sup> simulation process.

The full cases are provided as reference. You should do it by yourself.

# 1 Exercises:

# 1.1 Run the provided "Flow over a step" case

You are provided a simulation case as in the lecture. This case is called "flow over a step". It is a 3D case with RANS turbulence model. This is a very simple case. However, it contains almost everything for a typical OpenFOAM® simulation.

Let's first unzip the case and go to the directory (the following is just an example, you can put the case wherever you want):

```
$ run
$ cd tutorial/
$ mkdir CE597D
$ mv path/to/flow_over_step.tgz ./
$ tar czvf flow_over_step.tgz
$ cd flow_over_step
$ ls
```

You will find there is a directory named "RAS", corresponding to RANS modeling. Type the following to go to the 3D RANS case,

```
$ cd RAS
$ cd 3D
$ ls
```

In this case, a m4 script is used to automatically generate the blockMeshDict file. You don't have to use m4. However, it will save you a lot of time when you want to change the mesh definition. You can have a look at the m4 script by the following

\$ cd constant/polyMesh
\$ more blockMeshDict.m4

This m4 definition file corresponds to the hand-drawing sketch (Figure 1). Now you need to use this m4 file to generate the mesh,

```
$ m4 blockMeshDict.m4 > blockMeshDict
$ cd ../../ (Note: goes back to the case root directory)
$ blockMesh
```

This will generate the mesh needed. As a good practice, it is better to examine the mesh after you generate it. You can use ParaView to do this,

In ParaView, just show the meshes by choose "Solid Color" and "Wireframe" as in Figure 2. You can also choose to show different regions of the mesh. I usually turn off everything and turn on each of the boundary patches to see whether they are defined correctly.

You can also use the checkMesh tool to verify everything is ok with the mesh by typing

#### \$ checkMesh

Now, you can run the simulation since everything else has been set up,

#### \$ pisoFoam

Depending on the configuration of your computer, it might take a while to finish the run. When it is done, you are ready to visualize the results by using ParaView. Even when it is still running, you can examine the intermediate results since we specified output every 10 time steps.

```
$ touch case.foam
$ paraview case.foam&
```

Play around with the ParaView interface. The icons and buttons are straightforward. Try to accomplish the following tasks:

- Plot a slice of the result through the center of channel and show the velocity magnitude (as in Figure 3).
- Plot velocity vector on the center slice and adjust your view to be front. Zoom in to

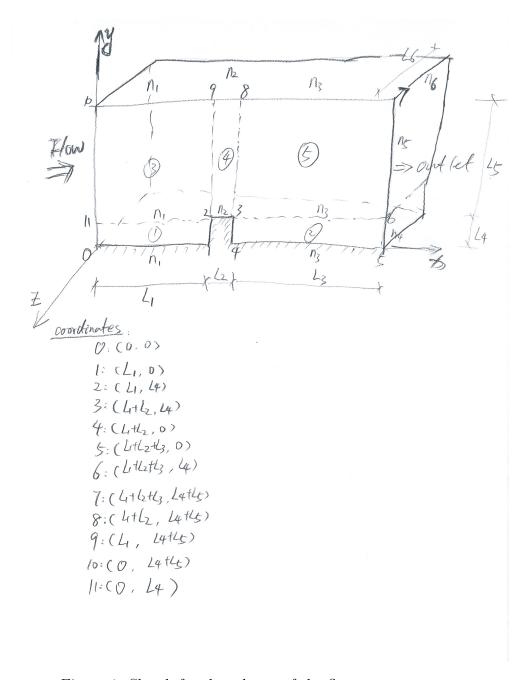


Figure 1: Sketch for the scheme of the flow over step case.

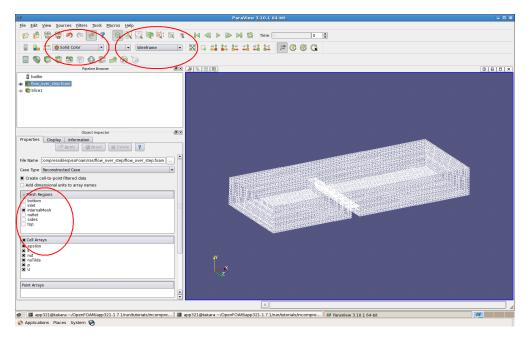


Figure 2: Visualization of mesh for the flow over step case in ParaView

see the recirculation zone behind the step (as in Figure 4).

• Generate an animation as you saw in the lecture. You need to go the menu File->Save Animation.

There are other things worth exploring, such as generation of streamlines, contour surface (which is useful for example to plot free surface), clip, threshold, and other post-processing filters provided by ParaView. For a list of available filters, go to menu Filters.

ParaView is free and open source. It is the quickest way to see your result from OpenFOAM®. However, I found the visualization effect is less appealing comparing to other professional software. If you prefer, you can export the simulation results to the format of the visualization software of your choice.

### 1.1.1 Refine mesh for the "Flow over a step" case

Often times, you will run a case on a coarse mesh first to check whether everything is setup correctly. To increase the accuracy of your result, and sometime more importantly to reveal the real physics, you need to refine your mesh. OpenFOAM<sup>®</sup> is a finite volume method code based on unstructured mesh. In general, the maximum accuracy is second order (proportional to the mesh size). So refining the mesh will reduce the numerical error accordingly.

For this case, we want to reduce the cell size to 1/8 of the previous one. To do that, you can

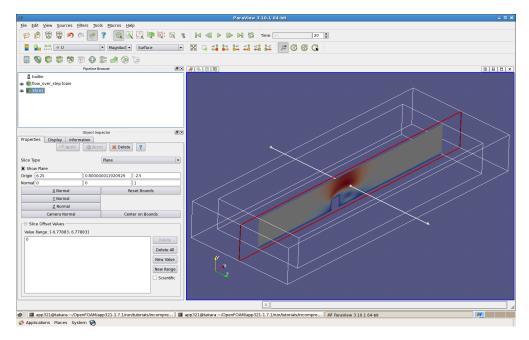


Figure 3: Velocity contour plot on the center slice of the flow over step case in ParaView

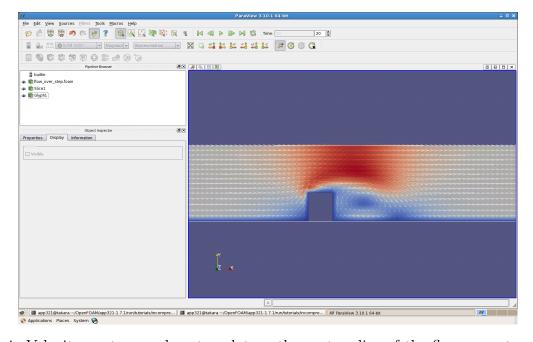


Figure 4: Velocity contour and vector plot on the center slice of the flow over step case in ParaView

change the blockMeshDict directly or modify the m4 script provided. If you want change the blockMeshDict, you need to edit the block definition part for each of the block. I will show how to change the m4 script file. It is very simple. First, clean the simulation by typing

#### \$ ./Allclean

This will remove all simulation result time directories and the mesh. There is another script called CleanTimeDir which will only clean the result time directories but not the mesh.

Now edit the m4 script file blockMeshDict.m4 using the text editor of your choice. Find the line saying define(refine, 1) and change it to define(refine, 2). This will double the cell numbers all three directions. The resulting cell size will be  $1/2^3 = 1/8$  of the original one. Don't be too ambitious to refine the mesh as it could get very large quickly.

Follow the steps as you did in the previous exercise to: (a) generate the mesh, (b) run the simulation, and (c) visualize the result. And compare the results with two different resolutions.

There are a few things to note when you refine the mesh:

- The simulation will take longer.
- You might need to reduce the time step size accordingly to lower the Courant number. A Courant number less than 0.5 is recommended though some of the temporal discretization schemes do not put any restriction on time step size. In addition, larger time step size  $\Delta t$  will increase the temporal error. The time step size can be modified in the controlDict file under the system directory. You can monitor the Courant number from the output of the simulation.

### 1.1.2 Run the "Flow over a step" case longer

From the animation in the lecture, you may notice that the recirculation zone behind the step is not fully developed. The reason is that we only run the case for 10 seconds. To see a fully developed flow, you need to run longer.

You don't need to run everything from time "0" again. In OpenFOAM®, you can continue the simulation from where you stopped last time (a.k.a., hot start). In fact, you could start from any intermediate time as long as the intermediate results have been written into a time directory.

To extend the run, modify the controlDict file under the system directory. The entries in this file are self-explaining. Assume you have finished your previous run for 10 seconds. You can instruct OpenFOAM® to continue the run by changing startTime to 10. You also need to change the endTime to say 40 so we will run additional 30 seconds.

Compare your results at 10s and 40s to see whether it is fully developed. Otherwise, you need to continue the simulation.

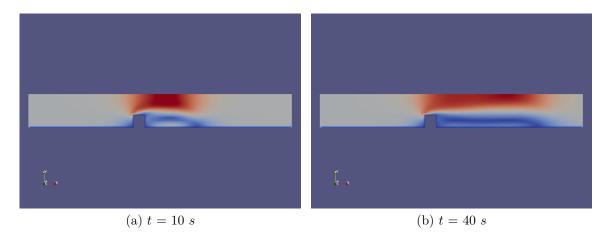


Figure 5: Comparison of velocity magnitude at time 10 s and 40 s for the flow over step case.

### 1.1.3 Run the "Flow over a step" case as a 2D case

If the river channel is straight and very wide, you can simplify it as a 2D case. Here we simulate the flow in the vertical plane (streamwise and vertical directions). Note this is different from the other sense of "2D" model which uses depth-averaged shallow water equation. In shallow water equation model, the plane is horizontal (streamwise and across the river) and pressure is hydrostatic in the vertical direction.

In OpenFOAM®, the solvers do not know whether your simulation case is 2D or 3D. You specify the dimensionality through boundary conditions. For 2D case, you need to use empty boundary condition for the two patches in the front and back. Referring to the hand drawing sketch, the two patches perpendicular to the z axis needs to be specified as empty. In addition, there can only have one cell across the z direction.

Accordingly, we need to do the following modifications based on our 3D case.

- First, you need to change the definition of the mesh. You can change the blockMeshDict file directly. Or you can change the m4 script file. For example, if you change the m4 script, you need to edit the blockMeshDict.m4 file and find the line defines n6 (number of cells along z direction). Change it to define(n6, 1).
- Then, you need to change all sides boundary conditions for the variable files in the initial condition directory "0". Change the sides boundary condition type to empty.

Sometime it is also beneficial to check the boundary file in directory constant/polyMesh.

You also need to change the boundary type of patch sides to empty. If this file exists before you use blockMesh to generate the mesh, OpenFOAM® assumes that it is your intent to keep whatever boundary conditions you have there. So it is your responsibility to ensure consistency. If not, OpenFOAM® will complain and abort the simulation.

The 2D case has been provided. If you are still in the 3D case directory, you can go up one level to the 2D directory and have a look,

- \$ cd .. \$ cd 2D \$ ls
- You can run the case by
- \$ blockMesh
- \$ pisoFoam

You can compare results from 3D and 2D simulations as in the following figure. It seems that the difference is very minor.

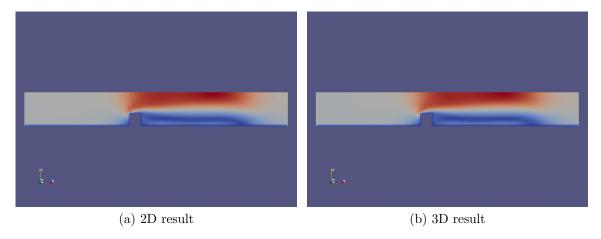


Figure 6: Comparison between 2D and 3D results for the flow over step case.

#### Note the following:

- 2D simplification assumes no variation across the river. In reality, it is usually not the case.
- If you are interested in things like shear stress on the river banks, you need to add the third dimension.

# 1.2 A more complicated case - flow in meander river bends

This is a further example, and probably more meaningful one, to show how to use OpenFOAM® to simulate flows in rivers. A section of an artificial meander river with two bends is modeled. You can go to the case directory by

```
$ run
$ cd tutorials/CE597D
$ mv path/to/meander_river.tgz ./
$ tar xzvf meander_river.tgz
$ cd meander_river
$ 1s
```

The river geometry is shown in Figure 7 and the sketch for blockMesh is in Figure 8.

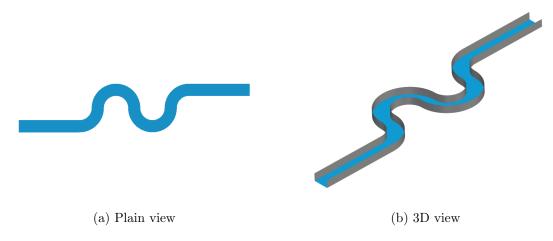


Figure 7: Plane view and 3D view of the geometry of the meander channel with two bends.

The tool blockMesh is used to generate the mesh. To automate the meshing process, I also used a m4 script to generate the blockMeshDict file. The definitions for the dimensions are plotted in a companion PDF file named scheme\_meander\_river\_bends.pdf. The case provided only generates a moderately sized mesh. In reality, you probably need much higher resolution to reveal important physics, such as secondary flow. In addition, the blockMesh tool needs to divide the domain into nice blocks, which might be not so convenient or even possible for real rivers. For real rivers with more complicated bathymetry, you probably need a professional meshing software.

To simplify things, we do not consider the free surface. Instead, a shear-free rigid lid is put on the top. At the inlet into the bends, a uniform velocity of  $0.2 \ m/s$  is specified. At the downstream end (the outlet), a far field is assumed. For the turbulence, the k- $\epsilon$  model is

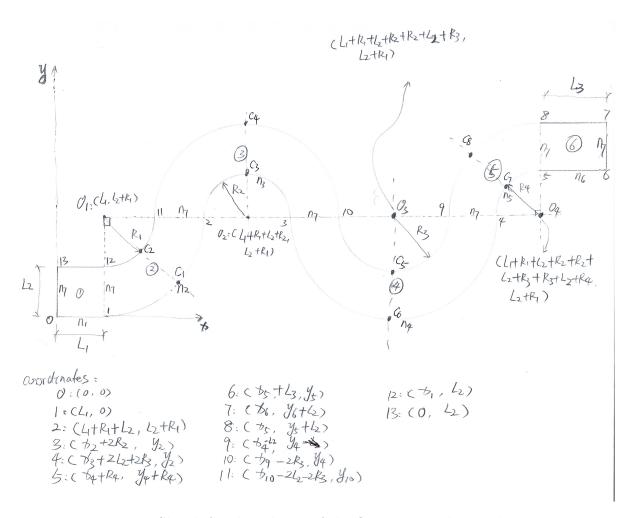


Figure 8: Sketch for the scheme of the flow in meander bends .

used.

You should follow the general steps of performing a simulation as you did in the previous examples.

- First, you need to write the m4 script according to the provided sketch in the PDF file. Of course, a m4 script has been provided for your reference. However, it is better for your learning if you do it by yourself.
- Then you need to use the m4 script to generate the blockMeshDict file.
- Then use the blockMesh tool to generate the mesh.
- Now you should run the simulation using the pisoFoam solver.

I will not show you the exact commands. Note this example is for demonstration purpose only. The mesh is very coarse. It does not necessary fully capture the real flow phenomenon.

When the simulation is finished, you should be able to visualize the results and do some post processing. For example, try to visualize the flow patterns by using streamlines and cross sections as in Figure 9.

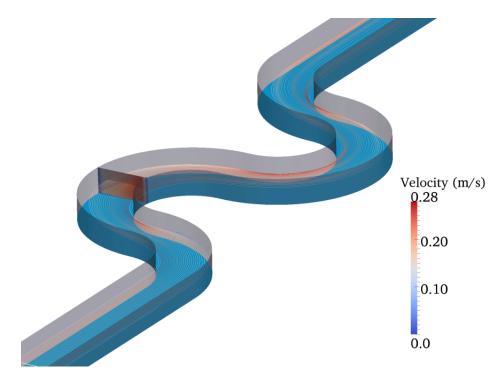


Figure 9: Simulation results showing the streamlines and one cross section in the first bend.

In river hydraulics, you are probably interested in the shear stresses along the banks and the channel bottom because they are the driving forces for sediment transport and therefore the stability of the channel. You can easily get these results by using the tool wallShearStress,

#### \$ wallShearStress -time 40

The option time 40 specifies the particular time that you want to calculate the wall shear stress. If not specified, it will calculate for all time steps. Afterwards, you can examine the content inside directory "40" and there should be a newly created field file named wallShearStress. Have a look at the content of this file. You can also plot the color contour of the wall shear stresses. To do that, you need to make sure to load the results for the boundaries. As in Figure 5, you need to specify the bottom and sides as the Mesh Regions to be loaded.

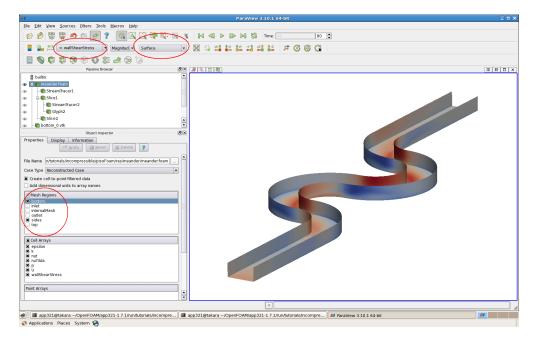


Figure 10: Load and show the wall shear stress on the bottom and the two banks.

The other way to do this is to convert the results into VTK (Visualization Toolkit) format which is widely supported (including ParaView). You could use the generic tool called "formToVTK",

#### \$ foamToVTK -time 40

There are other options such as specify which field variable to be converted. For a complete list of options, you can type foamToVTK -help. In ParaView, you can directly load the generated VTK files from the menu File->Open.