

Set to default

Enables you to reset the *IDN and *OPT strings in user defined mode, see "[Mode](#)" on page 111 .

The default strings vary depending on the selected emulation mode ([Language](#))

Remote command:

`:SYSTem:IDENTification:PRESet` on page 450

IDN String

Indicates the identification string of the instrument when queried with the common command *IDN?.

To assign a user defined identification string, select [Mode](#) "User defined".

Remote command:

`*IDN?` on page 285

`:SYSTem:IRESponse` on page 450 (user defined mode)

OPT String

Indicates the option string of the instrument as queried with the common command *OPT?.

In "User defined" (see [Mode](#) **IDN String**), you can create a user defined option string in addition to the automatically created one.

Remote command:

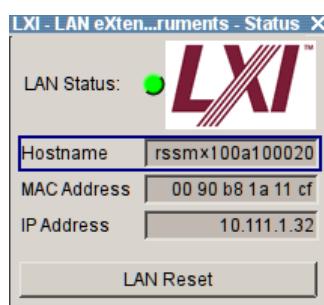
`*OPT?` on page 285

`:SYSTem:ORESponse` on page 451

4.2.3.12 LXI Status

The "LXI - LAN eXtensions for Instruments - Status..." dialog displays the settings and status of the LAN and allows to reset the LAN connection.

For more information on LXI, see [Chapter 3.1.17, "LXI Configuration"](#), on page 39.

**LAN Status**

The LED indicates the LXI status.

"green" normal operation

"green (flashing)" device identification

"red" LAN fault