

Reduce a Overlay

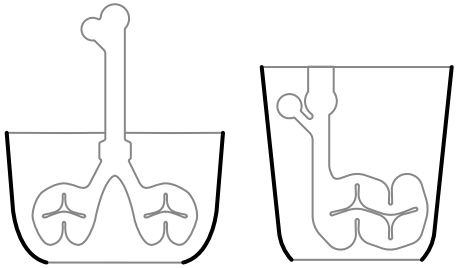

This procedure works for both Overlay TT and Overlay TF. The cutting line is shown in black, and the flat pattern should resemble these diagrams


Equipement required :




Sewing machine
Zigzag or overlock/serger preferred



Elastic thread
polyester recommended

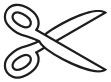


Fabric scissors




Measuring tape

1. Measure

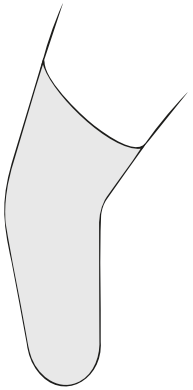


-Measure the patient's limb to determine how much width needs to be removed.
-Mark the overlay with a washable fabric pen along the areas to reduce.
-Double-check measurements to ensure symmetry. On each side of the flatlock stitching.

2. Cut Overlay

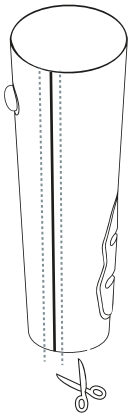

-Cut the lycra sleeve based on your measurements, you can taper the bottom if you want.

3. Stitch

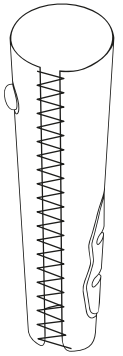

-Attach the overlay edges back together using a zigzag or overlock stitch.
-Ensure seams are secure and the bottom edge won't fray.
-Check the fit on the patient and make minor adjustments if needed.

ⓘ Adjustment recommendations :

Lycra stretches significantly: Small adjustments have a large impact on fit
Use appropriate stitching: Zigzag or overlock with elastic thread only
Adjust progressively: Avoid aggressive cutting or excessive material addition
Match materials: Use similar stretch and thickness when adding fabric
Avoid heat: May damage fabric and air system
Protect air system: Do not alter near valves, pump, or bladder
Verify after adjustment: Check fit, pressure, and air retention during use

⚠ Important notice :

Any modification (cutting, sewing, adding material) is performed at the clinician's own risk. Once altered, the Overlay no longer meets Ethnocare specifications.
Warranty is void and Ethnocare assumes no liability for performance, durability, or patient outcomes after modification.