
Enlarge a Overlay

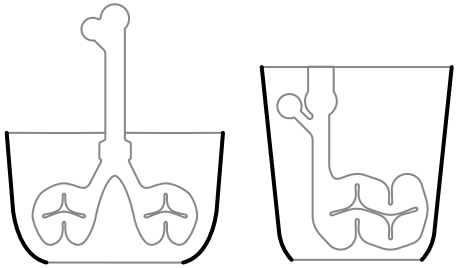


This procedure works for both Overlay TT and Overlay TF. The cutting line is shown in black, and the flat pattern should resemble these diagrams

Equipement required :



Stretch fabric
Similar elasticity and thickness as the original Overlay




Sewing machine
Zigzag or overlock/serger preferred



Elastic thread
polyester recommended




Measuring tape




Fabric scissors

1. Measure

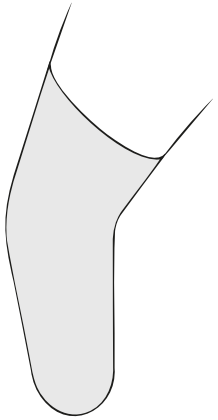


-Fit the Overlay on the patient and identify tight zones
-Measure the additional circumference

2. Cut Overlay

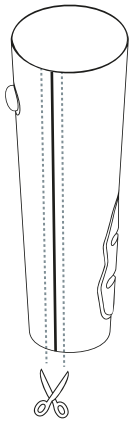


-Locate the vertical overlock seam
-Carefully cut along the seam to separate the fabric cylinder

3. Cut Extra Piece

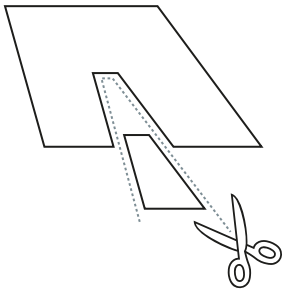

-Cut a lycra panel matching: Required width and Overlay length
-Ensure matching stretch direction and similar elasticity

4. Stitch

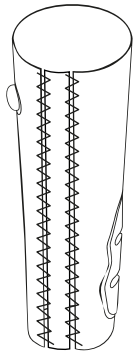

-Stitch panel to both sides using stretch stitch (zigzag/overlock)
-Ensure seams are secure and uniform
-Finish edges properly to prevent fraying (especially distal end)

ⓘ Adjustment recommendations :

Lycra stretches significantly: Small adjustments have a large impact on fit
Use appropriate stitching: Zigzag or overlock with elastic thread only
Adjust progressively: Avoid aggressive cutting or excessive material addition
Match materials: Use similar stretch and thickness when adding fabric
Avoid heat: May damage fabric and air system
Protect air system: Do not alter near valves, pump, or bladder
Verify after adjustment: Check fit, pressure, and air retention during use

⚠ Important notice :

Any modification (cutting, sewing, adding material) is performed at the clinician's own risk. Once altered, the Overlay no longer meets Ethnocare specifications.
Warranty is void and Ethnocare assumes no liability for performance, durability, or patient outcomes after modification.