

## **Technical Service Information**

## FORD C-3 FRONT SEAL POP-OUT

**COMPLAINT:** C-3 font seal pops out after overhaul or seal replacement.

CAUSE: One cause can be the use of a a4ld front seal Used in place of the c-3 front seal. See figure 1

(A4LD seal)note that the lip of The seal protrudes past the metal base of the Seal housing. When. The seal is installed the Rubber portion of the seal restricts the drain Passage

behind the seal. In figure 1 (C-3 seal) The seal lip is below the metal base of the seal.

**CORRECTION:** Install a C-3 front seal (D4ZZ-7AZ48A) in C-3 transmissions.

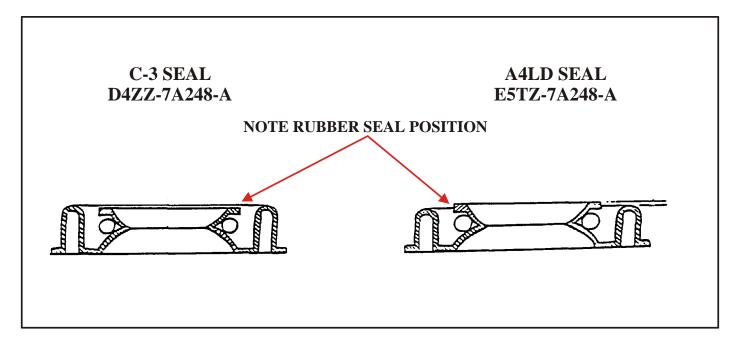


Figure 1