

Technical Service Information

FORD AXOD-E (AX4S) NO FORWARD MOVEMENT AFTER PULLING TO STOP

COMPLAINT: After driving the vehicle fast enough to achieve fourth gear, the vehicle will no longer move

forward, after coming to a stop. You will still have reverse.

CAUSE: The cause may be, the 2-3 servo regulator valve in the valve body stuck, which will block

servo apply oil to the 1-2 band (See Figure 1).

CORRECTION: Free the 2-3 servo regulator valve in the valve body from whatever contamination or debris

that is keeping the valve stuck (See Figure 1).



Technical Service Information

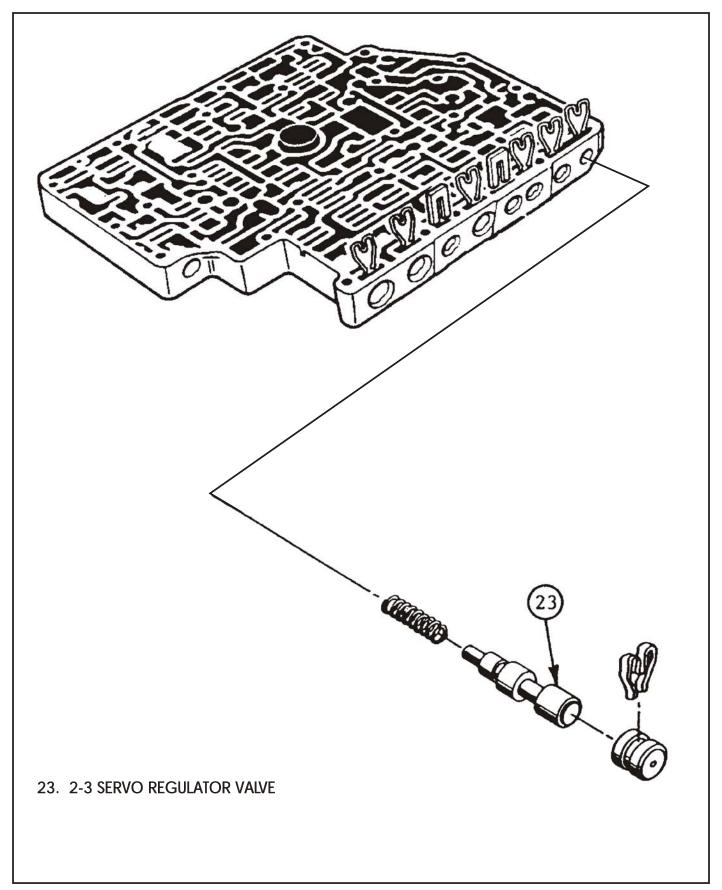


Figure 1