

Technical Service Information

FORD ATX

NO UPSHIFT

COMPLAINT: Transmission does not shift to second or third gear. Valve body and governor good.

CAUSE: Splines for the intermediate shaft in the converter are stripped, or bad gear set in converter,

preventing torque transfer to the intermediate drum.

CORRECTION: Replace the torque converter.

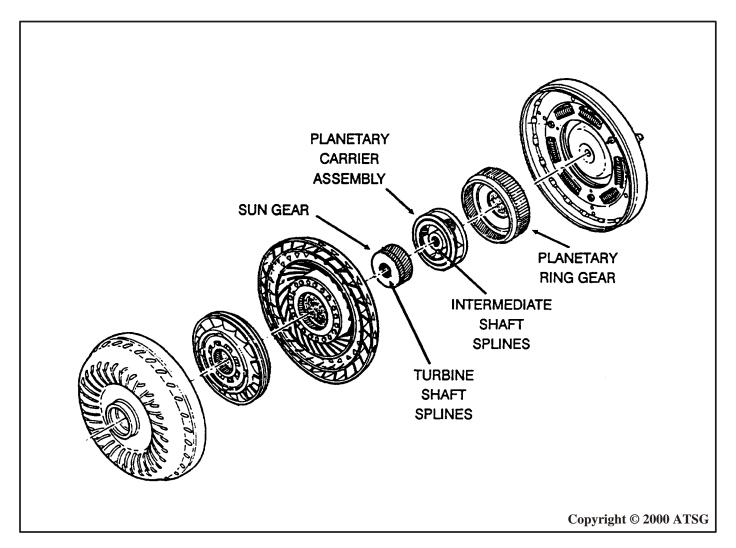


Figure 1