



BELGIUM MEDIUM VOLTAGE SINGLE LINE DIAGRAM

Ciner Glass Distribution Building

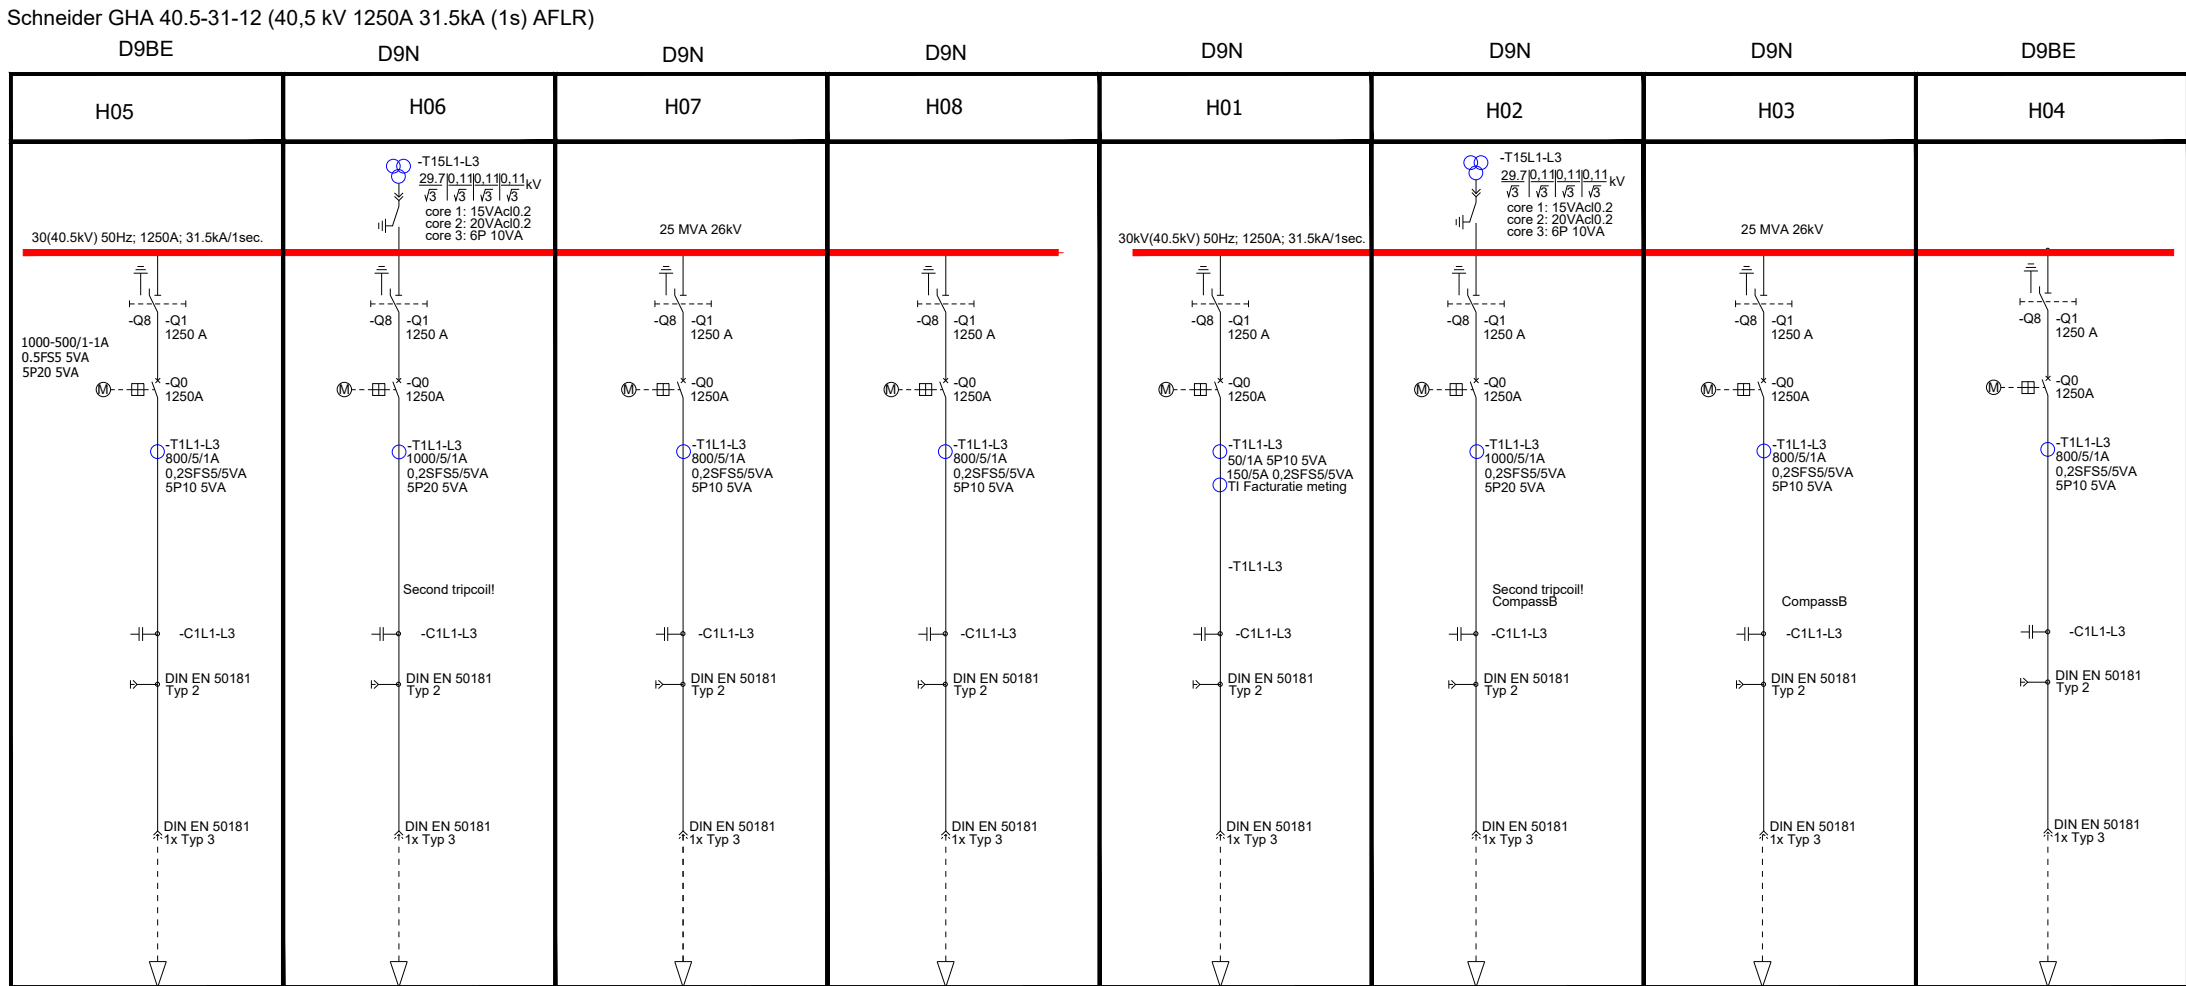

Support 1	Feeder Pannels 1	Vertical Compbus 1	Reserve 1	Reserve 2	Feeder Pannels 2	Vertical Compbus 2	Support 2
-----------	------------------	--------------------	-----------	-----------	------------------	--------------------	-----------

Ciner Glass Utility Building - Main MV Panel

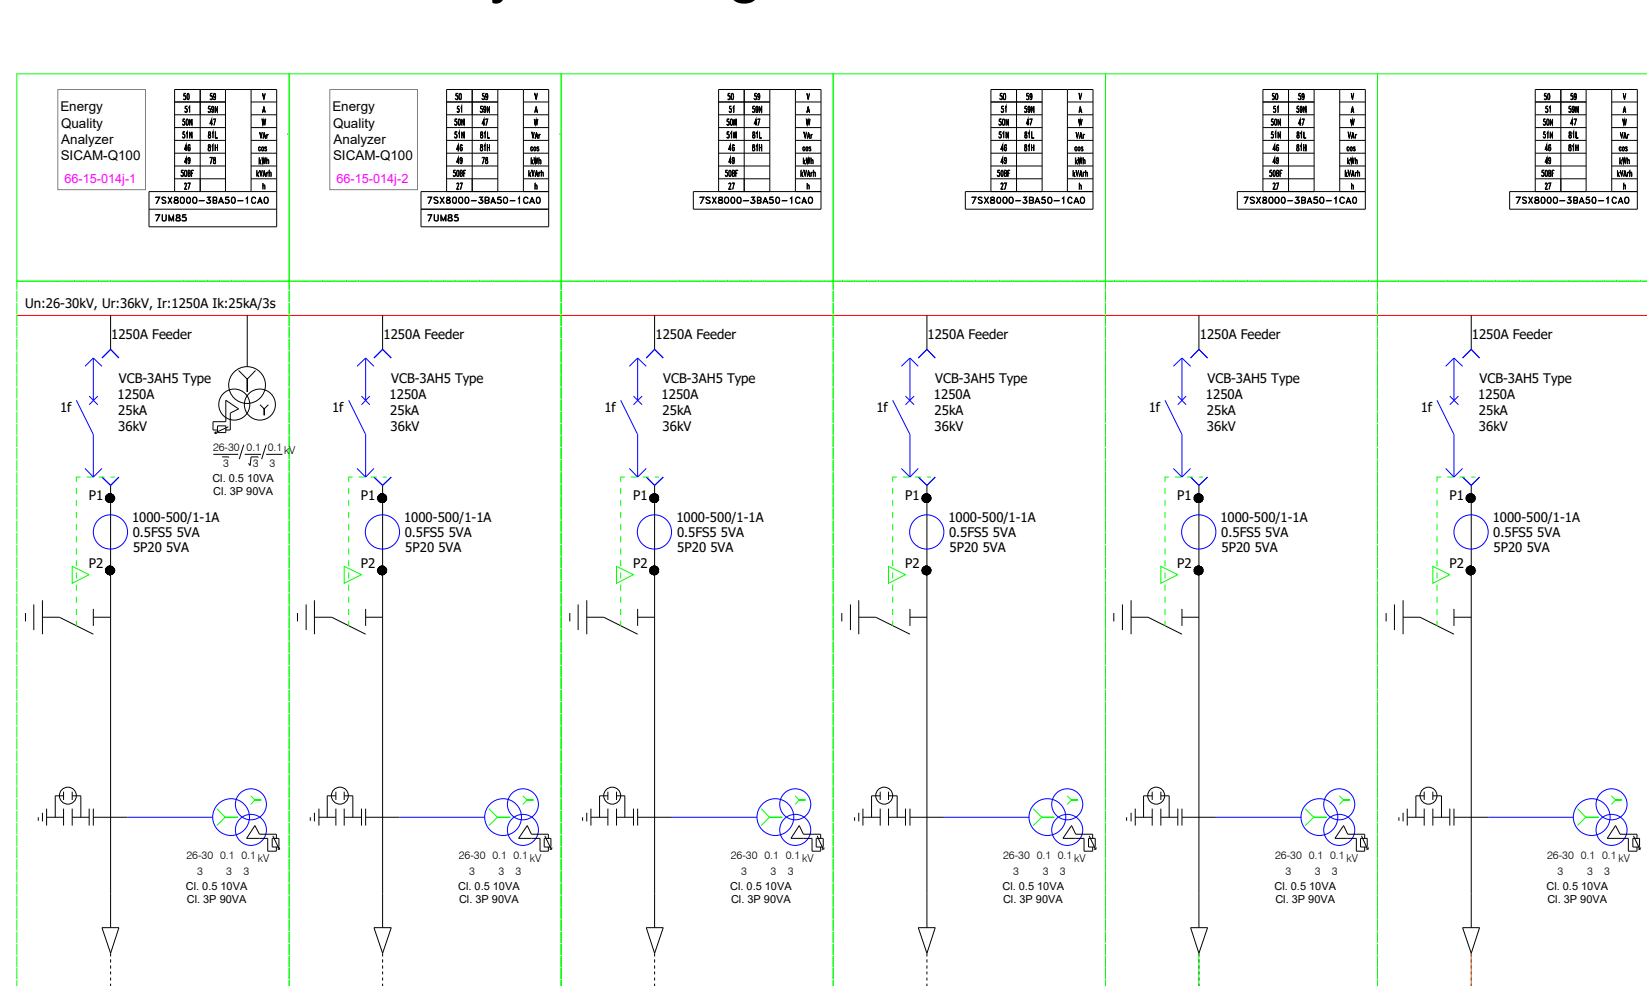


H01_U1	H01	H02_U1	H02	H03_U1	H03	H04_U1	H04
FEED SUPPLY 1	FEED SUPPLY 2	SPACE	FEED SUPPLY 1	FEED SUPPLY 2	FEED SUPPLY 1	FEED SUPPLY 2	FEED SUPPLY 1
66-15-014a-3	66-15-014a-4	66-15-014b-3	66-15-014b-4	66-15-014b-5	66-15-014b-6		

Protection Functions


ANSI No.	Protection Function Description
27	Undervoltage Protection
46	Unbalanced-Load Protection
47	Negative sequence Overvoltage Protection
48	Motor-starting time supervision
49	Thermal overload protection
50	Instantaneous Overcurrent Protection
50BP	Circuit-breaker failure protection, 3-pole
50N	Neutral Instantaneous Overcurrent Protection
50L	Load-jam protection motor
51	Time-delay Overcurrent Protection
51N	Time-delay Neutral Overcurrent Protection
59	Overvoltage Protection
59N	Neutral Voltage Displacement Protection
66	Motor Restart Inhibit
81u0	Frequency protection (under/over)
1f	Shunt Release Coil
1f+1r	Shunt Trip Coil + Under Voltage Trip Coil
68	Power-swng blocking TUBS

Key plan

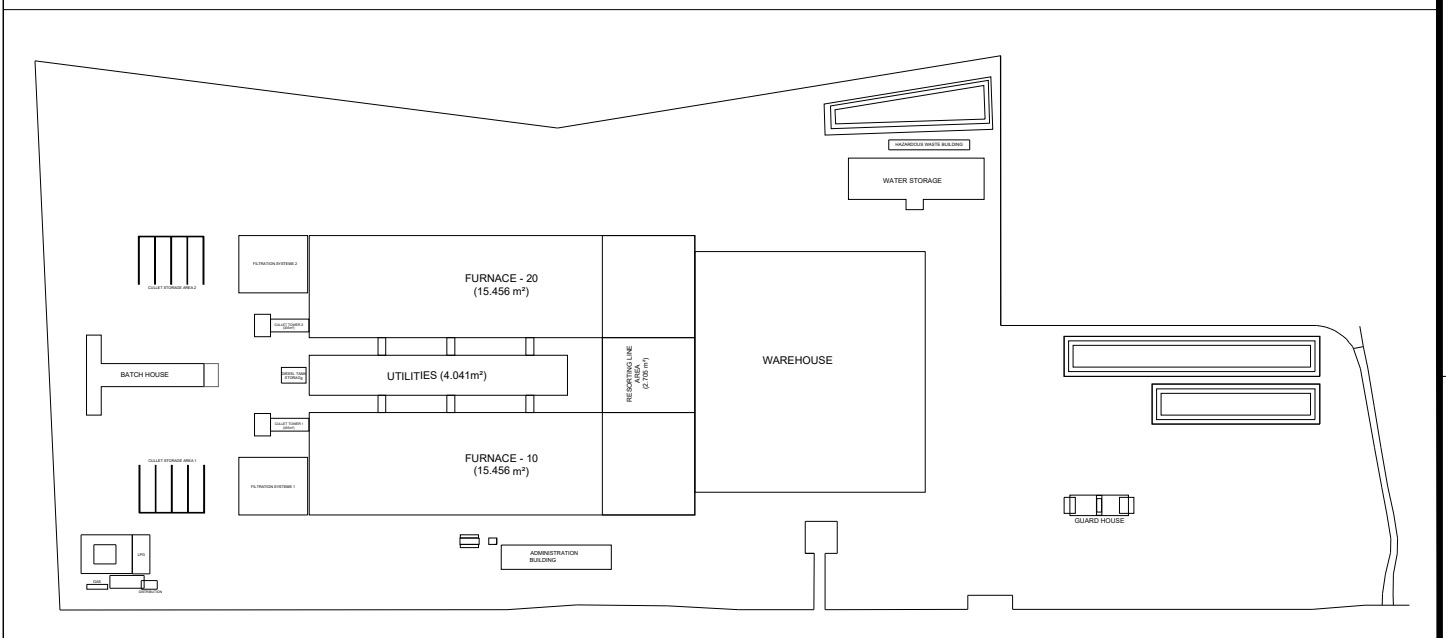


Notes


From Fluvius

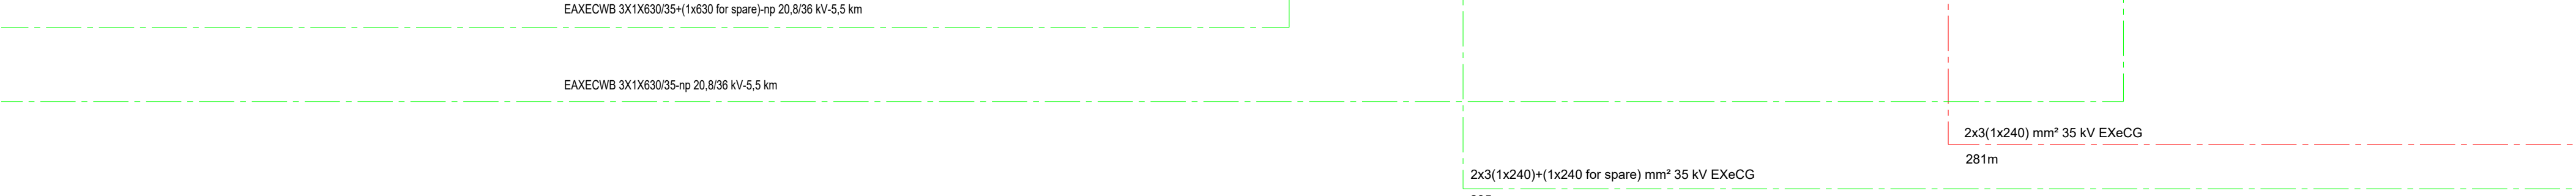


Fur 10 Main MV Panel

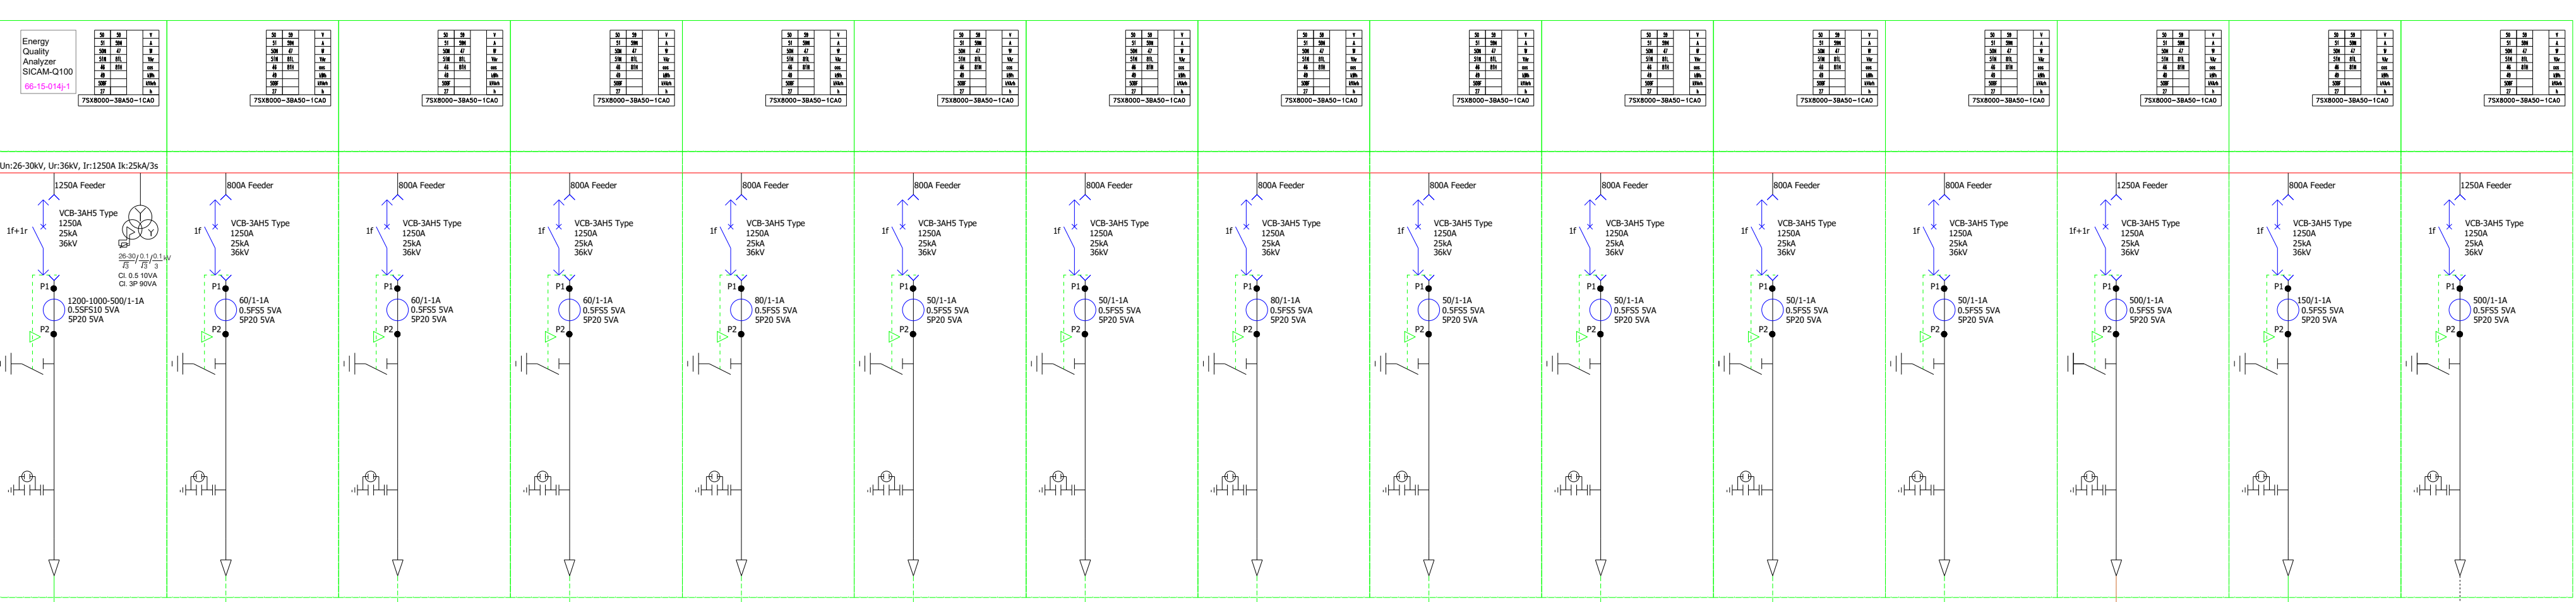


H01_U1	H01	H02_U1	H02	H03_U1	H03	H04_U1	H04
FEED SUPPLY 1	FEED SUPPLY 2	FEED SUPPLY 1	FEED SUPPLY 2	FEED SUPPLY 1	FEED SUPPLY 2	FEED SUPPLY 1	FEED SUPPLY 2
66-15-014d-1	66-15-014f-1	66-15-014f-2	66-15-014f-3	66-15-014f-4	66-15-014f-5	66-15-014f-6	66-15-014f-7

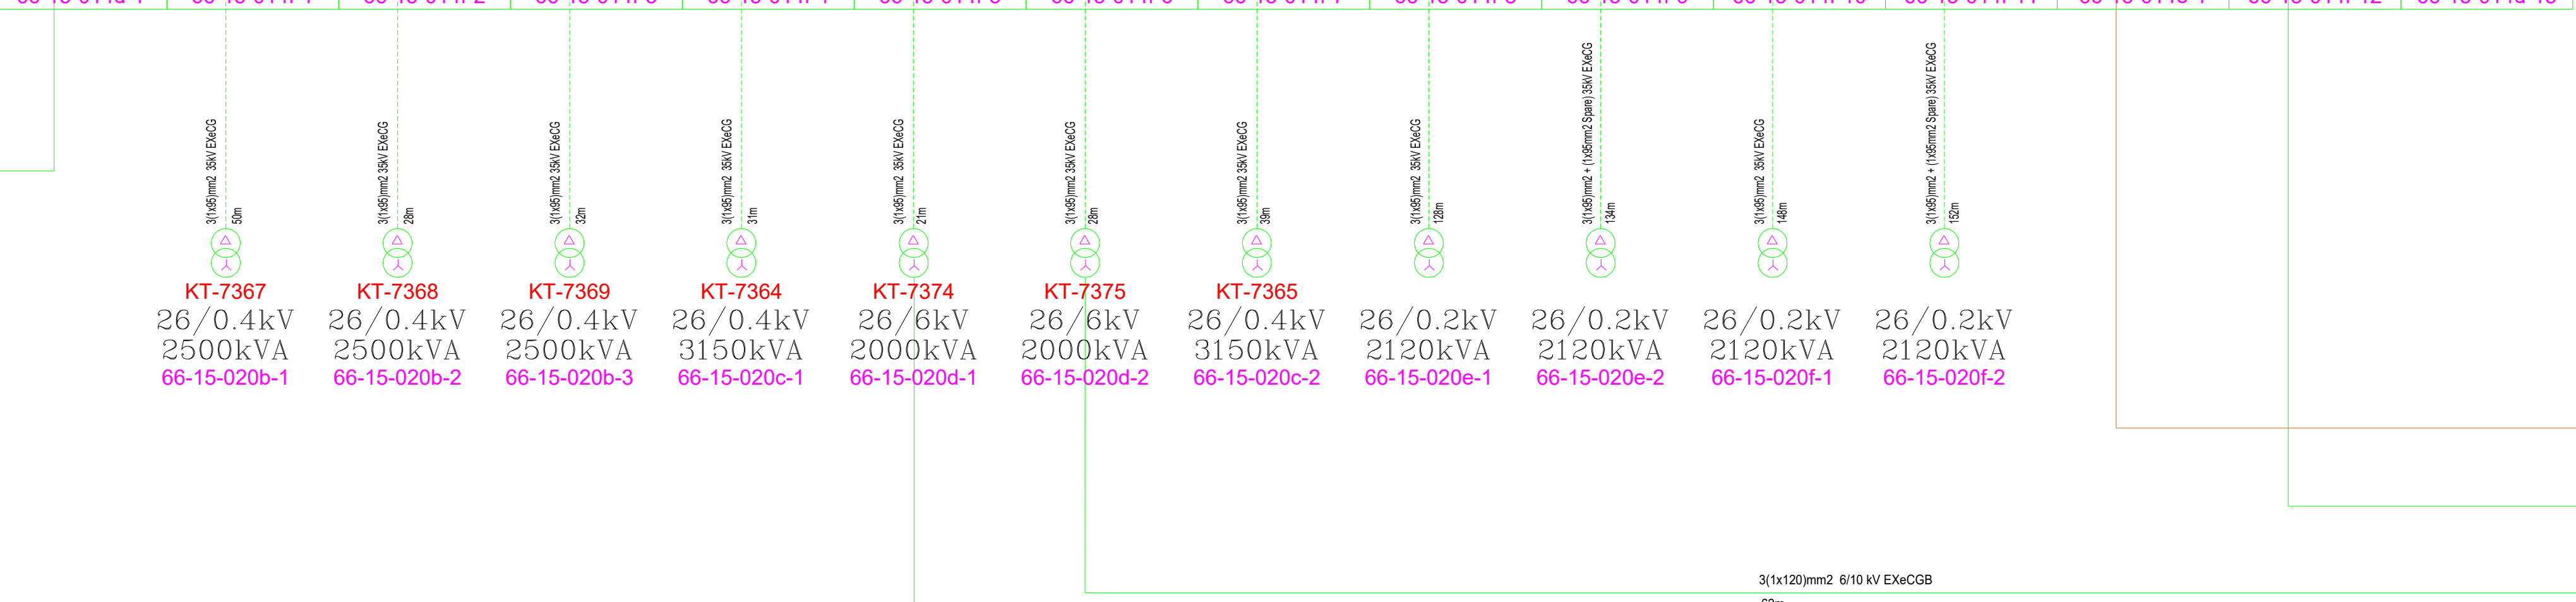


Fur 20 Main MV Panel

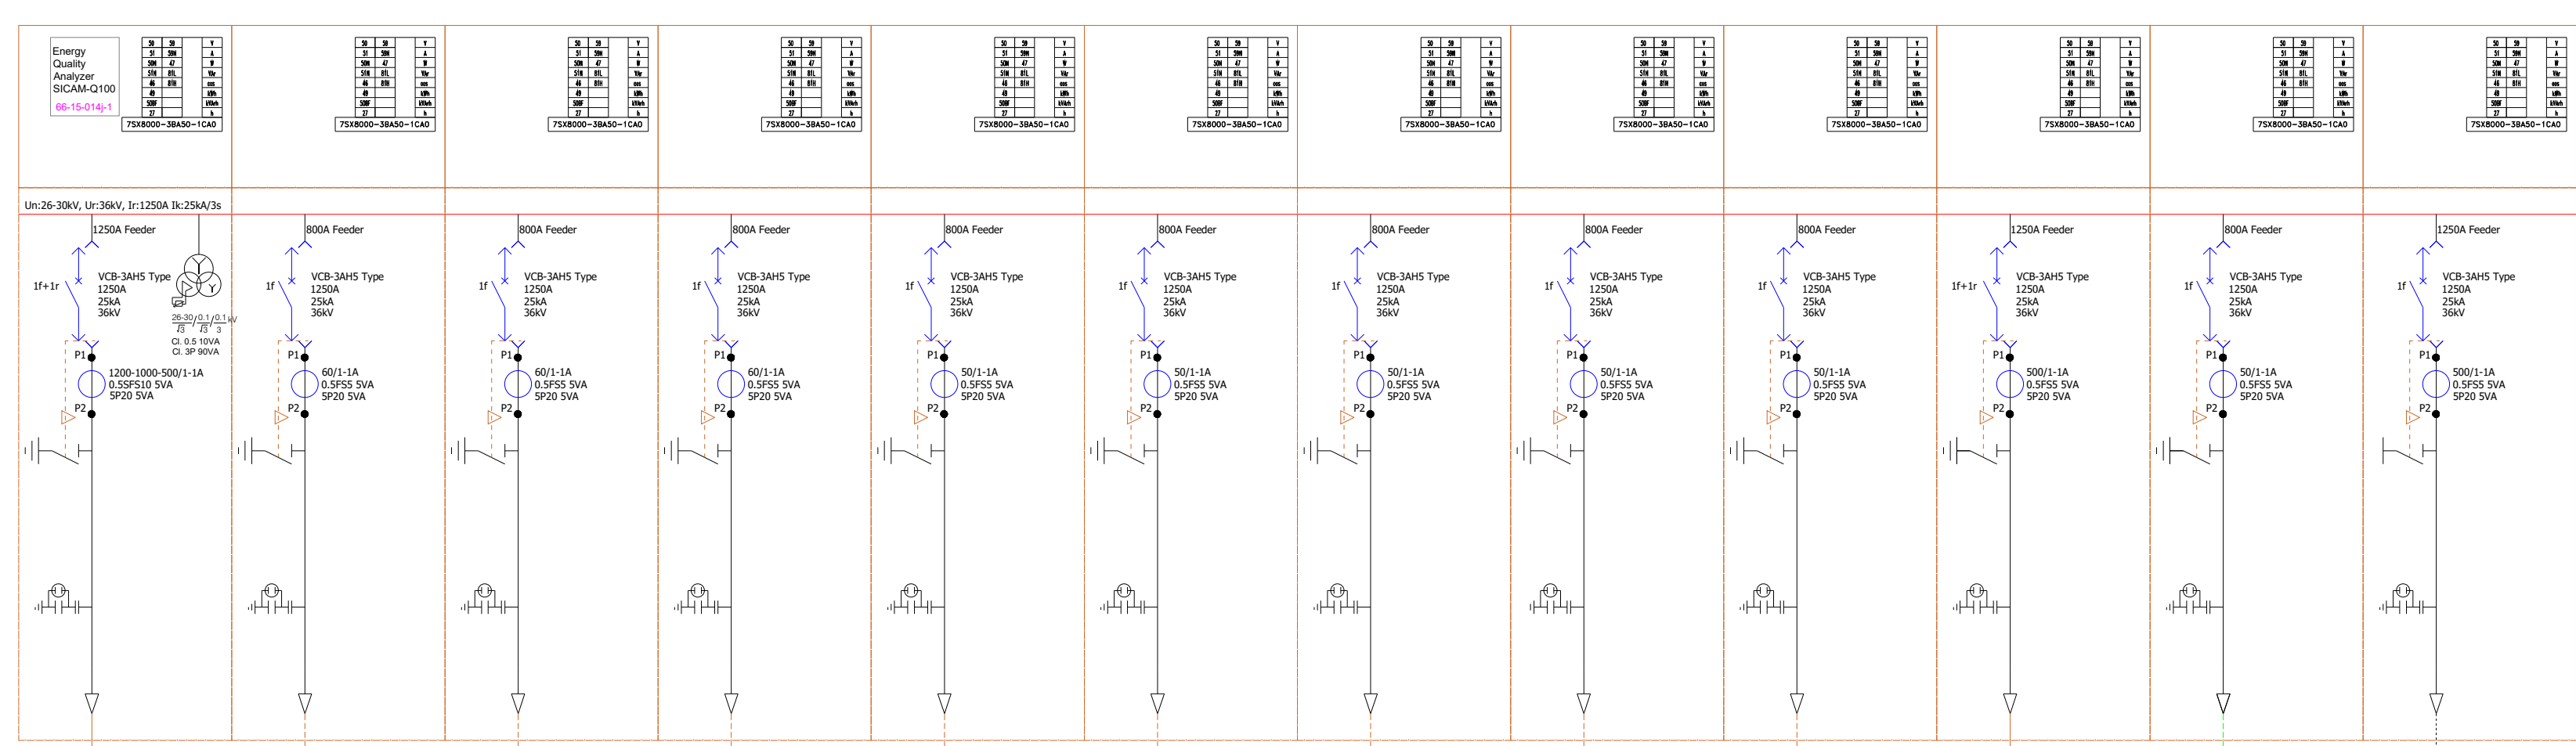


H01_U1	H01	H02_U1	H02	H03_U1	H03	H04_U1	H04
FEED SUPPLY 1	FEED SUPPLY 2	FEED SUPPLY 1	FEED SUPPLY 2	FEED SUPPLY 1	FEED SUPPLY 2	FEED SUPPLY 1	FEED SUPPLY 2
66-15-014d-3	66-15-014f-3	66-15-014f-4	66-15-014f-5	66-15-014f-6	66-15-014f-7	66-15-014f-8	66-15-014f-9

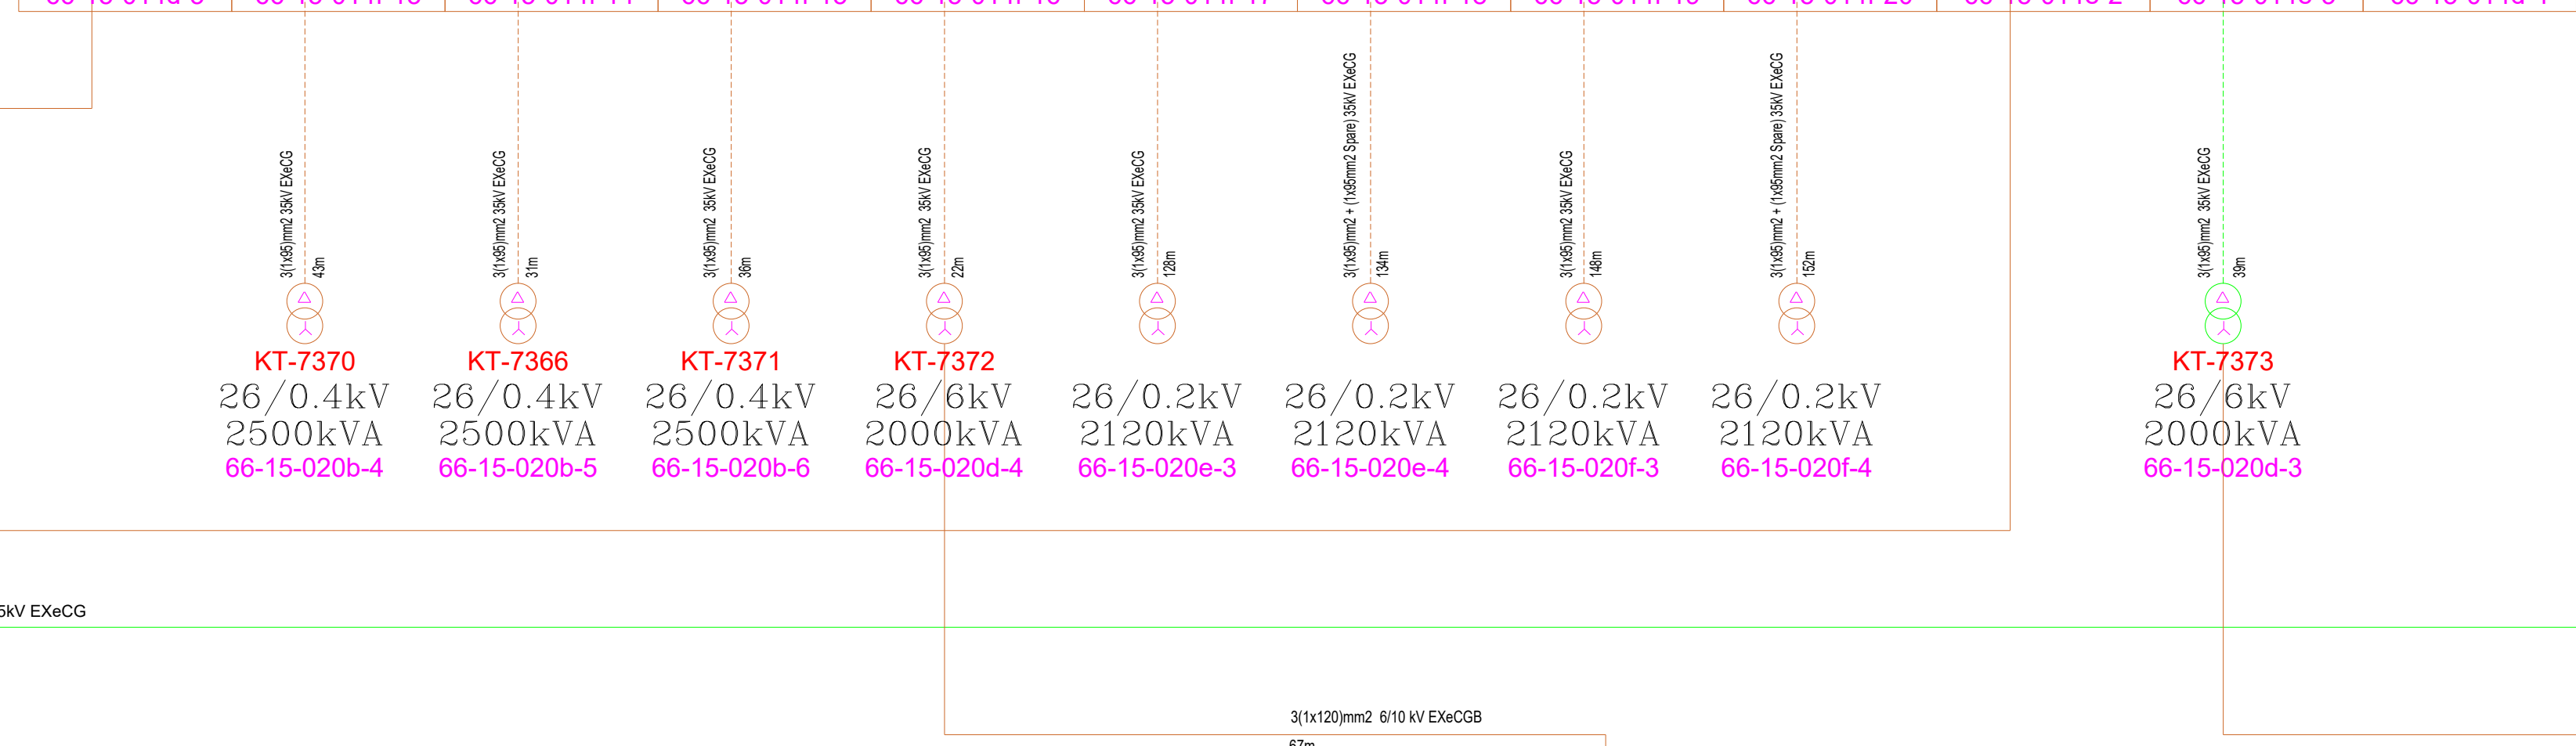


AWH Main MV Panel

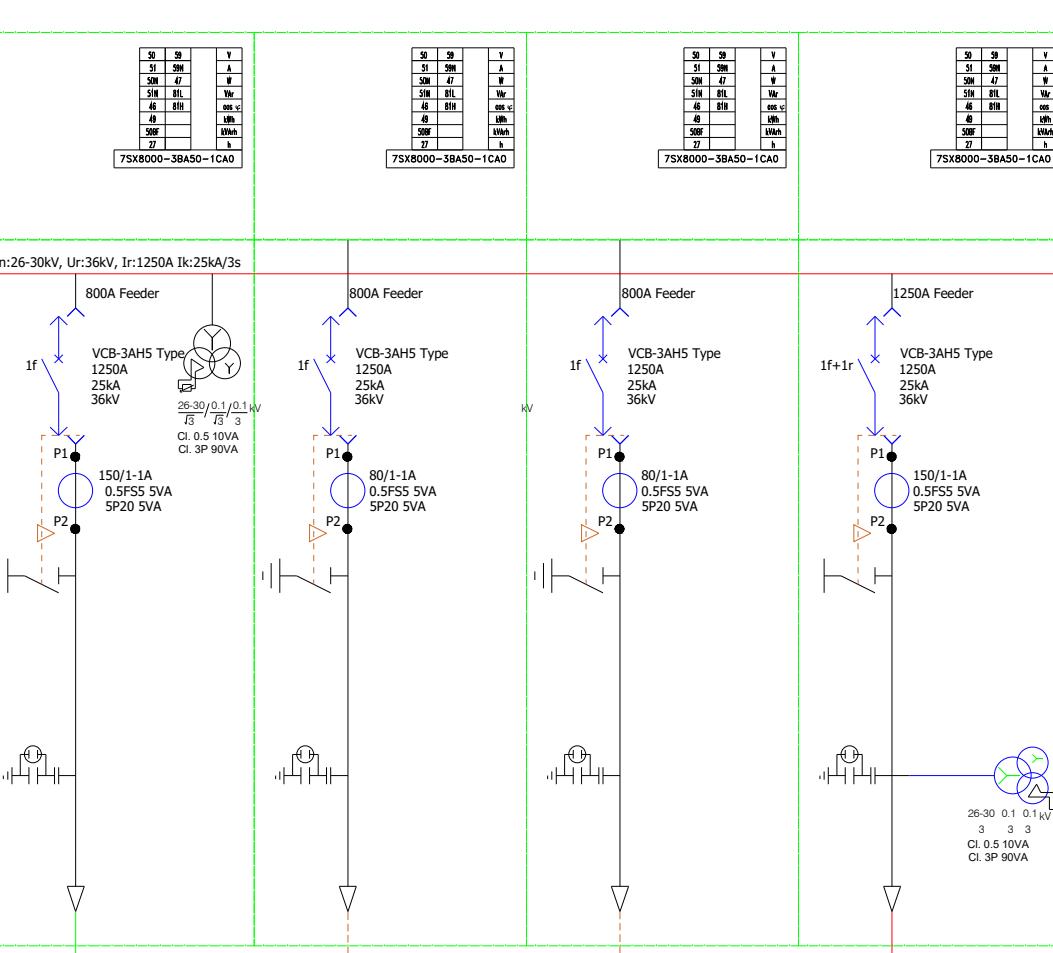

WATERHOUSE INPUT	TR WATERHOUSE	TR SPACE	FUTURE EXPANSION FOR PV PANELS
66-15-014d-1	66-15-014f-4	66-15-014f-4	66-15-014d-4

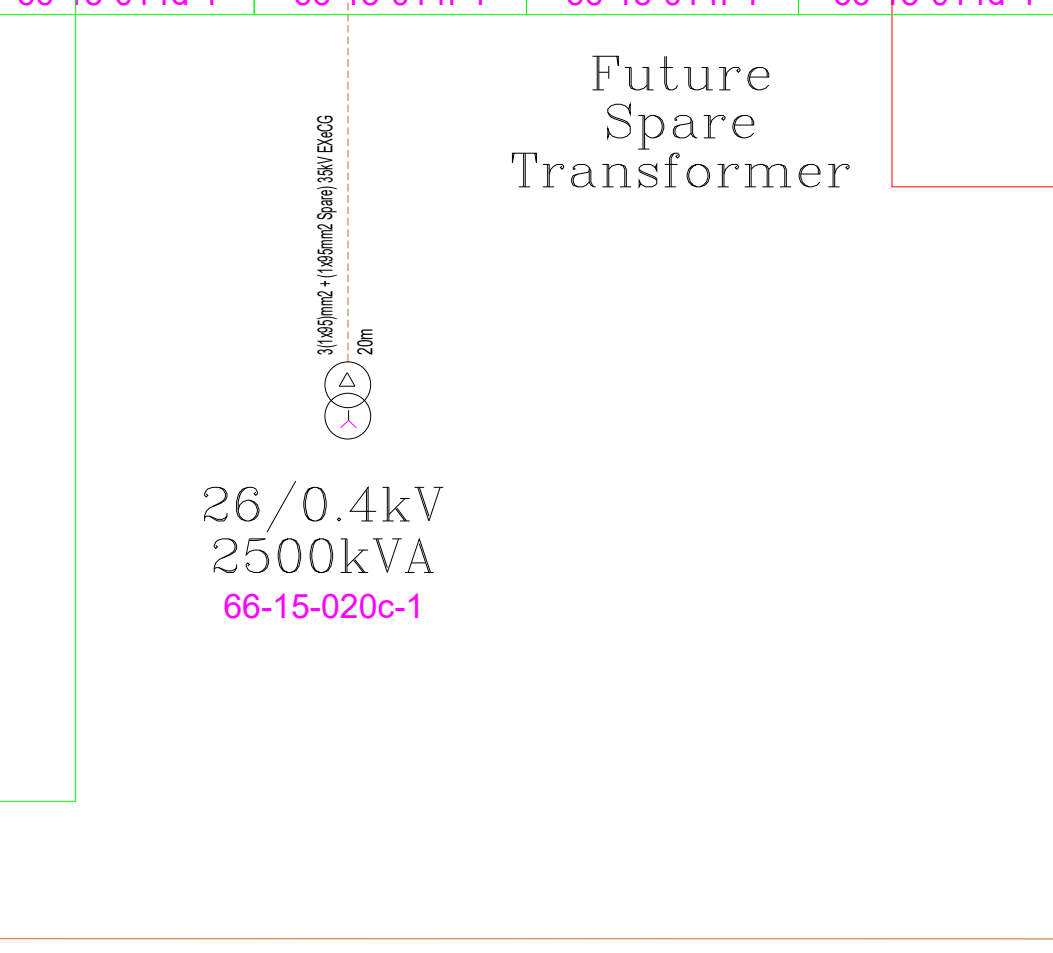


Turbo Compressor-1 Panel

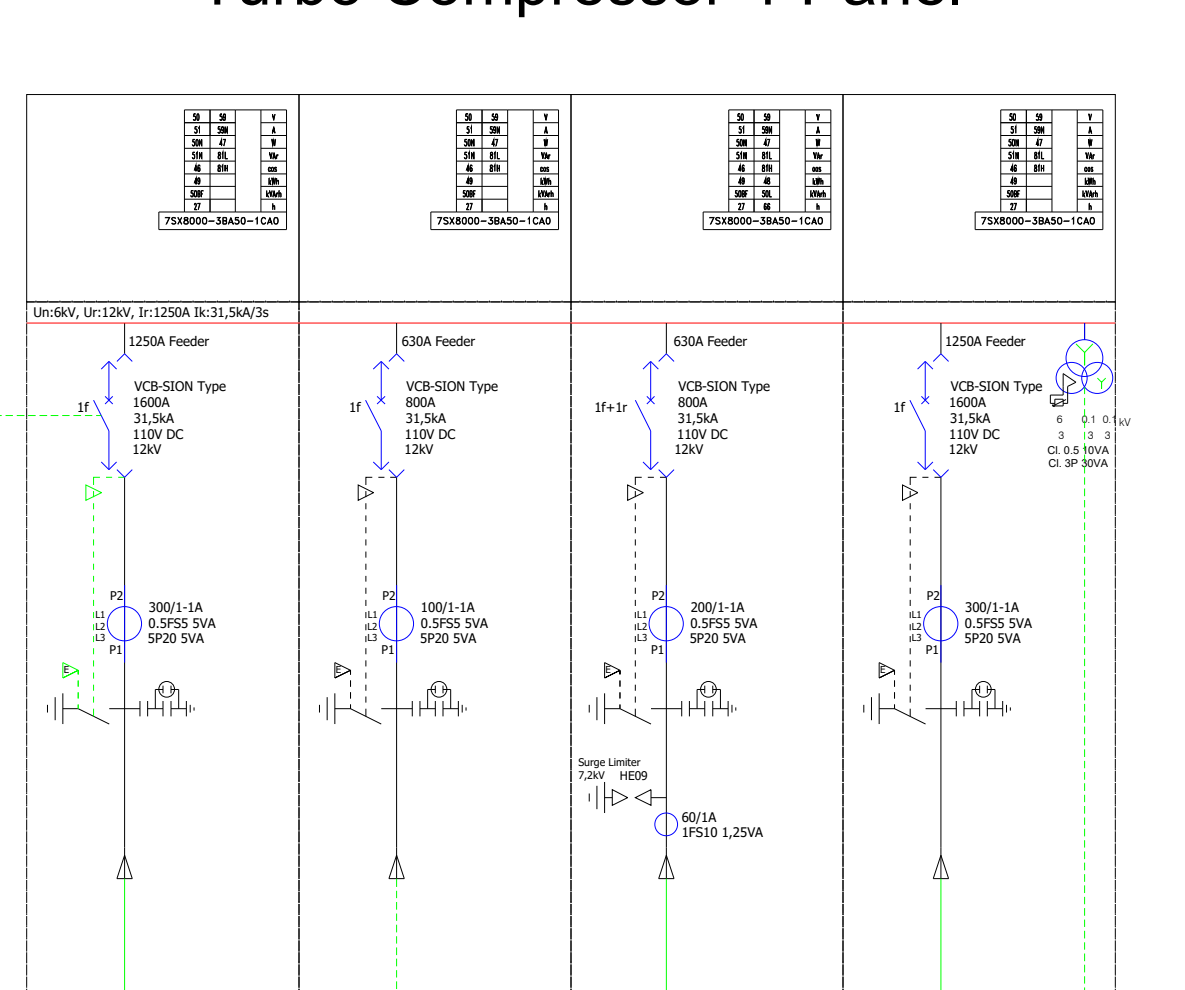


L01	L02	L03	L04
COMPRESSOR 1 - FEED INPUT	COMPRESSOR 1 - COMPENSATION OUTPUT	COMPRESSOR 1 - OUTPUT	COMPRESSOR INPUT
66-15-014m-1	66-15-014f-3	66-15-014f-2	66-15-014f-1

Turbo Compressor-1 Compensation Panel

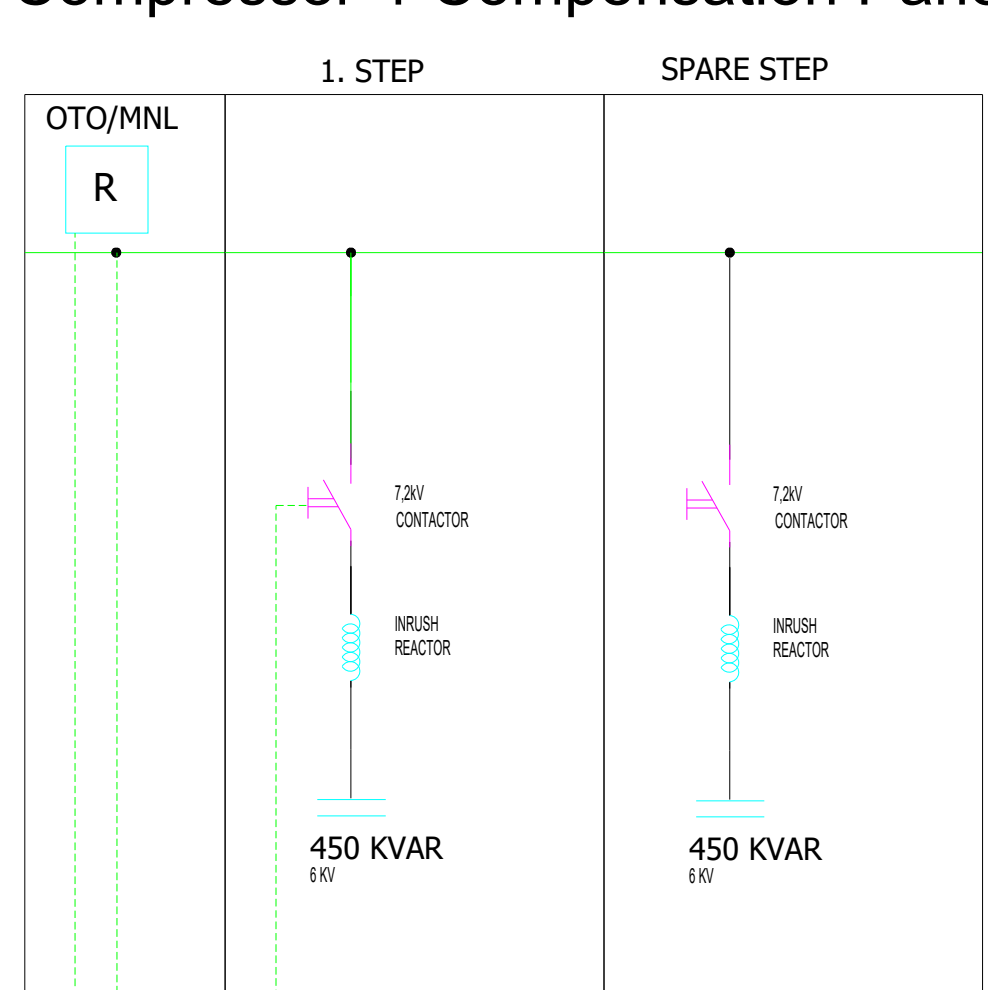


R	S
450 KVAR	450 KVAR
66-15-014n-1	

Turbo Compressor-2 Panel

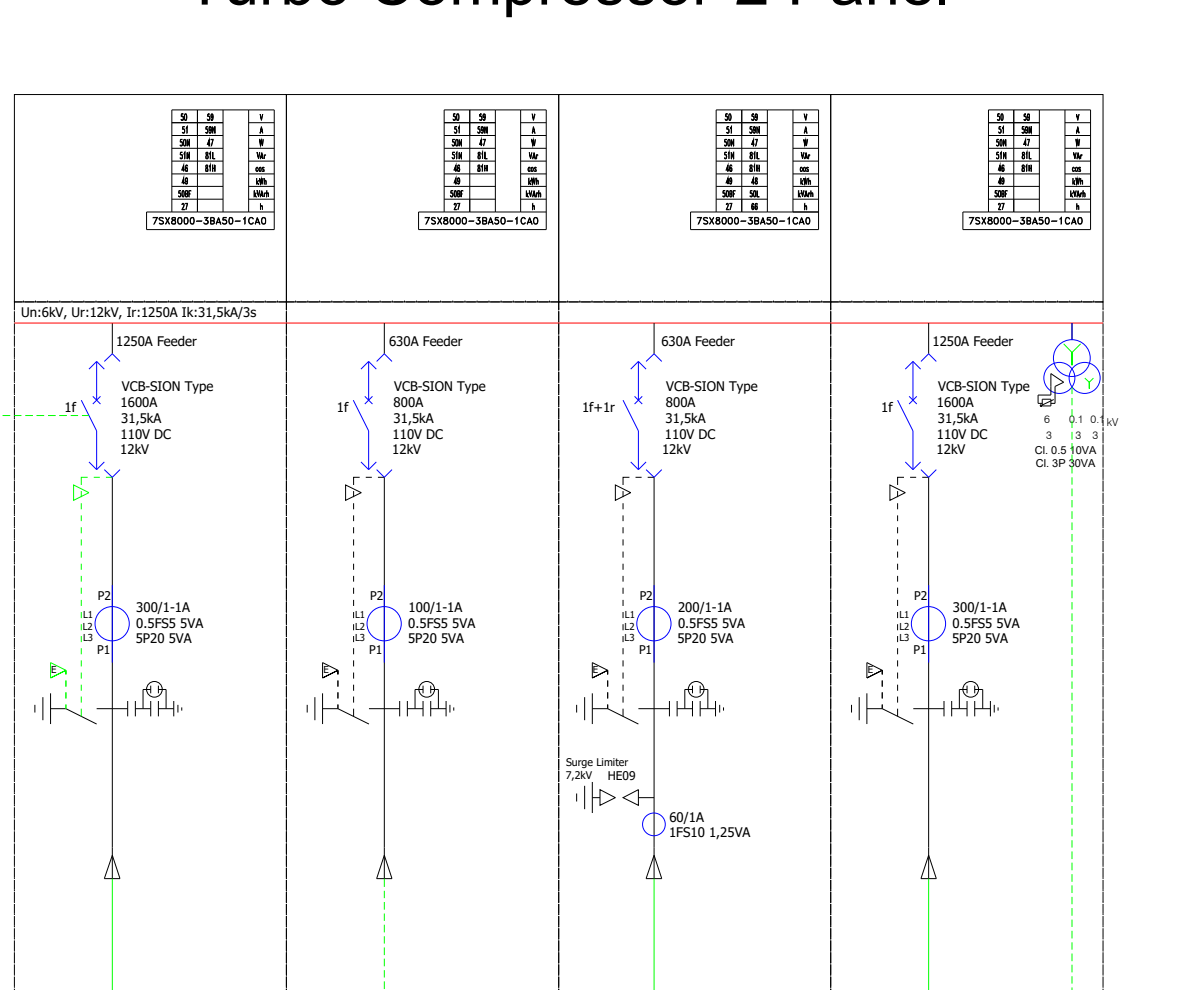


L01	L02	L03	L04
COMPRESSOR 2 - FEED INPUT	COMPRESSOR 2 - COMPENSATION OUTPUT	COMPRESSOR 2 - OUTPUT	COMPRESSOR INPUT
66-15-014m-2	66-15-014f-4	66-15-014f-3	66-15-014f-2

Turbo Compressor-2 Compensation Panel

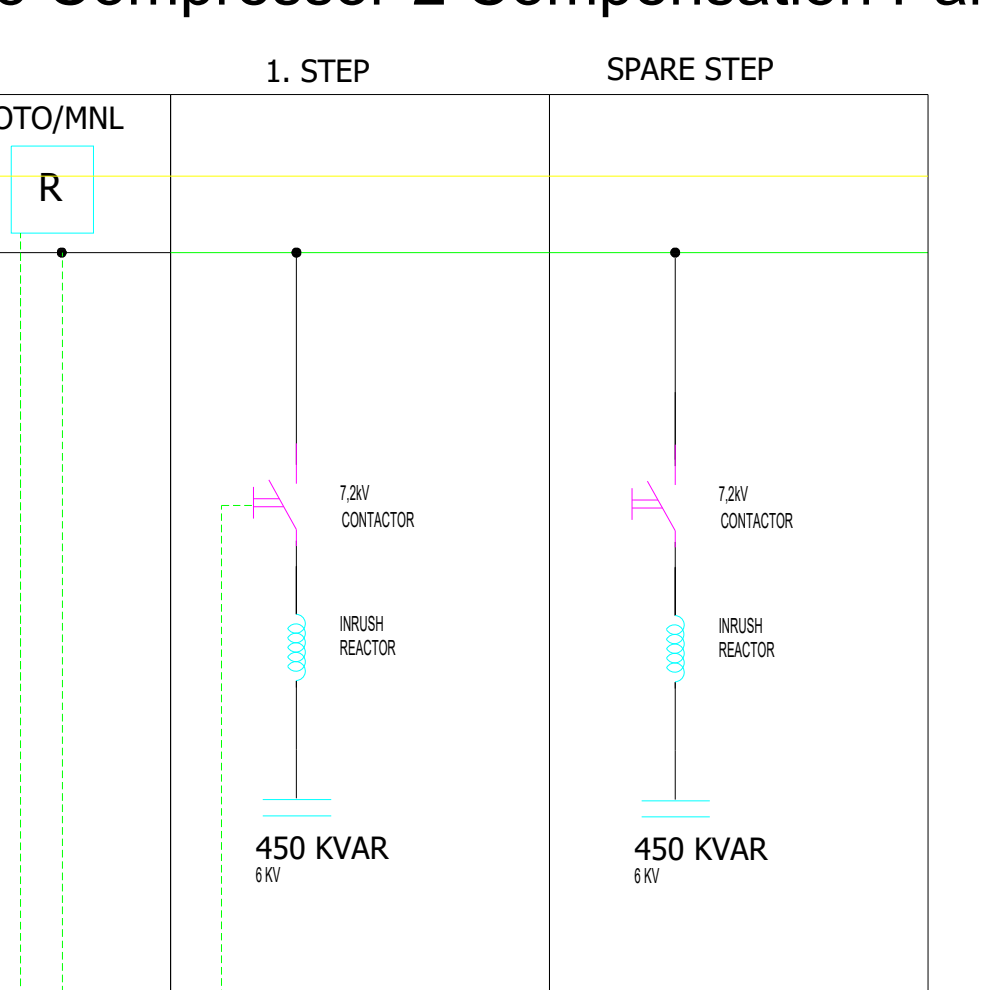


R	S
450 KVAR	450 KVAR
66-15-014n-2	

Turbo Compressor-4 Panel

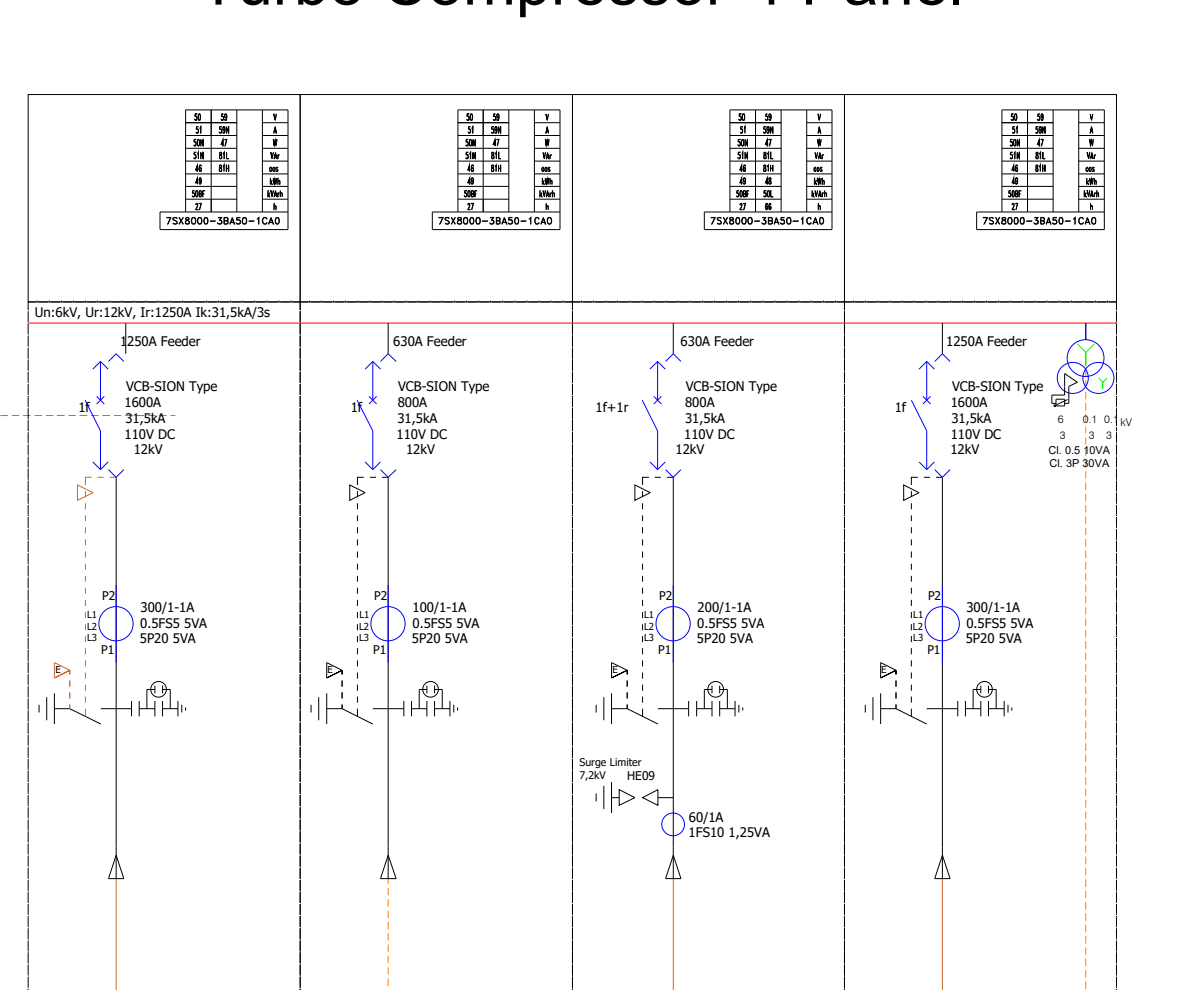


L01	L02	L03	L04
COMPRESSOR 4 - FEED INPUT	COMPRESSOR 4 - COMPENSATION OUTPUT	COMPRESSOR 4 - OUTPUT	COMPRESSOR INPUT
66-15-014m-3	66-15-014f-5	66-15-014f-4	66-15-014f-3

Turbo Compressor-4 Compensation Panel

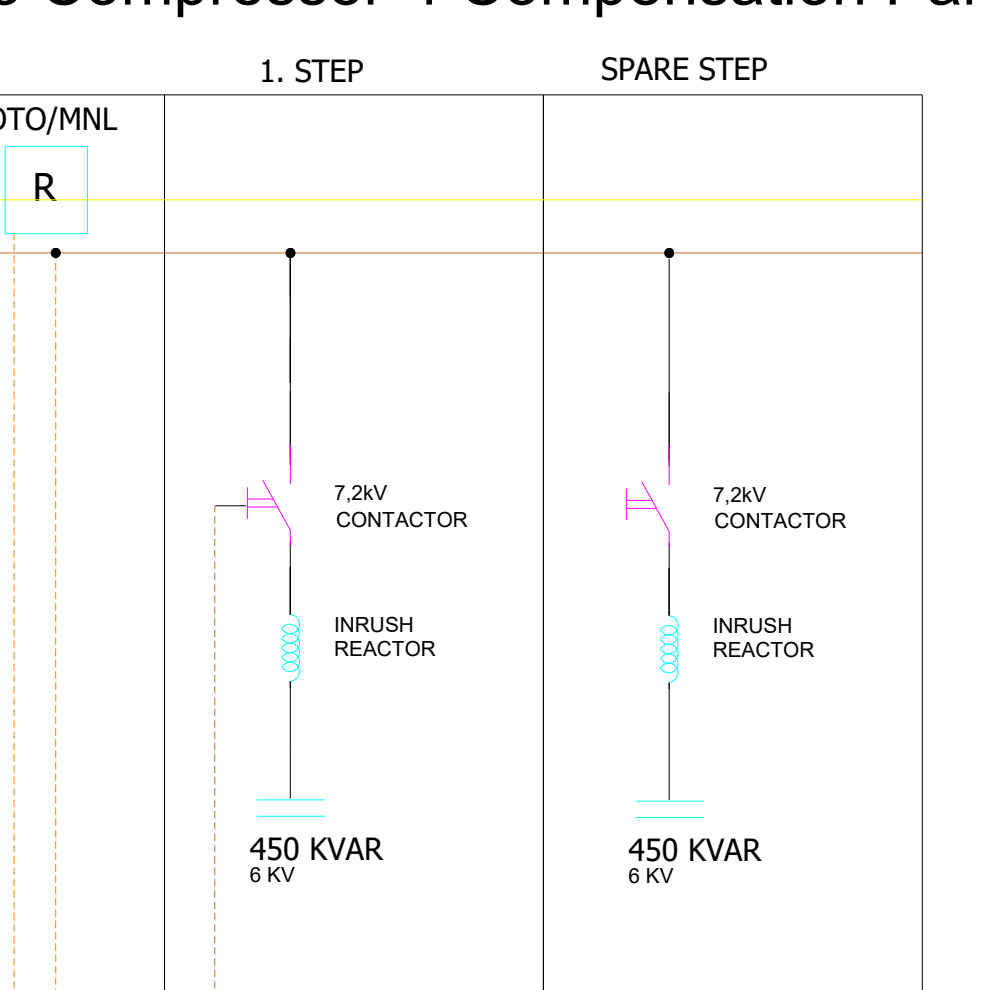


R	S
450 KVAR	450 KVAR
66-15-014n-3	

Turbo Compressor-3 Panel

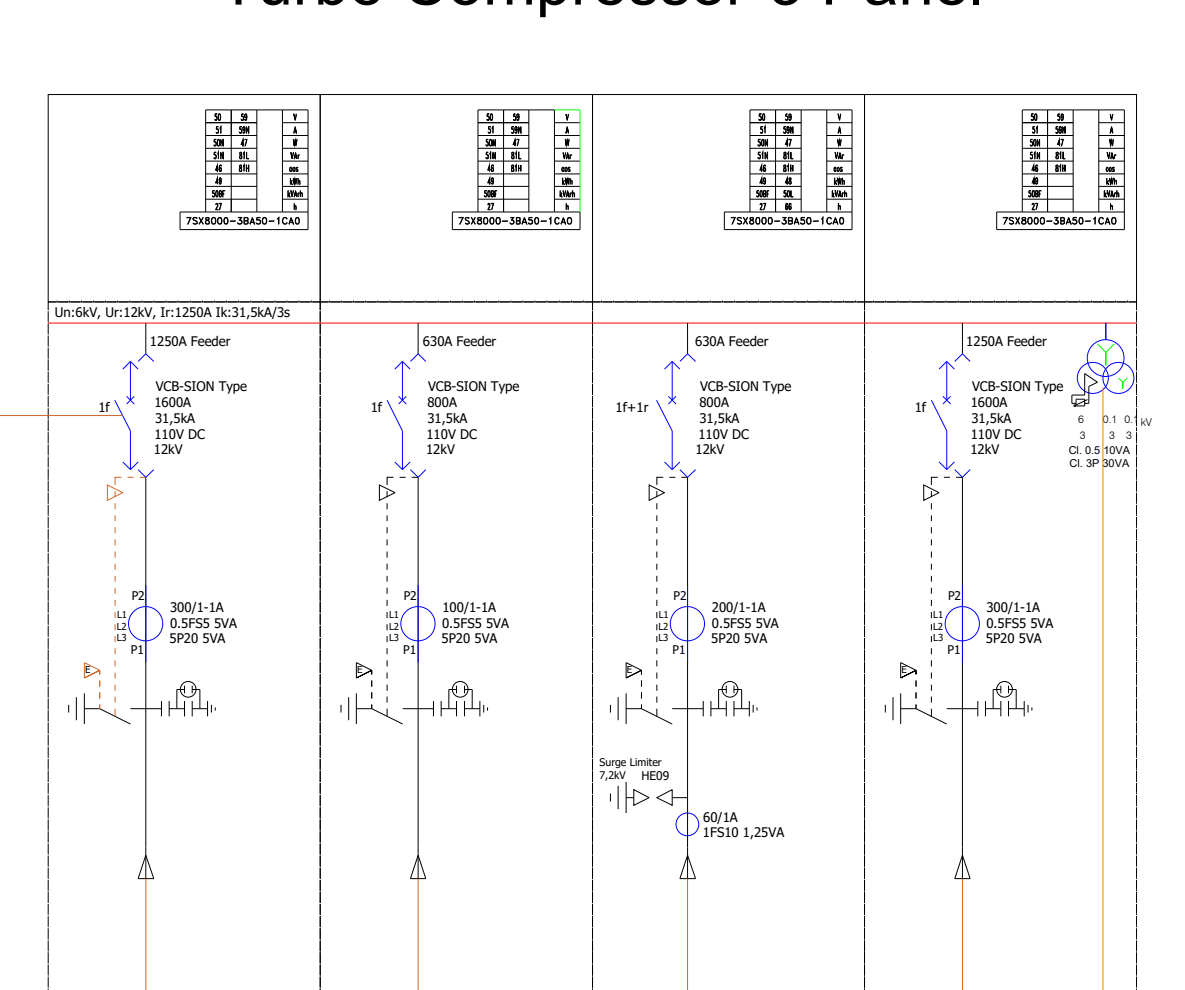

L01	L02	L03	L04
COMPRESSOR 3 - FEED INPUT	COMPRESSOR 3 - COMPENSATION OUTPUT	COMPRESSOR 3 - OUTPUT	COMPRESSOR INPUT
66-15-014m-3	66-15-014f-5	66-15-014f-4	66-15-014f-3

Turbo Compressor-3 Compensation Panel

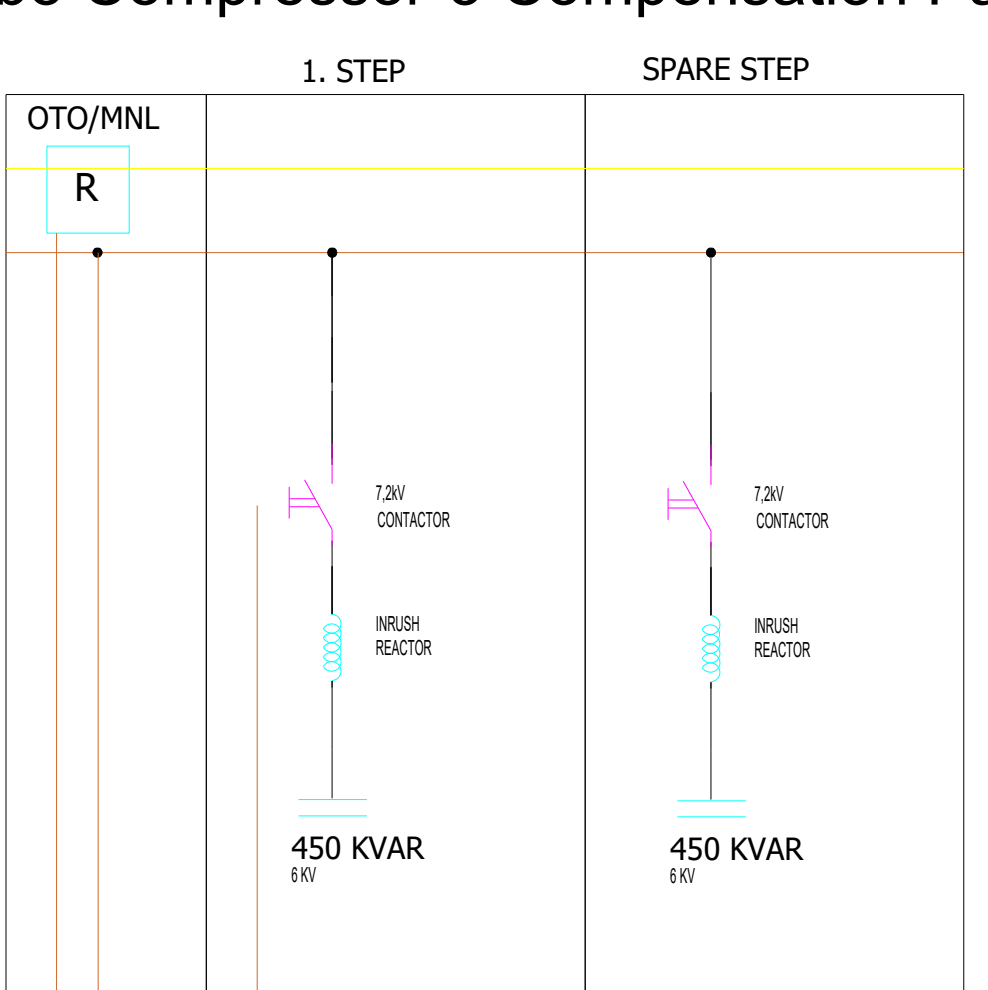

R	S
450 KVAR	450 KVAR
66-15-014n-3	