

FEBAUTO Racing

Member guide, release 2

Part I The box: your ROS 2 environment

Part II Drivers: write, score, submit

Part III The car

Formula Electric at Berkeley

September 2026, platform release v0.1.0

https://github.com/FEBAutonomous/feb-racing

https://febautonomous.github.io/feb-racing/

Contents

1 What changed, in one minute 2

I The box 2

2 Setup 2

3 How it fits together 3

4 The commands 4

II Drivers 4

5 A driver is one package 4

6 The contract 5

7 The dead-man, and the supervisor 5

8 Score and submit 6

III The car 7

9 From a merged driver to the wheels 7

10 When something is wrong 8

1 What changed, in one minute

Release 2 replaces the throwaway devkit container with **the box**: a Linux machine with ROS 2 Humble inside Docker that keeps what you install, sees your whole FEB folder, and runs the same on the car's Jetson. Your driver talks the real car's topics, so what laps in the simulator drives the car unchanged. The launcher is `feb`; `feb-sim` is gone.

Was	Is
`./feb-sim run`	`./feb up`
`./feb-sim shell`	`./feb shell`, or `./feb code` for VS Code inside the box
container wiped on every run	the box persists; `./feb reset` wipes it on purpose
only `stack/` visible inside	all of `~/FEB` visible inside
topics `/autodrive/roboracer_1/*`, throttle in $[0, 1]$	`/scan`, `/odom`, `/imu`, camera in; `/drive` (m/s, rad) out
one practice track	every practice track of your driver's kind
submit posts a result	submit posts the results and your code

Part I
The box

2 Setup

1. Install, once

	Install
Mac	Docker Desktop (or OrbStack). VS Code, then its Extensions view, search *Dev Containers*, Install. Foxglove from `https://foxglove.dev/download`.
Windows	**WSL 2 Ubuntu** first: in PowerShell `wsl --install -d Ubuntu`, reboot, open "Ubuntu" from the Start menu. Then Docker Desktop, and in its Settings, Resources, *WSL integration*, switch on Ubuntu. Then VS Code with the Dev Containers extension (Extensions view, search, Install), and Foxglove.
Linux	`sudo apt install docker.io`, `sudo usermod -aG docker $USER`, log out and in. VS Code with Dev Containers. Foxglove.

And one GitHub thing: an SSH key on your account (GitHub: Settings, SSH and GPG keys; `ssh-keygen` makes one if you have none). The clone below and `feb submit` use it. Without one, clone with `https://github.com/FEBAutonomous/feb-racing.git` instead and add the key before you submit.

Where things live: Mac, under `/Users`, which `~/FEB` already is. Windows, **inside WSL**: every command in this guide is typed in the Ubuntu terminal, never PowerShell, and `~/FEB` is the Ubuntu home, not `C:`. The simulator then runs as a Linux app inside WSL and gets its window from WSLg, built into Windows 11; on Windows 10 install WSL from the Microsoft Store, not the old built-in one, to get it. Foxglove is optional everywhere; the browser desktop covers most of it.

2. Had the old devkit? Delete it

Release 2 rewrote the repository, so the old clone cannot be updated. Delete it; skip this if you never had it.

```
rm -rf ~/feb-racing            # or wherever it is
```

Wrote code in its `stack/` folder? Copy that folder somewhere safe before deleting, and drop it into the new `stack/` after step 3. It runs again once it has a card (section 5).

3. Clone and set up

```
mkdir -p ~/FEB && cd ~/FEB
git clone git@github.com:FEBAutonomous/feb-racing.git && cd feb-racing
./feb setup --name "Your Name"
```

`setup` pulls the image (a few GB, once), downloads the simulator app for your OS, and creates your box. About twenty minutes, nearly all of it download. Your name is how results appear on the scoreboard; ask the lead to add it to `submissions.yaml` with your GitHub login.


4. First drive

```
./feb up
```

The simulator opens, and Foxglove with it if it is installed. Arrow keys drive. Close the simulator window to stop. `./feb up --driver feb_driver` races the starter driver instead. Mac, first time only: if macOS refuses to open the simulator, right-click `FEB Simulator.app` in `~/.feb-sim/app/mac` (Finder: Cmd-Shift-G, paste the path) and choose Open.

That was the one and only clone. Every later release arrives with `./feb update`.

3 How it fits together

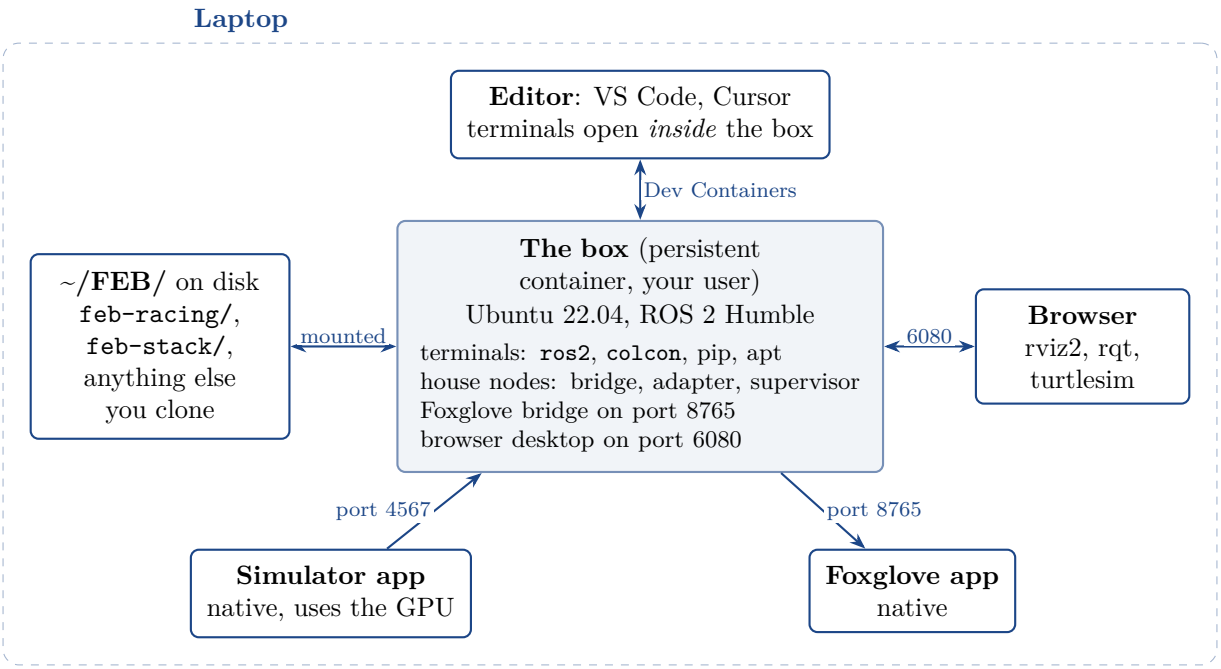

The box is one container, made once by `setup`, started by whichever command needs it, kept until `./feb reset`. Your `~/FEB` folder is mounted into it at `/home/feb/FEB`: the same files, not a copy, so edit on the laptop with anything or inside the box, it makes no difference. What you `apt` or `pip` install lives in the box and goes with a reset or a new image; your files never do.

4 The commands

Command	What it does
`./feb shell`	a terminal in the box, in the folder you ran it from; open as many as you like
`./feb shell --gui`	the same, plus the box's desktop in a browser tab (rviz2, rqt, turtlesim)
`./feb code`	VS Code attached to the box (`--cursor` for Cursor)
`./feb up`	house nodes, simulator, Foxglove; drive by hand; Ctrl-C ends it
`./feb up --driver NAME`	your driver races; `--track T`, `--mode-name M`, `--noise 1`, `--opponent normal`
`./feb up --deadman --driver NAME`	the car's rules in the simulator (section 7)
`./feb stop`	ends `feb up` from another terminal; the box stays
`./feb logs -f`	what `feb up` printed
`./feb practice --driver NAME`	scored runs on every practice track of the driver's kind
`./feb submit`	results to the scoreboard, code to the team repo, one pull request each
`./feb update`	git pull, newer image (replaces the box), newer simulator
`./feb reset`	a fresh box; your files are untouched

Inside the box there is nothing of ours to learn: `ros2`, `colcon`, `pip`, `ros2 bag record -a`, and `rviz2 &` which lands on the browser desktop.

rviz in the browser. With `./feb up` running in one terminal, in a second one: `./feb shell --gui`: a browser tab opens on the box's desktop, empty for now. In that terminal `rviz2 &`, and rviz appears on the desktop. Fixed Frame `odom`; Add, By topic, `/scan` (LaserScan, style Points, size 4) and `/odom`. A topic that stays empty wants Reliability Policy set to Best Effort. **Foxglove app:** Open connection, Foxglove WebSocket, `ws://localhost:8765`; the bridge runs whenever `feb up` does.

Part II
Drivers

5 A driver is one package

Copy the template and rename it, inside as well as outside; a ROS package carries its name in four places, so the last two lines do the renaming for you:

```
cp -r starter_kit/feb_driver stack/my_driver && cd stack/my_driver
mv feb_driver my_driver && mv resource/feb_driver resource/my_driver
grep -rl feb_driver . | xargs sed -i 's/feb_driver/my_driver/g'
cd ../..
```

Mac: `sed -i ''` with the empty quotes, or run those lines inside `./feb shell`, whose `sed` is the Linux one. Then `./feb up --driver my_driver` builds and races it.

File	Holds
`my_driver/reactive_driver.py`	the node: scan in, speed and steering out
`config/driver.yaml`	every tuning number, one per line with a comment
`config/driver.car.yaml`	only the numbers that differ on the real car; loaded on top, on the car only
`launch/drive.launch.py`	starts the node with the yaml; includes `feb_mission` if present
`driver.yaml`	the driver's card (below)

```
name: my_driver
kind: walls                 # walls | cones | any
maintainer: your name
packages: [my_driver]       # what submit copies: your own packages
modes:
  trackdrive: {launch: drive.launch.py, max_speed: 3.0}
  inspection: {launch: drive.launch.py, max_speed: 0.8}
default_mode: trackdrive
```

A mode is a launch file plus a speed cap; `inspection` is the slow first lap of anything new, `trackdrive` the race. Edit the Python, save, run again: no rebuild for Python. Keep the package in git, `stack/` is ignored by this repo on purpose.


6 The contract

Topic	Type	
`/scan`	LaserScan	the lidar, 1080 beams over 270°, frame `laser`
`/odom`	Odometry	pose and speed, dead-reckoned from the wheels and the gyro
`/imu`	Imu	
`/camera/color/image_raw`	Image	the front camera (cone tracks)
`/drive`	AckermannDriveStamped	**yours**: `drive.speed` in m/s, `drive.steering_angle` in rad, at most ±0.5236
`/feb/state`	String	what the supervisor is doing: IDLE, MANUAL, AUTONOMOUS, STOP

These are the RoboRacer car's topics. In the simulator an adapter provides them; on the car the VESC and lidar drivers do. A command older than half a second stops the car. The simulator's own `/autodrive/...` topics remain for debugging; the car does not have them.

7 The dead-man, and the supervisor

On the car nothing moves unless a button on the gamepad is held. The supervisor is the node that enforces it; it sits between every driver and the wheels, in the simulator and on the car alike.

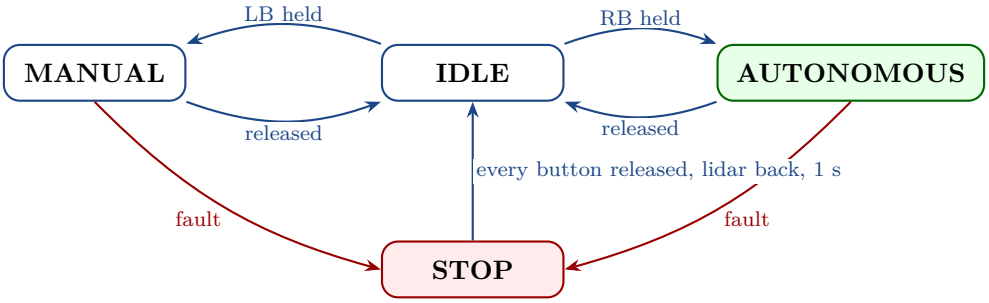

fault: lidar silent for 0.5 s, the X button, or a collision imminent

- **IDLE**: the car sits. Your stack is running and publishing `/drive`; it goes nowhere.
- **MANUAL**, LB held: the sticks drive. For positioning the car and checking wiring.
- **AUTONOMOUS**, RB held: your `/drive` reaches the wheels, clipped to the mode's cap.
- **STOP**: brakes. Entered when the lidar goes silent, the stop button is pressed, or a collision is imminent; left for IDLE only once every button is released and the sensors are back.
- Release either button: zero speed, which is a brake, within a third of a second.

In the simulator, `./feb up --deadman --driver NAME` runs the same rules with the keyboard as the pad: hold SPACE for RB, hold M for LB with the arrows driving, X for the stop button, Q to quit. The nodes' output goes to `./feb logs -f` in another terminal. Run every driver this way once before it goes near the car.


Your stack and the state. The button never starts or stops your stack; it only gates its output. So anything that remembers, an MPC's warm start, a localiser, an integrator, is stale when RB goes down. The rule: *on AUTONOMOUS, start clean.* `feb_mission`, a forty-line package in the starter kit, turns `/feb/state` into two hooks, `on_go` and `on_stop`, and a live flag; a stack with memory fills them in. The gap follower needs none of it.

8 Score and submit

```
./feb practice --driver my_driver        # every practice track of its kind, competition
    rules
./feb submit --dry-run                   # what would be posted
./feb submit
```

`practice` runs each track in its own clean container the way the competition does: a warm-up lap and ten timed laps, 300 s limit, 10 s per collision, headless at the 10 Hz scoring rate. Each run lands in `runs/<id>/` with a result file, a bag and the logs.

`submit` does two things from one command. It posts every clean run (finished, no collisions) not yet posted to the scoreboard as one pull request to `feb-racing`, which checks and merges itself; the site rebuilds and your time appears, unverified until the nightly rerun. And it copies your driver's packages, the `packages:` list in its card, into the team repo `feb-stack` under `drivers/<your name>/`, on a branch named after you, with a pull request to main that the lead reviews. Nothing changed since last time: nothing is pushed. `--no-code` and `--no-results` pick one half.

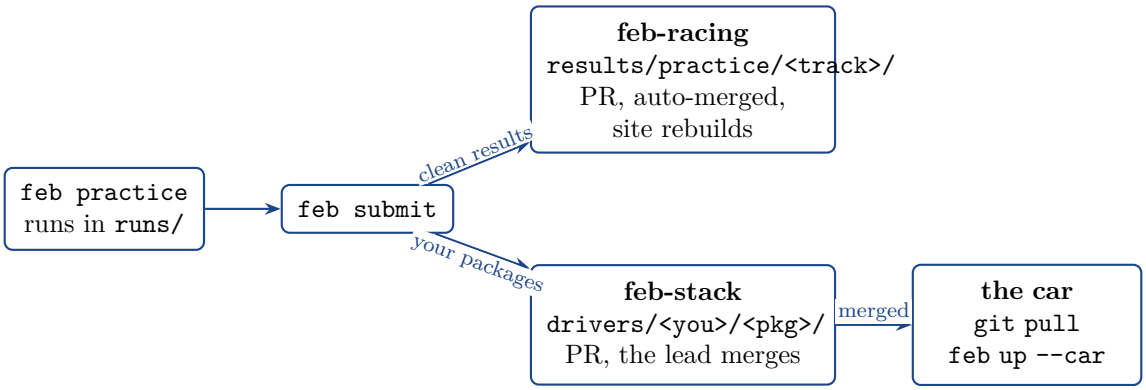

The team repo. `FEBAutonomous/feb-stack` holds the drivers that drive, one folder per person under `drivers/`, and one copy of the shared packages under `shared/` (`feb_mission`, `feb_cone_ordering`). Nobody edits it by hand. To run a teammate's merged driver in your simulator: `./feb up --ws ~/FEB/feb-stack --driver theirs`.

Part III
The car

9 From a merged driver to the wheels

The Jetson on the car has the same box, the same `~/FEB` folder, and the pad's dongle. Nothing on a laptop or on GitHub is needed to drive; the laptop is only a terminal.

Start-up. Gamepad on *first*, then battery in, SW1 on, a minute for the Jetson to boot. Then a terminal on it, whichever fits:

Where	How
no internet (track, corridor)	45 s after boot the car is Wi-Fi network `feb-car`, password `febautonomous`; join it, then `ssh feb@10.42.0.1`
a known Wi-Fi around	the car joins it; `ssh feb@feb-car` from any laptop on the team tailnet, or its address on that network
a USB-C cable to the Jetson	`ssh feb@192.168.55.1`

Password `feb`. Then:

```
cd ~/FEB/feb-stack && git pull
cd ~/FEB/feb-racing
./feb up --car --driver my_driver --mode-name inspection
```

Wait for *Connected to VESC* and *Opened joystick* in the output. If the pad came on after that, Ctrl-C and run it again: the joystick node only looks once. Ctrl-C ends the run, and so does losing the ssh connection, which is the safe way round; for a long demo put `nohup` in front and `&` at the end, the bumper still stops the car.

On the car the workspace is `feb-stack` by default, so every merged driver is built and the named one launches. A driver that is nowhere in the workspace is looked for in the starter kit next, so `./feb up --car --driver feb_driver --mode-name inspection` works on a car with no merged drivers yet; `--ws FOLDER` points at any other workspace. Either way the launch is the same: the VESC, lidar and gamepad drivers instead of the simulator, the supervisor with the dead-man required and the mode's cap, then your launch file with your car yaml on top. LB held, a human drives; RB held, your code drives; let go, it stops. Foxglove on a laptop at `ws://<the car>:8765` shows the same panels as in the simulator. First drive in `inspection`, then `trackdrive`. The lead's own notes on the car, wiring to first drive, are `docs/build-car.md`.

10 When something is wrong

Symptom	Fix
`Cannot connect to the Docker daemon`	Docker Desktop is not running; open it, wait for the whale icon to settle
`this clone sits directly in /home/...`	the clone needs a folder of its own: `mkdir ~/FEB && mv ~/feb-racing ~/FEB/`
`unauthorized` while pulling the image	a stale `ghcr.io` login: `docker logout ghcr.io`, run setup again
`refusing to merge unrelated histories`	you pulled in the old clone; delete it and clone again (Setup)
`no driver.yaml with name '...'`	no card with that `name:` in `stack/` or the starter kit: section 5
`ros2: command not found`	you are in a laptop terminal: `./feb shell`
my node is not there	it did not build: `./feb logs -n 100`, or `colcon build` in the workspace and read it
the simulator says not connected	the house nodes are still starting; `./feb logs -f`
`port is already allocated`	another box holds the port: `./feb reset`
`mounts denied` (Mac)	`~/FEB` is outside `/Users`: move it
the browser desktop will not connect	reload; still nothing, `./feb reset`
nothing is clean enough to submit	a run with a collision is not posted by default; drive slower, or `--all`
anything weird	`./feb reset`: thirty seconds, nothing of yours is in there