

# Kinematics 2. Kinematics

#### Kenneth J. Waldron, James Schmiedeler

Kinematics pertains to the motion of bodies in a robotic mechanism without regard to the forces/torques that cause the motion. Since robotic mechanisms are by their very essence designed for motion, kinematics is the most fundamental aspect of robot design, analysis, control, and simulation. The robotics community has focused on efficiently applying different representations of position and orientation and their derivatives with respect to time to solve foundational kinematics problems.

This chapter will present the most useful representations of the position and orientation of a body in space, the kinematics of the joints most commonly found in robotic mechanisms, and a convenient convention for representing the geometry of robotic mechanisms. These representational tools will be applied to compute the workspace, the forward and inverse kinematics, the forward and inverse instantaneous kinematics, and the static wrench transmission of a robotic mechanism. For brevity, the focus will be on algorithms applicable to open-chain mechanisms.

The goal of this chapter is to provide the reader with general tools in tabulated form and a broader overview of algorithms that can be applied together to solve kinematics problems pertaining to a particular robotic mechanism.

2.1	0verv	iew	12	
2.2	Position and Orientation Representation			
	2.2.1	Position and Displacement	12	

	2.2.2 2.2.3 2.2.4 2.2.5	Orientation and Rotation	13 16 17 19 20
2.3		Kinematics	21
	2.3.1	Lower Pair Joints	21
	2.3.2	Higher Pair Joints	24
	2.3.3	Compound Joints	24
	2.3.4	6-DOF Joint	24
	2.3.5	Physical Realization	25
	2.3.6	Holonomic	
		and Nonholonomic Constraints	25
	2.3.7	Generalized Coordinates	25
2.4	Geom	etric Representation	25
2.5	Works	pace	27
2.6	Forwa	rd Kinematics	28
2.7	Invers	e Kinematics	29
	2.7.1	Closed-Form Solutions	29
	2.7.2	Numerical Methods	30
2.8	<b>Forwa</b> 2.8.1	rd Instantaneous Kinematics	31 31
2.9	<b>Invers</b> 2.9.1	e Instantaneous Kinematics Inverse Jacobian	32
2.10	Static	Wrench Transmission	33
2.11	Conclu	isions and Further Reading	33
Refe	rences		3:

## 2.1 Overview

Unless explicitly stated otherwise, robotic mechanisms are systems of rigid bodies connected by joints. The position and orientation of a rigid body in space are collectively termed the pose. Therefore, robot kinematics describes the pose, velocity, acceleration, and all higher-order derivatives of the pose of the bodies that comprise a mechanism. Since kinematics does not address the forces/torques that induce motion, this chapter focuses on describing pose and velocity. These descriptions are foundational elements of dynamics (Chap. 3), motion planning (Chap. 7), and motion control (Chap. 8) algorithms.

Among the many possible topologies in which systems of bodies can be connected, two of particular importance in robotics are serial chains and fully parallel mechanisms. A serial chain is a system of rigid bodies in which each member is connected to two others, except for the first and last members that are each connected to only one other member. A fully parallel mechanism is one in which there are two members that are connected together by multiple chains of other members and joints. In practice, each of these chains is often itself a serial chain. This chapter focuses almost exclusively on algorithms applicable to serial chains. Parallel mechanisms are dealt with in more detail in Chap. 18. Another important topology is the tree structure, which is similar to a serial chain in that it has no closed loops, but differs from a serial chain in that each member might have multiple members connected to it, forming multiple branches. A serial chain is actually just a special case of a tree structure with no branches. Tree structures are addressed in greater depth in Chap. 3.

# 2.2 Position and Orientation Representation

Spatial, rigid-body kinematics can be viewed as a comparative study of different ways of representing the pose of a body. Translations and rotations, referred to in combination as rigid-body displacements, are also expressed with these representations. No one approach is optimal for all purposes, but the advantages of each can be leveraged appropriately to facilitate the solution of different problems.

The minimum number of coordinates required to locate a body in Euclidean space is six. Many representations of spatial pose employ sets with superabundant coordinates in which auxiliary relationships exist among the coordinates. The number of independent auxiliary relationships is the difference between the number of coordinates in the set and six.

This chapter and those that follow it make frequent use of coordinate frames or simply frames. A coordinate frame i consists of an origin, denoted  $O_i$ , and a triad of mutually orthogonal basis vectors, denoted  $(\hat{x}_i \hat{y}_i \hat{z}_i)$ , that are all fixed within a particular body. The pose of a body will always be expressed relative to some other body, so it can be expressed as the pose of one coordinate frame relative to another. Similarly, rigid-body displacements can be expressed as displacements between two coordinate frames, one of which may be referred to as moving, while the other may be referred to as fixed. This indicates that the observer is located in a stationary position within the fixed frame, not that there exists any absolutely fixed frame.

## 2.2.1 Position and Displacement

The position of the origin of coordinate frame *i* relative to coordinate frame j can be denoted by the  $3 \times 1$  vector

$${}^{j}\boldsymbol{p}_{i} = \begin{pmatrix} {}^{j}\boldsymbol{p}_{i}^{x} \\ {}^{j}\boldsymbol{p}_{i}^{y} \\ {}^{j}\boldsymbol{p}_{i}^{z} \end{pmatrix}.$$

The components of this vector are the Cartesian coordinates of  $O_i$  in the j frame, which are the projections of the vector  ${}^{j}\mathbf{p}_{i}$  onto the corresponding axes. The vector components could also be expressed as the spherical or cylindrical coordinates of  $O_i$  in the j frame. Such representations have advantages for analysis of robotic mechanisms including spherical and cylindrical joints.

A translation is a displacement in which no point in the rigid body remains in its initial position and all straight lines in the rigid body remain parallel to their initial orientations. (The points and lines are not necessarily contained within the boundaries of the finite rigid body, but rather, any point or line in space can be taken to be rigidly fixed in a body.) The translation of a body in space can be represented by the combination of its positions prior to and following the translation. Conversely, the position of a body can be represented as a translation that takes the body from a starting position (in which the coordinate frame fixed to the body coincides with the fixed coordinate frame) to the current position (in which the two frames are not coincident). Thus, any representation of position can be used to create a representation of displacement, and vice versa.

## 2.2.2 Orientation and Rotation

There is significantly greater breadth in the representation of orientation than in that of position. This section does not include an exhaustive summary, but focuses on the representations most commonly applied to robotic mechanisms.

A rotation is a displacement in which at least one point in the rigid body remains in its initial position and not all lines in the body remain parallel to their initial orientations. For example, a body in a circular orbit rotates about an axis through the center of its circular path, and every point on the axis of rotation is a point in the body that remains in its initial position. As in the case of position and translation, any representation of orientation can be used to create a representation of rotation, and vice versa.

#### **Rotation Matrices**

The orientation of coordinate frame i relative to coordinate frame *j* can be denoted by expressing the basis vectors  $(\hat{x}_i \hat{y}_i \hat{z}_i)$  in terms of the basis vectors  $(\hat{x}_i \hat{y}_i \hat{z}_i)$ . This yields  $({}^{j}\hat{x}_{i}{}^{j}\hat{y}_{i}{}^{j}\hat{z}_{i})$ , which when written together as a 3 × 3 matrix is known as the rotation matrix. The components of  ${}^{j}\mathbf{R}_{i}$  are the dot products of the basis vectors of the two coordinate frames.

$${}^{j}\mathbf{R}_{i} = \begin{pmatrix} \hat{\mathbf{x}}_{i} \cdot \hat{\mathbf{x}}_{j} & \hat{\mathbf{y}}_{i} \cdot \hat{\mathbf{x}}_{j} & \hat{\mathbf{z}}_{i} \cdot \hat{\mathbf{x}}_{j} \\ \hat{\mathbf{x}}_{i} \cdot \hat{\mathbf{y}}_{j} & \hat{\mathbf{y}}_{i} \cdot \hat{\mathbf{y}}_{j} & \hat{\mathbf{z}}_{i} \cdot \hat{\mathbf{y}}_{j} \\ \hat{\mathbf{x}}_{i} \cdot \hat{\mathbf{z}}_{j} & \hat{\mathbf{y}}_{i} \cdot \hat{\mathbf{z}}_{j} & \hat{\mathbf{z}}_{i} \cdot \hat{\mathbf{z}}_{j} \end{pmatrix}. \tag{2.1}$$

Because the basis vectors are unit vectors and the dot product of any two unit vectors is the cosine of the angle between them, the components are commonly referred to as direction cosines.

An elementary rotation of frame *i* about the  $\hat{z}_i$  axis through an angle  $\theta$  is

$$\mathbf{R}_{Z}(\theta) = \begin{pmatrix} \cos \theta & -\sin \theta & 0\\ \sin \theta & \cos \theta & 0\\ 0 & 0 & 1 \end{pmatrix}, \tag{2.2}$$

while the same rotation about the  $\hat{\mathbf{y}}_i$  axis is

$$\mathbf{R}_{Y}(\theta) = \begin{pmatrix} \cos \theta & 0 & \sin \theta \\ 0 & 1 & 0 \\ -\sin \theta & 0 & \cos \theta \end{pmatrix}, \tag{2.3}$$

and about the  $\hat{x}_i$  axis is

$$\mathbf{R}_{X}(\theta) = \begin{pmatrix} 1 & 0 & 0 \\ 0 & \cos \theta & -\sin \theta \\ 0 & \sin \theta & \cos \theta \end{pmatrix}.$$
 (2.4)

Rotation matrices are combined through simple matrix multiplication such that the orientation of frame i relative to frame k can be expressed as

$${}^{k}\mathbf{R}_{i}={}^{k}\mathbf{R}_{i}{}^{j}\mathbf{R}_{i}$$
.

The rotation matrix  ${}^{j}\mathbf{R}_{i}$  contains nine elements, while only three parameters are required to define the orientation of a body in space. Therefore, six auxiliary relationships exist among the elements of the matrix. Because the basis vectors of coordinate frame i are mutually orthonormal, as are the basis vectors of coordinate frame j, the columns of  ${}^{j}\mathbf{R}_{i}$  formed from the dot products of these vectors are also mutually orthonormal. A matrix composed of mutually orthonormal vectors is known as an orthogonal matrix and has the property that its inverse is simply its transpose. This property provides the six auxiliary relationships. Three require the column vectors to have unit length, and three require the column vectors to be mutually orthogonal. Alternatively, the orthogonality of the rotation matrix can be seen by considering the frames in reverse order. The orientation of coordinate frame *j* relative to coordinate frame i is the rotation matrix  ${}^{i}\mathbf{R}_{i}$  whose rows are clearly the columns of the matrix  ${}^{j}\mathbf{R}_{i}$ .

In summary,  ${}^{j}\mathbf{R}_{i}$  is the rotation matrix that transforms a vector expressed in coordinate frame i to a vector expressed in coordinate frame j. It provides a representation of the orientation of frame i relative to j and thus, can be a representation of rotation from frame i to frame j. Table 2.1 lists the equivalent rotation matrices for the other representations of orientation listed in this section. Table 2.2 contains the conversions from a known rotation matrix to these other representa-

#### **Euler Angles**

For a minimal representation, the orientation of coordinate frame i relative to coordinate frame i can be denoted as a vector of three angles  $(\alpha, \beta, \gamma)^T$ . These angles are known as Euler angles when each represents a rotation about an axis of a moving coordinate frame. In this way, the location of the axis of each successive rotation depends upon the preceding rotation(s), so the order of the rotations must accompany the three angles to define the orientation. For example, the symbols  $(\alpha, \beta, \gamma)^T$  are used throughout this handbook to indicate Z-Y-X Euler angles. Taking the moving frame i and the fixed frame j to be initially coincident,  $\alpha$  is the rotation about the  $\hat{z}$  axis of frame i,  $\beta$  is the rotation about the rotated  $\hat{\mathbf{y}}$  axis of frame i, and finally,  $\gamma$  is the rotation about the twice rotated  $\hat{x}$  axis of frame i. The equivalent rotation matrix  ${}^{J}\mathbf{R}_{i}$  is given in Table 2.1. Z-Y-Z and Z-X-Z Euler angles are other commonly used con-

**Table 2.1** Equivalent rotation matrices for various representations of orientation, with abbreviations  $c_{\theta} := \cos \theta$ ,  $s_{\theta} := \cos \theta$ ,  $s_{\theta$  $\sin \theta$ , and  $v_{\theta} := 1 - \cos \theta$ 

<i>Z-Y-X</i> Euler angles $(\alpha, \beta, \gamma)^{T}$	${}^{j}\mathbf{R}_{i} = \begin{pmatrix} c_{\alpha}c_{\beta} & c_{\alpha}s_{\beta}s_{\gamma} - s_{\alpha}c_{\gamma} & c_{\alpha}s_{\beta}c_{\gamma} + s_{\alpha}s_{\gamma} \\ s_{\alpha}c_{\beta} & s_{\alpha}s_{\beta}s_{\gamma} + c_{\alpha}c_{\gamma} & s_{\alpha}s_{\beta}c_{\gamma} - c_{\alpha}s_{\gamma} \\ -s_{\beta} & c_{\beta}s_{\gamma} & c_{\beta}c_{\gamma} \end{pmatrix}$
<i>X-Y-Z</i> fixed angles $(\psi, \theta, \phi)^{T}$	${}^{j}\mathbf{R}_{i} = \begin{pmatrix} c_{\phi}c_{\theta} & c_{\phi}s_{\theta}s_{\psi} - s_{\phi}c_{\psi} & c_{\phi}s_{\theta}c_{\psi} + s_{\phi}s_{\psi} \\ s_{\phi}c_{\theta} & s_{\phi}s_{\theta}s_{\psi} + c_{\phi}c_{\psi} & s_{\phi}s_{\theta}c_{\psi} - c_{\phi}s_{\psi} \\ -s_{\theta} & c_{\theta}s_{\psi} & c_{\theta}c_{\psi} \end{pmatrix}$
Angle-axis $ heta \hat{m w}$	${}^{j}\mathbf{R}_{i} = \begin{pmatrix} w_{x}^{2}v_{\theta} + c_{\theta} & w_{x}w_{y}v_{\theta} - w_{z}s_{\theta} & w_{x}w_{z}v_{\theta} + w_{y}s_{\theta} \\ w_{x}w_{y}v_{\theta} + w_{z}s_{\theta} & w_{y}^{2}v_{\theta} + c_{\theta} & w_{y}w_{z}v_{\theta} - w_{x}s_{\theta} \\ w_{x}w_{z}v_{\theta} - w_{y}s_{\theta} & w_{y}w_{z}v_{\theta} + w_{x}s_{\theta} & w_{z}^{2}v_{\theta} + c_{\theta} \end{pmatrix}$
Unit quaternions $(\epsilon_0 \ \epsilon_1 \ \epsilon_2 \ \epsilon_3)^T$	${}^{j}\mathbf{R}_{i} = \begin{pmatrix} 1 - 2\left(\epsilon_{2}^{2} + \epsilon_{3}^{2}\right) & 2\left(\epsilon_{1}\epsilon_{2} - \epsilon_{0}\epsilon_{3}\right) & 2\left(\epsilon_{1}\epsilon_{3} + \epsilon_{0}\epsilon_{2}\right) \\ 2\left(\epsilon_{1}\epsilon_{2} + \epsilon_{0}\epsilon_{3}\right) & 1 - 2\left(\epsilon_{1}^{2} + \epsilon_{3}^{2}\right) & 2\left(\epsilon_{2}\epsilon_{3} - \epsilon_{0}\epsilon_{1}\right) \\ 2\left(\epsilon_{1}\epsilon_{3} - \epsilon_{0}\epsilon_{2}\right) & 2\left(\epsilon_{2}\epsilon_{3} + \epsilon_{0}\epsilon_{1}\right) & 1 - 2\left(\epsilon_{1}^{2} + \epsilon_{2}^{2}\right) \end{pmatrix}$

ventions from among the 12 different possible orders of

Regardless of the order of rotations, an Euler angle representation of orientation always exhibits a singularity when the first and last rotations both occur about the

Table 2.2 Conversions from a rotation matrix to various representations of orientation

 ${}^{j}\mathbf{R}_{i} = \begin{pmatrix} r_{11} & r_{12} & r_{13} \\ r_{21} & r_{22} & r_{23} \\ r_{31} & r_{32} & r_{33} \end{pmatrix}$ Z-Y-X Euler angles  $(\alpha, \beta, \gamma)^{T}$  $\beta = A \tan 2 \left( -r_{31}, \sqrt{r_{11}^2 + r_{21}^2} \right)$  $\alpha = A \tan 2 \left( \frac{r_{21}}{\cos \beta}, \frac{r_{11}}{\cos \beta} \right)$  $\gamma = A \tan 2 \left( \frac{r_{32}}{\cos \beta}, \frac{r_{33}}{\cos \beta} \right)$ X-Y-Z fixed angles  $(\psi, \theta, \phi)^{T}$ :  $\theta = A \tan 2 \left( -r_{31}, \sqrt{r_{11}^2 + r_{21}^2} \right)$  $\psi = A \tan 2 \left( \frac{r_{21}}{\cos \theta}, \frac{r_{11}}{\cos \theta} \right)$  $\phi = A \tan 2 \left( \frac{r_{32}}{\cos \theta}, \frac{r_{33}}{\cos \theta} \right)$ Angle axis  $\theta \hat{\boldsymbol{w}}$ :  $\theta = \cos^{-1}\left(\frac{r_{11} + r_{22} + r_{33} - 1}{2}\right)$ 

$$\hat{w} = \frac{1}{2\sin\theta} \begin{pmatrix} r_{32} - r_{23} \\ r_{13} - r_{31} \\ r_{21} - r_{12} \end{pmatrix}$$
Unit quaternions  $(\epsilon_0 \ \epsilon_1 \ \epsilon_2 \ \epsilon_3)^{\text{T}}$ :
$$\epsilon_0 = \frac{1}{2} \sqrt{1 + r_{11} + r_{22} + r_{33}}$$

$$\epsilon_1 = \frac{r_{32} - r_{23}}{4\epsilon_0}$$

$$\epsilon_2 = \frac{r_{13} - r_{31}}{4\epsilon_0}$$

Rotation matrix:

same axis. This can be readily seen in the second block of Table 2.2 wherein the angles  $\alpha$  and  $\gamma$  are undefined when  $\beta = \pm 90^{\circ}$ . (For Z-Y-Z and Z-X-Z Euler angles, the singularity occurs when the second rotation is  $0^{\circ}$ or 180°.) This creates a problem in relating the angular velocity vector of a body to the time derivatives of Euler angles, which somewhat limits their usefulness in modeling robotic systems. This velocity relationship for Z-Y-X Euler angles is

$$\begin{pmatrix} \dot{\alpha} \\ \dot{\beta} \\ \dot{\gamma} \end{pmatrix} = \frac{1}{\cos \beta} \begin{pmatrix} 0 & \sin \gamma & \cos \gamma \\ 0 & \cos \gamma \cos \beta & -\sin \gamma \cos \beta \\ \cos \beta & \sin \gamma \sin \beta & \cos \gamma \sin \beta \end{pmatrix} \begin{pmatrix} \omega_x \\ \omega_y \\ \omega_z \end{pmatrix},$$
(2.5)

where  $(\omega_x, \omega_y, \omega_z)^{\mathrm{T}} = {}^{i}\boldsymbol{\omega}_i$  is given in moving frame i. In some circumstances, the inverse of this relationship may be required.

$$\begin{pmatrix} \omega_{x} \\ \omega_{y} \\ \omega_{z} \end{pmatrix} = \begin{pmatrix} -\sin\beta & 0 & 1 \\ \cos\beta\sin\gamma & \cos\gamma & 0 \\ \cos\beta\cos\gamma & -\sin\gamma & 0 \end{pmatrix} \begin{pmatrix} \dot{\alpha} \\ \dot{\beta} \\ \dot{\gamma} \end{pmatrix}. \quad (2.6)$$

## **Fixed Angles**

A vector of three angles can also denote the orientation of coordinate frame i relative to coordinate frame j when each angle represents a rotation about an axis of a fixed frame. Appropriately, such angles are referred to as fixed angles, and the order of the rotations must again accompany the angles to define the orientation. X-Y-Z fixed angles, denoted here as  $(\psi, \theta, \phi)^{T}$ , are a common convention from among the, again, 12 different possible orders of rotations. Taking the moving frame i and the fixed frame j to be initially coincident,  $\psi$  is the yaw rotation about the fixed  $\hat{x}_i$  axis,  $\theta$  is the pitch rotation about the fixed  $\hat{y}_i$  axis, and  $\phi$  is the roll rotation about the fixed  $\hat{z}_i$  axis. As can be seen by comparing the respective equivalent rotation matrices in Table 2.1 and the respective conversions in Table 2.2, a set of X-Y-Zfixed angles is exactly equivalent to the same set of Z-Y-X Euler angles ( $\alpha = \phi$ ,  $\beta = \theta$ , and  $\gamma = \psi$ ). This result holds in general such that three rotations about the three axes of a fixed frame define the same orientation as the same three rotations taken in the opposite order about the three axes of a moving frame. Likewise, all fixed-angle representations of orientations suffer from the singularity discussed for Euler angles. Also, the relationship between the time derivatives of fixed angles and the angular velocity vector is similar to the relationship for Euler angles.

## Angle-Axis

A single angle  $\theta$  in combination with a unit vector  $\hat{\boldsymbol{w}}$ can also denote the orientation of coordinate frame i relative to coordinate frame j. In this case, frame i is rotated through the angle  $\theta$  about an axis defined by the vector  $\hat{\boldsymbol{w}} = (w_x \ w_y \ w_z)^{\mathrm{T}}$  relative to frame j. The vector  $\hat{\boldsymbol{w}}$  is sometimes referred to as the equivalent axis of a finite rotation. The angle-axis representation, typically written as either  $\theta \hat{\boldsymbol{w}}$  or  $(\theta w_x \theta w_y \theta w_z)^T$ , is superabundant by one because it contains four parameters. The auxiliary relationship that resolves this is the unit magnitude of vector  $\hat{\boldsymbol{w}}$ . Even with this auxiliary relationship, the angle-axis representation is not unique because rotation through an angle of  $-\theta$  about  $-\hat{\boldsymbol{w}}$  is equivalent to a rotation through  $\theta$  about  $\hat{\boldsymbol{w}}$ . Table 2.3 contains the conversions from the angle-axis representation to unit quaternions and vice versa. The conversions from these two representations to Euler angles or fixed angles can be easily found by using

**Table 2.3** Conversions from angle-axis to unit quaternion representations of orientation and vice versa

```
Angle-axis \theta \hat{\boldsymbol{w}} to unit quaternion (\epsilon_0 \ \epsilon_1 \ \epsilon_2 \ \epsilon_3)^{\mathrm{T}}:
  \epsilon_0 = \cos \frac{\theta}{2}
  \epsilon_1 = w_x \sin \frac{\theta}{2}
  \epsilon_2 = w_v \sin \frac{\theta}{2}
  \epsilon_3 = w_z \sin \frac{\theta}{2}
 Unit quaternion (\epsilon_0 \ \epsilon_1 \ \epsilon_2 \ \epsilon_3)^T to angle-axis \theta \ \hat{\boldsymbol{w}}:
  \theta = 2\cos^{-1}\epsilon_0
  w_x = \frac{\epsilon_1}{\sin\frac{\theta}{2}}
```

the conversions in Table 2.2 in conjunction with the equivalent rotation matrices in Table 2.1. Velocity relationships are more easily dealt with using the closely related quaternion representation.

#### **Quaternions**

The quaternion representation of orientation due to Hamilton [2.1], while largely superseded by the simpler vector representations of Gibbs [2,2] and Graßmann [2.3], is extremely useful for problems in robotics that result in representational singularities in the vector/matrix notation [2.4]. Quaternions do not suffer from singularities as Euler and fixed angles do.

A quaternion  $\epsilon$  is defined to have the form

$$\epsilon = \epsilon_0 + \epsilon_1 i + \epsilon_2 j + \epsilon_3 k$$
,

where the components  $\epsilon_0$ ,  $\epsilon_1$ ,  $\epsilon_2$ , and  $\epsilon_3$  are scalars, sometimes referred to as Euler parameters, and i, j, and k are operators. The operators are defined to satisfy the following combinatory rules

$$ii = jj = kk = -1$$
,  
 $ij = k$ ,  $jk = i$ ,  $ki = j$ ,  
 $ji = -k$ ,  $kj = -i$ ,  $ik = -j$ .

Two quaternions are added by adding the respective components separately, so the operators act as separators. The null element for addition is the quaternion  $\mathbf{0} = 0 + 0i + 0j + 0k$ , and quaternion sums are associative, commutative, and distributive. The null element for multiplication is  $\mathbf{I} = 1 + 0i + 0j + 0k$ , as can be seen using  $\mathbf{I}\boldsymbol{\epsilon} = \boldsymbol{\epsilon}$  for any quaternion  $\boldsymbol{\epsilon}$ . Quaternion products are associative and distributive, but not commutative, and following the conventions of the operators and addition, have the form

$$ab = a_0b_0 - a_1b_1 - a_2b_2 - a_3b_3$$

$$+ (a_0b_1 + a_1b_0 + a_2b_3 - a_3b_2)i$$

$$+ (a_0b_2 + a_2b_0 + a_3b_1 - a_1b_3)j$$

$$+ (a_0b_3 + a_3b_0 + a_1b_2 - a_2b_1)k.$$
(2.7)

It is convenient to define the conjugate of a quaternion

$$\tilde{\epsilon} = \epsilon_0 - \epsilon_1 i - \epsilon_2 i - \epsilon_3 k$$
,

so that

$$\epsilon \tilde{\epsilon} = \tilde{\epsilon} \epsilon = \epsilon_0^2 + \epsilon_1^2 + \epsilon_2^2 + \epsilon_3^2$$
.

A unit quaternion can then be defined such that  $\epsilon \tilde{\epsilon} = 1$ . Often,  $\epsilon_0$  is referred to as the scalar part of the quaternion, and  $(\epsilon_1 \epsilon_2 \epsilon_3)^T$  is referred to as the vector part.

Unit quaternions are used to describe orientation, and the unit magnitude provides the auxiliary relationship to resolve the use of superabundant (four) coordinates. A vector is defined in quaternion notation as a quaternion with  $\epsilon_0 = 0$ . Thus, a vector  $\mathbf{p} = (p_x p_y p_z)^T$ can be expressed as a quaternion  $\mathbf{p} = p_x \mathbf{i} + p_y \mathbf{j} + p_z \mathbf{k}$ . For any unit quaternion  $\epsilon$ , the operation  $\epsilon p\tilde{\epsilon}$  performs a rotation of the vector  $\boldsymbol{p}$  about the direction  $(\epsilon_1 \ \epsilon_2 \ \epsilon_3)^{\mathrm{T}}$ . This is clearly seen by expanding the operation  $\epsilon p \tilde{\epsilon}$  and comparing the results with the equivalent rotation matrix listed in Table 2.1. Also, as shown in Table 2.3, unit quaternions are closely related to the angle-axis representation.  $\epsilon_0$  corresponds (but is not equal) to the angle of rotation, while  $\epsilon_1$ ,  $\epsilon_2$ , and  $\epsilon_3$  define the axis of rotation.

For velocity analysis, the time derivative of the quaternion can be related to the angular velocity vector as

$$\begin{pmatrix} \dot{\epsilon}_0 \\ \dot{\epsilon}_1 \\ \dot{\epsilon}_2 \\ \dot{\epsilon}_3 \end{pmatrix} = \frac{1}{2} \begin{pmatrix} -\epsilon_1 & -\epsilon_2 & -\epsilon_3 \\ \epsilon_0 & \epsilon_3 & -\epsilon_2 \\ -\epsilon_3 & \epsilon_0 & \epsilon_1 \\ \epsilon_2 & -\epsilon_1 & \epsilon_0 \end{pmatrix} \begin{pmatrix} \omega_x \\ \omega_y \\ \omega_z \end{pmatrix}, \tag{2.8}$$

where  $(\omega_x, \omega_y, \omega_z)^{\mathrm{T}} = {}^{j}\boldsymbol{\omega}_i$  is given in fixed frame j. Defining  $\epsilon_{1:3} = (\epsilon_1, \epsilon_2, \epsilon_3)^T$ , it is straightforward to verify that

$$\begin{split} \dot{\boldsymbol{\epsilon}}_0 &= -\frac{1}{2}{}^{j}\boldsymbol{\omega}_i^{\mathrm{T}}\,\boldsymbol{\epsilon}_{1:3} \\ \dot{\boldsymbol{\epsilon}}_{1:3} &= \frac{1}{2}\left(\boldsymbol{\epsilon}_0{}^{j}\boldsymbol{\omega}_i - \boldsymbol{\epsilon}_{1:3} \times {}^{j}\boldsymbol{\omega}_i\right) \,. \end{split}$$

In the case that the angular velocity is given in the moving coordinates, these rate equations take a similar form.

$$\dot{\boldsymbol{\epsilon}}_{0} = -\frac{1}{2} {}^{i} \boldsymbol{\omega}_{i}^{\mathrm{T}} \boldsymbol{\epsilon}_{1:3}$$

$$\dot{\boldsymbol{\epsilon}}_{1:3} = \frac{1}{2} \left( \boldsymbol{\epsilon}_{0} {}^{i} \boldsymbol{\omega}_{i} + \boldsymbol{\epsilon}_{1:3} \times {}^{i} \boldsymbol{\omega}_{i} \right)$$

The corresponding rate matrix for this case is the same as (2.8) with the exception that the off-diagonal elements in the bottom  $3 \times 3$  submatrix have opposite sign.

While a unit quaternion represents only the orientation of a body, quaternions may be dualized [2.5-7] to create an algebra that provides a description of the position and orientation of a body in space. Other combined representations are discussed in the following sections.

## 2.2.3 Homogeneous Transformations

The preceding sections have addressed representations of position and orientation separately. With homogeneous transformations, position vectors and rotation matrices are combined together in a compact notation. Any vector  $i\mathbf{r}$  expressed relative to the i coordinate frame can be expressed relative to the *i* coordinate frame if the position and orientation of the i frame are known relative to the j frame. Using the notation of Sect. 2.2.1, the position of the origin of coordinate frame i relative to coordinate frame j can be denoted by the vector  ${}^{j}\boldsymbol{p}_{i} = ({}^{j}p_{i}^{x}{}^{j}p_{i}^{y}{}^{j}p_{i}^{z})^{\mathrm{T}}$ . Using the notation of Sect. 2.2.2, the orientation of frame i relative to frame jcan be denoted by the rotation matrix  ${}^{j}\mathbf{R}_{i}$ . Thus,

$${}^{j}\mathbf{r} = {}^{j}\mathbf{R}_{i}{}^{i}\mathbf{r} + {}^{j}\mathbf{p}_{i} . \tag{2.9}$$

This equation can be written

$$\begin{pmatrix} {}^{j}\boldsymbol{r} \\ 1 \end{pmatrix} = \begin{pmatrix} {}^{j}\mathbf{R}_{i} & {}^{j}\boldsymbol{p}_{i} \\ \mathbf{0}^{\mathrm{T}} & 1 \end{pmatrix} \begin{pmatrix} {}^{i}\boldsymbol{r} \\ 1 \end{pmatrix}, \tag{2.10}$$

where

$${}^{j}\mathbf{T}_{i} = \begin{pmatrix} {}^{j}\mathbf{R}_{i} & {}^{j}\mathbf{p}_{i} \\ \mathbf{0}^{\mathrm{T}} & 1 \end{pmatrix}$$
 (2.11)

is the 4×4 homogeneous transformation matrix and  $({}^{j}\mathbf{r}\,1)^{\mathrm{T}}$  and  $({}^{i}\mathbf{r}\,1)^{\mathrm{T}}$  are the homogeneous representations of the position vectors  ${}^{j}\mathbf{r}$  and  ${}^{i}\mathbf{r}$ . The matrix  ${}^{j}\mathbf{T}_{i}$  transforms vectors from coordinate frame i to coordinate frame j. Its inverse  ${}^{j}\mathbf{T}_{i}^{-1}$  transforms vectors from coordinate frame j to coordinate frame i.

$${}^{j}\mathbf{T}_{i}^{-1} = {}^{i}\mathbf{T}_{j} = \begin{pmatrix} {}^{j}\mathbf{R}_{i}^{\mathrm{T}} & -{}^{j}\mathbf{R}_{i}^{\mathrm{T}j}\mathbf{p}_{i} \\ \mathbf{0}^{\mathrm{T}} & 1 \end{pmatrix}.$$
 (2.12)

Composition of 4 × 4 homogeneous transformation matrices is accomplished through simple matrix multiplication, just as in the case of  $3 \times 3$  rotation matrices. Therefore,  ${}^{k}\mathbf{T}_{i} = {}^{k}\mathbf{T}_{i}^{j}\mathbf{T}_{i}$ . Since matrix multiplications do not commute, the order or sequence is important.

The homogeneous transformation of a simple rotation about an axis is sometimes denoted Rot such that a rotation of  $\theta$  about an axis  $\hat{z}$  is

$$\mathbf{Rot}(\hat{z}, \theta) = \begin{pmatrix} \cos \theta & -\sin \theta & 0 & 0\\ \sin \theta & \cos \theta & 0 & 0\\ 0 & 0 & 1 & 0\\ 0 & 0 & 0 & 1 \end{pmatrix}.$$
(2.13)

Similarly, the homogeneous transformation of a simple translation along an axis is sometimes denoted Trans such that a translation of d along an axis  $\hat{x}$  is

$$\mathbf{Trans}(\hat{\mathbf{x}}, d) = \begin{pmatrix} 1 & 0 & 0 & d \\ 0 & 1 & 0 & 0 \\ 0 & 0 & 1 & 0 \\ 0 & 0 & 0 & 1 \end{pmatrix}. \tag{2.14}$$

Homogeneous transformations are particularly attractive when compact notation is desired and/or when ease of programming is the most important consideration. This is not, however, a computationally efficient representation since it introduces a large number of additional multiplications by ones and zeros. Although homogeneous transformation matrices technically contain 16 elements, four are defined to be zero or one, and the remaining elements are composed of a rotation matrix and a position vector. Therefore, the only truly superabundant coordinates come from the rotation matrix component, so the relevant auxiliary relationships are those associated with the rotation matrix.

## 2.2.4 Screw Transformations

The transformation in (2.9) can be viewed as composed of a rotation between coordinate frames i and j and a separate displacement between those frames. To get from frame i to frame j, one could perform the rotation first, followed by the displacement, or vice versa. Alternatively, the spatial displacement between the frames can be expressed, except in the case of a pure translation, as a rotation about a unique line combined with a translation parallel to that line.

#### Chasles' Theorem

Chasles' theorem, in the form stated by Chirikjian and *Kyatkin* [2.8], has two parts. The first states that:

Any displacement of a body in space can be accomplished by means of a translation of a designated point from its initial to its final position, followed by a rotation of the whole body about that point to bring it into its final orientation.

The second part states that:

Any displacement of a body in space can be accomplished by means of a rotation of the body about a unique line in space accompanied by a translation of the body parallel to that line.

Such a line is called a screw axis, and it is this second result that is usually thought of as Chasles' theorem.

The first part of the theorem is almost axiomatic. A designated point in a body anywhere in Euclidean space can be displaced from a given initial position to a given final position. By further requiring that all points in the body traverse the same displacement, the body translates so that the designated point moves from its initial position to its final position. The body can then be rotated about that point into any given final orientation.

The second part of the theorem depends on this representation of a spatial displacement and requires

a more complex argument. A preliminary theorem due to Euler allows greater specificity about the rotation of the body: Any displacement of a body in which one point remains fixed is equivalent to a rotation of that body about a unique axis passing through that point. Geometrically, embedding three points in the moving body and letting one be the fixed point about which rotation occurs, each of the other two will have initial and final positions. The right bisector planes of the lines joining the initial and final positions in each case necessarily contain the fixed point. Any line in the bisector plane can be the axis of a rotation that carries the corresponding point from its initial to its final position. Therefore, the unique line common to the two bisector planes is such that rotation about it will carry any point in the body from its initial to its final position. The rigidity condition requires that all planes in the body that contain that line rotate through the same

For any rotation of a rigid body described by a rotation matrix  ${}^{j}\mathbf{R}_{i}$ , Euler's theorem states that there is a unique eigenvector  $\hat{\boldsymbol{w}}$  such that

$${}^{j}\mathbf{R}_{i}\hat{\boldsymbol{w}}=\hat{\boldsymbol{w}}$$
 (2.15)

where  $\hat{\boldsymbol{w}}$  is a unit vector parallel to the axis of rotation. This expression requires a unit eigenvalue of  ${}^{j}\mathbf{R}_{i}$  corresponding to the eigenvector  $\hat{\boldsymbol{w}}$ . The remaining two eigenvalues are  $\cos \theta \pm i \sin \theta$ , where i is the complex operator and  $\theta$  is the angle of rotation of the body about the axis.

Combining the first part of Chasles' theorem with Euler's theorem, a general spatial displacement can be expressed as a translation taking a point from its initial to its final position, followed by a unique rotation about a unique axis through that point that carries the body from its initial to its final orientation. Resolving the translation into components in the direction of and orthogonal to the rotation axis, every point in the body has the same displacement component in the direction of the axis because rotation about it does not affect that component. Projected onto a plane normal to the rotation axis, the kinematic geometry of the displacement is identical to that of planar motion. Just as there is a unique point in the plane about which a body could be rotated between two given positions, there is a unique point in the projection plane. If the rotation axis is moved to pass through that point, the spatial displacement can be accomplished by a rotation about that axis combined with a translation along it, as stated by the theorem.

The line about which rotation takes place is called the screw axis of the displacement. The ratio of the linear displacement d to the rotation  $\theta$  is referred to as the

pitch h of the screw axis [2.4]. Thus,

$$d = h\theta. (2.16)$$

The screw axis of a pure translation is not unique. Any line parallel to the translation can be regarded as the screw axis, and since the rotation  $\theta$  is zero, the axis of a translation is said to have infinite pitch.

A screw axis is most conveniently represented in any coordinate frame by means of a unit vector  $\hat{\boldsymbol{w}}$  parallel to it and the position vector  $\rho$  of any point lying on it. Additional specification of the pitch h and the angle of rotation  $\theta$  completely defines the location of a second coordinate frame relative to the first frame. Thus, a total of eight coordinates define a screw transformation, which is superabundant by two. The unit magnitude of vector  $\hat{\boldsymbol{w}}$  provides one auxiliary relationship, but in general, there is no second auxiliary relationship because the same screw axis is defined by all points lying on it, which is to say that the vector  $\rho$  contains one free coordinate.

Algebraically, a screw displacement is represented

$$^{j}\mathbf{r} = {}^{j}\mathbf{R}_{i}({}^{i}\mathbf{r} - \boldsymbol{\rho}) + d\hat{\boldsymbol{w}} + \boldsymbol{\rho}$$
 (2.17)

Comparing this expression to (2.9) yields

$$^{j}\mathbf{p}_{i}=d\mathbf{\hat{w}}+\left(\mathbf{1}_{3\times3}-^{j}\mathbf{R}_{i}\right)\mathbf{\rho}$$
 (2.18)

 $\mathbf{1}_{3\times3}$  denotes the  $3\times3$  identity matrix. An expression for d is easily obtained by taking the inner product of both sides of the equation with  $\hat{\boldsymbol{w}}$ .

$$d = \hat{\boldsymbol{w}}^{\mathrm{T}j} \boldsymbol{p}_i \,. \tag{2.19}$$

The matrix  $\mathbf{1}_{3\times 3} - {}^{j}\mathbf{R}_{i}$  is singular, so (2.18) cannot be solved to give a unique value of  $\rho$ , but since  $\rho$  can represent any point on the screw axis, this would not be appropriate. One component of  $\rho$  can be arbitrarily chosen, and any two of the component equations can then be solved to find the two other components of  $\rho$ . All other points on the screw axis are then given by  $\rho + k\hat{w}$ , where k can take any value.

Table 2.4 contains the conversions between screw transformations and homogeneous transformations. Note that the equivalent rotation matrix for a screw transformation has the same form as the equivalent rotation matrix for an angle-axis representation of orientation in Table 2.1. Also, the auxiliary relationship that the vector  $\boldsymbol{\rho}$  be orthogonal to the screw axis ( $\hat{\boldsymbol{w}}^{\mathrm{T}}\boldsymbol{\rho}=0$ ) is used in Table 2.4 to provide a unique conversion to the screw transformation. The inverse result, that of finding the rotation matrix  ${}^{j}\mathbf{R}_{i}$  and the translation  ${}^{j}\mathbf{p}_{i}$ corresponding to a given screw displacement, is found from Rodrigues' equation.

## Rodrigues' Equation

Given a screw axis, the angular displacement of a body about it, and the translation of the body along it, the displacement of an arbitrary point in that body can be found. Viewing a matrix transformation as describing the displacement of the body, this is equivalent to finding the matrix transformation equivalent to a given screw displacement.

Referring to Fig. 2.1, the position vectors of a point before and after a screw displacement can be geometrically related as

where  ${}^{i}\mathbf{r}$  and  ${}^{j}\mathbf{r}$  denote the initial and final positions of the point,  $\hat{\boldsymbol{w}}$  and  $\boldsymbol{\rho}$  specify the screw axis, and  $\theta$  and dgive the displacement about it. This result is usually referred to as Rodrigues' equation [2.9], which can be written as a matrix transformation [2.10],

$${}^{j}\mathbf{r} = {}^{j}\mathbf{R}_{i}{}^{i}\mathbf{r} + {}^{j}\mathbf{p}_{i} , \qquad (2.21)$$

since, when expanded, it gives three linear equations for the components of  ${}^{j}\mathbf{r}$  in terms of those of  ${}^{i}\mathbf{r}$ .

$${}^{j}\mathbf{R}_{i} = \begin{pmatrix} w_{x}^{2}v_{\theta} + c_{\theta} & w_{x}w_{y}v_{\theta} - w_{z}s_{\theta} & w_{x}w_{z}v_{\theta} + w_{y}s_{\theta} \\ w_{x}w_{y}v_{\theta} + w_{z}s_{\theta} & w_{y}^{2}v_{\theta} + c_{\theta} & w_{y}w_{z}v_{\theta} - w_{x}s_{\theta} \\ w_{x}w_{z}v_{\theta} - w_{y}s_{\theta} & w_{y}w_{z}v_{\theta} + w_{x}s_{\theta} & w_{z}^{2}v_{\theta} + c_{\theta} \end{pmatrix}$$

$${}^{j}\mathbf{n}_{i} = (1_{2}, 2_{2}, -{}^{j}\mathbf{R}_{1}) \mathbf{n}_{x} + h\theta\hat{\mathbf{w}}_{x}$$

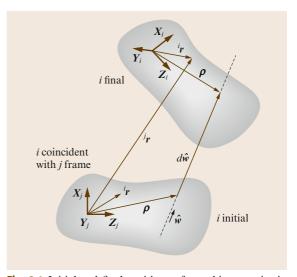


Fig. 2.1 Initial and final positions of an arbitrary point in a body undergoing a screw displacement;  ${}^{i}r$  is the position of the point relative to the moving frame, which is coincident with the fixed frame j in its initial position;  ${}^{j}r$  is the position of the point relative to the fixed frame after the screw displacement of the moving body

Table 2.4 Conversions from a screw transformation to a homogeneous transformation and vice versa, with abbreviations  $c_{\theta} := \cos \theta$ ,  $s_{\theta} := \sin \theta$ , and  $v_{\theta} := 1 - \cos \theta$ 

Screw transformation to homogeneous transformation

$${}^{j}\mathbf{R}_{i} = \begin{pmatrix} w_{x}^{2}v_{\theta} + c_{\theta} & w_{x}w_{y}v_{\theta} - w_{z}s_{\theta} & w_{x}w_{z}v_{\theta} + w_{y}s_{\theta} \\ w_{x}w_{y}v_{\theta} + w_{z}s_{\theta} & w_{y}^{2}v_{\theta} + c_{\theta} & w_{y}w_{z}v_{\theta} - w_{x}s_{\theta} \\ w_{x}w_{z}v_{\theta} - w_{y}s_{\theta} & w_{y}w_{z}v_{\theta} + w_{x}s_{\theta} & w_{z}^{2}v_{\theta} + c_{\theta} \end{pmatrix}$$

$$^{j}\mathbf{p}_{i}=(\mathbf{1}_{3\times3}-^{j}\mathbf{R}_{i})\boldsymbol{\rho}+h\theta\,\hat{\boldsymbol{w}}$$

Homogeneous transformation to screw transformation

$$I = \begin{pmatrix} r_{32} - r_{23} \\ r_{13} - r_{31} \\ r_{21} - r_{12} \end{pmatrix}^{T}$$

$$\theta = \operatorname{sign} (I^{Tj} p_{i}) \left| \cos^{-1} \left( \frac{r_{11} + r_{22} + r_{33} - 1}{2} \right) \right|$$

$$h = \frac{I^{Tj} p_{i}}{2\theta \sin \theta}$$

$$\rho = \frac{(\mathbf{1}_{3 \times 3} - J \mathbf{R}_{i}^{T})^{j} p_{i}}{2(1 - \cos \theta)}$$

$$\hat{w} = \frac{I}{2 \sin \theta}$$

where the abbreviations are  $c_{\theta} := \cos \theta$ ,  $s_{\theta} := \sin \theta$ , and  $v_{\theta} = 1 - \cos \theta$ . The rotation matrix  ${}^{j}\mathbf{R}_{i}$  expressed in this form is also called the screw matrix, and these equations give the elements of  ${}^{j}\mathbf{R}_{i}$  and  ${}^{j}\mathbf{p}_{i}$  in terms of the screw parameters.

An exception arises in the case of a pure translation, for which  $\theta = 0$  and Rodrigues' equation becomes

$${}^{j}\mathbf{r} = {}^{i}\mathbf{r} + d\hat{\mathbf{w}} . \tag{2.22}$$

Substituting for this case,  ${}^{j}\mathbf{R}_{i} = \mathbf{1}_{3\times 3}$  and  ${}^{j}\mathbf{p}_{i} = d\hat{\mathbf{w}}$ . Additional information on screw theory can be found in [2.11–15].

## 2.2.5 Matrix Exponential Parameterization

The position and orientation of a body can also be expressed in a unified fashion with an exponential mapping. This approach is introduced first with its application to pure rotation and expanded to rigid-body motion. More details on the approach can be found in [2.16] and [2.17].

## **Exponential Coordinates for Rotation**

The set of all orthogonal matrices with determinant 1, which is the set of all rotation matrices  $\mathbf{R}$ , is a group under the operation of matrix multiplication denoted as  $SO(3) \subset \mathbb{R}^{3\times 3}$  [2.18]. This stands for special orthogonal wherein special alludes to the det  $\mathbf{R}$  being +1instead of  $\pm 1$ . The set of rotation matrices satisfies the four axioms of a group:

- Closure:  $\mathbf{R}_1 \mathbf{R}_2 \in SO(3) \quad \forall \mathbf{R}_1, \mathbf{R}_2 \in SO(3)$
- *Identity*:  $\mathbf{1}_{3\times 3}\mathbf{R} = \mathbf{R}\mathbf{1}_{3\times 3} = \mathbf{R} \quad \forall \mathbf{R} \in SO(3)$
- *Inverse*:  $\mathbf{R}^{\mathrm{T}} \in SO(3)$  is the unique inverse of  $\mathbf{R}$  $\forall \mathbf{R} \in SO(3)$

Associativity:  $(\mathbf{R}_1\mathbf{R}_2)\mathbf{R}_3 = \mathbf{R}_1(\mathbf{R}_2\mathbf{R}_3)$  $\forall \mathbf{R}_1, \mathbf{R}_2,$  $\mathbf{R}_3 \in SO(3)$ .

In the angle-axis representation presented in Sect. 2.2.2, orientation is expressed as an angle  $\theta$  of rotation about an axis defined by the unit vector  $\hat{\boldsymbol{w}}$ . The equivalent rotation matrix found in Table 2.1 can be expressed as the exponential map

$$\mathbf{R} = e^{\mathbf{S}(\hat{\boldsymbol{w}})\theta}$$

$$= \mathbf{1}_{3\times3} + \theta \mathbf{S}(\hat{\boldsymbol{w}}) + \frac{\theta^2}{2!} \mathbf{S}(\hat{\boldsymbol{w}})^2$$

$$+ \frac{\theta^3}{3!} \mathbf{S}(\hat{\boldsymbol{w}})^3 + \dots, \qquad (2.23)$$

where  $\mathbf{S}(\hat{\boldsymbol{w}})$  is the unit skew-symmetric matrix

$$\mathbf{S}(\hat{\boldsymbol{w}}) = \begin{pmatrix} 0 & -w_z & w_y \\ w_z & 0 & -w_x \\ -w_y & w_x & 0 \end{pmatrix}. \tag{2.24}$$

Thus, the exponential map transforms a skew-symmetric matrix  $S(\hat{w})$  that corresponds to an axis of rotation  $\hat{\boldsymbol{w}}$  into an orthogonal matrix **R** that corresponds to a rotation about the axis  $\hat{\boldsymbol{w}}$  through an angle of  $\theta$ . It can be shown that the closed-form expression for  $e^{S(\hat{w})\theta}$ , which can be efficiently computed, is

$$e^{\mathbf{S}(\hat{\boldsymbol{w}})\theta} = \mathbf{1}_{3\times 3} + \mathbf{S}(\hat{\boldsymbol{w}})\sin\theta + \mathbf{S}(\hat{\boldsymbol{w}})^2(1-\cos\theta).$$
(2.25)

The components of  $(\theta w_x \theta w_y \theta w_z)^T$ , which are related to the elements of the rotation matrix R in Table 2.2, are referred to as the *exponential coordinates* for **R**.

## **Exponential Coordinates** for Rigid-Body Motion

As indicated in Sect. 2.2.3, the position and orientation of a body can be expressed by the combination of a position vector  $\mathbf{p} \in \mathbb{R}^{\hat{3}}$  and a rotation matrix  $\mathbf{R} \in SO(3)$ . The product space of  $\mathbb{R}^3$  with SO(3) is the group known as SE(3), which stands for special Euclidean.

$$SE(3) = \{ (\mathbf{p}, \mathbf{R}) : \mathbf{p} \in \mathbb{R}^3, \mathbf{R} \in SO(3) \}$$
$$= \mathbb{R}^3 \times SO(3).$$

The set of homogeneous transformations satisfies the four axioms of a group:

- Closure:  $\mathbf{T}_1\mathbf{T}_2 \in SE(3) \quad \forall \mathbf{T}_1, \mathbf{T}_2 \in SE(3)$
- *Identity*:  $\mathbf{1}_{4\times 4}\mathbf{T} = \mathbf{T}\mathbf{1}_{4\times 4} = \mathbf{T} \quad \forall \mathbf{T} \in SE(3)$
- *Inverse*: the unique inverse of  $\mathbf{T} \quad \forall \mathbf{T} \in SE(3)$  is given in (2.12)
- Associativity:  $(\mathbf{T}_1\mathbf{T}_2)\mathbf{T}_3 = \mathbf{T}_1(\mathbf{T}_2\mathbf{T}_3)$  $\forall \mathbf{T}_1, \mathbf{T}_2,$  $\mathbf{T}_3 \in SE(3)$ .

In the screw transformation representation in Sect. 2.2.4, position and orientation are expressed by the angle  $\theta$  of rotation about a screw axis defined by the unit vector  $\hat{\boldsymbol{w}}$ , the point  $\boldsymbol{\rho}$  on the axis such that  $\hat{\boldsymbol{w}}^{\mathrm{T}}\boldsymbol{\rho} =$ 0, and the pitch h of the screw axis. The equivalent homogeneous transformation found in Table 2.4 can be expressed as the exponential map

$$\mathbf{T} = e^{\hat{\xi}\theta} = \mathbf{1}_{4\times4} + \hat{\xi}\theta + \frac{(\hat{\xi}\theta)^2}{2!} + \frac{(\hat{\xi}\theta)^3}{3!} + \dots,$$
(2.26)

where

$$\hat{\boldsymbol{\xi}} = \begin{pmatrix} S(\hat{\boldsymbol{w}}) & \boldsymbol{v} \\ \boldsymbol{0}^{\mathrm{T}} & 0 \end{pmatrix} \tag{2.27}$$

is the generalization of the unit skew-symmetric matrix  $\mathbf{S}(\hat{\boldsymbol{w}})$  known as a *twist*. The twist coordinates of  $\hat{\boldsymbol{\xi}}$ are given by  $\boldsymbol{\xi} := (\hat{\boldsymbol{w}}^{\mathrm{T}} \boldsymbol{v}^{\mathrm{T}})^{\mathrm{T}}$ . It can be shown that the closed-form expression for  $e^{\hat{\xi}\theta}$  is

$$e^{\hat{\boldsymbol{\xi}}\theta} = \left(e^{\mathbf{S}(\hat{\boldsymbol{w}})\theta} - (\mathbf{1}_{3\times3} - e^{\mathbf{S}(\hat{\boldsymbol{w}})\theta})(\hat{\boldsymbol{w}}\times\boldsymbol{v}) + \hat{\boldsymbol{w}}^{\mathsf{T}}\boldsymbol{v}\theta\hat{\boldsymbol{w}}\right).$$

$$(2.28)$$

Comparison of this result with the conversion between homogeneous and screw transformations in Table 2.4 yields

$$v = \rho \times \hat{w} \tag{2.29}$$

and

$$h = \hat{\boldsymbol{w}}^{\mathrm{T}} \boldsymbol{v} . \tag{2.30}$$

Thus, the exponential map for a twist transforms the initial pose of a body into its final pose. It gives the relative rigid-body motion. The vector  $\boldsymbol{\xi}\theta$  contains the exponential coordinates for the rigid-body transformation.

As for screw transformations, the case of pure translation is unique. In this case,  $\hat{\boldsymbol{w}} = \boldsymbol{0}$ , so

$$e^{\hat{\xi}\theta} = \begin{pmatrix} \mathbf{1}_{3\times 3} & \theta \, \boldsymbol{v} \\ \mathbf{0}^{\mathrm{T}} & 1 \end{pmatrix}. \tag{2.31}$$

## 2.2.6 Plücker Coordinates

A minimum of four coordinates are needed to define a line in space. The Plücker coordinates of a line form a six-dimensional (6-D) vector, so they are superabundant by two. They can be viewed as a pair of three-dimensional (3-D) vectors; one is parallel to the line, and the other is the *moment* of that vector about the origin. Thus, if u is any vector parallel to the line and  $\rho$  is the position of any point on the line relative to the origin, the Plücker coordinates (L, M, N, P, Q), and R) are given by

$$(L, M, N) = \mathbf{u}^{\mathrm{T}}; (P, Q, R) = (\rho \times \mathbf{u})^{\mathrm{T}}.$$
 (2.32)

For simply defining a line, the magnitude of u is not unique, nor is the component of  $\rho$  parallel to u. Two auxiliary relationships are imposed to reduce the set to just four independent coordinates. One is that the scalar product of the two three-dimensional vectors is identically zero.

$$LP + MQ + NR \equiv 0. ag{2.33}$$

The other is the invariance of the line designated when the coordinates are all multiplied by the same scaling factor.

$$(L,M,N,P,Q,R) \equiv (kL,kM,kN,kP,kQ,kR) \; . \label{eq:local_local_local_local}$$
 (2.34)

This relationship may take the form of constraining uto have unit magnitude so that L, M, and N are the direction cosines.

In this handbook, it is often useful to express velocities in Plücker coordinates, wherein unlike the definition of lines, the magnitudes of the two threedimensional vectors are not arbitrary. This leads to the motor notation of von Mises [2.9, 19] and Everett [2.20]. For instantaneously coincident coordinate frames, one fixed and the other embedded in the moving body,  $\omega$  is the angular velocity of the body and  $v_O$ is the velocity of the origin O of the body-fixed frame when both are expressed relative to the fixed frame. This provides a Plücker coordinate system for the spatial velocity v of the body. The Plücker coordinates of v are simply the Cartesian coordinates of  $\omega$  and  $v_O$ ,

$$\mathbf{v} = \begin{pmatrix} \boldsymbol{\omega} \\ \boldsymbol{v}_O \end{pmatrix}. \tag{2.35}$$

The transformation from Plücker coordinate system i to Plücker coordinate system j for spatial velocities is achieved with the spatial transform  ${}^{j}\mathbf{X}_{i}$ . If  $\mathbf{v}_{i}$ and  $\mathbf{v}_i$  denote the spatial velocities of a body relative to the i and j frames, respectively, and  ${}^{j}\mathbf{p}_{i}$  and  ${}^{j}\mathbf{R}_{i}$  denote the position and orientation of frame i relative to frame *j*,

$$\mathbf{v}_j = {}^j \mathbf{X}_i \mathbf{v}_i \,, \tag{2.36}$$

where

$${}^{j}\mathbf{X}_{i} = \begin{pmatrix} {}^{j}\mathbf{R}_{i} & \mathbf{0}_{3\times3} \\ \mathbf{S}({}^{j}\mathbf{p}_{i}){}^{j}\mathbf{R}_{i} & {}^{j}\mathbf{R}_{i} \end{pmatrix} , \qquad (2.37)$$

such that

$${}^{j}\mathbf{X}_{i}^{-1} = {}^{i}\mathbf{X}_{j} = \begin{pmatrix} {}^{i}\mathbf{R}_{j} & \mathbf{0}_{3\times3} \\ -{}^{i}\mathbf{R}_{j}\mathbf{S}({}^{j}\mathbf{p}_{i}) & {}^{i}\mathbf{R}_{j} \end{pmatrix}$$
, (2.38)

and

$$^{k}\mathbf{X}_{i} = {^{k}}\mathbf{X}_{i}^{j}\mathbf{X}_{i}, \qquad (2.39)$$

and  $\mathbf{S}(^{j}\mathbf{p}_{i})$  is the skew-symmetric matrix

$$\begin{pmatrix} 0 & -^{j}p_{i}^{z} & ^{j}p_{i}^{y} \\ {}^{j}p_{i}^{z} & 0 & -^{j}p_{i}^{x} \\ -^{j}p_{i}^{y} & ^{j}p_{i}^{x} & 0 \end{pmatrix}.$$
 (2.40)

Spatial vector notation, which includes the spatial velocities and transforms briefly mentioned here, is treated in greater depth in Sect. 3.2. Specifically, Table 3.1 gives a computationally efficient algorithm for applying a spatial transform.

## 2.3 Joint Kinematics

Unless explicitly stated otherwise, the kinematic description of robotic mechanisms typically employs a number of idealizations. The links that compose the robotic mechanism are assumed to be perfectly rigid bodies having surfaces that are geometrically perfect in both position and shape. Accordingly, these rigid bodies are connected together at joints where their idealized surfaces are in ideal contact without any clearance between them. The respective geometries of these surfaces in contact determine the freedom of motion between the two links, or the *joint kinematics*.

A kinematic joint is a connection between two bodies that constrains their relative motion. Two bodies that are in contact with one another create a simple kinematic joint. The surfaces of the two bodies that are in contact are able to move over one another, thereby permitting relative motion of the two bodies. Simple kinematic joints are classified as lower pair joints if contact occurs over surfaces [2.21] and as higher pair joints if contact occurs only at points or along lines.

A joint model describes the motion of a frame fixed in one body of a joint relative to a frame fixed in the other body. The motion is expressed as a function of the joint's motion variables, and other elements of a joint model include the rotation matrix, position vector, free modes, and constrained modes. The free modes of a joint define the directions in which motion is allowed. They are represented by the  $6 \times n_i$  matrix  $\Phi_i$  whose columns are the Plücker coordinates of the allowable

motion. This matrix relates the spatial velocity vector across the joint  $v_{\text{rel,i}}$  to the joint velocity vector  $\dot{q}_i$ ,

$$v_{\rm rel,i} = \Phi_i \dot{q}_i \ . \tag{2.41}$$

In contrast, the constrained modes of a joint define the directions in which motion is not allowed. They are represented by the  $6 \times (6 - n_i)$  matrix  $\Phi_i^c$  that is complementary to  $\Phi_i$ . Tables 2.5 and 2.6 contain the formulas of the joint models for all of the joints described in this section. They are used extensively for the dynamic analysis presented in Chap. 3. Additional information on joints can be found in Chap. 4.

#### 2.3.1 Lower Pair Joints

Lower pair joints are mechanically attractive since wear is spread over the whole surface and lubricant is trapped in the small clearance space (in nonidealized systems) between the surfaces, resulting in relatively good lubrication. As can be proved [2.23] from the requirement for surface contact, there are only six possible forms of lower pair joints: revolute, prismatic, helical, cylindrical, spherical, and planar joints.

## Revolute

The most general form of a revolute joint, often abbreviated as R and sometimes referred to colloquially as a hinge or pin joint, is a lower pair composed of two

**Table 2.5** Joint model formulas for one-degree-of-freedom lower pair joints, with abbreviations  $c_{\theta_i} := \cos \theta_i$  and  $s_{\theta_i} := \sin \theta_i$  (adapted in part from Table 4.1 in [2.22])

Joint type	Joint rotation matrix $^{j}$ $\mathbf{R}_{i}$	Position vector $^{j}p_{i}$	Free modes $\Phi_i$	Constrained modes $\Phi_i^c$	Pose state vars.	$\dot{q}_i$
Revolute R	$\begin{pmatrix} c_{\theta_i} & -s_{\theta_i} & 0\\ s_{\theta_i} & c_{\theta_i} & 0\\ 0 & 0 & 1 \end{pmatrix}$	$\begin{pmatrix} 0 \\ 0 \\ 0 \end{pmatrix}$	$\begin{pmatrix} 0 \\ 0 \\ 1 \\ 0 \\ 0 \\ 0 \end{pmatrix}$	$\begin{pmatrix} 1 & 0 & 0 & 0 & 0 \\ 0 & 1 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 & 0 \\ 0 & 0 &$	$ heta_i$	$\dot{ heta}_i$
Prismatic P	<b>1</b> <sub>3×3</sub>	$\begin{pmatrix} 0 \\ 0 \\ d_i \end{pmatrix}$	$\begin{pmatrix} 0 \\ 0 \\ 0 \\ 0 \\ 0 \\ 1 \end{pmatrix}$	$\begin{pmatrix} 1 & 0 & 0 & 0 & 0 \\ 0 & 1 & 0 & 0 & 0 \\ 0 & 0 & 1 & 0 & 0 \\ 0 & 0 & 0 & 1 & 0 \\ 0 & 0 & 0 & 0 & 1 \\ 0 & 0 & 0 & 0 & 0 \end{pmatrix}$	$d_i$	$\dot{d}_i$
Helical H (pitch h)	$\begin{pmatrix} c_{\theta_i} & -s_{\theta_i} & 0\\ s_{\theta_i} & c_{\theta_i} & 0\\ 0 & 0 & 1 \end{pmatrix}$	$\begin{pmatrix} 0 \\ 0 \\ h  heta_i \end{pmatrix}$	$\begin{pmatrix} 0 \\ 0 \\ 1 \\ 0 \\ 0 \\ h \end{pmatrix}$	$\begin{pmatrix} 1 & 0 & 0 & 0 & 0 \\ 0 & 1 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 & -h \\ 0 & 0 & 1 & 0 & 0 \\ 0 & 0 & 0 & 1 & 0 \\ 0 & 0 & 0 & 0 & 1 \end{pmatrix}$	$ heta_i$	$\dot{ heta}_i$

congruent surfaces of revolution. The surfaces are the same except one of them is an external surface, convex in any plane normal to the axis of revolution, and one is an internal surface, concave in any plane normal to the axis. The surfaces may not be solely in the form of right circular cylinders, since surfaces of that form do not provide any constraint on axial sliding. A revolute joint permits only rotation of one of the bodies joined relative to the other. The position of one body relative to the other may be expressed as the angle between two lines normal to the joint axis, one fixed in each body. Thus, the joint has one *degree of freedom* (DOF). When the  $\hat{z}$  axis of coordinate frame i is aligned with a revolute joint axis, the formulas in Table 2.5 define the revolute joint model.

#### **Prismatic**

The most general form of a prismatic joint, often abbreviated as P and sometimes referred to colloquially as a sliding joint, is a lower pair formed from two congruent general cylindrical surfaces. These may not be right circular cylindrical surfaces. A general cylindrical surface is obtained by extruding any curve in a constant direction. Again, one surface is internal and the other is an external surface. A prismatic joint permits only sliding of one of the members joined relative to the other along the direction of extrusion. The position of one body relative to the other is determined by the distance between two points on a line parallel to the direction of sliding, with one point fixed in each body. Thus, this joint also has one degree of freedom. When the  $\hat{z}$  axis

of coordinate frame i is aligned with a prismatic joint axis, the formulas in Table 2.5 define the prismatic joint model.

#### Helical

The most general form of a helical joint, often abbreviated as H and sometimes referred to colloquially as a screw joint, is a lower pair formed from two helicoidal surfaces formed by extruding any curve along a helical path. The simple example is a bolt and nut wherein the basic generating curve is a pair of straight lines. The angle  $\theta$  of rotation about the axis of the helical joint is directly related to the distance d of displacement of one body relative to the other along that axis by the expression  $d = h\theta$ , where the constant h is called the pitch of the helical joint. When the  $\hat{z}$  axis of coordinate frame i is aligned with a helical joint axis, the formulas in Table 2.5 define the helical joint model.

#### Cylindrical

A cylindrical joint, often abbreviated as C, is a lower pair formed by contact of two congruent right circular cylinders, one an internal surface and the other an external surface. It permits both rotation about the cylinder axis and sliding parallel to it. Therefore, it is a joint with two degrees of freedom. Lower pair joints with more than one degree of freedom are easily replaced by kinematically equivalent compound joints (Sect. 2.3.3) that are serial chains of one-degree-of-freedom lower pairs. In the present case, the cylindrical joint can be replaced by a revolute in series with a pris-

Table 2.6 Joint model formulas for higher-degree-of-freedom lower pair joints, universal joint, rolling contact joint, and 6-DOF joint, with abbreviations  $c_{\theta_i} := \cos \theta_i$  and  $s_{\theta_i} := \sin \theta_i$  (adapted in part from Table 4.1 in [2.22]) \*The Euler angles  $\alpha_i$ ,  $\beta_i$ , and  $\gamma_i$ could be used in place of the unit quaternion  $\epsilon_i$  to represent orientation

Joint type	Joint rotation matrix ${}^jR_i$	Position vector $^{j}p_{i}$	Free modes $\Phi_i$	Constrained modes $\Phi_i^c$	Pose Variables	Velocity Variables $\dot{q}_i$
Cylindrical C	$\begin{pmatrix} c_{\theta_i} & -s_{\theta_i} & 0\\ s_{\theta_i} & c_{\theta_i} & 0\\ 0 & 0 & 1 \end{pmatrix}$	$\begin{pmatrix} 0 \\ 0 \\ d_i \end{pmatrix}$	$\begin{pmatrix} 0 & 0 \\ 0 & 0 \\ 1 & 0 \\ 0 & 0 \\ 0 & 0 \\ 0 & 1 \end{pmatrix}$	$\begin{pmatrix} 1 & 0 & 0 & 0 \\ 0 & 1 & 0 & 0 \\ 0 & 0 & 0 & 0 \\ 0 & 0 & 1 & 0 \\ 0 & 0 & 0 & 1 \\ 0 & 0 & 0 & 0 \end{pmatrix}$	$ heta_i \ d_i$	$egin{pmatrix} \dot{ heta}_i \ \dot{d}_i \end{pmatrix}$
Spherical*	(Table 2.1)	$\begin{pmatrix} 0 \\ 0 \\ 0 \end{pmatrix}$	$\begin{pmatrix} 1 & 0 & 0 \\ 0 & 1 & 0 \\ 0 & 0 & 1 \\ 0 & 0 & 0 \\ 0 & 0 & 0 \\ 0 & 0 & 0 \end{pmatrix}$	$ \begin{pmatrix} 0 & 0 & 0 \\ 0 & 0 & 0 \\ 0 & 0 & 0 \\ 1 & 0 & 0 \\ 0 & 1 & 0 \\ 0 & 0 & 1 \end{pmatrix} $	$\epsilon_i$	$\boldsymbol{\omega}_{i\mathrm{rel}}$
Planar	$\begin{pmatrix} c_{\theta_i} & -s_{\theta_i} & 0\\ s_{\theta_i} & c_{\theta_i} & 0\\ 0 & 0 & 1 \end{pmatrix}$	$\begin{pmatrix} c_{\theta_i} d_{xi} - s_{\theta_i} d_{yi} \\ s_{\theta_i} d_{xi} + c_{\theta_i} d_{yi} \\ 0 \end{pmatrix}$	$\begin{pmatrix} 0 & 0 & 0 \\ 0 & 0 & 0 \\ 1 & 0 & 0 \\ 0 & 1 & 0 \\ 0 & 0 & 1 \\ 0 & 0 & 0 \end{pmatrix}$	$\begin{pmatrix} 1 & 0 & 0 \\ 0 & 1 & 0 \\ 0 & 0 & 0 \\ 0 & 0 & 0 \\ 0 & 0 & 0$	$egin{array}{l}  heta_i \ d_{xi} \ d_{yi} \end{array}$	$\begin{pmatrix} \dot{\theta}_i \\ \dot{d}_{xi} \\ \dot{d}_{yi} \end{pmatrix}$
Flat planar rolling contact (fixed radius <i>r</i> )	$\begin{pmatrix} c_{\theta_i} & -s_{\theta_i} & 0\\ s_{\theta_i} & c_{\theta_i} & 0\\ 0 & 0 & 1 \end{pmatrix}$	$\begin{pmatrix} r\theta_i c_{\theta_i} - rs_{\theta_i} \\ -r\theta_i s_{\theta_i} - rc_{\theta_i} \\ 0 \end{pmatrix}$		$\begin{pmatrix} 1 & 0 & 0 & 0 & 0 \\ 0 & 1 & 0 & 0 & 0 \\ 0 & 0 & -r & 0 & 0 \\ 0 & 0 & 1 & 0 & 0 \\ 0 & 0 & 0 & 1 & 0 \\ 0 & 0 & 0 & 0 & 1 \end{pmatrix}$	$ heta_i$	$\dot{ heta}_i$
Univer- sal U	$\begin{pmatrix} c_{\alpha_i}c_{\beta_i} & -s_{\alpha_i} & c_{\alpha_i}s_{\beta_i} \\ s_{\alpha_i}c_{\beta_i} & c_{\alpha_i} & s_{\alpha_i}s_{\beta_i} \\ -s_{\beta_i} & 0 & c_{\beta_i} \end{pmatrix}$	$\begin{pmatrix} 0 \\ 0 \\ 0 \end{pmatrix}$	$\begin{pmatrix} -s_{\beta_i} & 0\\ 0 & 1\\ c_{\beta_i} & 0\\ 0 & 0\\ 0 & 0\\ 0 & 0 \end{pmatrix}$	$\begin{pmatrix} c_{\beta_i} & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 \\ s_{\beta_i} & 0 & 0 & 0 \\ 0 & 1 & 0 & 0 \\ 0 & 0 & 1 & 0 \\ 0 & 0 & 0 & 1 \end{pmatrix}$	$egin{array}{c} lpha_i \ eta_i \end{array}$	$\begin{pmatrix} \dot{lpha}_i \ \dot{eta}_i \end{pmatrix}$
6-DOF*	(see Table 2.1)	$^{0}\boldsymbol{p}_{i}$	<b>1</b> <sub>6×6</sub>		$oldsymbol{arepsilon}_i^i$	$egin{pmatrix} oldsymbol{\omega}_i \ oldsymbol{v}_i \end{pmatrix}$

matic joint whose direction of sliding is parallel to the revolute axis. While simpler to implement using the geometric representation discussed in Sect. 2.4, this approach has disadvantages for dynamic simulation. Modeling a single cylindrical joint as a combination of a prismatic and a revolute joint requires the addition of a virtual link between the two with zero mass and zero length. The massless link can create computational problems. When the  $\hat{z}$  axis of coordinate frame i is aligned with a cylindrical joint axis, the formulas in Table 2.6 define the cylindrical joint model.

#### Spherical

A spherical joint, often abbreviated as S, is a lower pair formed by contact of two congruent spherical surfaces. Once again, one is an internal surface, and the other is an external surface. A spherical joint permits rotation about any line through the center of the sphere. Thus, it permits independent rotation about axes in up to three different directions and has three degrees of freedom. A spherical joint is easily replaced by a kinematically equivalent compound joint consisting of three revolutes that have axes that all intersect in a single point - the center of the spherical joint. The revolute joint axes

do not need to be successively orthogonal, but often they are implemented that way. The arrangement is, in general, kinematically equivalent to a spherical joint, but it does exhibit a singularity when the revolute joint axes become coplanar. This is as compared to the native spherical joint that never has such a singularity. Likewise, if a spherical joint is modeled in simulation as three revolutes, computational difficulties again can arise from the necessary inclusion of massless virtual links having zero length. The joint model formulas of a spherical joint are given in Table 2.6.

#### Planar

A planar joint is formed by planar contacting surfaces. Like the spherical joint, it is a lower pair joint with three degrees of freedom. A kinematically equivalent compound joint consisting of a serial chain of three revolutes with parallel axes can replace a planar joint. As was the case with the spherical joint, the compound joint exhibits a singularity when the revolute axes become coplanar. When the  $\hat{z}$  axis of coordinate frame iis aligned with the normal to the plane of contact, the formulas in Table 2.6 define the planar joint model.

## 2.3.2 Higher Pair Joints

Some higher pair joints also have attractive properties, particularly rolling pairs in which one body rolls without slipping over the surface of the other. This is mechanically attractive since the absence of sliding means the absence of abrasive wear. However, since ideal contact occurs at a point, or along a line, application of a load across the joint may lead to very high local stresses resulting in other forms of material failure and, hence, wear. Higher pair joints can be used to create kinematic joints with special geometric properties, as in the case of a gear pair or a cam and follower pair.

## **Rolling Contact**

Rolling contact actually encompasses several different geometries. Rolling contact in planar motion permits one degree of freedom of relative motion as in the case of a roller bearing, for example. Planar rolling contact can take place along a line, thereby spreading the load and wear somewhat. Three-dimensional rolling contact allows rotation about any axis through the point of contact that is, in principle, unique. Hence, a threedimensional rolling contact pair permits relative motion with three degrees of freedom. When the  $\hat{z}$  axis of coordinate frame i is aligned with the axis of rotation and passes through the center of the roller of fixed radius r, the formulas in Table 2.6 define the planar rolling contact joint model for a roller on a flat surface.

Regardless of whether the joint is planar or threedimensional, the no-slip condition associated with a rolling contact joint requires that the instantaneous relative velocity between the points on the two bodies in contact be zero. If P is the point of rolling contact between bodies i and j,

$$v_{P_i/P_i} = 0$$
. (2.42)

Likewise, relative acceleration is in the direction of the common normal to the two surfaces at the point of contact. Because the constraint associated with the joint is expressed in terms of velocity and cannot be expressed in terms of position alone, it is nonholonomic, as discussed in Sect. 2.3.6. A more detailed discussion of the kinematic constraints for rolling contact is found in Chap. 24.

## 2.3.3 Compound Joints

Compound kinematic joints are connections between two bodies formed by chains of other members and simple kinematic joints. A compound joint may constrain the relative motion of the two bodies joined in the same way as a simple joint. In such a case, the two joints are said to be kinematically equivalent.

## Universal

A universal joint, often abbreviated as *U* and referred to as a Cardan or Hooke joint, is a compound joint with two degrees of freedom. It consists of a serial chain of two revolutes whose axes intersect orthogonally. The joint model for a universal joint, in which, from Euler angle notation,  $\alpha_i$  is the first rotation about the Z-axis and then  $\beta_i$  is the rotation about the Y-axis, is given in Table 2.6. This is a joint for which the matrices  $\Phi_i$  and  $\Phi_i^c$  are not constant, so in general,  $\dot{\Phi}_i \neq 0$ and  $\dot{\Phi}_{i}^{c} \neq 0$ . As seen in Table 2.6, the orientation of the first joint axis (expressed in the outboard coordinate frame) varies with  $\beta_i$ .

## 2.3.4 6-DOF Joint

The motion of two bodies not jointed together can be modeled as a six-degree-of-freedom joint that introduces no constraints. This is particularly useful for mobile robots, such as aircraft, that make at most intermittent contact with the ground, and thus, a body in free motion relative to the fixed frame is termed a *floating base*. Such a free motion joint model enables the position and orientation of a floating base in space to be expressed with six joint variables. The 6-DOF joint model is included in Table 2.6.

## 2.3.5 Physical Realization

In an actual robotic mechanism, the joints may have physical limits beyond which motion is prohibited. The workspace (Sect. 2.5) of a robotic manipulator is determined by considering the combined limits and freedom of motion of all the joints within the mechanism. Revolute joints are easily actuated by rotating motors and are, therefore, extremely common in robotic systems. They may also be present as passive, unactuated joints. Also common, although less so than revolutes, prismatic joints are relatively easily actuated by means of linear actuators such as hydraulic or pneumatic cylinders, ball screws, or screw jacks. They always have motion limits since unidirectional sliding can, in principle, produce infinite displacements. Helical joints are most often found in robotic mechanisms as constituents of linear actuators such as screw jacks and ball screws and are seldom used as primary kinematic joints. Joints with more than one degree of freedom are generally used passively in robotic mechanisms because each degree of freedom of an active joint must be separately actuated. Passive spherical joints are quite often found in robotic mechanisms, while passive planar joints are only occasionally found. The effect of an actuated spherical joint is achieved by employing the kinematically equivalent combination of three revolutes and actuating each. Universal joints are used in robotic mechanisms in both active and passive

Serial chains are commonly denoted by the abbreviations for the joints they contain in the order in which they appear in the chain. For example, an RPR chain contains three links, the first jointed to the base with a revolute and to the second with a prismatic, while the second and third are jointed together with another revolute. If all of the joints are identical, the notation consists of the number of joints preceding the joint abbreviation, such as 6R for a six-axis serial-chain manipulator containing only revolute joints.

Joints are realized with hardware that is more complex than the idealizations presented in Sects. 2.3.1 and 2.3.2. For example, a revolute joint may be achieved with a ball bearing composed of a set of

bearing balls trapped between two journals. The balls ideally roll without slipping on the journals, thereby taking advantage of the special properties of rolling contact joints. A prismatic joint may be realized by means of a roller-rail assembly.

## 2.3.6 Holonomic and Nonholonomic Constraints

With the exception of rolling contact, all of the constraints associated with the joints discussed in the preceding sections can be expressed mathematically by equations containing only the joint position variables. These are called holonomic constraints. The number of equations, and hence the number of constraints, is 6-n, where n is the number of degrees of freedom of the joint. The constraints are intrinsically part of the axial joint model.

A nonholonomic constraint is one that cannot be expressed in terms of the position variables alone, but includes the time derivative of one or more of those variables. These constraint equations cannot be integrated to obtain relationships solely between the joint variables. The most common example in robotic systems arises from the use of a wheel or roller that rolls without slipping on another member. Nonholonomic constraints, particularly as they apply to wheeled robots, are discussed in more detail in Chap. 24.

## 2.3.7 Generalized Coordinates

In a robotic mechanism consisting of N bodies, 6N coordinates are required to specify the position and orientation of all the bodies relative to a coordinate frame. Since some of those bodies are jointed together, a number of constraint equations will establish relationships among some of these coordinates. In this case, the 6N coordinates can be expressed as functions of a smaller set of coordinates q that are all independent. The coordinates in this set are known as generalized coordinates, and motions associated with these coordinates are consistent with all of the constraints. The joint variables q of a robotic mechanism form a set of generalized coordinates [2.24, 25].


# 2.4 Geometric Representation

The geometry of a robotic mechanism is conveniently defined by attaching coordinate frames to each link. While these frames could be located arbitrarily, it is advantageous both for consistency and computational efficiency to adhere to a convention for locating the frames on the links. Denavit and Hartenberg [2.26] introduced

the foundational convention that has been adapted in a number of different ways, one of which is the convention introduced by Khalil and Dombre [2.27] used throughout this handbook. In all of its forms, the convention requires only four rather than six parameters to locate one coordinate frame relative to another. The

four parameters consist of two link parameters, the link length  $a_i$  and the link twist  $\alpha_i$ , and two joint parameters, the joint offset  $d_i$  and the joint angle  $\theta_i$ . This parsimony is achieved through judicious placement of the coordinate frame origins and axes such that the  $\hat{x}$  axis of one frame both intersects and is perpendicular to the  $\hat{z}$  axis of the following coordinate frame. The convention is applicable to robotic mechanisms consisting of revolute and prismatic joints, so when multiple-degree-of-freedom joints are present, they are modeled as combinations of revolute and prismatic joints, as discussed in Sect. 2.3.

There are essentially four different forms of the convention for locating coordinate frames in a robotic mechanism. Each exhibits its own advantages by managing trade-offs of intuitive presentation. In the original Denavit and Hartenberg [2.26] convention, joint i is located between links i and i + 1, so it is on the outboard side of link i. Also, the joint offset  $d_i$  and joint angle  $\theta_i$ are measured along and about the i-1 joint axis, so the subscripts of the joint parameters do not match that of the joint axis. Waldron [2.28] and Paul [2.29] modified the labeling of axes in the original convention such that joint i is located between links i-1 and i in order to make it consistent with the base member of a serial chain being member 0. This places joint i at the inboard side of link i and is the convention used in all of the other modified versions. Furthermore, Waldron and Paul addressed the mismatch between subscripts of the joint parameters and joint axes by placing the  $\hat{z}_i$ 

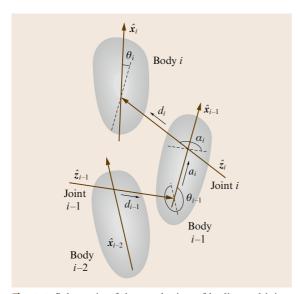


**Fig. 2.2** Schematic of the numbering of bodies and joints in a robotic mechanism, the convention for attaching coordinate frames to the bodies, and the definitions of the four parameters,  $a_i$ ,  $\alpha_i$ ,  $d_i$ , and  $\theta_i$ , that locate one frame relative to another

axis along the i + 1 joint axis. This, of course, relocates the subscript mismatch to the correspondence between the joint axis and the  $\hat{z}$  axis of the coordinate frame. Craig [2.30] eliminated all of the subscript mismatches by placing the  $\hat{z}_i$  axis along joint i, but at the expense of the homogeneous transformation  $^{i-1}\mathbf{T}_i$  being formed with a mixture of joint parameters with subscript i and link parameters with subscript i-1. Khalil and Dombre [2.27] introduced another variation similar to Craig's except that it defines the link parameters  $a_i$ and  $\alpha_i$  along and about the  $\hat{x}_{i-1}$  axis. In this case, the homogeneous transformation  $^{i-1}\mathbf{T}_i$  is formed only by parameters with subscript i, and the subscript mismatch is such that  $a_i$  and  $\alpha_i$  indicate the length and twist of link i-1 rather than link i. Thus, in summary, the advantages of the convention used throughout this handbook compared to the alternative conventions are that the  $\hat{z}$  axes of the coordinate frames share the common subscript of the joint axes and the four parameters that define the spatial transform from coordinate frame i to coordinate frame i-1 all share the common subscript i.

In this handbook, the convention for serial chain mechanisms is shown in Fig. 2.2 and summarized as follows. The numbering of bodies and joints follows the convention:

- The N moving bodies of the robotic mechanism are numbered from 1 to N. The number of the base is 0.
- The N joints of the robotic mechanism are numbered from 1 to N, with joint i located between members i 1 and i.

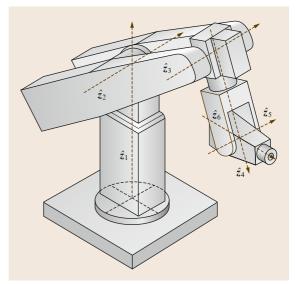

**Fig. 2.3** Example six-degree-of-freedom serial chain manipulator composed of an articulated arm with no joint offsets and a spherical wrist

Table 2.7 Geometric parameters of the example serial chain manipulator in Fig. 2.3

i	$\alpha_i$	$a_i$	$d_i$	$\theta_i$
1	0	0	0	$\theta_1$
2	$-\frac{\pi}{2}$	0	0	$\theta_2$
3	0	$a_3$	0	$\theta_3$
4	$-\frac{\pi}{2}$	0	$d_4$	$\theta_4$
5	$-\frac{\pi}{2}$ $\frac{\pi}{2}$ $-\frac{\pi}{2}$	0	0	$\theta_5$
6	$-\frac{\bar{\pi}}{2}$	0	0	$\theta_6$

With this numbering scheme, the attachment of coordinate frames follows the convention:

- The  $\hat{z}_i$  axis is located along the axis of joint i,
- The  $\hat{x}_{i-1}$  axis is located along the common normal between the  $\hat{z}_{i-1}$  and  $\hat{z}_i$  axes.

Using the attached frames, the four parameters that locate one frame relative to another are defined as:

- $a_i$  is the distance from  $\hat{z}_{i-1}$  to  $\hat{z}_i$  along  $\hat{x}_{i-1}$ ,
- $\alpha_i$  is the angle from  $\hat{z}_{i-1}$  to  $\hat{z}_i$  about  $\hat{x}_{i-1}$ ,
- $d_i$  is the distance from  $\hat{x}_{i-1}$  to  $\hat{x}_i$  along  $\hat{z}_i$ ,
- $\theta_i$  is the angle from  $\hat{x}_{i-1}$  to  $\hat{x}_i$  about  $\hat{z}_i$ .

The geometric parameters for the example manipulator shown in Fig. 2.3 are listed in Table 2.7. All of the joints of this manipulator are revolutes, and joint 1

has a vertical orientation. Joint 2 is perpendicular to joint 1 and intersects it. Joint 3 is parallel to joint 2, and the length of link 2 is  $a_3$ . Joint 4 is perpendicular to joint 3 and intersects it. Joint 5 likewise intersects joint 4 perpendicularly at an offset of  $d_4$  from joint 3. Finally, joint 6 intersects joint 5 perpendicularly.

With this convention, coordinate frame i can be located relative to coordinate frame i-1 by executing a rotation through an angle  $\alpha_i$  about the  $\hat{x}_{i-1}$ axis, a translation of distance  $a_i$  along  $\hat{x}_{i-1}$ , a rotation through an angle  $\theta_i$  about the  $\hat{z}_i$  axis, and a translation of distance  $d_i$  along  $\hat{z}_i$ . Through concatenation of these individual transformations,

$$\mathbf{Rot}(\hat{\mathbf{x}}_{i-1}, \alpha_i)\mathbf{Trans}(\hat{\mathbf{x}}_{i-1}, a_i)\mathbf{Rot}(\hat{\mathbf{z}}_i, \theta_i)$$

$$\mathbf{Trans}(\hat{\mathbf{z}}_i, d_i), \qquad (2.43)$$

the equivalent homogeneous transformation is,

$$i^{-1}\mathbf{T}_{i} = \begin{pmatrix} \cos\theta_{i} & -\sin\theta_{i} & 0 & a_{i} \\ \sin\theta_{i}\cos\alpha_{i} & \cos\theta_{i}\cos\alpha_{i} & -\sin\alpha_{i} & -\sin\alpha_{i}d_{i} \\ \sin\theta_{i}\sin\alpha_{i} & \cos\theta_{i}\sin\alpha_{i} & \cos\alpha_{i} & \cos\alpha_{i}d_{i} \\ 0 & 0 & 0 & 1 \end{pmatrix}.$$

The identification of geometric parameters is addressed in Chap. 8.

# 2.5 Workspace

Most generally, the workspace of a robotic manipulator is the total volume swept out by the end-effector as the manipulator executes all possible motions. The workspace is determined by the geometry of the manipulator and the limits of the joint motions. It is more specific to define the reachable workspace as the total locus of points at which the end-effector can be placed and the dextrous workspace [2.31] as the subset of those points at which the end-effector can be placed while having an arbitrary orientation. Dexterous workspaces exist only for certain idealized geometries, so real industrial manipulators with joint motion limits almost never possess dexterous workspaces.

Many serial-chain robotic manipulators are designed such that their joints can be partitioned into a regional structure and an orientation structure. The joints in the regional structure accomplish the positioning of the end-effector in space, and the joints in the orientation structure accomplish the orientation of the end-effector. Typically, the inboard joints of a se-

rial chain manipulator comprise the regional structure, while the outboard joints comprise the orientation structure. Also, since prismatic joints provide no capability for rotation, they are generally not employed within the orientation structure.

The regional workspace volume can be calculated from the known geometry of the serial-chain manipulator and motion limits of the joints. With three inboard joints comprising the regional structure, the area of workspace for the outer two (joints 2 and 3) is computed first, and then the volume is calculated by integrating over the joint variable of the remaining inboard joint (joint 1). In the case of a prismatic joint, this simply involves multiplying the area by the total length of travel of the prismatic joint. In the more common case of a revolute joint, it involves rotating the area about the joint axis through the full range of motion of the revolute [2.32]. By the theorem of Pappus, the associated volume V is

$$V = A\bar{r}\gamma , \qquad (2.45)$$

where A is the area,  $\bar{r}$  is the distance from the area's centroid to the axis, and  $\gamma$  is the angle through which the area is rotated. The boundaries of the area are determined by tracing the motion of a reference point in the end-effector, typically the center of rotation of the wrist that serves as the orientation structure. Starting with each of the two joints at motion limits and with joint 2 locked, joint 3 is moved until its second motion limit is reached. Joint 3 is then locked, and joint 2 is freed to move to its second motion limit. Joint 2 is again locked, while joint 3 is freed to move back to its original motion limit. Finally, joint 3 is locked, and joint 2 freed to move likewise to its original motion limit. In this way, the trace of the reference point is a closed curve whose area and centroid can be calculated mathematically.

More details on manipulator workspace can be found in Chaps. 4 and 16.

## 2.6 Forward Kinematics

The forward kinematics problem for a serial-chain manipulator is to find the position and orientation of the end-effector relative to the base given the positions of all of the joints and the values of all of the geometric link parameters. Often, a frame fixed in the end-effector is referred to as the tool frame, and while fixed in the final link N, it in general has a constant offset in both position and orientation from frame N. Likewise, a station frame is often located in the base to establish the location of the task to be performed. This frame generally has a constant offset in its pose relative to frame 0, which is also fixed in the base.

A more general expression of the forward kinematics problem is to find the relative position and orientation of any two designated members given the geometric structure of the robotic mechanism and the values of a number of joint positions equal to the number of degrees of freedom of the mechanism. The forward kinematics problem is critical for developing manipulator coordination algorithms because joint positions are typically measured by sensors mounted on the joints and it is necessary to calculate the positions of the joint axes relative to the fixed frame.

In practice, the forward kinematics problem is solved by calculating the transformation between a coordinate frame fixed in the end-effector and another coordinate frame fixed in the base, i. e., between the tool and station frames. This is straightforward for a serial chain since the transformation describing the position of the end-effector relative to the base is obtained by simply concatenating transformations between frames fixed in adjacent links of the chain. The convention for the geometric representation of a manipulator presented in Sect. 2.4 reduces this to finding an equivalent 4 × 4 homogeneous transformation matrix that relates the spatial displacement of the end-effector coordinate frame to the base frame.

For the example serial-chain manipulator shown in Fig. 2.3 and neglecting the addition of tool and station

**Table 2.8** Forward kinematics of the example serial chain manipulator in Fig. 2.3, with abbreviations  $c_{\theta_i} := \cos \theta_i$ and  $s_{\theta_i} := \sin \theta_i$ 

$${}^{0}\mathbf{T}_{6} = \begin{pmatrix} r_{11} & r_{12} & r_{13} & 0p_{6}^{x} \\ r_{21} & r_{22} & r_{23} & 0p_{6}^{x} \\ r_{31} & r_{32} & r_{33} & 0p_{6}^{x} \\ 0 & 0 & 0 & 1 \end{pmatrix},$$

$$r_{11} = c_{\theta_{1}}(s_{\theta_{2}}s_{\theta_{3}} - c_{\theta_{2}}c_{\theta_{3}})(s_{\theta_{4}}s_{\theta_{6}} - c_{\theta_{4}}c_{\theta_{5}}c_{\theta_{6}}) \\ - c_{\theta_{1}}s_{\theta_{5}}c_{\theta_{6}}(c_{\theta_{2}}s_{\theta_{3}} + s_{\theta_{2}}c_{\theta_{3}}) \\ + s_{\theta_{1}}(s_{\theta_{4}}c_{\theta_{5}}c_{\theta_{6}} + c_{\theta_{4}}s_{\theta_{6}}),$$

$$r_{21} = s_{\theta_{1}}(s_{\theta_{2}}s_{\theta_{3}} - c_{\theta_{2}}c_{\theta_{3}})(s_{\theta_{4}}s_{\theta_{6}} - c_{\theta_{4}}c_{\theta_{5}}c_{\theta_{6}}) \\ - s_{\theta_{1}}s_{\theta_{5}}c_{\theta_{6}}(c_{\theta_{2}}s_{\theta_{3}} + s_{\theta_{2}}c_{\theta_{3}}) \\ - c_{\theta_{1}}(s_{\theta_{4}}c_{\theta_{5}}c_{\theta_{6}} + c_{\theta_{4}}s_{\theta_{6}}),$$

$$r_{31} = (c_{\theta_{2}}s_{\theta_{3}} + s_{\theta_{2}}c_{\theta_{3}})(s_{\theta_{4}}s_{\theta_{6}} - c_{\theta_{4}}c_{\theta_{5}}c_{\theta_{6}}) \\ + s_{\theta_{5}}c_{\theta_{6}}(s_{\theta_{2}}s_{\theta_{3}} - c_{\theta_{2}}c_{\theta_{3}}),$$

$$r_{12} = c_{\theta_{1}}(s_{\theta_{2}}s_{\theta_{3}} - c_{\theta_{2}}c_{\theta_{3}})(c_{\theta_{4}}c_{\theta_{5}}s_{\theta_{6}} + s_{\theta_{4}}c_{\theta_{6}}) \\ + c_{\theta_{1}}s_{\theta_{5}}s_{\theta_{6}}(c_{\theta_{2}}s_{\theta_{3}} + s_{\theta_{2}}c_{\theta_{3}}),$$

$$r_{12} = c_{\theta_{1}}(s_{\theta_{2}}s_{\theta_{3}} - c_{\theta_{2}}c_{\theta_{3}})(c_{\theta_{4}}c_{\theta_{5}}s_{\theta_{6}} + s_{\theta_{4}}c_{\theta_{6}}) \\ + c_{\theta_{1}}s_{\theta_{5}}s_{\theta_{6}}(c_{\theta_{2}}s_{\theta_{3}} + s_{\theta_{2}}c_{\theta_{3}}),$$

$$r_{22} = s_{\theta_{1}}(s_{\theta_{2}}s_{\theta_{3}} - c_{\theta_{2}}c_{\theta_{3}})(c_{\theta_{4}}c_{\theta_{5}}s_{\theta_{6}} + s_{\theta_{4}}c_{\theta_{6}}) \\ + s_{\theta_{1}}s_{\theta_{5}}s_{\theta_{6}}(c_{\theta_{2}}s_{\theta_{3}} + s_{\theta_{2}}c_{\theta_{3}}),$$

$$- c_{\theta_{1}}(c_{\theta_{4}}c_{\theta_{6}} - s_{\theta_{4}}c_{\theta_{5}}s_{\theta_{6}}),$$

$$r_{32} = (c_{\theta_{2}}s_{\theta_{3}} + s_{\theta_{2}}c_{\theta_{3}})(c_{\theta_{4}}c_{\theta_{5}}s_{\theta_{6}} + s_{\theta_{4}}c_{\theta_{6}}) \\ - s_{\theta_{5}}s_{\theta_{6}}(s_{\theta_{2}}s_{\theta_{3}} - c_{\theta_{2}}c_{\theta_{3}}),$$

$$- c_{\theta_{1}}c_{\theta_{5}}(s_{\theta_{2}}s_{\theta_{3}} - c_{\theta_{2}}c_{\theta_{3}}),$$

$$- c_{\theta_{1}}c_{\theta_{5}}(c_{\theta_{2}}s_{\theta_{3}} + s_{\theta_{2}}c_{\theta_{3}}) \\ - c_{\theta_{1}}c_{\theta_{5}}(s_{\theta_{2}}s_{\theta_{3}} + s_{\theta_{2}}c_{\theta_{3}}),$$

$$- c_{\theta_{1}}c_{\theta_{5}}(s_{\theta_{2}}s_{\theta_{3}} + s_{\theta_{2}}c_{\theta_{3}}),$$

$$- c_{\theta_{1}}c_{\theta_{5}}(s_{\theta_{2}}s_{\theta_{3}} + s_{\theta_{2}}c_{\theta_{3}}),$$

$$- c_{\theta_{1}}c_{\theta_{5}}(s_{\theta_{2}}s_{\theta_{3}} + s_{\theta_{2}}c_{\theta_{3}}),$$

$$- c_{\theta_{1}}c_{\theta_{5}}(s_{\theta_{2}}s_{\theta_{3}$$

frames, the transformation is

$${}^{0}\mathbf{T}_{6} = {}^{0}\mathbf{T}_{1}{}^{1}\mathbf{T}_{2}{}^{2}\mathbf{T}_{3}{}^{3}\mathbf{T}_{4}{}^{4}\mathbf{T}_{5}{}^{5}\mathbf{T}_{6}$$
 (2.46)

Table 2.8 contains the elements of  ${}^{0}\mathbf{T}_{6}$  that are calculated using Table 2.7 and (2.44).

Once again, homogeneous transformations provide a compact notation, but are computationally inefficient for solving the forward kinematics problem. A reduction in computation can be achieved by separating the position and orientation portions of the transformation to eliminate all multiplications by the 0 and 1 elements of the matrices. In Chap. 3, calculations are made using the spatial vector notation briefly introduced here

in Sect. 2.2.6 and explained in detail in Sect. 3.2. This approach does not employ homogeneous transformations, but rather separates out the rotation matrices and positions to achieve computation efficiency. Table 3.1 provides the detailed formulas, with the product of spatial transforms particularly relevant to the forward kinematics problem.

Kinematic trees are the general structure of robotic mechanisms that do not contain closed loops, and the forward kinematics of tree structures are addressed in Chap. 3. The forward kinematics problem for closed chains is much more complicated because of the additional constraints present. Solution methods for closed chains are included in Chap. 18.

## 2.7 Inverse Kinematics

The inverse kinematics problem for a serial-chain manipulator is to find the values of the joint positions given the position and orientation of the end-effector relative to the base and the values of all of the geometric link parameters. Once again, this is a simplified statement applying only to serial chains. A more general statement is: given the relative positions and orientations of two members of a mechanism, find the values of all of the joint positions. This amounts to finding all of the joint positions given the homogeneous transformation between the two members of interest.

In the common case of a six-degree-of-freedom serial chain manipulator, the known transformation is  ${}^{0}\mathbf{T}_{6}$ . Reviewing the formulation of this transformation in Sect. 2.6, it is clear that the inverse kinematics problem for serial-chain manipulators requires the solution of sets of nonlinear equations. In the case of a six-degreeof-freedom manipulator, three of these equations relate to the position vector within the homogeneous transformation, and the other three relate to the rotation matrix. In the latter case, these three equations cannot come from the same row or column because of the dependency within the rotation matrix. With these nonlinear equations, it is possible that no solutions exist or multiple solutions exist [2.33]. For a solution to exist, the desired position and orientation of the end-effector must lie in the workspace of the manipulator. In cases where solutions do exist, they often cannot be presented in closed form, so numerical methods are required.

#### 2.7.1 Closed-Form Solutions

Closed-form solutions are desirable because they are faster than numerical solutions and readily identify all possible solutions. The disadvantage of closed-form solutions is that they are not general, but robot dependent. The most effective methods for finding closed-form solutions are ad hoc techniques that take advantage of particular geometric features of specific mechanisms. In general, closed-form solutions can only be obtained for six-degree-of-freedom systems with special kinematic structure characterized by a large number of the geometric parameters defined in Sect. 2.4 being zero-valued. Most industrial manipulators have such structure because it permits more efficient coordination software. Sufficient conditions for a six-degreeof-freedom manipulator to have closed-form inverse kinematics solutions are [2.34–36]:

- 1. Three consecutive revolute joint axes intersect at a common point, as in a spherical wrist.
- 2. Three consecutive revolute joint axes are parallel.

Closed-form solution approaches are generally divided into algebraic and geometric methods.

## Algebraic Methods

Algebraic methods involve identifying the significant equations containing the joint variables and manipulating them into a soluble form. A common strategy is reduction to a transcendental equation in a single variable such as.

$$C_1 \cos \theta_i + C_2 \sin \theta_i + C_3 = 0$$
, (2.47)

where  $C_1$ ,  $C_2$ , and  $C_3$  are constants. The solution to such an equation is

$$\theta_i = 2 \tan^{-1} \left( \frac{C_2 \pm \sqrt{C_2^2 - C_3^2 + C_1^2}}{C_1 - C_3} \right)$$
 (2.48)

Special cases in which one or more of the constants are zero are also common.

Reduction to a pair of equations having the form,

$$C_1 \cos \theta_i + C_2 \sin \theta_i + C_3 = 0$$
, (2.49)

$$C_1 \sin \theta_i - C_2 \cos \theta_i + C_4 = 0$$
, (2.50)

is another particularly useful strategy because only one solution results,

$$\theta_i = A \tan 2(-C_1 C_4 - C_2 C_3, C_2 C_4 - C_1 C_3)$$
. (2.51)

## Geometric Methods

Geometric methods involve identifying points on the manipulator relative to which position and/or orientation can be expressed as a function of a reduced set of the joint variables. This often amounts to decomposing the spatial problem into separate planar problems. The resulting equations are solved using algebraic manipulation. The two sufficient conditions for existence of a closed-form solution for a six-degree-of-freedom manipulator that are listed above enable the decomposition of the problem into inverse position kinematics and inverse orientation kinematics. This is the decomposition into regional and orientation structures discussed in Sect. 2.5, and the solution is found by rewriting (2.46),

$${}^{0}\mathbf{T}_{6}{}^{6}\mathbf{T}_{5}{}^{5}\mathbf{T}_{4}{}^{4}\mathbf{T}_{3} = {}^{0}\mathbf{T}_{1}{}^{1}\mathbf{T}_{2}{}^{2}\mathbf{T}_{3}$$
 (2.52)

The example manipulator in Fig. 2.3 has this structure, and its regional structure is commonly known as an articulated or anthropomorphic arm or an elbow manipulator. The solution to the inverse position kinematics problem for such a structure is summarized in Table 2.9. Because there are two solutions for  $\theta_1$  and likewise two solutions for both  $\theta_2$  and  $\theta_3$  corresponding to each  $\theta_1$ solution, there are a total of four solutions to the inverse position kinematics problem of the articulated arm manipulator. The orientation structure is simply a spherical wrist, and the corresponding solution to the inverse orientation kinematics problem is summarized in Table 2.10. Two solutions for  $\theta_5$  are given in Table 2.10, but only one solution for both  $\theta_4$  and  $\theta_6$  corresponds to each. Thus, the inverse orientation kinematics problem of a spherical wrist has two solutions. Combining the regional and orientation structures, the total number of inverse kinematics solutions for the manipulator in Fig. 2.3 is eight.

## 2.7.2 Numerical Methods

Unlike the algebraic and geometric methods used to find closed-form solutions, numerical methods are not robot dependent, so they can be applied to any kinematic structure. The disadvantages of numerical methods are that they can be slower and in some cases, they do not allow computation of all possible solutions. For a six-degree-of-freedom serial-chain manipulator with only revolute and prismatic joints, the translation and rotation equations can always be reduced to a polynomial in a single variable of degree not greater than 16 [2.37]. Thus, such a manipulator can have as many as 16 real solutions to the inverse kinematics problem [2.38]. Since closed-form solution of a polynomial equation is only possible if the polynomial is of degree four or less, it follows that many manipulator geometries are not soluble in closed form. In general, a greater number of nonzero geometric parameters corresponds to a polynomial of higher degree in the reduction. For such manipulator structures, the most common numerical methods can be divided into categories of symbolic elimination methods, continuation methods, and iterative methods.

## Symbolic Elimination Methods

Symbolic elimination methods involve analytical manipulations to eliminate variables from the system of nonlinear equations to reduce it to a smaller set of equations. Raghavan and Roth [2.39] used dialytic elimination to reduce the inverse kinematics problem of a general 6R serial-chain manipulator to a polyno-

**Table 2.9** Inverse position kinematics of the articulated arm within the example serial chain manipulator in Fig. 2.3

$$\begin{aligned} \theta_1 &= A \tan 2 \left( {}^0p_6^y, {}^0p_6^x \right) \\ \text{or } A \tan 2 \left( {}^{-0}p_6^y, {}^{-0}p_6^x \right) \\ \theta_3 &= -A \tan 2 \left( D, \pm \sqrt{1 - D^2} \right) \;, \\ \text{where } D &:= \frac{{}^{(0}p_6^y)^2 + {}^{(0}p_6^y)^2 + {}^{(0}p_6^z)^2 - a_3^2 - d_4^2}{2a_3d_4} \;\;, \\ \theta_2 &= A \tan 2 \left( {}^{(0}p_6^z, \sqrt{({}^{(0}p_6^x)^2 + ({}^{(0}p_6^y)^2)} \right) \\ -A \tan 2 \left( d_4 \cos \theta_3, a_3 - d_4 \sin \theta_3 \right) \end{aligned}$$

Table 2.10 Inverse orientation kinematics of the spherical wrist within the example serial chain manipulator in Fig. 2.3, with abbreviations  $c_{\theta_i} := \cos \theta_i$  and  $s_{\theta_i} := \sin \theta_i$ 

mial of degree 16 and to find all possible solutions. The roots provide solutions for one of the joint variables, while the other variables are computed by solving linear systems. Manocha and Canny [2.40] improved the numerical properties of this technique by reformulating the problem as a generalized eigenvalue problem. An alternative approach to elimination makes use of Gröbner bases [2.41, 42].

#### **Continuation Methods**

Continuation methods involve tracking a solution path from a start system with known solutions to a target system whose solutions are sought as the start system is transformed into the target system. These techniques have been applied to inverse kinematics problems [2.43], and special properties of polynomial systems can be exploited to find all possible solutions [2.44].

#### Iterative Methods

A number of different iterative methods can be employed to solve the inverse kinematics problem. Most of them converge to a single solution based on an initial guess, so the quality of that guess greatly impacts the solution time. Newton-Raphson methods provide a fundamental approach that uses a first-order approximation of the original equations. Pieper [2.34] was among the first to apply the method to inverse kinematics, and others have followed [2.45, 46]. Optimization approaches formulate the problem as a nonlinear optimization problem and employ search techniques to move from an initial guess to a solution [2.47, 48]. Resolved motion rate control converts the problem to a differential equation [2.49], and a modified predictor corrector algorithm can be used to perform the joint velocity integration [2.50]. Control-theory-based methods cast the differential equation into a control problem [2.51]. Interval analysis [2.52] is perhaps one of the most promising iterative methods because it offers rapid convergence to a solution and can be used to find all possible solutions. For complex mechanisms, the damped least-squares approach [2.53] is particularly attractive, and more detail is provided in Chap. 10.

## 2.8 Forward Instantaneous Kinematics

The forward instantaneous kinematics problem for a serial-chain manipulator is: given the positions of all members of the chain and the rates of motion about all the joints, find the total velocity of the endeffector. Here the rate of motion about the joint is the angular velocity of rotation about a revolute joint or the translational velocity of sliding along a prismatic joint. The total velocity of a member is the velocity of the origin of the coordinate frame fixed to it combined with its angular velocity. That is, the total velocity has six independent components and therefore, completely represents the velocity field of the member. It is important to note that this problem definition includes an assumption that the pose of the mechanism is completely known. In most situations, this means that either the forward or inverse position kinematics problem must be solved before the forward instantaneous kinematics problem can be addressed. The same is true of the inverse instantaneous kinematics problem discussed in the following section. The forward instantaneous kinematics problem is important when doing acceleration analysis for the purpose of studying dynamics. The total velocities of the members are needed for the computation of Coriolis and centripetal acceleration components.

## 2.8.1 Jacobian

Differentiation with respect to time of the forward position kinematics equations yields a set of equations of the form

$$^{k}\boldsymbol{v}_{N}=\mathbf{J}(\boldsymbol{q})\dot{\boldsymbol{q}},\tag{2.53}$$

where  ${}^k \boldsymbol{v}_N$  is the spatial velocity of the end-effector expressed in any frame k,  $\dot{q}$  is an n-dimensional vector composed of the joint rates, and J(q) is a  $6 \times$ n matrix whose elements are, in general, nonlinear functions of q. J(q) is called the Jacobian matrix of this algebraic system and is expressed relative to the same coordinate frame as the spatial velocity  ${}^k v_N$  [2.54]. Alternately, (2.53) can be expressed

$$^{k}\mathbf{v}_{N}=\left[\mathbf{J}_{1}\ \mathbf{J}_{2}\ \cdots\ \mathbf{J}_{N}\right]\mathbf{q}^{\prime},$$
 (2.54)

where N is the number of joints (each with possibly more than 1 degree-of-freedom) and  $J_i$  provides the column(s) of  $\mathbf{J}(q)$  which correspond(s) to  $\dot{q}_i$ . If the joint positions are known, (2.53) yields six linear algebraic equations in the joint rates. If the joint rates are given, a solution of (2.53) is a solution of the forward instantaneous kinematics problem. Note that J(q) can be regarded as a known matrix for this purpose provided all the joint positions are known.

Algorithm 2.1 Jacobian Computation Algorithm for a Serial–Chain Mechanism

inputs: 
$${}^k\mathbf{X}_N, {}^N\mathbf{X}_{N-1}, ..., {}^i\mathbf{X}_{i-1}, ..., {}^2\mathbf{X}_1$$
output:  $\mathbf{J}$ 
 $\mathbf{X} = {}^k\mathbf{X}_N$ 
for  $i = N$  to 1 do
 $\mathbf{J}_i = \mathbf{X} \mathbf{\Phi}_i$ 
if  $i > 1$  then
 $\mathbf{X} = \mathbf{X} {}^i\mathbf{X}_{i-1}$ 
end if
end for

Using the spatial vector notation briefly introduced in Sect. 2.2.6 and explained in detail in Sect. 3.2, the Jacobian can be easily computed from the free modes  $\Phi_i$ 

of the joints and the associated spatial transforms  ${}^{j}\mathbf{X}_{i}$ .

$$\mathbf{J}_i = {}^k \mathbf{X}_i \, \mathbf{\Phi}_i \,. \tag{2.55}$$

To understand why this holds, note that  $\Phi_i$  describes the spatial velocities created by joint i in local coordinates and  ${}^{k}\mathbf{X}_{i}$  transforms spatial velocities expressed in frame i to frame k. The quantities  $J_i$  can be efficiently computed from  ${}^{k}\mathbf{X}_{N}$  and the link-to-link transforms  ${}^{i}\mathbf{X}_{i-1}$ . Algorithm 2.1 contains an algorithm for computing the columns of the Jacobian in this manner. Table 3.1 provides efficient methods to carry out the multiplications required in this algorithm which exploit the structure of spatial transformation matrices. Note that the quantity  ${}^{k}\mathbf{X}_{N}$  can be computed with forward kinematics and each  ${}^{i}\mathbf{X}_{i-1}$  can be computed with simple joint kinematics. Thus, use of the algorithm in Alg. 2.1 simplifies the problem of forward instantaneous kinematics to one of forward standard kinematics. Additional information about the Jacobian can be found in Chap. 10.

## 2.9 Inverse Instantaneous Kinematics

The important problem from the point of view of robotic coordination is the inverse instantaneous kinematics problem. More information on robot coordination can be found in Chaps. 7 and 8. The inverse instantaneous kinematics problem for a serial chain manipulator is: given the positions of all members of the chain and the total velocity of the end-effector, find the rates of motion of all joints. When controlling a movement of an industrial robot that operates in the point-to-point mode, it is not only necessary to compute the final joint positions needed to assume the desired final hand position. It is also necessary to generate a smooth trajectory for motion between the initial and final positions. There are, of course, an infinite number of possible trajectories for this purpose. However, the most straightforward and successful approach employs algorithms based on the solution of the inverse instantaneous kinematics problem. This technique originated in the work of Whitney [2.55] and of Pieper [2.34].

#### 2.9.1 Inverse Jacobian

In order to solve the linear system of equations in the joint rates obtained by decomposing (2.53) into its com-

ponent equations when  $\mathbf{v}_N$  is known, it is necessary to invert the Jacobian matrix. The equation becomes

$$\dot{\mathbf{q}} = \mathbf{J}^{-1}(\mathbf{q})\mathbf{v}_N . \tag{2.56}$$

Since **J** is a  $6 \times 6$  matrix, numerical inversion is not very attractive. It is quite possible for J to become singular ( $|\mathbf{J}| = 0$ ), in which case the inverse does not exist. More information on singularities can be found in Chaps. 4 and 18. Even when the Jacobian matrix does not become singular, it may become ill-conditioned, leading to degraded performance in significant portions of the manipulator's workspace. Most industrial robot geometries are simple enough that the Jacobian matrix can be inverted analytically, leading to a set of explicit equations for the joint rates [2.56-58]. This greatly reduces the number of operations needed as compared to numerical inversion. For more complex manipulator geometries, though, numerical inversion is the only solution option. The Jacobian of a redundant manipulator is not square, so it cannot be inverted. Chapter 10 discusses how various pseudoinverses can be used in such cases.

## 2.10 Static Wrench Transmission

A general force system can be shown to be equivalent to a single force together with a moment acting about its line of action. This is called a wrench. There is a deep isometry between the geometries of systems of wrench axes and that of systems of instantaneous screw axes [2.59]. Static wrench analysis of a manipulator establishes the relationship between wrenches applied to the end-effector and forces/torques applied to the joints. This is essential for controlling a manipulator's interactions with its environment. Examples include tasks involving fixed or quasi-fixed workpieces such as inserting a component in place with a specified force and tightening a nut to a prescribed torque. More information can be found in Chaps. 9 and 37. Through the principle of virtual work, the relationship between wrenches applied to the end-effector and forces/torques applied to the joints can be shown

$$\tau = \mathbf{J}^{\mathrm{T}}\mathbf{f}\,,\tag{2.57}$$

where  $\tau$  is the *n*-dimensional vector of applied joint forces/torques for an n-degree-of-freedom manipulator and f is the spatial force vector

$$\mathbf{f} = \begin{pmatrix} \mathbf{n} \\ f \end{pmatrix} , \tag{2.58}$$

in which n and f are the vectors of torques and forces, respectively, applied to the end-effector, both expressed in the coordinate frame relative to which the Jacobian is also expressed. Thus, in the same way the Jacobian maps the joint rates to the spatial velocity of the endeffector, its transpose maps the wrenches applied to the end-effector to the equivalent joint forces/torques. As in the velocity case, when the Jacobian is not square, the inverse relationship is not uniquely defined.

# 2.11 Conclusions and Further Reading

This chapter presents an overview of how the fundamentals of kinematics can be applied to robotic mechanisms. The topics include various representations of the position and orientation of a rigid body in space, the freedom of motion and accompanying mathematical models of joints, a geometric representation that describes the bodies and joints of a robotic mechanism, the workspace of a manipulator, the problems of forward and inverse kinematics, the problems of forward and inverse instantaneous kinematics including the definition of the Jacobian, and finally the transmission of static wrenches. This chapter is certainly not a comprehensive account of robot kinematics. Fortunately, a number of excellent texts provide a broad introduction to robotics with significant focus on kinematics [2.17, 27, 29, 30, 51, 60–64].

From a historical perspective, robotics fundamentally changed the nature of the field of mechanism kinematics. Before the first work on the generation of coordination equations for robots [2.34, 55], the focus of the field was almost entirely on single-degree-of-freedom mechanisms. This is why robotics, following on from the advent of digital computing, led to a renaissance of work in mechanism kinematics. More details can be found in Chap. 4. The evolution of the field has continued as it has broadened from the study of simple serial chains for industrial robots, the focus of the analysis in this chapter, to parallel machines (Chap. 18), human-like grippers (Chap. 19), robotic vehicles (Chaps. 17 and 24-26), and even small-scale robots (Chap. 27).

## References

- 2.1 W. R. Hamilton: On quaternions, or on a new system of imaginaries in algebra, Philos. Mag. 18 (2000)
- E.B. Wilson: Vector Analysis (Dover, New York 1960), 2 2 based upon the lectures of J.W. Gibbs (reprint of the 2nd edn. published by Charles Scribner's Sons,
- 2.3 H. Graßmann: Die Wissenschaft der extensiven Größe oder die Ausdehnungslehre (Wigand, Leipzig 1844)
- 2.4 J.M. McCarthy: Introduction to Theoretical Kinematics (MIT Press, Cambridge 1990)
- 2.5 W.K. Clifford: Preliminary sketch of bi-quarternions, Proc. Lond. Math. Soc. 4, 381-395 (1873)
- 2.6 A.P. Kotelnikov: Screw calculus and some applications to geometry and mechanics (Annal. Imp. Univ., Kazan 1895)
- E. Study: Geometrie der Dynamen (Teubner, Leipzig 2.7
- 2.8 G.S. Chirikjian, A.B. Kyatkin: Engineering Applications of Noncommutative Harmonic Analysis (CRC, Boca Raton 2001)

- R. von Mises: Anwendungen der Motorrechnung, Z. Angew. Math. Mech. 4(3), 193-213 (1924)
- 2.10 J.E. Baker, I.A. Parkin: Fundamentals of Screw Motion: Seminal Papers by Michel Chasles and Olinde Rodrigues, School of Information Technologies (University of Sydney, Sydney 2003), translated from O. Rodrigues: Des lois géométriques qui régissent les déplacements d'un système dans l'espace, J. Math. Pures Applicqu. Liouville 5, 380-440 (1840)
- R.S. Ball: A Treatise on the Theory of Screws (Cambridge Univ. Press, Cambridge 1998)
- 2.12 J.K. Davidson, K.H. Hunt: Robots and Screw Theory: Applications of Kinematics and Statics to Robotics (Oxford Univ. Press, Oxford 2004)
- 2.13 K.H. Hunt: Kinematic Geometry of Mechanisms (Clarendon, Oxford 1978)
- J.R. Phillips: Freedom in Machinery. Vol 1. Introducing Screw Theory (Cambridge Univ. Press, Cambridge
- 2.15 J.R. Phillips: Freedom in Machinery. Vol 2. Screw Theory Exemplified (Cambridge Univ. Press, Cambridge
- 2.16 G.S. Chirikjian: Rigid-body kinematics. In: Robotics and Automation Handbook, ed. by T. Kurfess (CRC, Boca Raton 2005), Chap. 2
- R.M. Murray, Z. Li, S.S. Sastry: A Mathematical Introduction to Robotic Manipulation (CRC, Boca Raton
- 2.18 A. Karger, J. Novak: Space Kinematics and Lie Groups (Routledge, New York 1985)
- R. von Mises: Motorrechnung, ein neues Hilfsmittel in der Mechanik, Z. Angew. Math. Mech. 2(2), 155-181 (1924)
- 2.20 J.D. Everett: On a new method in statics and kinematics, Mess. Math. **45**, 36-37 (1875)
- F. Reuleaux: Kinematics of Machinery (Dover, New York 1963), reprint of Theoretische Kinematik, 1875, in German
- R. Featherstone: Rigid Body Dynamics Algorithms 2.22 (Kluwer, Boston 2007)
- K.J. Waldron: A method of studying joint geometry, Mechan. Mach. Theory 7, 347-353 (1972)
- 2.24 T.R. Kane, D.A. Levinson: Dynamics, Theory and Applications (McGraw-Hill, New York 1985)
- J.L. Lagrange: Oeuvres de Lagrange (Gauthier-Villars, 2.25 Paris 1867)
- 2.26 J. Denavit, R.S. Hartenberg: A kinematic notation for lower-pair mechanisms based on matrices, J. Appl. Mech. 22, 215-221 (1955)
- 2.27 W. Khalil, E. Dombre: Modeling, Identification and Control of Robots (Taylor Francis, New York 2002)
- K.J. Waldron: A study of overconstrained linkage geometry by solution of closure equations, Part I: A method of study, Mech. Mach. Theory 8(1), 95–104
- R. Paul: Robot Manipulators: Mathematics, Programming and Control (MIT Press, Cambridge 1982)
- 2.30 J.J. Craig: Introduction to Robotics: Mechanics and Control (Addison-Wesley, Reading 1986)
- K.J. Waldron, A. Kumar: The dextrous workspace, ASME Mech. Conf., Los Angeles (1980), ASME paper No. 80-DETC-108

- 2.32 R. Vijaykumar, K.J. Waldron, M.J. Tsai: Geometric optimization of manipulator structures for working volume and dexterity, Int. J. Robotics Res. 5(2), 91-103 (1986)
- 2.33 J. Duffy: Analysis of Mechanisms and Robot Manipulators (Wiley, New York 1980)
- 2.34 D. Pieper: The Kinematics of Manipulators Under Computer Control, Ph.D. Thesis (Stanford University, Stanford 1968)
- C.S.G. Lee: Robot arm kinematics, dynamics, and 2.35 control, Computer **15**(12), 62-80 (1982)
- M.T. Mason: Mechanics of Robotic Manipulation (MIT Press, Cambridge 2001)
- 2.37 H.Y. Lee, C.G. Liang: A new vector theory for the analysis of spatial mechanisms, Mech. Mach. Theory 23(3), 209-217 (1988)
- 2.38 R. Manseur, K.L. Doty: A robot manipulator with 16 real inverse kinematic solutions, Int. J. Robotics Res. **8**(5), 75-79 (1989)
- 2.39 M. Raghavan, B. Roth: Kinematic analysis of the 6R manipulator of general geometry, 5th Int. Symp. Robotics Res. (1990)
- 2.40 D. Manocha, J. Canny: Real Time Inverse Kinematics for General 6R Manipulators, Tech. Rep. (University of California, Berkeley 1992)
- B. Buchberger: Applications of Gröbner bases in non-linear computational geometry, Lect. Notes Comput. Sci. **296**, 52-80 (1989)
- 2.42 P. Kovacs: Minimum degree solutions for the inverse kinematics problem by application of the Buchberger algorithm. In: Advances in Robot Kinematics, ed. by S. Stifter, J. Lenarcic (Springer, New York 1991) pp. 326-334
- L.W. Tsai, A.P. Morgan: Solving the kinematics of the most general six- and five-degree-of-freedom manipulators by continuation methods, ASME J. Mech. Transm. Autom. Des. 107, 189-195 (1985)
- 2.44 C.W. Wampler, A.P. Morgan, A.J. Sommese: Numerical continuation methods for solving polynomial systems arising in kinematics, ASME J. Mech. Des. 112, 59-68 (1990)
- R. Manseur, K.L. Doty: Fast inverse kinematics of 5-revolute-axis robot manipulators, Mechan. Mach. Theory **27**(5), 587–597 (1992)
- S.C.A. Thomopoulos, R.Y.J. Tam: An iterative solution 2.46 to the inverse kinematics of robotic manipulators, Mechan. Mach. Theory 26(4), 359-373 (1991)
- 2.47 J.J. Uicker Jr., J. Denavit, R.S. Hartenberg: An interactive method for the displacement analysis of spatial mechanisms, J. Appl. Mech. **31**, 309–314 (1964)
- J. Zhao, N. Badler: Inverse kinematics positioning using nonlinear programming for highly articulated figures, Trans. Comput. Graph. 13(4), 313-336
- D.E. Whitney: Resolved motion rate control of manipulators and human prostheses, IEEE Trans. Man Mach. Syst. **10**, 47–63 (1969)
- 2.50 H. Cheng, K. Gupta: A study of robot inverse kinematics based upon the solution of differential equations, J. Robotic Syst. **8**(2), 115–175 (1991)
- 2.51 L. Sciavicco, B. Siciliano: Modeling and Control of Robot Manipulators (Springer, London 2000)

- 2.52 R.S. Rao, A. Asaithambi, S.K. Agrawal: Inverse kinematic solution of robot manipulators using interval analysis, ASME J. Mech. Des. **120**(1), 147–150 (1998)
- 2.53 C.W. Wampler: Manipulator inverse kinematic solutions based on vector formulations and damped least squares methods, IEEE Trans. Syst. Man Cybern. **16**, 93-101 (1986)
- 2.54 D.E. Orin, W.W. Schrader: Efficient computation of the jacobian for robot manipulators, Int. J. Robotics Res. 3(4), 66-75 (1984)
- 2.55 D.E. Whitney: The mathematics of coordinated control of prosthetic arms and manipulators, J. Dynamic Sys. Meas. Control 122, 303-309 (1972)
- 2.56 R.P. Paul, B.E. Shimano, G. Mayer: Kinematic control equations for simple manipulators, IEEE Trans. Syst. Man Cybern. 11(6), 339-455 (1981)
- 2.57 R.P. Paul, C.N. Stephenson: Kinematics of robot wrists, Int. J. Robotics Res. 20(1), 31-38 (1983)

- R.P. Paul, H. Zhang: Computationally efficient kinematics for manipulators with spherical wrists based on the homogeneous transformation representation, Int. J. Robotics Res. **5**(2), 32-44 (1986)
- K.J. Waldron, K.H. Hunt: Series-parallel dualities in actively coordinated mechanisms, Int. J. Robotics Res. 10, 473-480 (1991)
- H. Asada, J.J.E. Slotine: Robot Analysis and Control 2.60 (Wiley, New York 1986)
- F.L. Lewis, C.T. Abdallah, D.M. Dawson: Control of Robot Manipulators (Macmillan, New York 1993)
- 2.62 R.J. Schilling: Fundamentals of Robotics: Analysis and Control (Prentice Hall, Englewood Cliffs
- 2.63 M.W. Spong, M. Vidyasagar: Robot Dynamics and Control (Wiley, New York 1989)
- 2.64 T. Yoshikawa: Foundations of Robotics (MIT Press, Cambridge 1990)