
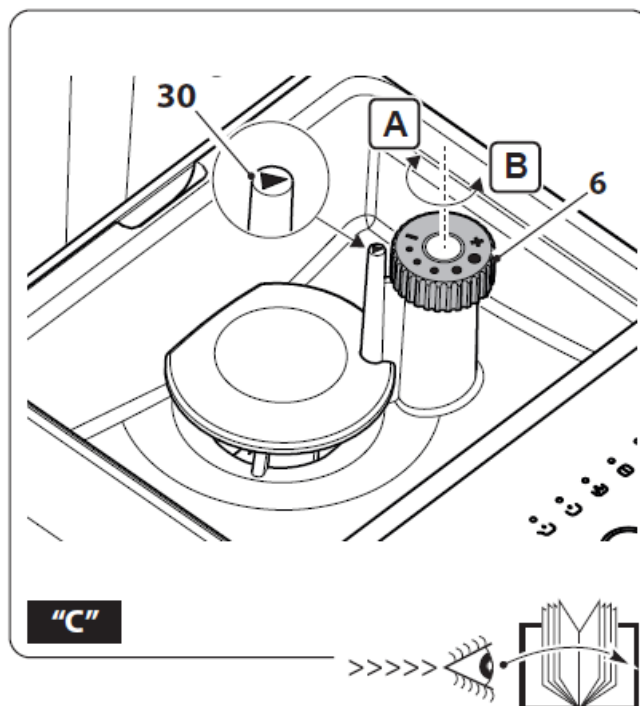


16. Mug holder.
17. Brewing group.
18. Cleaning brush.
19. Water hardness test strip.

DESCRIPTION OF CONTROLS AND ALARMS (Fig. B-C)

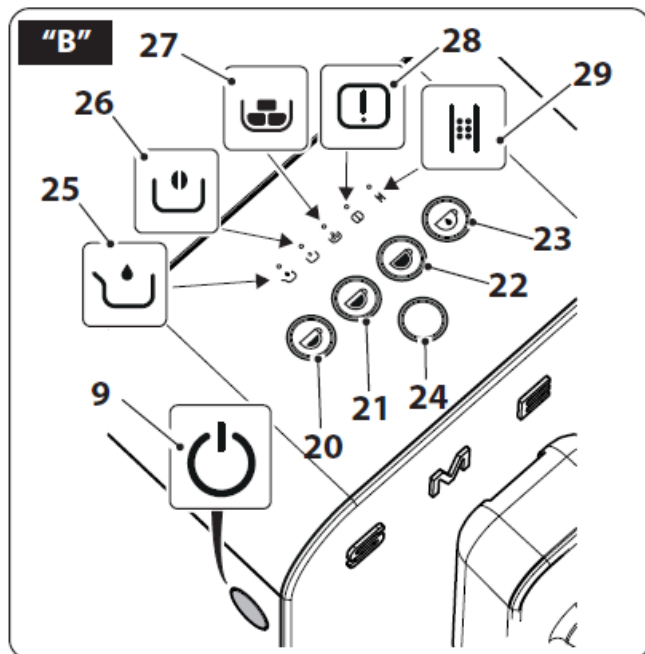

ON/OFF button (9)

Pressing the button switches the machine on or off.

Change dispensing program button (24)

- The product has 8 functions, accessible through two menus, White Menu and Orange Menu.
- By pressing this button it is possible to change the dispensing menu from “White” and “Orange” and vice versa.

White	Keys LED white
 20	Ristretto coffee
 21	Espresso coffee
 22	Coffee
 23	Hot water
Orange	Keys LED orange
 20	Light Ristretto coffee
 21	Light Espresso coffee
 22	Long coffee
 23	Americano

Controls

- **Empty water tank alarm (25)**

The related LED flashes when the tank (5) is absent, or when the water inside it is missing or at an insufficient level. Insert the tank or fill it with water.

- **No coffee alarm (26)**

The relative LED lights up steadily indicating that the coffee beans in the container (3) have reached the minimum level or are absent. Fill the container with coffee beans.

- **Coffee grounds container alarm (27)**

- **Steady lit LED:**

Coffee grounds container full (12); empty the container.

- **Flashing LED:**

Coffee grounds container (12) or internal drip tray (13) missing or incorrectly assembled; the machine is blocked until the components are correctly reassembled.

- **Brewing group alarm (28)**

- **Flashing LED:**

Door open or brewing group missing or incorrectly assembled; the machine is blocked until the brewing group is correct assembled or door closed.