



# **Cisco IOS XE IP Routing: BGP Configuration Guide**

Release 2

### **Americas Headquarters**

Cisco Systems, Inc. 170 West Tasman Drive San Jose, CA 95134-1706 USA

http://www.cisco.com Tel: 408 526-4000

800 553-NETS (6387)

Fax: 408 527-0883

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

CCDE, CCENT, CCSI, Cisco Eos, Cisco Explorer, Cisco HealthPresence, Cisco IronPort, the Cisco logo, Cisco Nurse Connect, Cisco Pulse, Cisco SensorBase, Cisco StackPower, Cisco StadiumVision, Cisco TelePresence, Cisco TrustSec, Cisco Unified Computing System, Cisco WebEx, DCE, Flip Channels, Flip for Good, Flip Mino, Flipshare (Design), Flip Ultra, Flip Video, Flip Video (Design), Instant Broadband, and Welcome to the Human Network are trademarks; Changing the Way We Work, Live, Play, and Learn, Cisco Capital, Cisco Capital (Design), Cisco:Financed (Stylized), Cisco Store, Flip Gift Card, and One Million Acts of Green are service marks; and Access Registrar, Aironet, AllTouch, AsyncOS, Bringing the Meeting To You, Catalyst, CCDA, CCDP, CCIE, CCIP, CCNA, CCNP, CCSP, CCVP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IOS, Cisco Lumin, Cisco Nexus, Cisco Press, Cisco Systems Capital, the Cisco Systems logo, Cisco Unity, Collaboration Without Limitation, Continuum, EtherFast, EtherSwitch, Event Center, Explorer, Follow Me Browsing, GainMaker, iLYNX, IOS, iPhone, IronPort, the IronPort logo, Laser Link, LightStream, Linksys, MeetingPlace, MeetingPlace Chime Sound, MGX, Networkers, Networking Academy, PCNow, PIX, PowerKEY, PowerPanels, PowerTV, PowerVu, Prisma, ProConnect, ROSA, SenderBase, SMARTnet, Spectrum Expert, StackWise, WebEx, and the WebEx logo are registered trademarks of Cisco and/or its affiliates in the United States and certain other countries.

All other trademarks mentioned in this document or website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1002R)

Any Internet Protocol (IP) addresses used in this document are not intended to be actual addresses. Any examples, command display output, and figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses in illustrative content is unintentional and coincidental.

Cisco IOS XE IP Routing: BGP Configuration Guide © 2009—2010 Cisco Systems, Inc. All rights reserved.



# **About Cisco IOS XE Software Documentation**

#### Last Updated: February 24, 2010

This document describes the objectives, audience, conventions, and organization used in Cisco IOS XE software documentation. Also included are resources for obtaining technical assistance, additional documentation, and other information from Cisco. This document is organized into the following sections:

- Documentation Objectives, page i
- Audience, page i
- Documentation Conventions, page ii
- Documentation Organization, page iii
- Additional Resources and Documentation Feedback, page x

# **Documentation Objectives**

Cisco IOS XE documentation describe the tasks and commands available to configure and maintain Cisco networking devices.

# **Audience**

The Cisco IOS XE documentation set is intended for users who configure and maintain Cisco networking devices (such as routers and switches) but who may not be familiar with the configuration and maintenance tasks, the relationship among tasks, or the Cisco IOS commands necessary to perform particular tasks. The Cisco IOS XE documentation set is also intended for those users experienced with Cisco IOS XE software who need to know about new features, new configuration options, and new software characteristics in the current Cisco IOS XE release.

# **Documentation Conventions**

In Cisco IOS XE documentation, the term *router* may be used to refer to various Cisco products; for example, routers, access servers, and switches. These and other networking devices that support Cisco IOS XE software are shown interchangeably in examples and are used only for illustrative purposes. An example that shows one product does not necessarily mean that other products are not supported.

This section contains the following topics:

- Typographic Conventions, page ii
- Command Syntax Conventions, page ii
- Software Conventions, page iii
- Reader Alert Conventions, page iii

# **Typographic Conventions**

Cisco IOS XE documentation uses the following typographic conventions:

Convention	ion Description		
^ or Ctrl	Both the 'symbol and Ctrl represent the Control (Ctrl) key on a keyboard. For example, the key combination 'D or Ctrl-D means that you hold down the Control key while you press the D key. (Keys are indicated in capital letters but are not case sensitive.)		
string	A string is a nonquoted set of characters shown in italics. For example, when setting a Simple Network Management Protocol (SNMP) community string to <i>public</i> , do not use quotation marks around the string; otherwise, the string will include the quotation marks.		

# **Command Syntax Conventions**

Cisco IOS XE documentation uses the following command syntax conventions:

Convention	Description		
bold	Bold text indicates commands and keywords that you enter as shown.		
italic	Italic text indicates arguments for which you supply values.		
[x]	Square brackets enclose an optional keyword or argument.		
	An ellipsis (three consecutive nonbolded periods without spaces) after a syntax element indicates that the element can be repeated.		
	A vertical line, called a pipe, indicates a choice within a set of keywords or arguments.		
[x   y]	Square brackets enclosing keywords or arguments separated by a pipe indicate an optional choice.		
	Braces enclosing keywords or arguments separated by a pipe indicate a required choice.		
[x {y   z}]	Braces and a pipe within square brackets indicate a required choice within an optional element.		

### **Software Conventions**

Cisco IOS XE software uses the following conventions:

Convention	Description	
Courier font	Courier font is used for information that is displayed on a PC or terminal screen.	
Bold Courier font	Bold Courier font indicates text that the user must enter.	
< >	Angle brackets enclose text that is not displayed, such as a password. Angle brackets also are used in contexts in which the italic font style is not supported; for example, ASCII text.	
!	An exclamation point at the beginning of a line indicates that the text that follows is a comment, not a line of code. An exclamation point is also displayed by the Cisco IOS XE software for certain processes.	
[ ]	Square brackets enclose default responses to system prompts.	

# **Reader Alert Conventions**

Cisco IOS XE documentation uses the following conventions for reader alerts:



Means reader be careful. In this situation, you might do something that could result in equipment damage or loss of data.



Means reader take note. Notes contain helpful suggestions or references to material not covered in the manual.



Means the described action saves time. You can save time by performing the action described in the paragraph.

# **Documentation Organization**

This section describes the Cisco IOS XE documentation set, how it is organized, and how to access it on Cisco.com. Listed are configuration guides, command references, and supplementary references and resources that comprise the documentation set.

- Cisco IOS XE Documentation Set, page iv
- Cisco IOS XE Documentation on Cisco.com, page iv
- Configuration Guides, Command References, and Supplementary Resources, page v

### **Cisco IOS XE Documentation Set**

The Cisco IOS XE documentation set consists of the following:

- Release notes and caveats provide information about platform, technology, and feature support for a release and describe severity 1 (catastrophic), severity 2 (severe), and severity 3 (moderate) defects in released Cisco IOS XE software. Review release notes before other documents to learn whether updates have been made to a feature.
- Sets of configuration guides and command references organized by technology and published for each standard Cisco IOS XE release.
  - Configuration guides—Compilations of documents that provide conceptual and task-oriented descriptions of Cisco IOS XE features.
  - Command references—Alphabetical compilations of command pages that provide detailed information about the commands used in the Cisco IOS XE features and the processes that comprise the related configuration guides. For each technology, there is a single command reference that covers all Cisco IOS XE releases and that is updated at each standard release.
- Command reference book for **debug** commands.
- Lists of all the commands in a specific release and all commands that are new, modified, removed, or replaced in the release.
- Reference book for system messages for all Cisco IOS XE releases.

### **Cisco IOS XE Documentation on Cisco.com**

The following sections describe the documentation organization and how to access various document types.

Use Cisco Feature Navigator to find information about Cisco IOS XE software image support. To access Cisco Feature Navigator, go to http://www.cisco.com/go/cfn. An account on Cisco.com is not required.

#### **Configuration Guides**

Configuration guides are provided by technology and release and comprise a set of individual feature guides relevant to the release and technology.

#### **Command References**

Command reference books describe Cisco IOS XE commands that are supported in many different software releases and on many different platforms. The books are organized by technology. For information about all Cisco IOS XE commands, use the Command Lookup Tool at <a href="http://tools.cisco.com/Support/CLILookup">http://tools.cisco.com/Support/CLILookup</a> or the Cisco IOS Master Command List, All Releases, at <a href="http://www.cisco.com/en/US/docs/ios/mcl/allreleasemcl/all\_book.html">http://www.cisco.com/en/US/docs/ios/mcl/allreleasemcl/all\_book.html</a>.

#### **Cisco IOS XE Supplementary Documents and Resources**

Supplementary documents and resources are listed in Table 2 on page x.

# **Configuration Guides, Command References, and Supplementary Resources**

Table 1 lists, in alphabetical order, Cisco IOS XE software configuration guides and command references, including brief descriptions of the contents of the documents. The command references contain commands for both Cisco IOS software and Cisco IOS XE software, for all releases. The command references support many different software releases and platforms. Your Cisco IOS XE software release or platform may not support all these technologies.

Table 2 lists documents and resources that supplement the Cisco IOS XE software configuration guides and command references. These supplementary resources include release notes and caveats; master command lists; new, modified, removed, and replaced command lists; system messages; and the debug command reference.

For additional information about configuring and operating specific networking devices, and to access Cisco IOS documentation, go to the Product/Technologies Support area of Cisco.com at the following location:

http://www.cisco.com/go/techdocs

Table 1 Cisco IOS XE Configuration Guides and Command References

Configuration Guide and Command Reference Titles	Features/Protocols/Technologies
Cisco ASR 1000 Series Aggregation Services Routers SIP and SPA Software Configuration Guide	Configuration and troubleshooting of SPA interface processors (SIPs) and shared port adapters (SPAs) that are supported on the Cisco ASR 1000 Series Router.
Cisco ASR 1000 Series Aggregation Services Routers Software Configuration Guide	Overview of software functionality that is specific to the Cisco ASR 1000 Series Aggregation Services Routers.
<ul> <li>Cisco IOS XE Access Node Control Protocol Configuration Guide</li> <li>Cisco IOS Access Node Control Protocol</li> </ul>	Communication protocol between digital subscriber line access multiplexers (DSLAMs) and a broadband remote access server (BRAS).
Command Reference     Cisco IOS XE Asynchronous Transfer Mode     Configuration Guide	LAN ATM, multiprotocol over ATM (MPoA), and WAN ATM.
• Cisco IOS Asynchronous Transfer Mode Command Reference	
• Cisco IOS XE Broadband Access Aggregation and DSL Configuration Guide	PPP over Ethernet (PPPoE).
• Cisco IOS Broadband Access Aggregation and DSL Command Reference	
Cisco IOS XE Carrier Ethernet Configuration Guide	IEEE 802.3ad Link Bundling; Link Aggregation Control
Cisco IOS Carrier Ethernet Command Reference	Protocol (LACP) support for Ethernet and Gigabit Ethernet links and EtherChannel bundles; LACP support for stateful switchover (SSO), in service software upgrade (ISSU), Cisco nonstop forwarding (NSF), and nonstop routing (NSR) on Gigabit EtherChannel bundles; and IEEE 802.3ad Link Aggregation MIB.
Cisco IOS XE Configuration Fundamentals     Configuration Guide	Autoinstall, Setup, Cisco IOS command-line interface (CLI), Cisco IOS file system (IFS), Cisco IOS web browser user
• Cisco IOS Configuration Fundamentals Command Reference	interface (UI), basic file transfer services, and file management

Table 1 Cisco IOS XE Configuration Guides and Command References (continued)

Configuration Guide and Command Reference Titles	Features/Protocols/Technologies
Cisco IOS XE DECnet Configuration Guide	DECnet protocol.
• Cisco IOS DECnet Command Reference	
Cisco IOS XE Dial Technologies Configuration Guide	Asynchronous communications, dial backup, dialer technology,
Cisco IOS Dial Technologies Command Reference	Multilink PPP (MLP), PPP, and virtual private dialup network (VPDN).
<ul> <li>Cisco IOS XE High Availability Configuration Guide</li> <li>Cisco IOS High Availability Command Reference</li> </ul>	A variety of high availability (HA) features and technologies that are available for different network segments (from enterprise access to service provider core) to facilitate creation of end-to-end highly available networks. Cisco IOS HA features and technologies can be categorized in three key areas: system-level resiliency, network-level resiliency, and embedded management for resiliency.
• Cisco IOS XE Intelligent Services Gateway Configuration Guide	Subscriber identification, service and policy determination, session creation, session policy enforcement, session life-cycle
• Cisco IOS Intelligent Services Gateway Command Reference	management, accounting for access and service usage, and session state monitoring.
• Cisco IOS XE Interface and Hardware Component Configuration Guide	LAN interfaces, logical interfaces, serial interfaces, virtual interfaces, and interface configuration.
• Cisco IOS Interface and Hardware Component Command Reference	
Cisco IOS XE IP Addressing Services Configuration Guide	IP addressing, Address Resolution Protocol (ARP), Network Address Translation (NAT), Domain Name System (DNS), Dynamic Host Configuration Protocol (DHCP), and Next Hop
• Cisco IOS IP Addressing Services Command Reference	Address Resolution Protocol (NHRP).
• Cisco IOS XE IP Application Services Configuration Guide	Enhanced Object Tracking (EOT), Gateway Load Balancing Protocol (GLBP), Hot Standby Router Protocol (HSRP), IP
• Cisco IOS IP Application Services Command Reference	Services, TCP, Web Cache Communication Protocol (WCCP), User Datagram Protocol (UDP), and Virtual Router Redundancy Protocol (VRRP).
Cisco IOS XE IP Multicast Configuration Guide	Protocol Independent Multicast (PIM) sparse mode (PIM-SM),
Cisco IOS IP Multicast Command Reference	bidirectional PIM (bidir-PIM), Source Specific Multicast (SSM), Multicast Source Discovery Protocol (MSDP), Internet Group Management Protocol (IGMP), and Multicast VPN (MVPN).
Cisco IOS XE IP Routing: BFD Configuration Guide	Bidirectional forwarding detection (BFD).
• Cisco IOS XE IP Routing: BGP Configuration Guide	Border Gateway Protocol (BGP), multiprotocol BGP,
Cisco IOS IP Routing: BGP Command Reference	multiprotocol BGP extensions for IP multicast.
• Cisco IOS XE IP Routing: EIGRP Configuration Guide	Enhanced Interior Gateway Routing Protocol (EIGRP).
• Cisco IOS IP Routing: EIGRP Command Reference	
Cisco IOS XE IP Routing: ISIS Configuration Guide	Intermediate System-to-Intermediate System (IS-IS).
Cisco IOS IP Routing: ISIS Command Reference	

Table 1 Cisco IOS XE Configuration Guides and Command References (continued)

Configuration Guide and Command Reference Titles	Features/Protocols/Technologies	
Cisco IOS XE IP Routing: ODR Configuration Guide	On-Demand Routing (ODR).	
• Cisco IOS IP Routing: ODR Command Reference		
Cisco IOS XE IP Routing: OSPF Configuration Guide	Open Shortest Path First (OSPF).	
• Cisco IOS IP Routing: OSPF Command Reference		
Cisco IOS XE IP Routing: Protocol-Independent Configuration Guide	IP routing protocol-independent features and commands. Generic policy-based routing (PBR) features and commands are	
• Cisco IOS IP Routing: Protocol-Independent Command Reference	included.	
Cisco IOS XE IP Routing: RIP Configuration Guide	Routing Information Protocol (RIP).	
• Cisco IOS IP Routing: RIP Command Reference		
Cisco IOS XE IP SLAs Configuration Guide	Cisco IOS IP Service Level Agreements (IP SLAs).	
• Cisco IOS IP SLAs Command Reference		
Cisco IOS XE IP Switching Configuration Guide	Cisco Express Forwarding.	
• Cisco IOS IP Switching Command Reference		
Cisco IOS XE IPv6 Configuration Guide	For a list of IPv6 features, protocols, and technologies, go to the	
• Cisco IOS IPv6 Command Reference	IPv6 "Start Here" document at the following URL:	
	http://www.cisco.com/en/US/docs/ios/ios_xe/ipv6/configuration/guide/ip6-roadmap_xe.html	
Cisco IOS XE ISO CLNS Configuration Guide	ISO Connectionless Network Service (CLNS).	
• Cisco IOS ISO CLNS Command Reference		
Cisco IOS XE LAN Switching Configuration Guide	VLANs and multilayer switching (MLS).	
• Cisco IOS LAN Switching Command Reference		
Cisco IOS XE Multiprotocol Label Switching Configuration Guide	MPLS Label Distribution Protocol (LDP), MPLS Layer 2 VPNs, MPLS Layer 3 VPNs, MPLS Traffic Engineering (TE), and	
• Cisco IOS Multiprotocol Label Switching Command Reference	MPLS Embedded Management (EM) and MIBs.	
Cisco IOS XE NetFlow Configuration Guide	Network traffic data analysis, aggregation caches, and export	
• Cisco IOS NetFlow Command Reference	features.	
Cisco IOS XE Network Management Configuration Guide	Basic system management, system monitoring and logging, Cisco IOS Scripting with Tool Control Language (Tcl),	
Cisco IOS Network Management Command Reference	Cisco networking services (CNS), Embedded Event Manager (EEM), Embedded Syslog Manager (ESM), HTTP, Remote Monitoring (RMON), and SNMP.	
Cisco IOS XE Novell IPX Configuration Guide	Novell Internetwork Packet Exchange (IPX) protocol.	
Cisco IOS Novell IPX Command Reference		

Table 1 Cisco IOS XE Configuration Guides and Command References (continued)

Configuration Guide and Command Reference Titles	Features/Protocols/Technologies
<ul> <li>Cisco IOS XE Quality of Service Solutions         Configuration Guide</li> <li>Cisco IOS Quality of Service Solutions         Command Reference</li> </ul>	Class-based weighted fair queueing (CBWFQ), low latency queueing (LLQ), Modular Quality of Service (QoS) Command-Line Interface (CLI) (MQC), Network-Based Application Recognition (NBAR), priority queueing, Multilink PPP (MLP) for QoS, header compression, Resource Reservation Protocol (RSVP), weighted fair queueing (WFQ), and weighted random early detection (WRED).
Cisco IOS Security Command Reference	Access control lists (ACLs); authentication, authorization, and accounting (AAA); firewalls; IP security and encryption; neighbor router authentication; network access security; public key infrastructure (PKI); RADIUS; and TACACS+.
Cisco IOS XE Security Configuration Guide: Secure Connectivity	Internet Key Exchange (IKE) for IPsec VPNs; security for VPNs with IPsec; VPN availability features (reverse route injection, IPsec preferred peer, and real-time resolution for the IPsec tunnel peer); IPsec data plane features; IPsec management plane features; Public Key Infrastructure (PKI); Dynamic Multipoint VPN (DMVPN); Easy VPN; and Cisco Group Encrypted Transport VPN (GET VPN).
Cisco IOS XE Security Configuration Guide: Securing the Data Plane	Access Control Lists (ACLs); Firewalls: Context-Based Access Control (CBAC) and Zone-Based Firewall; Cisco IOS Intrusion Prevention System (IPS); Flexible Packet Matching; Unicast Reverse Path Forwarding (uRPF); Threat Information Distribution Protocol (TIDP) and TMS.
Cisco IOS XE Security Configuration Guide: Securing User Services	AAA (includes Network Admission Control [NAC]); Security Server Protocols (RADIUS and TACACS+); Secure Shell (SSH); Secure Access for Networking Devices (includes Autosecure and Role-Based CLI access); Lawful Intercept.
Cisco IOS XE Service Advertisement Framework Configuration Guide	Cisco Service Advertisement Framework.
• Cisco IOS Service Advertisement Framework Command Reference	
Cisco IOS XE VPDN Configuration Guide	Multihop by Dialed Number Identification Service (DNIS),
Cisco IOS VPDN Command Reference	timer and retry enhancements for L2TP and Layer 2 Forwarding (L2F), RADIUS Attribute 82 (tunnel assignment ID), shell-based authentication of VPDN users, and tunnel authentication via RADIUS on tunnel terminator.
Cisco IOS XE Wide-Area Networking Configuration Guide	Frame Relay; L2VPN Pseudowire Redundancy; and Media-Independent PPP and Multilink PPP.
• Cisco IOS Wide-Area Networking Command Reference	

Table 1 Cisco IOS XE Configuration Guides and Command References (continued)

Configuration Guide and Command Reference Titles	Features/Protocols/Technologies
<ul> <li>Cisco Unified Border Element (Enterprise)         Configuration Guide</li> <li>Cisco IOS Voice Command Reference</li> </ul>	The Cisco Unified Border Element (Enterprise) on the Cisco ASR 1000 brings a scalable option for enterprise customers. Running as a process on the Cisco ASR 1000 and utilizing the high-speed RTP packet processing path, the Cisco Unified Border Element (Enterprise) is used as an IP-to-IP gateway by enterprises and commercial customers to interconnect SIP and H.323 voice and video networks. The Cisco UBE (Enterprise) provides a network-to-network demarcation interface for signaling interworking, media interworking, address and port translations, billing, security, quality of service (QoS), and bandwidth management.
<ul> <li>Cisco Unified Border Element (SP Edition)         Configuration Guide: Distributed Model</li> <li>Cisco Unified Border Element (SP Edition)         Command Reference: Distributed Model</li> </ul>	The Cisco Unified Border Element (SP Edition) is a session border controller (SBC) that is VoIP-enabled and deployed at the edge of networks. For Cisco IOS XE Release 2.3 and earlier releases, Cisco Unified Border Element (SP Edition) is supported only in the distributed mode. Operating in the distributed mode, the SBC is a toolkit of functions that can be used to deploy and manage VoIP services, such as signaling interworking, network hiding, security, and quality of service.
<ul> <li>Cisco Unified Border Element (SP Edition)         Configuration Guide: Unified Model</li> <li>Cisco Unified Border Element (SP Edition)         Command Reference: Unified Model</li> </ul>	The Cisco Unified Border Element (SP Edition) is a highly scalable, carrier-grade session border controller (SBC) that is designed for service providers and that is generally deployed at the border of the enterprise or SP networks to enable the easy deployment and management of VoIP services. Cisco Unified Border Element (SP Edition) is integrated into Cisco routing platforms and can use a large number of router functions to provide a very feature-rich and intelligent SBC application. Formerly known as Integrated Session Border Controller, Cisco Unified Border Element (SP Edition) provides a network-to-network demarcation interface for signaling interworking, media interworking, address and port translations, billing, security, quality of service, call admission control, and bandwidth management.  For Cisco IOS XE Release 2.4 and later releases, Cisco Unified Border Element (SP Edition) can operate in two modes or deployment models: unified and distributed. The configuration guide documents the features in the unified mode.

Table 2 lists documents and resources that supplement the Cisco IOS XE software configuration guides and command references.

Table 2 Cisco IOS XE Software Supplementary Documents and Resources

Document Title or Resource	Description		
Cisco IOS Master Command List, All Releases	Alphabetical list of all the commands documented in all Cisco IOS XE software releases.		
Cisco IOS Debug Command Reference  Alphabetical list of <b>debug</b> commands including br descriptions of use, command syntax, and usage gu			
Cisco IOS XE system messages  List of Cisco IOS XE system messages and description messages may indicate problems with your system, informational only, or may help diagnose problems communications lines, internal hardware, or the syst software.			
Release notes and caveats  Information about new and changed features, syst requirements, and other useful information about software releases; information about defects in sp. Cisco IOS XE software releases.			
Files used for network monitoring. To locate and dow MIBs for selected platforms, Cisco IOS XE software and feature sets, use Cisco MIB Locator at the follow http://www.cisco.com/go/mibs			
RFCs	Standards documents maintained by the Internet Engineering Task Force (IETF) that Cisco IOS XE documentation references where applicable. The full text of referenced RFCs may be obtained at the following URL:		
	http://www.rfc-editor.org/		

# **Additional Resources and Documentation Feedback**

What's New in Cisco Product Documentation is updated monthly and describes all new and revised Cisco technical documentation. The What's New in Cisco Product Documentation publication also provides information about obtaining the following resources:

- Technical documentation
- Cisco product security overview
- Product alerts and field notices
- Technical assistance

Cisco IOS XE software technical documentation includes embedded feedback forms where you can rate documents and provide suggestions for improvement. Your feedback helps us improve our documentation.

CCDE, CCENT, CCSI, Cisco Eos, Cisco Explorer, Cisco HealthPresence, Cisco IronPort, the Cisco logo, Cisco Nurse Connect, Cisco Pulse, Cisco SensorBase, Cisco StackPower, Cisco StadiumVision, Cisco TelePresence, Cisco TrustSec, Cisco Unified Computing System, Cisco WebEx, DCE, Flip Channels, Flip for Good, Flip Mino, Flipshare (Design), Flip Ultra, Flip Video, Flip Video (Design), Instant Broadband, and Welcome to the Human Network are trademarks; Changing the Way We Work, Live, Play, and Learn, Cisco Capital, Cisco Capital (Design), Cisco:Financed (Stylized), Cisco Store, Flip Gift Card, and One Million Acts of Green are service marks; and Access Registrar, Aironet, AllTouch, AsyncOS, Bringing the Meeting To You, Catalyst, CCDA, CCDP, CCIE, CCIP, CCNA, CCNP, CCSP, CCVP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IOS, Cisco Lumin, Cisco Nexus, Cisco Press, Cisco Systems, Cisco Systems Capital, the Cisco Systems logo, Cisco Unity, Collaboration Without Limitation, Continuum, EtherFast, EtherSwitch, Event Center, Explorer, Follow Me Browsing, GainMaker, iLYNX, IOS, iPhone, IronPort, the IronPort logo, Laser Link, LightStream, Linksys, MeetingPlace, MeetingPlace Chime Sound, MGX, Networkers, Networking Academy, PCNow, PIX, PowerKEY, PowerPanels, PowerTV, PowerTV (Design), PowerVu, Prisma, ProConnect, ROSA, SenderBase, SMARTnet, Spectrum Expert, StackWise, WebEx, and the WebEx logo are registered trademarks of Cisco and/or its affiliates in the United States and certain other countries.

All other trademarks mentioned in this document or website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1002R)

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

© 2009-2010 Cisco Systems, Inc. All rights reserved.

Additional Resources and Documentation Feedback



# Using the Command-Line Interface in Cisco IOS XE Software

#### Last Updated: February 24, 2010

This document provides basic information about the command-line interface (CLI) in Cisco IOS XE software and how you can use some of the CLI features. This document contains the following sections:

- Initially Configuring a Device, page i
- Using the CLI, page ii
- Saving Changes to a Configuration, page xii
- Additional Information, page xii

For more information about using the CLI, see "Part 1: Using the Cisco IOS Command-Line Interface (CLI)" of the *Cisco IOS XE Configuration Fundamentals Configuration Guide*.

For information about the software documentation set, see the "About Cisco IOS XE Software Documentation" document.

# **Initially Configuring a Device**

Initially configuring a device varies by platform. For information about performing an initial configuration, see the hardware installation documentation that is provided with the original packaging of the product or go to the Product Support area of Cisco.com at <a href="http://www.cisco.com/go/techdocs">http://www.cisco.com/go/techdocs</a>.

After you have performed the initial configuration and connected the device to your network, you can configure the device by using the console port or a remote access method, such as Telnet or Secure Shell (SSH), to access the CLI or by using the configuration method provided on the device, such as Security Device Manager.

#### **Changing the Default Settings for a Console or AUX Port**

There are only two settings that you can change on a console port or an AUX port:

- Change the port speed with the **config-register 0x** command. Changing the port speed is not recommended. The well-known default speed is 9600.
- Change the behavior of the port; for example, by adding a password or changing the timeout value.



The AUX port on the Route Processor (RP) installed in a Cisco ASR 1000 series router does not serve any useful customer purpose and should be accessed only under the advisement of a customer support representative.

# **Using the CLI**

This section describes the following topics:

- Understanding Command Modes, page ii
- Using the Interactive Help Feature, page v
- Understanding Command Syntax, page vi
- Understanding Enable and Enable Secret Passwords, page viii
- Using the Command History Feature, page viii
- Abbreviating Commands, page ix
- Using Aliases for CLI Commands, page ix
- Using the no and default Forms of Commands, page x
- Using the debug Command, page x
- Filtering Output Using Output Modifiers, page xi
- Understanding CLI Error Messages, page xi

# **Understanding Command Modes**

The CLI command mode structure is hierarchical, and each mode supports a set of specific commands. This section describes the most common of the many modes that exist.

Table 1 lists common command modes with associated CLI prompts, access and exit methods, and a brief description of how each mode is used.

Table 1 CLI Command Modes

Command Mode	Access Method	Prompt	Exit Method	Mode Usage
User EXEC	Log in.	Router>	Issue the <b>logout</b> or <b>exit</b> command.	<ul><li>Change terminal settings.</li><li>Perform basic tests.</li><li>Display device status.</li></ul>
Privileged EXEC	From user EXEC mode, issue the <b>enable</b> command.	Router#	Issue the <b>disable</b> command or the <b>exit</b> command to return to user EXEC mode.	<ul> <li>Issue show and debug commands.</li> <li>Copy images to the device.</li> <li>Reload the device.</li> <li>Manage device configuration files.</li> <li>Manage device file systems.</li> </ul>
Global configuration	From privileged EXEC mode, issue the configure terminal command.	Router(config)#	Issue the <b>exit</b> command or the <b>end</b> command to return to privileged EXEC mode.	Configure the device.
Interface configuration	From global configuration mode, issue the <b>interface</b> command.	Router(config-if)#	Issue the <b>exit</b> command to return to global configuration mode or the <b>end</b> command to return to privileged EXEC mode.	Configure individual interfaces.
Line configuration	From global configuration mode, issue the <b>line vty</b> or <b>line console</b> command.	Router(config-line)#	Issue the <b>exit</b> command to return to global configuration mode or the <b>end</b> command to return to privileged EXEC mode.	Configure individual terminal lines.

Table 1 CLI Command Modes (continued)

Command Mode	Access Method	Prompt	Exit Method	Mode Usage
ROM monitor	From privileged EXEC mode, issue the <b>reload</b> command. Press the <b>Break</b> key during the first 60 seconds while the system is booting.	The # symbol represents the line number and increments at each prompt.	Issue the <b>continue</b> command.	<ul> <li>Run as the default operating mode when a valid image cannot be loaded.</li> <li>Access the fall-back procedure for loading an image when the device lacks a valid image and cannot be booted.</li> <li>Perform password recovery when a CTRL-Break sequence is issued within 60 seconds of a power-on or reload event.</li> </ul>
Diagnostic	The router boots or enters diagnostic mode in the following scenarios. When a Cisco IOS XE process or processes fail, in most scenarios the router will reload.  • A user-configured access policy was configured using the transport-map command, which directed the user into diagnostic mode.  • The router was accessed using an RP auxiliary port.  • A break signal (Ctrl-C, Ctrl-Shift-6, or the send break command) was entered, and the router was configured to enter diagnostic mode when the break signal was received.	Router(diag)#	If a Cisco IOS XE process failure is the reason for entering diagnostic mode, the failure must be resolved and the router must be rebooted to exit diagnostic mode.  If the router is in diagnostic mode because of a transport-map configuration, access the router through another port or use a method that is configured to connect to the Cisco IOS XE CLI.  If the RP auxiliary port was used to access the router, use another port for access. Accessing the router through the auxiliary port is not useful for customer purposes.	<ul> <li>Inspect various states on the router, including the Cisco IOS XE state.</li> <li>Replace or roll back the configuration.</li> <li>Provide methods of restarting the Cisco IOS XE software or other processes.</li> <li>Reboot hardware, such as the entire router, an RP, an ESP, a SIP, a SPA, or other hardware components.</li> <li>Transfer files into or off of the router using remote access methods such as FTP, TFTP, and SCP.</li> </ul>

EXEC commands are not saved when the software reboots. Commands that you issue in a configuration mode can be saved to the startup configuration. If you save the running configuration to the startup configuration, these commands will execute when the software is rebooted. Global configuration mode is the highest level of configuration mode. From global configuration mode, you can enter a variety of other configuration modes, including protocol-specific modes.

ROM monitor mode is a separate mode that is used when the software cannot load properly. If a valid software image is not found when the software boots or if the configuration file is corrupted at startup, the software might enter ROM monitor mode. Use the question symbol (?) to view the commands that you can use while the device is in ROM monitor mode.

```
rommon 1 > ?

alias set and display aliases command boot boot up an external process confreg configuration register utility cont continue executing a downloaded image context display the context of a loaded image cookie display contents of cookie PROM in hex .

.
. .
. rommon 2 >
```

The following example shows how the command prompt changes to indicate a different command mode:

```
Router> enable
Router# configure terminal
Router(config)# interface ethernet 1/1
Router(config-if)# ethernet
Router(config-line)# exit
Router(config)# end
Router#
```



A keyboard alternative to the **end** command is Ctrl-Z.

## **Using the Interactive Help Feature**

The CLI includes an interactive Help feature. Table 2 describes how to use the Help feature.

Table 2 CLI Interactive Help Commands

Command	Purpose	
help	Provides a brief description of the Help feature in any command mode.	
?	Lists all commands available for a particular command mode.	
partial command?	Provides a list of commands that begin with the character string (no space between the command and the question mark).	
partial command <tab></tab>	Completes a partial command name (no space between the command and <tab>).</tab>	
command?	Lists the keywords, arguments, or both associated with the command (space between the command and the question mark).	
command keyword?	Lists the arguments that are associated with the keyword (space between the keyword and the question mark).	

The following examples show how to use the help commands:

#### help

#### Router> help

Help may be requested at any point in a command by entering a question mark '?'. If nothing matches, the help list will be empty and you must backup until entering a '?' shows the available options.

Two styles of help are provided:

- 1. Full help is available when you are ready to enter a command argument (e.g. 'show ?') and describes each possible argument.
- 2. Partial help is provided when an abbreviated argument is entered and you want to know what arguments match the input (e.g. 'show pr?'.)

#### ?

#### partial command?

```
Router(config)# zo?
zone zone-pair
```

#### partial command<Tab>

Router(config)# we<Tab> webvpn

#### command?

```
Router(config-if)# pppoe ?
enable Enable pppoe
max-sessions Maximum PPPOE sessions
```

#### command keyword?

```
Router(config-if)# pppoe enable ?
  group attach a BBA group
  <cr>
```

# **Understanding Command Syntax**

Command syntax is the format in which a command should be entered in the CLI. Commands include the name of the command, keywords, and arguments. Keywords are alphanumeric strings that are used literally. Arguments are placeholders for values that a user must supply. Keywords and arguments may be required or optional.

Specific conventions convey information about syntax and command elements. Table 3 describes these conventions.

Table 3 CLI Syntax Conventions

Symbol/Text	Function	Notes
<> (angle brackets)	Indicate that the option is an argument.	Sometimes arguments are displayed without angle brackets.
A.B.C.D.	Indicates that you must enter a dotted decimal IP address.	Angle brackets (<>) are not always used to indicate that an IP address is an argument.
WORD (all capital letters)	Indicates that you must enter one word.	Angle brackets (<>) are not always used to indicate that a WORD is an argument.
LINE (all capital letters)	Indicates that you must enter more than one word.	Angle brackets (<>) are not always used to indicate that a LINE is an argument.
<cr> (carriage return)</cr>	Indicates the end of the list of available keywords and arguments, and also indicates when keywords and arguments are optional. When <cr> is the only option, you have reached the end of the branch or the end of the command if the command has only one branch.</cr>	

The following examples show syntax conventions:

```
Router(config)# ethernet cfm domain ?
  WORD domain name

Router(config)# ethernet cfm domain dname ?
  level

Router(config)# ethernet cfm domain dname level ?
  <0-7> maintenance level number

Router(config)# ethernet cfm domain dname level 7 ?
  <cr>
Router(config)# snmp-server file-transfer access-group 10 ?
  protocol protocol options
  <cr>
Router(config)# logging host ?
  Hostname or A.B.C.D IP address of the syslog server
  ipv6 Configure IPv6 syslog server
```

## **Understanding Enable and Enable Secret Passwords**

Some privileged EXEC commands are used for actions that impact the system, and it is recommended that you set a password for these commands to prevent unauthorized use. Two types of passwords, enable (not encrypted) and enable secret (encrypted), can be set. The following commands set these passwords and are issued in global configuration mode:

- enable password
- enable secret password

Using an enable secret password is recommended because it is encrypted and more secure than the enable password. When you use an enable secret password, text is encrypted (unreadable) before it is written to the config.text file. When you use an enable password, the text is written as entered (readable) to the config.text file.

Each type of password is case sensitive, can contain from 1 to 25 uppercase and lowercase alphanumeric characters, and can start with a number. Spaces are also valid password characters; for example, "two words" is a valid password. Leading spaces are ignored, but trailing spaces are recognized.



Both password commands have numeric keywords that are single integer values. If you choose a number for the first character of your password followed by a space, the system will read the number as if it were the numeric keyword and not as part of your password.

When both passwords are set, the enable secret password takes precedence over the enable password.

To remove a password, use the **no** form of the commands: **no enable** password or **no enable** secret password.

For more information about password recovery procedures for Cisco products, see the following:

http://www.cisco.com/en/US/products/sw/iosswrel/ps1831/products\_tech\_note09186a00801746e6.shtml

### **Using the Command History Feature**

The command history feature saves the commands that you enter during a session in a command history buffer. The default number of commands saved is 10, but the number is configurable within the range of 0 to 256. This command history feature is particularly useful for recalling long or complex commands.

To change the number of commands saved in the history buffer for a terminal session, issue the **terminal history size** command:

Router# terminal history size num

A command history buffer is also available in line configuration mode with the same default and configuration options. To set the command history buffer size for a terminal session in line configuration mode, issue the **history** command:

Router(config-line)# history [size num]

To recall commands from the history buffer, use the following methods:

- Press Ctrl-P or the Up Arrow key—Recalls commands beginning with the most recent command. Repeat the key sequence to recall successively older commands.
- Press Ctrl-N or the Down Arrow key—Recalls the most recent commands in the history buffer after they have been recalled using Ctrl-P or the Up Arrow key. Repeat the key sequence to recall successively more recent commands.



**Note** The arrow keys function only on ANSI-compatible terminals such as the VT100.

Issue the show history command in user EXEC or privileged EXEC mode—Lists the most recent
commands that you entered. The number of commands that are displayed is determined by the
setting of the terminal history size and history commands.

The command history feature is enabled by default. To disable this feature for a terminal session, issue the **terminal no history** command in user EXEC or privileged EXEC mode or the **no history** command in line configuration mode.

# **Abbreviating Commands**

Typing a complete command name is not always required for the command to execute. The CLI recognizes an abbreviated command when the abbreviation contains enough characters to uniquely identify the command. For example, the **show version** command can be abbreviated as **sh ver**. It cannot be abbreviated as **s ver** because **s** could mean **show**, **set**, or **systat**. The **sh v** abbreviation also is not valid because the **show** command has **vrrp** as a keyword in addition to **version**.

## **Using Aliases for CLI Commands**

To save time and the repetition of entering the same command multiple times, you can use a command alias. An alias can be configured to do anything that can be done at the command line, but an alias cannot move between modes, type in passwords, or perform any interactive functions.

Table 4 shows the default command aliases.

Table 4 Default Command Aliases

Command Alias	Original Command
h	help
lo	logout
p	ping
S	show
u or un	undebug
w	where

To create a command alias, issue the **alias** command in global configuration mode. The syntax of the command is **alias** *mode command-alias original-command*. Following are some examples:

- Router(config)# alias exec prt partition—privileged EXEC mode
- Router(config)# alias configure sb source-bridge—global configuration mode
- Router(config)# alias interface rl rate-limit—interface configuration mode

To view both default and user-created aliases, issue the **show alias** command.

For more information about the **alias** command, see http://www.cisco.com/en/US/docs/ios/fundamentals/command/reference/cf\_book.html.

# **Using the no and default Forms of Commands**

Most configuration commands have a **no** form that is used to reset a command to its default value or to disable a feature or function. For example, the **ip routing** command is enabled by default. To disable this command, you would issue the **no ip routing** command. To re-enable IP routing, you would issue the **ip routing** command.

Configuration commands may also have a **default** form, which returns the command settings to their default values. For commands that are disabled by default, using the **default** form has the same effect as using the **no** form of the command. For commands that are enabled by default and have default settings, the **default** form enables the command and returns the settings to their default values. To see what **default** commands are available on your system, enter **default**? in the appropriate command mode of the command-line interface.

The **no** form is documented in the command pages of Cisco IOS command references. The **default** form is generally documented in the command pages only when the **default** form performs a function different than that of the plain and **no** forms of the command.

Command pages often include a "Command Default" section as well. The "Command Default" section documents the state of the configuration if the command is not used (for configuration commands) or the outcome of using the command if none of the optional keywords or arguments is specified (for EXEC commands).

# **Using the debug Command**

A **debug** command produces extensive output that helps you troubleshoot problems in your network. These commands are available for many features and functions within Cisco IOS XE software. Some **debug** commands are **debug all**, **debug aaa accounting**, and **debug mpls packets**. To use **debug** commands during a Telnet session with a device, you must first enter the **terminal monitor** command. To turn off debugging completely, you must enter the **undebug all** command.

For more information about **debug** commands, see the *Cisco IOS Debug Command Reference* at http://www.cisco.com/en/US/docs/ios/debug/command/reference/db\_book.html.



Debugging is a high priority and high CPU utilization process that can render your device unusable. Use **debug** commands only to troubleshoot specific problems. The best times to run debugging are during periods of low network traffic and when few users are interacting with the network. Debugging during these periods decreases the likelihood that the **debug** command processing overhead will affect network performance or user access or response times.

## **Filtering Output Using Output Modifiers**

Many commands produce lengthy output that may use several screens to display. You can use output modifiers to filter this output to show only the information that you want to see.

The following three output modifiers are available:

- **begin** regular-expression—Displays the first line in which a match of the regular expression is found and all lines that follow.
- include regular-expression—Displays all lines in which a match of the regular expression is found.
- exclude regular-expression—Displays all lines except those in which a match of the regular expression is found.

To use one of these output modifiers, type the command followed by the pipe symbol (|), the modifier, and the regular expression that you want to search for or filter. A regular expression is a case-sensitive alphanumeric pattern. It can be a single character or number, a phrase, or a more complex string.

The following example illustrates how to filter output of the **show interface** command to display only lines that include the expression "protocol."

```
Router# show interface | include protocol

FastEthernet0/0 is up, line protocol is up

Serial4/0 is up, line protocol is up

Serial4/1 is up, line protocol is up

Serial4/2 is administratively down, line protocol is down

Serial4/3 is administratively down, line protocol is down
```

# **Understanding CLI Error Messages**

You may encounter some error messages while using the CLI. Table 5 shows the common CLI error messages.

Table 5 Common CLI Error Messages

Error Message	Meaning	How to Get Help
% Ambiguous command: "show con"	You did not enter enough characters for the command to be recognized.	Reenter the command followed by a space and a question mark (?). The keywords that you are allowed to enter for the command appear.
% Incomplete command.	You did not enter all the keywords or values required by the command.	Reenter the command followed by a space and a question mark (?). The keywords that you are allowed to enter for the command appear.
% Invalid input detected at "^" marker.	You entered the command incorrectly. The caret (^) marks the point of the error.	Enter a question mark (?) to display all the commands that are available in this command mode. The keywords that you are allowed to enter for the command appear.

For more system error messages, see the System Messages for Cisco IOS XE document.

# **Saving Changes to a Configuration**

To save changes that you made to the configuration of a device, you must issue the **copy running-config startup-config** command or the **copy system:running-config nvram:startup-config** command. When you issue these commands, the configuration changes that you made are saved to the startup configuration and saved when the software reloads or power to the device is turned off or interrupted. The following example shows the syntax of the **copy running-config startup-config** command:

```
Router# copy running-config startup-config Destination filename [startup-config]?
```

You press Enter to accept the startup-config filename (the default), or type a new filename and then press Enter to accept that name. The following output is displayed indicating that the configuration was saved:

```
Building configuration...
[OK]
Router#
```

On most platforms, the configuration is saved to NVRAM. On platforms with a Class A flash file system, the configuration is saved to the location specified by the CONFIG\_FILE environment variable. The CONFIG\_FILE variable defaults to NVRAM.

# **Additional Information**

 "Part 1: Using the Cisco IOS Command-Line Interface (CLI)" of the Cisco IOS XE Configuration Fundamentals Configuration Guide

 $http://www.cisco.com/en/US/docs/ios/ios\_xe/fundamentals/configuration/guide/2\_xe/cf\_xe\_book. \\ html$ 

or

"Using Cisco IOS XE Software" chapter of the Cisco ASR 1000 Series Aggregation Services Routers Software Configuration Guide

http://www.cisco.com/en/US/docs/routers/asr1000/configuration/guide/chassis/Using\_CLI.html

• Cisco Product Support Resources

http://www.cisco.com/go/techdocs

Support area on Cisco.com (also search for documentation by task or product)

http://www.cisco.com/en/US/support/index.html

• Software Download Center (downloads; tools; licensing, registration, advisory, and general information) (requires Cisco.com user ID and password)

http://www.cisco.com/kobayashi/sw-center/

 Error Message Decoder, a tool to help you research and resolve error messages for Cisco IOS XE software

http://www.cisco.com/pcgi-bin/Support/Errordecoder/index.cgi

 Command Lookup Tool, a tool to help you find detailed descriptions of Cisco IOS XE commands (choose Select an index: IOS > Select a release: All IOS Commands) (requires Cisco.com user ID and password)

http://tools.cisco.com/Support/CLILookup

 Output Interpreter, a troubleshooting tool that analyzes command output of supported show commands

https://www.cisco.com/pcgi-bin/Support/OutputInterpreter/home.pl\

CCDE, CCENT, CCSI, Cisco Eos, Cisco Explorer, Cisco HealthPresence, Cisco IronPort, the Cisco logo, Cisco Nurse Connect, Cisco Pulse, Cisco SensorBase, Cisco StackPower, Cisco StadiumVision, Cisco TelePresence, Cisco TrustSec, Cisco Unified Computing System, Cisco WebEx, DCE, Flip Channels, Flip for Good, Flip Mino, Flipshare (Design), Flip Ultra, Flip Video, Flip Video (Design), Instant Broadband, and Welcome to the Human Network are trademarks; Changing the Way We Work, Live, Play, and Learn, Cisco Capital, Cisco Capital (Design), Cisco:Financed (Stylized), Cisco Store, Flip Gift Card, and One Million Acts of Green are service marks; and Access Registrar, Aironet, AllTouch, AsyncOS, Bringing the Meeting To You, Catalyst, CCDA, CCDP, CCIE, CCIP, CCNA, CCNP, CCSP, CCVP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IOS, Cisco Lumin, Cisco Nexus, Cisco Press, Cisco Systems, Cisco Systems Capital, the Cisco Systems logo, Cisco Unity, Collaboration Without Limitation, Continuum, EtherFast, EtherSwitch, Event Center, Explorer, Follow Me Browsing, GainMaker, iLYNX, IOS, iPhone, IronPort, the IronPort logo, Laser Link, LightStream, Linksys, MeetingPlace, MeetingPlace Chime Sound, MGX, Networkers, Networking Academy, PCNow, PIX, PowerKEY, PowerPanels, PowerTV, PowerTV (Design), PowerVu, Prisma, ProConnect, ROSA, SenderBase, SMARTnet, Spectrum Expert, StackWise, WebEx, and the WebEx logo are registered trademarks of Cisco and/or its affiliates in the United States and certain other countries.

All other trademarks mentioned in this document or website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1002R)

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

© 2009-2010 Cisco Systems, Inc. All rights reserved.

Additional Information



# **Cisco BGP Overview**

First Published: May 2, 2005 Last Updated: February 26, 2010

Border Gateway Protocol (BGP) is an interdomain routing protocol designed to provide loop-free routing between separate routing domains that contain independent routing policies (autonomous systems). The Cisco IOS XE software implementation of BGP version 4 includes support for 4-byte autonomous system numbers and multiprotocol extensions to allow BGP to carry routing information for IP multicast routes and multiple Layer 3 protocol address families including IP Version 4 (IPv4), IP Version 6 (IPv6), Virtual Private Network version 4 (VPNv4), Connectionless Network Services (CLNS), and Layer 2 VPN (L2VPN). This module contains conceptual material to help you understand how BGP is implemented in Cisco IOS XE software.

# Finding Feature Information

For the latest feature information and caveats, see the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the "Feature Information for Cisco BGP Overview" section on page 17.

Use Cisco Feature Navigator to find information about platform support and Cisco IOS XE software image support. To access Cisco Feature Navigator, go to <a href="http://www.cisco.com/go/cfn">http://www.cisco.com/go/cfn</a>. An account on Cisco.com is not required.

### **Contents**

- Prerequisites for Cisco BGP, page 2
- Restrictions for Cisco BGP, page 2
- Information About Cisco BGP, page 2
- Where to Go Next, page 15
- Additional References, page 15
- Feature Information for Cisco BGP Overview, page 17



# **Prerequisites for Cisco BGP**

This document assumes knowledge of IPv4, IPv6, multicast, VPNv4, and Interior Gateway Protocols (IGPs). The amount of knowledge required for each technology is dependent on your deployment.

## **Restrictions for Cisco BGP**

A router that runs Cisco IOS XE software can be configured to run only one BGP routing process and to be a member of only one BGP autonomous system. However, a BGP routing process and autonomous system can support multiple concurrent BGP address family and subaddress family configurations.

## Information About Cisco BGP

To deploy and configure BGP in your network, you should understand the following concepts:

- BGP Version 4 Functional Overview, page 2
- BGP Autonomous Systems, page 3
- BGP Autonomous System Number Formats, page 4
- Multiprotocol BGP, page 6
- Benefits of Using Multiprotocol BGP Versus BGP, page 7
- Multiprotocol BGP Extensions for IP Multicast, page 7
- NLRI Configuration CLI, page 9
- Cisco BGP Address Family Model, page 9
- IPv4 Address Family, page 11
- IPv6 Address Family, page 12
- CLNS Address Family, page 12
- VPNv4 Address Family, page 12
- L2VPN Address Family, page 13
- BGP CLI Removal Considerations, page 14

### **BGP Version 4 Functional Overview**

BGP is an interdomain routing protocol that is designed to provide loop-free routing links between organizations. BGP is designed to run over a reliable transport protocol; it uses TCP (port 179) as the transport protocol because TCP is a connection-oriented protocol. The destination TCP port is assigned 179, and the local port is assigned a random port number. Cisco IOS XE software supports BGP version 4, and it is this version that has been used by Internet service providers to help build the Internet. RFC 1771 introduced and discussed a number of new BGP features to allow the protocol to scale for Internet use. RFC 2858 introduced multiprotocol extensions to allow BGP to carry routing information for IP multicast routes and multiple Layer 3 protocol address families including IPv4 and IPv6.

BGP is mainly used to connect a local network to an external network to gain access to the Internet or to connect to other organizations. When connecting to an external organization, external BGP (eBGP) peering sessions are created. Although BGP is referred to as an Exterior Gateway Protocol (EGP), many

networks within an organization are becoming so complex that BGP can be used to simplify the internal network used within the organization. BGP peers within the same organization exchange routing information through internal BGP (iBGP) peering sessions. For more details about configuring BGP peer sessions and other tasks to build a basic BGP network, see the "Configuring a Basic BGP Network" module.

BGP uses a path-vector routing algorithm to exchange network reachability information with other BGP speaking networking devices. Network reachability information is exchanged between BGP peers in routing updates. Network reachability information contains the network number, path specific attributes, and the list of autonomous system numbers that a route must transit through to reach a destination network. This list is contained in the AS-path attribute. BGP prevents routing loops by rejecting any routing update that contains the local autonomous system number because this indicates that the route has already travelled through that autonomous system and a loop would therefore be created. The BGP path-vector routing algorithm is a combination of the distance-vector routing algorithm and the AS-path loop detection. For more details about configuration tasks to configure various options involving BGP neighbor peer sessions, see the "Configuring BGP Neighbor Session Options" module.

BGP selects a single path, by default, as the best path to a destination host or network. The best path selection algorithm analyzes path attributes to determine which route is installed as the best path in the BGP routing table. Each path carries well-known mandatory, well-know discretionary, and optional transitive attributes that are used in BGP best path analysis. Cisco IOS XE software provides the ability to influence BGP path selection by altering some of these attributes using the command-line interface (CLI.) BGP path selection can also be influenced through standard BGP policy configuration. For more details about using BGP to influence path selection and configuring BGP policies to filter traffic, see the "Connecting to a Service Provider Using External BGP" module.

BGP can be used to help manage complex internal networks by interfacing with Interior Gateway Protocols (IGPs). Internal BGP can help with issues such as scaling the existing IGPs to match the traffic demands while maintaining network efficiency. For more details about configuring advanced BGP features including tasks to configure iBGP peering sessions, see the "Configuring Advanced BGP Features" module.

# **BGP Autonomous Systems**

An autonomous system is a network controlled by a single technical administration entity. BGP autonomous systems are used to divide global external networks into individual routing domains where local routing policies are applied. This organization simplifies routing domain administration and simplifies consistent policy configuration. Consistent policy configuration is important to allow BGP to efficiently process routes to destination networks.

Each routing domain can support multiple routing protocols. However, each routing protocol is administrated separately. Other routing protocols can dynamically exchange routing information with BGP through redistribution. Separate BGP autonomous systems dynamically exchange routing information through eBGP peering sessions. BGP peers within the same autonomous system exchange routing information through iBGP peering sessions.

Figure 1 illustrates two routers in separate autonomous systems that can be connected using BGP. Router A and Router B are Internet service provider (ISP) routers in separate routing domains that use public autonomous system numbers. These routers carry traffic across the Internet. Router A and Router B are connected through eBGP peering sessions.

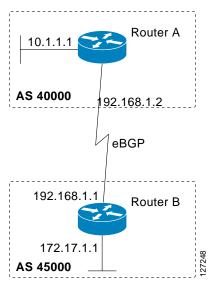


Figure 1 BGP Topology with Two Autonomous Systems

Each public autonomous system that directly connects to the Internet is assigned a unique number that identifies both the BGP routing process and the autonomous system.

# **BGP Autonomous System Number Formats**

Prior to January 2009, BGP autonomous system numbers that were allocated to companies were two-octet numbers in the range from 1 to 65535 as described in RFC 4271, *A Border Gateway Protocol 4 (BGP-4)*. Due to increased demand for autonomous system numbers, the Internet Assigned Number Authority (IANA) will start in January 2009 to allocate four-octet autonomous system numbers in the range from 65536 to 4294967295. RFC 5396, *Textual Representation of Autonomous System (AS) Numbers*, documents three methods of representing autonomous system numbers. Cisco has implemented the following two methods:

- Asplain—Decimal value notation where both 2-byte and 4-byte autonomous system numbers are
  represented by their decimal value. For example, 65526 is a 2-byte autonomous system number and
  234567 is a 4-byte autonomous system number.
- Asdot—Autonomous system dot notation where 2-byte autonomous system numbers are
  represented by their decimal value and 4-byte autonomous system numbers are represented by a dot
  notation. For example, 65526 is a 2-byte autonomous system number and 1.169031 is a 4-byte
  autonomous system number (this is dot notation for the 234567 decimal number).

For details about the third method of representing autonomous system numbers, see RFC 5396.

### **Asdot Only Autonomous System Number Formatting**

In Cisco IOS XE Release 2.3 and later releases, the 4-octet (4-byte) autonomous system numbers are entered and displayed only in asdot notation, for example, 1.10 or 45000.64000. When using regular expressions to match 4-byte autonomous system numbers, the asdot format includes a period, which is a special character in regular expressions. A backslash must be entered before the period; for example, 1\.14, to ensure the regular expression match does not fail. Table 1 shows the format in which 2-byte and 4-byte autonomous system numbers are configured, matched in regular expressions, and displayed in **show** command output in Cisco IOS XE images where only asdot formatting is available.

Table 1 Asdot Only 4-Byte Autonomous System Number Format

Format	Configuration Format	Show Command Output and Regular Expression Match Format
asdot	2-byte: 1 to 65535 4-byte: 1.0 to 65535.65535	2-byte: 1 to 65535 4-byte: 1.0 to 65535.65535

### **Asplain as Default Autonomous System Number Formatting**

In Cisco IOS XE Release 2.4 and later releases, the Cisco implementation of 4-byte autonomous system numbers uses asplain as the default display format for autonomous system numbers, but you can configure 4-byte autonomous system numbers in both the asplain and asdot format. In addition, the default format for matching 4-byte autonomous system numbers in regular expressions is asplain, so you must ensure that any regular expressions to match 4-byte autonomous system numbers are written in the asplain format. If you want to change the default **show** command output to display 4-byte autonomous system numbers in the asdot format, use the **bgp asnotation dot** command in router configuration mode.

When the asdot format is enabled as the default, any regular expressions to match 4-byte autonomous system numbers must be written using the asdot format, or the regular expression match will fail. Table 2 and Table 3 show that, although you can configure 4-byte autonomous system numbers in either asplain or asdot format, only one format is used to display **show** command output and control 4-byte autonomous system number matching for regular expressions, and the default is asplain format. To display 4-byte autonomous system numbers in **show** command output and to control matching for regular expressions in the asdot format, you must configure the **bgp asnotation dot** command. After you configure the **bgp asnotation dot** command, you must initiate a hard reset for all BGP sessions by entering the **clear ip bgp** \* command.



If you are upgrading to an image that supports 4-byte autonomous system numbers, you can still use 2-byte autonomous system numbers. The **show** command output and regular expression match are not changed and remain in asplain (decimal value) format for 2-byte autonomous system numbers regardless of the format configured for 4-byte autonomous system numbers.

Table 2 Default Asplain 4-Byte Autonomous System Number Format

Format	Configuration Format	Show Command Output and Regular Expression Match Format
asplain	2-byte: 1 to 65535 4-byte: 65536 to 4294967295	2-byte: 1 to 65535 4-byte: 65536 to 4294967295
asdot	2-byte: 1 to 65535 4-byte: 1.0 to 65535.65535	2-byte: 1 to 65535 4-byte: 65536 to 4294967295

Table 3 Asdot 4-Byte Autonomous System Number Format

Format	Configuration Format	Show Command Output and Regular Expression Match Format
asplain	2-byte: 1 to 65535 4-byte: 65536 to 4294967295	2-byte: 1 to 65535 4-byte: 1.0 to 65535.65535
asdot	2-byte: 1 to 65535 4-byte: 1.0 to 65535.65535	2-byte: 1 to 65535 4-byte: 1.0 to 65535.65535

### **Reserved and Private Autonomous System Numbers**

In Cisco IOS XE Release 2.3 and later releases, the Cisco implementation of BGP supports RFC 4893. RFC 4893 was developed to allow BGP to support a gradual transition from 2-byte autonomous system numbers to 4-byte autonomous system numbers. A new reserved (private) autonomous system number, 23456, was created by RFC 4893 and this number cannot be configured as an autonomous system number in the Cisco IOS CLI.

RFC 5398, Autonomous System (AS) Number Reservation for Documentation Use, describes new reserved autonomous system numbers for documentation purposes. Use of the reserved numbers allows configuration examples to be accurately documented and avoids conflict with production networks if these configurations are copied. The reserved numbers are documented in the IANA autonomous system number registry. Reserved 2-byte autonomous system numbers are in the contiguous block, 64496 to 64511, and reserved 4-byte autonomous system numbers are from 65536 to 65551 inclusive.

Private 2-byte autonomous system numbers are still valid in the range from 64512 to 65534 with 65535 being reserved for special use. Private autonomous system numbers can be used for internal routing domains but must be translated for traffic that is routed out to the Internet. BGP should not be configured to advertise private autonomous system numbers to external networks. Cisco IOS XE software does not remove private autonomous system numbers from routing updates by default. We recommend that ISPs filter private autonomous system numbers.



Autonomous system number assignment for public and private networks is governed by the IANA. For information about autonomous system numbers, including reserved number assignment, or to apply to register an autonomous system number, see the following URL: <a href="http://www.iana.org/">http://www.iana.org/</a>.

# Multiprotocol BGP

Cisco IOS XE software supports multiprotocol BGP extensions as defined in RFC 2858. The extensions introduced in this RFC allow BGP to carry routing information for multiple network layer protocols including IPv4, IPv6, and VPNv4. These extensions are backward-compatible to enable routers that do not support multiprotocol extensions to communicate with those routers that do support multiprotocol extensions. Multiprotocol BGP carries routing information for multiple network layer protocols and IP multicast routes. BGP carries different sets of routes depending on the protocol. For example, BGP can carry one set of routes for IPv4 unicast routing, one set of routes for IPv4 multicast routing, and one set of routes for MPLS VPNv4 routes.



A multiprotocol BGP network is backward-compatible with a BGP network but BGP peers that do not support multiprotocol extensions cannot forward routing information, such as address family identifier information, that the multiprotocol extensions carry.

# **Benefits of Using Multiprotocol BGP Versus BGP**

In complex networks with multiple network layer protocols, multiprotocol BGP must be used. In less complex networks we recommend using multiprotocol BGP because it offers the following benefits:

- All of the BGP commands and routing policy capabilities of BGP can be applied to multiprotocol BGP.
- A network can carry routing information for multiple network layer protocol address families (for example, IP Version 4 or VPN Version 4) as specified in RFC 1700, *Assigned Numbers*.
- A network can support incongruent unicast and multicast topologies.
- A multiprotocol BGP network is backward-compatible because the routers that support the multiprotocol extensions can interoperate with routers that do not support the extensions.

In summary, multiprotocol BGP support for multiple network layer protocol address families provides a flexible and scalable infrastructure that allows you to define independent policy and peering configurations on a per-address-family basis.

# **Multiprotocol BGP Extensions for IP Multicast**

The routes associated with multicast routing are used by the Protocol Independent Multicast (PIM) feature to build data distribution trees. Multiprotocol BGP is useful when you want a link dedicated to multicast traffic, perhaps to limit which resources are used for which traffic. For example, you want all multicast traffic exchanged at one network access point (NAP). Multiprotocol BGP allows you to have a unicast routing topology different from a multicast routing topology that allows you more control over your network and resources.

In BGP, the only way to perform interdomain multicast routing is to use the BGP infrastructure that is in place for unicast routing. If the routers are not multicast-capable, or there are differing policies about where multicast traffic should flow, multicast routing cannot be supported without multiprotocol BGP.

A multicast routing protocol, such as PIM, uses both the multicast and unicast BGP database to source the route, perform Reverse Path Forwarding (RPF) lookups for multicast-capable sources, and build a multicast distribution tree (MDT). The multicast table is the primary source for the router, but if the route is not found in the multicast table then the unicast table is searched. Although multicast can be performed with unicast BGP, multicast BGP routes allow an alternative topology to be used for RPF.

It is possible to configure BGP peers that exchange both unicast and multicast Network Layer Reachability Information (NLRI) where multiprotocol BGP routes can be redistributed into BGP. Multiprotocol extensions, however, will be ignored by any peers that do not support multiprotocol BGP. When PIM builds a multicast distribution tree through a unicast BGP network (because the route through the unicast network is the most attractive), the RPF check may fail, preventing the MDT from being built. If the unicast network runs multiprotocol BGP, peering can be configured using the appropriate multicast address family. The multicast address family configuration enables multiprotocol BGP to carry the multicast information and the RPF lookup will succeed.

Figure 2 illustrates a simple example of unicast and multicast topologies that are incongruent; these topologies cannot exchange information without implementing multiprotocol BGP. Autonomous systems 100, 200, and 300 are each connected to two NAPs that are FDDI rings. One is used for unicast peering (and therefore the exchanging of unicast traffic). The Multicast Friendly Interconnect (MFI) ring is used for multicast peering (and therefore the exchanging of multicast traffic). Each router is unicast-and multicast-capable.

AS 100

AS 200

AS 300

ISP A

ISP B

ISP C

Figure 2 Incongruent Unicast and Multicast Routes

Figure 3 is a topology of unicast-only routers and multicast-only routers. The two routers on the left are unicast-only routers (that is, they do not support or are not configured to perform multicast routing). The two routers on the right are multicast-only routers. Routers A and B support both unicast and multicast routing. The unicast-only and multicast-only routers are connected to a single NAP.

In Figure 3, only unicast traffic can travel from Router A to the unicast routers to Router B and back. Multicast traffic could not flow on that path, because multicast routing is not configured on the unicast routers and therefore the BGP routing table does not contain any multicast routes. On the multicast routers, multicast routes are enabled and BGP builds a separate routing table to hold the multicast routes. Multicast traffic uses the path from Router A to the multicast routers to Router B and back.

Figure 3 illustrates a multiprotocol BGP environment with a separate unicast route and multicast route from Router A to Router B. Multiprotocol BGP allows these routes to be noncongruent. Both of the autonomous systems must be configured for internal multiprotocol BGP in the figure.

Router B AS 200 Unicast Multicast router router **IMBGP** NAP Unicast Multicast **IMBGF** router router AS 100 Unicast route Multicast route

Figure 3 Multicast BGP Environment

For more information about IP multicast, see the "Configuring IP Multicast" configuration library.

## **NLRI Configuration CLI**

BGP was designed to carry only unicast IPv4 routing information. BGP configuration used the Network NLRI format CLI in Cisco IOS XE software. The NLRI format offers only limited support for multicast routing information and does not support multiple network layer protocols. We do not recommend using NLRI format CLI for BGP configuration.

Using the BGP hybrid CLI feature, you can configure commands in the address family VPNv4 format and save these command configurations without modifying an existing NLRI formatted configuration. If you want to use other address family configurations such as IPv4 unicast or multicast, then you must upgrade the configuration using the **bgp upgrade-cli** command.


For more details about using BGP hybrid CLI command, see the "Configuring a Basic BGP Network" module. See the "Multiprotocol BGP" and "Cisco BGP Address Family Model" concepts for more information about address family configuration format and the limitations of the NLRI CLI format.

## **Cisco BGP Address Family Model**

The Cisco BGP address family identifier (AFI) model was introduced with multiprotocol BGP and is designed to be modular and scalable and to support multiple AFI and subsequent address family identifier (SAFI) configurations. Networks are increasing in complexity, and many companies are now using BGP to connect to many autonomous systems, as shown in the network topology in Figure 4. Each

of the separate autonomous systems shown in Figure 4 may be running several routing protocols such as Multiprotocol Label Switching (MPLS) and IPv6 and require both unicast and multicast routes to be transported via BGP.

Figure 4 BGP Network Topology for Multiple Address Families

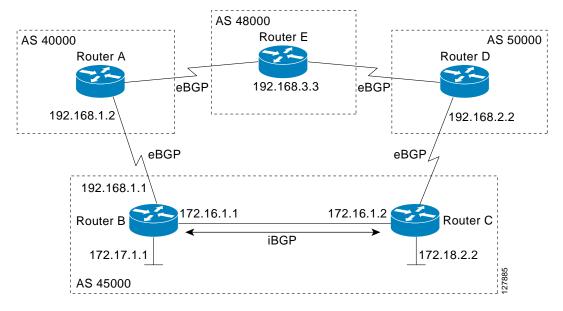

Multiprotocol BGP carries routing information for multiple network layer protocols and IP multicast routes. This routing information is carried in the AFI model as appended BGP attributes (multiprotocol extensions). Each address family maintains a separate BGP database, which allows you to configure BGP policy on per-address family basis. SAFI configurations are subsets of the parent AFI. SAFIs can be used to refine BGP policy configurations.

The AFI model was created because of the scalability limitations of the NLRI format. A router that is configured in NLRI format has IPv4 unicast but limited multicast capabilities. Networks that are configured in the NLRI format have the following limitations:

- No support for AFI and SAFI configuration information. Many new BGP (and other protocols such
  as MPLS) features are supported only in AFI and SAFI configuration modes and cannot be
  configured in NLRI configuration modes.
- No support for IPv6. A router that is configured in the NLRI format cannot establish peering with an IPv6 neighbor.
- Limited support for multicast interdomain routing and incongruent multicast and unicast topologies. In the NLRI format, not all configuration options are available and there is no support for VPNv4. The NLRI format configurations can be more complex than configurations that support the AFI model. If the routers in the infrastructure do not have multicast capabilities, or if policies differ as to where multicast traffic is configured to flow, multicast routing cannot be supported.

The AFI model in multiprotocol BGP supports multiple AFIs and SAFIs, all NLRI-based commands and policy configurations, and is backward-compatible with routers that support only the NLRI format. A router that is configured using the AFI model has the following features:

 AFI and SAFI information and configurations are supported. A router that is configured using the AFI model can carry routing information for multiple network layer protocol address families (for example, IPv4 and IPv6).

- AFI configuration is similar in all address families, making the CLI syntax easier to use than the NLRI format syntax.
- All BGP routing policy capabilities and commands are supported.
- Congruent unicast and multicast topologies that have different policies (BGP filtering configurations) are supported, as are incongruent multicast and unicast topologies.
- CLNS is supported.
- Interoperation between routers that support only the NLRI format (AFI-based networks are backward-compatible) is supported. This includes both IPv4 unicast and multicast NLRI peers.
- Virtual Private Networks (VPNs) and VPN routing and forwarding (VRF) instances are supported.
   Unicast IPv4 for VRFs can be configured from a specific address family IPv4 VRF; this configuration update is integrated into the BGP VPNv4 database.

Within a specific address family configuration mode, the question mark (?) online help function can be used to display supported commands. The BGP commands supported in address family configuration mode configure the same functionality as the BGP commands supported in router configuration mode; however, the BGP commands in router configuration mode configure functionality only for the IPv4 unicast address prefix. To configure BGP commands and functionality for other address family prefixes (for example, the IPv4 multicast or IPv6 unicast address prefixes), you must enter address family configuration mode for those address prefixes.

The BGP address family model consists of the following address families in Cisco IOS XE software: IPv4, IPv6, CLNS, and VPNv4. Within the L2VPN address family, the VPLS SAFI is supported. Within the IPv4 and IPv6 address families, SAFIs such as Multicast Distribution Tree (MDT), tunnel, and VRF exist. Table 4 shows the list of SAFIs supported by Cisco IOS XE software. To ensure compatibility between networks running all types of AFI and SAFI configuration, we recommend configuring BGP on Cisco IOS XE devices using the multiprotocol BGP address family model.

SAFI Field		
Value	Description	Reference
1	NLRI used for unicast forwarding.	RFC 2858
2	NLRI used for multicast forwarding.	RFC 2858
3	NLRI used for both unicast and multicast forwarding.	RFC 2858
4	NLRI with MPLS labels.	RFC 3107
64	Tunnel SAFI.	draft-nalawade-kapoor-tunnel- safi -01.txt
65	Virtual Private LAN Service (VPLS).	_
66	BGP MDT SAFI.	draft-nalawade-idr-mdt-safi-00.txt
128	MPLS-labeled VPN address.	RFC-ietf-l3vpn-rfc2547bis-03.txt

### **IPv4 Address Family**

The IPv4 address family is used to identify routing sessions for protocols such as BGP that use standard IP version 4 address prefixes. Unicast or multicast address prefixes can be specified within the IPv4 address family. Routing information for address family IPv4 unicast is advertised by default when a BGP peer is configured unless the advertisement of unicast IPv4 information is explicitly turned off.

VRF instances can also be associated with IPv4 AFI configuration mode commands.

The tunnel SAFI was introduced to support multipoint tunneling IPv4 routing sessions. The tunnel SAFI is used to advertise the tunnel endpoints and the SAFI-specific attributes that contain the tunnel type and tunnel capabilities. Redistribution of tunnel endpoints into the BGP IPv4 tunnel SAFI table occurs automatically when the tunnel address family is configured. However, peers need to be activated under the tunnel address family before the sessions can exchange tunnel information.

The MDT SAFI was introduced to support multicast VPN architectures. The MDT SAFI is a transitive multicast-capable connector attribute that is defined as an IPv4 address family in BGP. The MDT address family session operates as a SAFI under the IPv4 multicast address family, and is configured on provider edge (PE) routers to establish VPN peering sessions with customer edge (CE) routers that support inter-AS multicast VPN peering sessions.

## **IPv6 Address Family**

The IPv6 address family is used to identify routing sessions for protocols such as BGP that use standard IPv6 address prefixes. Unicast or multicast address prefixes can be specified within the IPv6 address family.



Routing information for address family IPv4 unicast is advertised by default when you configure a BGP peer unless you explicitly turn off the advertisement of unicast IPv4 information.

## **CLNS Address Family**

The CLNS address family is used to identify routing sessions for protocols such as BGP that use standard network service access point (NSAP) address prefixes. Unicast address prefixes are the default when NSAP address prefixes are configured.

CLNS routes are used in networks where CLNS addresses are configured. This is typically a telecommunications Data Communications Network (DCN). Peering is established using IP addresses, but update messages contain CLNS routes.

For more details about configuring BGP support for CLNS, which provides the ability to scale CLNS networks, see the "Configuring Multiprotocol BGP (MP-BGP) Support for CLNS" module.

## **VPNv4 Address Family**

The VPNv4 multicast address family is used to identify routing sessions for protocols such as BGP that use standard VPN Version 4 address prefixes. Unicast address prefixes are the default when VPNv4 address prefixes are configured. VPNv4 routes are the same as IPv4 routes, but VPNv4 routes have a route descriptor (RD) prepended that allows replication of prefixes. It is possible to associate every different RD with a different VPN. Each VPN needs its own set of prefixes.

Companies use an IP VPN as the foundation for deploying or administering value-added services including applications and data hosting network commerce, and telephony services to business customers.

In private LANs, IP-based intranets have fundamentally changed the way companies conduct their business. Companies are moving their business applications to their intranets to extend over a WAN. Companies are also addressing the needs of their customers, suppliers, and partners by using extranets

(an intranet that encompasses multiple businesses). With extranets, companies reduce business process costs by facilitating supply-chain automation, electronic data interchange (EDI), and other forms of network commerce. To take advantage of this business opportunity, service providers must have an IP VPN infrastructure that delivers private network services to businesses over a public infrastructure.

VPNs, when used with MPLS, allow several sites to transparently interconnect through a service provider's network. One service provider network can support several different IP VPNs. Each of these appears to its users as a private network, separate from all other networks. Within a VPN, each site can send IP packets to any other site in the same VPN. Each VPN is associated with one or more VPN VRFs. The router maintains a separate routing and Cisco Express Forwarding table for each VRF. This prevents information from being sent outside the VPN and allows the same subnet to be used in several VPNs without causing duplicate IP address problems. The router using BGP distributes the VPN routing information using the BGP extended communities.

The VPN address space is isolated from the global address space by design. BGP distributes reachability information for VPN-IPv4 prefixes for each VPN using the VPNv4 multiprotocol extensions to ensure that the routes for a given VPN are learned only by other members of that VPN, enabling members of the VPN to communicate with each other.

RFC 3107 specifies how to add label information to multiprotocol BGP address families using a SAFI. The Cisco IOS XE implementation of MPLS uses RFC 3107 to provide support for sending IPv4 routes with a label. VPNv4 routes implicitly have a label associated with each route.

## **L2VPN Address Family**

In Cisco IOS XE Release 2.6 and later releases, support for the L2VPN address family is introduced. L2VPN is defined as a secure network that operates inside an unsecured network by using an encryption technology such as IP security (IPsec) or generic routing encapsulation (GRE). The L2VPN address family is configured in BGP routing configuration mode, and within the L2VPN address family the VPLS subsequent address family identifier (SAFI) is supported.

BGP support for the L2VPN address family introduces a BGP-based autodiscovery mechanism to distribute L2VPN endpoint provisioning information. BGP uses a separate L2VPN Routing Information Base (RIB) to store endpoint provisioning information, which is updated each time any Layer 2 VFI is configured. Prefix and path information is stored in the L2VPN database, allowing BGP to make best-path decisions. When BGP distributes the endpoint provisioning information in an update message to all its BGP neighbors, the endpoint information is used to set up a pseudowire mesh to support L2VPN-based services.

The BGP autodiscovery mechanism facilitates the setting up of L2VPN services, which are an integral part of the Cisco IOS VPLS feature. VPLS enables flexibility in deploying services by connecting geographically dispersed sites as a large LAN over high-speed Ethernet in a robust and scalable IP MPLS network. For more details about VPLS, see the VPLS Autodiscovery: BGP Based feature.

Under L2VPN address family, the following BGP commands are supported:

- bgp nexthop
- bgp scan-time
- neighbor activate
- · neighbor advertisement-interval
- · neighbor allowas-in
- neighbor capability
- neighbor inherit

- neighbor peer-group
- neighbor maximum-prefix
- neighbor next-hop-self
- neighbor next-hop-unchanged
- neighbor remove-private-as
- neighbor route-map
- neighbor route-reflector-client
- · neighbor send-community
- neighbor soft-reconfiguration
- · neighbor soo
- neighbor weight



For route reflectors using L2VPNs, the **neighbor next-hop-self** and **neighbor next-hop-unchanged** commands are not supported.

For route maps used within BGP, all commands related to prefix processing, tag processing, and automated tag processing are ignored when used under L2VPN address family configuration mode. All other route map commands are supported.

BGP multipaths and confederations are not supported under the L2VPN address family.

For details on configuring BGP under the L2VPN address family, see the BGP Support for the L2VPN Address Family feature.

### **BGP CLI Removal Considerations**

BGP CLI configuration can become quite complex even in smaller BGP networks. If you need to remove any CLI configuration, you must consider all the implications of removing the CLI. Analyze the current running configuration to determine the current BGP neighbor relationships, any address family considerations, and even other routing protocols that are configured. Many BGP CLI commands affect other parts of the CLI configuration. For example, in the following configuration, a route map is used to match a BGP autonomous system number and then set the matched routes with another autonomous system number for EIGRP:

```
route-map bgp-to-eigrp permit 10
match tag 50000
set tag 65000
```

BGP neighbors in three different autonomous systems are configured and activated:

```
router bgp 45000
bgp log-neighbor-changes
address-family ipv4
neighbor 172.16.1.2 remote-as 45000
neighbor 192.168.1.2 remote-as 40000
neighbor 192.168.3.2 remote-as 50000
neighbor 172.16.1.2 activate
neighbor 192.168.1.2 activate
neighbor 192.168.3.2 activate
network 172.17.1.0 mask 255.255.255.0
exit-address-family
```

An EIGRP routing process is then configured and BGP routes are redistributed into EIGRP with a route map filtering the routes:

```
router eigrp 100 redistribute bgp 45000 metric 10000 100 255 1 1500 route-map bgp-to-eigrp no auto-summary exit
```

If you later decide to remove the route map, you will use the **no** form of the **route-map** command. Almost every configuration command has a **no** form, and the **no** form generally disables a function. However, in this configuration example, if you disable only the route map, the route redistribution will continue, but without the filtering or matching from the route map. Redistribution without the route map may cause unexpected results in your network. When you remove an access list or route map, you must also review the commands that referenced that access list or route map to consider whether the command will give you the behavior you intended.

The following configuration will remove both the route map and the redistribution:

```
configure terminal
no route-map bgp-to-eigrp
router eigrp 100
no redistribute bgp 45000
end
```

For details on configuring the removal of BGP CLI configuration, see the "Configuring a Basic BGP Network" module.

## Where to Go Next

Proceed to the "Configuring a Basic BGP Network" module.

## **Additional References**

The following sections provide references related to configuring BGP.

#### **Related Documents**

Related Topic	Document Title
BGP commands	Cisco IOS IP Routing: BGP Command Reference
Configuring basic BGP tasks	"Configuring a Basic BGP Network"
Configuring BGP neighbor session options	"Configuring BGP Neighbor Session Options"
Configuring BGP to connect to a service provider	"Connecting to a Service Provider Using External BGP"
Configuring internal BGP (iBGP) tasks	"Configuring Internal BGP Features"
Configuring advanced BGP features	"Configuring Advanced BGP Features"
Cisco IOS master command list, all releases	Cisco IOS Master Command List, All Releases

# **Standards**

Standard	Title
MDT SAFI	MDT SAFI

# **MIBs**

MIB	MIBs Link
	To locate and download MIBs for selected platforms, Cisco IOS XE software releases, and feature sets, use Cisco MIB Locator found at the following URL:
	http://www.cisco.com/go/mibs

# **RFCs**

RFC	Title
RFC 1700	Assigned Numbers
RFC 2858	Multiprotocol Extensions for BGP-4
RFC 3107	Carrying Label Information in BGP-4
RFC 4271	A Border Gateway Protocol 4 (BGP-4)
RFC 4893	BGP Support for Four-octet AS Number Space
RFC 5396	Textual Representation of Autonomous System (AS) Numbers
RFC 5398	Autonomous System (AS) Number Reservation for Documentation Use

# **Technical Assistance**

Description	Link
The Cisco Support website provides extensive online resources, including documentation and tools for troubleshooting and resolving technical issues with Cisco products and technologies.	http://www.cisco.com/cisco/web/support/index.html
To receive security and technical information about your products, you can subscribe to various services, such as the Product Alert Tool (accessed from Field Notices), the Cisco Technical Services Newsletter, and Really Simple Syndication (RSS) Feeds.	
Access to most tools on the Cisco Support website requires a Cisco.com user ID and password.	

# **Feature Information for Cisco BGP Overview**

Table 5 lists the features in this module.

Use Cisco Feature Navigator to find information about platform support and software image support. Cisco Feature Navigator enables you to determine which Cisco IOS XE software images support a specific software release, feature set, or platform. To access Cisco Feature Navigator, go to <a href="http://www.cisco.com/go/cfn">http://www.cisco.com/go/cfn</a>. An account on Cisco.com is not required.



Table 5 lists only the Cisco IOS XE software release that introduced support for a given feature in a given Cisco IOS XE software release train. Unless noted otherwise, subsequent releases of that Cisco IOS XE software release train also support that feature.

Table 5 Feature Information for Cisco BGP Overview

Feature Name	Releases	Feature Information
BGP 4 Multipath Support	Cisco IOS XE Release 2.1	This feature was introduced on the Cisco ASR 1000 Series Aggregation Services Routers.
Multicast BGP (MBGP)	Cisco IOS XE Release 2.1	This feature was introduced on the Cisco ASR 1000 Series Routers.

Table 5 Feature Information for Cisco BGP Overview (continued)

Feature Name	Releases	Feature Information
BGP Support for 4-Byte ASN	Cisco IOS XE Release 2.3 Cisco IOS XE Release 2.4	The BGP Support for 4-Byte ASN feature introduced support for 4-byte autonomous system numbers. Because of increased demand for autonomous system numbers, in January 2009 the IANA will start to allocate 4-byte autonomous system numbers in the range from 65536 to 4294967295.
		In Cisco IOS XE Release 2.3, the Cisco implementation of 4-byte autonomous system numbers uses asdot as the only configuration format, regular expression match, and output display, with no asplain support.
		In Cisco IOS XE Release 2.4 and later releases, the Cisco implementation of 4-byte autonomous system numbers uses asplain as the default regular expression match and output display format for autonomous system numbers, but you can configure 4-byte autonomous system numbers in both the asplain format and the asdot format as described in RFC 5396. To change the default regular expression match and output display of 4-byte autonomous system numbers to asdot format, use the <b>bgp asnotation dot</b> command.
		The following section provides information about this feature:
		BGP Autonomous System Number Formats, page 4
		The following commands were introduced or modified by this feature: bgp asnotation dot, bgp confederation identifier, bgp confederation peers, all clear ip bgp commands that configure an autonomous system number, ip as-path access-list, ip extcommunity-list, match source-protocol, neighbor local-as, neighbor remote-as, redistribute (IP), router bgp, route-target, set as-path, set extcommunity, set origin, all show ip bgp commands that display an autonomous system number, and show ip extcommunity-list.

Table 5 Feature Information for Cisco BGP Overview (continued)

Feature Name	Releases	Feature Information
BGP Support for the L2VPN Address Family	Cisco IOS XE Release 2.6	BGP Support for the L2VPN address family introduced a BGP-based autodiscovery mechanism to distribute L2VPN endpoint provisioning information. BGP uses a separate L2VPN Routing Information Base (RIB) to store endpoint provisioning information, which is updated each time any Layer 2 VFI is configured. When BGP distributes the endpoint provisioning information in an update message to all its BGP neighbors, the endpoint information is used to set up a Pseudowire mesh to support L2VPN-based services.  The following sections provide information about this feature:  • Cisco BGP Address Family Model, page 9  • L2VPN Address Family, page 13  The following commands were introduced or modified by this feature:  • address-family 12vpn
		• show ip bgp l2vpn

Table 5 Feature Information for Cisco BGP Overview (continued)

Feature Name	Releases	Feature Information
Configuring Multiprotocol BGP Support for CLNS	Cisco IOS XE Release 2.6	The Multiprotocol BGP (MP-BGP) Support for CLNS feature provides the ability to scale Connectionless Network Service (CLNS) networks. The multiprotocol extensions of Border Gateway Protocol (BGP) add the ability to interconnect separate Open System Interconnection (OSI) routing domains without merging the routing domains, thus providing the capability to build very large OSI networks.
		The following sections provide information about this feature:
		• Cisco BGP Address Family Model, page 9
		• CLNS Address Family, page 12
		The following commands were introduced or modified by this feature:
		• clear bgp nsap
		• clear bgp nsap dampening
		• clear bgp nsap external
		• clear bgp nsap flap-statistics
		• clear bgp nsap peer-group
		• debug bgp nsap
		debug bgp nsap dampening
		• debug bgp nsap updates
		• neighbor prefix-list
		• network (BGP and multiprotocol BGP)
		• redistribute (BGP to ISO ISIS)
		• redistribute (ISO ISIS to BGP)
		show bgp nsap
		show bgp nsap community
		show bgp nsap community-list
		• show bgp nsap dampened-paths
		• show bgp nsap filter-list
		• show bgp nsap flap-statistics
		• show bgp nsap inconsistent-as
		• show bgp nsap neighbors
		• show bgp nsap paths
		• show bgp nsap quote-regexp
		• show bgp nsap regexp
		• show bgp nsap summary

CCDE, CCENT, CCSI, Cisco Eos, Cisco Explorer, Cisco HealthPresence, Cisco IronPort, the Cisco logo, Cisco Nurse Connect, Cisco Pulse, Cisco SensorBase, Cisco StackPower, Cisco StadiumVision, Cisco TelePresence, Cisco TrustSec, Cisco Unified Computing System, Cisco WebEx, DCE, Flip Channels, Flip for Good, Flip Mino, Flipshare (Design), Flip Ultra, Flip Video, Flip Video (Design), Instant Broadband, and Welcome to the Human Network are trademarks; Changing the Way We Work, Live, Play, and Learn, Cisco Capital, Cisco Capital (Design), Cisco:Financed (Stylized), Cisco Store, Flip Gift Card, and One Million Acts of Green are service marks; and Access Registrar, Aironet, AllTouch, AsyncOS, Bringing the Meeting To You, Catalyst, CCDA, CCDP, CCIE, CCIP, CCNA, CCNP, CCSP, CCVP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IOS, Cisco Lumin, Cisco Nexus, Cisco Press, Cisco Systems, Cisco Systems Capital, the Cisco Systems logo, Cisco Unity, Collaboration Without Limitation, Continuum, EtherFast, EtherSwitch, Event Center, Explorer, Follow Me Browsing, GainMaker, iLYNX, IOS, iPhone, IronPort, the IronPort logo, Laser Link, LightStream, Linksys, MeetingPlace, MeetingPlace Chime Sound, MGX, Networkers, Networking Academy, PCNow, PIX, PowerKEY, PowerPanels, PowerTV, PowerTV (Design), PowerVu, Prisma, ProConnect, ROSA, SenderBase, SMARTnet, Spectrum Expert, StackWise, WebEx, and the WebEx logo are registered trademarks of Cisco and/or its affiliates in the United States and certain other countries.

All other trademarks mentioned in this document or website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1002R)

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, and figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

 $\ @\ 2005\mbox{--}2010$  Cisco Systems, Inc. All rights reserved.

Feature Information for Cisco BGP Overview



# **Configuring a Basic BGP Network**

First Published: May 2, 2005 Last Updated: June 19, 2009

This module describes the basic tasks to configure a basic Border Gateway Protocol (BGP) network. BGP is an interdomain routing protocol that is designed to provide loop-free routing between organizations. The Cisco IOS XE implementation of the neighbor and address family commands is explained. This module also contains tasks to configure and customize BGP peers and to configure BGP route aggregation, BGP route origination, BGP backdoor routes, BGP peer groups, peer session templates, and update groups.

# **Finding Feature Information**

For the latest feature information and caveats, see the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the "Feature Information for Configuring a Basic BGP Network" section on page 95.

Use Cisco Feature Navigator to find information about platform support and Cisco IOS XE software image support. To access Cisco Feature Navigator, go to <a href="http://www.cisco.com/go/cfn">http://www.cisco.com/go/cfn</a>. An account on Cisco.com is not required.

### **Contents**

- Prerequisites for Configuring a Basic BGP Network, page 2
- Restrictions for Configuring a Basic BGP Network, page 2
- Information About Configuring a Basic BGP Network, page 2
- How to Configure a Basic BGP Network, page 10
- Configuration Examples for Configuring a Basic BGP Network, page 80
- Where to Go Next, page 92



- Additional References, page 93
- Feature Information for Configuring a Basic BGP Network, page 95

# **Prerequisites for Configuring a Basic BGP Network**

Before configuring basic BGP tasks, you should be familiar with the "Cisco BGP Overview" module.

# **Restrictions for Configuring a Basic BGP Network**

A router that runs Cisco IOS XE software can be configured to run only one BGP routing process and to be a member of only one BGP autonomous system. However, a BGP routing process and autonomous system can support multiple address family configurations.

# **Information About Configuring a Basic BGP Network**

To configure a basic BGP network, you should understand the following concepts:

- BGP Version 4, page 2
- BGP-Speaker and Peer Relationships, page 3
- BGP Autonomous System Number Formats, page 3
- BGP Peer Session Establishment, page 5
- Cisco Implementation of BGP Global and Address Family Configuration Commands, page 6
- BGP Session Reset, page 7
- BGP Route Aggregation, page 8
- BGP Peer Groups, page 9
- BGP Update Group, page 9
- BGP Peer Templates, page 9

### **BGP Version 4**

Border Gateway Protocol (BGP) is an interdomain routing protocol designed to provide loop-free routing between separate routing domains that contain independent routing policies (autonomous systems). The Cisco IOS XE software implementation of BGP version 4 includes multiprotocol extensions to allow BGP to carry routing information for IP multicast routes and multiple Layer 3 protocol address families including IP Version 4 (IPv4), IP Version 6 (IPv6), and Virtual Private Networks version 4 (VPNv4).

BGP is mainly used to connect a local network to an external network to gain access to the Internet or to connect to other organizations. When connecting to an external organization, external BGP (eBGP) peering sessions are created. Although BGP is referred to as an exterior gateway protocol (EGP) many networks within an organization are becoming so complex that BGP can be used to simplify the internal network used within the organization. BGP peers within the same organization exchange routing information through internal BGP (iBGP) peering sessions.



BGP requires more configuration than other routing protocols, and the effects of any configuration changes must be fully understood. Incorrect configuration can create routing loops and negatively impact normal network operation.

## **BGP-Speaker and Peer Relationships**

A BGP-speaking router does not discover another BGP-speaking device automatically. A network administrator usually manually configures the relationships between BGP-speaking routers. A peer device is a BGP-speaking router that has an active TCP connection to another BGP-speaking device. This relationship between BGP devices is often referred to as a neighbor but, as this can imply the idea that the BGP devices are directly connected with no other router in between, the term neighbor will be avoided whenever possible in this document. A BGP speaker is the local router and a peer is any other BGP-speaking network device.

When a TCP connection is established between peers, each BGP peer initially exchanges all its routes—the complete BGP routing table—with the other peer. After this initial exchange only incremental updates are sent when there has been a topology change in the network, or when a routing policy has been implemented or modified. In the periods of inactivity between these updates, peers exchange special messages called keepalives.

A BGP autonomous system is a network controlled by a single technical administration entity. Peer routers are called external peers when they are in different autonomous systems and internal peers when they are in the same autonomous system. Usually, external peers are adjacent and share a subnet; internal peers may be anywhere in the same autonomous system.

For more details about external BGP peers, see the "Connecting to a Service Provider Using External BGP" module. For more details about internal BGP peers, see the "Configuring Internal BGP Features" module.

### **BGP Autonomous System Number Formats**

Prior to January 2009, BGP autonomous system numbers that were allocated to companies were 2-octet numbers in the range from 1 to 65535 as described in RFC 4271, *A Border Gateway Protocol 4 (BGP-4)*. Due to increased demand for autonomous system numbers, the Internet Assigned Number Authority (IANA) will start in January 2009 to allocate four-octet autonomous system numbers in the range from 65536 to 4294967295. RFC 5396, *Textual Representation of Autonomous System (AS) Numbers*, documents three methods of representing autonomous system numbers. Cisco has implemented the following two methods:

- Asplain—Decimal value notation where both 2-byte and 4-byte autonomous system numbers are represented by their decimal value. For example, 65526 is a 2-byte autonomous system number and 234567 is a 4-byte autonomous system number.
- Asdot—Autonomous system dot notation where 2-byte autonomous system numbers are represented by their decimal value and 4-byte autonomous system numbers are represented by a dot notation. For example, 65526 is a 2-byte autonomous system number and 1.169031 is a 4-byte autonomous system number (this is dot notation for the 234567 decimal number).

For details about the third method of representing autonomous system numbers, see RFC 5396.

#### **Asdot Only Autonomous System Number Formatting**

In Cisco IOS XE Release 2.3, the 4-octet (4-byte) autonomous system numbers are entered and displayed only in asdot notation, for example, 1.10 or 45000.64000. When using regular expressions to match 4-byte autonomous system numbers the asdot format includes a period, which is a special character in regular expressions. A backslash must be entered before the period; for example, 1\.14, to ensure the regular expression match does not fail. Table 1 shows the format in which 2-byte and 4-byte autonomous system numbers are configured, matched in regular expressions, and displayed in **show** command output in Cisco IOS images where only asdot formatting is available.

Table 1 Asdot Only 4-Byte Autonomous System Number Format

Format		Show Command Output and Regular Expression Match Format
asdot	2-byte: 1 to 65535 4-byte: 1.0 to 65535.65535	2-byte: 1 to 65535 4-byte: 1.0 to 65535.65535

#### **Asplain as Default Autonomous System Number Formatting**

In Cisco IOS XE Release 2.4 and later releases, the Cisco implementation of 4-byte autonomous system numbers uses asplain as the default display format for autonomous system numbers, but you can configure 4-byte autonomous system numbers in both the asplain and asdot format. In addition, the default format for matching 4-byte autonomous system numbers in regular expressions is asplain, so you must ensure that any regular expressions to match 4-byte autonomous system numbers are written in the asplain format. If you want to change the default **show** command output to display 4-byte autonomous system numbers in the asdot format, use the **bgp asnotation dot** command under router configuration mode. When the asdot format is enabled as the default, any regular expressions to match 4-byte autonomous system numbers must be written using the asdot format, or the regular expression match will fail. Table 2 and Table 3 show that although you can configure 4-byte autonomous system numbers in either asplain or asdot format, only one format is used to display show command output and control 4-byte autonomous system number matching for regular expressions, and the default is asplain format. To display 4-byte autonomous system numbers in **show** command output and to control matching for regular expressions in the asdot format, you must configure the **bgp asnotation dot** command. After enabling the **bgp asnotation dot** command, a hard reset must be initiated for all BGP sessions by entering the clear ip bgp \* command.



If you are upgrading to an image that supports 4-byte autonomous system numbers, you can still use 2-byte autonomous system numbers. The **show** command output and regular expression match are not changed and remain in asplain (decimal value) format for 2-byte autonomous system numbers regardless of the format configured for 4-byte autonomous system numbers.

Table 2 Default Asplain 4-Byte Autonomous System Number Format

Format	Configuration Format	Show Command Output and Regular Expression Match Format
asplain	2-byte: 1 to 65535 4-byte: 65536 to 4294967295	2-byte: 1 to 65535 4-byte: 65536 to 4294967295
asdot	2-byte: 1 to 65535 4-byte: 1.0 to 65535.65535	2-byte: 1 to 65535 4-byte: 65536 to 4294967295

4-byte: 1.0 to 65535.65535

Format	Configuration Format	Show Command Output and Regular Expression Match Format
asplain	2-byte: 1 to 65535 4-byte: 65536 to 4294967295	2-byte: 1 to 65535 4-byte: 1.0 to 65535.65535
asdot	2-byte: 1 to 65535	2-byte: 1 to 65535

Table 3 Asdot 4-Byte Autonomous System Number Format

#### **Reserved and Private Autonomous System Numbers**

4-byte: 1.0 to 65535.65535

In Cisco IOS XE Release 2.3 and later releases, the Cisco implementation of BGP supports RFC 4893. RFC 4893 was developed to allow BGP to support a gradual transition from 2-byte autonomous system numbers to 4-byte autonomous system numbers. A new reserved (private) autonomous system number, 23456, was created by RFC 4893 and this number cannot be configured as an autonomous system number in the Cisco IOS CLI.

RFC 5398, *Autonomous System (AS) Number Reservation for Documentation Use*, describes new reserved autonomous system numbers for documentation purposes. Use of the reserved numbers allow configuration examples to be accurately documented and avoids conflict with production networks if these configurations are literally copied. The reserved numbers are documented in the IANA autonomous system number registry. Reserved 2-byte autonomous system numbers are in the contiguous block, 64496 to 64511 and reserved 4-byte autonomous system numbers are from 65536 to 65551 inclusive.

Private 2-byte autonomous system numbers are still valid in the range from 64512 to 65534 with 65535 being reserved for special use. Private autonomous system numbers can be used for internal routing domains but must be translated for traffic that is routed out to the Internet. BGP should not be configured to advertise private autonomous system numbers to external networks. Cisco IOS software does not remove private autonomous system numbers from routing updates by default. We recommend that ISPs filter private autonomous system numbers.



Autonomous system number assignment for public and private networks is governed by the IANA. For information about autonomous-system numbers, including reserved number assignment, or to apply to register an autonomous system number, see the following URL: <a href="http://www.iana.org/">http://www.iana.org/</a>.

#### **BGP Peer Session Establishment**

When a BGP routing process establishes a peering session with a peer it goes through the following state changes:

- Idle—Initial state the BGP routing process enters when the routing process is enabled or when the router is reset. In this state, the router waits for a start event, such as a peering configuration with a remote peer. After the router receives a TCP connection request from a remote peer, the router initiates another start event to wait for a timer before starting a TCP connection to a remote peer. If the router is reset then the peer is reset and the BGP routing process returns to the Idle state.
- Connect—The BGP routing process detects that a peer is trying to establish a TCP session with the local BGP speaker.

- Active—In this state, the BGP routing process tries to establish a TCP session with a peer router
  using the ConnectRetry timer. Start events are ignored while the BGP routing process is in the
  Active state. If the BGP routing process is reconfigured or if an error occurs, the BGP routing
  process will release system resources and return to an Idle state.
- OpenSent—The TCP connection is established and the BGP routing process sends an OPEN
  message to the remote peer, and transitions to the OpenSent state. The BGP routing process can
  receive other OPEN messages in this state. If the connection fails, the BGP routing process
  transitions to the Active state.
- OpenReceive—The BGP routing process receives the OPEN message from the remote peer and waits for an initial keepalive message from the remote peer. When a keepalive message is received, the BGP routing process transitions to the Established state. If a notification message is received, the BGP routing process transitions to the Idle state. If an error or configuration change occurs that affects the peering session, the BGP routing process sends a notification message with the Finite State Machine (FSM) error code and then transitions to the Idle state.
- Established—The initial keepalive is received from the remote peer. Peering is now established with the remote neighbor and the BGP routing process starts exchanging update message with the remote peer. The hold timer restarts when an update or keepalive message is received. If the BGP process receives an error notification, it will transition to the Idle state.

# Cisco Implementation of BGP Global and Address Family Configuration Commands

The address family model for configuring BGP is based on splitting apart the configuration for each address family. All commands that are independent of the address family are grouped together at the beginning (highest level) of the configuration, and these are followed by separate submodes for commands specific to each address family (with the exception that commands relating to IPv4 unicast can also be entered at the beginning of the configuration). When a network operator configures BGP, the flow of BGP configuration categories is represented by the following bullets in order:

- Global configuration—Configuration that is applied to BGP in general, rather than to specific neighbors. For example, the **network**, **redistribute**, and **bgp bestpath** commands.
- Address family-dependent configuration—Configuration that applies to a specific address family such as policy on an individual neighbor.

The relationship between BGP global and BGP address family-dependent configuration categories is shown in Table 4.

Table 4 Relationships Between BGP Configuration Categories

<b>BGP Configuration Category</b>	Configuration Sets Within Category
Global address family-independent	One set of global address family-independent configurations
Address family-dependent	One set of global address family-dependent configurations per address family



Address family configuration must be entered within the address family submode to which it applies.

The following is an example of BGP configuration statements showing the grouping of global address family-independent and address family-dependent commands.

```
router bgp <AS>
 ! AF independent part
neighbor <ip-address> <command> ! Session config; AF independent
 address-family ipv4 unicast
  ! AF dependant part
 neighbor <ip-address> <command> ! Policy config; AF dependant
 exit-address-family
 address-family ipv4 multicast
  ! AF dependant part
 neighbor <ip-address> <command> ! Policy config; AF dependant
  exit-address-family
 address-family ipv4 unicast vrf <vrf-name>
  ! VRF specific AS independent commands
  ! VRF specific AS dependant commands
  neighbor <ip-address> <command> ! Session config; AF independent
  neighbor <ip-address> <command> ! Policy config; AF dependant
  exit-address-family
```

The following example shows actual BGP commands that match the BGP configuration statements in the previous example:

```
router bgp 45000
router-id 172.17.1.99
bgp log-neighbor-changes
neighbor 192.168.1.2 remote-as 40000
neighbor 192.168.3.2 remote-as 50000
address-family ipv4 unicast
 neighbor 192.168.1.2 activate
 network 172.17.1.0 mask 255.255.255.0
 exit-address-family
address-family ipv4 multicast
 neighbor 192.168.3.2 activate
 neighbor 192.168.3.2 advertisement-interval 25
 network 172.16.1.0 mask 255.255.255.0
 exit-address-family
address-family ipv4 vrf vpn1
 neighbor 192.168.3.2 activate
 network 172.21.1.0 mask 255.255.255.0
 exit-address-family
```

In Cisco IOS XE Release 2.1 and later releases, the **bgp upgrade-cli** command simplifies the migration of BGP networks and existing configurations from the network layer reachability information (NLRI) format to the address family format. Network operators can configure commands in the address family identifier (AFI) format and save these command configurations to existing NLRI formatted configurations. The BGP hybrid command-line interface (CLI) does not add support for complete AFI and NLRI integration because of the limitations of the NLRI format. For complete support of AFI commands and features, we recommend upgrading existing NLRI configurations with the **bgp upgrade-cli** command. For a configuration example of migrating BGP configurations from the NLRI format to the address family format, see the "NLRI to AFI Configuration: Example" section on page 85.

#### **BGP Session Reset**

Whenever there is a change in the routing policy due to a configuration change, BGP peering sessions must be reset using the **clear ip bgp** command. Cisco IOS XE software supports the following three mechanisms to reset BGP peering sessions:

- *Hard reset*—A hard reset tears down the specified peering sessions including the TCP connection and deletes routes coming from the specified peer.
- Soft reset—A soft reset uses stored prefix information to reconfigure and activate BGP routing
  tables without tearing down existing peering sessions. Soft reconfiguration uses stored update
  information, at the cost of additional memory for storing the updates, to allow you to apply new BGP
  policy without disrupting the network. Soft reconfiguration can be configured for inbound or
  outbound sessions.
- Dynamic inbound soft reset—The route refresh capability, as defined in RFC 2918, allows the local router to reset inbound routing tables dynamically by exchanging route refresh requests to supporting peers. The route refresh capability does not store update information locally for non disruptive policy changes. It instead relies on dynamic exchange with supporting peers. Route refresh must first be advertised through BGP capability negotiation between peers. All BGP routers must support the route refresh capability.

To determine if a BGP router supports this capability, use the **show ip bgp neighbors** command. The following message is displayed in the output when the router supports the route refresh capability:

Received route refresh capability from peer.

The **bgp soft-reconfig-backup** command was introduced to configure BGP to perform inbound soft reconfiguration for peers that do not support the route refresh capability. The configuration of this command allows you to configure BGP to store updates (soft reconfiguration) only as necessary. Peers that support the route refresh capability are unaffected by the configuration of this command.

## **BGP Route Aggregation**

BGP peers store and exchange routing information and the amount of routing information increases as more BGP speakers are configured. The use of route aggregation reduces the amount of information involved. Aggregation is the process of combining the attributes of several different routes so that only a single route is advertised. Aggregate prefixes use the classless interdomain routing (CIDR) principle to combine contiguous networks into one classless set of IP addresses that can be summarized in routing tables. Fewer routes now need to be advertised.

Two methods are available in BGP to implement route aggregation. You can redistribute an aggregated route into BGP or you can use a form of conditional aggregation. Basic route redistribution involves creating an aggregate route and then redistributing the routes into BGP. Conditional aggregation involves creating an aggregate route and then advertising or suppressing the advertising of certain routes on the basis of route maps, autonomous system set path (AS-SET) information, or summary information.

The **bgp suppress-inactive** command configures BGP to not advertise inactive routes to any BGP peer. A BGP routing process can advertise routes that are not installed in the routing information database (RIB) to BGP peers by default. A route that is not installed into the RIB is an inactive route. Inactive route advertisement can occur, for example, when routes are advertised through common route aggregation. Inactive route advertisements can be suppressed to provide more consistent data forwarding.

## **BGP Peer Groups**

Often, in a BGP network, many neighbors are configured with the same update policies (that is, the same outbound route maps, distribute lists, filter lists, update source, and so on). Neighbors with the same update policies can be grouped into BGP peer groups to simplify configuration and, more importantly, to make configuration updates more efficient. When you have many peers, this approach is highly recommended.

## **BGP Update Group**

The introduction of the BGP (dynamic) update group in Cisco IOS XE Release 2.1 provides a different type of BGP peer grouping from existing BGP peer groups. Existing peer groups are not affected but peers with the same outbound policy configured that are not members of a current peer group can be grouped into an update group. The members of this update group will use the same update generation engine. When BGP update groups are configured an algorithm dynamically calculates the BGP update group membership based on outbound policies. Optimal BGP update message generation occurs automatically and independently. BGP neighbor configuration is no longer restricted by outbound routing policies, and update groups can belong to different address families.

## **BGP Peer Templates**

To address some of the limitations of peer groups such as configuration management, BGP peer templates were introduced to support the BGP update group configuration.

A peer template is a configuration pattern that can be applied to neighbors that share policies. Peer templates are reusable and support inheritance, which allows the network operator to group and apply distinct neighbor configurations for BGP neighbors that share policies. Peer templates also allow the network operator to define very complex configuration patterns through the capability of a peer template to inherit a configuration from another peer template.

There are two types of peer templates:

- Peer session templates are used to group and apply the configuration of general session commands that are common to all address family and NLRI configuration modes.
- Peer policy templates are used to group and apply the configuration of commands that are applied within specific address families and NLRI configuration modes.

Peer templates improve the flexibility and enhance the capability of neighbor configuration. Peer templates also provide an alternative to peer group configuration and overcome some limitations of peer groups. BGP peer routers using peer templates also benefit from automatic update group configuration. With the configuration of the BGP peer templates and the support of the BGP dynamic update peer groups, the network operator no longer needs to configure peer groups in BGP and the network can benefit from improved configuration flexibility and faster convergence.



A BGP neighbor cannot be configured to work with both peer groups and peer templates. A BGP neighbor can be configured to belong only to a peer group or to inherit policies from peer templates.

#### Restrictions

The following restrictions apply to the peer policy templates:

- A peer policy template can directly or indirectly inherit up to eight peer policy templates.
- A BGP neighbor cannot be configured to work with both peer groups and peer templates. A BGP
  neighbor can be configured to belong only to a peer group or to inherit policies only from peer
  templates.

# **How to Configure a Basic BGP Network**

Configuring a basic BGP network consists of a few required tasks and many optional tasks. A BGP routing process must be configured and BGP peers must be configured, preferably using the address family configuration model. If the BGP peers are part of a VPN network, the BGP peers must be configured using the IPv4 VRF address family task. The other tasks in the following list are optional:

- Configuring a BGP Routing Process, page 10
- Configuring a BGP Peer, page 13
- Configuring a BGP Routing Process and Peers Using 4-Byte Autonomous System Numbers, page 17
- Modifying the Default Output and Regular Expression Match Format for 4-Byte Autonomous System Numbers, page 21
- Configuring a BGP Peer for the IPv4 VRF Address Family, page 28
- Customizing a BGP Peer, page 31
- Removing BGP Configuration Commands Using a Redistribution Example, page 36
- Monitoring and Maintaining Basic BGP, page 38
- Aggregating Route Prefixes Using BGP, page 44
- Originating BGP Routes, page 52
- Configuring a BGP Peer Group, page 61
- Configuring Peer Session Templates, page 63
- Configuring Peer Policy Templates, page 70
- Monitoring and Maintaining BGP Dynamic Update Groups, page 78

# **Configuring a BGP Routing Process**


Perform this task to configure a BGP routing process. You must perform the required steps at least once to enable BGP. The optional steps here allow you to configure additional features in your BGP network. Several of the features, such as logging neighbor resets and immediate reset of a peer when its link goes down, are enabled by default but are presented here to enhance your understanding of how your BGP network operates.



A router that runs Cisco IOS XE software can be configured to run only one BGP routing process and to be a member of only one BGP autonomous system. However, a BGP routing process and autonomous system can support multiple concurrent BGP address family and subaddress family configurations.

The configuration in this task is done at Router A in Figure 1 and would need to be repeated with appropriate changes to the IP addresses (for example, at Router B) to fully achieve a BGP process between the two routers. No address family is configured here for the BGP routing process so routing information for the IPv4 unicast address family is advertised by default.

Figure 1 BGP Topology with Two Autonomous Systems

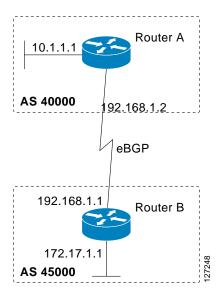

#### **BGP Router ID**

BGP uses a router ID to identify BGP-speaking peers. The BGP router ID is 32-bit value that is often represented by an IPv4 address. By default, the Cisco IOS XE software sets the router ID to the IPv4 address of a loopback interface on the router. If no loopback interface is configured on the router, then the software chooses the highest IPv4 address configured to a physical interface on the router to represent the BGP router ID. The BGP router ID must be unique to the BGP peers in a network.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. router bgp autonomous-system-number
- 4. **network** network-number [**mask** network-mask] [**route-map** route-map-name]
- 5. **bgp router-id** *ip-address*
- 6. timers bgp keepalive holdtime
- 7. bgp fast-external-fallover
- 8. bgp log-neighbor-changes
- 9. end
- **10**. **show ip bgp** [network] [network-mask]

#### **DETAILED STEPS**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		Enter your password if prompted.
	Example: Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	router bgp autonomous-system-number	Configures a BGP routing process, and enters router configuration mode for the specified routing process.
	Example: Router(config)# router bgp 40000	• Use the <i>autonomous-system-number</i> argument to specify an integer, from 0 and 65534, that identifies the router to other BGP speakers.
Step 4	<pre>network network-number [mask network-mask] [route-map route-map-name]</pre>	(Optional) Specifies a network as local to this autonomous system and adds it to the BGP routing table.
	Example: Router(config-router)# network 10.1.1.0 mask 255.255.255.0	<ul> <li>For exterior protocols the <b>network</b> command controls which networks are advertised. Interior protocols use the <b>network</b> command to determine where to send updates.</li> </ul>
Step 5	bgp router-id ip-address	(Optional) Configures a fixed 32-bit router ID as the identifier of the local router running BGP.
	<pre>Example: Router(config-router)# bgp router-id 10.1.1.99</pre>	• Use the <i>ip-address</i> argument to specify a unique router ID within the network.
		Note Configuring a router ID using the <b>bgp router-id</b> command resets all active BGP peering sessions.
Step 6	timers bgp keepalive holdtime	(Optional) Sets BGP network timers.
	<pre>Example: Router(config-router)# timers bgp 70 120</pre>	• Use the <i>keepalive</i> argument to specify the frequency, in seconds, with which the software sends keepalive messages to its BGP peer. By default, the keepalive timer is set to 60 seconds.
		• Use the <i>holdtime</i> argument to specify the interval, in seconds, after not receiving a keepalive message that the software declares a BGP peer dead. By default, the holdtime timer is set to 180 seconds.
Step 7	bgp fast-external-fallover	(Optional) Enables the automatic resetting of BGP sessions.
	<pre>Example: Router(config-router)# bgp fast-external-fallover</pre>	By default, the BGP sessions of any directly adjacent external peers are reset if the link used to reach them goes down.

	Command or Action	Purpose
Step 8	bgp log-neighbor-changes	(Optional) Enables logging of BGP neighbor status changes (up or down) and neighbor resets.
	<pre>Example: Router(config-router)# bgp log-neighbor-changes</pre>	• Use this command for troubleshooting network connectivity problems and measuring network stability. Unexpected neighbor resets might indicate high error rates or high packet loss in the network and should be investigated.
Step 9	end	Exits router configuration mode and enters privileged EXEC mode.
	<pre>Example: Router(config-router)# end</pre>	
Step 10	show ip bgp [network] [network-mask]	(Optional) Displays the entries in the BGP routing table.
	Example: Router# show ip bgp	Note Only the syntax applicable to this task is used in this example. For more details, see the <i>Cisco IOS IP Routing: BGP Command Reference</i> .

#### **Examples**

The following sample output from the **show ip bgp** command shows the BGP routing table for Router A in Figure 1 after this task has been configured on Router A. You can see an entry for the network 10.1.1.0 that is local to this autonomous system.

```
BGP table version is 12, local router ID is 10.1.1.99

Status codes: s suppressed, d damped, h history, * valid, > best, i - internal, r RIB-failure, S Stale

Origin codes: i - IGP, e - EGP, ? - incomplete

Network Next Hop Metric LocPrf Weight Path

*> 10.1.1.0/24 0.0.0.0 0 32768 i
```

## **Troubleshooting Tips**

Use the **ping** command to check basic network connectivity between the BGP routers.

## **Configuring a BGP Peer**

Perform this task to configure BGP between two IPv4 routers (peers). The address family configured here is the default IPv4 unicast address family and the configuration is done at Router A in Figure 1 on page 11. Remember to perform this task for any neighbor routers that are to be BGP peers.

### **Prerequisites**

Before you perform this task, perform the Configuring a BGP Routing Process task.

#### **Restrictions**

By default, neighbors that are defined using the **neighbor remote-as** command in router configuration mode exchange only IPv4 unicast address prefixes. To exchange other address prefix types, such as IPv6 prefixes, neighbors must also be activated using the **neighbor activate** command in address family configuration mode for the other prefix types, such as IPv6 prefixes.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. router bgp autonomous-system-number
- **4**. **neighbor** *ip-address* **remote-as** *autonomous-system-number*
- 5. address-family ipv4 [unicast | multicast | vrf vrf-name]
- 6. neighbor ip-address activate
- 7. end
- **8. show ip bgp** [network] [network-mask]
- 9. **show ip bgp neighbors** [neighbor-address]

#### **DETAILED STEPS**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		• Enter your password if prompted.
	Example:	
	Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Router# configure terminal	
Step 3	router bgp autonomous-system-number	Enters router configuration mode for the specified routing process.
	Example:	
	Router(config)# router bgp 40000	
Step 4	neighbor ip-address remote-as autonomous-system-number	Adds the IP address of the neighbor in the specified autonomous system to the IPv4 multiprotocol BGP neighbor table of the local router.
	Example:	
	Router(config-router)# neighbor 192.168.1.1 remote-as 45000	

	Command or Action	Purpose
Step 5	address-family ipv4 [unicast   multicast   vrf vrf-name]	Specifies the IPv4 address family and enters address family configuration mode.
	<pre>Example: Router(config-router)# address-family ipv4 unicast</pre>	<ul> <li>The unicast keyword specifies the IPv4 unicast address family. By default, the router is placed in configuration mode for the IPv4 unicast address family if the unicast keyword is not specified with the address-family ipv4 command.</li> </ul>
		<ul> <li>The multicast keyword specifies IPv4 multicast address prefixes.</li> </ul>
		• The <b>vrf</b> keyword and <i>vrf-name</i> argument specify the name of the virtual routing and forwarding (VRF) instance to associate with subsequent IPv4 address family configuration mode commands.
Step 6	neighbor ip-address activate	Enables the neighbor to exchange prefixes for the IPv4 unicast address family with the local router.
	<pre>Example: Router(config-router-af)# neighbor 192.168.1.1 activate</pre>	
Step 7	end	Exits address family configuration mode and returns to privileged EXEC mode.
	<pre>Example: Router(config-router-af)# end</pre>	
Step 8	show ip bgp [network] [network-mask]	(Optional) Displays the entries in the BGP routing table.
	Example: Router# show ip bgp	Note Only the syntax applicable to this task is used in this example. For more details, see the <i>Cisco IOS IP Routing: BGP Command Reference</i> .
Step 9	show ip bgp neighbors [neighbor-address]	(Optional) Displays information about the TCP and BGP connections to neighbors.
	<pre>Example: Router(config-router-af)# show ip bgp neighbors 192.168.2.2</pre>	Note Only the syntax applicable to this task is used in this example. For more details, see the <i>Cisco IOS IP Routing: BGP Command Reference</i> .

#### **Examples**

The following sample output from the **show ip bgp** command shows the BGP routing table for Router A in Figure 1 on page 11 after this task has been configured on Router A and Router B. You can now see an entry for the network 172.17.1.0 in autonomous system 45000.

```
BGP table version is 13, local router ID is 10.1.1.99

Status codes: s suppressed, d damped, h history, * valid, > best, i - internal, r RIB-failure, S Stale

Origin codes: i - IGP, e - EGP, ? - incomplete

Network Next Hop Metric LocPrf Weight Path
*> 10.1.1.0/24 0.0.0.0 0 32768 i
*> 172.17.1.0/24 192.168.1.1 0 0 45000 i
```

The following sample output from the **show ip bgp neighbors** command shows information about the TCP and BGP connections to the BGP neighbor 192.168.1.1 of Router A in Figure 1 on page 11 after this task has been configured on Router A:

```
BGP neighbor is 192.168.1.1, remote AS 45000, external link
 BGP version 4, remote router ID 172.17.1.99
 BGP state = Established, up for 00:06:55
 Last read 00:00:15, last write 00:00:15, hold time is 120, keepalive intervals
 Configured hold time is 120, keepalive interval is 70 seconds, Minimum holdtims
 Neighbor capabilities:
   Route refresh: advertised and received (old & new)
   Address family IPv4 Unicast: advertised and received
  Message statistics:
   InQ depth is 0
   OutQ depth is 0
                      Sent
                                Ravd
   Opens:
                        1
                                   1
                        0
                                  0
   Notifications:
   Updates:
                         1
                                   2
   Keepalives:
                        13
                                   13
   Route Refresh:
                         0
                                    0
   Total:
                        15
                                   16
 Default minimum time between advertisement runs is 30 seconds
 For address family: IPv4 Unicast
 BGP table version 13, neighbor version 13/0
 Output queue size : 0
 Index 1, Offset 0, Mask 0x2
  1 update-group member
                              Sent
                                         Rcvd
                              ____
  Prefix activity:
                               1
                                          1 (Consumes 52 bytes)
   Prefixes Current:
                                1
   Prefixes Total:
                                          1
   Implicit Withdraw:
                               0
                                          0
   Explicit Withdraw:
                                0
                                          0
                                          1
   Used as bestpath:
                             n/a
   Used as multipath:
                              n/a
                                Outbound
                                            Inbound
 Local Policy Denied Prefixes:
                                -----
                                            _____
   AS_PATH loop:
                                     n/a
                                                1
   Bestpath from this peer:
                                     1
                                               n/a
   Total:
                                      1
                                                 1
 Number of NLRIs in the update sent: max 0, min 0
  Connections established 1; dropped 0
 Last reset never
Connection state is ESTAB, I/O status: 1, unread input bytes: 0
Connection is ECN Disabled
Local host: 192.168.1.2, Local port: 179
Foreign host: 192.168.1.1, Foreign port: 37725
Enqueued packets for retransmit: 0, input: 0 mis-ordered: 0 (0 bytes)
Event Timers (current time is 0x12F4F2C):
Timer Starts Wakeups
                                         Next
Retrans
             14
                       0
                                         0x0
TimeWait
                 0
                            0
                                          0x0
                13
AckHold
                            8
                                          0x0
                           0
SendWnd
                 0
                                          0 \times 0
                 0
                           0
KeepAlive
                                          0 \times 0
                 0
                           0
                                          0x0
GiveUp
                 0
                           0
PmtuAger
                                          0x0
DeadWait
                 0
                            0
                                          0x0
```

```
iss: 165379618 snduna: 165379963 sndnxt: 165379963 sndwnd: 16040 irs: 3127821601 rcvnxt: 3127821993 rcvwnd: 15993 delrcvwnd: 391

SRTT: 254 ms, RTTO: 619 ms, RTV: 365 ms, KRTT: 0 ms minRTT: 12 ms, maxRTT: 300 ms, ACK hold: 200 ms

Flags: passive open, nagle, gen tcbs

IP Precedence value: 6

Datagrams (max data segment is 1460 bytes):
Rcvd: 20 (out of order: 0), with data: 15, total data bytes: 391

Sent: 22 (retransmit: 0, fastretransmit: 0, partialack: 0, Second Congestion: 04
```

#### **Troubleshooting Tips**

Use the **ping** command to verify basic network connectivity between the BGP routers.

#### What to Do Next

If you have BGP peers in a VPN, proceed to the "Configuring a BGP Peer for the IPv4 VRF Address Family" section on page 28. If you do not have BGP peers in a VPN, proceed to the "Customizing a BGP Peer" section on page 31.

# **Configuring a BGP Routing Process and Peers Using 4-Byte Autonomous System Numbers**

Perform this task to configure a BGP routing process and BGP peers when the BGP peers are located in 4-byte autonomous system numbers. The address family configured here is the default IPv4 unicast address family, and the configuration is done at Router B in Figure 2 on page 18. The 4-byte autonomous system numbers in this task are formatted in the default asplain (decimal value) format; for example, Router B is in autonomous system number 65538 in Figure 2 on page 18. Remember to perform this task for any neighbor routers that are to be BGP peers.

#### **Cisco Implementation of 4-Byte Autonomous System Numbers**

In Cisco IOS XE Release 2.4 and later releases, the Cisco implementation of 4-byte autonomous system numbers uses asplain—65538 for example—as the default regular expression match and output display format for autonomous system numbers, but you can configure 4-byte autonomous system numbers in both the asplain format and the asdot format as described in RFC 5396. To change the default regular expression match and output display of 4-byte autonomous system numbers to asdot format, use the **bgp** asnotation dot command followed by the **clear ip bgp** \* command to perform a hard reset of all current BGP sessions. For more details about 4-byte autonomous system number formats, see the "BGP Autonomous System Number Formats" section on page 3.


In Cisco IOS XE Release 2.3, the Cisco implementation of 4-byte autonomous system numbers uses asdot—1.2 for example—as the only configuration format, regular expression match, and output display, with no asplain support. To view a configuration example of the configuration between three neighbor peers in separate 4-byte autonomous systems configured using asdot notation, see "Configuring a BGP Routing Process and Peers Using 4-Byte Autonomous System Numbers: Example" section on page 81.

Cisco also supports RFC 4893, which was developed to allow BGP to support a gradual transition from 2-byte autonomous system numbers to 4-byte autonomous system numbers. To ensure a smooth transition, we recommend that all BGP speakers within an autonomous system that is identified using a 4-byte autonomous system number be upgraded to support 4-byte autonomous system numbers.



A new private autonomous system number, 23456, was created by RFC 4893, and this number cannot be configured as an autonomous system number in the Cisco IOS CLI.

Figure 2 BGP Peers in Two Autonomous Systems Using 4-Byte Numbers

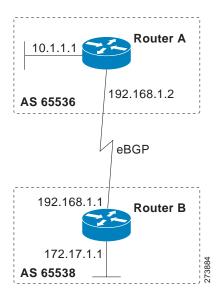

#### **Prerequisites**

This task requires Cisco IOS XE Release 2.4 or a later release to be running on the router.

#### **Restrictions**

By default, neighbors that are defined using the **neighbor remote-as** command in router configuration mode exchange only IPv4 unicast address prefixes. To exchange other address prefix types, such as IPv6 prefixes, neighbors must also be activated using the **neighbor activate** command in address family configuration mode for the other prefix types.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. router bgp autonomous-system-number
- 4. neighbor ip-address remote-as autonomous-system-number
- 5. Repeat Step 4. to define other BGP neighbors, as required.
- 6. address-family ipv4 [unicast | multicast | vrf vrf-name]
- 7. neighbor ip-address activate

- **8.** Repeat Step 7. to activate other BGP neighbors, as required.
- **9. network** *network-number* [**mask** *network-mask*] [**route-map** *route-map-name*]
- 10. end
- **11**. **show ip bgp** [network] [network-mask]
- 12. show ip bgp summary

#### **DETAILED STEPS**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	• Enter your password if prompted.
Cton 2	Router> enable	Entern alabal and mustica made
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	router bgp autonomous-system-number	Enters router configuration mode for the specified routing process.
	<pre>Example: Router(config)# router bgp 65538</pre>	• In this example, the 4-byte autonomous system number, 65538, is defined in asplain notation.
Step 4	neighbor ip-address remote-as autonomous-system-number	Adds the IP address of the neighbor in the specified autonomous system to the IPv4 multiprotocol BGP neighbor table of the local router.
	<pre>Example: Router(config-router)# neighbor 192.168.1.2 remote-as 65536</pre>	• In this example, the 4-byte autonomous system number, 65536, is defined in asplain notation.
Step 5	Repeat Step 4 to define other BGP neighbors, as required.	
Step 6	address-family ipv4 [unicast   multicast   vrf vrf-name]	Specifies the IPv4 address family and enters address family configuration mode.
	<pre>Example: Router(config-router)# address-family ipv4 unicast</pre>	• The <b>unicast</b> keyword specifies the IPv4 unicast address family. By default, the router is placed in configuration mode for the IPv4 unicast address family if the <b>unicast</b> keyword is not specified with the <b>address-family ipv4</b> command.
		• The <b>multicast</b> keyword specifies IPv4 multicast address prefixes.
		• The <b>vrf</b> keyword and <i>vrf-name</i> argument specify the name of the virtual routing and forwarding (VRF) instance to associate with subsequent IPv4 address family configuration mode commands.

	Command or Action	Purpose
Step 7	neighbor ip-address activate	Enables the neighbor to exchange prefixes for the IPv4 unicast address family with the local router.
	<pre>Example: Router(config-router-af)# neighbor 192.168.1.2 activate</pre>	
Step 8	Repeat Step 7 to activate other BGP neighbors, as required.	_
Step 9	network network-number [mask network-mask] [route-map route-map-name]	(Optional) Specifies a network as local to this autonomous system and adds it to the BGP routing table.
	Example: Router(config-router)# network 172.17.1.0 mask 255.255.255.0	<ul> <li>For exterior protocols the <b>network</b> command controls which networks are advertised. Interior protocols use the <b>network</b> command to determine where to send updates.</li> </ul>
Step 10	end	Exits address family configuration mode and returns to privileged EXEC mode.
	<pre>Example: Router(config-router-af)# end</pre>	
Step 11	show ip bgp [network] [network-mask]	(Optional) Displays the entries in the BGP routing table.
	Example: Router# show ip bgp 10.1.1.0	Note Only the syntax applicable to this task is used in this example. For more details, see the <i>Cisco IOS IP Routing: BGP Command Reference</i> .
Step 12	show ip bgp summary	(Optional) Displays the status of all BGP connections.
	Example: Router# show ip bgp summary	

## **Examples**

The following output from the **show ip bgp** command at Router B shows the BGP routing table entry for network 10.1.1.0 learned from the BGP neighbor at 192.168.1.2 in Router A in Figure 2 on page 18 with its 4-byte autonomous system number of 65536 displayed in the default asplain format.

```
RouterB# show ip bgp 10.1.1.0

BGP routing table entry for 10.1.1.0/24, version 2

Paths: (1 available, best #1)

Advertised to update-groups:

2

65536

192.168.1.2 from 192.168.1.2 (10.1.1.99)

Origin IGP, metric 0, localpref 100, valid, external, best
```

The following output from the **show ip bgp summary** command shows the 4-byte autonomous system number 65536 for the BGP neighbor 192.168.1.2 of Router A in Figure 2 on page 18 after this task has been configured on Router B:

```
RouterB# show ip bgp summary

BGP router identifier 172.17.1.99, local AS number 65538

BGP table version is 3, main routing table version 3

2 network entries using 234 bytes of memory
```

```
2 path entries using 104 bytes of memory

3/2 BGP path/bestpath attribute entries using 444 bytes of memory

1 BGP AS-PATH entries using 24 bytes of memory

0 BGP route-map cache entries using 0 bytes of memory

0 BGP filter-list cache entries using 0 bytes of memory

BGP using 806 total bytes of memory

BGP activity 2/0 prefixes, 2/0 paths, scan interval 60 secs

Neighbor V AS MsgRcvd MsgSent TblVer InQ OutQ Up/Down Stated

192.168.1.2 4 65536 6 6 3 0 0 00:01:33 1
```

#### **Troubleshooting Tips**

Use the **ping** command to verify basic network connectivity between the BGP routers.

# Modifying the Default Output and Regular Expression Match Format for 4-Byte Autonomous System Numbers

Perform this task to modify the default output format for 4-byte autonomous system numbers from asplain format to asdot notation format. The **show ip bgp summary** command is used to display the changes in output format for the 4-byte autonomous system numbers.

For more details about 4-byte autonomous system number formats, see the "BGP Autonomous System Number Formats" section on page 3.

#### **Prerequisites**

This example requires Cisco IOS XE Release 2.4 or a later release, to be running on the router.

#### **SUMMARY STEPS**

- 1. enable
- 2. show ip bgp summary
- 3. configure terminal
- **4. router bgp** *autonomous-system-number*
- 5. bgp asnotation dot
- 6. end
- 7. clear ip bgp \*
- 8. show ip bgp summary
- 9. show ip bgp regexp regexp
- 10. configure terminal
- **11. router bgp** *autonomous-system-number*
- 12. no bgp asnotation dot
- 13. end
- 14. clear ip bgp \*

#### **DETAILED STEPS**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		• Enter your password if prompted.
	Example:	
	Router> enable	
Step 2	show ip bgp summary	Displays the status of all BGP connections.
	Example: Router# show ip bgp summary	
Step 3	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 4	router bgp autonomous-system-number	Enters router configuration mode for the specified routing process.
	<pre>Example: Router(config)# router bgp 65538</pre>	• In this example, the 4-byte autonomous system number, 65538, is defined in asplain notation.
Step 5	bgp asnotation dot  Example:	Changes the default output format of BGP 4-byte autonomous system numbers from asplain (decimal values) to dot notation.
	Router(config-router)# bgp asnotation dot	Note 4-byte autonomous system numbers can be configured using either asplain format or asdot format. This command affects only the output displayed for <b>show</b> commands or the matching of regular expressions.
Step 6	end	Exits address family configuration mode and returns to privileged EXEC mode.
	<pre>Example: Router(config-router)# end</pre>	
Step 7	clear ip bgp *	Clears and resets all current BGP sessions.
	<pre>Example: Router# clear ip bgp *</pre>	• In this example, a hard reset is performed to ensure that the 4-byte autonomous system number format change is reflected in all BGP sessions.
		Note Only the syntax applicable to this task is used in this example. For more details, see the <i>Cisco IOS IP Routing: BGP Command Reference</i> .
Step 8	show ip bgp summary	Displays the status of all BGP connections.
	Example: Router# show ip bgp summary	

	Command or Action	Purpose		
Step 9	show ip bgp regexp regexp	Displays routes that match the autonomous system path regular expression.		
	<pre>Example: Router# show ip bgp regexp ^1\.0\$</pre>	• In this example, a regular expression to match a 4-byte autonomous system path is configured using asdot format.		
Step 10	configure terminal	Enters global configuration mode.		
	Example: Router# configure terminal			
Step 11	router bgp autonomous-system-number	Enters router configuration mode for the specified routing process.		
	Example: Router(config)# router bgp 65538	• In this example, the 4-byte autonomous system number, 65538, is defined in asplain notation.		
Step 12	no bgp asnotation dot	Resets the default output format of BGP 4-byte autonomous system numbers back to asplain (decimal values).		
	<pre>Example: Router(config-router)# no bgp asnotation dot</pre>	Note 4-byte autonomous system numbers can be configured using either asplain format or asdot format. This command affects only the output displayed for <b>show</b> commands or the matching of regular expressions.		
Step 13	end	Exits router configuration mode and returns to privileged EXEC mode.		
	<pre>Example: Router(config-router)# end</pre>			
Step 14	clear ip bgp *	Clears and resets all current BGP sessions.		
	<pre>Example: Router# clear ip bgp *</pre>	• In this example, a hard reset is performed to ensure that the 4-byte autonomous system number format change is reflected in all BGP sessions.		
		Note Only the syntax applicable to this task is used in this example. For more details, see the <i>Cisco IOS IP Routing: BGP Command Reference</i> .		

# **Examples**

The following output from the **show ip bgp summary** command shows the default asplain format of the 4-byte autonomous system numbers. Note the asplain format of the 4-byte autonomous system numbers, 65536 and 65550.

Router# show ip bgp summary

BGP router identifier 172.17.1.99, local AS number 65538 BGP table version is 1, main routing table version 1  $\,$ 

Neighbor	V	AS Ms	gRcvd M	sgSent	TblVer	InQ	OutQ Up/Down	Statd
192.168.1.2	4	65536	7	7	1	0	0 00:03:04	0
192.168.3.2	4	65550	4	4	1	0	0 00:00:15	0

After the **bgp asnotation dot** command is configured (followed by the **clear ip bgp** \* command to perform a hard reset of all current BGP sessions), the output is converted to asdot notation format as shown in the following output from the **show ip bgp summary** command. Note the asdot format of the 4-byte autonomous system numbers, 1.0 and 1.14 (these are the asdot conversions of the 65536 and 65550 autonomous system numbers.

```
Router# show ip bgp summary

BGP router identifier 172.17.1.99, local AS number 1.2

BGP table version is 1, main routing table version 1

Neighbor V AS MsgRcvd MsgSent TblVer InQ OutQ Up/Down Statd 192.168.1.2 4 1.0 9 9 1 0 000:04:13 0 192.168.3.2 4 1.14 6 6 1 0 000:01:24 0
```

After the **bgp asnotation dot** command is configured (followed by the **clear ip bgp** \* command to perform a hard reset of all current BGP sessions), the regular expression match format for 4-byte autonomous system paths is changed to asdot notation format. Although a 4-byte autonomous system number can be configured in a regular expression using either asplain format or asdot format, only 4-byte autonomous system numbers configured using the current default format are matched. In the first example below, the **show ip bgp regexp** command is configured with a 4-byte autonomous system number in asplain format. The match fails because the default format is currently asdot format and there is no output. In the second example using asdot format, the match passes and the information about the 4-byte autonomous system path is shown using the asdot notation.



The asdot notation uses a period which is a special character in Cisco regular expressions. To remove the special meaning, use a backslash before the period.

```
Router# show ip bgp regexp ^65536$

Router# show ip bgp regexp ^1\.0$

BGP table version is 2, local router ID is 172.17.1.99

Status codes: s suppressed, d damped, h history, * valid, > best, i - internal, r RIB-failure, S Stale

Origin codes: i - IGP, e - EGP, ? - incomplete

Network Next Hop Metric LocPrf Weight Path

*> 10.1.1.0/24 192.168.1.2 0 0 1.0 i
```

# Configuring a BGP Peer for the IPv4 VRF Address Family

Perform this optional task to configure BGP between two IPv4 routers (peers) that must exchange IPv4 VRF information because they exist in a VPN. The address family configured here is the IPv4 VRF address family and the configuration is done at Router B in Figure 3 with the neighbor 192.168.3.2 at Router E in autonomous system 50000. Remember to perform this task for any neighbor routers that are to be BGP IPv4 VRF address family peers.



This task does not show the complete configuration required for VPN routing. For some complete example configurations and an example configuration showing how to create a VRF with a route-target that uses a 4-byte autonomous system number, see the "Configuring a VRF and Setting an Extended Community Using a BGP 4-Byte Autonomous System Number: Example" section on page 84.

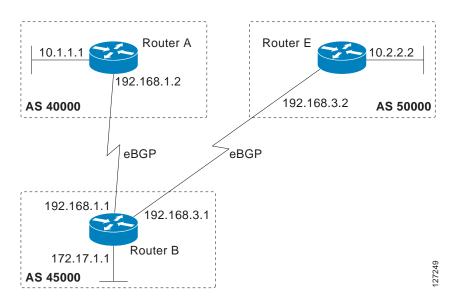


Figure 3 BGP Topology for IPv4 VRF Address Family

# **Prerequisites**

Before you perform this task, perform the Configuring a BGP Routing Process task.

- 1. enable
- 2. configure terminal
- 3. ip vrf vrf-name
- 4. **rd** route-distinguisher
- **5.** route-target {import | multicast | both} route-target-ext-community
- 6. exit
- 7. router bgp autonomous-system-number
- 8. address-family ipv4 [unicast | multicast | vrf vrf-name]
- 9. neighbor ip-address remote-as autonomous-system-number
- **10. neighbor** {ip-address | peer-group-name} **maximum-prefix** maximum [threshold] [**restart** restart-interval] [**warning-only**]
- 11. neighbor ip-address activate
- 12. end

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		• Enter your password if prompted.
	Example:	
	Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	ip vrf vrf-name	Configures a VRF routing table and enters VRF configuration mode.
	<pre>Example: Router(config)# ip vrf vpn1</pre>	• Use the <i>vrf-name</i> argument to specify a name to be assigned to the VRF.
Step 4	rd route-distinguisher	Creates routing and forwarding tables and specifies the default route distinguisher for a VPN.
	Example: Router(config-vrf)# rd 45000:5	• Use the <i>route-distinguisher</i> argument to add an 8-byte value to an IPv4 prefix to create a unique VPN IPv4 prefix.
Step 5	route-target {import   multicast   both}	Creates a route target extended community for a VRF.
	route-target-ext-community	• Use the <b>import</b> keyword to import routing information from the target VPN extended community.
	Example: Router(config-vrf)# route-target both 45000:100	• Use the <b>export</b> keyword to export routing information to the target VPN extended community.
		<ul> <li>Use the <b>both</b> keyword to import both import and export routing information to the target VPN extended community.</li> </ul>
		• Use the <i>route-target-ext-community</i> argument to add the route target extended community attributes to the VRF's list of import, export, or both (import and export) route target extended communities.
Step 6	exit	Exits VRF configuration mode and enters global configuration mode.
	<pre>Example: Router(config-vrf)# exit</pre>	
Step 7	router bgp autonomous-system-number	Enters router configuration mode for the specified routing process.
	Example: Router(config)# router bgp 45000	

	Command or Action	Purpose
Step 8	address-family ipv4 [unicast   multicast   vrf vrf-name]	Specifies the IPv4 address family and enters address family configuration mode.
	<pre>Example: Router(config-router)# address-family ipv4 vrf vpn1</pre>	• Use the <b>unicast</b> keyword to specify the IPv4 unicast address family. By default, the router is placed in configuration mode for the IPv4 unicast address family if the <b>unicast</b> keyword is not specified with the <b>address-family ipv4</b> command.
		• Use the <b>multicast</b> keyword to specify IPv4 multicast address prefixes.
		• Use the <b>vrf</b> keyword and <i>vrf-name</i> argument to specify the name of the VRF instance to associate with subsequent IPv4 address family configuration mode commands.
Step 9	neighbor ip-address remote-as autonomous-system-number	Adds the IP address of the neighbor in the specified autonomous system to the IPv4 multiprotocol BGP neighbor table of the local router.
	<pre>Example: Router(config-router-af)# neighbor 192.168.3.2 remote-as 45000</pre>	
Step 10	<pre>neighbor {ip-address   peer-group-name} maximum-prefix maximum [threshold] [restart restart-interval] [warning-only]  Example: Router(config-router-af)# neighbor 192.168.3.2 maximum-prefix 10000 warning-only</pre>	<ul> <li>Controls how many prefixes can be received from a neighbor.</li> <li>Use the <i>maximum</i> argument to specify the maximum number of prefixes allowed from the specified neighbor. The number of prefixes that can be configured is limited only by the available system resources on a router.</li> <li>Use the <i>threshold</i> argument to specify an integer representing a percentage of the maximum prefix limit at which the router starts to generate a warning message.</li> <li>Use the warning-only keyword to allow the router to generate a log message when the maximum prefix limit</li> </ul>
Step 11	neighbor ip-address activate	is exceeded, instead of terminating the peering session.  Enables the neighbor to exchange prefixes for the IPv4 VRF
	<pre>Example: Router(config-router-af)# neighbor 192.168.3.2 activate</pre>	address family with the local router.
Step 12	end	Exits address family configuration mode and enters privileged EXEC mode.
	<pre>Example: Router(config-router-af)# end</pre>	

## **Troubleshooting Tips**

Use the **ping** command to verify basic network connectivity between the BGP routers, and use the **show ip vrf** command to verify that the VRF instance has been created.


# Configuring a BGP Peer for the IPv4 VRF Address Family

Perform this optional task to configure BGP between two IPv4 routers (peers) that must exchange IPv4 VRF information because they exist in a VPN. The address family configured here is the IPv4 VRF address family and the configuration is done at Router B in Figure 4 with the neighbor 192.168.3.2 at Router E in autonomous system 50000. Remember to perform this task for any neighbor routers that are to be BGP IPv4 VRF address family peers.



This task does not show the complete configuration required for VPN routing. For some complete example configurations, see the "Additional References" section on page 93.

Figure 4 BGP Topology for IPv4 VRF Address Family

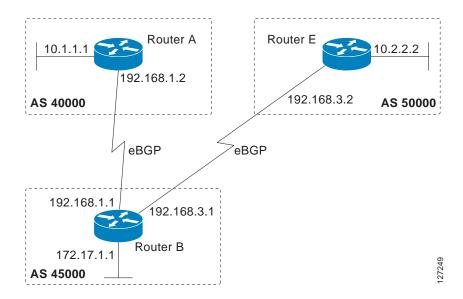

# **Prerequisites**

Before you perform this task, perform the Configuring a BGP Routing Process task.

- 1. enable
- 2. configure terminal
- 3. interface type number
- 4. **vrf forwarding** *vrf-name*
- 5. **ip address** *ip-address mask* [**secondary** [*vrf vrf-name*]]

- 6. exit
- 7. **ip vrf** vrf-name
- 8. rd route-distinguisher
- 9. route-target {import | multicast | both} route-target-ext-community
- 10. exit
- **11. router bgp** *autonomous-system-number*
- 12. address-family ipv4 [unicast | multicast | vrf vrf-name]
- **13**. **neighbor** *ip-address* **remote-as** *autonomous-system-number*
- **14. neighbor** {ip-address | peer-group-name} **maximum-prefix** maximum [threshold] [**restart** restart-interval] [**warning-only**]
- 15. neighbor ip-address activate
- 16. end

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		Enter your password if prompted.
	Example:	
<u> </u>	Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	interface type number	Enters interface configuration mode.
	<pre>Example: Router(config)# interface GigabitEthernet 1/0/0</pre>	
Step 4	vrf forwarding vrf-name	Associates a VPN VRF instance with an interface or subinterface.
	<pre>Example: Router(config-if)# vrf forwarding vpn1</pre>	
Step 5	<pre>ip address ip-address mask [secondary [vrf vrf-name]]</pre>	Sets an IP address for an interface.
	Example:	
	Router(config-if)# ip address 192.168.3.1 255.255.255.0	
Step 6	exit	Exits interface configuration mode and enters global configuration mode.
	<pre>Example: Router(config-if)# exit</pre>	

	Command or Action	Purpose
Step 7	ip vrf vrf-name	Configures a VRF routing table and enters VRF configuration mode.
	<pre>Example: Router(config)# ip vrf vpn1</pre>	• Use the <i>vrf-name</i> argument to specify a name to be assigned to the VRF.
Step 8	rd route-distinguisher	Creates routing and forwarding tables and specifies the default route distinguisher for a VPN.
	Example: Router(config-vrf)# rd 45000:5	• Use the <i>route-distinguisher</i> argument to add an 8-byte value to an IPv4 prefix to create a unique VPN IPv4 prefix.
Step 9	route-target {import   multicast   both}	Creates a route target extended community for a VRF.
	route-target-ext-community	• Use the <b>import</b> keyword to import routing information from the target VPN extended community.
	<pre>Example: Router(config-vrf)# route-target both 45000:100</pre>	• Use the <b>export</b> keyword to export routing information to the target VPN extended community.
		<ul> <li>Use the <b>both</b> keyword to import both import and export routing information to the target VPN extended community.</li> </ul>
		• Use the <i>route-target-ext-community</i> argument to add the route target extended community attributes to the VRF's list of import, export, or both (import and export) route target extended communities.
Step 10	exit	Exits VRF configuration mode and enters global configuration mode.
	<pre>Example: Router(config-vrf)# exit</pre>	
Step 11	router bgp autonomous-system-number	Enters router configuration mode for the specified routing process.
	<pre>Example: Router(config)# router bgp 45000</pre>	
Step 12	<pre>address-family ipv4 [unicast   multicast   vrf vrf-name]</pre>	Specifies the IPv4 address family and enters address family configuration mode.
	<pre>Example: Router(config-router)# address-family ipv4 vrf vpn1</pre>	• Use the unicast keyword to specify the IPv4 unicast address family. By default, the router is placed in configuration mode for the IPv4 unicast address family if the unicast keyword is not specified with the address-family ipv4 command.
		• Use the <b>multicast</b> keyword to specify IPv4 multicast address prefixes.
		• Use the <b>vrf</b> keyword and <i>vrf-name</i> argument to specify the name of the VRF instance to associate with subsequent IPv4 address family configuration mode commands.

	Command or Action	Purpose
Step 13	neighbor ip-address remote-as autonomous-system-number	Adds the IP address of the neighbor in the specified autonomous system to the IPv4 multiprotocol BGP neighbor table of the local router.
	<pre>Example: Router(config-router-af)# neighbor 192.168.3.2 remote-as 50000</pre>	
Step 14	<pre>neighbor {ip-address   peer-group-name} maximum-prefix maximum [threshold] [restart restart-interval] [warning-only]</pre>	Controls how many prefixes can be received from a neighbor.  • Use the <i>maximum</i> argument to specify the maximum
	<pre>Example: Router(config-router-af)# neighbor 192.168.3.2 maximum-prefix 10000 warning-only</pre>	number of prefixes allowed from the specified neighbor. The number of prefixes that can be configured is limited only by the available system resources on a router.
		• Use the <i>threshold</i> argument to specify an integer representing a percentage of the maximum prefix limit at which the router starts to generate a warning message.
		• Use the <b>warning-only</b> keyword to allow the router to generate a log message when the maximum prefix limit is exceeded, instead of terminating the peering session.
Step 15	neighbor ip-address activate	Enables the neighbor to exchange prefixes for the IPv4 VRF address family with the local router.
	<pre>Example: Router(config-router-af)# neighbor 192.168.3.2 activate</pre>	
Step 16	end	Exits address family configuration mode and enters privileged EXEC mode.
	<pre>Example: Router(config-router-af)# end</pre>	

# **Troubleshooting Tips**


Use the **ping vrf** command to verify basic network connectivity between the BGP routers, and use the **show ip vrf** command to verify that the VRF instance has been created.

# **Customizing a BGP Peer**

Perform this task to customize your BGP peers. Although many of the steps in this task are optional, this task demonstrates how the neighbor and address family configuration command relationships work. Using the example of the IPv4 multicast address family, neighbor address family-independent commands are configured before the IPv4 multicast address family is configured. Commands that are address family-dependent are then configured and the **exit address-family** command is shown. An optional step shows how to disable a neighbor.

The configuration in this task is done at Router B in Figure 5 and would need to be repeated with appropriate changes to the IP addresses, for example, at Router E to fully configure a BGP process between the two routers.

Figure 5 BGP Peer Topology

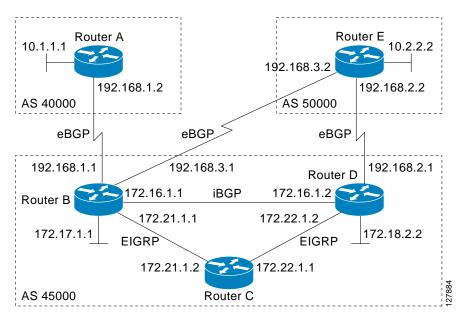

## Restrictions

By default, neighbors that are defined using the **neighbor remote-as** command in router configuration mode exchange only IPv4 unicast address prefixes. To exchange other address prefix types, such as IPv6 prefixes, neighbors must also be activated using the **neighbor activate** command in address family configuration mode for the other prefix types, such as IPv6 prefixes.

- 1. enable
- 2. configure terminal
- 3. router bgp autonomous-system-number
- 4. no bgp default ipv4-unicast
- **5. neighbor** {ip-address | peer-group-name} **remote-as** autonomous-system-number
- **6. neighbor** {*ip-address* | *peer-group-name*} **description** *text*
- 7. address-family ipv4 [unicast | multicast | vrf vrf-name]
- **8. network** *network-number* [**mask** *network-mask*] [**route-map** *route-map-name*]
- **9. neighbor** {*ip-address* | *peer-group-name*} **activate**
- **10. neighbor** {*ip-address* | *peer-group-name*} **advertisement-interval** *seconds*
- 11. **neighbor** {ip-address | peer-group-name} **default-originate** [**route-map** map-name]
- 12. exit-address-family
- 13. **neighbor** { ip-address | peer-group-name } **shutdown**
- 14. end
- 15. show ip bgp ipv4 multicast [command]

**16. show ip bgp neighbors** [neighbor-address] [received-routes | routes | advertised-routes | paths regexp | dampened-routes | received prefix-filter]]

	Command or Action	Purpose		
Step 1	enable	Enables privileged EXEC mode.		
		• Enter your password if prompted.		
	Example: Router> enable			
Step 2	configure terminal	Enters global configuration mode.		
	Example: Router# configure terminal			
Step 3	router bgp autonomous-system-number	Enters router configuration mode for the specified routing process.		
	<pre>Example: Router(config)# router bgp 45000</pre>			
Step 4	no bgp default ipv4-unicast	Disables the IPv4 unicast address family for the BGP routing process.		
	<pre>Example: Router(config-router)# no bgp default ipv4-unicast</pre>	Note Routing information for the IPv4 unicast address family is advertised by default for each BGP routing session configured with the neighbor remote-as router configuration command unless you configure the no bgp default ipv4-unicast router configuration command before configuring the neighbor remote-as command. Existing neighbor configurations are not affected.		
Step 5	<pre>neighbor {ip-address   peer-group-name} remote-as autonomous-system-number</pre>	Adds the IP address of the neighbor in the specified autonomous system to the IPv4 multiprotocol BGP neighbor table of the local router.		
	<pre>Example: Router(config-router)# neighbor 192.168.3.2 remote-as 50000</pre>			
Step 6	<pre>neighbor {ip-address   peer-group-name} description text</pre>	(Optional) Associates a text description with the specified neighbor.		
	Example: Router(config-router)# neighbor 192.168.3.2 description finance			

Command or Action	Purpose		
<pre>address-family ipv4 [unicast   multicast   vrf vrf-name]</pre>	Specifies the IPv4 address family and enters address family configuration mode.		
<pre>Example: Router(config-router)# address-family ipv4 multicast</pre>	• The <b>unicast</b> keyword specifies the IPv4 unicast address family. By default, the router is placed in configuration mode for the IPv4 unicast address family if the <b>unicast</b> keyword is not specified with the <b>address-family ipv4</b> command.		
	• The <b>multicast</b> keyword specifies IPv4 multicast address prefixes.		
	• The <b>vrf</b> keyword and <i>vrf-name</i> argument specify the name of the VRF instance to associate with subsequent IPv4 address family configuration mode commands.		
<pre>network network-number [mask network-mask] [route-map route-map-name]</pre>	(Optional) Specifies a network as local to this autonomous system and adds it to the BGP routing table.		
<pre>Example: Router(config-router-af)# network 172.17.1.0 mask 255.255.255.0</pre>	<ul> <li>For exterior protocols the <b>network</b> command controls which networks are advertised. Interior protocols use the <b>network</b> command to determine where to send updates.</li> </ul>		
<pre>neighbor {ip-address   peer-group-name} activate</pre>	Enables the exchange of information with a BGP neighbor.		
<pre>Example: Router(config-router-af)# neighbor 192.168.3.2 activate</pre>			
neighbor {ip-address   peer-group-name} advertisement-interval seconds	(Optional) Sets the minimum interval between the sending of BGP routing updates.		
<pre>Example: Router(config-router-af)# neighbor 192.168.3.2 advertisement-interval 25</pre>			
neighbor {ip-address   peer-group-name} default-originate [route-map map-name]	(Optional) Permits a BGP speaker—the local router—to send the default route 0.0.0.0 to a peer for use as a default route.		
<pre>Example: Router(config-router-af)# neighbor 192.168.3.2 default-originate</pre>			
exit-address-family	Exits address family configuration mode and enters router configuration mode.		
<pre>Example: Router(config-router-af)# exit-address-family</pre>			
neighbor {ip-address   peer-group-name}	(Optional) Disables a BGP peer or peer group.		
Example:	<b>Note</b> If you perform this step you will not be able to run either of the subsequent <b>show</b> command steps because you have disabled the neighbor.		
	address-family ipv4 [unicast   multicast   vrf vrf-name]  Example: Router(config-router)# address-family ipv4 multicast    route-map route-map-name		

	Command or Action	Purpose
Step 14	end	Exits router configuration mode and enters privileged EXEC mode.
	<pre>Example: Router(config-router)# end</pre>	
Step 15	show ip bgp ipv4 multicast [command]	(Optional) Displays IPv4 multicast database-related information.
	Example: Router# show ip bgp ipv4 multicast	• Use the <i>command</i> argument to specify any multiprotocol BGP command that is supported. To see the supported commands, use the ? prompt on the CLI.
Step 16	<pre>show ip bgp neighbors [neighbor-address] [received-routes   routes   advertised-routes   paths regexp   dampened-routes   received prefix-filter]]</pre>	(Optional) Displays information about the TCP and BGP connections to neighbors.
	Example: Router# show ip bgp neighbors 192.168.3.2	

## **Examples**

The following sample output from the **show ip bgp ipv4 multicast** command shows BGP IPv4 multicast information for Router B in Figure 5 on page 32 after this task has been configured on Router B and Router E. Note that the networks local to each router that were configured under IPv4 multicast address family appear in the output table.

```
BGP table version is 3, local router ID is 172.17.1.99

Status codes: s suppressed, d damped, h history, * valid, > best, i - internal, r RIB-failure, S Stale

Origin codes: i - IGP, e - EGP, ? - incomplete

Network

Next Hop

Metric LocPrf Weight Path

*> 10.2.2.0/24

192.168.3.2

0

0 50000 i

*> 172.17.1.0/24

0.0.0.0
```

The following partial sample output from the **show ip bgp neighbors** command for neighbor 192.168.3.2 shows general BGP information and specific BGP IPv4 multicast address family information about the neighbor. The command was entered on Router B in Figure 5 on page 32 after this task had been configured on Router B and Router E.

```
BGP neighbor is 192.168.3.2, remote AS 50000, external link
Description: finance
 BGP version 4, remote router ID 10.2.2.99
  BGP state = Established, up for 01:48:27
 Last read 00:00:26, last write 00:00:26, hold time is 120, keepalive intervals
 Configured hold time is 120, keepalive interval is 70 seconds, Minimum holdtims
 Neighbor capabilities:
   Route refresh: advertised and received (old & new)
   Address family IPv4 Unicast: advertised
   Address family IPv4 Multicast: advertised and received
 For address family: IPv4 Multicast
 BGP table version 3, neighbor version 3/0
 Output queue size : 0
 Index 1, Offset 0, Mask 0x2
 1 update-group member
    Uses NEXT_HOP attribute for MBGP NLRIs
```

```
Sent
                                           Rcvd
  Prefix activity:
                                ----
   Prefixes Current:
                                  1
                                              1 (Consumes 48 bytes)
   Prefixes Total:
                                   1
                                              1
   Implicit Withdraw:
    Explicit Withdraw:
                                   0
                                              0
                                              1
   Used as bestpath:
                                 n/a
   Used as multipath:
                                 n/a
                                  Outbound
                                              Inbound
  Local Policy Denied Prefixes:
                                         1
   Bestpath from this peer:
                                                  n/a
   Total:
                                         1
  Number of NLRIs in the update sent: max 0, min 0
  Minimum time between advertisement runs is 25 seconds
  Connections established 8; dropped 7
  Last reset 01:48:54, due to User reset
Connection state is ESTAB, I/O status: 1, unread input bytes: 0
Connection is ECN Disabled
Local host: 192.168.3.1, Local port: 13172
Foreign host: 192.168.3.2, Foreign port: 179
```

# **Removing BGP Configuration Commands Using a Redistribution Example**

BGP CLI configuration can become quite complex even in smaller BGP networks. If you need to remove any CLI configuration, you must consider all the implications of removing the CLI. Analyze the current running configuration to determine the current BGP neighbor relationships, any address family considerations, and even other routing protocols that are configured. Many BGP CLI commands affect other parts of the CLI configuration.

Perform this task to remove all the BGP configuration commands used in a redistribution of BGP routes into Enhanced Interior Gateway Routing Protocol (EIGRP). A route map can be used to match and set parameters or to filter the redistributed routes to ensure that routing loops are not created when these routes are subsequently advertised by EIGRP. When removing BGP configuration commands you must remember to remove or disable all the related commands. In this example, if the **route-map** CLI is removed then the redistribution will still occur and possibly with unexpected results as the route map filtering has been removed. Removing just the **redistribute** CLI would mean that the route map is not applied, but it would leave unused CLI in the running configuration.

For more details on BGP CLI removal, see the "BGP CLI Removal Considerations" concept in the "Cisco BGP Overview" module.

To view the redistribution configuration before and after the CLI removal, see the "Removing BGP Configuration Commands Using a Redistribution Example: Examples" section on page 87.

- 1. enable
- 2. configure terminal
- 3. no route-map map-tag
- 4. router eigrp autonomous-system-number
- **5. no redistribute** *protocol* [*as-number*]
- 6. end

# 7. show running-config

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	Enter your password if prompted.
	Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	no route-map map-name	Removes a route map from the running configuration.
	<pre>Example: Router(config)# no route-map bgp-to-eigrp</pre>	• In this example, a route map named bgp-to-eigrp is removed from the configuration.
Step 4	router eigrp autonomous-system-number	Enters router configuration mode for the specified routing process.
	<pre>Example: Router(config)# router eigrp 100</pre>	
Step 5	no redistribute protocol [as-number]	Disables the redistribution of routes from one routing domain into another routing domain.
	<pre>Example: Router(config-router)# no redistribute bgp 45000</pre>	• In this example, the configuration of the redistribution of BGP routes into the EIGRP routing process is removed from the running configuration.
		Note If a route map was included in the original redistribute command configuration, remember to remove the route-map command configuration as in Step 3 in this example task.
		Note Only the syntax applicable to this task is used in this example. For more details, see the <i>Cisco IOS IP Routing: BGP Command Reference</i> .
Step 6	end	Exits router configuration mode and enters privileged EXEC mode.
	<pre>Example: Router(config-router)# end</pre>	
Step 7	show running-config	(Optional) Displays the current running configuration on the router.
	Example: Router# show running-config	• Use this command to verify that the <b>redistribute</b> and <b>route-map</b> commands are removed from the router configuration.

# **Monitoring and Maintaining Basic BGP**

The tasks in this section are concerned with the resetting and display of information about basic BGP processes and peer relationships. Once you have defined two routers to be BGP neighbors, they will form a BGP connection and exchange routing information. If you subsequently change a BGP filter, weight, distance, version, or timer, or make a similar configuration change, you may have to reset BGP connections for the configuration change to take effect.

- Configuring Inbound Soft-Reconfiguration When Route Refresh Capability Is Missing, page 39
- Resetting and Displaying Basic BGP Information, page 42

# **Routing Policy Change Management**

Routing policies for a peer include all the configurations for elements such as route map, distribute list, prefix list, and filter list that may impact inbound or outbound routing table updates. Whenever there is a change in the routing policy, the BGP session must be soft cleared, or soft reset, for the new policy to take effect. Performing inbound reset enables the new inbound policy configured on the router to take effect. Performing outbound reset causes the new local outbound policy configured on the router to take effect without resetting the BGP session. As a new set of updates is sent during outbound policy reset, a new inbound policy of the neighbor can also take effect. This means that after changing inbound policy you must do an inbound reset on the local router or an outbound reset on the peer router. Outbound policy changes require an outbound reset on the local router or an inbound reset on the peer router.

There are two types of reset, hard reset and soft reset. Table 5 lists their advantages and disadvantages.

Table 5 Advantages and Disadvantages of Hard and Soft Resets

Type of Reset	Advantages	Disadvantages
Hard reset	No memory overhead.	The prefixes in the BGP, IP, and Forwarding Information Base (FIB) tables provided by the neighbor are lost. Not recommended.
Outbound soft reset	No configuration, no storing of routing table updates.	Does not reset inbound routing table updates.
Dynamic inbound soft reset	Does not clear the BGP session and cache.	Both BGP routers must support the route refresh capability.
	Does not require storing of routing table updates, and has no memory overhead.	Note Does not reset outbound routing table updates.
Configured inbound soft reset (uses the neighbor soft-reconfiguration router configuration command)	Can be used when both BGP routers do not support the automatic route refresh capability.  The <b>bgp soft-reconfig-backup</b> command was introduced to configure inbound soft reconfiguration for peers that do not support the route refresh capability.	Requires preconfiguration.  Stores all received (inbound) routing policy updates without modification; is memory-intensive.  Recommended only when absolutely necessary, such as when both BGP routers do not support the automatic route refresh capability.
		Note Does not reset outbound routing table updates.

Once you have defined two routers to be BGP neighbors, they will form a BGP connection and exchange routing information. If you subsequently change a BGP filter, weight, distance, version, or timer, or make a similar configuration change, you must reset BGP connections for the configuration change to take effect.

A soft reset updates the routing table for inbound and outbound routing updates. Cisco IOS XE software supports soft reset without any prior configuration. This soft reset allows the dynamic exchange of route refresh requests and routing information between BGP routers, and the subsequent readvertisement of the respective outbound routing table. There are two types of soft reset:

- When soft reset is used to generate inbound updates from a neighbor, it is called dynamic inbound soft reset.
- When soft reset is used to send a new set of updates to a neighbor, it is called outbound soft reset.

To use soft reset without preconfiguration, both BGP peers must support the soft route refresh capability, which is advertised in the OPEN message sent when the peers establish a TCP session.

## Configuring Inbound Soft-Reconfiguration When Route Refresh Capability Is Missing

Perform this task to configure inbound soft reconfiguration using the **bgp soft-reconfig-backup** command for BGP peers that do not support the route refresh capability. BGP Peers that support the route refresh capability are unaffected by the configuration of this command.

- 1. enable
- 2. configure terminal
- 3. router bgp autonomous-system-number
- 4. bgp log-neighbor-changes
- 5. bgp soft-reconfig-backup
- **6. neighbor** {*ip-address* | *peer-group-name*} **remote-as** *autonomous-system-number*
- 7. **neighbor** {ip-address | peer-group-name} **soft-reconfiguration** [**inbound**]
- 8. **neighbor** {*ip-address* | *peer-group-name*} **route-map** *map-name* {**in** | **out**}
- 9. Repeat Steps 6 through 8 for every peer that is to be configured with soft-reconfiguration inbound.
- 10. exit
- 11. route-map map-tag [permit | deny] [sequence-number]
- **12. set local-preference** *number-value*
- 13. end
- 14. **show ip bgp neighbors** [neighbor-address]
- **15**. **show ip bgp** [network] [network-mask]

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		• Enter your password if prompted.
	Example:	
040	Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	router bgp autonomous-system-number	Enters router configuration mode for the specified routing process.
	Example:	
	Router(config)# router bgp 45000	
Step 4	bgp log-neighbor-changes	Enables logging of BGP neighbor resets.
	<pre>Example: Router(config-router)# bgp log-neighbor-changes</pre>	
Step 5	bgp soft-reconfig-backup	Configures a BGP speaker to perform inbound soft
otep 5	bap bore recoming backup	reconfiguration for peers that do not support the route
	Example:	refresh capability.
	Router(config-router)# bgp soft-reconfig-backup	• This command is used to configure BGP to perform inbound soft reconfiguration for peers that do not support the route refresh capability. The configuration of this command allows you to configure BGP to store updates (soft reconfiguration) only as necessary. Peers that support the route refresh capability are unaffected
Step 6	<pre>neighbor {ip-address   peer-group-name}</pre>	by the configuration of this command.  Adds the IP address of the neighbor in the specified
этер о	remote-as autonomous-system-number	autonomous system to the IPv4 multiprotocol BGP neighbor table of the local router.
	<pre>Example: Router(config-router)# neighbor 192.168.1.2 remote-as 40000</pre>	
Step 7	<pre>neighbor {ip-address   peer-group-name} soft-reconfiguration [inbound]</pre>	Configures the Cisco IOS XE software to start storing updates.
	<pre>Example: Router(config-router)# neighbor 192.168.1.2 soft-reconfiguration inbound</pre>	<ul> <li>All the updates received from this neighbor will be stored unmodified, regardless of the inbound policy.</li> <li>When inbound soft reconfiguration is done later, the stored information will be used to generate a new set of inbound updates.</li> </ul>
Step 8	neighbor {ip-address   peer-group-name}	Applies a route map to incoming or outgoing routes.
	route-map map-name {in   out}	• In this example, the route map named LOCAL will be applied to incoming routes.
	Example:	11
	Router(config-router)# neighbor 192.168.1.2 route-map LOCAL in	

	Command or Action	Purpose
Step 9	Repeat Steps 6 through 8 for every peer that is to be configured with soft-reconfiguration inbound.	
Step 10	exit	Exits router configuration mode and enters global configuration mode.
	<pre>Example: Router(config-router)# exit</pre>	
Step 11	route-map map-name [permit   deny] [sequence-number]	Configures a route map and enters route map configuration mode.
	<pre>Example: Router(config)# route-map LOCAL permit 10</pre>	In this example, a route map named LOCAL is created.
Step 12	set local-preference number-value	Specifies a preference value for the autonomous system path.
	<pre>Example: Router(config-route-map)# set local-preference 200</pre>	• In this example, the local preference value is set to 200.
Step 13	end	Exits route map configuration mode and enters privileged EXEC mode.
	<pre>Example: Router(config-route-map)# end</pre>	
Step 14	show ip bgp neighbors [neighbor-address]	(Optional) Displays information about the TCP and BGP connections to neighbors.
	<pre>Example: Router(config-router-af)# show ip bgp neighbors 192.168.1.2</pre>	Note Only the syntax applicable to this task is used in this example. For more details, see the <i>Cisco IOS IP Routing: BGP Command Reference</i> .
Step 15	show ip bgp [network] [network-mask]	(Optional) Displays the entries in the BGP routing table.
	Example: Router# show ip bgp	Note Only the syntax applicable to this task is used in this example. For more details, see the <i>Cisco IOS IP Routing: BGP Command Reference</i> .

## **Examples**

The following partial output from the **show ip bgp neighbors** command shows information about the TCP and BGP connections to the BGP neighbor 192.168.2.1. This peer supports route refresh.

```
BGP neighbor is 192.168.1.2, remote AS 40000, external link Neighbor capabilities:
Route refresh: advertised and received(new)
```

The following partial output from the **show ip bgp neighbors** command shows information about the TCP and BGP connections to the BGP neighbor 192.168.3.2. This peer does not support route refresh so the soft-reconfig inbound paths for BGP peer 192.168.3.2 will be stored because there is no other way to update any inbound policy updates.

```
BGP neighbor is 192.168.3.2, remote AS 50000, external link Neighbor capabilities:
Route refresh: advertised
```

The following sample output from the **show ip bgp** command shows the entry for the network 172.17.1.0. Both BGP peers are advertising 172.17.1.0/24 but only the received-only path is stored for 192.168.3.2.

```
BGP routing table entry for 172.17.1.0/24, version 11
Paths: (3 available, best #3, table Default-IP-Routing-Table, RIB-failure(4))
Flag: 0x820
Advertised to update-groups:

1
50000
192.168.3.2 from 192.168.3.2 (172.17.1.0)
Origin incomplete, metric 0, localpref 200, valid, external
50000, (received-only)
192.168.3.2 from 192.168.3.2 (172.17.1.0)
Origin incomplete, metric 0, localpref 100, valid, external
40000
192.168.1.2 from 192.168.1.2 (172.16.1.0)
Origin incomplete, metric 0, localpref 200, valid, external, best
```

## **Resetting and Displaying Basic BGP Information**

Perform this task to reset and display information about basic BGP processes and peer relationships.

#### **SUMMARY STEPS**

- 1. enable
- 2. clear ip bgp {\* | autonomous-system-number | neighbor-address} [soft [in | out]
- 3. **show ip bgp** [network-address] [network-mask] [**longer-prefixes**] [**prefix-list** prefix-list-name | **route-map** route-map-name] [**shorter prefixes** mask-length]
- 4. show ip bgp neighbors [neighbor-address] [received-routes | routes | advertised-routes | paths regexp | dampened-routes | received prefix-filter]]
- 5. show ip bgp paths
- 6. show ip bgp summary

#### **DETAILED STEPS**

#### Step 1 enable

Enables privileged EXEC mode. Enter your password if prompted.

```
Router> enable
```

**Step 2** clear ip bgp {\* | autonomous-system-number | neighbor-address}} [soft [in | out]

This command is used to clear and reset BGP neighbor sessions. Specific neighbors or all peers in an autonomous system can be cleared by using the *neighbor-address* and *autonomous-system-number* arguments. If no argument is specified, this command will clear and reset all BGP neighbor sessions.



The **clear ip bgp** \* command also clears all the internal BGP structures which makes it useful as a troubleshooting tool.

**Step 3 show ip bgp** [network-address] [network-mask] [longer-prefixes] [prefix-list prefix-list-name | route-map route-map-name] [shorter prefixes mask-length]

This command is used to display all the entries in the BGP routing table. The following example displays BGP routing table information for the 10.1.1.0 network:

```
Router# show ip bgp 10.1.1.0 255.255.255.0

BGP routing table entry for 10.1.1.0/24, version 2

Paths: (1 available, best #1, table Default-IP-Routing-Table)

Advertised to update-groups:

1

40000

192.168.1.2 from 192.168.1.2 (10.1.1.99)

Origin IGP, metric 0, localpref 100, valid, external, best
```

# Step 4 show ip bgp neighbors [neighbor-address] [received-routes | routes | advertised-routes | paths regexp | dampened-routes | received prefix-filter]]

This command is used to display information about the TCP and BGP connections to neighbors.

The following example displays the routes that were advertised from Router B in Figure 4 on page 28 to its BGP neighbor 192.168.3.2 on Router E:

```
Router# show ip bgp neighbors 192.168.3.2 advertised-routes
```

```
BGP table version is 3, local router ID is 172.17.1.99

Status codes: s suppressed, d damped, h history, * valid, > best, i - internal, r RIB-failure, S Stale

Origin codes: i - IGP, e - EGP, ? - incomplete

Network Next Hop Metric LocPrf Weight Path
*> 10.1.1.0/24 192.168.1.2 0 0 40000 i
*> 172.17.1.0/24 0.0.0.0 0 32768 i

Total number of prefixes 2
```

#### Step 5 show ip bgp paths

This command is used to display all the BGP paths in the database. The following example displays BGP path information for Router B in Figure 5 on page 32:

#### Router# show ip bgp paths

```
Hash Refcount Metric Path
Address
0x2FB5DB0
          0
                    5
                          0 i
0x2FB5C90
            1
                     4
                            0 i
0x2FB5C00 1361
                    2
                           0 50000 i
0x2FB5D20 2625
                     2
                           0 40000 i
```

#### Step 6 show ip bgp summary

This command is used to display the status of all BGP connections. The following example displays BGP routing table information for Router B in Figure 5 on page 32:

#### Router# show ip bgp summary

```
BGP router identifier 172.17.1.99, local AS number 45000
BGP table version is 3, main routing table version 3
2 network entries using 234 bytes of memory
2 path entries using 104 bytes of memory
4/2 BGP path/bestpath attribute entries using 496 bytes of memory
2 BGP AS-PATH entries using 48 bytes of memory
0 BGP route-map cache entries using 0 bytes of memory
0 BGP filter-list cache entries using 0 bytes of memory
BGP using 882 total bytes of memory
BGP activity 14/10 prefixes, 16/12 paths, scan interval 60 secs
```

Neighbor	V	AS	MsgRcvd	MsgSent	TblVer	InQ	OutQ	Up/Down	State/PfxRcd
192.168.1.2	4	40000	667	672	3	0	0	00:03:49	1
192.168.3.2	4	50000	468	467	0	0	0	00:03:49	(NoNeg)

# **Aggregating Route Prefixes Using BGP**

BGP peers exchange information about local networks but this can quickly lead to large BGP routing tables. CIDR enables the creation of aggregate routes (or *supernets*) to minimize the size of routing tables. Smaller BGP routing tables can reduce the convergence time of the network and improve network performance. Aggregated routes can be configured and advertised using BGP. Some aggregations advertise only summary routes and other methods of aggregating routes allow more specific routes to be forwarded. Aggregation applies only to routes that exist in the BGP routing table. An aggregated route is forwarded if at least one more specific route of the aggregation exists in the BGP routing table. Perform one of the following tasks to aggregate routes within BGP:

- Redistributing a Static Aggregate Route into BGP, page 44
- Configuring Conditional Aggregate Routes Using BGP, page 45
- Suppressing and Unsuppressing Advertising Aggregated Routes Using BGP, page 47
- Conditionally Advertising BGP Routes, page 50

## **Redistributing a Static Aggregate Route into BGP**

Use this task to redistribute a static aggregate route into BGP. A static aggregate route is configured and then redistributed into the BGP routing table. The static route must be configured to point to interface null 0 and the prefix should be a superset of known BGP routes. When a router receives a BGP packet it will use the more specific BGP routes. If the route is not found in the BGP routing table, then the packet will be forwarded to null 0 and discarded.

- 1. enable
- 2. configure terminal
- 3. **ip route** prefix mask {ip-address | interface-type interface-number [ip-address]} [distance] [name] [**permanent** | **track** number] [**tag** tag]
- 4. router bgp autonomous-system-number
- 5. redistribute static
- 6. end

#### **DETAILED STEPS**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		Enter your password if prompted.
	Example:	
	Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	<pre>ip route prefix mask {ip-address   interface-type interface-number [ip-address]} [distance] [name] [permanent   track number] [tag tag]</pre>	Creates a static route.
	Example: Router(config)# ip route 172.0.0.0 255.0.0.0 null 0	
Step 4	router bgp autonomous-system-number	Enters router configuration mode for the specified routing process.
	Example:	
	Router(config)# router bgp 45000	
Step 5	redistribute static	Redistributes routes into the BGP routing table.
	<pre>Example: Router(config-router)# redistribute static</pre>	
Step 6	end	Exits router configuration mode and returns to privileged EXEC mode.
	Example:	
	Router(config-router)# end	
·	redistribute static  Example: Router(config-router)# redistribute static end  Example:	Redistributes routes into the BGP routing table.  Exits router configuration mode and returns to privileged

# **Configuring Conditional Aggregate Routes Using BGP**

Use this task to create an aggregate route entry in the BGP routing table when at least one specific route falls into the specified range. The aggregate route is advertised as originating from your autonomous system.

## **AS-SET Generation**

AS-SET information can be generated when BGP routes are aggregated using the **aggregate-address** command. The path advertised for such a route is an AS-SET consisting of all the elements, including the communities, contained in all the paths that are being summarized. If the AS-PATHs to be aggregated are identical, only the AS-PATH is advertised. The ATOMIC-AGGREGATE attribute, set by default for the **aggregate-address** command, is not added to the AS-SET.

## **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. router bgp autonomous-system-number
- 4. aggregate-address address mask [as-set]
- 5. end

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		• Enter your password if prompted.
	Example:	
040	Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	router bgp autonomous-system-number	Enters router configuration mode for the specified routing process.
	<pre>Example: Router(config)# router bgp 45000</pre>	
Step 4	aggregate-address address mask [as-set]	Creates an aggregate entry in a BGP routing table.
		• A specified route must exist in the BGP table.
	Example: Router(config-router)# aggregate-address 172.0.0.0 255.0.0.0 as-set	• Use the <b>aggregate-address</b> command with no keywords to create an aggregate entry if any more-specific BGP routes are available that fall in the specified range.
		• Use the <b>as-set</b> keyword to specify that the path advertised for this route is an AS-SET. Do not use the <b>as-set</b> keyword when aggregating many paths because this route is withdrawn and updated every time the reachability information for the aggregated route changes.
		Note Only partial syntax is used in this example. For more details, see the <i>Cisco IOS IP Routing: BGP Command Reference</i> .
Step 5	end	Exits router configuration mode and enters privileged EXEC mode.
	<pre>Example: Router(config-router)# end</pre>	

# **Suppressing and Unsuppressing Advertising Aggregated Routes Using BGP**

Use this task to create an aggregate route, suppress the advertisement of routes using BGP, and subsequently unsuppress the advertisement of routes. Routes that are suppressed are not advertised to any neighbors, but it is possible to unsuppress routes that were previously suppressed to specific neighbors.

## **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. router bgp autonomous-system-number
- 4. neighbor ip-address remote-as autonomous-system-number
- 5. aggregate-address address mask [summary-only] or aggregate-address address mask [suppress-map map-name]
- **6. neighbor** {*ip-address* | *peer-group-name*} **unsuppress-map** *map-name*
- 7. end

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		Enter your password if prompted.
	Example:	
	Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	router bgp autonomous-system-number	Enters router configuration mode for the specified routing process.
	Example:	
	Router(config)# router bgp 45000	
Step 4	neighbor ip-address remote-as autonomous-system-number	Adds the IP address of the neighbor in the specified autonomous system to the IPv4 multiprotocol BGP neighbor table of the local router.
	Example:	
	Router(config-router)# neighbor 192.168.1.2 remote-as 40000	

	Command or Action	Purpose
Step 5	aggregate-address address mask [summary-only]	Creates an aggregate route.
	Of  aggregate-address address mask [suppress-map map-name]	• Use the optional <b>summary-only</b> keyword to create the aggregate route (for example, 10.*.*.*) and also suppresses advertisements of more-specific routes to all neighbors.
	Example: Router(config-router)# aggregate-address 172.0.0.0 255.0.0.0 summary-only Or Router(config-router)# aggregate-address 172.0.0.0 255.0.0.0 suppress-map map1	• Use the optional <b>suppress-map</b> keyword to create the aggregate route but suppress advertisement of specified routes. Routes that are suppressed are not advertised to any neighbors. You can use the <b>match</b> clauses of route maps to selectively suppress some more-specific routes of the aggregate and leave others unsuppressed. IP access lists and autonomous system path access lists <b>match</b> clauses are supported.
		Note Only partial syntax is used in this example. For more details, see the Cisco IOS IP Routing: BGP Command Reference.
Step 6	neighbor {ip-address   peer-group-name} unsuppress-map map-name	(Optional) Selectively advertises routes previously suppressed by the <b>aggregate-address</b> command.
	<pre>Example: Router(config-router)# neighbor 192.168.1.2 unsuppress map1</pre>	• In this example, the routes previously suppressed in Step 5 are advertised to neighbor 192.168.1.2.
Step 7	end	Exits router configuration mode and enters privileged EXEC mode.
	<pre>Example: Router(config-router)# end</pre>	

# **Suppressing Inactive Route Advertisement Using BGP**

Perform this task to suppress the advertisement of inactive routes by BGP. The **bgp suppress-inactive** command configures BGP to not advertise inactive routes to any BGP peer. A BGP routing process can advertise routes that are not installed in the RIB to BGP peers by default. A route that is not installed into the RIB is an inactive route. Inactive route advertisement can occur, for example, when routes are advertised through common route aggregation.

Inactive route advertisements can be suppressed to provide more consistent data forwarding. This feature can be configured on a per IPv4 address family basis. For example, when specifying the maximum number of routes that can be configured in a VRF with the **maximum routes** global configuration command, you also suppress inactive route advertisement to prevent inactive routes from being accepted into the VRF after route limit has been exceeded.

## **Prerequisites**

This task assumes that BGP is enabled and that peering has been established.

#### **Restrictions**

Inactive route suppression can be configured only under the IPv4 address family or under a default IPv4 general session.

## **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- **3. router bgp** *as-number*
- $\textbf{4.} \quad \textbf{address-family} \ \{\textbf{ipv4} \ [\textbf{mdt} \ | \ \textbf{multicast} \ | \ \textbf{unicast} \ [\textbf{vrf} \ \textit{vrf-name}] \ | \ \textbf{vrf-name}] \ | \ \textbf{vpnv4} \ [\textbf{unicast}]\}$
- 5. bgp suppress-inactive
- 6. end
- 7. show ip bgp rib-failure

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		• Enter your password if prompted.
	Example: Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	router bgp as-number	Enters router configuration mode and creates a BGP routing process.
	Example: Router(config)# router bgp 45000	
Step 4	<pre>address-family {ipv4 [mdt   multicast   unicast [vrf vrf-name]   vrf vrf-name]   vpnv4 [unicast]}</pre>	Enter address family configuration mode to configure BGP peers to accept address family specific configurations.
	Example: Router(config-router)# address-family ipv4 unicast	• The example creates an IPv4 unicast address family session.
Step 5	bgp suppress-inactive	Suppresses BGP advertising of inactive routes.
		BGP advertises inactive routes by default.
	<pre>Example: Router(config-router-af)# bgp suppress-inactive</pre>	• Entering the <b>no</b> form of this command reenables the advertisement of inactive routes.
Step 6	end	Exits address family configuration mode and enters privileged EXEC mode.
	<pre>Example: Router(config-router-af)# end</pre>	
Step 7	show ip bgp rib-failure	(Optional) Displays BGP routes that are not installed in the RIB.
	Example: Router# show ip bgp rib-failure	

#### **Examples**

The following example shows output from the **show ip bgp rib-failure** command displaying routes that are not installed in the RIB. The output shows that the displayed routes were not installed because a route or routes with a better administrative distance already exist in the RIB.

Router# show ip bgp rib-failure

Network	Next Hop	RIB-failure	RIB-NH Matches
10.1.15.0/24	10.1.35.5	Higher admin distance	n/a
10.1.16.0/24	10.1.15.1	Higher admin distance	n/a

# **Conditionally Advertising BGP Routes**

Perform this task to conditionally advertise selected BGP routes. The routes or prefixes that will be conditionally advertised are defined in two route maps, an advertise map and an exist map or nonexist map. The route map associated with the exist map or nonexist map specifies the prefix that the BGP speaker will track. The route map associated with the advertise map specifies the prefix that will be advertised to the specified neighbor when the condition is met. When an exist map is configured, the condition is met when the prefix exists in both the advertise map and the exist map. When a nonexist map is configured, the condition is met when the prefix exists in the advertise map but does not exist in the nonexist map. If the condition is not met, the route is withdrawn and conditional advertisement does not occur. All routes that may be dynamically advertised or not advertised need to exist in the BGP routing table for conditional advertisement to occur. These routes are referenced from an access list or an IP prefix list.

- 1. enable
- 2. configure terminal
- 3. router bgp autonomous-system-number
- 4. **neighbor** {ip-address | peer-group-name} **remote-as** autonomous-system-number
- 5. **neighbor** ip-address **advertise-map** map-name { **exist-map** map-name } map-name }
- 6. exit
- 7. route-map map-tag [permit | deny] [sequence-number]
- **8.** match ip address {access-list-number [access-list-number... | access-list-name...] | access-list-name [access-list-number... | access-list-name] | prefix-list prefix-list-name [prefix-list-name...]}
- **9.** Repeat Steps 7 and 8 for every prefix to be tracked.
- 10. exit
- 11. access-list access-list-number {deny | permit} source [source-wildcard] [log]
- **12.** Repeat Step 11 for every access list to be created.
- 13. exit

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		• Enter your password if prompted.
	Example: Router> enable	
Step 2	configure terminal	Enters global configuration mode.
Otop 2		Enters grobal configuration mode.
	Example: Router# configure terminal	
Step 3	router bgp autonomous-system-number	Enters router configuration mode for the specified routing process.
	Example: Router(config)# router bgp 45000	
Step 4	<pre>neighbor {ip-address   peer-group-name} remote-as autonomous-system-number</pre>	Adds the IP address of the neighbor in the specified autonomous system to the IPv4 multiprotocol BGP neighbor table of the local router.
	<pre>Example: Router(config-router)# neighbor 192.168.1.2 remote-as 40000</pre>	
Step 5	<pre>neighbor ip-address advertise-map map-name {exist-map map-name   non-exist-map map-name}</pre>	Installs a BGP route as a locally originated route in the BGP routing table for conditional advertisement, and specifies the name of the route map that will be compared to the advertise map.
	Example: Router(config-router)# neighbor 192.168.1.2 advertise-map mapl exist-map map2	If the condition is met and a match occurs between the advertise map and exist map, the route will be advertised.
		• If no match occurs, then the condition is not met, and the route is withdrawn.
Step 6	exit	Exits router configuration mode and enters global configuration mode.
	<pre>Example: Router(config-router)# exit</pre>	
Step 7	<pre>route-map map-tag [permit   deny] [sequence-number]</pre>	Configures a route map and enters route map configuration mode.
	<pre>Example: Router(config)# route-map map1 permit 10</pre>	• In this example, a route map named map1 is created.
Step 8	<pre>match ip address {access-list-number [access-list-number   access-list-name]   access-list-name [access-list-number  access-list-name]   prefix-list prefix-list-name [prefix-list-name]}</pre>	Configures the route map to match a prefix that is permitted by a standard access list, an extended access list, or a prefix list.  • In this example, the route map is configured to match a
	Example:	prefix permitted by access list 1.
Ston 0	Router(config-route-map)# match ip address 1	
Step 9	Repeat Steps 7and 8 for every prefix to be tracked.	

	Command or Action	Purpose
Step 10	exit	Exits route map configuration mode and enters global configuration mode.
	<pre>Example: Router(config-route-map)# exit</pre>	
Step 11	<pre>access-list access-list-number {deny   permit} source [source-wildcard] [log]  Example: Router(config)# access-list 1 permit 172.17.0.0</pre>	Configures a standard access list.  • In this example, access list 1 permits advertising of the 172.17.0.0. prefix depending on other conditions set by the neighbor advertise-map command.
Step 12	Repeat Step 11 for every access list to be created.	_
Step 13	exit	Exits global configuration mode and returns to privileged EXEC mode.
	<pre>Example: Router(config)# exit</pre>	

# **Originating BGP Routes**

Route aggregation is useful to minimize the size of the BGP table but there are situations when you want to add more specific prefixes to the BGP table. Route aggregation can hide more specific routes. Using the **network** command as shown in "Configuring a BGP Routing Process" section on page 10 originates routes, and the following optional tasks originate BGP routes for the BGP table for different situations.

- Advertising a Default Route Using BGP, page 52
- Conditionally Injecting BGP Routes, page 54
- Originating BGP Routes Using Backdoor Routes, page 59

# **Advertising a Default Route Using BGP**

Perform this task to advertise a default route to BGP peers. The default route is locally originated. A default route can be useful to simplify configuration or to prevent the router from using too many system resources. If the router is peered with an Internet service provider (ISP), the ISP will carry full routing tables, so configuring a default route into the ISP network saves resources at the local router.

- 1. enable
- 2. configure terminal
- **3. ip prefix-list** *list-name* [**seq** *seq-value*] {**deny** *network/length* | **permit** *network/length*} [**ge** *ge-value*] [**le** *le-value*]
- 4. route-map map-tag [permit | deny] [sequence-number]
- **5. match ip address** { access-list-number [access-list-number... | access-list-name...] | access-list-name [access-list-number... | access-list-name] | **prefix-list** prefix-list-name [prefix-list-name...]}
- 6. exit
- 7. router bgp autonomous-system-number

- 8. neighbor {ip-address | peer-group-name} default-originate [route-map map-name]
- 9. end

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	<pre>Example: Router&gt; enable</pre>	Enter your password if prompted.
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	<pre>ip prefix-list list-name [seq seq-value] {deny network/length   permit network/length} [ge ge-value] [le le-value]  Example: Router(config)# ip prefix-list DEFAULT permit 10.1.1.0/24</pre>	<ul> <li>Configures an IP prefix list.</li> <li>In this example, prefix list DEFAULT permits advertising of the 10.1.1.0/24. prefix depending on a match set by the match ip address command.</li> </ul>
Step 4	<pre>route-map map-tag [permit   deny] [sequence-number]</pre> Example:	Configures a route map and enters route map configuration mode.  • In this example, a route map named ROUTE is created.
Step 5	<pre>Router(config)# route-map ROUTE  match ip address {access-list-number [access-list-number   access-list-name]   access-list-name [access-list-number   access-list-name]   prefix-list prefix-list-name [prefix-list-name]}</pre> Framele:	Configures the route map to match a prefix that is permitted by a standard access list, an extended access list, or a prefix list.  • In this example, the route map is configured to match a prefix permitted by prefix list DEFAULT.
	<pre>Example: Router(config-route-map)# match ip address prefix-list DEFAULT</pre>	
Step 6	exit	Exits route map configuration mode and enters global configuration mode.
	<pre>Example: Router(config-route-map)# exit</pre>	
Step 7	router bgp autonomous-system-number	Enters router configuration mode for the specified routing process.
	Example: Router(config)# router bgp 40000	

	Command or Action	Purpose
Step 8	<pre>neighbor {ip-address   peer-group-name} default-originate [route-map map-name]</pre>	(Optional) Permits a BGP speaker—the local router—to send the default route 0.0.0.0 to a peer for use as a default route.
	<pre>Example: Router(config-router)# neighbor 192.168.3.2 default-originate</pre>	
Step 9	end	Exits router configuration mode and enters privileged EXEC mode.
	<pre>Example: Router(config-router)# end</pre>	

## **Troubleshooting Tips**

Use the **show ip route** command on the receiving BGP peer (not on the local router) to verify that the default route has been set. In the output, verify that a line similar to the following showing the default route 0.0.0.0 is present:

B\* 0.0.0.0/0 [20/0] via 192.168.1.2, 00:03:10

## **Conditionally Injecting BGP Routes**

Use this task to inject more specific prefixes into a BGP routing table over less specific prefixes that were selected through normal route aggregation. These more specific prefixes can be used to provide a finer granularity of traffic engineering or administrative control than is possible with aggregated routes.

## **Conditional BGP Route Injection**

Routes that are advertised through the BGP are commonly aggregated to minimize the number of routes that are used and reduce the size of global routing tables. However, common route aggregation can obscure more specific routing information that is more accurate but not necessary to forward packets to their destinations. Routing accuracy is obscured by common route aggregation because a prefix that represents multiple addresses or hosts over a large topological area cannot be accurately reflected in a single route. Cisco IOS XE software provides several methods in which you can originate a prefix into BGP. The existing methods include redistribution and using the **network** or **aggregate-address** command. These methods assume the existence of more specific routing information (matching the route to be originated) in either the routing table or the BGP table.

BGP conditional route injection allows you to originate a prefix into a BGP routing table without the corresponding match. This feature allows more specific routes to be generated based on administrative policy or traffic engineering information in order to provide more specific control over the forwarding of packets to these more specific routes, which are injected into the BGP routing table only if the configured conditions are met. Enabling this feature will allow you to improve the accuracy of common route aggregation by conditionally injecting or replacing less specific prefixes with more specific prefixes. Only prefixes that are equal to or more specific than the original prefix may be injected. BGP conditional route injection is enabled with the **bgp inject-map exist-map** command and uses two route maps (inject map and exist map) to install one (or more) more specific prefixes into a BGP routing table. The exist-map specifies the prefixes that the BGP speaker will track. The inject map defines the prefixes that will be created and installed into the local BGP table.

## **Prerequisites**

This task assumes that the IGP is already configured for the BGP peers.

## **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. router bgp autonomous-system-number
- 4. bgp inject-map inject-map-name exist-map exist-map-name [copy-attributes]
- 5. exit
- 6. route-map map-tag [permit | deny] [sequence-number]
- 7. match ip address {access-list-number [access-list-number... | access-list-name...] | access-list-name [access-list-number... | access-list-name] | prefix-list prefix-list-name [prefix-list-name...]}
- **8. match ip route-source** {access-list-number | access-list-name} [access-list-number...| access-list-name...]
- 9. exit
- 10. route-map map-tag [permit | deny] [sequence-number]
- **11. set ip address** { access-list-number [access-list-number... | access-list-name...] | access-list-name [access-list-number... | access-list-name [prefix-list-name [prefix-list-name]]
- **12. set community** {*community-number* [**additive**] [*well-known-community*] | **none**}
- 13. exit
- **14. ip prefix-list** *list-name* [**seq** *seq-value*] {**deny** *network/length* | **permit** *network/length*} [**ge** *ge-value*] [**le** *le-value*]
- **15**. Repeat Step 14 for every prefix list to be created.
- 16. exit
- 17. show ip bgp injected-paths

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		Enter your password if prompted.
	Example: Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	router bgp autonomous-system-number	Enters router configuration mode for the specified routing process.
	Example: Router(config)# router bgp 40000	

	Command or Action	Purpose
Step 4	bgp inject-map inject-map-name exist-map exist-map-name [copy-attributes]	Specifies the inject map and the exist map for conditional route injection.
	<pre>Example: Router(config-router)# bgp inject-map ORIGINATE exist-map LEARNED_PATH</pre>	• Use the <b>copy-attributes</b> keyword to specify that the injected route inherit the attributes of the aggregate route.
Step 5	exit	Exits router configuration mode and enters global configuration mode.
	<pre>Example: Router(config-router)# exit</pre>	
Step 6	<pre>route-map map-tag [permit   deny] [sequence-number]</pre>	Configures a route map and enters route map configuration mode.
	<pre>Example: Router(config)# route-map LEARNED_PATH permit 10</pre>	
Step 7	<pre>match ip address {access-list-number [access-list-number   access-list-name]   access-list-name [access-list-number   access-list-name]   prefix-list prefix-list-name [prefix-list-name]}</pre>	Specifies the aggregate route to which a more specific route will be injected.  • In this example, the prefix list named SOURCE is used to redistribute the source of the route.
	<pre>Example: Router(config-route-map)# match ip address prefix-list SOURCE</pre>	
Step 8	<pre>match ip route-source {access-list-number   access-list-name} [access-list-number  access-list-name]</pre>	Specifies the match conditions for redistributing the source of the route.
	<pre>Example: Router(config-route-map)# match ip route-source prefix-list ROUTE_SOURCE</pre>	• In this example, the prefix list named ROUTE_SOURCE is used to redistribute the source of the route.
		Note The route source is the neighbor address that is configured with the neighbor remote-as command.  The tracked prefix must come from this neighbor in order for conditional route injection to occur.
Step 9	exit	Exits route map configuration mode and enters global configuration mode.
	<pre>Example: Router(config-route-map)# exit</pre>	
Step 10	<pre>route-map map-tag [permit   deny] [sequence-number]</pre>	Configures a route map and enters route map configuration mode.
	Example: Router(config)# route-map ORIGINATE permit 10	

	Command or Action	Purpose
Step 11	set ip address {access-list-number [access-list-number   access-list-name]	Specifies the routes to be injected.  • In this example, the prefix list named originated_routes
	<pre>access-list-name [access-list-number   access-list-name]   prefix-list prefix-list-name [prefix-list-name]}</pre>	is used to redistribute the source of the route.
	<pre>Example: Router(config-route-map)# set ip address prefix-list ORIGINATED_ROUTES</pre>	
Step 12	<pre>set community {community-number [additive] [well-known-community]   none}</pre>	Sets the BGP community attribute of the injected route.
	Example: Router(config-route-map)# set community 14616:555 additive	
Step 13	exit	Exits route map configuration mode and enters global configuration mode.
	<pre>Example: Router(config-route-map)# exit</pre>	
Step 14	<pre>ip prefix-list list-name [seq seq-value] {deny network/length   permit network/length} [ge ge-value] [le le-value]</pre>	<ul> <li>Configures a prefix list.</li> <li>In this example, the prefix list named SOURCE is configured to permit routes from network 10.1.1.0/24.</li> </ul>
	<pre>Example: Router(config)# ip prefix-list SOURCE permit 10.1.1.0/24</pre>	
Step 15	Repeat Step 14 for every prefix list to be created.	_
Step 16	exit	Exits global configuration mode and returns to privileged EXEC mode.
	<pre>Example: Router(config)# exit</pre>	
Step 17	show ip bgp injected-paths	(Optional) Displays information about injected paths.
	Example: Router# show ip bgp injected-paths	

## **Examples**

The following sample output is similar to the output that will be displayed when the **show ip bgp injected-paths** command is entered:

Router# show ip bgp injected-paths

```
BGP table version is 11, local router ID is 10.0.0.1
Status codes:s suppressed, d damped, h history, * valid, > best, i - internal
Origin codes:i - IGP, e - EGP, ? - incomplete

Network

Next Hop

Metric LocPrf Weight Path
*> 172.16.0.0
10.0.0.2
0 ?
*> 172.17.0.0/16
10.0.0.2
```

## **Troubleshooting Tips**

BGP conditional route injection is based on the injection of a more specific prefix into the BGP routing table when a less specific prefix is present. If conditional route injection is not working properly, verify the following:

- If conditional route injection is configured but does not occur, verify the existence of the aggregate prefix in the BGP routing table. The existence (or not) of the tracked prefix in the BGP routing table can be verified with the **show ip bgp** command.
- If the aggregate prefix exists but conditional route injection does not occur, verify that the aggregate prefix is being received from the correct neighbor and the prefix list identifying that neighbor is a /32 match.
- Verify the injection (or not) of the more specific prefix using the show ip bgp injected-paths
  command.
- Verify that the prefix that is being injected is not outside of the scope of the aggregate prefix.
- Ensure that the inject route map is configured with the **set ip address** command and not the **match ip address** command.

## **Originating BGP Routes Using Backdoor Routes**

Perform this task to indicate to border routers which networks are reachable using a backdoor route. A backdoor network is treated the same as a local network except that it is not advertised.

#### **BGP Backdoor Routes**

In a BGP network topology with two border routers using eBGP to communicate to a number of different autonomous systems, using eBGP to communicate between the two border routers may not be the most efficient routing method. In Figure 6 Router B as a BGP speaker will receive a route to Router D through eBGP but this route will traverse at least two autonomous systems. Router B and Router D are also connected through an EIGRP network (any IGP can be used here) and this route has a shorter path. EIGRP routes, however, have a default administrative distance of 90 and eBGP routes have a default administrative distance of 20 so BGP will prefer the eBGP route. Changing the default administrative distances is not recommended because changing the administrative distance may lead to routing loops. To cause BGP to prefer the EIGRP route you can use the **network backdoor** command. BGP treats the network specified by the network backdoor command as a locally assigned network, except that it does not advertise the specified network in BGP updates. In Figure 6 this means that Router B will communicate to Router D using the shorter EIGRP route instead of the longer eBGP route.

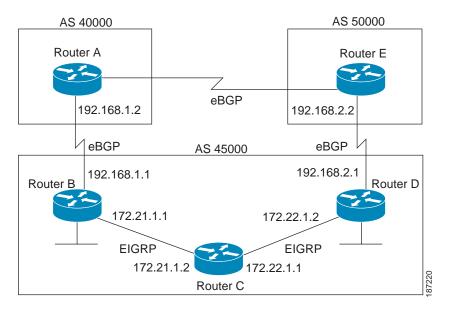


Figure 6 BGP Backdoor Route Topology

#### **Prerequisites**

This task assumes that the IGP—EIGRP in this example—is already configured for the BGP peers. The configuration is done at Router B in Figure 6 and the BGP peer is Router D.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. router bgp autonomous-system-number
- 4. **neighbor** ip-address **remote-as** autonomous-system-number
- 5. network ip-address backdoor
- 6. end

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		• Enter your password if prompted.
	Example:	
	Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Router# configure terminal	

	Command or Action	Purpose
Step 3	router bgp autonomous-system-number	Enters router configuration mode for the specified routing process.
	<pre>Example: Router(config)# router bgp 45000</pre>	
Step 4	neighbor ip-address remote-as autonomous-system-number	Adds the IP address of the neighbor in the specified autonomous system to the multiprotocol BGP neighbor table of the local router.
	<pre>Example: Router(config-router)# neighbor 172.22.1.2 remote-as 45000</pre>	• In this example, the peer is an internal peer as the autonomous system number specified for the peer is the same number specified in Step 3.
Step 5	network ip-address backdoor	Indicates a network that is reachable through a backdoor route.
	<pre>Example: Router(config-router)# network 172.21.1.0 backdoor</pre>	
Step 6	end	Exits router configuration mode and returns to privileged EXEC mode.
	<pre>Example: Router(config-router)# end</pre>	

### **Configuring a BGP Peer Group**

This task explains how to configure a BGP peer group. Often, in a BGP speaker, many neighbors are configured with the same update policies (that is, the same outbound route maps, distribute lists, filter lists, update source, and so on). Neighbors with the same update policies can be grouped into peer groups to simplify configuration and, more importantly, to make updating more efficient. When you have many peers, this approach is highly recommended.

The three steps to configure a BGP peer group, described in the following task, are as follows:

- Creating the peer group
- Assigning options to the peer group
- Making neighbors members of the peer group

You can disable a BGP peer or peer group without removing all the configuration information using the **neighbor shutdown** router configuration command.

#### **Restrictions**

By default, neighbors that are defined using the **neighbor remote-as** command in router configuration mode exchange only IPv4 unicast address prefixes. To exchange other address prefix types, such as IPv6 prefixes, neighbors must also be activated using the **neighbor activate** command in address family configuration mode for the other prefix types.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal

- **3. router bgp** *autonomous-system-number*
- 4. **neighbor** *peer-group-name* **peer-group**
- **5. neighbor** *ip-address* **remote-as** *autonomous-system-number*
- **6. neighbor** *ip-address* **peer-group** *peer-group-name*
- 7. address-family ipv4 [unicast | multicast | vrf vrf-name]
- 8. neighbor peer-group-name activate
- 9. **neighbor** *ip-address* **peer-group** *peer-group-name*
- 10. end

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		• Enter your password if prompted.
	Example:	
040	Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Router# configure terminal	
Step 3	router bgp autonomous-system-number	Enters router configuration mode for the specified routing process.
	Example:	
	Router(config)# router bgp 40000	
Step 4	neighbor peer-group-name peer-group	Creates a BGP peer group.
	Example:	
	Router(config-router)# neighbor fingroup peer-group	
Step 5	neighbor ip-address remote-as	Adds the IP address of the neighbor in the specified
	autonomous-system-number	autonomous system to the multiprotocol BGP neighbor table of the local router.
	Example:	
	Router(config-router)# neighbor 192.168.1.1 remote-as 45000	
Step 6	neighbor ip-address peer-group peer-group-name	Assigns the IP address of a BGP neighbor to a peer group.
	Example:	
	Router(config-router)# neighbor 192.168.1.1 peer-group fingroup	

	Command or Action	Purpose
Step 7	address-family ipv4 [unicast   multicast   vrf vrf-name]	Specifies the IPv4 address family and enters address family configuration mode.
	Example:	• The <b>unicast</b> keyword specifies the IPv4 unicast address family. This is the default.
	Router(config-router)# address-family ipv4 multicast	• The <b>multicast</b> keyword specifies that IPv4 multicast address prefixes will be exchanged.
		• The <b>vrf</b> keyword and <i>vrf-name</i> argument specify that IPv4 VRF instance information will be exchanged.
Step 8	neighbor peer-group-name activate	Enables the neighbor to exchange prefixes for the IPv4 address family with the local router.
	<pre>Example: Router(config-router-af)# neighbor fingroup activate</pre>	Note By default, neighbors that are defined using the neighbor remote-as command in router configuration mode exchange only unicast address prefixes. To allow BGP to exchange other address prefix types, such as multicast that is configured in this example, neighbors must also be activated using the neighbor activate command.
Step 9	neighbor ip-address peer-group peer-group-name	Assigns the IP address of a BGP neighbor to a peer group.
	<pre>Example: Router(config-router-af)# neighbor 192.168.1.1 peer-group fingroup</pre>	
Step 10	end	Exits address family configuration mode and returns to privileged EXEC mode.
	<pre>Example: Router(config-router-af)# end</pre>	

### **Configuring Peer Session Templates**

The following tasks create and configure a peer session template:

- Configuring a Basic Peer Session Template, page 64
- Configuring Peer Session Template Inheritance with the inherit peer-session Command, page 67
- Configuring Peer Session Template Inheritance with the neighbor inherit peer-session Command, page 69

### **Inheritance in Peer Templates**

The inheritance capability is a key component of peer template operation. Inheritance in a peer template is similar to node and tree structures commonly found in general computing, for example, file and directory trees. A peer template can directly or indirectly inherit the configuration from another peer template. The directly inherited peer template represents the tree in the structure. The indirectly inherited peer template represents a node in the tree. Because each node also supports inheritance, branches can be created that apply the configurations of all indirectly inherited peer templates within a chain back to the directly inherited peer template or the source of the tree. This structure eliminates the need to repeat configuration statements that are commonly reapplied to groups of neighbors because

common configuration statements can be applied once and then indirectly inherited by peer templates that are applied to neighbor groups with common configurations. Configuration statements that are duplicated separately within a node and a tree are filtered out at the source of the tree by the directly inherited template. A directly inherited template will overwrite any indirectly inherited statements that are duplicated in the directly inherited template.

Inheritance expands the scalability and flexibility of neighbor configuration by allowing you to chain together peer templates configurations to create simple configurations that inherit common configuration statements or complex configurations that apply very specific configuration statements along with common inherited configurations. Specific details about configuring inheritance in peer session templates and peer policy templates are provided in the following sections.

When BGP neighbors use inherited peer templates it can be difficult to determine which policies are associated with a specific template. In Cisco IOS XE Release 2.1 and later releases, the **detail** keyword was added to the **show ip bgp template peer-policy** command to display the detailed configuration of local and inherited policies associated with a specific template.

### **Configuring a Basic Peer Session Template**

Perform this task to create a basic peer session template with general BGP routing session commands that can be applied to many neighbors using one of the next two tasks.



The commands in Step 5 and 6 are optional and could be replaced with any supported general session commands.

#### **Peer Session Templates**

Peer session templates are used to group and apply the configuration of general session commands to groups of neighbors that share session configuration elements. General session commands that are common for neighbors that are configured in different address families can be configured within the same peer session template. Peer session templates are created and configured in peer session configuration mode. Only general session commands can be configured in a peer session template. The following general session commands are supported by peer session templates:

- description
- disable-connected-check
- ebgp-multihop
- exit peer-session
- inherit peer-session
- local-as
- password
- remote-as
- shutdown
- timers
- translate-update
- update-source
- version

General session commands can be configured once in a peer session template and then applied to many neighbors through the direct application of a peer session template or through indirect inheritance from a peer session template. The configuration of peer session templates simplifies the configuration of general session commands that are commonly applied to all neighbors within an autonomous system.

Peer session templates support direct and indirect inheritance. A peer can be configured with only one peer session template at a time, and that peer session template can contain only one indirectly inherited peer session template.



If you attempt to configure more than one inherit statement with a single peer session template, an error message will be displayed.

This behavior allows a BGP neighbor to directly inherit only one session template and indirectly inherit up to seven additional peer session templates. This allows you to apply up to a maximum of eight peer session configurations to a neighbor: the configuration from the directly inherited peer session template and the configurations from up to seven indirectly inherited peer session templates. Inherited peer session configurations are evaluated first and applied starting with the last node in the branch and ending with the directly applied peer session template configuration at the of the source of the tree. The directly applied peer session template will have priority over inherited peer session template configurations. Any configuration statements that are duplicated in inherited peer session templates will be overwritten by the directly applied peer session template. So, if a general session command is reapplied with a different value, the subsequent value will have priority and overwrite the previous value that was configured in the indirectly inherited template. The following examples illustrate the use of this feature.

In the following example, the general session command **remote-as 1** is applied in the peer session template named SESSION-TEMPLATE-ONE:

```
template peer-session SESSION-TEMPLATE-ONE
  remote-as 1
  exit peer-session
```

Peer session templates support only general session commands. BGP policy configuration commands that are configured only for a specific address family or NLRI configuration mode are configured with peer policy templates.

#### Restrictions

The following restrictions apply to the peer session templates:

- A peer session template can directly inherit only one session template, and each inherited session template can also contain one indirectly inherited session template. So, a neighbor or neighbor group can be configured with only one directly applied peer session template and seven additional indirectly inherited peer session templates.
- A BGP neighbor cannot be configured to work with both peer groups and peer templates. A BGP
  neighbor can be configured to belong only to a peer group or to inherit policies only from peer
  templates.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. router bgp autonomous-system-number
- 4. **template peer-session** session-template-name

- **5. remote-as** *autonomous-system-number*
- **6. timers** *keepalive-interval hold-time*
- **7. end**
- 8. show ip bgp template peer-session [session-template-name]

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example: Router> enable	Enter your password if prompted.
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	router bgp autonomous-system-number	Enters router configuration mode and creates a BGP routing process.
	<pre>Example: Router(config)# router bgp 101</pre>	
Step 4	template peer-session session-template-name	Enters session-template configuration mode and creates a peer session template.
	<pre>Example: Router(config-router)# template peer-session INTERNAL-BGP</pre>	
Step 5	remote-as autonomous-system-number	(Optional) Configures peering with a remote neighbor in the specified autonomous system.
	<pre>Example: Router(config-router-stmp)# remote-as 202</pre>	Note Any supported general session command can be used here. For a list of the supported commands, see the "Peer Session Templates" section on page 64.
Step 6	timers keepalive-interval hold-time	(Optional) Configures BGP keepalive and hold timers.
		• The hold time must be at least twice the keepalive time.
	Example: Router(config-router-stmp)# timers 30 300	Note Any supported general session command can be used here. For a list of the supported commands, see the "Peer Session Templates" section on page 64.
Step 7	end	Exits session-template configuration mode and returns to privileged EXEC mode.
	<pre>Example: Router(config-router)# end</pre>	
Step 8	<pre>show ip bgp template peer-session [session-template-name]</pre>	<ul> <li>Displays locally configured peer session templates.</li> <li>The output can be filtered to display a single peer policy template with the session-template-name</li> </ul>
	Example: Router# show ip bgp template peer-session	argument. This command also supports all standard output modifiers.

#### What to Do Next

After the peer session template is created, the configuration of the peer session template can be inherited or applied by another peer session template with the **inherit peer-session** or **neighbor inherit peer-session** command.

### Configuring Peer Session Template Inheritance with the inherit peer-session Command

This task configures peer session template inheritance with the **inherit peer-session** command. It creates and configures a peer session template and allows it to inherit a configuration from another peer session template.



The commands in Steps 5 and 6 are optional and could be replaced with any supported general session commands.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. router bgp autonomous-system-number
- 4. template peer-session session-template-name
- 5. description text-string
- **6. update-source** *interface-type interface-number*
- 7. inherit peer-session session-template-name
- 8. end
- **9. show ip bgp template peer-session** [session-template-name]

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		• Enter your password if prompted.
	Example: Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	router bgp autonomous-system-number	Enters router configuration mode and creates a BGP routing process.
	<pre>Example: Router(config)# router bgp 101</pre>	

	Command or Action	Purpose
Step 4	template peer-session session-template-name	Enter session-template configuration mode and creates a peer session template.
	<pre>Example: Router(config-router)# template peer-session CORE1</pre>	
Step 5	description text-string	(Optional) Configures a description.
		• The text string can be up to 80 characters.
	<pre>Example: Router(config-router-stmp)# description CORE-123</pre>	Note Any supported general session command can be used here. For a list of the supported commands, see the "Peer Session Templates" section on page 64.
Step 6	update-source interface-type interface-number	(Optional) Configures a router to select a specific source or interface to receive routing table updates.
	<pre>Example: Router(config-router-stmp)# update-source loopback 1</pre>	• The example uses a loopback interface. The advantage to this configuration is that the loopback interface is not as susceptible to the effects of a flapping interface.
		Note Any supported general session command can be used here. For a list of the supported commands, see the "Peer Session Templates" section on page 64.
Step 7	inherit peer-session session-template-name	Configures this peer session template to inherit the configuration of another peer session template.
	<pre>Example: Router(config-router-stmp)# inherit peer-session INTERNAL-BGP</pre>	• The example configures this peer session template to inherit the configuration from INTERNAL-BGP. This template can be applied to a neighbor, and the configuration INTERNAL-BGP will be applied indirectly. No additional peer session templates can be directly applied. However, the directly inherited template can contain up to seven indirectly inherited peer session templates.
Step 8	end	Exits session-template configuration mode and enters privileged EXEC mode.
	<pre>Example: Router(config-router)# end</pre>	
Step 9	<pre>show ip bgp template peer-session [session-template-name]</pre>	<ul> <li>Displays locally configured peer session templates.</li> <li>The output can be filtered to display a single peer policy template with the optional</li> </ul>
	Example:	session-template-name argument. This command also
	Router# show ip bgp template peer-session	supports all standard output modifiers.

#### What to Do Next

After the peer session template is created, the configuration of the peer session template can be inherited or applied by another peer session template with the **inherit peer-session** or **neighbor inherit peer-session** command.

### Configuring Peer Session Template Inheritance with the neighbor inherit peer-session Command

This task configures a router to send a peer session template to a neighbor to inherit the configuration from the specified peer session template with the **neighbor inherit peer-session** command. Use the following steps to send a peer session template configuration to a neighbor to inherit:

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. router bgp autonomous-system-number
- 4. **neighbor** ip-address **remote-as** autonomous-system-number
- 5. neighbor ip-address inherit peer-session session-template-name
- end
- 7. **show ip bgp template peer-session** [session-template-name]

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		• Enter your password if prompted.
	Example:	
	Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Router# configure terminal	
Step 3	router bgp autonomous-system-number	Enters router configuration mode and creates a BGP routing process.
	Example:	
	Router(config)# router bgp 101	
Step 4	neighbor ip-address remote-as	Configures a peering session with the specified neighbor.
	autonomous-system-number	• The explicit <b>remote-as</b> statement is required for the neighbor inherit statement in Step 5 to work. If a
	Example:	peering is not configured, the specified neighbor in
	Router(config-router)# neighbor 172.16.0.1 remote-as 202	Step 5 will not accept the session template.

	Command or Action	Purpose
Step 5	neighbor ip-address inherit peer-session session-template-name	Sends a peer session template to a neighbor so that the neighbor can inherit the configuration.
Stop 6	Example: Router(config-router)# neighbor 172.16.0.1 inherit peer-session CORE1	• The example configures a router to send the peer session template named CORE1 to the 172.16.0.1 neighbor to inherit. This template can be applied to a neighbor, and if another peer session template is indirectly inherited in CORE1, the indirectly inherited configuration will also be applied. No additional peer session templates can be directly applied. However, the directly inherited template can also inherit up to seven additional indirectly inherited peer session templates.
Step 6	end	Exits router configuration mode and enters privileged EXEC mode.
	<pre>Example: Router(config-router)# end</pre>	
Step 7	show ip bgp template peer-session [session-template-name]	Displays locally configured peer session templates.  • The output can be filtered to display a single peer
	Example: Router# show ip bgp template peer-session	policy template with the optional session-template-name argument. This command also supports all standard output modifiers.

#### What to Do Next

To create a peer policy template, go to the "Configuring Peer Policy Templates" section on page 70.

## **Configuring Peer Policy Templates**

The following tasks create and configure a peer policy template:

- Configuring Basic Peer Policy Templates, page 70
- Configuring Peer Policy Template Inheritance with the inherit peer-policy Command, page 73
- Configuring Peer Policy Template Inheritance with the neighbor inherit peer-policy Command, page 76

### **Configuring Basic Peer Policy Templates**

Perform this task to create a basic peer policy template with BGP policy configuration commands that can be applied to many neighbors using one of the next two tasks.



The commands in Steps 5 through 7 are optional and could be replaced with any supported BGP policy configuration commands.

#### **Peer Policy Templates**

Peer policy templates are used to group and apply the configuration of commands that are applied within specific address families and NLRI configuration mode. Peer policy templates are created and configured in peer policy configuration mode. BGP policy commands that are configured for specific address families are configured in a peer policy template. The following BGP policy commands are supported by peer policy templates:

- · advertisement-interval
- allowas-in
- as-override
- capability
- default-originate
- distribute-list
- dmzlink-bw
- exit-peer-policy
- filter-list
- inherit peer-policy
- maximum-prefix
- next-hop-self
- next-hop-unchanged
- prefix-list
- remove-private-as
- route-map
- route-reflector-client
- send-community
- send-label
- soft-reconfiguration
- unsuppress-map
- weight

Peer policy templates are used to configure BGP policy commands that are configured for neighbors that belong to specific address families. Like peer session templates, peer policy templates are configured once and then applied to many neighbors through the direct application of a peer policy template or through inheritance from peer policy templates. The configuration of peer policy templates simplifies the configuration of BGP policy commands that are applied to all neighbors within an autonomous system.

Like peer session templates, a peer policy template supports inheritance. However, there are minor differences. A directly applied peer policy template can directly or indirectly inherit configurations from up to seven peer policy templates. So, a total of eight peer policy templates can be applied to a neighbor or neighbor group. Inherited peer policy templates are configured with sequence numbers like route maps. An inherited peer policy template, like a route map, is evaluated starting with the inherit statement with the lowest sequence number and ending with the highest sequence number. However, there is a

difference; a peer policy template will not collapse like a route map. Every sequence is evaluated, and if a BGP policy command is reapplied with a different value, it will overwrite any previous value from a lower sequence number.

The directly applied peer policy template and the inherit statement with the highest sequence number will always have priority and be applied last. Commands that are reapplied in subsequent peer templates will always overwrite the previous values. This behavior is designed to allow you to apply common policy configurations to large neighbor groups and specific policy configurations only to certain neighbors and neighbor groups without duplicating individual policy configuration commands.

Peer policy templates support only policy configuration commands. BGP policy configuration commands that are configured only for specific address families are configured with peer policy templates.

The configuration of peer policy templates simplifies and improves the flexibility of BGP configuration. A specific policy can be configured once and referenced many times. Because a peer policy supports up to eight levels of inheritance, very specific and very complex BGP policies can also be created.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. router bgp autonomous-system-number
- 4. template peer-policy policy-template-name
- 5. maximum-prefix prefix-limit [threshold] [restart restart-interval | warning-only]
- **6. weight** *weight-value*
- 7. **prefix-list** *prefix-list-name* {**in** | **out**}
- 8. exit-peer-policy

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		• Enter your password if prompted.
	Example: Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	router bgp autonomous-system-number	Enters router configuration mode and creates a BGP routing process.
	Example: Router(config)# router bgp 45000	

	Command or Action	Purpose
Step 4	template peer-policy policy-template-name	Enters policy-template configuration mode and creates a peer policy template.
	<pre>Example: Router(config-router)# template peer-policy GLOBAL</pre>	
Step 5	<pre>maximum-prefix prefix-limit [threshold] [restart restart-interval   warning-only]</pre>	(Optional) Configures the maximum number of prefixes that a neighbor will accept from this peer.
	<pre>Example: Router(config-router-ptmp)# maximum-prefix 10000</pre>	Note Any supported BGP policy configuration command can be used here. For a list of the supported commands, see the "Peer Policy Templates" section on page 71.
Step 6	weight weight-value	(Optional) Sets the default weight for routes that are sent from this neighbor.
	<pre>Example: Router(config-router-ptmp)# weight 300</pre>	Note Any supported BGP policy configuration command can be used here. For a list of the supported commands, see the "Peer Policy Templates" section on page 71.
Step 7	<pre>prefix-list prefix-list-name {in   out}</pre>	(Optional) Filters prefixes that are received by the router or sent from the router.
	<pre>Example: Router(config-router-ptmp)# prefix-list</pre>	• The prefix list in the example filters inbound internal addresses.
	NO-MARKETING in	Note Any supported BGP policy configuration command can be used here. For a list of the supported commands, see the "Peer Policy Templates" section on page 71.
Step 8	end	Exits policy-template configuration mode and returns to privileged EXEC mode.
	<pre>Example: Router(config-router-ptmp)# end</pre>	

#### What to Do Next

After the peer policy template is created, the configuration of the peer policy template can be inherited or applied by another peer policy template. For more details about peer policy inheritance see the "Configuring Peer Policy Template Inheritance with the inherit peer-policy Command" section on page 73 or the "Configuring Peer Policy Template Inheritance with the neighbor inherit peer-policy Command" section on page 76.

### Configuring Peer Policy Template Inheritance with the inherit peer-policy Command

This task configures peer policy template inheritance using the **inherit peer-policy** command. It creates and configure a peer policy template and allows it to inherit a configuration from another peer policy template.

When BGP neighbors use inherited peer templates, it can be difficult to determine which policies are associated with a specific template. In Cisco IOS XE Release 2.1 and later releases, the **detail** keyword was added to the **show ip bgp template peer-policy** command to display the detailed configuration of local and inherited policies associated with a specific template.



The commands in Steps 5 and 6 are optional and could be replaced with any supported BGP policy configuration commands.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- **3. router bgp** *autonomous-system-number*
- 4. template peer-policy policy-template-name
- **5.** route-map map-name {in | out}
- **6. inherit peer-policy** *policy-template-name sequence-number*
- 7. end
- 8. show ip bgp template peer-policy [policy-template-name [detail]]

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		Enter your password if prompted.
	Example: Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	router bgp autonomous-system-number	Enters router configuration mode and creates a BGP routing process.
	Example: Router(config)# router bgp 45000	
Step 4	template peer-policy policy-template-name	Enter policy-template configuration mode and creates a peer policy template.
	<pre>Example: Router(config-router)# template peer-policy NETWORK1</pre>	
Step 5	route-map map-name {in   out}	(Optional) Applies the specified route map to inbound or outbound routes.
	<pre>Example: Router(config-router-ptmp)# route-map ROUTE in</pre>	Note Any supported BGP policy configuration command can be used here. For a list of the supported commands, see the "Peer Policy Templates" section on page 71.

	Command or Action	Purpose
Step 6	<pre>inherit peer-policy policy-template-name sequence-number</pre>	(Optional) Configures the peer policy template to inherit the configuration of another peer policy template.
	<pre>Example: Router(config-router-ptmp)# inherit peer-policy GLOBAL 10</pre>	• The <i>sequence-number</i> argument sets the order in which the peer policy template is evaluated. Like a route map sequence number, the lowest sequence number is evaluated first.
		• The example configures this peer policy template to inherit the configuration from GLOBAL. If the template created in these steps is applied to a neighbor, the configuration GLOBAL will also be inherited and applied indirectly. Up to six additional peer policy templates can be indirectly inherited from GLOBAL for a total of eight directly applied and indirectly inherited peer policy templates.
		<ul> <li>This template in the example will be evaluated first if no other templates are configured with a lower sequence number.</li> </ul>
Step 7	end	Exits policy-template configuration mode and returns to privileged EXEC mode.
	<pre>Example: Router(config-router-ptmp)# end</pre>	
Step 8	<pre>show ip bgp template peer-policy [policy-template-name [detail]]  Example: Router# show ip bgp template peer-policy</pre>	Displays locally configured peer policy templates.
		• The output can be filtered to display a single peer policy template with the <i>policy-template-name</i> argument. This command also supports all standard output modifiers.
	NETWORK1 detail	• Use the <b>detail</b> keyword to display detailed policy information.

### **Examples**

The following sample output of the **show ip bgp template peer-policy** command with the **detail** keyword displays details of the policy named NETWORK1. The output in this example shows that the GLOBAL template was inherited. Details of route map and prefix list configurations are also displayed.

Router# show ip bgp template peer-policy NETWORK1 detail

```
Template:NETWORK1, index:2.
Local policies:0x1, Inherited polices:0x80840
This template inherits:
   GLOBAL, index:1, seq_no:10, flags:0x1
Locally configured policies:
   route-map ROUTE in
Inherited policies:
   prefix-list NO-MARKETING in
   weight 300
   maximum-prefix 10000

Template:NETWORK1 <detail>
Locally configured policies:
   route-map ROUTE in
```

```
route-map ROUTE, permit, sequence 10
  Match clauses:
    ip address prefix-lists: DEFAULT
ip prefix-list DEFAULT: 1 entries
    seq 5 permit 10.1.1.0/24

Set clauses:
  Policy routing matches: 0 packets, 0 bytes

Inherited policies:
  prefix-list NO-MARKETING in
ip prefix-list NO-MARKETING: 1 entries
  seq 5 deny 10.2.2.0/24
```

### Configuring Peer Policy Template Inheritance with the neighbor inherit peer-policy Command

This task configures a router to send a peer policy template to a neighbor to inherit using the **neighbor inherit peer-policy** command. Perform the following steps to send a peer policy template configuration to a neighbor to inherit.

When BGP neighbors use multiple levels of peer templates, it can be difficult to determine which policies are applied to the neighbor. In Cisco IOS XE Release 2.1 and later releases, the **policy** and **detail** keywords were added to the **show ip bgp neighbors** command to display the inherited policies and policies configured directly on the specified neighbor.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. router bgp autonomous-system-number
- 4. **neighbor** ip-address **remote-as** autonomous-system-number
- 5. address-family ipv4 [multicast | unicast | vrf vrf-name]
- **6. neighbor** *ip-address* **inherit peer-policy** *policy-template-name*
- 7. end
- 8. show ip bgp neighbors [ip-address [policy [detail]]]

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		• Enter your password if prompted.
	Example:	
	Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Router# configure terminal	

	Command or Action	Purpose
Step 3	router bgp autonomous-system-number	Enters router configuration mode and creates a BGP routing process.
	Example: Router(config)# router bgp 45000	
Step 4	neighbor ip-address remote-as autonomous-system-number	<ul> <li>Configures a peering session with the specified neighbor.</li> <li>The explicit remote-as statement is required for the neighbor inherit statement in Step 6 to work. If a</li> </ul>
	Example: Router(config-router)# neighbor 192.168.1.2 remote-as 40000	peering is not configured, the specified neighbor in Step 6 will not accept the session template.
tep 5	address-family ipv4 [multicast   unicast   vrf vrf-name]	Enters address family configuration mode to configure a neighbor to accept address family-specific command configurations.
	<pre>Example: Router(config-router)# address-family ipv4 unicast</pre>	
ep 6	neighbor ip-address inherit peer-policy policy-template-name	Sends a peer policy template to a neighbor so that the neighbor can inherit the configuration.
	<pre>Example: Router(config-router-af)# neighbor 192.168.1.2 inherit peer-policy GLOBAL</pre>	• The example configures a router to send the peer policy template named GLOBAL to the 192.168.1.2 neighbor to inherit. This template can be applied to a neighbor, and if another peer policy template is indirectly inherited from GLOBAL, the indirectly inherited configuration will also be applied. Up to seven additional peer policy templates can be indirectly inherited from GLOBAL.
ер 7	end  Example:	Exits address family configuration mode and returns to privileged EXEC mode.
	Router(config-router-af)# end	
ep 8	show ip bgp neighbors [ip-address [policy [detail]]]	Displays locally configured peer policy templates.
	Example: Router# show ip bgp neighbors 192.168.1.2 policy	• The output can be filtered to display a single peer policy template with the <i>policy-template-name</i> argument. This command also supports all standard output modifiers.
		• Use the <b>policy</b> keyword to display the policies applied to this neighbor per address family.
		Use the <b>detail</b> keyword to display detailed policy information.
		Note Only the syntax required for this task is shown. For more details, see the <i>Cisco IOS IP Routing: BGP Command Reference</i> .

#### **Examples**

The following sample output shows the policies applied to the neighbor at 192.168.1.2. The output displays both inherited policies and policies configured on the neighbor device. Inherited policies are policies that the neighbor inherits from a peer-group or a peer-policy template.

```
Router# show ip bgp neighbors 192.168.1.2 policy

Neighbor: 192.168.1.2, Address-Family: IPv4 Unicast
Locally configured policies:
  route-map ROUTE in
Inherited polices:
  prefix-list NO-MARKETING in
  route-map ROUTE in
  weight 300
  maximum-prefix 10000
```

## **Monitoring and Maintaining BGP Dynamic Update Groups**

Use this task to clear and display information about the processing of dynamic BGP update groups. The performance of BGP update message generation is improved with the use of BGP update groups. With the configuration of the BGP peer templates and the support of the dynamic BGP update groups, the network operator no longer needs to configure peer groups in BGP and can benefit from improved configuration flexibility and system performance. For more information about using BGP peer templates, see the "Configuring Peer Session Templates" section on page 63 and the "Configuring Peer Policy Templates" section on page 70.

### **BGP Dynamic Update Group Configuration**

In Cisco IOS XE Release 2.1 and later releases, an algorithm was introduced that dynamically calculates and optimizes update groups of neighbors that share the same outbound policies and can share the same update messages. No configuration is required to enable the BGP dynamic update group and the algorithm runs automatically. When a change to outbound policy occurs, the router automatically recalculates update group memberships and applies the changes by triggering an outbound soft reset after a 1-minute timer expires. This behavior is designed to provide the network operator with time to change the configuration if a mistake is made. You can manually enable an outbound soft reset before the timer expires by entering the **clear ip bgp** *ip-address* **soft out** command.

For the best optimization of BGP update group generation, we recommend that the network operator keeps outbound routing policy the same for neighbors that have similar outbound policies.

#### **SUMMARY STEPS**

- 1. enable
- 2. **clear ip bgp update-group** [index-group | ip-address]
- **3. show ip bgp replication** [index-group | ip-address]
- 4. show ip bgp update-group [index-group | ip-address] [summary]

#### **DETAILED STEPS**

#### Step 1 enable

Enables privileged EXEC mode. Enter your password if prompted.

Router> enable

#### **Step 2 clear ip bgp update-group** [index-group | ip-address]

This command is used to clear BGP update membership and recalculate BGP update groups. Specific update groups can be cleared by using the *index-group* argument. The range of update group index numbers is from 1 to 4294967295. Specific neighbors can be cleared by using the *ip-address* argument. If no argument is specified, this command will clear and recalculate all BGP update groups.

The following example clears the membership of neighbor 192.168.2.2 from an update group:

```
Router# clear ip bgp update-group 192.168.2.2
```

#### **Step 3 show ip bgp replication** [index-group | ip-address]

This command displays BGP update group replication statistics. Specific update group replication statistics can be displayed by using the *index-group* argument. The range of update group index numbers is from 1 to 4294967295. Specific update group replication statistics can be displayed by using the *ip-address* argument. If no argument is specified, this command will display replication statistics for all update groups.

0

0

0

The following example displays update group replication information for all BGP neighbors:

```
Router# show ip bgp replication
```

2 internal

BGP Total Messages Formatted/Enqueued: 0/0

```
Index Type Members Leader MsgFmt MsgRepl Csize Qsize 1 internal 1 192.168.1.2 0 0 0 0
```

192.168.3.2

#### **Step 4 show ip bgp update-group** [index-group | ip-address] [summary]

2.

This command is used to display information about BGP update groups. Information about specific update group statistics can be displayed by using the *index-group* argument. The range of update group index numbers is from 1 to 4294967295. Information about specific update groups can be displayed by using the *ip-address* argument. If no argument is specified, this command will display statistics for all update groups. Summary information can be displayed by using the **summary** keyword.

The following example displays update group information for all neighbors:

```
Router# show ip bgp update-group
```

```
BGP version 4 update-group 1, external, Address Family: IPv4 Unicast BGP Update version: 8/0, messages 0
Update messages formatted 11, replicated 3
Number of NLRIs in the update sent: max 1, min 0
Minimum time between advertisement runs is 30 seconds
Has 2 members (* indicates the members currently being sent updates): 192.168.1.2
192.168.3.2
```

### **Troubleshooting Tips**

Use the **debug ip bgp groups** command to display information about the processing of BGP update groups. Information can be displayed for all update groups, an individual update group, or a specific BGP neighbor. The output of this command can be very verbose. This command should not be deployed in a production network unless your are troubleshooting a problem.

# Configuration Examples for Configuring a Basic BGP Network

This section contains the following examples:

- Configuring a BGP Process and Customizing Peers: Example, page 80
- Configuring a BGP Routing Process and Peers Using 4-Byte Autonomous System Numbers: Example, page 81
- Configuring a VRF and Setting an Extended Community Using a BGP 4-Byte Autonomous System Number: Example, page 84
- NLRI to AFI Configuration: Example, page 85
- Removing BGP Configuration Commands Using a Redistribution Example: Examples, page 87
- BGP Soft Reset: Examples, page 88
- Resetting BGP Peers Using 4-Byte Autonomous System Numbers: Examples, page 88
- Aggregating Prefixes Using BGP: Examples, page 89
- Configuring a BGP Peer Group: Example, page 90
- Configuring Peer Session Templates: Examples, page 90
- Configuring Peer Policy Templates: Examples, page 91
- Monitoring and Maintaining BGP Dynamic Update Peer-Groups: Examples, page 91

### **Configuring a BGP Process and Customizing Peers: Example**

The following example shows the configuration for Router B in Figure 5 on page 32 with a BGP process configured with two neighbor peers (at Router A and at Router E) in separate autonomous systems. IPv4 unicast routes are exchanged with both peers and IPv4 multicast routes are exchanged with the BGP peer at Router E.

#### **Router B**

```
router bgp 45000
bgp router-id 172.17.1.99
no bgp default ipv4-unicast
bgp log-neighbor-changes
timers bgp 70 120
neighbor 192.168.1.2 remote-as 40000
neighbor 192.168.3.2 remote-as 50000
neighbor 192.168.3.2 description finance!
address-family ipv4
neighbor 192.168.1.2 activate
neighbor 192.168.3.2 activate
no auto-summary
no synchronization
```

```
network 172.17.1.0 mask 255.255.255.0 exit-address-family!

address-family ipv4 multicast neighbor 192.168.3.2 activate neighbor 192.168.3.2 advertisement-interval 25 no auto-summary no synchronization network 172.17.1.0 mask 255.255.255.0 exit-address-family
```


# Configuring a BGP Routing Process and Peers Using 4-Byte Autonomous System Numbers: Example

- Asplain Default Format in Cisco IOS XE Release 2.4 and Later Releases, page 81
- Asdot Default Format in Cisco IOS XE Release 2.3, page 83

#### Asplain Default Format in Cisco IOS XE Release 2.4 and Later Releases

The following example is available in Cisco IOS XE Release 2.4 and later releases, and shows the configuration for Router A, Router B, and Router E in Figure 7 with a BGP process configured between three neighbor peers (at Router A, at Router B, and at Router E) in separate 4-byte autonomous systems configured using asplain notation. IPv4 unicast routes are exchanged with all peers.

Figure 7 BGP Peers Using 4-Byte Autonomous System Numbers in Asplain Format

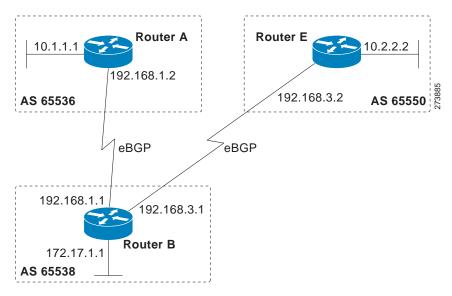

#### **Router A**

```
router bgp 65536
bgp router-id 10.1.1.99
no bgp default ipv4-unicast
bgp fast-external-fallover
bgp log-neighbor-changes
timers bgp 70 120
neighbor 192.168.1.1 remote-as 65538
!
address-family ipv4
neighbor 192.168.1.1 activate
```

```
no auto-summary
no synchronization
network 10.1.1.0 mask 255.255.255.0
exit-address-family
```

#### **Router B**

```
router bgp 65538
bgp router-id 172.17.1.99
no bgp default ipv4-unicast
bgp fast-external-fallover
bgp log-neighbor-changes
 timers bgp 70 120
neighbor 192.168.1.2 remote-as 65536
 neighbor 192.168.3.2 remote-as 65550
neighbor 192.168.3.2 description finance
 address-family ipv4
 neighbor 192.168.1.2 activate
 neighbor 192.168.3.2 activate
 no auto-summary
  no synchronization
  network 172.17.1.0 mask 255.255.255.0
  exit-address-family
```


#### **Router E**

```
router bgp 65550
bgp router-id 10.2.2.99
no bgp default ipv4-unicast
bgp fast-external-fallover
bgp log-neighbor-changes
timers bgp 70 120
neighbor 192.168.3.1 remote-as 65538
!
address-family ipv4
neighbor 192.168.3.1 activate
no auto-summary
no synchronization
network 10.2.2.0 mask 255.255.255.0
exit-address-family
```

#### Asdot Default Format in Cisco IOS XE Release 2.3

The following example of the asdot format is available in Cisco IOS XE Release 2.3, and shows how to create the configuration for Router A, Router B, and Router E in Figure 8 with a BGP process configured between three neighbor peers (at Router A, at Router B, and at Router E) in separate 4-byte autonomous systems configured using the default asdot format. IPv4 unicast routes are exchanged with all peers.

Figure 8 BGP Peers Using 4-Byte Autonomous System Numbers in Asdot Format

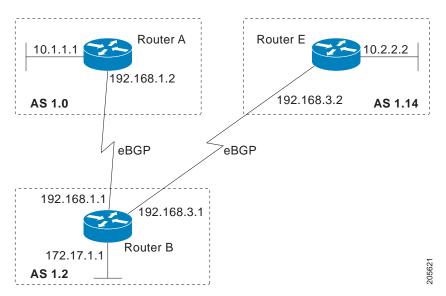

#### **Router A**

```
router bgp 1.0
bgp router-id 10.1.1.99
no bgp default ipv4-unicast
bgp fast-external-fallover
bgp log-neighbor-changes
timers bgp 70 120
neighbor 192.168.1.1 remote-as 1.2
!
address-family ipv4
neighbor 192.168.1.1 activate
no auto-summary
no synchronization
network 10.1.1.0 mask 255.255.255.0
exit-address-family
```

#### **Router B**

```
router bgp 1.2
bgp router-id 172.17.1.99
no bgp default ipv4-unicast
bgp fast-external-fallover
bgp log-neighbor-changes
timers bgp 70 120
neighbor 192.168.1.2 remote-as 1.0
neighbor 192.168.3.2 remote-as 1.14
neighbor 192.168.3.2 description finance
!
address-family ipv4
neighbor 192.168.1.2 activate
neighbor 192.168.3.2 activate
```

```
no auto-summary
no synchronization
network 172.17.1.0 mask 255.255.255.0
exit-address-family
```

#### **Router E**

```
router bgp 1.14
bgp router-id 10.2.2.99
no bgp default ipv4-unicast
bgp fast-external-fallover
bgp log-neighbor-changes
timers bgp 70 120
neighbor 192.168.3.1 remote-as 1.2
!
address-family ipv4
neighbor 192.168.3.1 activate
no auto-summary
no synchronization
network 10.2.2.0 mask 255.255.255.0
exit-address-family
```

# Configuring a VRF and Setting an Extended Community Using a BGP 4-Byte Autonomous System Number: Example

- Asplain Default Format in Cisco IOS XE Release 2.4 and Later Releases, page 84
- Asdot Default Format in Cisco IOS XE Release 2.3, page 84

#### Asplain Default Format in Cisco IOS XE Release 2.4 and Later Releases

The following example is available in Cisco IOS XE Release 2.4 and later releases, and shows how to create a VRF with a route-target that uses a 4-byte autonomous system number, 65537, and how to set the route target to extended community value 65537:100 for routes that are permitted by the route map.

```
ip vrf vpn_red
  rd 64500:100
  route-target both 65537:100
  exit
route-map red_map permit 10
  set extcommunity rt 65537:100
  end
```

After the configuration is completed, use the **show route-map** command to verify that the extended community is set to the route target that contains the 4-byte autonomous system number of 65537.

```
RouterB# show route-map red_map
```

```
route-map red_map, permit, sequence 10
Match clauses:
  Set clauses:
    extended community RT:65537:100
Policy routing matches: 0 packets, 0 bytes
```

#### Asdot Default Format in Cisco IOS XE Release 2.3

The following example of the asdot default format is available in Cisco IOS XE Release 2.3, and shows how to create a VRF with a route-target that uses a 4-byte autonomous system number, 1.1, and how to set the route target to extended community value 1.1:100 for routes that are permitted by the route map.

```
ip vrf vpn_red
```

```
rd 64500:100
route-target both 1.1:100
exit
route-map red_map permit 10
set extcommunity rt 1.1:100
end
```

After the configuration is completed, use the **show route-map** command to verify that the extended community is set to the route target that contains the 4-byte autonomous system number of 1.1.

```
RouterB# show route-map red_map

route-map red_map, permit, sequence 10

Match clauses:
Set clauses:
extended community RT:1.1:100

Policy routing matches: 0 packets, 0 bytes
```

### **NLRI to AFI Configuration: Example**

The following example upgrades an existing router configuration file in the NLRI format to the AFI format and set the router CLI to use only commands in the AFI format:

```
router bgp 60000
bgp upgrade-cli
```

The **show running-config** command can be used in privileged EXEC mode to verify that an existing router configuration file has been upgraded from the NLRI format to the AFI format. The following sections provide sample output from a router configuration file in the NLRI format, and the same router configuration file after it has been upgraded to the AFI format with the **bgp upgrade-cli** command in router configuration mode.

- Router Configuration File in NLRI Format Before Upgrading, page 85
- Router Configuration File in AFI Format After Upgrading, page 86



After a router has been upgraded from the AFI format to the NLRI format with the **bgp upgrade-cli** command, NLRI commands will no longer be accessible or configurable.

#### **Router Configuration File in NLRI Format Before Upgrading**

The following sample output is from the **show running-config** command in privileged EXEC mode. The sample output shows a router configuration file, in the NLRI format, prior to upgrading to the AFI format with the **bgp upgrade-cli** command. The sample output is filtered to show only the affected portion of the router configuration.

Router# show running-config | begin bgp

```
router bgp 101
no synchronization
bgp log-neighbor-changes
neighbor 10.1.1.1 remote-as 505 nlri unicast multicast
no auto-summary
!
ip default-gateway 10.4.9.1
ip classless
!
!
route-map REDISTRIBUTE-MULTICAST permit 10
```

```
match ip address prefix-list MULTICAST-PREFIXES
set nlri multicast
!
route-map MULTICAST-PREFIXES permit 10
!
route-map REDISTRIBUTE-UNICAST permit 20
match ip address prefix-list UNICAST-PREFIXES
set nlri unicast
!
!
!
line con 0
line aux 0
line vty 0 4
password PASSWORD
login
!
end
```

#### **Router Configuration File in AFI Format After Upgrading**

The following sample output shows the router configuration file after it has been upgraded to the AFI format. The sample output is filtered to show only the affected portion of the router configuration file.

Router# show running-config | begin bgp

```
router bgp 101
bgp log-neighbor-changes
neighbor 10.1.1.1 remote-as 505
no auto-summary
 address-family ipv4 multicast
 neighbor 10.1.1.1 activate
 no auto-summary
 no synchronization
 exit-address-family
 address-family ipv4
 neighbor 10.1.1.1 activate
 no auto-summary
 no synchronization
  exit-address-family
ip default-gateway 10.4.9.1
ip classless
route-map REDISTRIBUTE-MULTICAST_mcast permit 10
match ip address prefix-list MULTICAST-PREFIXES
route-map REDISTRIBUTE-MULTICAST permit 10
match ip address prefix-list MULTICAST-PREFIXES
route-map MULTICAST-PREFIXES permit 10
route-map REDISTRIBUTE-UNICAST permit 20
match ip address prefix-list UNICAST-PREFIXES
1
!
line con 0
line aux 0
line vty 0 4
password PASSWORD
```

```
login!
```

# Removing BGP Configuration Commands Using a Redistribution Example: Examples

The following examples show both the CLI configuration to enable the redistribution of BGP routes into EIGRP using a route map, and the CLI configuration to remove the redistribution and route map. Some BGP configuration commands can affect other CLI commands and this example demonstrates how the removal of one command affects another command.

In the first configuration example, a route map is configured to match and set autonomous system numbers. BGP neighbors in three different autonomous systems are configured and activated. An EIGRP routing process is started, and the redistribution of BGP routes into EIGRP using the route map is configured.

#### **CLI to Enable BGP Route Redistribution into EIGRP**

```
route-map bgp-to-eigrp permit 10
match tag 50000
 set tag 65000
 exit
router bgp 45000
bgp log-neighbor-changes
 address-family ipv4
 neighbor 172.16.1.2 remote-as 45000
  neighbor 172.21.1.2 remote-as 45000
  neighbor 192.168.1.2 remote-as 40000
  neighbor 192.168.3.2 remote-as 50000
  neighbor 172.16.1.2 activate
  neighbor 172.21.1.2 activate
  neighbor 192.168.1.2 activate
  neighbor 192.168.3.2 activate
 network 172.17.1.0 mask 255.255.255.0
  exit-address-family
 exit
router eigrp 100
redistribute bgp 45000 metric 10000 100 255 1 1500 route-map bgp-to-eigrp
no auto-summary
```

In the second configuration example, both the **route-map** command and the **redistribute** command are disabled. If only the route-map command is removed, it does not automatically disable the redistribution. The redistribution will now occur without any matching or filtering. To remove the redistribution configuration, the **redistribute** command must also be disabled.

#### **CLI to Remove BGP Route Redistribution into EIGRP**

```
configure terminal
no route-map bgp-to-eigrp
router eigrp 100
no redistribute bgp 45000
end
```

### **BGP Soft Reset: Examples**

The following examples show two ways to reset the connection for BGP peer 192.168.1.1.

#### **Dynamic Inbound Soft Reset**

The following example shows the **clear ip bgp 192.168.1.1 soft in** EXEC command used to initiate a dynamic soft reconfiguration in the BGP peer 192.168.1.1. This command requires that the peer support the route refresh capability.

```
clear ip bgp 192.168.1.1 soft in
```

#### **Inbound Soft Reset Using Stored Information**

The following example shows how to enable inbound soft reconfiguration for the neighbor 192.168.1.1. All the updates received from this neighbor will be stored unmodified, regardless of the inbound policy. When inbound soft reconfiguration is performed later, the stored information will be used to generate a new set of inbound updates.

```
router bgp 100
neighbor 192.168.1.1 remote-as 200
neighbor 192.168.1.1 soft-reconfiguration inbound
```

The following example clears the session with the neighbor 192.168.1.1:

```
clear ip bgp 192.168.1.1 soft in
```

## **Resetting BGP Peers Using 4-Byte Autonomous System Numbers: Examples**

The following examples show how to clear BGP peers belonging to an autonomous system that uses 4-byte autonomous system numbers. This example requires Cisco IOS XE Release 2.4 or a later release to be running on the router. The initial state of the BGP routing table is shown using the **show ip bgp** command, and peers in 4-byte autonomous systems 65536 and 65550 are displayed.

```
RouterB# show ip bgp
BGP table version is 4, local router ID is 172.17.1.99
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal,
             r RIB-failure, S Stale
Origin codes: i - IGP, e - EGP, ? - incomplete
                   Next Hop
                                      Metric LocPrf Weight Path
  Network
*> 10.1.1.0/24
                   192.168.1.2
                                         0 0 65536 i
*> 10.2.2.0/24
                                           Ω
                                                         0 65550 i
                   192.168.3.2
*> 172.17.1.0/24
                   0.0.0.0
                                           Ω
                                                     32768 i
```

The **clear ip bgp 65550** command is entered to remove all BGP peers in the 4-byte autonomous system 65550. The ADJCHANGE message shows that the BGP peer at 192.168.3.2 is being reset.

```
RouterB# clear ip bgp 65550
RouterB#
*Nov 30 23:25:27.043: %BGP-5-ADJCHANGE: neighbor 192.168.3.2 Down User reset
```

The **show ip bgp** command is entered again, and only the peer in 4-byte autonomous systems 65536 is now displayed.

```
RouterB# show ip bgp

BGP table version is 5, local router ID is 172.17.1.99

Status codes: s suppressed, d damped, h history, * valid, > best, i - internal, r RIB-failure, S Stale
```

```
Origin codes: i - IGP, e - EGP, ? - incomplete

Network

Next Hop

Metric LocPrf Weight Path

*> 10.1.1.0/24

192.168.1.2

0

0 65536 i

*> 172.17.1.0/24

0.0.0.0

0 32768 i
```

Almost immediately the next ADJCHANGE message shows that the BGP peer at 192.168.3.2 (in the 4-byte autonomous system 65550) is now back up.

```
RouterB#
*Nov 30 23:25:55.995: %BGP-5-ADJCHANGE: neighbor 192.168.3.2 Up
```

## **Aggregating Prefixes Using BGP: Examples**

The following examples show how you can use aggregate routes in BGP either by redistributing an aggregate route into BGP or by using the BGP conditional aggregation routing feature.

In the following example, the **redistribute static** router configuration command is used to redistribute aggregate route 10.0.0.0:

```
ip route 10.0.0.0 255.0.0.0 null 0
!
router bgp 100
redistribute static
```

The following configuration shows how to create an aggregate entry in the BGP routing table when at least one specific route falls into the specified range. The aggregate route will be advertised as coming from your autonomous system and has the atomic aggregate attribute set to show that information might be missing. (By default, atomic aggregate is set unless you use the **as-set** keyword in the **aggregate-address** router configuration command.)

```
router bgp 100 aggregate-address 10.0.0.0 255.0.0.0
```

The following example shows how to create an aggregate entry using the same rules as in the previous example, but the path advertised for this route will be an AS-SET consisting of all elements contained in all paths that are being summarized:

```
router bgp 100 aggregate-address 10.0.0.0 255.0.0.0 as-set
```

The following example shows how to create the aggregate route for 10.0.0.0 and also suppress advertisements of more specific routes to all neighbors:

```
router bgp 100
aggregate-address 10.0.0.0 255.0.0.0 summary-only
```

The following example, starting in global configuration mode, configures BGP to not advertise inactive routes:

```
Router(config)# router bgp 50000
Router(config-router)# address-family ipv4 unicast
Router(config-router-af)# bgp suppress-inactive
Router(config-router-af)# end
```

The following example configures a maximum route limit in the VRF named RED and configures BGP to not advertise inactive routes through the VRF named RED:

```
Router(config)# ip vrf RED
Router(config-vrf)# rd 50000:10
Router(config-vrf)# maximum routes 1000 10
```

```
Router(config-vrf)# exit
Router(config)# router bgp 50000
Router(config-router)# address-family ipv4 vrf RED
Router(config-router-af)# bgp suppress-inactive
Router(config-router-af)# end
```

### **Configuring a BGP Peer Group: Example**

The following example shows how to use an address family to configure a peer group so that all members of the peer group are both unicast- and multicast-capable:

```
router bgp 45000
neighbor 192.168.1.2 remote-as 40000
neighbor 192.168.3.2 remote-as 50000
address-family ipv4 unicast
neighbor mygroup peer-group
neighbor 192.168.1.2 peer-group mygroup
 neighbor 192.168.3.2 peer-group mygroup
router bgp 45000
neighbor 192.168.1.2 remote-as 40000
neighbor 192.168.3.2 remote-as 50000
address-family ipv4 multicast
neighbor mygroup peer-group
neighbor 192.168.1.2 peer-group mygroup
neighbor 192.168.3.2 peer-group mygroup
 neighbor 192.168.1.2 activate
neighbor 192.168.3.2 activate
```

## **Configuring Peer Session Templates: Examples**

The following example creates a peer session template named INTERNAL-BGP in session-template configuration mode:

```
router bgp 45000
template peer-session INTERNAL-BGP
remote-as 50000
timers 30 300
exit-peer-session
```

The following example creates a peer session template named CORE1. This example inherits the configuration of the peer session template named INTERNAL-BGP.

```
router bgp 45000
template peer-session CORE1
description CORE-123
update-source loopback 1
inherit peer-session INTERNAL-BGP
exit-peer-session
```

The following example configures the 192.168.3.2 neighbor to inherit the CORE1 peer session template. The 192.168.3.2 neighbor will also indirectly inherit the configuration from the peer session template named INTERNAL-BGP. The explicit **remote-as** statement is required for the neighbor inherit statement to work. If a peering is not configured, the specified neighbor will not accept the session template.

```
router bgp 45000
neighbor 192.168.3.2 remote-as 50000
neighbor 192.168.3.2 inherit peer-session CORE1
```

### **Configuring Peer Policy Templates: Examples**

The following example creates a peer policy template named GLOBAL in policy-template configuration mode:

```
router bgp 45000
template peer-policy GLOBAL
weight 1000
maximum-prefix 5000
prefix-list NO_SALES in
exit-peer-policy
```

The following example creates a peer policy template named PRIMARY-IN in policy-template configuration mode:

```
template peer-policy PRIMARY-IN prefix-list ALLOW-PRIMARY-A in route-map SET-LOCAL in weight 2345 default-originate exit-peer-policy
```

The following example creates a peer policy template named CUSTOMER-A. This peer policy template is configured to inherit the configuration from the peer policy templates named PRIMARY-IN and GLOBAL.

```
template peer-policy CUSTOMER-A route-map SET-COMMUNITY in filter-list 20 in inherit peer-policy PRIMARY-IN 20 inherit peer-policy GLOBAL 10 exit-peer-policy
```

The following example configures the 192.168.2.2 neighbor in address family mode to inherit the peer policy template name CUSTOMER-A. The 192.168.2.2 neighbor will also indirectly inherit the peer policy templates named PRIMARY-IN and GLOBAL.

```
router bgp 45000
neighbor 192.168.2.2 remote-as 50000
address-family ipv4 unicast
neighbor 192.168.2.2 inherit peer-policy CUSTOMER-A
end
```

### Monitoring and Maintaining BGP Dynamic Update Peer-Groups: Examples

No configuration is required to enable the BGP dynamic update of peer groups and the algorithm runs automatically. The following examples show how BGP update group information can be cleared or displayed.

#### clear ip bgp update-group

The following example clears the membership of neighbor 10.0.0.1 from an update group:

```
Router# clear ip bgp update-group 10.0.0.1
```

#### debug ip bgp groups

The following example output from the **debug ip bgp groups** command shows the recalculation of update groups after the **clear ip bgp groups** command was issued:

```
Router# debug ip bgp groups
```

```
5w4d: %BGP-5-ADJCHANGE: neighbor 10.4.9.5 Down User reset
5w4d: BGP-DYN(0): Comparing neighbor 10.4.9.5 flags 0x0 cap 0x0 and updgrp 2 fl0
5w4d: BGP-DYN(0): Update-group 2 flags 0x0 cap 0x0 policies same as 10.4.9.5 fl0
5w4d: %BGP-5-ADJCHANGE: neighbor 10.4.9.8 Down User reset
5w4d: BGP-DYN(0): Comparing neighbor 10.4.9.8 flags 0x0 cap 0x0 and updgrp 2 fl0
5w4d: BGP-DYN(0): Update-group 2 flags 0x0 cap 0x0 policies same as 10.4.9.8 fl0
5w4d: %BGP-5-ADJCHANGE: neighbor 10.4.9.21 Down User reset
5w4d: BGP-DYN(0): Comparing neighbor 10.4.9.21 flags 0x0 cap 0x0 and updgrp 1 f0
5w4d: BGP-DYN(0): Update-group 1 flags 0x0 cap 0x0 policies same as 10.4.9.21 f0
5w4d: %BGP-5-ADJCHANGE: neighbor 10.4.9.5 Up
5w4d: %BGP-5-ADJCHANGE: neighbor 10.4.9.21 Up
5w4d: %BGP-5-ADJCHANGE: neighbor 10.4.9.8 Up
```

#### show ip bgp replication

The following sample output from the **show ip bgp replication** command shows update group replication information for all for neighbors:

```
Router# show ip bgp replication

BGP Total Messages Formatted/Enqueued : 0/0

Index Type Members Leader MsgFmt MsgRepl Csize Qsize
1 internal 1 10.4.9.21 0 0 0 0
2 internal 2 10.4.9.5 0 0 0
```

#### show ip bgp update-group

The following sample output from the **show ip bgp update-group** command shows update group information for all neighbors:

```
Router# show ip bgp update-group
BGP version 4 update-group 1, internal, Address Family: IPv4 Unicast
 BGP Update version: 0, messages 0/0
 Route map for outgoing advertisements is COST1
 Update messages formatted 0, replicated 0
 Number of NLRIs in the update sent: max 0, min 0
 Minimum time between advertisement runs is 5 seconds
 Has 1 member:
 10.4.9.21
BGP version 4 update-group 2, internal, Address Family: IPv4 Unicast
  BGP Update version : 0, messages 0/0
  Update messages formatted 0, replicated 0
 Number of NLRIs in the update sent: max 0, min 0
 Minimum time between advertisement runs is 5 seconds
  Has 2 members:
  10.4.9.5 10.4.9.8
```

### Where to Go Next

- If you want to connect to an external service provider, see the "Connecting to a Service Provider Using External BGP" module.
- To configure BGP neighbor session options, proceed to the "Configuring BGP Neighbor Session Options" module.
- If you want to configure some iBGP features, see the "Configuring Internal BGP Features" module.

# **Additional References**

The following sections provide references related to configuring basic BGP tasks.

# **Related Documents**

Related Topic	Document Title
BGP commands: complete command syntax, command mode, defaults, command history, usage guidelines, and examples	Cisco IOS IP Routing: BGP Command Reference
IPv6 commands: complete command syntax, command mode, defaults, usage guidelines, and examples	Cisco IOS IPv6 Command Reference
Overview of Cisco BGP conceptual information with links to all the individual BGP modules	"Cisco BGP Overview" module
Basic MPLS VPN and BGP configuration example	Configuring MPLS Layer 3 VPNs module
Cisco IOS master command list, all releases	Cisco IOS Master Command List, All Releases

# **Standards**

Standard	Title
MDT SAFI	MDT SAFI

### **MIBs**

MIB	MIBs Link
	To locate and download MIBs for selected platforms, Cisco IOS XE software releases, and feature sets, use Cisco MIB Locator found at the following URL:
	http://www.cisco.com/go/mibs

# **RFCs**

RFC	Title
RFC 1772	Application of the Border Gateway Protocol in the Internet
RFC 1773	Experience with the BGP Protocol
RFC 1774	BGP-4 Protocol Analysis
RFC 1930	Guidelines for Creation, Selection, and Registration of an Autonomous System (AS)
RFC 2519	A Framework for Inter-Domain Route Aggregation
RFC 2858	Multiprotocol Extensions for BGP-4

RFC	Title
RFC 2918	Route Refresh Capability for BGP-4
RFC 3392	Capabilities Advertisement with BGP-4
RFC 4271	A Border Gateway Protocol 4 (BGP-4)

# **Technical Assistance**

Description	Link
The Cisco Support website provides extensive online resources, including documentation and tools for troubleshooting and resolving technical issues with Cisco products and technologies.	http://www.cisco.com/techsupport
To receive security and technical information about your products, you can subscribe to various services, such as the Product Alert Tool (accessed from Field Notices), the Cisco Technical Services Newsletter, and Really Simple Syndication (RSS) Feeds.	
Access to most tools on the Cisco Support website requires a Cisco.com user ID and password.	

# **Feature Information for Configuring a Basic BGP Network**

Table 6 lists the features in this module and provides links to specific configuration information

Use Cisco Feature Navigator to find information about platform support and software image support. Cisco Feature Navigator enables you to determine which Cisco IOS XE software images support a specific software release, feature set, or platform. To access Cisco Feature Navigator, go to <a href="http://www.cisco.com/go/cfn">http://www.cisco.com/go/cfn</a>. An account on Cisco.com is not required.



Table 6 lists only the Cisco IOS XE software release that introduced support for a given feature in a given Cisco IOS XE software release train. Unless noted otherwise, subsequent releases of that Cisco IOS XE software release train also support that feature.

Table 6 Feature Information for Configuring a Basic BGP Network

Feature Name	Releases	Feature Configuration Information
BGP Conditional Route Injection	Cisco IOS XE Release 2.1	The BGP Conditional Route Injection feature allows you to inject more specific prefixes into a BGP routing table over less specific prefixes that were selected through normal route aggregation. These more specific prefixes can be used to provide a finer granularity of traffic engineering or administrative control than is possible with aggregated routes.
		This feature was introduced on the Cisco ASR 1000 Series Aggregation Services Routers.
		The following sections provide information about this feature:
		• BGP Route Aggregation, page 8
		• Conditionally Injecting BGP Routes, page 54
BGP Configuration Using Peer Templates	Cisco IOS XE Release 2.1	The BGP Configuration Using Peer Templates feature introduces a new mechanism that groups distinct neighbor configurations for BGP neighbors that share policies. This type of policy configuration has been traditionally configured with BGP peer groups. However, peer groups have certain limitations because peer group configuration is bound to update grouping and specific session characteristics. Configuration templates provide an alternative to peer group configuration and overcome some of the limitations of peer groups.
		This feature was introduced on the Cisco ASR 1000 Series Routers.
		The following sections provide information about this feature:
		• BGP Peer Templates, page 9
		• Configuring Peer Session Templates, page 63
		• Configuring Peer Policy Templates, page 70
		This feature was introduced on the Cisco ASR 1000 Series Routers.

Table 6 Feature Information for Configuring a Basic BGP Network (continued)

Feature Name	Releases	Feature Configuration Information
BGP Dynamic Update Peer Groups	Cisco IOS XE Release 2.1	The BGP Dynamic Update Peer Groups feature introduces a new algorithm that dynamically calculates and optimizes update groups of neighbors that share the same outbound policies and can share the same update messages. In previous versions of Cisco IOS XE software, BGP update messages were grouped based on peer-group configurations. This method of grouping updates limited outbound policies and specific-session configurations. The BGP Dynamic Update Peer Group feature separates update group replication from peer group configuration, which improves convergence time and flexibility of neighbor configuration.
		This feature was introduced on the Cisco ASR 1000 Series Routers.
		The following sections provide information about this feature:
		• BGP Update Group, page 9
		<ul> <li>Monitoring and Maintaining BGP Dynamic Update Groups, page 78</li> </ul>
BGP Hybrid CLI	Cisco IOS XE Release 2.1	The BGP Hybrid CLI feature simplifies the migration of BGP networks and existing configurations from the NLRI format to the AFI format. This new functionality allows the network operator to configure commands in the AFI format and save these command configurations to existing NLRI formatted configurations. The feature provides the network operator with the capability to take advantage of new features and provides support for migration from the NLRI format to the AFI format.
		This feature was introduced on the Cisco ASR 1000 Series Routers.
		The following sections provide information about this feature:
		• Cisco Implementation of BGP Global and Address Family Configuration Commands, page 6
		NLRI to AFI Configuration: Example, page 85

Table 6 Feature Information for Configuring a Basic BGP Network (continued)

Feature Name	Releases	Feature Configuration Information
BGP Neighbor Policy	Cisco IOS XE Release 2.1	The BGP Neighbor Policy feature introduces new keywords to two existing commands to display information about local and inherited policies. When BGP neighbors use multiple levels of peer templates, it can be difficult to determine which policies are applied to the neighbor. Inherited policies are policies that the neighbor inherits from a peer-group or a peer-policy template.
		This feature was introduced on the Cisco ASR 1000 Series Routers.
		The following sections provide information about this feature:
		• Configuring Peer Policy Templates, page 70
		• Configuring Peer Policy Templates: Examples, page 91
		The following commands were modified by this feature: show ip bgp neighbors, show ip bgp template peer-policy.
BGP 4 Soft Config	Cisco IOS XE Release 2.1	This feature was introduced on the Cisco ASR 1000 Series Routers.

Table 6	Feature Information for Configuring a Basic BGP Network (continued)
---------	---

Feature Name	Releases	Feature Configuration Information
BGP Support for 4-Byte ASN	Cisco IOS XE Release 2.3 Cisco IOS XE Release 2.4	The BGP Support for 4-Byte ASN feature introduced support for 4-byte autonomous system numbers. Because of increased demand for autonomous system numbers, in January 2009 the IANA will start to allocate 4-byte autonomous system numbers in the range from 65536 to 4294967295.
		In Cisco IOS XE Release 2.3, the Cisco implementation of 4-byte autonomous system numbers uses asdot as the only configuration format, regular expression match, and output display, with no asplain support.
		In Cisco IOS XE Release 2.4 and later releases, the Cisco implementation of 4-byte autonomous system numbers uses asplain as the default regular expression match and output display format for autonomous system numbers, but you can configure 4-byte autonomous system numbers in both the asplain format and the asdot format as described in RFC 5396. To change the default regular expression match and output display of 4-byte autonomous system numbers to asdot format, use the <b>bgp asnotation dot</b> command.
		The following sections provide information about this feature:
		BGP Autonomous System Number Formats, page 3
		• Configuring a BGP Routing Process and Peers Using 4-Byte Autonomous System Numbers, page 17
		• Modifying the Default Output and Regular Expression Match Format for 4-Byte Autonomous System Numbers, page 21
		• Configuring a BGP Routing Process and Peers Using 4-Byte Autonomous System Numbers: Example, page 81
		• Configuring a VRF and Setting an Extended Community Using a BGP 4-Byte Autonomous System Number: Example, page 84
		• Resetting BGP Peers Using 4-Byte Autonomous System Numbers: Examples, page 88
		The following commands were introduced or modified by this feature: bgp asnotation dot, bgp confederation identifier, bgp confederation peers, all clear ip bgp commands that configure an autonomous system number, ip as-path access-list, ip extcommunity-list, match source-protocol, neighbor local-as, neighbor remote-as, redistribute (IP), router bgp, route-target, set as-path, set extcommunity, set origin, all show ip bgp commands that
		display an autonomous system number, and show ip extcommunity-list.

Table 6 Feature Information for Configuring a Basic BGP Network (continued)

Feature Name	Releases	Feature Configuration Information
Suppress BGP Advertisement for Inactive Routes	Cisco IOS XE Release 2.1	The Suppress BGP Advertisements for Inactive Routes feature allows you to configure the suppression of advertisements for routes that are not installed in the RIB. Configuring this feature allows BGP updates to be more consistent with data used for traffic forwarding.  The following sections provide information about this feature:  BGP Route Aggregation, page 8  Suppressing Inactive Route Advertisement Using BGP, page 48
		Aggregating Prefixes Using BGP: Examples, page 89

CCDE, CCENT, CCSI, Cisco Eos, Cisco HealthPresence, Cisco IronPort, the Cisco logo, Cisco Nurse Connect, Cisco Pulse, Cisco SensorBase, Cisco StackPower, Cisco StadiumVision, Cisco TelePresence, Cisco Unified Computing System, Cisco WebEx, DCE, Flip Channels, Flip for Good, Flip Mino, Flipshare (Design), Flip Ultra, Flip Video, Flip Video (Design), Instant Broadband, and Welcome to the Human Network are trademarks; Changing the Way We Work, Live, Play, and Learn, Cisco Capital, Cisco Capital (Design), Cisco:Financed (Stylized), Cisco Store, Flip Gift Card, and One Million Acts of Green are service marks; and Access Registrar, Aironet, AllTouch, AsyncOS, Bringing the Meeting To You, Catalyst, CCDA, CCDP, CCIE, CCIP, CCNA, CCNP, CCSP, CCVP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IOS, Cisco Lumin, Cisco Nexus, Cisco Press, Cisco Systems, Cisco Systems Capital, the Cisco Systems logo, Cisco Unity, Collaboration Without Limitation, Continuum, EtherFast, EtherSwitch, Event Center, Explorer, Follow Me Browsing, GainMaker, iLYNX, IOS, iPhone, IronPort, the IronPort logo, Laser Link, LightStream, Linksys, MeetingPlace, MeetingPlace Chime Sound, MGX, Networkers, Networking Academy, PCNow, PIX, PowerPanels, PowerTV, PowerTV (Design), PowerVu, Prisma, ProConnect, ROSA, SenderBase, SMARTnet, Spectrum Expert, StackWise, WebEx, and the WebEx logo are registered trademarks of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries.

All other trademarks mentioned in this document or website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0910R)

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, and figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

© 2005-2009 Cisco Systems, Inc. All rights reserved.

Feature Information for Configuring a Basic BGP Network



# Configuring Multiprotocol BGP (MP-BGP) Support for CLNS

First Published: February 28, 2007 Last Updated: February 26, 2010

This module describes configuration tasks to configure multiprotocol BGP (MP-BGP) support for CLNS, which provides the ability to scale Connectionless Network Service (CLNS) networks. The multiprotocol extensions of Border Gateway Protocol (BGP) add the ability to interconnect separate Open System Interconnection (OSI) routing domains without merging the routing domains, thus providing the capability to build very large OSI networks.

# **Finding Feature Information**

For the latest feature information and caveats, see the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the "Feature Information for Configuring MP-BGP Support for CLNS" section on page 38.

Use Cisco Feature Navigator to find information about platform support and Cisco IOS XE software image support. To access Cisco Feature Navigator, go to <a href="http://www.cisco.com/go/cfn">http://www.cisco.com/go/cfn</a>. An account on Cisco.com is not required.

### **Contents**

- Restrictions for Configuring MP-BGP Support for CLNS, page 2
- Information About Configuring MP-BGP Support for CLNS, page 2
- How to Configure MP-BGP Support for CLNS, page 6
- Configuration Examples for MP-BGP Support for CLNS, page 26
- Additional References, page 35



- Feature Information for Configuring MP-BGP Support for CLNS, page 38
- Glossary, page 40

# **Restrictions for Configuring MP-BGP Support for CLNS**

The configuration of MP-BGP support for CLNS does not support the creation and use of BGP confederations within the CLNS network. We recommend the use of route reflectors to address the issue of a large internal BGP mesh.

BGP extended communities are not supported by the MP-BGP Support for CLNS feature.

The following BGP commands are not supported by the MP-BGP Support for CLNS feature:

- auto-summary
- · neighbor advertise-map
- neighbor distribute-list
- neighbor soft-reconfiguration
- · neighbor unsuppress-map

# **Information About Configuring MP-BGP Support for CLNS**

To configure the MP-BGP support for CLNS, you should understand the following concepts:

- Design Features of MP-BGP Support for CLNS, page 2
- Generic BGP CLNS Network Topology, page 3
- DCN Network Topology, page 4
- Benefits of MP-BGP Support for CLNS, page 6

### **Design Features of MP-BGP Support for CLNS**

The configuration of MP-BGP support for CLNS allows BGP to be used as an interdomain routing protocol in networks that use CLNS as the network-layer protocol. This feature was developed to solve a scaling issue with a data communications network (DCN) where large numbers of network elements are managed remotely. For details about the DCN issues and how to implement this feature in a DCN topology, see the "DCN Network Topology" section on page 4.

BGP, as an Exterior Gateway Protocol, was designed to handle the volume of routing information generated by the Internet. Network administrators can control the BGP routing information because BGP neighbor relationships (peering) are manually configured and routing updates use incremental broadcasts. Some interior routing protocols such as Intermediate System-to-Intermediate System (IS-IS), in contrast, use a form of automatic neighbor discovery and broadcast updates at regular intervals.

CLNS uses network service access point (NSAP) addresses to identify all its network elements. Using the BGP address-family support, NSAP address prefixes can be transported using BGP. In CLNS, BGP prefixes are inserted into the CLNS Level 2 prefix table. This functionality allows BGP to be used as an interdomain routing protocol between separate CLNS routing domains.

Implementing BGP in routers at the edge of each internal network means that the existing interior protocols need not be changed, minimizing disruption in the network.

### **Generic BGP CLNS Network Topology**

Figure 1 shows a generic BGP CLNS network containing nine routers that are grouped into four different autonomous systems (in BGP terminology) or routing domains (in OSI terminology). To avoid confusion, we will use the BGP terminology of autonomous systems because each autonomous system is numbered and therefore more easily identified in the diagram and in the configuration discussion.

AS65101

BGP router
Level 2 IS-IS router
Interdomain links

AS65202

R2

R3

AS65404

R9

R9

Figure 1 Components in a Generic BGP CLNS Network

Within each autonomous system, IS-IS is used as the intradomain routing protocol. Between autonomous systems, BGP and its multiprotocol extensions are used as the interdomain routing protocol. Each router is running either a BGP or Level 2 IS-IS routing process. To facilitate this feature, the BGP routers are also running a Level 2 IS-IS process. Although the links are not shown in the figure, each Level 2 IS-IS router is connected to multiple Level 1 IS-IS routers that are, in turn, connected to multiple CLNS networks.

Each autonomous system in this example is configured to demonstrate various BGP features and how these features work with CLNS to provide a scalable interdomain routing solution. In Figure 1, the autonomous system AS65101 has a single Level 2 IS-IS router, R1, and is connected to just one other autonomous system, AS65202. Connectivity to the rest of the network is provided by R2, and a default route is generated for R1 to send to R2 all packets with destination NSAP addresses outside of AS65101.

In AS65202 there are two routers, R2 and R3, both with different external BGP (eBGP) neighbors. Routers R2 and R3 are configured to run internal BGP (iBGP) over the internal connection between them.

AS65303 shows how the use of BGP peer groups and route reflection can minimize the need for TCP connections between routers. Fewer connections between routers simplifies the network design and the amount of traffic in the network.

AS65404 shows how to use redistribution to communicate network reachability information to a Level 2 IS-IS router that is not running BGP.

The configuration tasks and examples are based on the generic network design shown in Figure 1,. Configurations for all the routers in Figure 1 are listed in the "Implementing MP-BGP Support for CLNS: Example" section on page 30.

### **DCN Network Topology**

The Multiprotocol BGP (MP-BGP) Support for CLNS feature can benefit a DCN managing a large number of remote SONET rings. SONET is typically used by telecommunications companies to send data over fiber-optic networks.

Figure 2 shows some components of a DCN network. To be consistent with the BGP terminology, the figure contains labels to indicate three autonomous systems instead of routing domains. The network elements—designated by NE in Figure 2—of a SONET ring are managed by OSI protocols such as File Transfer, Access, and Management (FTAM) and Common Management Information Protocol (CMIP). FTAM and CMIP run over the CLNS network-layer protocol, which means that the routers providing connectivity must run an OSI routing protocol.

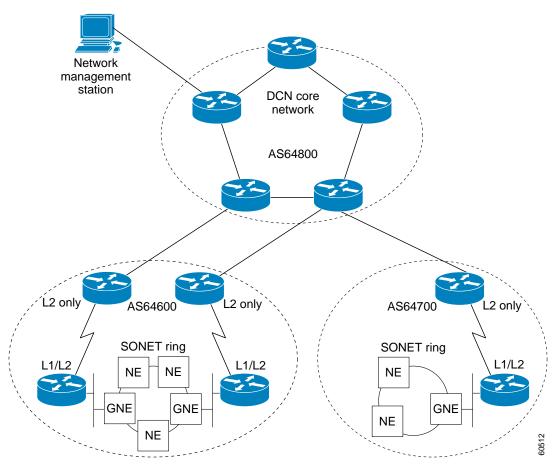


Figure 2 Components in a DCN Network

IS-IS is a link-state protocol used in this example to route CLNS. Each routing node (networking device) is called an intermediate system (IS). The network is divided into areas defined as a collection of routing nodes. Routing within an area is referred to as Level 1 routing. Routing between areas involves Level 2 routing. Routers that link a Level 1 area with a Level 2 area are defined as Level 1-2 routers. A network element that connects to the Level 2 routers that provide a path to the DCN core is represented by a gateway network element—GNE in Figure 2. The network topology here is a point-to-point link between each network element router. In this example, a Level 1 IS-IS router is called an NE router.

Smaller Cisco routers such as the Cisco 2600 series were selected to run as the Level 1-2 routers because shelf space in the central office (CO) of a service provider is very expensive. A Cisco 2600 series router has limited processing power if it is acting as the Level 1 router for four or five different Level 1 areas. The number of Level 1 areas under this configuration is limited to about 200. The entire Level 2 network is also limited by the speed of the slowest Level 2 router.

To provide connectivity between NE routers, in-band signaling is used. The in-band signaling is carried in the SONET/Synchronous Digital Hierarchy (SDH) frame on the data communications channel (DCC). The DCC is a 192-KB channel, which is a very limited amount of bandwidth for the management traffic. Due to the limited signaling bandwidth between network elements and the limited amount of processing power and memory in the NE routers running IS-IS, each area is restricted to a maximum number of 30 to 40 routers. On average, each SONET ring consists of 10 to 15 network elements.

With a maximum of 200 areas containing 10 to 15 network elements per area, the total number of network element routers in a single autonomous system must be fewer than 3000. Service providers are looking to implement over 10,000 network elements as their networks grow, but the potential number of

network elements in an area is limited. The current solution is to break down the DCN into a number of smaller autonomous systems and connect them using static routes or ISO Interior Gateway Routing Protocol (IGRP). ISO IGRP is a proprietary protocol that can limit future equipment implementation options. Static routing does not scale because the growth in the network can exceed the ability of a network administrator to maintain the static routes. BGP has been shown to scale to over 100,000 routes.

To implement the Multiprotocol BGP (MP-BGP) Support for CLNS feature in this example, configure BGP to run on each router in the DCN core network—AS64800 in Figure 2—to exchange routing information between all the autonomous systems. In the autonomous systems AS64600 and AS64700, only the Level 2 routers will run BGP. BGP uses TCP to communicate with BGP-speaking neighbor routers, which means that both an IP-addressed network and an NSAP-addressed network must be configured to cover all the Level 2 IS-IS routers in the autonomous systems AS64600 and AS64700 and all the routers in the DCN core network.

Assuming that each autonomous system—for example, AS64600 and AS64700 in Figure 2—remains the same size with up to 3000 nodes, we can demonstrate how large DCN networks can be supported with this feature. Each autonomous system advertises one address prefix to the core autonomous system. Each address prefix can have two paths associated with it to provide redundancy because there are two links between each autonomous system and the core autonomous system. BGP has been shown to support 100,000 routes, so the core autonomous system can support many other directly linked autonomous systems because each autonomous system generates only a few routes. We can assume that the core autonomous system can support about 2000 directly linked autonomous systems. With the hub-and-spoke design where each autonomous system is directly linked to the core autonomous system, and not acting as a transit autonomous system, the core autonomous system can generate a default route to each linked autonomous system. Using the default routes, the Level 2 routers in the linked autonomous systems process only a small amount of additional routing information. Multiplying the 2000 linked autonomous systems by the 3000 nodes within each autonomous system could allow up to 6 million network elements.

# **Benefits of MP-BGP Support for CLNS**

The Multiprotocol BGP (MP-BGP) Support for CLNS feature adds the ability to interconnect separate OSI routing domains without merging the routing domains, which provides the capability to build very large OSI networks. The benefits of using this feature are not confined to DCN networks, and can be implemented to help scale any network using OSI routing protocols with CLNS.

# **How to Configure MP-BGP Support for CLNS**

This section contains the following procedures. It may not be necessary to go through each procedure for your particular network. You must perform the steps in the required procedures, but all other procedures are done as required for your network.

- Configuring and Activating a BGP Neighbor to Support CLNS, page 7 (required)
- Configuring an IS-IS Routing Process, page 8 (required)
- Configuring Interfaces That Connect to BGP Neighbors, page 10 (required)
- Configuring Interfaces Connected to the Local OSI Routing Domain, page 11 (required)
- Advertising Networking Prefixes, page 12 (as required)
- Redistributing Routes from BGP into IS-IS, page 14 (as required))
- Redistributing Routes from IS-IS into BGP, page 15 (as required)

- Configuring BGP Peer Groups and Route Reflectors, page 17
- Filtering Inbound Routes Based on NSAP Prefixes, page 18 (as required)
- Filtering Outbound BGP Updates Based on NSAP Prefixes, page 20 (as required)
- Originating Default Routes for a Neighboring Routing Domain, page 22 (as required)
- Verifying MP-BGP Support for CLNS, page 23 (as required)
- Troubleshooting MP-BGP Support for CLNS, page 25 (as required)

### **Configuring and Activating a BGP Neighbor to Support CLNS**

To configure and activate a BGP routing process and an associated BGP neighbor (peer) to support CLNS, perform the steps in this procedure.

### **Address Family Routing Information**

By default, commands entered under the **router bgp** command apply to the IPv4 address family. This will continue to be the case unless you enter the **no bgp default ipv4-unicast** command as the first command under the **router bgp** command. The **no bgp default ipv4-unicast** command is configured on the router to disable the default behavior of the BGP routing process exchanging IPv4 addressing information with BGP neighbor routers.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. router bgp as-number
- 4. no bgp default ipv4-unicast
- **5. neighbor** {*ip-address* | *peer-group-name*} **remote-as** *as-number*
- 6. address-family nsap [unicast]
- 7. neighbor ip-address activate
- 8. end

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		• Enter your password if prompted.
	Example:	
	Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Router# configure terminal	

	Command or Action	Purpose
Step 3	router bgp as-number	Configures a BGP routing process and enters router configuration mode.
	Example: Router(config)# router bgp 65101	• The <i>as-number</i> argument identifies the autonomous system in which the router resides. Valid values are from 0 to 65535. Private autonomous system numbers that can be used in internal networks range from 64512 to 65535.
Step 4	no bgp default ipv4-unicast	Disables the default behavior of the BGP routing process exchanging IPv4 addressing information with BGP neighbor routers.
	<pre>Example: Router(config-router)# no bgp default ipv4-unicast</pre>	neignoof fouters.
Step 5	<pre>neighbor {ip-address   peer-group-name} remote-as as-number</pre>	Adds an IP address or peer group name of the BGP neighbor in the specified autonomous system to the BGP neighbor table of the local router.
	<pre>Example: Router(config-router)# neighbor 10.1.2.2 remote-as 64202</pre>	
Step 6	address-family nsap [unicast]	Specifies the NSAP address family and enters address family configuration mode.
	<pre>Example: Router(config-router)# address-family nsap</pre>	• The optional <b>unicast</b> keyword specifies the NSAP unicast address prefixes. By default, the router is placed in configuration mode for the unicast NSAP address family if the <b>unicast</b> keyword is not specified with the <b>address-family nsap</b> command.
Step 7	neighbor ip-address activate	Enables the BGP neighbor to exchange prefixes for the NSAP address family with the local router.
	<pre>Example: Router(config-router-af)# neighbor 10.1.2.2 activate</pre>	Note If you have configured a peer group as a BGP neighbor, you do not use this command because peer groups are automatically activated when any peer group parameter is configured.
Step 8	end	Exits address family configuration mode and returns to privileged EXEC mode.
	<pre>Example: Router(config-router-af)# end</pre>	

# **Configuring an IS-IS Routing Process**

When an integrated IS-IS routing process is configured, the first instance of the IS-IS routing process configured is by default a Level 1-2 (intra-area and interarea) router. All subsequent IS-IS routing processes on a network running CLNS are configured as Level 1. All subsequent IS-IS routing processes on a network running IP are configured as Level-1-2. To use the Multiprotocol BGP (MP-BGP) Support for CLNS feature, configure a Level 2 routing process.

To configure an IS-IS routing process and assign it as a Level-2-only process, perform the steps in this procedure.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. router isis area-tag
- **4. net** *network-entity-title*
- 5. is-type [level-1  $\mid$  level-1-2  $\mid$  level-2-only]
- 6. end

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		• Enter your password if prompted.
	Example:	
	Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	router isis area-tag	Configures an IS-IS routing process and enters router configuration mode for the specified routing process.
	<pre>Example: Router(config)# router isis osi-as-101</pre>	• The <i>area-tag</i> argument is a meaningful name for a routing process. It must be unique among all IP and CLNS routing processes for a given router.
Step 4	net network-entity-title	Configures a network entity title (NET) for the routing process.
	Example: Router(config-router)# net 49.0101.1111.1111.1111.1111.00	• If you are configuring multiarea IS-IS, you must specify a NET for each routing process.
Step 5	<pre>is-type [level-1   level-1-2   level-2-only]</pre> Example:	Configures the router to act as a Level 1 (intra-area) router, as both a Level 1 router and a Level 2 (interarea) router, or as an interarea router only.
	Router(config-router)# is-type level-1	• In multiarea IS-IS configurations, the first instance of the IS-IS routing process configured is by default a Level 1-2 (intra-area and interarea) router. All subsequent IS-IS routing processes on a network running CLNS are configured as Level 1. All subsequent IS-IS routing processes on a network running IP are configured as Level 1-2.
Step 6	end	Exits router configuration mode and returns to privileged EXEC mode.
	<pre>Example: Router(config-router)# end</pre>	

### **Configuring Interfaces That Connect to BGP Neighbors**

When a router running IS-IS is directly connected to an eBGP neighbor, the interface between the two eBGP neighbors is activated using the **clns enable** command, which allows CLNS packets to be forwarded across the interface. The **clns enable** command activates the End System-to-Intermediate System (ES-IS) protocol to search for neighboring OSI systems.



Running IS-IS across the same interface that is connected to an eBGP neighbor can lead to undesirable results if the two OSI routing domains merge into a single domain.

When a neighboring OSI system is found, BGP checks that it is also an eBGP neighbor configured for the NSAP address family. If both the preceding conditions are met, BGP creates a special BGP neighbor route in the CLNS Level 2 prefix routing table. The special BGP neighbor route is automatically redistributed in to the Level 2 routing updates so that all other Level 2 IS-IS routers in the local OSI routing domain know how to reach this eBGP neighbor.

To configure interfaces that are being used to connect with eBGP neighbors, perform the steps in this procedure. These interfaces will normally be directly connected to their eBGP neighbor.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. interface type number
- 4. ip address ip-address mask
- 5. clns enable
- 6. no shutdown
- 7. end

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		• Enter your password if prompted.
	Example: Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	interface type number	Specifies the interface type and number and enters interface configuration mode.
	<pre>Example: Router(config)# interface serial 2/0/0</pre>	

	Command or Action	Purpose
Step 4	ip address ip-address mask	Configures the interface with an IP address.
	Example: Router(config-if)# ip address 10.1.2.2 255.255.255.0	
Step 5	clns enable	Specifies that CLNS packets can be forwarded across this interface.
	<pre>Example: Router(config-if)# clns enable</pre>	• The ES-IS protocol is activated and starts to search for adjacent OSI systems.
Step 6	no shutdown	Turns on the interface.
	Example: Router(config-if)# no shutdown	
Step 7	end	Exits interface configuration mode and returns to privileged EXEC mode.
	<pre>Example: Router(config-if)# end</pre>	

# **Configuring Interfaces Connected to the Local OSI Routing Domain**

To configure interfaces that are connected to the local OSI routing domain, perform the steps in this procedure.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- **3**. **interface** *type number*
- 4. ip address ip-address mask
- 5. clns router isis area-tag
- 6. ip router isis area-tag
- 7. no shutdown
- 8. end

#### **DETAILED STEPS**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		• Enter your password if prompted.
	Example:	
Step 2	Router> enable configure terminal	Enters global configuration mode.
Step 2	Configure Cerminal	Enters grobal configuration mode.
	Example: Router# configure terminal	
Step 3	interface type number	Specifies the interface type and number and enters interface configuration mode.
	<pre>Example: Router(config)# interface gigabitethernet 0/1/1</pre>	
Step 4	ip address ip-address mask	Configures the interface with an IP address.
	Example: Router(config-if)# ip address 10.2.3.1 255.255.255.0	Note This step is required only when the interface needs to communicate with an iBGP neighbor.
Step 5	<pre>clns router isis area-tag  Example: Router(config-if)# clns router isis osi-as-202</pre>	Specifies that the interface is actively routing IS-IS when the network protocol is ISO CLNS and identifies the area associated with this routing process.
Step 6	ip router isis area-tag  Example:	Specifies that the interface is actively routing IS-IS when the network protocol is IP and identifies the area associated with this routing process.
	Router(config-if)# ip router isis osi-as-202	Note This step is required only when the interface needs to communicate with an iBGP neighbor, and the IGP is IS-IS.
Step 7	no shutdown	Turns on the interface.
	<pre>Example: Router(config-if)# no shutdown</pre>	
Step 8	end	Exits interface configuration mode and returns to privileged EXEC mode.
	Example: Router(config-if)# end	

# **Advertising Networking Prefixes**

Advertising NSAP address prefix forces the prefixes to be added to the BGP routing table. To configure advertisement of networking prefixes, perform the steps in this procedure.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. router bgp as-number
- 4. no bgp default ipv4-unicast
- **5. neighbor** {*ip-address* | *peer-group-name*} **remote-as** *as-number*
- 6. address-family nsap [unicast]
- 7. **network** *nsap-prefix* [**route-map** *map-tag*]
- 8. neighbor ip-address activate
- 9. end

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		• Enter your password if prompted.
	Example:	
	Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	router bgp as-number	Configures a BGP routing process and enters router configuration mode for the specified routing process.
	Example: Router(config)# router bgp 65101	
Step 4	no bgp default ipv4-unicast	Disables the default behavior of the BGP routing process exchanging IPv4 addressing information with BGP
	<pre>Example: Router(config-router)# no bgp default ipv4-unicast</pre>	neighbor routers.
Step 5	<pre>neighbor {ip-address   peer-group-name} remote-as as-number</pre>	Adds an IP address or peer group name of the BGP neighbor in the specified autonomous system to the BGP neighbor table of the local router.
	Example: Router(config-router)# neighbor 10.1.2.2 remote-as 64202	
Step 6	address-family nsap [unicast]	Specifies the NSAP address family and enters address family configuration mode.
	<pre>Example: Router(config-router)# address-family nsap</pre>	• The optional unicast keyword specifies the NSAP unicast address prefixes. By default, the router is placed in unicast NSAP address family configuration mode if the unicast keyword is not specified with the address-family nsap command.

	Command or Action	Purpose
Step 7	network nsap-prefix [route-map map-tag]	Advertises a single prefix of the local OSI routing domain and enters it in the BGP routing table.
	Example: Router(config-router-af)# network 49.0101.1111.1111.1111.1111.00	<ul> <li>Note It is possible to advertise a single prefix, in which case this prefix could be the unique NSAP address prefix of the local OSI routing domain.         Alternatively, multiple longer prefixes, each covering a small portion of the OSI routing domain, can be used to selectively advertise different areas.     </li> <li>The advertising of NSAP address prefixes can be controlled by using the optional route-map keyword. If no route map is specified, all NSAP address prefixes are redistributed.</li> </ul>
Step 8	neighbor ip-address activate	Specifies that NSAP routing information will be sent to the specified BGP neighbor.
	<pre>Example: Router(config-router-af) neighbor 10.1.2.2 activate</pre>	Note See the description of the <b>neighbor</b> command in the documents listed in the "Additional References" section on page 35 for more details on the use of this command.
Step 9	end	Exits address family configuration mode and returns to privileged EXEC mode.
	<pre>Example: Router(config-router-af)# end</pre>	

# **Redistributing Routes from BGP into IS-IS**

Route redistribution must be approached with caution. We do not recommend injecting the full set of BGP routes into IS-IS because excessive routing traffic will be added to IS-IS. Route maps can be used to control which dynamic routes are redistributed.

To configure route redistribution from BGP into IS-IS, perform the steps in this procedure.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. router isis area-tag
- **4. net** *network-entity-title*
- **5. redistribute** *protocol as-number* [*route-type*] [**route-map** *map-tag*]
- 6. end

#### **DETAILED STEPS**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		• Enter your password if prompted.
	Example:	
	Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
040	Router# configure terminal	G. C. YO.Y.
Step 3	router isis area-tag	Configures an IS-IS routing process and enters router configuration mode for the specified routing process.
	Example:	<b>Note</b> You cannot redistribute BGP routes into a
	Router(config)# router isis osi-as-404	Level 1-only IS-IS routing process.
Step 4	<pre>net network-entity-title</pre>	Configures a NET for the routing process.
	Example: Router(config-router)# net 49.0404.7777.7777.7777.00	• If you are configuring multiarea IS-IS, you must specify a NET for each routing process.
Step 5	<pre>redistribute protocol as-number [route-type] [route-map map-tag]</pre> Example:	Redistributes NSAP prefix routes from BGP into the CLNS Level 2 routing table associated with the IS-IS routing process when the <i>protocol</i> argument is set to <b>bgp</b> and the <i>route-type</i> argument is set to <b>clns</b> .
	Router(config-router)# redistribute bgp 65404 clns	• The <i>as-number</i> argument is defined as the autonomous system number of the BGP routing process to be redistributed into CLNS.
		• The redistribution of routes can be controlled by using the optional <b>route-map</b> keyword. If no route map is specified, all BGP routes are redistributed.
Step 6	end	Exits router configuration mode and returns to privileged EXEC mode.
	<pre>Example: Router(config-router)# end</pre>	

# **Redistributing Routes from IS-IS into BGP**

Route redistribution must be approached with caution because redistributed route information is stored in the routing tables. Large routing tables may make the routing process slower. Route maps can be used to control which dynamic routes are redistributed.

To configure route redistribution from IS-IS into BGP, perform the steps in this procedure.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal

- 3. router bgp as-number
- 4. no bgp default ipv4-unicast
- 5. address-family nsap [unicast]
- **6. redistribute** protocol [process-id] [route-type] [**route-map** map-tag]
- 7. end

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	<pre>Example: Router&gt; enable</pre>	Enter your password if prompted.
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	router bgp as-number	Configures a BGP routing process and enters router configuration mode for the specified routing process.
	Example: Router(config)# router bgp 65202	
Step 4	no bgp default ipv4-unicast  Example:	Disables the default behavior of the BGP routing process exchanging IPv4 addressing information with BGP neighbor routers.
	Router(config-router)# no bgp default ipv4-unicast	
Step 5	address-family nsap [unicast]	Specifies the NSAP address family and enters address family configuration mode.
	<pre>Example: Router(config-router)# address-family nsap</pre>	
Step 6	<pre>redistribute protocol [process-id] [route-type] [route-map map-tag]</pre> Example:	Redistributes routes from the CLNS Level 2 routing table associated with the IS-IS routing process into BGP as NSAP prefixes when the <i>protocol</i> argument is set to <b>isis</b> and the <i>route-type</i> argument is set to <b>clns</b> .
	Router(config-router-af)# redistribute isis osi-as-202 clns route-map internal-routes-only	• The <i>process-id</i> argument is defined as the area name for the relevant IS-IS routing process to be redistributed.
		• The redistribution of routes can be controlled by using the optional <b>route-map</b> keyword. If no route map is specified, all Level 2 routes are redistributed.
Step 7	end	Exits address family configuration mode and returns to privileged EXEC mode.
	<pre>Example: Router(config-router-af)# end</pre>	

### **Configuring BGP Peer Groups and Route Reflectors**

BGP peer groups reduce the number of configuration commands by applying a BGP **neighbor** command to multiple neighbors. Using a BGP peer group with a local router configured as a BGP route reflector allows BGP routing information received from one member of the group to be replicated to all other group members. Without a peer group, each route reflector client must be specified by IP address.

To create a BGP peer group and use the group as a BGP route reflector client, perform the steps in this procedure. This is an optional task and is used with internal BGP neighbors. In this task, some of the BGP syntax is shown with the *peer-group-name* argument only and only one neighbor is configured as a member of the peer group. Repeat Step 9 to configure other BGP neighbors as members of the peer group.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. router bgp as-number
- 4. no bgp default ipv4-unicast
- 5. neighbor peer-group-name peer-group
- 6. neighbor peer-group-name remote-as as-number
- 7. address-family nsap [unicast]
- 8. neighbor peer-group-name route-reflector-client
- **9. neighbor** *ip-address* **peer-group** *peer-group-name*
- 10. end

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		Enter your password if prompted.
	Example:	
	Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	router bgp as-number	Configures a BGP routing process and enters router configuration mode for the specified routing process.
	Example:	
	Router(config)# router bgp 65303	
Step 4	no bgp default ipv4-unicast	Disables the default behavior of the BGP routing process exchanging IPv4 addressing information with BGP
	Example:	neighbor routers.
	Router(config-router)# no bgp default ipv4-unicast	

	Command or Action	Purpose
Step 5	neighbor peer-group-name peer-group	Creates a BGP peer group.
	<pre>Example: Router(config-router)# neighbor ibgp-peers peer-group</pre>	
Step 6	neighbor peer-group-name remote-as as-number	Adds the peer group name of the BGP neighbor in the specified autonomous system to the BGP neighbor table of the local router.
	<pre>Example: Router(config-router)# neighbor ibgp-peers remote-as 65303</pre>	the local fouter.
Step 7	address-family nsap [unicast]	Specifies the NSAP address family and enters address family configuration mode.
	<pre>Example: Router(config-router)# address-family nsap</pre>	
Step 8	neighbor peer-group-name route-reflector-client	Configures the router as a BGP route reflector and configures the specified peer group as its client.
	<pre>Example: Router(config-router-af)# neighbor ibgp-peers route-reflector-client</pre>	
Step 9	neighbor ip-address peer-group peer-group	Assigns a BGP neighbor to a BGP peer group.
	<pre>Example: Router(config-router-af)# neighbor 10.4.5.4 peer-group ibgp-peers</pre>	
Step 10	end	Exits address family configuration mode and returns to privileged EXEC mode.
	<pre>Example: Router(config-router-af)# end</pre>	

### **Filtering Inbound Routes Based on NSAP Prefixes**

Perform this task to filter inbound BGP routes based on NSAP prefixes. The **neighbor prefix-list in** command is configured in address family configuration mode to filter inbound routes.

### **Prerequisites**

You must specify either a CLNS filter set or a CLNS filter expression before configuring the **neighbor** command. See descriptions for the **clns filter-expr** and **clns filter-set** commands for more information.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. router bgp as-number
- 4. no bgp default ipv4-unicast

- 5. address-family nsap [unicast]
- **6. neighbor** {ip-address | peer-group-name} **prefix-list** {clns-filter-expr-name | clns-filter-set-name} in
- **7. end**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		Enter your password if prompted.
	Example:	
_	Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	router bgp as-number	Configures a BGP routing process and enters router configuration mode for the specified routing process.
	Example: Router(config)# router bgp 65200	
Step 4	<pre>no bgp default ipv4-unicast  Example: Router(config-router)# no bgp default ipv4-unicast</pre>	Disables the default behavior of the BGP routing process exchanging IPv4 addressing information with BGP neighbor routers.
Step 5	address-family nsap [unicast]	Specifies the address family and enters address family configuration mode.
	<pre>Example: Router(config-router)# address-family nsap</pre>	
Step 6	<pre>neighbor {ip-address   peer-group-name} prefix-list {clns-filter-expr-name   clns-filter-set-name} in</pre>	Specifies a CLNS filter set or CLNS filter expression to be used to filter inbound BGP routes.
	,	• The <i>clns-filter-expr-name</i> argument is defined with the <b>clns filter-expr</b> configuration command.
	<pre>Example: Router(config-router-af)# neighbor 10.23.4.1 prefix-list abc in</pre>	• The <i>clns-filter-set-name</i> argument is defined with the <b>clns filter-set</b> configuration command.
Step 7	end	Exits address family configuration mode and returns to privileged EXEC mode.
	Example: Router(config-router-af)# end	

### Filtering Outbound BGP Updates Based on NSAP Prefixes

Perform this task to filter outbound BGP updates based on NSAP prefixes, use the **neighbor prefix-list out** command in address family configuration mode. This task is configured at Router 7 in Figure 1. In this task, a CLNS filter is created with two entries to deny NSAP prefixes starting with 49.0404 and to permit all other NSAP prefixes starting with 49. A BGP peer group is created and the filter is applied to outbound BGP updates for the neighbor that is a member of the peer group.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. clns filter-set name [deny] template
- 4. clns filter-set name [permit] template
- 5. router bgp as-number
- 6. no bgp default ipv4-unicast
- 7. neighbor peer-group-name peer-group
- **8. neighbor** {*ip-address* | *peer-group-name*} **remote-as** *as-number*
- 9. address-family nsap [unicast]
- **10. neighbor** {ip-address | peer-group-name} **prefix-list** {clns-filter-expr-name | clns-filter-set-name} **out**
- 11. neighbor ip-address peer-group peer-group-name
- 12. end

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		Enter your password if prompted.
	Example: Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	clns filter-set name [deny] template	Defines a NSAP prefix match for a deny condition for use in CLNS filter expressions.
	<pre>Example: Router(config)# clns filter-set routes0404 deny 49.0404</pre>	• In this example, a deny action is returned if an address starts with 49.0404.

	Command or Action	Purpose
Step 4	clns filter-set name [permit] template	Defines a NSAP prefix match for a permit condition for use in CLNS filter expressions.
	Example: Router(config)# clns filter-set routes0404	• In this example, a permit action is returned if an address starts with 49.
	permit 49	Note Although the permit example in this step allows all NSAP addresses starting with 49, the match condition in Step 3 is processed first so the NSAP addresses starting with 49.0404 are still denied.
Step 5	router bgp as-number	Configures a BGP routing process and enters router configuration mode for the specified routing process.
	<pre>Example: Router(config)# router bgp 65404</pre>	
Step 6	<pre>no bgp default ipv4-unicast  Example: Router(config-router)# no bgp default</pre>	Disables the default behavior of the BGP routing process exchanging IPv4 addressing information with BGP neighbor routers.
0. 7	ipv4-unicast	a pap
Step 7	neighbor peer-group-name peer-group	Creates a BGP peer group.
	<pre>Example: Router(config-router)# neighbor ebgp-peers peer-group</pre>	• In this example, the BGP peer group named ebgp-peers is created.
Step 8	neighbor {ip-address   peer-group-name} remote-as as-number	Adds an IP address or peer group name of the BGP neighbor in the specified autonomous system to the BGP neighbor table of the local router.
	<pre>Example: Router(config-router)# neighbor ebgp-peers remote-as 65303</pre>	• In this example, the peer group named ebgp-peers is added to the BGP neighbor table.
Step 9	address-family nsap [unicast]	Specifies the NSAP address family and enters address family configuration mode.
	<pre>Example: Router(config-router)# address-family nsap</pre>	
Step 10	<pre>neighbor {ip-address   peer-group-name} prefix-list {clns-filter-expr-name   clns-filter-set-name} out</pre>	Specifies a CLNS filter set or CLNS filter expression to be used to filter outbound BGP updates.
	, , , , , , , , , , , , , , , , , , ,	• The <i>clns-filter-expr-name</i> argument is defined with the <b>clns filter-expr</b> configuration command.
	<pre>Example: Router(config-router-af)# neighbor ebgp-peers prefix-list routes0404 out</pre>	• The <i>clns-filter-set-name</i> argument is defined with the <b>clns filter-set</b> configuration command.
		• In this example, the filter set named routes0404 was created in Step3 and Step 4.

	Command or Action	Purpose
Step 11	neighbor ip-address peer-group peer-group	Assigns a BGP neighbor to a BGP peer group.
	<pre>Example: Router(config-router-af)# neighbor 10.6.7.8 peer-group ebgp-peers</pre>	
Step 12	end	Exits address family configuration mode and returns to privileged EXEC mode.
	<pre>Example: Router(config-router-af)# end</pre>	

# **Originating Default Routes for a Neighboring Routing Domain**

To create a default CLNS route that points to the local router on behalf of a neighboring OSI routing domain, perform the steps in this procedure. This is an optional task and is normally used only with external BGP neighbors.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. router bgp as-number
- 4. no bgp default ipv4-unicast
- 5. address-family nsap [unicast]
- **6. neighbor** {ip-address | peer-group-name} **default-originate** [**route-map** map-tag]
- 7. end

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		• Enter your password if prompted.
	Example: Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	router bgp as-number	Configures a BGP routing process and enters router configuration mode for the specified routing process.
	Example: Router(config)# router bgp 64803	

	Command or Action	Purpose
Step 4	no bgp default ipv4-unicast  Example:	Disables the default behavior of the BGP routing process exchanging IPv4 addressing information with BGP neighbor routers.
	Router(config-router)# no bgp default ipv4-unicast	
Step 5	address-family nsap [unicast]	Specifies the NSAP address family and enters address family configuration mode.
	<pre>Example: Router(config-router)# address-family nsap</pre>	
Step 6	<pre>neighbor {ip-address   peer-group-name} default-originate [route-map map-tag]</pre>	Generates a default CLNS route that points to the local router and that will be advertised to the neighboring OSI routing domain.
	Example:	
	Router(config-router-af)# neighbor 172.16.2.3 default-originate	
Step 7	end	Exits address family configuration mode and returns to privileged EXEC mode.
	Example:	
	Router(config-router-af)# end	

### **Verifying MP-BGP Support for CLNS**

To verify the configuration, use the **show running-config** EXEC command. Sample output is located in the "Implementing MP-BGP Support for CLNS: Example" section on page 30. To verify that the Multiprotocol BGP (MP-BGP) Support for CLNS feature is working, perform the following steps.

#### **SUMMARY STEPS**

- 1. show clns neighbors
- 2. show clns route
- 3. show bgp nsap unicast summary
- 4. show bgp nsap unicast

#### **DETAILED STEPS**

#### Step 1 show clns neighbors

Use this command to confirm that the local router has formed all the necessary IS-IS adjacencies with other Level 2 IS-IS routers in the local OSI routing domain. If the local router has any directly connected external BGP peers, the output from this command will show that the external neighbors have been discovered, in the form of ES-IS adjacencies.

In the following example, the output is displayed for router R2, shown in Figure 1 on page 3. R2 has three CLNS neighbors. R1 and R4 are ES-IS neighbors because these nodes are in different autonomous systems from R2. R3 is an IS-IS neighbor because it is in the same autonomous system as R2. Note that

the system ID is replaced by CLNS hostnames (r1, r3, and r4) that are defined at the start of each configuration file. Specifying the CLNS hostname means that you need not remember which system ID corresponds to which hostname.

Router# show clns neighbors

```
Tag osi-as-202:
System Id
           Interface
                       SNPA
                                         State Holdtime Type Protocol
                                               274 IS ES-IS
             Se2/0
                       *HDI.C*
                                         Uр
r1
             Et0/1
                                               9
                                                        L2
r3
                       0002.16de.8481
                                         αU
                                                            IS-IS
                                               275
                                                            ES-TS
r4
             Se2/2
                       *HDI.C*
                                         ФŪ
                                                        TS
```

#### Step 2 show clns route

Use this command to confirm that the local router has calculated routes to other areas in the local OSI routing domain. In the following example of output from router R2, shown in Figure 1 on page 3, the routing table entry—i 49.0202.3333 [110/10] via R3—shows that router R2 knows about other local IS-IS areas within the local OSI routing domain.

Router# show clns route

```
Codes: C - connected, S - static, d - DecnetIV
      I - ISO-IGRP, i - IS-IS, e - ES-IS
      B - BGP,
                    b - eBGP-neighbor
C 49.0202.2222 [2/0], Local IS-IS Area
C 49.0202.2222.2222.2222.200 [1/0], Local IS-IS NET
b 49.0101.1111.1111.1111.1111.00 [15/10]
     via r1, Serial2/0
  49.0202.3333 [110/10]
     via r3, GigabitEthernet0/1/1
  49.0303.4444.4444.4444.4444.00 [15/10]
     via r4, Serial2/2
  49.0101 [20/1]
     via rl, Serial2/0
 49.0303 [20/1]
     via r4, Serial2/2
 49.0404 [200/1]
     via r9
i 49.0404.9999.9999.9999.00 [110/10]
     via r3, GigabitEthernet0/1/1
```

#### Step 3 show bgp nsap unicast summary

Use this command to verify that the TCP connection to a particular neighbor is active. In the following example output, search the appropriate row based on the IP address of the neighbor. If the State/PfxRcd column entry is a number, including zero, the TCP connection for that neighbor is active.

Router# show bgp nsap unicast summary

```
BGP router identifier 10.1.57.11, local AS number 65202
BGP table version is 6, main routing table version 6
5 network entries and 8 paths using 1141 bytes of memory
6 BGP path attribute entries using 360 bytes of memory
4 BGP AS-PATH entries using 96 bytes of memory
0 BGP route-map cache entries using 0 bytes of memory
O BGP filter-list cache entries using O bytes of memory
BGP activity 5/0 prefixes, 8/0 paths, scan interval 60 secs
Neighbor
              V
                   AS MsgRcvd MsgSent TblVer InQ OutQ Up/Down State/PfxRcd
10.1.2.1
              4 65101 34 34
                                      6 0 0 00:29:11
                                                                       1
              4 65202
                           35
                                   36
                                             6
                                                 0
                                                      0 00:29:16
                                                                       3
10.2.3.3
```

#### Step 4 show bgp nsap unicast

Enter the **show bgp nsap unicast** command to display all the NSAP prefix routes that the local router has discovered. In the following example of output from router R2, shown in Figure 1 on page 3, a single valid route to prefix 49.0101 is shown. Two valid routes—marked by a \*—are shown for the prefix 49.0404. The second route is marked with a \*>i sequence, representing the best route to this prefix.

Router# show bgp nsap unicast

```
BGP table version is 3, local router ID is 192.168.3.1
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal,
             r RIB-failure, S Stale
Origin codes: i - IGP, e - EGP, ? - incomplete
  Network
                   Next Hop
                                       Metric LocPrf Weight Path
                   49.0101.1111.1111.1111.1111.00
*> 49.0101
                                                          0 65101 i
* i49.0202.2222
                   49.0202.3333.3333.3333.3333.00
                                                 100
                   49.0202.2222.2222.222.00
                                                      32768 2
* i49.0202.3333
                   49.0202.3333.3333.3333.3333.00
                                                 100
                   49.0202.2222.2222.222.00
                                                      32768 ?
                   49.0303.4444.4444.4444.00
*> 49.0303
                                                          0 65303 i
  49.0404
                   49.0303.4444.4444.4444.00
                                                          0 65303 65404 i
                   49.0404.9999.9999.9999.9999.00
                                                 100
                                                          0 65404 i
```

# **Troubleshooting MP-BGP Support for CLNS**

The **debug bgp nsap unicast** commands enable diagnostic output concerning various events relating to the operation of the CLNS packets in the BGP routing protocol to be displayed on a console. These commands are intended only for troubleshooting purposes because the volume of output generated by the software when they are used can result in severe performance degradation on the router. See the *Cisco IOS Debug Command Reference* for more information about using these **debug** commands.

To troubleshoot problems with the configuration of MP-BGP support for CLNS and to minimize the impact of the **debug** commands used in this procedure, perform the following steps.

#### **SUMMARY STEPS**

- 1. Attach a console.
- 2. no logging console
- 3. Use Telnet to access a router port.
- 4. enable
- 5. terminal monitor
- 6. debug bgp nsap unicast [neighbor-address | dampening | keepalives | updates]
- 7. no terminal monitor

- 8. no debug bgp nsap unicast [neighbor-address | dampening | keepalives | updates]
- 9. logging console

#### **DETAILED STEPS**

**Step 1** Attach a console directly to a router running the Cisco IOS XE software release that includes the Multiprotocol BGP (MP-BGP) Support for CLNS feature.



This procedure will minimize the load on the router created by the **debug bgp nsap unicast** commands because the console port will no longer be generating character-by-character processor interrupts. If you cannot connect to a console directly, you can run this procedure via a terminal server. If you must break the Telnet connection, however, you may not be able to reconnect because the router may be unable to respond due to the processor load of generating the **debug bgp nsap unicast** output.

Step 2 no logging console

This command disables all logging to the console terminal.

- **Step 3** Use Telnet to access a router port.
- Step 4 enable

Enter this command to access privileged EXEC mode.

Step 5 terminal monitor

This command enables logging on the virtual terminal.

Step 6 debug bgp nsap unicast [neighbor-address | dampening | keepalives | updates]

Enter only specific **debug bgp nsap unicast** commands to isolate the output to a certain subcomponent and minimize the load on the processor. Use appropriate arguments and keywords to generate more detailed debug information on specified subcomponents.

Step 7 no terminal monitor

This command disables logging on the virtual terminal.

Step 8 no debug bgp nsap unicast [neighbor-address | dampening | keepalives | updates]

Enter the specific **no debug bgp nsap unicast** command when you are finished.

Step 9 logging console

This command reenables logging to the console.

# **Configuration Examples for MP-BGP Support for CLNS**

This section provides configuration examples to match the identified configuration tasks in the previous section. To provide an overview of all the router configurations in Figure 1 on page 3, more detailed configurations for each router are added at the end of this section.

- Configuring and Activating a BGP Neighbor to Support CLNS: Example, page 27
- Configuring an IS-IS Routing Process: Example, page 27

- Configuring Interfaces: Example, page 27
- Advertising Networking Prefixes: Example, page 28
- Redistributing Routes from BGP into IS-IS: Example, page 28
- Redistributing Routes from IS-IS into BGP: Example, page 28
- Configuring BGP Peer Groups and Route Reflectors: Example, page 29
- Filtering Inbound Routes Based on NSAP Prefixes: Example, page 29
- Filtering Outbound BGP Updates Based on NSAP Prefixes: Example, page 29
- Originating a Default Route and Outbound Route Filtering: Example, page 30
- Implementing MP-BGP Support for CLNS: Example, page 30

### **Configuring and Activating a BGP Neighbor to Support CLNS: Example**

In the following example, the router R1, shown in Figure 3 on page 31, in the autonomous system AS65101 is configured to run BGP and activated to support CLNS. Router R1 is the only Level 2 IS-IS router in autonomous system AS65101, and it has only one connection to another autonomous system via router R2 in AS65202. The **no bgp default ipv4-unicast** command is configured on the router to disable the default behavior of the BGP routing process exchanging IPv4 addressing information with BGP neighbor routers. After the NSAP address family configuration mode is enabled with the **address-family nsap** command, the router is configured to advertise the NSAP prefix of 49.0101 to its BGP neighbors and to send NSAP routing information to the BGP neighbor at 10.1.2.2.

```
router bgp 65101
no bgp default ipv4-unicast
address-family nsap
network 49.0101...
neighbor 10.1.2.2 activate
exit-address-family
```

### **Configuring an IS-IS Routing Process: Example**

In the following example, the router R1, shown in Figure 3 on page 31, is configured to run an IS-IS process:

```
router isis osi-as-101 net 49.0101.1111.1111.1111.1111.00
```

The default IS-IS routing process level is used.

### **Configuring Interfaces: Example**

In the following example, two of the interfaces of the router R2, shown in Figure 3 on page 31, in the autonomous system AS65202 are configured to run CLNS. GigabitEthernet interface 0/1/1 is connected to the local OSI routing domain and is configured to run IS-IS when the network protocol is CLNS using the **clns router isis** command. The serial interface 2/0 with the local IP address of 10.1.2.2 is connected with an eBGP neighbor and is configured to run CLNS through the **clns enable** command:

```
interface serial 2/0
ip address 10.1.2.2 255.255.255.0
clns enable
no shutdown
```

```
! interface gigabitethernet 0/1/1 ip address 10.2.3.1 255.255.255.0 clns router isis osi-as-202 no shutdown
```

### **Advertising Networking Prefixes: Example**

In the following example, the router R1, shown in Figure 3 on page 31, is configured to advertise the NSAP prefix of 49.0101 to other routers. The NSAP prefix unique to autonomous system AS65101 is advertised to allow the other autonomous systems to discover the existence of autonomous system AS65101 in the network.

```
router bgp 65101
no bgp default ipv4-unicast
neighbor 10.1.2.2 remote-as 64202
address-family nsap
network 49.0101...
neighbor 10.1.2.2 activate
```

### **Redistributing Routes from BGP into IS-IS: Example**

In the following example, the routers R7 and R9, shown in Figure 3 on page 31, in the autonomous system AS65404 are configured to redistribute BGP routes into the IS-IS routing process called osi-as-404. Redistributing the BGP routes allows the Level 2 IS-IS router, R8, to advertise routes to destinations outside the autonomous system AS65404. Without a route map being specified, all BGP routes are redistributed.

#### **Router R7**

```
router isis osi-as-404
net 49.0404.7777.7777.7777.7777.00
redistribute bgp 65404 clns
```

#### **Router R9**

```
router isis osi-as-404
net 49.0404.9999.9999.9999.909
redistribute bgp 65404 clns
```

### **Redistributing Routes from IS-IS into BGP: Example**

In the following example, the router R2, shown in Figure 3 on page 31, in the autonomous system AS65202 is configured to redistribute Level 2 CLNS NSAP routes into BGP. A route map is used to permit only routes from within the local autonomous system to be redistributed into BGP. Without a route map being specified, every NSAP route from the CLNS Level 2 prefix table is redistributed. The **no bgp default ipv4-unicast** command is configured on the router to disable the default behavior of the BGP routing process exchanging IPv4 addressing information with BGP neighbor routers.

```
clns filter-set internal-routes permit 49.0202...
!
route-map internal-routes-only permit 10
  match clns address internal-routes
!
router isis osi-as-202
  net 49.0202.2222.2222.2222.00
```

```
!
router bgp 65202
no bgp default ipv4-unicast
address-family nsap
redistribute isis osi-as-202 clns route-map internal-routes-only
```

### **Configuring BGP Peer Groups and Route Reflectors: Example**

Router R5, shown in Figure 1 on page 3, has only iBGP neighbors and runs IS-IS on both interfaces. To reduce the number of configuration commands, configure R5 as a member of a BGP peer group called ibgp-peers. The peer group is automatically activated under the **address-family nsap** command by configuring the peer group as a route reflector client allowing it to exchange NSAP routing information between group members. The BGP peer group is also configured as a BGP route reflector client to reduce the need for every iBGP router to be linked to each other.

In the following example, the router R5 in the autonomous system AS65303 is configured as a member of a BGP peer group and a BGP route reflector client:

```
router bgp 65303

no bgp default ipv4-unicast
neighbor ibgp-peers peer-group
neighbor ibgp-peers remote-as 65303
address-family nsap
neighbor ibgp-peers route-reflector-client
neighbor 10.4.5.4 peer-group ibgp-peers
neighbor 10.5.6.6 peer-group ibgp-peers
exit-address-family
```

### **Filtering Inbound Routes Based on NSAP Prefixes: Example**

In the following example, the router R1, shown in Figure 3 on page 31, in the autonomous system AS65101 is configured to filter inbound routes specified by the default-prefix-only prefix list:

```
clns filter-set default-prefix-only deny 49...
clns filter-set default-prefix-only permit default
!
router isis osi-as-101
net 49.0101.1111.1111.1111.1111.00
!
router bgp 65101
no bgp default ipv4-unicast
neighbor 10.1.2.2 remote-as 64202
address-family nsap
network 49.0101.1111.1111.1111.1111.00
neighbor 10.1.2.2 activate
neighbor 10.1.2.2 prefix-list default-prefix-only in
```

### Filtering Outbound BGP Updates Based on NSAP Prefixes: Example

In the following example, outbound BGP updates are filtered based on NSAP prefixes. This example is configured at Router 7 in Figure 3 on page 31. In this task, a CLNS filter is created with two entries to deny NSAP prefixes starting with 49.0404 and to permit all other NSAP prefixes starting with 49. A BGP peer group is created and the filter is applied to outbound BGP updates for the neighbor that is a member of the peer group.

```
clns filter-set routes0404 deny 49.0404...
clns filter-set routes0404 permit 49...
!
router bgp 65404
no bgp default ipv4-unicast
neighbor ebgp-peers remote-as 65303
address-family nsap
neighbor ebgp-peers prefix-list routes0404 out
neighbor 10.6.7.8 peer-group ebgp-peers
```

### Originating a Default Route and Outbound Route Filtering: Example

In Figure 3 on page 31, autonomous system AS65101 is connected to only one other autonomous system, AS65202. Router R2 in AS65202 provides the connectivity to the rest of the network for autonomous system AS65101 by sending a default route to R1. Any packets from Level 1 routers within autonomous system AS65101 with destination NSAP addresses outside the local Level 1 network are sent to R1, the nearest Level 2 router. Router R1 forwards the packets to router R2 using the default route.

In the following example, the router R2, shown in Figure 3 on page 31, in the autonomous system AS65202 is configured to generate a default route for router R1 in the autonomous system AS65101, and an outbound filter is created to send only the default route NSAP addressing information in the BGP update messages to router R1.

```
clns filter-set default-prefix-only deny 49...
clns filter-set default-prefix-only permit default
!
router bgp 65202
no bgp default ipv4-unicast
neighbor 10.1.2.1 remote-as 64101
address-family nsap
network 49.0202...
neighbor 10.1.2.1 activate
neighbor 10.1.2.1 default-originate
neighbor 10.1.2.1 prefix-list default-prefix-only out
```

### **Implementing MP-BGP Support for CLNS: Example**

Figure 3 shows a generic BGP CLNS network containing nine routers that are grouped into four different autonomous systems (in BGP terminology) or routing domains (in OSI terminology). This section contains complete configurations for all routers shown in Figure 3.

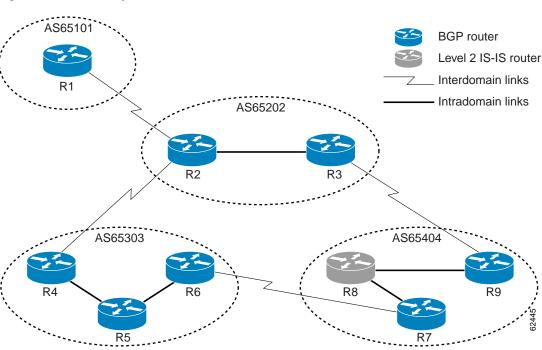


Figure 3 Components in a Generic BGP CLNS Network

If you need more details about commands used in the following examples, see the configuration tasks earlier in this document and the documents listed in the "Additional References" section on page 35.

## **Autonomous System AS65101**

## Router 1

```
clns filter-set default-prefix-only deny 49...
clns filter-set default-prefix-only permit default
router isis osi-as-101
net 49.0101.1111.1111.1111.00
router bgp 65101
no bgp default ipv4-unicast
neighbor 10.1.2.2 remote-as 65202
 address-family nsap
 neighbor 10.1.2.2 activate
  neighbor 10.1.2.2 prefix-list default-prefix-only in
  network 49.0101...
  exit-address-family
interface serial 2/0
 ip address 10.1.2.1 255.255.255.0
 clns enable
no shutdown
```

## **Autonomous System AS65202**

### Router 2

```
clns filter-set default-prefix-only deny 49... clns filter-set default-prefix-only permit default
```

```
clns filter-set internal-routes permit 49.0202...
route-map internal-routes-only permit 10
 match clns address internal-routes
router isis osi-as-202
 net 49.0202.2222.2222.2222.00
router bgp 65202
  no bgp default ipv4-unicast
  neighbor 10.1.2.1 remote-as 65101
 neighbor 10.2.3.3 remote-as 65202
  neighbor 10.2.4.4 remote-as 65303
  address-family nsap
   neighbor 10.1.2.1 activate
   neighbor 10.2.3.3 activate
   neighbor 10.2.4.4 activate
    redistribute isis osi-as-202 clns route-map internal-routes-only
   neighbor 10.1.2.1 default-originate
   neighbor 10.1.2.1 prefix-list default-prefix-only out
    exit-address-family
interface gigabitethernet 0/1/1
  ip address 10.2.3.2 255.255.255.0
  clns router isis osi-as-202
 no shutdown
interface serial 2/0
  ip address 10.1.2.2 255.255.255.0
  clns enable
 no shutdown
interface serial 2/2
  ip address 10.2.4.2 255.255.255.0
  clns enable
  no shutdown
Router 3
clns filter-set internal-routes permit 49.0202...
route-map internal-routes-only permit 10
  match clns address internal-routes
router isis osi-as-202
net 49.0202.3333.3333.3333.00
router bgp 65202
no bgp default ipv4-unicast
neighbor 10.2.3.2 remote-as 65202
neighbor 10.3.9.9 remote-as 65404
address-family nsap
 neighbor 10.2.3.2 activate
 neighbor 10.3.9.9 activate
 redistribute isis osi-as-202 clns route-map internal-routes-only
  exit-address-family
interface gigabitethernet 0/1/1
 ip address 10.2.3.3 255.255.255.0
 clns router isis osi-as-202
no shutdown
1
```

```
interface serial 2/2
ip address 10.3.9.3 255.255.255.0
clns enable
no shutdown
```

## **Autonomous System AS65303**

#### **Router 4**

router isis osi-as-303

```
net 49.0303.4444.4444.4444.400
router bgp 65303
no bgp default ipv4-unicast
neighbor 10.2.4.2 remote-as 65202
neighbor 10.4.5.5 remote-as 65303
 address-family nsap
 no synchronization
 neighbor 10.2.4.2 activate
  neighbor 10.4.5.5 activate
 network 49.0303...
  exit-address-family
interface gigabitethernet 0/2/1
 ip address 10.4.5.4 255.255.255.0
 clns router isis osi-as-303
no shut.down
interface serial 2/3
 ip address 10.2.4.4 255.255.255.0
clns enable
no shutdown
Router 5
router isis osi-as-303
net 49.0303.5555.5555.5555.5555.00
router bgp 65303
no bgp default ipv4-unicast
neighbor ibgp-peers peer-group
neighbor ibgp-peers remote-as 65303
 address-family nsap
  no synchronization
 neighbor ibgp-peers route-reflector-client
 neighbor 10.4.5.4 peer-group ibgp-peers
 neighbor 10.5.6.6 peer-group ibgp-peers
  exit-address-family
interface gigabitethernet 0/2/1
ip address 10.4.5.5 255.255.255.0
 clns router isis osi-as-303
no shutdown
```

#### Router 6

no shutdown

```
router isis osi-as-303
net 49.0303.6666.6666.6666.00
```

interface gigabitethernet 0/3/1
ip address 10.5.6.5 255.255.255.0
clns router isis osi-as-303

```
router bgp 65303
no bgp default ipv4-unicast
neighbor 10.5.6.5 remote-as 65303
neighbor 10.6.7.7 remote-as 65404
 address-family nsap
 no synchronization
 neighbor 10.5.6.5 activate
 neighbor 10.6.7.7 activate
 network 49.0303...
interface gigabitethernet 0/3/1
ip address 10.5.6.6 255.255.255.0
clns router isis osi-as-303
no shutdown
interface serial 2/2
ip address 10.6.7.6 255.255.255.0
 clns enable
no shutdown
```

## **Autonomous System AS65404**

#### **Router 7**

```
clns filter-set external-routes deny 49.0404...
clns filter-set external-routes permit 49...
route-map noexport permit 10
  match clns address external-routes
  set community noexport
router isis osi-as-404
net 49.0404.7777.7777.7777.700
redistribute bgp 404 clns
router bgp 65404
no bgp default ipv4-unicast
neighbor 10.6.7.6 remote-as 65303
neighbor 10.8.9.9 remote-as 65404
address-family nsap
 neighbor 10.6.7.6 activate
 neighbor 10.8.9.9 activate
 neighbor 10.8.9.9 send-community
 neighbor 10.8.9.9 route-map noexport out
 network 49.0404...
interface gigabitethernet 1/0/1
 ip address 10.7.8.7 255.255.255.0
clns router isis osi-as-404
ip router isis osi-as-404
no shutdown
interface serial 2/3
ip address 10.6.7.7 255.255.255.0
clns enable
no shutdown
Router 8
router isis osi-as-404
```

net 49.0404.8888.8888.8888.8888.00

!

```
interface gigabitethernet 1/0/1 ip address 10.7.8.8 255.255.255.0 clns router isis osi-as-404 ip router isis osi-as-404 no shutdown! interface gigabitethernet 1/1/1 ip address 10.8.9.8 255.255.255.0 clns router isis osi-as-404 ip router isis osi-as-404 no shutdown
```

#### Router 9

```
clns filter-set external-routes deny 49.0404...
clns filter-set external-routes permit 49...
route-map noexport permit 10
 match clns address external-routes
  set community noexport
router isis osi-as-404
net 49.0404.9999.9999.9999.00
redistribute bgp 404 clns
router bgp 65404
no bgp default ipv4-unicast
neighbor 10.3.9.3 remote-as 65202
neighbor 10.7.8.7 remote-as 65404
 address-family nsap
 network 49.0404...
 neighbor 10.3.9.3 activate
  neighbor 10.7.8.7 activate
  neighbor 10.7.8.7 send-community
 neighbor 10.7.8.7 route-map noexport out
interface serial 2/3
ip address 10.3.9.9 255.255.255.0
 clns enable
no shutdown
interface gigabitethernet 1/1/1
 ip address 10.8.9.9 255.255.255.0
 clns router isis osi-as-404
 ip router isis osi-as-404
no shutdown
```

# **Additional References**

The following sections provide references related to the Multiprotocol BGP (MP-BGP) Support for CLNS feature.

# **Related Documents**

Related Topic	Document Title
BGP commands	Cisco IOS IP Routing: BGP Command Reference
CLNS commands	Cisco IOS ISO CLNS Command Reference

# **Standards**

Standard	Title
ISO/IEC 8473	ISO CLNP: Connectionless Network Protocol (ISO-IP). Protocol for providing the connectionless-mode network service.
ISO/IEC 9542	End System to Intermediate System Protocol (ESIS). End system to Intermediate system routing exchange protocol for use in conjunction with the protocol for providing the connectionless-mode network service (ISO 8473).
ISO/IEC 10589	IS-IS, Intermediate System-to-Intermediate System. Intermediate system to Intermediate system intradomain routing information exchange protocol for use in conjunction with the protocol for providing the connectionless-mode network service (ISO 8473).

# **MIBs**

MIB	MIBs Link
None	To locate and download MIBs for selected platforms, Cisco IOS XE releases, and feature sets, use Cisco MIB Locator found at the following URL:
	http://www.cisco.com/go/mibs

# **RFCs**

RFC	Title
RFC 1700	Assigned Numbers
RFC 1771	A Border Gateway Protocol 4 (BGP-4)
RFC 1997	BGP Communities Attribute
RFC 2042	Registering New BGP Attribute Types
RFC 2439	BGP Route Flap Dampening
RFC 2842	Capabilities Advertisement with BGP-4
RFC 2858	Multiprotocol Extensions for BGP-4
RFC 2918	Route Refresh Capability for BGP-4

# **Technical Assistance**

Description	Link
The Cisco Support website provides extensive online resources, including documentation and tools for troubleshooting and resolving technical issues with Cisco products and technologies.	http://www.cisco.com/cisco/web/support/index
To receive security and technical information about your products, you can subscribe to various services, such as the Product Alert Tool (accessed from Field Notices), the Cisco Technical Services Newsletter, and Really Simple Syndication (RSS) Feeds.	
Access to most tools on the Cisco Support website requires a Cisco.com user ID and password.	

# **Feature Information for Configuring MP-BGP Support for CLNS**

Table 1 lists the features in this module.

Use Cisco Feature Navigator to find information about platform support and software image support. Cisco Feature Navigator enables you to determine which Cisco IOS XE software images support a specific software release, feature set, or platform. To access Cisco Feature Navigator, go to <a href="http://www.cisco.com/go/cfn">http://www.cisco.com/go/cfn</a>. An account on Cisco.com is not required.



Table 1 lists only the Cisco IOS XE software release that introduced support for a given feature in a given Cisco IOS XE software release train. Unless noted otherwise, subsequent releases of that Cisco IOS XE software release train also support that feature.

Table 1 Feature Information for MP-BGP Support for CLNS

Feature Name	Releases	Feature Information
Multiprotocol BGP (MP-BGP) Support for CLNS	Cisco IOS XE Release 2.6	The Multiprotocol BGP (MP-BGP) Support for CLNS feature provides the ability to scale Connectionless Network Service (CLNS) networks. The multiprotocol extensions of Border Gateway Protocol (BGP) add the ability to interconnect separate Open System Interconnection (OSI) routing domains without merging the routing domains, thus providing the capability to build very large OSI networks.
		The following commands were introduced or modified by this feature:
		address-family nsap
		• clear bgp nsap
		• clear bgp nsap dampening
		• clear bgp nsap external
		• clear bgp nsap flap-statistics
		clear bgp nsap peer-group
		• debug bgp nsap
		debug bgp nsap dampening
		debug bgp nsap updates
		• neighbor prefix-list
		• network (BGP and multiprotocol BGP)
		• redistribute (BGP to ISO ISIS)
		• redistribute (ISO ISIS to BGP)
		• show bgp nsap
		show bgp nsap community
		show bgp nsap community-list
		show bgp nsap dampened-paths
		show bgp nsap filter-list
		show bgp nsap flap-statistics
		show bgp nsap inconsistent-as
		show bgp nsap neighbors
		• show bgp nsap paths
		show bgp nsap quote-regexp
		show bgp nsap regexp
		show bgp nsap summary

# **Glossary**

**address family**—A group of network protocols that share a common format of network address. Address families are defined by RFC 1700.

**AS**—autonomous system. An IP term to describe a routing domain that has its own independent routing policy and is administered by a single authority. Equivalent to the OSI term "routing domain."

**BGP**—Border Gateway Protocol. Interdomain routing protocol that exchanges reachability information with other BGP systems.

**CLNS**—Connectionless Network Service. An OSI network-layer protocol.

**CMIP**—Common Management Information Protocol. In OSI, a network management protocol created and standardized by ISO for the monitoring and control of heterogeneous networks.

**DCC**—data communications channel.

**DCN**—data communications network.

**ES-IS**—End System-to-Intermediate System. OSI protocol that defines how end systems (hosts) announce themselves to intermediate systems (routers).

**FTAM**—File Transfer, Access, and Management. In OSI, an application-layer protocol developed for network file exchange and management between diverse types of computers.

**IGP**—Interior Gateway Protocol. Internet protocol used to exchange routing information within an autonomous system.

**IGRP**—Interior Gateway Routing Protocol. A proprietary Cisco protocol developed to address the issues associated with routing in large, heterogeneous networks.

**IS**—intermediate system. Routing node in an OSI network.

**IS-IS**—Intermediate System-to-Intermediate System. OSI link-state hierarchical routing protocol based on DECnet Phase V routing, where routers exchange routing information based on a single metric, to determine network topology.

**ISO**—International Organization for Standardization. International organization that is responsible for a wide range of standards, including those relevant to networking. ISO developed the Open System Interconnection (OSI) reference model, a popular networking reference model.

**NSAP address**—network service access point address. The network address format used by OSI networks.

**OSI**—Open System Interconnection. International standardization program created by ISO and ITU-T to develop standards for data networking that facilitate multivendor equipment interoperability.

routing domain—The OSI term that is equivalent to autonomous system for BGP.

**SDH**—Synchronous Digital Hierarchy. Standard that defines a set of rate and format standards that are sent using optical signals over fiber.

**SONET**—Synchronous Optical Network. High-speed synchronous network specification designed to run on optical fiber.

CCDE, CCENT, CCSI, Cisco Eos, Cisco Explorer, Cisco HealthPresence, Cisco IronPort, the Cisco logo, Cisco Nurse Connect, Cisco Pulse, Cisco SensorBase, Cisco StackPower, Cisco StadiumVision, Cisco TelePresence, Cisco TrustSec, Cisco Unified Computing System, Cisco WebEx, DCE, Flip Channels, Flip for Good, Flip Mino, Flipshare (Design), Flip Ultra, Flip Video, Flip Video (Design), Instant Broadband, and Welcome to the Human Network are trademarks; Changing the Way We Work, Live, Play, and Learn, Cisco Capital, Cisco Capital (Design), Cisco:Financed (Stylized), Cisco Store, Flip Gift Card, and One Million Acts of Green are service marks; and Access Registrar, Aironet, AllTouch, AsyncOS, Bringing the Meeting To You, Catalyst, CCDA, CCDP, CCIE, CCIP, CCNA, CCNP, CCSP, CCVP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IOS, Cisco Lumin, Cisco Nexus, Cisco Press, Cisco Systems, Cisco Systems Capital, the Cisco Systems logo, Cisco Unity, Collaboration Without Limitation, Continuum, EtherFast, EtherSwitch, Event Center, Explorer, Follow Me Browsing, GainMaker, iLYNX, IOS, iPhone, IronPort, the IronPort logo, Laser Link, LightStream, Linksys, MeetingPlace, MeetingPlace Chime Sound, MGX, Networkers, Networking

Academy, PCNow, PIX, PowerKEY, PowerPanels, PowerTV, PowerTV (Design), PowerVu, Prisma, ProConnect, ROSA, SenderBase, SMARTnet, Spectrum Expert, StackWise, WebEx, and the WebEx logo are registered trademarks of Cisco and/or its affiliates in the United States and certain other countries.

All other trademarks mentioned in this document or website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1002R)

Any Internet Protocol (IP) addresses used in this document are not intended to be actual addresses. Any examples, command display output, and figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses in illustrative content is unintentional and coincidental.

@ 2007—2010 Cisco Systems, Inc. All rights reserved.

Glossary



# Connecting to a Service Provider Using External BGP

First Published: May 2, 2005 Last Updated: August 7, 2009

This module describes configuration tasks that will enable your Border Gateway Protocol (BGP) network to access peer devices in external networks such as those from Internet service providers (ISPs). BGP is an interdomain routing protocol that is designed to provide loop-free routing between organizations. External BGP (eBGP) peering sessions are configured to allow peers from different autonomous systems to exchange routing updates. Tasks to help manage the traffic that is flowing inbound and outbound are described, as are tasks to configure BGP policies to filter the traffic. Multihoming techniques that provide redundancy for connections to a service provider are also described.

# **Finding Feature Information**

For the latest feature information and caveats, see the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the "Feature Information for Connecting to a Service Provider Using External BGP" section on page 76.

Use Cisco Feature Navigator to find information about platform support and Cisco IOS XE software image support. To access Cisco Feature Navigator, go to <a href="http://www.cisco.com/go/cfn">http://www.cisco.com/go/cfn</a>. An account on Cisco.com is not required.

# **Contents**

- Prerequisites for Connecting to a Service Provider Using External BGP, page 2
- Restrictions for Connecting to a Service Provider Using External BGP, page 2
- Information About Connecting to a Service Provider Using External BGP, page 2
- How to Connect to a Service Provider Using External BGP, page 12



- Configuration Examples for Connecting to a Service Provider Using External BGP, page 61
- Where to Go Next, page 73
- Additional References, page 74
- Feature Information for Connecting to a Service Provider Using External BGP, page 76

# Prerequisites for Connecting to a Service Provider Using External BGP

- Before connecting to a service provider you need to understand how to configure the basic BGP process and peers. See the "Cisco BGP Overview" and "Configuring a Basic BGP Network" modules for more details.
- The tasks and concepts in this chapter will help you configure advanced BGP features that would be useful if you are connecting your network to a service provider. For each connection to the Internet you must have an assigned autonomous system number from the Internet Assigned Numbers Authority (IANA).

# Restrictions for Connecting to a Service Provider Using External BGP

A router that runs Cisco IOS XE software can be configured to run only one BGP routing process and to be a member of only one BGP autonomous system. However, a BGP routing process and autonomous system can support multiple address family configurations.

# **Information About Connecting to a Service Provider Using External BGP**

To perform tasks to connect to an ISP using external BGP, you should understand the following concepts:


- External BGP Peering, page 3
- BGP Autonomous System Number Formats, page 4
- BGP Attributes, page 6
- Multihoming, page 8
- Transit Versus Nontransit Traffic, page 8
- BGP Policy Configuration, page 9
- BGP Communities, page 9
- Extended Communities, page 10
- Administrative Distance, page 11
- BGP Route Map Policy Lists, page 11

## **External BGP Peering**

BGP is an interdomain routing protocol designed to provide loop-free routing links between organizations. BGP is designed to run over a reliable transport protocol and it uses TCP (port 179) as the transport protocol. The destination TCP port is assigned 179, and the local port is assigned a random port number. Cisco IOS XE software supports BGP version 4, which has been used by ISPs to help build the Internet. RFC 1771 introduced and discussed a number of new BGP features to allow the protocol to scale for Internet use.

External BGP peering sessions are configured to allow BGP peers from different autonomous systems to exchange routing updates. By design, a BGP routing process expects eBGP peers to be directly connected, for example, over a WAN connection. However, there are many real-world scenarios where this rule would prevent routing from occurring. Peering sessions for multihop neighbors are configured with the **neighbor ebgp-multihop** command. Figure 1 shows simple eBGP peering between three routers. Router B peers with Router A and Router E. In Figure 1, the **neighbor ebgp-multihop** command could be used to establish peering between Router A and Router E although this is a very simple network design. BGP forwards information about the next hop in the network using the NEXT\_HOP attribute, which is set to the IP address of the interface that advertises a route in an eBGP peering session by default. The source interface can be a physical interface or a loopback interface.

Figure 1 BGP Peers in Different Autonomous Systems

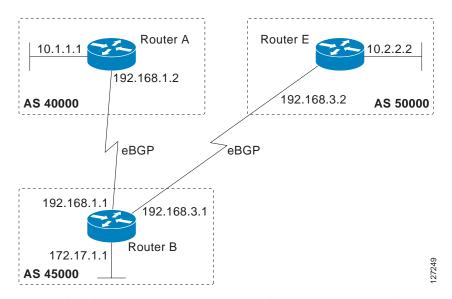

Loopback interfaces are preferred for establishing eBGP peering sessions because loopback interfaces are less susceptible to interface flapping. Interfaces on networking devices can fail, and they can also be taken out of service for maintenance. When an interface is administratively brought up or down, due to failure or maintenance, it is referred to as a flap. Loopback interfaces provide a stable source interface to ensure that the IP address assigned to the interface is always reachable as long as the IP routing protocols continue to advertise the subnet assigned to the loopback interface. Loopback interfaces allow you to conserve address space by configuring a single address with /32 bit mask. Before a loopback interface is configured for an eBGP peering session, you must configure the **neighbor update-source** command and specify the loopback interface. With this configuration, the loopback interface becomes the source interface and its IP address is advertised as the next hop for routes that are advertised through this loopback. If loopback interfaces are used to connect single-hop eBGP peers, you must configure the **neighbor disable-connected-check** command before you can establish the eBGP peering session.

Connecting to external networks enables traffic from your network to be forwarded to other networks and across the Internet. Traffic will also be flowing into, and possibly through, your network. BGP contains various techniques to influence how the traffic flows into and out of your network, and to create BGP policies that filter the traffic, inbound and outbound. To influence the traffic flow, BGP uses certain BGP attributes that can be included in update messages or used by the BGP routing algorithm. BGP policies to filter traffic also use some of the BGP attributes with route maps, access lists including AS-path access lists, filter lists, policy lists, and distribute lists. Managing your external connections may involve multihoming techniques where there is more than one connection to an ISP or connections to more than one ISP for backup or performance purposes. Tagging BGP routes with different community attributes across autonomous system or physical boundaries can prevent the need to configure long lists of individual permit or deny statements.

## **BGP Autonomous System Number Formats**

Prior to January 2009, BGP autonomous system numbers that were allocated to companies were 2-octet numbers in the range from 1 to 65535 as described in RFC 4271, *A Border Gateway Protocol 4 (BGP-4)*. Due to increased demand for autonomous system numbers, the Internet Assigned Number Authority (IANA) will start in January 2009 to allocate four-octet autonomous system numbers in the range from 65536 to 4294967295. RFC 5396, *Textual Representation of Autonomous System (AS) Numbers*, documents three methods of representing autonomous system numbers. Cisco has implemented the following two methods:

- Asplain—Decimal value notation where both 2-byte and 4-byte autonomous system numbers are
  represented by their decimal value. For example, 65526 is a 2-byte autonomous system number and
  234567 is a 4-byte autonomous system number.
- Asdot—Autonomous system dot notation where 2-byte autonomous system numbers are
  represented by their decimal value and 4-byte autonomous system numbers are represented by a dot
  notation. For example, 65526 is a 2-byte autonomous system number and 1.169031 is a 4-byte
  autonomous system number (this is dot notation for the 234567 decimal number).

For details about the third method of representing autonomous system numbers, see RFC 5396.

## **Asdot Only Autonomous System Number Formatting**

In Cisco IOS XE Release 2.3, the 4-octet (4-byte) autonomous system numbers are entered and displayed only in asdot notation, for example, 1.10 or 45000.64000. When using regular expressions to match 4-byte autonomous system numbers the asdot format includes a period, which is a special character in regular expressions. A backslash must be entered before the period; for example, 1\.14, to ensure the regular expression match does not fail. Table 1 shows the format in which 2-byte and 4-byte autonomous system numbers are configured, matched in regular expressions, and displayed in **show** command output in Cisco IOS images where only asdot formatting is available.

Table 1 Asdot Only 4-Byte Autonomous System Number Format

Format	Configuration Format	Show Command Output and Regular Expression Match Format
asdot	2-byte: 1 to 65535 4-byte: 1.0 to 65535.65535	2-byte: 1 to 65535 4-byte: 1.0 to 65535.65535

#### **Asplain as Default Autonomous System Number Formatting**

In Cisco IOS XE Release 2.4 and later releases, the Cisco implementation of 4-byte autonomous system numbers uses asplain as the default display format for autonomous system numbers, but you can configure 4-byte autonomous system numbers in both the asplain and asdot format. In addition, the default format for matching 4-byte autonomous system numbers in regular expressions is asplain, so you must ensure that any regular expressions to match 4-byte autonomous system numbers are written in the asplain format. If you want to change the default show command output to display 4-byte autonomous system numbers in the asdot format, use the **bgp asnotation dot** command under router configuration mode. When the asdot format is enabled as the default, any regular expressions to match 4-byte autonomous system numbers must be written using the asdot format, or the regular expression match will fail. Table 2 and Table 3 show that although you can configure 4-byte autonomous system numbers in either asplain or asdot format, only one format is used to display show command output and control 4-byte autonomous system number matching for regular expressions, and the default is asplain format. To display 4-byte autonomous system numbers in **show** command output and to control matching for regular expressions in the asdot format, you must configure the **bgp asnotation dot** command. After enabling the **bgp asnotation dot** command, a hard reset must be initiated for all BGP sessions by entering the **clear ip bgp** \* command.



If you are upgrading to an image that supports 4-byte autonomous system numbers, you can still use 2-byte autonomous system numbers. The **show** command output and regular expression match are not changed and remain in asplain (decimal value) format for 2-byte autonomous system numbers regardless of the format configured for 4-byte autonomous system numbers.

Table 2 Default Asplain 4-Byte Autonomous System Number Format

Format	Configuration Format	Show Command Output and Regular Expression  Match Format
asplain	2-byte: 1 to 65535 4-byte: 65536 to 4294967295	2-byte: 1 to 65535 4-byte: 65536 to 4294967295
asdot	2-byte: 1 to 65535 4-byte: 1.0 to 65535.65535	2-byte: 1 to 65535 4-byte: 65536 to 4294967295

Table 3 Asdot 4-Byte Autonomous System Number Format

Format	Configuration Format	Show Command Output and Regular Expression Match Format
asplain	2-byte: 1 to 65535 4-byte: 65536 to 4294967295	2-byte: 1 to 65535 4-byte: 1.0 to 65535.65535
asdot	2-byte: 1 to 65535 4-byte: 1.0 to 65535.65535	2-byte: 1 to 65535 4-byte: 1.0 to 65535.65535

#### **Reserved and Private Autonomous System Numbers**

In Cisco IOS XE Release 2.3 and later releases, the Cisco implementation of BGP supports RFC 4893. RFC 4893 was developed to allow BGP to support a gradual transition from 2-byte autonomous system numbers to 4-byte autonomous system numbers. A new reserved (private) autonomous system number, 23456, was created by RFC 4893 and this number cannot be configured as an autonomous system number in the Cisco IOS CLI.

RFC 5398, *Autonomous System (AS) Number Reservation for Documentation Use*, describes new reserved autonomous system numbers for documentation purposes. Use of the reserved numbers allow configuration examples to be accurately documented and avoids conflict with production networks if these configurations are literally copied. The reserved numbers are documented in the IANA autonomous system number registry. Reserved 2-byte autonomous system numbers are in the contiguous block, 64496 to 64511 and reserved 4-byte autonomous system numbers are from 65536 to 65551 inclusive.

Private 2-byte autonomous system numbers are still valid in the range from 64512 to 65534 with 65535 being reserved for special use. Private autonomous system numbers can be used for internal routing domains but must be translated for traffic that is routed out to the Internet. BGP should not be configured to advertise private autonomous system numbers to external networks. Cisco IOS software does not remove private autonomous system numbers from routing updates by default. We recommend that ISPs filter private autonomous system numbers.



Autonomous system number assignment for public and private networks is governed by the IANA. For information about autonomous-system numbers, including reserved number assignment, or to apply to register an autonomous system number, see the following URL: <a href="http://www.iana.org/">http://www.iana.org/</a>.

## **BGP Attributes**

BGP selects a single path, by default, as the best path to a destination host or network. The best-path selection algorithm analyzes path attributes to determine which route is installed as the best path in the BGP routing table. Each path carries various attributes that are used in BGP best-path analysis. Cisco IOS XE software provides the ability to influence BGP path selection by altering these attributes via the command-line interface (CLI). BGP path selection can also be influenced through standard BGP policy configuration.

BGP can include path attribute information in update messages. BGP attributes describe the characteristic of the route, and the software uses these attributes to help make decisions about which routes to advertise. Some of this attribute information can be configured at a BGP-speaking networking device. There are some mandatory attributes that are always included in the update message and some discretionary attributes. The following BGP attributes can be configured:

- AS-path
- Community
- Local Pref
- Multi\_Exit\_Discriminator (MED)
- Next\_Hop
- Origin

## **AS-path**

This attribute contains a list or set of the autonomous system numbers through which routing information has passed. The BGP speaker adds its own autonomous system number to the list when it forwards the update message to external peers.

#### Community

BGP communities are used to group networking devices that share common properties, regardless of network, autonomous system, or any physical boundaries. In large networks applying a common routing policy through prefix lists or access lists requires individual peer statements on each networking device.

Using the BGP community attribute BGP neighbors, with common routing policies, can implement inbound or outbound route filters based on the community tag rather than consult large lists of individual permit or deny statements.

#### **Local Pref**

Within an autonomous system, the Local\_Pref attribute is included in all update messages between BGP peers. If there are several paths to the same destination, the local preference attribute with the highest value indicates the preferred outbound path from the local autonomous system. The highest ranking route is advertised to internal peers. The Local\_Pref value is not forwarded to external peers.

#### **Multi Exit Discriminator**

The MED attribute indicates (to an external peer) a preferred path into an autonomous system. If there are multiple entry points into an autonomous system, the MED can be used to influence another autonomous system to choose one particular entry point. A metric is assigned where a lower MED metric is preferred by the software over a higher MED metric. The MED metric is exchanged between autonomous systems, but after a MED is forwarded into an autonomous system, the MED metric is reset to the default value of 0. When an update is sent to an internal BGP (iBGP) peer, the MED is passed along without any change, allowing all the peers in the same autonomous system to make a consistent path selection.

By default, a router will compare the MED attribute for paths only from BGP peers that reside in the same autonomous system. The **bgp always-compare-med** command can be configured to allow the router to compare metrics from peers in different autonomous systems.



The Internet Engineering Task Force (IETF) decision regarding BGP MED assigns a value of infinity to the missing MED, making the route that lacks the MED variable the least preferred. The default behavior of BGP routers that run Cisco IOS XE software is to treat routes without the MED attribute as having a MED of 0, making the route that lacks the MED variable the most preferred. To configure the router to conform to the IETF standard, use the **bgp bestpath med missing-as-worst** router configuration command.

## Next\_Hop

The Next\_Hop attribute identifies the next-hop IP address to be used as the BGP next hop to the destination. The router makes a recursive lookup to find the BGP next hop in the routing table. In external BGP (eBGP), the next hop is the IP address of the peer that sent the update. Internal BGP (iBGP) sets the next-hop address to the IP address of the peer that advertised the prefix for routes that originate internally. When any routes to iBGP that are learned from eBGP are advertised, the Next\_Hop attribute is unchanged.

A BGP next-hop IP address must be reachable in order for the router to use a BGP route. Reachability information is usually provided by the IGP, and changes in the IGP can influence the forwarding of the next-hop address over a network backbone.

#### Origin


This attribute indicates how the route was included in a BGP routing table. In Cisco IOS XE software, a route defined using the BGP **network** command is given an origin code of Interior Gateway Protocol (IGP). Routes distributed from an Exterior Gateway Protocol (EGP) are coded with an origin of EGP, and routes redistributed from other protocols are defined as Incomplete. BGP decision policy for origin prefers IGP over EGP, and then EGP over Incomplete.

# **Multihoming**

Multihoming is defined as connecting an autonomous system with more than one service provider. If you have any reliability issues with one service provider, then you have a backup connection. Performance issues can also be addressed by multihoming because better paths to the destination network can be utilized.

Unless you are a service provider, you must plan your routing configuration carefully to avoid Internet traffic traveling through your autonomous system and consuming all your bandwidth. Figure 2 shows that autonomous system 45000 is multihomed to autonomous system 40000 and autonomous system 50000. Assuming autonomous system 45000 is not a service provider, then several techniques such as load balancing or some form of routing policy must be configured to allow traffic from autonomous system 45000 to reach either autonomous system 40000 or autonomous system 50000 but not allow much, if any, transit traffic.

Figure 2 Multihoming Topology

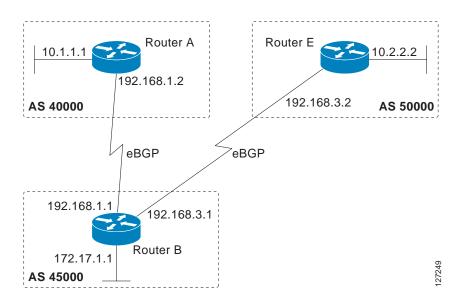

## **Transit Versus Nontransit Traffic**

Most of the traffic within an autonomous system contains a source or destination IP address residing within the autonomous system, and this traffic is referred to as nontransit (or local) traffic. Other traffic is defined as transit traffic. As traffic across the Internet increases, controlling transit traffic becomes more important.

A service provider is considered to be a transit autonomous system and must provide connectivity to all other transit providers. In reality, few service providers actually have enough bandwidth to allow all transit traffic, and most service providers have to purchase such connectivity from Tier 1 service providers.

An autonomous system that does not usually allow transit traffic is called a stub autonomous system and will link to the Internet through one service provider.

# **BGP Policy Configuration**

BGP policy configuration is used to control prefix processing by the BGP routing process and to filter routes from inbound and outbound advertisements. Prefix processing can be controlled by adjusting BGP timers, altering how BGP handles path attributes, limiting the number of prefixes that the routing process will accept, and configuring BGP prefix dampening. Prefixes in inbound and outbound advertisements are filtered using route maps, filter lists, IP prefix lists, autonomous-system-path access lists, IP policy lists, and distribute lists. Table 4 shows the processing order of BGP policy filters.

Table 4 BGP Policy Processing Order

Inbound	Outbound
Route map	Distribute list
Filter list, AS-path access list, or IP policy	IP prefix list
IP prefix list	Filter list, AS-path access list, or IP policy
Distribute list	Route map

Whenever there is a change in the routing policy due to a configuration change, BGP peering sessions must be reset using the **clear ip bgp** command. Cisco IOS XE software supports the following three mechanisms to reset BGP peering sessions:

- Hard reset—A hard reset tears down the specified peering sessions, including the TCP connection, and deletes routes coming from the specified peer.
- Soft reset—A soft reset uses stored prefix information to reconfigure and activate BGP routing tables without tearing down existing peering sessions. Soft reset uses stored update information, at the cost of additional memory for storing the updates, to allow you to apply a new BGP policy without disrupting the network. Soft reset can be configured for inbound or outbound sessions.
- Dynamic inbound soft reset—The route refresh capability, as defined in RFC 2918, allows the local
  router to reset inbound routing tables dynamically by exchanging route refresh requests to
  supporting peers. The route refresh capability does not store update information locally for
  nondisruptive policy changes. It instead relies on dynamic exchange with supporting peers. Route
  refresh must first be advertised through BGP capability negotiation between peers. All BGP routers
  must support the route refresh capability.

To determine if a BGP router supports this capability, use the **show ip bgp neighbors** command. The following message is displayed in the output when the router supports the route refresh capability:

Received route refresh capability from peer.

## **BGP Communities**

BGP communities are used to group routes (also referred to as color routes) that share common properties, regardless of network, autonomous system, or any physical boundaries. In large networks applying a common routing policy through prefix-lists or access-lists requires individual peer statements on each networking device. Using the BGP community attribute BGP speakers, with common routing policies, can implement inbound or outbound route filters based on the community tag rather than consult large lists of individual permit or deny statements.

Standard community lists are used to configure well-known communities and specific community numbers. Expanded community lists are used to filter communities using a regular expression. Regular expressions are used to configure patterns to match community attributes.

The community attribute is optional, which means that it will not be passed on by networking devices that do not understand communities. Networking devices that understand communities must be configured to handle the communities or they will be discarded.

There are four predefined communities:

- no-export—Do not advertise to external BGP peers.
- no-advertise—Do not advertise this route to any peer.
- internet—Advertise this route to the Internet community; all BGP-speaking networking devices belong to it.
- local-as—Do not send outside the local autonomous system.

BGP named community lists allow meaningful names to be assigned to community lists with no limit on the number of community lists that can be configured. A named community list can be configured with regular expressions and with numbered community lists. All the rules of numbered communities apply to named community lists except that there is no limitation on the number of named community lists that can be configured.



Both standard and expanded community lists have a limitation of 100 community groups that can be configured within each type of list. A named community list does not have this limitation.

## **Extended Communities**

Extended community attributes are used to configure, filter, and identify routes for virtual routing and forwarding (VRF) instances and Multiprotocol Label Switching (MPLS) Virtual Private Networks (VPNs). All of the standard rules of access lists apply to the configuration of extended community lists. Regular expressions are supported by the expanded range of extended community list numbers. All regular expression configuration options are supported. The route target (RT) and site of origin (SoO) extended community attributes are supported by the standard range of extended community lists.

### **Route Target Extended Community Attribute**

The RT extended community attribute is configured with the **rt** keyword of the **ip extcommunity-list** command. This attribute is used to identify a set of sites and VRFs that may receive routes that are tagged with the configured route target. Configuring the route target extended community attribute with a route allows that route to be placed in the per-site forwarding tables that are used for routing traffic that is received from corresponding sites.

#### **Site of Origin Extended Community Attribute**

The SoO extended community attribute is configured with the **soo** keyword of the **ip extcommunity-list** command. This attribute uniquely identifies the site from which the provider edge (PE) router learned the route. All routes learned from a particular site must be assigned the same SoO extended community attribute, regardless if a site is connected to a single PE router or multiple PE routers. Configuring this attribute prevents routing loops from occurring when a site is multihomed. The SoO extended community attribute is configured on the interface and is propagated into BGP through redistribution. The SoO extended community attribute can be applied to routes that are learned from VRFs. The SoO extended community attribute should not be configured for stub sites or sites that are not multihomed.

#### **IP Extended Community-List Configuration Mode**

Named and numbered extended community lists can be configured in IP extended community-list configuration mode. The IP extended community-list configuration mode supports all of the functions that are available in global configuration mode. In addition, the following operations can be performed:

- Configure sequence numbers for extended community list entries.
- Resequence existing sequence numbers for extended community list entries.
- Configure an extended community list to use default values.

## **Default Sequence Numbering**

Extended community list entries start with the number 10 and increment by 10 for each subsequent entry when no sequence number is specified, when default behavior is configured, and when an extended community list is resequenced without specifying the first entry number or the increment range for subsequent entries.

#### **Resequencing Extended Community Lists**

Extended community-list entries are sequenced and resequenced on a per-extended community list basis. The **resequence** command can be used without any arguments to set all entries in a list to default sequence numbering. The **resequence** command also allows the sequence number of the first entry and increment range to be set for each subsequent entry. The range of configurable sequence numbers is from 1 to 2147483647.

## **Administrative Distance**

Administrative distance is a measure of the preference of different routing protocols. BGP has a **distance bgp** command that allows you to set different administrative distances for three route types: external, internal, and local. BGP, like other protocols, prefers the route with the lowest administrative distance.

## **BGP Route Map Policy Lists**

BGP route map policy lists allow a network operator to group route map match clauses into named lists called policy lists. A policy list functions like a macro. When a policy list is referenced in a route map, all of the match clauses are evaluated and processed as if they had been configured directly in the route map. This enhancement simplifies the configuration of BGP routing policy in medium-size and large networks because a network operator can preconfigure policy lists with groups of match clauses and then reference these policy lists within different route maps. The network operator no longer needs to manually reconfigure each recurring group of match clauses that occur in multiple route map entries.

A policy lists functions like a macro when it is configured in a route map and has the following capabilities and characteristics:

- When a policy list is referenced within a route map, all the match statements within the policy list are evaluated and processed.
- Two or more policy lists can be configured with a route map. Policy lists can be configured within a route map to be evaluated with AND or OR semantics.
- Policy lists can coexist with any other preexisting match and set statements that are configured within the same route map but outside of the policy lists.
- When multiple policy lists perform matching within a route map entry, all policy lists match on the incoming attribute only.

Policy lists support only match clauses and do not support set clauses. Policy lists can be configured for all applications of route maps, including redistribution, and can also coexist, within the same route map entry, with match and set clauses that are configured separately from the policy lists.



Policy lists are supported only by BGP and are not supported by other IP routing protocols.

# How to Connect to a Service Provider Using External BGP

This section contains the following tasks:

- Influencing Inbound Path Selection, page 12
- Influencing Outbound Path Selection, page 20
- Configuring BGP Peering with ISPs, page 26
- Configuring BGP Policies, page 38

## **Influencing Inbound Path Selection**

BGP can be used to influence the choice of paths in another autonomous system. There may be several reasons for wanting BGP to choose a path that is not the obvious best route, for example, to avoid some types of transit traffic passing through an autonomous system or perhaps to avoid a very slow or congested link. BGP can influence inbound path selection using one of the following BGP attributes:

- AS-path
- MED

Perform one of the following tasks to influence inbound path selection:

- Influencing Inbound Path Selection by Modifying the AS-path Attribute, page 12
- Influencing Inbound Path Selection by Setting the MED Attribute, page 16

## Influencing Inbound Path Selection by Modifying the AS-path Attribute

One of the methods that BGP can use to influence the choice of paths in another autonomous system is to modify the AS-path attribute. For example, in Figure 3, Router A advertises its own network, 172.17.1.0, to its BGP peers in autonomous system 45000 and autonomous system 60000. When the routing information is propagated to autonomous system 50000, the routers in autonomous system 50000 have network reachability information about network 172.17.1.0 from two different routes. The first route is from autonomous system 45000 with an AS-path consisting of 45000, 40000, the second route is through autonomous system 55000 with an AS-path of 55000, 60000, 40000. If all other BGP attribute values are the same, Router C in autonomous system 50000 would choose the route through autonomous system 45000 for traffic destined for network 172.17.1.0 because it is the shortest route in terms of autonomous systems traversed.

Autonomous system 40000 now receives all traffic from autonomous system 50000 for the 172.17.1.0 network through autonomous system 45000. If, however, the link between autonomous system 45000 and autonomous system 40000 is a really slow and congested link, the **set as-path prepend** command can be used at Router A to influence inbound path selection for the 172.17.1.0 network by making the route through autonomous system 45000 appear to be longer than the path through autonomous system 60000. The configuration is done at Router A in Figure 3 by applying a route map to the outbound BGP

updates to Router B. Using the **set as-path prepend** command, all the outbound BGP updates from Router A to Router B will have their AS-path attribute modified to add the local autonomous system number 40000 twice. After the configuration, autonomous system 50000 receives updates about the 172.17.1.0 network through autonomous system 45000. The new AS-path is 45000, 40000, 40000, and 40000, which is now longer than the AS-path from autonomous system 55000 (unchanged at a value of 55000, 60000, 40000). Networking devices in autonomous system 50000 will now prefer the route through autonomous system 55000 to forward packets with a destination address in the 172.17.1.0 network.

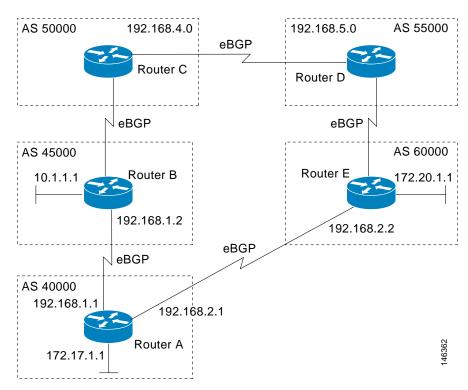


Figure 3 Network Topology for Modifying the AS-path Attribute

Perform this task to influence the inbound path selection for traffic destined for the 172.17.1.0 network by modifying the AS-path attribute. The configuration is performed at Router A in Figure 3.

## **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. router bgp autonomous-system-number
- 4. address-family ipv4 [unicast | multicast | vrf vrf-name]
- **5. network** *network-number* [**mask** *network-mask*] [**route-map** *route-map-name*]
- **6. neighbor** {ip-address | peer-group-name} **remote-as** autonomous-system-number
- 7. **neighbor** {ip-address | peer-group-name} **route-map** map-name {**in** | **out**}
- 8. neighbor {ip-address | peer-group-name} activate
- 9. exit

- 10. exit
- **11. route-map** *map-name* [**permit** | **deny**] [*sequence-number*]
- 12. set as-path {tag | prepend as-path-string}
- 13. end
- 14. show running-config

## **DETAILED STEPS**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		• Enter your password if prompted.
	Example: Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	router bgp autonomous-system-number	Enters router configuration mode for the specified routing process.
	<pre>Example: Router(config)# router bgp 40000</pre>	
Step 4	<pre>address-family ipv4 [unicast   multicast   vrf vrf-name]</pre>	Specifies the IPv4 address family and enters address family configuration mode.
	<pre>Example: Router(config-router)# address-family ipv4 unicast</pre>	• The unicast keyword specifies the IPv4 unicast address family. By default, the router is placed in address family configuration mode for the IPv4 unicast address family if the unicast keyword is not specified with the address-family ipv4 command.
		<ul> <li>The multicast keyword specifies IPv4 multicast address prefixes.</li> </ul>
		• The <b>vrf</b> keyword and <i>vrf-name</i> argument specify the name of the VRF instance to associate with subsequent IPv4 address family configuration mode commands.
Step 5	<pre>network network-number [mask network-mask] [route-map route-map-name]</pre>	Specifies a network as local to this autonomous system and adds it to the BGP routing table.
	Example: Router(config-router-af)# network 172.17.1.0 mask 255.255.255.0	<ul> <li>For exterior protocols the <b>network</b> command controls which networks are advertised. Interior protocols use the <b>network</b> command to determine where to send updates.</li> </ul>
Step 6	<pre>neighbor {ip-address   peer-group-name} remote-as autonomous-system-number</pre>	Adds the IP address or peer group name of the neighbor in the specified autonomous system to the IPv4 multiprotocol BGP neighbor table of the local router.
	<pre>Example: Router(config-router-af)# neighbor 192.168.1.2 remote-as 45000</pre>	• In this example, the BGP peer on Router B at 192.168.1.2 is added to the IPv4 multiprotocol BGP neighbor table and will receive BGP updates.

	Command or Action	Purpose
Step 7	<pre>neighbor {ip-address   peer-group-name} route-map map-name {in   out}</pre>	Applies a route map to incoming or outgoing routes.  • In this example, the route map named PREPEND is
	<pre>Example: Router(config-router-af)# neighbor 192.168.1.2 route-map PREPEND out</pre>	applied to outbound routes to Router B.
Step 8	<pre>neighbor {ip-address   peer-group-name} activate</pre>	Enables address exchange for address family IPv4 unicast for the BGP neighbor at 192.168.1.2 on Router B.
	<pre>Example: Router(config-router-af)# neighbor 192.168.1.2 activate</pre>	
Step 9	exit	Exits address family configuration mode and enters router configuration mode.
	<pre>Example: Router(config-router-af)# exit</pre>	
Step 10	exit	Exits router configuration mode and enters global configuration mode.
	Example: Router(config-router)# exit	
Step 11	<pre>route-map map-name [permit   deny] [sequence-number]</pre>	Configures a route map and enters route map configuration mode.
	<pre>Example: Router(config)# route-map PREPEND permit 10</pre>	• In this example, a route map named PREPEND is created and if there is a subsequent matching of criteria.
Step 12	<pre>set as-path {tag   prepend as-path-string}</pre>	Modifies an autonomous system path for BGP routes.
	<pre>Example: Router(config-route-map)# set as-path prepend 40000 40000</pre>	• Use the <b>prepend</b> keyword to "prepend" an arbitrary autonomous system path string to BGP routes. Usually the local autonomous system number is prepended multiple times, increasing the autonomous system path length.
		<ul> <li>In this example, two additional autonomous system entries are added to the autonomous system path for outbound routes to Router B.</li> </ul>
Step 13	end	Exits route map configuration mode and returns to privileged EXEC mode.
	<pre>Example: Router(config-route-map)# end</pre>	
Step 14	show running-config	Displays the running configuration file.
	Example: Router# show running-config	

## **Examples**

The following partial output of the **show running-config** command shows the configuration from this task.

#### **Router A**

```
Router# show running-config

.
.
.
router bgp 40000
neighbor 192.168.1.2 remote-as 60000
!
address-family ipv4
neighbor 192.168.1.2 activate
neighbor 192.168.1.2 route-map PREPEND out
no auto-summary
no synchronization
network 172.17.1.0 mask 255.255.255.0
exit-address-family
!
route-map PREPEND permit 10
set as-path prepend 40000 40000
.
.
```

## Influencing Inbound Path Selection by Setting the MED Attribute

One of the methods that BGP can use to influence the choice of paths into another autonomous system is to set the MED attribute. The MED attribute indicates (to an external peer) a preferred path to an autonomous system. If there are multiple entry points to an autonomous system, the MED can be used to influence another autonomous system to choose one particular entry point. A metric is assigned using route maps where a lower MED metric is preferred by the software over a higher MED metric.

Perform this task to influence inbound path selection by setting the MED metric attribute. The configuration is performed at Router B and Router D in Figure 4. Router B advertises the network 172.16.1.0. to its BGP peer, Router E in autonomous system 50000. Using a simple route map Router B sets the MED metric to 50 for outbound updates. The task is repeated at Router D but the MED metric is set to 120. When Router E receives the updates from both Router B and Router D the MED metric is stored in the BGP routing table. Before forwarding packets to network 172.16.1.0, Router E compares the attributes from peers in the same autonomous system (both Router B and Router D are in autonomous system 45000). The MED metric for Router B is less than the MED for Router D, so Router E will forward the packets through Router B.

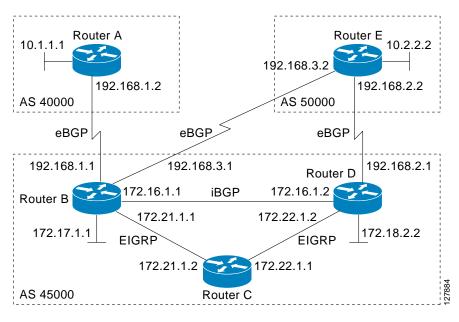


Figure 4 Network Topology for Setting the MED Attribute

Use the **bgp always-compare-med** command to compare MED attributes from peers in other autonomous systems.

## **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. router bgp autonomous-system-number
- **4. neighbor** {*ip-address* | *peer-group-name*} **remote-as** *autonomous-system-number*
- 5. address-family ipv4 [unicast | multicast | vrf vrf-name]
- **6. network** *network-number* [**mask** *network-mask*] [**route-map** *route-map-name*]
- 7. **neighbor** {*ip-address* | *peer-group-name*} **route-map** *map-name* {**in** | **out**}
- 8. exit
- 9. exit
- **10**. **route-map** *map-name* [**permit** | **deny**] [*sequence-number*]
- 11. set metric value
- 12. end
- **13.** Repeat Step 1 through Step 12 at Router D.
- **14. show ip bgp** [network] [network-mask]

## **DETAILED STEPS**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example: Router> enable	Enter your password if prompted.
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	router bgp autonomous-system-number	Enters router configuration mode for the specified routing process.
	Example: Router(config)# router bgp 45000	
Step 4	neighbor {ip-address   peer-group-name} remote-as autonomous-system-number	Adds the IP address or peer group name of the neighbor in the specified autonomous system to the IPv4 multiprotocol BGP neighbor table of the local router.
	<pre>Example: Router(config-router)# neighbor 192.168.3.2 remote-as 50000</pre>	
Step 5	<pre>address-family ipv4 [unicast   multicast   vrf vrf-name]</pre>	Specifies the IPv4 address family and enters address family configuration mode.
	<pre>Example: Router(config-router)# address-family ipv4 unicast</pre>	• The unicast keyword specifies the IPv4 unicast address family. By default, the router is placed in address family configuration mode for the IPv4 unicast address family if the unicast keyword is not specified with the address-family ipv4 command.
		• The <b>multicast</b> keyword specifies IPv4 multicast address prefixes.
		• The <b>vrf</b> keyword and <i>vrf-name</i> argument specify the name of the VRF instance to associate with subsequent IPv4 address family configuration mode commands.
Step 6	<pre>network network-number [mask network-mask] [route-map route-map-name]</pre>	Specifies a network as local to this autonomous system and adds it to the BGP routing table.
	Example: Router(config-router-af)# network 172.16.1.0 mask 255.255.255.0	<ul> <li>For exterior protocols the <b>network</b> command controls which networks are advertised. Interior protocols use the <b>network</b> command to determine where to send updates.</li> </ul>
Step 7	<pre>neighbor {ip-address   peer-group-name} route-map map-name {in   out}</pre>	Applies a route map to incoming or outgoing routes.
	Example:	• In this example, the route map named MED is applied to outbound routes to the BGP peer at Router E.
	Router(config-router-af)# neighbor 192.168.3.2 route-map MED out	

	Command or Action	Purpose
Step 8	exit	Exits address family configuration mode and enters router configuration mode.
	<pre>Example: Router(config-router-af)# exit</pre>	
Step 9	exit	Exits router configuration mode and enters global configuration mode.
	<pre>Example: Router(config-router)# exit</pre>	
Step 10	<pre>route-map map-name [permit   deny] [sequence-number]</pre>	Configures a route map and enters route map configuration mode.
	<pre>Example: Router(config)# route-map MED permit 10</pre>	• In this example, a route map named MED is created.
Step 11	set metric value	Sets the MED metric value.
	<pre>Example: Router(config-route-map)# set metric 50</pre>	
Step 12	end	Exits route map configuration mode and enters privileged EXEC mode.
	<pre>Example: Router(config-route-map)# end</pre>	
Step 13	Repeat Step 1 through Step 12 at Router D.	_
Step 14	show ip bgp [network] [network-mask]	(Optional) Displays the entries in the BGP routing table.
	Example: Router# show ip bgp 172.17.1.0 255.255.255.0	<ul> <li>Use this command at Router E in Figure 4 when both Router B and Router D have configured the MED attribute.</li> </ul>
		• Only the syntax applicable to this task is used in this example. For more details, see the <i>Cisco IOS IP Routing: BGP Command Reference</i> .

## **Examples**

The following output is from Router E in Figure 4 after this task has been performed at both Router B and Router D. Note the metric (MED) values for the two routes to network 172.16.1.0. The peer 192.168.2.1 at Router D has a metric of 120 for the path to network 172.16.1.0 whereas the peer 192.168.3.1 at Router B has a metric of 50. The entry for the peer 192.168.3.1 at Router B has the word best at the end of the entry to show that Router E will choose to send packets destined for network 172.16.1.0 via Router B because the MED metric is lower.

```
Router# show ip bgp 172.16.1.0

BGP routing table entry for 172.16.1.0/24, version 10

Paths: (2 available, best #2, table Default-IP-Routing-Table)
  Advertised to update-groups:
     1

45000
    192.168.2.1 from 192.168.2.1 (192.168.2.1)
      Origin IGP, metric 120, localpref 100, valid, external
45000
```

```
192.168.3.1 from 192.168.3.1 (172.17.1.99)
Origin IGP, metric 50, localpref 100, valid, external, best
```

## **Influencing Outbound Path Selection**

BGP can be used to influence the choice of paths for outbound traffic from the local autonomous system. This section contains two methods that BGP can use to influence outbound path selection:

- Using the Local\_Pref attribute
- Using the BGP outbound route filter (ORF) capability

Perform one of the following tasks to influence outbound path selection:


- Influencing Outbound Path Selection Using the Local\_Pref Attribute, page 20
- Filtering Outbound BGP Route Prefixes, page 22

## Influencing Outbound Path Selection Using the Local\_Pref Attribute

One of the methods to influence outbound path selection is to use the BGP Local-Pref attribute. Perform this task using the local preference attribute to influence outbound path selection. If there are several paths to the same destination the local preference attribute with the highest value indicates the preferred path.

Refer to Figure 5 for the network topology used in this task. Both Router B and Router C are configured. Autonomous system 45000 receives updates for network 192.168.3.0 via autonomous system 40000 and autonomous system 50000. Router B is configured to set the local preference value to 150 for all updates to autonomous system 40000. Router C is configured to set the local preference value for all updates to autonomous system 50000 to 200. After the configuration, local preference information is exchanged within autonomous system 45000. Router B and Router C now see that updates for network 192.168.3.0 have a higher preference value from autonomous system 50000 so all traffic in autonomous system 45000 with a destination network of 192.168.3.0 is sent out via Router C.

Figure 5 Network Topology for Outbound Path Selection

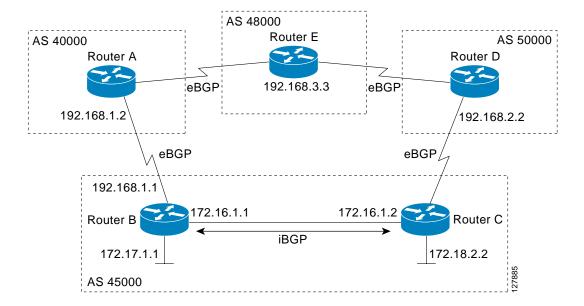

## **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- **3. router bgp** *autonomous-system-number*
- 4. address-family ipv4 [unicast | multicast | vrf vrf-name]
- 5. **network** network-number [mask network-mask] [route-map route-map-name]
- **6. neighbor** {ip-address | peer-group-name} **remote-as** autonomous-system-number
- 7. bgp default local-preference value
- 8. **neighbor** {*ip-address* | *peer-group-name*} **activate**
- 9. end
- **10.** Repeat Step 1 through Step 9 at Router C but change the IP address of the peer, the autonomous system number, and set the local preference value to 200.
- **11. show ip bgp** [network] [network-mask]

## **DETAILED STEPS**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		• Enter your password if prompted.
	Example:	
	Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	router bgp autonomous-system-number	Enters router configuration mode for the specified routing process.
	<pre>Example: Router(config)# router bgp 45000</pre>	
Step 4	<pre>address-family ipv4 [unicast   multicast   vrf vrf-name]</pre>	Specifies the IPv4 address family and enters address family configuration mode.
	<pre>Example: Router(config-router)# address-family ipv4 unicast</pre>	• The <b>unicast</b> keyword specifies the IPv4 unicast address family. By default, the router is placed in address family configuration mode for the IPv4 unicast address family if the <b>unicast</b> keyword is not specified with the <b>address-family ipv4</b> command.
		• The <b>multicast</b> keyword specifies IPv4 multicast address prefixes.
		• The <b>vrf</b> keyword and <i>vrf-name</i> argument specify the name of the VRF instance to associate with subsequent IPv4 address family configuration mode commands.

	Command or Action	Purpose
Step 5	<pre>network network-number [mask network-mask] [route-map route-map-name]</pre>	Specifies a network as local to this autonomous system and adds it to the BGP routing table.
	Example: Router(config-router-af)# network 172.17.1.0 mask 255.255.255.0	<ul> <li>For exterior protocols the <b>network</b> command controls which networks are advertised. Interior protocols use the <b>network</b> command to determine where to send updates.</li> </ul>
Step 6	neighbor {ip-address   peer-group-name} remote-as autonomous-system-number	Adds the IP address or peer group name of the neighbor in the specified autonomous system to the IPv4 multiprotocol BGP neighbor table of the local router.
	<pre>Example: Router(config-router-af)# neighbor 192.168.1.2 remote-as 40000</pre>	
Step 7	bgp default local-preference value	Changes the default local preference value.
	Example: Router(config-router-af)# bgp default	• In this example, the local preference is changed to 150 for all updates from autonomous system 40000 to autonomous system 45000.
	local-preference 150	• By default, the local preference value is 100.
Step 8	<pre>neighbor {ip-address   peer-group-name} activate</pre>	Adds the IP address or peer group name of the neighbor in the specified autonomous system to the IPv4 multiprotocol BGP neighbor table of the local router.
	<pre>Example: Router(config-router-af)# neighbor 192.168.1.2 activate</pre>	
Step 9	end	Exits route map configuration mode and enters privileged EXEC mode.
	<pre>Example: Router(config-router-af)# end</pre>	
Step 10	Repeat Step 1 through Step 9 at Router C but change the IP address of the peer, the autonomous system number, and set the local preference value to 200.	
Step 11	show ip bgp [network] [network-mask]	Displays the entries in the BGP routing table.
	Example: Router# show ip bgp 192.168.3.0 255.255.255.0	• Enter this command at both Router B and Router C and note the Local_Pref value. The route with the highest preference value will be the preferred route to network 192.168.3.0.
		Note Only the syntax applicable to this task is used in this example. For more details, see the <i>Cisco IOS IP Routing: BGP Command Reference</i> .

# Filtering Outbound BGP Route Prefixes

Perform this task to use BGP prefix-based outbound route filtering to influence outbound path selection.

### **BGP Prefix-Based Outbound Route Filtering**

BGP prefix-based outbound route filtering uses the BGP ORF send and receive capabilities to minimize the number of BGP updates that are sent between BGP peers. Configuring BGP ORF can help reduce the amount of system resources required for generating and processing routing updates by filtering out unwanted routing updates at the source. For example, BGP ORF can be used to reduce the amount of processing required on a router that is not accepting full routes from a service provider network.

The BGP prefix-based outbound route filtering is enabled through the advertisement of ORF capabilities to peer routers. The advertisement of the ORF capability indicates that a BGP peer will accept a prefix list from a neighbor and apply the prefix list to locally configured ORFs (if any exist). When this capability is enabled, the BGP speaker can install the inbound prefix list filter to the remote peer as an outbound filter, which reduces unwanted routing updates.

The BGP prefix-based outbound route filtering can be configured with send or receive ORF capabilities. The local peer advertises the ORF capability in send mode. The remote peer receives the ORF capability in receive mode and applies the filter as an outbound policy. The local and remote peers exchange updates to maintain the ORF on each router. Updates are exchanged between peer routers by address family depending on the ORF prefix list capability that is advertised. The remote peer starts sending updates to the local peer after a route refresh has been requested with the **clear ip bgp in prefix-filter** command or after an ORF prefix list with immediate status is processed. The BGP peer will continue to apply the inbound prefix list to received updates after the local peer pushes the inbound prefix list to the remote peer.

### **Prerequisites**

BGP peering sessions must be established, and BGP ORF capabilities must be enabled on each participating router before prefix-based ORF announcements can be received.

## **Restrictions**

- BGP prefix-based outbound route filtering does not support multicast.
- IP addresses that are used for outbound route filtering must be defined in an IP prefix list. BGP distribute lists and IP access lists are not supported.
- Outbound route filtering is configured on only a per-address family basis and cannot be configured under the general session or BGP routing process.
- Outbound route filtering is configured for external peering sessions only.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- **3. ip prefix-list** *list-name* [**seq** *seq-value*] {**deny** *network/length* | **permit** *network/length*} [**ge** *ge-value*] [**le** *le-value*]
- **4. router bgp** *autonomous-system-number*
- 5. address-family ipv4 [unicast | multicast | vrf vrf-name]
- **6. neighbor** {ip-address | peer-group-name} **remote-as** autonomous-system-number
- 7. **neighbor** *ip-address* **ebgp-multihop** [*hop-count*]
- 8. neighbor *ip-address* capability orf prefix-list [send | receive | both]
- **9. neighbor** {*ip-address* | *peer-group-name*} **prefix-list** *prefix-list-name* {**in** | **out**}

10. end

11. clear ip bgp  $\{ip\text{-}address \mid *\}$  in prefix-filter

## **DETAILED STEPS**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	<pre>Example: Router&gt; enable</pre>	• Enter your password if prompted.
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	<pre>ip prefix-list list-name [seq seq-value] {deny network/length   permit network/length} [ge ge-value] [le le-value]  Example: Router(config)# ip prefix-list FILTER seq 10 permit 192.168.1.0/24</pre>	Creates a prefix list for prefix-based outbound route filtering.
		• Outbound route filtering supports prefix length matching, wildcard-based prefix matching, and exact address prefix matching on a per address-family basis.
		• The prefix list is created to define the outbound route filter. The filter must be created when the outbound route filtering capability is configured to be advertised in send mode or both mode. It is not required when a peer is configured to advertise receive mode only.
		• The example creates a prefix list named FILTER that defines the 192.168.1.0/24 subnet for outbound route filtering.
Step 4	router bgp autonomous-system-number	Enters router configuration mode, and creates a BGP routing process.
	<pre>Example: Router(config)# router bgp 100</pre>	
Step 5	address-family ipv4 [unicast   multicast   vrf vrf-name]	Specifies the IPv4 address family and enters address family configuration mode.
	<pre>Example: Router(config-router)# address-family ipv4 unicast</pre>	• The unicast keyword specifies the IPv4 unicast address family. By default, the router is placed in address family configuration mode for the IPv4 unicast address family if the unicast keyword is not specified with the address-family ipv4 command.
		<ul> <li>The multicast keyword specifies IPv4 multicast address prefixes.</li> </ul>
		• The <b>vrf</b> keyword and <i>vrf-name</i> argument specify the name of the VRF instance to associate with subsequent IPv4 address family configuration mode commands.
		<b>Note</b> Outbound route filtering is configured on a per-address family basis.

	Command or Action	Purpose
Step 6	neighbor {ip-address   peer-group-name} remote-as autonomous-system-number	Establishes peering with the specified neighbor or peer group. BGP peering must be established before ORF capabilities can be exchanged.
	<pre>Example: Router(config-router-af)# neighbor 10.1.1.1 remote-as 200</pre>	• The example establishes peering with the 10.1.1.1 neighbor.
Step 7	neighbor ip-address ebgp-multihop [hop-count]	Accepts or initiates BGP connections to external peers residing on networks that are not directly connected.
	<pre>Example: Router(config-router-af)# neighbor 10.1.1.1 ebgp-multihop</pre>	
Step 8	neighbor $ip\text{-}address$ capability orf prefix-list [send   receive   both]	Enables the ORF capability on the local router, and enables ORF capability advertisement to the BGP peer specified with the <i>ip-address</i> argument.
	<pre>Example: Router(config-router-af)# neighbor 10.1.1.1 capability orf prefix-list both</pre>	• The <b>send</b> keyword configures a router to advertise ORF send capabilities.
	capability off prefix-fist both	• The <b>receive</b> keyword configures a router to advertise ORF receive capabilities.
		• The <b>both</b> keyword configures a router to advertise send and receive capabilities.
		<ul> <li>The remote peer must be configured to either send or receive ORF capabilities before outbound route filtering is enabled.</li> </ul>
		• The example configures the router to advertise send and receive capabilities to the 10.1.1.1 neighbor.
Step 9	<pre>neighbor {ip-address   peer-group-name} prefix-list prefix-list-name {in   out}</pre>	Applies an inbound prefix-list filter to prevent distribution of BGP neighbor information.
	<pre>Example: Router(config-router-af)# neighbor 10.1.1.1 prefix-list FILTER in</pre>	• In this example, the prefix list named FILTER is applied to incoming advertisements from the 10.1.1.1 neighbor, which prevents distribution of the 192.168.1.0/24 subnet.
Step 10	end	Exits address family configuration mode, and enters privileged EXEC mode.
	<pre>Example: Router(config-router-af)# end</pre>	
Step 11	clear ip bgp $\{ip\text{-}address \mid *\}$ in prefix-filter	Clears BGP outbound route filters and initiates an inbound soft reset.
	Example:	• A single neighbor or all neighbors can be specified.
	Router# clear ip bgp 10.1.1.1 in prefix-filter	Note The inbound soft refresh must be initiated with the clear ip bgp command in order for this feature to function.

# **Configuring BGP Peering with ISPs**

BGP was developed as an interdomain routing protocol and connecting to ISPs is one of the main functions of BGP. Depending on the size of your network and the purpose of your business, there are many different ways to connect to your ISP. Multihoming to one or more ISPs provides redundancy in case an external link to an ISP fails. This section introduces some optional tasks that can be used to connect to a service provider using multihoming techniques. Smaller companies may use just one ISP but require a backup route to the ISP. Larger companies may have access to two ISPs, using one of the connections as a backup, or may need to configure a transit autonomous system.

Perform one of the following optional tasks to connect to one or more ISPs:

- Configuring Multihoming with Two ISPs, page 26
- Multihoming with a Single ISP, page 29
- Configuring Multihoming to Receive the Full Internet Routing Table, page 35

# **Configuring Multihoming with Two ISPs**


Perform this task to configure your network to access two ISPs. where one ISP is the preferred route and the second ISP is a backup route. In Figure 6 Router B in autonomous system 45000 has BGP peers in two ISPs, autonomous system 40000 and autonomous system 50000. Using this task, Router B will be configured to prefer the route to the BGP peer at Router A in autonomous system 40000.

All routes learned from this neighbor will have an assigned weight. The route with the highest weight will be chosen as the preferred route when multiple routes are available to a particular network.



The weights assigned with the **set weight** route-map configuration command override the weights assigned using the **neighbor weight** command.

Figure 6 Multihoming with Two ISPs

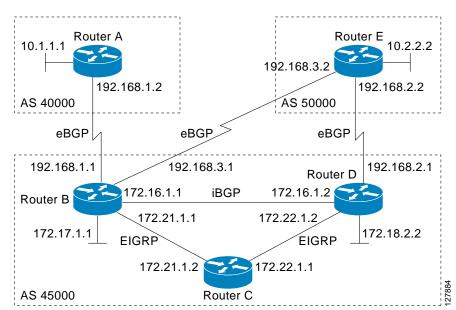

### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- **3. router bgp** *autonomous-system-number*
- 4. address-family ipv4 [unicast | multicast | vrf vrf-name]
- **5. network** *network-number* [**mask** *network-mask*]
- **6. neighbor** {ip-address | peer-group-name} **remote-as** autonomous-system-number
- 7. **neighbor** {ip-address | peer-group-name} **weight** number
- **8. neighbor** {ip-address | peer-group-name} **remote-as** autonomous-system-number
- **9. neighbor** {*ip-address* | *peer-group-name*} **weight** *number*
- 10. end
- 11. **clear ip bgp** {\* | *ip-address* | *peer-group-name*} [**soft** [**in** | **out**]]
- **12. show ip bgp** [network-address] [network-mask]

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		• Enter your password if prompted.
	Example: Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	router bgp autonomous-system-number	Enters router configuration mode, and creates a BGP routing process.
	Example: Router(config)# router bgp 45000	
Step 4	address-family ipv4 [unicast   multicast   vrf vrf-name]	Specifies the IPv4 address family and enters address family configuration mode.
	<pre>Example: Router(config-router)# address-family ipv4 unicast</pre>	• The unicast keyword specifies the IPv4 unicast address family. By default, the router is placed in configuration mode for the IPv4 unicast address family if the unicast keyword is not specified with the address-family ipv4 command.
		• The <b>multicast</b> keyword specifies IPv4 multicast address prefixes.
		• The <b>vrf</b> keyword and <i>vrf-name</i> argument specify the name of the VRF instance to associate with subsequent IPv4 address family configuration mode commands.

	Command or Action	Purpose
Step 5	network network-number [mask network-mask]	Specifies a network as local to this autonomous system and adds it to the BGP routing table.
	Example: Router(config-router-af)# network 172.17.1.0 mask 255.255.255.0	<ul> <li>For exterior protocols the <b>network</b> command controls which networks are advertised. Interior protocols use the <b>network</b> command to determine where to send updates.</li> </ul>
Step 6	<pre>neighbor {ip-address   peer-group-name} remote-as autonomous-system-number</pre>	Adds the IP address or peer group name of the neighbor in the specified autonomous system to the IPv4 multiprotocol BGP neighbor table of the local router.
	<pre>Example: Router(config-router-af)# neighbor 192.168.1.2 remote-as 40000</pre>	
Step 7	neighbor {ip-address   peer-group-name} weight	Assigns a weight to a BGP peer connection.
	number	• In this example, the weight attribute for routes received from the BGP peer 192.168.1.2 is set to 150.
	Example: Router(config-router-af)# neighbor 192.168.1.2 weight 150	
Step 8	<pre>neighbor {ip-address   peer-group-name} remote-as autonomous-system-number</pre>	Adds the IP address or peer group name of the neighbor in the specified autonomous system to the IPv4 multiprotocol BGP neighbor table of the local router.
	<pre>Example: Router(config-router-af)# neighbor 192.168.3.2 remote-as 50000</pre>	
Step 9	<pre>neighbor {ip-address   peer-group-name} weight number</pre>	Assigns a weight to a BGP peer connection.
		• In this example, the weight attribute for routes received from the BGP peer 192.168.3.2 is set to 100.
	Example: Router(config-router-af)# neighbor 192.168.3.2 weight 100	
Step 10	end	Exits address family configuration mode and enters privileged EXEC mode.
	<pre>Example: Router(config-router-af)# end</pre>	
Step 11	<pre>clear ip bgp {*   ip-address   peer-group-name} [soft [in   out]]</pre>	(Optional) Clears BGP outbound route filters and initiates an outbound soft reset. A single neighbor or all neighbors can be specified.
	Example: Router# clear ip bgp *	
Step 12	<pre>show ip bgp [network] [network-mask]</pre>	Displays the entries in the BGP routing table.
	Example: Router# show ip bgp	• Enter this command at Router B to see the weight attribute for each route to a BGP peer. The route with the highest weight attribute will be the preferred route to network 172.17.1.0.
		Note Only the syntax applicable to this task is used in this example. For more details, see the <i>Cisco IOS IP Routing: BGP Command Reference</i> .

The following example shows the BGP routing table at Router B with the weight attributes assigned to routes. The route through 192.168.3.2 (Router E in Figure 6) has the highest weight attribute and will be the preferred route to network 172.17.1.0.

```
BGP table version is 8, local router ID is 172.17.1.99
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal,
             r RIB-failure, S Stale
Origin codes: i - IGP, e - EGP, ? - incomplete
                                       Metric LocPrf Weight Path
                   Next Hop
  Network
*> 10.1.1.0/24
                   192.168.1.2
                                           0
                                                        100 40000 i
*> 10.2.2.0/24
                   192.168.3.2
                                            0
                                                        150 50000 i
*> 172.17.1.0/24
                   0.0.0.0
                                            Ω
                                                      32768 i
```

# Multihoming with a Single ISP

Perform this task to configure your network to access one of two connections to a single ISP, where one of the connections is the preferred route and the second connection is a backup route. In Figure 6 Router E in autonomous system 50000 has two BGP peers in a single autonomous system, autonomous system 45000. Using this task, autonomous system 50000 does not learn any routes from autonomous system 45000 and is sending its own routes using BGP. This task is configured at Router E in Figure 6 and covers three features about multihoming to a single ISP:

- Outbound traffic—Router E will forward default routes and traffic to autonomous system 45000 with Router B as the primary link and Router D as the backup link. Static routes are configured to both Router B and Router D with a lower distance configured for the link to Router B.
- Inbound traffic—Inbound traffic from autonomous system 45000 is configured to be sent from Router B unless the link fails when the backup route is to send traffic from Router D. To achieve this, outbound filters are set using the MED metric.
- Prevention of transit traffic—A route map is configured at Router E in autonomous system 50000 to block all incoming BGP routing updates to prevent autonomous system 50000 from receiving transit traffic from the ISP in autonomous system 45000.

#### **MED Attribute**

Configuring the MED attribute is another method that BGP can use to influence the choice of paths into another autonomous system. The MED attribute indicates (to an external peer) a preferred path into an autonomous system. If there are multiple entry points into an autonomous system, the MED can be used to influence another autonomous system to choose one particular entry point. A metric is assigned using route maps where a lower MED metric is preferred by the software over a higher MED metric.

- 1. enable
- 2. configure terminal
- 3. router bgp autonomous-system-number
- **4. network** *network-number* [**mask** *network-mask*] [**route-map** *route-map-name*]
- 5. address-family ipv4 [unicast | multicast | vrf vrf-name]
- **6. neighbor** {ip-address | peer-group-name} **remote-as** autonomous-system-number
- 7. **neighbor** {ip-address | peer-group-name} **route-map** map-name {**in** | **out**}

- **8.** Repeat Step 7 to apply another route map to the neighbor specified in Step 7.
- **9. neighbor** {*ip-address* | *peer-group-name*} **remote-as** *autonomous-system-number*
- **10. neighbor** {*ip-address* | *peer-group-name*} **route-map** *map-name* {**in** | **out**}
- 11. Repeat Step 10 to apply another route map to the neighbor specified in Step 10.
- 12. exit
- 13. exit
- **14. ip route** *prefix mask* {*ip-address* | *interface-type interface-number* [*ip-address*]} [*distance*] [*name*] [**permanent** | **track** *number*] [**tag** *tag*]
- **15**. Repeat Step 14 to configure another route map.
- **16**. **route-map** *map-name* [**permit** | **deny**] [*sequence-number*]
- 17. set metric value
- 18. exit
- **19**. **route-map** *map-name* [**permit** | **deny**] [*sequence-number*]
- 20. set metric value
- **21**. exit
- **22**. **route-map** *map-name* [**permit** | **deny**] [*sequence-number*]
- **23**. end
- **24**. **show ip route** [*ip-address*] [*mask*] [**longer-prefixes**]
- **25. show ip bgp** [network] [network-mask]

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		• Enter your password if prompted.
	Example:	
	Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Router# configure terminal	
Step 3	router bgp autonomous-system-number	Enters router configuration mode for the specified routing process.
	Example:	
	Router(config)# router bgp 45000	
Step 4	<pre>network network-number [mask network-mask] [route-map route-map-name]</pre>	Specifies a network as local to this autonomous system and adds it to the BGP routing table.
	Example: Router(config-router)# network 10.2.2.0 mask 255.255.255.0	<ul> <li>For exterior protocols the <b>network</b> command controls which networks are advertised. Interior protocols use the <b>network</b> command to determine where to send updates.</li> </ul>

	Command or Action	Purpose
Step 5	address-family ipv4 [unicast   multicast   vrf vrf-name]	Specifies the IPv4 address family and enters address family configuration mode.
	<pre>Example: Router(config-router)# address-family ipv4 unicast</pre>	• The <b>unicast</b> keyword specifies the IPv4 unicast address family. By default, the router is placed in address family configuration mode for the IPv4 unicast address family if the <b>unicast</b> keyword is not specified with the <b>address-family ipv4</b> command.
		• The <b>multicast</b> keyword specifies IPv4 multicast address prefixes.
		• The <b>vrf</b> keyword and <i>vrf-name</i> argument specify the name of the VRF instance to associate with subsequent IPv4 address family configuration mode commands.
Step 6	neighbor {ip-address   peer-group-name} remote-as autonomous-system-number	Adds the IP address or peer group name of the neighbor in the specified autonomous system to the IPv4 multiprotocol BGP neighbor table of the local router.
	<pre>Example: Router(config-router-af)# neighbor 192.168.2.1 remote-as 45000</pre>	• In this example, the BGP peer at Router D is added to the BGP routing table.
Step 7	neighbor {ip-address   peer-group-name}	Applies a route map to incoming or outgoing routes.
	route-map map-name {in   out}	• In the first example, the route map named BLOCK is applied to inbound routes at Router E.
	Example: Router(config-router-af)# neighbor 192.168.2.1 route-map BLOCK in	• In the second example, the route map named SETMETRIC1 is applied to outbound routes to Router D.
	and	<b>Note</b> Two examples are shown here because the task example requires both these statements to be
	<pre>Example: Router(config-router-af)# neighbor 192.168.2.1 route-map SETMETRIC1 out</pre>	configured.
Step 8	Repeat Step 7 to apply another route map to the neighbor specified in Step 7.	_
Step 9	<pre>neighbor {ip-address   peer-group-name} remote-as autonomous-system-number</pre>	Adds the IP address or peer group name of the neighbor in the specified autonomous system to the IPv4 multiprotocol BGP neighbor table of the local router.
	<pre>Example: Router(config-router-af)# neighbor 192.168.3.1 remote-as 45000</pre>	• In this example, the BGP peer at Router D is added to the BGP routing table.

	Command or Action	Purpose
Step 10	neighbor {ip-address   peer-group-name}	Applies a route map to incoming or outgoing routes.
	route-map map-name {in   out}	• In the first example, the route map named BLOCK is applied to inbound routes at Router E.
	<pre>Example: Router(config-router-af)# neighbor 192.168.3.1 route-map BLOCK in</pre>	• In the second example, the route map named SETMETRIC2 is applied to outbound routes to Router D.
	and	Note Two examples are shown here because the task example requires both these statements to be configured.
	<pre>Example: Router(config-router-af)# neighbor 192.168.3.1 route-map SETMETRIC2 out</pre>	comiguica.
Step 11	Repeat Step 10 to apply another route map to the neighbor specified in Step 10.	
Step 12	exit	Exits address family configuration mode and enters router configuration mode.
	<pre>Example: Router(config-router-af)# exit</pre>	
Step 13	exit	Exits router configuration mode and enters global configuration mode.
	<pre>Example: Router(config-router)# exit</pre>	
Step 14	<pre>ip route prefix mask {ip-address   interface-type interface-number [ip-address]} [distance] [name] [permanent   track number] [tag tag]</pre>	<ul> <li>Establishes a static route.</li> <li>In the first example, a static route to BGP peer 192.168.2.1 is established and given an administrative distance of 50.</li> </ul>
	Example: Router(config)# ip route 0.0.0.0 0.0.0.0 192.168.2.1 50	• In the second example, a static route to BGP peer 192.168.3.1 is established and given an administrative distance of 40. The lower administrative distance makes this route via Router B the preferred route.
	Example: Router(config)# ip route 0.0.0.0 0.0.0.0 192.168.2.1 50	Note Two examples are shown here because the task example requires both these statements to be configured.
	and	
	Example: Router(config)# ip route 0.0.0.0 0.0.0.0 192.168.3.1 40	
Step 15	Repeat Step 14 to establish another static route.	_
Step 16	route-map map-name [permit   deny] [sequence-number]	Configures a route map and enters route map configuration mode.
	<pre>Example: Router(config)# route-map SETMETRIC1 permit 10</pre>	In this example, a route map named SETMETRIC1 is created.

	Command or Action	Purpose
Step 17	set metric value	Sets the MED metric value.
	<pre>Example: Router(config-route-map)# set metric 100</pre>	
Step 18	exit	Exits route map configuration mode and enters global configuration mode.
	<pre>Example: Router(config-route-map)# exit</pre>	
Step 19	<pre>route-map map-name [permit   deny] [sequence-number]</pre>	Configures a route map and enters route map configuration mode.
	<pre>Example: Router(config)# route-map SETMETRIC2 permit 10</pre>	• In this example, a route map named SETMETRIC2 is created.
Step 20	set metric value	Sets the MED metric value.
	<pre>Example: Router(config-route-map)# set metric 50</pre>	
Step 21	exit	Exits route map configuration mode and enters global configuration mode.
	<pre>Example: Router(config-route-map)# exit</pre>	
Step 22	<pre>route-map map-name [permit   deny] [sequence-number]</pre>	Configures a route map and enters route map configuration mode.
	<pre>Example: Router(config)# route-map BLOCK deny 10</pre>	• In this example, a route map named BLOCK is created to block all incoming routes from autonomous system 45000.
Step 23	end	Exits route map configuration mode and enters privileged EXEC mode.
	<pre>Example: Router(config-route-map)# end</pre>	

	Command or Action	Purpose
Step 24	<pre>show ip route [ip-address] [mask] [longer-prefixes]</pre>	(Optional) Displays route information from the routing tables.
	Example: Router# show ip route	• Use this command at Router E in Figure 6 after Router B and Router D have received update information containing the MED metric from Router E.
		• Only the syntax applicable to this task is used in this example. For more details, see the <i>Cisco IOS IP Routing: BGP Command Reference</i> .
Step 25	show ip bgp [network] [network-mask]	(Optional) Displays the entries in the BGP routing table.
	Example: Router# show ip bgp 172.17.1.0 255.255.255.0	• Use this command at Router E in Figure 6 after Router B and Router D have received update information containing the MED metric from Router E.
		• Only the syntax applicable to this task is used in this example. For more details, see the <i>Cisco IOS IP Routing: BGP Command Reference</i> .

The following example shows output from the **show ip route** command entered at Router E after this task has been configured and Router B and Router D have received update information containing the MED metric. Note that the gateway of last resort is set as 192.168.3.1, which is the route to Router B.

Router# show ip route

```
Codes: C - connected, S - static, R - RIP, M - mobile, B - BGP
    D - EIGRP, EX - EIGRP external, O - OSPF, IA - OSPF inter area
    N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
    E1 - OSPF external type 1, E2 - OSPF external type 2
    i - IS-IS, su - IS-IS summary, L1 - IS-IS level-1, L2 - IS-IS level-2
    ia - IS-IS inter area, * - candidate default, U - per-user static route
    ODR, P - periodic downloaded static route

Gateway of last resort is 192.168.3.1 to network 0.0.0.0

10.0.0.0/24 is subnetted, 1 subnets
C    10.2.2.0 is directly connected, GigabitEthernet0/0/0
C    192.168.2.0/24 is directly connected, Serial3/0/0
C    192.168.3.0/24 is directly connected, Serial2/0/0
S*    0.0.0.0/0 [40/0] via 192.168.3.1
```

The following example shows output from the **show ip bgp** command entered at Router E after this task has been configured and Router B and Router D have received routing updates. The route map BLOCK has denied all routes coming in from autonomous system 45000 so the only network shown is the local network.

```
Router# show ip bgp
```

The following example shows output from the **show ip bgp** command entered at Router B after this task has been configured at Router E and Router B has received routing updates. Note the metric of 50 for network 10.2.2.0.

```
Router# show ip bgp
BGP table version is 7, local router ID is 172.17.1.99
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal,
             r RIB-failure, S Stale
Origin codes: i - IGP, e - EGP, ? - incomplete
                   Next Hop
                                       Metric LocPrf Weight Path
  Network
*> 10.1.1.0/24
                   192.168.1.2
                                           0
                                                          0 40000 i
*> 10.2.2.0/24
                  192.168.3.2
                                                         0 50000 i
                                           50
*> 172.16.1.0/24 0.0.0.0
                                            Ω
                                                      32768 i
*> 172.17.1.0/24
                   0.0.0.0
                                                      32768 i
```

The following example shows output from the **show ip bgp** command entered at Router D after this task has been configured at Router E and Router D has received routing updates. Note the metric of 100 for network 10.2.2.0.

```
Router# show ip bgp
BGP table version is 3, local router ID is 192.168.2.1
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal,
             r RIB-failure, S Stale
Origin codes: i - IGP, e - EGP, ? - incomplete
  Network
                   Next Hop
                                      Metric LocPrf Weight Path
*> 10.2.2.0/24
                   192.168.2.2
                                                          0 50000 i
                                          100
*> 172.16.1.0/24
                   0.0.0.0
                                            Ω
                                                      32768 i
```

# **Configuring Multihoming to Receive the Full Internet Routing Table**

Perform this task to configure your network to build neighbor relationships with other routers in other autonomous systems while filtering outbound routes. In this task the full Internet routing table will be received from the service providers in the neighboring autonomous systems but only locally originated routes will be advertised to the service providers. This task is configured at Router B in Figure 6 and uses an access list to permit only locally originated routes and a route map to ensure that only the locally originated routes are advertised outbound to other autonomous systems.



Be aware that receiving the full Internet routing table from two ISPs may use all the memory in smaller routers.

- 1. enable
- 2. configure terminal
- 3. router bgp autonomous-system-number
- 4. address-family ipv4 [unicast | multicast | vrf vrf-name]
- **5. network** *network-number* [**mask** *network-mask*]
- **6. neighbor** {*ip-address* | *peer-group-name*} **remote-as** *autonomous-system-number*
- 7. **neighbor** {ip-address | peer-group-name} **route-map** map-name {**in** | **out**}

- **8. neighbor** {*ip-address* | *peer-group-name*} **remote-as** *autonomous-system-number*
- **9. neighbor** {*ip-address* | *peer-group-name*} **route-map** *map-name* {**in** | **out**}
- 10. exit
- 11. exit
- 12. ip as-path access-list access-list-number {deny | permit} as-regular-expression
- **13.** route-map map-name [permit | deny] [sequence-number]
- **14.** match as-path path-list-number
- 15. end
- **16. show ip bgp** [network] [network-mask]

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		• Enter your password if prompted.
	Example: Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	router bgp autonomous-system-number	Enters router configuration mode for the specified routing process.
	Example: Router(config)# router bgp 45000	
Step 4	<pre>address-family ipv4 [unicast   multicast   vrf vrf-name]</pre>	Specifies the IPv4 address family and enters address family configuration mode.
	<pre>Example: Router(config-router)# address-family ipv4 unicast</pre>	• The unicast keyword specifies the IPv4 unicast address family. By default, the router is placed in address family configuration mode for the IPv4 unicast address family if the unicast keyword is not specified with the address-family ipv4 command.
		• The <b>multicast</b> keyword specifies IPv4 multicast address prefixes.
		• The <b>vrf</b> keyword and <i>vrf-name</i> argument specify the name of the VRF instance to associate with subsequent IPv4 address family configuration mode commands.
Step 5	network network-number [mask network-mask]	Specifies a network as local to this autonomous system and adds it to the BGP routing table.
	Example: Router(config-router-af)# network 172.17.1.0 mask 255.255.255.0	<ul> <li>For exterior protocols the <b>network</b> command controls which networks are advertised. Interior protocols use the <b>network</b> command to determine where to send updates.</li> </ul>

	Command or Action	Purpose
Step 6	neighbor {ip-address   peer-group-name} remote-as autonomous-system-number	Adds the IP address or peer group name of the neighbor in the specified autonomous system to the IPv4 multiprotocol BGP neighbor table of the local router.
	<pre>Example: Router(config-router-af)# neighbor 192.168.1.2 remote-as 40000</pre>	
Step 7	<pre>neighbor {ip-address   peer-group-name} route-map map-name {in   out}</pre>	Applies a route map to incoming or outgoing routes.
	, , , , , , , , , , , , , , , , , , , ,	• In this example, the route map named localonly is applied to outbound routes to Router A.
	<pre>Example: Router(config-router-af)# neighbor 192.168.1.2 route-map localonly out</pre>	
Step 8	<pre>neighbor {ip-address   peer-group-name} remote-as autonomous-system-number</pre>	Adds the IP address or peer group name of the neighbor in the specified autonomous system to the IPv4 multiprotocol BGP neighbor table of the local router.
	<pre>Example: Router(config-router-af)# neighbor 192.168.3.2 remote-as 50000</pre>	
Step 9	<pre>neighbor {ip-address   peer-group-name} route-map map-name {in   out}</pre>	Applies a route map to incoming or outgoing routes.
	Example:	• In this example, the route map named localonly is applied to outbound routes to Router E.
	Router(config-router-af)# neighbor 192.168.3.2 route-map localonly out	
Step 10	exit	Exits address family configuration mode and enters router configuration mode.
	<pre>Example: Router(config-router-af)# exit</pre>	
Step 11	exit	Exits router configuration mode and enters global configuration mode.
	<pre>Example: Router(config-router)# exit</pre>	
Step 12	<pre>ip as-path access-list access-list-number {deny   permit} as-regular-expression</pre>	Defines a BGP-related access list.
	, , , , , , , , , , , , , , , , , , , ,	• In this example, the access list number 10 is defined to permit only locally originated BGP routes.
	<pre>Example: Router(config)# ip as-path access-list 10 permit ^\$</pre>	r
Step 13	route-map map-name [permit   deny] [sequence-number]	Configures a route map and enters route map configuration mode.
	<pre>Example: Router(config)# route-map localonly permit 10</pre>	• In this example, a route map named localonly is created.
Step 14	match as-path path-list-number	Matches a BGP autonomous system path access list.
	<pre>Example: Router(config-route-map)# match as-path 10</pre>	• In this example, the BGP autonomous system path access list created in Step 12 is used for the match clause.

	Command or Action	Purpose
Step 15	end	Exits route map configuration mode and enters privileged EXEC mode.
	<pre>Example: Router(config-route-map)# end</pre>	
Step 16	<pre>show ip bgp [network] [network-mask]</pre>	Displays the entries in the BGP routing table.
	Example: Router# show ip bgp	Note Only the syntax applicable to this task is used in this example. For more details, see the <i>Cisco IOS IP Routing: BGP Command Reference</i> .

The following example shows the BGP routing table for Router B in Figure 6 after this task has been configured. Note that the routing table contains the information about the networks in the autonomous systems 40000 and 50000.

```
BGP table version is 5, local router ID is 172.17.1.99
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal,
             r RIB-failure, S Stale
Origin codes: i - IGP, e - EGP, ? - incomplete
  Network
                   Next Hop
                                       Metric LocPrf Weight Path
*> 10.1.1.0/24
                                                         0 40000 i
                   192.168.1.2
                                          Ο
*> 10.2.2.0/24
                  192.168.3.2
                                                         0 50000 i
                                            0
*> 172.17.1.0/24
                   0.0.0.0
```

# **Configuring BGP Policies**

The tasks in this section help you configure BGP policies that filter the traffic in your BGP network. The following optional tasks demonstrate some of the various methods by which traffic can be filtered in your BGP network:

- Filtering BGP Prefixes with Prefix Lists, page 38
- Filtering BGP Prefixes with AS-path Filters, page 41
- Filtering BGP Prefixes with AS-path Filters Using 4-Byte Autonomous System Numbers, page 47
- Filtering Traffic Using Community Lists, page 44
- Filtering Traffic Using Extended Community Lists, page 51
- Filtering Traffic Using a BGP Route Map Policy List, page 54
- Filtering Traffic Using Continue Clauses in a BGP Route Map, page 57

# Filtering BGP Prefixes with Prefix Lists

Perform this task to use prefix lists to filter BGP route information. The task is configured at Router B in Figure 7 where both Router A and Router E are set up as BGP peers. A prefix list is configured to permit only routes from the network 10.2.2.0/24 to be outbound. In effect, this will restrict the information that is received from Router E to be forwarded to Router A. Optional steps are included to display the prefix list information and to reset the hit count.

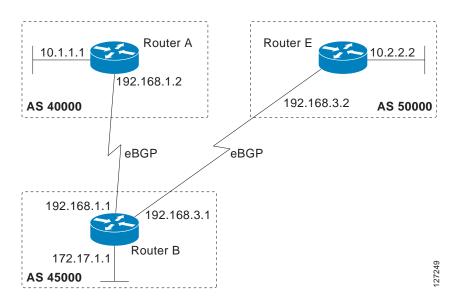


Figure 7 BGP Topology for Configuring BGP Policies Tasks

#### **Restrictions**

The **neighbor prefix-list** and the **neighbor distribute-list** commands are mutually exclusive for a BGP peer.

- 1. enable
- 2. configure terminal
- 3. router bgp autonomous-system-number
- 4. **network** network-number [**mask** network-mask]
- 5. neighbor ip-address remote-as autonomous-system-number
- **6.** Repeat Step 5 for all BGP peers.
- 7. aggregate-address address mask [as-set]
- 8. **neighbor** *ip-address* **prefix-list** *list-name* {**in** / **out**}
- 9. exit
- **10. ip prefix-list** *list-name* [**seq** *seq-number*] {**deny** *network/length* | **permit** *network/length*} [**ge** *ge-value*] [**le** *le-value*] [**eq** *eq-value*]
- 11. end
- **12. show ip prefix-list** [**detail** | **summary**] [prefix-list-name] [network/length] [**seq** seq-number] [**longer**] [**first-match**]
- **13**. **clear ip prefix-list** {\* | *ip-address* | *peer-group-name*} **out**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		• Enter your password if prompted.
	Example: Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Router# configure terminal	
Step 3	router bgp autonomous-system-number	Enters router configuration mode for the specified routing process.
	Example: Router(config)# router bgp 45000	
Step 4	network network-number [mask network-mask]	(Optional) Specifies a network as local to this autonomous system and adds it to the BGP routing table.
	Example: Router(config-router)# network 172.17.1.0 mask 255.255.255.0	<ul> <li>For exterior protocols the <b>network</b> command controls which networks are advertised. Interior protocols use the <b>network</b> command to determine where to send updates.</li> </ul>
Step 5	neighbor ip-address remote-as autonomous-system-number	Adds the IP address of the neighbor in the specified autonomous system BGP neighbor table of the local router.
	<pre>Example: Router(config-router)# neighbor 192.168.1.2 remote-as 40000</pre>	
Step 6	Repeat Step 5 for all BGP peers.	_
Step 7	aggregate-address address mask [as-set]	Creates an aggregate entry in a BGP routing table.
		• A specified route must exist in the BGP table.
	Example: Router(config-router)# aggregate-address 172.0.0.0 255.0.0.0	• Use the <b>aggregate-address</b> command with no keywords to create an aggregate entry if any more-specific BGP routes are available that fall in the specified range.
		Note Only partial syntax is used in this example. For more details, see the <i>Cisco IOS IP Routing: BGP Command Reference</i> .
Step 8	$\begin{array}{lll} \textbf{neighbor} & ip\text{-}address & \textbf{prefix-list} & list\text{-}name & \{\textbf{in} \mid \\ \textbf{out}\} \end{array}$	Distributes BGP neighbor information as specified in a prefix list.
	Example: Router(config-router)# neighbor 192.168.1.2 prefix-list super172 out	• In this example, a prefix list called super172 is set for outgoing routes to Router A.
Step 9	exit	Exits router configuration mode and enters global configuration mode.
	Example: Router(config-router)# exit	

	Command or Action	Purpose
Step 10	<pre>ip prefix-list list-name [seq seq-number] {deny network/length   permit network/length} [ge ge-value] [le le-value] [eq eq-value]</pre>	Defines a BGP-related prefix list and enters access list configuration mode.
	Example: Router(config)# ip prefix-list super172 permit 172.0.0.0/8	<ul> <li>In this example, the prefix list called super172 is defined to permit only route 172.0.0.0/8 to be forwarded.</li> <li>All other routes will be denied because there is an implicit deny at the end of all prefix lists.</li> </ul>
Step 11	end	Exits access list configuration mode and enters privileged EXEC mode.
	<pre>Example: Router(config-access-list)# end</pre>	
Step 12	<pre>show ip prefix-list [detail   summary] [prefix-list-name] [network/length] [seq seq-number] [longer] [first-match]</pre>	<ul> <li>Displays information about prefix lists.</li> <li>In this example, details of the prefix list named super172 will be displayed, including the hit count. Hit</li> </ul>
	Example: Router# show ip prefix-list detail super172	count is the number of times the entry has matched a route.
Step 13	<pre>clear ip prefix-list {*   ip-address   peer-group-name} out</pre>	Resets the hit count of the prefix list entries.  • In this example, the hit count for the prefix list called super172 will be reset.
	Example: Router# clear ip prefix-list super172 out	superitie with seriesce.

The following output from the **show ip prefix-list** command shows details of the prefix list named super172, including the hit count. The **clear ip prefix-list** command is entered to reset the hit count and the **show ip prefix-list** command is entered again to show the hit count reset to 0.

```
Router# show ip prefix-list detail super172

ip prefix-list super172:
    count: 1, range entries: 0, sequences: 5 - 5, refcount: 4
    seq 5 permit 172.0.0.0/8 (hit count: 1, refcount: 1)

Router# clear ip prefix-list super172

Router# show ip prefix-list detail super172

ip prefix-list super172:
    count: 1, range entries: 0, sequences: 5 - 5, refcount: 4
    seq 5 permit 172.0.0.0/8 (hit count: 0, refcount: 1)
```

# Filtering BGP Prefixes with AS-path Filters

Perform this task to filter BGP prefixes using AS-path filters with an access list based on the value of the AS-path attribute to filter route information. An AS-path access list is configured at Router B in Figure 7. The first line of the access list denies all matches to the AS-path 50000 and the second line allows all other paths. The router uses the **neighbor filter-list** command to specify the AS-path access list as an outbound filter. After the filtering is enabled, traffic can be received from both Router A and Router E but updates originating from autonomous system 50000 (Router E) are not forwarded by Router

B to Router A. If any updates from Router E originated from another autonomous system, they would be forwarded because they would contain both autonomous system 50000 plus another autonomous system number, and that would not match the AS-path access list.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. router bgp autonomous-system-number
- **4. network** *network-number* [**mask** *network-mask*]
- **5. neighbor** {*ip-address* | *peer-group-name*} **remote-as** *autonomous-system-number*
- **6.** Repeat Step 5 for all BGP peers.
- 7. **neighbor** {ip-address | peer-group-name} **filter-list** access-list-number {**in** / **out**}
- 8. exit
- **9. ip as-path access-list** *access-list-number* {**deny** | **permit**} *as-regular-expression*
- 10. Repeat Step 9 for all entries required in the AS-path access list.
- 11. end
- 12. show ip bgp regexp as-regular-expression

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		Enter your password if prompted.
	Example:	
	Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Router# configure terminal	
Step 3	router bgp autonomous-system-number	Enters router configuration mode for the specified routing
		process.
	Example: Router(config)# router bgp 45000	
Step 4	network network-number [mask network-mask]	(Optional) Specifies a network as local to this autonomous system and adds it to the BGP routing table.
	Example: Router(config-router)# network 172.17.1.0 mask 255.255.255.0	• For exterior protocols the <b>network</b> command controls which networks are advertised. Interior protocols use the <b>network</b> command to determine where to send updates.
		Note Only partial syntax is used in this example. For more details, see the <i>Cisco IOS IP Routing: BGP Command Reference</i> .

	Command or Action	Purpose
Step 5	neighbor {ip-address   peer-group-name} remote-as autonomous-system-number	Adds the IP address or peer group name of the neighbor in the specified autonomous system BGP neighbor table of the local router.
	Example:	
	Router(config-router)# neighbor 192.168.1.2 remote-as 40000	
Step 6	Repeat Step 5 for all BGP peers.	_
Step 7	<pre>neighbor {ip-address   peer-group-name} filter-list {access-list-number} {in   out}</pre>	Distributes BGP neighbor information as specified in a prefix list.
	<pre>Example: Router(config-router)# neighbor 192.168.1.2 filter-list 100 out</pre>	• In this example, an access list number 100 is set for outgoing routes to Router A.
Step 8	exit	Exits router configuration mode and enters global configuration mode.
	<pre>Example: Router(config-router)# exit</pre>	
Step 9	<pre>ip as-path access-list access-list-number {deny   permit} as-regular-expression</pre>	Defines a BGP-related access list and enters access list configuration mode.
	<pre>Example: Router(config)# ip as-path access-list 100 deny</pre>	• In the first example, access list number 100 is defined to deny any AS-path that starts and ends with 50000.
	^50000\$ and	• In the second example, all routes that do not match the criteria in the first example of the AS-path access list will be permitted. The period and asterisk symbols imply that all characters in the AS-path will match so Router B will forward those updates to Router A.
	Example:	Note Two examples are shown here because the task
	<pre>Router(config)# ip as-path access-list 100 permit .*</pre>	example requires both these statements to be configured.
Step 10	Repeat Step 9 for all entries required in the AS-path access list.	_
Step 11	end	Exits access list configuration mode and enters privileged EXEC mode.
	<pre>Example: Router(config-access-list)# end</pre>	
Step 12	show ip bgp regexp as-regular-expression	Displays routes matching the regular expression.
	Example:	• To verify the regular expression you can use this command.
	Router# show ip bgp regexp ^50000\$	• In this example, all paths that match the expression "starts and ends with 50000" will be displayed.

The following output from the **show ip bgp regexp** command shows the autonomous system paths that match the regular expression—start and end with AS-path 50000:

```
Router# show ip bgp regexp ^50000$

BGP table version is 9, local router ID is 172.17.1.99

Status codes: s suppressed, d damped, h history, * valid, > best, i - internal, r RIB-failure, S Stale

Origin codes: i - IGP, e - EGP, ? - incomplete

Network Next Hop Metric LocPrf Weight Path
*> 10.2.2.0/24 192.168.3.2 0 150 50000 i
```

# **Filtering Traffic Using Community Lists**

Perform this task to filter traffic by creating BGP community lists and then reference them within a route map to control incoming routes. BGP communities provide a method of filtering inbound or outbound routes for large, complex networks. Instead of compiling long access or prefix lists of individual peers, BGP allows grouping of peers with identical routing policies even though they reside in different autonomous systems or networks.

In this task, Router B in Figure 7 is configured with several route maps and community lists to control incoming routes.

- 1. enable
- 2. configure terminal
- 3. router bgp autonomous-system-number
- **4. neighbor** {ip-address | peer-group-name} **remote-as** autonomous-system-number
- 5. **neighbor** {ip-address | peer-group-name} **route-map** route-map-name {**in** | **out**}
- 6. exit
- 7. **route-map** map-name [**permit** | **deny**] [sequence-number]
- **8.** match community {standard-list-number | expanded-list-number | community-list-name [exact]}
- 9. set weight weight
- 10. exit
- **11. route-map** *map-name* [**permit** | **deny**] [*sequence-number*]
- **12.** match community {standard-list-number | expanded-list-number | community-list-name [exact]}
- **13**. **set community** *community-number*
- 14. exit
- **15. ip community-list** { standard-list-number | **standard** list-name { **deny** | **permit** } [community-number] [AA:NN] [**internet**] [**local-AS**] [**no-advertise**] [**no-export**] } | { expanded-list-number | **expanded** list-name { **deny** | **permit** } regular-expression}
- **16.** Repeat Step 15 to create all the required community lists.
- 17. end

**18. show ip community-list** [standard-list-number | expanded-list-number | community-list-name] [**exact-match**]

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		Enter your password if prompted.
	Example: Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	router bgp autonomous-system-number	Enters router configuration mode for the specified routing process.
	Example: Router(config)# router bgp 45000	
Step 4	<pre>neighbor {ip-address   peer-group-name} remote-as autonomous-system-number</pre>	Adds the IP address or peer group name of the neighbor in the specified autonomous system BGP neighbor table of the local router.
	<pre>Example: Router(config-router)# neighbor 192.168.3.2 remote-as 50000</pre>	
Step 5	<pre>neighbor {ip-address   peer-group-name} route-map route-map-name {in   out}</pre>	Applies a route map to inbound or outbound routes.
		• In this example, the route map called 2000 is applied to inbound routes from the BGP peer at 192.168.3.2.
	<pre>Example: Router(config-router)# neighbor 192.168.3.2 route-map 2000 in</pre>	
Step 6	exit	Exits router configuration mode and enters global configuration mode.
	<pre>Example: Router(config-router)# exit</pre>	
Step 7	<pre>route-map map-name [permit   deny] [sequence-number]</pre>	Creates a route map and enters route map configuration mode.
	<pre>Example: Router(config)# route-map 2000 permit 10</pre>	• In this example, the route map called 2000 is defined.
Step 8	match community {standard-list-number	Matches a BGP community list.
	<pre>expanded-list-number   community-list-name [exact]}</pre>	• In this example, the community attribute is matched to community list 1.
	<pre>Example: Router(config-route-map)# match community 1</pre>	

	Command or Action	Purpose
Step 9	set weight weight	Specifies the BGP weight for the routing table.
	<pre>Example: Router(config-route-map)# set weight 30</pre>	• In this example, any route that matches community list 1 will have the BGP weight set to 30.
Step 10	exit	Exits route map configuration mode and enters global configuration mode.
	<pre>Example: Router(config-route-map)# exit</pre>	
Step 11	<pre>route-map map-name [permit   deny] [sequence-number]</pre>	Creates a route map and enters route map configuration mode.
	<pre>Example: Router(config)# route-map 3000 permit 10</pre>	• In this example, the route map called 3000 is defined.
Step 12	match community {standard-list-number	Matches a BGP community list.
	<pre>expanded-list-number   community-list-name [exact]}</pre>	• In this example, the community attribute is matched to community list 2.
	<pre>Example: Router(config-route-map)# match community 2</pre>	
Step 13	set community community-number	Sets the BGP communities attribute.
	<pre>Example: Router(config-route-map)# set community 99</pre>	• In this example, any route that matches community list 2 will have the BGP community attribute set to 99.
Step 14	exit	Exits route map configuration mode and enters global configuration mode.
	<pre>Example: Router(config-route-map)# exit</pre>	
Step 15	<pre>ip community-list {standard-list-number   standard list-name {deny   permit}</pre>	Creates a community list for BGP and controls access to it.
	[community-number] [AA:NN] [internet] [local-AS] [no-advertise] [no-export]}   {expanded-list-number   expanded list-name {deny   permit} regular-expression}	• In the first example, community list 1 permits routes with a community attribute of 100. Router C routes all have community attribute of 100 so their weight will be set to 30.
	<pre>Example: Router(config)# ip community-list 1 permit 100 and</pre>	• In the second example, community list 2 effectively permits all routes by using the <b>internet</b> keyword. Any routes that did not match community list 1 are checked against community list 2. All routes are permitted but no changes are made to the route attributes.
	<pre>Example: Router(config)# ip community-list 2 permit internet</pre>	Note Two examples are shown here because the task example requires both these statements to be configured.
Step 16	Repeat Step 15 to create all the required community lists.	

	Command or Action	Purpose
Step 17	exit	Exits global configuration mode and enters privileged EXEC mode.
	Example:	
	Router(config)# exit	
Step 18	<pre>show ip community-list [standard-list-number   expanded-list-number   community-list-name] [exact-match]</pre>	Displays configured BGP community list entries.
	Example:	
	Router# show ip community-list 1	

The following sample output verifies that community list 1 has been created, with the output showing that community list 1 permits routes with a community attribute of 100:

```
Router# show ip community-list 1
Community standard list 1
permit 100
```

The following sample output verifies that community list 2 has been created, with the output showing that community list 2 effectively permits all routes by using the **internet** keyword:

```
Router# show ip community-list 2
Community standard list 2
permit internet
```

# Filtering BGP Prefixes with AS-path Filters Using 4-Byte Autonomous System Numbers

In Cisco IOS Release 2.4 and later releases, BGP support for 4-octet (4-byte) autonomous system numbers was introduced. The 4-byte autonomous system numbers in this task are formatted in the default asplain (decimal value) format, for example, Router B is in autonomous system number 65538 in Figure 8 on page 48 For more details about the introduction of 4-byte autonomous system numbers, see "BGP Autonomous System Number Formats" section on page 4.

Perform this task to filter BGP prefixes with AS-path filters using 4-byte autonomous system numbers with an access list based on the value of the AS-path attribute to filter route information. An AS-path access list is configured at Router B in Figure 8. The first line of the access list denies all matches to the AS-path 65550 and the second line allows all other paths. The router uses the **neighbor filter-list** command to specify the AS-path access list as an outbound filter. After the filtering is enabled, traffic can be received from both Router A and Router E but updates originating from autonomous system 65550 (Router E) are not forwarded by Router B to Router A. If any updates from Router E originated from another autonomous system, they would be forwarded because they would contain both autonomous system 65550 plus another autonomous system number, and that would not match the AS-path access list.



In Cisco IOS XE Release 2.1 and later releases, the maximum number of autonomous system access lists that can be configured with the **ip as-path access-list** command is increased from 199 to 500.

Router A

192.168.1.2

AS 65536

Page 192.168.3.2

192.168.3.2

192.168.3.1

172.17.1.1

Router B

AS 65538

Figure 8 BGP Topology for Filtering BGP Prefixes with AS-path Filters Using 4-Byte Autonomous System Numbers

- 1. enable
- 2. configure terminal
- 3. router bgp autonomous-system-number
- 4. address-family ipv4 [unicast | multicast | vrf vrf-name]
- **5. network** *network-number* [**mask** *network-mask*]
- **6. neighbor** {ip-address | peer-group-name} **remote-as** autonomous-system-number
- 7. Repeat Step 5 for all BGP peers.
- 8. **neighbor** {ip-address | peer-group-name} **filter-list** access-list-number {**in** / **out**}
- 9. exit
- **10. ip as-path access-list** access-list-number {**deny** | **permit**} as-regular-expression
- 11. Repeat Step 10 for all entries required in the AS-path access list.
- 12. end
- 13. show ip bgp regexp as-regular-expression

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example: Router> enable	Enter your password if prompted.
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	router bgp autonomous-system-number	Enters router configuration mode for the specified routing process.
	<pre>Example: Router(config)# router bgp 65538</pre>	
Step 4	<pre>address-family ipv4 [unicast   multicast   vrf vrf-name]</pre>	Specifies the IPv4 address family and enters address family configuration mode.
	<pre>Example: Router(config-router)# address-family ipv4 unicast</pre>	• The <b>unicast</b> keyword specifies the IPv4 unicast address family. By default, the router is placed in address family configuration mode for the IPv4 unicast address family if the <b>unicast</b> keyword is not specified with the <b>address-family ipv4</b> command.
		• The <b>multicast</b> keyword specifies IPv4 multicast address prefixes.
		• The <b>vrf</b> keyword and <i>vrf-name</i> argument specify the name of the VRF instance to associate with subsequent IPv4 address family configuration mode commands.
Step 5	network network-number [mask network-mask]	(Optional) Specifies a network as local to this autonomous system and adds it to the BGP routing table.
	Example: Router(config-router-af)# network 172.17.1.0 mask 255.255.255.0	<ul> <li>For exterior protocols the network command controls which networks are advertised. Interior protocols use the network command to determine where to send updates.</li> </ul>
		Note Only partial syntax is used in this example. For more details, see the <i>Cisco IOS IP Routing: BGP Command Reference</i> .
Step 6	<pre>neighbor {ip-address   peer-group-name} remote-as autonomous-system-number</pre>	Adds the IP address or peer group name of the neighbor in the specified autonomous system BGP neighbor table of the local router.
	<pre>Example: Router(config-router-af)# neighbor 192.168.1.2 remote-as 65536</pre>	• In this example, the IP address for the neighbor at Router A is added.
Step 7	Repeat Step 6 for all BGP peers.	_

	Command or Action	Purpose
Step 8	<pre>neighbor {ip-address   peer-group-name} filter-list access-list-number {in   out}</pre>	Distributes BGP neighbor information as specified in a prefix list.
	<pre>Example: Router(config-router)# neighbor 192.168.1.2 filter-list 99 out</pre>	• In this example, an access list number 99 is set for outgoing routes to Router A.
Step 9	exit	Exits router configuration mode and returns to global configuration mode.
	<pre>Example: Router(config-router)# exit</pre>	
Step 10	<pre>ip as-path access-list access-list-number {deny</pre>	Defines a BGP-related access list and enters access list configuration mode.
	<pre>Example: Router(config)# ip as-path access-list 99 deny ^65550\$ and</pre>	<ul> <li>In the first example, access list number 99 is defined to deny any AS-path that starts and ends with 65550.</li> <li>In the second example, all routes that do not match the criteria in the first example of the AS-path access list will be permitted. The period and asterisk symbols</li> </ul>
	<pre>Example: Router(config)# ip as-path access-list 99 permit .*</pre>	imply that all characters in the AS-path will match, so Router B will forward those updates to Router A.  Note Two examples are shown here because the task example requires both these statements to be configured.
Step 11	Repeat Step 10 for all entries required in the AS-path access list.	_
Step 12	end	Exits access list configuration mode and returns to privileged EXEC mode.
	<pre>Example: Router(config-access-list)# end</pre>	
Step 13	show ip bgp regexp as-regular-expression	Displays routes that match the regular expression.
	Example:	To verify the regular expression, you can use this command.
	Router# show ip bgp regexp ^65550\$	• In this example, all paths that match the expression "starts and ends with 65550" will be displayed.

The following output from the **show ip bgp regexp** command shows the autonomous system paths that match the regular expression—start and end with AS-path 65550:

```
BGP table version is 4, local router ID is 172.17.1.99

Status codes: s suppressed, d damped, h history, * valid, > best, i - internal, r RIB-failure, S Stale

Origin codes: i - IGP, e - EGP, ? - incomplete

Network Next Hop Metric LocPrf Weight Path

*> 10.2.2.0/24 192.168.3.2 0 0 65550 i
```

Router# show ip bgp regexp ^65550\$

# Filtering Traffic Using Extended Community Lists

Perform this task to filter traffic by creating an extended BGP community list to control outbound routes. BGP communities provide a method of filtering inbound or outbound routes for large, complex networks. Instead of compiling long access or prefix lists of individual peers, BGP allows grouping of peers with identical routing policies even though they reside in different autonomous systems or networks.

In this task, Router B in Figure 7 is configured with an extended named community list to specify that the BGP peer at 192.1681.2 is not sent advertisements about any path through or from autonomous system 50000. The IP extended community-list configuration mode is used and the ability to resequence entries is shown.

## **Extended Community Lists**

Extended community attributes are used to configure, filter, and identify routes for VRF instances and MPLS VPNs. The **ip extcommunity-list** command is used to configure named or numbered extended community lists. All of the standard rules of access lists apply to the configuration of extended community lists. Regular expressions are supported by the expanded range of extended community list numbers.

#### Restrictions

A sequence number is applied to all extended community list entries by default regardless of the configuration mode. Explicit sequencing and resequencing of extended community list entries can be configured only in IP extended community-list configuration mode and not in global configuration mode.

- 1. enable
- 2. configure terminal
- 3. **ip extcommunity-list** {expanded-list-number | **expanded** list-name | standard-list-number | **standard** list-name}
- **4.** [sequence-number] {deny [regular-expression] | exit | permit [regular-expression]}
- 5. Repeat Step 4 for all the required permit or deny entries in the extended community list.
- **6. resequence** [starting-sequence] [sequence-increment]
- 7. exit
- **8. router bgp** *autonomous-system-number*
- **9. network** *network-number* [**mask** *network-mask*]
- **10**. **neighbor** {ip-address | peer-group-name} **remote-as** autonomous-system-number
- 11. Repeat Step 10 for all the required BGP peers.
- 12. end
- **13**. **show ip extcommunity-list** [list-number | list-name]

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		Enter your password if prompted.
	Example:	
	Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	<pre>ip extcommunity-list {expanded-list-number   expanded list-name   standard-list-number   standard list-name}</pre>	Enters IP extended community-list configuration mode to create or configure an extended community list.
	**************************************	<ul> <li>In this example, the expanded community list DENY50000 is created.</li> </ul>
	<pre>Example: Router(config)# ip extcommunity-list expanded DENY50000</pre>	
Step 4	[sequence-number] {deny [regular-expression]	Configures an expanded community list entry.
	<pre>exit   permit [regular-expression]} Example:</pre>	• In the first example, an expanded community list entry with the sequence number 10 is configured to deny advertisements about paths from autonomous system
	Router(config-extcomm-list)# 10 deny _50000_	50000.
	and  Example:	• In the second example, an expanded community list entry with the sequence number 20 is configured to deny advertisements about paths through autonomous system 50000.
	Router(config-extcomm-list)# 20 deny ^50000 .*	Note Two examples are shown here because the task example requires both these statements to be configured.
		Note Only the syntax applicable to this task is used in this example. For more details, see the <i>Cisco IOS IP Routing: BGP Command Reference</i> .
Step 5	Repeat Step 4 for all the required permit or deny entries in the extended community list.	
Step 6	resequence [starting-sequence]	Resequences expanded community list entries.
	<pre>[sequence-increment]  Example: Router(config-extcomm-list)# resequence 50 100</pre>	• In this example, the sequence number of the first expanded community list entry is set to 50 and subsequent entries are set to increment by 100. The second expanded community list entry is therefore set to 150.
		Note Only the syntax applicable to this task is used in this example. For more details, see the <i>Cisco IOS IP Routing: BGP Command Reference</i> .

	Command or Action	Purpose
Step 7	exit	Exits expanded community-list configuration mode and enters global configuration mode.
	Example:	
	Router(config-extcomm-list)# exit	
Step 8	router bgp autonomous-system-number	Enters router configuration mode for the specified routing process.
	<pre>Example: Router(config)# router bgp 45000</pre>	
Step 9	network network-number [mask network-mask]	(Optional) Specifies a network as local to this autonomous system and adds it to the BGP routing table.
	<pre>Example: Router(config-router)# network 172.17.1.0 mask 255.255.255.0</pre>	<ul> <li>For exterior protocols the <b>network</b> command controls which networks are advertised. Interior protocols use the <b>network</b> command to determine where to send updates.</li> </ul>
		Note Only the syntax applicable to this task is used in this example. For more details, see the <i>Cisco IOS IP Routing: BGP Command Reference</i> .
Step 10	neighbor {ip-address   peer-group-name} remote-as autonomous-system-number	Adds the IP address or peer group name of the neighbor in the specified autonomous system BGP neighbor table of the local router.
	<pre>Example: Router(config-router)# neighbor 192.168.3.2 remote-as 50000</pre>	
Step 11	Repeat Step 10 for all the required BGP peers.	_
Step 12	end	Exits router configuration mode and enters privileged EXEC mode.
	<pre>Example: Router(config-router)# end</pre>	
Step 13	<pre>show ip extcommunity-list [list-number   list-name]</pre>	Displays configured BGP expanded community list entries.
	Example: Router# show ip extcommunity-list DENY50000	

The following sample output verifies that the BGP expanded community list DENY50000 has been created, with the output showing that the entries to deny advertisements about autonomous system 50000 have been resequenced from 10 and 20 to 50 and 150:

```
Router# show ip extcommunity-list 1
```

```
Expanded extended community-list DENY50000 50 deny _50000_ 150 deny ^50000 .*
```

# Filtering Traffic Using a BGP Route Map Policy List

Perform this task to create a BGP policy list and then reference it within a route map.

A policy list is like a route map that contains only match clauses. With policy lists there are no changes to match clause semantics and route map functions. The match clauses are configured in policy lists with permit and deny statements and the route map evaluates and processes each match clause to permit or deny routes based on the configuration. AND and OR semantics in the route map function the same way for policy lists as they do for match clauses.

Policy lists simplify the configuration of BGP routing policy in medium-size and large networks. The network operator can reference preconfigured policy lists with groups of match clauses in route maps and easily apply general changes to BGP routing policy. The network operator no longer needs to manually reconfigure each recurring group of match clauses that occur in multiple route map entries.

Perform this task to create a BGP policy list to filter traffic that matches the autonomous system path and MED of a router and then create a route map to reference the policy list.

### **Prerequisites**

BGP routing must be configured in your network and BGP neighbors must be established.

#### Restrictions

- BGP route map policy lists do not support the configuration of IP version 6 (IPv6) match clauses in policy lists.
- Policy lists support only match clauses and do not support set clauses. However, policy lists can
  coexist, within the same route map entry, with match and set clauses that are configured separately
  from the policy lists.
- Policy lists are supported only by BGP. They are not supported by other IP routing protocols. This limitation does not interfere with normal operations of a route map, including redistribution, because policy list functions operate transparently within BGP and are not visible to other IP routing protocols.
- Policy lists support only match clauses and do not support set clauses. However, policy lists can
  coexist, within the same route map entry, with match and set clauses that are configured separately
  from the policy lists. The first route map example configures AND semantics, and the second route
  map configuration example configures semantics. Both examples in this section show sample route
  map configurations that reference policy lists and separate match and set clauses in the same
  configuration.

- 1. enable
- 2. configure terminal
- 3. ip policy-list policy-list-name {permit | deny}
- 4. match as-path as-number
- 5. match metric metric
- 6. exit
- 7. **route-map** map-name [**permit** | **deny**] [sequence-number]
- **8. match ip-address** {access-list-number | access-list-name} [... access-list-number | ... access-list-name]

- **9. match policy-list** *policy-list-name*
- $\textbf{10. set community} \ \{\textit{community-number} \ [\textbf{additive}] \ [\textit{well-known-community}] \ | \ \textbf{none} \}$
- 11. set local-preference preference-value
- **12**. end
- **13**. **show ip policy-list** [policy-list-name]
- **14. show route-map** [route-map-name]

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		• Enter your password if prompted.
	Example:	
	Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	<pre>ip policy-list policy-list-name {permit   deny}</pre>	Enters policy list configuration mode and creates a BGP policy list that will permit routes that are allowed by the match clauses that follow.
	<pre>Example: Router(config)# ip policy-list POLICY_LIST_NAME-1 permit</pre>	match clauses that follow.
Step 4	match as-path as-number	Creates a match clause to permit routes from the specified autonomous system path.
	Example:	
	Router(config-policy-list)# match as-path 40000	
Step 5	match metric metric	Creates a match clause to permit routes with the specified metric.
	Example:	
	Router(config-policy-list)# match metric 10	
Step 6	exit	Exits policy list configuration mode and enters global configuration mode.
	<pre>Example: Router(config-policy-list)# exit</pre>	
Step 7	<pre>route-map map-name [permit   deny] [sequence-number]</pre>	Creates a route map and enters route map configuration mode.
	Example: Router(config)# route-map MAP-NAME-1 permit 10	

	Command or Action	Purpose
Step 8	<pre>match ip address {access-list-number   access-list-name} [ access-list-number   access-list-name]</pre>	Creates a match clause to permit routes that match the specified <i>access-list-number</i> or <i>access-list-name</i> argument.
	<pre>Example: Router(config-route-map)# match ip address 1</pre>	
Step 9	match policy-list policy-list-name	Creates a clause that will match the specified policy list.
	<pre>Example: Router(config-route-map)# match policy-list POLICY-LIST-NAME-1</pre>	<ul> <li>All match clauses within the policy list will be evaluated and processed. Multiple policy lists can referenced with this command.</li> <li>This command also supports AND or OR semantics</li> </ul>
		like a standard match clause.
Step 10	<pre>set community community-number [additive] [well-known-community]   none}</pre>	Creates a clause to set or remove the specified community.
	<pre>Example: Router(config-route-map)# set community 10:1</pre>	
Step 11	set local-preference preference-value	Creates a clause to set the specified local preference value.
	<pre>Example: Router(config-route-map)# set local-preference 140</pre>	
Step 12	end	Exits route map configuration mode and enters privileged EXEC mode.
	Example:	
	Router(config-route-map)# end	
Step 13	show ip policy-list [policy-list-name]	Display information about configured policy lists and policy list entries.
	Example: Router# show ip policy-list POLICY-LIST-NAME-1	
Step 14	<pre>show route-map [route-map-name]</pre>	Displays locally configured route maps and route map entries.
	Example: Router# show route-map	

The following sample output verifies that a policy list has been created, with the output displaying the policy list name and configured match clauses:

```
{\tt Router\#\ \textbf{show\ ip\ policy-list\ POLICY-LIST-NAME-1}}
```

```
policy-list POLICY-LIST-NAME-1 permit
  Match clauses:
    metric 20
    as-path (as-path filter): 1
```



A policy list name can be specified when the **show ip policy-list** command is entered. This option can be useful for filtering the output of this command and verifying a single policy list.

The following sample output from the **show route-map** command verifies that a route map has been created and a policy list is referenced. The output of this command displays the route map name and policy lists that are referenced by the configured route maps.

```
Router# show route-map

route-map ROUTE-MAP-NAME-1, deny, sequence 10
Match clauses:
Set clauses:
Policy routing matches: 0 packets, 0 bytes
route-map ROUTE-MAP-NAME-1, permit, sequence 10
Match clauses:
IP Policy lists:
POLICY-LIST-NAME-1
Set clauses:
Policy routing matches: 0 packets, 0 bytes
```

# Filtering Traffic Using Continue Clauses in a BGP Route Map

Perform this task to filter traffic using continue clauses in a BGP route map. In Cisco IOS XE Release 2.1 and later releases, the continue clause was introduced into BGP route map configuration. The continue clause allows for more programmable policy configuration and route filtering and introduced the capability to execute additional entries in a route map after an entry is executed with successful match and set clauses. Continue clauses allow the network operator to configure and organize more modular policy definitions so that specific policy configurations need not be repeated within the same route map. Before the continue clause was introduced, route map configuration was linear and did not allow any control over the flow of a route map.

In Cisco IOS XE Release 2.1 and later releases, support for continue clauses for outbound route maps was introduced.

#### **Route Map Operation Without Continue Clauses**

A route map evaluates match clauses until a successful match occurs. After the match occurs, the route map stops evaluating match clauses and starts executing set clauses, in the order in which they were configured. If a successful match does not occur, the route map "falls through" and evaluates the next sequence number of the route map until all configured route map entries have been evaluated or a successful match occurs. Each route map sequence is tagged with a sequence number to identify the entry. Route map entries are evaluated in order starting with the lowest sequence number and ending with the highest sequence number. If the route map contains only set clauses, the set clauses will be executed automatically, and the route map will not evaluate any other route map entries.

### **Route Map Operation with Continue Clauses**

When a continue clause is configured, the route map will continue to evaluate and execute match clauses in the specified route map entry after a successful match occurs. The continue clause can be configured to go to (or jump to) a specific route map entry by specifying the sequence number, or if a sequence number is not specified, the continue clause will go to the next sequence number. This behavior is called an "implied continue." If a match clause exists, the continue clause is executed only if a match occurs. If no successful matches occur, the continue clause is ignored.

#### **Match Operations with Continue Clauses**

If a match clause does not exist in the route map entry but a continue clause does, the continue clause will be automatically executed and go to the specified route map entry. If a match clause exists in a route map entry, the continue clause is executed only when a successful match occurs. When a successful match occurs and a continue clause exists, the route map executes the set clauses and then goes to the specified route map entry. If the next route map entry contains a continue clause, the route map will execute the continue clause if a successful match occurs. If a continue clause does not exist in the next route map entry, the route map will be evaluated normally. If a continue clause exists in the next route map entry but a match does not occur, the route map will not continue and will "fall through" to the next sequence number if one exists.

# **Set Operations with Continue Clauses**

Set clauses are saved during the match clause evaluation process and executed after the route-map evaluation is completed. The set clauses are evaluated and executed in the order in which they were configured. Set clauses are executed only after a successful match occurs, unless the route map does not contain a match clause. The continue statement proceeds to the specified route map entry only after configured set actions are performed. If a set action occurs in the first route map and then the same set action occurs again, with a different value, in a subsequent route map entry, the last set action may override any previous set actions that were configured with the same **set** command unless the **set** command permits more than one value. For example, the **set as-path prepend** command permits more than one autonomous system number to be configured.



A continue clause can be executed, without a successful match, if a route map entry does not contain a match clause.



Route maps have a linear behavior and not a nested behavior. Once a route is matched in a route map permit entry with a continue command clause, it will not be processed by the implicit deny at the end of the route-map. For an example, see "Filtering Traffic Using Continue Clauses in a BGP Route Map: Example" section on page 72.

#### Restrictions

Continue clauses can go only to a higher route map entry (a route map entry with a higher sequence number) and cannot go to a lower route map entry.

- 1. enable
- 2. configure terminal
- 3. router bgp autonomous-system-number
- **4. neighbor** {ip-address | peer-group-name} **remote-as** autonomous-system-number
- **5. neighbor** {*ip-address* | *peer-group-name*} **route-map** *map-name* {**in** | **out**}
- 6. exit
- 7. **route-map** *map-name* [**permit** | **deny**] [*sequence-number*]

- **8. match ip-address** {access-list-number | access-list-name} [... access-list-number | ... access-list-name]
- $\textbf{9.} \quad \textbf{set community} \ \{\textit{community-number} \ [\textbf{additive}] \ [\textit{well-known-community}] \ | \ \textbf{none} \}$
- **10**. **continue** [sequence-number]
- 11. end
- **12. show route-map** [map-name]

	Command or Action	Purpose
Step 1	enable	Enables higher privilege levels, such as privileged EXEC mode.
	Example: Router> enable	Enter your password if prompted.
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	router bgp autonomous-system-number	Enters router configuration mode, and creates a BGP routing process.
	<pre>Example: Router(config)# router bgp 50000</pre>	
Step 4	<pre>neighbor {ip-address   peer-group-name} remote-as autonomous-system-number</pre>	Adds the IP address or peer group name of the neighbor in the specified autonomous system to the IPv4 multiprotocol BGP neighbor table of the local router.
	<pre>Example: Router(config-router)# neighbor 10.0.0.1 remote-as 50000</pre>	
Step 5	<pre>neighbor {ip-address   peer-group-name} route-map map-name {in   out}</pre>	Applies the inbound route map to routes received from the specified neighbor, or applies an outbound route map to routes advertised to the specified neighbor.
	<pre>Example: Router(config-router)# neighbor 10.0.0.1 route-map ROUTE-MAP-NAME in</pre>	
Step 6	exit	Exits router configuration mode and enters global configuration mode.
	<pre>Example: Router(config-router)# exit</pre>	
Step 7	<pre>route-map map-name {permit   deny} [sequence-number]</pre>	Enters route-map configuration mode to create or configure a route map.
	Example: Router(config)# route-map ROUTE-MAP-NAME permit 10	

	Command or Action	Purpose
Step 8	<pre>match ip address {access-list-number   access-list-name} [ access-list-number   access-list-name]</pre>	Configures a <b>match</b> command that specifies the conditions under which policy routing and route filtering occur.
	Example: Router(config-route-map)# match ip address 1	<ul> <li>Multiple match commands can be configured. If a match command is configured, a match must occur in order for the continue statement to be executed. If a match command is not configured, set and continue clauses will be executed.</li> </ul>
		Note The match and set commands used in this task are examples that are used to help describe the operation of the continue command. For a list of specific match and set commands, see the continue command in the Cisco IOS IP Routing: BGP Command Reference.
Step 9	<pre>set community community-number [additive] [well-known-community]   none}</pre>	Configures a <b>set</b> command that specifies the routing action to perform if the criteria enforced by the <b>match</b> commands are met.
	Example:	• Multiple set commands can be configured.
	Router(config-route-map)# set community 10:1	• In this example, a clause is created to set the specified community.
Step 10	continue [sequence-number]	Configures a route map to continue to evaluate and execute match statements after a successful match occurs.
	<pre>Example: Router(config-route-map)# continue</pre>	<ul> <li>If a sequence number is configured, the continue clause will go to the route map with the specified sequence number.</li> </ul>
		• If no sequence number is specified, the continue clause will go to the route map with the next sequence number. This behavior is called an "implied continue."
		Note Continue clauses in outbound route maps are supported in Cisco IOS XE Release 2.1 and later releases.
Step 11	end	Exits route-map configuration mode and enters privileged EXEC mode.
	<pre>Example: Router(config-route-map)# end</pre>	
Step 12	<pre>show route-map [map-name]</pre>	(Optional) Displays locally configured route maps. The name of the route map can be specified in the syntax of this
	Example:	command to filter the output.
	Router# show route-map	

The following sample output shows how to verify the configuration of continue clauses using the **show route-map** command. The output displays configured route maps including the match, set, and continue clauses.

Router# show route-map

```
route-map MARKETING, permit, sequence 10
 Match clauses:
   ip address (access-lists): 1
   metric 10
  Continue: sequence 40
  Set clauses:
   as-path prepend 10
  Policy routing matches: 0 packets, 0 bytes
route-map MARKETING, permit, sequence 20
  Match clauses:
   ip address (access-lists): 2
   metric 20
  Set clauses:
   as-path prepend 10 10
  Policy routing matches: 0 packets, 0 bytes
route-map MARKETING, permit, sequence 30
 Match clauses:
  Continue: to next entry 40
  Set clauses:
   as-path prepend 10 10 10
 Policy routing matches: 0 packets, 0 bytes
route-map MARKETING, permit, sequence 40
  Match clauses:
   community (community-list filter): 10:1
  Set clauses:
   local-preference 104
  Policy routing matches: 0 packets, 0 bytes
route-map MKTG-POLICY-MAP, permit, sequence 10
  Match clauses:
  Set clauses:
   community 655370
  Policy routing matches: 0 packets, 0 bytes
```

# Configuration Examples for Connecting to a Service Provider Using External BGP

This section contains the following examples:

- Influencing Inbound Path Selection: Examples, page 62
- Influencing Inbound Path Selection by Modifying the AS-path Attribute Using 4-Byte Autonomous System Numbers: Example, page 63
- Influencing Outbound Path Selection: Examples, page 64
- Filtering BGP Prefixes with Prefix Lists: Examples, page 65
- Filtering Traffic Using Community Lists: Examples, page 67
- Filtering Traffic Using AS-path Filters: Example, page 68
- Filtering Traffic with AS-path Filters Using 4-Byte Autonomous System Numbers: Examples, page 68
- Filtering Traffic Using Extended Community Lists with 4-Byte Autonomous System Numbers: Example, page 69
- Filtering Traffic Using a BGP Route Map: Example, page 72
- Filtering Traffic Using Continue Clauses in a BGP Route Map: Example, page 72

## **Influencing Inbound Path Selection: Examples**

The following example shows how you can use route maps to modify incoming data from a neighbor. Any route received from 10.222.1.1 that matches the filter parameters set in autonomous system access list 200 will have its weight set to 200 and its local preference set to 250, and it will be accepted.

```
router bgp 100 !
neighbor 10.222.1.1 route-map FIX-WEIGHT in neighbor 10.222.1.1 remote-as 1 !
ip as-path access-list 200 permit ^690$
ip as-path access-list 200 permit ^1800 !
route-map FIX-WEIGHT permit 10
match as-path 200
set local-preference 250
set weight 200
```

In the following example, the route map named finance marks all paths originating from autonomous system 690 with an MED metric attribute of 127. The second permit clause is required so that routes not matching autonomous system path list 1 will still be sent to neighbor 10.1.1.1.

```
router bgp 65000
neighbor 10.1.1.1 route-map finance out!
ip as-path access-list 1 permit ^690_
ip as-path access-list 2 permit .*
!
route-map finance permit 10
match as-path 1
set metric 127
!
route-map finance permit 20
match as-path 2
```

Inbound route maps could perform prefix-based matching and set various parameters of the update. Inbound prefix matching is available in addition to autonomous system path and community list matching. The following example shows how the **set local-preference** route map configuration command sets the local preference of the inbound prefix 172.20.0.0/16 to 120:

```
!
router bgp 65100
network 10.108.0.0
neighbor 10.108.1.1 remote-as 65200
neighbor 10.108.1.1 route-map set-local-pref in !
route-map set-local-pref permit 10
match ip address 2
set local preference 120
!
route-map set-local-pref permit 20
!
access-list 2 permit 172.20.0.0 0.0.255.255
access-list 2 deny any
```

# Influencing Inbound Path Selection by Modifying the AS-path Attribute Using 4-Byte Autonomous System Numbers: Example

This example shows how to configure BGP to influence the inbound path selection for traffic destined for the 172.17.1.0 network by modifying the AS-path attribute. In Cisco IOS XE Release 2.4 and later releases, BGP support for 4-octet (4-byte) autonomous system numbers was introduced. The 4-byte autonomous system numbers in this example are formatted in the default asplain (decimal value) format; for example, Router B is in autonomous system number 65538 in Figure 8 on page 48. For more details about the introduction of 4-byte autonomous system numbers, see "BGP Autonomous System Number Formats" section on page 4.

One of the methods that BGP can use to influence the choice of paths in another autonomous system is to modify the AS-path attribute. For example, in Figure 9, Router A advertises its own network, 172.17.1.0, to its BGP peers in autonomous system 65538 and autonomous system 65550. When the routing information is propagated to autonomous system 65545, the routers in autonomous system 65545 have network reachability information about network 172.17.1.0 from two different routes. The first route is from autonomous system 65538 with an AS-path consisting of 65538, 65536. The second route is through autonomous system 65547 with an AS-path of 65547, 65550, 65536. If all other BGP attribute values are the same, Router C in autonomous system 65545 would choose the route through autonomous system 65538 for traffic destined for network 172.17.1.0 because it is the shortest route in terms of autonomous systems traversed.

Autonomous system 65536 now receives all traffic from autonomous system 65545 for the 172.17.1.0 network through Router B in autonomous system 65538. If, however, the link between autonomous system 65538 and autonomous system 65536 is a really slow and congested link, the **set as-path prepend** command can be used at Router A to influence inbound path selection for the 172.17.1.0 network by making the route through autonomous system 65538 appear to be longer than the path through autonomous system 65550. The configuration is done at Router A in Figure 9 by applying a route map to the outbound BGP updates to Router B. Using the **set as-path prepend** command, all the outbound BGP updates from Router A to Router B will have their AS-path attribute modified to add the local autonomous system number 65536 twice. After the configuration, autonomous system 65545 receives updates about the 172.17.1.0 network through autonomous system 65538. The new AS-path is 65538, 65536, 65536, 65536, which is now longer than the AS-path from autonomous system 65547 (unchanged at a value of 65547, 65550, 65536). Networking devices in autonomous system 65545 will now prefer the route through autonomous system 65547 to forward packets with a destination address in the 172.17.1.0 network.

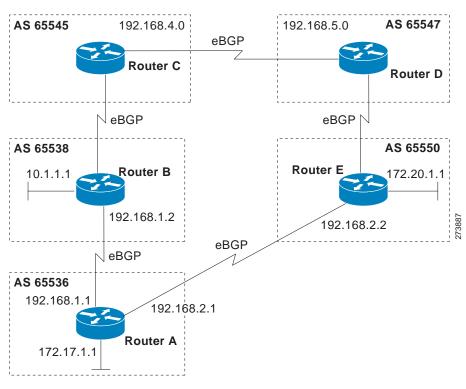


Figure 9 Network Topology for Modifying the AS-path Attribute

The configuration for this example is performed at Router A in Figure 9.

```
router bgp 65536
address-family ipv4 unicast
network 172.17.1.0 mask 255.255.255.0
neighbor 192.168.1.2 remote-as 65538
neighbor 192.168.1.2 activate
neighbor 192.168.1.2 route-map PREPEND out
exit-address-family
exit
route-map PREPEND permit 10
set as-path prepend 65536 65536
```

## **Influencing Outbound Path Selection: Examples**

The following example creates an outbound route filter and configures Router-A (10.1.1.1) to advertise the filter to Router-B (172.16.1.2). An IP prefix list named FILTER is created to specify the 192.168.1.0/24 subnet for outbound route filtering. The ORF send capability is configured on Router-A so that Router-A can advertise the outbound route filter to Router-B.

#### **Router-A Configuration (Sender)**

```
ip prefix-list FILTER seq 10 permit 192.168.1.0/24
!
router bgp 65100
address-family ipv4 unicast
neighbor 172.16.1.2 remote-as 65200
neighbor 172.16.1.2 ebgp-multihop
neighbor 172.16.1.2 capability orf prefix-list send
neighbor 172.16.1.2 prefix-list FILTER in
end
```

#### **Router-B Configuration (Receiver)**

The following example configures Router-B to advertise the ORF receive capability to Router-A. Router-B will install the outbound route filter, defined in the FILTER prefix list, after ORF capabilities have been exchanged. An inbound soft reset is initiated on Router-B at the end of this configuration to activate the outbound route filter.

```
router bgp 65200
address-family ipv4 unicast
neighbor 10.1.1.1 remote-as 65100
neighbor 10.1.1.1 ebgp-multihop 255
neighbor 10.1.1.1 capability orf prefix-list receive
end
clear ip bgp 10.1.1.1 in prefix-filter
```

The following example shows how the route map named set-as-path is applied to outbound updates to the neighbor 10.69.232.70. The route map will prepend the autonomous system path "65100 65100" to routes that pass access list 1. The second part of the route map is to permit the advertisement of other routes.

```
router bgp 65100
network 172.16.0.0
network 172.17.0.0
neighbor 10.69.232.70 remote-as 65200
neighbor 10.69.232.70 route-map set-as-path out!
route-map set-as-path 10 permit
match address 1
set as-path prepend 65100 65100
!
route-map set-as-path 20 permit
match address 2
!
access-list 1 permit 172.16.0.0 0.0.255.255
access-list 1 permit 172.17.0.0 0.0.255.255
!
access-list 2 permit 0.0.0.0 255.255.255.255
```

## Filtering BGP Prefixes with Prefix Lists: Examples

This section contains the following examples:

- Filtering BGP Prefixes Using a Single Prefix List, page 66
- Filtering BGP Prefixes Using a Group of Prefixes, page 66
- Adding or Deleting Prefix List Entries, page 67

#### Filtering BGP Prefixes Using a Single Prefix List

The following example shows how a prefix list denies the default route 0.0.0.0/0:

```
ip prefix-list abc deny 0.0.0.0/0
```

The following example shows how a prefix list permits a route that matches the prefix 10.0.0.0/8:

```
ip prefix-list abc permit 10.0.0.0/8
```

The following example shows how to configure the BGP process so that it accepts only prefixes with a prefix length of /8 to /24:

```
router bgp 40000
network 10.20.20.0
distribute-list prefix max24 in
!
ip prefix-list max24 seq 5 permit 0.0.0.0/0 ge 8 le 24
```

The following example configuration shows how to conditionally originate a default route (0.0.0.0/0) in RIP when a prefix 10.1.1.0/24 exists in the routing table:

```
ip prefix-list cond permit 10.1.1.0/24
!
route-map default-condition permit 10
  match ip address prefix-list cond
!
router rip
  default-information originate route-map default-condition
```

The following example shows how to configure BGP to accept routing updates from 192.168.1.1 only, besides filtering on the prefix length:

```
router bgp 40000
  distribute-list prefix max24 gateway allowlist in
!
ip prefix-list allowlist seq 5 permit 192.168.1.1/32
```

The following example shows how to direct the BGP process to filter incoming updates to the prefix using name1, and match the gateway (next hop) of the prefix being updated to the prefix list name2, on GigabitEthernet interface 0/0/0:

```
router bgp 103 distribute-list prefix name1 gateway name2 in gigabitethernet 0/0/0
```

### Filtering BGP Prefixes Using a Group of Prefixes

The following example shows how to configure BGP to permit routes with a prefix length up to 24 in network 192/8:

```
ip prefix-list abc permit 192.0.0.0/8 le 24
```

The following example shows how to configure BGP to deny routes with a prefix length greater than 25 in 192/8:

```
ip prefix-list abc deny 192.0.0.0/8 ge 25
```

The following example shows how to configure BGP to permit routes with a prefix length greater than 8 and less than 24 in all address space:

```
ip prefix-list abc permit 0.0.0.0/0 ge 8 le 24
```

The following example shows how to configure BGP to deny routes with a prefix length greater than 25 in all address space:

```
ip prefix-list abc deny 0.0.0.0/0 ge 25
```

The following example shows how to configure BGP to deny all routes in network 10/8, because any route in the Class A network 10.0.0.0/8 is denied if its mask is less than or equal to 32 bits:

```
ip prefix-list abc deny 10.0.0.0/8 le 32
```

The following example shows how to configure BGP to deny routes with a mask greater than 25 in 192.168.1.0/24:

```
ip prefix-list abc deny 192.168.1.0/24 ge 25
```

The following example shows how to configure BGP to permit all routes:

```
ip prefix-list abc permit 0.0.0.0/0 le 32
```

#### **Adding or Deleting Prefix List Entries**

You can add or delete individual entries in a prefix list if a prefix list has the following initial configuration:

```
ip prefix-list abc deny 0.0.0.0/0 le 7
ip prefix-list abc deny 0.0.0.0/0 ge 25
ip prefix-list abc permit 192.168.0.0/15
```

The following example shows how to delete an entry from the prefix list so that 192.168.0.0 is not permitted and how to add a new entry that permits 10.0.0.0/8:

```
no ip prefix-list abc permit 192.168.0.0/15 ip prefix-list abc permit 10.0.0.0/8
```

The new configuration is as follows:

```
ip prefix-list abc deny 0.0.0.0/0 le 7 ip prefix-list abc deny 0.0.0.0/0 ge 25 ip prefix-list abc permit 10.0.0.0/8
```

## **Filtering Traffic Using Community Lists: Examples**

This section contains two examples of the use of BGP communities with route maps.

The first example shows how the route map named set-community is applied to the outbound updates to the neighbor 172.16.232.50. The routes that pass access list 1 have the special community attribute value no-export. The remaining routes are advertised normally. This special community value automatically prevents the advertisement of those routes by the BGP speakers in autonomous system 200.

```
router bgp 100
neighbor 172.16.232.50 remote-as 200
neighbor 172.16.232.50 send-community
neighbor 172.16.232.50 route-map set-community out!
route-map set-community permit 10
match address 1
set community no-export!
route-map set-community permit 20
match address 2
```

The second example shows how the route map named *set-community* is applied to the outbound updates to neighbor 172.16.232.90. All the routes that originate from autonomous system 70 have the community values 200 200 added to their already existing values. All other routes are advertised as normal.

```
route-map bgp 200
neighbor 172.16.232.90 remote-as 100
neighbor 172.16.232.90 send-community
neighbor 172.16.232.90 route-map set-community out!
route-map set-community permit 10
match as-path 1
set community 200 200 additive!
route-map set-community permit 20
!
ip as-path access-list 1 permit 70$
ip as-path access-list 2 permit .*
```

## Filtering Traffic Using AS-path Filters: Example

The following example shows BGP path filtering by neighbor. Only the routes that pass autonomous system path access list 2 will be sent to 192.168.12.10. Similarly, only routes passing access list 3 will be accepted from 192.168.12.10.

```
router bgp 200
neighbor 192.168.12.10 remote-as 100
neighbor 192.168.12.10 filter-list 1 out
neighbor 192.168.12.10 filter-list 2 in
exit
ip as-path access-list 1 permit _109_
ip as-path access-list 2 permit _200$
ip as-path access-list 2 permit ^100$
ip as-path access-list 3 deny _690$
ip as-path access-list 3 permit .*
```

# Filtering Traffic with AS-path Filters Using 4-Byte Autonomous System Numbers: Examples

- Asplain Default Format in Cisco IOS XE Release 2.4 and Later Releases, page 68
- Asdot Default Format in Cisco IOS XE Release 2.3, page 69

#### Asplain Default Format in Cisco IOS XE Release 2.4 and Later Releases

The following example is available in Cisco IOS XE Release 2.4 and later releases, and shows BGP path filtering by neighbor using 4-byte autonomous system numbers in asplain format. Only the routes that pass autonomous system path access list 2 will be sent to 192.168.3.2.

```
ip as-path access-list 2 permit ^65536$
router bgp 65538
address-family ipv4 unicast
  neighbor 192.168.3.2 remote-as 65550
  neighbor 192.168.3.2 activate
  neighbor 192.168.3.2 filter-list 2 in
  end
```

#### Asdot Default Format in Cisco IOS XE Release 2.3

The following example available in Cisco IOS XE Release 2.3 shows BGP path filtering by neighbor using 4-byte autonomous system numbers in asdot format. Only the routes that pass autonomous system path access list 2 will be sent to 192.168.3.2.



In Cisco IOS XE Release 2.4 and later releases, this example works if you have configured asdot as the default display format using the **bgp asnotation dot** command.

```
ip as-path access-list 2 permit ^1\.0$
router bgp 1.2
address-family ipv4 unicast
neighbor 192.168.3.2 remote-as 1.14
neighbor 192.168.3.2 filter-list 2 in
end
```

# Filtering Traffic Using Extended Community Lists with 4-Byte Autonomous System Numbers: Example

- Asplain Default Format in Cisco IOS XE Release 2.4 and Later Releases, page 69
- Asdot Default Format in Cisco IOS XE Release 2.3, page 70

#### Asplain Default Format in Cisco IOS XE Release 2.4 and Later Releases

The following example shows how to filter traffic by creating an extended BGP community list to control outbound routes. In Cisco IOS XE Release 2.4 and later releases, extended BGP communities support 4-byte autonomous system numbers in the regular expressions in asplain by default. Extended community attributes are used to configure, filter, and identify routes for VRF instances and MPLS VPNs. The **ip extcommunity-list** command is used to configure named or numbered extended community lists. All of the standard rules of access lists apply to the configuration of extended community lists. Regular expressions are supported by the expanded range of extended community list numbers.

Router A

192.168.1.2

AS 65536

PROUTE E

10.2.2.2

192.168.3.2

AS 65550

PROUTE E

192.168.3.1

172.17.1.1

Router B

AS 65538

Figure 10 BGP Topology for Filtering Traffic Using Extended Community Lists with 4-Byte Autonomous System Numbers in Asplain Format



A sequence number is applied to all extended community list entries by default regardless of the configuration mode. Explicit sequencing and resequencing of extended community list entries can be configured only in IP extended community-list configuration mode and not in global configuration mode.

In this example, Router B in Figure 10 is configured with an extended named community list to specify that the BGP peer at 192.1681.2 is not sent advertisements about any path through or from the 4-byte autonomous system 65550. The IP extended community-list configuration mode is used, and the ability to resequence entries is shown.

```
ip extcommunity-list expanded DENY65550
  10 deny _65550_
  20 deny ^65550 .*
  resequence 50 100
  exit
router bgp 65538
  network 172.17.1.0 mask 255.255.255.0
  address-family ipv4 unicast
  neighbor 192.168.3.2 remote-as 65550
  neighbor 192.168.1.2 remote-as 65536
  neighbor 192.168.1.2 activate
  neighbor 192.168.1.2 activate
  end
show ip extcommunity-list DENY65550
```


#### **Asdot Default Format in Cisco IOS XE Release 2.3**

The following example shows how to filter traffic by creating an extended BGP community list to control outbound routes. In Cisco IOS XE Release 2.3, extended BGP communities support 4-byte autonomous system numbers in the regular expressions in asdot format only. Extended community attributes are used to configure, filter, and identify routes for VRF instances and MPLS VPNs. The **ip extcommunity-list** command is used to configure named or numbered extended community lists. All of the standard rules of access lists apply to the configuration of extended community lists. Regular expressions are supported by the expanded range of extended community list numbers.



In Cisco IOS XE Release 2.4 and later releases, this example works if you have configured asdot as the default display format using the **bgp asnotation dot** command.

Figure 11 BGP Topology for Filtering Traffic Using Extended Community Lists with 4-Byte Autonomous System Numbers in Asdot Format

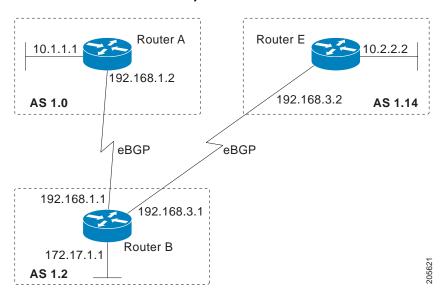



A sequence number is applied to all extended community list entries by default regardless of the configuration mode. Explicit sequencing and resequencing of extended community list entries can be configured only in IP extended community-list configuration mode and not in global configuration mode.

In this example, Router B in Figure 11 is configured with an extended named community list to specify that the BGP peer at 192.1681.2 is not sent advertisements about any path through or from the 4-byte autonomous system 65550. The IP extended community-list configuration mode is used, and the ability to resequence entries is shown.

```
ip extcommunity-list expanded DENY114
  10 deny _1\.14_
  20 deny ^1\.14 .*
  resequence 50 100
  exit
router bgp 1.2
  network 172.17.1.0 mask 255.255.255.0
  address-family ipv4 unicast
  neighbor 192.168.3.2 remote-as 1.14
  neighbor 192.168.1.2 remote-as 1.0
  neighbor 192.168.1.2 activate
  neighbor 192.168.1.2 activate
  end
show ip extcommunity-list DENY114
```

## Filtering Traffic Using a BGP Route Map: Example

The following example shows how to use an address family to configure BGP so that any unicast and multicast routes from neighbor 10.1.1.1 are accepted if they match access list 1:

```
router bgp 109
neighbor 10.1.1.1 remote-as 1
address-family ipv4 unicast
neighbor 10.1.1.1 route-map in filter-some-multicast
router bgp 109
neighbor 10.1.1.1 remote-as 1
address-family ipv4 multicast
neighbor 10.1.1.1 route-map in filter-some-multicast
neighbor 10.1.1.1 activate
route-map filter-some-multicast
match ip address 1
```

## Filtering Traffic Using Continue Clauses in a BGP Route Map: Example

The following example shows continue clause configuration in a route map sequence.

The first continue clause in route map entry 10 indicates that the route map will go to route map entry 30 if a successful matches occurs. If a match does not occur, the route map will "fall through" to route map entry 20. If a successful match occurs in route map entry 20, the set action will be executed and the route map will not evaluate any additional route map entries. Only the first successful match ip address clause is supported.

If a successful match does not occur in route map entry 20, the route map will "fall through" to route map entry 30. This sequence does not contain a match clause, so the set clause will be automatically executed and the continue clause will go to the next route map entry because a sequence number is not specified.

If there are no successful matches, the route map will "fall through" to route map entry 30 and execute the set clause. A sequence number is not specified for the continue clause so route map entry 40 will be evaluated.

There are two behaviors that can occur when the same **set** command is repeated in subsequent continue clause entries. For **set** commands that configure an additive or accumulative value (for example, **set community additive**, **set extended community additive**, and **set as-path prepend**), subsequent values are added by subsequent entries. The following example illustrates this behavior. After each set of match clauses, a **set as-path prepend** command is configured to add an autonomous system number to the as-path. After a match occurs, the route map stops evaluating match clauses and starts executing the set clauses, in the order in which they were configured. Depending on how many successful match clauses occur, the as-path is prepended by one, two, or three autonomous system numbers.

```
route-map ROUTE-MAP-NAME permit 10
match ip address 1
match metric 10
set as-path prepend 10
continue 30
!
route-map ROUTE-MAP-NAME permit 20
match ip address 2
match metric 20
set as-path prepend 10 10
!
route-map ROUTE-MAP-NAME permit 30
```

```
set as-path prepend 10 10 10 continue ! route-map ROUTE-MAP-NAME permit 40 match community 10:1 set local-preference 104
```

In this example, the same **set** command is repeated in subsequent continue clause entries but the behavior is different from the first example. For **set** commands that configure an absolute value, the value from the last instance will overwrite the previous value(s). The following example illustrates this behavior. The set clause value in sequence 20 overwrites the set clause value from sequence 10. The next hop for prefixes from the 172.16/16 network is set to 10.2.2.2 and not 10.1.1.1.

```
ip prefix-list 1 permit 172.16.0.0/16
ip prefix-list 2 permit 192.168.1.0/24
route-map RED permit 10
  match ip address prefix-list 1
  set ip next hop 10.1.1.1
  continue 20
  exit
route-map RED permit 20
  match ip address prefix-list 2
  set ip next hop 10.2.2.2
end
```



Route maps have a linear behavior and not a nested behavior. Once a route is matched in a route map permit entry with a continue command clause, it will not be processed by the implicit deny at the end of the route-map. The following example illustrates this case.

In the following example, when routes match an as-path of 10, 20, or 30, the routes are permitted and the continue clause jumps over the explicit deny clause to process the match ip address prefix list. If a match occurs here, the route metric is set to 100. Only routes that do not match an as-path of 10, 20, or 30 and do match a community number of 30 are denied. To deny other routes, you must configure an explicit deny statement.

```
route-map test permit 10
match as-path 10 20 30
continue 30
exit
route-map test deny 20
match community 30
exit
route-map test permit 30
match ip address prefix-list 1
set metric 100
exit
```

## Where to Go Next

- To configure advanced BGP feature tasks, proceed to the "Configuring Advanced BGP Features" chapter of the Cisco IOS XE BGP Configuration Guide.
- To configure BGP neighbor session options, proceed to the "Configuring BGP Neighbor Session Options" chapter of the Cisco IOS XE BGP Configuration Guide.
- To configure internal BGP tasks, proceed to the "Configuring Internal BGP Features" chapter of the Cisco IOS XE BGP Configuration Guide.

# **Additional References**

The following sections provide references related to connecting to a service provider using external BGP.

## **Related Documents**

Related Topic	Document Title
BGP commands: complete command syntax, command mode, defaults, command history, usage guidelines, and examples	Cisco IOS IP Routing: BGP Command Reference
BGP overview	"Cisco BGP Overview"
Basic BGP configuration tasks	"Configuring a Basic BGP Network"
Cisco IOS master command list, all releases	Cisco IOS Master Command List, All Releases

## **Standards**

Standard	Title	
MDT SAFI	MDT SAFI	

## **MIBs**

MIB	MIBs Link
CISCO-BGP4-MIB	To locate and download MIBs for selected platforms, Cisco IOS XE software releases, and feature sets, use Cisco MIB Locator found at the following URL:
	http://www.cisco.com/go/mibs

## **RFCs**

RFC	Title
RFC 1771	A Border Gateway Protocol 4 (BGP-4)
RFC 1772	Application of the Border Gateway Protocol in the Internet
RFC 1773	Experience with the BGP Protocol
RFC 1774	BGP-4 Protocol Analysis
RFC 1930	Guidelines for Creation, Selection, and Registration of an Autonomous System (AS)
RFC 2519	A Framework for Inter-Domain Route Aggregation
RFC 2858	Multiprotocol Extensions for BGP-4
RFC 2918	Route Refresh Capability for BGP-4
RFC 3392	Capabilities Advertisement with BGP-4

# **Technical Assistance**

Description	Link
The Cisco Support website provides extensive online resources, including documentation and tools for troubleshooting and resolving technical issues with Cisco products and technologies.	http://www.cisco.com/techsupport
To receive security and technical information about your products, you can subscribe to various services, such as the Product Alert Tool (accessed from Field Notices), the Cisco Technical Services Newsletter, and Really Simple Syndication (RSS) Feeds.	
Access to most tools on the Cisco Support website requires a Cisco.com user ID and password.	

# Feature Information for Connecting to a Service Provider Using External BGP

Table 5 lists the features in this module and provides links to specific configuration information

Use Cisco Feature Navigator to find information about platform support and software image support. Cisco Feature Navigator enables you to determine which Cisco IOS XE software images support a specific software release, feature set, or platform. To access Cisco Feature Navigator, go to <a href="http://www.cisco.com/go/cfn">http://www.cisco.com/go/cfn</a>. An account on Cisco.com is not required.



Table 5 lists only the Cisco IOS XE software release that introduced support for a given feature in a given Cisco IOS XE software release train. Unless noted otherwise, subsequent releases of that Cisco IOS XE software release train also support that feature.

Table 5 Feature Information for Connecting to a Service Provider Using External BGP

Feature Name	Releases	Feature Configuration Information
BGP Increased Support of Numbered AS-Path Access Lists to 500	Cisco IOS XE Release 2.1	The BGP Increased Support of Numbered AS-Path Access Lists to 500 feature increases the maximum number of autonomous systems access lists that can be configured using the <b>ip as-path access-list</b> command from 199 to 500.
		This feature was introduced on the Cisco ASR 1000 Series Aggregation Services Routers.
		The following sections provide information about this feature:
		BGP Policy Configuration, page 9
		• Filtering BGP Prefixes with AS-path Filters, page 41
BGP Named Community Lists	Cisco IOS XE Release 2.1	The BGP Named Community Lists feature introduces a new type of community list called the named community list. The BGP Named Community Lists feature allows the network operator to assign meaningful names to community lists and increases the number of community lists that can be configured. A named community list can be configured with regular expressions and with numbered community lists. All rules of numbered communities apply to named community lists except that there is no limitation on the number of community attributes that can be configured for a named community list.
		This feature was introduced on the Cisco ASR 1000 Series Routers.
		The following sections provide information about this feature:
		• BGP Communities, page 9
		• Filtering Traffic Using Community Lists, page 44

Table 5 Feature Information for Connecting to a Service Provider Using External BGP (continued)

Feature Name	Releases	Feature Configuration Information
BGP Prefix-Based Outbound Route Filtering	Cisco IOS XE Release 2.1	The BGP Prefix-Based Outbound Route Filtering feature uses BGP ORF send and receive capabilities to minimize the number of BGP updates that are sent between BGP peers. Configuring this feature can help reduce the amount of system resources required for generating and processing routing updates by filtering out unwanted routing updates at the source. For example, this feature can be used to reduce the amount of processing required on a router that is not accepting full routes from a service provider network.
		This feature was introduced on the Cisco ASR 1000 Series Routers.
		The following sections provide information about this feature:
		• Filtering Outbound BGP Route Prefixes, page 22
		• Influencing Outbound Path Selection: Examples, page 64
BGP 4 Prefix Filter and In-bound Route Maps	Cisco IOS XE Release 2.1	This feature was introduced on the Cisco ASR 1000 Series Routers.
BGP Route-Map Continue	Cisco IOS XE Release 2.1	The BGP Route-Map Continue feature introduces the continue clause to BGP route map configuration. The continue clause allows for more programmable policy configuration and route filtering and introduces the capability to execute additional entries in a route map after an entry is executed with successful match and set clauses. Continue clauses allow the network operator to configure and organize more modular policy definitions so that specific policy configurations need not be repeated within the same route map.
		This feature was introduced on the Cisco ASR 1000 Series Routers.
		The following sections provide information about this feature:
		• Filtering Traffic Using Continue Clauses in a BGP Route Map, page 57
		• Filtering Traffic Using Continue Clauses in a BGP Route Map: Example, page 72

Table 5 Feature Information for Connecting to a Service Provider Using External BGP (continued)

Feature Name	Releases	Feature Configuration Information
BGP Route-Map Continue Support for an Outbound Policy	Cisco IOS XE Release 2.1	The BGP Route-Map Continue Support for an Outbound Policy feature introduces support for continue clauses to be applied to outbound route maps.
		This feature was introduced on the Cisco ASR 1000 Series Routers.
		The following section provides information about this feature:
		• Filtering Traffic Using Continue Clauses in a BGP Route Map, page 57
		• Filtering Traffic Using Continue Clauses in a BGP Route Map: Example, page 72
BGP Route-Map Policy List Support	Cisco IOS XE Release 2.1	The BGP Route-Map Policy List Support feature introduces new functionality to BGP route maps. This feature adds the capability for a network operator to group route map match clauses into named lists called policy lists. A policy list functions like a macro. When a policy list is referenced in a route map, all of the match clauses are evaluated and processed as if they had been configured directly in the route map. This enhancement simplifies the configuration of BGP routing policy in medium-size and large networks because a network operator can preconfigure policy lists with groups of match clauses and then reference these policy lists within different route maps. The network operator no longer needs to manually reconfigure each recurring group of match clauses that occur in multiple route map entries.  This feature was introduced on the Cisco ASR 1000 Series Routers.
		The following sections provide information about this feature:
		BGP Route Map Policy Lists, page 11
		• Filtering Traffic Using a BGP Route Map Policy List, page 54

Table 5 Feature Information for Connecting to a Service Provider Using External BGP (continued)

Feature Name	Releases	Feature Configuration Information
BGP Support for 4-Byte ASN	Cisco IOS XE Release 2.3 Cisco IOS XE Release 2.4	The BGP Support for 4-Byte ASN feature introduced support for 4-byte autonomous system numbers. Because of increased demand for autonomous system numbers, in January 2009 the IANA will start to allocate 4-byte autonomous system numbers in the range from 65536 to 4294967295.
		In Cisco IOS XE Release 2.3, the Cisco implementation of 4-byte autonomous system numbers uses asdot as the only configuration format, regular expression match, and output display, with no asplain support.
		In Cisco IOS XE Release 2.4 and later releases, the Cisco implementation of 4-byte autonomous system numbers uses asplain as the default regular expression match and output display format for autonomous system numbers, but you can configure 4-byte autonomous system numbers in both the asplain format and the asdot format as described in RFC 5396. To change the default regular expression match and output display of 4-byte autonomous system numbers to asdot format, use the <b>bgp asnotation dot</b> command.
		The following sections provide information about this feature:
		BGP Autonomous System Number Formats, page 4
		<ul> <li>Filtering BGP Prefixes with AS-path Filters Using</li> <li>4-Byte Autonomous System Numbers, page 47</li> </ul>
		• Influencing Inbound Path Selection by Modifying the AS-path Attribute Using 4-Byte Autonomous System Numbers: Example, page 63
		• Filtering Traffic with AS-path Filters Using 4-Byte Autonomous System Numbers: Examples, page 68
		• Filtering Traffic Using Extended Community Lists with 4-Byte Autonomous System Numbers: Example, page 69
		The following commands were introduced or modified by this feature: bgp asnotation dot, bgp confederation identifier, bgp confederation peers, all clear ip bgp commands that configure an autonomous system number, ip as-path access-list, ip extcommunity-list, match source-protocol, neighbor local-as, neighbor remote-as, redistribute (IP), router bgp, route-target, set as-path, set extcommunity, set origin, all show ip bgp commands that display an autonomous system number, and show ip extcommunity-list.

Table 5 Feature Information for Connecting to a Service Provider Using External BGP (continued)

Feature Name	Releases	Feature Configuration Information
BGP Support for Named Extended Community Lists	Cisco IOS XE Release 2.1	The BGP Support for Named Extended Community Lists feature introduces the ability to configure extended community lists using names in addition to the existing numbered format.
		This feature was introduced on the Cisco ASR 1000 Series Routers.
		The following sections provide information about this feature:
		• BGP Communities, page 9
		• Filtering Traffic Using Extended Community Lists, page 51
BGP Support for Sequenced Entries in Extended Community Lists	Cisco IOS XE Release 2.1	The BGP Support for Sequenced Entries in Extended Community Lists feature introduces automatic sequencing of individual entries in BGP extended community lists. This feature also introduces the ability to remove or resequence extended community list entries without deleting the entire existing extended community list.
		This feature was introduced on the Cisco ASR 1000 Series Routers.
		The following sections provide information about this feature:
		• BGP Communities, page 9
		• Filtering Traffic Using Extended Community Lists, page 51

CCDE, CCENT, CCSI, Cisco Eos, Cisco Explorer, Cisco HealthPresence, Cisco IronPort, the Cisco logo, Cisco Nurse Connect, Cisco Pulse, Cisco SensorBase, Cisco StackPower, Cisco StadiumVision, Cisco TelePresence, Cisco TrustSec, Cisco Unified Computing System, Cisco WebEx, DCE, Flip Channels, Flip for Good, Flip Mino, Flipshare (Design), Flip Ultra, Flip Video, Flip Video (Design), Instant Broadband, and Welcome to the Human Network are trademarks; Changing the Way We Work, Live, Play, and Learn, Cisco Capital, Cisco Capital (Design), Cisco:Financed (Stylized), Cisco Store, Flip Gift Card, and One Million Acts of Green are service marks; and Access Registrar, Aironet, AllTouch, AsyncOS, Bringing the Meeting To You, Catalyst, CCDA, CCDP, CCIE, CCIP, CCNA, CCNP, CCSP, CCVP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IoS, Cisco Lumin, Cisco Nexus, Cisco Press, Cisco Systems, Capital, the Cisco Systems logo, Cisco Unity, Collaboration Without Limitation, Continuum, EtherFast, EtherSwitch, Event Center, Explorer, Follow Me Browsing, GainMaker, iLYNX, IOS, iPhone, IronPort, the IronPort logo, Laser Link, LightStream, Linksys, MeetingPlace, MeetingPlace Chime Sound, MGX, Networkers, Networking Academy, PCNow, PIX, PowerKEY, PowerPanels, PowerTV, PowerTV (Design), PowerVu, Prisma, ProConnect, ROSA, SenderBase, SMARTnet, Spectrum Expert, StackWise, WebEx, and the WebEx logo are registered trademarks of Cisco and/or its affiliates in the United States and certain other countries.

All other trademarks mentioned in this document or website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1002R)

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, and figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

© 2005-2009 Cisco Systems, Inc. All rights reserved.



# **Configuring BGP Neighbor Session Options**

First Published: October 31, 2005 Last Updated: May 4, 2009

This module describes configuration tasks to configure various options involving Border Gateway Protocol (BGP) neighbor peer sessions. BGP is an interdomain routing protocol that is designed to provide loop-free routing between organizations. This module contains tasks that use BGP neighbor session commands to configure fast session deactivation, to configure a router to automatically reestablish a BGP neighbor peering session when the peering session has been disabled or brought down, to configure options to help an autonomous system migration, and to configure a lightweight security mechanism to protect eBGP peering sessions from CPU-utilization-based attacks.

## **Finding Feature Information**

Your software release may not support all the features documented in this module. For the latest feature For the latest feature information and caveats, see the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the "Feature Information for Configuring BGP Neighbor Session Options" section on page 36.

Use Cisco Feature Navigator to find information about platform support and Cisco IOS XE software image support. To access Cisco Feature Navigator, go to <a href="http://www.cisco.com/go/cfn">http://www.cisco.com/go/cfn</a>. An account on Cisco.com is not required.

## **Contents**

- Prerequisites for Configuring BGP Neighbor Session Options, page 2
- Restrictions for Configuring BGP Neighbor Session Options, page 2
- Information About Configuring BGP Neighbor Session Options, page 2
- How to Configure BGP Neighbor Session Options, page 7
- Configuration Examples for BGP Neighbor Session Options, page 30
- Where to Go Next, page 34



- Additional References, page 34
- Feature Information for Configuring BGP Neighbor Session Options, page 36

# **Prerequisites for Configuring BGP Neighbor Session Options**

Before configuring advanced BGP features, you should be familiar with the "Cisco BGP Overview" module and the "Configuring a Basic BGP Network" module.

# **Restrictions for Configuring BGP Neighbor Session Options**

A router that runs Cisco IOS XE software can be configured to run only one BGP routing process and to be a member of only one BGP autonomous system. However, a BGP routing process and autonomous system can support multiple address family configurations.

# **Information About Configuring BGP Neighbor Session Options**

To configure the BGP features in this module, you should understand the following concepts:

- BGP Neighbor Sessions, page 2
- BGP Support for Fast Peering Session Deactivation, page 2
- BGP Neighbor Session Restart After the Max-Prefix Limit Is Reached, page 3
- BGP Network Autonomous System Migration, page 4
- TTL Security Check for BGP Neighbor Sessions, page 5
- BGP Support for TCP Path MTU Discovery per Session, page 6

### **BGP Neighbor Sessions**

BGP is mainly used to connect a local network to an external network to gain access to the Internet or to connect to other organizations. A BGP-speaking router does not discover another BGP-speaking device automatically. A network administrator usually manually configures the relationships between BGP-speaking routers. A BGP neighbor device is a BGP-speaking router that has an active TCP connection to another BGP-speaking device. This relationship between BGP devices is often referred to as a peer instead of neighbor because a neighbor may imply the idea that the BGP devices are directly connected with no other router in between. Configuring BGP neighbor or peer sessions uses BGP neighbor session commands so this module will prefer the use of the term neighbor over peer.

## **BGP Support for Fast Peering Session Deactivation**

- BGP Hold Timer, page 3
- BGP Fast Peering Session Deactivation, page 3
- Selective Address Tracking for BGP Fast Session Deactivation, page 3

#### **BGP Hold Timer**

By default, the BGP hold timer is set to run every 180 seconds in Cisco IOS XE software. This timer value is set as default to protect the BGP routing process from instability that can be introduced by peering sessions with other routing protocols. BGP routers typically carry large routing tables, so frequent session resets are not desirable.

#### **BGP Fast Peering Session Deactivation**

BGP fast peering session deactivation improves BGP convergence and response time to adjacency changes with BGP neighbors. This feature is event driven and configured on a per-neighbor basis. When this feature is enabled, BGP will monitor the peering session with the specified neighbor. Adjacency changes are detected and terminated peering sessions are deactivated in between the default or configured BGP scanning interval.

#### **Selective Address Tracking for BGP Fast Session Deactivation**

In Cisco IOS XE Release 2.1 and later releases, the BGP Selective Address Tracking feature introduced the use of a route map with BGP fast session deactivation. The **route-map** keyword and *map-name* argument are used with the **neighbor fall-over** BGP neighbor session command to determine if a peering session with a BGP neighbor should be reset when a route to the BGP peer changes. The route map is evaluated against the new route, and if a deny statement is returned, the peer session is reset. The route map is not used for session establishment.



Only **match ip address** and **match source-protocol** commands are supported in the route map. No **set** commands or other **match** commands are supported.

## **BGP Neighbor Session Restart After the Max-Prefix Limit Is Reached**

- Prefix Limits and BGP Peering Sessions, page 3
- BGP Neighbor Session Restart with the Maximum Prefix Limit, page 3

### **Prefix Limits and BGP Peering Sessions**

There is a configurable limit on the maximum number of prefixes that a router that is running BGP can receive from a peer router. This limit is configured with the **neighbor maximum-prefix** command. When the router receives too many prefixes from a peer router and the maximum-prefix limit is exceeded, the peering session is disabled or brought down. The session stays down until the network operator manually brings the session back up by entering the **clear ip bgp** command. Entering the **clear ip bgp** command clears stored prefixes.

### **BGP Neighbor Session Restart with the Maximum Prefix Limit**

In Cisco IOS XE Release 2.1 and later releases, the **restart** keyword was introduced to enhance the capabilities of the **neighbor maximum-prefix** command. This enhancement allows the network operator to configure a router to automatically reestablish a BGP neighbor peering session when the

peering session has been disabled or brought down. There is configurable time interval at which peering can be reestablished automatically. The configurable timer argument for the **restart** keyword is specified in minutes. The time range is from 1 to 65,535 minutes.

## **BGP Network Autonomous System Migration**

- Autonomous System Migration for BGP Networks, page 4
- Dual Autonomous System Support for BGP Network Autonomous System Migration, page 4

#### **Autonomous System Migration for BGP Networks**

Autonomous-system migration can be necessary when a telecommunications or Internet service provider purchases another network. It is desirable for the provider to be able integrate the second autonomous system without disrupting existing customer peering arrangements. The amount of configuration required in the customer networks can make this a cumbersome task that is difficult to complete without disrupting service.

#### **Dual Autonomous System Support for BGP Network Autonomous System Migration**

In Cisco IOS XE Release 2.1 and later releases, support was added for dual BGP autonomous system configuration to allow a secondary autonomous system to merge under a primary autonomous system, without disrupting customer peering sessions. The configuration of this feature is transparent to customer networks. Dual BGP autonomous system configuration allows a router to appear, to external peers, as a member of secondary autonomous system during the autonomous system migration. This feature allows the network operator to merge the autonomous systems and then later migrate customers to new configurations during normal service windows without disrupting existing peering arrangements.

The **neighbor local-as** command is used to customize the AS\_PATH attribute by adding and removing autonomous system numbers for routes received from eBGP neighbors. This feature allows a router to appear to external peers as a member of another autonomous system for the purpose of autonomous system number migration. This feature simplifies this process of changing the autonomous-system number in a BGP network by allowing the network operator to merge a secondary autonomous system into a primary autonomous system and then later update the customer configurations during normal service windows without disrupting existing peering arrangements.

#### BGP Autonomous System Migration Support for Confederations, Individual Peering Sessions, and Peer Groupings

This feature supports confederations, individual peering sessions, and configurations applied through peer groups and peer templates. If this feature is applied to a group peers, the individual peers cannot be customized.

#### **Ingress Filtering During BGP Autonomous System Migration**

Autonomous system path customization increases the possibility that routing loops can be created if misconfigured. The larger the number of customer peerings, the greater the risk. You can minimize this possibility by applying policies on the ingress interfaces to block the autonomous-system number that is in transition or routes that have no **local-as** configuration.



BGP prepends the autonomous system number from each BGP network that a route traverses to maintain network reachability information and to prevent routing loops. This feature should be configured only for autonomous-system migration and should be deconfigured after the transition has been completed. This procedure should be attempted only by an experienced network operator, as routing loops can be created with improper configuration.

## **TTL Security Check for BGP Neighbor Sessions**

- BGP Support for the TTL Security Check, page 5
- TTL Security Check for BGP Neighbor Sessions, page 5
- TTL Security Check Support for Multihop BGP Neighbor Sessions, page 6
- Benefits of the BGP Support for TTL Security Check, page 6

#### **BGP Support for the TTL Security Check**

When implemented for BGP, the TTL Security Check feature introduces a lightweight security mechanism to protect eBGP neighbor sessions from CPU utilization-based attacks. These types of attacks are typically brute force Denial of Service (DoS) attacks that attempt to disable the network by flooding the network with IP packets that contain forged source and destination IP addresses.

TTL Security Check protects the eBGP neighbor session by comparing the value in the TTL field of received IP packets against a hop count that is configured locally for each eBGP neighbor session. If the value in the TTL field of the incoming IP packet is greater than or equal to the locally configured value, the IP packet is accepted and processed normally. If the TTL value in the IP packet is less than the locally configured value, the packet is silently discarded and no ICMP message is generated. This is designed behavior; a response to a forged packet is unnecessary.

Although it is possible to forge the TTL field in an IP packet header, accurately forging the TTL count to match the TTL count from a trusted peer is impossible unless the network to which the trusted peer belongs has been compromised.

TTL Security Check supports both directly connected neighbor sessions and multihop eBGP neighbor sessions. The BGP neighbor session is not affected by incoming packets that contain invalid TTL values. The BGP neighbor session will remain open, and the router will silently discard the invalid packet. The BGP session, however, can still expire if keepalive packets are not received before the session timer expires.

### **TTL Security Check for BGP Neighbor Sessions**

The BGP Support for TTL Security Check feature is configured with the **neighbor ttl-security** command in router configuration mode or address family configuration mode. When this feature is enabled, BGP will establish or maintain a session only if the TTL value in the IP packet header is equal to or greater than the TTL value configured for the peering session. Enabling this feature secures the eBGP session in the incoming direction only and has no effect on outgoing IP packets or the remote router. The *hop-count* argument is used to configure the maximum number of hops that separate the two peers. The TTL value is determined by the router from the configured hop count. The value for this argument is a number from 1 to 254.

#### TTL Security Check Support for Multihop BGP Neighbor Sessions

The BGP Support for TTL Security Check feature supports both directly connected neighbor sessions and multihop neighbor sessions. When this feature is configured for a multihop neighbor session, the **neighbor ebgp-multihop** router configuration command cannot be configured and is not needed to establish the neighbor session. These commands are mutually exclusive, and only one command is required to establish a multihop neighbor session. If you attempt to configure both commands for the same peering session, an error message will be displayed in the console.

To configure this feature for an existing multihop session, you must first disable the existing neighbor session with the **no neighbor ebgp-multihop** command. The multihop neighbor session will be restored when you enable this feature with the **neighbor ttl-security** command.

This feature should be configured on each participating router. To maximize the effectiveness of this feature, the *hop-count* argument should be strictly configured to match the number of hops between the local and external network. However, you should also consider path variation when configuring this feature for a multihop neighbor session.

#### **Benefits of the BGP Support for TTL Security Check**

The BGP Support for TTL Security Check feature provides an effective and easy-to-deploy solution to protect eBGP neighbor sessions from CPU utilization-based attacks. When this feature is enabled, a host cannot attack a BGP session if the host is not a member of the local or remote BGP network or if the host is not directly connected to a network segment between the local and remote BGP networks. This solution greatly reduces the effectiveness of DoS attacks against a BGP autonomous system.

## **BGP Support for TCP Path MTU Discovery per Session**

- Path MTU Discovery, page 6
- BGP Neighbor Session TCP PMTUD, page 7

### **Path MTU Discovery**

The IP protocol family was designed to use a wide variety of transmission links. The maximum IP packet length is 65000 bytes. Most transmission links enforce a smaller maximum packet length limit, called the maximum transmission unit (MTU), which varies with the type of the transmission link. The design of IP accommodates link packet length limits by allowing intermediate routers to fragment IP packets as necessary for their outgoing links. The final destination of an IP packet is responsible for reassembling its fragments as necessary.

All TCP sessions are bounded by a limit on the number of bytes that can be transported in a single packet, and this limit is known as the maximum segment size (MSS). TCP breaks up packets into chunks in a transmit queue before passing packets down to the IP layer. A smaller MSS may not be fragmented at an IP device along the path to the destination device, but smaller packets increase the amount of bandwidth needed to transport the packets. The maximum TCP packet length is determined by both the MTU of the outbound interface on the source device and the MSS announced by the destination device during the TCP setup process.

Path MTU discovery (PMTUD) was developed as a solution to the problem of finding the optimal TCP packet length. PMTUD is an optimization (detailed in RFC 1191) wherein a TCP connection attempts to send the longest packets that will not be fragmented along the path from source to destination. It does this by using a flag, don't fragment (DF), in the IP packet. This flag is supposed to alter the behavior of

an intermediate router that cannot send the packet across a link because it is too long. Normally the flag is off, and the router should fragment the packet and send the fragments. If a router tries to forward an IP datagram, with the DF bit set, to a link that has a lower MTU than the size of the packet, the router will drop the packet and return an Internet Control Message Protocol (ICMP) Destination Unreachable message to the source of this IP datagram, with the code indicating "fragmentation needed and DF set." When the source device receives the ICMP message, it will lower the send MSS, and when TCP retransmits the segment, it will use the smaller segment size.

#### **BGP Neighbor Session TCP PMTUD**

TCP path MTU discovery is enabled by default for all BGP neighbor sessions, but there are situations when you may want to disable TCP path MTU discovery for one or all BGP neighbor sessions. While PMTUD works well for larger transmission links (for example, Packet over Sonet links), a badly configured TCP implementation or a firewall may slow or stop the TCP connections from forwarding any packets. In this type of situation, you may need to disable TCP path MTU discovery. In Cisco IOS XE Release 2.1 and later releases, configuration options were introduced to permit TCP path MTU discovery to be disabled, or subsequently reenabled, either for a single BGP neighbor session or for all BGP sessions. To disable the TCP path MTU discovery globally for all BGP neighbors, use the **no bgp transport path-mtu-discovery** command under router configuration mode. To disable the TCP path MTU discovery for a single neighbor, use the **no neighbor transport path-mtu-discovery** command under router or address family configuration modes. For more details, see the "Disabling TCP Path MTU Discovery Globally for All BGP Sessions" section on page 21 or the "Disabling TCP Path MTU Discovery for a Single BGP Neighbor" section on page 23.

# **How to Configure BGP Neighbor Session Options**

This section contains the following tasks or task groups:

- Configuring Fast Session Deactivation, page 7
- Configuring a Router to Reestablish a Neighbor Session After the Maximum Prefix Limit Has Been Exceeded, page 11
- Configuring Dual-AS Peering for Network Migration, page 15
- Configuring the TTL Security Check for BGP Neighbor Sessions, page 17
- Configuring BGP Support for TCP Path MTU Discovery per Session, page 21

## **Configuring Fast Session Deactivation**

The tasks in this section show how configure BGP next-hop address tracking. BGP next-hop address tracking significantly improves the response time of BGP to next-hop changes in the RIB. However, unstable Interior Gateway Protocol (IGP) peers can introduce instability to BGP neighbor sessions. We recommend that you aggressively dampen unstable IGP peering sessions to reduce the possible impact to BGP. For more details about route dampening, see the "Configuring Internal BGP Features" module.

- Configuring Fast Session Deactivation for a BGP Neighbor, page 8
- Configuring Selective Address Tracking for Fast Session Deactivation, page 9

#### **Configuring Fast Session Deactivation for a BGP Neighbor**

Perform this task to establish a peering session with a BGP neighbor and then configure the peering session for fast session deactivation to improve the network convergence time if the peering session is deactivated.

#### **Aggressive Dampening of IGP Routes**

Enabling this feature can significantly improve BGP convergence time. However, unstable Interior Gateway Protocol (IGP) peers can still introduce instability to BGP neighbor sessions. We recommend that you aggressively dampen unstable IGP peering sessions to reduce the possible impact to BGP.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. router bgp autonomous-system-number
- 4. address-family ipv4 [mdt | multicast | tunnel | unicast [vrf vrf-name] | vrf vrf-name]
- $\textbf{5.} \quad \textbf{neighbor} \ \textit{ip-address} \ \textbf{remote-as} \ \textit{autonomous-system-number}$
- 6. neighbor ip-address fall-over
- end

#### **DETAILED STEPS**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		• Enter your password if prompted.
	Example:	
	Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	router bgp autonomous-system-number	Enters router configuration mod to create or configure a BGP routing process.
	Example: Router(config)# router bgp 50000	
Step 4	<pre>address-family ipv4 [mdt   multicast   tunnel   unicast [vrf vrf-name]   vrf vrf-name]</pre>	Enter address family configuration mode to configure BGP peers to accept address family-specific configurations.
	<pre>Example: Router(config-router)# address-family ipv4 unicast</pre>	• The example creates an IPv4 unicast address family session.
Step 5	neighbor ip-address remote-as autonomous-system-number	Establishes a peering session with a BGP neighbor.
	Example: Router(config-router-af)# neighbor 10.0.0.1 remote-as 50000	
Step 6	neighbor ip-address fall-over	Configures the BGP peering to use fast session deactivation.
	<pre>Example: Router(config-router-af)# neighbor 10.0.0.1 fall-over</pre>	BGP will remove all routes learned through this peer if the session is deactivated.
Step 7	end	Exits address family configuration mode and returns to privileged EXEC mode.
	Example: Router(config-router-af)# end	

## **Configuring Selective Address Tracking for Fast Session Deactivation**

Perform this task to configure selective address tracking for fast session deactivation. The optional **route-map** keyword and *map-name* argument of the **neighbor fall-over** command are used to determine if a peering session with a BGP neighbor should be deactivated (reset) when a route to the BGP peer changes. The route map is evaluated against the new route, and if a deny statement is returned, the peer session is reset.



Only **match ip address** and **match source-protocol** commands are supported in the route map. No **set** commands or other **match** commands are supported.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. router bgp autonomous-system-number
- **4. neighbor** {*ip-address* | *peer-group-name*} **remote-as** *autonomous-system-number*
- 5. **neighbor** *ip-address* **fall-over** [**route-map** *map-name*]
- 6. exit
- 7. **ip prefix-list** *list-name* [**seq** *seq-value*] {**deny** *network/length* | **permit** *network/length*} [**ge** *ge-value*] [**le** *le-value*]
- **8.** route-map map-name [permit | deny] [sequence-number]
- **9.** match ip address prefix-list prefix-list-name [prefix-list-name...]
- 10. end

#### **DETAILED STEPS**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		Enter your password if prompted.
	Example: Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	router bgp autonomous-system-number	Enters router configuration mode for the specified routing process.
	Example: Router(config)# router bgp 45000	
Step 4	<pre>neighbor {ip-address   peer-group-name} remote-as autonomous-system-number</pre>	Adds the IP address or peer group name of the neighbor in the specified autonomous system to the IPv4 multiprotocol BGP neighbor table of the local router.
	<pre>Example: Router(config-router)# neighbor 192.168.1.2 remote-as 40000</pre>	
Step 5	neighbor ip-address fall-over [route-map	Applies a route map when a route to the BGP changes.
	map-name]	• In this example, the route map named CHECK-NBR is applied when the route to neighbor 192.168.1.2
	<pre>Example: Router(config-router)# neighbor 192.168.1.2 fall-over route-map CHECK-NBR</pre>	changes.
Step 6	exit	Exits router configuration mode and enters global configuration mode.
	Example:	
	Router(config-router)# exit	

	Command or Action	Purpose
Step 7	<pre>ip prefix-list list-name [seq seq-value] {deny network/length   permit network/length} [ge ge-value] [le le-value]</pre>	Creates a prefix list for BGP next-hop route filtering.     Selective next-hop route filtering supports prefix length matching or source protocol matching on a per address.
	<pre>Example: Router(config)# ip prefix-list FILTER28 seq 5 permit 0.0.0.0/0 ge 28</pre>	<ul> <li>family basis.</li> <li>The example creates a prefix list named FILTER28 that permits routes only if the mask length is greater than or equal to 28.</li> </ul>
Step 8	route-map map-name [permit   deny] [sequence-number]	Configures a route map and enters route map configuration mode.
	<pre>Example: Router(config)# route-map CHECK-NBR permit 10</pre>	• In this example, a route map named CHECK-NBR is created. If there is an IP address match in the following match command, the IP address will be permitted.
Step 9	<pre>match ip address prefix-list prefix-list-name [prefix-list-name]</pre>	Matches the IP addresses in the specified prefix list.  • Use the <i>prefix-list-name</i> argument to specify the name
	<pre>Example: Router(config-route-map)# match ip address prefix-list FILTER28</pre>	of a prefix list. The ellipsis means that more than one prefix list can be specified.
		Note Only the syntax applicable to this task is used in this example. For more details, see the <i>Cisco IOS IP Routing: BGP Command Reference</i> .
Step 10	end	Exits route map configuration mode and returns to privileged EXEC mode.
	<pre>Example: Router(config-route-map)# end</pre>	

#### What to Do Next

The BGP Support for Next-Hop Address Tracking feature improves the response time of BGP to next-hop changes for routes installed in the RIB, which can also improve overall BGP convergence. For information about BGP next-hop address tracking, see the "Configuring Advanced BGP Features" module.

# Configuring a Router to Reestablish a Neighbor Session After the Maximum Prefix Limit Has Been Exceeded

Perform this task to configure the time interval at which a BGP neighbor session is reestablished by a router when the number of prefixes that have been received from a BGP peer has exceeded the maximum prefix limit.

### **Reestablishment of Neighbor Sessions**

The network operator can configure a router that is running BGP to automatically reestablish a neighbor session that has been brought down because the configured maximum-prefix limit has been exceeded. No intervention from the network operator is required when this feature is enabled.

#### **Restrictions**

This task attempts to reestablish a disabled BGP neighbor session at the configured time interval that is specified by the network operator. However, the configuration of the restart timer alone cannot change or correct a peer that is sending an excessive number of prefixes. The network operator will need to reconfigure the maximum-prefix limit or reduce the number of prefixes that are sent from the peer. A peer that is configured to send too many prefixes can cause instability in the network, where an excessive number of prefixes are rapidly advertised and withdrawn. In this case, the **warning-only** keyword can be configured to disable the restart capability, while the network operator corrects the underlying problem.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. router bgp autonomous-system-number
- **4. neighbor** {ip-address | peer-group-name} **maximum-prefix** maximum [threshold] [**restart** restart-interval] [**warning-only**]
- 5. end
- 6. show ip bgp neighbors [ip-address]

#### **DETAILED STEPS**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		• Enter your password if prompted.
	Example: Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	router bgp autonomous-system-number	Enters router configuration mode and creates a BGP routing process.
	<pre>Example: Router(config)# router bgp 101</pre>	

	Command or Action	Purpose
Step 4	<pre>neighbor {ip-address   peer-group-name} maximum-prefix maximum [threshold] [restart restart-interval] [warning-only]</pre>	Configures the maximum-prefix limit on a router that is running BGP.
	Example: Router(config-router)# neighbor 10.4.9.5 maximum-prefix 1000 90 restart 60	• Use the <b>restart</b> keyword and <i>restart-interval</i> argument to configure the router to automatically reestablish a neighbor session that has been disabled because the maximum-prefix limit has been exceeded. The configurable range of the <i>restart-interval</i> is from 1 to 65535 minutes.
		• Use the <b>warning-only</b> keyword to configure the router to disable the restart capability to allow you to fix a peer that is sending too many prefixes.
		<b>Note</b> If the <i>restart-interval</i> is not configured, the disabled session will stay down after the maximum-prefix limit is exceeded. This is the default behavior.
Step 5	end	Exits router configuration mode and returns to privileged EXEC mode.
	<pre>Example: Router(config-router)# end</pre>	
Step 6	show ip bgp neighbors ip-address	(Optional) Displays information about the TCP and BGP connections to neighbors.
	Example: Router# show ip bgp neighbors 10.4.9.5	<ul> <li>In this example, the output from this command will display the maximum prefix limit for the specified neighbor and the configured restart timer value.</li> </ul>
		Note Only the syntax applicable to this task is used in this example. For more details, see the <i>Cisco IOS IP Routing: BGP Command Reference</i> .

#### **Examples**

The following example output from the **show ip bgp neighbors** command verifies that a router has been configured to automatically reestablish disabled neighbor sessions. The output shows that the maximum prefix limit for neighbor 10.4.9.5 is set to 1000 prefixes, the restart threshold is set to 90 percent, and the restart interval is set at 60 minutes.

Router# show ip bgp neighbors 10.4.9.5

```
BGP neighbor is 10.4.9.5, remote AS 101, internal link
 BGP version 4, remote router ID 10.4.9.5
 BGP state = Established, up for 2w2d
 Last read 00:00:14, hold time is 180, keepalive interval is 60 seconds
  Neighbor capabilities:
   Route refresh: advertised and received(new)
   Address family IPv4 Unicast: advertised and received
  Message statistics:
    InQ depth is 0
    OutQ depth is 0
                                    Rcvd
    Opens:
                           1
                                       1
   Notifications:
                                       0
                            0
   Updates:
                            0
                                       0
    Keepalives:
                        23095
                                   23095
```

```
Route Refresh:
Total:
                      0
                      23096
                                23096
  Default minimum time between advertisement runs is 5 seconds
 For address family: IPv4 Unicast
  BGP table version 1, neighbor versions 1/0 1/0
  Output queue sizes : 0 self, 0 replicated
  Index 2, Offset 0, Mask 0x4
  Member of update-group 2
                              Sent
                                        Rcvd
  Prefix activity:
                              ----
                                        ----
   Prefixes Current:
                             0
0
                                          0
   Prefixes Total:
                            0
0
   Implicit Withdraw:
   Explicit Withdraw:
                                          0
                             n/a
                                           Ω
   Used as bestpath:
                                           0
   Used as multipath:
                             n/a
                                Outbound
  Local Policy Denied Prefixes:
                                _____
                                           _____
   Total:
                                     0
                                                0
!Configured maximum number of prefixes and restart interval information!
 Maximum prefixes allowed 1000
  Threshold for warning message 90%, restart interval 60 min
 Number of NLRIs in the update sent: max 0, min 0
  Connections established 1; dropped 0
  Last reset never
Connection state is ESTAB, I/O status: 1, unread input bytes: 0
Local host: 10.4.9.21, Local port: 179
Foreign host: 10.4.9.5, Foreign port: 11871
Enqueued packets for retransmit: 0, input: 0 mis-ordered: 0 (0 bytes)
Event Timers (current time is 0x5296BD2C):
Timer Starts Wakeups
                                        Next
                     0
            23098
Retrans
TimeWait
               0
                            0
             23096
SendWnd
                       22692
                                         0x0
              0
                        0
                                         0 \times 0
KeepAlive
GiveUp
PmtuAger
DeadWait
                 0
                           0
                                         0 \times 0
                0
                           Ο
                                         0x0
                0
                           Ω
                                          0x0
DeadWait
                 0
                           0
                                          0x0
iss: 1900546793 snduna: 1900985663 sndnxt: 1900985663
                                                      sndwnd: 14959
irs: 2894590641 rcvnxt: 2895029492 rcvwnd: 14978 delrcvwnd: 1406
SRTT: 300 ms, RTTO: 607 ms, RTV: 3 ms, KRTT: 0 ms
minRTT: 0 ms, maxRTT: 316 ms, ACK hold: 200 ms
Flags: passive open, nagle, gen tcbs
Datagrams (max data segment is 1460 bytes):
Rcvd: 46021 (out of order: 0), with data: 23096, total data bytes: 438850
Sent: 46095 (retransmit: 0, fastretransmit: 0), with data: 23097, total data by9
```

### **Troubleshooting Tips**

Use the **clear ip bgp** command to resets a BGP connection using BGP soft reconfiguration. This command can be used to clear stored prefixes to prevent a router that is running BGP from exceeding the maximum-prefix limit. For more details about using BGP soft reconfiguration, see the Monitoring and Maintaining Basic BGP task in the "Configuring a Basic BGP Network" module.

Display of the following error messages can indicate an underlying problem that is causing the neighbor session to become disabled. The network operator should check the values that are configured for the maximum-prefix limit and the configuration of any peers that are sending an excessive number of prefixes. The following sample error messages below are similar to the error messages that may be displayed:

```
00:01:14:%BGP-5-ADJCHANGE:neighbor 10.10.10.2 Up
00:01:14:%BGP-4-MAXPFX:No. of unicast prefix received from 10.10.10.2 reaches 5, max 6
00:01:14:%BGP-3-MAXPFXEXCEED:No.of unicast prefix received from 10.10.10.2:7 exceed limit6
00:01:14:%BGP-5-ADJCHANGE:neighbor 10.10.10.2 Down - BGP Notification sent
00:01:14:%BGP-3-NOTIFICATION:sent to neighbor 10.10.10.2 3/1 (update malformed) 0 byte
```

The **bgp dampening** command can be used to configure the dampening of a flapping route or interface when a peer is sending too many prefixes and causing network instability. The use of this command should be necessary only when troubleshooting or tuning a router that is sending an excessive number of prefixes. For more details about BGP route dampening, see the "Configuring Advanced BGP Features" module.

## **Configuring Dual-AS Peering for Network Migration**

Perform this task to configure a BGP peer router to appear to external peers as a member of another autonomous system for the purpose of autonomous system number migration. When the BGP peer is configured with dual autonomous system numbers then the network operator can merge a secondary autonomous system into a primary autonomous system and update the customer configuration during a future service window without disrupting existing peering arrangements.

The **show ip bgp** and **show ip bgp neighbors** commands can be used to verify autonomous system number for entries in the routing table and the status of this feature.

#### Restrictions

- This feature can be configured for only true eBGP peering sessions. This feature cannot be configured for two peers in different subautonomous systems of a confederation.
- This feature can be configured for individual peering sessions and configurations applied through
  peer-groups and peer templates. If this command is applied to a group of peers, the peers cannot be
  individually customized.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. router bgp autonomous-system-number
- 4. **neighbor** ip-address **remote-as** autonomous-system-number
- 5. neighbor ip-address local-as [autonomous-system-number [no-prepend [replace-as [dual-as]]]]
- 6. neighbor *ip-address* remove-private-as
- 7. end
- 8. **show ip bgp** [network] [network-mask] [**longer-prefixes**] [**prefix-list** prefix-list-name | **route-map** route-map-name] [**shorter prefixes** mask-length]
- 9. show ip bgp neighbors [neighbor-address] [received-routes | routes | advertised-routes | paths regexp | dampened-routes | received prefix-filter]

#### **DETAILED STEPS**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	• Enter your password if prompted.
	Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	router bgp autonomous-system-number	Enters router configuration mode, and creates a BGP routing process.
	<pre>Example: Router(config)# router bgp 40000</pre>	
Step 4	neighbor ip-address remote-as autonomous-system-number	Establishes a peering session with a BGP neighbor.
	<pre>Example: Router(config-router)# neighbor 10.0.0.1 remote-as 45000</pre>	
Step 5	neighbor ip-address local-as [autonomous-system-number [no-prepend [replace-as [dual-as]]]]	Customizes the AS_PATH attribute for routes received from an eBGP neighbor.
	Example: Router(config-router)# neighbor 10.0.0.1 local-as 50000 no-prepend replace-as dual-as	• The <b>replace-as</b> keyword is used to prepend only the local autonomous-system number (as configured with the <i>ip-address</i> argument) to the AS_PATH attribute. The autonomous-system number from the local BGP routing process is not prepended.
		• The <b>dual-as</b> keyword is used to configure the eBGP neighbor to establish a peering session using the real autonomous-system number (from the local BGP routing process) or by using the autonomous-system number configured with the <i>ip-address</i> argument (local-as).
		• The example configures the peering session with the 10.0.0.1 neighbor to accept the real autonomous system number and the local-as number.
Step 6	neighbor ip-address remove-private-as	(Optional) Removes private autonomous-system numbers from outbound routing updates.
	<pre>Example: Router(config-router)# neighbor 10.0.0.1 remove-private-as</pre>	This command can be used with the <b>replace-as</b> functionality to remove the private autonomous-system number and replace it with an external autonomous system number.
		• Private autonomous-system numbers (64512 to 65535) are automatically removed from the AS_PATH attribute when this command is configured.

	Command or Action	Purpose
Step 7	end	Exits router configuration mode and returns to privileged EXEC mode.
	<pre>Example: Router(config-router)# end</pre>	
Step 8	<pre>show ip bgp [network] [network-mask] [longer-prefixes] [prefix-list prefix-list-name   route-map route-map-name] [shorter-prefixes mask-length]</pre>	<ul> <li>Displays entries in the BGP routing table.</li> <li>The output can be used to verify if the real autonomous system number or local-as number is configured.</li> </ul>
	Example: Router# show ip bgp	
Step 9	<pre>show ip bgp neighbors [neighbor-address] [received-routes   routes   advertised-routes   paths regexp   dampened-routes   received prefix-filter]</pre>	Displays information about TCP and BGP connections to neighbors.  • The output will display local AS, no-prepend,
	<pre>Example: Router(config)# show ip bgp neighbors</pre>	replace-as, and dual-as with the corresponding autonomous system number when these options are configured.

## **Configuring the TTL Security Check for BGP Neighbor Sessions**

Configure this task to allow BGP to establish or maintain a session only if the TTL value in the IP packet header is equal to or greater than the TTL value configured for the BGP neighbor session.

#### **Prerequisites**

To maximize the effectiveness of this feature, we recommend that you configure it on each
participating router. Enabling this feature secures the eBGP session in the incoming direction only
and has no effect on outgoing IP packets or the remote router.

#### **Restrictions**

- The **neighbor ebgp-multihop** command is not needed when this feature is configured for a multihop neighbor session and should be disabled before configuring this feature.
- The effectiveness of this feature is reduced in large-diameter multihop peerings. In the event of a
  CPU utilization-based attack against a BGP router that is configured for large-diameter peering, you
  may still need to shut down the affected neighbor sessions to handle the attack.
- This feature is not effective against attacks from a peer that has been compromised inside of the local
  and remote network. This restriction also includes peers that are on the network segment between
  the local and remote network.

#### **SUMMARY STEPS**

- 1. enable
- 2. trace [protocol] destination
- 3. configure terminal

- **4. router bgp** *autonomous-system-number*
- 5. neighbor ip-address ttl-security hops hop-count
- 6. end
- 7. show running-config
- 8. show ip bgp neighbors [ip-address]

#### **DETAILED STEPS**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		Enter your password if prompted.
	Example: Router> enable	
Step 2	trace [protocol] destination	Discovers the routes of the specified protocol that packets will actually take when traveling to their destination.
	Example: Router# trace ip 10.1.1.1	• Enter the <b>trace</b> command to determine the number of hops to the specified peer.
Step 3	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 4	router bgp autonomous-system-number	Enters router configuration mode, and creates a BGP routing process.
	Example: Router(config)# router bgp 65000	
Step 5	neighbor ip-address ttl-security hops hop-count	Configures the maximum number of hops that separate two peers.
	<pre>Example: Router(config-router)# neighbor 10.1.1.1 ttl-security hops 2</pre>	• The <i>hop-count</i> argument is set to number of hops that separate the local and remote peer. If the expected TTL value in the IP packet header is 254, then the number 1 should be configured for the <i>hop-count</i> argument. The range of values is a number from 1 to 254.
		• When this feature is enabled, BGP will accept incoming IP packets with a TTL value that is equal to or greater than the expected TTL value. Packets that are not accepted are silently discarded.
		• The example configuration sets the expected incoming TTL value to at least 253, which is 255 minus the TTL value of 2, and this is the minimum TTL value expected from the BGP peer. The local router will accept the peering session from the 10.1.1.1 neighbor only if it is 1 or 2 hops away.

	Command or Action	Purpose
Step 6	end	Exits router configuration mode and returns to privileged EXEC mode.
	<pre>Example: Router(config-router)# end</pre>	
Step 7	show running-config	(Optional) Displays the contents of the currently running configuration file.
	Example: Router# show running-config   begin bgp	<ul> <li>The output of this command displays the configuration of the neighbor ttl-security command for each peer under the BGP configuration section. This section includes the neighbor address and the configured hop count.</li> </ul>
		Note Only the syntax applicable to this task is used in this example. For more details, see the <i>Cisco IOS IP Routing: BGP Command Reference</i> .
Step 8	show ip bgp neighbors [ip-address]	(Optional) Displays information about the TCP and BGP connections to neighbors.
	Example: Router# show ip bgp neighbors 10.4.9.5	• This command displays "External BGP neighbor may be up to <i>number</i> hops away" when this feature is enabled. The <i>number</i> value represents the hop count. It is a number from 1 to 254.
		Note Only the syntax applicable to this task is used in this example. For more details, see the <i>Cisco IOS IP Routing: BGP Command Reference</i> .

### **Examples**

The configuration of the BGP Support for TTL Security Check feature can be verified with the **show running-config** and **show ip bgp neighbors** commands. This feature is configured locally on each peer, so there is no remote configuration to verify.

The following is sample output from the **show running-config** command. The output shows that neighbor 10.1.1.1 is configured to establish or maintain the neighbor session only if the expected TTL count in the incoming IP packet is 253 or 254.

Router# show running-config | begin bgp

```
router bgp 65000
no synchronization
bgp log-neighbor-changes
neighbor 10.1.1.1 remote-as 55000
neighbor 10.1.1.1 ttl-security hops 2
no auto-summary
.
.
```

The following is sample output from the **show ip bgp neighbors** command. The output shows that the local router will accept packets from the 10.1.1.1 neighbor if it is no more than 2 hops away. The configuration of this feature is displayed in the address family section of the output. The relevant line is shown in bold in the output.

```
Router# show ip bgp neighbors 10.1.1.1
BGP neighbor is 10.1.1.1, \, remote AS 55000, external link
 BGP version 4, remote router ID 10.2.2.22
  BGP state = Established, up for 00:59:21
  Last read 00:00:21, hold time is 180, keepalive interval is 60 seconds
 Neighbor capabilities:
   Route refresh: advertised and received(new)
   Address family IPv4 Unicast: advertised and received
  Message statistics:
   InQ depth is 0
   OutQ depth is 0
                       Sent
                                Ravd
   Opens:
                       2
   Opens.
Notifications:
                        0
                                  0
   Updates:
                         0
                                    Ω
                      226
                                 227
   Keepalives:
   Keepalives: 226
Route Refresh: 0
Total: 228
                                   0
   Total:
                        228
                                  229
  Default minimum time between advertisement runs is 5 seconds
 For address family: IPv4 Unicast
 BGP table version 1, neighbor version 1/0
  Output queue sizes : 0 self, 0 replicated
  Index 1, Offset 0, Mask 0x2
  Member of update-group 1
                              Sent.
                                         Ravd
  Prefix activity:
   Prefixes Current:
                                0
                                0
   Prefixes Total:
                                            0
                                0
   Implicit Withdraw:
                                           0
                              0
   Explicit Withdraw:
                                           0
   Used as bestpath:
                              n/a
   Used as multipath:
                              n/a
                                Outbound
                                            Inbound
  Local Policy Denied Prefixes:
                                      0
  Number of NLRIs in the update sent: max 0, min 0
  Connections established 2; dropped 1
 Last reset 00:59:50, due to User reset
 External BGP neighbor may be up to 2 hops away.
Connection state is ESTAB, I/O status: 1, unread input bytes: 0
Local host: 10.2.2.22, Local port: 179
Foreign host: 10.1.1.1, Foreign port: 11001
Enqueued packets for retransmit: 0, input: 0 mis-ordered: 0 (0 bytes)
Event Timers (current time is 0xCC28EC):
Timer Starts Wakeups
                                         Next.
Retrans
             63 0
                                         0x0
TimeWait
                 0
                           0
                                         0x0
                         50
                62
0
AckHold
                                          0x0
                          0
SendWnd
                                          0 \times 0
KeepAlive
                 0
                           0
                                          0x0
```

GiveUp

0

0

 $0 \times 0$ 

```
PmtuAger
                   0
                               0
                                             0x0
DeadWait
                               0
                                             0x0
iss: 712702676 snduna: 712703881 sndnxt: 712703881
                                                           sndwnd: 15180
irs: 2255946817 rcvnxt: 2255948041 rcvwnd:
                                                 15161 delrcvwnd:
SRTT: 300 ms, RTTO: 607 ms, RTV: 3 ms, KRTT: 0 ms
minRTT: 0 ms, maxRTT: 300 ms, ACK hold: 200 ms
Flags: passive open, nagle, gen tcbs
Datagrams (max data segment is 1460 bytes):
Rcvd: 76 (out of order: 0), with data: 63, total data bytes: 1223
Sent: 113 (retransmit: 0, fastretransmit: 0), with data: 62, total data bytes: 4
```

## Configuring BGP Support for TCP Path MTU Discovery per Session

This section contains the following tasks:

- Disabling TCP Path MTU Discovery Globally for All BGP Sessions, page 21
- Disabling TCP Path MTU Discovery for a Single BGP Neighbor, page 23
- Enabling TCP Path MTU Discovery Globally for All BGP Sessions, page 26
- Enabling TCP Path MTU Discovery for a Single BGP Neighbor, page 28

#### Disabling TCP Path MTU Discovery Globally for All BGP Sessions

Perform this task to disable TCP path MTU discovery for all BGP sessions. TCP path MTU discovery is enabled by default when you configure BGP sessions, but we recommend that you enter the **show ip bgp neighbors** command to ensure that TCP path MTU discovery is enabled.

#### **Prerequisites**

This task assumes that you have previously configured BGP neighbors with active TCP connections.

#### **SUMMARY STEPS**

- 1. enable
- 2. show ip bgp neighbors [ip-address]
- 3. configure terminal
- 4. router bgp autonomous-system-number
- no bgp transport path-mtu-discovery
- 6. end
- 7. **show ip bgp neighbors** [*ip-address*]

#### **DETAILED STEPS**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	<pre>Example: Router&gt; enable</pre>	Enter your password if prompted.
Step 2	show ip bgp neighbors [ip-address]	(Optional) Displays information about the TCP and BGP connections to neighbors.
	Example: Router# show ip bgp neighbors	• Use this command to determine whether BGP neighbors have TCP path MTU discovery enabled.
		<b>Note</b> Only the syntax applicable to this task is used in this example. For more details, see the <i>Cisco IOS IP Routing: BGP Command Reference</i> .
Step 3	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 4	router bgp autonomous-system-number	Enters router configuration mode to create or configure a BGP routing process.
	<pre>Example: Router(config)# router bgp 50000</pre>	
Step 5	no bgp transport path-mtu-discovery	Disables TCP path MTU discovery for all BGP sessions.
	<pre>Example: Router(config-router)# no bgp transport path-mtu-discovery</pre>	
Step 6	end	Exits router configuration mode and returns to privileged EXEC mode.
	<pre>Example: Router(config-router)# end</pre>	
Step 7	show ip bgp neighbors	(Optional) Displays information about the TCP and BGP connections to neighbors.
	Example: Router# show ip bgp neighbors	• In this example, the output from this command will not display that any neighbors have TCP path MTU enabled.
		Note Only the syntax applicable to this task is used in this example. For more details, see the <i>Cisco IOS IP Routing: BGP Command Reference</i> .

#### **Examples**

The following sample output from the **show ip bgp neighbors** command shows that TCP path MTU discovery is enabled for BGP neighbors. Two entries in the output—Transport(tcp) path-mtu-discovery is enabled and path mtu capable—show that TCP path MTU discovery is enabled.

The following is sample output from the **show ip bgp neighbors** command after the **no bgp transport path-mtu-discovery** command has been entered. Note that the path mtu entries are missing.

```
Router# show ip bgp neighbors
```

```
BGP neighbor is 172.16.1.2, remote AS 45000, internal link
BGP version 4, remote router ID 172.16.1.99

.
.
.
.
.
.
. For address family: IPv4 Unicast
BGP table version 5, neighbor version 5/0

.
.
.
. Address tracking is enabled, the RIB does have a route to 172.16.1.2
Address tracking requires at least a /24 route to the peer
Connections established 3; dropped 2
Last reset 00:00:35, due to Router ID changed
.
.
.
.
.
.
.
. SRTT: 146 ms, RTTO: 1283 ms, RTV: 1137 ms, KRTT: 0 ms
minRTT: 8 ms, maxRTT: 300 ms, ACK hold: 200 ms
Flags: higher precedence, retransmission timeout, nagle
```

## Disabling TCP Path MTU Discovery for a Single BGP Neighbor

Perform this task to establish a peering session with an internal BGP (iBGP) neighbor and then disable TCP path MTU discovery for the BGP neighbor session. The **neighbor transport** command can be used in router configuration or address family configuration mode.

#### **Prerequisites**

This task assumes that you know that TCP path MTU discovery is enabled by default for all your BGP neighbors.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. router bgp autonomous-system-number
- 4. address-family {ipv4 [mdt | multicast | unicast [vrf vrf-name] | vrf vrf-name] | vpnv4 [unicast]}
- **5. neighbor** {*ip-address* | *peer-group-name*} **remote-as** *autonomous-system-number*
- **6. neighbor** {*ip-address* | *peer-group-name*} **activate**
- 7. **no neighbor** {*ip-address* | *peer-group-name*} **transport** {**connection-mode** | **path-mtu-discovery**}
- 8. end
- 9. show ip bgp neighbors

#### **DETAILED STEPS**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		• Enter your password if prompted.
	Example:	
	Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	router bgp autonomous-system-number	Enters router configuration mode for the specified routing process.
	<pre>Example: Router(config)# router bgp 45000</pre>	
Step 4	<pre>address-family {ipv4 [mdt   multicast   unicast [vrf vrf-name]   vrf vrf-name]   vpnv4 [unicast]}</pre>	Enters address family configuration mode to configure BGP peers to accept address-family-specific configurations.
	,	• The example creates an IPv4 unicast address family session.
	Example:	
	Router(config-router)# address-family ipv4 unicast	
Step 5	<pre>neighbor {ip-address   peer-group-name} remote-as autonomous-system-number</pre>	Adds the IP address or peer group name of the neighbor in the specified autonomous system to the IPv4 multiprotocol BGP neighbor table of the local router.
	<pre>Example: Router(config-router-af)# neighbor 192.168.1.1 remote-as 45000</pre>	

	Command or Action	Purpose
Step 6	neighbor {ip-address   peer-group-name}	Activates the neighbor under the IPv4 address family.
	activate	• In this example, the neighbor 172.16.1.1 is activated.
	<pre>Example: Router(config-router-af)# neighbor 172.16.1.1 activate</pre>	
Step 7	<pre>no neighbor {ip-address   peer-group-name} transport {connection-mode   path-mtu-discovery}</pre>	Disables TCP path MTU discovery for a single BGP neighbor.
		• In this example, TCP path MTU discovery is disabled for the neighbor at 172.16.1.1.
	Example: Router(config-router-af)# no neighbor 172.16.1.1 transport path-mtu-discovery	
Step 8	end	Exits address family configuration mode and returns to privileged EXEC mode.
	<pre>Example: Router(config-router-af)# end</pre>	
Step 9	show ip bgp neighbors	(Optional) Displays information about the TCP and BGP connections to neighbors.
	Example: Router# show ip bgp neighbors	• In this example, the output from this command will not display that the neighbor has TCP path MTU discovery enabled.
		Note Only the syntax applicable to this task is used in this example. For more details, see the <i>Cisco IOS IP Routing: BGP Command Reference</i> .

#### **Examples**

The following sample output shows that TCP path MTU discovery has been disabled for BGP neighbor 172.16.1.1 but that it is still enabled for BGP neighbor 192.168.2.2. Two entries in the output—Transport(tcp) path-mtu-discovery is enabled and path mtu capable—show that TCP path MTU discovery is enabled.

```
Router# show ip bgp neighbors
```

```
BGP neighbor is 172.16.1.1, remote AS 45000, internal link
BGP version 4, remote router ID 172.17.1.99

.
.
. Address tracking is enabled, the RIB does have a route to 172.16.1.1
Address tracking requires at least a /24 route to the peer
Connections established 1; dropped 0
Last reset never
.
.
. SRTT: 165 ms, RTTO: 1172 ms, RTV: 1007 ms, KRTT: 0 ms
minRTT: 20 ms, maxRTT: 300 ms, ACK hold: 200 ms
Flags: higher precedence, retransmission timeout, nagle
.
```

## **Enabling TCP Path MTU Discovery Globally for All BGP Sessions**

Perform this task to enable TCP path MTU discovery for all BGP sessions. TCP path MTU discovery is enabled by default when you configure BGP sessions, but if this feature has been disabled, you can use this task to reenable it. To verify that TCP path MTU discovery is enabled, use the **show ip bgp neighbors** command.

#### **Prerequisites**

This task assumes that you have previously configured BGP neighbors with active TCP connections.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. router bgp autonomous-system-number
- 4. bgp transport path-mtu-discovery
- 5. end
- 6. show ip bgp neighbors

#### **DETAILED STEPS**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		Enter your password if prompted.
	Example: Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	router bgp autonomous-system-number	Enters router configuration mode to create or configure a BGP routing process.
	Example: Router(config)# router bgp 45000	
Step 4	bgp transport path-mtu-discovery	Enables TCP path MTU discovery for all BGP sessions.
	<pre>Example: Router(config-router)# bgp transport path-mtu-discovery</pre>	
Step 5	end	Exits router configuration mode and returns to privileged EXEC mode.
	<pre>Example: Router(config-router)# end</pre>	
Step 6	show ip bgp neighbors	(Optional) Displays information about the TCP and BGP connections to neighbors.
	Example: Router# show ip bgp neighbors	• In this example, the output from this command will show that all neighbors have TCP path MTU discovery enabled.
		Note Only the syntax applicable to this task is used in this example. For more details, see the <i>Cisco IOS IP Routing: BGP Command Reference</i> .

#### **Examples**

The following sample output from the **show ip bgp neighbors** command shows that TCP path MTU discovery is enabled for BGP neighbors. Two entries in the output—Transport(tcp) path-mtu-discovery is enabled and path mtu capable—show that TCP path MTU discovery is enabled.

```
Router# show ip bgp neighbors
```

```
BGP neighbor is 172.16.1.2, remote AS 45000, internal link
BGP version 4, remote router ID 172.16.1.99

.
.
.
For address family: IPv4 Unicast
BGP table version 5, neighbor version 5/0
.
```

```
Address tracking is enabled, the RIB does have a route to 172.16.1.2

Address tracking requires at least a /24 route to the peer

Connections established 3; dropped 2

Last reset 00:00:35, due to Router ID changed

Transport(tcp) path-mtu-discovery is enabled

.
.
.
SRTT: 146 ms, RTTO: 1283 ms, RTV: 1137 ms, KRTT: 0 ms

minRTT: 8 ms, maxRTT: 300 ms, ACK hold: 200 ms

Flags: higher precedence, retransmission timeout, nagle, path mtu capable
```

#### **Enabling TCP Path MTU Discovery for a Single BGP Neighbor**

Perform this task to establish a peering session with an external BGP (eBGP) neighbor and then enable TCP path MTU discovery for the BGP neighbor session. The **neighbor transport** command can be used in router configuration or address family configuration mode.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. router bgp autonomous-system-number
- 4. address-family {ipv4 [mdt | multicast | unicast [vrf vrf-name] | vrf vrf-name] | vpnv4 [unicast]}
- **5. neighbor** {ip-address | peer-group-name} **remote-as** autonomous-system-number
- **6. neighbor** {*ip-address* | *peer-group-name*} **activate**
- 7. neighbor {ip-address | peer-group-name} transport {connection-mode | path-mtu-discovery}
- 8. end
- **9. show ip bgp neighbors** [*ip-address*]

#### **DETAILED STEPS**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		Enter your password if prompted.
	Example: Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	router bgp autonomous-system-number	Enters router configuration mode for the specified routing process.
	Example: Router(config)# router bgp 45000	

	Command or Action	Purpose
Step 4	<pre>address-family {ipv4 [mdt   multicast   unicast [vrf vrf-name]   vrf vrf-name]   vpnv4 [unicast]}</pre>	Enters address family configuration mode to configure BGP peers to accept address-family-specific configurations.
	<pre>Example: Router(config-router)# address-family ipv4 unicast</pre>	The example creates an IPv4 unicast address family session.
Step 5	<pre>neighbor {ip-address   peer-group-name} remote-as autonomous-system-number</pre>	Adds the IP address or peer group name of the neighbor in the specified autonomous system to the IPv4 multiprotocol BGP neighbor table of the local router.
	<pre>Example: Router(config-router-af)# neighbor 192.168.2.2 remote-as 50000</pre>	
Step 6	neighbor {ip-address   peer-group-name}	Activates the neighbor under the IPv4 address family.
	activate	• In this example, the eBGP neighbor at 192.168.2.2 is activated.
	Example: Router(config-router-af)# neighbor 192.168.2.2 activate	
Step 7	<pre>neighbor {ip-address   peer-group-name} transport {connection-mode   path-mtu-discovery}</pre>	Enables TCP path MTU discovery for a single BGP neighbor.
		• In this example, TCP path MTU discovery is enabled for the eBGP neighbor at 192.168.2.2.
	Example: Router(config-router-af)# neighbor 192.168.2.2 transport path-mtu-discovery	
Step 8	end	Exits address family configuration mode and returns to privileged EXEC mode.
	<pre>Example: Router(config-router-af)# end</pre>	
Step 9	<pre>show ip bgp neighbors [ip-address]</pre>	(Optional) Displays information about the TCP and BGP connections to neighbors.
	Example: Router# show ip bgp neighbors 192.168.2.2	• In this example, the output from this command shows that the neighbor at 192.168.2.2 has TCP path MTU discovery enabled.
		Note Only the syntax applicable to this task is used in this example. For more details, see the <i>Cisco IOS IP Routing: BGP Command Reference</i> .

#### **Examples**

The following sample output from the **show ip bgp neighbors** command shows that TCP path MTU discovery is enabled for the BGP neighbor at 192.168.2.2. Two entries in the output—Transport(tcp) path-mtu-discovery is enabled and path-mtu capable—show that TCP path MTU discovery is enabled.

Router# show ip bgp neighbors 192.168.2.2

BGP neighbor is 192.168.2.2, remote AS 50000, external link BGP version 4, remote router ID 10.2.2.99

```
For address family: IPv4 Unicast
BGP table version 4, neighbor version 4/0

.

Address tracking is enabled, the RIB does have a route to 192.168.2.2
Address tracking requires at least a /24 route to the peer
Connections established 2; dropped 1
Last reset 00:05:11, due to User reset
Transport(tcp) path-mtu-discovery is enabled
.

SRTT: 210 ms, RTTO: 904 ms, RTV: 694 ms, KRTT: 0 ms
minRTT: 20 ms, maxRTT: 300 ms, ACK hold: 200 ms
Flags: higher precedence, retransmission timeout, nagle, path mtu capable
```

# **Configuration Examples for BGP Neighbor Session Options**

This section contains the following configuration examples:

- Configuring Fast Session Deactivation for a BGP Neighbor: Example, page 30
- Configuring Selective Address Tracking for Fast Session Deactivation: Example, page 31
- Restart Session After Max-Prefix Limit Configuration: Example, page 31
- Configuring Dual-AS Peering for Network Migration: Examples, page 31
- Configuring the TTL-Security Check: Example, page 32
- Configuring BGP Support for TCP Path MTU Discovery per Session: Examples, page 33

## Configuring Fast Session Deactivation for a BGP Neighbor: Example

In the following example, the BGP routing process is configured on Router A and Router B to monitor and use fast peering session deactivation for the neighbor session between the two routers. Although fast peering session deactivation is not required at both routers in the neighbor session, it will help the BGP networks in both autonomous systems to converge faster if the neighbor session is deactivated.

#### **Router A**

```
router bgp 40000
neighbor 192.168.1.1 remote-as 45000
neighbor 192.168.1.1 fall-over
end
```

#### **Router B**

```
router bgp 45000
neighbor 192.168.1.2 remote-as 40000
neighbor 192.168.1.2 fall-over
end
```

# **Configuring Selective Address Tracking for Fast Session Deactivation: Example**

The following example shows how to configure the BGP peering session to be reset if a route with a prefix of /28 or a more specific route to a peer destination is no longer available:

```
router bgp 45000
neighbor 192.168.1.2 remote-as 40000
neighbor 192.168.1.2 fall-over route-map CHECK-NBR
exit
ip prefix-list FILTER28 seq 5 permit 0.0.0.0/0 ge 28
route-map CHECK-NBR permit 10
match ip address prefix-list FILTER28
end
```

## **Restart Session After Max-Prefix Limit Configuration: Example**

The following example sets the maximum number of prefixes allowed from the neighbor at 192.168.6.6 to 2000 and configures the router to reestablish a peering session after 30 minutes if one has been disabled:

```
router bgp 101
network 172.16.0.0
neighbor 192.168.6.6 maximum-prefix 2000 restart 30
```

## **Configuring Dual-AS Peering for Network Migration: Examples**

The following examples show how to configure and verify this feature:

- Dual-AS Configuration: Example, page 31
- Dual-AS Confederation Configuration: Example, page 32
- Replace-AS Configuration: Example, page 32

## **Dual-AS Configuration: Example**

The following examples shows how this feature is used to merge two autonomous systems without interrupting peering arrangements with the customer network. The **neighbor local-as** command is configured to allow Router 1 to maintain peering sessions through autonomous-system 40000 and autonomous-system 45000. Router 2 is a customer router that runs a BGP routing process in autonomous system 50000 and is configured to peer with autonomous-system 45000:

#### Router 1 in Autonomous System 40000 (Provider Network)

```
interface Serial3/0/0
  ip address 10.3.3.11 255.255.255.0
!
router bgp 40000
  no synchronization
  bgp router-id 10.0.0.11
  neighbor 10.3.3.33 remote-as 50000
  neighbor 10.3.3.33 local-as 45000 no-prepend replace-as dual-as
```

#### Router 1 in Autonomous System 45000 (Provider Network)

interface Serial3/0/0

```
ip address 10.3.3.11 255.255.255.0
!
router bgp 45000
bgp router-id 10.0.0.11
neighbor 10.3.3.33 remote-as 50000
```

#### Router 2 in Autonomous System 50000 (Customer Network)

```
interface Serial3/0/0
  ip address 10.3.3.33 255.255.255.0
!
router bgp 50000
  bgp router-id 10.0.0.3
  neighbor 10.3.3.11 remote-as 45000
```

After the transition is complete, the configuration on router 50000 can be updated to peer with autonomous-system 40000 during a normal maintenance window or during other scheduled downtime.

```
neighbor 10.3.3.11 remote-as 100
```

#### **Dual-AS Confederation Configuration: Example**

The following example can be used in place of the Router 1 configuration in the previous example. The only difference between these configurations is that Router 1 is configured to be part of a confederation.

```
interface Serial3/0/0
  ip address 10.3.3.11 255.255.255.0
!
router bgp 65534
  no synchronization
  bgp confederation identifier 100
  bgp router-id 10.0.0.11
  neighbor 10.3.3.33 remote-as 50000
  neighbor 10.3.3.33 local-as 45000 no-prepend replace-as dual-as
```

## **Replace-AS Configuration: Example**

The following example strips private autonomous-system 64512 from outbound routing updates for the 10.3.3.33 neighbor and replaces it with autonomous-system 50000:

```
router bgp 64512 neighbor 10.3.3.33 local-as 50000 no-prepend replace-as
```

## **Configuring the TTL-Security Check: Example**

The example configurations in this section show how to configure the BGP Support for TTL Security Check feature.

The following example uses the **trace** command to determine the hop count to an eBGP peer. The hop count number is displayed in the output for each networking device that IP packets traverse to reach the specified neighbor. In the example below, the hop count for the 10.1.1.1 neighbor is 1.

```
Router# trace ip 10.1.1.1

Type escape sequence to abort.

Tracing the route to 10.1.1.1

1 10.1.1.1 0 msec * 0 msec
```

The following example sets the hop count to 2 for the 10.1.1.1 neighbor. Because the *hop-count* argument is set to 2, BGP will only accept IP packets with a TTL count in the header that is equal to or greater than 253.

```
Router(config-router)# neighbor 10.1.1.1 ttl-security hops 2
```

## Configuring BGP Support for TCP Path MTU Discovery per Session: Examples

This section contains the following configuration examples:

- Disabling TCP Path MTU Discovery Globally for All BGP Sessions: Example, page 33
- Disabling TCP Path MTU Discovery for a Single BGP Neighbor: Example, page 33
- Enabling TCP Path MTU Discovery Globally for All BGP Sessions: Example, page 33
- Enabling TCP Path MTU Discovery for a Single BGP Neighbor: Example, page 34

#### Disabling TCP Path MTU Discovery Globally for All BGP Sessions: Example

The following example shows how to disable TCP path MTU discovery for all BGP neighbor sessions. Use the **show ip bgp neighbors** command to verify that TCP path MTU discovery has been disabled.

```
enable
configure terminal
router bgp 45000
no bgp transport path-mtu-discovery
end
show ip bgp neighbors
```

#### Disabling TCP Path MTU Discovery for a Single BGP Neighbor: Example

The following example shows how to disable TCP path MTU discovery for an external BGP (eBGP) neighbor at 192.168.2.2:

```
enable
configure terminal
router bgp 45000
neighbor 192.168.2.2 remote-as 50000
neighbor 192.168.2.2 activate
no neighbor 192.168.2.2 transport path-mtu-discovery
end
show ip bgp neighbors 192.168.2.2
```

## **Enabling TCP Path MTU Discovery Globally for All BGP Sessions: Example**

The following example shows how to enable TCP path MTU discovery for all BGP neighbor sessions. Use the **show ip bgp neighbors** command to verify that TCP path MTU discovery has been enabled.

```
enable
configure terminal
router bgp 45000
bgp transport path-mtu-discovery
end
show ip bgp neighbors
```

#### **Enabling TCP Path MTU Discovery for a Single BGP Neighbor: Example**

The following example shows how to enable TCP path MTU discovery for an external BGP (eBGP) neighbor at 192.168.2.2. Use the **show ip bgp neighbors** command to verify that TCP path MTU discovery has been enabled.

```
enable
configure terminal
router bgp 45000
neighbor 192.168.2.2 remote-as 50000
neighbor 192.168.2.2 activate
neighbor 192.168.2.2 transport path-mtu-discovery
end
show ip bgp neighbors 192.168.2.2
```

## Where to Go Next

- If you want to connect to an external service provider and use other external BGP features, see the "Connecting to a Service Provider Using External BGP" module.
- If you want to configure some internal BGP features, see the "Configuring Internal BGP Features" chapter of the BGP section of the Cisco IOS XE IP Routing: BGP Configuration Guide, Release 2.
- If you want to configure some advanced BGP features including BGP next-hop address tracking and route dampening, see the "Configuring Advanced BGP Features" module.

## **Additional References**

The following sections provide references related to configuring BGP neighbor session options.

## **Related Documents**

Related Topic	Document Title
BGP commands: complete command syntax, command mode, defaults, command history, usage guidelines, and examples	Cisco IOS IP Routing: BGP Command Reference
Overview of Cisco BGP conceptual information with links to all the individual BGP modules	"Cisco BGP Overview" module
Conceptual and configuration details for basic BGP tasks	"Configuring a Basic BGP Network" module
Conceptual and configuration details for advanced BGP tasks	"Configuring Advanced BGP Features" module
Cisco IOS master command list, all releases	Cisco IOS Master Command List, All Releases

## **Standards**

Standard	Title
MDT SAFI	MDT SAFI

## **MIBs**

MIB	MIBs Link
CISCO-BGP4-MIB	To locate and download MIBs for selected platforms, Cisco IOS XE software releases, and feature sets, use Cisco MIB Locator found at the following URL:
	http://www.cisco.com/go/mibs

## **RFCs**

RFC	Title
RFC 1191	Path MTU Discovery
RFC 1771	A Border Gateway Protocol 4 (BGP-4)
RFC 1772	Application of the Border Gateway Protocol in the Internet
RFC 1773	Experience with the BGP Protocol
RFC 1774	BGP-4 Protocol Analysis
RFC 1930	Guidelines for Creation, Selection, and Registration of an Autonomous System (AS)
RFC 2858	Multiprotocol Extensions for BGP-4
RFC 2918	Route Refresh Capability for BGP-4

## **Technical Assistance**

Description	Link
The Cisco Support website provides extensive online resources, including documentation and tools for troubleshooting and resolving technical issues with Cisco products and technologies.	http://www.cisco.com/techsupport
To receive security and technical information about your products, you can subscribe to various services, such as the Product Alert Tool (accessed from Field Notices), the Cisco Technical Services Newsletter, and Really Simple Syndication (RSS) Feeds.	
Access to most tools on the Cisco Support website requires a Cisco.com user ID and password.	

# Feature Information for Configuring BGP Neighbor Session Options

Table 1 lists the features in this module and provides links to specific configuration information.

Use Cisco Feature Navigator to find information about platform support and software image support. Cisco Feature Navigator enables you to determine which Cisco IOS XE software images support a specific software release, feature set, or platform. To access Cisco Feature Navigator, go to <a href="http://www.cisco.com/go/cfn">http://www.cisco.com/go/cfn</a>. An account on Cisco.com is not required.



Table 1 lists only the Cisco IOS XE software release that introduced support for a given feature in a given Cisco IOS XE software release train. Unless noted otherwise, subsequent releases of that Cisco IOS XE software release train also support that feature.

Table 1 Feature Information for Configuring BGP Neighbor Session Options

Feature Name	Releases	Feature Information
BGP Hide Local-Autonomous System	Cisco IOS XE Release 2.1	This feature was introduced on the Cisco ASR 1000 Series Routers.
BGP Restart Session After Max-Prefix Limit	Cisco IOS XE Release 2.1	The BGP Restart Session After Max-Prefix Limit feature enhances the capabilities of the <b>neighbor maximum-prefix</b> command with the introduction of the <b>restart</b> keyword. This enhancement allows the network operator to configure the time interval at which a peering session is reestablished by a router when the number of prefixes that have been received from a peer has exceeded the maximum prefix limit.
		This feature was introduced on the Cisco ASR 1000 Series Aggregation Services Routers.
		The following sections provide information about this feature:
		• BGP Neighbor Session Restart After the Max-Prefix Limit Is Reached, page 3
		<ul> <li>Configuring a Router to Reestablish a Neighbor Session After the Maximum Prefix Limit Has Been Exceeded, page 11</li> </ul>
		• Restart Session After Max-Prefix Limit Configuration: Example, page 31
		The following commands were modified <b>neighbor maximum-prefix</b> , <b>show ip bgp neighbors</b> .

Table 1 Feature Information for Configuring BGP Neighbor Session Options (continued)

Feature Name	Releases	Feature Information
BGP Selective Address Tracking	Cisco IOS XE Release 2.1	The BGP Selective Address Tracking feature introduced the use of a route map for next-hop route filtering and fast session deactivation. Selective next-hop filtering uses a route map to selectively define routes to help resolve the BGP next hop, or a route map can be used to determine if a peering session with a BGP neighbor should be reset when a route to the BGP peer changes.
		This feature was introduced on the Cisco ASR 1000 Series Routers.
		The following sections provide information about this feature:
		• Selective Address Tracking for BGP Fast Session Deactivation, page 3
		<ul> <li>Configuring Selective Address Tracking for Fast Session Deactivation, page 9</li> </ul>
		<ul> <li>Configuring Selective Address Tracking for Fast Session Deactivation: Example, page 31</li> </ul>
		The following commands were modified by this feature: <b>bgp nexthop</b> , <b>neighbor fall-over</b> .
BGP Support for Dual AS Configuration for Network AS Migrations	Cisco IOS XE Release 2.1	The BGP Support for Dual AS Configuration for Network AS Migrations feature extends the functionality of the BGP Local-AS feature by providing additional autonomous-system path customization configuration options. The configuration of this feature is transparent to customer peering sessions, allowing the provider to merge two autonomous-systems without interrupting customer peering arrangements. Customer peering sessions can later be updated during a maintenance window or during other scheduled downtime.
		This feature was introduced on the Cisco ASR 1000 Series Routers.
		The following sections provide information about this feature:
		BGP Network Autonomous System Migration, page 4
		• Configuring Dual-AS Peering for Network Migration, page 15
		• Configuring Dual-AS Peering for Network Migration: Examples, page 31
		The following command was modified by this feature: <b>neighbor local-as</b> .

Table 1 Feature Information for Configuring BGP Neighbor Session Options (continued)

Feature Name	Releases	Feature Information
BGP Support for Fast Peering Session Deactivation	Cisco IOS XE Release 2.1	The BGP Support for Fast Peering Session Deactivation feature introduced an event driven notification system that allows a Border Gateway Protocol (BGP) process to monitor BGP peering sessions on a per-neighbor basis. This feature improves the response time of BGP to adjacency changes by allowing BGP to detect an adjacency change and deactivate the terminated session in between standard BGP scanning intervals. Enabling this feature improves overall BGP convergence.
		This feature was introduced on the Cisco ASR 1000 Series Routers.
		The following sections provide information about this feature:
		• BGP Fast Peering Session Deactivation, page 3
		<ul> <li>Configuring Fast Session Deactivation for a BGP Neighbor, page 8</li> </ul>
		• Configuring Fast Session Deactivation for a BGP Neighbor: Example, page 30
		The following command was modified by this feature: neighbor fall-over

Table 1 Feature Information for Configuring BGP Neighbor Session Options (continued)

Feature Name	Releases	Feature Information
BGP Support for TCP Path MTU Discovery per Session	Cisco IOS XE Release 2.1	Border Gateway Protocol (BGP) support for Transmission Control Protocol (TCP) path maximum transmission unit (MTU) discovery introduced the ability for BGP to automatically discover the best TCP path MTU for each BGP session. The TCP path MTU is enabled by default for all BGP neighbor sessions, but you can disable, and subsequently enable, the TCP path MTU globally for all BGP sessions or for an individual BGP neighbor session.
		This feature was introduced on the Cisco ASR 1000 Series Routers.
		The following sections provide information about this feature:
		• BGP Support for TCP Path MTU Discovery per Session, page 6
		• Configuring BGP Support for TCP Path MTU Discovery per Session, page 21
		<ul> <li>Configuring BGP Support for TCP Path MTU Discovery per Session: Examples, page 33</li> </ul>
		The following commands were introduced or modified by this feature: <b>bgp transport</b> , <b>neighbor transport</b> , <b>show ip bgp neighbors</b> .
BGP Support for TTL Security Check	Cisco IOS XE Release 2.1	The BGP Support for TTL Security Check feature introduced a lightweight security mechanism to protect external Border Gateway Protocol (eBGP) peering sessions from CPU utilization-based attacks using forged IP packets. Enabling this feature prevents attempts to hijack the eBGP peering session by a host on a network segment that is not part of either BGP network or by a host on a network segment that is not between the eBGP peers.
		This feature was introduced on the Cisco ASR 1000 Series Routers.
		The following sections provide information about this feature:
		• TTL Security Check for BGP Neighbor Sessions, page 5
		Configuring the TTL Security Check for BGP Neighbor Sessions, page 17
		• Configuring the TTL-Security Check: Example, page 32
		The following commands were new or modified by this feature: <b>neighbor ttl-security</b> , <b>show ip bgp neighbors</b> .

CCDE, CCENT, CCSI, Cisco Eos, Cisco HealthPresence, Cisco IronPort, the Cisco logo, Cisco Nurse Connect, Cisco Pulse, Cisco SensorBase, Cisco StackPower, Cisco StadiumVision, Cisco TelePresence, Cisco Unified Computing System, Cisco WebEx, DCE, Flip Channels, Flip for Good, Flip Mino, Flipshare (Design), Flip Ultra, Flip Video, Flip Video (Design), Instant Broadband, and Welcome to the Human Network are trademarks; Changing the Way We Work, Live, Play, and Learn, Cisco Capital, Cisco Capital (Design), Cisco:Financed (Stylized), Cisco Store, Flip Gift Card, and One Million Acts of Green are service marks; and Access Registrar, Aironet, AllTouch, AsyncOS, Bringing the Meeting To You, Catalyst, CCDA, CCDP, CCIE, CCIP, CCNA, CCNP, CCSP, CCVP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IOS, Cisco Lumin, Cisco Nexus, Cisco Press, Cisco Systems, Cisco Systems Capital, the Cisco Systems logo, Cisco Unity, Collaboration Without Limitation, Continuum, EtherFast, EtherSwitch, Event Center, Explorer, Follow Me Browsing, GainMaker, iLYNX, IOS, iPhone, IronPort, the IronPort logo, Laser Link, LightStream, Linksys, MeetingPlace, MeetingPlace Chime Sound, MGX, Networkers, Networking Academy, PCNow, PIX, PowerKEY, PowerPanels, PowerTV, PowerTV (Design), PowerVu, Prisma, ProConnect, ROSA, SenderBase, SMARTnet, Spectrum Expert, StackWise, WebEx, and the WebEx logo are registered trademarks of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries.

All other trademarks mentioned in this document or website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0910R)

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, and figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

© 2005-2009 Cisco Systems, Inc. All rights reserved.



# **Configuring Internal BGP Features**

First Published: 2005

Last Updated: November 25, 2009

This document describes how to configure internal Border Gateway Protocol (BGP) features. BGP is an interdomain routing protocol that is designed to provide loop-free routing between organizations.

# **Finding Feature Information**

For the latest feature information and caveats, see the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the "Feature Information for Configuring Internal BGP Features" section on page 15.

Use Cisco Feature Navigator to find information about platform support and Cisco IOS XE software image support. To access Cisco Feature Navigator, go to <a href="http://www.cisco.com/go/cfn">http://www.cisco.com/go/cfn</a>. An account on Cisco.com is not required.

# **Configuring Internal BGP Features**

The following sections contain optional internal BGP (iBGP) configuration tasks:

- Configuring a Routing Domain Confederation, page 2 (Optional)
- Configuring a Route Reflector, page 2 (Optional)
- Adjusting BGP Timers, page 6 (Optional)
- Configuring the Router to Consider a Missing MED as Worst Path, page 7 (Optional)
- Configuring the Router to Consider the MED to Choose a Path from Subautonomous System Paths, page 7 (Optional)
- Configuring the Router to Use the MED to Choose a Path in a Confederation, page 7 (Optional)
- Configuring Route Dampening, page 8 (Optional)



For information on configuring features that apply to multiple IP routing protocols (such as redistributing routing information), see the Configuring IP Routing Protocol-Independent Features" module.

## **Configuring a Routing Domain Confederation**

One way to reduce the internal BGP (iBGP) mesh is to divide an autonomous system into multiple subautonomous systems and group them into a single confederation. To the outside world, the confederation looks like a single autonomous system. Each autonomous system is fully meshed within itself, and has a few connections to other autonomous systems in the same confederation. Even though the peers in different autonomous systems have external BGP (eBGP) sessions, they exchange routing information as if they were iBGP peers. Specifically, the next hop, Multi\_Exit\_Discriminator (MED) attribute, and local preference information is preserved. This feature allows the you to retain a single Interior Gateway Protocol (IGP) for all of the autonomous systems.

To configure a BGP confederation, you must specify a confederation identifier. To the outside world, the group of autonomous systems will look like a single autonomous system with the confederation identifier as the autonomous system number. To configure a BGP confederation identifier, use the following command in router configuration mode:

Command	Purpose
Router(config-router)# bgp confederation identifier as-number	Configures a BGP confederation.

In order to treat the neighbors from other autonomous systems within the confederation as special eBGP peers, use the following command in router configuration mode:

Command	Purpose
	Specifies the autonomous systems that belong to the confederation.

For an alternative way to reduce the iBGP mesh, see the next section, "Configuring a Route Reflector."

## **Configuring a Route Reflector**

BGP requires that all iBGP speakers be fully meshed. However, this requirement does not scale well when there are many iBGP speakers. Instead of configuring a confederation, another way to reduce the iBGP mesh is to configure a *route reflector*.

Figure 1 illustrates a simple iBGP configuration with three iBGP speakers (Routers A, B, and C). Without route reflectors, when Router A receives a route from an external neighbor, it must advertise it to both routers B and C. Routers B and C do not readvertise the iBGP learned route to other iBGP speakers because the routers do not pass on routes learned from internal neighbors to other internal neighbors, thus preventing a routing information loop.

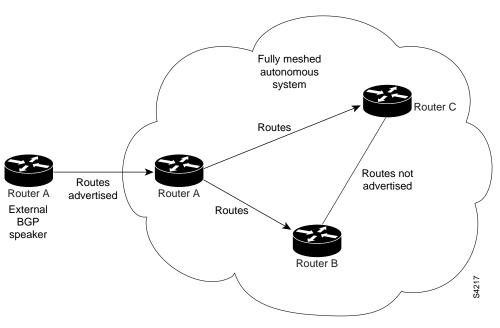


Figure 1 Three Fully Meshed iBGP Speakers

With route reflectors, all iBGP speakers need not be fully meshed because there is a method to pass learned routes to neighbors. In this model, an iBGP peer is configured to be a route reflector responsible for passing iBGP learned routes to a set of iBGP neighbors. In Figure 2, Router B is configured as a route reflector. When the route reflector receives routes advertised from Router A, it advertises them to Router C, and vice versa. This scheme eliminates the need for the iBGP session between Routers A and C.

Router A
External
BGP
speaker

Router B

Figure 2 Simple BGP Model with a Route Reflector

The internal peers of the route reflector are divided into two groups: client peers and all the other routers in the autonomous system (nonclient peers). A route reflector reflects routes between these two groups. The route reflector and its client peers form a *cluster*. The nonclient peers must be fully meshed with each other, but the client peers need not be fully meshed. The clients in the cluster do not communicate with iBGP speakers outside their cluster.

Figure 3 illustrates a more complex route reflector scheme. Router A is the route reflector in a cluster with routers B, C, and D. Routers E, F, and G are fully meshed, nonclient routers.

Partially meshed autonomous system Nonclient Router G Route reflector Nonclient Routes Router Router A Router A advertised External **BGP** speaker Nonclient Cluster Router E Router B Router D Client Client Client

Figure 3 More Complex BGP Route Reflector Model

When the route reflector receives an advertised route, depending on the neighbor, it takes the following actions:

- A route from an external BGP speaker is advertised to all clients and nonclient peers.
- A route from a nonclient peer is advertised to all clients.
- A route from a client is advertised to all clients and nonclient peers. Hence, the clients need not be fully meshed.

To configure a route reflector and its clients, use the following command in router configuration mode:

Command	Purpose
Router(config-router)# neighbor {ip-address   peer-group-name} route-reflector-client	Configures the local router as a BGP route reflector and the specified neighbor as a client.

Along with route reflector-aware BGP speakers, it is possible to have BGP speakers that do not understand the concept of route reflectors. They can be members of either client or nonclient groups allowing an easy and gradual migration from the old BGP model to the route reflector model. Initially, you could create a single cluster with a route reflector and a few clients. All the other iBGP speakers could be nonclient peers to the route reflector and then more clusters could be created gradually.

An autonomous system can have multiple route reflectors. A route reflector treats other route reflectors just like other iBGP speakers. A route reflector can be configured to have other route reflectors in a client group or nonclient group. In a simple configuration, the backbone could be divided into many clusters. Each route reflector would be configured with other route reflectors as nonclient peers (thus, all the route reflectors will be fully meshed). The clients are configured to maintain iBGP sessions with only the route reflector in their cluster.

Usually a cluster of clients will have a single route reflector. In that case, the cluster is identified by the router ID of the route reflector. To increase redundancy and avoid a single point of failure, a cluster might have more than one route reflector. In this case, all route reflectors in the cluster must be configured with the 4-byte cluster ID so that a route reflector can recognize updates from route reflectors in the same cluster. All the route reflectors serving a cluster should be fully meshed and all of them should have identical sets of client and nonclient peers.

If the cluster has more than one route reflector, configure the cluster ID by using the following command in router configuration mode:

Command	Purpose
Router(config-router)# bgp cluster-id cluster-id	Configures the cluster ID.

Use the **show ip bgp** command to display the originator ID and the cluster-list attributes.

By default, the clients of a route reflector are not required to be fully meshed and the routes from a client are reflected to other clients. However, if the clients are fully meshed, the route reflector need not reflect routes to clients.

To disable client-to-client route reflection, use the **no bgp client-to-client reflection** command in router configuration mode:

Command	Purpose
Router(config-router)# no bgp client-to-client reflection	Disables client-to-client route reflection.

As the iBGP learned routes are reflected, routing information may loop. The route reflector model has the following mechanisms to avoid routing loops:

- Originator ID is an optional, nontransitive BGP attribute. It is a 4-byte attribute created by a route reflector. The attribute carries the router ID of the originator of the route in the local autonomous system. Therefore, if a misconfiguration causes routing information to come back to the originator, the information is ignored.
- Cluster-list is an optional, nontransitive BGP attribute. It is a sequence of cluster IDs that the route has passed. When a route reflector reflects a route from its clients to nonclient peers, and vice versa, it appends the local cluster ID to the cluster list. If the cluster list is empty, a new cluster list is created. Using this attribute, a route reflector can identify if routing information is looped back to the same cluster due to misconfiguration. If the local cluster ID is found in the cluster list, the advertisement is ignored.

• The use of **set** clauses in outbound route maps can modify attributes and possibly create routing loops. To avoid this behavior, **set** clauses of outbound route maps are ignored for routes reflected to iBGP peers.

#### **BGP VPLS Autodiscovery Support on Route Reflector**

In Cisco IOS XE Release 2.5, BGP VPLS Autodiscovery Support on Route Reflector was introduced. On the ASR1000, BGP Route Reflector was enhanced to be able to reflect BGP VPLS prefixes without having VPLS explicitly configured on the route reflector. The route reflector reflects the VPLS prefixes to other provider edge (PE) routers so that the PEs do not need to have a full mesh of BGP sessions. The network administrator configures only the BGP VPLS address family on the route reflector.

For an example of a route reflector configuration that can reflect VPLS prefixes, see the "BGP VPLS Autodiscovery Support on Route Reflector Example" section on page 12.

## **Adjusting BGP Timers**

BGP uses certain timers to control periodic activities such as the sending of keepalive messages and the interval after not receiving a keepalive message after which the Cisco IOS XE software declares a peer dead. By default, the keepalive timer is 60 seconds, and the hold-time timer is 180 seconds. You can adjust these timers. When a connection is started, BGP will negotiate the hold time with the neighbor. The smaller of the two hold times will be chosen. The keepalive timer is then set based on the negotiated hold time and the configured keepalive time.

To adjust BGP timers for all neighbors, use the following command in router configuration mode:

Command	Purpose
Router(config-router)# timers bgp keepalive holdtime	Adjusts BGP timers for all neighbors.

To adjust BGP keepalive and hold-time timers for a specific neighbor, use the following command in router configuration mode:

Command	Purpose
Router(config-router)# neighbor [ip-address   peer-group-name] timers keepalive holdtime	Sets the keepalive and hold-time timers (in seconds) for the specified peer or peer group.



The timers configured for a specific neighbor or peer group override the timers configured for all BGP neighbors using the **timers bgp** router configuration command.

To clear the timers for a BGP neighbor or peer group, use the **no** form of the **neighbor timers** command.

## **Configuring the Router to Consider a Missing MED as Worst Path**

To configure the router to consider a path with a missing MED attribute as the worst path, use the following command in router configuration mode:

Command	Purpose
missing-as-worst	Configures the router to consider a missing MED as having a value of infinity, making the path without a MED value the least desirable path.

# Configuring the Router to Consider the MED to Choose a Path from Subautonomous System Paths

To configure the router to consider the MED value in choosing a path, use the following command in router configuration mode:

Command	Purpose
Router(config-router)# bgp bestpath med confed	Configures the router to consider the MED in choosing a path from among those advertised by different subautonomous systems within a confederation.

The comparison between MEDs is made only if there are no external autonomous systems in the path (an external autonomous system is an autonomous system that is not within the confederation). If there is an external autonomous system in the path, then the external MED is passed transparently through the confederation, and the comparison is not made.

The following example compares route A with these paths:

```
path= 65000 65004, med=2
path= 65001 65004, med=3
path= 65002 65004, med=4
path= 65003 1, med=1
```

In this case, path 1 would be chosen if the **bgp bestpath med confed router configuration** command is enabled. The fourth path has a lower MED, but it is not involved in the MED comparison because there is an external autonomous system is in this path.

# Configuring the Router to Use the MED to Choose a Path in a Confederation

To configure the router to use the MED to choose the best path from among paths advertised by a single subautonomous system within a confederation, use the following command in router configuration mode:

Command	Purpose
Router(config-router)# bgp deterministic med	Configures the router to compare the MED variable when choosing among routes advertised by different peers in the same autonomous system.



If the **bgp always-compare-med** router configuration command is enabled, all paths are fully comparable, including those from other autonomous systems in the confederation, even if the **bgp deterministic med** command is also enabled.

## **Configuring Route Dampening**

Route dampening is a BGP feature designed to minimize the propagation of flapping routes across an internetwork. A route is considered to be flapping when its availability alternates repeatedly.

For example, consider a network with three BGP autonomous systems: autonomous system 1, autonomous system 2, and autonomous system 3. Suppose the route to network A in autonomous system 1 flaps (it becomes unavailable). Under circumstances without route dampening, the eBGP neighbor of autonomous system 1 to autonomous system 2 sends a withdraw message to autonomous system 2. The border router in autonomous system 2, in turn, propagates the withdraw message to autonomous system 3. When the route to network A reappears, autonomous system 1 sends an advertisement message to autonomous system 2, which sends it to autonomous system 3. If the route to network A repeatedly becomes unavailable, then available, many withdrawal and advertisement messages are sent. This is a problem in an internetwork connected to the Internet because a route flap in the Internet backbone usually involves many routes.



No penalty is applied to a BGP peer reset when route dampening is enabled. Although the reset withdraws the route, no penalty is applied in this instance, even if route flap dampening is enabled.

#### **Minimizing Flapping**

The route dampening feature minimizes the flapping problem as follows. Suppose again that the route to network A flaps. The router in autonomous system 2 (where route dampening is enabled) assigns network A a penalty of 1000 and moves it to history state. The router in autonomous system 2 continues to advertise the status of the route to neighbors. The penalties are cumulative. When the route flaps so often that the penalty exceeds a configurable suppress limit, the router stops advertising the route to network A, regardless of how many times it flaps. Thus, the route is dampened.

The penalty placed on network A is decayed until the reuse limit is reached, upon which the route is once again advertised. At half of the reuse limit, the dampening information for the route to network A is removed.

## **Understanding Route Dampening Terms**

The following terms are used when describing route dampening:

- Flap—A route whose availability alternates repeatedly.
- History state—After a route flaps once, it is assigned a penalty and put into history state, meaning the router does not have the best path, based on historical information.
- Penalty—Each time a route flaps, the router configured for route dampening in another autonomous
  system assigns the route a penalty of 1000. Penalties are cumulative. The penalty for the route is
  stored in the BGP routing table until the penalty exceeds the suppress limit. At that point, the route
  state changes from history to damp.

- Damp state—In this state, the route has flapped so often that the router will not advertise this route to BGP neighbors.
- Suppress limit—A route is suppressed when its penalty exceeds this limit. The default value is 2000.
- Half-life—Once the route has been assigned a penalty, the penalty is decreased by half after the half-life period (which is 15 minutes by default). The process of reducing the penalty happens every 5 seconds.
- Reuse limit—As the penalty for a flapping route decreases and falls below this reuse limit, the route is unsuppressed. That is, the route is added back to the BGP table and once again used for forwarding. The default reuse limit is 750. The process of unsuppressing routes occurs at 10-second increments. Every 10 seconds, the router finds out which routes are now unsuppressed and advertises them to the world.
- Maximum suppress limit—This value is the maximum amount of time a route can be suppressed. The default value is four times the half-life.

The routes external to an autonomous system learned via iBGP are not dampened. This policy prevent the iBGP peers from having a higher penalty for routes external to the autonomous system.

#### **Enabling Route Dampening**

To enable BGP route dampening, use the following command in address family or router configuration mode:

Command	Purpose
Router(config-router)# bgp dampening	Enables BGP route dampening.

To change the default values of various dampening factors, use the following command in address family or router configuration mode:

Command	Purpose
Router(config-router)# bgp dampening half-life reuse	Changes the default values of route dampening factors.
<pre>suppress max-suppress [route-map map-name]</pre>	

## **Monitoring and Maintaining BGP Route Dampening**

You can monitor the flaps of all the paths that are flapping. The statistics will be deleted once the route is not suppressed and is stable for at least one half-life. To display flap statistics, use the following commands as needed:

Command	Purpose
Router# show ip bgp flap-statistics	Displays BGP flap statistics for all paths.
Router# show ip bgp flap-statistics regexp regexp	Displays BGP flap statistics for all paths that match the regular expression.
Router# show ip bgp flap-statistics filter-list access-list	Displays BGP flap statistics for all paths that pass the filter.

Command	Purpose
Router# show ip bgp flap-statistics ip-address mask	Displays BGP flap statistics for a single entry.
Router# show ip bgp flap-statistics ip-address mask longer-prefix	Displays BGP flap statistics for more specific entries.

To clear BGP flap statistics (thus making it less likely that the route will be dampened), use the following commands as needed:

Command	Purpose
Router# clear ip bgp flap-statistics	Clears BGP flap statistics for all routes.
Router# clear ip bgp flap-statistics regexp regexp	Clears BGP flap statistics for all paths that match the regular expression.
Router# clear ip bgp flap-statistics filter-list list	Clears BGP flap statistics for all paths that pass the filter.
Router# clear ip bgp flap-statistics ip-address mask	Clears BGP flap statistics for a single entry.
Router# clear ip bgp ip-address flap-statistics	Clears BGP flap statistics for all paths from a neighbor.



The flap statistics for a route are also cleared when a BGP peer is reset. Although the reset withdraws the route, there is no penalty applied in this instance, even if route flap dampening is enabled.

Once a route is dampened, you can display BGP route dampening information, including the time remaining before the dampened routes will be unsuppressed. To display the information, use the following command:

Command	Purpose
Router# show ip bgp dampened-paths	Displays the dampened routes, including the time remaining before they will be unsuppressed.

You can clear BGP route dampening information and unsuppress any suppressed routes by using the following command:

Command	Purpose
	Clears route dampening information and unsuppresses the suppressed routes.

# **Internal BGP Feature Configuration Examples**

The following sections provide internal BGP feature configuration examples:

- BGP Confederation Configurations with Route Maps: Example, page 11
- BGP Confederation: Examples, page 11
- BGP VPLS Autodiscovery Support on Route Reflector Example, page 12

## **BGP Confederation Configurations with Route Maps: Example**

This section contains an example of the use of a BGP confederation configuration that includes BGP communities and route maps. For more examples of how to configure a BGP confederation, see the section "BGP Confederation: Examples" in this chapter.

This example shows how BGP community attributes are used with a BGP confederation configuration to filter routes.

In this example, the route map named *set-community* is applied to the outbound updates to neighbor 172.16.232.50 and the local-as community attribute is used to filter the routes. The routes that pass access list 1 have the special community attribute value local-as. The remaining routes are advertised normally. This special community value automatically prevents the advertisement of those routes by the BGP speakers outside autonomous system 200.

```
router bgp 65000
network 10.0.1.0 route-map set-community
bgp confederation identifier 200
bgp confederation peers 65001
neighbor 172.16.232.50 remote-as 100
neighbor 172.16.233.2 remote-as 65001
!

route-map set-community permit 10
match ip address 1
set community local-as
```

## **BGP Confederation: Examples**

The following is a sample configuration that shows several peers in a confederation. The confederation consists of three internal autonomous systems with autonomous system numbers 6001, 6002, and 6003. To the BGP speakers outside the confederation, the confederation looks like a normal autonomous system with autonomous system number 500 (specified via the **bgp confederation identifier** router configuration command).

In a BGP speaker in autonomous system 6001, the **bgp confederation peers** router configuration command marks the peers from autonomous systems 6002 and 6003 as special eBGP peers. Hence peers 172.16.232.55 and 172.16.232.56 will get the local preference, next hop, and MED unmodified in the updates. The router at 10.16.69.1 is a normal eBGP speaker and the updates received by it from this peer will be just like a normal eBGP update from a peer in autonomous system 6001.

```
router bgp 6001
bgp confederation identifier 500
bgp confederation peers 6002 6003
neighbor 172.16.232.55 remote-as 6002
neighbor 172.16.232.56 remote-as 6003
neighbor 10.16.69.1 remote-as 777
```

In a BGP speaker in autonomous system 6002, the peers from autonomous systems 6001 and 6003 are configured as special eBGP peers. 10.70.70.1 is a normal iBGP peer and 10.99.99.2 is a normal eBGP peer from autonomous system 700.

```
router bgp 6002
bgp confederation identifier 500
bgp confederation peers 6001 6003
neighbor 10.70.70.1 remote-as 6002
neighbor 172.16.232.57 remote-as 6001
```

```
neighbor 172.16.232.56 remote-as 6003 neighbor 10.99.99.2 remote-as 700
```

In a BGP speaker in autonomous system 6003, the peers from autonomous systems 6001 and 6002 are configured as special eBGP peers. 10.200.200.200 is a normal eBGP peer from autonomous system 701.

```
router bgp 6003
bgp confederation identifier 500
bgp confederation peers 6001 6002
neighbor 172.16.232.57 remote-as 6001
neighbor 172.16.232.55 remote-as 6002
neighbor 10.200.200.200 remote-as 701
```

The following is a part of the configuration from the BGP speaker 10.200.200.205 from autonomous system 701 in the same example. Neighbor 172.16.232.56 is configured as a normal eBGP speaker from autonomous system 500. The internal division of the autonomous system into multiple autonomous systems is not known to the peers external to the confederation.

```
router bgp 701
neighbor 172.16.232.56 remote-as 500
neighbor 10.200.200.205 remote-as 701
```

## **BGP VPLS Autodiscovery Support on Route Reflector Example**

In the following example, a host named PE-RR (indicating Provider Edge Route Reflector) is configured as a route reflector capable of reflecting VPLS prefixes. The VPLS address family is configured by **address-family 12vpn vpls** below.

```
hostname PE-RR
1
router bap 1
bgp router-id 1.1.1.3
no bgp default route-target filter
bgp log-neighbor-changes
neighbor iBGP_PEERS peer-group
neighbor iBGP_PEERS remote-as 1
neighbor iBGP_PEERS update-source Loopback1
neighbor 1.1.1.1 peer-group iBGP_PEERS
neighbor 1.1.1.2 peer-group iBGP_PEERS
address-family 12vpn vpls
  neighbor iBGP_PEERS send-community extended
  neighbor iBGP_PEERS route-reflector-client
  neighbor 1.1.1.1 peer-group iBGP_PEERS
 neighbor 1.1.1.2 peer-group iBGP_PEERS
exit-address-family
```

# **Additional References**

The following sections provide references related to configuring internal BGP features.

# **Related Documents**

Related Topic	Document Title
BGP overview	Cisco BGP Overview
Basic BGP configuration tasks	Configuring a Basic BGP Network
Connecting to a service provider	Connecting to a Service Provider Using External BGP
BGP commands	Cisco IOS IP Routing: BGP Command Reference
Cisco IOS master command list, all releases	Cisco IOS Master Command List, All Releases

# **Standards**

Standards	Title
No new or modified standards are supported by this feature, and support for existing standards has not been modified by this feature.	

# **MIBs**

MIBs	MIBs Link
No new or modified MIBs are supported by this feature, and support for existing MIBs has not been modified by this feature.	To locate and download MIBs for selected platforms, Cisco IOS XE software releases, and feature sets, use Cisco MIB Locator found at the following URL:
	http://www.cisco.com/go/mibs

# **RFCs**

RFCs	Title
No new or modified RFCs are supported by this feature, and support for existing RFCs has not been modified by this feature.	

# **Technical Assistance**

Description	Link
The Cisco Support website provides extensive online resources, including documentation and tools for troubleshooting and resolving technical issues with Cisco products and technologies.	http://www.cisco.com/techsupport
To receive security and technical information about your products, you can subscribe to various services, such as the Product Alert Tool (accessed from Field Notices), the Cisco Technical Services Newsletter, and Really Simple Syndication (RSS) Feeds.	
Access to most tools on the Cisco Support website requires a Cisco.com user ID and password.	

# **Feature Information for Configuring Internal BGP Features**

Table 1 lists the release history for this feature.

Use Cisco Feature Navigator to find information about platform support and software image support. Cisco Feature Navigator enables you to determine which Cisco IOS XE software images support a specific software release, feature set, or platform. To access Cisco Feature Navigator, go to <a href="http://www.cisco.com/go/cfn">http://www.cisco.com/go/cfn</a>. An account on Cisco.com is not required.



Table 1 lists only the Cisco IOS XE software release that introduced support for a given feature in a given Cisco IOS XE software release train. Unless noted otherwise, subsequent releases of that Cisco IOS XE software release train also support that feature.

Table 1 Feature Information for Configuring Internal BGP Features

Feature Name	Releases	Feature Information
Configuring internal BGP features	Cisco IOS XE Release 2.1	This document describes how to configure internal BGP features. BGP is an interdomain routing protocol that is designed to provide loop-free routing between organizations.
		This feature was introduced on the Cisco ASR 1000 Series Routers.
		The following commands were modified by this feature: bgp confederation identifier, bgp confederation peers.
BGP VPLS Autodiscovery Support on Route Reflector	Cisco IOS XE Release 2.5	This feature was introduced on the Cisco ASR 1000 Series Routers.
		This feature is documented in the following sections:
		• BGP VPLS Autodiscovery Support on Route Reflector, page 6
		• BGP VPLS Autodiscovery Support on Route Reflector Example, page 12

CCDE, CCENT, CCSI, Cisco Eos, Cisco HealthPresence, Cisco IronPort, the Cisco logo, Cisco Nurse Connect, Cisco Pulse, Cisco SensorBase, Cisco StackPower, Cisco StadiumVision, Cisco TelePresence, Cisco Unified Computing System, Cisco WebEx, DCE, Flip Channels, Flip for Good, Flip Mino, Flipshare (Design), Flip Ultra, Flip Video, Flip Video (Design), Instant Broadband, and Welcome to the Human Network are trademarks; Changing the Way We Work, Live, Play, and Learn, Cisco Capital, Cisco Capital (Design), Cisco:Financed (Stylized), Cisco Store, Flip Gift Card, and One Million Acts of Green are service marks; and Access Registrar, Aironet, AllTouch, AsyncOS, Bringing the Meeting To You, Catalyst, CCDA, CCDP, CCIE, CCIP, CCNA, CCNP, CCSP, CCVP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IOS, Cisco Lumin, Cisco Nexus, Cisco Press, Cisco Systems, Cisco Systems Capital, the Cisco Systems logo, Cisco Unity, Collaboration Without Limitation, Continuum, EtherFast, EtherSwitch, Event Center, Explorer, Follow Me Browsing, GainMaker, iLYNX, IOS, iPhone, IronPort, the IronPort logo, Laser Link, LightStream, Linksys, MeetingPlace, MeetingPlace Chime Sound, MGX, Networkers, Networking Academy, PCNow, PIX, PowerKEY, PowerPanels, PowerTV, PowerTV (Design), PowerVu, Prisma, ProConnect, ROSA, SenderBase, SMARTnet, Spectrum Expert, StackWise, WebEx, and the WebEx logo are registered trademarks of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries.

All other trademarks mentioned in this document or website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0910R)

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, and figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

Feature Information for Configuring Internal BGP Features



# **Configuring Advanced BGP Features**

First Published: October 31, 2005 Last Updated: May 4, 2009

This module describes configuration tasks for various advanced Border Gateway Protocol (BGP) features. BGP is an interdomain routing protocol that is designed to provide loop-free routing between organizations. This module contains tasks to configure BGP next-hop address tracking, BGP Nonstop Forwarding (NSF) awareness using the BGP graceful restart capability, route dampening, Bidirectional Forwarding Detection (BFD) support for BGP, and BGP MIB support.

# **Finding Feature Information**

For the latest feature information and caveats, see the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the "Feature Information for Configuring Advanced BGP Features" section on page 44.

Use Cisco Feature Navigator to find information about platform support and Cisco IOS XE software image support. To access Cisco Feature Navigator, go to <a href="http://www.cisco.com/go/cfn">http://www.cisco.com/go/cfn</a>. An account on Cisco.com is not required.

# **Contents**

- Prerequisites for Configuring Advanced BGP Features, page 2
- Restrictions for Configuring Advanced BGP Features, page 2
- Information About Configuring Advanced BGP Features, page 2
- How to Configure Advanced BGP Features, page 10
- Configuration Examples for Configuring Advanced BGP Features, page 38
- Where to Go Next, page 41
- Additional References, page 42
- Feature Information for Configuring Advanced BGP Features, page 44



# **Prerequisites for Configuring Advanced BGP Features**

Before configuring advanced BGP features you should be familiar with the "Cisco BGP Overview" module and the "Configuring a Basic BGP Network" module.

# **Restrictions for Configuring Advanced BGP Features**

A router that runs Cisco IOS XE software can be configured to run only one BGP routing process and to be a member of only one BGP autonomous system. However, a BGP routing process and autonomous system can support multiple address family configurations.

# **Information About Configuring Advanced BGP Features**

To configure the BGP features in this module, you should understand the following concepts:

- BGP Version 4, page 2
- BGP Support for Next-Hop Address Tracking, page 3
- BGP Nonstop Forwarding Awareness, page 3
- BGP Route Dampening, page 6
- BFD for BGP, page 7
- BGP MIB Support, page 8

### **BGP Version 4**

Border Gateway Protocol (BGP) is an interdomain routing protocol designed to provide loop-free routing between separate routing domains that contain independent routing policies (autonomous systems). The Cisco IOS XE software implementation of BGP version 4 includes multiprotocol extensions to allow BGP to carry routing information for IP multicast routes and multiple Layer 3 protocol address families including IP Version 4 (IPv4), IP Version 6 (IPv6), Virtual Private Networks version 4 (VPNv4), and Connectionless Network Services (CLNS). For more details about configuring a basic BGP network, see the "Configuring a Basic BGP Network" module.

BGP is mainly used to connect a local network to an external network to gain access to the Internet or to connect to other organizations. When connecting to an external organization, external BGP (eBGP) peering sessions are created. For more details about connecting to external BGP peers, see the "Connecting to a Service Provider Using External BGP" module.

Although BGP is referred to as an exterior gateway protocol (EGP) many networks within an organization are becoming so complex that BGP can be used to simplify the internal network used within the organization. BGP peers within the same organization exchange routing information through internal BGP (iBGP) peering sessions. For more details about internal BGP peers, see the "Configuring Internal BGP Features" module of the *Cisco IOS XE IP Routing: BGP Configuration Guide*, Release 2.3.



BGP requires more configuration than other routing protocols and the effects of any configuration changes must be fully understood. Incorrect configuration can create routing loops and negatively impact normal network operation.

## **BGP Support for Next-Hop Address Tracking**

To configure BGP next-hop address tracking, you should understand the following concepts:

- BGP Next-Hop Address Tracking, page 3
- Default BGP Scanner Behavior, page 3
- Selective BGP Next-Hop Route Filtering, page 3

### **BGP Next-Hop Address Tracking**

The BGP next-hop address tracking feature is enabled by default when a supporting Cisco IOS XE software image is installed. BGP next-hop address tracking is event driven. BGP prefixes are automatically tracked as peering sessions are established. Next-hop changes are rapidly reported to the BGP routing process as they are updated in the RIB. This optimization improves overall BGP convergence by reducing the response time to next-hop changes for routes installed in the RIB. When a best-path calculation is run in between BGP scanner cycles, only next-hop changes are tracked and processed.

### **Default BGP Scanner Behavior**

BGP monitors the next hop of installed routes to verify next-hop reachability and to select, install, and validate the BGP best path. By default, the BGP scanner is used to poll the RIB for this information every 60 seconds. During the 60 second time period between scan cycles, Interior Gateway Protocol (IGP) instability or other network failures can cause black holes and routing loops to temporarily form.

### **Selective BGP Next-Hop Route Filtering**

BGP selective next-hop route filtering was implemented as part of the BGP Selective Address Tracking feature to support BGP next-hop address tracking. Selective next-hop route filtering uses a route map to selectively define routes to help resolve the BGP next hop.

The ability to use a route map with the **bgp nexthop** command allows the configuration of the length of a prefix that applies to the BGP Next\_Hop attribute. The route map is used during the BGP bestpath calculation and is applied to the route in the routing table that covers the next-hop attribute for BGP prefixes. If the next-hop route fails the route map evaluation, the next-hop route is marked as unreachable. This command is per address family, so different route maps can be applied for next-hop routes in different address families.



Only **match ip address** and **match source-protocol** commands are supported in the route map. No **set** commands or other **match** commands are supported.

## **BGP Nonstop Forwarding Awareness**

To configure BGP Nonstop Forwarding (NSF) awareness, you should understand the following concepts:

- Cisco NSF Routing and Forwarding Operation, page 4
- Cisco Express Forwarding for NSF, page 4
- BGP Graceful Restart for NSF, page 5

- BGP NSF Awareness, page 5
- BGP Graceful Restart per Neighbor, page 6

### **Cisco NSF Routing and Forwarding Operation**

Cisco NSF is supported by the BGP, EIGRP, OSPF, and IS-IS protocols for routing and by Cisco Express Forwarding (CEF) for forwarding. Of the routing protocols, BGP, EIGRP, OSPF, and IS-IS have been enhanced with NSF-capability and awareness, which means that routers running these protocols can detect a switchover and take the necessary actions to continue forwarding network traffic and to recover route information from the peer devices.

In this document, a networking device is said to be NSF-aware if it is running NSF-compatible software. A device is said to be NSF-capable if it has been configured to support NSF; therefore, it would rebuild routing information from NSF-aware or NSF-capable neighbors.

Each protocol depends on CEF to continue forwarding packets during switchover while the routing protocols rebuild the Routing Information Base (RIB) tables. Once the routing protocols have converged, CEF updates the FIB table and removes stale route entries. CEF then updates the line cards with the new FIB information.



Currently, EIGRP supports only NSF awareness.

### **Cisco Express Forwarding for NSF**

A key element of NSF is packet forwarding. In a Cisco networking device, packet forwarding is provided by CEF. CEF maintains the FIB and uses the FIB information that was current at the time of the switchover to continue forwarding packets during a switchover. This feature reduces traffic interruption during the switchover.

During normal NSF operation, CEF on the active RP synchronizes its current FIB and adjacency databases with the FIB and adjacency databases on the standby RP. Upon switchover of the active RP, the standby RP initially has FIB and adjacency databases that are mirror images of those that were current on the active RP. For platforms with intelligent line cards, the line cards will maintain the current forwarding information over a switchover; for platforms with forwarding engines, CEF will keep the forwarding engine on the standby RP current with changes that are sent to it by CEF on the active RP. In this way, the line cards or forwarding engines will be able to continue forwarding after a switchover as soon as the interfaces and a data path are available.

As the routing protocols start to repopulate the RIB on a prefix-by-prefix basis, the updates in turn cause prefix-by-prefix updates for CEF, which it uses to update the FIB and adjacency databases. Existing and new entries will receive the new version ("epoch") number, indicating that they have been refreshed. The forwarding information is updated on the line cards or forwarding engine during convergence. The RP signals when the RIB has converged. The software removes all FIB and adjacency entries that have an epoch older than the current switchover epoch. The FIB now represents the newest routing protocol forwarding information

The routing protocols run only on the active RP, and they receive routing updates from their neighbor routers. Routing protocols do not run on the standby RP. Following a switchover, the routing protocols request that the NSF-aware neighbor devices send state information to help rebuild the routing tables.



For NSF operation, the routing protocols depend on CEF to continue forwarding packets while the routing protocols rebuild the routing information.

### **BGP Graceful Restart for NSF**

When an NSF-capable router begins a BGP session with a BGP peer, it sends an OPEN message to the peer. Included in the message is a declaration that the NSF-capable or NSF-aware router has "graceful restart capability." Graceful restart is the mechanism by which BGP routing peers avoid a routing flap following a switchover. If the BGP peer has received this capability, it is aware that the device sending the message is NSF-capable. Both the NSF-capable router and its BGP peer(s) (NSF-aware peers) need to exchange the graceful restart capability in their OPEN messages, at the time of session establishment. If both the peers do not exchange the graceful restart capability, the session will not be graceful restart capable.

If the BGP session is lost during the RP switchover, the NSF-aware BGP peer marks all the routes associated with the NSF-capable router as stale; however, it continues to use these routes to make forwarding decisions for a set period of time. This functionality means that no packets are lost while the newly active RP is waiting for convergence of the routing information with the BGP peers.

After an RP switchover occurs, the NSF-capable router reestablishes the session with the BGP peer. In establishing the new session, it sends a new graceful restart message that identifies the NSF-capable router as having restarted.

At this point, the routing information is exchanged between the two BGP peers. Once this exchange is complete, the NSF-capable device uses the routing information to update the RIB and the FIB with the new forwarding information. The NSF-aware device uses the network information to remove stale routes from its BGP table. Following that, the BGP protocol is fully converged.

If a BGP peer does not support the graceful restart capability, it will ignore the graceful restart capability in an OPEN message but will establish a BGP session with the NSF-capable device. This functionality will allow interoperability with non-NSF-aware BGP peers (and without NSF functionality), but the BGP session with non-NSF-aware BGP peers will not be graceful restart capable.

### **BGP NSF Awareness**

BGP support for NSF requires that neighbor routers are NSF-aware or NSF-capable. NSF awareness in BGP is also enabled by the graceful restart mechanism. A router that is NSF-aware functions like a router that is NSF-capable with one exception: an NSF-aware router is incapable of performing an SSO operation. However, a router that is NSF-aware is capable of maintaining a peering relationship with a NSF-capable neighbor during a NSF SSO operation, as well as holding routes for this neighbor during the SSO operation.

The BGP Nonstop Forwarding Awareness feature provides an NSF-aware router with the capability to detect a neighbor that is undergoing an SSO operation, maintain the peering session with this neighbor, retain known routes, and continue to forward packets for these routes. The deployment of BGP NSF awareness can minimize the affects of route-processor (RP) failure conditions and improve the overall network stability by reducing the amount of resources that are normally required for reestablishing peering with a failed router.

NSF awareness for BGP is not enabled by default. The **bgp graceful-restart** command is used to globally enable NSF awareness on a router that is running BGP. NSF-aware operations are also transparent to the network operator and BGP peers that do not support NSF capabilities.



NSF awareness is enabled automatically in supported software images for Interior Gateway Protocols, such as EIGRP, IS-IS, and OSPF. In BGP, global NSF awareness is not enabled automatically and must be started by issuing the **bgp graceful-restart** command in router configuration mode.

### **BGP Graceful Restart per Neighbor**

The ability to enable or disable BGP graceful restart for every individual BGP neighbor was introduced. Three new methods of configuring BGP graceful restart for BGP peers, in addition to the existing global BGP graceful restart configuration, are now available. Graceful restart can be enabled or disabled for a BGP peer or a BGP peer group using the **neighbor ha-mode graceful-restart** command, or a BGP peer can inherit a graceful restart configuration from a BGP peer-session template using the **ha-mode graceful-restart** command.

Although BGP graceful restart is disabled by default, the existing global command enables graceful restart for all BGP neighbors regardless of their capabilities. The ability to enable or disable BGP graceful restart for individual BGP neighbors provides a greater level of control for a network administrator.

When the BGP graceful restart capability is configured for an individual neighbor, each method of configuring graceful restart has the same priority, and the last configuration instance is applied to the neighbor. For example, if global graceful restart is enabled for all BGP neighbors but an individual neighbor is subsequently configured as a member of a peer group for which the graceful restart is disabled, graceful restart is disabled for that neighbor.

The configuration of the restart and stale-path timers is available only with the global **bgp graceful-restart** command, but the default values are set when the **neighbor ha-mode graceful-restart** or **ha-mode graceful-restart** commands are configured. The default values are optimal for most network deployments, and these values should be adjusted only by an experienced network operator.

# **BGP** Route Dampening

Route dampening is a BGP feature designed to minimize the propagation of flapping routes across an internetwork. A route is considered to be flapping when its availability alternates repeatedly.

For example, consider a network with three BGP autonomous systems: autonomous system 1, autonomous system 2, and autonomous system 3. Suppose the route to network A in autonomous system 1 flaps (it becomes unavailable). Under circumstances without route dampening, the eBGP neighbor of autonomous system 1 to autonomous system 2 sends a withdraw message to autonomous system 2. The border router in autonomous system 2, in turn, propagates the withdraw message to autonomous system 3. When the route to network A reappears, autonomous system 1 sends an advertisement message to autonomous system 2, which sends it to autonomous system 3. If the route to network A repeatedly becomes unavailable, then available, many withdrawal and advertisement messages are sent. This is a problem in an internetwork connected to the Internet because a route flap in the Internet backbone usually involves many routes.



No penalty is applied to a BGP peer reset when route dampening is enabled. Although the reset withdraws the route, no penalty is applied in this instance, even if route flap dampening is enabled.

#### **Minimizing Flapping**

The route dampening feature minimizes the flapping problem as follows. Suppose again that the route to network A flaps. The router in autonomous system 2 (where route dampening is enabled) assigns network A a penalty of 1000 and moves it to history state. The router in autonomous system 2 continues to advertise the status of the route to neighbors. The penalties are cumulative. When the route flaps so often that the penalty exceeds a configurable suppress limit, the router stops advertising the route to network A, regardless of how many times it flaps. Thus, the route is dampened.

The penalty placed on network A is decayed until the reuse limit is reached, upon which the route is once again advertised. At half of the reuse limit, the dampening information for the route to network A is removed.

#### **Understanding Route Dampening Terms**

The following terms are used when describing route dampening:

- Flap—A route whose availability alternates repeatedly.
- History state—After a route flaps once, it is assigned a penalty and put into history state, meaning the router does not have the best path, based on historical information.
- Penalty—Each time a route flaps, the router configured for route dampening in another autonomous
  system assigns the route a penalty of 1000. Penalties are cumulative. The penalty for the route is
  stored in the BGP routing table until the penalty exceeds the suppress limit. At that point, the route
  state changes from history to damp.
- Damp state—In this state, the route has flapped so often that the router will not advertise this route to BGP neighbors.
- Suppress limit—A route is suppressed when its penalty exceeds this limit. The default value is 2000.
- Half-life—Once the route has been assigned a penalty, the penalty is decreased by half after the
  half-life period (which is 15 minutes by default). The process of reducing the penalty happens every
  5 seconds.
- Reuse limit—As the penalty for a flapping route decreases and falls below this reuse limit, the route is unsuppressed. That is, the route is added back to the BGP table and once again used for forwarding. The default reuse limit is 750. The process of unsuppressing routes occurs at 10-second increments. Every 10 seconds, the router finds out which routes are now unsuppressed and advertises them to the world.
- Maximum suppress limit—This value is the maximum amount of time a route can be suppressed.
   The default value is four times the half-life.

The routes external to an autonomous system learned via iBGP are not dampened. This policy prevent the iBGP peers from having a higher penalty for routes external to the autonomous system.

### **BFD for BGP**

Bidirectional Forwarding Detection (BFD) is a detection protocol designed to provide fast forwarding path failure detection times for all media types, encapsulations, topologies, and routing protocols. In addition to fast forwarding path failure detection, BFD provides a consistent failure detection method for network administrators. Because the network administrator can use BFD to detect forwarding path failures at a uniform rate, rather than the variable rates for different routing protocol hello mechanisms, network profiling and planning will be easier, and reconvergence time will be consistent and predictable. The main benefit of implementing BFD for BGP is a marked decrease in reconvergence time.

One caveat exists for BFD; BFD and BGP graceful restart capability cannot both be configured on a router running BGP. If an interface goes down, BFD detects the failure and indicates that the interface cannot be used for traffic forwarding and the BGP session goes down, but graceful restart still allows traffic forwarding on platforms that support NSF even though the BGP session is down, allowing traffic forwarding using the interface that is down. Configuring both BFD and BGP graceful restart for NSF on a router running BGP may result in suboptimal routing.

For more details about BFD, see the "Bidirectional Forwarding Detection" module of the *Cisco IOS XE IP Routing: BFD Configuration Guide*, Release 2.3.

## **BGP MIB Support**

The Management Information Base (MIB) that supports BGP is the CISCO-BGP4-MIB. In Cisco IOS XE Release 2.1 and later releases, the BGP MIB Support Enhancements feature introduced support in the CISCO-BGP4-MIB for new SNMP notifications. The following sections describe the objects and notifications (traps) that are supported:

- BGP FSM Transition Change Support, page 8
- BGP Route Received Route Support, page 8
- BGP Prefix Threshold Notification Support, page 8
- VPNv4 Unicast Address Family Route Support, page 9
- cbgpPeerTable Support, page 9

#### **BGP FSM Transition Change Support**

The cbgpRouteTable supports BGP Finite State Machine (FSM) transition state changes.

The *cbgpFsmStateChange* object allows you to configure SNMP notifications (traps) for all FSM transition state changes. This notification contains the following MIB objects:

- bgpPeerLastError
- bgpPeerState
- cbgpPeerLastErrorTxt
- cbgpPeerPrevState

The *cbgpBackwardTransition* object supports all BGP FSM transition state changes. This object is sent each time the FSM moves to either a higher or lower numbered state. This notification contains the following MIB objects:

- bgpPeerLastError
- bgpPeerState
- cbgpPeerLastErrorTxt
- cbgpPeerPrevState

The **snmp-server enable bgp traps** command allows you to enable the traps individually or together with the existing FSM backward transition and established state traps as defined in RFC 1657.

#### **BGP Route Received Route Support**

The *cbgpRouteTable* object supports the total number of routes received by a BGP neighbor. The following MIB object is used to query the CISCO-BGP4-MIB for routes that are learned from individual BGP peers:

• cbgpPeerAddrFamilyPrefixTable

Routes are indexed by the address-family identifier (AFI) or subaddress-family identifier (SAFI). The prefix information displayed in this table can also viewed in the output of the **show ip bgp** command.

#### **BGP Prefix Threshold Notification Support**

The *cbgpPrefixMaxThresholdExceed* and *cbgpPrfefixMaxThresholdClear* objects were introduced to allow you to poll for the total number of routes received by a BGP peer.

The *cbgpPrefixMaxThresholdExceed* object allows you to configure SNMP notifications to be sent when the prefix count for a BGP session has exceeded the configured value. This notification is configured on a per address family basis. The prefix threshold is configured with the **neighbor maximum-prefix** command. This notification contains the following MIB objects:

- cbgpPeerPrefixAdminLimit
- cbgpPeerPrefixThreshold

The *cbgpPrfefixMaxThresholdClear* object allows you to configure SNMP notifications to be sent when the prefix count drops below the clear trap limit. This notification is configured on a per address family basis. This notification contains the following objects:

- cbgpPeerPrefixAdminLimit
- $\bullet \quad cbgpPeerPrefixClearThreshold$

Notifications are sent when the prefix count drops below the clear trap limit for an address family under a BGP session after the *cbgpPrefixMaxThresholdExceed* notification is generated. The clear trap limit is calculated by subtracting 5 percent from the maximum prefix limit value configured with the **neighbor maximum-prefix** command. This notification will not be generated if the session goes down for any other reason after the *cbgpPrefixMaxThresholdExceed* is generated.

#### **VPNv4 Unicast Address Family Route Support**

The *cbgpRouteTable* object allows you to configure SNMP GET operations for VPNv4 unicast address-family routes.

The following MIB object allows you to query for multiple BGP capabilities (for example, route refresh, multiprotocol BGP extensions, and graceful restart):

• cbgpPeerCapsTable

The following MIB object allows you to query for IPv4 and VPNv4 address family routes:

cbgpPeerAddrFamilyTable

Each route is indexed by peer address, prefix, and prefix length. This object indexes BGP routes by the AFI and then by the SAFI. The AFI table is the primary index, and the SAFI table is the secondary index. Each BGP speaker maintains a local Routing Information Base (RIB) for each supported AFI and SAFI combination.

#### cbgpPeerTable Support

The cbgpPeerTable has been modified to support the enhancements described in this document. The following new table objects are supported in the CISCO-BGP-MIB.my:

- cbgpPeerLastErrorTxt
- cbgpPeerPrevState

The following table objects are not supported. The status of theses objects is listed as deprecated, and these objects are not operational:

- cbgpPeerPrefixAccepted
- cbgpPeerPrefixDenied
- cbgpPeerPrefixLimit
- cbgpPeerPrefixAdvertised
- cbgpPeerPrefixSuppressed
- cbgpPeerPrefixWithdrawn

# **How to Configure Advanced BGP Features**

This section contains the following task groups:

- Configuring BGP Next-Hop Address Tracking, page 10
- Configuring BGP Nonstop Forwarding Awareness Using BGP Graceful Restart, page 16
- Configuring BGP Route Dampening, page 31
- Decreasing BGP Convergence Time Using BFD, page 34
- Enabling BGP MIB Support, page 37

## **Configuring BGP Next-Hop Address Tracking**

The tasks in this section show how configure BGP next-hop address tracking. BGP next-hop address tracking significantly improves the response time of BGP to next-hop changes in the RIB. However, unstable Interior Gateway Protocol (IGP) peers can introduce instability to BGP neighbor sessions. We recommend that you aggressively dampen unstable IGP peering sessions to reduce the possible impact to BGP. For more details about configuring route dampening, see the "Configuring BGP Route Dampening" section on page 31.

- Disabling BGP Next-Hop Address Tracking, page 10
- Adjusting the Delay Interval for BGP Next-Hop Address Tracking, page 11
- Configuring BGP Selective Next-Hop Route Filtering, page 13

### **Disabling BGP Next-Hop Address Tracking**

Perform this task to disable BGP next-hop address tracking. BGP next-hop address tracking is enabled by default under the IPv4 and VPNv4 address families. Disabling next hop address tracking may be useful if you the network has unstable IGP peers and route dampening is not resolving the stability issues. To reenable BGP next-hop address tracking, use the **bgp nexthop** command with the **trigger** and **enable** keywords.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. router bgp autonomous-system-number
- 4. address-family ipv4 [[mdt | multicast | tunnel | unicast [vrf vrf-name] | vrf vrf-name] | vpnv4 [unicast]]
- 5. no bgp nexthop trigger enable
- 6. end

#### **DETAILED STEPS**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		Enter your password if prompted.
	Example:	
	Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	router bgp autonomous-system-number	Enters router configuration mode to create or configure a BGP routing process.
	Example: Router(config)# router bgp 64512	
Step 4	<pre>address-family ipv4 [[mdt   multicast   tunnel   unicast [vrf vrf-name]   vrf vrf-name]   vpnv4 [unicast]]</pre>	Enter address family configuration mode to configure BGP peers to accept address family-specific configurations.
		The example creates an IPv4 unicast address family session.
	Example:	session.
	Router(config-router)# address-family ipv4 unicast	
Step 5	no bgp nexthop trigger enable	Disables BGP next-hop address tracking.
	<pre>Example: Router(config-router-af)# no bgp nexthop trigger enable</pre>	<ul> <li>Next-hop address tracking is enabled by default for IPv4 and VPNv4 address family sessions.</li> <li>The example disables next-hop address tracking.</li> </ul>
Step 6	end	Exits address-family configuration mode and returns to privileged EXEC mode.
	Example: Router(config-router-af)# end	

### **Adjusting the Delay Interval for BGP Next-Hop Address Tracking**

Perform this task to adjust the delay interval between routing table walks for BGP next-hop address tracking.

#### **Delay Interval Tuning to Match the Interior Gateway Protocol**

You can increase the performance of this feature by tuning the delay interval between full routing table walks to match the tuning parameters for the Interior Gateway protocol (IGP). The default delay interval is 5 seconds. This value is optimal for a fast-tuned IGP. In the case of an IGP that converges more slowly, you can change the delay interval to 20 seconds or more, depending on the IGP convergence time.

### **Aggressive IGP Route Dampening**

BGP next-hop address tracking significantly improves the response time of BGP to next-hop changes in the RIB. However, unstable Interior Gateway Protocol (IGP) peers can introduce instability to BGP neighbor sessions. We recommend that you aggressively dampen unstable IGP peering sessions to reduce the possible impact to BGP.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. router bgp autonomous-system-number
- 4. address-family ipv4 [[mdt | multicast | tunnel | unicast [vrf vrf-name] | vrf vrf-name] | vpnv4 [unicast]]
- 5. no bgp nexthop trigger delay delay-timer
- 6 end

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		• Enter your password if prompted.
	Example:	
	Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	router bgp autonomous-system-number	Enters router configuration mode to create or configure a BGP routing process.
	Example:	
	Router(config)# router bgp 64512	
Step 4	<pre>address-family ipv4 [[mdt   multicast   tunnel   unicast [vrf vrf-name]   vrf vrf-name]   vpnv4 [unicast]]</pre>	Enter address family configuration mode to configure BGP peers to accept address family-specific configurations.
	·	• The example creates an IPv4 unicast address family
		session.
	Example:	
	Router(config-router)# address-family ipv4 unicast	

	Command or Action	Purpose
Step 5	bgp nexthop trigger delay delay-timer	Configures the delay interval between routing table walks for next-hop address tracking.
	<pre>Example: Router(config-router-af)# bgp nexthop trigger delay 20</pre>	<ul> <li>The time period determines how long BGP will wait before starting a full routing table walk after notification is received.</li> </ul>
		• The value for the <i>delay-timer</i> argument is a number from 1 to 100 seconds. The default value is 5 second.
		• The example configures a delay interval of 20 seconds.
Step 6	end	Exits address-family configuration mode and returns to privileged EXEC mode.
	Example:	
	Router(config-router-af)# end	

### **Configuring BGP Selective Next-Hop Route Filtering**

Perform this task to configure selective next-hop route filtering using a route map to filter potential next-hop routes. This task uses prefix lists and route maps to match IP addresses or source protocols and can be used to avoid aggregate addresses and BGP prefixes being considered as next-hop routes.

For more examples of how to use the **bgp nexthop** command, see the "Configuring BGP Selective Next-Hop Route Filtering: Examples" section on page 39.

#### **BGP Next\_Hop Attribute**

The Next\_Hop attribute identifies the next-hop IP address to be used as the BGP next hop to the destination. The router makes a recursive lookup to find the BGP next hop in the routing table. In external BGP (eBGP), the next hop is the IP address of the peer that sent the update. Internal BGP (iBGP) sets the next-hop address to the IP address of the peer that advertised the prefix for routes that originate internally. When any routes to iBGP that are learned from eBGP are advertised, the Next\_Hop attribute is unchanged.

A BGP next-hop IP address must be reachable in order for the router to use a BGP route. Reachability information is usually provided by the IGP, and changes in the IGP can influence the forwarding of the next-hop address over a network backbone.

#### Restrictions

Only **match ip address** and **match source-protocol** commands are supported in the route map. No **set** commands or other **match** commands are supported.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. router bgp autonomous-system-number
- 4. address-family ipv4 [unicast | multicast | vrf vrf-name]
- 5. **bgp nexthop route-map** *map-name*
- 6. exit

- 7. exit
- **8. ip prefix-list** *list-name* [**seq** *seq-value*] {**deny** *network/length* | **permit** *network/length*} [**ge** *ge-value*] [**le** *le-value*]
- **9. route-map** *map-name* [**permit** | **deny**] [*sequence-number*]
- **10. match ip address prefix-list** *prefix-list-name* [*prefix-list-name*...]
- 11. exit
- **12. route-map** *map-name* [**permit** | **deny**] [*sequence-number*]
- 13. end
- **14. show ip bgp** [network] [network-mask]

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		Enter your password if prompted.
	Example: Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	router bgp autonomous-system-number	Enters router configuration mode and creates a BGP routing process.
	<pre>Example: Router(config)# router bgp 45000</pre>	
Step 4	address-family ipv4 [unicast   multicast   vrf vrf-name]	Specifies the IPv4 address family and enters address family configuration mode.
	<pre>Example: Router(config-router)# address-family ipv4 unicast</pre>	• The unicast keyword specifies the IPv4 unicast address family. By default, the router is placed in address family configuration mode for the IPv4 unicast address family if the unicast keyword is not specified with the address-family ipv4 command.
		<ul> <li>The multicast keyword specifies IPv4 multicast address prefixes.</li> </ul>
		• The <b>vrf</b> keyword and <i>vrf-name</i> argument specify the name of the VRF instance to associate with subsequent IPv4 address family configuration mode commands.
Step 5	bgp nexthop route-map map-name	Permits a route map to selectively define routes to help resolve the BGP next hop.
	<pre>Example: Router(config-router-af)# bgp nexthop route-map CHECK-NEXTHOP</pre>	• In this example the route map named CHECK-NEXTHOP is created.

	Command or Action	Purpose
Step 6	exit	Exits address family configuration mode and enters router configuration mode.
	<pre>Example: Router(config-router-af)# exit</pre>	
Step 7	exit	Exits router configuration mode and enters global configuration mode.
	<pre>Example: Router(config-router)# exit</pre>	
Step 8	<pre>ip prefix-list list-name [seq seq-value] {deny network/length   permit network/length} [ge</pre>	Creates a prefix list for BGP next-hop route filtering.
	ge-value] [le le-value]	• Selective next-hop route filtering supports prefix length matching or source protocol matching on a per address-family basis.
	<pre>Example: Router(config)# ip prefix-list FILTER25 seq 5 permit 0.0.0.0/0 le 25</pre>	• The example creates a prefix list named FILTER25 that permits routes only if the mask length is more than 25; this will avoid aggregate routes being considered as the next-hop route.
Step 9	route-map map-name [permit   deny] [sequence-number]	Configures a route map and enters route map configuration mode.
	Example: Router(config)# route-map CHECK-NEXTHOP deny 10	• In this example, a route map named CHECK-NEXTHOP is created. If there is an IP address match in the following <b>match</b> command, the IP address will be denied.
Step 10	match ip address prefix-list prefix-list-name	Matches the IP addresses in the specified prefix list.
	[prefix-list-name]  Example:	• Use the <i>prefix-list-name</i> argument to specify the name of a prefix list. The ellipsis means that more than one prefix list can be specified.
	<pre>Router(config-route-map)# match ip address prefix-list FILTER25</pre>	Note Only the syntax applicable to this task is used in this example. For more details, see the <i>Cisco IOS IP Routing: BGP Command Reference</i> .
Step 11	exit	Exits route map configuration mode and enters global configuration mode.
	<pre>Example: Router(config-route-map)# exit</pre>	
Step 12	<pre>route-map map-name [permit   deny] [sequence-number]</pre>	Configures a route map and enters route map configuration mode.
	Example: Router(config)# route-map CHECK-NEXTHOP permit 20	• In this example, all other IP addresses are permitted by route map CHECK-NEXTHOP.

	Command or Action	Purpose
Step 13	end	Exits route map configuration mode and returns to privileged EXEC mode.
	<pre>Example: Router(config-route-map)# end</pre>	
Step 14	show ip bgp [network] [network-mask]	Displays the entries in the BGP routing table.
	Example:	• Enter this command to view the next-hop addresses for each route.
	Router# show ip bgp	Note Only the syntax applicable to this task is used in this example. For more details, see the <i>Cisco IOS IP Routing: BGP Command Reference</i> .

#### **Examples**

The following example from the **show ip bgp** command shows the next-hop addresses for each route:

```
BGP table version is 7, local router ID is 172.17.1.99
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal,
             r RIB-failure, S Stale
Origin codes: i - IGP, e - EGP, ? - incomplete
  Network
                   Next Hop
                                       Metric LocPrf Weight Path
  10.1.1.0/24
                   192.168.1.2
                                                         0 40000 i
                                          0
* 10.2.2.0/24
                   192.168.3.2
                                                         0 50000 i
*> 172.16.1.0/24
                   0.0.0.0
                                            0
                                                     32768 i
*> 172.17.1.0/24
                   0.0.0.0
                                            Ω
                                                     32768
```

# **Configuring BGP Nonstop Forwarding Awareness Using BGP Graceful Restart**

The tasks in this section show how configure BGP Nonstop Forwarding (NSF) awareness using the BGP graceful restart capability. The first task enables BGP NSF globally for all BGP neighbors and suggests a few troubleshooting options. The second task describes how to adjust the BGP graceful restart timers although the default settings are optimal for most network deployments. The next three tasks demonstrate how to enable or disable BGP graceful restart for individual BGP neighbors including peer session templates and peer groups. The final task verifies the local and peer router configuration of BGP NSF.

- Enabling BGP Global NSF Awareness Using BGP Graceful Restart, page 17
- Configuring BGP NSF Awareness Timers, page 18
- Enabling and Disabling BGP Graceful Restart Using BGP Peer Session Templates, page 20
- Enabling BGP Graceful Restart for an Individual BGP Neighbor, page 25
- Disabling BGP Graceful Restart for a BGP Peer Group, page 28
- Verifying the Configuration of BGP Nonstop Forwarding Awareness, page 30

### **Enabling BGP Global NSF Awareness Using BGP Graceful Restart**

Perform this task to enable BGP NSF awareness globally for all BGP neighbors. BGP NSF awareness is part of the graceful restart mechanism and BGP NSF awareness is enabled by issuing the **bgp graceful-restart** command in router configuration mode. BGP NSF awareness allows NSF-aware routers to support NSF-capable routers during an SSO operation. NSF-awareness is not enabled by default and should be configured on all neighbors that participate in BGP NSF.



The configuration of the restart and stale-path timers is not required to enable the BGP graceful restart capability. The default values are optimal for most network deployments, and these values should be adjusted only by an experienced network operator.

#### Restrictions

Configuring both BFD and BGP graceful restart for NSF on a router running BGP may result in suboptimal routing. For more details, see the "BFD for BGP" section on page 7.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. router bgp autonomous-system-number
- 4. **bgp graceful-restart [restart-time** seconds] [stalepath-time seconds]
- 5. end

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		• Enter your password if prompted.
	Example: Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	router bgp autonomous-system-number	Enters router configuration mode and creates a BGP routing process.
	Example: Router(config)# router bgp 45000	

	Command or Action	Purpose
Step 4	bgp graceful-restart [restart-time seconds] [stalepath-time seconds]	Enables the BGP graceful restart capability and BGP NSF awareness.
	<pre>Example: Router(config-router)# bgp graceful-restart</pre>	• If you enter this command after the BGP session has been established, you must restart the session for the capability to be exchanged with the BGP neighbor.
		• Use this command on the restarting router and all of its peers (NSF-capable and NSF-aware).
Step 5	end	Exits router configuration mode and enters privileged EXEC mode.
	<pre>Example: Router(config-router)# end</pre>	

#### **Troubleshooting Tips**

To troubleshoot the NSF feature, use the following commands in privileged EXEC mode, as needed:

- debug ip bgp—Displays open messages that advertise the graceful restart capability.
- **debug ip bgp event**—Displays graceful restart timer events, such as the restart timer and the stalepath timer.
- **debug ip bgp updates**—Displays sent and received EOR messages. The EOR message is used by the NSF-aware router to start the stalepath timer, if configured.
- **show ip bgp**—Displays entries in the BGP routing table. The output from this command will display routes that are marked as stale by displaying the letter "S" next to each stale route.
- **show ip bgp neighbor**—Displays information about the TCP and BGP connections to neighbor devices. When enabled, the graceful restart capability is displayed in the output of this command.

#### What to Do Next

If the **bgp graceful-restart** command has been issued after the BGP session has been established, you must reset by issuing the **clear ip bgp** \* command or by reloading the router before graceful restart capabilities will be exchanged. For more information about resetting BGP sessions and using the **clear ip bgp** command, see the "Configuring a Basic BGP Network" module.

## **Configuring BGP NSF Awareness Timers**

Perform this task to adjust the BGP graceful restart timers.

#### **BGP Graceful Restart Timers**

There are two BGP graceful restart timers that can be configured. The optional **restart-time** keyword and *seconds* argument determine how long peer routers will wait to delete stale routes before a BGP open message is received. The default value is 120 seconds. The optional **stalepath-time** keyword and *seconds* argument determine how long a router will wait before deleting stale routes after an end of record (EOR) message is received from the restarting router. The default value is 360 seconds.



The configuration of the restart and stale-path timers is not required to enable the BGP graceful restart capability. The default values are optimal for most network deployments, and these values should be adjusted only by an experienced network operator.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- **3. router bgp** *autonomous-system-number*
- 4. **bgp graceful-restart [restart-time** seconds]
- 5. **bgp graceful-restart** [stalepath-time seconds]
- 6. end

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		• Enter your password if prompted.
	Example: Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	router bgp autonomous-system-number	Enters router configuration mode and creates a BGP routing process.
	<pre>Example: Router(config)# router bgp 45000</pre>	
Step 4	bgp graceful-restart [restart-time seconds]	Enables the BGP graceful restart capability and BGP NSF awareness.
	<pre>Example: Router(config-router)# bgp graceful-restart restart-time 130</pre>	<ul> <li>The restart-time argument determines how long peer routers will wait to delete stale routes before a BGP open message is received.</li> </ul>
		• The default value is 120 seconds. The configurable range is from 1 to 3600 seconds.
		Note Only the syntax applicable to this step is used in this example. For more details, see the <i>Cisco IOS IP Routing: BGP Command Reference</i> .

	Command or Action	Purpose
Step 5	bgp graceful-restart [stalepath-time seconds]	Enables the BGP graceful restart capability and BGP NSF awareness.
	<pre>Example: Router(config-router)# bgp graceful-restart stalepath-time 350</pre>	• The <b>stalepath-time</b> argument determines how long a router will wait before deleting stale routes after an end of record (EOR) message is received from the restarting router.
		• The default value is 360 seconds. The configurable range is from 1 to 3600 seconds.
		Note Only the syntax applicable to this step is used in this example. For more details, see the <i>Cisco IOS IP Routing: BGP Command Reference</i> .
Step 6	Router(config-router)# end	Exits router configuration mode and returns to privileged EXEC mode.
	<pre>Example: Router(config-router)# end</pre>	

#### What to Do Next

If the **bgp graceful-restart** command has been issued after the BGP session has been established, you must reset the peer sessions by issuing the **clear ip bgp** \* command or by reloading the router before graceful restart capabilities will be exchanged. For more information about resetting BGP sessions and using the **clear ip bgp** command, see the "Configuring a Basic BGP Network" module.

# **Enabling and Disabling BGP Graceful Restart Using BGP Peer Session Templates**

Perform this task to enable and disable BGP graceful restart for BGP neighbors using peer session templates. In this task, a BGP peer session template is created, and BGP graceful restart is enabled. A second peer session template is created, and this template is configured to disable BGP graceful restart.

In this example, the configuration is performed at Router B in Figure 1 and two external BGP neighbors—at Router A and Router E in Figure 1—are identified. The first BGP peer at Router A is configured to inherit the first peer session template that enables BGP graceful restart, whereas the second BGP peer at Router E inherits the second template that disables BGP graceful restart. Using the optional **show ip bgp neighbors** command, the status of the BGP graceful restart capability is verified for each BGP neighbor configured in this task.

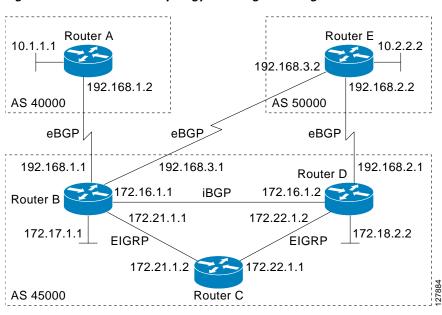


Figure 1 Network Topology Showing BGP Neighbors

The restart and stale-path timers can be modified only using the global **bgp graceful-restart** command as shown in the "Configuring BGP NSF Awareness Timers" section on page 18. The restart and stale-path timers are set to the default values when BGP graceful restart is enabled for BGP neighbors using peer session templates.

#### **BGP Peer Session Templates**

Peer session templates are used to group and apply the configuration of general BGP session commands to groups of neighbors that share session configuration elements. General session commands that are common for neighbors that are configured in different address families can be configured within the same peer session template. Peer session templates are created and configured in peer session configuration mode. Only general session commands can be configured in a peer session template.

General session commands can be configured once in a peer session template and then applied to many neighbors through the direct application of a peer session template or through indirect inheritance from a peer session template. The configuration of peer session templates simplifies the configuration of general session commands that are commonly applied to all neighbors within an autonomous system.

Peer session templates support direct and indirect inheritance. A BGP neighbor can be configured with only one peer session template at a time, and that peer session template can contain only one indirectly inherited peer session template. A BGP neighbor can directly inherit only one session template and can indirectly inherit up to seven additional peer session templates.

Peer session templates support inheritance. A directly applied peer session template can directly or indirectly inherit configurations from up to seven peer session templates. So, a total of eight peer session templates can be applied to a neighbor or neighbor group.

Peer session templates support only general session commands. BGP policy configuration commands that are configured only for a specific address family or NLRI configuration mode are configured with peer policy templates.

For more details about BGP peer session templates, see the "Configuring a Basic BGP Network" module.

#### Restrictions

A BGP peer cannot inherit from a peer policy or session template and be configured as a peer group member at the same. BGP templates and BGP peer groups are mutually exclusive.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. router bgp autonomous-system-number
- 4. template peer-session session-template-name
- 5. ha-mode graceful-restart [disable]
- 6. exit-peer-session
- 7. template peer-session session-template-name
- 8. ha-mode graceful-restart [disable]
- 9. exit-peer-session
- 10. bgp log-neighbor-changes
- 11. neighbor ip-address remote-as autonomous-system-number
- 12. neighbor ip-address inherit peer-session session-template-name
- **13**. **neighbor** *ip-address* **remote-as** *autonomous-system-number*
- 14. neighbor ip-address inherit peer-session session-template-name
- 15. end
- **16. show ip bgp template peer-session** [session-template-name]
- 17. show ip bgp neighbors [ip-address [received-routes | routes | advertised-routes | paths [regexp] | dampened-routes | flap-statistics | received prefix-filter | policy [detail]]]

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		• Enter your password if prompted.
	Example: Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	router bgp autonomous-system-number	Enters router configuration mode and creates a BGP routing process.
	Example: Router(config)# router bgp 45000	

	Command or Action	Purpose
Step 4	template peer-session session-template-name	Enters session-template configuration mode and creates a peer session template.
	<pre>Example: Router(config-router)# template peer-session S1</pre>	• In this example, a peer session template named S1 is created.
Step 5	ha-mode graceful-restart [disable]	Enables the BGP graceful restart capability and BGP NSF awareness.
	<pre>Example: Router(config-router-stmp)# ha-mode graceful-restart</pre>	• Use the <b>disable</b> keyword to disable BGP graceful restart capability.
	gracerur-restart	• If you enter this command after the BGP session has been established, you must restart the session in order for the capability to be exchanged with the BGP neighbor.
		• In this example, the BGP graceful restart capability is enabled for the peer session template named S1.
Step 6	exit-peer-session	Exits session-template configuration mode and returns to router configuration mode.
	<pre>Example: Router(config-router-stmp)# exit-peer-session</pre>	
Step 7	template peer-session session-template-name	Enters session-template configuration mode and creates a peer session template.
	<pre>Example: Router(config-router)# template peer-session S2</pre>	• In this example, a peer session template named S2 is created.
Step 8	ha-mode graceful-restart [disable]	Enables the BGP graceful restart capability and BGP NSF awareness.
	<pre>Example: Router(config-router-stmp)# ha-mode graceful-restart disable</pre>	• Use the <b>disable</b> keyword to disable BGP graceful restart capability.
	gracerur rescart disable	• If you enter this command after the BGP session has been established, you must restart the session in order for the capability to be exchanged with the BGP neighbor.
		• In this example, the BGP graceful restart capability is disabled for the peer session template named S2.
Step 9	exit-peer-session	Exits session-template configuration mode and returns to router configuration mode.
	<pre>Example: Router(config-router-stmp)# exit-peer-session</pre>	
Step 10	bgp log-neighbor-changes	Enables logging of BGP neighbor status changes (up or down) and neighbor resets.
	<pre>Example: Router(config-router)# bgp log-neighbor-changes</pre>	<ul> <li>Use this command for troubleshooting network connectivity problems and measuring network stability. Unexpected neighbor resets might indicate high error rates or high packet loss in the network and should be investigated.</li> </ul>

	Command or Action	Purpose
Step 11	neighbor ip-address remote-as autonomous-system-number	Configures peering with a BGP neighbor in the specified autonomous system.
	<pre>Example: Router(config-router)# neighbor 192.168.1.2 remote-as 40000</pre>	• In this example, the BGP peer at 192.168.1.2 is an external BGP peer because it has a different autonomous system number from the router where the BGP configuration is being entered (see Step 3).
Step 12	neighbor ip-address inherit peer-session	Inherits a peer session template.
	Example: Router(config-router)# neighbor 192.168.1.2 inherit peer-session S1	• In this example, the peer session template named S1 is inherited, and the neighbor inherits the enabling of BGP graceful restart.
Step 13	neighbor ip-address remote-as autonomous-system-number	Configures peering with a BGP neighbor in the specified autonomous system.
	<pre>Example: Router(config-router)# neighbor 192.168.3.2 remote-as 50000</pre>	• In this example, the BGP peer at 192.168.3.2 is an external BGP peer because it has a different autonomous system number from the router where the BGP configuration is being entered (see Step 3).
Step 14	neighbor ip-address inherit peer-session	Inherits a peer session-template.
	<pre>Example: Router(config-router)# neighbor 192.168.3.2 inherit peer-session S2</pre>	• In this example, the peer session template named S2 is inherited, and the neighbor inherits the disabling of BGP graceful restart.
Step 15	end	Exits router configuration mode and enters privileged EXEC mode.
	<pre>Example: Router(config-router)# end</pre>	
Step 16	<pre>show ip bgp template peer-session [session-template-number]</pre>	(Optional) Displays locally configured peer session templates.
	<pre>Example: Router# show ip bgp template peer-session</pre>	• The output can be filtered to display a single peer policy template with the <i>session-template-name</i> argument. This command also supports all standard output modifiers.
Step 17	<pre>show ip bgp neighbors [ip-address [received-routes   routes   advertised-routes   paths [regexp]   dampened-routes  </pre>	(Optional) Displays information about TCP and BGP connections to neighbors.
	flap-statistics   received prefix-filter   policy [detail]]]	<ul> <li>"Graceful Restart Capability: advertised" will be displayed for each neighbor that has exchanged graceful restart capabilities with this router.</li> </ul>
	Example: Router# show ip bgp neighbors 192.168.1.2	• In this example, the output is filtered to display information about the BGP peer at 192.168.1.2.

#### **Examples**

The following example shows partial output from the **show ip bgp neighbors** command for the BGP peer at 192.168.1.2 (Router A in Figure 1). Graceful restart is shown as enabled. Note the default values for the restart and stale-path timers. These timers can only be set using the **bgp graceful-restart** command.

```
Router# show ip bgp neighbors 192.168.1.2
BGP neighbor is 192.168.1.2, remote AS 40000, external link
 Inherits from template S1 for session parameters
 BGP version 4, remote router ID 192.168.1.2
  BGP state = Established, up for 00:02:11
 Last read 00:00:23, last write 00:00:27, hold time is 180, keepalive intervals
 Neighbor sessions:
   1 active, is multisession capable
  Neighbor capabilities:
    Route refresh: advertised and received(new)
   Address family IPv4 Unicast: advertised and received
   Graceful Restart Capability: advertised
   Multisession Capability: advertised and received
Address tracking is enabled, the RIB does have a route to 192.168.1.2
 Connections established 1; dropped 0
 Last reset never
 Transport(tcp) path-mtu-discovery is enabled
  Graceful-Restart is enabled, restart-time 120 seconds, stalepath-time 360 secs
Connection state is ESTAB, I/O status: 1, unread input bytes: 0
```

The following example shows partial output from the **show ip bgp neighbors** command for the BGP peer at 192.168.3.2 (Router E in Figure 1). Graceful restart is shown as disabled.

```
Router# show ip bgp neighbors 192.168.3.2
BGP neighbor is 192.168.3.2, remote AS 50000, external link
 Inherits from template S2 for session parameters
  BGP version 4, remote router ID 192.168.3.2
  BGP state = Established, up for 00:01:41
  Last read 00:00:45, last write 00:00:45, hold time is 180, keepalive intervals
  Neighbor sessions:
   1 active, is multisession capable
  Neighbor capabilities:
   Route refresh: advertised and received(new)
    Address family IPv4 Unicast: advertised and received
Address tracking is enabled, the RIB does have a route to 192.168.3.2
  Connections established 1; dropped 0
  Last reset never
  Transport(tcp) path-mtu-discovery is enabled
  Graceful-Restart is disabled
Connection state is ESTAB, I/O status: 1, unread input bytes: 0
```

## **Enabling BGP Graceful Restart for an Individual BGP Neighbor**

Perform this task on Router B in Figure 1 to enable BGP graceful restart on the internal BGP peer at Router C in Figure 1. Under address family IPv4, the neighbor at Router C is identified, and BGP graceful restart is enabled for the neighbor at Router C with the IP address 172.21.1.2. To verify that BGP graceful restart is enabled, the optional **show ip bgp neighbors** command is used.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. router bgp autonomous-system-number
- 4. address-family ipv4 [unicast | multicast | vrf vrf-name]
- $\textbf{5.} \quad \textbf{neighbor} \ ip\text{-}address \ \textbf{remote-as} \ autonomous\text{-}system\text{-}number$
- 6. neighbor ip-address activate
- 7. neighbor ip-address ha-mode graceful-restart [disable]
- 8. end
- 9. show ip bgp neighbors [ip-address [received-routes | routes | advertised-routes | paths [regexp] | dampened-routes | flap-statistics | received prefix-filter | policy [detail]]]

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		• Enter your password if prompted.
	Example:	
	Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	router bgp autonomous-system-number	Enters router configuration mode and creates a BGP routing process.
	<pre>Example: Router(config)# router bgp 45000</pre>	
Step 4	address-family ipv4 [unicast   multicast   vrf vrf-name]	Specifies the IPv4 address family and enters address family configuration mode.
	<pre>Example: Router(config-router)# address-family ipv4 unicast</pre>	• The <b>unicast</b> keyword specifies the IPv4 unicast address family. By default, the router is placed in address family configuration mode for the IPv4 unicast address family if the <b>unicast</b> keyword is not specified with the <b>address-family ipv4</b> command.
		• The <b>multicast</b> keyword specifies IPv4 multicast address prefixes.
		• The <b>vrf</b> keyword and <i>vrf-name</i> argument specify the name of the VRF instance to associate with subsequent IPv4 address family configuration mode commands.

	Command or Action	Purpose
Step 5	neighbor ip-address remote-as autonomous-system-number	Configures peering with a BGP neighbor in the specified autonomous system.
	<pre>Example: Router(config-router-af)# neighbor 172.21.1.2 remote-as 45000</pre>	• In this example, the BGP peer at 172.21.1.2 is an internal BGP peer because it has the same autonomous system number as the router where the BGP configuration is being entered (see Step 3).
Step 6	neighbor ip-address activate	Enables the neighbor to exchange prefixes for the IPv4 address family with the local router.
	<pre>Example: Router(config-router-af)# neighbor 172.21.1.2 activate</pre>	• In this example, the internal BGP peer at 172.21.1.2 is activated.
Step 7	neighbor ip-address ha-mode graceful-restart [disable]	Enables the BGP graceful restart capability for a BGP neighbor.
	<pre>Example: Router(config-router-af)# neighbor 172.21.1.2 ha-mode graceful-restart</pre>	<ul> <li>Use the disable keyword to disable BGP graceful restart capability.</li> <li>If you enter this command after the BGP session has been established, you must restart the session in order for the capability to be exchanged with the BGP neighbor.</li> </ul>
		• In this example, the BGP graceful restart capability is enabled for the neighbor at 172.21.1.2.
Step 8	end	Exits address family configuration mode and returns to privileged EXEC mode.
	<pre>Example: Router(config-router-af)# end</pre>	
Step 9	show ip bgp neighbors [ip-address [received-routes   routes   advertised-routes   paths [reqexp]   dampened-routes	(Optional) Displays information about TCP and BGP connections to neighbors.
	flap-statistics   received prefix-filter   policy [detail]]	<ul> <li>"Graceful Restart Capability: advertised" will be displayed for each neighbor that has exchanged graceful restart capabilities with this router.</li> </ul>
	Example: Router# show ip bgp neighbors 172.21.1.2	• In this example, the output is filtered to display information about the BGP peer at 172.21.1.2.

### **Examples**

The following example shows partial output from the **show ip bgp neighbors** command for the BGP peer at 172.21.1.2. Graceful restart is shown as enabled. Note the default values for the restart and stale-path timers. These timers can be set using only the global **bgp graceful-restart** command.

Router# show ip bgp neighbors 172.21.1.2

```
BGP neighbor is 172.21.1.2, remote AS 45000, internal link
BGP version 4, remote router ID 172.22.1.1
BGP state = Established, up for 00:01:01
Last read 00:00:02, last write 00:00:07, hold time is 180, keepalive intervals
Neighbor sessions:
    1 active, is multisession capable
Neighbor capabilities:
    Route refresh: advertised and received(new)
```

```
Address family IPv4 Unicast: advertised and received
Graceful Restart Capability: advertised
Multisession Capability: advertised and received
!
Address tracking is enabled, the RIB does have a route to 172.21.1.2
Connections established 1; dropped 0
Last reset never
Transport(tcp) path-mtu-discovery is enabled
Graceful-Restart is enabled, restart-time 120 seconds, stalepath-time 360 secs
Connection state is ESTAB, I/O status: 1, unread input bytes: 0
```

### **Disabling BGP Graceful Restart for a BGP Peer Group**

Perform this task to disable BGP graceful restart for a BGP peer group. In this task, a BGP peer group is created and graceful restart is disabled for the peer group. A BGP neighbor, 172.16.1.2 at Router D in Figure 1, is then identified and added as a peer group member and inherits the configuration associated with the peer group, which, in this example, disables BGP graceful restart.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. router bgp autonomous-system-number
- 4. address-family ipv4 [unicast | multicast | vrf vrf-name]
- 5. neighbor peer-group-name peer-group
- 6. neighbor peer-group-name remote-as autonomous-system-number
- 7. neighbor peer-group-name ha-mode graceful-restart [disable]
- 8. **neighbor** *ip-address* **peer-group** *peer-group-name*
- 9. end
- 10. show ip bgp neighbors [ip-address [received-routes | routes | advertised-routes | paths [regexp] | dampened-routes | flap-statistics | received prefix-filter | policy [detail]]]

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		• Enter your password if prompted.
	Example: Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	router bgp autonomous-system-number	Enters router configuration mode and creates a BGP routing process.
	Example: Router(config)# router bgp 45000	

	Command or Action	Purpose
Step 4	address-family ipv4 [unicast   multicast   vrf vrf-name]	Specifies the IPv4 address family and enters address family configuration mode.
	<pre>Example: Router(config-router)# address-family ipv4 unicast</pre>	• The <b>unicast</b> keyword specifies the IPv4 unicast address family. By default, the router is placed in address family configuration mode for the IPv4 unicast address family if the <b>unicast</b> keyword is not specified with the <b>address-family ipv4</b> command.
		<ul> <li>The multicast keyword specifies IPv4 multicast address prefixes.</li> </ul>
		• The <b>vrf</b> keyword and <i>vrf-name</i> argument specify the name of the VRF instance to associate with subsequent IPv4 address family configuration mode commands.
Step 5	neighbor peer-group-name peer-group	Creates a BGP peer group.
		• In this example, the peer group named PG1 is created.
	<pre>Example: Router(config-router-af)# neighbor PG1 peer-group</pre>	
Step 6	neighbor peer-group-name remote-as autonomous-system-number	Configures peering with a BGP peer group in the specified autonomous system.
	<pre>Example: Router(config-router-af)# neighbor PG1 remote-as 45000</pre>	• In this example, the BGP peer group named PG1 is added to the IPv4 multiprotocol BGP neighbor table of the local router.
Step 7	neighbor peer-group-name ha-mode graceful-restart [disable]	Enables the BGP graceful restart capability for a BGP neighbor.
	Example:	• Use the <b>disable</b> keyword to disable BGP graceful restart capability.
	Router(config-router-af)# neighbor PG1 ha-mode graceful-restart disable	• If you enter this command after the BGP session has been established, you must restart the session for the capability to be exchanged with the BGP neighbor.
		• In this example, the BGP graceful restart capability is disabled for the BGP peer group named PG1.
Step 8	neighbor ip-address peer-group peer-group-name	Assigns the IP address of a BGP neighbor to a peer group.
		• In this example, the BGP neighbor peer at 172.16.1.2 is
	<pre>Example: Router(config-router-af)# neighbor 172.16.1.2 peer-group PG1</pre>	configured as a member of the peer group named PG1.

	Command or Action	Purpose
Step 9	end	Exits address family configuration mode and returns to privileged EXEC mode.
	<pre>Example: Router(config-router-af)# end</pre>	
Step 10	show ip bgp neighbors [ip-address [received-routes   routes   advertised-routes   paths [regexp]   dampened-routes   flap-statistics   received prefix-filter   policy [detail]]  Example:	<ul> <li>(Optional) Displays information about TCP and BGP connections to neighbors.</li> <li>In this example, the output is filtered to display information about the BGP peer at 172.16.1.2 and the "Graceful-Restart is disabled" line shows that the graceful restart capability is disabled for this neighbor.</li> </ul>
	Router# show ip bgp neighbors 172.16.1.2	

#### **Examples**

The following example shows partial output from the **show ip bgp neighbors** command for the BGP peer at 172.16.1.2. Graceful restart is shown as disabled. Note the default values for the restart and stale-path timers. These timers can be set using only the global **bgp graceful-restart** command.

Router# show ip bgp neighbors 172.16.1.2

```
BGP neighbor is 172.16.1.2, remote AS 45000, internal link

Member of peer-group PG1 for session parameters

BGP version 4, remote router ID 0.0.0.0

BGP state = Idle

Neighbor sessions:

0 active, is multisession capable
!

Address tracking is enabled, the RIB does have a route to 172.16.1.2

Connections established 0; dropped 0

Last reset never

Transport(tcp) path-mtu-discovery is enabled

Graceful-Restart is disabled
```

### **Verifying the Configuration of BGP Nonstop Forwarding Awareness**

Use the following steps to verify the local configuration of BGP NSF awareness on a router and to verify the configuration of NSF awareness on peer routers in a BGP network.

#### **SUMMARY STEPS**

- 1. enable
- 2. **show running-config** [options]
- 3. show ip bgp neighbors [ip-address [received-routes | routes | advertised-routes | paths [regexp] | dampened-routes | flap-statistics | received prefix-filter | policy [detail]]]

#### **DETAILED STEPS**

#### Step 1 enable

Enables privileged EXEC mode. Enter your password if prompted.

Router> enable

#### **Step 2 show running-config** [options]

Displays the running configuration on the local router. The output will display the configuration of the **bgp graceful-restart** command in the BGP section. Repeat this command on all BGP neighbor routers to verify that all BGP peers are configured for BGP NSF awareness. In this example, BGP graceful restart is enabled globally and the external neighbor at 192.168.1.2 is configured to be a BGP peer and will have the BGP graceful restart capability enabled.

```
Router# show running-config
.
.
.
router bgp 45000
bgp router-id 172.17.1.99
bgp log-neighbor-changes
bgp graceful-restart restart-time 130
bgp graceful-restart stalepath-time 350
bgp graceful-restart
timers bgp 70 120
neighbor 192.168.1.2 remote-as 40000
neighbor 192.168.1.2 activate
.
```

# Step 3 show ip bgp neighbors [ip-address [received-routes | routes | advertised-routes | paths [regexp] | dampened-routes | flap-statistics | received prefix-filter | policy [detail]]]

Displays information about TCP and BGP connections to neighbors. "Graceful Restart Capability: advertised" will be displayed for each neighbor that has exchanged graceful restart capabilities with this router. In Cisco IOS XE Release 2.1 or later releases, the ability to enable or disable the BGP graceful restart capability for an individual BGP neighbor, peer group or peer session template was introduced and output was added to this command to show the BGP graceful restart status.

## **Configuring BGP Route Dampening**

The tasks in this section configure and monitor BGP route dampening. Route dampening is designed to minimize the propagation of flapping routes across an internetwork. A route is considered to be flapping when its availability alternates repeatedly.

- Enabling and Configuring BGP Route Dampening, page 31
- Monitoring and Maintaining BGP Route Dampening, page 33

## **Enabling and Configuring BGP Route Dampening**

Perform this task to enable and configure BGP route dampening.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. router bgp autonomous-system-number

- 4. address-family ipv4 [unicast | multicast | vrf vrf-name]
- **5. bgp dampening** [half-life reuse suppress max-suppress-time] [**route-map** map-name]
- 6. end

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	<pre>Example: Router&gt; enable</pre>	Enter your password if prompted.
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	router bgp as-number	Enters router configuration mode and creates a BGP routing process.
	Example: Router(config)# router bgp 45000	
Step 4	<pre>address-family ipv4 [unicast   multicast   vrf vrf-name]</pre>	Specifies the IPv4 address family and enters address family configuration mode.
	<pre>Example: Router(config-router)# address-family ipv4 unicast</pre>	• The <b>unicast</b> keyword specifies the IPv4 unicast address family. By default, the router is placed in address family configuration mode for the IPv4 unicast address family if the <b>unicast</b> keyword is not specified with the <b>address-family ipv4</b> command.
		• The <b>multicast</b> keyword specifies IPv4 multicast address prefixes.
		• The <b>vrf</b> keyword and <i>vrf-name</i> argument specify the name of the VRF instance to associate with subsequent IPv4 address family configuration mode commands.
Step 5	bgp dampening [half-life reuse suppress max-suppress-time] [route-map map-name]	Enables BGP route dampening and changes the default values of route dampening factors.
	<pre>Example: Router(config-router-af)# bgp dampening 30 1500 10000 120</pre>	<ul> <li>The half-life, reuse, suppress, and max-suppress-time arguments are all position dependent; if one argument is entered then all the arguments must be entered.</li> <li>Use the route-map keyword and map-name argument to control where BGP route dampening is enabled.</li> </ul>
Step 6	end	Exits address family configuration mode and enters privileged EXEC mode.
	<pre>Example: Router(config-router-af)# end</pre>	

## **Monitoring and Maintaining BGP Route Dampening**

Perform the steps in this task as required to monitor and maintain BGP route dampening.

#### **SUMMARY STEPS**

- 1. enable
- 2. show ip bgp flap-statistics [regexp regexp | filter-list access-list | ip-address mask [longer-prefix]]
- **3. clear ip bgp flap-statistics** [neighbor-address [ipv4-mask]] [**regexp** regexp | **filter-list** extcom-number]
- 4. show ip bgp dampened-paths
- 5. clear ip bgp [ipv4 {multicast | unicast} | ipv6 {multicast | unicast} | vpnv4 unicast] dampening [neighbor-address] [ipv4-mask]

### **DETAILED STEPS**

#### Step 1 enable

Enables privileged EXEC mode. Enter your password if prompted.

Router> enable

### Step 2 show ip bgp flap-statistics [regexp regexp | filter-list access-list | ip-address mask [longer-prefix]]

Use this command to monitor the flaps of all the paths that are flapping. The statistics will be deleted once the route is not suppressed and is stable for at least one half-life.

```
Router# show ip bgp flap-statistics
```

```
BGP table version is 10, local router ID is 172.17.232.182

Status codes: s suppressed, d damped, h history, * valid, > best, i - internal Origin codes: i - IGP, e - EGP, ? - incomplete

Network From Flaps Duration Reuse Path
```

```
*d 10.2.0.0 172.17.232.177 4 00:13:31 00:18:10 100 *d 10.2.0.0 172.17.232.177 4 00:02:45 00:28:20 100
```

## $\textbf{Step 3} \qquad \textbf{clear ip bgp flap-statistics} \ [\textit{neighbor-address} \ [\textit{ipv4-mask}]] \ [\textbf{regexp} \ \textit{regexp} \ | \ \textbf{filter-list} \ \textit{extcom-number}]$

Use this command to clear the accumulated penalty for routes that are received on a router that has BGP dampening enabled. If no arguments or keywords are specified, flap statistics are cleared for all routes. Flap statistics are also cleared when the peer is stable for the half-life time period. After the BGP flap statistics are cleared, the route is less likely to be dampened.

Router# clear ip bgp flap-statistics 172.17.232.177

### Step 4 show ip bgp dampened-paths

Use this command to monitor the flaps of all the paths that are flapping. The statistics will be deleted once the route is not suppressed and is stable for at least one half-life.

```
Router# show ip bgp dampened-paths
```

```
BGP table version is 10, local router ID is 172.29.232.182 Status codes: s suppressed, d damped, h history, * valid, > best, i - internal Origin codes: i - IGP, e - EGP, ? - incomplete
```

	Network	From	Reuse	Path
*d	10.0.0.0	172.16.232.177	00:18:4	100 ?
*4	10 2 0 0	172 16 232 177	00:28:5	100 2

# Step 5 clear ip bgp [ipv4 {multicast | unicast} | ipv6 {multicast | unicast} | vpnv4 unicast] dampening [neighbor-address] [ipv4-mask]

Use this command to clear stored route dampening information. If no keywords or arguments are entered, route dampening information for the entire routing table is cleared. The following example clears route dampening information for VPNv4 address family prefixes from network 192.168.10.0/24, and unsuppresses its suppressed routes.

Router# clear ip bgp vpnv4 unicast dampening 192.168.10.0 255.255.255.0

## **Decreasing BGP Convergence Time Using BFD**

You start a BFD process by configuring BFD on the interface. When the BFD process is started, no entries are created in the adjacency database, in other words, no BFD control packets are sent or received. The adjacency creation takes places once you have configured BFD support for the applicable routing protocols. The first two tasks must be configured to implement BFD support for BGP to reduce the BGP convergence time. The third task is an optional task to help monitor or troubleshoot BFD.

- Configuring BFD Session Parameters on the Interface, page 34
- Configuring BFD Support for BGP, page 35
- What to Do Next, page 37

## **Prerequisites**

- Cisco Express Forwarding (CEF) and IP routing must be enabled on all participating routers.
- BGP must be configured on the routers before BFD is deployed. You should implement fast convergence for the routing protocol that you are using. See the IP routing documentation for your version of Cisco IOS XE software for information on configuring fast convergence.

## **Restrictions**

- For the Cisco implementation of BFD support for BGP in Cisco IOS XE Release 2.1, BFD is supported only for IPv4 networks, and only asynchronous mode is supported. In asynchronous mode, either BFD peer can initiate a BFD session.
- BFD works only for directly-connected neighbors. BFD neighbors must be no more than one IP hop away. Multihop configurations are not supported.
- Configuring both BFD and BGP graceful restart for NSF on a router running BGP may result in suboptimal routing. For more details, see the "BFD for BGP" section on page 7.

## **Configuring BFD Session Parameters on the Interface**

The steps in this procedure show how to configure BFD on the interface by setting the baseline BFD session parameters on an interface. Repeat the steps in this procedure for each interface over which you want to run BFD sessions to BFD neighbors.

### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. interface type number
- 4. bfd interval milliseconds min\_rx milliseconds multiplier interval-multiplier
- 5. end

### **DETAILED STEPS**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		• Enter your password if prompted.
	Example: Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	interface type number	Enters interface configuration mode.
	<pre>Example: Router(config)# interface FastEthernet 2/0/0</pre>	
Step 4	<pre>bfd interval milliseconds min_rx milliseconds multiplier interval-multiplier</pre>	Enables BFD on the interface.
	<pre>Example: Router(config-if)# bfd interval 50 min_rx 50 multiplier 5</pre>	
Step 5	end	Exits interface configuration mode.
	<pre>Example: Router(config-if)# end</pre>	

## **Configuring BFD Support for BGP**

Perform this task to configure BFD support for BGP, so that BGP is a registered protocol with BFD and will receive forwarding path detection failure messages from BFD.

## **Prerequisites**

- BGP must be running on all participating routers.
- The baseline parameters for BFD sessions on the interfaces over which you want to run BFD sessions to BFD neighbors must be configured. See the "Configuring BFD Session Parameters on the Interface" section on page 34 for more information.

## **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. router bgp autonomous-system-number
- 4. neighbor ip-address fall-over bfd
- 5. end
- 6. show bfd neighbors [details]
- 7. show ip bgp neighbors [ip-address [received-routes | routes | advertised-routes | paths [regexp] | dampened-routes | flap-statistics | received prefix-filter | policy [detail]]]

### **DETAILED STEPS**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		• Enter your password if prompted.
	Example: Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	router bgp autonomous-system-number	Specifies a BGP process and enters router configuration mode.
	<pre>Example: Router(config)# router bgp tag1</pre>	
Step 4	neighbor ip-address fall-over bfd	Enables BFD support for fallover.
	<pre>Example: Router(config-router)# neighbor 172.16.10.2 fall-over bfd</pre>	
Step 5	end	Returns the router to privileged EXEC mode.
	<pre>Example: Router(config-router)# end</pre>	

	Command or Action	Purpose
Step 6	show bfd neighbors [details]	Verifies that the BFD neighbor is active and displays the routing protocols that BFD has registered.
	Example: Router# show bfd neighbors detail	
Step 7	show ip bgp neighbors [ip-address [received-routes   routes   advertised-routes   paths [regexp]   dampened-routes   flap-statistics   received prefix-filter   policy [detail]]	Displays information about BGP and TCP connections to neighbors.
	Example: Router# show ip bgp neighbors	

### What to Do Next

For more details about BFD, see the "Bidirectional Forwarding Detection" chapter of the *Cisco IOS XE IP Routing: BFD Configuration Guide*, Release 2.3.

# **Enabling BGP MIB Support**

SNMP notifications can be configured on the router and GET operations can be performed from an external management station only after BGP SNMP support is enabled. Perform this task on a router to configure SNMP notifications for the BGP MIB.

### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. snmp-server enable traps bgp [[state-changes [all] [backward-trans] [limited]] | [threshold prefix]]
- 4. exit

### **DETAILED STEPS**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		• Enter your password if prompted.
	Example:	
	Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Router# configure terminal	

	Command or Action	Purpose
Step 3	<pre>snmp-server enable traps bgp [[state-changes [all] [backward-trans] [limited]]   [threshold prefix]]</pre>	Enables BGP support for SNMP operations. Entering this command with no keywords or arguments enables support for all BGP events.
	Example: Router# snmp-server enable traps bgp	• The <b>state-changes</b> keyword is used to enable support for FSM transition events.
	ROUTEL# SIMIP-SELVEL CHADLE CLAPS DGP	• The <b>all</b> keyword enables support for FSM transitions events.
		• The <b>backward-trans</b> keyword enables support only for backward transition state change events.
		<ul> <li>The limited keyword enables support for backward transition state changes and established state events.</li> </ul>
		• The <b>threshold</b> and <b>prefix</b> keywords are used to enable notifications when the configured maximum prefix limit is reached on the specified peer.
Step 4	exit	Exits global configuration mode and returns to privileged EXEC mode.
	<pre>Example: Router(config)# exit</pre>	

# **Configuration Examples for Configuring Advanced BGP Features**

This section contains the following examples:

- Enabling and Disabling BGP Next-Hop Address Tracking: Example, page 38
- Adjusting the Delay Interval for BGP Next-Hop Address Tracking: Example, page 38
- Configuring BGP Selective Next-Hop Route Filtering: Examples, page 39
- Enabling BGP Global NSF Awareness Using Graceful Restart: Example, page 39
- Enabling and Disabling BGP Graceful Restart per Neighbor: Examples, page 39
- Configuring BGP Route Dampening: Example, page 41
- Enabling BGP MIB Support: Examples, page 41

## **Enabling and Disabling BGP Next-Hop Address Tracking: Example**

In the following example, next-hop address tracking is disabled under the IPv4 address family session:

router bgp 50000
address-family ipv4 unicast
no bgp nexthop trigger enable

# Adjusting the Delay Interval for BGP Next-Hop Address Tracking: Example

In the following example, the delay interval for next-hop tracking is configured to occur every 20 seconds under the IPv4 address family session:

```
router bgp 50000
address-family ipv4 unicast
bgp nexthop trigger delay 20
```

## **Configuring BGP Selective Next-Hop Route Filtering: Examples**

The following example shows how to configure BGP selective next-hop route filtering to avoid using a BGP prefix as the next-hop route. If the most specific route that covers the next hop is a BGP route, then the BGP route will be marked as unreachable. The next hop must be an IGP or static route.

```
router bgp 45000
address-family ipv4 unicast
bgp nexthop route-map CHECK-BGP
exit
exit
route-map CHECK-BGP deny 10
match source-protocol bgp 1
exit
route-map CHECK-BGP permit 20
end
```

The following example shows how to configure BGP selective next-hop route filtering to avoid using a BGP prefix as the next-hop route and to ensure that the prefix is more specific than /25.

```
router bgp 45000
address-family ipv4 unicast
bgp nexthop route-map CHECK-BGP25
exit
exit
ip prefix-list FILTER25 seq 5 permit 0.0.0.0/0 le 25
route-map CHECK-BGP25 deny 10
match ip address prefix-list FILTER25
exit
route-map CHECK-BGP25 deny 20
match source-protocol bgp 1
exit
route-map CHECK-BGP25 permit 30
end
```

## **Enabling BGP Global NSF Awareness Using Graceful Restart: Example**

The following example enables BGP NSF awareness globally on all BGP neighbors. The restart time is set to 130 seconds and the stale path time is set to 350 seconds. The configuration of these timers is optional and the preconfigured default values are optimal for most network deployments.

```
configure terminal
router bgp 45000
bgp graceful-restart
bgp graceful-restart restart-time 130
bgp graceful-restart stalepath-time 350
end
```

## **Enabling and Disabling BGP Graceful Restart per Neighbor: Examples**

The ability to enable or disable the BGP graceful restart capability for an individual BGP neighbor, peer group, or peer session template was introduced. The following example is configured on Router B in Figure 2 and enables the BGP graceful restart capability for the BGP peer session template named S1

and disables the BGP graceful restart capability for the BGP peer session template named S2. The external BGP neighbor at Router A in Figure 2 (192.168.1.2) inherits peer session template S1, and the BGP graceful restart capability is enabled for this neighbor. Another external BGP neighbor at Router E in Figure 2 (192.168.3.2) is configured with the BGP graceful restart capability disabled after inheriting peer session template S2.

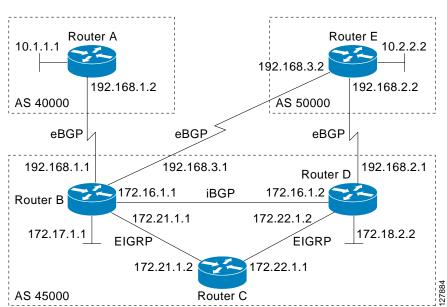


Figure 2 Network Topology Showing BGP Neighbors for BGP Graceful Restart

The BGP graceful restart capability is enabled for an individual internal BGP neighbor, 172.21.1.2 at Router C in Figure 2, whereas the BGP graceful restart is disabled for the BGP neighbor 172.16.1.2 at Router D in Figure 2 because it is a member of the peer group PG1. The disabling of BGP graceful restart is configured for all members of the peer group, PG1. The restart and stale-path timers are modified and the BGP sessions are reset.

```
router bgp 45000
template peer-session S1
remote-as 40000
ha-mode graceful-restart
 exit-peer-session
 template peer-session S2
 remote-as 50000
ha-mode graceful-restart disable
 exit-peer-session
 bgp log-neighbor-changes
bgp graceful-restart restart-time 150
bgp graceful-restart stalepath-time 400
 address-family ipv4 unicast
neighbor PG1 peer-group
 neighbor PG1 remote-as 45000
neighbor PG1 ha-mode graceful-restart disable
neighbor 172.16.1.2 peer-group PG1
neighbor 172.21.1.2 remote-as 45000
 neighbor 172.21.1.2 activate
neighbor 172.21.1.2 ha-mode graceful-restart
neighbor 192.168.1.2 remote-as 40000
neighbor 192.168.1.2 inherit peer-session S1
neighbor 192.168.3.2 remote-as 50000
neighbor 192.168.3.2 inherit peer-session S2
```

```
end
clear ip bgp *
```

To demonstrate how the last configuration instance of the BGP graceful restart capability is applied, the following example initially enables the BGP graceful restart capability globally for all BGP neighbors. A BGP peer group, PG2, is configured with the BGP graceful restart capability disabled. An individual external BGP neighbor, 192.168.1.2 at Router A in Figure 2, is then configured to be a member of the peer group, PG2. The last graceful restart configuration instance is applied, and, in this case, the neighbor, 192.168.1.2, inherits the configuration instance from the peer group PG2 and the BGP graceful restart capability is disabled for this neighbor.

```
router bgp 45000
bgp log-neighbor-changes
bgp graceful-restart
address-family ipv4 unicast
neighbor PG2 peer-group
neighbor PG2 remote-as 40000
neighbor PG2 ha-mode graceful-restart disable
neighbor 192.168.1.2 peer-group PG2
end
clear ip bgp *
```

# **Configuring BGP Route Dampening: Example**

The following example configures BGP dampening to be applied to prefixes filtered through the route-map named ACCOUNTING:

```
ip prefix-list FINANCE permit 10.0.0.0/8
!
route-map ACCOUNTING
match ip address ip prefix-list FINANCE
exit
router bgp 50000
address-family ipv4
bgp dampening route-map ACCOUNTING
end
```

## **Enabling BGP MIB Support: Examples**

The following example enables SNMP support for all supported BGP events:

```
Router(config)# snmp-server enable traps bgp
```

The following verification example shows that SNMP support for BGP is enabled and shown the running-config file:

```
Router# show run | include snmp-server snmp-server enable traps bgp
```

## Where to Go Next

• If you want to connect to an external service provider and use other external BGP features, see the "Connecting to a Service Provider Using External BGP" module.

- If you want to configure some internal BGP features, see the "Configuring Internal BGP Features" chapter of the BGP section of the Cisco IOS XE IP Routing: BGP Configuration Guide, Release 2.3.
- If you want to configure BGP neighbor session options, see the "Configuring BGP Neighbor Session Options" module.

# **Additional References**

The following sections provide references related to configuring advanced BGP features.

# **Related Documents**

Related Topic	Document Title
BGP commands: complete command syntax, command mode, defaults, command history, usage guidelines, and examples	Cisco IOS IP Routing: BGP Command Reference
Overview of Cisco BGP conceptual information with links to all the individual BGP modules	"Cisco BGP Overview" module of the Cisco IOS XE IP Routing: BGP Configuration Guide, Release 2.3.
Conceptual and configuration details for basic BGP tasks.	"Configuring a Basic BGP Network" module of the Cisco IOS XE IP Routing: BGP Configuration Guide, Release 2.3.
Information about connecting to external BGP peers.	"Connecting to a Service Provider Using External BGP" module of the Cisco IOS XE IP Routing: BGP Configuration Guide, Release 2.3.
Information about internal BGP peers.	"Configuring Internal BGP Features" module of the Cisco IOS XE IP Routing: BGP Configuration Guide, Release 2.3.
Information about BFD.	"Bidirectional Forwarding Detection" module of the Cisco IOS XE IP Routing: BGP Configuration Guide, Release 2.3.
Information about SNMP and SNMP operations.	"Configuring SNMP Support" section of the Cisco IOS XE Network Management Configuration Guide, Release 2.3.
Cisco IOS master command list, all releases	Cisco IOS Master Command List, All Releases

## **Standards**

Standard	Title
MDT SAFI	MDT SAFI

## **MIBs**

MIB	MIBs Link
No new or modified MIBs are supported by this feature, and support for existing MIBs has not been modified by this feature.	To locate and download MIBs for selected platforms, Cisco IOS XE software releases, and feature sets, use Cisco MIB Locator found at the following URL:
	http://www.cisco.com/go/mibs

# **RFCs**

RFC	Title
RFC 1657	Definitions of Managed Objects for the Fourth Version of the Border Gateway Protocol (BGP-4) using SMIv2
RFC 1771	A Border Gateway Protocol 4 (BGP-4)
RFC 1772	Application of the Border Gateway Protocol in the Internet
RFC 1773	Experience with the BGP Protocol
RFC 1774	BGP-4 Protocol Analysis
RFC 1930	Guidelines for Creation, Selection, and Registration of an Autonomous System (AS)
RFC 2519	A Framework for Inter-Domain Route Aggregation
RFC 2858	Multiprotocol Extensions for BGP-4
RFC 2918	Route Refresh Capability for BGP-4
RFC 3392	Capabilities Advertisement with BGP-4
RFC 4724	Graceful Restart Mechanism for BGP

# **Technical Assistance**

Description	Link
The Cisco Support website provides extensive online resources, including documentation and tools for troubleshooting and resolving technical issues with Cisco products and technologies.	http://www.cisco.com/techsupport
To receive security and technical information about your products, you can subscribe to various services, such as the Product Alert Tool (accessed from Field Notices), the Cisco Technical Services Newsletter, and Really Simple Syndication (RSS) Feeds.	
Access to most tools on the Cisco Support website requires a Cisco.com user ID and password.	

# **Feature Information for Configuring Advanced BGP Features**

Table 1 lists the features in this module and provides links to specific configuration information.

Use Cisco Feature Navigator to find information about platform support and software image support. Cisco Feature Navigator enables you to determine which Cisco IOS XE software images support a specific software release, feature set, or platform. To access Cisco Feature Navigator, go to <a href="http://www.cisco.com/go/cfn">http://www.cisco.com/go/cfn</a>. An account on Cisco.com is not required.



Table 1 lists only the Cisco IOS XE software release that introduced support for a given feature in a given Cisco IOS XE software release train. Unless noted otherwise, subsequent releases of that Cisco IOS XE software release train also support that feature.

Table 1 Feature Information for Configuring Advanced BGP Features

Feature Name	Releases	Feature Configuration Information
BGP Convergence Optimization	Cisco IOS XE Release 2.1	This feature was introduced on the Cisco ASR 1000 Series Routers.
BGP Graceful Restart per Neighbor	Cisco IOS XE Release 2.1	The BGP Graceful Restart per Neighbor feature enables or disables the BGP graceful restart capability for an individual BGP neighbor, including using peer session templates and BGP peer groups.
		This feature was introduced on the Cisco ASR 1000 Series Aggregation Services Routers.
		The following sections provide information about this feature:
		BGP Graceful Restart per Neighbor, page 6
		• Enabling and Disabling BGP Graceful Restart Using BGP Peer Session Templates, page 20
		• Enabling BGP Graceful Restart for an Individual BGP Neighbor, page 25
		• Disabling BGP Graceful Restart for a BGP Peer Group, page 28
		• Enabling and Disabling BGP Graceful Restart per Neighbor: Examples, page 39
		The following commands were introduced or modified by this feature: ha-mode graceful-restart, neighbor ha-mode graceful-restart, show ip bgp neighbors.

Table 1 Feature Information for Conf.	iguring Advanced	BGP Features (continued)
Feature Name	Releases	Feature Configuration Information
BGP MIB Support Enhancements	Cisco IOS XE Release 2.1	The BGP MIB Support Enhancements feature introduced support in the CISCO-BGP4-MIB for new SNMP notifications.
		This feature was introduced on the Cisco ASR 1000 Series Routers.
		The following sections provide information about this feature:
		BGP MIB Support, page 8
		• Enabling BGP MIB Support, page 37
		• Enabling BGP MIB Support: Examples, page 41
		The following command was introduced in this feature: snmp-server enable traps bgp.
	Cisco IOS XE Release 2.1	Nonstop Forwarding (NSF) awareness allows a router to assist NSF-capable neighbors to continue forwarding packets during a Stateful Switchover (SSO) operation. The BGP Nonstop Forwarding Awareness feature allows an NSF-aware router that is running BGP to forward packets along routes that are already known for a router that is performing an SSO operation. This capability allows the BGP peers of the failing router to retain the routing information that is advertised by the failing router and continue to use this information until the failed router has returned to normal operating behavior and is able to exchange routing information. The peering session is maintained throughout the entire NSF operation.
		This feature was introduced on the Cisco ASR 1000 Series Routers.
		The following sections provide information about this feature:
		BGP Nonstop Forwarding Awareness, page 3
		Configuring BGP Nonstop Forwarding Awareness     Using BGP Graceful Restart, page 16
		• Enabling BGP Global NSF Awareness Using Graceful Restart: Example, page 39
		• Enabling and Disabling BGP Graceful Restart per Neighbor: Examples, page 39
		Configuring BGP Route Dampening: Example, page 41
		The following commands were introduced or modified by this feature: bgp graceful-restart, show ip bgp, show ip bgp neighbors.

Table 1 Feature Information for Configuring Advanced BGP Features (continued)

Feature Name	Releases	Feature Configuration Information
BGP Selective Address Tracking	Cisco IOS XE Release 2.1	The BGP Selective Address Tracking feature introduces the use of a route map for next-hop route filtering and fast session deactivation. Selective next-hop filtering uses a route map to selectively define routes to help resolve the BGP next hop, or a route map can be used to determine if a peering session with a BGP neighbor should be reset when a route to the BGP peer changes.
		This feature was introduced on the Cisco ASR 1000 Series Routers.
		The following sections provide information about this feature:
		• Selective BGP Next-Hop Route Filtering, page 3
		• Configuring BGP Selective Next-Hop Route Filtering, page 13
		• Configuring BGP Selective Next-Hop Route Filtering: Examples, page 39
		The following commands were modified by this feature: <b>bgp nexthop, neighbor fall-over</b> .

Table 1 Feature Information for Configuring Advanced BGP Features (continued)

Feature Name	Releases	Feature Configuration Information
BGP Support for BFD	Cisco IOS XE Release 2.1	Bidirectional Forwarding Detection (BFD) is a detection protocol designed to provide fast forwarding path failure detection times for all media types, encapsulations, topologies, and routing protocols. In addition to fast forwarding path failure detection, BFD provides a consistent failure detection method for network administrators. Because the network administrator can use BFD to detect forwarding path failures at a uniform rate, rather than the variable rates for different routing protocol hello mechanisms, network profiling and planning will be easier, and reconvergence time will be consistent and predictable. The main benefit of implementing BFD for BGP is a significantly faster reconvergence time.  This feature was introduced on the Cisco ASR 1000 Series Routers.  The following sections provide information about this
		feature:  • BFD for BGP, page 7
		<ul> <li>Decreasing BGP Convergence Time Using BFD, page 34</li> </ul>
		The following commands were introduced or modified by this feature: <b>bfd</b> , <b>neighbor fall-over</b> , <b>show bfd neighbors</b> , <b>show ip bgp neighbors</b> .

Table 1 Feature Information for Configuring Advanced BGP Features (continued)

Feature Name	Releases	Feature Configuration Information
BGP Support for Next-Hop Address Tracking	Cisco IOS XE Release 2.1	The BGP Support for Next-Hop Address Tracking feature is enabled by default when a supporting Cisco IOS XE software image is installed. BGP next-hop address tracking is event driven. BGP prefixes are automatically tracked as peering sessions are established. Next-hop changes are rapidly reported to the BGP routing process as they are updated in the RIB. This optimization improves overall BGP convergence by reducing the response time to next-hop changes for routes installed in the RIB. When a bestpath calculation is run in between BGP scanner cycles, only next-hop changes are tracked and processed.  This feature was introduced on the Cisco ASR 1000 Series Routers.  The following sections provide information about this feature:  BGP Support for Next-Hop Address Tracking, page 3  Configuring BGP Next-Hop Address Tracking, page 10  Enabling and Disabling BGP Next-Hop Address Tracking: Example, page 38  Adjusting the Delay Interval for BGP Next-Hop Address Tracking: Example, page 38
		The following command was introduced in this feature: <b>bgp nexthop</b> .

CCDE, CCENT, CCSI, Cisco Eos, Cisco HealthPresence, Cisco IronPort, the Cisco logo, Cisco Nurse Connect, Cisco Pulse, Cisco SensorBase, Cisco StackPower, Cisco StadiumVision, Cisco TelePresence, Cisco Unified Computing System, Cisco WebEx, DCE, Flip Channels, Flip for Good, Flip Mino, Flipshare (Design), Flip Ultra, Flip Video, Flip Video (Design), Instant Broadband, and Welcome to the Human Network are trademarks; Changing the Way We Work, Live, Play, and Learn, Cisco Capital, Cisco Capital (Design), Cisco:Financed (Stylized), Cisco Store, Flip Gift Card, and One Million Acts of Green are service marks; and Access Registrar, Aironet, AllTouch, AsyncOS, Bringing the Meeting To You, Catalyst, CCDA, CCDP, CCIP, CCNA, CCNP, CCSP, CCVP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IOS, Cisco Lumin, Cisco Nexus, Cisco Press, Cisco Systems, Cisco Systems Capital, the Cisco Systems logo, Cisco Unity, Collaboration Without Limitation, Continuum, EtherFast, EtherSwitch, Event Center, Explorer, Follow Me Browsing, GainMaker, iLYNX, IOS, iPhone, IronPort, the IronPort logo, Laser Link, LightStream, Linksys, MeetingPlace, MeetingPlace Chime Sound, MGX, Networkers, Networking Academy, PCNow, PIX, PowerKEY, PowerPanels, PowerTV, PowerTV (Design), PowerVu, Prisma, ProConnect, ROSA, SenderBase, SMARTnet, Spectrum Expert, StackWise, WebEx, and the WebEx logo are registered trademarks of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries.

All other trademarks mentioned in this document or website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0910R)

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, and figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

© 2005-2009 Cisco Systems, Inc. All rights reserved.



# **BGP Link Bandwidth**

First Published: 2004 Last Updated: May 4, 2009

The Border Gateway Protocol (BGP) Link Bandwidth feature is used to advertise the bandwidth of an autonomous system exit link as an extended community. This feature is configured for links between directly connected external BGP (eBGP) neighbors. The link bandwidth extended community attribute is propagated to iBGP peers when extended community exchange is enabled. This feature is used with BGP multipath features to configure load balancing over links with unequal bandwidth.

# Finding Feature Information

For the latest feature information and caveats, see the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the "Feature Information for BGP Link Bandwidth" section on page 11.

Use Cisco Feature Navigator to find information about platform support and Cisco IOS XE software image support. To access Cisco Feature Navigator, go to <a href="http://www.cisco.com/go/cfn">http://www.cisco.com/go/cfn</a>. An account on Cisco.com is not required.

## **Contents**

- Prerequisites for BGP Link Bandwidth, page 2
- Restrictions for BGP Link Bandwidth, page 2
- Information About BGP Link Bandwidth, page 2
- How to Configure BGP Link Bandwidth, page 3
- Configuration Examples for BGP Link Bandwidth, page 5
- Additional References, page 9
- Feature Information for BGP Link Bandwidth, page 11



# **Prerequisites for BGP Link Bandwidth**

- BGP load balancing or multipath load balancing must be configured before this feature is enabled.
- BGP extended community exchange must be enabled between iBGP neighbors to which the link bandwidth attribute is to be advertised.
- Cisco Express Forwarding or distributed Cisco Express Forwarding must be enabled on all participating routers.

# **Restrictions for BGP Link Bandwidth**

- This feature can be configured only under IPv4 and VPNv4 address family sessions.
- BGP can originate the link bandwidth community only for directly connected links to eBGP neighbors.
- Both iBGP and eBGP load balancing are supported in IPv4 and VPNv4 address families. However, eiBGP load balancing is supported only in VPNv4 address family.

# **Information About BGP Link Bandwidth**

To configure the BGP Link Bandwidth feature, you must understand the following concept:

- BGP Link Bandwidth Overview, page 2
- Link Bandwidth Extended Community Attribute, page 3
- Benefits of the BGP Link Bandwidth Feature, page 3

## **BGP Link Bandwidth Overview**

The BGP Link Bandwidth feature used to enable multipath load balancing for external links with unequal bandwidth capacity. This feature is enabled under an IPv4 or VPNv4 address family sessions by entering the **bgp dmzlink-bw** command. This feature supports both iBGP, eBGP multipath load balancing, and eiBGP multipath load balancing in Multiprotocol Label Switching (MPLS) Virtual Private Networks (VPNs). When this feature is enabled, routes learned from directly connected external neighbor are propagated through the internal BGP (iBGP) network with the bandwidth of the source external link.

The link bandwidth extended community indicates the preference of an autonomous system exit link in terms of bandwidth. This extended community is applied to external links between directly connected eBGP peers by entering the **neighbor dmzlink-bw** command. The link bandwidth extended community attribute is propagated to iBGP peers when extended community exchange is enabled with the **neighbor send-community** command.

## **Link Bandwidth Extended Community Attribute**

The link bandwidth extended community attribute is a 4-byte value that is configured for a link that on the demilitarized zone (DMZ) interface that connects two single hop eBGP peers. The link bandwidth extended community attribute is used as a traffic sharing value relative to other paths while forwarding traffic. Two paths are designated as equal for load balancing if the weight, local-pref, as-path length, Multi Exit Discriminator (MED), and Interior Gateway Protocol (IGP) costs are the same.

## **Benefits of the BGP Link Bandwidth Feature**

The BGP Link Bandwidth feature allows BGP to be configured to send traffic over multiple iBGP or eBGP learned paths where the traffic that is sent is proportional to the bandwidth of the links that are used to exit the autonomous system. The configuration of this feature can be used with eBGP and iBGP multipath features to enable unequal cost load balancing over multiple links.

# **How to Configure BGP Link Bandwidth**

This section contains the following procedures:

- Configuring BGP Link Bandwidth, page 3
- Verifying BGP Link Bandwidth Configuration, page 5

# **Configuring BGP Link Bandwidth**

To configure the BGP Link Bandwidth feature, perform the steps in this section.

### **SUMMARY STEPS**

- 1. enable
- 2. configure {terminal | memory | network}
- 3. router bgp autonomous-system-number
- 4. address-family ipv4 [mdt | multicast | tunnel | unicast [vrf vrf-name] | vrf vrf-name] | vpnv4 [unicast]
- 5. bgp dmzlink-bw
- 6. neighbor ip-address dmzlink-bw
- 7. **neighbor** *ip-address* **send-community** [**both** | **extended** | **standard**]
- 8. end

## **DETAILED STEPS**

	Command or Action	Purpose
Step 1	enable	Enables higher privilege levels, such as privileged EXEC mode.
	Example: Router> enable	Enter your password if prompted.
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	router bgp autonomous-system-number	Enters router configuration mode to create or configure a BGP routing process.
	<pre>Example: Router(config)# router bgp 50000</pre>	
Step 4	address-family ipv4 [mdt   multicast   tunnel	Enters address family configuration mode.
	<pre>unicast [vrf vrf-name]   vrf vrf-name]   vpnv4 [unicast]</pre>	The BGP Link Bandwidth feature is supported only under the IPv4 and VPNv4 address families.
	<pre>Example: Router(config-router)# address-family ipv4</pre>	
Step 5	bgp dmzlink-bw	Configures BGP to distribute traffic proportionally to the bandwidth of the link.
	<pre>Example: Router(config-router-af)# bgp dmzlink-bw</pre>	<ul> <li>This command must be entered on each router that contains an external interface that is to be used for multipath load balancing.</li> </ul>
Step 6	neighbor ip-address dmzlink-bw	Configures BGP to include the link bandwidth attribute for routes learned from the external interface specified IP address.
	Example: Router(config-router-af)# neighbor 172.16.1.1 dmzlink-bw	This command must be configured for each eBGP link that is to be configured as a multipath. Enabling this command allows the bandwidth of the external link to be propagated through the link bandwidth extended community.
Step 7	$\begin{array}{cccccccccccccccccccccccccccccccccccc$	(Optional) Enables community and/or extended community exchange with the specified neighbor.
	<pre>Example: Router(config-router-af)# neighbor 10.10.10.1 send-community extended</pre>	• This command must be configured for iBGP peers to which the link bandwidth extended community attribute is to be propagated.
Step 8	end	Exits address family configuration mode, and enters Privileged EXEC mode.
	<pre>Example: Router(config-router-af)# end</pre>	

# **Verifying BGP Link Bandwidth Configuration**

To verify the BGP Link Bandwidth feature, perform the steps in this section.

### **SUMMARY STEPS**

- 1. enable
- 2. **show ip bgp** *ip-address* [longer-prefixes [injected] | **shorter-prefixes** [mask-length]]
- **3. show ip route** [[ip-address [mask] [longer-prefixes]] | [protocol [process-id]] | [list access-list-number | access-list-name] | [static download]]

### **DETAILED STEPS**

	Command or Action	Purpose
Step 1	enable	Enables higher privilege levels, such as privileged EXEC mode.
	Example: Router> enable	Enter your password if prompted.
Step 2	<pre>show ip bgp ip-address [longer-prefixes [injected]   shorter-prefixes [mask-length]]</pre>	Displays information about the TCP and BGP connections to neighbors.
	Example: Router# show ip bgp 10.0.0.0	• The output displays the status of the link bandwidth configuration. The bandwidth of the link is shown in kilobytes.
Step 3	<pre>show ip route [[ip-address [mask] [longer-prefixes]]   [protocol [process-id]]   [list access-list-number   access-list-name]   [static download]]</pre>	Displays the current state of the routing table.  The output displays traffic share values, including the weights of the links that are used to direct traffic proportionally to the bandwidth of each link.
	Example: Router# show ip route 10.0.0.0	

# **Configuration Examples for BGP Link Bandwidth**

The following examples show how to configure and verify this feature:

- BGP Link Bandwidth Configuration: Example, page 5
- Verifying BGP Link Bandwidth, page 7

# **BGP Link Bandwidth Configuration: Example**

In the following examples, the BGP Link Bandwidth feature is configured so BGP will distribute traffic proportionally to the bandwidth of each external link. Figure 1 shows two external autonomous systems connected by three links that each carry a different amount of bandwidth (unequal cost links). Multipath load balancing is enabled and traffic is balanced proportionally.

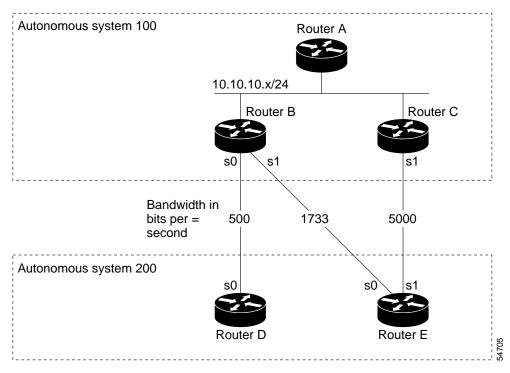


Figure 1 BGP Link Bandwidth Configuration

## **Router A Configuration**

In the following example, Router A is configured to support iBGP multipath load balancing and to exchange the BGP extended community attribute with iBGP neighbors:

```
Router A(config)# router bgp 100
Router A(config-router)# neighbor 10.10.10.2 remote-as 100
Router A(config-router)# neighbor 10.10.10.2 update-source Loopback 0
Router A(config-router)# neighbor 10.10.10.3 remote-as 100
Router A(config-router)# neighbor 10.10.10.3 update-source Loopback 0
Router A(config-router)# address-family ipv4
Router A(config-router)# bgp dmzlink-bw
Router A(config-router-af)# neighbor 10.10.10.2 activate
Router A(config-router-af)# neighbor 10.10.10.2 send-community both
Router A(config-router-af)# neighbor 10.10.10.3 activate
Router A(config-router-af)# neighbor 10.10.10.3 send-community both
Router A(config-router-af)# neighbor 10.10.10.3 send-community both
Router A(config-router-af)# maximum-paths ibgp 6
```

### **Router B Configuration**

In the following example, Router B is configured to support multipath load balancing, to distribute Router D and Router E link traffic proportionally to the bandwidth of each link, and to advertise the bandwidth of these links to iBGP neighbors as an extended community:

```
Router B(config)# router bgp 100
Router B(config-router)# neighbor 10.10.10.1 remote-as 100
Router B(config-router)# neighbor 10.10.10.1 update-source Loopback 0
Router B(config-router)# neighbor 10.10.10.3 remote-as 100
Router B(config-router)# neighbor 10.10.10.3 update-source Loopback 0
Router B(config-router)# neighbor 172.16.1.1 remote-as 200
Router B(config-router)# neighbor 172.16.1.1 ebgp-multihop 1
Router B(config-router)# neighbor 172.16.2.2 remote-as 200
Router B(config-router)# neighbor 172.16.2.2 ebgp-multihop 1
Router B(config-router)# address-family ipv4
Router B(config-router-af)# bgp dmzlink-bw
```

```
Router B(config-router-af)# neighbor 10.10.10.1 activate
Router B(config-router-af)# neighbor 10.10.10.1 next-hop-self
Router B(config-router-af)# neighbor 10.10.10.1 send-community both
Router B(config-router-af)# neighbor 10.10.10.3 activate
Router B(config-router-af)# neighbor 10.10.10.3 next-hop-self
Router B(config-router-af)# neighbor 10.10.10.3 send-community both
Router B(config-router-af)# neighbor 172.16.1.1 activate
Router B(config-router-af)# neighbor 172.16.1.1 dmzlink-bw
Router B(config-router-af)# neighbor 172.16.2.2 activate
Router B(config-router-af)# neighbor 172.16.2.2 dmzlink-bw
Router B(config-router-af)# maximum-paths ibgp 6
Router B(config-router-af)# maximum-paths 6
```

### **Router C Configuration**

In the following example, Router C is configured to support multipath load balancing and to advertise the bandwidth of the link with Router E to iBGP neighbors as an extended community:

```
Router C(config)# router bgp 100
Router C(config-router)# neighbor 10.10.10.1 remote-as 100
Router C(config-router)# neighbor 10.10.10 update-source Loopback 0
Router C(config-router)# neighbor 10.10.10.2 remote-as 100
Router C(config-router)# neighbor 10.10.10.2 update-source Loopback 0
Router C(config-router)# neighbor 172.16.3.30 remote-as 200
Router C(config-router)# neighbor 172.16.3.30 ebgp-multihop 1
Router C(config-router)# address-family ipv4
Router C(config-router-af)# bgp dmzlink-bw
Router C(config-router-af)# neighbor 10.10.10.1 activate
Router C(config-router-af)# neighbor 10.10.10.1 send-community both
Router C(config-router-af)# neighbor 10.10.10.1 next-hop-self
Router C(config-router-af)# neighbor 10.10.10.2 activate
Router C(config-router-af)# neighbor 10.10.10.2 send-community both
Router C(config-router-af)# neighbor 10.10.10.2 next-hop-self
Router C(config-router-af)# neighbor 172.16.3.3 activate
Router C(config-router-af)# neighbor 172.16.3.3 dmzlink-bw
Router C(config-router-af)# maximum-paths ibgp 6
Router C(config-router-af)# maximum-paths 6
```

# **Verifying BGP Link Bandwidth**

The examples in this section show the verification of this feature on Router A and Router B.

#### **Router B**

In the following example, the **show ip bgp** command is entered on Router B to verify that two unequal cost best paths have been installed into the BGP routing table. The bandwidth for each link is displayed with each route.

```
Router B# show ip bgp 192.168.1.0

BGP routing table entry for 192.168.1.0/24, version 48

Paths: (2 available, best #2)

Multipath: eBGP

Advertised to update-groups:

1 2

200

172.16.1.1 from 172.16.1.2 (192.168.1.1)

Origin incomplete, metric 0, localpref 100, valid, external, multipath, best Extended Community: 0x0:0:0

DMZ-Link Bw 278 kbytes

200

172.16.2.2 from 172.16.2.2 (192.168.1.1)
```

```
Origin incomplete, metric 0, local
pref 100, valid, external, multipath, best Extended Community:
 0x0:0:0
 DMZ-Link Bw 625 kbytes
```

#### **Router A**

In the following example, the **show ip bgp** command is entered on Router A to verify that the link bandwidth extended community has been propagated through the iBGP network to Router A. The output shows that a route for each exit link (on Router B and Router C) to autonomous system 200 has been installed as a best path in the BGP routing table.

```
Router A# show ip bgp 192.168.1.0
BGP routing table entry for 192.168.1.0/24, version 48
Paths: (3 available, best #3)
Multipath: eBGP
 Advertised to update-groups:
    1
                2
  200
    172.16.1.1 from 172.16.1.2 (192.168.1.1)
      Origin incomplete, metric 0, localpref 100, valid, external, multipath
      Extended Community: 0x0:0:0
      DMZ-Link Bw 278 kbytes
    172.16.2.2 from 172.16.2.2 (192.168.1.1)
      Origin incomplete, metric 0, localpref 100, valid, external, multipath, best
      Extended Community: 0x0:0:0
      DMZ-Link Bw 625 kbytes
  200
    172.16.3.3 from 172.16.3.3 (192.168.1.1)
      Origin incomplete, metric 0, localpref 100, valid, external, multipath, best
      Extended Community: 0x0:0:0
      DMZ-Link Bw 2500 kbytes
```

#### **Router A**

In the following example, the **show ip route** command is entered on Router A to verify the multipath routes that are advertised and the associated traffic share values:

```
Router A# show ip route 192.168.1.0
Routing entry for 192.168.1.0/24
  Known via "bgp 100", distance 200, metric 0
  Tag 200, type internal
  Last update from 172.168.1.1 00:01:43 ago
  Routing Descriptor Blocks:
  * 172.168.1.1, from 172.168.1.1, 00:01:43 ago
      Route metric is 0, traffic share count is 13
      AS Hops 1, BGP network version 0
      Route tag 200
   172.168.2.2, from 172.168.2.2, 00:01:43 ago
      Route metric is 0, traffic share count is 30
      AS Hops 1, BGP network version 0
      Route tag 200
    172.168.3.3, from 172.168.3.3, 00:01:43 ago
      Route metric is 0, traffic share count is 120
      AS Hops 1, BGP network version 0
      Route tag 200
```

# **Additional References**

The following sections provide references related to the BGP Link Bandwidth feature.

# **Related Documents**

Related Topic	Document Title
BGP commands: complete command syntax, command mode, command history, defaults, usage guidelines, and examples	Cisco IOS IP Routing: BGP Command Reference
BGP multipath load sharing for both eBGP and iBGP in an MPLS-VPN	BGP Multipath Load Sharing for Both eBGP and iBGP in an MPLS-VPN
iBGP multipath load sharing	iBGP Multipath Load Sharing
Cisco IOS master command list, all releases	Cisco IOS Master Command List, All Releases

# **Standards**

Standard	Title
No new or modified standards are supported by this feature, and support for existing standards has not been modified by this feature.	

## **MIBs**

MIB	MIBs Link
No new or modified MIBs are supported by this feature, and support for existing MIBs has not been modified by this feature.	To locate and download MIBs for selected platforms, Cisco IOS XE software releases, and feature sets, use Cisco MIB Locator found at the following URL:
	http://www.cisco.com/go/mibs

# **Technical Assistance**

Description	Link
The Cisco Support website provides extensive online resources, including documentation and tools for troubleshooting and resolving technical issues with Cisco products and technologies.	http://www.cisco.com/techsupport
To receive security and technical information about your products, you can subscribe to various services, such as the Product Alert Tool (accessed from Field Notices), the Cisco Technical Services Newsletter, and Really Simple Syndication (RSS) Feeds.	
Access to most tools on the Cisco Support website requires a Cisco.com user ID and password.	

# Feature Information for BGP Link Bandwidth

Table 1 lists the release history for this feature.

Use Cisco Feature Navigator to find information about platform support and software image support. Cisco Feature Navigator enables you to determine which Cisco IOS XE software images support a specific software release, feature set, or platform. To access Cisco Feature Navigator, go to <a href="http://www.cisco.com/go/cfn">http://www.cisco.com/go/cfn</a>. An account on Cisco.com is not required.



Table 1 lists only the Cisco IOS XE software release that introduced support for a given feature in a given Cisco IOS XE software release train. Unless noted otherwise, subsequent releases of that Cisco IOS XE software release train also support that feature.

#### Table 1 Feature Information for BGP Link Bandwidth

Feature Name	Releases	Feature Information
	Cisco IOS XE Release 2.1	This feature was introduced on the Cisco ASR 1000 Series Aggregation Services Routers.
		The following commands were added or modified by this feature: <b>bgp dmzlink-bw, neighbor dmzlink-bw</b> .

CCDE, CCENT, CCSI, Cisco Eos, Cisco HealthPresence, Cisco IronPort, the Cisco logo, Cisco Nurse Connect, Cisco Pulse, Cisco SensorBase, Cisco StackPower, Cisco StadiumVision, Cisco TelePresence, Cisco Unified Computing System, Cisco WebEx, DCE, Flip Channels, Flip for Good, Flip Mino, Flipshare (Design), Flip Ultra, Flip Video, Flip Video (Design), Instant Broadband, and Welcome to the Human Network are trademarks; Changing the Way We Work, Live, Play, and Learn, Cisco Capital, Cisco Capital (Design), Cisco:Financed (Stylized), Cisco Store, Flip Gift Card, and One Million Acts of Green are service marks; and Access Registrar, Aironet, AllTouch, AsyncOS, Bringing the Meeting To You, Catalyst, CCDA, CCDP, CCIE, CCIP, CCNA, CCNP, CCSP, CCVP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IOS, Cisco Lumin, Cisco Nexus, Cisco Press, Cisco Systems, Cisco Systems Capital, the Cisco Systems logo, Cisco Unity, Collaboration Without Limitation, Continuum, EtherFast, EtherSwitch, Event Center, Explorer, Follow Me Browsing, GainMaker, iLYNX, IOS, iPhone, IronPort, the IronPort logo, Laser Link, LightStream, Linksys, MeetingPlace, MeetingPlace Chime Sound, MGX, Networkers, Networking Academy, PCNow, PIX, PowerKEY, PowerPanels, PowerTV, PowerTV (Design), PowerVu, Prisma, ProConnect, ROSA, SenderBase, SMARTnet, Spectrum Expert, StackWise, WebEx, and the WebEx logo are registered trademarks of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries.

All other trademarks mentioned in this document or website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0910R)

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, and figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

© 2004–2009 Cisco Systems, Inc. All rights reserved.

Feature Information for BGP Link Bandwidth



# iBGP Multipath Load Sharing

First Published: 2001 Last Updated: May 4, 2009

This feature module describes the iBGP Multipath Load Sharing feature. This feature enables the BGP speaking router to select multiple iBGP paths as the best paths to a destination. The best paths or multipaths are then installed in the IP routing table of the router.

# **Finding Feature Information**

For the latest feature information and caveats, see the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the "Feature Information for iBGP Multipath Load Sharing" section on page 10.

Use Cisco Feature Navigator to find information about platform support and Cisco IOS XE software image support. To access Cisco Feature Navigator, go to <a href="http://www.cisco.com/go/cfn">http://www.cisco.com/go/cfn</a>. An account on Cisco.com is not required.

## **Contents**


- Feature Overview, page 2
- Configuration Tasks, page 3
- Monitoring and Maintaining iBGP Multipath Load Sharing, page 6
- Configuration Examples, page 6
- Additional References, page 8
- Feature Information for iBGP Multipath Load Sharing, page 10



# **Feature Overview**


When a Border Gateway Protocol (BGP) speaking router with no local policy configured receives multiple network layer reachability information (NLRI) from the internal BGP (iBGP) for the same destination, the router will choose one iBGP path as the best path. The best path is then installed in the IP routing table of the router. For example, in Figure 1, although there are three paths to autonomous system 200, Router 2 determines that one of the paths to autonomous system 200 is the best path and uses this path only to reach autonomous system 200.

Figure 1 Non-MPLS Topology with One Best Path

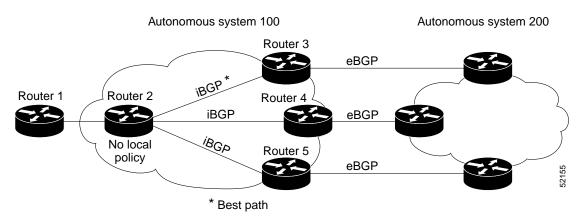

The iBGP Multipath Load Sharing feature enables the BGP speaking router to select multiple iBGP paths as the best paths to a destination. The best paths or multipaths are then installed in the IP routing table of the router. For example, on router 2 in Figure 2, the paths to routers 3, 4, and 5 are configured as multipaths and can be used to reach autonomous system 200, thereby equally sharing the load to autonomous system 200.


Figure 2 Non-MPLS Topology with Three Multipaths

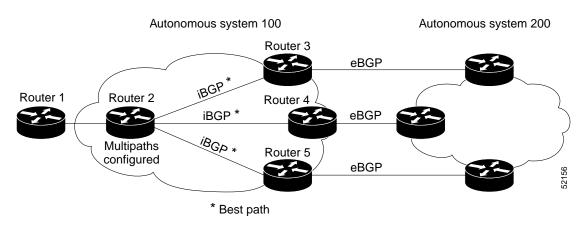

The iBGP Multipath Load Sharing feature functions similarly in a Multiprotocol Label Switching (MPLS) Virtual Private Network (VPN) with a service provider backbone. For example, on router PE1 in Figure 3, the paths to routers PE2, PE3, and PE4 can be selected as multipaths and can be used to equally share the load to site 2.

2

Figure 3 MPLS VPN with Three Multipaths

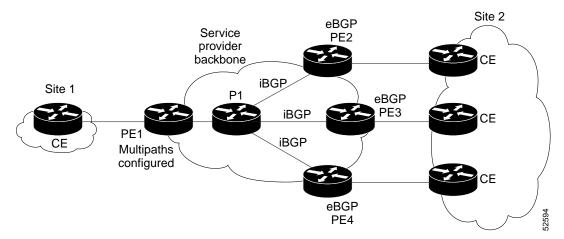

For multiple paths to the same destination to be considered as multipaths, the following criteria must be met:

- All attributes must be the same. The attributes include weight, local preference, autonomous system path (entire attribute and not just length), origin code, Multi Exit Discriminator (MED), and Interior Gateway Protocol (IGP) distance.
- The next hop router for each multipath must be different.

Even if the criteria are met and multiple paths are considered multipaths, the BGP speaking router will still designate one of the multipaths as the best path and advertise this best path to its neighbors.

## **Benefits**

Configuring multiple iBGP best paths enables a router to evenly share the traffic destined for a particular site.

## **Restrictions**

#### **Route Reflector Limitation**

With multiple iBGP paths installed in a routing table, a route reflector will advertise only one of the paths (one next hop).

### **Memory Consumption Restriction**

Each IP routing table entry for a BGP prefix that has multiple iBGP paths uses approximately 350 bytes of additional memory. We recommend not using this feature on a router with a low amount of available memory and especially when the router is carrying a full Internet routing table.

# **Configuration Tasks**

See the following sections for configuration tasks for the iBGP Multipath Load Sharing feature. Each task in the list is identified as either required or optional.

- Configuring iBGP Multipath Load Sharing (required)
- Verifying iBGP Multipath Load Sharing (optional)

# **Configuring iBGP Multipath Load Sharing**

To configure the iBGP Multipath Load Sharing feature, use the following command in router configuration mode:

Command	Purpose
	Controls the maximum number of parallel iBGP routes that can be installed in a routing table.

# **Verifying iBGP Multipath Load Sharing**

To verify that the iBGP Multipath Load Sharing feature is configured correctly, perform the following steps:

**Step 1** Enter the **show ip bgp** *network-number* EXEC command to display attributes for a network in a non-MPLS topology, or the **show ip bgp vpnv4 all** *ip-prefix* EXEC command to display attributes for a network in an MPLS VPN:

```
Router# show ip bgp 10.22.22.0
BGP routing table entry for 10.22.22.0/24, version 119
Paths: (6 available, best #1)
Multipath: iBGP
Flag:0x820
  Advertised to non peer-group peers:
  10.1.12.12
    10.2.3.8 (metric 11) from 10.1.3.4 (100.0.0.5)
      Origin IGP, metric 0, localpref 100, valid, internal, multipath, best
      Originator:10.0.0.5, Cluster list:10.0.0.4
  22
   10.2.1.9 (metric 11) from 10.1.1.2 (10.0.0.9)
      Origin IGP, metric 0, localpref 100, valid, internal, multipath
      Originator:10.0.0.9, Cluster list:10.0.0.2
    10.2.5.10 (metric 11) from 10.1.5.6 (10.0.0.10)
      Origin IGP, metric 0, localpref 100, valid, internal, multipath
      Originator:10.0.0.10, Cluster list:10.0.0.6
    10.2.4.10 (metric 11) from 10.1.4.5 (10.0.0.10)
      Origin IGP, metric 0, localpref 100, valid, internal, multipath
      Originator:10.0.0.10, Cluster list:10.0.0.5
    10.2.6.10 (metric 11) from 10.1.6.7 (10.0.0.10)
      Origin IGP, metric 0, localpref 100, valid, internal, multipath
      Originator:10.0.0.10, Cluster list:10.0.0.7
Router# show ip bgp vpnv4 all 10.22.22.0
BGP routing table entry for 10:1:10.22.22.0/24, version 50
Paths: (6 available, best #1)
Multipath: iBGP
```

```
Advertised to non peer-group peers:
10.1.12.12
2.2
  10.22.7.8 (metric 11) from 10.11.3.4 (10.0.0.8)
   Origin IGP, metric 0, localpref 100, valid, internal, multipath, best
   Extended Community:RT:100:1
   Originator:10.0.0.8, Cluster list:10.1.1.44
22
  10.22.1.9 (metric 11) from 10.11.1.2 (10.0.0.9)
   Origin IGP, metric 0, localpref 100, valid, internal, multipath
   Extended Community:RT:100:1
   Originator:10.0.0.9, Cluster list:10.1.1.22
2.2
 10.22.6.10 (metric 11) from 10.11.6.7 (10.0.0.10)
   Origin IGP, metric 0, localpref 100, valid, internal, multipath
   Extended Community:RT:100:1
   Originator:10.0.0.10, Cluster list:10.0.0.7
  10.22.4.10 (metric 11) from 10.11.4.5 (10.0.0.10)
    Origin IGP, metric 0, localpref 100, valid, internal, multipath
   Extended Community:RT:100:1
   Originator:10.0.0.10, Cluster list:10.0.0.5
22
  10.22.5.10 (metric 11) from 10.11.5.6 (10.0.0.10)
   Origin IGP, metric 0, localpref 100, valid, internal, multipath
   Extended Community:RT:100:1
   Originator: 10.0.0.10, Cluster list: 10.0.0.6
```

- Step 2 In the display resulting from the **show ip bgp** *network-number* EXEC command or the **show ip bgp vpnv4 all** *ip-prefix* EXEC command, verify that the intended multipaths are marked as "multipaths." Notice that one of the multipaths is marked as "best."
- **Step 3** Enter the **show ip route** *ip-address* EXEC command to display routing information for a network in a non-MPLS topology or the **show ip route vrf** *vrf-name ip-prefix* EXEC command to display routing information for a network in an MPLS VPN:

```
Router# show ip route 10.22.22.0
Routing entry for 10.22.22.0/24
  Known via "bgp 1", distance 200, metric 0
  Tag 22, type internal
  Last update from 10.2.6.10 00:00:03 ago
  Routing Descriptor Blocks:
  * 10.2.3.8, from 10.1.3.4, 00:00:03 ago
      Route metric is 0, traffic share count is 1
      AS Hops 1
    10.2.1.9, from 10.1.1.2, 00:00:03 ago
      Route metric is 0, traffic share count is 1
      AS Hops 1
    10.2.5.10, from 10.1.5.6, 00:00:03 ago
      Route metric is 0, traffic share count is 1
      AS Hops 1
    10.2.4.10, from 10.1.4.5, 00:00:03 ago
      Route metric is 0, traffic share count is 1
      AS Hops 1
    10.2.6.10, from 10.1.6.7, 00:00:03 ago
      Route metric is 0, traffic share count is 1
      AS Hops 1
Router# show ip route vrf PATH 10.22.22.0
Routing entry for 10.22.22.0/24
  Known via "bgp 1", distance 200, metric 0
```

```
Tag 22, type internal
Last update from 10.22.5.10 00:01:07 ago
Routing Descriptor Blocks:
* 10.22.7.8 (Default-IP-Routing-Table), from 10.11.3.4, 00:01:07 ago
   Route metric is 0, traffic share count is 1
   AS Hops 1
 10.22.1.9 (Default-IP-Routing-Table), from 10.11.1.2, 00:01:07 ago
   Route metric is 0, traffic share count is 1
   AS Hops 1
  10.22.6.10 (Default-IP-Routing-Table), from 10.11.6.7, 00:01:07 ago
   Route metric is 0, traffic share count is 1
   AS Hops 1
  10.22.4.10 (Default-IP-Routing-Table), from 10.11.4.5, 00:01:07 ago
   Route metric is 0, traffic share count is 1
  10.22.5.10 (Default-IP-Routing-Table), from 10.11.5.6, 00:01:07 ago
   Route metric is 0, traffic share count is 1
   AS Hops 1
```

**Step 4** Verify that the paths marked as "multipath" in the display resulting from the **show ip bgp** *ip-prefix* EXEC command or the **show ip bgp vpnv4 all** *ip-prefix* EXEC command are included in the routing information. (The routing information is displayed after performing Step 3.)

# Monitoring and Maintaining iBGP Multipath Load Sharing

To display iBGP Multipath Load Sharing information, use the following commands in EXEC mode, as needed:

Command	Purpose
Router# show ip bgp ip-prefix	Displays attributes and multipaths for a network in a non-MPLS topology.
Router# show ip bgp vpnv4 all ip-prefix	Displays attributes and multipaths for a network in an MPLS VPN.
Router# show ip route ip-prefix	Displays routing information for a network in a non-MPLS topology.
Router# show ip route vrf vrf-name ip-prefix	Displays routing information for a network in an MPLS VPN.

# **Configuration Examples**

This section provides the following configuration examples:


- Non-MPLS Topology: Example, page 7
- MPLS VPN Topology Example, page 7

Both examples assume that the appropriate attributes for each path are equal and that the next hop router for each multipath is different.

# **Non-MPLS Topology: Example**

The following example shows how to set up the iBGP Multipath Load Sharing feature in a non-MPLS topology (see Figure 4).

Figure 4 Non-MPLS Topology Example

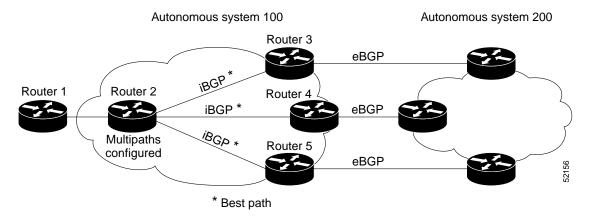


### **Router 2 Configuration**

router bgp 100
maximum-paths ibgp 3

# **MPLS VPN Topology Example**

The following example shows how to set up the iBGP Multipath Load Sharing feature in an MPLS VPN topology (see Figure 5).

Figure 5 MPLS VPN Topology Example

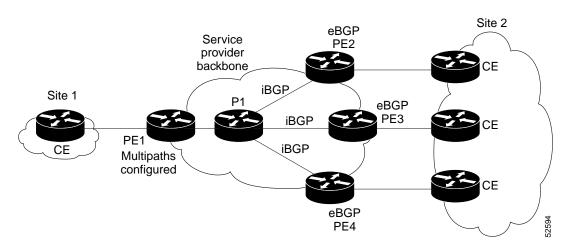

## **Router PE1 Configuration**

router bgp 100
address-family ipv4 unicast vrf site2
maximum-paths ibgp 3

# **Additional References**

The following sections provide references related to the iBGP Multipath Load Sharing feature.

# **Related Documents**

Related Topic	Document Title
BGP multipath load sharing for both eBGP and iBGP in an MPLS-VPN	BGP Multipath Load Sharing for Both eBGP and iBGP in an MPLS-VPN
Advertising the bandwidth of an autonomous system exit link as an extended community	BGP Link Bandwidth
BGP commands	Cisco IOS IP Routing: BGP Command Reference
Cisco IOS master command list, all releases	Cisco IOS Master Command List, All Releases

# **Standards**

Standard	Title
No new or modified standards are supported by this feature, and support for existing standards has not been modified by this feature.	

## **MIBs**

MIBs	MIBs Link
No new or modified MIBs are supported by this feature, and support for existing MIBs has not been modified by this feature.	To locate and download MIBs for selected platforms, Cisco IOS XE software releases, and feature sets, use Cisco MIB Locator found at the following URL:
	http://www.cisco.com/go/mibs

# **RFCs**

RFC	Title
No new or modified RFCs are supported by this feature, and support for existing RFCs has not been modified by this feature.	

## **Technical Assistance**

Description	Link
The Cisco Support website provides extensive online resources, including documentation and tools for troubleshooting and resolving technical issues with Cisco products and technologies.	http://www.cisco.com/techsupport
To receive security and technical information about your products, you can subscribe to various services, such as the Product Alert Tool (accessed from Field Notices), the Cisco Technical Services Newsletter, and Really Simple Syndication (RSS) Feeds.	
Access to most tools on the Cisco Support website requires a Cisco.com user ID and password.	

# **Feature Information for iBGP Multipath Load Sharing**

Table 1 lists the release history for this feature.

Use Cisco Feature Navigator to find information about platform support and software image support. Cisco Feature Navigator enables you to determine which Cisco IOS XE software images support a specific software release, feature set, or platform. To access Cisco Feature Navigator, go to <a href="http://www.cisco.com/go/cfn">http://www.cisco.com/go/cfn</a>. An account on Cisco.com is not required.



Table 1 lists only the Cisco IOS XE software release that introduced support for a given feature in a given Cisco IOS XE software release train. Unless noted otherwise, subsequent releases of that Cisco IOS XE software release train also support that feature.

#### Table 1 Feature Information for iBGP Multipath Load Sharing

Feature Name	Releases	Feature Information
1	Cisco IOS XE Release 2.1	This feature was introduced on the Cisco ASR 1000 Series Routers.
		The following commands were modified by this feature: maximum paths ibgp, show ip bgp, show ip bgp vpnv4, show ip route, show ip route vrf.

CCDE, CCENT, CCSI, Cisco Eos, Cisco HealthPresence, Cisco IronPort, the Cisco logo, Cisco Nurse Connect, Cisco Pulse, Cisco SensorBase, Cisco StackPower, Cisco StadiumVision, Cisco TelePresence, Cisco Unified Computing System, Cisco WebEx, DCE, Flip Channels, Flip for Good, Flip Mino, Flipshare (Design), Flip Ultra, Flip Video, Flip Video (Design), Instant Broadband, and Welcome to the Human Network are trademarks; Changing the Way We Work, Live, Play, and Learn, Cisco Capital, Cisco Capital (Design), Cisco:Financed (Stylized), Cisco Store, Flip Gift Card, and One Million Acts of Green are service marks; and Access Registrar, Aironet, AllTouch, AsyncOS, Bringing the Meeting To You, Catalyst, CCDA, CCDP, CCIP, CCNA, CCNP, CCSP, CCVP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IOS, Cisco Lumin, Cisco Nexus, Cisco Press, Cisco Systems, Cisco Systems Capital, the Cisco Systems logo, Cisco Unity, Collaboration Without Limitation, Continuum, EtherFast, EtherSwitch, Event Center, Explorer, Follow Me Browsing, GainMaker, iLYNX, IOS, iPhone, IronPort, the IronPort logo, Laser Link, LightStream, Linksys, MeetingPlace, MeetingPlace Chime Sound, MGX, Networkers, Networking Academy, PCNow, PIX, PowerKEY, PowerPanels, PowerTV, PowerTV (Design), PowerVu, Prisma, ProConnect, ROSA, SenderBase, SMARTnet, Spectrum Expert, StackWise, WebEx, and the WebEx logo are registered trademarks of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries.

All other trademarks mentioned in this document or website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0910R)

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, and figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

© 2001-2009 Cisco Systems, Inc. All rights reserved.



# BGP Multipath Load Sharing for Both eBGP and iBGP in an MPLS-VPN

First Published: 2004 Last Updated: May 4, 2009

The BGP Multipath Load Sharing for both eBGP and iBGP in an MPLS-VPN feature allows you to configure multipath load balancing with both external BGP (eBGP) and internal BGP (iBGP) paths in Border Gateway Protocol (BGP) networks that are configured to use Multiprotocol Label Switching (MPLS) Virtual Private Networks (VPNs). This feature provides improved load balancing deployment and service offering capabilities and is useful for multihomed autonomous systems and Provider Edge (PE) routers that import both eBGP and iBGP paths from multihomed and stub networks.

# **Finding Feature Information**

For the latest feature information and caveats, see the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the "Feature Information for BGP Multipath Load Sharing for Both eBGP and iBGP in an MPLS-VPN" section on page 11.

Use Cisco Feature Navigator to find information about platform support and Cisco IOS XE software image support. To access Cisco Feature Navigator, go to <a href="http://www.cisco.com/go/cfn">http://www.cisco.com/go/cfn</a>. An account on Cisco.com is not required.

### **Contents**

- Prerequisites for BGP Multipath Load Sharing for Both eBGP and iBGP in an MPLS-VPN, page 2
- Restrictions for BGP Multipath Load Sharing for Both eBGP and iBGP in an MPLS-VPN, page 2
- Information About BGP Multipath Load Sharing for Both eBGP and iBGP in an MPLS-VPN, page 3
- How to Configure BGP Multipath Load Sharing for Both eBGP and iBGP in an MPLS-VPN, page 5
- Configuration Examples for BGP Multipath Load Sharing for Both eBGP and iBGP in an MPLS-VPN, page 7



- Where to Go Next, page 9
- Additional References, page 9
- Feature Information for BGP Multipath Load Sharing for Both eBGP and iBGP in an MPLS-VPN, page 11

# Prerequisites for BGP Multipath Load Sharing for Both eBGP and iBGP in an MPLS-VPN

#### Load Balancing is Configured Under Cisco Express Forwarding

Cisco Express Forwarding or distributed Cisco Express Forwarding must be enabled on all participating routers.

# Restrictions for BGP Multipath Load Sharing for Both eBGP and iBGP in an MPLS-VPN

#### **Address Family Support**

This feature is configured on a per VPN routing and forwarding instance (VRF) basis. This feature can be configured under only the IPv4 VRF address family.

#### **Memory Consumption Restriction**

Each BGP multipath routing table entry will use additional memory. We recommend that you do not use this feature on a router with a low amount of available memory and especially if router is carries full Internet routing tables.

#### **Route Reflector Limitation**

When multiple iBGP paths installed in a routing table, a route reflector will advertise only one paths (next hop). If a router is behind a route reflector, all routers that are connected to multihomed sites will not be advertised unless a different route distinguisher is configured for each VRF.

# Information About BGP Multipath Load Sharing for Both eBGP and iBGP in an MPLS-VPN

To configure the BGP Multipath Load Sharing for Both eBGP and iBGP in an MPLS-VPN feature, you should understand the following concepts:

- Multipath Load Sharing Between eBGP and iBGP, page 3
- eBGP and iBGP Multipath Load Sharing in a BGP MPLS Network, page 3
- eBGP and iBGP Multipath Load Sharing with Route Reflectors, page 4
- Benefits of Multipath Load Sharing for Both eBGP and iBGP, page 5

### Multipath Load Sharing Between eBGP and iBGP

A BGP routing process will install a single path as the best path in the routing information base (RIB) by default. The **maximum-paths** command allows you to configure BGP to install multiple paths in the RIB for multipath load sharing. BGP uses the best path algorithm to still select a single multipath as the best path and advertise the best path to BGP peers.



The number of paths of multipaths that can be configured is documented on the **maximum-paths** command reference page.

Load balancing over the multipaths is performed by Cisco Express Forwarding. Cisco Express Forwarding load balancing is configured on a per-packet round robin or on a per session (source and destination pair) basis.

The BGP Multipath Load Sharing for both eBGP and iBGP in an MPLS VPN feature is enabled only under the IPv4 VRF address family configuration mode. When enabled, this feature can perform load balancing on eBGP and/or iBGP paths that are imported into the VRF. The number of multipaths is configured on a per VRF basis. Separate VRF multipath configurations are isolated by unique route distinguisher.



The BGP Multipath Load Sharing for Both eBGP and iBGP in an MPLS VPN feature operates within the parameters of configured outbound routing policy.

### eBGP and iBGP Multipath Load Sharing in a BGP MPLS Network

Figure 1 shows a service provider BGP MPLS network that connects two remote networks to PE router 1 and PE router 2. PE router 1 and PE router 2 are both configured for VPNv4 unicast iBGP peering. Network 2 is a multihomed network that is connected to PE router 1 and PE router 2. Network 2 also has extranet VPN services configured with Network 1. Both Network 1 and Network 2 are configured for eBGP peering with the PE routers.

Provider edge Provider edge router 1 router 2 iBGP peering RD1 RD21 RD22 VRF1 VRF21 VRF22 eBGP peering eBGP peering eBGP peering Network 1 Network 2


Figure 1 A Service Provider BGP MPLS Network

PE router 1 can be configured with the BGP Multipath Load Sharing for Both eBGP and iBGP in an MPLS VPN feature so that both iBGP and eBGP paths can be selected as multipaths and imported into the VRF of Network 1. The multipaths will be used by Cisco Express Forwarding to perform load balancing. IP traffic that is sent from Network 2 to PE router 1 and PE router 2 will be sent across the eBGP paths as IP traffic. IP traffic that is sent across the iBGP path will be sent as MPLS traffic, and MPLS traffic that is sent across an eBGP path will be sent as IP traffic. Any prefix that is advertised from Network 2 will be received by PE router 1 through route distinguisher (RD) 21 and RD 22. The advertisement through RD 21 will be carried in IP packets, and the advertisement through RD 22 will be carried in MPLS packets. Both paths can be selected as multipaths for VRF1 and installed into the VRF1 RIB.

## eBGP and iBGP Multipath Load Sharing with Route Reflectors

Figure 2 shows a topology that contains three PE routers and a route reflector, all configured for iBGP peering. PE router 2 and PE router 3 each advertise an equal preference eBGP path to PE router 1. By default, the route reflector will choose only one path and advertise PE router 1.

Figure 2 A Topology with a Route Reflector

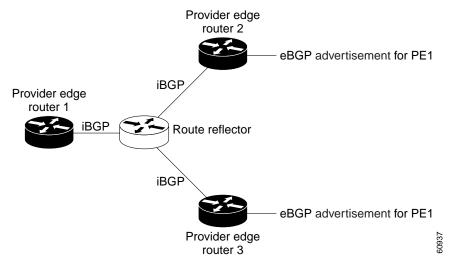

For all equal preference paths to PE router 1 to be advertised through the route reflector, you must configure each VRF with a different RD. The prefixes received by the route reflector will be recognized differently and advertised to PE router 1.

### Benefits of Multipath Load Sharing for Both eBGP and iBGP

The BGP Multipath Load Sharing for Both eBGP and iBGP in an MPLS VPN feature allows multihomed autonomous systems and PE routers to be configured to distribute traffic across both eBGP and iBGP paths.

# How to Configure BGP Multipath Load Sharing for Both eBGP and iBGP in an MPLS-VPN

This section contains the following procedures:

- Configuring Multipath Load Sharing for Both eBGP an iBGP, page 5
- Verifying Multipath Load Sharing for Both eBGP an iBGP, page 6

## Configuring Multipath Load Sharing for Both eBGP an iBGP

To configure this feature, perform the steps in this section.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. router bgp autonomous-system-number
- 4. address-family ipv4 [mdt | multicast | tunnel | unicast [vrf vrf-name] | vrf vrf-name] | ipv6 [multicast | unicast] | vpnv4 [unicast]

- **5. maximum-paths eibgp** *number* [**import** *number*]
- 6. end

#### **DETAILED STEPS**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		Enter your password if prompted.
	Example:	
	Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
<u> </u>		
Step 3	router bgp autonomous-system-number	Enters router configuration mode to create or configure a BGP routing process.
	Example:	
	Router(config)# router bgp 40000	
Step 4	address-family ipv4 vrf vrf-name	Places the router in address family configuration mode.
		Separate VRF multipath configurations are isolated by
	Example:	unique route distinguisher.
	Router(config-router)# address-family ipv4 vrf RED	
Step 5	maximum-paths eibgp number [import number]	Configures the number of parallel iBGP and eBGP routes that can be installed into a routing table.
	Example:	<b>Note</b> The maximum-paths eibgp command can be
	Router(config-router-af)# maximum-paths eibgp 6	configured only under the IPv4 VRF address family configuration mode and cannot be configured in any other address family configuration mode.
Step 6	end	Exits address family configuration mode and returns to privileged EXEC mode.
	<pre>Example: Router(config-router-af)# end</pre>	

# Verifying Multipath Load Sharing for Both eBGP an iBGP

To verify this feature, perform the steps in this section.SUMMARY STEPS

- 1. enable
- 2. show ip bgp neighbors [neighbor-address [advertised-routes | dampened-routes | flap-statistics | paths [regexp] | received prefix-filter | received-routes | routes]]
- 3. **show ip bgp vpnv4** {all | rd route-distinguisher | vrf vrf-name}
- 4. **show ip route vrf** *vrf-name*

#### **DETAILED STEPS**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		• Enter your password if prompted.
	Example:	
	Router> enable	
Step 2	<pre>show ip bgp neighbors [neighbor-address [advertised-routes   dampened-routes   flap-statistics   paths [regexp]   received prefix-filter   received-routes   routes]]</pre>	Displays information about the TCP and BGP connections to neighbors.
	Example: Router# show ip bgp neighbors	
Step 3	<pre>show ip bgp vpnv4 {all   rd route-distinguisher   vrf vrf-name}</pre>	Displays VPN address information from the BGP table. This command is used to verify that the VRF has been received by BGP.
	Example:	
	Router# show ip bgp vpnv4 vrf RED	
Step 4	show ip route vrf vrf-name	Displays the IP routing table associated with a VRF instance. The show ip route vrf command is used to verify
	Example:	that the VRF is in the routing table.
	Router# show ip route vrf RED	

# Configuration Examples for BGP Multipath Load Sharing for Both eBGP and iBGP in an MPLS-VPN

The following examples show how to configure and verify this feature:

- eBGP and iBGP Multipath Load Sharing Configuration: Example, page 7
- eBGP and iBGP Multipath Load Sharing Verification: Examples, page 7

### eBGP and iBGP Multipath Load Sharing Configuration: Example

This following configuration example configures a router in address-family mode to select six BGP routes (eBGP or iBGP) as multipaths:

```
Router(config)# router bgp 40000
Router(config-router)# address-family ipv4 vrf RED
Router(config-router-af)# maximum-paths eibgp 6
Router(config-router-af)# end
```

## eBGP and iBGP Multipath Load Sharing Verification: Examples

To verify that iBGP and eBGP routes have been configured for load sharing, use the **show ip bgp vpnv4** command or the **show ip route vrf** command.

In the following example, the **show ip bgp vpnv4** command is entered to display multipaths installed in the VPNv4 RIB:

Router# show ip bgp vpnv4 all 10.22.22.0 BGP routing table entry for 10:1:22.22.22.0/24, version 19 Paths: (5 available, best #5) Multipath:eiBGP Advertised to non peer-group peers: 10.0.0.2 10.0.0.3 10.0.0.4 10.0.0.5 10.0.0.2 (metric 20) from 10.0.0.4 (10.0.0.4) Origin IGP, metric 0, localpref 100, valid, internal, multipath Extended Community:0x0:0:0 RT:100:1 0x0:0:0 Originator:10.0.0.2, Cluster list:10.0.0.4 22 10.0.0.2 (metric 20) from 10.0.0.5 (10.0.0.5) Origin IGP, metric 0, localpref 100, valid, internal, multipath Extended Community:0x0:0:0 RT:100:1 0x0:0:0 Originator:10.0.0.2, Cluster list:10.0.0.5 22 10.0.0.2 (metric 20) from 10.0.0.2 (10.0.0.2) Origin IGP, metric 0, localpref 100, valid, internal, multipath Extended Community:RT:100:1 0x0:0:0 22 10.0.0.2 (metric 20) from 10.0.0.3 (10.0.0.3) Origin IGP, metric 0, localpref 100, valid, internal, multipath Extended Community:0x0:0:0 RT:100:1 0x0:0:0 Originator:10.0.0.2, Cluster list:10.0.0.3 22 10.1.1.12 from 10.1.1.12 (10.22.22.12) Origin IGP, metric 0, localpref 100, valid, external, multipath, best Extended Community:RT:100:1

In the following example, the **show ip route vrf** command is entered to display multipath routes in the VRF table:

```
Router# show ip route vrf PATH 10.22.22.0
```

```
Routing entry for 10.22.22.0/24
  Known via "bgp 1", distance 20, metric 0
  Tag 22, type external
  Last update from 10.1.1.12 01:59:31 ago
  Routing Descriptor Blocks:
  * 10.0.0.2 (Default-IP-Routing-Table), from 10.0.0.4, 01:59:31 ago
      Route metric is 0, traffic share count is 1
      AS Hops 1
   10.0.0.2 (Default-IP-Routing-Table), from 10.0.0.5, 01:59:31 ago
      Route metric is 0, traffic share count is 1
      AS Hops 1
    10.0.0.2 (Default-IP-Routing-Table), from 10.0.0.2, 01:59:31 ago
      Route metric is 0, traffic share count is 1
      AS Hops 1
    10.0.0.2 (Default-IP-Routing-Table), from 10.0.0.3, 01:59:31 ago
      Route metric is 0, traffic share count is 1
      AS Hops 1
    10.1.1.12, from 10.1.1.12, 01:59:31 ago
      Route metric is 0, traffic share count is 1
      AS Hops 1
```

## Where to Go Next

For information about advertising the bandwidth of an autonomous system exit link as an extended community, refer to the "BGP Link Bandwidth" document.

# **Additional References**

For additional information related to the BGP Multipath Load Sharing for Both eBGP and iBGP in an MPLS-VPN feature, see to the following references.

#### **Related Documents**

Related Topic	Document Title
BGP commands: complete command syntax, command mode, command history, defaults, usage guidelines, and examples	Cisco IOS IP Routing: BGP Command Reference
Comprehensive BGP link bandwidth configuration examples and tasks	BGP Link Bandwidth
Cisco IOS master command list, all releases	Cisco IOS Master Command List, All Releases

#### **Standards**

Standards	Title
No new or modified standards are supported by this feature, and support for existing standards has not been modified by this feature.	

### **MIBs**

MIBs	MIBs Link
No new or modified MIBs are supported by this feature, and support for existing MIBs has not been modified by this feature.	To locate and download MIBs for selected platforms, Cisco IOS XE software releases, and feature sets, use Cisco MIB Locator found at the following URL:
	http://www.cisco.com/go/mibs

### **RFCs**

RFCs	Title
RFC 1771	A Border Gateway Protocol 4 (BGP4)
RFC 2547	BGP/MPLS VPNs
RFC 2858	Multiprotocol Extensions for BGP-4

## **Technical Assistance**

Description	Link
The Cisco Support website provides extensive online resources, including documentation and tools for troubleshooting and resolving technical issues with Cisco products and technologies.	http://www.cisco.com/techsupport
To receive security and technical information about your products, you can subscribe to various services, such as the Product Alert Tool (accessed from Field Notices), the Cisco Technical Services Newsletter, and Really Simple Syndication (RSS) Feeds.	
Access to most tools on the Cisco Support website requires a Cisco.com user ID and password.	

# Feature Information for BGP Multipath Load Sharing for Both eBGP and iBGP in an MPLS-VPN

Table 1 lists the release history for this feature.

Use Cisco Feature Navigator to find information about platform support and software image support. Cisco Feature Navigator enables you to determine which Cisco IOS XE software images support a specific software release, feature set, or platform. To access Cisco Feature Navigator, go to <a href="http://www.cisco.com/go/cfn">http://www.cisco.com/go/cfn</a>. An account on Cisco.com is not required.



Table 1 lists only the Cisco IOS XE software release that introduced support for a given feature in a given Cisco IOS XE software release train. Unless noted otherwise, subsequent releases of that Cisco IOS XE software release train also support that feature.

Table 1 Feature Information for BGP Multipath Load Sharing for Both eBGP and iBGP in an MPLS-VPN

Feature Name	Releases	Feature Information
BGP Multipath Load Sharing for Both eBGP and iBGP in an MPLS-VPN		This feature was introduced on the Cisco ASR 1000 Series Aggregation Services Routers.

CCDE, CCENT, CCSI, Cisco Eos, Cisco HealthPresence, Cisco IronPort, the Cisco logo, Cisco Nurse Connect, Cisco Pulse, Cisco SensorBase, Cisco StackPower, Cisco StadiumVision, Cisco TelePresence, Cisco Unified Computing System, Cisco WebEx, DCE, Flip Channels, Flip for Good, Flip Mino, Flipshare (Design), Flip Ultra, Flip Video, Flip Video (Design), Instant Broadband, and Welcome to the Human Network are trademarks; Changing the Way We Work, Live, Play, and Learn, Cisco Capital, Cisco Capital (Design), Cisco:Financed (Stylized), Cisco Store, Flip Gift Card, and One Million Acts of Green are service marks; and Access Registrar, Aironet, AllTouch, AsyncOS, Bringing the Meeting To You, Catalyst, CCDA, CCDP, CCIE, CCIP, CCNA, CCNP, CCSP, CCVP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IOS, Cisco Lumin, Cisco Nexus, Cisco Press, Cisco Systems, Cisco Systems Capital, the Cisco Systems logo, Cisco Unity, Collaboration Without Limitation, Continuum, EtherFast, EtherSwitch, Event Center, Explorer, Follow Me Browsing, GainMaker, iLYNX, IOS, iPhone, IronPort, the IronPort logo, Laser Link, LightStream, Linksys, MeetingPlace, MeetingPlace Chime Sound, MGX, Networkers, Networking Academy, PCNow, PIX, PowerKEY, PowerPanels, PowerTV, PowerTV (Design), PowerVu, Prisma, ProConnect, ROSA, SenderBase, SMARTnet, Spectrum Expert, StackWise, WebEx, and the WebEx logo are registered trademarks of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries.

All other trademarks mentioned in this document or website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0910R)

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, and figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

© 2004-2009 Cisco Systems, Inc. All rights reserved.

BGP Multipath Load Sharing for Both eBGP and iBGP in an MPLS-VPN
Feature Information for BGP Multipath Load Sharing for Both eBGP and iBGP in an MPLS-VPN



# **Loadsharing IP Packets over More Than Six Parallel Paths**

First Published: 2005 Last Updated: May 4, 2009

This document describes the Loadsharing IP Packets over More Than Six Parallel Paths feature, which increases the maximum number of parallel routes that can be installed to the routing table for multipath loadsharing.

# **Finding Feature Information**

For the latest feature information and caveats, see the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the "Feature Information for Loadsharing IP Packets over More Than Six Parallel Paths" section on page 4.

Use Cisco Feature Navigator to find information about platform support and Cisco IOS XE software image support. To access Cisco Feature Navigator, go to <a href="http://www.cisco.com/go/cfn">http://www.cisco.com/go/cfn</a>. An account on Cisco.com is not required.

## **Contents**

- Overview of Loadsharing IP Packets over More Than Six Parallel Paths, page 2
- Additional References, page 2
- Feature Information for Loadsharing IP Packets over More Than Six Parallel Paths, page 4



# Overview of Loadsharing IP Packets over More Than Six Parallel Paths

The Loadsharing IP Packets over More Than Six Parallel Paths feature increases the maximum number of parallel routes that can be installed to the routing table. The maximum number has been increased from six to sixteen for the following commands:

- maximum-paths
- · maximum-paths eibgp
- maximum-paths ibgp

The output of the **show ip route summary** command has been updated to display the number of parallel routes supported by the routing table.

The benefits of this feature include the following:

- More flexible configuration of parallel routes in the routing table.
- Ability to configure multipath loadsharing over more links to allow for the configuration of higher-bandwidth aggregation using lower-speed links.

## **Additional References**

For additional information related to multipath loadsharing and the configuration of parallel routes, see the following references:

## **Related Documents**

Related Topic	Document Title
BGP commands: complete command syntax, command mode, command history, defaults, usage guidelines, and examples	Cisco IOS IP Routing: BGP Command Reference
eiBGP Multipath Load Sharing	"BGP Multipath Load Sharing for Both eBGP and iBGP in an MPLS-VPN" module
iBGP Multipath Load Sharing	"iBGP Multipath Load Sharing" module
Cisco IOS master command list, all releases	Cisco IOS Master Command List, All Releases

#### **MIBs**

MIB	MIBs Link
No new or modified MIBs are supported by this feature, and support for existing MIBs has not been modified by this feature.	To locate and download MIBs for selected platforms, Cisco IOS XE software releases, and feature sets, use Cisco MIB Locator found at the following URL:
	http://www.cisco.com/go/mibs

## **RFCs**

RFC	Title
No new or modified RFCs are supported by this feature, and support for existing RFCs has not been modified by this feature.	

# **Technical Assistance**

Description	Link
The Cisco Support website provides extensive online resources, including documentation and tools for troubleshooting and resolving technical issues with Cisco products and technologies.	http://www.cisco.com/techsupport
To receive security and technical information about your products, you can subscribe to various services, such as the Product Alert Tool (accessed from Field Notices), the Cisco Technical Services Newsletter, and Really Simple Syndication (RSS) Feeds.	
Access to most tools on the Cisco Support website requires a Cisco.com user ID and password.	

# Feature Information for Loadsharing IP Packets over More Than Six Parallel Paths

Table 1 lists the release history for this feature.

Use Cisco Feature Navigator to find information about platform support and software image support. Cisco Feature Navigator enables you to determine which Cisco IOS XE software images support a specific software release, feature set, or platform. To access Cisco Feature Navigator, go to <a href="http://www.cisco.com/go/cfn">http://www.cisco.com/go/cfn</a>. An account on Cisco.com is not required.



Table 1 lists only the Cisco IOS XE software release that introduced support for a given feature in a given Cisco IOS XE software release train. Unless noted otherwise, subsequent releases of that Cisco IOS XE software release train also support that feature.

Table 1 Feature Information for Loadsharing IP Packets over More Than Six Parallel Paths

Feature Name	Releases	Feature Information
Loadsharing IP Packets over More Than Six Parallel Paths	Cisco IOS XE Release 2.1	This feature was introduced on the Cisco ASR 1000 Series Aggregation Services Routers.
		The following commands were modified by this feature: maximum-paths, maximum-paths eibgp, maximum-paths ibgp, show ip route summary

CCDE, CCENT, CCSI, Cisco Eos, Cisco HealthPresence, Cisco IronPort, the Cisco logo, Cisco Nurse Connect, Cisco Pulse, Cisco SensorBase, Cisco StackPower, Cisco StadiumVision, Cisco TelePresence, Cisco Unified Computing System, Cisco WebEx, DCE, Flip Channels, Flip for Good, Flip Mino, Flipshare (Design), Flip Ultra, Flip Video, Flip Video (Design), Instant Broadband, and Welcome to the Human Network are trademarks; Changing the Way We Work, Live, Play, and Learn, Cisco Capital, Cisco Capital (Design), Cisco:Financed (Stylized), Cisco Store, Flip Gift Card, and One Million Acts of Green are service marks; and Access Registrar, Aironet, AllTouch, AsyncOS, Bringing the Meeting To You, Catalyst, CCDA, CCDP, CCIP, CCNA, CCNP, CCSP, CCVP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IOS, Cisco Lumin, Cisco Nexus, Cisco Systems, Cisco Systems Capital, the Cisco Systems logo, Cisco Unity, Collaboration Without Limitation, Continuum, EtherFast, EtherSwitch, Event Center, Explorer, Follow Me Browsing, GainMaker, iLYNX, IOS, iPhone, IronPort, the IronPort logo, Laser Link, LightStream, Linksys, MeetingPlace, MeetingPlace Chime Sound, MGX, Networkers, Networking Academy, PCNow, PIX, PowerKEY, PowerPanels, PowerTV, PowerTV (Design), PowerVu, Prisma, ProConnect, ROSA, SenderBase, SMARTnet, Spectrum Expert, StackWise, WebEx, and the WebEx logo are registered trademarks of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries.

All other trademarks mentioned in this document or website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0910R)

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, and figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

© 2005-2009 Cisco Systems, Inc. All rights reserved.



# **BGP Policy Accounting Output Interface Accounting**

First Published: 2005 Last Updated: May 4, 2009

Border Gateway Protocol (BGP) policy accounting (PA) measures and classifies IP traffic that is sent to, or received from, different peers. Policy accounting was previously available on an input interface only. The BGP Policy Accounting Output Interface Accounting feature introduces several extensions to enable BGP PA on an output interface and to include accounting based on a source address for both input and output traffic on an interface. Counters based on parameters such as community list, autonomous system number, or autonomous system path are assigned to identify the IP traffic.

# **Finding Feature Information**

For the latest feature information and caveats, see the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the "Feature Information for BGP Policy Accounting Output Interface Accounting" section on page 13.

Use Cisco Feature Navigator to find information about platform support and Cisco IOS XE software image support. To access Cisco Feature Navigator, go to <a href="http://www.cisco.com/go/cfn">http://www.cisco.com/go/cfn</a>. An account on Cisco.com is not required.

### **Contents**

- Prerequisites for BGP PA Output Interface Accounting, page 2
- Information About BGP PA Output Interface Accounting, page 2
- How to Configure BGP PA Output Interface Accounting, page 3
- Configuration Examples for BGP PA Output Interface Accounting, page 10
- Additional References, page 11
- Feature Information for BGP Policy Accounting Output Interface Accounting, page 13



• Glossary, page 13

# **Prerequisites for BGP PA Output Interface Accounting**

Before using the BGP Policy Accounting Output Interface Accounting feature, you must enable BGP and Cisco Express Forwarding or distributed CEF on the router.

# Information About BGP PA Output Interface Accounting

To configure BGP PA output interface accounting, you should understand the following concepts:

- BGP PA Output Interface Accounting, page 2
- Benefits of BGP PA Output Interface Accounting, page 3

## **BGP PA Output Interface Accounting**

Policy accounting using BGP measures and classifies IP traffic that is sent to, or received from, different peers. Originally, BGP PA was available on an input interface only. BGP PA output interface accounting introduces several extensions to enable BGP PA on an output interface and to include accounting based on a source address for both input and output traffic on an interface. Counters based on parameters such as community list, autonomous system number, or autonomous system path are assigned to identify the IP traffic.

Using the BGP **table-map** command, prefixes added to the routing table are classified by BGP attribute, autonomous system number, or autonomous system path. Packet and byte counters are incremented per input or output interface. A Cisco IOS XE policy-based classifier maps the traffic into one of eight possible buckets that represent different traffic classes.

Using BGP PA, you can account for traffic according to its origin or the route it traverses. Service providers (SPs) can identify and account for all traffic by customer and can bill accordingly. In Figure 1, BGP PA can be implemented in Router A to measure packet and byte volumes in autonomous system buckets. Customers are billed appropriately for traffic that is routed from a domestic, international, or satellite source.

Customer

Regional ISP

\$5 per 100 Mb

Router A

\$7 per 100 Mb

Figure 1 Sample Topology for BGP Policy Accounting

BGP policy accounting using autonomous system numbers can be used to improve the design of network circuit peering and transit agreements between Internet service providers (ISPs).

## **Benefits of BGP PA Output Interface Accounting**

#### **Accounting for IP Traffic Differentially**

BGP policy accounting classifies IP traffic by autonomous system number, autonomous system path, or community list string, and increments packet and byte counters. Policy accounting can also be based on the source address. Service providers can account for traffic and apply billing according to the origin of the traffic or the route that specific traffic traverses.

#### **Efficient Network Circuit Peering and Transit Agreement Design**

Implementing BGP policy accounting on an edge router can highlight potential design improvements for peering and transit agreements.

# **How to Configure BGP PA Output Interface Accounting**

This section contains the following tasks:

- Specifying the Match Criteria for BGP PA, page 4 (required)
- Classifying the IP Traffic and Enabling BGP PA, page 5 (required)
- Verifying BGP Policy Accounting, page 7 (optional)

## **Specifying the Match Criteria for BGP PA**

The first task in configuring BGP PA is to specify the criteria that must be matched. Community lists, autonomous system paths, or autonomous system numbers are examples of BGP attributes that can be specified and subsequently matched using a route map. Perform this task to specify the BGP attribute to use for BGP PA and to create the match criteria in a route map.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- **3. ip community-list** {*standard-list-number* | *expanded-list-number* [*regular-expression*] | {**standard** | **expanded**} *community-list-name*} {**permit** | **deny**} {*community-number* | *regular-expression*}
- **4. route-map** *map-name* [**permit** | **deny**] [*sequence-number*]
- 5. match community-list community-list-number [exact]
- 6. set traffic-index bucket-number
- 7. exit

#### **DETAILED STEPS**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		Enter your password if prompted.
	Example:	
	Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Router# configure terminal	
Step 3	<pre>ip community-list {standard-list-number  </pre>	Creates a community list for BGP and controls access to it.
	<pre>expanded-list-number [regular-expression]   {standard   expanded} community-list-name}</pre>	• Repeat this step for each community to be specified.
	{permit   deny} {community-number	
	regular-expression}	
	Example:	
	Router(config)# ip community-list 30 permit 100:190	

	Command or Action	Purpose
Step 4	<pre>route-map map-name [permit   deny] [sequence-number]</pre>	Enters route-map configuration mode and defines the conditions for policy routing.
		• The <i>map-name</i> argument identifies a route map.
	<pre>Example: Router(config)# route-map set_bucket permit 10</pre>	• The optional <b>permit</b> and <b>deny</b> keywords work with the match and set criteria to control how the packets are accounted for.
		• The optional <i>sequence-number</i> argument indicates the position that a new route map is to have in the list of route maps already configured with the same name.
Step 5	<pre>match community-list community-list-number [exact]</pre>	Matches a BGP community.
	<pre>Example: Router(config-route-map)# match community-list 30</pre>	
Step 6	set traffic-index bucket-number	Indicates where to output packets that pass a match clause of a route map for BGP policy accounting.
	<pre>Example: Router(config-route-map)# set traffic-index 2</pre>	
Step 7	exit	Exits route-map configuration mode and returns to global configuration mode.
	<pre>Example: Router(config-route-map)# exit</pre>	

# **Classifying the IP Traffic and Enabling BGP PA**

After a route map has been defined to specify match criteria, you must configure a way to classify the IP traffic before enabling BGP policy accounting.

Using the **table-map** command, BGP classifies each prefix that it adds to the routing table according to the match criteria. When the **bgp-policy accounting** command is configured on an interface, BGP policy accounting is enabled.

Perform this task to classify the IP traffic and enable BGP policy accounting.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. router bgp as-number
- **4. table-map** *route-map-name*
- **5. network** *network-number* [**mask** *network-mask*]
- 6. neighbor ip-address remote-as as-number
- 7. exit
- **8. interface** *type number*

- 9. ip address ip-address mask
- 10. bgp-policy accounting [input | output] [source]
- 11. exit

#### **DETAILED STEPS**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		• Enter your password if prompted.
	Example:	
0. 0	Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Router# configure terminal	
Step 3	router bgp as-number	Configures a BGP routing process and enters router configuration mode for the specified routing process.
	<pre>Example: Router(config)# router bgp 65000</pre>	• The <i>as-number</i> argument identifies a BGP autonomous system number.
Step 4	table-map route-map-name	Classifies BGP prefixes entered in the routing table.
	<pre>Example: Router(config-router)# table-map set_bucket</pre>	
Step 5	network network-number [mask network-mask]	Specifies a network to be advertised by the BGP routing process.
	Example: Router(config-router)# network 10.15.1.0 mask 255.255.255.0	
Step 6	neighbor ip-address remote-as as-number	Specifies a BGP peer by adding an entry to the BGP routing table.
	<pre>Example: Router(config-router)# neighbor 10.14.1.1 remote-as 65100</pre>	
Step 7	exit	Exits router configuration mode and returns to global configuration mode.
	<pre>Example: Router(config-router)# exit</pre>	
Step 8	interface type number	Specifies the interface type and number and enters interface configuration mode.
	Example:	• The <i>type</i> argument identifies the type of interface.
	Router(config)# interface POS 2/0/0	• The <i>number</i> argument identifies the slot and port numbers of the interface. The space between the interface type and number is optional.

	Command or Action	Purpose
Step 9	ip address ip-address mask	Configures the interface with an IP address.
	Example: Router(config-if)# ip-address 10.15.1.2 255.255.255.0	
Step 10	bgp-policy accounting [input   output] [source]	Enables BGP policy accounting for the interface.
	<pre>Example: Router(config-if)# bgp-policy accounting input source</pre>	• Use the optional <b>input</b> or <b>output</b> keyword to account for traffic either entering or leaving the router. By default, BGP policy accounting is based on traffic entering the router.
		• Use the optional <b>source</b> keyword to account for traffic based on source address.
Step 11	exit	Exits interface configuration mode and returns to global configuration mode.
	<pre>Example: Router(config-if)# exit</pre>	

## **Verifying BGP Policy Accounting**

Perform this task to verify that BGP policy accounting is operating.

#### **SUMMARY STEPS**

- 1. **show ip cef** [network [mask]] [**detail**]
- 2. **show ip bgp** [network] [network-mask] [**longer-prefixes**]
- 3. show cef interface [type number] policy-statistics [input | output]
- 4. show cef interface [type number] [statistics] [detail]

#### **DETAILED STEPS**

#### Step 1 show ip cef [network [mask]] [detail]

Enter the **show ip cef** command with the **detail** keyword to learn which accounting bucket is assigned to a specified prefix.

In this example, the output is displayed for the prefix 192.168.5.0. It shows that accounting bucket number 4 (traffic\_index 4) is assigned to this prefix.

```
Router# show ip cef 192.168.5.0 detail
```

```
192.168.5.0/24, version 21, cached adjacency to POS7/2 0 packets, 0 bytes, traffic_index 4 via 10.14.1.1, 0 dependencies, recursive next hop 10.14.1.1, POS7/2 via 10.14.1.0/30 valid cached adjacency
```

#### **Step 2 show ip bgp** [network] [network-mask] [**longer-prefixes**]

Enter the **show ip bgp** command for the same prefix used in Step 1—192.168.5.0—to learn which community is assigned to this prefix.

In this example, the output is displayed for the prefix 192.168.5.0. It shows that the community of 100:197 is assigned to this prefix.

```
Router# show ip bgp 192.168.5.0

BGP routing table entry for 192.168.5.0/24, version 2

Paths: (1 available, best #1)

Not advertised to any peer

100

10.14.1.1 from 10.14.1.1 (32.32.32.32)

Origin IGP, metric 0, localpref 100, valid, external, best Community: 100:197
```

#### **Step 3 show cef interface** [type number] **policy-statistics** [input | output]

Enter the show cef interface policy-statistics command to display the per-interface traffic statistics.

In this example, the output shows the number of packets and bytes that have been assigned to each accounting bucket:

Router# show cef interface policy-statistics input

```
GigabitEthernet1/0/0 is up (if_number 6)
  Corresponding hwidb fast_if_number 6
  Corresponding hwidb firstsw->if_number 6
  BGP based Policy accounting on input is enabled
 Index
               Packets
                                   Bytes
                    9999
                                   999900
     1
     2
                       0
                                         0
     3
                                         0
                       0
     4
                                         0
                       0
     5
                       0
                                         0
     6
                       0
                                         0
     7
                       0
                                         0
     8
                       0
                                         0
     9
                                         0
                       0
    10
                       0
                                         0
    11
                       0
                                         0
                                         0
    12
                       0
    13
                       Λ
                                         0
                       0
                                         0
    14
    15
                       0
                                         0
    16
                       0
                                         0
    17
                       0
                                         0
                       Ω
                                         Ω
    18
    19
                       0
                                         0
    20
    21
                       0
                                         0
                                         0
    22
                       0
    23
                       O
                                         0
    24
                       0
                                         0
    25
                       0
                                         0
    26
                       0
                                         0
                                         0
    2.7
                       0
                                         0
    28
                       0
    29
                       0
                                         0
    30
                       0
                                         0
                                         0
    31
                       0
                                         0
    32
                       Ω
                                         0
    33
                       0
    34
                    1234
                                   123400
    35
                       0
                                         0
    36
                       0
                                         0
                       0
                                         0
    37
```

38	0	0
39	0	0
40	0	0
41	0	0
42	0	0
43	0	0
44	0	0
45	1000	100000
46	0	0
47	0	0
48	0	0
49	0	0
50	0	0
51	0	0
52	0	0
53	0	0
54	5123	1198782
55	0	0
56	0	0
57	0	0
58	0	0
59	0	0
60	0	0
61	0	0
62	0	0
63	0	0
64	0	0

#### Step 4 show cef interface [type number] [statistics] [detail]

Enter the **show cef interface** command to display the state of BGP policy accounting on a specified interface.

In this example, the output shows that BGP policy accounting has been configured to be based on input traffic at Gigabit Ethernet interface 1/0/0:

#### Router# show cef interface Gigabit Ethernet 1/0/0

```
GigabitEthernet1/0/0 is up (if_number 6)
  Corresponding hwidb fast_if_number 6
  Corresponding hwidb firstsw->if_number 6
  Internet address is 10.1.1.1/24
  ICMP redirects are always sent
  Per packet load-sharing is disabled
  IP unicast RPF check is disabled
  Inbound access list is not set
  Outbound access list is not set
  IP policy routing is disabled
  BGP based policy accounting on input is enabled
  BGP based policy accounting on output is disabled
  Hardware idb is GigabitEthernet1/0/0 (6)
  Software idb is GigabitEthernet1/0/0 (6)
  Fast switching type 1, interface type 18
  IP Distributed CEF switching enabled
  IP Feature Fast switching turbo vector
  IP Feature CEF switching turbo vector
  Input fast flags 0x100, Output fast flags 0x0, Flags 0x0
  ifindex 7(7)
  Slot 1 Slot unit 0 VC -1
  Transmit limit accumulator 0xE8001A82 (0xE8001A82)
  IP MTU 1500
```

# **Configuration Examples for BGP PA Output Interface Accounting**

This section contains the following configuration examples:

- Specifying the Match Criteria for BGP Policy Accounting: Example, page 10
- Classifying the IP Traffic and Enabling BGP Policy Accounting: Example, page 10

## **Specifying the Match Criteria for BGP Policy Accounting: Example**

In the following example, BGP communities are specified in community lists, and a route map named set\_bucket is configured to match each of the community lists to a specific accounting bucket using the **set traffic-index** command:

```
ip community-list 30 permit 100:190
ip community-list 40 permit 100:198
ip community-list 50 permit 100:197
ip community-list 60 permit 100:296
route-map set_bucket permit 10
match community-list 30
set traffic-index 2
route-map set_bucket permit 20
match community-list 40
set traffic-index 3
route-map set_bucket permit 30
match community-list 50
set traffic-index 4
route-map set_bucket permit 40
match community-list 60
set traffic-index 5
```

## Classifying the IP Traffic and Enabling BGP Policy Accounting: Example

In the following example, BGP policy accounting is enabled on POS interface 2/0/0. The policy accounting criteria is based on the source address of the input traffic, and the **table-map** command is used to modify the bucket number when the IP routing table is updated with routes learned from BGP.

```
router bgp 65000
table-map set_bucket
network 10.15.1.0 mask 255.255.255.0
neighbor 10.14.1.1 remote-as 65100
!
ip classless
ip bgp-community new-format
!
interface POS2/0/0
ip address 10.15.1.2 255.255.255.0
bgp-policy accounting input source
no keepalive
crc 32
clock source internal
```

# **Additional References**

The following sections provide references related to the BGP policy accounting output interface accounting feature.

## **Related Documents**

Related Topic	Document Title
BGP commands: complete command syntax, command mode, defaults, usage guidelines, and examples	Cisco IOS IP Routing: BGP Command Reference
Switching commands: complete command syntax, command mode, defaults, usage guidelines, and examples	Cisco IOS IP Switching Command Reference
Cisco IOS master command list, all releases	Cisco IOS Master Command List, All Releases

## **Standards**

Standards	Title
No new or modified standards are supported by this feature, and support for existing standards has not been modified by this feature.	

### **MIBs**

MIBs	MIBs Link
	To locate and download MIBs for selected platforms, Cisco IOS XE software releases, and feature sets, use Cisco MIB Locator found at the following URL:
	http://www.cisco.com/go/mibs

### **RFCs**

RFCs	Title
No new or modified RFCs are supported by this feature, and support for existing RFCs has not been modified by this feature.	

## **Technical Assistance**

Description	Link
The Cisco Support website provides extensive online resources, including documentation and tools for troubleshooting and resolving technical issues with Cisco products and technologies.	http://www.cisco.com/techsupport
To receive security and technical information about your products, you can subscribe to various services, such as the Product Alert Tool (accessed from Field Notices), the Cisco Technical Services Newsletter, and Really Simple Syndication (RSS) Feeds.	
Access to most tools on the Cisco Support website requires a Cisco.com user ID and password.	

# Feature Information for BGP Policy Accounting Output Interface Accounting

Table 1 lists the features in this module and provides links to specific configuration information.

Use Cisco Feature Navigator to find information about platform support and software image support. Cisco Feature Navigator enables you to determine which Cisco IOS XE software images support a specific software release, feature set, or platform. To access Cisco Feature Navigator, go to <a href="http://www.cisco.com/go/cfn">http://www.cisco.com/go/cfn</a>. An account on Cisco.com is not required.



Table 1 lists only the Cisco IOS XE software release that introduced support for a given feature in a given Cisco IOS XE software release train. Unless noted otherwise, subsequent releases of that Cisco IOS XE software release train also support that feature.

Table 1 Feature Information for BGP Policy Accounting Output Interface Accounting

Feature Name	Releases	Feature Information
BGP Policy Accounting	Cisco IOS XE Release 2.1	BGP policy accounting measures and classifies IP traffic that is sent to, or received from, different peers.
		This feature was introduced on the Cisco ASR 1000 Series Aggregation Services Routers.
BGP Policy Accounting Output Interface Accounting	Cisco IOS XE Release 2.1	This feature introduces several extensions to enable BGP PA on an output interface and to include accounting based on a source address for both input and output traffic on an interface.
		This feature was introduced on the Cisco ASR 1000 Series Routers.
		The following commands were introduced or modified for this feature: bgp-policy, set traffic-index, show cef interface, show cef interface policy-statistics
SNMP Support for BGP Policy Accounting	Cisco IOS XE Release 2.1	The CISCO-BGP-POLICY-ACCOUNTING-MIB was introduced.
		This feature was introduced on the Cisco ASR 1000 Series Routers.

# **Glossary**

**AS**—autonomous system. An IP term to describe a routing domain that has its own independent routing policy and is administered by a single authority.

**BGP**—Border Gateway Protocol. Interdomain routing protocol that exchanges reachability information with other BGP systems.

**CEF**—Cisco Express Forwarding.

dCEF—distributed Cisco Express Forwarding.

CCDE, CCENT, CCSI, Cisco Eos, Cisco HealthPresence, Cisco IronPort, the Cisco logo, Cisco Nurse Connect, Cisco Pulse, Cisco SensorBase, Cisco StackPower, Cisco Stadium Vision, Cisco TelePresence, Cisco Unified Computing System, Cisco WebEx, DCE, Flip Channels, Flip for Good, Flip Mino, Flipshare (Design), Flip Ultra, Flip Video, Flip Video (Design), Instant Broadband, and Welcome to the Human Network are trademarks; Changing the Way We Work, Live, Play, and Learn, Cisco Capital, Cisco Capital (Design), Cisco:Financed (Stylized), Cisco Store, Flip Gift Card, and One Million Acts of Green are service marks; and Access Registrar, Aironet, AllTouch, AsyncOS, Bringing the Meeting To You, Catalyst, CCDA, CCDP, CCIP, CCNA, CCNP, CCSP, CCVP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IoS, Cisco Lumin, Cisco Nexus, Cisco Press, Cisco Systems, Cisco Systems Capital, the Cisco Systems logo, Cisco Unity, Collaboration Without Limitation, Continuum, EtherFast, EtherSwitch, Event Center, Explorer, Follow Me Browsing, GainMaker, iLYNX, IOS, iPhone, IronPort, the IronPort logo, Laser Link, LightStream, Linksys, MeetingPlace, MeetingPlace Chime Sound, MGX, Networkers, Networking Academy, PCNow, PIX, PowerKEY, PowerPanels, PowerTV, PowerTV (Design), PowerVu, Prisma, ProConnect, ROSA, SenderBase, SMARTnet, Spectrum Expert, StackWise, WebEx, and the WebEx logo are registered trademarks of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries.

All other trademarks mentioned in this document or website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0910R)

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, and figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

© 2005-2009 Cisco Systems, Inc. All rights reserved.



# **BGP Cost Community**

First Published: May 2004 Last Updated: May 4, 2009

The BGP Cost Community feature introduces the cost extended community attribute. The cost community is a non-transitive extended community attribute that is passed to internal BGP (iBGP) and confederation peers but not to external BGP (eBGP) peers. The cost community feature allows you to customize the local route preference and influence the best-path selection process by assigning cost values to specific routes.

In Cisco IOS XE Release 2.1 and later releases, support was introduced for mixed EIGRP MPLS VPN network topologies that contain VPN and backdoor links.

# **Finding Feature Information**

For the latest feature information and caveats, see the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the "Feature Information for BGP Cost Community" section on page 11.

Use Cisco Feature Navigator to find information about platform support and Cisco IOS XE software image support. To access Cisco Feature Navigator, go to <a href="http://www.cisco.com/go/cfn">http://www.cisco.com/go/cfn</a>. An account on Cisco.com is not required.

## **Contents**

- Prerequisites for the BGP Cost Community Feature, page 2
- Restrictions for the BGP Cost Community Feature, page 2
- Information About the BGP Cost Community Feature, page 2
- How to Configure the BGP Cost Community Feature, page 5
- Configuration Examples for the BGP Cost Community Feature, page 7
- Where to Go Next, page 9
- Additional References, page 9



- Related Documents, page 10
- Feature Information for BGP Cost Community, page 11

# **Prerequisites for the BGP Cost Community Feature**

This document assumes that BGP is configured in your network and that peering has been established.

# **Restrictions for the BGP Cost Community Feature**

The following restrictions apply to the BGP Cost Community feature:

- The BGP Cost Community feature can be configured only within an autonomous system or confederation. The cost community is a non-transitive extended community that is passed to iBGP and confederation peers only and is not passed to eBGP peers.
- The BGP Cost Community feature must be supported on all routers in the autonomous system or confederation before cost community filtering is configured. The cost community should be applied consistently throughout the local autonomous system or confederation to avoid potential routing loops.
- Multiple cost community set clauses may be configured with the **set extcommunity cost** command in a single route map block or sequence. However, each set clause must be configured with a different ID value (0-255) for each point of insertion (POI). The ID value determines preference when all other attributes are equal. The lowest ID value is preferred.

# **Information About the BGP Cost Community Feature**

To configure the BGP Cost Community feature, you must understand the following concepts:

- BGP Cost Community Overview, page 2
- How the BGP Cost Community Influences the Best Path Selection Process, page 3
- Cost Community Support for Aggregate Routes and Multipaths, page 3
- Influencing Route Preference in a Multi-Exit IGP Network, page 4
- BGP Cost Community Support for EIGRP MPLS VPN PE-CE with Backdoor Links, page 5

### **BGP Cost Community Overview**

The cost community is a non-transitive extended community attribute that is passed to iBGP and confederation peers but not to eBGP peers. The configuration of the BGP Cost Community feature allows you to customize the BGP best path selection process for a local autonomous system or confederation.

The cost community attribute is applied to internal routes by configuring the **set extcommunity cost** command in a route map. The cost community set clause is configured with a cost community ID number (0–255) and cost number (0-4294967295). The cost number value determines the preference for the path. The path with the lowest cost community number is preferred. Paths that are not specifically configured with the cost community attribute are assigned a default cost number value of 2147483647 (the midpoint between 0 and 4294967295) and are evaluated by the best path selection process accordingly. In the case

where two paths have been configured with the same cost number value, the path selection process will then prefer the path with the lowest cost community ID. The cost extended community attribute is propagated to iBGP peers when extended community exchange is enabled with the **neighbor send-community** command.

The following commands can be used to apply the route map that is configured with the cost community set clause:

- aggregate-address
- neighbor default-originate route-map {in | out}
- neighbor route-map
- network route-map
- redistribute route-map

## **How the BGP Cost Community Influences the Best Path Selection Process**

The cost community attribute influences the BGP best path selection process at the point of insertion (POI). By default, the POI follows the IGP metric comparison. When BGP receives multiple paths to the same destination, it uses the best path selection process to determine which path is the best path. BGP automatically makes the decision and installs the best path into the routing table. The POI allows you to assign a preference to o a specific path when multiple equal cost paths are available. If the POI is not valid for local best path selection, the cost community attribute is silently ignored.

Multiple paths can be configured with the cost community attribute for the same POI. The path with the lowest cost community ID is considered first. In other words, all of the cost community paths for a specific POI are considered, starting with the one with the lowest cost community. Paths that do not contain the cost community (for the POI and community ID being evaluated) are assigned the default community cost value (2147483647). If the cost community values are equal, then cost community comparison proceeds to the next lowest community ID for this POI.



Paths that are not configured with the cost community attribute are considered by the best path selection process to have the default *cost-value* (half of the maximum value [4294967295] or 2147483647).

Applying the cost community attribute at the POI allows you to assign a value to a path originated or learned by a peer in any part of the local autonomous system or confederation. The cost community can be used as a "tie breaker" during the best path selection process. Multiple instances of the cost community can be configured for separate equal cost paths within the same autonomous system or confederation. For example, a lower cost community value can be applied to a specific exit path in a network with multiple equal cost exits points, and the specific exit path will be preferred by the BGP best path selection process. See the scenario described in the "Influencing Route Preference in a Multi-Exit IGP Network" section on page 4.

### **Cost Community Support for Aggregate Routes and Multipaths**

Aggregate routes and multipaths are supported by the BGP Cost Community feature. The cost community attribute can be applied to either type of route. The cost community attribute is passed to the aggregate or multipath route from component routes that carry the cost community attribute. Only unique IDs are passed, and only the highest cost of any individual component route will be applied to

the aggregate on a per-ID basis. If multiple component routes contain the same ID, the highest configured cost is applied to the route. For example, the following two component routes are configured with the cost community attribute via an inbound route map:

- 10.0.0.1 (POI=IGP, ID=1, Cost=100)
- 192.168.0.1 (POI=IGP, ID=1, Cost=200)

If these component routes are aggregated or configured as a multipath, the cost value 200 (POI=IGP, ID=1, Cost=200) will be advertised because it is the highest cost.

If one or more component routes does not carry the cost community attribute or if the component routes are configured with different IDs, then the default value (2147483647) will be advertised for the aggregate or multipath route. For example, the following three component routes are configured with the cost community attribute via an inbound route map. However, the component routes are configured with two different IDs.

- 10.0.0.1 (POI=IGP, ID=1, Cost=100)
- 172.16.0.1 (POI=IGP, ID=2, Cost=100)
- 192.168.0.1 (POI=IGP, ID=1, Cost=200)


The single advertised path will include the aggregated cost communities as follows:

• {POI=IGP, ID=1, Cost=2147483647} {POI=IGP, ID=2, Cost=2147483647}

### Influencing Route Preference in a Multi-Exit IGP Network

Figure 1 shows an Interior Gateway Protocol (IGP) network with two autonomous system boundary routers (ASBRs) on the edge. Each ASBR has an equal cost path to network 10.8/16.

Figure 1 Multi-Exit Point IGP Network

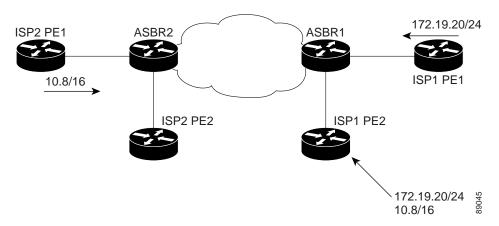

Both paths are considered to be equal by BGP. If multipath loadsharing is configured, both paths will be installed to the routing table and will be used to load balance traffic. If multipath load balancing is not configured, then BGP will select the path that was learned first as the best path and install this path to the routing table. This behavior may not be desirable under some conditions. For example, the path is learned from ISP1 PE2 first, but the link between ISP1 PE2 and ASBR1 is a low-speed link.

The configuration of the cost community attribute can be used to influence the BGP best path selection process by applying a lower cost community value to the path learned by ASBR2. For example, the following configuration is applied to ASBR2.

```
route-map ISP2_PE1 permit 10
  set extcommunity cost 1 1
  match ip address 13
!
ip access-list 13 permit 10.8.0.0 0.0.255.255
```

The above route map applies a cost community number value of 1 to the 10.8.0.0 route. By default, the path learned from ASBR1 will be assigned a cost community value of 2147483647. Because the path learned from ASBR2 has lower cost community value, this path will be preferred.

## **BGP Cost Community Support for EIGRP MPLS VPN PE-CE with Backdoor Links**

Before EIGRP Site of Origin (SoO) BGP Cost Community support was introduced, BGP preferred locally sourced routes over routes learned from BGP peers. Back door links in an EIGRP MPLS VPN topology will be preferred by BGP if the back door link is learned first. (A back door link, or a route, is a connection that is configured outside of the VPN between a remote and main site. For example, a WAN leased line that connects a remote site to the corporate network).

The "pre-best-path" point of insertion (POI) was introduced in the BGP Cost Community feature to support mixed EIGRP VPN network topologies that contain VPN and backdoor links. This POI is applied automatically to EIGRP routes that are redistributed into BGP. The "pre-best path" POI carries the EIGRP route type and metric. This POI influences the best path calculation process by influencing BGP to consider this POI before any other comparison step. No configuration is required.

# **How to Configure the BGP Cost Community Feature**

This section contains the following procedures:

- Configuring the BGP Cost Community, page 5
- Verifying the Configuration of the BGP Cost Community, page 7

## **Configuring the BGP Cost Community**

To configure the cost community, perform the steps in this section.

### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. router bgp autonomous-system-number
- 4. **neighbor** ip-address **remote-as** autonomous-system-number
- 5. address-family ipv4 [mdt | multicast | tunnel | unicast [vrf vrf-name] | vrf vrf-name] | ipv6 [multicast | unicast] | vpnv4 [unicast]
- 6. **neighbor** *ip-address* **route-map** *map-name* {**in** | **out**}
- 7. exit
- 8. route-map map-name {permit | deny} [sequence-number]
- 9. set extcommunity cost [igp] community-id cost-value

### 10. end

	Command or Action	Purpose
Step 1	enable	Enables higher privilege levels, such as privileged EXEC mode.
	Example: Router> enable	Enter your password if prompted.
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	router bgp autonomous-system-number	Enters router configuration mode to create or configure a BGP routing process.
	<pre>Example: Router(config)# router bgp 50000</pre>	
Step 4	neighbor ip-address remote-as autonomous-system-number	Establishes peering with the specified neighbor or peer-group.
	<pre>Example: Router(config-router)# neighbor 10.0.0.1 remote-as 101</pre>	
Step 5	address-family ipv4 [mdt   multicast   tunnel   unicast [vrf vrf-name]   vrf vrf-name]   ipv6 [multicast   unicast]   vpnv4 [unicast]	Places the router in address family configuration mode.
	<pre>Example: Router(config-router)# address-family ipv4</pre>	
Step 6	$\begin{tabular}{lll} \bf neighbor & ip-address & {\bf route-map} & map-name & \{ \bf in \mid out \} \\ \end{tabular}$	Applies an incoming or outgoing route map for the specified neighbor or peer-group.
	<pre>Example: Router(config-router)# neighbor 10.0.0.1 route-map MAP-NAME in</pre>	
Step 7	exit	Exits router configuration mode and enters global configuration mode.
	<pre>Example: Router(config-router)# exit</pre>	
Step 8	<pre>route-map map-name {permit   deny} [sequence-number]</pre>	Enters route map configuration mode to create or configure a route map.
	Example: Router(config)# route-map MAP-NAME permit 10	

	Command or Action	Purpose
Step 9	<pre>set extcommunity cost [igp] community-id cost-value  Example: Router(config-route-map)# set extcommunity cost 1 100</pre>	Creates a set clause to apply the cost community attribute.      Multiple cost community set clauses can be configured in each route map block or sequence. Each cost community set clause must have a different ID (0-255). The cost community set clause with the lowest cost-value is preferred by the best path selection process when all other attributes are equal.      Poths that are not configured with the cost community.
		• Paths that are not configured with the cost community attribute will be assigned the default <i>cost-value</i> , which is half of the maximum value (4294967295) or 2147483647.
Step 10	end	Exits route map configuration mode and enters privileged EXEC mode.
	<pre>Example: Router(config-route-map)# end</pre>	

## **Verifying the Configuration of the BGP Cost Community**

BGP cost community configuration can be verified locally or for a specific neighbor. To verify the local configuration cost community, use the **show route-map** or **show running-config** command. To verify that a specific neighbor carries the cost community, use the **show ip bgp** *ip-address* command. The output from these commands displays the POI (IGP is the default POI), the configured ID, and configured cost. For large cost community values, the output from these commands will also show, with + and - values, the difference between the configured cost and the default cost. See the "Verifying the Configuration of the BGP Cost Community" section on page 7 for specific example output.

### **Troubleshooting Tips**

The **bgp bestpath cost-community ignore** command can be used to disable the evaluation of the cost community attribute to help isolate problems and troubleshoot issues that relate to BGP best path selection.

The **debug ip bgp updates** command can be used to print BGP update messages. The cost community extended community attribute will be displayed in the output of this command when received from a neighbor. A message will also be displayed if a non-transitive extended community if received from an external peer.

# Configuration Examples for the BGP Cost Community Feature

The following examples show the configuration and verification of this feature:

- BGP Cost Community Configuration: Example, page 8
- BGP Cost Community Verification: Examples, page 8

## **BGP Cost Community Configuration: Example**

The following example configuration shows the configuration of the **set extcommunity cost** command. The following example applies the cost community ID of 1 and cost community value of 100 to routes that are permitted by the route map. This configuration will cause the best path selection process to prefer this route over other equal cost paths that were not permitted by this route map sequence.

```
Router(config)# router bgp 50000
Router(config-router)# neighbor 10.0.0.1 remote-as 50000
Router(config-router)# neighbor 10.0.0.1 update-source Loopback 0
Router(config-router)# address-family ipv4
Router(config-router-af)# neighbor 10.0.0.1 activate
Router(config-router-af)# neighbor 10.0.0.1 route-map COST1 in
Router(config-router-af)# neighbor 10.0.0.1 send-community both
Router(config-router-af)# exit
Router(config-route-map)# exit
Router(config-route-map)# match ip-address 1
Router(config-route-map)# set extcommunity cost 1 100
```

## **BGP Cost Community Verification: Examples**

BGP cost community configuration can be verified locally or for a specific neighbor. To verify the local configuration cost community, use the **show route-map** or **show running-config** command. To verify that a specific neighbor carries the cost community, use the **show ip bgp** *ip-address* command.

The output of the **show route-map** command will display locally configured route-maps, match, set, continue clauses, and the status and configuration of the cost community attribute. The following sample output is similar to the output that will be displayed:

#### Router# show route-map

```
route-map COST1, permit, sequence 10
  Match clauses:
   as-path (as-path filter): 1
  Set clauses:
    extended community Cost:igp:1:100
  Policy routing matches: 0 packets, 0 bytes
route-map COST1, permit, sequence 20
  Match clauses:
   ip next-hop (access-lists): 2
  Set clauses:
   extended community Cost:igp:2:200
  Policy routing matches: 0 packets, 0 bytes
route-map COST1, permit, sequence 30
  Match clauses:
   interface GigabitEthernet0/0/0
   extcommunity (extcommunity-list filter):300
  Set clauses:
    extended community Cost:igp:3:300
  Policy routing matches: 0 packets, 0 bytes
```

The following sample output shows locally configured routes with large cost community values:

### Router# show route-map

```
route-map set-cost, permit, sequence 10
Match clauses:
Set clauses:
   extended community RT:1:1 RT:2:2 RT:3:3 RT:4:4 RT:5:5 RT:6:6 RT:7:7
   RT:100:100 RT:200:200 RT:300:300 RT:400:400 RT:500:500 RT:600:600
```

```
RT:700:700 additive
extended community Cost:igp:1:4294967295 (default+2147483648)
Cost:igp:2:200 Cost:igp:3:300 Cost:igp:4:400
Cost:igp:5:2147483648 (default+1) Cost:igp:6:2147484648 (default+1001)
Cost:igp:7:2147284648 (default-198999)
Policy routing matches: 0 packets, 0 bytes
```

The output of the **show running config** command will display match, set, and continue clauses that are configured within a route-map. The following sample output is filtered to show only the relevant part of the running configuration:

```
Router# show running-config | begin route-map
route-map COST1 permit 20
match ip next-hop 2
set extcommunity cost igp 2 200
!
route-map COST1 permit 30
match interface GigabitEthernet0/0/0
match extcommunity 300
set extcommunity cost igp 3 300
.
.
```

The output of the **show ip bgp** *ip-address* command can be used to verify if a specific neighbor carries a path that is configured with the cost community attribute. The cost community attribute information is displayed in the "Extended Community" field. The POI, the cost community ID, and the cost community number value are displayed. The following sample output shows that neighbor 172.16.1.2 carries a cost community with an ID of 1 and a cost of 100:

```
Router# show ip bgp 10.0.0.0

BGP routing table entry for 10.0.0.0/8, version 2

Paths: (1 available, best #1)

Not advertised to any peer
2 2 2

172.16.1.2 from 172.16.1.2 (172.16.1.2)

Origin IGP, metric 0, localpref 100, valid, external, best Extended Community: Cost:igp:1:100
```

If the specified neighbor is configured with the default cost community number value or if the default value is assigned automatically for cost community evaluation, "default" with + and - values will be displayed after the cost community number value in the output.

## Where to Go Next

For more information about the EIGRP MPLS VPN PE-CE Site of Origin (SoO) feature, refer to the EIGRP MPLS VPN PE-CE Site of Origin (SoO) module.

## **Additional References**

For additional information related to the BGP Cost Community feature, refer to the following references.

# **Related Documents**

Related Topic	Document Title
BGP Best Path Selection	BGP Best Path Selection Algorithm
EIGRP MPLS VPN PE-CE Site of Origin	EIGRP MPLS VPN PE-CE Site of Origin (SoO)
BGP commands	Cisco IOS IP Routing: BGP Command Reference
Cisco IOS master command list, all releases	Cisco IOS Master Command List, All Releases

# **Standards**

Standard	Title
No new or modified standards are supported, and	_
support for existing standards has not been modified.	

## **MIBs**

MIBs	MIBs Link
No new or modified MIBs are supported, and support for existing MIBs has not been modified.	To locate and download MIBs for selected platforms, Cisco IOS XE software releases, and feature sets, use Cisco MIB Locator found at the following URL:
	http://www.cisco.com/go/mibs

## **RFCs**

RFCs	Title
draft-retana-bgp-custom-decision-00.txt	BGP Custom Decision Process

## **Technical Assistance**

Description	Link
The Cisco Support website provides extensive online resources, including documentation and tools for troubleshooting and resolving technical issues with Cisco products and technologies.	http://www.cisco.com/techsupport
To receive security and technical information about your products, you can subscribe to various services, such as the Product Alert Tool (accessed from Field Notices), the Cisco Technical Services Newsletter, and Really Simple Syndication (RSS) Feeds.	
Access to most tools on the Cisco Support website requires a Cisco.com user ID and password.	

# **Feature Information for BGP Cost Community**

Table 1 lists the features in this module and provides links to specific configuration information.

Use Cisco Feature Navigator to find information about platform support and software image support. Cisco Feature Navigator enables you to determine which Cisco IOS XE software images support a specific software release, feature set, or platform. To access Cisco Feature Navigator, go to <a href="http://www.cisco.com/go/cfn">http://www.cisco.com/go/cfn</a>. An account on Cisco.com is not required.



Table 1 lists only the Cisco IOS XE software release that introduced support for a given feature in a given Cisco IOS XE software release train. Unless noted otherwise, subsequent releases of that Cisco IOS XE software release train also support that feature.

Table 1 Feature Information for BGP Cost Community

Feature Name	Releases	Feature Information
BGP Cost Community	Cisco IOS XE Release 2.1	The BGP Cost Community feature introduces the cost extended community attribute. The cost community is a non-transitive extended community attribute that is passed to internal BGP (iBGP) and confederation peers but not to external BGP (eBGP) peers. The cost community feature allows you to customize the local route preference and influence the best-path selection process by assigning cost values to specific routes.
		This feature was introduced on the Cisco ASR 1000 Series Aggregation Services Routers.
		The following sections provide information about this feature:
		BGP Cost Community Overview, page 2
		<ul> <li>How the BGP Cost Community Influences the Best Path Selection Process, page 3</li> </ul>
		• Cost Community Support for Aggregate Routes and Multipaths, page 3
		• Influencing Route Preference in a Multi-Exit IGP Network, page 4
		• How to Configure the BGP Cost Community Feature, page 5
		• Configuration Examples for the BGP Cost Community Feature, page 7
		The following commands were introduced or modified: <b>bgp bestpath cost-community ignore</b> , <b>debug ip bgp updates</b> , and <b>set extcommunity cost</b> .

Table 1 Feature Information for BGP Cost Community (continued)

Feature Name	Releases	Feature Information
BGP Cost Community Support for EIGRP MPLS VPN PE-CE with Backdoor Links	Cisco IOS XE Release 2.1	Back door links in an EIGRP MPLS VPN topology will be preferred by BGP if the back door link is learned first. The "pre-best-path" point of insertion (POI) was introduced in the BGP Cost Community feature to support mixed EIGRP VPN network topologies that contain VPN and backdoor links. This POI is applied automatically to EIGRP routes that are redistributed into BGP and the POI influences the best path calculation process by influencing BGP to consider this POI before any other comparison step. No configuration is required. This feature is enabled automatically for EIGRP VPN sites when Cisco IOS XE Release 2.1 or later releases, is installed to a PE, CE, or back door router.
		This feature was introduced on the Cisco ASR 1000 Series Routers.
		The following section provides information about this feature:
		BGP Cost Community Support for EIGRP MPLS VPN PE-CE with Backdoor Links, page 5

CCDE, CCENT, CCSI, Cisco Eos, Cisco HealthPresence, Cisco IronPort, the Cisco logo, Cisco Nurse Connect, Cisco Pulse, Cisco SensorBase, Cisco StackPower, Cisco StadiumVision, Cisco TelePresence, Cisco Unified Computing System, Cisco WebEx, DCE, Flip Channels, Flip for Good, Flip Mino, Flipshare (Design), Flip Ultra, Flip Video, Flip Video (Design), Instant Broadband, and Welcome to the Human Network are trademarks; Changing the Way We Work, Live, Play, and Learn, Cisco Capital, Cisco Capital (Design), Cisco:Financed (Stylized), Cisco Store, Flip Gift Card, and One Million Acts of Green are service marks; and Access Registrar, Aironet, AllTouch, AsyncOS, Bringing the Meeting To You, Catalyst, CCDA, CCDP, CCIE, CCIP, CCNA, CCNP, CCSP, CCVP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IOS, Cisco Lumin, Cisco Nexus, Cisco Press, Cisco Systems, Cisco Systems Capital, the Cisco Systems logo, Cisco Unity, Collaboration Without Limitation, Continuum, EtherFast, EtherSwitch, Event Center, Explorer, Follow Me Browsing, GainMaker, iLYNX, IOS, iPhone, IronPort, the IronPort logo, Laser Link, LightStream, Linksys, MeetingPlace, MeetingPlace Chime Sound, MGX, Networkers, Networking Academy, PCNow, PIX, PowerKEY, PowerPanels, PowerTV, PowerTV (Design), PowerVu, Prisma, ProConnect, ROSA, SenderBase, SMARTnet, Spectrum Expert, StackWise, WebEx, and the WebEx logo are registered trademarks of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries.

All other trademarks mentioned in this document or website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0910R)

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, and figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

© 2004-2009 Cisco Systems, Inc. All rights reserved.



# BGP Support for IP Prefix Import from Global Table into a VRF Table

First Published: August 9, 2004 Last Updated: May 4, 2009

The BGP Support for IP Prefix Import from Global Table into a VRF Table feature introduces the capability to import IPv4 unicast prefixes from the global routing table into a Virtual Private Network (VPN) routing/forwarding (VRF) instance table using an import route map.

# **Finding Feature Information**

For the latest feature information and caveats, see the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the "Feature Information for BGP Support for IP Prefix Import from Global Table into a VRF Table" section on page 13.

Use Cisco Feature Navigator to find information about platform support and Cisco IOS XE software image support. To access Cisco Feature Navigator, go to <a href="http://www.cisco.com/go/cfn">http://www.cisco.com/go/cfn</a>. An account on Cisco.com is not required.

## **Contents**

- Prerequisites for BGP Support for IP Prefix Import from Global Table into a VRF Table, page 2
- Restrictions for BGP Support for IP Prefix Import from Global Table into a VRF Table, page 2
- Information About BGP Support for IP Prefix Import from Global Table into a VRF Table, page 2
- How to Import IP Prefixes from Global Table into a VRF Table, page 3
- Configuration Examples for BGP Support for IP Prefix Import from Global Table into a VRF Table, page 9
- Additional References, page 11



• Feature Information for BGP Support for IP Prefix Import from Global Table into a VRF Table, page 13

# Prerequisites for BGP Support for IP Prefix Import from Global Table into a VRF Table

- Border Gateway Protocol (BGP) peering sessions are established.
- CEF or dCEF (for distributed platforms) is enabled on all participating routers.

# Restrictions for BGP Support for IP Prefix Import from Global Table into a VRF Table

- Only IPv4 unicast and multicast prefixes can be imported into a VRF with this feature.
- A maximum of five VRF instances per router can be created to import IPv4 prefixes from the global routing table.
- IPv4 prefixes imported into a VRF using this feature cannot be imported into a VPNv4 VRF.

# **Information About BGP Support for IP Prefix Import from Global Table into a VRF Table**

- Importing IPv4 Prefixes into a VRF, page 2
- Black Hole Routing, page 3
- Classifying Global Traffic, page 3

## **Importing IPv4 Prefixes into a VRF**

The BGP Support for IP Prefix Import from Global Table into a VRF Table feature introduces the capability to import IPv4 unicast prefixes from the global routing table into a Virtual Private Network (VPN) routing/forwarding instance (VRF) table using an import route map. This feature extends the functionality of VRF import-map configuration to allow IPv4 prefixes to be imported into a VRF based on a standard community. Both IPv4 unicast and multicast prefixes are supported. No Multiprotocol Label Switching (MPLS) or route target (import/export) configuration is required.

IP prefixes are defined as match criteria for the import map through standard Cisco IOS XE filtering mechanisms. For example, an IP access-list, an IP prefix-list, or an IP as-path filter is created to define an IP prefix or IP prefix range, and then the prefix or prefixes are processed through a match clause in a route map. Prefixes that pass through the route map are imported into the specified VRF per the import map configuration.

## **Black Hole Routing**

This feature can be configured to support Black Hole Routing (BHR). BHR is a method that allows the administrator to block undesirable traffic, such as traffic from illegal sources or traffic generated by a Denial of Service (DoS) attack, by dynamically routing the traffic to a dead interface or to a host designed to collect information for investigation, mitigating the impact of the attack on the network. Prefixes are looked up, and packets that come from unauthorized sources are blackholed by the ASIC at line rate.

## **Classifying Global Traffic**

This feature can be used to classify global IP traffic based on physical location or class of service. Traffic is classified based on administration policy and then imported into different VRFs. On a college campus, for example, network traffic could be divided into an academic network and residence network traffic, a student network and faculty network, or a dedicated network for multicast traffic. After the traffic is divided along administration policy, routing decisions can be configured with the MPLS VPN—VRF Selection Based on Source IP Address feature.

# **How to Import IP Prefixes from Global Table into a VRF Table**

This section contains the following tasks:

- Defining IPv4 IP Prefixes to Import, page 3
- Creating the VRF and the Import Route Map, page 4
- Filtering on the Ingress Interface, page 6
- Verifying Global IP Prefix Import, page 8

## **Defining IPv4 IP Prefixes to Import**

IPv4 unicast or multicast prefixes are defined as match criteria for the import route map using standard Cisco IOS XE filtering mechanisms. This task uses an IP access list and an IP prefix list.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. access-list access-list-number {deny | permit} source [source-wildcard] [log]
- **4. ip prefix-list** *prefix-list-name* [**seq** *seq-value*] {**deny** *network/length* | **permit** *network/length*} [**ge** *ge-value*] [**le** *le-value*]

#### **DETAILED STEPS**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		Enter your password if prompted.
	Example: Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	<pre>access-list access-list-number {deny   permit} source [source-wildcard] [log]</pre>	Creates an access list and defines a range of IP prefixes to import into the VRF table.
	<pre>Example: Router(config)# access-list 50 permit 10.1.1.0 0.0.0.255</pre>	• The example creates a standard access list numbered 50. This filter will permit traffic from any host with an IP address in the 10.1.1.0/24 subnet.
Step 4	<pre>ip prefix-list prefix-list-name [seq seq-value] {deny network/length   permit network/length} [ge ge-value] [le le-value]</pre>	Creates a prefix list and defines a range of IP prefixes to import into the VRF table.
	<pre>Example: Router(config)# ip prefix-list COLORADO permit 10.24.240.0/22</pre>	• The example creates an IP prefix list named COLORADO. This filter will permit traffic from any host with an IP address in the 10.24.240.0/22 subnet.

## **Creating the VRF and the Import Route Map**

The IP prefixes that are defined for import are then processed through a match clause in a route map. IP prefixes that pass through the route map are imported into the VRF. A maximum of 5 VRFs per router can be configured to import IPv4 prefixes from the global routing table. 1000 prefixes per VRF are imported by default. You can manually configure from 1 to 2,147,483,647 prefixes for each VRF. We recommend that you use caution if you manually configure the prefix import limit. Configuring the router to import too many prefixes can interrupt normal router operation.

No MPLS or route target (import/export) configuration is required.

### **Import Actions**

Import actions are triggered when a new routing update is received or when routes are withdrawn. During the initial BGP update period, the import action is postponed to allow BGP to convergence more quickly. Once BGP converges, incremental BGP updates are evaluated immediately and qualified prefixes are imported as they are received.

### **New Syslog Message**

The following syslog message is introduced by this feature. It will be displayed when more prefixes are available for import than the user-defined limit:

00:00:33: %BGP-3-AFIMPORT\_EXCEED: IPv4 Multicast prefixes imported to multicast vrf exceed the limit 2

You can either increase the prefix limit or fine-tune the import route map filter to reduce the number of candidate routes.

### **Restrictions**

- Only IPv4 unicast and multicast prefixes can be imported into a VRF with this feature.
- A maximum of five VRF instances per router can be created to import IPv4 prefixes from the global routing table.
- IPv4 prefixes imported into a VRF using this feature cannot be imported into a VPNv4 VRF.

### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. ip vrf vrf-name
- 4. rd route-distinguisher
- 5. import ipv4 {unicast | multicast} [prefix-limit] map route-map
- 6. exit
- 7. route-map map-tag [permit | deny] [sequence-number]
- **8. match ip address** { acl-number [acl-number | acl-name] | acl-name [acl-name | acl-number] | **prefix-list** prefix-list-name [prefix-list-name]}
- 9. end

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		• Enter your password if prompted.
	Example:	
	Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	ip vrf vrf-name	Creates a VRF routing table and specifies the VRF name (or tag).
	<pre>Example: Router(config)# ip vrf GREEN</pre>	• The <b>ip vrf</b> <i>vrf</i> - <i>name</i> command creates a VRF routing table and a CEF table, and both are named using the <i>vrf</i> - <i>name</i> argument. Associated with these tables is the
		default route distinguisher value.

	Command or Action	Purpose
Step 4	rd route-distinguisher	Creates routing and forwarding tables for the VRF instance.
	Example: Router(config-vrf)# rd 100:10	• There are two formats for configuring the route distinguisher argument. It can be configured in the as-number:network number (ASN:nn) format, as shown in the example, or it can be configured in the IP address:network number format (IP-address:nn).
Step 5	<pre>import ipv4 {unicast   multicast} [prefix-limit] map route-map</pre>	Creates an import map to import IPv4 prefixes from the global routing table to a VRF table.
		• Unicast or multicast prefixes are specified.
	<pre>Example: Router(config-vrf)# import ipv4 unicast 1000 map UNICAST</pre>	• Up to a 1000 prefixes will be imported by default. The <i>prefix-limit</i> argument is used to specify a limit from 1 to 2,147,483,647 prefixes.
		• The route-map that defines the prefixes to import is specified after the <b>map</b> keyword is entered.
		• The example creates an import map that will import up to 1000 unicast prefixes that pass through the route map named UNICAST.
Step 6	exit	Exits VRF configuration mode and enters global configuration mode.
	<pre>Example: Router(config-vrf)# exit</pre>	
Step 7	<pre>route-map map-tag [permit   deny] [sequence-number]</pre>	Defines the conditions for redistributing routes from one routing protocol into another, or enables policy routing.
	Example:	• The route map name must match the route map specified in Step 5.
	Router(config)# route-map UNICAST permit 10	• The example creates a route map named UNICAST.
Step 8	<pre>match ip address {acl-number [acl-number   acl-name]   acl-name [acl-name   acl-number]   prefix-list prefix-list-name [prefix-list-name]}</pre>	Distributes any routes that have a destination network number address that is permitted by a standard or extended access list, and performs policy routing on matched packets.
		Both IP access lists and IP prefix lists are supported.
	<pre>Example: Router(config-route-map)# match ip address 50</pre>	• The example configures the route map to use standard access list 50 to define match criteria.
Step 9	end	Exits route-map configuration mode and returns to privileged EXEC mode.
	<pre>Example: Router(config-route-map)# end</pre>	

# **Filtering on the Ingress Interface**

This feature can be configured globally or on a per-interface basis. We recommend that you apply it to ingress interfaces to maximize performance.

### **Unicast Reverse Path Forwarding**

Unicast Reverse Path Forwarding (Unicast RPF) can be optionally configured. Unicast RPF is used to verify that the source address is in the Forwarding Information Base (FIB). The **ip verify unicast vrf** command is configured in interface configuration mode and is enabled for each VRF. This command has **permit** and **deny** keywords that are used to determine if the traffic is forwarded or dropped after Unicast RPF verification.

### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- **3. interface** *type number* [*name-tag*]
- 4. ip policy route-map map-tag
- 5. ip verify unicast vrf vrf-name {deny | permit}
- 6. end

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		Enter your password if prompted.
	Example:	
	Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	<pre>interface type number [name-tag]</pre>	Configures an interface and enters interface configuration mode.
	Example:	
	Router(config)# interface GigabitEthernet0/0/0	
Step 4	ip policy route-map map-tag	Identifies a route map to use for policy routing on an interface.
	<pre>Example: Router(config-if)# ip policy route-map UNICAST</pre>	• The configuration example attaches the route map named UNICAST to the interface.
Step 5	<pre>ip verify unicast vrf vrf-name {deny   permit}</pre>	(Optional) Enables Unicast Reverse Path Forwarding verification for the specified VRF.
	<pre>Example: Router(config-if)# ip verify unicast vrf GREEN permit</pre>	<ul> <li>The example enables verification for the VRF named GREEN. Traffic that passes verification will be forwarded.</li> </ul>
Step 6	end	Exits interface configuration mode and returns to privileged EXEC mode.
	<pre>Example: Router(config-if)# end</pre>	

## **Verifying Global IP Prefix Import**

Perform the steps in this task to display information about the VRFs that are configured with this feature and to verify that global IP prefixes are imported into the specified VRF table.

#### **SUMMARY STEPS**

- 1. enable
- 2. show ip bgp vpnv4 {all | rd route-distinguisher | vrf vrf-name}
- 3. show ip vrf [brief | detail | interfaces | id] [vrf-name]

### **DETAILED STEPS**

#### Step 1 enable

Enables privileged EXEC mode. Enter your password if prompted.

Router# enable

### **Step 2 show ip bgp vpnv4** { **all** | **rd** route-distinguisher | **vrf** vrf-name }

Displays VPN address information from the BGP table. The output displays the import route map, the traffic type (unicast or multicast), the default or user-defined prefix import limit, the actual number of prefixes that are imported, and individual import prefix entries.

```
Router# show ip bgp vpnv4 all
BGP table version is 15, local router ID is 10.1.1.1
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal,
             S Stale
Origin codes: i - IGP, e - EGP, ? - incomplete
  Network
                  Next Hop
                                       Metric LocPrf Weight Path
Route Distinguisher: 100:1 (default for vrf academic)
Import Map: ACADEMIC, Address-Family: IPv4 Unicast, Pfx Count/Limit: 6/1000
*> 10.50.1.0/24 172.17.2.2
                                                           0 2 3 ?
*> 10.50.2.0/24
                   172.17.2.2
                                                           0 2 3 ?
*> 10.50.3.0/24
                  172.17.2.2
                                                           0 2 3 2
*> 10.60.1.0/24
                  172.17.2.2
                                                           0 2 3 ?
*> 10.60.2.0/24 172.17.2.2
*> 10.60.3.0/24 172.17.2.2
                                                           0 2 3 ?
                                                           0 2 3 ?
Route Distinguisher: 200:1 (default for vrf residence)
Import Map: RESIDENCE, Address-Family: IPv4 Unicast, Pfx Count/Limit: 3/1000
*> 10.30.1.0/24 172.17.2.2
                                               0
                                                           0 2 i
*> 10.30.2.0/24
                   172.17.2.2
                                                0
                                                           0.2 i
                172.17.2.2
*> 10.30.3.0/24
                                                0
                                                           0 2 i
Route Distinguisher: 300:1 (default for vrf BLACKHOLE)
Import Map: BLACKHOLE, Address-Family: IPv4 Unicast, Pfx Count/Limit: 3/1000
*> 10.40.1.0/24 172.17.2.2
                                               0
                                                           0 2 i
*> 10.40.2.0/24
                  172.17.2.2
                                                0
                                                           0 2 i
*> 10.40.3.0/24
                  172.17.2.2
                                               0
                                                           0.2 i
Route Distinguisher: 400:1 (default for vrf multicast)
Import Map: MCAST, Address-Family: IPv4 Multicast, Pfx Count/Limit: 2/2
*> 10.70.1.0/24 172.17.2.2
                                              0
                                                          0 2 i
*> 10.70.2.0/24
                   172.17.2.2
                                                0
                                                           0 2 i
```

### Step 3 show ip vrf [brief | detail | interfaces | id] [vrf-name]

Displays defined VRFs and their associated interfaces. The output displays the import route map, the traffic type (unicast or multicast), and the default or user-defined prefix import limit. The following example output shows that the import route map named UNICAST is importing IPv4 unicast prefixes and that the prefix import limit is 1000.

```
Router# show ip vrf detail

VRF academic; default RD 100:10; default VPNID <not set>
VRF Table ID = 1
  No interfaces
  Connected addresses are not in global routing table
  Export VPN route-target communities
   RT:100:10
Import VPN route-target communities
   RT:100:10
Import route-map for ipv4 unicast: UNICAST (prefix limit: 1000)
No export route-map
```

# **Configuration Examples for BGP Support for IP Prefix Import from Global Table into a VRF Table**

This section contains the following configuration examples:

- Configuring Global IP Prefix Import: Example, page 9
- Verifying Global IP Prefix Import: Example, page 10

### **Configuring Global IP Prefix Import: Example**

The following example imports unicast prefixes into the VRF named *green* using an IP prefix list and a route map:

This example starts in global configuration mode:

```
!
ip prefix-list COLORADO seq 5 permit 10.131.64.0/19
ip prefix-list COLORADO seq 10 permit 172.31.2.0/30
ip prefix-list COLORADO seq 15 permit 172.31.1.1/32
!
ip vrf green
rd 200:1
import ipv4 unicast map UNICAST
route-target export 200:10
route-target import 200:10
!
exit
!
route-map UNICAST permit 10
match ip address prefix-list COLORADO
!
exit
```

## **Verifying Global IP Prefix Import: Example**

The **show ip vrf** command or the **show ip bgp vpnv4** command can be used to verify that prefixes are imported from the global routing table to the VRF table.

The following example from the **show ip vrf** command shows the import route map named UNICAST is importing IPv4 unicast prefixes and the prefix import limit is 1000:

```
Router# show ip vrf detail
VRF green; default RD 200:1; default VPNID <not set>
 Interfaces:
   Se2/0
VRF Table ID = 1
 Export VPN route-target communities
   RT:200:10
  Import VPN route-target communities
  Import route-map for ipv4 unicast: UNICAST (prefix limit: 1000)
 No export route-map
  VRF label distribution protocol: not configured
  VRF label allocation mode: per-prefix
VRF red; default RD 200:2; default VPNID <not set>
  Interfaces:
   Se3/0
VRF Table ID = 2
  Export VPN route-target communities
   RT:200:20
  Import VPN route-target communities
   RT:200:20
  No import route-map
 No export route-map
 VRF label distribution protocol: not configured
  VRF label allocation mode: per-prefix
```

The following example from the **show ip bgp vpnv4** command shows the import route map names, the prefix import limit and the actual number of imported prefixes, and the individual import entries:

```
Router# show ip bgp vpnv4 all
BGP table version is 18, local router ID is 10.131.127.252
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal,
            r RIB-failure, S Stale
Origin codes: i - IGP, e - EGP, ? - incomplete
                                     Metric LocPrf Weight Path
  Network
                  Next Hop
Route Distinguisher: 200:1 (default for vrf green)
Import Map: UNICAST, Address-Family: IPv4 Unicast, Pfx Count/Limit: 1/1000
*>i10.131.64.0/19 10.131.95.252 0
                                               100
                                                       0 i
*> 172.16.1.1/32
                  172.16.2.1
                                          0
                                                    32768 i
*> 172.16.2.0/30 0.0.0.0
                                         0
                                                    32768 i
*>i172.31.1.1/32 10.131.95.252 0 100 0 i
*>i172.31.2.0/30 10.131.95.252 0 100 0 i
Route Distinguisher: 200:2 (default for vrf red)
*> 172.16.1.1/32 172.16.2.1 0
                                                   32768 i
                                                    32768 i
*> 172.16.2.0/30 0.0.0.0
                                          0
*>i172.31.1.1/32 10.131.95.252 0
*>i172.31.2.0/30 10.131.95.252 0
                                               100
                                                        0 i
                                               100
                                                         0 i
```

# **Additional References**

The following sections provide references related to the BGP Support for IP Prefix Import from Global Table into a VRF Table feature.

## **Related Documents**

Related Topic	Document Title
BGP commands: complete command syntax, defaults, command mode, command history, usage guidelines, and examples	Cisco IOS IP Routing: BGP Command Reference
MPLS Layer 3 VPN configuration tasks	Configuring MPLS Layer 3 VPNs
VRF selection based on source IP address	MPLS VPN—VRF Selection Based on Source IP Address
Cisco IOS master command list, all releases	Cisco IOS Master Command List, All Releases

## **Standards**

Standard	Title
No new or modified standards are supported by this feature, and support for existing standards has not been modified by this feature.	

### **MIBs**

MIB	MIBs Link
No new or modified MIBs are supported by this feature, and support for existing MIBs has not been modified by this feature.	To locate and download MIBs for selected platforms, Cisco IOS XE software releases, and feature sets, use Cisco MIB Locator found at the following URL:
	http://www.cisco.com/go/mibs

## **RFCs**

RFC	Title
No new or modified RFCs are supported by this feature, and support for existing RFCs has not been modified by this feature.	

## **Technical Assistance**

Description	Link
The Cisco Support website provides extensive online resources, including documentation and tools for troubleshooting and resolving technical issues with Cisco products and technologies.	http://www.cisco.com/techsupport
To receive security and technical information about your products, you can subscribe to various services, such as the Product Alert Tool (accessed from Field Notices), the Cisco Technical Services Newsletter, and Really Simple Syndication (RSS) Feeds.	
Access to most tools on the Cisco Support website requires a Cisco.com user ID and password.	

# Feature Information for BGP Support for IP Prefix Import from Global Table into a VRF Table

Table 1 lists the release history for this feature.

Use Cisco Feature Navigator to find information about platform support and software image support. Cisco Feature Navigator enables you to determine which Cisco IOS XE software images support a specific software release, feature set, or platform. To access Cisco Feature Navigator, go to <a href="http://www.cisco.com/go/cfn">http://www.cisco.com/go/cfn</a>. An account on Cisco.com is not required.



Table 1 lists only the Cisco IOS XE software release that introduced support for a given feature in a given Cisco IOS XE software release train. Unless noted otherwise, subsequent releases of that Cisco IOS XE software release train also support that feature.

Table 1 Feature Information for BGP Support for IP Prefix Import from Global Table into a VRF Table

Feature Name	Releases	Feature Information
BGP Support for IP Prefix Import from Global Table into a VRF Table	Cisco IOS XE Release 2.1	The BGP Support for IP Prefix Import from Global Table into a VRF Table feature introduces the capability to import IPv4 unicast prefixes from the global routing table into a Virtual Private Network (VPN) routing/forwarding (VRF) instance table using an import route map.  This feature was introduced on the Cisco ASR 1000 Series Aggregation Services Routers.  The following commands were introduced or modified by this feature: debug ip bgp import, import ipv4, ip verify unicast vrf.

CCDE, CCENT, CCSI, Cisco Eos, Cisco HealthPresence, Cisco IronPort, the Cisco logo, Cisco Nurse Connect, Cisco Pulse, Cisco SensorBase, Cisco StackPower, Cisco StadiumVision, Cisco TelePresence, Cisco Unified Computing System, Cisco WebEx, DCE, Flip Channels, Flip for Good, Flip Mino, Flipshare (Design), Flip Ultra, Flip Video, Flip Video (Design), Instant Broadband, and Welcome to the Human Network are trademarks; Changing the Way We Work, Live, Play, and Learn, Cisco Capital, Cisco Capital (Design), Cisco:Financed (Stylized), Cisco Store, Flip Gift Card, and One Million Acts of Green are service marks; and Access Registrar, Aironet, AllTouch, AsyncOS, Bringing the Meeting To You, Catalyst, CCDA, CCDP, CCIE, CCIP, CCNA, CCNP, CCSP, CCVP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IOS, Cisco Lumin, Cisco Nexus, Cisco Press, Cisco Systems, Cisco Systems Capital, the Cisco Systems logo, Cisco Unity, Collaboration Without Limitation, Continuum, EtherFast, EtherSwitch, Event Center, Explorer, Follow Me Browsing, GainMaker, iLYNX, IOS, iPhone, IronPort, the IronPort logo, Laser Link, LightStream, Linksys, MeetingPlace, MeetingPlace Chime Sound, MGX, Networkers, Networking Academy, PCNow, PIX, PowerKEY, PowerPanels, PowerTV, PowerTV (Design), PowerVu, Prisma, ProConnect, ROSA, SenderBase, SMARTnet, Spectrum Expert, StackWise, WebEx, and the WebEx logo are registered trademarks of Cisco Systems. Inc. and/or its affiliates in the United States and certain other countries.

All other trademarks mentioned in this document or website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0910R)

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, and figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

© 2004-2009 Cisco Systems, Inc. All rights reserved.

Feature Information for BGP Support for IP Prefix Import from Global Table into a VRF Table



# **BGP** per Neighbor SoO Configuration

First Published: November 17, 2006 Last Updated: May 4, 2009

The BGP per Neighbor SoO Configuration feature simplifies the configuration of the site-of-origin (SoO) value. Per neighbor SoO configuration introduces two new commands that can be configured in submodes under router configuration mode to set the SoO value.

# **Finding Feature Information**

For the latest feature information and caveats, see the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the "Feature Information for BGP per Neighbor SoO Configuration" section on page 18.

Use Cisco Feature Navigator to find information about platform support and Cisco IOS XE software image support. To access Cisco Feature Navigator, go to <a href="http://www.cisco.com/go/cfn">http://www.cisco.com/go/cfn</a>. An account on Cisco.com is not required.

## **Contents**

- Prerequisites for BGP per Neighbor SoO Configuration, page 2
- Restrictions for BGP per Neighbor SoO Configuration, page 2
- Information About Configuring BGP per Neighbor SoO, page 2
- How to Configure BGP per Neighbor SoO, page 3
- Configuration Examples for BGP per Neighbor SoO Configuration, page 14
- Where to Go Next, page 16
- Additional References, page 16
- Feature Information for BGP per Neighbor SoO Configuration, page 18



# **Prerequisites for BGP per Neighbor SoO Configuration**

This feature assumes that a Border Gateway Protocol (BGP) network is configured and that Cisco Express Forwarding is enabled in your network.

# **Restrictions for BGP per Neighbor SoO Configuration**

A BGP neighbor or peer policy template-based SoO configuration takes precedence over the SoO value configured in an inbound route map.

# Information About Configuring BGP per Neighbor SoO

Before configuring SoO values for BGP neighbors, you should understand the following concepts:

- Site of Origin BGP Community Attribute, page 2
- BGP per Neighbor Site of Origin Configuration, page 2
- Benefits of BGP per Neighbor Site of Origin, page 3

## **Site of Origin BGP Community Attribute**

The SoO extended community is a BGP extended community attribute that is used to identify routes that have originated from a site so that the readvertisement of that prefix back to the source site can be prevented. The SoO extended community uniquely identifies the site from which a router has learned a route. BGP can use the SoO value associated with a route to prevent routing loops.

## **BGP** per Neighbor Site of Origin Configuration

There are three ways to configure an SoO value for a BGP neighbor:

- BGP peer policy template—A peer policy template is created, and an SoO value is configured as part of the peer policy. Under address family IPv4 VRF, a neighbor is identified and is configured to inherit the peer policy that contains the SoO value.
- BGP **neighbor** command—Under address family IPv4 VRF, a neighbor is identified, and an SoO value is configured for the neighbor.
- BGP peer group—Under address family IPv4 VRF, a BGP peer group is configured, an SoO value is configured for the peer group, a neighbor is identified, and the neighbor is configured as a member of the peer group.

The configuration of SoO values for BGP neighbors is performed on a provider edge (PE) router, which is the VPN entry point. When SoO is enabled, the PE router forwards prefixes to the customer premises equipment (CPE) only when the SoO tag of the prefix does not match the SoO tag configured for the CPE. For example, in Figure 1, an SoO tag is set as 65000:1 for the customer site that includes routers CPE1 and CPE2 with an autonomous system number of 65000. When CPE1 sends prefixes to PE1, PE1 tags the prefixes with 65000:1, which is the SoO tag for CPE1 and CPE2. When PE1 sends the tagged prefixes to PE2, PE2 performs a match against the SoO tag from CPE2. Any prefixes with the tag value of 65000:1 are not sent to CPE2 because the SoO tag matches the SoO tag of CPE2, and a routing loop is avoided.

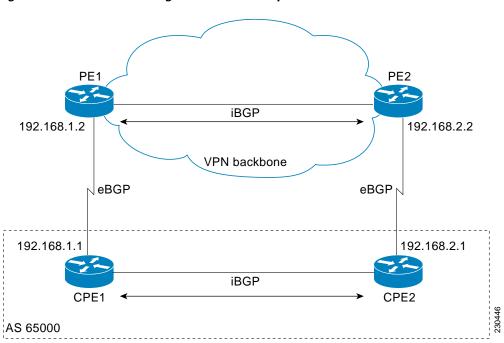


Figure 1 Network Diagram for SoO Example

## **Benefits of BGP per Neighbor Site of Origin**

The introduction of two new commands configured in submodes under router configuration mode simplifies the SoO value configuration.

# **How to Configure BGP per Neighbor SoO**

To configure an SoO value for a BGP neighbor, you must perform the first task in the following list and one of the next three tasks. The last three tasks are mutually exclusive; you need perform only one of them.

- Enabling Cisco Express Forwarding and Configuring VRF Instances, page 3
- Configuring a per Neighbor SoO Value Using a BGP Peer Policy Template, page 7
- Configuring a per Neighbor SoO Value Using a BGP neighbor Command, page 9
- Configuring a per Neighbor SoO Value Using a BGP Peer Group, page 12

## **Enabling Cisco Express Forwarding and Configuring VRF Instances**

Perform this task on both of the PE routers in Figure 1 to configure Virtual Routing and Forwarding (VRF) instances to be used with the per-VRF assignment tasks. In this task, Cisco Express Forwarding is enabled, and a VRF instance named SOO\_VRF is created. To make the VRF functional, a route distinguisher is created, and the VRF is associated with an interface. When the route distinguisher is created, the routing and forwarding tables are created for the VRF instance named SOO\_VRF. After associating the VRF with an interface, the interface is configured with an IP address.

### **Route Distinguisher**

A router distinguisher (RD) creates routing and forwarding tables and specifies the default route distinguisher for a VPN. The RD is added to the beginning of an IPv4 prefix to change it into a globally unique VPN-IPv4 prefix. An RD can be composed in one of two ways: with an autonomous system number and an arbitrary number or with an IP address and an arbitrary number.

You can enter an RD in either of these formats:

- Enter a 16-bit autonomous system number, a colon, and a 32-bit number. For example: 45000:3
- Enter a 32-bit IP address, a colon, and a 16-bit number. For example: 192.168.10.15:1

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. ip cef
- 4. ip vrf vrf-name
- 5. rd route-distinguisher
- **6. route-target** {**import** | **both**} *route-target-ext-community*
- 7. **route-target** {**export** | **both**} *route-target-ext-community*
- 8. exit
- **9**. **interface** *type number*
- **10. ip vrf forwarding** *vrf-name* [**downstream** *vrf-name*2]
- 11. **ip address** *ip-address mask* [**secondary**]
- 12. end
- **13. show ip vrf** [**brief** | **detail** | **interfaces** | **id**] [*vrf-name*] [*output-modifiers*]

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	<pre>Example: Router&gt; enable</pre>	Enter your password if prompted.
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	ip cef	Enables Cisco Express Forwarding on the route processor.
Step 4	<pre>Example: Router(config)# ip cef ip vrf vrf-name</pre>	Defines a VRF instance and enters VRF configuration
	<pre>Example: Router(config)# ip vrf SOO_VRF</pre>	mode.
Step 5	rd route-distinguisher	Creates routing and forwarding tables for a VRF and specifies the default RD for a VPN.
	<pre>Example: Router(config-vrf)# rd 1:1</pre>	• Use the <i>route-distinguisher</i> argument to specify the default RD for a VPN. There are two formats that you can use to specify an RD:
		<ul> <li>A 16-bit autonomous system number, a colon, and a 32-bit number, for example: 65000:3</li> </ul>
		<ul> <li>A 32-bit IP address, a colon, and a 16-bit number, for example: 192.168.1.2:51</li> </ul>
		• In this example, the RD uses an autonomous system number with the number 1 after the colon.
Step 6	route-target {export   both}	Creates a route-target extended community for a VRF.
	<pre>Example: Router(config-vrf)# route-target export 1:1</pre>	• Use the <b>export</b> keyword to export routing information to the target VPN extended community.
		• Use the <b>both</b> keyword to both import routing information from, and export routing information to, the target VPN extended community.
		• Use the <i>route-target-ext-community</i> argument to specify the VPN extended community.
		Note Only the syntax applicable to this step is displayed. For a different use of this syntax, see Step 7.

	Command or Action	Purpose
Step 7	<pre>route-target {import   both} route-target-ext-community  Example: Router(config-vrf)# route-target import 1:1</pre>	Creates a route-target extended community for a VRF.
		• Use the <b>import</b> keyword to import routing information from the target VPN extended community.
		• Use the <b>both</b> keyword to both import routing information from, and export routing information to, the target VPN extended community.
		• Use the <i>route-target-ext-community</i> argument to specify the VPN extended community.
Step 8	exit	Exits VRF configuration mode and returns to global configuration mode.
	<pre>Example: Router(config-vrf)# exit</pre>	
Step 9	interface type number	Configures an interface type and enters interface configuration mode.
	<pre>Example: Router(config)# interface GigabitEthernet 1/0/0</pre>	
Step 10	<pre>ip vrf forwarding vrf-name [downstream vrf-name2]</pre>	Associates a VRF with an interface or subinterface.
		• In this example, the VRF named SOO_VRF is associated with Gigabit Ethernet interface 1/0/0.
	<pre>Example: Router(config-if)# ip vrf forwarding SOO_VRF</pre>	Note Executing this command on an interface removes the IP address, so the IP address should be reconfigured.
Step 11	ip address ip-address mask [secondary]	Configures an IP address.
	Example: Router(config-if)# ip address 192.168.1.2 255.255.255.0	• In this example, Gigabit Ethernet interface 1/0/0 is configured with an IP address of 192.168.1.2.
Step 12	end	Exits interface configuration mode and returns to privileged EXEC mode.
	<pre>Example: Router(config-if)# end</pre>	
Step 13	show ip vrf [brief   detail   interfaces   id]	Displays the configured VRFs.
	[vrf-name] [output-modifiers]	• Use this command to verify the configuration of this task.
	Example: Router# show ip vrf	

## **Examples**

The following output of the  $show\ ip\ vrf$  command displays the VRF named SOO\_VRF configured in this task.

Router# show ip vrf

 Name
 Default RD
 Interfaces

 SOO\_VRF
 1:1
 GE1/0/0

## Configuring a per Neighbor SoO Value Using a BGP Peer Policy Template

Perform this task on router PE1 in Figure 1 to configure an SoO value for a BGP neighbor at the router CPE1 in Figure 1 using a peer policy template. In this task, a peer policy template is created, and the SoO value is configured for the peer policy. Under address family IPv4 VRF, a neighbor is identified and is configured to inherit the peer policy that contains the SoO value.



If a BGP peer inherits from several peer policy templates that specify different SoO values, the SoO value in the last template applied takes precedence and is applied to the peer. However, direct configuration of the SoO value on the BGP neighbor overrides any inherited template configurations of the SoO value.

### **BGP Peer Policy Templates**

Peer policy templates are used to configure BGP policy commands that are configured for neighbors that belong to specific address families. Peer policy templates are configured once and then applied to many neighbors through the direct application of a peer policy template or through inheritance from peer policy templates. The configuration of peer policy templates simplifies the configuration of BGP policy commands that are applied to all neighbors within an autonomous system.

Peer policy templates support inheritance. A directly applied peer policy template can directly or indirectly inherit configurations from up to seven peer policy templates. So, a total of eight peer policy templates can be applied to a neighbor or neighbor group.

The configuration of peer policy templates simplifies and improves the flexibility of BGP configuration. A specific policy can be configured once and referenced many times. Because a peer policy supports up to eight levels of inheritance, very specific and very complex BGP policies can be created.

For more details about BGP peer policy templates, see the "Configuring a Basic BGP Network" module.

### **Prerequisites**

This task assumes that the task described in the "Enabling Cisco Express Forwarding and Configuring VRF Instances" section on page 3 has been performed.

### **Restrictions**

A BGP peer cannot inherit from a peer policy or session template and be configured as a peer group member at the same. BGP templates and BGP peer groups are mutually exclusive.

### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- **3. router bgp** *autonomous-system-number*
- 4. **template peer-policy** *policy-template-name*
- **5. soo** *extended-community-value*
- 6. exit-peer-policy
- 7. address-family ipv4 [unicast | multicast | vrf vrf-name]

- 8. neighbor ip-address remote-as autonomous-system-number
- 9. neighbor ip-address activate
- $\textbf{10. neighbor}\ ip\text{-}address\ \textbf{inherit}\ \textbf{peer-policy}\ policy\text{-}template\text{-}name$
- **11.** end

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		Enter your password if prompted.
	Example: Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	router bgp autonomous-system-number	Enters router configuration mode for the specified routing process.
	Example: Router(config)# router bgp 50000	
Step 4	template peer-policy policy-template-name	Creates a peer policy template and enters policy-template configuration mode.
	<pre>Example: Router(config-router)# template peer-policy SOO_POLICY</pre>	
Step 5	soo extended-community-value	Sets the SoO value for a BGP peer policy template.
	<pre>Example: Router(config-router-ptmp)# soo 65000:1</pre>	• Use the <i>extended-community-value</i> argument to specify the VPN extended community value. The value takes one of the following formats:
		<ul> <li>A 16-bit autonomous system number, a colon, and a 32-bit number, for example: 45000:3</li> </ul>
		<ul> <li>A 32-bit IP address, a colon, and a 16-bit number, for example: 192.168.10.2:51</li> </ul>
		• In this example, the SoO value is set at 65000:1.
Step 6	exit-peer-policy	Exits policy-template configuration mode and returns to router configuration mode.
	<pre>Example:    Router(config-router-pmtp)# exit-peer-policy</pre>	

	Command or Action	Purpose
Step 7	address-family ipv4 [unicast   multicast   vrf vrf-name]	Specifies the IPv4 address family and enters address family configuration mode.
	<pre>Example: Router(config-router)# address-family ipv4 vrf SOO_VRF</pre>	• Use the <b>unicast</b> keyword to specify the IPv4 unicast address family. By default, the router is placed in configuration mode for the IPv4 unicast address family if the <b>unicast</b> keyword is not specified with the <b>address-family ipv4</b> command.
		• Use the <b>multicast</b> keyword to specify IPv4 multicast address prefixes.
		• Use the <b>vrf</b> keyword and <i>vrf-name</i> argument to specify the name of the VRF instance to associate with subsequent IPv4 address family configuration mode commands.
Step 8	neighbor ip-address remote-as autonomous-system-number	Adds the IP address of the neighbor in the specified autonomous system to the IPv4 multiprotocol BGP neighbor table of the local router.
	<pre>Example: Router(config-router-af)# neighbor 192.168.1.1 remote-as 65000</pre>	
Step 9	neighbor ip-address activate	Enables the neighbor to exchange prefixes for the IPv4 VRF address family with the local router.
	<pre>Example: Router(config-router-af)# neighbor 192.168.1.1 activate</pre>	
Step 10	neighbor ip-address inherit peer-policy policy-template-name	Sends a peer policy template to a neighbor so that the neighbor can inherit the configuration.
	<pre>Example: Router(config-router-af)# neighbor 192.168.1.1 inherit peer-policy SOO_POLICY</pre>	• In this example, the router is configured to send the peer policy template named SOO_POLICY to the 192.168.1.1 neighbor to inherit. If another peer policy template is indirectly inherited from SOO_POLICY, the indirectly inherited configuration will also be applied. Up to seven additional peer policy templates can be indirectly inherited from SOO_POLICY.
Step 11	end	Exits address family configuration mode and returns to privileged EXEC mode.
	<pre>Example: Router(config-router-af)# end</pre>	

# Configuring a per Neighbor SoO Value Using a BGP neighbor Command

Perform this task on router PE2 in Figure 1 to configure an SoO value for the BGP neighbor at router CPE2 in Figure 1 using a **neighbor** command. Under address family IPv4 VRF, a neighbor is identified, and an SoO value is configured for the neighbor.



Direct configuration of the SoO value on a BGP neighbor overrides any inherited peer policy template configurations of the SoO value.

### **Prerequisites**

This task assumes that the task described in the "Enabling Cisco Express Forwarding and Configuring VRF Instances" section on page 3 has been performed with appropriate changes to interfaces and IP addresses.

### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. router bgp autonomous-system-number
- 4. address-family ipv4 [unicast | multicast | vrf vrf-name]
- $\textbf{5.} \quad \textbf{neighbor} \ \{\textit{ip-address} \mid \textit{peer-group-name}\} \ \textbf{remote-as} \ \textit{autonomous-system-number}$
- 6. neighbor ip-address activate
- 7. **neighbor** {ip-address | peer-group-name} **soo** extended-community-value
- 8. end

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		• Enter your password if prompted.
	<pre>Example: Router&gt; enable</pre>	
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	router bgp autonomous-system-number	Enters router configuration mode for the specified routing process.
	Example: Router(config)# router bgp 50000	

	Command or Action	Purpose
Step 4	address-family ipv4 [unicast   multicast   vrf vrf-name]	Specifies the IPv4 address family and enters address family configuration mode.
	<pre>Example: Router(config-router)# address-family ipv4 vrf SOO_VRF</pre>	• Use the <b>unicast</b> keyword to specify the IPv4 unicast address family. By default, the router is placed in configuration mode for the IPv4 unicast address family if the <b>unicast</b> keyword is not specified with the <b>address-family ipv4</b> command.
		• Use the <b>multicast</b> keyword to specify IPv4 multicast address prefixes.
		• Use the <b>vrf</b> keyword and <i>vrf-name</i> argument to specify the name of the VRF instance to associate with subsequent IPv4 address family configuration mode commands.
Step 5	neighbor {ip-address   peer-group-name} remote-as autonomous-system-number	Adds the IP address of the neighbor in the specified autonomous system to the IPv4 multiprotocol BGP neighbor table of the local router.
	Example: Router(config-router-af)# neighbor 192.168.2.1 remote-as 65000	
Step 6	neighbor ip-address activate	Enables the neighbor to exchange prefixes for the IPv4 VRF address family with the local router.
	Example: Router(config-router-af)# neighbor 192.168.2.1	• In this example, the external BGP peer at 192.168.2.1 is activated.
	activate	Note If a peer group has been configured in Step 5, do not use this step because BGP peer groups are activated when any parameter is configured. For example, a BGP peer group is activated when an SoO value is configured using the <b>neighbor soo</b> command in Step 7.
Step 7	neighbor {ip-address   peer-group-name} soo extended-community-value	Sets the site-of-origin (SoO) value for a BGP neighbor or peer group.
	<pre>Example: Router(config-router-af)# neighbor 192.168.2.1 soo 65000:1</pre>	• In this example, the neighbor at 192.168.2.1 is configured with an SoO value of 65000:1.
Step 8	end	Exits address family configuration mode and returns to privileged EXEC mode.
	<pre>Example: Router(config-router-af)# end</pre>	

## Configuring a per Neighbor SoO Value Using a BGP Peer Group

Perform this task on router PE1 in Figure 1 to configure an SoO value for the BGP neighbor at router CPE1 in Figure 1 using a **neighbor** command with a BGP peer group. Under address family IPv4 VRF, a BGP peer group is created and an SoO value is configured using a BGP **neighbor** command, and a neighbor is then identified and added as a peer group member. A BGP peer group member inherits the configuration associated with a peer group, which in this example, includes the SoO value.



Direct configuration of the SoO value on a BGP neighbor overrides any inherited peer group configurations of the SoO value.

### **Prerequisites**

This task assumes that the task described in the "Enabling Cisco Express Forwarding and Configuring VRF Instances" section on page 3 has been performed.

### Restrictions

A BGP peer cannot inherit from a peer policy or session template and be configured as a peer group member at the same. BGP templates and BGP peer groups are mutually exclusive.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- **3. router bgp** *autonomous-system-number*
- 4. address-family ipv4 [unicast | multicast | vrf vrf-name]
- 5. neighbor peer-group-name peer-group
- 6. **neighbor** {ip-address | peer-group-name} **soo** extended-community-value
- 7. neighbor ip-address remote-as autonomous-system-number
- 8. neighbor ip-address activate
- 9. **neighbor** *ip-address* **peer-group** *peer-group-name*
- 10. end

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		• Enter your password if prompted.
	Example:	
	Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Router# configure terminal	

	Command or Action	Purpose
Step 3	router bgp autonomous-system-number	Enters router configuration mode for the specified routing process.
	<pre>Example: Router(config)# router bgp 50000</pre>	
Step 4	address-family ipv4 [unicast   multicast   vrf vrf-name]	Specifies the IPv4 address family and enters address family configuration mode.
	<pre>Example: Router(config-router)# address-family ipv4 vrf SOO_VRF</pre>	• Use the <b>unicast</b> keyword to specify the IPv4 unicast address family. By default, the router is placed in configuration mode for the IPv4 unicast address family if the <b>unicast</b> keyword is not specified with the <b>address-family ipv4</b> command.
		• Use the <b>multicast</b> keyword to specify IPv4 multicast address prefixes.
		• Use the <b>vrf</b> keyword and <i>vrf-name</i> argument to specify the name of the VRF instance to associate with subsequent IPv4 address family configuration mode commands.
Step 5	neighbor peer-group-name peer-group	Creates a BGP peer group.
	<pre>Example: Router(config-router-af)# neighbor SOO_group peer-group</pre>	
Step 6	<pre>neighbor {ip-address   peer-group-name} soo extended-community-value</pre>	Sets the site-of-origin (SoO) value for a BGP neighbor or peer group.
	<pre>Example: Router(config-router-af)# neighbor SOO_group soo 65000:1</pre>	• In this example, the BGP peer group, SOO_group, is configured with an SoO value of 65000:1.
Step 7	neighbor ip-address remote-as autonomous-system-number	Adds the IP address of the neighbor in the specified autonomous system to the IPv4 multiprotocol BGP neighbor table of the local router.
	<pre>Example: Router(config-router-af)# neighbor 192.168.1.1 remote-as 65000</pre>	
Step 8	neighbor ip-address activate	Enables the neighbor to exchange prefixes for the IPv4 VRF address family with the local router.
	<pre>Example: Router(config-router-af)# neighbor 192.168.1.1 activate</pre>	

	Command or Action	Purpose
Step 9	neighbor ip-address peer-group peer-group-name	Assigns the IP address of a BGP neighbor to a peer group.
	<pre>Example: Router(config-router-af)# neighbor 192.168.1.1 peer-group SOO_group</pre>	
Step 10	end	Exits address family configuration mode and returns to privileged EXEC mode.
	<pre>Example: Router(config-router-af)# end</pre>	

# Configuration Examples for BGP per Neighbor SoO Configuration

This section contains the following configuration examples:

- Configuring a per Neighbor SoO Value Using a BGP Peer Policy Template: Example, page 14
- Configuring a per Neighbor SoO Value Using a BGP neighbor Command: Example, page 15
- Configuring a per Neighbor SoO Value Using a BGP Peer Group: Example, page 15

# Configuring a per Neighbor SoO Value Using a BGP Peer Policy Template: Example

The following example shows how to create a peer policy template and configure an SoO value as part of the peer policy. After enabling Cisco Express Forwarding and configuring a VRF instance named SOO\_VRF, a peer policy template is created and an SoO value is configured as part of the peer policy. Under address family IPv4 VRF, a neighbor is identified and configured to inherit the peer policy that contains the SoO value.

```
ip cef
ip vrf SOO_VRF
rd 1:1
route-target export 1:1
route-target import 1:1
exit
interface GigabitEthernet 1/0/0
 ip vrf forwarding SOO_VRF
 ip address 192.168.1.2 255.255.255.0
exit
router bgp 50000
template peer-policy SOO_POLICY
 soo 65000:1
 exit-peer-policy
 address-family ipv4 vrf SOO_VRF
 neighbor 192.168.1.1 remote-as 65000
  neighbor 192.168.1.1 activate
  neighbor 192.168.1.1 inherit peer-policy SOO_POLICY
  end
```

# Configuring a per Neighbor SoO Value Using a BGP neighbor Command: Example

The following example shows how to configure an SoO value for a BGP neighbor. After enabling Cisco Express Forwarding and configuring a VRF instance named SOO\_VRF, a neighbor is identified under address family IPv4 VRF and an SoO value is configured for the neighbor.

```
ip cef
ip vrf SOO_VRF
rd 1:1
route-target export 1:1
route-target import 1:1
exit.
interface GigabitEthernet 1/0/0
ip vrf forwarding SOO_VRF
 ip address 192.168.2.2 255.255.255.0
 exit
router bgp 50000
address-family ipv4 vrf SOO VRF
 neighbor 192.168.2.1 remote-as 65000
  neighbor 192.168.2.1 activate
  neighbor 192.168.2.1 soo 65000:1
  end
```

## Configuring a per Neighbor SoO Value Using a BGP Peer Group: Example

The following example shows how to configure an SoO value for a BGP peer group. After enabling Cisco Express Forwarding and configuring a VRF instance named SOO\_VRF, a BGP peer group is configured under address family IPv4 VRF, an SoO value is configured for the peer group, a neighbor is identified, and the neighbor is configured as a member of the peer group.

```
ip cef
ip vrf SOO_VRF
rd 1:1
route-target export 1:1
route-target import 1:1
 exit.
interface GigabitEthernet 1/0/0
ip vrf forwarding SOO_VRF
 ip address 192.168.1.2 255.255.255.0
 exit
router bgp 50000
 address-family ipv4 vrf SOO VRF
 neighbor SOO_GROUP peer-group
  neighbor SOO_GROUP soo 65000:65
  neighbor 192.168.1.1 remote-as 65000
  neighbor 192.168.1.1 activate
  neighbor 192.168.1.1 peer-group SOO_GROUP
```

## Where to Go Next

- To read an overview of BGP, proceed to the "Cisco BGP Overview" chapter of the Cisco IOS XE IP Routing Protocols Configuration Guide, Release 2.
- To perform basic BGP feature tasks, proceed to the "Configuring a Basic BGP Network" chapter of the Cisco IOS XE IP Routing Protocols Configuration Guide, Release 2.
- To perform advanced BGP feature tasks, proceed to the "Configuring Advanced BGP Features" chapter of the Cisco IOS XE IP Routing Protocols Configuration Guide, Release 2.
- To configure BGP neighbor session options, proceed to the "Configuring BGP Neighbor Session Options" chapter of the *Cisco IOS XE IP Routing Protocols Configuration Guide*, Release 2.
- To perform internal BGP tasks, proceed to the "Configuring Internal BGP Features" chapter of the Cisco IOS XE IP Routing Protocols Configuration Guide, Release 2.

## **Additional References**

The following sections provide references related to the BGP per neighbor SoO configuration feature.

#### **Related Documents**

Related Topic	Document Title
BGP commands: complete command syntax, command mode, defaults, command history, usage guidelines, and examples	Cisco IOS IP Routing: BGP Command Reference
Cisco IOS master command list, all releases	Cisco IOS Master Command List, All Releases

#### **MIBs**

MIB	MIBs Link
No new or modified MIBs are supported by this feature, and support for existing MIBs has not been modified by this feature.	To locate and download MIBs for selected platforms, Cisco IOS XE software releases, and feature sets, use Cisco MIB Locator found at the following URL:
	http://www.cisco.com/go/mibs

## **Technical Assistance**

Description	Link
The Cisco Support website provides extensive online resources, including documentation and tools for troubleshooting and resolving technical issues with Cisco products and technologies.	http://www.cisco.com/techsupport
To receive security and technical information about your products, you can subscribe to various services, such as the Product Alert Tool (accessed from Field Notices), the Cisco Technical Services Newsletter, and Really Simple Syndication (RSS) Feeds.	
Access to most tools on the Cisco Support website requires a Cisco.com user ID and password.	

# Feature Information for BGP per Neighbor SoO Configuration

Table 1 lists the release history for this feature.

Use Cisco Feature Navigator to find information about platform support and software image support. Cisco Feature Navigator enables you to determine which Cisco IOS XE software images support a specific software release, feature set, or platform. To access Cisco Feature Navigator, go to <a href="http://www.cisco.com/go/cfn">http://www.cisco.com/go/cfn</a>. An account on Cisco.com is not required.



Table 1 lists only the Cisco IOS XE software release that introduced support for a given feature in a given Cisco IOS XE software release train. Unless noted otherwise, subsequent releases of that Cisco IOS XE software release train also support that feature.

Table 1 Feature Information for BGP per Neighbor SoO Configuration

Feature Name	Releases	Feature Information
BGP per Neighbor SoO Configuration	Cisco IOS XE Release 2.1	The BGP per neighbor SOO configuration feature simplifies the configuration of the site-of-origin (SoO) parameter. The per neighbor SoO configuration introduces two new commands that can be configured in submodes under router configuration mode to set the SoO value.  This feature was introduced on the Cisco ASR 1000 Series Aggregation Services Routers.  The following commands were introduced by this feature: neighbor soo, soo.

CCDE, CCENT, CCSI, Cisco Eos, Cisco HealthPresence, Cisco IronPort, the Cisco logo, Cisco Nurse Connect, Cisco Pulse, Cisco SensorBase, Cisco StackPower, Cisco StadiumVision, Cisco TelePresence, Cisco Unified Computing System, Cisco WebEx, DCE, Flip Channels, Flip for Good, Flip Mino, Flipshare (Design), Flip Ultra, Flip Video, Flip Video (Design), Instant Broadband, and Welcome to the Human Network are trademarks; Changing the Way We Work, Live, Play, and Learn, Cisco Capital, Cisco Capital (Design), Cisco:Financed (Stylized), Cisco Store, Flip Gift Card, and One Million Acts of Green are service marks; and Access Registrar, Aironet, AllTouch, AsyncOS, Bringing the Meeting To You, Catalyst, CCDA, CCDP, CCIE, CCIP, CCNA, CCNP, CCSP, CCVP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IOS, Cisco Lumin, Cisco Nexus, Cisco Press, Cisco Systems, Cisco Systems Capital, the Cisco Systems logo, Cisco Unity, Collaboration Without Limitation, Continuum, EtherFast, EtherSwitch, Event Center, Explorer, Follow Me Browsing, GainMaker, iLYNX, IOS, iPhone, IronPort, the IronPort logo, Laser Link, LightStream, Linksys, MeetingPlace, MeetingPlace Chime Sound, MGX, Networkers, Networking Academy, PCNow, PIX, PowerREY, PowerPanels, PowerTV, PowerTV (Design), PowerVu, Prisma, ProConnect, ROSA, SenderBase, SMARTnet, Spectrum Expert, StackWise, WebEx, and the WebEx logo are registered trademarks of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries.

All other trademarks mentioned in this document or website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0910R)

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, and figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

© 2006-2009 Cisco Systems, Inc. All rights reserved.



# **Per-VRF Assignment of BGP Router ID**

First Published: June 19, 2006 Last Updated: May 4, 2009

The Per-VRF Assignment of BGP Router ID feature introduces the ability to have VRF-to-VRF peering in Border Gateway Protocol (BGP) on the same router. BGP is designed to refuse a session with itself because of the router ID check. The per-VRF assignment feature allows a separate router ID per VRF using a new keyword in the existing **bgp router-id** command. The router ID can be manually configured for each VRF or can be assigned automatically either globally under address family configuration mode or for each VRF.

## **Finding Feature Information**

Your software release may not support all the features documented in this module. For the latest feature information and caveats, see the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the "Feature Information for Per-VRF Assignment of BGP Router ID" section on page 27.

Use Cisco Feature Navigator to find information about platform support and Cisco IOS XE software image support. To access Cisco Feature Navigator, go to <a href="http://www.cisco.com/go/cfn">http://www.cisco.com/go/cfn</a>. An account on Cisco.com is not required.

#### **Contents**

- Prerequisites for Per-VRF Assignment of BGP Router ID, page 2
- Information About Per-VRF Assignment of BGP Router ID, page 2
- How to Configure Per-VRF Assignment of BGP Router ID, page 2
- Configuration Examples for Per-VRF Assignment of BGP Router ID, page 18
- Additional References, page 25
- Feature Information for Per-VRF Assignment of BGP Router ID, page 27



# **Prerequisites for Per-VRF Assignment of BGP Router ID**

Before you configure this feature, Cisco Express Forwarding or distributed Cisco Express Forwarding must be enabled in the network, and basic BGP peering is assumed to be running in the network.

## **Information About Per-VRF Assignment of BGP Router ID**

To assign a router ID per VRF using BGP, you should understand the following concepts:

- BGP Router ID, page 2
- Per-VRF Router ID Assignment, page 2

#### **BGP Router ID**

The BGP router identifier (ID) is a 4-byte field that is set to the highest IP address on the router. Loopback interface addresses are considered before physical interface addresses because loopback interfaces are more stable than physical interfaces. The BGP router ID is used in the BGP algorithm for determining the best path to a destination where the preference is for the BGP router with the lowest router ID. It is possible to manually configure the BGP router ID using the **bgp router-id** command to influence the best path algorithm.

## **Per-VRF Router ID Assignment**

In Cisco IOS XE Release 2.1 and later releases, support for configuring separate router IDs for each Virtual Private Network (VPN) routing/forwarding (VRF) instance was introduced. The Per-VRF Assignment of BGP Router ID feature introduces the ability to have VRF-to-VRF peering in Border Gateway Protocol (BGP) on the same router. BGP is designed to refuse a session with itself because of the router ID check. The per-VRF assignment feature allows a separate router ID per VRF using a new keyword in the existing **bgp router-id** command. The router ID can be manually configured for each VRF or can be assigned automatically either globally under address family configuration mode or for each VRF.

# How to Configure Per-VRF Assignment of BGP Router ID

There are two main ways to configure a BGP router ID for each separate VRF. To configure a per-VRF BGP router ID manually, you must perform the first three tasks listed below. To automatically assign a BGP router ID to each VRF, perform the first task and the fourth task. This section contains the following tasks:

- Configuring VRF Instances, page 3
- Associating VRF Instances with Interfaces, page 5
- Manually Configuring a BGP Router ID per VRF, page 7
- Automatically Assigning a BGP Router ID per VRF, page 12

#### **Configuring VRF Instances**

Perform this task to configure VRF instances to be used with the per-VRF assignment tasks. In this task, a VRF instance named vrf\_trans is created. To make the VRF functional, a route distinguisher is created. When the route distinguisher is created, the routing and forwarding tables are created for the VRF instance named vrf\_trans.

#### **Route Distinguisher**

A router distinguisher (RD) creates routing and forwarding tables and specifies the default route distinguisher for a VPN. The RD is added to the beginning of an IPv4 prefix to change it into a globally unique VPN-IPv4 prefix. An RD can be composed in one of two ways: with an autonomous system number and an arbitrary number or with an IP address and an arbitrary number. You can enter an RD in either of these formats:

- Enter a 16-bit autonomous system number, a colon, and a 32-bit number. For example: 45000:3
- Enter a 32-bit IP address, a colon, and a 16-bit number. For example: 192.168.10.15:1

#### **Prerequisites**

This task assumes that you have Cisco Express Forwarding or distributed Cisco Express Forwarding enabled.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. ip vrf vrf-name
- 4. rd route-distinguisher
- **5. route-target** {**import** | **both**} *route-target-ext-community*
- **6. route-target** {**export** | **both**} *route-target-ext-community*
- 7. exit
- **8.** Repeat Step 3 through Step 7 for each VRF to be defined.

#### **DETAILED STEPS**

	Command or Action	Purpose
tep 1	enable	Enables privileged EXEC mode.
		• Enter your password if prompted.
	Example:	
	Router> enable	
tep 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
ep 3	ip vrf vrf-name	Defines a VRF instance and enters VRF configuration mode.
	<pre>Example: Router(config)# ip vrf vrf_trans</pre>	
tep 4	rd route-distinguisher	Creates routing and forwarding tables for a VRF and specifies the default RD for a VPN.
	Example: Router(config-vrf)# rd 45000:2	• Use the <i>route-distinguisher</i> argument to specify the default RD for a VPN. There are two formats you can use to specify an RD. For more details, see the "Route Distinguisher" section on page 3.
		• In this example, the RD uses an autonomous system number with the number 2 after the colon.
ep 5	<pre>route-target {import   both} route-target-ext-community</pre>	Creates a route-target extended community for a VRF.
		• Use the <b>import</b> keyword to import routing information from the target VPN extended community.
	<pre>Example: Router(config-vrf)# route-target import 55000:5</pre>	Use the <b>both</b> keyword to both import routing information from and export routing information to the target VPN extended community.
		• Use the <i>route-target-ext-community</i> argument to specify the VPN extended community.
ep 6	route-target {export   both}	Creates a route-target extended community for a VRF.
	route-target-ext-community	Use the <b>export</b> keyword to export routing information to the target VPN extended community.
	<pre>Example: Router(config-vrf)# route-target export 55000:1</pre>	Use the <b>both</b> keyword to both import routing information from and export routing information to the target VPN extended community.
		• Use the <i>route-target-ext-community</i> argument to specify the VPN extended community.
ер 7	exit	Exits VRF configuration mode and returns to global configuration mode.
	<pre>Example: Router(config-vrf)# exit</pre>	
ep 8	Repeat Step 3 through Step 7 for each VRF to be defined.	_

## **Associating VRF Instances with Interfaces**

Perform this task to associate VRF instances with interfaces to be used with the per-VRF assignment tasks. In this task, a VRF instance named vrf\_trans is associated with a serial interface.



Make a note of the IP addresses for any interface to which you want to associate a VRF instance because the **ip vrf forwarding** command removes the IP address. Step 8 allows you to reconfigure the IP address.

#### **Prerequisites**

- This task assumes that you have Cisco Express Forwarding or distributed Cisco Express Forwarding enabled.
- This task assumes that VRF instances have been configured in the "Configuring VRF Instances" section on page 3.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- **3**. **interface** *type number*
- 4. ip address ip-address mask [secondary]
- 5. exit
- **6. interface** *type number*
- 7. **ip vrf forwarding** *vrf-name* [**downstream** *vrf-name*2]
- 8. ip address ip-address mask [secondary]
- **9.** Repeat Step 5 through Step 8 for each VRF to be associated with an interface.
- 10. end
- 11. show ip vrf [brief | detail | interfaces | id] [vrf-name]

#### **DETAILED STEPS**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		• Enter your password if prompted.
	Example:	
	Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Router# configure terminal	
Step 3	interface type number	Configures an interface type and enters interface
		configuration mode.
	Example:	• In this example, loopback interface 0 is configured.
	Router(config)# interface loopback0	

	Command or Action	Purpose
Step 4	ip address ip-address mask [secondary]	Configures an IP address.
	Example: Router(config-if)# ip address 172.16.1.1 255.255.255	• In this example, the loopback interface is configured with an IP address of 172.16.1.1.
Step 5	exit	Exits interface configuration mode and returns to global configuration mode.
	<pre>Example: Router(config-if)# exit</pre>	
Step 6	interface type number	Configures an interface type and enters interface configuration mode.
	<pre>Example: Router(config)# interface serial2/0/0</pre>	• In this example, serial interface 2/0/0 is configured.
Step 7	<pre>ip vrf forwarding vrf-name [downstream vrf-name2]</pre>	Associates a VRF with an interface or subinterface.
		• In this example, the VRF named vrf_trans is associated with serial interface 2/0/0.
	<pre>Example: Router(config-if)# ip vrf forwarding vrf_trans</pre>	Note Executing this command on an interface removes the IP address. The IP address should be reconfigured.
Step 8	ip address ip-address mask [secondary]	Configures an IP address.
	Example: Router(config-if)# ip address 192.168.4.1 255.255.255.0	• In this example, serial interface 2/0/0 is configured with an IP address of 192.168.4.1.
Step 9	Repeat Step 5 through Step 8 for each VRF to be associated with an interface.	
Step 10	end	Exits interface configuration mode and returns to privileged EXEC mode.
	<pre>Example: Router(config-if)# end</pre>	
Step 11	<pre>show ip vrf [brief   detail   interfaces   id] [vrf-name]</pre>	(Optional) Displays the set of defined VRFs and associated interfaces.
	Example: Router# show ip vrf interfaces	• In this example, the output from this command shows the VRFs that have been created and their associated interfaces.

### **Examples**

The following output shows that two VRF instances named vrf\_trans and vrf\_users were configured on two serial interfaces.

Router# show ip vrf interfaces

Interface	IP-Address	VRF	Protocol
Serial2	192.168.4.1	vrf_trans	up
Serial3	192.168.5.1	vrf_user	up

#### Manually Configuring a BGP Router ID per VRF

Perform this task to manually configure a BGP router ID for each VRF. In this task, several address family configurations are shown and the router ID is configured in the IPv4 address family mode for one VRF instance. Step 22 shows you how to repeat certain steps to permit the configuration of more than one VRF on the same router.

#### **Prerequisites**

This task assumes that you have previously created the VRF instances and associated them with interfaces. For more details, see the "Configuring VRF Instances" section on page 3 and the "Associating VRF Instances with Interfaces" section on page 5.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. router bgp autonomous-system-number
- 4. no bgp default ipv4-unicast
- 5. bgp log-neighbor-changes
- **6. neighbor** {ip-address | peer-group-name} **remote-as** autonomous-system-number
- 7. **neighbor** {ip-address | peer-group-name} **update-source** interface-type interface-number
- 8. address-family {ipv4 [mdt | multicast | unicast [vrf vrf-name] | vrf vrf-name] | vpnv4 [unicast]}
- **9. neighbor** {*ip-address* | *peer-group-name*} **activate**
- 10.  $neighbor \{ip-address \mid peer-group-name\}$   $send-community [both \mid standard \mid extended]$
- 11. exit-address-family
- 12. address-family {ipv4 [mdt | multicast | unicast [vrf vrf-name] | vrf vrf-name] | vpnv4 [unicast]}
- 13. redistribute connected
- **14. neighbor** {*ip-address* | *peer-group-name*} **remote-as** *autonomous-system-number*
- 15. neighbor ip-address local-as autonomous-system-number [no-prepend [replace-as [dual-as]]]
- **16. neighbor** {*ip-address* | *peer-group-name*} **ebgp-multihop** [*ttl*]
- 17. **neighbor** {*ip-address* | *peer-group-name*} **activate**
- **18. neighbor** *ip-address* **allowas-in** [*number*]
- 19. no auto-summary
- 20. no synchronization
- **21. bgp router-id** {*ip-address* | **auto-assign**}
- 22. Repeat Step 11 to Step 21 to configure another VRF instance.
- 23. end
- **24. show ip bgp vpnv4** {**all** | **rd** route-distinguisher | **vrf** vrf-name}

#### **DETAILED STEPS**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		• Enter your password if prompted.
	Example:	
Step 2	Router> enable configure terminal	Enters global configuration mode.
oteh Z	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	router bgp autonomous-system-number	Enters router configuration mode for the specified routing process.
	Example: Router(config)# router bgp 45000	
Step 4	no bgp default ipv4-unicast	Disables the IPv4 unicast address family for the BGP routing process.
	<pre>Example: Router(config-router)# no bgp default ipv4-unicast</pre>	Note Routing information for the IPv4 unicast address family is advertised by default for each BGP routing session configured with the neighbor remote-as router configuration command unless you configure the no bgp default ipv4-unicast router configuration command before configuring the neighbor remote-as command. Existing neighbor configurations are not affected.
Step 5	bgp log-neighbor-changes	Enables logging of BGP neighbor resets.
	<pre>Example: Router(config-router)# bgp log-neighbor-changes</pre>	
Step 6	<pre>neighbor {ip-address   peer-group-name} remote-as autonomous-system-number</pre>	Adds the IP address or peer group name of the neighbor in the specified autonomous system to the IPv4 multiprotocol BGP neighbor table of the local router.
	<pre>Example: Router(config-router)# neighbor 192.168.1.1 remote-as 45000</pre>	• If the <i>autonomous-system-number</i> argument matches the autonomous system number specified in the <b>router bgp</b> command, the neighbor is an internal neighbor.
		• If the <i>autonomous-system-number</i> argument does not match the autonomous system number specified in the <b>router bgp</b> command, the neighbor is an external neighbor.
		• In this example, the neighbor is an internal neighbor.
Step 7	<pre>neighbor {ip-address   peer-group-name} update-source interface-type interface-number</pre>	Allows BGP sessions to use any operational interface for TCP connections.
	Example: Router(config-router)# neighbor 192.168.1.1 update-source loopback0	• In this example, BGP TCP connections for the specified neighbor are sourced with the IP address of the loopback interface rather than the best local address.

	Command or Action	Purpose
Step 8	<pre>address-family {ipv4 [mdt   multicast   unicast [vrf vrf-name]   vrf vrf-name]   vpnv4 [unicast]}</pre>	Enters address family configuration mode to configure BGP peers to accept address-family-specific configurations.
		• The example creates a VPNv4 address family session.
	<pre>Example: Router(config-router)# address-family vpnv4</pre>	
Step 9	<pre>neighbor {ip-address   peer-group-name} activate</pre>	Activates the neighbor under the VPNv4 address family.  • In this example, the neighbor 172.16.1.1 is activated.
	<pre>Example: Router(config-router-af)# neighbor 172.16.1.1 activate</pre>	
Step 10	neighbor     {ip-address   peer-group-name}       send-community     {both   standard   extended}	Specifies that a communities attribute should be sent to a BGP neighbor.
	<pre>Example: Router(config-router-af)# neighbor 172.16.1.1 send-community extended</pre>	• In this example, an extended communities attribute is sent to the neighbor at 172.16.1.1.
Step 11	exit-address-family	Exits address family configuration mode and returns to router configuration mode.
	<pre>Example: Router(config-router-af)# exit-address-family</pre>	
Step 12	address-family {ipv4 [mdt   multicast   unicast [vrf vrf-name]   vrf vrf-name]   vpnv4 [unicast]}	Enters address family configuration mode to configure BGP peers to accept address-family-specific configurations.
	<pre>Example: Router(config-router)# address-family ipv4 vrf vrf_trans</pre>	• The example specifies that the VRF instance named vrf_trans is to be associated with subsequent IPv4 address family configuration commands.
Step 13	redistribute connected	Redistributes from one routing domain into another routing domain.
	<pre>Example: Router(config-router-af)# redistribute connected</pre>	• In this example, the <b>connected</b> keyword is used to represent routes that are established automatically when IP is enabled on an interface.
		• Only the syntax applicable to this step is displayed. For more details, see the <i>Cisco IOS IP Routing: BGP Command Reference</i> .

	Command or Action	Purpose
Step 14	neighbor {ip-address   peer-group-name} remote-as autonomous-system-number	Adds the IP address or peer group name of the neighbor in the specified autonomous system to the IPv4 multiprotocol BGP neighbor table of the local router.
	<pre>Example: Router(config-router-af)# neighbor 192.168.1.1 remote-as 40000</pre>	• If the <i>autonomous-system-number</i> argument matches the autonomous system number specified in the <b>router bgp</b> command, the neighbor is an internal neighbor.
		• If the <i>autonomous-system-number</i> argument does not match the autonomous system number specified in the <b>router bgp</b> command, the neighbor is an external neighbor.
		• In this example, the neighbor at 192.168.1.1 is an external neighbor.
Step 15	<pre>neighbor ip-address local-as autonomous-system-number [no-prepend [replace-as [dual-as]]]</pre>	Customizes the AS_PATH attribute for routes received from an eBGP neighbor.
	<pre>Example: Router(config-router-af)# neighbor 192.168.1.1</pre>	<ul> <li>The autonomous system number from the local BGP routing process is prepended to all external routes by default.</li> </ul>
	local-as 50000 no-prepend	• Use the <b>no-prepend</b> keyword to not prepend the local autonomous system number to any routes received from the eBGP neighbor.
		• In this example, routes from the neighbor at 192.168.1.1 will not contain the local autonomous system number.
Step 16	<pre>neighbor {ip-address   peer-group-name} ebgp-multihop [ttl]</pre>	Accepts and attempts BGP connections to external peers residing on networks that are not directly connected.
	<pre>Example: Router(config-router-af)# neighbor 192.168.1.1 ebgp-multihop 2</pre>	• In this example, BGP is configured to allow connections to or from neighbor 192.168.1.1, which resides on a network that is not directly connected.
Step 17	neighbor {ip-address   peer-group-name}	Activates the neighbor under the IPV4 address family.
	activate	• In this example, the neighbor 192.168.1.1 is activated.
	<pre>Example: Router(config-router-af)# neighbor 192.168.1.1 activate</pre>	
Step 18	neighbor ip-address allowas-in [number]	Configures provider edge (PE) routers to allow the readvertisement of all prefixes that contain duplicate autonomous system numbers.
	Example: Router(config-router-af)# neighbor 192.168.1.1 allowas-in 1	• In the example, the PE router with autonomous system number 45000 is configured to allow prefixes from the VRF vrf-trans. The neighboring PE router with the IP address 192.168.1.1 is set to be readvertised once to other PE routers with the same autonomous system number.

	Command or Action	Purpose
Step 19	no auto-summary	Disables automatic summarization and sends subprefix routing information across classful network boundaries.
	<pre>Example: Router(config-router-af)# no auto-summary</pre>	
Step 20	no synchronization	Enables the Cisco IOS XE software to advertise a network route without waiting for synchronization with an Internal
	<pre>Example: Router(config-router-af)# no synchronization</pre>	Gateway Protocol (IGP).
Step 21	<pre>bgp router-id {ip-address   auto-assign}</pre>	Configures a fixed router ID for the local BGP routing process.
	<pre>Example: Router(config-router-af)# bgp router-id 10.99.1.1</pre>	• In this example, the specified BGP router ID is assigned for the VRF instance associated with this IPv4 address family configuration.
Step 22	Repeat Step 11 to Step 21 to configure another VRF instance.	_
Step 23	end	Exits address family configuration mode and returns to privileged EXEC mode.
	<pre>Example: Router(config-router-af)# end</pre>	
Step 24	<pre>show ip bgp vpnv4 {all   rd route-distinguisher   vrf vrf-name}</pre>	(Optional) Displays VPN address information from the BGP table.
	Example:	• In this example, the complete VPNv4 database is displayed.
	Router# show ip bgp vpnv4 all	Note Only the syntax applicable to this task is used in this example. For more details, see the <i>Cisco IOS Multiprotocol Label Switching Command Reference</i> .

## **Examples**

The following sample output assumes that two VRF instances named vrf\_trans and vrf\_user were configured each with a separate router ID. The router ID is shown next to the VRF name.

```
Router# show ip bgp vpnv4 all

BGP table version is 5, local router ID is 172.17.1.99

Status codes: s suppressed, d damped, h history, * valid, > best, i - internal, r RIB-failure, S Stale

Origin codes: i - IGP, e - EGP, ? - incomplete

Network Next Hop Metric LocPrf Weight Path

Route Distinguisher: 1:1 (default for vrf vrf_trans) VRF Router ID 10.99.1.2

*> 192.168.4.0 0.0.0.0 0 32768 ?

Route Distinguisher: 42:1 (default for vrf vrf_user) VRF Router ID 10.99.1.1

*> 192.168.5.0 0.0.0.0 0 32768 ?
```

#### **Automatically Assigning a BGP Router ID per VRF**

Perform this task to automatically assign a BGP router ID for each VRF. In this task, a loopback interface is associated with a VRF and the **bgp router-id** command is configured at the router configuration level to automatically assign a BGP router ID to all VRF instances. Step 9 shows you how to repeat certain steps to configure each VRF that is to be associated with an interface. Step 30 shows you how to configure more than one VRF on the same router.

#### **Prerequisites**

This task assumes that you have previously created the VRF instances. For more details, see the "Configuring VRF Instances" section on page 3.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- **3**. **interface** *type number*
- 4. ip address ip-address mask [secondary]
- 5. exit
- **6. interface** *type number*
- 7. ip vrf forwarding vrf-name [downstream vrf-name2]
- 8. ip address ip-address mask [secondary]
- **9.** Repeat Step 5 through Step 8 for each VRF to be associated with an interface.
- 10. exit
- 11. router bgp autonomous-system-number
- **12. bgp router-id** {*ip-address* | **vrf auto-assign**}
- 13. no bgp default ipv4-unicast
- 14. bgp log-neighbor-changes
- **15. neighbor** {ip-address | peer-group-name} **remote-as** autonomous-system-number
- **16. neighbor** {ip-address | peer-group-name} **update-source** interface-type interface-number
- 17. address-family {ipv4 [mdt | multicast | unicast [vrf vrf-name] | vrf vrf-name] | vpnv4 [unicast]}
- **18. neighbor** {*ip-address* | *peer-group-name*} **activate**
- 19. neighbor {ip-address | peer-group-name} send-community [both | standard | extended]
- 20. exit-address-family
- 21. address-family {ipv4 [mdt | multicast | unicast [vrf vrf-name] | vrf vrf-name] | vpnv4 [unicast]}
- 22. redistribute connected
- **23**. **neighbor** {*ip-address* | *peer-group-name*} **remote-as** *autonomous-system-number*
- 24. neighbor ip-address local-as autonomous-system-number [no-prepend [replace-as [dual-as]]]
- **25**. **neighbor** {*ip-address* | *peer-group-name*} **ebgp-multihop** [*ttl*]
- **26**. **neighbor** {*ip-address* | *peer-group-name*} **activate**

- 27. **neighbor** *ip-address* **allowas-in** [number]
- 28. no auto-summary
- 29. no synchronization
- **30.** Repeat Step 20 to Step 29 to configure another VRF instance.
- 31. end
- 32.  $show\ ip\ bgp\ vpnv4\ \{all\ |\ rd\ {\it route-distinguisher}\ |\ vrf{\it -name}\}$

#### **DETAILED STEPS**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		• Enter your password if prompted.
	Example:	
	Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	interface type number	Configures an interface type and enters interface configuration mode.
	<pre>Example: Router(config)# interface loopback0</pre>	• In this example, loopback interface 0 is configured.
Step 4	<pre>ip address ip-address mask [secondary]</pre>	Configures an IP address.
	Example: Router(config-if)# ip address 172.16.1.1 255.255.255	• In this example, the loopback interface is configured with an IP address of 172.16.1.1.
Step 5	exit	Exits interface configuration mode and returns to global configuration mode.
	<pre>Example: Router(config-if)# exit</pre>	
Step 6	interface type number	Configures an interface type and enters interface configuration mode.
	<pre>Example: Router(config)# interface loopback1</pre>	• In this example, loopback interface 1 is configured.
Step 7	ip vrf forwarding vrf-name [downstream	Associates a VRF with an interface or subinterface.
	vrf-name2]	• In this example, the VRF named vrf_trans is associated with loopback interface 1.
	<pre>Example: Router(config-if)# ip vrf forwarding vrf_trans</pre>	Note Executing this command on an interface removes the IP address. The IP address should be reconfigured.

	Command or Action	Purpose
Step 8	ip address ip-address mask [secondary]	Configures an IP address.
	Example: Router(config-if)# ip address 10.99.1.1 255.255.255.255	• In this example, loopback interface 1 is configured with an IP address of 10.99.1.1.
Step 9	Repeat Step 5 through Step 8 for each VRF to be associated with an interface.	
Step 10	exit	Exits interface configuration mode and returns to global configuration mode.
	<pre>Example: Router(config-if)# exit</pre>	
Step 11	router bgp autonomous-system-number	Enters router configuration mode for the specified routing process.
	Example: Router(config)# router bgp 45000	
Step 12	$\label{eq:bgp_router_id} \textbf{bgp_router-id} \ \{ip\text{-}address \   \ \textbf{vrf_auto-assign}\}$	Configures a fixed router ID for the local BGP routing process.
	<pre>Example: Router(config-router)# bgp router-id vrf auto-assign</pre>	• In this example, a BGP router ID is automatically assigned for each VRF instance.
Step 13	no bgp default ipv4-unicast	Disables the IPv4 unicast address family for the BGP routing process.
	<pre>Example: Router(config-router)# no bgp default ipv4-unicast</pre>	Note Routing information for the IPv4 unicast address family is advertised by default for each BGP routing session configured with the neighbor remote-as router configuration command unless you configure the no bgp default ipv4-unicast router configuration command before configuring the neighbor remote-as command. Existing neighbor configurations are not affected.
Step 14	bgp log-neighbor-changes	Enables logging of BGP neighbor resets.
0. 45	Example: Router(config-router)# bgp log-neighbor-changes	
Step 15	<pre>neighbor {ip-address   peer-group-name} remote-as autonomous-system-number</pre>	Adds the IP address or peer group name of the neighbor in the specified autonomous system to the IPv4 multiprotocol BGP neighbor table of the local router.
	<pre>Example: Router(config-router)# neighbor 192.168.1.1 remote-as 45000</pre>	<ul> <li>If the autonomous-system-number argument matches the autonomous system number specified in the router bgp command, the neighbor is an internal neighbor.</li> </ul>
		• If the <i>autonomous-system-number</i> argument does not match the autonomous system number specified in the <b>router bgp</b> command, the neighbor is an external neighbor.
		• In this example, the neighbor is an internal neighbor.

	Command or Action	Purpose		
Step 16	neighbor {ip-address   peer-group-name} update-source interface-type interface-number	Allows BGP sessions to use any operational interface for TCP connections.		
	<pre>Example: Router(config-router)# neighbor 192.168.1.1 update-source loopback0</pre>	• In this example, BGP TCP connections for the specified neighbor are sourced with the IP address of the loopback interface rather than the best local address.		
Step 17	<pre>address-family {ipv4 [mdt   multicast   unicast [vrf vrf-name]   vrf vrf-name]   vpnv4 [unicast]}</pre>	Enters address family configuration mode to configure BGP peers to accept address-family-specific configurations.  • The example creates a VPNv4 address family session.		
	<pre>Example: Router(config-router)# address-family vpnv4</pre>	The champro crosses a virty address talling session		
Step 18	<pre>neighbor {ip-address   peer-group-name} activate</pre>	Activates the neighbor under the VPNv4 address family.  • In this example, the neighbor 172.16.1.1 is activated.		
	<pre>Example: Router(config-router-af)# neighbor 172.16.1.1 activate</pre>			
Step 19	neighbor     {ip-address   peer-group-name}       send-community     {both   standard   extended}	Specifies that a communities attribute should be sent to a BGP neighbor.		
	<pre>Example: Router(config-router-af)# neighbor 172.16.1.1 send-community extended</pre>	• In this example, an extended communities attribute is sent to the neighbor at 172.16.1.1.		
Step 20	exit-address-family	Exits address family configuration mode and returns to router configuration mode.		
	<pre>Example: Router(config-router-af)# exit-address-family</pre>			
Step 21	<pre>address-family {ipv4 [mdt   multicast   unicast [vrf vrf-name]   vrf vrf-name]   vpnv4 [unicast]}</pre>	Enters address family configuration mode to configure BGP peers to accept address-family-specific configurations.		
	<pre>Example: Router(config-router)# address-family ipv4 vrf vrf_trans</pre>	<ul> <li>The example specifies that the VRF instance named vrf_trans is to be associated with subsequent IPv4 address family configuration mode commands.</li> </ul>		
Step 22	redistribute connected	Redistributes from one routing domain into another routing domain.		
	<pre>Example: Router(config-router-af)# redistribute connected</pre>	<ul> <li>In this example, the connected keyword is used to represent routes that are established automatically when IP is enabled on an interface.</li> </ul>		
		• Only the syntax applicable to this step is displayed. For more details, see the <i>Cisco IOS IP Routing: BGP Command Reference</i> .		

	Command or Action	Purpose
Step 23	neighbor {ip-address   peer-group-name} remote-as autonomous-system-number	Adds the IP address or peer group name of the neighbor in the specified autonomous system to the IPv4 multiprotocol BGP neighbor table of the local router.
	<pre>Example: Router(config-router-af)# neighbor 192.168.1.1 remote-as 40000</pre>	• If the <i>autonomous-system-number</i> argument matches the autonomous system number specified in the <b>router bgp</b> command, the neighbor is an internal neighbor.
		• If the <i>autonomous-system-number</i> argument does not match the autonomous system number specified in the <b>router bgp</b> command, the neighbor is an external neighbor.
		• In this example, the neighbor at 192.168.1.1 is an external neighbor.
Step 24	<pre>neighbor ip-address local-as autonomous-system-number [no-prepend [replace-as [dual-as]]]</pre>	Customizes the AS_PATH attribute for routes received from an eBGP neighbor.
	Example: Router(config-router-af)# neighbor 192.168.1.1 local-as 50000 no-prepend	<ul> <li>The autonomous system number from the local BGP routing process is prepended to all external routes by default.</li> </ul>
		• Use the <b>no-prepend</b> keyword to not prepend the local autonomous system number to any routes received from the eBGP neighbor.
		• In this example, routes from the neighbor at 192.168.1.1 will not contain the local autonomous system number.
Step 25	<pre>neighbor {ip-address   peer-group-name} ebgp-multihop [ttl]</pre>	Accepts and attempts BGP connections to external peers residing on networks that are not directly connected.
	<pre>Example: Router(config-router-af)# neighbor 192.168.1.1 ebgp-multihop 2</pre>	• In this example, BGP is configured to allow connections to or from neighbor 192.168.1.1, which resides on a network that is not directly connected.
Step 26	neighbor {ip-address   peer-group-name}	Activates the neighbor under the IPV4 address family.
	activate	• In this example, the neighbor 192.168.1.1 is activated.
	<pre>Example: Router(config-router-af)# neighbor 192.168.1.1 activate</pre>	
Step 27	neighbor ip-address allowas-in [number]	Configures provider edge (PE) routers to allow the readvertisement of all prefixes that contain duplicate autonomous system numbers.
	<pre>Example: Router(config-router-af)# neighbor 192.168.1.1 allowas-in 1</pre>	• In the example, the PE router with autonomous system number 45000 is configured to allow prefixes from the VRF vrf-trans. The neighboring PE router with the IP address 192.168.1.1 is set to be readvertised once to other PE routers with the same autonomous system number.

	Command or Action	Purpose
Step 28	no auto-summary	Disables automatic summarization and sends subprefix routing information across classful network boundaries.
	<pre>Example: Router(config-router-af)# no auto-summary</pre>	
Step 29	no synchronization	Enables the Cisco IOS XE software to advertise a network route without waiting for synchronization with an Internal
	<pre>Example: Router(config-router-af)# no synchronization</pre>	Gateway Protocol (IGP).
Step 30	Repeat Step 20 to Step 29 to configure another VRF instance.	_
Step 31	end	Exits address family configuration mode and returns to privileged EXEC mode.
	<pre>Example: Router(config-router-af)# end</pre>	
Step 32	<pre>show ip bgp vpnv4 {all   rd route-distinguisher   vrf vrf-name}</pre>	(Optional) Displays VPN address information from the BGP table.
	Example:	• In this example, the complete VPNv4 database is displayed.
	Router# show ip bgp vpnv4 all	Note Only the syntax applicable to this task is used in this example. For more details, see the Cisco IOS  Multiprotocol Label Switching Command Reference.

#### **Examples**

The following sample output assumes that two VRF instances named vrf\_trans and vrf\_user were configured, each with a separate router ID. The router ID is shown next to the VRF name.

```
Router# show ip bgp vpnv4 all
```

```
BGP table version is 43, local router ID is 172.16.1.1
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal,
             r RIB-failure, S Stale
Origin codes: i - IGP, e - EGP, ? - incomplete
                   Next Hop
                                       Metric LocPrf Weight Path
Route Distinguisher: 1:1 (default for vrf vrf_trans) VRF Router ID 10.99.1.2
*> 172.22.0.0 0.0.0.0
                                            0
                                                      32768 ?
r> 172.23.0.0
                   172.23.1.1
                                            0
                                                          0 3 1 ?
                                            0
                                                          0 2 i
*>i10.21.1.1/32
                  192.168.3.1
                                                 100
*> 10.52.1.0/24
                  172.23.1.1
                                                          0 3 1 ?
*> 10.52.2.1/32
                   172.23.1.1
                                                          0 3 1 3 i
*> 10.52.3.1/32
                                                          0 3 1 3 i
                   172.23.1.1
*> 10.99.1.1/32
                   172.23.1.1
                                            0
                                                          0 3 1 ?
*> 10.99.1.2/32
                   0.0.0.0
                                            0
                                                      32768 ?
Route Distinguisher: 10:1
                                                 100
*>i10.21.1.1/32 192.168.3.1
                                            Ω
                                                          0 2 i
Route Distinguisher: 42:1 (default for vrf vrf_user) VRF Router ID 10.99.1.1
r> 172.22.0.0
                172.22.1.1
                                            0
                                                          0 2 1 ?
*> 172.23.0.0
                   0.0.0.0
                                                      32768 ?
*> 10.21.1.1/32
                   172.22.1.1
                                                          0 2 1 2 i
*>i10.52.1.0/24
                   192.168.3.1
                                                 100
                                                          0 ?
```

# **Configuration Examples for Per-VRF Assignment of BGP Router ID**

This section contains the following configuration examples:

- Manually Configuring a BGP Router ID per VRF: Examples, page 18
- Automatically Assigning a BGP Router ID per VRF: Examples, page 21

## **Manually Configuring a BGP Router ID per VRF: Examples**

The following example shows how to configure two VRFs—vrf\_trans and vrf\_user—with sessions between each other on the same router. The BGP router ID for each VRF is configured manually under separate IPv4 address families. The **show ip bgp vpnv4** command can be used to verify that the router IDs have been configured for each VRF. The configuration starts in global configuration mode.

```
ip vrf vrf_trans
rd 45000:1
route-target export 50000:50
route-target import 40000:1
ip vrf vrf_user
rd 65500:1
route-target export 65500:1
route-target import 65500:1
interface Loopback0
ip address 10.1.1.1 255.255.255.255
router bgp 45000
no bgp default ipv4-unicast
bgp log-neighbor-changes
neighbor 192.168.3.1 remote-as 45000
neighbor 192.168.3.1 update-source Loopback0
 address-family vpnv4
 neighbor 192.168.3.1 activate
 neighbor 192.168.3.1 send-community extended
 exit-address-family
 address-family ipv4 vrf vrf_user
 redistribute connected
 neighbor 172.22.1.1 remote-as 40000
 neighbor 172.22.1.1 local-as 50000 no-prepend
 neighbor 172.22.1.1 ebgp-multihop 2
 neighbor 172.22.1.1 activate
 neighbor 172.22.1.1 allowas-in 1
 no auto-summary
 no synchronization
 bgp router-id 10.99.1.1
  exit-address-family
 address-family ipv4 vrf vrf_trans
```

```
redistribute connected
neighbor 172.23.1.1 remote-as 50000
neighbor 172.23.1.1 local-as 40000 no-prepend
neighbor 172.23.1.1 ebgp-multihop 2
neighbor 172.23.1.1 activate
neighbor 172.23.1.1 allowas-in 1
no auto-summary
no synchronization
bgp router-id 10.99.1.2
exit-address-family
```

After the configuration, the output of the **show ip bgp vpnv4 all** command shows the router ID displayed next to the VRF name:

#### Router# show ip bgp vpnv4 all

Network	Next Hop	Metric	LocPrf	Weight	Path	
Route Distinguisher	: 45000:1 (default	for vrf	vrf_tran	s) VRF	Router	ID 10.99.1.2
*> 172.22.0.0	0.0.0.0	0		32768	?	
r> 172.23.0.0	172.23.1.1	0		0	3 1 ?	
*>i10.21.1.1/32	192.168.3.1	0	100	0	2 i	
*> 10.52.1.0/24	172.23.1.1			0	3 1 ?	
*> 10.52.2.1/32	172.23.1.1			0	3 1 3 i	<u>-</u>
*> 10.52.3.1/32	172.23.1.1			0	3 1 3 i	<u>-</u>
*> 10.99.1.1/32	172.23.1.1	0		0	3 1 ?	
*> 10.99.2.2/32	0.0.0.0	0		32768	?	
Route Distinguisher	: 50000:1					
*>i10.21.1.1/32	192.168.3.1	0	100	0	2 i	
Route Distinguisher	: 65500:1 (default	for vrf	vrf_user	) VRF I	Router I	D 10.99.1.1
r> 172.22.0.0	172.22.1.1	0		0	2 1 ?	
*> 172.23.0.0	0.0.0.0	0		32768	?	
*> 10.21.1.1/32	172.22.1.1			0	2 1 2 i	<u>-</u>
*>i10.52.1.0/24	192.168.3.1	0	100	0	?	
*>i10.52.2.1/32	192.168.3.1	0	100	0	3 i	
*>i10.52.3.1/32	192.168.3.1	0	100	0	3 i	
*> 10.99.1.1/32	0.0.0.0	0		32768	?	
*> 10.99.2.2/32	172.22.1.1	0		0	2 1 ?	

The output of the **show ip bgp vpnv4 vrf** command for a specified VRF displays the router ID in the output header:

Router# show ip bgp vpnv4 vrf vrf\_user BGP table version is 43, local router ID is 10.99.1.1 Status codes: s suppressed, d damped, h history, \* valid, > best, i - internal, r RIB-failure, S Stale Origin codes: i - IGP, e - EGP, ? - incomplete Network Next Hop Metric LocPrf Weight Path Route Distinguisher: 65500:1 (default for vrf vrf\_user) VRF Router ID 10.99.1.1 r> 172.22.0.0 172.22.1.1 0 0 2 1 ? \*> 172.23.0.0 0.0.0.0 Ω 32768 ? \*> 10.21.1.1/32 172.22.1.1 0 2 1 2 i \*>i10.52.1.0/24 192.168.3.1 0 100 0 ? \*>i10.52.2.1/32 192.168.3.1 0 100 0 3 i \*>i10.52.3.1/32 192.168.3.1 0 100 0 3 i \*> 10.99.1.1/32 0.0.0.0 Ω 32768 ? 172.22.1.1 \*> 10.99.2.2/32 0 0 2 1 ?

The output of the **show ip bgp vpnv4 vrf summary** command for a specified VRF displays the router ID in the first line of the output:

```
Router# show ip bgp vpnv4 vrf vrf_user summary
```

```
BGP router identifier 10.99.1.1, local AS number 45000
BGP table version is 43, main routing table version 43
8 network entries using 1128 bytes of memory
8 path entries using 544 bytes of memory
16/10 BGP path/bestpath attribute entries using 1856 bytes of memory
6 BGP AS-PATH entries using 144 bytes of memory
3 BGP extended community entries using 72 bytes of memory
0 BGP route-map cache entries using 0 bytes of memory
0 BGP filter-list cache entries using 0 bytes of memory
BGP using 3744 total bytes of memory
BGP activity 17/0 prefixes, 17/0 paths, scan interval 15 secs
               V
                    AS MsgRcvd MsgSent
                                         TblVer InQ OutQ Up/Down State/PfxRcd
172.22.1.1
                4
                     2.
                            20
                                    21
                                             43
                                                   0
                                                        0 00:12:33
```

When the path is sourced in the VRF, the correct router ID is displayed in the output of the **show ip bgp vpnv4 vrf** command for a specified VRF and network address:

```
Router# show ip bgp vpnv4 vrf vrf_user 172.23.0.0
```

#### **Automatically Assigning a BGP Router ID per VRF: Examples**

The following three configuration examples show different methods of configuring BGP to automatically assign a separate router ID to each VRF instance:

- Globally Automatically Assigned Router ID Using Loopback Interface IP Addresses: Example, page 21
- Globally Automatically Assigned Router ID with No Default Router ID: Example, page 22
- Per-VRF Automatically Assigned Router ID: Example, page 23

#### **Globally Automatically Assigned Router ID Using Loopback Interface IP Addresses: Example**

The following example shows how to configure two VRFs—vrf\_trans and vrf\_user—with sessions between each other on the same router. Under router configuration mode, BGP is globally configured to automatically assign each VRF a BGP router ID. Loopback interfaces are associated with individual VRFs to source an IP address for the router ID. The **show ip bgp vpnv4** command can be used to verify that the router IDs have been configured for each VRF.

```
ip vrf vrf_trans
rd 45000:1
route-target export 50000:50
route-target import 40000:1
ip vrf vrf_user
rd 65500:1
route-target export 65500:1
route-target import 65500:1
interface Loopback0
ip address 10.1.1.1 255.255.255.255
interface Loopback1
ip vrf forwarding vrf_user
ip address 10.99.1.1 255.255.255.255
interface Loopback2
ip vrf forwarding vrf_trans
ip address 10.99.2.2 255.255.255.255
router bgp 45000
bgp router-id vrf auto-assign
no bgp default ipv4-unicast
bgp log-neighbor-changes
neighbor 192.168.3.1 remote-as 45000
neighbor 192.168.3.1 update-source Loopback0
address-family vpnv4
 neighbor 192.168.3.1 activate
 neighbor 192.168.3.1 send-community extended
  exit-address-family
 address-family ipv4 vrf vrf_user
 redistribute connected
 neighbor 172.22.1.1 remote-as 40000
 neighbor 172.22.1.1 local-as 50000 no-prepend
  neighbor 172.22.1.1 ebgp-multihop 2
  neighbor 172.22.1.1 activate
  neighbor 172.22.1.1 allowas-in 1
  no auto-summary
```

```
no synchronization
exit-address-family
!
address-family ipv4 vrf vrf_trans
redistribute connected
neighbor 172.23.1.1 remote-as 50000
neighbor 172.23.1.1 local-as 2 no-prepend
neighbor 172.23.1.1 ebgp-multihop 2
neighbor 172.23.1.1 activate
neighbor 172.23.1.1 allowas-in 1
no auto-summary
no synchronization
exit-address-family
```

After the configuration, the output of the **show ip bgp vpnv4 all** command shows the router ID displayed next to the VRF name. Note that the router IDs used in this example are sourced from the IP addresses configured for loopback interface 1 and loopback interface 2. The router IDs are the same as in the "Manually Configuring a BGP Router ID per VRF: Examples" section on page 18.

```
Router# show ip bgp vpnv4 all
BGP table version is 43, local router ID is 10.1.1.1
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal,
           r RIB-failure, S Stale
Origin codes: i - IGP, e - EGP, ? - incomplete
                                  Metric LocPrf Weight Path
                Next Hop
Route Distinguisher: 45000:1 (default for vrf_trans) VRF Router ID 10.99.2.2
*> 172.22.0.0 0.0.0.0
                                     0
                                          32768 ?
r> 172.23.0.0
               172.23.1.1
                                     0
                                                   0 3 1 ?
                                     0 100
*>i10.21.1.1/32 192.168.3.1
                                                 0 2 i
*> 10.52.1.0/24 172.23.1.1
                                                  0 3 1 ?
*> 10.52.2.1/32
                172.23.1.1
                                                   0 3 1 3 i
*> 10.52.3.1/32
                172.23.1.1
                                                   0 3 1 3 i
*> 10.99.1.1/32
                172.23.1.1
                                      0
                                                   0 3 1 ?
Ω
                                               32768 ?
Route Distinguisher: 50000:1
*>i10.21.1.1/32 192.168.3.1
                             0 100
                                                   0.2 i
Route Distinguisher: 65500:1 (default for vrf vrf_user) VRF Router ID 10.99.1.1
r> 172.22.0.0 172.22.1.1 0
                                                  0 2 1 ?
               0.0.0.0
*> 172.23.0.0
                                      0
                                               32768 ?
*> 10.21.1.1/32 172.22.1.1
                                                  0 2 1 2 i
                                   0
0
0
*>i10.52.1.0/24
                192.168.3.1
                                         100
                                                   0 ?
*>i10.52.2.1/32
                192.168.3.1
                                           100
                                                   0 3 i
*>i10.52.3.1/32
                192.168.3.1
                                          100
                                                   0 3 i
*> 10.99.1.1/32
                0.0.0.0
                                     Ω
                                               32768 2
*> 10.99.1.2/32
              172.22.1.1
                                                   0 2 1 ?
```

#### **Globally Automatically Assigned Router ID with No Default Router ID: Example**

The following example shows how to configure a router and associate a VRF that is automatically assigned a BGP router ID when no default router ID is allocated.

```
ip vrf vpn1
  rd 45000:1
  route-target export 45000:1
  route-target import 45000:1
!
interface Loopback0
  ip vrf forwarding vpn1
  ip address 10.1.1.1 255.255.255.255
```

```
router bgp 45000
bgp router-id vrf auto-assign
no bgp default ipv4-unicast
bgp log-neighbor-changes
!
address-family ipv4 vrf vpn1
neighbor 172.22.1.2 remote-as 40000
neighbor 172.22.1.2 activate
no auto-summary
no synchronization
exit-address-family
```

Assuming that a second router is configured to establish a session between the two routers, the output of the **show ip interface brief** command shows only the VRF interfaces that are configured.

#### Router# show ip interface brief

Interface	IP-Address	OK?	Method	Status		Protocol
Serial2/0/0	unassigned	YES	NVRAM	${\tt administratively}$	down	down
Serial3/0/0	unassigned	YES	NVRAM	${\tt administratively}$	down	down
Loopback0	10.1.1.1	YES	NVRAM	up		up

The **show ip vrf** command can be used to verify that a router ID is assigned for the VRF:

```
Router# show ip vrf
```

Name	Default RD	Interfaces
vpn1	45000:1	Loopback0

VRF session is established:

#### **Per-VRF Automatically Assigned Router ID: Example**

The following example shows how to configure two VRFs—vrf\_trans and vrf\_user—with sessions between each other on the same router. Under the IPv4 address family associated with an individual VRF, BGP is configured to automatically assign a BGP router ID. Loopback interfaces are associated with individual VRFs to source an IP address for the router ID. The output of the **show ip bgp vpnv4** command can be used to verify that the router IDs have been configured for each VRF.

```
ip vrf vrf_trans
rd 45000:1
route-target export 50000:50
route-target import 40000:1
ip vrf vrf_user
rd 65500:1
route-target export 65500:1
route-target import 65500:1
!
interface Loopback0
ip address 10.1.1.1 255.255.255.255
interface Loopback1
 ip vrf forwarding vrf_user
ip address 10.99.1.1 255.255.255.255
interface Loopback2
ip vrf forwarding vrf_trans
ip address 10.99.2.2 255.255.255.255
router bgp 45000
no bgp default ipv4-unicast
```

```
bgp log-neighbor-changes
neighbor 192.168.3.1 remote-as 45000
neighbor 192.168.3.1 update-source Loopback0
address-family vpnv4
 neighbor 192.168.3.1 activate
 neighbor 192.168.3.1 send-community extended
 exit-address-family
 address-family ipv4 vrf vrf_user
 redistribute connected
 neighbor 172.22.1.1 remote-as 40000
 neighbor 172.22.1.1 local-as 50000 no-prepend
 neighbor 172.22.1.1 ebgp-multihop 2
 neighbor 172.22.1.1 activate
 neighbor 172.22.1.1 allowas-in 1
 no auto-summary
 no synchronization
 bgp router-id auto-assign
  exit-address-family
address-family ipv4 vrf vrf_trans
 redistribute connected
 neighbor 172.23.1.1 remote-as 50000
 neighbor 172.23.1.1 local-as 40000 no-prepend
 neighbor 172.23.1.1 ebgp-multihop 2
 neighbor 172.23.1.1 activate
 neighbor 172.23.1.1 allowas-in 1
 no auto-summary
 no synchronization
 bgp router-id auto-assign
  exit-address-family
```

After the configuration, the output of the **show ip bgp vpnv4 all** command shows the router ID displayed next to the VRF name. Note that the router IDs used in this example are sourced from the IP addresses configured for loopback interface 1 and loopback interface 2.

```
Router# show ip bgp vpnv4 all
```

```
BGP table version is 43, local router ID is 10.1.1.1
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal,
          r RIB-failure, S Stale
Origin codes: i - IGP, e - EGP, ? - incomplete
                Next Hop
                                   Metric LocPrf Weight Path
Route Distinguisher: 45000:1 (default for vrf vrf_trans) VRF Router ID 10.99.2.2
*> 172.22.0.0 0.0.0.0
                                       Ο
                                                 32768 ?
r> 172.23.0.0
                 172.23.1.1
                                        Ω
                                                     0 3 1 ?
*>i10.21.1.1/32
                 192.168.3.1
                                        0
                                            100
                                                     0.2 i
*> 10.52.1.0/24
                 172.23.1.1
                                                     0 3 1 ?
              172.23.1.1
*> 10.52.2.1/32
                                                     0 3 1 3 i
                172.23.1.1
                                                     0 3 1 3 i
*> 10.52.3.1/32
*> 10.99.1.1/32
                172.23.1.1
                                                     0 3 1 ?
*> 10.99.1.2/32
                0.0.0.0
                                        0
                                                 32768 ?
Route Distinguisher: 50000:1
*>i10.21.1.1/32 192.168.3.1
                                        Ω
                                            100
                                                     0.2 i
Route Distinguisher: 65500:1 (default for vrf vrf_user) VRF Router ID 10.99.1.1
r> 172.22.0.0 172.22.1.1
                                       0
                                                     0 2 1 ?
*> 172.23.0.0
                 0.0.0.0
                                        0
                                                 32768 ?
*> 10.21.1.1/32 172.22.1.1
                                                    0 2 1 2 i
*>i10.52.1.0/24
                192.168.3.1
                                      0
                                           100
                                                     0 ?
*>i10.52.2.1/32
               192.168.3.1
                                                   0 3 i
                                      0 100
                                                     0 3 i
*>i10.52.3.1/32
              192.168.3.1
                                      0 100
0
                                                 32768 ?
```

\*> 10.99.1.2/32 172.22.1.1

0

0 2 1 ?

# **Additional References**

The following sections provide references related to the Per-VRF Assignment of BGP Router ID feature.

## **Related Documents**

Related Topic	Document Title
BGP commands: complete command syntax, defaults, command mode, command history, usage guidelines, and examples	Cisco IOS IP Routing: BGP Command Reference
MPLS commands: complete command syntax, defaults, command mode, command history, usage guidelines, and examples	Cisco IOS Multiprotocol Label Switching Command Reference
Cisco IOS master command list, all releases	Cisco IOS Master Command List, All Releases

## **Standards**

Standard	Title
No new or modified standards are supported by this feature, and support for existing standards has not been modified by this feature.	

### **MIBs**

MIB	MIBs Link	
No new or modified MIBs are supported by this feature, and support for existing MIBs has not been modified by this feature.	To locate and download MIBs for selected platforms, Cisco IOS XE software releases, and feature sets, use Cisco MIB Locator found at the following URL:	
	http://www.cisco.com/go/mibs	

## **RFCs**

RFC	Title
No new or modified RFCs are supported by this feature, and support for existing RFCs has not been modified by this feature.	

## **Technical Assistance**

Description	Link
The Cisco Support website provides extensive online resources, including documentation and tools for troubleshooting and resolving technical issues with Cisco products and technologies.	http://www.cisco.com/techsupport
To receive security and technical information about your products, you can subscribe to various services, such as the Product Alert Tool (accessed from Field Notices), the Cisco Technical Services Newsletter, and Really Simple Syndication (RSS) Feeds.	
Access to most tools on the Cisco Support website requires a Cisco.com user ID and password.	

## Feature Information for Per-VRF Assignment of BGP Router ID

Table 1 lists the release history for this feature.

Use Cisco Feature Navigator to find information about platform support and software image support. Cisco Feature Navigator enables you to determine which Cisco IOS XE software images support a specific software release, feature set, or platform. To access Cisco Feature Navigator, go to <a href="http://www.cisco.com/go/cfn">http://www.cisco.com/go/cfn</a>. An account on Cisco.com is not required.



Table 1 lists only the Cisco IOS XE software release that introduced support for a given feature in a given Cisco IOS XE software release train. Unless noted otherwise, subsequent releases of that Cisco IOS XE software release train also support that feature.

Table 1 Feature Information for Per-VRF Assignment of BGP Router ID

eleases	Feature Information
isco IOS XE elease 2.1	The Per-VRF Assignment of BGP Router ID feature introduces the ability to have VRF-to-VRF peering in Border Gateway Protocol (BGP) on the same router. BGP is designed to refuse a session with itself because of the router ID check. The per-VRF assignment feature allows a separate router ID per VRF using a new keyword in the existing <b>bgp router-id</b> command. The router ID can be manually configured for each VRF or can be assigned automatically either globally under address family configuration mode or for each VRF.  This feature was introduced on the Cisco ASR 1000 Series Aggregation Services Routers.  The following commands were introduced or modified by this feature: <b>bgp router-id</b> , <b>show ip bgp vpnv4</b> .
i	sco IOS XE

CCDE, CCSI, CCENT, Cisco Eos, Cisco HealthPresence, the Cisco logo, Cisco Lumin, Cisco Nexus, Cisco Nurse Connect, Cisco Stackpower, Cisco StadiumVision, Cisco TelePresence, Cisco WebEx, DCE, and Welcome to the Human Network are trademarks; Changing the Way We Work, Live, Play, and Learn and Cisco Store are service marks; and Access Registrar, Aironet, AsyncOS, Bringing the Meeting To You, Catalyst, CCDA, CCDP, CCIE, CCIP, CCNA, CCNP, CCSP, CCVP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IOS, Cisco Press, Cisco Systems, Cisco Systems Capital, the Cisco Systems logo, Cisco Unity, Collaboration Without Limitation, EtherFast, EtherSwitch, Event Center, Fast Step, Follow Me Browsing, FormShare, GigaDrive, HomeLink, Internet Quotient, IOS, iPhone, iQuick Study, IronPort, the IronPort logo, LightStream, Linksys, MediaTone, MeetingPlace, MeetingPlace Chime Sound, MGX, Networkers, Networking Academy, Network Registrar, PCNow, PIX, PowerPanels, ProConnect, ScriptShare, SenderBase, SMARTnet, Spectrum Expert, StackWise, The Fastest Way to Increase Your Internet Quotient, TransPath, WebEx, and the WebEx logo are registered trademarks of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries.

All other trademarks mentioned in this document or website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0903R)

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, and figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

© 2006-2009 Cisco Systems, Inc. All rights reserved.

Feature Information for Per-VRF Assignment of BGP Router ID



# **BGP Next Hop Propagation**

First Published: 2005 Last Updated: May 4, 2009

The BGP Next Hop Propagation feature provides additional flexibility when designing and migrating networks. The BGP Next Hop Propagation feature allows a route reflector to modify the next hop attribute for a reflected route and allows Border Gateway Protocol (BGP) to send an update to an external BGP (eBGP) multihop peer with the next hop attribute unchanged.

## **Finding Feature Information**

For the latest feature information and caveats, see the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the "Feature Information for BGP Next Hop Propagation" section on page 11.

Use Cisco Feature Navigator to find information about platform support and Cisco IOS XE software image support. To access Cisco Feature Navigator, go to <a href="http://www.cisco.com/go/cfn">http://www.cisco.com/go/cfn</a>. An account on Cisco.com is not required.

#### **Contents**

- Prerequisites for BGP Next Hop Propagation, page 2
- Restrictions for BGP Next Hop Propagation, page 2
- Information About Next Hop Propagation, page 2
- How to Configure BGP Next Hop Propagation, page 3
- Configuration Examples for BGP Next Hop Propagation, page 8
- Additional References, page 9
- Feature Information for BGP Next Hop Propagation, page 11



## **Prerequisites for BGP Next Hop Propagation**

• BGP peering has been established, and the next hop is accessible.

## **Restrictions for BGP Next Hop Propagation**

 BGP Next Hop Propagation can be configured only between multihop eBGP peers. The follow error message will be displayed if you attempt to configure this feature for a directly connect neighbor:

**%BGP:** Can propagate the nexthop only to multi-hop EBGP neighbor

• Do not use the **neighbor next-hop-self** command to modify the next hop attribute for a route reflector when this feature is enabled for a route reflector client. Using the **neighbor next-hop-self** command on the route reflector will modify next hop attributes only for routes that are learned from eBGP peers and not the intended routes that are being reflected from the route reflector clients. To modify the next hop attribute when reflecting a route, use an outbound route map.

# **Information About Next Hop Propagation**

This section contains the following concepts:

- BGP Next Hop Propagation Overview, page 2
- Benefits of BGP Next Hop Propagation, page 2

## **BGP Next Hop Propagation Overview**

The BGP Next Hop Propagation feature provides additional flexibility when designing and migrating networks. The BGP Next Hop Propagation feature allows a route reflector to modify the next hop attribute for a reflected route and allows BGP to send an update to an eBGP multihop peer with the next hop attribute unchanged.



Incorrectly setting BGP attributes for a route reflector can cause inconsistent routing, routing loops, or a loss of connectivity. Setting BGP attributes for a route reflector should be attempted only by an experienced network operator.

The configuration of this feature in conjunction with the iBGP Multipath Load Sharing feature allows you to use an outbound route map to include BGP route reflectors in the forwarding path.

## **Benefits of BGP Next Hop Propagation**

The BGP Next Hop Propagation feature allows you to perform the following tasks:

- Bring the route reflector into the forwarding path, which can be used with the iBGP Multipath Load Sharing feature to configure load balancing.
- Configure interprovider Multiprotocol Label Switching (MPLS) Virtual Private Networks (VPNs) by not modifying the next hop attribute when advertising routes to an eBGP peer.

• Turn off the next hop calculation for an eBGP peer. This feature is useful for configuring the end-to-end connection of a label-switched path.

# **How to Configure BGP Next Hop Propagation**

The first two tasks in this section are required, the third task is optional.

- Configuring the Route Reflector, page 3 (required)
- Configuring the Route Reflector Client, page 5 (required)
- Verifying BGP Next Hop Propagation, page 7 (optional)

## **Configuring the Route Reflector**

In this section, the following tasks are completed:

- A route map is created to set the next hop that will be advertised to the router reflector client. The route map is applied only to outbound routes.
- eBGP peering is configured with the route reflector client.

#### **Restrictions**

Do not use the **neighbor next-hop-self** command to modify the next hop attribute for a route reflector when this feature is enabled for a route reflector client.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- **3. route-map** *map-tag* [**permit** | **deny**] [*sequence-number*]
- 4. set ip next-hop ip-address [peer-address]
- 5. exit
- **6. router bgp** *as-number*
- 7. address-family ipv4 [mdt | multicast | tunnel | unicast [vrf vrf-name] | vrf vrf-name]
- 8. neighbor ip-address activate
- 9. neighbor ip-address ebgp-multihop ttl
- 10. neighbor ip-address route-reflector-client
- 11. **neighbor** *ip-address* **route-map** *map-tag* **in** | **out**
- 12. end

#### **DETAILED STEPS**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		Enter your password if prompted.
	Example:	
	Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	route-map map-tag [permit   deny]	Enter route map configuration mode to create or configure
Otop 0	[sequence-number]	a route map.
		• The route map is create to set the next hop for the route
	Example:	reflector client.
Cton 4	Router(config)# route-map NEXTHOP	C 'C' (1 (1
Step 4	set ip next-hop ip-address [peer-address]	Specifies the next hop.
	Evample	
	<pre>Example: Router(config-route-map)# set ip next-hop</pre>	
	172.16.0.1	
Step 5	exit	Exits route-map configuration mode, and enters global
		configuration mode.
	Example:	
C4 C	Router(config-route-map)# exit	E de la companya de l
Step 6	router bgp as-number	Enters router configuration mode, and creates a BGP routing process.
	Example:	
	Router(config)# router bgp 65535	
Step 7	address-family ipv4 [mdt   multicast   tunnel	Enters address family configuration mode to configure BGP
	<pre>unicast [vrf vrf-name]   vrf vrf-name]</pre>	peers to accept address family specific configurations.
	Example:	
Step 8	Router(config-router-af)# address-family ipv4  neighbor ip-address activate	Enchlos the archange of information with the address
sieh o	neighbor ip-address activate	Enables the exchange of information with the address family peer.
	Example:	
	Router(config-router-af)# neighbor 10.0.0.100	
	activate	
Step 9	neighbor ip-address ebgp-multihop ttl	Configures the local router to accept and initiate
		connections to external peers that reside on networks that are not directly connected.
	Example:	are not directly connected.
	Router(config-router-af)# neighbor 10.0.0.100 ebgp-multihop 255	
	<u> </u>	

	Command or Action	Purpose
Step 10	neighbor ip-address route-reflector-client	Configures the local router as a BGP route reflector, and configures the specified neighbor as a route-reflector client.
	<pre>Example: Router(config-router-af)# neighbor 10.0.0.100 route-reflector-client</pre>	
Step 11	neighbor ip-address route-map map-name out	Applies the route map to outgoing routes.
	Example:	
	Router(config-router-af)# neighbor 10.0.0.100 route-map NEXTHOP out	
Step 12	end	Exits address family configuration mode, and enters privileged EXEC mode.
	<pre>Example: Router(config-router-af)# end</pre>	

#### **Examples**

The following example, starting in global configuration mode, configures the local router as a route reflector and configures the 10.0.0.100 multihop peer as a route reflector client. A route map is created to set the advertised next hop to 172.16.0.1.

```
route-map NEXTHOP
set ip next-hop 172.16.0.1
exit
router bgp 65535
address-family ipv4
neighbor 10.0.0.100 activate
neighbor 10.0.0.100 ebgp-multihop 255
neighbor 10.0.0.100 route-reflector-client
neighbor 10.0.0.100 route-map NEXTHOP out
```

#### What to Do Next

To complete this configuration, the **neighbor next-hop-unchanged** command is configured on the route reflector client. Proceed to the next section to see more information.

### **Configuring the Route Reflector Client**

In this section, the following tasks are completed:

- eBGP peering is configured with the route reflector.
- The route-reflector client is configured to propagate the next hop unchanged.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. router bgp as-number

- 4. address-family ipv4 [mdt | multicast | tunnel | unicast [vrf vrf-name] | vrf vrf-name]
- 5. neighbor ip-address activate
- 6. neighbor ip-address ebgp-multihop ttl
- 7. neighbor ip-address next-hop-unchanged
- 8. end

#### **DETAILED STEPS**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		• Enter your password if prompted.
	Example: Router> enable	
Step 2	configure terminal	Enters global configuration mode.
oteh 2	Configure Cerminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	router bgp as-number	Enters router configuration mode, and creates a BGP routing process.
	<pre>Example: Router(config)# router bgp 65412</pre>	
Step 4	<pre>address-family ipv4 [mdt   multicast   tunnel   unicast [vrf vrf-name]   vrf vrf-name]</pre>	Enters address family configuration mode to configure BGP peers to accept address family specific configurations.
	<pre>Example: Router(config-router-af)# address-family ipv4</pre>	
Step 5	neighbor ip-address activate	Enables the exchange of information with the address family peer.
	<pre>Example: Router(config-router-af)# neighbor 192.168.0.1 activate</pre>	
Step 6	neighbor ip-address ebgp-multihop ttl	Configures the local router to accept and initiate connections to external peers that reside on networks that
	<pre>Example: Router(config-router-af)# neighbor 192.168.0.1 ebgp-multihop 255</pre>	are not directly connected.
Step 7	neighbor ip-address next-hop-unchanged	Configures the router to send BGP updates to BGP peers without modifying the next hop attribute.
	<pre>Example: Router(config-router-af)# neighbor 192.168.0.1 next-hop-unchanged</pre>	
Step 8	end	Exits address family configuration mode, and enters privileged EXEC mode.
	<pre>Example: Router(config-router-af)# end</pre>	

#### **Examples**

The following example, starting in global configuration mode, configures the local router (route-reflector client) to establish peering with the route reflector and to propagate the next hop unchanged:

```
router bgp 65412
address-family ipv4
neighbor 192.168.0.1 activate
neighbor 192.168.0.1 ebgp-multihop 255
neighbor 192.168.0.1 next-hop-unchanged
end
```

#### What to Do Next

Proceed to the next section to see commands that can be used to verify the configuration of the BGP Next Hop Propagation feature.

## **Verifying BGP Next Hop Propagation**

The configuration of the BGP Next Hop Propagation feature can be verified with the **show ip bgp neighbors** command.

#### **SUMMARY STEPS**

- 1. enable
- 2. show ip bgp neighbors [neighbor-address] [received-routes | routes | advertised-routes | {paths regexp} | dampened-routes | received prefix-filter]]
- **3. show ip bgp** [network] [network-mask] [**longer-prefixes**] [**prefix-list** prefix-list-name | **route-map** route-map-name] [**shorter prefixes** mask-length]

#### **DETAILED STEPS**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		Enter your password if prompted.
	Example:	
	Router> enable	
Step 2	<pre>show ip bgp neighbors [neighbor-address] [received-routes   routes   advertised-routes   {paths regexp}   dampened-routes   received prefix-filter]]</pre>	Displays information about the TCP and BGP connections to neighbors. The output will display the status of the BGP Next Hop Propagation feature.
	Example: Router# show ip bgp neighbors	
Step 3	<pre>show ip bgp [network] [network-mask] [longer-prefixes] [prefix-list prefix-list-name   route-map route-map-name] [shorter prefixes mask-length]</pre>	Displays entries in the BGP routing table. The displayed output will indicate if the <b>neighbor next-hop-unchanged</b> command has been configured for the selected address.
	Example:	
	Router# show ip bgp	

# **Configuration Examples for BGP Next Hop Propagation**

The following examples show how to configure this feature:

- Router Reflector: Example, page 8
- Router Reflector Client: Example, page 9

## **Router Reflector: Example**

The following example, starting in global configuration mode, configures the local router as a route reflector and configures the 10.0.0.100 multihop peer as a route reflector client. A route map is created to set the advertised next hop to 172.16.0.1.

```
route-map NEXTHOP
set ip next-hop 172.16.0.1
exit
router bgp 65535
address-family ipv4
neighbor 10.0.0.100 activate
neighbor 10.0.0.100 ebgp-multihop 255
neighbor 10.0.0.100 route-reflector-client
neighbor 10.0.0.100 route-map NEXTHOP out
end
```

# **Router Reflector Client: Example**

The following example, starting in global configuration mode, configures the local router (route-reflector client) to establish peering with the route reflector and to propagate the next hop unchanged:

```
router bgp 65412
address-family ipv4
neighbor 192.168.0.1 activate
neighbor 192.168.0.1 ebgp-multihop 255
neighbor 192.168.0.1 next-hop-unchanged
end
```

# **Additional References**

The following sections provide references related to the BGP Next Hop Propagation feature.

#### **Related Documents**

Related Topic	Document Title
BGP commands and configuration tasks—The BGP Next Hop Propagation feature is an extension of the BGP routing protocol. Information is included about configuring BGP, route reflectors, route summarization, and filtering.	Cisco IOS IP Routing: BGP Command Reference
iBGP multipath loadsharing—For internal BGP (iBGP) multipath load-sharing configuration and command reference information.	iBGP Multipath Load Sharing
Cisco IOS master command list, all releases	Cisco IOS Master Command List, All Releases

### **Standards**

Standards	Title
No new or modified standards are supported by this feature, and support for existing standards has not been modified by this feature.	

#### **MIBs**

MIBs	MIBs Link
No new or modified MIBs are supported by this feature, and support for existing MIBs has not been modified by this feature.	To locate and download MIBs for selected platforms, Cisco IOS XE software releases, and feature sets, use Cisco MIB Locator found at the following URL:
	http://www.cisco.com/go/mibs

# **RFCs**

RFCs	Title
No new or modified RFCs are supported by this feature, and support for existing standards has not been modified by this feature.	

# **Technical Assistance**

Description	Link
The Cisco Support website provides extensive online resources, including documentation and tools for troubleshooting and resolving technical issues with Cisco products and technologies.	http://www.cisco.com/techsupport
To receive security and technical information about your products, you can subscribe to various services, such as the Product Alert Tool (accessed from Field Notices), the Cisco Technical Services Newsletter, and Really Simple Syndication (RSS) Feeds.	
Access to most tools on the Cisco Support website requires a Cisco.com user ID and password.	

# Feature Information for BGP Next Hop Propagation

Table 1 lists the features in this module and provides links to specific configuration information.

Use Cisco Feature Navigator to find information about platform support and software image support. Cisco Feature Navigator enables you to determine which Cisco IOS XE software images support a specific software release, feature set, or platform. To access Cisco Feature Navigator, go to <a href="http://www.cisco.com/go/cfn">http://www.cisco.com/go/cfn</a>. An account on Cisco.com is not required.



Table 1 lists only the Cisco IOS XE software release that introduced support for a given feature in a given Cisco IOS XE software release train. Unless noted otherwise, subsequent releases of that Cisco IOS XE software release train also support that feature.

Table 1 Feature Information for BGP Next Hop Propagation

Feature Name	Releases	Feature Information
1 1 8		This feature was introduced on the Cisco ASR 1000 Series Aggregation Services Routers.

CCDE, CCSI, CCENT, Cisco Eos, Cisco HealthPresence, the Cisco logo, Cisco Lumin, Cisco Nexus, Cisco Nurse Connect, Cisco Stackpower, Cisco StadiumVision, Cisco TelePresence, Cisco WebEx, DCE, and Welcome to the Human Network are trademarks; Changing the Way We Work, Live, Play, and Learn and Cisco Store are service marks; and Access Registrar, Aironet, AsyncOS, Bringing the Meeting To You, Catalyst, CCDA, CCDP, CCIE, CCIP, CCNA, CCNP, CCSP, CCVP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IOS, Cisco Press, Cisco Systems, Cisco Systems Capital, the Cisco Systems logo, Cisco Unity, Collaboration Without Limitation, EtherFast, EtherSwitch, Event Center, Fast Step, Follow Me Browsing, FormShare, GigaDrive, HomeLink, Internet Quotient, IOS, iPhone, iQuick Study, IronPort, the IronPort logo, LightStream, Linksys, MediaTone, MeetingPlace, MeetingPlace Chime Sound, MGX, Networkers, Networking Academy, Network Registrar, PCNow, PIX, PowerPanels, ProConnect, ScriptShare, SenderBase, SMARTnet, Spectrum Expert, StackWise, The Fastest Way to Increase Your Internet Quotient, TransPath, WebEx, and the WebEx logo are registered trademarks of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries

All other trademarks mentioned in this document or website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0903R)

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, and figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

© 2005–2009 Cisco Systems, Inc. All rights reserved.

Feature Information for BGP Next Hop Propagation



# **BGP Support for the L2VPN Address Family**

First Published: February 23, 2007 Last Updated: February 26, 2010

BGP support for the L2VPN address family introduces a BGP-based autodiscovery mechanism to distribute Layer 2 Virtual Private Network (L2VPN) endpoint provisioning information. BGP uses a separate L2VPN Routing Information Base (RIB) to store endpoint provisioning information, which is updated each time any Layer 2 virtual forwarding instance (VFI) is configured. When BGP distributes the endpoint provisioning information in an update message to all its BGP neighbors, the endpoint information is used to set up a pseudowire mesh to support L2VPN-based services.

# **Finding Feature Information**

For the latest feature information and caveats, see the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the "Feature Information for BGP Support for the L2VPN Address Family" section on page 14.

Use Cisco Feature Navigator to find information about platform support and Cisco IOS XE software image support. To access Cisco Feature Navigator, go to <a href="http://www.cisco.com/go/cfn">http://www.cisco.com/go/cfn</a>. An account on Cisco.com is not required.

#### **Contents**

- Prerequisites for BGP Support for the L2VPN Address Family, page 2
- Restrictions for BGP Support for the L2VPN Address Family, page 2
- Information About BGP Support for the L2VPN Address Family, page 2
- How to Configure BGP Support for the L2VPN Address Family, page 3
- Configuration Examples for BGP Support for the L2VPN Address Family, page 9
- Where to Go Next, page 12
- Additional References, page 12



Feature Information for BGP Support for the L2VPN Address Family, page 14

# Prerequisites for BGP Support for the L2VPN Address Family

The BGP Support for L2VPN Address Family feature assumes prior knowledge of Virtual Private Network (VPN), Virtual Private LAN Service (VPLS), and Multiprotocol Layer Switching (MPLS) technologies.

# Restrictions for BGP Support for the L2VPN Address Family

- For route maps used within BGP, all commands related to prefix processing, tag processing, and automated tag processing are ignored when used under L2VPN address family configuration. All other route map commands are supported.
- BGP multipaths and confederations are not supported under the L2VPN address family.

# Information About BGP Support for the L2VPN Address Family

To configure BGP support for the L2VPN address family, you should understand the following concept.

• L2VPN Address Family, page 2

## L2VPN Address Family

In Cisco IOS XE Release 2.6 and later releases, support for the L2VPN address family is introduced. L2VPN is defined as a secure network that operates inside an unsecured network by using an encryption technology such as IP security (IPsec) or Generic Routing Encapsulation (GRE). The L2VPN address family is configured under BGP routing configuration mode, and within the L2VPN address family the VPLS subsequent address family identifier (SAFI) is supported.

BGP support for the L2VPN address family introduces a BGP-based autodiscovery mechanism to distribute L2VPN endpoint provisioning information. BGP uses a separate L2VPN Routing Information Base (RIB) to store endpoint provisioning information, which is updated each time any Layer 2 VFI is configured. Prefix and path information is stored in the L2VPN database, allowing BGP to make best-path decisions. When BGP distributes the endpoint provisioning information in an update message to all its BGP neighbors, the endpoint information is used to set up a pseudowire mesh to support L2VPN-based services.

The BGP autodiscovery mechanism facilitates the setting up of L2VPN services, which are an integral part of the Cisco IOS Virtual Private LAN Service (VPLS) feature. VPLS enables flexibility in deploying services by connecting geographically dispersed sites as a large LAN over high-speed Ethernet in a robust and scalable IP MPLS network. For more details about VPLS, see the VPLS Autodiscovery: BGP Based feature.

Under L2VPN address family, the following BGP command-line interface (CLI) commands are supported:

- bgp nexthop
- bgp scan-time

- neighbor activate
- · neighbor advertisement-interval
- neighbor allowas-in
- neighbor capability
- neighbor inherit
- neighbor maximum-prefix
- neighbor next-hop-self
- · neighbor next-hop-unchanged
- neighbor peer-group
- neighbor remove-private-as
- neighbor route-map
- neighbor route-reflector-client
- neighbor send-community
- neighbor soft-reconfiguration
- neighbor soo
- neighbor weight



For route reflectors using L2VPNs, the **neighbor next-hop-self** and **neighbor next-hop-unchanged** commands are not supported.

For route maps used within BGP, all commands related to prefix processing, tag processing, and automated tag processing are ignored when used under L2VPN address family configuration. All other route map commands are supported.

BGP multipaths and confederations are not supported under the L2VPN address family.

# How to Configure BGP Support for the L2VPN Address Family

This section contains the following task:

• Configuring VPLS Autodiscovery Using BGP and the L2VPN Address Family, page 3 (required)

## Configuring VPLS Autodiscovery Using BGP and the L2VPN Address Family

Perform this task to implement VPLS autodiscovery of each provider edge (PE) router that is a member of a specific VPLS. In Cisco IOS XE Release 2.6, the BGP L2VPN address family was introduced with a separate L2VPN RIB that contains endpoint provisioning information. BGP learns the endpoint provisioning information from the L2VPN database, which is updated each time any Layer 2 (L2) virtual forwarding instance (VFI) is configured. When BGP distributes the endpoint provisioning information in an update message to all its BGP neighbors, the endpoint information is used to set up a pseudowire mesh to support L2VPN-based services.

BGP-based VPLS autodiscovery eliminates the need to manually provision a VPLS neighbor. After a PE router configures itself to be a member of a particular VPLS, information needed to set up connections to remote routers in the same VPLS is distributed by a discovery process. When the discovery process is complete, each member of the VPLS will have the information needed to set up VPLS pseudowires to form the full mesh of pseudowires needed for the VPLS.

This task is configured at router N-PE3 in Figure 1 and must be repeated at routers N-PE1 and N-PE2 with the appropriate changes such as different IP addresses. For a full configuration of these routers, see the "Configuring VPLS Autodiscovery Using BGP and the L2VPN Address Family: Example" section on page 9.

N-PE - Network-facing PE router

U-PE - User-facing PE router

U-PE1
192.168.1.1

N-PE1
10.10.10.1

N-PE2
192.168.2.2

AS 65000

Figure 1 Network Diagram for BGP Autodiscovery Using the L2VPN Address Family

In this task, the PE router N-PE3 in Figure 1 is configured with a Layer 2 router ID, a VPN ID, a VPLS ID, and is enabled to automatically discover other PE routers that are part of the same VPLS domain. A BGP session is created to activate BGP neighbors under the L2VPN address family. Finally, two optional **show** commands are entered to verify the steps in the task.

#### **VPLS ID**

A VPLS ID is a BGP extended community value that identifies the VPLS domain. Manual configuration of this ID is optional because a default VPLS ID is generated using the BGP autonomous system number and the configured VPN ID. A VPLS ID can be composed in one of two ways: with an autonomous system number and an arbitrary number or with an IP address and an arbitrary number.

You can enter a VPLS ID in either of these formats:

- Enter a 16-bit autonomous system number, a colon, and a 32-bit number. For example: 45000:3
- Enter a 32-bit IP address, a colon, and a 16-bit number. For example: 192.168.10.15:1

#### **Prerequisites**

This task assumes that MPLS is configured with VPLS options. For more details, see the VPLS Autodiscovery: BGP Based feature.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. 12 router-id ip-address
- 4. 12 vfi vfi-name autodiscovery
- 5. **vpn id** *vpn-id*
- 6. vpls-id vpls-id
- 7. exit
- 8. Repeat Step 4 through Step 6 to configure other L2 VFIs and associated VPN and VPLS IDs.
- 9. router bgp autonomous-system-number
- 10. no bgp default ipv4-unicast
- 11. bgp log-neighbor-changes
- 12. bgp update-delay seconds
- **13. neighbor** {*ip-address* | *peer-group-name*} **remote-as** *autonomous-system-number*
- **14. neighbor** {ip-address | peer-group-name} **update-source** interface-type interface-number
- 15. Repeat Step 13 and Step 14 to configure other BGP neighbors.
- 16. address-family l2vpn [vpls]
- 17. neighbor ip-address activate
- 18. neighbor {ip-address | peer-group-name} send-community [both | standard | extended]
- 19. Repeat Step 17 and Step 18 to activate other BGP neighbors under L2VPN address family.
- **20**. end
- 21. show vfi
- 22. show ip bgp l2vpn vpls {all | rd vpn-rd}

#### **DETAILED STEPS**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		• Enter your password if prompted.
	Example: Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	12 router-id ip-address	Specifies a router ID (in IP address format) for the PE router to use with VPLS autodiscovery pseudowires.
	<pre>Example: Router(config)# 12 router-id 10.1.1.3</pre>	• In this example, the L2 router ID is defined as 10.1.1.3.

	Command or Action	Purpose
Step 4	12 vfi vfi-name autodiscovery  Example: Router(config)# 12 vfi customerA autodiscovery	Creates an L2 VFI, enables the VPLS PE router to automatically discover other PE routers that are part of the same VPLS domain, and enters L2 VFI autodiscovery configuration mode.
		• In this example, the L2 VFI named customerA is created.
Step 5	vpn id vpn-id	Specifies a VPN ID.
	<pre>Example: Router(config-vfi)# vpn id 100</pre>	<ul> <li>Use the same VPN ID for the PE routers that belong to the same VPN. Make sure that the VPN ID is unique for each VPN in the service provider network.</li> <li>Use the <i>vpn-id</i> argument to specify a number in the</li> </ul>
		range from 1 to 4294967295.
		• In this example, a VPN ID of 100 is specified.
Step 6	vpls-id vpls-id	(Optional) Specifies a VPLS ID.
	<pre>Example: Router(config-vfi)# vpls-id 65000:100</pre>	• The VPLS ID is an identifier that is used to identify the VPLS domain. This command is optional because a default VPLS ID is automatically generated using the BGP autonomous system number and the VPN ID configured for the VFI. Only one VPLS ID can be configured per VFI, and the same VPLS ID cannot be configured in multiple VFIs on the same router.
		• In this example, a VPLS ID of 65000:100 is specified.
Step 7	exit	Exits L2 VFI autodiscovery configuration mode and returns to global configuration mode.
	<pre>Example: Router(config-vfi)# exit</pre>	
Step 8	Repeat Step 4 through Step 6 to configure other L2 VFIs and associated VPN and VPLS IDs.	
Step 9	router bgp autonomous-system-number	Enters router configuration mode for the specified routing process.
	<pre>Example: Router(config)# router bgp 65000</pre>	
Step 10	no bgp default ipv4-unicast	Disables the IPv4 unicast address family for the BGP routing process.
	<pre>Example: Router(config-router)# no bgp default ipv4-unicast</pre>	Note Routing information for the IPv4 unicast address family is advertised by default for each BGP routing session configured with the neighbor remote-as router configuration command unless you configure the no bgp default ipv4-unicast router configuration command before configuring the neighbor remote-as command. Existing neighbor configurations are not affected.

	Command or Action	Purpose
Step 11	bgp log-neighbor-changes	Enables logging of BGP neighbor resets.
	<pre>Example: Router(config-router)# bgp log-neighbor-changes</pre>	
Step 12	bgp update-delay seconds	Sets the maximum initial delay period before a BGP-speaking networking device sends its first updates.
	<pre>Example: Router(config-router)# bgp update-delay 1</pre>	• Use the <i>seconds</i> argument to set the delay period.
Step 13	<pre>neighbor {ip-address   peer-group-name} remote-as autonomous-system-number</pre>	Adds the IP address or peer group name of the neighbor in the specified autonomous system to the IPv4 multiprotocol BGP neighbor table of the local router.
	<pre>Example: Router(config-router)# neighbor 10.10.10.1 remote-as 65000</pre>	• If the <i>autonomous-system-number</i> argument matches the autonomous system number specified in the <b>router bgp</b> command, the neighbor is an internal neighbor.
		• If the <i>autonomous-system-number</i> argument does not match the autonomous system number specified in the <b>router bgp</b> command, the neighbor is an external neighbor.
		• In this example, the neighbor at 10.10.10.1 is an internal BGP neighbor.
Step 14	neighbor {ip-address   peer-group-name} update-source interface-type interface-number	(Optional) Configures a router to select a specific source or interface to receive routing table updates.
	<pre>Example: Router(config-router)# neighbor 10.10.10.1 update-source loopback 1</pre>	• This example uses a loopback interface. The advantage to this configuration is that the loopback interface is not as susceptible to the effects of a flapping interface.
Step 15	Repeat Step 13 and Step 14 to configure other BGP neighbors.	_
Step 16	address-family 12vpn [vpls]	Specifies the L2VPN address family and enters address family configuration mode.
	<pre>Example: Router(config-router)# address-family 12vpn vpls</pre>	• The optional <b>vpls</b> keyword specifies that VPLS endpoint provisioning information is to be distributed to BGP peers.
		• In this example, an L2VPN VPLS address family session is created.
Step 17	neighbor ip-address activate	Enables the neighbor to exchange information for the L2VPN VPLS address family with the local router.
	<pre>Example: Router(config-router-af)# neighbor 10.10.10.1 activate</pre>	Note If you have configured a BGP peer group as a neighbor, you do not use this step. BGP peer groups are activated when a BGP parameter is configured. For example, the neighbor send-community command in the next step will automatically activate a peer group.

	Command or Action	Purpose
Step 18	neighbor {ip-address   peer-group-name} send-community [both   standard   extended]	Specifies that a communities attribute should be sent to a BGP neighbor.
	<pre>Example: Router(config-router-af)# neighbor 10.10.10.1 send-community extended</pre>	• In this example, an extended communities attribute is sent to the neighbor at 10.10.10.1.
Step 19	Repeat Step 17 and Step 18 to activate other BGP neighbors under L2VPN address family.	
Step 20	end	Exits address family configuration mode and returns to privileged EXEC mode.
	<pre>Example: Router(config-router-af)# end</pre>	
Step 21	show vfi	(Optional) Displays information about the configured VFI instances.
	Example: Router# show vfi	
Step 22	show ip bgp 12vpn vpls {all   rd vpn-rd}	(Optional) Displays information about the L2 VPN VPLS address family.
	Example: Router# show ip bgp l2vpn vpls all	

## **Examples**

The following is sample output from the **show vfi** command that shows two VFIs, CustomerA and CustomerB, with their associated VPN and VPLS IDs:

```
Router# show vfi
Legend: RT=Route-target, S=Split-horizon, Y=Yes, N=No
VFI name: customerA, state: down, type: multipoint
 VPN ID: 100, VPLS-ID: 65000:100
 RD: 65000:100, RT: 65000:100
 Local attachment circuits:
 Neighbors connected via pseudowires:
 Peer Address VC ID
                           Discovered Router ID
                                                      S
 10.10.10.1
                    100
                              10.10.10.99
VFI name: customerB, state: down, type: multipoint
 VPN ID: 200, VPLS-ID: 65000:200
 RD: 65000:200, RT: 65000:200
 Local attachment circuits:
 Neighbors connected via pseudowires:
 Peer Address VC ID
                           Discovered Router ID
                                                      S
 10.10.10.3
                    200
                                       10.10.10.98
```

The following is sample output from the **show ip bgp l2vpn vpls all** command that shows two VFIs identified by their VPN route distinguisher:

```
Router# show ip bgp 12vpn vpls all

BGP table version is 5, local router ID is 10.10.10.2

Status codes: s suppressed, d damped, h history, * valid, > best, i - internal, r RIB-failure, S Stale
```

```
Origin codes: i - IGP, e - EGP, ? - incomplete
                Next Hop
                                     Metric LocPrf Weight Path
Route Distinguisher: 65000:100
*> 65000:100:10.10.10.1/96
                    0.0.0.0
                                                        32768 ?
*>i65000:100:192.168.1.1/96
                    10.10.10.2
                                              0
                                                   100
                                                            0 ?
Route Distinguisher: 65000:200
*> 65000:200:10.10.10.3/96
                    0.0.0.0
                                                        32768 ?
*>i65000:200:192.168.2.2/96
                    10.10.10.2
                                                   100
                                                            0 ?
```

#### What to Do Next

To configure more VPLS features, see the main VPLS documentation in the VPLS Autodiscovery: BGP Based feature.

# Configuration Examples for BGP Support for the L2VPN Address Family

This section contains the following configuration example:

• Configuring VPLS Autodiscovery Using BGP and the L2VPN Address Family: Example, page 9

# Configuring VPLS Autodiscovery Using BGP and the L2VPN Address Family: Example

In this configuration example, all the routers in autonomous system 65000 in Figure 2 are configured to provide BGP support for the L2VPN address family. VPLS autodiscovery is enabled and L2 VFI and VPN IDs are configured. BGP neighbors are configured and activated under L2VPN address family to ensure that the VPLS endpoint provisioning information is saved to a separate L2VPN RIB and then distributed to the other BGP peers in BGP update messages. When the endpoint information is received by the BGP peers, a pseudowire mesh is set up to support L2VPN-based services.

N-PE = Network-facing PE router
U-PE = User-facing PE router

U-PE1
192.168.1.1

N-PE3
10.10.10.10.2

U-PE2
192.168.2.2

N-PE2
10.10.10.3

Figure 2 Network Diagram for VPLS Autodiscovery Using BGP and the L2VPN Address Family

#### **Router N-PE1**

```
ip subnet-zero
ip cef
no ip dhcp use vrf connected
no mpls traffic-eng auto-bw timers frequency 0
mpls label range 1000 2000
mpls label protocol ldp
12 router-id 10.1.1.1
12 vfi auto autodiscovery
vpn id 100
pseudowire-class mpls
encapsulation mpls
!
interface Loopback1
ip address 10.1.1.1 255.255.255.255
interface GigabitEthernet0/0/1
description Backbone interface
ip address 10.0.0.1 255.255.255.0
mpls ip
router ospf 1
log-adjacency-changes
network 10.10.1.0 0.0.0.255 area 0
network 192.168.0.0 0.0.0.255 area 0
router bgp 65000
no bgp default ipv4-unicast
bgp log-neighbor-changes
bgp update-delay 1
neighbor 10.10.10.2 remote-as 65000
neighbor 10.10.10.2 update-source Loopback 1
neighbor 10.10.10.3 remote-as 65000
neighbor 10.10.10.3 update-source Loopback 1
address-family 12vpn vpls
neighbor 10.10.10.2 activate
neighbor 10.10.10.2 send-community extended
neighbor 10.10.10.3 activate
```

```
neighbor 10.10.10.3 send-community extended
exit-address-family
!
ip classless
```

#### **Router N-PE2**

```
ip subnet-zero
ip cef
no ip dhcp use vrf connected
no mpls traffic-eng auto-bw timers frequency 0
mpls label range 2000 3000
mpls label protocol ldp
12 router-id 10.1.1.2
12 vfi auto autodiscovery
vpn id 100
pseudowire-class mpls
encapsulation mpls
!
interface Loopback1
ip address 10.1.1.2 255.255.255.255
interface GigabitEthernet0/0/1
description Backbone interface
ip address 10.0.0.2 255.255.255.0
mpls ip
!
router ospf 1
log-adjacency-changes
network 10.10.1.0 0.0.0.255 area 0
network 192.168.0.0 0.0.0.255 area 0
router bgp 65000
no bgp default ipv4-unicast
bgp log-neighbor-changes
bgp update-delay 1
neighbor 10.10.10.1 remote-as 65000
neighbor 10.10.10.1 update-source Loopback1
neighbor 10.10.10.3 remote-as 65000
neighbor 10.10.10.3 update-source Loopback1
 address-family 12vpn vpls
neighbor 10.10.10.1 activate
neighbor 10.10.10.1 send-community extended
neighbor 10.10.10.3 activate
neighbor 10.10.10.3 send-community extended
exit-address-family
ip classless
```

#### **Router N-PE3**

```
ip subnet-zero
ip cef
no ip dhcp use vrf connected
!
no mpls traffic-eng auto-bw timers frequency 0
mpls label range 2000 3000
mpls label protocol ldp
12 router-id 10.1.1.3
12 vfi auto autodiscovery
  vpn id 100
```

```
pseudowire-class mpls
encapsulation mpls
interface Loopback1
ip address 10.1.1.3 255.255.255.255
interface GigabitEthernet0/0/1
description Backbone interface
ip address 10.0.0.3 255.255.255.0
mpls ip
router ospf 1
log-adjacency-changes
network 10.10.1.0 0.0.0.255 area 0
network 192.168.0.0 0.0.0.255 area 0
router bgp 65000
no bgp default ipv4-unicast
bgp log-neighbor-changes
bgp update-delay 1
neighbor 10.10.10.1 remote-as 65000
neighbor 10.10.10.1 update-source Loopback1
neighbor 10.10.10.2 remote-as 65000
neighbor 10.10.10.2 update-source Loopback1
address-family 12vpn vpls
neighbor 10.10.10.1 activate
neighbor 10.10.10.1 send-community extended
neighbor 10.10.10.2 activate
neighbor 10.10.10.2 send-community extended
exit-address-family
ip classless
```

# Where to Go Next

For more details about configuring VPLS autodiscovery, see the VPLS Autodiscovery: BGP Based feature.

## **Additional References**

The following sections provide references related to the BGP Support for the L2VPN Address Family feature.

#### **Related Documents**

Related Topic	Document Title
BGP commands: complete command syntax, command mode, defaults, command history, usage guidelines, and examples	Cisco IOS IP Routing: BGP Command Reference
BGP overview	"Cisco BGP Overview" module
Configuring basic BGP tasks	"Configuring a Basic BGP Network" module

# **Standards**

Standard	Title
No new or modified standards are supported by this feature, and support for existing standards has not been modified by this feature.	

## **MIBs**

MIB	MIBs Link
None.	To locate and download MIBs for selected platforms, Cisco IOS XE releases, and feature sets, use Cisco MIB Locator found at the following URL:
	http://www.cisco.com/go/mibs

# **RFCs**

RFC	Title
No new or modified RFCs are supported by this feature, and support for existing RFCs has not been modified by this feature.	

# **Technical Assistance**

Description	Link
The Cisco Support website provides extensive online resources, including documentation and tools for troubleshooting and resolving technical issues with Cisco products and technologies.	http://www.cisco.com/cisco/web/support/index
To receive security and technical information about your products, you can subscribe to various services, such as the Product Alert Tool (accessed from Field Notices), the Cisco Technical Services Newsletter, and Really Simple Syndication (RSS) Feeds.	
Access to most tools on the Cisco Support website requires a Cisco.com user ID and password.	

# Feature Information for BGP Support for the L2VPN Address Family

Table 1 lists the release history for this feature.

Use Cisco Feature Navigator to find information about platform support and software image support. Cisco Feature Navigator enables you to determine which Cisco IOS XE software images support a specific software release, feature set, or platform. To access Cisco Feature Navigator, go to <a href="http://www.cisco.com/go/cfn">http://www.cisco.com/go/cfn</a>. An account on Cisco.com is not required.



Table 1 lists only the Cisco IOS XE software release that introduced support for a given feature in a given Cisco IOS XE software release train. Unless noted otherwise, subsequent releases of that Cisco IOS XE software release train also support that feature.

Table 1 Feature Information for BGP Support for the L2VPN Address Family

Feature Name	Releases	Feature Information
BGP Support for the L2VPN Address Family	Cisco IOS XE Release 2.6	BGP support for the L2VPN address family introduces a BGP-based autodiscovery mechanism to distribute L2VPN endpoint provisioning information. BGP uses a separate L2VPN Routing Information Base (RIB) to store endpoint provisioning information, which is updated each time any Layer 2 VFI is configured. When BGP distributes the endpoint provisioning information in an update message to all its BGP neighbors, the endpoint information is used to set up a pseudowire mesh to support L2VPN-based services.  The following commands were introduced or modified by this feature: address-family l2vpn, clear ip bgp l2vpn, and show ip bgp l2vpn.

CCDE, CCENT, CCSI, Cisco Eos, Cisco Explorer, Cisco HealthPresence, Cisco IronPort, the Cisco logo, Cisco Nurse Connect, Cisco Pulse, Cisco SensorBase, Cisco StackPower, Cisco StadiumVision, Cisco TelePresence, Cisco TrustSec, Cisco Unified Computing System, Cisco WebEx, DCE, Flip Channels, Flip for Good, Flip Mino, Flipshare (Design), Flip Ultra, Flip Video, Flip Video (Design), Instant Broadband, and Welcome to the Human Network are trademarks; Changing the Way We Work, Live, Play, and Learn, Cisco Capital, Cisco Capital (Design), Cisco:Financed (Stylized), Cisco Store, Flip Gift Card, and One Million Acts of Green are service marks; and Access Registrar, Aironet, AllTouch, AsyncOS, Bringing the Meeting To You, Catalyst, CCDA, CCDP, CCIE, CCIP, CCNA, CCNP, CCSP, CCVP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IOS, Cisco Lumin, Cisco Nexus, Cisco Press, Cisco Systems, Cisco Systems Capital, the Cisco Systems logo, Cisco Unity, Collaboration Without Limitation, Continuum, EtherFast, EtherSwitch, Event Center, Explorer, Follow Me Browsing, GainMaker, iLYNX, IOS, iPhone, IronPort, the IronPort logo, Laser Link, LightStream, Linksys, MeetingPlace, MeetingPlace Chime Sound, MGX, Networkers, Networking Academy, PCNow, PIX, PowerKEY, PowerPanels, PowerTV, PowerTV (Design), PowerVu, Prisma, ProConnect, ROSA, SenderBase, SMARTnet, Spectrum Expert, StackWise, WebEx, and the WebEx logo are registered trademarks of Cisco and/or its affiliates in the United States and certain other countries.

All other trademarks mentioned in this document or website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1002R)

Any Internet Protocol (IP) addresses used in this document are not intended to be actual addresses. Any examples, command display output, and figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses in illustrative content is unintentional and coincidental.

© 2007-2010 Cisco Systems, Inc. All rights reserved.



# **BGP 4 MIB Support for Per-Peer Received Routes**

First Published: December 15, 2001 Last Updated: May 4, 2009

This document describes BGP 4 MIB support for per-peer received routes. This feature introduces a table in the CISCO-BGP4-MIB that provides the capability to query (by using Simple Network Management Protocol [SNMP] commands) for routes that are learned from individual Border Gateway Protocol (BGP) peers.

# **Finding Feature Information**

For the latest feature information and caveats, see the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the "Feature Information for BGP 4 MIB Support for Per-Peer Received Routes" section on page 8.

Use Cisco Feature Navigator to find information about platform support and Cisco IOS XE software image support. To access Cisco Feature Navigator, go to <a href="http://www.cisco.com/go/cfn">http://www.cisco.com/go/cfn</a>. An account on Cisco.com is not required.

#### **Contents**

- Restrictions, page 2
- Feature Overview, page 2
- Configuration Tasks, page 5
- Additional References, page 5
- Feature Information for BGP 4 MIB Support for Per-Peer Received Routes, page 8
- Glossary, page 9



## **Restrictions**

BGP 4 MIB support for per-peer received routes supports only routes that are contained in IPv4 AFIs and unicast SAFIs in the local BGP RIB table. The BGP 4 MIB support for per-peer received routes enhancement is supported only by BGP Version 4.

### **Feature Overview**

The BGP 4 MIB support for per-peer received routes feature introduces a table in the CISCO-BGP4-MIB that provides the capability to query (by using SNMP commands) for routes that are learned from individual BGP peers.

Before this new MIB table was introduced, a network operator could obtain the routes learned by a local BGP-speaking router by querying the local BGP speaker with an SNMP command (for example, the **snmpwalk** command). The network operator used the SNMP command to query the bgp4PathAttrTable of the CISCO-BGP4-MIB. The routes that were returned from a bgp4PathAttrTable query were indexed in the following order:

- Prefix
- · Prefix length
- · Peer address

Because the bgp4PathAttrTable indexes the prefixes first, obtaining routes learned from individual BGP peers will require the network operator to "walk through" the complete bgp4PathAttrTable and filter out routes from the interested peer. A BGP Routing Information Base (RIB) could contain 10,000 or more routes, which makes a manual "walk" operation impossible and automated walk operations very inefficient.

BGP 4 MIB Support for per-Peer Received Routes introduces a Cisco-specific enterprise extension to the CISCO-BGP4-MIB that defines a new table called the cbgpRouterTable. The cbgpRouterTable provides the same information as the bgp4PathAttrTable with the following two differences:

- Routes are indexed in the following order:
  - Peer address
  - Prefix
  - Prefix length

The search criteria for SNMP queries of local routes are improved because peer addresses are indexed before prefixes. A search for routes that are learned from individual peers is improved with this enhancement because peer addresses are indexed before prefixes. A network operator will no longer need to search through potentially thousands of routes to obtain the learned routes of a local BGP RIB table.

Support is added for multiprotocol BGP, Address Family Identifier (AFI), and Subsequent Address
Family Identifier (SAFI) information. This information is added in the form of indexes to the
cbgpRouterTable. The CISCO-BGP4-MIB can be queried for any combination of AFIs and SAFIs
that are supported by the local BGP speaker.



The MIB will be populated only if the router is configured to run a BGP process. The present implementation of BGP 4 MIB Support for Per-Peer Received Routes will show only routes contained in IPv4 AFI and unicast SAFI BGP local RIB tables. Support for showing routes contained in other local RIB tables will be added in the future.

### **BGP 4 Per-Peer Received Routes Table Elements and Objects**

The following sections describe new table elements, AFI and SAFI tables and objects, and network address prefixes in the Network Layer Reachability Information (NLRI) fields that have been introduced by the BGP 4 MIB Support for Per-Peer Received Routes enhancement.

#### **MIB Tables and Objects**

Table 1 describes the MIB indexes of the cbgpRouterTable.

For a complete description of the MIB, see the CISCO-BGP4-MIB file CISCO-BGP4-MIB.my, available through Cisco.com at the following URL:

http://www.cisco.com/public/sw-center/netmgmt/cmtk/mibs.shtml

Table 1 MIB Indexes of the cbgpRouterTable

MIB Indexes	Description
cbgpRouteAfi	Represents the AFI of the network layer protocol that is associated with the route.
cbgpRouteSafi	Represents the SAFI of the route. It gives additional information about the type of the route. The AFI and SAFI are used together to determine which local RIB (Loc-RIB) contains a particular route.
cbgpRoutePeerType	Represents the type of network layer address that is stored in the cbgpRoutePeer object.
cbgpRoutePeer	Represents the network layer address of the peer from which the route information has been learned.
cbgpRouteAddrPrefix	Represents the network address prefix that is carried in a BGP update message.
	See Table 2 for information about the types of network layer addresses that can be stored in specific types of AFI and SAFI objects.
cbgpRouteAddrPrefixLen	Represents the length in bits of the network address prefix in the NLRI field.
	See Table 3 for a description of the 13 possible entries.

#### **AFIs and SAFIs**

Table 2 lists the AFI and SAFI values that can be assigned to or held by the cbgpRouteAfi and cbgpRouteSafi indexes, respectively. Table 2 also displays the network address prefix type that can be held by specific combinations of AFIs and SAFIs. The type of network address prefix that can be carried in a BGP update message depends on the combination of AFIs and SAFIs.

Table 2 AFIs and SAFIs

AFI	SAFI	Туре
ipv4(1)	unicast(1)	IPv4 address
ipv4(1)	multicast(2)	IPv4 address
ipv4(1)	vpn(128)	VPN-IPv4 address
ipv6(2)	unicast(1)	IPv6 address



A VPN-IPv4 address is a 12-byte quantity that begins with an 8-byte Route Distinguisher (RD) and ends with a 4-byte IPv4 address. Any bits beyond the length specified by cbgpRouteAddrPrefixLen are represented as zeros.

#### **Network Address Prefix Descriptions for the NLRI Field**

Table 3 describes the length in bits of the network address prefix in the NLRI field of the cbgpRouteTable. Each entry in the table provides information about the route that is selected by any of the six indexes in Table 1.

Table 3 Network Address Prefix Descriptions for the NLRI Field

Table or Object (or Index)	Description
cbgpRouteOrigin	The ultimate origin of the route information.
cbgpRouteASPathSegment	The sequence of autonomous system path segments.
cbgpRouteNextHop	The network layer address of the autonomous system border router that traffic should pass through to get to the destination network.
cbgpRouteMedPresent	Indicates that the MULTI_EXIT_DISC attribute for the route is either present or absent.
cbgpRouteMultiExitDisc	Metric that is used to discriminate between multiple exit points to an adjacent autonomous system. The value of this object is irrelevant if the value of the cbgpRouteMedPresent object is "false(2)."
cbgpRouteLocalPrefPresent	Indicates that the LOCAL_PREF attribute for the route is either present or absent.
cbgpRouteLocalPref	Determines the degree of preference for an advertised route by an originating BGP speaker. The value of this object is irrelevant if the value of the cbgRouteLocalPrefPresent object is "false(2)."

Table 3 Network Address Prefix Descriptions for the NLRI Field (continued)

Table or Object (or Index)	Description
cbgpRouteAtomicAggregate	Determines if the system has selected a less specific route without selecting a more specific route.
cbgpRouteAggregatorAS	The autonomous system number of the last BGP speaker that performed route aggregation. A value of 0 indicates the absence of this attribute.
cbgpRouteAggregatorAddrType	Represents the type of network layer address that is stored in the cbgpRouteAggregatorAddr object.
cbgpRouteAggregatorAddr	The network layer address of the last BGP 4 speaker that performed route aggregation. A value of all zeros indicates the absence of this attribute.
cbgpRouteBest	An indication of whether this route was chosen as the best BGP 4 route.
cbgpRouteUnknownAttr	One or more path attributes not understood by the local BGP speaker. A size of 0 indicates that this attribute is absent.

#### **Benefits**

This feature provides the following benefits:

- Improved SNMP Query Capabilities, page 5
- Improved AFI and SAFI Support, page 5

#### **Improved SNMP Query Capabilities**

The search criteria for SNMP queries for routes that are advertised by individual peers are improved because the peer address is indexed before the prefix. A network operator will no longer need to search through potentially thousands of routes to obtain the learned routes of a local BGP RIB table.

#### Improved AFI and SAFI Support

Support is added for multiprotocol BGP. AFI and SAFI are added as indexes to the table. The CISCO-BGP4-MIB can be queried for any combination of AFIs and SAFIs that are supported by the local BGP speaker.

# **Configuration Tasks**

This feature requires no configuration.

# **Additional References**

The following sections provide references related to BGP 4 MIB Support for Per-Peer Received Routes.

# **Related Documents**

Related Topic	Document Title
Configuring MIBs for BGP	Configuring Advanced BGP Features
BGP commands	Cisco IOS IP Routing: BGP Command Reference
Configuring SNMP Support	Configuring SNMP Support
SNMP commands	Cisco IOS Network Management Command Reference
Cisco IOS master command list, all releases	Cisco IOS Master Command List, All Releases

# **Standards**

Standard	Title
None	_

# **MIBs**

MIB	MIBs Link
No new or modified MIBs are supported by this feature, and support for existing MIBs has not been modified by this feature.	To locate and download MIBs for selected platforms, Cisco IOS XE software releases, and feature sets, use Cisco MIB Locator found at the following URL:
	http://www.cisco.com/go/mibs

# **RFCs**

RFC	Title
RFC 1657	BGP-4 MIB
RFC 1771	A Border Gateway Protocol 4 (BGP-4)
RFC 2547	BGP/MPLS VPNs
RFC 2858	Multiprotocol Extensions for BGP-4

# **Technical Assistance**

Description	Link
The Cisco Support website provides extensive online resources, including documentation and tools for troubleshooting and resolving technical issues with Cisco products and technologies.	http://www.cisco.com/techsupport
To receive security and technical information about your products, you can subscribe to various services, such as the Product Alert Tool (accessed from Field Notices), the Cisco Technical Services Newsletter, and Really Simple Syndication (RSS) Feeds.	
Access to most tools on the Cisco Support website requires a Cisco.com user ID and password.	

# Feature Information for BGP 4 MIB Support for Per-Peer Received Routes

Table 4 lists the features in this module and provides links to specific configuration information.

Use Cisco Feature Navigator to find information about platform support and software image support. Cisco Feature Navigator enables you to determine which Cisco IOS XE software images support a specific software release, feature set, or platform. To access Cisco Feature Navigator, go to <a href="http://www.cisco.com/go/cfn">http://www.cisco.com/go/cfn</a>. An account on Cisco.com is not required.



Table 4 lists only the Cisco IOS XE software release that introduced support for a given feature in a given Cisco IOS XE software release train. Unless noted otherwise, subsequent releases of that Cisco IOS XE software release train also support that feature.

Table 4 Feature Information for BGP 4 MIB Support for Per-Peer Received Routes

Feature Name	Releases	Feature Information
	Cisco IOS XE Release 2.1	This feature was introduced on the Cisco ASR 1000 Series Aggregation Services Routers.
	Cisco IOS XE Release 2.1	This feature was introduced on the Cisco ASR 1000 Series Routers.

# **Glossary**

**AFI**—Address Family Identifier. Carries the identity of the network layer protocol that is associated with the network address.

**BGP**—Border Gateway Protocol. An interdomain routing protocol that exchanges reachability information with other BGP systems. It is defined by RFC 1163, *A Border Gateway Protocol (BGP)*. The current implementation of BGP is BGP Version 4 (BGP4). BGP4 is the predominant interdomain routing protocol that is used on the Internet. It supports CIDR and uses route aggregation mechanisms to reduce the size of routing tables.

**MBGP**—multiprotocol BGP. An enhanced version of BGP that carries routing information for multiple network layer protocols and IP multicast routes. It is defined in RFC 2858, *Multiprotocol Extensions for BGP-4*.

MIB—Management Information Base. A group of managed objects that are contained within a virtual information store or database. MIB objects are stored so that values can be assigned to object identifiers and to assist managed agents by defining which MIB objects should be implemented. The value of a MIB object can be changed or retrieved using SNMP or CMIP commands, usually through a GUI network management system. MIB objects are organized in a tree structure that includes public (standard) and private (proprietary) branches.

**NLRI**—Network Layer Reachability Information. Carries route attributes that describe a route and how to connect to a destination. This information is carried in BGP update messages. A BGP update message can carry one or more NLRI prefixes.

**RIB**—Routing Information Base (RIB). A central repository of routes that contains Layer 3 reachability information and destination IP addresses or prefixes. The RIB is also known as the routing table.

**SAFI**—Subsequent Address Family Identifier. Provides additional information about the type of the Network Layer Reachability Information that is carried in the attribute.

**SNMP**—Simple Network Management Protocol. A network management protocol used almost exclusively in TCP/IP networks. SNMP provides a means to monitor and control network devices and to manage configurations, statistics collection, performance, and security.

**snmpwalk**—The **snmpwalk** command is an SNMP application that is used to communicate with a network entity MIB using SNMP.

**VPN**—Virtual Private Network. Enables IP traffic to travel securely over a public TCP/IP network by encrypting all traffic from one network to another. A VPN uses a tunnel to encrypt all information at the IP level.

CCDE, CCSI, CCENT, Cisco Eos, Cisco HealthPresence, the Cisco logo, Cisco Lumin, Cisco Nexus, Cisco Nurse Connect, Cisco Stackpower, Cisco StadiumVision, Cisco TelePresence, Cisco WebEx, DCE, and Welcome to the Human Network are trademarks; Changing the Way We Work, Live, Play, and Learn and Cisco Store are service marks; and Access Registrar, Aironet, AsyncOS, Bringing the Meeting To You, Catalyst, CCDA, CCDP, CCIE, CCIP, CCNA, CCNP, CCSP, CCVP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IOS, Cisco Press, Cisco Systems, Cisco Systems Capital, the Cisco Systems logo, Cisco Unity, Collaboration Without Limitation, EtherFast, EtherSwitch, Event Center, Fast Step, Follow Me Browsing, FormShare, GigaDrive, HomeLink, Internet Quotient, IOS, iPhone, iQuick Study, IronPort, the IronPort logo, LightStream, Linksys, MediaTone, MeetingPlace, MeetingPlace Chime Sound, MGX, Networkers, Networking Academy, Network Registrar, PCNow, PIX, PowerPanels, ProConnect, ScriptShare, SenderBase, SMARTnet, Spectrum Expert, StackWise, The Fastest Way to Increase Your Internet Quotient, TransPath, WebEx, and the WebEx logo are registered trademarks of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries

All other trademarks mentioned in this document or website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0903R)

#### Glossary

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, and figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

 $\ @\ 2001-2009$  Cisco Systems, Inc. All rights reserved.



# **BGP Event-Based VPN Import**

First Published: February 26, 2010 Last Updated: February 26, 2010

The BGP Event-Based VPN Import feature introduces a modification to the existing Border Gateway Protocol (BGP) path import process. The enhanced BGP path import is driven by events; when a BGP path changes, all of its imported copies are updated as soon as processing is available. Convergence times are significantly reduced because there is no longer any delay in the propagation of routes due to the software waiting for a periodic scanner time interval before processing the updates. To implement the new processing, new command-line interface (CLI) commands are introduced.

# **Finding Feature Information**

For the latest feature information and caveats, see the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the "Feature Information for BGP Event-Based VPN Import" section on page 12.

Use Cisco Feature Navigator to find information about platform support and Cisco IOS XE software image support. To access Cisco Feature Navigator, go to <a href="http://www.cisco.com/go/cfn">http://www.cisco.com/go/cfn</a>. An account on Cisco.com is not required.

#### **Contents**

- Prerequisites for BGP Event-Based VPN Import, page 2
- Information About BGP Event-Based VPN Import, page 2
- How to Configure BGP Event-Based VPN Import, page 3
- Configuration Examples for BGP Event-Based VPN Import, page 9
- Additional References, page 10
- Feature Information for BGP Event-Based VPN Import, page 12s



# **Prerequisites for BGP Event-Based VPN Import**

Cisco Express Forwarding or distributed Cisco Express Forwarding must be enabled on all participating routers.

# Information About BGP Event-Based VPN Import

Before configuring the BGP Event-Based VPN Import feature, you should understand the following concept.

• BGP Event-Based VPN Import, page 2

## **BGP Event-Based VPN Import**

The BGP Event-Based VPN Import feature introduces a modification to the existing BGP path import process. BGP Virtual Private Network (VPN) import provides importing functionality for BGP paths where BGP paths are imported from the BGP VPN table into a BGP virtual routing and forwarding (VRF) topology. In the existing path import process, when path updates occur, the import updates are processed during the next scan time, which is a configurable interval of 5 to 15 seconds. The scan time adds a delay in the propagation of routes. The enhanced BGP path import is driven by events; when a BGP path changes, all of its imported copies are updated as soon as processing is available.

When you use the BGP Event-Based VPN Import feature, convergence times are significantly reduced because provider edge (PE) routers can propagate VPN paths to customer edge (CE) routers without the scan time delay. Configuration changes such as adding imported route targets (RT) to a VRF are not processed immediately, and are still handled during the 60-second periodic scanner pass.

#### **Import Path Selection Policy**

Event-based VPN import introduces three path selection policies:

- All—Import all available paths from the exporting net that match any route target (RT) associated with the importing VRF instance.
- Best path—Import the best available path that matches the RT of the VRF instance. If the best path in the exporting net does not match the RT of the VRF instance, a best available path that matches the RT of the VRF instance is imported.
- Multipath—Import the best path and all paths marked as multipaths that match the RT of the VRF instance. If there are no best path or multipath matches, then the best available path is selected.

Multipath and best path options can be restricted using an optional keyword to ensure that the selection is made only on the configured option. If the **strict** keyword is configured in the **import path selection** command, the software disables the fall back safety option of choosing the best available path. If no paths appropriate to the configured option (best path or multipath) in the exporting net match the RT of the VRF instance, then no paths are imported. This behavior matches the behavior of the software before the BGP Event-Based VPN Import feature was introduced.

When the restriction is not set, paths that are imported as the best available path are tagged. In **show** command output these paths are identified with the wording, "imported safety path."

The paths existing in an exporting net that are considered for import into a VRF instance may have been received from another peer router and were not subject to the VPN importing rules. These paths may contain the same route-distinguisher (RD) information because the RD information is local to a router,

but some of these paths do not match the RT of the importing VRF instance and are marked as "not-in-vrf" in the **show** command output. Any path that is marked as "not-in-vrf" is not considered as a best path because paths not in the VRF appear less attractive than paths in the VRF.

#### **Import Path Limit**

To control the memory utilization, a maximum limit of the number of paths imported from an exporting net can be specified per importing net. When a selection is made of paths to be imported from one or more exporting net, the first selection priority is a best path, the next selection priority is for multipaths, and the lowest selection priority is for nonmultipaths.

# **How to Configure BGP Event-Based VPN Import**

Perform the following tasks to enable and verify the BGP Event-Based VPN Import feature:

- Configuring a Multiprotocol VRF, page 3
- Configuring Event-Based VPN Import Processing for BGP Paths, page 5
- Monitoring and Troubleshooting BGP Event-Based VPN Import Processing, page 7

## **Configuring a Multiprotocol VRF**

Perform this task to configure a multiprotocol VRF that allows you to share route-target policies (import and export) between IPv4 and IPv6 or to configure separate route-target policies for IPv4 and IPv6 VPNs. In this task, only the IPv4 address family is configured, but we recommend using the multiprotocol VRF configuration for all new VRF configurations.



This task is not specific to the BGP Event-Based VPN Import feature.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. **vrf definition** *vrf-name*
- 4. rd route-distinguisher
- **5. route-target** {**import** | **export** | **both**} *route-target-ext-community*
- 6. address-family ipv4 [unicast]
- 7. exit-address-family
- 8. exit
- 9. interface type number
- **10. vrf forwarding** *vrf-name*
- 11. ip address ip-address mask
- 12. no shutdown
- **13.** exit

- 14. Repeat Step 3 through Step 13 to create and bind other VRF instances with an interface.
- 15. end

#### **DETAILED STEPS**

	Command or Action	Purpose
tep 1	enable	Enables privileged EXEC mode.
	<pre>Example: Router&gt; enable</pre>	Enter your password if prompted.
tep 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
ep 3	vrf definition vrf-name	Configures a VRF routing table and enters VRF configuration mode.
	<pre>Example: Router(config)# vrf definition vrf-A</pre>	• Use the <i>vrf-name</i> argument to specify a name to be assigned to the VRF.
ep 4	rd route-distinguisher	Creates routing and forwarding tables and specifies the default route distinguisher for a VPN.
	Example: Router(config-vrf)# rd 45000:1	• Use the <i>route-distinguisher</i> argument to add an 8-byte value to an IPv4 prefix to create a unique VPN IPv4 prefix.
tep 5	<pre>route-target {import   export   both} route-target-ext-community</pre>	<ul> <li>Creates a route target extended community for a VRF.</li> <li>Use the <b>import</b> keyword to import routing information from the target VPN extended community.</li> </ul>
	<pre>Example: Router(config-vrf)# route-target both 45000:100</pre>	<ul> <li>Use the <b>export</b> keyword to export routing information to the target VPN extended community.</li> </ul>
		<ul> <li>Use the <b>both</b> keyword to both import routing information from, and export routing information to, the target VPN extended community.</li> </ul>
		• Use the <i>route-target-ext-community</i> argument to add the route target extended community attributes to the VRF's list of import, export, or both (import and export) route target extended communities.
ep 6	address-family ipv4 [unicast]	Specifies the IPv4 address family and enters VRF address family configuration mode.
	<pre>Example: Router(config-vrf)# address-family ipv4 unicast</pre>	• This step is required here to specify an address family for the VRF defined in the previous steps.
ер 7	exit-address-family	Exits VRF address family configuration mode and returns to VRF configuration mode.
	<pre>Example: Router(config-vrf-af)# exit-address-family</pre>	

	Command or Action	Purpose
Step 8	exit	Exits VRF configuration mode and enters global configuration mode.
	Example:	
	Router(config-vrf)# exit	
Step 9	interface type number	Enters interface configuration mode.
	<pre>Example: Router(config)# interface FastEthernet 1/1</pre>	
Step 10	vrf forwarding vrf-name	Associates a VRF instance with the interface configured in Step 9.
	<pre>Example: Router(config-if)# vrf forwarding vrf-A</pre>	<ul> <li>When the interface is bound to a VRF, previously configured IP addresses are removed, and the interface is disabled.</li> </ul>
Step 11	ip address ip-address mask	Configures an IP address for the interface.
	Example: Router(config-if)# ip address 10.4.8.149 255.255.255.0	
Step 12	no shutdown	Restarts a disabled interface.
	<pre>Example: Router(config-if)# no shutdown</pre>	
Step 13	exit	Exits interface configuration mode and enters global configuration mode.
	<pre>Example: Router(config-if)# exit</pre>	
Step 14	Repeat Step 3 through Step 13 to create and bind other VRF instances with an interface.	_
Step 15	end	Exits global configuration mode and returns to privileged EXEC mode.
	Example: Router(config)# end	

# **Configuring Event-Based VPN Import Processing for BGP Paths**

Perform this task to reduce convergence times when BGP paths change by configuring event-based processing for importing BGP paths into a VRF table. Two new commands in Cisco IOS XE Release 2.6 allow the configuration of a maximum number of import paths per importing net and the configuration of a path selection policy.

### **Prerequisites**

This task assumes that you have previously configured the VRF to be used with the VRF address family syntax. To configure a VRF, see the "Configuring a Multiprotocol VRF" section on page 3.

Complete BGP neighbor configuration is also assumed. For an example configuration, see the "Configuring Event-Based VPN Import Processing for BGP Paths: Example" section on page 9.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. router bgp autonomous-system-number
- 4. address-family ipv4 vrf vrf-name
- 5. import path selection  $\{all \mid bestpath [strict] \mid multipath [strict]\}$
- 6. import path limit number-of-import-paths
- 7. end

#### **DETAILED STEPS**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
		• Enter your password if prompted.
	Example:	
	Router> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	router bgp autonomous-system-number	Enters router configuration mode for the specified routing process.
	Example:	
	Router(config)# router bgp 45000	
Step 4	address-family ipv4 vrf vrf-name	Specifies the IPv4 address family and enters address family configuration mode.
	<pre>Example: Router(config-router)# address-family ipv4 vrf vrf-A</pre>	• Use the <b>vrf</b> keyword and <i>vrf-name</i> argument to specify the name of the VRF instance to associate with subsequent IPv4 address family configuration mode commands.
Step 5	<pre>import path selection {all   bestpath [strict]   multipath [strict]}</pre>	Specifies the BGP path selection policy for importing routes into a VRF table.
	<pre>Example: Router(config-router-af)# import path selection all</pre>	In this example, all paths that match any RT of the VRF instance are imported.

	Command or Action	Purpose
Step 6	import path limit number-of-import-paths	Specifies, per importing net, a maximum number of BGP paths that can be imported from an exporting net.
	<pre>Example: Router(config-router-af)# import path limit 3</pre>	
Step 7	end	Exits address family configuration mode and returns to privileged EXEC mode.
	<pre>Example: Router(config-router-af)# end</pre>	

### Monitoring and Troubleshooting BGP Event-Based VPN Import Processing

Perform the steps in this task as required to monitor and troubleshoot the BGP event-based VPN import processing.

Only partial command syntax for the **show** commands used in this task is displayed. For more details, see the *Cisco IOS IP Routing: BGP Command Reference*.

#### **SUMMARY STEPS**

- 1. enable
- 2. show ip bgp vpnv4 {all | rd route-distinguisher | vrf vrf-name} [network-address [mask]]
- **3. show ip route** [**vrf** vrf-name] [ip-address [mask]]
- 4. debug ip bgp vpnv4 unicast import {events | updates [access-list]}

#### **DETAILED STEPS**

#### Step 1 enable

Enables privileged EXEC mode. Enter your password if prompted.

Router> enable

#### **Step 2 show ip bgp vpnv4** {all | rd route-distinguisher | vrf vrf-name} [network-address [mask]]

In this example output, a safe import path selection policy is in effect because the **strict** keyword is not configured using the **import path selection** command. When a path is imported as the best available path (when the best path or multipaths are not eligible for import), the path is marked with "imported safety path," as shown in the output.

Router# show ip bgp vpnv4 all 172.17.0.0

```
BGP routing table entry for 45000:1:172.17.0.0/16, version 10
Paths: (1 available, best #1, table vrf-A)
Flag: 0x820

Not advertised to any peer
2, imported safety path from 50000:2:172.17.0.0/16
10.0.101.1 from 10.0.101.1 (10.0.101.1)
Origin IGP, metric 200, localpref 100, valid, internal, best Extended Community: RT:45000:100
```

The paths existing in an exporting net that are considered for import into a VRF instance may have been received from another peer router and were not subject to the VPN importing rules. These paths may contain the same route-distinguisher (RD) information because the RD information is local to a router, but some of these paths do not match the RT of the importing VRF instance and are marked as "not-in-vrf" in the **show** command output.

In the following example output, a path was received from another peer router and was not subject to the VPN importing rules. This path, 10.0.101.2, was added to the VPNv4 table and associated with the vrf-A net because it contains a match of the RD information although the RD information was from the original router. This path is not, however, an RT match for vrf-A and is marked as "not-in-vrf." Note that on the net for vrf-A, this path is not the best path because any paths that are not in the VRF appear less attractive than paths in the VRF.

#### Router# show ip bgp vpnv4 all 172.17.0.0

```
BBGP routing table entry for 45000:1:172.17.0.0/16, version 11
Paths: (2 available, best #2, table vrf-A)
Flag: 0x820
Not advertised to any peer
2
10.0.101.2 from 10.0.101.2 (10.0.101.2)
Origin IGP, metric 100, localpref 100, valid, internal, not-in-vrf
Extended Community: RT:45000:200
mpls labels in/out nolabel/16
2
10.0.101.1 from 10.0.101.1 (10.0.101.1)
Origin IGP, metric 50, localpref 100, valid, internal, best
Extended Community: RT:45000:100
mpls labels in/out nolabel/16
```

#### **Step 3 show ip route** [vrf vrf-name] [ip-address [mask]]

In this example output, information about the routing table for VRF vrf-A is displayed:

```
Router# show ip route vrf vrf-A 172.17.0.0
```

```
Routing Table: vrf-A
Routing entry for 172.17.0.0/16
Known via "bgp 1", distance 200, metric 50
Tag 2, type internal
Last update from 10.0.101.33 00:00:32 ago
Routing Descriptor Blocks:
* 10.0.101.33 (default), from 10.0.101.33, 00:00:32 ago
Route metric is 50, traffic share count is 1
AS Hops 1
Route tag 2
MPLS label: 16
MPLS Flags: MPLS Required
```

#### Step 4 debug ip bgp vpnv4 unicast import {events | updates [access-list]}

Use this command to display debugging information related to the importing of BGP paths into a VRF instance table. The actual output depends on the commands that are subsequently entered.



If you do not specify an access list to filter prefixes when you use the **updates** keyword, all updates for all prefixes are displayed and this may slow down your network.

```
Router# debug ip bgp vpnv4 unicast import events
BGP import events debugging is on
```

# Configuration Examples for BGP Event-Based VPN Import

The following example configures the Event-Based VPN Import feature:

Configuring Event-Based VPN Import Processing for BGP Paths: Example, page 9

### **Configuring Event-Based VPN Import Processing for BGP Paths: Example**

In this example configuration, a VRF (vrf-A) is configured and VRF forwarding is applied to Fast Ethernet interface 1/1. In address family configuration mode the import path selection is set to **all** and the number of import paths is set to 3. Two BGP neighbors are configured under the IPv4 address family and activated under the VPNv4 address family.

```
vrf definition vrf-A
rd 45000:1
route-target import 45000:100
 address-family ipv4
  exit-address-family
interface FastEthernet 1/1
no ip address
vrf forwarding vrf-A
ip address 10.4.8.149 255.255.255.0
no shutdown
exit
router bgp 45000
network 172.17.1.0 mask 255.255.255.0
neighbor 192.168.1.2 remote-as 40000
neighbor 192.168.3.2 remote-as 50000
 address-family ipv4 vrf vrf-A
 import path selection all
 import path limit 3
  exit-address-family
 address-family vpnv4
  neighbor 192.168.1.2 activate
  neighbor 192.168.3.2 activate
  end
```

# Where to Go Next

- If you want to connect to an external service provider and use other external BGP features, see the "Connecting to a Service Provider Using External BGP" module.
- If you want to configure some internal BGP features, see the "Configuring Internal BGP Features" module.
- If you want to configure BGP neighbor session options, see the "Configuring BGP Neighbor Session Options" module.

• If you want to configure some advanced BGP features, see the "Configuring Advanced BGP Features" module.

# **Additional References**

The following sections provide references related to the BGP Event-Based VPN Import feature.

### **Related Documents**

Related Topic	Document Title
BGP commands: complete command syntax, command mode, defaults, command history, usage guidelines, and examples	Cisco IOS IP Routing: BGP Command Reference
Overview of Cisco BGP conceptual information with links to all the individual BGP modules	"Cisco BGP Overview" module of the Cisco IOS IP Routing: BGP Configuration Guide
Conceptual and configuration details for basic BGP tasks	"Configuring a Basic BGP Network" module of the Cisco IOS IP Routing: BGP Configuration Guide
Command Lookup Tool	Command Lookup Tool
Cisco IOS Master Command List	Cisco IOS Master Command List, All Releases

# **Standards**

Standard	Title
No new or modified standards are supported by this feature, and support for existing standards has not been modified by this feature.	

### **MIBs**

MIB	MIBs Link
None	To locate and download MIBs for selected platforms, Cisco IOS XE releases, and feature sets, use Cisco MIB Locator found at the following URL:
	http://www.cisco.com/go/mibs

# **RFCs**

RFC	Title
No new or modified RFCs are supported by this feature, and support for existing RFCs has not been modified by this feature.	

# **Technical Assistance**

Description	Link
The Cisco Support website provides extensive online resources, including documentation and tools for troubleshooting and resolving technical issues with Cisco products and technologies.	http://www.cisco.com/cisco/web/support/index.html
To receive security and technical information about your products, you can subscribe to various services, such as the Product Alert Tool (accessed from Field Notices), the Cisco Technical Services Newsletter, and Really Simple Syndication (RSS) Feeds.	
Access to most tools on the Cisco Support website requires a Cisco.com user ID and password.	

# **Feature Information for BGP Event-Based VPN Import**

Table 1 lists the release history for this feature.

Use Cisco Feature Navigator to find information about platform support and software image support. Cisco Feature Navigator enables you to determine which Cisco IOS XE software images support a specific software release, feature set, or platform. To access Cisco Feature Navigator, go to <a href="http://www.cisco.com/go/cfn">http://www.cisco.com/go/cfn</a>. An account on Cisco.com is not required.



Table 1 lists only the Cisco IOS XE software release that introduced support for a given feature in a given Cisco IOS XE software release train. Unless noted otherwise, subsequent releases of that Cisco IOS XE software release train also support that feature.

Table 1 Feature Information for BGP Event-Based VPN Import

Feature Name	Releases	Feature Information
BGP Event-Based VPN Import	Cisco IOS XE Release 2.6	The BGP Event-Based VPN Import feature introduces a modification to the existing Border Gateway Protocol (BGP) path import process. The enhanced BGP path import is driven by events; when a BGP path changes, all of its imported copies are updated as soon as processing is available. Convergence times are significantly reduced because there is no longer any delay in the propagation of routes due to the software waiting for a periodic scanner time interval before processing the updates. To implement the new processing, new command-line interface (CLI) commands are introduced.
		The following commands were introduced or modified:
		• bgp scan-time
		• import path limit
		• import path selection
		• maximum-path ebgp
		maximum-path ibgp
		• show ip bgp vpnv4
		• show ip bgp vpnv6

CCDE, CCENT, CCSI, Cisco Eos, Cisco Explorer, Cisco HealthPresence, Cisco IronPort, the Cisco logo, Cisco Nurse Connect, Cisco Pulse, Cisco SensorBase, Cisco StackPower, Cisco StadiumVision, Cisco TelePresence, Cisco TrustSec, Cisco Unified Computing System, Cisco WebEx, DCE, Flip Channels, Flip for Good, Flip Mino, Flipshare (Design), Flip Ultra, Flip Video, Flip Video (Design), Instant Broadband, and Welcome to the Human Network are trademarks; Changing the Way We Work, Live, Play, and Learn, Cisco Capital, Cisco Capital (Design), Cisco:Financed (Stylized), Cisco Store, Flip Gift Card, and One Million Acts of Green are service marks; and Access Registrar, Aironet, AllTouch, AsyncOS, Bringing the Meeting To You, Catalyst, CCDA, CCDP, CCIE, CCIP, CCNA, CCNP, CCSP, CCVP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IOS, Cisco Lumin, Cisco Nexus, Cisco Press, Cisco Systems, Cisco Systems Capital, the Cisco Systems logo, Cisco Unity, Collaboration Without Limitation, Continuum, EtherFast, EtherSwitch, Event Center, Explorer, Follow Me Browsing, GainMaker, iLYNX, IOS, iPhone, IronPort, the IronPort logo, Laser Link, LightStream, Linksys, MeetingPlace, MeetingPlace Chime Sound, MGX, Networkers, Networking Academy, PCNow, PIX, PowerKEY, PowerPanels, PowerTV, PowerTV (Design), PowerVu, Prisma, ProConnect, ROSA, SenderBase, SMARTnet, Spectrum Expert, StackWise, WebEx, and the WebEx logo are registered trademarks of Cisco and/or its affiliates in the United States and certain other countries.

All other trademarks mentioned in this document or website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1002R)

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

 $\hbox{@ 2010 Cisco Systems, Inc. All rights reserved.}$ 

Feature Information for BGP Event-Based VPN Import



### **BGP Best External**

First Published: November 25, 2009 Last Updated: November 25, 2009

The BGP Best External feature provides the network with a backup external route to avoid loss of connectivity of the primary external route. The BGP Best External feature advertises as a backup route the most preferred route among those received from external neighbors. This feature is beneficial in active-backup topologies, where service providers use routing policies that cause a border router to choose a path received over an internal BGP (iBGP) session (that of another border router) as the best path for a prefix even if it has an external BGP (eBGP) learned path. This active-backup topology defines one exit or egress point for the prefix in the autonomous system and uses the other points as backups if the primary link or eBGP peering is unavailable. The policy causes the border router to hide from the autonomous system the paths that it learned over its eBGP sessions, because it does not advertise any path for such prefixes. To cope with this situation, some routers advertise one externally learned path called the best-external path.

# **Finding Feature Information**

Your software release may not support all the features documented in this module. For the latest feature information and caveats, see the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the "Feature Information for BGP Best External" section on page 12.

Use Cisco Feature Navigator to find information about platform support and Cisco IOS XE software image support. To access Cisco Feature Navigator, go to <a href="http://www.cisco.com/go/cfn">http://www.cisco.com/go/cfn</a>. An account on Cisco.com is not required.

### **Contents**

- Prerequisites for BGP Best External, page 2
- Restrictions for BGP Best External, page 2
- Information About BGP Best External, page 2
- How to Configure BGP Best External, page 5



- Configuration Examples for BGP Best External, page 9
- Additional References, page 10
- Feature Information for BGP Best External, page 12

# **Prerequisites for BGP Best External**

- The Bidirectional Forwarding Detection (BFD) protocol must be enabled to quickly detect link failures.
- Ensure that the BGP and the Multiprotocol Label Switching (MPLS) network is up and running with the customer site connected to the provider site by more than one path (multihomed).
- The backup path must have a unique next hop that is not the same as the next hop of the best path.
- BGP must support lossless switchover between operational paths.

### **Restrictions for BGP Best External**

- The BGP Best External feature will not install a backup path if BGP Multipath is installed and a
  multipath exists in the BGP table. One of the multipaths automatically acts as a backup for the other
  paths.
- The BGP Best External feature is not supported with the following features:
  - MPLS VPN Carrier Supporting Carrier
  - MPLS VPN Inter-Autonomous Systems, option B
  - MPLS VPN Per VRF Label
- The BGP Best External feature cannot be configured with Multicast, L2VPNs, or IPv6 VPNs.
- The BGP Best External feature cannot be configured on route reflectors.
- The BGP Best External feature does not support NSF/SSO. However, ISSU is supported if both route processors have the BGP Best External feature configured.
- The BGP Best External feature can only be configured on VPNv4 and IPv4 VRF address families.
- When you configure the BGP Best External feature using the bgp advertise-best-external
  command, you do not need to also enable the BGP PIC feature with the bgp additional-paths
  install command. The BGP PIC feature is automatically enabled by the BGP Best External feature.
- When you configure the BGP Best External feature, it will override the functionality of the MPLS VPN—BGP Local Convergence feature. However, you do not have to remove the protection local-prefixes command from the configuration.

## Information About BGP Best External

Before configuring the BGP Best External feature, you should understand the following concepts:

- BGP Best External Overview, page 3
- What the Best External Route Means, page 3
- How the BGP Best External Feature Works, page 3

Configuration Modes for Enabling BGP Best External, page 4

#### **BGP Best External Overview**

Service providers use routing policies that cause a border router to choose a path received over an internal BGP (iBGP) session (that of another border router) as the best path for a prefix even if it has an external BGP (eBGP) learned path. This practice is known popularly as active-backup topology and is done to define one exit or egress point for the prefix in the autonomous system and to use the other points as backups if the primary link or eBGP peering is unavailable.

The policy, though beneficial, causes the border router to hide from the autonomous system the paths that it learned over its eBGP sessions, because it does not advertise any path for such prefixes. To cope with this situation, some routers advertise one externally learned path called the best-external path. The best-external behavior causes the BGP selection process to select two paths to every destination:

- The best path is selected from the complete set of routes known to that destination.
- The best external path is selected from the set of routes received from its external peers.

BGP advertises to external peers the best path. Instead of withdrawing the best path from its internal peers when it selects an iBGP path as the best path, BGP advertises the best external path to the internal peers.

The BGP Best External feature is an essential component of the prefix independent (PIC) edge for both Internet access and MPLS VPN scenarios makes alternate paths available in the network in the active-backup topology.

#### **What the Best External Route Means**

The BGP Best External feature uses a "best external route" as a backup path, which, according to *draft-marques-idr-best-external*, is the most preferred route among those received from external neighbors. The most preferred route from external neighbors can be the following:

- Two routers in different clusters that have an iBGP session between them.
- Two routers in different autonomous systems of a confederation that have an eBGP session between them.

The best external route might be different from the best route installed in the RIB. The best route could be an internal route. By allowing the best external route to be advertised and stored in addition to the best route, networks gain faster restoration of connectivity by providing additional paths that may be used if the primary path fails.

#### **How the BGP Best External Feature Works**

The BGP Best External feature is based on Internet Engineering Task Force (IETF) draft-marques-idr-best-external.txt. The BGP Best External feature advertises a best external route to its internal peers as a backup route. The backup route is stored in the routing information base (RIB) and Cisco Express Forwarding. If the primary path fails, the BGP PIC functionality enables the best external path to take over, enabling faster restoration of connectivity.

Primary PE with
Higher Local Preference

Best Path
PE 1

CE 1

PE 2

Backup PE

Backup PE

PE 2

Backup PE

Figure 1 MPLS VPN: Best External at the Edge of MPLS VPN

Figure 1 shows an MPLS VPN using the BGP Best External feature. The network includes the following components:

- eBGP sessions exist between the provider edge (PE) and customer edge (CE) routers.
- PE1 is the primary router and has a higher local preference setting.
- Traffic from CE2 uses PE1 to reach router CE1.
- PE1 has two paths to reach CE1.
- CE1 is dual-homed with PE1 and PE2.
- PE1 is the primary path and PE2 is the backup path.

In Figure 1, traffic in the MPLS cloud flows through PE1 to reach CE1. Therefore, PE2 uses PE1 as the best path and PE2 as the backup path.

PE1 and PE2 are configured with the BGP Best External feature. BGP computes both the best path (the PE1–CE1 link) and an backup path (PE2) and installs both paths into the RIB and Cisco Express Forwarding. The best external path (PE2) is advertised to the peer routers in addition to the best path.

When Cisco Express Forwarding detects a link failure on PE1–CE1 link, Cisco Express Forwarding immediately switches to the backup path PE2. Traffic is quickly re-routed very due to local Fast Convergence in Cisco Express Forwarding using the backup path. Thus traffic loss is minimized and fast convergence achieved.

### **Configuration Modes for Enabling BGP Best External**

You can enable the BGP Best External feature in different modes, each of which protects VRFs in its own way:

- If you issue the bgp advertise-best-external command in VPNv4 address family configuration
  mode, it applies to all IPv4 VRFs. If you issue the command in this mode, you need not also issue
  it for specific VRFs.
- If you issue the bgp advertise-best-external command in IPv4 address-family configuration mode, it applies only that VRF.

# **How to Configure BGP Best External**

Perform the following tasks to enable the BGP Best External feature.

- Enabling the BGP Best External Feature, page 5
- Verifying the BGP Best External Feature, page 7

### **Enabling the BGP Best External Feature**

Perform the following task to enable the BGP Best External feature. In this task the configuration shown allows the BGP Best External feature to be configured in either IPv4 or VPNv4 address family. In VPNv4 address family configuration mode, the BGP Best External feature applies to all IPv4 VRFs and you do not have to configure it for specific VRFs as well. If you issue the **bgp advertise-best-external** command in IPv4 VRF address family configuration mode, the BGP Best External feature applies only that VRF.

#### **Prerequisites**

- Configure the MPLS VPN and verify that it is working properly before configuring the BGP Best External feature. See *Configuring MPLS Layer 3 VPNs* for more information.
- Configure multiprotocol VRFs, which allows you to share route targets policies (import and export) between IPv4 and IPv6 or to configure separate route-target policies for IPv4 and IPv6 VPNs. For information on configuring multiprotocol VRFs, see MPLS VPN—VRF CLI for IPv4 and IPv6 VPNs
- Ensure that the CE router is connected to the network by at least two paths.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. router bgp autonomous-system-number
- 4. address-family ipv4 [unicast | vrf vrf-name]
  or
  address-family vpnv4 [unicast]
- 5. bgp advertise-best-external
- **6. neighbor** *ip-address* **remote-as** *autonomous-system-number*
- 7. neighbor ip-address activate
- **8**. neighbor *ip-address* **fall-over** [**bfd** |**route-map** *map-name*]
- 9. end

#### **DETAILED STEPS**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	<pre>Example: Router&gt; enable</pre>	Enter your password if prompted.
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	router bgp autonomous-system-number	Enters router configuration mode for the specified routing process.
	Example: Router(config)# router bgp 40000	
Step 4	<pre>address-family ipv4 [unicast   vrf vrf-name] Or</pre>	Specifies the IPv4 or VPNv4 address family and enters address family configuration mode.
	address-family vpnv4 [unicast]	• The <b>unicast</b> keyword specifies the IPv4 or VPNv4 unicast address family.
	Example: Router(config-router)# address-family ipv4 unicast Or	• The <b>vrf</b> keyword and <i>vrf-name</i> argument specify the name of the virtual routing and forwarding (VRF) instance to associate with subsequent IPv4 address family configuration mode commands.
Step 5	Router(config-router)# address-family vpnv4  bgp advertise-best-external	Calculates and uses an external backup path and installs it into the RIB and Cisco Express Forwarding.
	<pre>Example: Router(config-router-af)# bgp advertise-best-external</pre>	
Step 6	neighbor ip-address remote-as autonomous-system-number	Adds the IP address of the neighbor in the specified autonomous system to the IPv4 multiprotocol BGP neighbor table of the local router.
	<pre>Example: Router(config-router-af)# neighbor 192.168.1.1 remote-as 45000</pre>	By default, neighbors that are defined using the neighbor remote-as command in router configuration mode exchange only IPv4 unicast address prefixes. To exchange other address prefix types, neighbors must also be activated using the neighbor activate command in address family configuration mode for the other prefix types.
Step 7	neighbor ip-address activate	Enables the neighbor to exchange prefixes for the IPv4 unicast address family with the local router.
	<pre>Example: Router(config-router-af)# neighbor 192.168.1.1 activate</pre>	

	Command or Action	Purpose
Step 8	neighbor ip-address fall-over [bfd  route-map map-name]	Configures the BGP peering to use fast session deactivation and enables BFD protocol support for failover.
	<pre>Example: Router(config-router-af)# neighbor 192.168.1.1 fall-over bfd</pre>	BGP will remove all routes learned through this peer if the session is deactivated.
Step 9	end	(Optional) Exits to privileged EXEC mode.
	<pre>Example: Router(config-router-af)# end</pre>	

### **Verifying the BGP Best External Feature**

Perform the following task to verify that the BGP Best External feature is configured correctly.

#### **SUMMARY STEPS**

- 1. enable
- 2. show vrf detail
- 3. show ip bgp ipv4 {mdt {all | rd | vrf} | multicast | tunnel | unicast} or show ip bgp vpnv4 {all | rd route-distinguisher | vrf vrf-name} [rib-failure] [ip-prefix/length [longer-prefixes]] [network-address [mask] [longer-prefixes]] [cidr-only] [community] [community-list] [dampened-paths] [filter-list] [flap-statistics] [inconsistent-as] [neighbors] [paths [line]] [peer-group] [quote-regexp] [regexp] [summary] [labels]
- 4. show bgp vpnv4 unicast vrf vrf-name ip-address
- **5. show ip route vrf** *vrf-name* **repair-paths** *ip-address*
- 6. show ip cef vrf vrf-name ip-address detail

#### **DETAILED STEPS**

#### Step 1 enable

Use this command to enabled privileged EXEC mode. Enter your password, if prompted. For example:

Router> enable Router#

#### Step 2 show vrf detail

Use this command to verify that the BGP Best External feature is enabled. The following **show vrf detail** command output shows that the BGP Best External feature is enabled. (Relevant output is shown in bold).

```
Router# show vrf detail

VRF test1 (VRF Id = 1); default RD 400:1; default VPNID <not set>
    Interfaces:
        Se4/0
Address family ipv4 (Table ID = 1 (0x1)):
```

```
Export VPN route-target communities

RT:100:1
RT:400:1
Import VPN route-target communities
RT:100:1
RT:400:1
RT:200:1
RT:300:1
RT:400:1
No import route-map
No export route-map
VRF label distribution protocol: not configured
VRF label allocation mode: per-prefix
Prefix protection with additional path enabled
Address family ipv6 not active.
```

#### Step 3 show ip bgp ipv4 {mdt {all | rd | vrf} | multicast | tunnel | unicast}

show ip bgp vpnv4 {all | rd route-distinguisher | vrf vrf-name} [rib-failure] [ip-prefix/length [longer-prefixes]] [network-address [mask] [longer-prefixes]] [cidr-only] [community] [community-list] [dampened-paths] [filter-list] [flap-statistics] [inconsistent-as] [neighbors] [paths [line]] [peer-group] [quote-regexp] [regexp] [summary] [labels]

Use this command to verify that the best external route is advertised. In the command output, the code b indicates a backup path and the code x designates the best external path. In the following example, the relevant output is shown in bold.

```
Router# show ip bgp vpnv4 all
BGP table version is 1104964, local router ID is 10.2.2.2
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal,
             r RIB-failure, S Stale, multipath, b backup-path, x best-external
Origin codes: i - IGP, e - EGP, ? - incomplete
                                       Metric LocPrf Weight Path
                   Next Hop
  Network
Route Distinguisher: 11:12 (default for vrf blue)
*>i1.0.0.1/32
                   10.10.3.3
                                                     200
                                                             0 1 ?
                                              0
* i
                                                            0 1 ?
                   10.10.3.3
                                              0
                                                     200
                                                            0 1 ?
                   10.0.0.1
*bx
                   10.0.0.1
                                                             0 1 ?
                   10.0.0.1
                                                             0 1 ?
```

#### Step 4 show bgp vpnv4 unicast vrf vrf-name ip-address

Use this command to verify that the best external route is advertised. In the following example, the relevant output is shown in bold.

```
Router# show bgp vpnv4 unicast vrf vpn1 10.10.10.10
BGP routing table entry for 10:10:10.10.10.10/32, version 10
Paths: (2 available, best #1, table vpn1)
  Advertise-best-external
  Advertised to update-groups:
   1
               2
  200
   10.6.6.6 (metric 21) from 10.6.6.6 (10.6.6.6)
   Origin incomplete, metric 0, localpref 200, valid, internal, best
    Extended Community: RT:1:1
   mpls labels in/out 23/23
   10.1.2.1 from 10.1.2.1 (10.1.1.1)
   Origin incomplete, metric 0, localpref 100, valid, external, backup/repair,
    advertise-best-external
   Extended Community: RT:1:1 , recursive-via-connected
   mpls labels in/out 23/nolabel
```

#### Step 5 show ip route vrf vrf-name repair-paths ip-address

Use this command to display the repair route, which is shown in bold.

#### Router# show ip route vrf vpn1 repair-paths

```
Routing Table: vpn1
Codes: L - local, C - connected, S - static, R - RIP, M - mobile, B - BGP
       D - EIGRP, EX - EIGRP external, O - OSPF, IA - OSPF inter area
      N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
      E1 - OSPF external type 1, E2 - OSPF external type 2
       i - IS-IS, su - IS-IS summary, L1 - IS-IS level-1, L2 - IS-IS level-2
       ia - IS-IS inter area, * - candidate default, U - per-user static route
       o - ODR, P - periodic downloaded static route, H - NHRP
       + - replicated route, % - next hop override
Gateway of last resort is not set
      10.0.0.0/8 is variably subnetted, 2 subnets, 2 masks
         10.1.1.0/24 [200/0] via 10.6.6.6, 00:38:33
R
                    [RPR][200/0] via 10.1.2.1, 00:38:33
         10.1.1.1/32 [200/0] via 10.6.6.6, 00:38:33
                    [RPR][200/0] via 10.1.2.1, 00:38:33
      10.0.0.0/8 is variably subnetted, 3 subnets, 2 masks
C
         10.1.2.0/24 is directly connected, Ethernet0/0
L
         10.1.2.2/32 is directly connected, Ethernet0/0
         10.1.6.0/24 [200/0] via 10.6.6.6, 00:38:33
                     [RPR][200/0] via 10.1.2.1, 00:38:33
```

#### Step 6 show ip cef vrf vrf-name ip-address detail

Use this command to display the best external route. In the following example, the relevant output is shown in bold.

```
Router# show ip cef vrf test 10.71.8.164 detail
```

```
10.71.8.164/30, epoch 0, flags rib defined all labels
recursive via 10.249.0.102 label 35
  nexthop 10.249.246.101 Ethernet0/0 label 25
recursive via 10.249.0.104 label 28, repair
  nexthop 10.249.246.101 Ethernet0/0 label 24
```

# **Configuration Examples for BGP Best External**

The following examples configure and then verify the BGP Best External feature:

• Configuring the BGP Best External Feature: Example, page 9

#### **Configuring the BGP Best External Feature: Example**

The following example configures the BGP Best External feature in VPNv4 mode:

```
vrf definition test1
rd 400:1
route-target export 100:1
route-target export 200:1
route-target export 300:1
route-target export 400:1
route-target import 100:1
route-target import 200:1
```

```
route-target import 300:1
route-target import 400:1
address-family ipv4
exit-address-family
exit
interface Ethernet1/0
vrf forwarding test1
ip address 10.0.0.1 255.0.0.0
exit
router bgp 64500
no synchronization
bgp log-neighbor-changes
neighbor 10.5.5.5 remote-as 64500
neighbor 10.5.5.5 update-source Loopback0
neighbor 10.6.6.6 remote-as 64500
neighbor 10.6.6.6 update-source Loopback0
no auto-summary
 address-family vpnv4
 bgp advertise-best-external
 neighbor 10.5.5.5 activate
 neighbor 10.5.5.5 send-community extended
  neighbor 10.6.6.6 activate
 neighbor 10.6.6.6 send-community extended
 exit-address-family
 address-family ipv4 vrf test1
 no synchronization
bgp recursion host
 neighbor 192.168.13.2 remote-as 64511
 neighbor 192.168.13.2 fall-over bfd
 neighbor 192.168.13.2 activate
 neighbor 192.168.13.2 as-override
 exit-address-family
```

# **Additional References**

The following sections provide references related to the BGP Best External feature.

### **Related Documents**

Related Topic	Document Title
Basic MPLS VPNs	Configuring MPLS Layer 3 VPNs

#### **Standards**

Standard	Title
draft-marques-idr-best-external	BGP Best-external, Advertisement of the best-external route to
	iBGP

# **MIBs**

MIB	MIBs Link
N/A	To locate and download MIBs for selected platforms, Cisco IOS releases, and feature sets, use Cisco MIB Locator found at the following URL:
	http://www.cisco.com/go/mibs

# **RFCs**

RFC	Title
RFC 2547	BGP/MPLS VPNs
RFC 1771	A Border Gateway Protocol 4 (BGP-4)

# **Technical Assistance**

Description	Link
The Cisco Support website provides extensive online resources, including documentation and tools for troubleshooting and resolving technical issues with Cisco products and technologies.	http://www.cisco.com/cisco/web/support/index.html
To receive security and technical information about your products, you can subscribe to various services, such as the Product Alert Tool (accessed from Field Notices), the Cisco Technical Services Newsletter, and Really Simple Syndication (RSS) Feeds.	
Access to most tools on the Cisco Support website requires a Cisco.com user ID and password.	

### **Feature Information for BGP Best External**

Table 1 lists the release history for this feature.

Use Cisco Feature Navigator to find information about platform support and software image support. Cisco Feature Navigator enables you to determine which Cisco IOS XE software images support a specific software release, feature set, or platform. To access Cisco Feature Navigator, go to <a href="http://www.cisco.com/go/cfn">http://www.cisco.com/go/cfn</a>. An account on Cisco.com is not required.



Table 1 lists only the Cisco IOS XE software release that introduced support for a given feature in a given Cisco IOS XE software release train. Unless noted otherwise, subsequent releases of that Cisco IOS XE software release train also support that feature.

Table 1 Feature Information for BGP Best External

Feature Name	Releases	Feature Information
BGP Best External	Cisco IOS XE Release 2.5	The BGP Best External feature creates and stores a backup path in the routing information base and in Cisco Express Forwarding, so that in case of a failure, the backup path can immediately take over, thus enabling subsecond failover.
		In Cisco IOS XE Release 2.5, this feature was introduced.
		The following sections provide information about this feature:
		• Information About BGP Best External, page 2
		How to Configure BGP Best External, page 5
		• Configuration Examples for BGP Best External, page 9
		The following commands were introduced or modified: bgp advertise-best-external, bgp recursion host, show ip bgp, show ip bgp vpnv4, show ip cef, show ip cef vrf, show ip route, show ip route vrf.

CCDE, CCENT, CCSI, Cisco Eos, Cisco HealthPresence, Cisco IronPort, the Cisco logo, Cisco Nurse Connect, Cisco Pulse, Cisco SensorBase, Cisco StackPower, Cisco StadiumVision, Cisco TelePresence, Cisco Unified Computing System, Cisco WebEx, DCE, Flip Channels, Flip for Good, Flip Mino, Flipshare (Design), Flip Ultra, Flip Video, Flip Video (Design), Instant Broadband, and Welcome to the Human Network are trademarks; Changing the Way We Work, Live, Play, and Learn, Cisco Capital, Cisco Capital (Design), Cisco:Financed (Stylized), Cisco Store, Flip Gift Card, and One Million Acts of Green are service marks; and Access Registrar, Aironet, AllTouch, AsyncOS, Bringing the Meeting To You, Catalyst, CCDA, CCDP, CCIE, CCIP, CCNA, CCNP, CCSP, CCVP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IOS, Cisco Lumin, Cisco Nexus, Cisco Press, Cisco Systems, Cisco Systems Capital, the Cisco Systems logo, Cisco Unity, Collaboration Without Limitation, Continuum, EtherFast, EtherSwitch, Event Center, Explorer, Follow Me Browsing, GainMaker, iLYNX, IOS, iPhone, IronPort, the IronPort logo, Laser Link, LightStream, Linksys, MeetingPlace, MeetingPlace Chime Sound, MGX, Networkers, Networking Academy, PCNow, PIX, PowerKEY, PowerPanels, PowerTV, PowerTV (Design), PowerVu, Prisma, ProConnect, ROSA, SenderBase, SMARTnet, Spectrum Expert, StackWise, WebEx, and the WebEx logo are registered trademarks of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries.

All other trademarks mentioned in this document or website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0910R)

Any Internet Protocol (IP) addresses used in this document are not intended to be actual addresses. Any examples, command display output, and figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses in illustrative content is unintentional and coincidental.

© 2009 Cisco Systems, Inc. All rights reserved.



# **BGP PIC Edge for IP and MPLS-VPN**

First Published: November 25, 2009 Last Updated: November 25, 2009

The BGP PIC Edge for IP and MPLS-VPN feature improves convergence after a network failure. This convergence is applicable to both core and edge failures and can be used in both IP and MPLS networks. BGP PIC Edge for IP and MPLS-VPN feature creates and stores a backup/alternate path in the routing information base (RIB), forwarding information base (FIB) and in Cisco Express Forwarding, so that when a failure is detected, the backup/alternate path can immediately take over, thus enabling fast failover.

Benefits of this feature include the following:

- An additional path for failover allows faster restoration of connectivity if a primary path is invalid or is withdrawn.
- · Reduction of traffic loss.
- Constant convergence time so that the switching time is the same for all prefixes.



In this document, the BGP PIC Edge for IP and MPLS-VPN feature is called "BGP PIC."

# **Finding Feature Information**

Your software release may not support all the features documented in this module. For the latest feature information and caveats, see the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the "Feature Information for BGP PIC" section on page 17.

Use Cisco Feature Navigator to find information about platform support and Cisco IOS XE software image support. To access Cisco Feature Navigator, go to <a href="http://www.cisco.com/go/cfn">http://www.cisco.com/go/cfn</a>. An account on Cisco.com is not required.



### **Contents**

- Prerequisites for BGP PIC, page 2
- Restrictions for BGP PIC, page 2
- Information About BGP PIC, page 3
- How to Configure BGP PIC, page 11
- Configuration Examples for BGP PIC, page 13
- Additional References, page 16
- Feature Information for BGP PIC, page 17

# **Prerequisites for BGP PIC**

- Ensure that the BGP and the IP or Multiprotocol Label Switching (MPLS) network is up and running with the customer site connected to the provider site by more than one path (multihomed).
- Ensure that the backup/alternate path has a unique next hop that is not the same as the nexthop of the best path.
- Enable Bidirectional Forwarding Detection (BFD) protocol to quickly detect link failures of directly connected neighbors.

### **Restrictions for BGP PIC**

The following restrictions apply to the BGP PIC feature:

- With BGP Multipath, the BGP PIC feature is already supported.
- In MPLS VPNs, the BGP PIC feature is not supported with MPLS VPN Inter-Autonomous Systems Option B.
- The BGP PIC feature supports prefixes only the IPv4 and VPNv4 address families.
- The BGP PIC feature cannot be configured with Multicast, L2VPNs, or IPv6 VPNs.
- If the route reflector is only in the control plane, then you do not need BGP PIC, because BGP PIC addresses data plane convergence.
- When two PE routers become each other's backup/alternate path to a CE router, traffic might loop if the CE router fails. Neither router will reach the CE router, and traffic will continue to be forwarded between the PE router until the time-to-live (TTL) timer expires.
- The BGP PIC feature does not support NSF/SSO. However, ISSU is supported if both route processors have the BGP PIC feature configured.
- The BGP PIC feature solves the traffic forwarding only for a single network failure at both edge and core.
- The BGP PIC feature does not work with the he BGP Best External feature. If you try to configure the BGP PIC feature after configuring the BGP Best External feature, you receive an error.

### Information About BGP PIC

Before configuring the BGP PIC feature, you should understand the following concepts:

- How BGP Converges Under Normal Circumstances, page 3
- How BGP PIC Improves Convergence, page 3
- How a Failure Is Detected, page 5
- How BGP PIC Can Achieve Subsecond Convergence, page 5
- How BGP PIC Improves Upon the Functionality of MPLS VPN—BGP Local Convergence, page 6
- Configuration Modes for Enabling BGP PIC, page 6
- BGP PIC Scenarios, page 6

### **How BGP Converges Under Normal Circumstances**

Under normal circumstances, BGP can take several seconds to a few minutes to converge after a network change. At a high level, BGP goes through the following process:

- 1. BGP learns of failures through either IGP or BFD events or interface events.
- 2. BGP withdraws the routes from the routing information base (RIB), and the RIB withdraws the routes from the forwarding information base (FIB) and distributed FIB (dFIB). This process clears the data path for the affected prefixes.
- 3. BGP sends withdraw messages to its neighbors.
- **4.** BGP calculates the next best path to the affected prefixes.
- 5. BGP inserts the next best path for affected prefixes into the RIB, and the RIB installs them in the FIB and dFIB.

This process take from a few seconds to a few minutes to complete depending on the latency of the network, the convergence time across the network, and the local load on the devices. The data plane converges only after the control plane converges.

# **How BGP PIC Improves Convergence**

BGP PIC functionality is achieved by additional functionality in the BGP, RIB, Cisco Express Forwarding, and MPLS.

BGP Functionality

BGP PIC affects prefixes under the IPv4 and VPVN4 address families. For those prefixes, BGP calculates an additional second best path in addition to the primary best path. (The second best path is called the backup/alternate path.) BGP installs the best and backup/alternate paths for the affected prefixes into the BGP RIB. The backup/alternate path provides a fast reroute mechanism to counter a singular network failure. BGP also includes the alternate/backup path in its application programming interface (API) to the IP RIB.

· RIB Functionality

For BGP PIC, RIB installs an alternate path per route if one is available. With BGP PIC functionality, if the RIB selects a BGP route containing a backup/alternate path, it installs the backup/alternate path with the best path. The RIB also includes the alternate path in its API with the FIB.

• Cisco Express Forwarding (FIB) Functionality

With BGP PIC, Cisco Express Forwarding stores an alternate path per prefix. When the primary path goes down, Cisco Express Forwarding searches for the backup/alternate path when in a prefix independent manner. Cisco Express Forwarding also listens to BFD events to rapidly detect local failures.

MPLS Functionality

MPLS Forwarding is similar to Cisco Express Forwarding in that it stores alternate paths and switches to an the alternate path if the primary path goes away.

When the BGP PIC feature is enabled, BGP calculates a backup/alternate path per prefix and installs them into BGP RIB, IP RIB, and FIB. This improves convergence after a network failure. There are two types of network failures that the BGP PIC feature detects:

- Core node/link failure (iBGP node failure): If a PE node/link fails, then the failure is detected through IGP convergence. IGP conveys the failure through the RIB to the FIB.
- Local link/immediate neighbor node failure (eBGP node/link failure): To detect a local link failure or eBGP single-hop peer node failure in less than a second, you must enable BFD. Cisco Express Forwarding looks for BFD events to detect a failure of an eBGO single-hop peer.

#### **Convergence in the Data Plane**

Upon detection of a failure, Cisco Express Forwarding detects the alternate nexthop for all prefixes affected by the failure. The data plane convergence is achieved in subseconds depending on whether the BGP PIC implementation exists software or hardware.

#### **Convergence in the Control Plane Convergence**

Upon detection of failure, BGP learns about the failure through IGP convergence or BFD events and sends withdraw messages for the prefixes, recalculating the best and backup/alternate paths, and advertising the next best path across the network.

#### **BGP Fast Reroute's Role in the BGP PIC Feature**

BGP Fast Reroute (FRR) provides a best path and a backup/alternate path in BGP, RIB, and Cisco Express Forwarding. BGP FRR provides a very fast reroute mechanism into the RIB and Cisco Express Forwarding on the backup BGP next hop to reach a destination when the current best path is not available.

BGP FRR precomputes a second best path in BGP and gives it to the RIB and Cisco Express Forwarding as a backup/alternate path, and Cisco Express Forwarding programs it into line cards.

Therefore BGP FRR is responsible for the setup of the best path and backup/alternate path. The BGP PIC feature provides the ability for Cisco Express Forwarding to quickly switch the traffic to the other egress ports if the current next hop or the link to this next hop goes down. This is illustrated in Figure 1.

**BGP IPv4 NLRI BGP VPNv4 NLRI** (IPv4 unicast and global address family) (VPNv4 and VRF address family) **BGP FRR** Selects and stores best path and **BGP RIB** backup/alternate path per prefix. **IP RIB** PIC Software Reacts to next hop failure and switches to alternate path. **FIB** Convergence not dependent on number of prefixes. PIC Hardware CEF/FIB H/W API **DFIB DFIB** 

Figure 1 BGP PIC Edge and BGP FRR

#### How a Failure Is Detected

If the failure is detected in the IBGP (remote) peer, it is detected by IGP and can take a few seconds for the detection to occur. Convergence can occur in subseconds or seconds, depending on whether PIC is enabled on the line cards.

If the failure is with directly connected neighbors (EBGP), if you use BFD to detect when a neighbor has gone away, the detection is within a subsecond and the convergence can occur in subseconds or seconds, depending on whether PIC is enabled on the line cards.

# **How BGP PIC Can Achieve Subsecond Convergence**

The BGP PIC feature works at the Cisco Express Forwarding level, and Cisco Express Forwarding can be processed in hardware line cards and in software.

• For platforms that support Cisco Express Forwarding processing in the line cards, the BGP PIC feature can converge in subseconds. The 7600 router supports Cisco Express Forwarding processing in the line cards and thus can attain subsecond convergence.

For platforms that do not use Cisco Express Forwarding in hardware line cards, Cisco Express
Forwarding is achieved in the software. The BGP PIC feature will work with the Cisco Express
Forwarding through the software and achieve convergence within seconds. The Cisco 10000 router
and the Cisco ASR 1000 series router supports Cisco Express Forwarding in the software and thus
can achieve convergence in seconds rather than milliseconds.

# How BGP PIC Improves Upon the Functionality of MPLS VPN—BGP Local Convergence

The BGP PIC feature is an enhancement to the MPLS VPN—BGP Local Convergence feature, which provides a failover mechanism that recalculates the best path and installs the new path in forwarding after a link failure. The feature maintains the local label for 5 minutes to ensure that the traffic uses the backup/alternate path, thus minimizing traffic loss.

The BGP PIC feature improves the LoC time to under a second by calculating a backup/alternate path in advance. When a link failure occurs, the traffic is sent to the backup/alternate path.

When you configure the BGP PIC feature, it will override the functionality of the MPLS VPN—BGP Local Convergence feature. You do not have to remove the **protection local-prefixes** command from the configuration.

### **Configuration Modes for Enabling BGP PIC**

Because many service provider networks contain many VRFs, the BGP PIC feature allows you to configure BGP PIC feature for all VRFs at once.

- VPNv4 address family configuration mode protects all the VRFs.
- VRF-IPv4 address family configuration mode protects only IPv4 VRFs.
- Global router configuration mode protects prefixes in the global routing table.

### **BGP PIC Scenarios**

The following scenarios explain how you can configure BGP PIC functionality to achieve fast convergence:

- IP PE-CE Link and Node Protection on the CE Side (Dual PEs), page 6
- IP PE-CE Link and Node Protection on the CE Side (Dual CEs and Dual PE Primary and Backup Nodes), page 7
- IP MPLS PE-CE Link Protection for the Primary or Backup/Alternate Path, page 8
- IP MPLS PE-CE Node Protection for Primary or Backup/Alternate Path, page 9

#### IP PE-CE Link and Node Protection on the CE Side (Dual PEs)


Figure 2 shows a network that uses the BGP PIC feature. The network includes the following components:

- eBGP sessions exist between the PE and CE routers.
- Traffic from CE1 uses PE1 to reach network 192.168.9.0/24 through router CE3.

- CE1 has two paths:
  - PE1 as the primary path.
  - PE2 as the backup/alternate path.

CE1 is configured with the BGP PIC feature. BGP computes PE1 as the best path and PE2 as the backup/alternate path and installs both the routes into the RIB and Cisco Express Forwarding forwarding plane. When the CE1–PE1 link goes down, Cisco Express Forwarding detects the link failure and points the forwarding object to the backup/alternate path. Traffic is quickly rerouted due to local fast convergence in Cisco Express Forwarding.

Figure 2 Using BGP PIC To Protect PE-CE Link

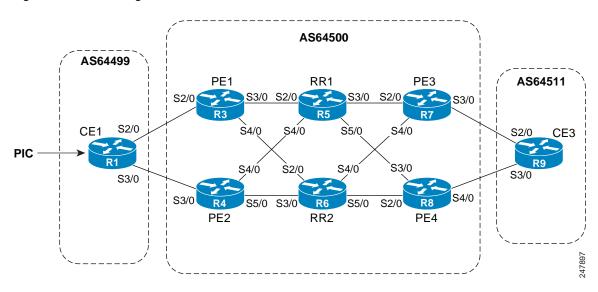

# IP PE—CE Link and Node Protection on the CE Side (Dual CEs and Dual PE Primary and Backup Nodes)

Figure 3 shows a network that uses the BGP PIC feature on CE1. The network includes the following components:

- eBGP sessions exist between the PE and CE routers.
- Traffic from CE1 uses PE1 to reach network 192.168.9.0/24 through router CE3.
- CE1 has two paths:
  - PE1 as the primary path.
  - PE2 as the backup/alternate path.
- An iBGP session exists between the CE1 and CE2 routers.

In this example, CE1 and CE2 are configured with the BGP PIC feature. BGP computes PE1 as the best path and PE2 as the backup/alternate path and installs both the routes into the RIB and Cisco Express Forwarding plane.


There should not be any policies set on CE1 and CE2 for the eBGP peers PE1 and PE2. Both CE routers must point to the external eBGP route as next hop. On CE1, the next hop to reach CE3 is through PE1, so PE1 is the best path to reach CE3. On CE2, the best path to reach CE3 is PE2. CE2 advertises to CE1 with itself as the next hop and CE1 does the same to CE2. As a result, CE1 has two paths for the specific

prefix and it usually selects the directly connected eBGP path over the iBGP path through the best path selection rules. Similarly, CE2 has two paths—an eBGP path through PE2 and an iBGP path through CE1–PE1.

When the CE1–PE1 link goes down, Cisco Express Forwarding detects the link failure and points the forwarding object to the backup/alternate node CE2. Traffic is quickly rerouted due to local fast convergence in Cisco Express Forwarding.

If the CE1–PE1 link or PE1 goes down and BGP PIC is enabled on CE1, BGP recomputes the best path, removing the next hop PE1 from RIB and reinstalling CE2 as the nexthop into the RIB and Cisco Express Forwarding. CE1 automatically gets a backup/alternate repair path into Cisco Express Forwarding and the traffic loss during forwarding is now in subseconds, thereby achieving fast convergence.

Figure 3 Using BGP PIC in a Dual CE, Dual PE Network

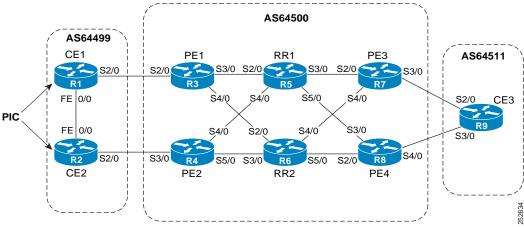

#### IP MPLS PE-CE Link Protection for the Primary or Backup/Alternate Path

Figure 3 shows a network that uses that uses the BGP PIC feature on CE1 and CE2. The network includes the following components:

- eBGP sessions exist between the PE and CE routers.
- The PE routers are VPNv4 iBGP peers with reflect routers in the MPLS network.
- Traffic from CE1 uses PE1 to reach network 192.168.9.0/24 through router CE3.
- CE3 is dual-homed with PE3 and PE4.
- PE1 has two paths to reach CE3 from the reflect routers:
  - PE3 is the primary path with the next hop as a PE3 address.
  - PE4 is the backup/alternate path with the next hop as a PE4 address.

In this example, all the PE routers can be configured with the BGP PIC feature under IPv4 or VPNv4 address families.

For BGP PIC to work in BGP for PE–CE link protection, set the policies on PE3 and PE4 for the prefixes received from CE3 so that one of the PE routers acts as primary and the other as backup/alternate. Usually this is done using local preference and giving better local preference to PE3. In the MPLS cloud, traffic internally flows through PE3 to reach CE3. PE1 thus has PE3 as the best path and PE4 as the second path.

When the PE3–CE3 link goes down, Cisco Express Forwarding detects the link failure, PE3 recomputes the best path and selects PE4 as the best path and sends a withdraw for the PE3 prefix to the reflect routers. Some of the traffic goes through PE3–PE4 until BGP installs PE4 as the best path route into the RIB and Cisco Express Forwarding. PE1 receives the withdraw and recomputes the best path and selects PE4 as the best path and installs the routes into the RIB and Cisco Express Forwarding plane.

Thus, with BGP PIC enabled on PE3 and PE4, Cisco Express Forwarding detects the link failure and does in-place modification of the forwarding object to the backup/alternate node PE4 that already exists in Cisco Express Forwarding. PE4 knows that the backup/alternate path is locally generated and routes the traffic to the egress port connected to CE3. This way, traffic loss is minimized and fast convergence is achieved.

#### IP MPLS PE—CE Node Protection for Primary or Backup/Alternate Path

Figure 4 shows a network that uses the BGP PIC feature on all the PE routers in an MPLS network.

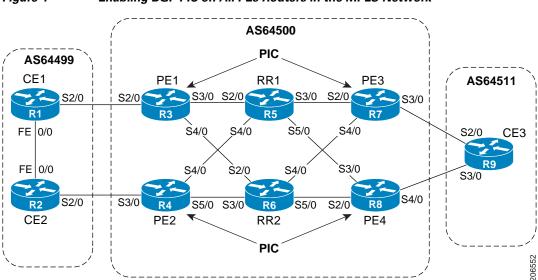


Figure 4 Enabling BGP PIC on All PEs Routers in the MPLS Network

The network includes the following components:

- eBGP sessions exist between the PE and CE routers.
- The PE routers are VPNv4 iBGP peers with reflect routers in the MPLS network.
- Traffic from CE1 uses PE1 to reach network 192.168.9.0/24 through router CE3.
- CE3 is dual-homed with PE3 and PE4.
- PE1 has two paths to reach CE3 from the reflect routers:
  - PE3 is the primary path with the with the next hop as a PE3 address.
  - PE4 is the backup/alternate path with the next hop as a PE4 address.

In this example, all the PE routers are configured with the BGP PIC feature under IPv4 and VPNv4 address families.

For BGP PIC to work in BGP for the PE–CE node protection, set the policies on PE3 and PE4 for the prefixes received from CE3 such that one of the PE routers acts as primary and the other as backup/alternate. Usually this is done using local preference and giving better local preference to PE3. In the MPLS cloud, traffic internally flows through PE3 to reach CE3. So PE1 has PE3 as the best path and PE4 as the second path.

When PE3 goes down, PE1 knows about the removal of the host prefix by IGPs in subseconds and recomputes the best path and selects PE4 as the best path and installs the routes into the RIB and Cisco Express Forwarding forwarding plane. Normal BGP convergence will happen, while BGP PIC is redirecting the traffic through PE4. Thus, packets are not lost.

Thus, with BGP PIC enabled on PE3 Cisco Express Forwarding detects the node failure on PE3 and points the forwarding object to the backup/alternate node PE4. PE4 knows that the backup/alternate path is locally generated and routes the traffic to the egress port using the backup/alternate path. This way, traffic loss is minimized.

#### No local policies set on the PE routers

PE1 and PE2 point to the eBGP CE paths as the next hop with no local policy. Each of the PE routers receives the other's path and BGP calculates the backup/alternate path and installs it into Cisco Express Forwarding along with its own eBGP path towards CE as the best path. The limitation of the MPLS PE—CE link and node protection solutions is that you cannot change BGP policies. They should work without the need of a best-external path.

#### Local policies set on the PE routers

Whenever there is a local policy on the PE routers to select one of the PE routers as the primary path to reach the egress CE, the bgp advertise-best-external command is needed on the backup/alternate node PE3 to propagate the external CE routes with a backup/alternate label into the route reflectors and the far-end PE routers.

### **Cisco Express Forwarding Recursion**

Recursion is the ability to find the next longest matching path when the primary path goes away.

When the BGP PIC feature is not installed, if the next hop to a prefix fails, Cisco Express forwarding finds the next path to reach the prefix by recursing through the FIB to find the next longest matching path to the prefix. This is useful if the next hop is multiple hops away and there is more than one way of reaching the next hop.

However with the of BGP PIC feature, you want to disable Cisco Express Forwarding recursion, for the following reasons:

- Recursion slows down convergence when Cisco Express Forwarding searches all the FIB entries.
- BGP PIC Edge already precomputes an alternate path, thus eliminating the need for CEF recursion.

When BGP PIC functionality is enabled, Cisco Express Forwarding recursion is disabled by default for two conditions:

- For next hops learned with a /32 network mask (host routes)
- For next hops that are directly connected

For all other cases, Cisco Express Forwarding recursion is enabled.

As part of BGP PIC functionality, you can issue the **bgp recursion host** command to disable or enable Cisco Express Forwarding recursion for BGP host routes.

To disable or enable Cisco Express Forwarding recursion for BGP directly connected next hops, you can issue the **disable-connected-check** command.

# **How to Configure BGP PIC**

Configuring the BGP PIC feature consists of the following task:

• Enabling BGP PIC, page 11

### **Enabling BGP PIC**

Because many service provider networks contain many VRFs, the BGP PIC feature allows you to configure BGP PIC feature for all VRFs at once.

- VPNv4 address family configuration mode protects all the VRFs.
- VRF-IPv4 address family configuration mode protects only IPv4 VRFs.
- Global router configuration mode protects prefixes in the global routing table.

For a full configuration example that includes configuring multiprotocol VRFs and show output to verify that the feature is enabled, see the "Configuring BGP PIC: Example" section on page 13.

#### **Prerequisites**

- If you are implementing the BGP PIC feature in an MPLS VPN, ensure the network is working properly before configuring the BGP PIC feature. See *Configuring MPLS Layer 3 VPNs* for more information.
- If you are implementing the BGP PIC feature in an MPLS VPN, configure multiprotocol VRFs, which allows you to share route-targets policies (import and export) between IPv4 and IPv6 or to configure separate route-target policies for IPv4 and IPv6 VPNs. For information on configuring multiprotocol VRFs, see MPLS VPN—VRF CLI for IPv4 and IPv6 VPNs.
- Ensure that the CE router is connected to the network by at least two paths.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. router bgp autonomous-system-number
- 4. address-family ipv4 [unicast | vrf vrf-name] or address-family vpnv4 [unicast]
- 5. bgp additional-paths install
- 6. neighbor ip-address remote-as autonomous-system-number
- 7. neighbor ip-address activate
- 8. bgp recursion host

- 9. neighbor ip-address fall-over [bfd  $\mid$  route-map map-name]
- 10. end

#### **DETAILED STEPS**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example: Router> enable	Enter your password if prompted.
Step 2	configure terminal	Enters global configuration mode.
	Example: Router# configure terminal	
Step 3	router bgp autonomous-system-number	Enters router configuration mode for the specified routing process.
	Example: Router(config)# router bgp 40000	
Step 4	<pre>address-family ipv4 [unicast   vrf vrf-name] or address-family vpnv4 [unicast]</pre>	Specifies the IPv4 or VPNv4 address family and enters address family configuration mode.
		• The <b>unicast</b> keyword specifies the IPv4 or VPNv4 unicast address family.
	Example: Router(config-router)# address-family ipv4 unicast or Router(config-router)# address-family vpnv4	• The <b>vrf</b> keyword and <i>vrf-name</i> argument specify the name of the virtual routing and forwarding (VRF) instance to associate with subsequent IPv4 address family configuration mode commands.
Step 5	bgp additional-paths install	Calculates a backup/alternate path and installs it into the RIB and Cisco Express Forwarding.
	<pre>Example: Router(config-router-af)# bgp additional-paths install</pre>	
Step 6	neighbor ip-address remote-as autonomous-system-number	Adds the IP address of the neighbor in the specified autonomous system to the IPv4 multiprotocol BGP neighbor table of the local router.
	<pre>Example: Router(config-router-af)# neighbor 192.168.1.1 remote-as 45000</pre>	• By default, neighbors that are defined using the <b>neighbor remote-as</b> command in router configuration mode exchange only IPv4 unicast address prefixes. To exchange other address prefix types, neighbors must also be activated using the <b>neighbor activate</b> command in address family configuration mode for the other prefix types.
Step 7	neighbor ip-address activate	Enables the neighbor to exchange prefixes for the IPv4 unicast address family with the local router.
	<pre>Example: Router(config-router-af)# neighbor 192.168.1.1 activate</pre>	

	Command or Action	Purpose
Step 8	bgp recursion host	(Optional) Enables the recursive-via-host flag for IPv4, VPNv4, and VRF address families.
	<pre>Example: Router(config-router-af)# bgp recursion host</pre>	• When the BGP PIC feature is enabled, Cisco Express Forwarding recursion is disabled. Under most circumstances, you do not want to enable recursion when BGP PIC is enabled.
Step 9	neighbor ip-address fall-over [bfd  route-map map-name]	Enables BFD protocol support to detect when a neighbor has gone away, which can occur within a subsecond.
	Example:	
	Router(config-router-af)# neighbor 192.168.1.1 fall-over bfd	
Step 10	end	Exits address family configuration mode and enters privileged EXEC mode.
	Example:	
	Router(config-router-af)# end	

# **Configuration Examples for BGP PIC**

The following examples configure and then verify the BGP PIC feature:

- Configuring BGP PIC: Example, page 13
- Displaying Backup/Alternate Paths for BGP PIC: Example, page 14

# **Configuring BGP PIC: Example**

The following example configures the BGP PIC feature in VPNv4 address-family configuration mode, which enables the feature on all VRFs. (The **bgp additional-paths install** command is shown in bold.) In the following example there are two VRFs defined: blue and green. All the VRFs, including those in VRFs blue and green are protected by backup/alternate paths.

```
vrf definition test1
rd 400:1
route-target export 100:1
route-target export 200:1
route-target export 300:1
 route-target export 400:1
route-target import 100:1
route-target import 200:1
route-target import 300:1
route-target import 400:1
 address-family ipv4
 exit-address-family
exit
interface Ethernet1/0
vrf forwarding test1
ip address 10.0.0.1 255.0.0.0
exit
router bgp 3
no synchronization
```

```
bgp log-neighbor-changes
redistribute static
redistribute connected
neighbor 10.6.6.6 remote-as 3
neighbor 10.6.6.6 update-source Loopback0
neighbor 10.7.7.7 remote-as 3
neighbor 10.7.7.7 update-source Loopback0
no auto-summary
address-family vpnv4
bgp additional-paths install
neighbor 10.6.6.6 activate
neighbor 10.6.6.6 send-community both
neighbor 10.7.7.7 activate
neighbor 10.7.7.7 send-community both
exit-address-family
address-family ipv4 vrf blue
 import path selection all
 import path limit 10
no synchronization
neighbor 10.11.11.11 remote-as 1
neighbor 10.11.11.11 activate
exit-address-family
!
address-family ipv4 vrf green
 import path selection all
 import path limit 10
 no synchronization
neighbor 10.13.13.13 remote-as 1
neighbor 10.13.13.13 activate
exit-address-family
```

The following **show vrf detail** command output shows that the BGP PIC feature is enabled. (Relevant output is shown in bold)

```
Router# show vrf detail
```

```
VRF test1 (VRF Id = 1); default RD 400:1; default VPNID <not set>
  Interfaces:
Address family ipv4 (Table ID = 1 (0x1)):
  Export VPN route-target communities
   RT:100:1
                            RT:200:1
                                                      RT:300:1
   RT:400:1
  Import VPN route-target communities
   RT:100:1
                            RT:200:1
                                                      RT:300:1
   RT:400:1
 No import route-map
 No export route-map
  VRF label distribution protocol: not configured
  VRF label allocation mode: per-prefix
  Prefix protection with additional path enabled
Address family ipv6 not active.
```

# **Displaying Backup/Alternate Paths for BGP PIC: Example**

The command output in the following example shows that the VRFs in VRF blue have backup/alternate paths. The relevant command output is shown in bold.

```
Router# show ip bgp vpnv4 vrf blue 10.0.0.0
```

```
BGP routing table entry for 10:12:12.0.0.0/24, version 88
Paths: (4 available, best #1, table blue)
  Additional-path
  Advertised to update-groups:
     6
  1, imported path from 12:23:12.0.0.0/24
    10.3.3.3 (metric 21) from 10.6.6.6 (10.6.6.6)
      Origin incomplete, metric 0, localpref 200, valid, internal, best
      Extended Community: RT:12:23
      Originator: 10.3.3.3, Cluster list: 10.0.0.1, recursive-via-host
      mpls labels in/out nolabel/37
  1, imported path from 12:23:12.0.0.0/24
    10.13.13.13 (via green) from 10.13.13.13 (10.0.0.2)
      Origin incomplete, metric 0, localpref 100, valid, external
      Extended Community: RT:12:23 , recursive-via-connected
  1, imported path from 12:23:12.0.0.0/24
    10.3.3.3 (metric 21) from 10.7.7.7 (10.7.7.7)
      Origin incomplete, metric 0, localpref 200, valid, internal
      Extended Community: RT:12:23
      Originator: 10.3.3.3, Cluster list: 10.0.0.1, recursive-via-host
      mpls labels in/out nolabel/37
    10.11.11.11 from 10.11.11.11 (1.0.0.1)
      Origin incomplete, metric 0, localpref 100, valid, external, backup/repair
      Extended Community: RT:11:12 , recursive-via-connected
```

The command output in the following example shows that the VRFs in VRF green have backup/alternate paths. The relevant command output is shown in bold.

```
Router# show ip bgp vpnv4 vrf green 12.0.0.0
BGP routing table entry for 12:23:12.0.0.0/24, version 87
Paths: (4 available, best #4, table green)
  Additional-path
  Advertised to update-groups:
     5
  1, imported path from 11:12:12.0.0.0/24
    10.11.11.11 (via blue) from 10.11.11.11 (1.0.0.1)
      Origin incomplete, metric 0, localpref 100, valid, external
      Extended Community: RT:11:12 , recursive-via-connected
    10.3.3.3 (metric 21) from 10.7.7.7 (10.7.7.7)
      Origin incomplete, metric 0, localpref 200, valid, internal
      Extended Community: RT:12:23
      Originator: 10.3.3.3, Cluster list: 10.0.0.1, recursive-via-host
      mpls labels in/out nolabel/37
    10.13.13.13 from 10.13.13.13 (10.0.0.2)
      Origin incomplete, metric 0, localpref 100, valid, external, backup/repair
      Extended Community: RT:12:23 , recursive-via-connected
    10.3.3.3 (metric 21) from 10.6.6.6 (10.6.6.6)
      Origin incomplete, metric 0, localpref 200, valid, internal, best
      Extended Community: RT:12:23
      Originator: 10.3.3.3, Cluster list: 10.0.0.1, recursive-via-host
      mpls labels in/out nolabel/37
```

The command output in the following example shows the BGP routing table entries for the backup and alternate paths. The relevant command output is shown in bold.

```
Router# show ip bgp 10.0.0.0 255.255.0.0
BGP routing table entry for 10.0.0.0/16, version 123
```

```
Paths: (4 available, best #3, table default)

Additional-path

Advertised to update-groups:

2 3

Local

10.0.101.4 from 10.0.101.4 (10.3.3.3)

Origin IGP, localpref 100, weight 500, valid, internal

Local

10.0.101.3 from 10.0.101.3 (10.4.4.4)

Origin IGP, localpref 100, weight 200, valid, internal

Local

10.0.101.2 from 10.0.101.2 (10.1.1.1)

Origin IGP, localpref 100, weight 900, valid, internal, best

Local

10.0.101.1 from 10.0.101.1 (10.5.5.5)

Origin IGP, localpref 100, weight 700, valid, internal, backup/repair
```

The command output in the following example shows the routing information base entries for the backup and alternate paths. The relevant command output is shown in bold.

Router# show ip route repair-paths 10.0.0.0 255.255.0.0

```
Routing entry for 10.0.0.0/16
Known via "bgp 10", distance 200, metric 0, type internal
Last update from 10.0.101.2 00:00:56 ago
Routing Descriptor Blocks:
* 10.0.101.2, from 10.0.101.2, 00:00:56 ago
Route metric is 0, traffic share count is 1
AS Hops 0
MPLS label: none
[RPR]10.0.101.1, from 10.0.101.1, 00:00:56 ago
Route metric is 0, traffic share count is 1
AS Hops 0
MPLS label: none
```

The command output in the following example shows the Cisco Express Forwarding/forwarding information base entries for the backup and alternate paths. The relevant command output is shown in bold.

```
Router# show ip cef 40.0.0.0 255.255.0.0 detail

10.0.0.0/16, epoch 0, flags rib only nolabel, rib defined all labels recursive via 10.0.101.2
   attached to GigabitEthernet0/2
   recursive via 10.0.101.1, repair
   attached to GigabitEthernet0/2
```

### **Additional References**

The following sections provide references related to the BGP PIC feature.

### **Related Documents**

Related Topic	Document Title
Basic MPLS VPNs	Configuring MPLS Layer 3 VPNs

### **Standards**

Standard	Title
draft-walton-bgp-add-paths-04.txt	Advertisement of Multiple Paths in BGP

#### **MIBs**

MIB	MIBs Link
N/A	To locate and download MIBs for selected platforms, Cisco IOS releases, and feature sets, use Cisco MIB Locator found at the following URL:
	http://www.cisco.com/go/mibs

#### **RFCs**

RFC	Title
RFC 2547	BGP/MPLS VPNs
RFC 1771	A Border Gateway Protocol 4 (BGP-4)

### **Technical Assistance**

Description	Link
The Cisco Support website provides extensive online resources, including documentation and tools for troubleshooting and resolving technical issues with Cisco products and technologies.	http://www.cisco.com/cisco/web/sup port/index.html
To receive security and technical information about your products, you can subscribe to various services, such as the Product Alert Tool (accessed from Field Notices), the Cisco Technical Services Newsletter, and Really Simple Syndication (RSS) Feeds.	
Access to most tools on the Cisco Support website requires a Cisco.com user ID and password.	

# **Feature Information for BGP PIC**

Table 1 lists the release history for this feature.

Use Cisco Feature Navigator to find information about platform support and software image support. Cisco Feature Navigator enables you to determine which Cisco IOS XE software images support a specific software release, feature set, or platform. To access Cisco Feature Navigator, go to <a href="http://www.cisco.com/go/cfn">http://www.cisco.com/go/cfn</a>. An account on Cisco.com is not required.



Table 1 lists only the Cisco IOS XE software release that introduced support for a given feature in a given Cisco IOS XE software release train. Unless noted otherwise, subsequent releases of that Cisco IOS XE software release train also support that feature.

Table 1 Feature Information for BGP PIC

Feature Name	Releases	Feature Information
BGP PIC Edge for IP and MPLS-VPN	Cisco IOS XE Release 2.5	The BGP PIC feature creates and stores a backup/alternate path in the routing information base (RIB) and in Cisco Express Forwarding, so that in case of a failure, the backup/alternate path can immediately take over, thus enabling subsecond failover.
		In Cisco IOS XE Release 2.5, this feature was introduced.
		The following sections provide information about this feature:
		• Prerequisites for BGP PIC, page 2
		• Restrictions for BGP PIC, page 2
		• Information About BGP PIC, page 3
		How to Configure BGP PIC, page 11
		The following commands were introduced or modified: <b>bgp</b> additional-paths install, <b>bgp</b> recursion host, show ip bgp, show ip route, show ip cef, show vrf.

CCDE, CCENT, CCSI, Cisco Eos, Cisco HealthPresence, Cisco IronPort, the Cisco logo, Cisco Nurse Connect, Cisco Pulse, Cisco SensorBase, Cisco StackPower, Cisco StadiumVision, Cisco TelePresence, Cisco Unified Computing System, Cisco WebEx, DCE, Flip Channels, Flip for Good, Flip Mino, Flipshare (Design), Flip Ultra, Flip Video, Flip Video (Design), Instant Broadband, and Welcome to the Human Network are trademarks; Changing the Way We Work, Live, Play, and Learn, Cisco Capital, Cisco Capital (Design), Cisco:Financed (Stylized), Cisco Store, Flip Gift Card, and One Million Acts of Green are service marks; and Access Registrar, Aironet, AllTouch, AsyncOS, Bringing the Meeting To You, Catalyst, CCDA, CCDP, CCIE, CCIP, CCNA, CCNP, CCSP, CCVP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IOS, Cisco Lumin, Cisco Nexus, Cisco Press, Cisco Systems, Cisco Systems Capital, the Cisco Systems logo, Cisco Unity, Collaboration Without Limitation, Continuum, EtherFast, EtherSwitch, Event Center, Explorer, Follow Me Browsing, GainMaker, iLYNX, IOS, iPhone, IronPort, the IronPort logo, Laser Link, LightStream, Linksys, MeetingPlace, MeetingPlace Chime Sound, MGX, Networkers, Networking Academy, PCNow, PIX, PowerKEY, PowerPanels, PowerTV, PowerTV (Design), PowerVu, Prisma, ProConnect, ROSA, SenderBase, SMARTnet, Spectrum Expert, StackWise, WebEx, and the WebEx logo are registered trademarks of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries.

All other trademarks mentioned in this document or website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0910R)

Any Internet Protocol (IP) addresses used in this document are not intended to be actual addresses. Any examples, command display output, and figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses in illustrative content is unintentional and coincidental.

© 2009 Cisco Systems, Inc. All rights reserved.