### 80x86 Architecture

Saidalvi Kalady

National Institute of Technology, Calicut

### Overview

- Introduction to Microprocessor
  - History
  - Computer Data Formats

2 80x86 Architecture

### The First Microprocessor

- The world's first microprocessor, the Intel 4004, was a 4-bit microprocessor-programmable controller on a chip.
- It addressed a mere 4096, 4-bit-wide memory locations. (A BIT is a binary digit with a value of one or zero. A 4-bit-wide memory location is called a NIBBLE.)
- The 4004 instruction set contained only 45 instructions.
- It was fabricated with the then-current state-of-the-art P-channel MOSFET technology that only allowed it to execute instructions at the slow rate of 50 KIPs (kilo-instructions per second).
- This was slow when compared to the 100,000 instructions executed per second by the 30-ton ENIAC computer in 1946.
- The main difference was that the 4004 weighed much less than an ounce.

### The First Microprocessor

- The 4-bit microprocessor debuted in early video game systems and small microprocessor-based control systems.
- One such early video game, a shuffleboard game, was produced by Bailey.
- The main problems with this early microprocessor were its speed, word width, and memory size.

## The Second Microprocessor

- The evolution of the 4-bit microprocessor ended when Intel released the 4040, an updated version of the earlier 4004.
- The 4040 operated at a higher speed, although it lacked improvements in word width and memory size.
- The 4-bit microprocessor still survives in low-end applications such as microwave ovens and small control systems and is still available from some microprocessor manufacturers.
- Most calculators are still based on 4-bit microprocessors that process 4-bit BCD (binary-coded decimal) codes.

# The Age of Microprocessor

- Later in 1971, realizing that the microprocessor was a commercially viable product, Intel Corporation released the 8008 – an extended 8-bit version of the 4004 microprocessor.
- The 8008 addressed an expanded memory size (16K bytes) and contained additional instructions (a total of 48) that provided an opportunity for its application in more advanced systems.
- As engineers developed more demanding uses for the 8008 microprocessor, they discovered that its somewhat small memory size, slow speed, and instruction set limited its usefulness.
- Intel recognized these limitations and introduced the 8080 microprocessor in 1973 the first of the modem 8-bit microprocessors.
- About six months after Intel released the 8080 microprocessor, Motorola Corporation introduced its MC6800 microprocessor.
- The floodgates opened and the 8080 and, to a lesser degree, the MC6800 ushered in the age of the microprocessor.

# What Was Special about the 8080?

- Not only could the 8080 address more memory and execute additional instructions, but it executed them 10 times faster than the 8008.
- An addition that took 20  $\mu s$  (50,000 instructions per second) on an 8008-based system required only 2.0  $\mu s$  (500,000 instructions per second) on an 8080-based system.
- The 8080 also addressed four times more memory (64K bytes) than the 8008 (16K bytes).
- These improvements are responsible for ushering in the era of the 8080 and the continuing saga of the microprocessor.
- Incidentally, the first personal computer, the MITS Altair 8800, was released in 1974.
- The BASIC language interpreter, written for the Altair 8800 computer, was developed in 1975 by Bill Gates and Paul Allen, the founders of Microsoft Corporation.

### The 8085 Microprocessor

- In 1977, Intel Corporation introduced an updated version of the 8080 the 8085.
- The 8085 was to be the last 8-bit, general-purpose microprocessor developed by Intel.
- Although only slightly more advanced than an 8080 microprocessor, the 8085 executed software at an even higher speed.
- An addition that took 2.0  $\mu s$  (500,000 instructions per second on the 8080) required only 1.3  $\mu s$  (769,230 instructions per second) on the 8085.
- The main advantages of the 8085 were its internal clock generator, internal system controller, and higher clock frequency.
- This higher level of component integration reduced the 8085's cost and increased its usefulness.

# The Modern Microprocessor

- In 1978, Intel released the 8086 microprocessor; a year or so later, it released the 8088.
- Both devices are 16-bit microprocessors, which executed instructions in as little as 400 ns (2.5 MIPs, or 2.5 millions of instructions per second).
- This represented a major improvement over the execution speed of the 8085.
- This higher execution speed and larger memory size allowed the 8086 and 8088 to replace smaller minicomputers in many applications.
- One other feature found in the 8086/8088 was a small 4- or 6-byte instruction CACHE or queue that prefetched a few instructions before they were executed.

# The Modern Microprocessor

- The increased memory size and additional instructions in the 8086 and 8088 have led to many sophisticated applications for microprocessors.
- Improvements to the instruction set included multiply and divide instructions, which were missing on earlier microprocessors.
- In addition, the number of instructions increased from 45 on the 4004, to 246 on the 8085, to well over 20,000 variations on the 8086 and 8088 microprocessors.
- Note that these microprocessors are called CISC (complex instruction set computers) because of the number and complexity of instructions.
- The 16-bit microprocessor also provided more internal register storage space than the 8-bit microprocessor.

# The Modern Microprocessor

- The popularity of the Intel family was ensured in 1981, when IBM Corporation decided to use the 8088 microprocessor in its personal computer.
- Applications such as spreadsheets, word processors, spelling checkers, and computer-based thesauruses were memory-intensive and required more than the 64K bytes of memory found in 8-bit microprocessors to execute efficiently.
- The 16-bit 8086 and 8088 provided 1M byte of memory for these applications.
- Soon, even the 1M-byte memory system proved limiting for large databases and other applications.
- This led Intel to introduce the 80286 microprocessor, an updated 8086, in 1983.

### The 80286 Microprocessor

- The 80286 microprocessor (also a 16-bit architecture microprocessor) was almost identical to the 8086 and 8088, except it addressed a 16M-byte memory system instead of a 1M-byte system.
- The instruction set of the 80286 was almost identical to the 8086 and 8088, except for a few additional instructions that managed the extra 15M bytes of memory.
- The clock speed of the 80286 was increased, so it executed some instructions in as little as 250 ns (4.0 MIPs) with the original release 8.0 MHz version.
- Some changes also occurred to the internal execution of the instructions, which led to an eight fold increase in speed for many instructions when compared to 8086/8088 instructions.

### The 32-Bit Microprocessor

- Applications began to demand faster microprocessor speeds, more memory, and wider data paths.
- This led to the arrival of the 80386 in 1986 by Intel Corporation.
- The 80386 was Intel's first practical 32-bit microprocessor that contained a 32-bit data bus and a 32-bit memory address.
- Through these 32-bit buses, the 80386 addressed up to 4G bytes of memory.

### The 32-Bit Microprocessor

- The 80386 was available in a few modified versions such as the 80386SX, which addressed 16M bytes of memory through a 16-bit data and 24-bit address bus, and the 80386SL/80386SLC, which addressed 32M bytes of memory through a 16-bit data and 25-bit address bus.
- An 80386SLC version contained an internal cache memory that allowed it to process data at even higher rates.
- In 1995, Intel released the 80386EX microprocessor.
- The 80386EX microprocessor is called an embedded PC because it contains all the components of the AT class personal computer on a single integrated circuit.
- The 80386EX also contains 24 lines for input/output data, a 26-bit address bus, a 16-bit data bus, a DRAM refresh controller, and programmable chip selection logic.

## The Pentium Microprocessor

- The Pentium, introduced in 1993, was similar to the 80386 and 80486 microprocessors.
- The two introductory versions of the Pentium operated with a clocking frequency of 60 MHz and 66 MHz, and a speed of 110 MIPs, with a higher-frequency 100 MHz one and one-half clocked version that operated at 150 MIPs.
- The double-clocked Pentium, operating at 120 MHz and 133 MHz, was also available, as were higher-speed versions.
- Another difference was that the cache size was increased to 16K bytes from the 8K cache found in the basic version of the 80486.

# The Pentium Microprocessor

- The Pentium contained an 8K-byte instruction cache and an 8K-byte data cache, which allowed a program that transfers a large amount of memory data to still benefit from a cache.
- The memory system contained up to 4G bytes, with the data bus width increased from the 32 bits found in the 80386 and 80486 to a full 64 bits.
- The data bus transfer speed was either 60 MHz or 66 MHz, depending on the version of the Pentium.
- This wider data bus width accommodated double-precision floating-point numbers used for modem high-speed, vector-generated graphical displays.

Manufacturer	Part Number	Data Bus Width	Memory Size
Intel	8048	8	2K internal
	8051	8	8K internal
	8085A	8	64K
	8086	16	1M
	8088	8	1M
	8096	16	8K internal
	80186	16	1M
	80188	8	1M
	80251	8	16K internal
	80286	16	16M
	80386EX	16	64M
	80386DX	32	4G
	80386SL	16	32M
	80386SLC	16	32M + 8K cache
	80386SX	16	16M
	80486DX/DX2	32	4G + 8K cache
	80486SX	32	4G + 8K cache
	80486DX4	32	4G + 16 cache
	Pentium	64	4G + 16K cache
	Pentium OverDrive	32	4G + 16K cache
	Pentium Pro	64	64G + 16K L1 cache + 256K L2 cache
	Pentium II	64	64G + 32K L1 cache + 256K L2 cache
	Pentium III	64	64G + 32K L1 cache + 256K L2 cache
	Pentium 4	64	64G+32K L1 cache+ 512K L2 cache (or larger) (1T for 64-bit extensions)
	Pentium4 D	64	1T + 32K L1 cache + 2 or
	(Dual Core)		4 M L2 cache
	Core2	64	1T + 32K L1 cache + a shared 2 or 4 M L2 cache
	Itanium (Dual Core)	128	1T + 2.5 M L1 and L2 cache + 24 M L3 cache

#### Data Formats

- Successful programming requires a precise understanding of data formats.
- In this section, many common computer data formats are described as they are used with the Intel family of microprocessors.
- Commonly, data appear as ASCII, UNICODE, BCD, SIGNED and UNSIGNED INTEGERS, and FLOATING-POINT NUMBERS (real numbers).
- Other forms are available, but are not presented here because they are not commonly found.

### ASCII & Unicode

- ASCII (American Standard Code for Information Interchange) data represent alphanumeric characters in the memory of a computer system.
- The standard ASCII code is a 7-bit code, with the eighth and most significant bit used to hold parity in some antiquated systems.
- If ASCII data are used with a printer, the most significant bits are a 0 for alphanumeric printing and 1 for graphics printing.
- In the personal computer, an extended ASCII character set is selected by placing a 1 in the leftmost bit.
- The second Table shows the extended ASCII character set, using code 80H–FFH.
- The extended ASCII characters store some foreign letters and punctuation, Greek characters, mathematical characters, box-drawing characters, and other special characters.

### **ASCII Characters**

Second																
	X0	X1	X2	ХЗ	X4	X5	X6	X7	X8	X9	XA	XB	XC	XD	XE	XF
First																
0X	NUL	SOH	STX	ETX	EOT	<b>ENQ</b>	<b>ACK</b>	BEL	BS	HT	LF	VT	FF	CR	SO	SI
1X	DLE	DC1	DC2	DC3	DC4	NAK	SYN	ETB	CAN	<b>EMS</b>	SUB	<b>ESC</b>	FS	GS	RS	US
2X	SP	!	u	#	\$	%	&	1	(	)	*	+	,	-		1
3X	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
4X	@	Α	В	C	D	Ε	F	G	Н	1	J	K	L	М	N	0
5X	Р	Q	R	S	Τ	U	٧	W	Χ	Υ	Z	1	1	1	٨	
6X	•	а	b	С	d	е	f	g	h	i	i	k	1	m	n	0
7X	p	q	r	s	t	u	٧	W	X	у	z	{	1	}	~	:::

### **Extended ASCII Characters**

First			Sec	Second												
	<b>X</b> 0	X1	X2	X3	X4	X5	X6	X7	X8	X9	XA	XB	XC	XD	XE	XF
0X		0	•	*	*	*	<b>±</b>	•		0	0	♂	우	J)	Ħ	<b>\$</b>
1X	<b>&gt;</b>	4	1	11	P	S	_	Ţ	1	÷	<b>→</b>	-	L.,	<b>↔</b>		•
8X	Ç	ü	é	â	ä	à	å	Ç	ê	ë	è	ï	î	ì	Ä	Å
9X	É	æ	Æ	ô	ö	ò	û	ù	$\ddot{\mathbf{y}}$	Ö	Ü	¢	£	¥	Pt	f
AX	á	í	ó	ú	ñ	Ñ	а	O	ž	-	$\neg$	1/2	1/4	i	**	<b>»</b>
BX			35 33		-	4	4	1	7	4		7]	1	Ţ	]	٦
CX	Ĺ	1	T	4		+	Ė	-	L	 [F	<u>T</u>	ī	Ļ	=	1	7
DX	1	=	T	1	Ĺ	F	П	+	+	ĭ	To the	Ï	<b>1</b>		Ï	
EX	α	β	$\ddot{\Gamma}$	π	$\Sigma$	σ	μ	Ϋ	Φ	Θ	Ω	δ	000	∮	E	$\cap$
FX	<b>=</b>	±	2	≤	ſ	J	÷	~	0	•	•	√	n	2		

# Binary Coded Decimal (BCD)

- Binary-coded decimal (BCD) information is stored in either packed or unpacked forms.
- Packed BCD data are stored as two digits per byte and unpacked BCD data are stored as one digit per byte.
- $\bullet$  The range of a BCD digit extends from  $0000_2$  to  $1001_2$  , or 0–9 decimal. Unpacked BCD data are returned from a keypad or keyboard.
- Packed BCD data are used for some of the instructions included for BCD addition and subtraction in the instruction set of the microprocessor.
- The Table below shows some decimal numbers converted to both the packed and unpacked BCD forms.
- Applications that require BCD data are point-of-sales terminals and almost any device that performs a minimal amount of simple arithmetic.
- If a system requires complex arithmetic, BCD data are seldom used because there is no simple and efficient method of performing complex BCD arithmetic.

# Packed and Unpacked BCD Data

Decimal	Pa	acked	Unpacked					
12	0001 0010		0000 0001	0000 0010				
623	0000 0110	0010 0011	0000 0110	0000 0010	0000 0011			
910	0000 1001	0001 0000	0000 1001	0000 0001	0000 0000			

## Byte-Sized Data

- Byte-sized data are stored as unsigned and signed integers.
- The Figure below illustrates both the unsigned and signed forms of the byte-sized integer.
- The difference in these forms is the weight of the leftmost bit position.
- Its value is 128 for the unsigned integer and minus 128 for the signed integer.
- In the signed integer format, the leftmost bit represents the sign bit of the number, as well as a weight of minus 128.
- For example, 80H represents a value of 128 as an unsigned number; as a signed number, it represents a value of minus 128.
- Unsigned integers range in value from 00H to FFH (0–255). Signed integers range in value from -128 to 0 to  $\pm$ 127.

# Byte Sized Data


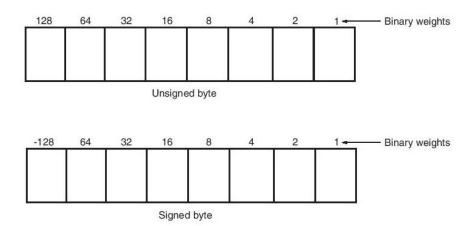


Figure: The unsigned and signed bytes illustrating the weights of each binary-bit position.


### Word Sized Data

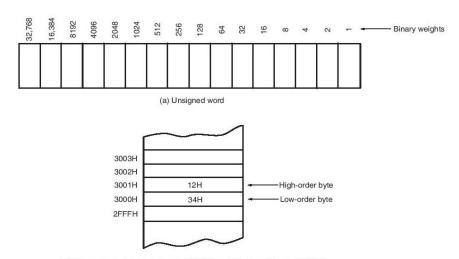


(b) The contents of memory location 3000H and 3001H are the word 1234H.

Figure: The storage format for a 16-bit word in (a) a register and (b) two bytes of memory.

#### Double word Sized Data



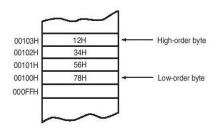

(b) The contents of memory location 00100H-00103H are the doubleword 12345678H.

Figure: The storage format for a 32-bit word in (a) a register and (b) four bytes of memory.

- Because many high-level languages use the Intel family of microprocessors, real numbers are often encountered.
- A real number, or a FLOATING-POINT NUMBER, as it is often called, contains two parts: a mantissa, SIGNIFICAND, or fraction; and an EXPONENT.
- The Figure below depicts both the 4- and 8-byte forms of real numbers as they are stored in any Intel system.
- Note that the 4-byte number is called SINGLE-PRECISION and the 8-byte form is called DOUBLE-PRECISION.
- The form presented here is the same form specified by the IEEE 10 standard, IEEE-754, version 10.0.

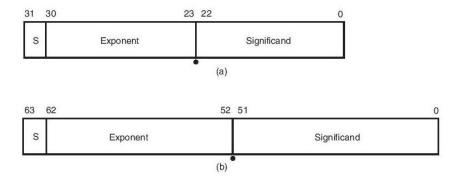


Figure: The floating-point numbers in (a) single-precision using a bias of 7FH and (b) double-precision using a bias of 3FFH.

- Simple arithmetic indicates that it should take 33 bits to store all three pieces of data.
- Not true—the 24-bit mantissa contains an implied (hidden) one-bit that allows the mantissa to represent 24 bits while being stored in only 23 bits.
- The hidden bit is the first bit of the normalized real number.
- When normalizing a number, it is adjusted so that its value is at least 1, but less than 2.
- For example, if 12 is converted to binary (1100<sub>2</sub>), it is normalized and the result is  $1.1 \times 2^3$ .
- The whole number 1 is not stored in the 23-bit mantissa portion of the number; the 1 is the hidden one-bit.
- The Table below shows the single-precision form of this number and others.

- The exponent is stored as a biased exponent.
- With the single-precision form of the real number, the bias is 127 (7FH) and with the double-precision form, it is 1023 (3FFH).
- The bias and exponent are added before being stored in the exponent portion of the floating-point number.
- In the previous example, there is an exponent of  $2^3$ , represented as a biased exponent of 127+3 or 130 (82H) in the single-precision form, or as 1026 (402H) in the double-precision form.

# Single Precision Real Numbers : Examples


Decimal	Binary	Normalized	Sign	Biased Exponent	Mantissa
+12	1100	1.1 × 2 <sup>3</sup>	0	10000010	10000000 00000000 00000000
-12	1100	$1.1 \times 2^3$	1	10000010	10000000 00000000 00000000
+100	1100100	$1.1001 \times 2^{6}$	0	10000101	10010000 00000000 00000000
-1.75	1.11	$1.11 \times 2^{0}$	1	01111111	11000000 00000000 00000000
+0.25	0.01	$1.0 \times 2^{-2}$	0	01111101	00000000 00000000 00000000
+0.0	0	0	0	00000000	00000000 00000000 00000000

- There are two exceptions to the rules for floating-point numbers.
- The number 0.0 is stored as all zeros.
- The number infinity is stored as all ones in the exponent and all zeros in the mantissa.
- The sign-bit indicates either a positive or a negative infinity.

#### 80x86 Architecture

- Before a program is written or any instruction investigated, the internal configuration of the microprocessor must be known.
- Here we detail the program-visible internal architecture of the 8086-Core2 microprocessors.
- Also detailed are the function and purpose of each of these internal registers.
- The programming model of the 8086 and above is considered to be PROGRAM VISIBLE because its registers are used during application programming and are specified by the instructions.
- Other registers are considered to be PROGRAM INVISIBLE because they are not addressable directly during applications programming, but may be used indirectly during system programming.

# The Programming Model

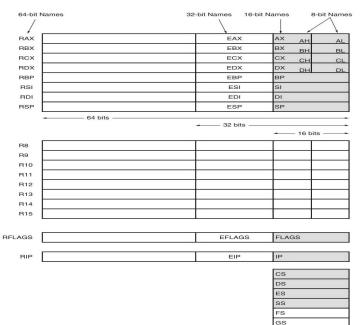

# General-purpose (Multipurpose) Registers

- General purpose registers are used to store temporary data within the microprocessor.
- There are eight general purpose registers: EAX, EBX, ECX, EDX, EBP, ESI, EDI, ESP.
- We can refer to the lower 8 and 16 bits of these registers. This is to maintain the backward compatibility of instruction sets.
- These registers are also known as scratchpad area as they are used by the processor to store intermediate values in a calculation and also for storing address locations.

# General-purpose (Multipurpose) Registers

#### The General Purpose Registers are used for :

- EAX: Accumulator Register Contains the value of some operands in some operations (E.g.: multiplication).
- 2 EBX: Base Register Pointer to some data in Data Segment.
- Sector Counter Register Acts as loop counter, used in string operations etc.
- EDX: Used as pointer to I/O ports.
- Sel: Source Index Acts as source pointer in string operations. It can also act as a pointer in Data Segment (DS).
- EDI: Destination Index Acts as destination pointer in string operations. It can also act as a pointer in Extra Segment (ES).
- ESP: Stack Pointer Always points to the top of system stack.
- EBP: Base Pointer It points to the starting of system stack (ie.bottom/base of stack).

## Special-purpose Registers

FLAGS are special purpose registers inside the CPU that contains the status of CPU / the status of last operation executed by the CPU. Some of the bits in FLAGS need special mention:

- Carry Flag: When a processor does a calculation, if there is a carry then the Carry Flag will be set to 1.
- Zero Flag: If the result of the last operation was zero, Zero Flag will be set to 1, else it will be zero.
- Sign Flag: If the result of the last signed operation is negative then the Sign Flag is set to 1, else it will be zero.
- Parity Flag: If there are odd number of ones in the result of the last operation, parity flag will be set to 1.
- Interrupt Flag: If interrupt flag is set to 1, then only it will listen to external interrupts.

# **FLAGS** Register

#### The other bits in FLAGS register are:

- Auxiliary Carry Flag: The auxiliary carry holds the carry (half-carry) after addition or the borrow after subtraction between bit positions 3 and 4 of the result.
- Trap Flag: If the Trap flag is enabled, the microprocessor interrupts the flow of the program on conditions as indicated by the debug registers and control registers.
- $\bullet$  Direction Flag: The Direction flag selects either the increment or decrement mode for the DI and/or SI registers during string instructions. If D = 1, the registers are automatically decremented; if D = 0 , the registers are automatically incremented.
- Overflow Flag: Overflows occur when signed numbers are added or subtracted. An overflow indicates that the result has exceeded the capacity of the machine.

# **FLAGS** Register

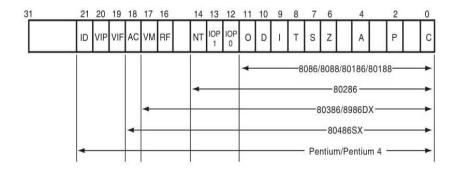


Figure: The EFLAGS and FLAGS register counts

## Special-purpose Registers

- Another special-purpose register is the EIP.
- EIP is the instruction pointer, it points to the next instruction to be executed.
- In memory there are basically two classes of things stored: Data and Program.
- When we start a program, it will be copied into the main memory and EIP is the pointer which points to the starting of this program in memory and execute each instruction sequentially.
- Branch statements like JMP, RET, CALL, JNZ alter the value of EIP.

#### Segment Registers

- In 80x86 processors, for accessing the memory basically there are two types of registers used; Segment Register and Offset.
- Segment register contains the base address of a particular data section and Offset will contain how many bytes should be displaced from the segment register to access the particular data.
- CS contains the base address of Code Segment and EIP is the offset. It keeps on updating while executing each instruction.
- SS or Stack Segment contains the address of top most part of system stack.
   ESP and EBP are the offset for SS.


#### Segment Registers

- The segment registers DS, ES, FS and GS acts as base registers for a lot of data operations like array addressing, string operations etc.
- ESI, EDI and EBX register can act as offsets for these segment registers.
- Unlike other registers, Segment registers are still 16 bit wide in 32-bit processors.
- In modern 32 bit processor the segment address is just an entry into a
  descriptor table in memory and using the offset it gets the exact memory
  locations through some manipulations.


## Little-Endian vs. Big-Endian

- A word (16-bits) is formed with two bytes of data.
- The least significant byte is always stored in the lowest-numbered memory location, and the most significant byte is stored in the highest.
- This method of storing a number is called the little endian format.
- An alternate method, not used with the Intel family of microprocessors, is called the big endian format.
- In the big endian format, numbers are stored with the lowest location containing the most significant data.
- The big endian format is used with the Motorola family of microprocessors.

#### Little-Endian Format

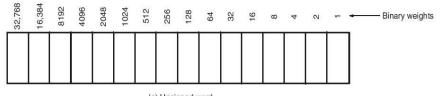

(a) Unsigned word

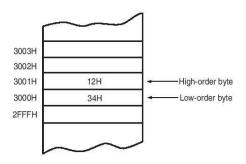

(b) The contents of memory location 3000H and 3001H are the word 1234H.


#### **Execution Modes**

- The 80286 and above operate in either the REAL or PROTECTED MODE.
- Only the 8086 and 8088 operate exclusively in the real mode.
- Real mode operation allows the microprocessor to address only the first 1M byte of memory space.
- Note that the first 1M byte of memory is called the REAL MEMORY, CONVENTIONAL MEMORY, or DOS MEMORY SYSTEM.
- Real mode operation allows application software written for the 8086/8088, which only contains 1M byte of memory, to function in the 80286 and above without changing the software.
- In all cases, each of these microprocessors begins operation in the real mode by default whenever power is applied or the microprocessor is reset.

## Segments and Offsets

- A combination of a SEGMENT ADDRESS and an OFFSET ADDRESS accesses a memory location in the real mode.
- All real mode memory addresses must consist of a segment address plus an offset address.
- The segment address, located within one of the SEGMENT REGISTERS, defines the beginning address of any 64K-byte memory segment.
- The offset address selects any location within the 64K byte memory segment.
- Segments in the real mode always have a length of 64K bytes.

# Real-mode Addressing

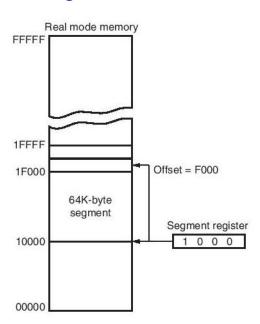

# Segments and Offsets

- The Figure above shows how the segment plus offset addressing scheme selects a memory location.
- This illustration shows a memory segment that begins at location 10000H and ends at location IFFFFH—64K bytes in length.
- It also shows how an offset address, sometimes called a displacement, of F000H selects location 1F000H in the memory system.
- Note that the offset or displacement is the distance above the start of the segment, as shown in Figure.
- The segment register contains 1000H, yet it addresses a starting segment at location 10000H.

# Segments and Offsets

- In the real mode, each segment register is internally appended with a 0H on its rightmost end.
- This forms a 20-bit memory address, allowing it to access the start of a segment.
- The microprocessor must generate a 20-bit memory address to access a location within the first 1M of memory.
- For example, when a segment register contains 1200H, it addresses a 64K-byte memory segment beginning at location 12000H.
- Likewise, if a segment register contains 1201H, it addresses a memory segment beginning at location 12010H.
- Because of the internally appended 0H, real mode segments can begin only at a 16-byte boundary in the memory system.
- This 16-byte boundary is often called a PARAGRAPH.

# Default Segment and Offset Registers

- The microprocessor has a set of rules that apply to segments whenever memory is addressed.
- These rules define the segment register and offset register combination.
- For example, the code segment register is always used with the instruction pointer to address the next instruction in a program.
- This combination is CS:IP or CS:EIP, depending upon the microprocessor's mode of operation.
- The code segment register defines the start of the code segment and the instruction pointer locates the next instruction within the code segment.
- This combination (CS:IP or CS:EIP) locates the next instruction executed by the microprocessor.
- $\bullet$  For example, if CS = 1400H and IP/EIP = 1200H , the microprocessor fetches its next instruction from memory location 14000H + 1200H or 15200H.

# Default Segment and Offset Registers

- Another of the default combinations is the stack.
- Stack data are referenced through the stack segment at the memory location addressed by either the stack pointer (SP/ESP) or the pointer (BP/EBP).
- These combinations are referred to as SS:SP (SS:ESP), or SS:BP (SS:EBP).
- $\bullet$  For example, if SS = 2000H and BP = 3000H , the microprocessor addresses memory location 23000H for the stack segment memory location.

# Default 16-bit Segment and Offset Combinations

Segment	Offset	Special-purpose
CS	IP	Instruction Address
SS	SP or BP	Stack Address
DS	BX, DI, SI, an 8bit/16 bit number	Data Address
ES	DI for string instructions	String Destination Address

# Default 32-bit Segment and Offset Combinations

Segment	Offset	Special-purpose	
CS	EIP	Instruction Address	
SS	ESP or EBP	Stack Address	
DS	EAX,EBX, ECX, EDX, EDI, ESI,	Data Address	
	an 8 $bit/16$ bit number		
ES	EDI for string instructions	String Destination Address	
FS	No default	General Address	
GS	No default	General Address	

# Segment and Offset Addressing Scheme Allows Relocation

- The personal computer memory structure is different from machine to machine, requiring relocatable software and data.
- Because memory is addressed within a segment by an offset address, the memory segment can be moved to any place in the memory system without changing any of the offset addresses.
- This is accomplished by moving the entire program, as a block, to a new area and then changing only the contents of the segment registers.
- If an instruction is 4 bytes above the start of the segment, its offset address is 4.
- If the entire program is moved to a new area of memory, this offset address of 4 still points to 4 bytes above the start of the segment.
- Only the contents of the segment register must be changed to address the program in the new area of memory.
- Without this feature, a program would have to be extensively rewritten or altered before it is moved.

# Protected-mode Memory Addressing

- Protected mode memory addressing (80286 and above) allows access to data and programs located above the first 1M byte of memory, as well as within the first 1M byte of memory.
- Addressing this extended section of the memory system requires a change to the segment plus an offset addressing scheme used with real mode memory addressing.
- In place of the segment address, the segment register contains a SELECTOR that selects a DESCRIPTOR from a DESCRIPTOR TABLE.
- The descriptor describes the memory segment's LOCATION, LENGTH, and ACCESS RIGHTS.

# Protected-mode Memory Addressing

- Because the segment register and offset address still access memory, protected mode instructions are identical to real mode instructions.
- In fact, most programs written to function in the real mode will function without change in the protected mode.
- The difference between modes is in the way that the segment register is interpreted by the microprocessor to access the memory segment.
- Another difference, in the 80386 and above, is that the offset address can be a 32-bit number instead of a 16-bit number in the protected mode.
- A 32-bit offset address allows the microprocessor to access data within a segment that can be up to 4G bytes in length.

- The selector, located in the segment register, selects one of 8192 descriptors from one of TWO TABLES OF DESCRIPTORS.
- The descriptor describes the location, length, and access rights of the segment of memory.
- Indirectly, the segment register still selects a memory segment, but not directly as in the real mode.
- $\bullet$  For example, in the real mode, if CS =0008H , the code segment begins at location 00080H.
- In the protected mode, this segment number can address any memory location in the entire system for the code segment.

- There are two descriptor tables used with the segment registers: one contains GLOBAL DESCRIPTORS and the other contains LOCAL DESCRIPTORS.
- The global descriptors contain segment definitions that apply to all programs, whereas the local descriptors are usually unique to an application.
- A global descriptor may be called SYSTEM DESCRIPTOR and call a local descriptor APPLICATION DESCRIPTOR.
- Each descriptor table contains 8192 descriptors, so a total of 16,384 total descriptors are available to an application at any time.
- Because the descriptor describes a memory segment, this allows up to 16,384 memory segments to be described for each application.
- $\bullet$  Since a memory segment can be up to 4G bytes in length, this means that an application could have access to 4G  $\times$  16,384 bytes of memory or 64T bytes.

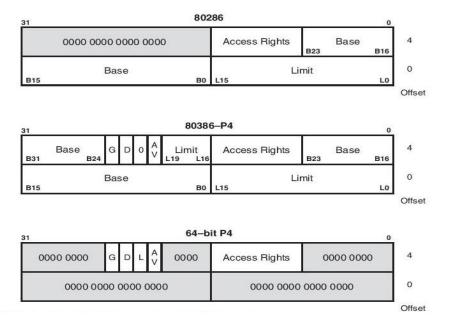


Figure: The 80286 through Core2 64-bit descriptors

- The Figure above shows the format of a descriptor for the 80286 through the Core2.
- ullet Each descriptor is 8 bytes in length, so the global and local descriptor tables are each a maximum of 64K bytes in length.
- Descriptors for the 80286 and the 80386–Core2 differ slightly, but the 80286 descriptor is upward-compatible.
- The base address portion of the descriptor indicates the starting location of the memory segment.
- For the 80286 microprocessor, the base address is a 24-bit address, so segments begin at any location in its 16M bytes of memory.
- The paragraph boundary limitation is removed in these microprocessors when operated in the protected mode, so segments may begin at any address.

- The 80386 and above use a 32-bit base address that allows segments to begin at any location in its 4G bytes of memory.
- Notice how the 80286 descriptor's base address is upward-compatible to the 80386 through the Pentium 4 descriptor because its most-significant 16 bits are 0000H.
- The segment limit contains the last offset address found in a segment.
- For example, if a segment begins at memory location F00000H and ends at location F000FFH, the base address is F00000H and the limit is FFH. For the 80286 microprocessor, the base address is F00000H and the limit is 00FFH.
- For the 80386 and above, the base address is 00F00000H and the limit is 000FFH.

- Notice that the 80286 has a 16-bit limit and the 80386 through the Pentium 4 have a 20-bit limit.
- An 80286 can access memory segments that are between 1 and 64K bytes in length.
- The 80386 and above access memory segments that are between 1 and 1M byte, or 4K and 4G bytes in length.
- There is another feature found in the 80386 through the Pentium 4 descriptor that is not found in the 80286 descriptor: the G BIT, or GRANULARITY BIT.
- If G = 0 , the limit specifies a segment limit of 00000H to FFFFFH. If G = 1 , the value of the limit is multiplied by 4K bytes (appended with FFFH). The limit is then 00000FFFFH to FFFFFFFH, if G = 1 .
- This allows a segment length of 4K to 4G bytes in steps of 4K bytes.

- In the 64-bit descriptor, the L  $_{\rm BIT}$  selects 64-bit addresses in a Pentium 4 or Core2 with 64-bit extensions when L = 1 and 32-bit compatibility mode when L = 0.
- In 64-bit protected operation, the code segment register is still used to select a section of code from the memory.
- The 64-bit descriptor has no limit or base address. It only contains an access rights byte and the control bits.
- In the 64-bit mode, there is no segment or limit in the descriptor and the base address of the segment, although not placed in the descriptor, is 00 0000 0000H.
- This means that all code segments start at address zero for 64-bit operation. There are no limit checks for a 64-bit code segment.

- $\bullet$  The AV  $_{\rm BIT}$ , in the 80386 and above descriptor, is used by some operating systems to indicate that the segment is available ( AV=1 ) or not available ( AV=0 ).
- $\bullet$  The D  $_{\rm BIT}$  indicates how the 80386 through the Core2 instructions access register and memory data in the protected or real mode.
- $\bullet$  If D = 0 , the instructions are 16-bit instructions, compatible with the 8086–80286 microprocessors.
- This means that the instructions use 16-bit offset addresses and 16-bit register by default.
- This mode is often called the 16-bit INSTRUCTION MODE or DOS MODE.
- If D = 1, the instructions are 32-bit instructions.
- By default, the 32-bit instruction mode assumes that all offset addresses and all registers are 32 bits.
- The default for register size and offset address is overridden in both the 16-and 32-bit instruction modes.

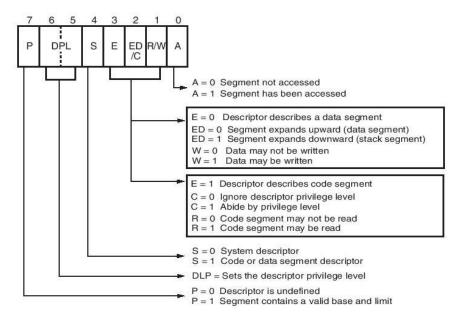


Figure: The access rights byte for the 80286 through Core2 descriptor

- The ACCESS RIGHTS BYTE controls access to the protected mode segment.
- This byte describes how the segment functions in the system.
- The access rights byte allows complete control over the segment.
- If the segment is a data segment, the direction of growth is specified.
- If the segment grows beyond its limit, the microprocessor's operating system program is interrupted, indicating a general protection fault.
- We can even specify whether a data segment can be written or is write-protected.
- The code segment is also controlled in a similar fashion and can have reading inhibited to protect software.
- In 64-bit mode there is only a code segment and no other segment descriptor types.
- A 64-bit flat model program contains its data and stacks in the code segment.

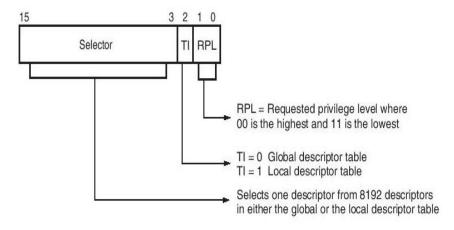


Figure: The contents of a segment register during protected mode operation.

- Descriptors are chosen from the descriptor table by the segment register.
- The Figure above shows how the segment register functions in the protected mode system.
- The segment register contains a 13-bit selector field, a table selector bit, and a requested privilege level field.
- The 13-bit selector chooses one of the 8192 descriptors from the descriptor table.
- The TI bit selects either the global descriptor table (TI = 0) or the local descriptor table (TI = 1).
- The requested privilege level (RPL) requests the access privilege level of a memory segment.
- The highest privilege level is 00 and the lowest is 11.

- If the requested privilege level matches or is higher in priority than the privilege level set by the access rights byte, access is granted.
- For example, if the requested privilege level is 10 and the access rights byte sets the segment privilege level at 11, access is granted because 10 is higher in priority than privilege level 11.
- Privilege levels are used in multiuser environments.
- If privilege levels are violated, the system normally indicates an application or privilege level violation.

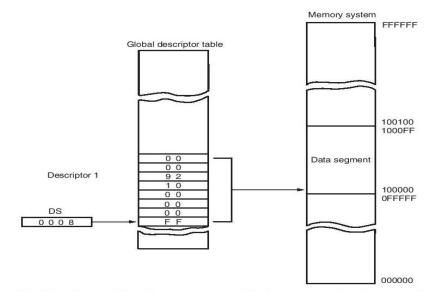


Figure: Using the DS register to select a description from the global descriptor table. In this example, the DS register accesses memory locations 00100000H–001000FFH as a data segment.

- The Figure above shows how the segment register, containing a selector, chooses a descriptor from the global descriptor table.
- The entry in the global descriptor table selects a segment in the memory system.
- In this illustration, DS contains 0008H, which accesses the descriptor number 1 from the global descriptor table using a requested privilege level of 00.
- Descriptor number 1 contains a descriptor that defines the base address as 00100000H with a segment limit of 000FFH.
- This means that a value of 0008H loaded into DS causes the microprocessor to use memory locations 00100000H–001000FFH for the data segment with this example descriptor table.
- Note that descriptor zero is called the null descriptor, must contain all zeros, and may not be used for accessing memory.

- The global and local descriptor tables are found in the memory system.
- In order to access and specify the address of these tables, the 80286–Core2 contain PROGRAM-INVISIBLE REGISTERS.
- The program-invisible registers are not directly addressed by software.
- The Figure below illustrates the program-invisible registers as they appear in the 80286 through the Core2.
- These registers control the microprocessor when operated in protected mode.

Segment registers		Descriptor cache		
cs		Base address	Limit	Access
DS				
ES				
SS				
FS	1 1			
F-15-E21.				
GS				1
-				1
		Base address	Limit	Access
GS TR		Base address	Limit	Access
GS	Descriptor table ac		Limit	Access
GS TR	Descriptor table ac Base address		Limit Program in	

#### Notes:

- 1. The 80286 does not contain FS and GS nor the program-invisible portions of these registers.
- 2. The 80286 contains a base address that is 24-bits and a limit that is 16-bits.
- 3. The 80386/80486/Pentium/Pentium Pro contain a base address that is 32-bits and a limit that is 20-bits.
- 4. The access rights are 8-bits in the 80286 and 12-bits in the 80386/80486/Pentium-Core2.

Figure: The program-invisible register within the 80286–Core2 microprocessors,

- Each of the segment registers contains a program-invisible portion used in the protected mode.
- The program-invisible portion of these registers is often called CACHE
   MEMORY because cache is any memory that stores information. This cache
   is not to be confused with the level 1 or level 2 caches found with the
   microprocessor.
- The program-invisible portion of the segment register is loaded with the base address, limit, and access rights each time the number segment register is changed.
- When a new segment number is placed in a segment register, the microprocessor accesses a descriptor table and loads the descriptor into the program-invisible portion of the segment register.
- It is held there and used to access the memory segment until the segment number is again changed.
- This allows the microprocessor to repeatedly access a memory segment without referring to the descriptor table (hence the term cache).

- The GDTR (global descriptor table register) and IDTR (interrupt descriptor table register) contain the base address of the descriptor table and its limit.
- The limit of each descriptor table is 16 bits because the maximum table length is 64K bytes.
- When the protected mode operation is desired, the address of the global descriptor table and its limit are loaded into the GDTR.
- Before using the protected mode, the interrupt descriptor table and the IDTR must also be initialized.
- The location of the local descriptor table is selected from the global descriptor table.
- One of the global descriptors is set up to address the local descriptor table.

- To access the local descriptor table, the LDTR (local descriptor table register) is loaded with a selector, just as a segment register is loaded with a selector.
- This selector accesses the global descriptor table and loads the address, limit, and access rights of the local descriptor table into the cache portion of the LDTR.
- ullet The TR (task register) holds a selector, which accesses a descriptor that defines a task.
- The descriptor for the procedure or application program is stored in the global descriptor table, so access can be controlled through the privilege levels.
- ullet The task register allows a context or task switch in about 17  $\mu s$ .
- Task switching allows the microprocessor to switch between tasks in a fairly short amount of time.

#### THANK YOU