Lab 2: Introduction to the TM4C123 Microcontroller and the Keil uVision Software Development Tool Xiaorong Zhang

Preparation

Install and run Keil uVision on your personal computer. The *software installation instruction* can be downloaded from the *Software* section on iLearn.

Review the content of lecture 3 and 4

Purpose

The general purpose of this lab is to familiarize you with the TM4C123 microcontroller and the software development steps using the uVision simulator. Starting with Lab 3, we will use uVision for both simulation and debugging on the real board, but for this lab, we will use just the simulator. You will learn how to develop and simulate assembly programs using uVision. Through a graphical user interface, the programmer can monitor program execution and the status of the simulated microcontroller including the CPU registers and memory. Software skills you will learn include variable initialization, memory access instructions, arithmetic operations, condition code flags, and branching.

References

- Cortex-M3/M4F Instruction Set Technical User's Manual. (ilearn -> Reference Materials)
- ➤ Thumb-2 Instruction Set Quick Reference Card (iLearn-> Reference Materials)

Demonstration and Submission

You will have one week to complete the lab. You can discuss with your group members and complete the lab work together. Every group will need to write and submit a lab report to iLearn->Labs->Lab2 report submission. The lab report should include

- The students' names, emails and IDs
- The answers of all the questions asked in the lab handout
- Discussion and suggestions: Through your lab experiments, what have you learned? Do you have any suggestions for future labs or improvement on the learning experiences?

If you finish the lab experiments during the lab time, please demonstrate your results to the instructor. The instructor may ask questions regarding your program. After the demonstration, you can leave. The latest demonstration time will be the beginning of next lab. The lab report is due at 6pm on the day of your next lab.

Again, you can work with your group members on all the lab activities, but make sure you understand all the materials.

Procedure

Before you start the tutorial, make sure you have completed $Lab\ 1$ – $Software\ Installation$ and installed all the software tools.

1. Download the project *sim.zip* from iLearn->Labs->Lab2->sim. This is a sample project that calculates the sum, difference, and absolute difference of two 32-bit signed numbers NUM1 and NUM2 and then stores the results in memory. It is assumed that you already install the TivaWare library in C:\ti\TivaWare_C_Series-2.1.0.12573. First create a new directory "my_projects" under C:\ti\TivaWare_C_Series-2.1.0.12573\examples\boards and then save and uncompress the sample project *sim.zip* under "C:\ti\TivaWare_C_Series-2.1.0.12573\examples\boards\my_projects" as shown in Figure 1.

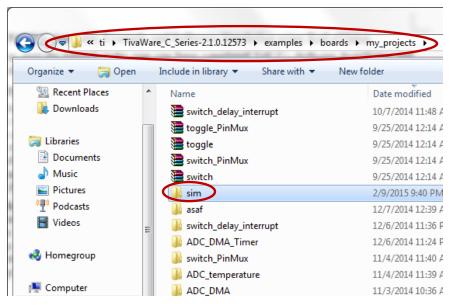


Figure 1

2. Start the Keil μ Vision IDE by double-clicking the icon on your desktop or by selecting it from the Windows Start Menu. When the IDE loads, it was a blank screen (see Figure 2).

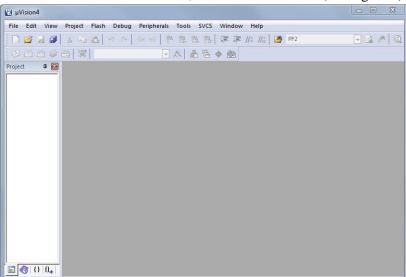


Figure 2

3. Open the project in Keil uVision. From the Project menu, select Open Project... (See Figure 3).

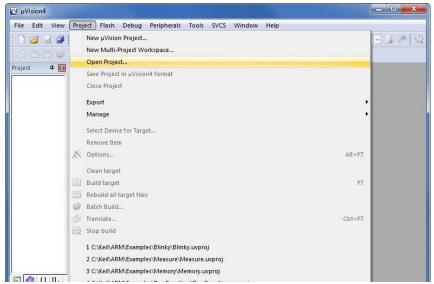


Figure 3

4. Use the dialog box to navigate to the sim project. From the location where you installed TivaWare. should be located C:\ti\TivaWare C Seriesthe sim project in: 2.1.0.12573\examples\boards\my_projects\sim. Select the sim.uvproj project file and click Open. The project opens in the IDE (see Figure 4). In the *Project* window on the left side, there are two .s files under Source Group 1. **Startup.s** contains assembly source code to define the stack, reset vector, and interrupt vectors. All projects in this class will include a **Startup** file, and you do not need to make any changes to the Startup.s file for this lab. The sim.s file contains the assembly source code for this lab.

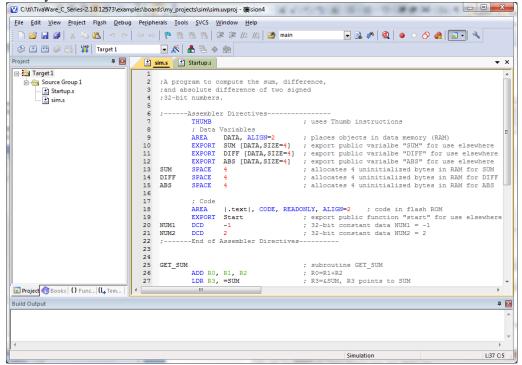


Figure 4

5. Understand the sample project *sim*. The sample project *sim* implements an assembly program that calculates the sum, difference, and absolute difference of two constant 32-bit signed numbers NUM1 and NUM2 and then stores the results in three defined variables SUM, DIFF, and ABS allocated in the RAM. Figure 5 shows the flowchart of the program. The program consists of a main routine and two subroutines GET_SUM and GET_DIFF. GET_SUM calculates the sum of NUM1 and NUM2 and stores the result into the variable SUM. GET_DIFF calculates the difference of NUM1 and NUM2 and stores the result into the variable DIFF. If DIFF is less than 0, the program calculates the absolute different of NUM1 and NUM2 by calculating 0-DIFF, otherwise the absolute difference is equal to DIFF. The absolute difference is then stored in the variable ABS. If you are querying the usage of any instruction, you can search for the instruction (ctrl+F5) in the *Cortex-M3/M4F Instruction Set Technical User's Manual* or the *Thumb-2 Instruction Set Quick Reference Card* (both can be downloaded from iLearn->Reference Materials).

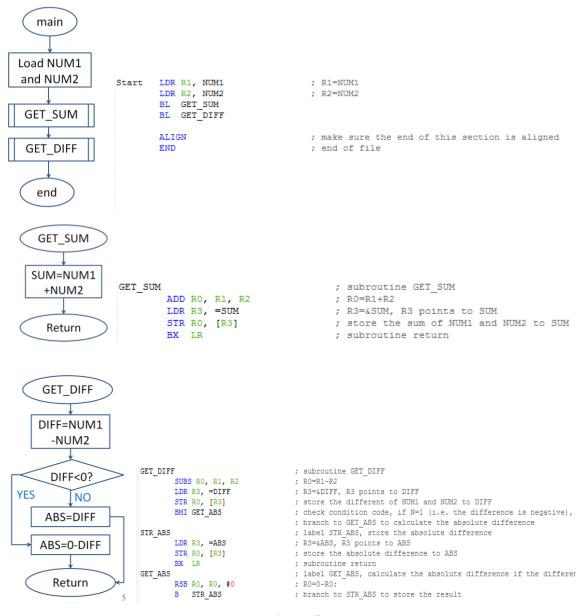


Figure 5

6. Compile the project by clicking *Project->Build target*. This should show 0 error and 0 warning in the *Build Output* window (see Figure 6).

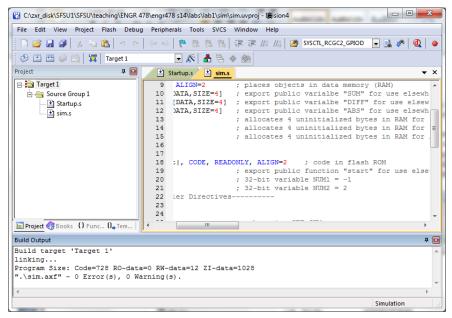


Figure 6

7. Now you can start to simulate the program. Click *Debug->Start/Stop Debug Session* (see Figure 7), then click OK. The simulation starts. You will see several monitor windows as shown in Figure 8 including the *Registers Window, Disassembly Window, source code window, and Memory 1 Window*.

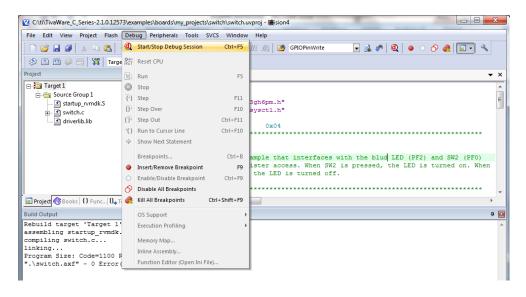


Figure 7

8. In the source code editing window, you will see the symbol points to the instruction "MOVW R0, #0xED88" in **Startup.s**. This indicates the first instruction to be executed after the CPU is reset.

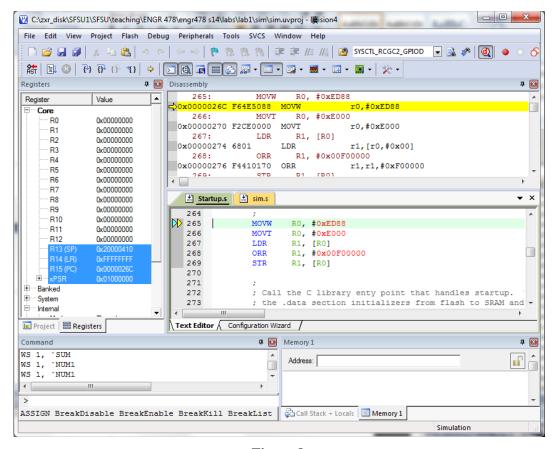


Figure 8

- 9. The uVision Debugger is powerful. While debugging, developers have full access to the source code, can modify the source code, and can control and analyze program execution on high-level (C/C++) or assembly level. Please refer to *uVision Help* (Help->uVision Help->uVision User's Guide) for more information of the debug menu and commands. In this activity, you will be using the "Step" command to execute the assembly program instruction by instruction, and meanwhile you will closely watch the value changes of CPU registers and memory and record the values of involved registers and memory locations for each step.
- 10. **Registers** window (Figure 9). The Registers window shows the content of registers, lists microcontroller operation modes, and system and internal states. You are able to track the contents stored in the general purpose registers (R0-R12) and the special registers (SP, LR, PC, and PSR) when the software program is executed. You can also expand the xPSR register to view the individual bits in the program status register as shown in Figure 10. The condition flags N, Z, C, and V are set by arithmetic and logical instructions and used for conditional code execution.

Con	dition Code Bits	<u>Indicates</u>				
Ν	negative	Result is negative				
Z	zero	Result is zero				
V	overflow	Signed overflow				
C	carry	Unsigned overflow				

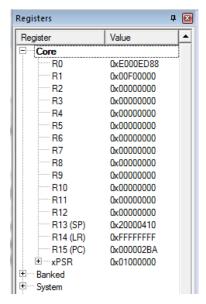


Figure 9

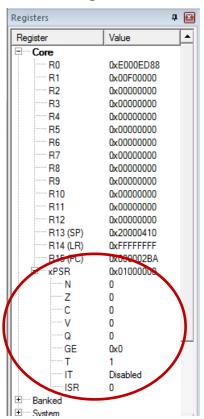


Figure 10

11. **Disassembly** Window. The Disassembly Window shows the program execution in assembly code. You can see the memory address, the machine code, and the assembly code of each instruction in this window. The currently executing instruction is always highlighted in the window. Figure 11 shows an example in which the program counter (R15 PC) points to the first instruction to be executed in sim.s: "Start LDR R1, NUM1". We can see in the Registers Window, the content in PC is 0x0000.02BA, which is the memory address of the instruction to be

executed. We can also see in the Disassembly Window, the line starting with 0x0000.02BA is highlighted, meaning this instruction is to be executed. "F85F1028" is the machine code of the instruction, which is the content stored in address 0x0000.02BA. "LDR.W r1, [pc, #-40]" is another format of "LDR R1, NUM1", which indicates that the addressing mode of the instruction is PC relative.

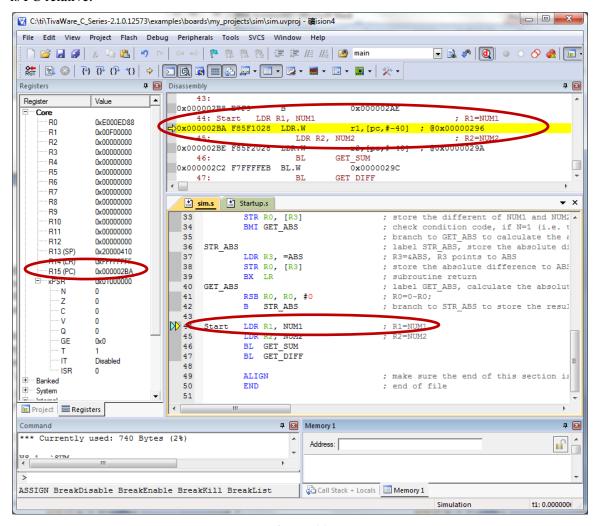


Figure 11

12. **Memory** Windows. The Memory windows show the content of memory areas. You can open a memory window by clicking View -> Memory Windows -> Memory 1 as shown in Figure 12. You can enter a memory address and view the content stored in that address. For example, the address of the 32-bit variable SUM in the sample program is 0x2000.0000 because SUM is the first variable defined in the RAM. If you enter 0x20000000 (don't forget type 0x) in the Memory 1 Window as shown in Figure 13, you will see the value of SUM stored in 0x20000000-0x20000003 is 00 00 00 00 at the beginning.

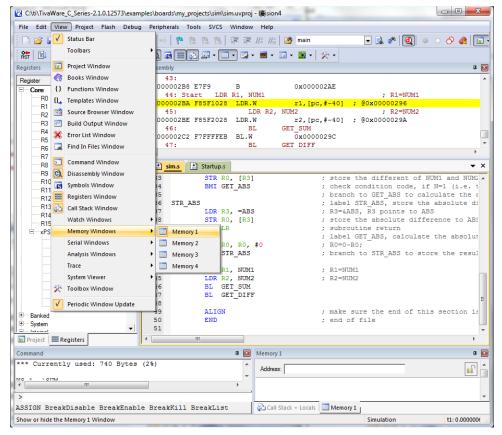


Figure 12


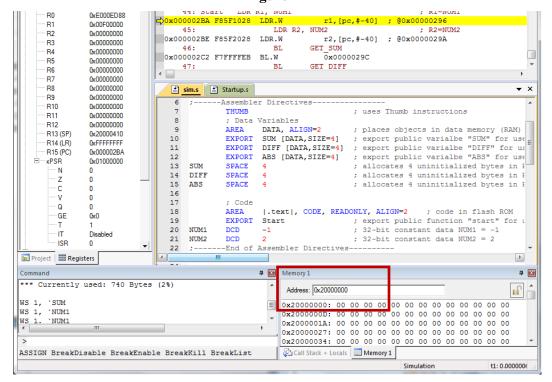


Figure 13

13. To simulate the program step by step, click *Debug->Step* or the button. Every time you click it, one instruction will be executed, and the registers and memory will be updated accordingly. The program counter R15(PC) (displayed in the *Registers* window on the left panel) always points to the next instruction to be executed. After you run the "Step" command for a few times, you will see the symbol jumps from the instruction "B Start" in **Startup.s** to "Start LDR R1, NUM1" in **sim.s** as shown in the figure below. The label "Start" indicates the first instruction to be executed in the user developed code **sim.s**.

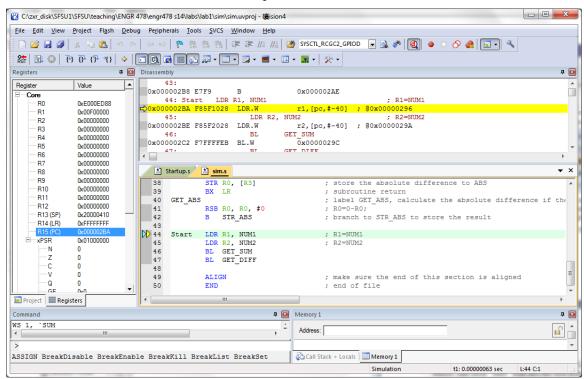

6. Run the "step" command instruction by instruction until the end of the program. Record the values all the important registers and memory locations, and then answer the questions below.

Questions

1. Create a table as shown below to record the values of important registers and variables when simulating the program step by step.

Steps	PC	LR	NZCV	R0	R1	R2	R3	SUM	DIFF	ABS
1										
2										

- 2. What are the addresses of variables **SUM**, **DIFF**, and **ABS**? What values are stored at these addresses when the simulation is completed?
- 3. In this program, consider the following items including SUM, DIFF, ABS, NUM1, NUM2, and all the instructions, which are stored in RAM and which are stored in ROM?

- 4. What is the address of instruction "**BL GET_SUM**" in memory? What does this instruction do? After executing this instruction, what are the values stored in PC and LR? Why?
- 5. What does the instruction "**BMI GET_ABS**" do?
- 6. After executing "SUBS R0, R1, R2", what are the values of the condition code flags? Why?
- 7. Edit **sim.s**, modify NUM1 and NUM2 to be 5 and 3 respectively and simulate the program again. What are the values stored in SUM, DIFF, and ABS after the simulation?
- 8. Add a new function to the sample program which compares the values of NUM1 and NUM2 and stores the larger value into a new variable **LARGER**. You need to
 - a. Define a new 32-bit variable LARGER
 - b. Design a subroutine **GET_LARGER**, draw the flowchart of the subroutine, and write assembly code to implement this subroutine
 - c. Compile and simulate your program to validate your code. You must demonstrate your results to Dr. Anwar.

In your lab report, please include:

- The assembly program listing with detailed comments and the flow chart of the program.
- The execution results of your program.