

IBM Z NetView
Version 6 Release 3

Messages and Codes
Volume 2 (DUI-IHS)



Note

Before using this information and the product it supports, read the information in [“Notices” on page 929](#).

This edition applies to version 6, release 3 of IBM Z NetView (product number 5697-NV6) and to all subsequent versions, releases, and modifications until otherwise indicated in new editions.

This edition replaces GC27-2857-06.

© **Copyright International Business Machines Corporation 1997, 2019.**

US Government Users Restricted Rights – Use, duplication or disclosure restricted by GSA ADP Schedule Contract with IBM Corp.

Contents

About this publication.....	V
Intended audience.....	v
Publications.....	v
IBM Z NetView library.....	v
Related publications	vii
Terminology in this Library.....	vii
Using IBM Z NetView online help.....	vii
Accessing publications online.....	viii
Ordering publications	viii
Accessibility	viii
Tivoli user groups.....	viii
Support information.....	viii
Conventions used in this publication.....	ix
Typeface conventions	ix
Operating system-dependent variables and paths.....	ix
Syntax diagrams.....	ix
 Chapter 1. DUI Prefix Messages.....	 1
 Chapter 2. DWO Prefix Messages.....	 143
 Chapter 3. EJV Prefix Messages.....	 289
 Chapter 4. EKV Prefix Messages.....	 291
 Chapter 5. EKV Prefix Messages.....	 365
 Chapter 6. EKV Prefix Messages.....	 369
 Chapter 7. EZL Prefix Messages.....	 381
 Chapter 8. FKV Prefix Messages.....	 459
 Chapter 9. FKX Prefix Messages.....	 489
 Chapter 10. FLB Prefix Messages.....	 521
 Chapter 11. FLC Prefix Messages.....	 587
 Chapter 12. FLCI Prefix Messages.....	 637
 Chapter 13. IHS Prefix Messages Issued from the Host.....	 643
 Chapter 14. IHS Prefix Messages Issued from the NetView Management Console Workstation.....	 699
 Chapter 15. GMFHS Method Error Messages.....	 855

Appendix A. Codes.....	911
NetView Abend Codes.....	911
Alias Sense Codes.....	924
Global Sense Codes.....	924
Specific-Request Sense Codes.....	924
LUC Conversation Request Service Return Codes and Sense Codes.....	925
Generic Alert Code Points.....	926
Code Point Format.....	926
Resource Types (X'05').....	926
Recommended Actions (X'81').....	927
Detail Data (X'82').....	927
Detail Data (X'85').....	927
Actual Actions (X'86').....	927
Generic Alert Data/Resolution Data (X'92').....	927
Probable Causes (X'93').....	928
User Causes (X'94').....	928
Install Causes (X'95').....	928
Failure Causes (X'96').....	928
Notices.....	929
Programming Interfaces.....	930
Trademarks.....	930
Privacy policy considerations.....	930

About this publication

The IBM Z® NetView® product provides advanced capabilities that you can use to maintain the highest degree of availability of your complex, multi-platform, multi-vendor networks and systems from a single point of control. This publication, *IBM Z NetView Messages and Codes Volume 2 (DUI-IHS)*, lists the messages produced by the NetView program. Many of the messages described in this publication can be used in NetView automation. See the *IBM Z NetView Automation Guide* for more information about NetView automation. Messages that are new or changed for this release are listed in the *IBM Z NetView Installation: Migration Guide*. You can display the descriptions for SNA or VTAM® sense codes that you encounter in a NetView message by using the SENSE command list. For more information, see the *Systems Network Architecture Formats* manual or the appropriate VTAM manual.

Intended audience

This publication is for system programmers and operators who need explanations of and responses to the messages produced by the NetView program.

Publications

This section lists publications in the IBM Z NetView library and related documents. It also describes how to access NetView publications online and how to order NetView publications.

IBM Z NetView library

The following documents are available in the IBM Z NetView library:

- *Administration Reference*, SC27-2869, describes the NetView program definition statements required for system administration.
- *Application Programmer's Guide*, SC27-2870, describes the NetView program-to-program interface (PPI) and how to use the NetView application programming interfaces (APIs).
- *Automation Guide*, SC27-2846, describes how to use automated operations to improve system and network efficiency and operator productivity.
- *Command Reference Volume 1 (A-N)*, SC27-2847, and *Command Reference Volume 2 (O-Z)*, SC27-2848, describe the NetView commands, which can be used for network and system operation and in command lists and command procedures.
- *Installation: Configuring Additional Components*, GC27-2851, describes how to configure NetView functions beyond the base functions.
- *Installation: Configuring the NetView Enterprise Management Agent*, GC27-2853, describes how to install and configure the IBM Z NetView Enterprise Management Agent.
- *Installation: Getting Started*, GI11-9443, describes how to install and configure the base NetView program.
- *Installation: Migration Guide*, GC27-2854, describes the new functions that are provided by the current release of the NetView product and the migration of the base functions from a previous release.
- *IP Management*, SC27-2855, describes how to use the NetView product to manage IP networks.
- *Messages and Codes Volume 1 (AAU-DSI)*, GC27-2856, and *Messages and Codes Volume 2 (DUI-IHS)*, GC27-2857, describe the messages for the NetView product, the NetView abend codes, the sense codes that are included in NetView messages, and generic alert code points.
- *Programming: Pipes*, SC27-2859, describes how to use the NetView pipelines to customize a NetView installation.

- *Programming: REXX and the NetView Command List Language*, SC27-2861, describes how to write command lists for the NetView product using the Restructured Extended Executor language (REXX) or the NetView command list language.
- *Security Reference*, SC27-2863, describes how to implement authorization checking for the NetView environment.
- *Troubleshooting Guide*, GC27-2865, provides information about documenting, diagnosing, and solving problems that occur in the NetView product.
- *Tuning Guide*, SC27-2874, provides tuning information to help achieve certain performance goals for the NetView product and the network environment.
- *User's Guide: Automated Operations Network*, SC27-2866, describes how to use the NetView Automated Operations Network (AON) component, which provides event-driven network automation, to improve system and network efficiency. It also describes how to tailor and extend the automated operations capabilities of the AON component.
- *User's Guide: NetView*, SC27-2867, describes how to use the NetView product to manage complex, multivendor networks and systems from a single point.
- *User's Guide: NetView Enterprise Management Agent*, SC27-2876, describes how to use the NetView Enterprise Management Agent.
- *Using Tivoli System Automation for GDPS/PPRC HyperSwap Manager with NetView*, GI11-4704, provides information about the Tivoli® System Automation for GDPS®/PPRC HyperSwap® Manager with NetView feature, which supports the GDPS and Peer-to-Peer Remote Copy (PPRC) HyperSwap Manager services offering.
- *Licensed Program Specifications*, GC31-8848, provides the license information for the NetView product.
- *Program Directory for IBM Z NetView US English*, GI11-9444, contains information about the material and procedures that are associated with installing the NetView product.
- *Program Directory for IBM Z NetView Japanese*, GI11-9445, contains information about the material and procedures that are associated with installing the NetView product.
- *Program Directory for IBM Z NetView Enterprise Management Agent*, GI11-9446, contains information about the material and procedures that are associated with installing the IBM Z NetView Enterprise Management Agent.

The following books are archived:

- *Customization Guide*, SC27-2849, describes how to customize the NetView product and points to sources of related information.
- *Data Model Reference*, SC27-2850, provides information about the Graphic Monitor Facility host subsystem (GMFHS), SNA topology manager, and MultiSystem Manager data models.
- *Installation: Configuring Graphical Components*, GC27-2852, describes how to install and configure the NetView graphics components.
- *Programming: Assembler*, SC27-2858, describes how to write exit routines, command processors, and subtasks for the NetView product using assembler language.
- *Programming: PL/I and C*, SC27-2860, describes how to write command processors and installation exit routines for the NetView product using PL/I or C.
- *Resource Object Data Manager and GMFHS Programmer's Guide*, SC27-2862, describes the NetView Resource Object Data Manager (RODM), including how to define your non-SNA network to RODM and use RODM for network automation and for application programming.
- *SNA Topology Manager Implementation Guide*, SC27-2864, describes planning for and implementing the NetView SNA topology manager, which can be used to manage subarea, Advanced Peer-to-Peer Networking, and TN3270 resources.
- *User's Guide: NetView Management Console*, SC27-2868, provides information about the NetView management console interface of the NetView product.

Related publications

You can find additional product information on the IBM Z NetView web site at <https://www.ibm.com/us-en/marketplace/ibm-tivoli-netview-for-zos>.

For information about the NetView Bridge function, see *Tivoli NetView for OS/390 Bridge Implementation*, SC31-8238-03 (available only in the V1R4 library).

Terminology in this Library

The following terms are used in this library:

CNMCMC

For the CNMCMC member and the members that are included in it using the %INCLUDE statement

CNMSTYLE

For the CNMSTYLE member and the members that are included in it using the %INCLUDE statement

DSIOPF

For the DSIOPF member and the members that are included in it using the %INCLUDE statement

IBM® Tivoli Netcool®/OMNIbus

For either of these products:

- IBM Tivoli Netcool/OMNIbus
- IBM Tivoli OMNIbus and Network Manager

MVS™

For z/OS® operating systems

MVS element

For the base control program (BCP) element of the z/OS operating system

NetView

For the following products:

- IBM Z NetView version 6 release 3
- IBM Tivoli NetView for z/OS version 6 release 2 modification 1
- NetView releases that are no longer supported

PARMLIB

For SYS1.PARMLIB and other data sets in the concatenation sequence

VTAM

For Communications Server - SNA Services

Unless otherwise indicated, topics to programs indicate the latest version and release of the programs. If only a version is indicated, the topic is to all releases within that version.

When a topic is made about using a personal computer or workstation, any programmable workstation can be used.

Using IBM Z NetView online help

The following types of IBM Z NetView mainframe online help are available, depending on your installation and configuration:

- General help and component information
- Command help
- Message help
- Sense code information
- Recommended actions

Accessing publications online

IBM posts publications for this and all other products, as they become available and whenever they are updated, to the IBM Knowledge Center at <https://www.ibm.com/support/knowledgecenter>. You can find IBM Z NetView documentation on [IBM Z NetView Knowledge Center](#).

Note: If you print PDF documents on other than letter-sized paper, set the option in the **Print** window that enables Adobe Reader to print letter-sized pages on your local paper.

Ordering publications

You can order many Tivoli publications online at <http://www.ibm.com/e-business/linkweb/publications/servlet/pbi.wss>

You can also order by telephone by calling one of these numbers:

- In the United States: 800-426-4968
- In Canada: 800-879-2755

In other countries, contact your software account representative to order Tivoli publications. To locate the telephone number of your local representative, perform the following steps:

1. Go to <http://www.ibm.com/e-business/linkweb/publications/servlet/pbi.wss>.
2. Select your country from the list and click the grey arrow button beside the list.
3. Click **About this site** to see an information page that includes the telephone number of your local representative.

Accessibility

Accessibility features help users with a physical disability, such as restricted mobility or limited vision, to use software products successfully. Standard shortcut and accelerator keys are used by the product and are documented by the operating system. Refer to the documentation provided by your operating system for more information.

For additional information, see the Accessibility appendix in the *User's Guide: NetView*.

Tivoli user groups

Tivoli user groups are independent, user-run membership organizations that provide Tivoli users with information to assist them in the implementation of Tivoli Software solutions. Through these groups, members can share information and learn from the knowledge and experience of other Tivoli users.

Support information

If you have a problem with your IBM software, you want to resolve it quickly. IBM provides the following ways for you to obtain the support you need:

Online

Please follow the instructions located in the support guide entry: <https://www.ibm.com/support/home/pages/support-guide/?product=4429363>.

Troubleshooting information

For more information about resolving problems with the IBM Z NetView product, see the *IBM Z NetView Troubleshooting Guide*. You can also discuss technical issues about the IBM Z NetView product through the NetView user group located at <https://groups.io/g/NetView>. This user group is for IBM Z NetView customers only, and registration is required. This forum is also monitored by interested parties within IBM who answer questions and provide guidance about the NetView

product. When a problem with the code is found, you are asked to open an official case to obtain resolution.

Conventions used in this publication

This section describes the conventions that are used in this publication.

Typeface conventions

This publication uses the following typeface conventions:

Bold

- Lowercase commands and mixed case commands that are otherwise difficult to distinguish from surrounding text
- Interface controls (check boxes, push buttons, radio buttons, spin buttons, fields, folders, icons, list boxes, items inside list boxes, multicolumn lists, containers, menu choices, menu names, tabs, property sheets), labels (such as **Tip:**, and **Operating system considerations:**)
- Keywords and parameters in text

Italic

- Citations (examples: titles of publications, diskettes, and CDs)
- Words defined in text (example: a nonswitched line is called a *point-to-point line*)
- Emphasis of words and letters (words as words example: "Use the word *that* to introduce a restrictive clause."; letters as letters example: "The LUN address must start with the letter *L*.")
- New terms in text (except in a definition list): a *view* is a frame in a workspace that contains data.
- Variables and values you must provide: ... where *myname* represents...

Monospace

- Examples and code examples
- File names, programming keywords, and other elements that are difficult to distinguish from surrounding text
- Message text and prompts addressed to the user
- Text that the user must type
- Values for arguments or command options

Operating system-dependent variables and paths

For workstation components, this publication uses the UNIX convention for specifying environment variables and for directory notation.

When using the Windows command line, replace **\$variable** with **%variable%** for environment variables and replace each forward slash (/) with a backslash (\) in directory paths. The names of environment variables are not always the same in the Windows and UNIX environments. For example, %TEMP% in Windows environments is equivalent to \$TMPDIR in UNIX environments.

Note: If you are using the bash shell on a Windows system, you can use the UNIX conventions.

Syntax diagrams

The following syntax elements are shown in syntax diagrams. Read syntax diagrams from left-to-right, top-to-bottom, following the horizontal line (the main path).

- [“Symbols” on page x](#)
- [“Parameters” on page x](#)
- [“Punctuation and parentheses” on page x](#)

- [“Abbreviations” on page xi](#)

For examples of syntax, see [“Syntax examples” on page xi](#).

Symbols

The following symbols are used in syntax diagrams:



Marks the beginning of the command syntax.



Marks the end of the command syntax.



Indicates that the command syntax is continued on the next line.



Indicates that a statement is continued from the previous line.



Marks the beginning and end of a fragment or part of the command syntax.

Parameters

The following types of parameters are used in syntax diagrams:

Required

Required parameters are shown on the main path.

Optional

Optional parameters are shown below the main path.

Default


Default parameters are shown above the main path. In parameter descriptions, default parameters are underlined.

Syntax diagrams do not rely on highlighting, brackets, or braces. In syntax diagrams, the position of the elements relative to the main syntax line indicates whether an element is required, optional, or the default value.

When you issue a command, spaces are required between the parameters unless a different separator, such as a comma, is specified in the syntax.

Parameters are classified as keywords or variables. Keywords are shown in uppercase letters. Variables, which represent names or values that you supply, are shown in lowercase letters and are either italicized or, in NetView help, displayed in a differentiating color.

In the following example, the `USER` command is a keyword, the `user_id` parameter is a required variable, and the `password` parameter is an optional variable.



Punctuation and parentheses

You must include all punctuation that is shown in the syntax diagram, such as colons, semicolons, commas, minus signs, and both single and double quotation marks.

When an operand can have more than one value, the values are typically enclosed in parentheses and separated by commas. For a single value, the parentheses typically can be omitted. For more information, see [“Multiple operands or values” on page xii](#).

If a command requires positional commas to separate keywords and variables, the commas are shown before the keywords or variables.

When examples of commands are shown, commas are also used to indicate the absence of a positional operand. For example, the second comma indicates that an optional operand is not being used:

```
COMMAND_NAME opt_variable_1,opt_variable_3
```

You do not need to specify the trailing positional commas. Trailing positional and non-positional commas either are ignored or cause a command to be rejected. Restrictions for each command state whether trailing commas cause the command to be rejected.

Abbreviations

Command and keyword abbreviations are listed in synonym tables after each command description.

Syntax examples

The following examples show the different uses of syntax elements:

- [“Required syntax elements” on page xi](#)
- [“Optional syntax elements” on page xi](#)
- [“Default keywords and values” on page xi](#)
- [“Multiple operands or values” on page xii](#)
- [“Syntax that is longer than one line” on page xii](#)
- [“Syntax fragments” on page xii](#)

Required syntax elements

Required keywords and variables are shown on the main syntax line. You must code required keywords and variables.

➤ REQUIRED_KEYWORD — *required_variable* ➤

A required choice (two or more items) is shown in a vertical stack on the main path. The items are shown in alphanumeric order.

➤
└─ REQUIRED_OPERAND_OR_VALUE_1
└─ REQUIRED_OPERAND_OR_VALUE_2
➤

Optional syntax elements

Optional keywords and variables are shown below the main syntax line. You can choose not to code optional keywords and variables.

➤
└─ OPTIONAL_OPERAND
➤

A required choice (two or more items) is shown in a vertical stack below the main path. The items are shown in alphanumeric order.


➤
└─ OPTIONAL_OPERAND_OR_VALUE_1
└─ OPTIONAL_OPERAND_OR_VALUE_2
➤

Default keywords and values

Default keywords and values are shown above the main syntax line in one of the following ways:


- A default keyword is shown only above the main syntax line. You can specify this keyword or allow it to default. The following syntax example shows the default keyword KEYWORD1 above the main syntax line and the rest of the optional keywords below the main syntax line.

- If an operand has a default value, the operand is shown both above and below the main syntax line. A value below the main syntax line indicates that if you specify the operand, you must also specify either the default value or another value shown. If you do not specify the operand, the default value above the the main syntax line is used. The following syntax example shows the default values for operand OPTION=* above and below the main syntax line.

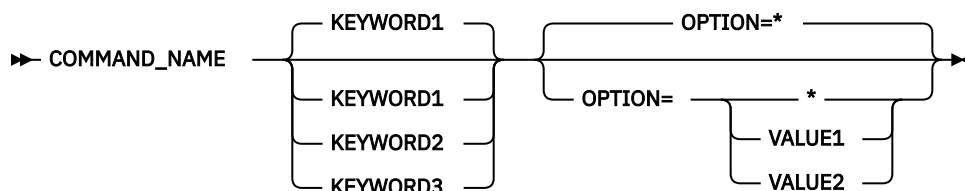


Multiple operands or values

An arrow returning to the left above a group of operands or values indicates that more than one can be selected or that a single one can be repeated.

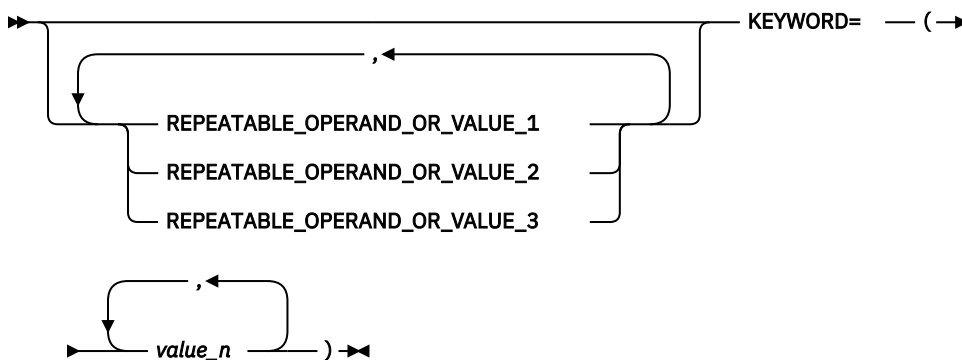


Syntax that is longer than one line

If a diagram is longer than one line, each line that is to be continued ends with a single arrowhead and the following line begins with a single arrowhead.



Syntax fragments

Some syntax diagrams contain syntax fragments, which are used for lengthy, complex, or repeated sections of syntax. Syntax fragments follow the main diagram. Each syntax fragment name is mixed case and is shown in the main diagram and in the heading of the fragment. The following syntax example shows a syntax diagram with two fragments that are identified as **Fragment1** and **Fragment2**.



Fragment1

➤ **KEYWORD_A=** *valueA* — **KEYWORD_B** — **KEYWORD_C** ➤

Fragment2

➤ **KEYWORD_D** — **KEYWORD_E=** *valueE* — **KEYWORD_F** ➤

Chapter 1. DUI Prefix Messages

This section describes the DUI messages from the NetView program.

DUI000E **MESSAGE NUMBER *messagenum*
IS NOT IN MESSAGE CSECT
csectname. NOTIFY THE SYSTEM
PROGRAMMER.**

Explanation

The requested message was not found in the specified CSECT.

Message Variables

messagenum

The message number requested.

csectname

The message CSECT specified for this request.

System action

Processing continues.

Operator response

Notify the system programmer.

System programmer response

Contact IBM Software Support.

DUI100W **LU 6.2 COMMUNICATIONS SETUP
FOR LU *luname* HAS FAILED. THE
NETCONV START COMMAND IS
REJECTED.**

Explanation

The LU 6.2 communication setup has failed.

Message Variables

luname

The LU name specified on the NETCONV command.

System action

The NETCONV command is ignored.

Operator response

Notify the system programmer.

System programmer response

Locate the accompanying DSI769 message in the network log. This message contains the return code that explains the reason for the failure.

DUI101I **NETCONV COMMAND PROCESSED
SUCCESSFULLY.
COMMUNICATION TO LU *luname*
STARTED.**

Explanation

The NETCONV START request processed successfully.

Message Variables

luname

The name of the logical unit (LU) specified on the NETCONV command.

System action

Processing continues.

DUI102I **LU *luname* HAS ALREADY BEEN
STARTED BY *operatorid*.
CONDITION CODE = *condcode***

Explanation

The NETCONV START request is ignored because LU 6.2 communication to the specified LU has already been established by another operator, or a NETCONV START command is currently being processed.

Message Variables

luname

The name of the LU specified on the NETCONV command.

operatorid

The ID of the operator who had previously issued the NETCONV START request.

condcode

The condition code, which is one of the following:

1

Communication has already been established by the other operator.

2

A NETCONV START command issued by the listed operator is currently outstanding.

System action

The request is ignored.

Operator response

Upon receiving this message, the operator must recycle the CNMTAMEL task before attempting to issue the NETCONV command again.

DUI103E	NETCONV START COMMAND CANNOT BE PROCESSED. <i>task</i> TASK IS NOT ACTIVE.
----------------	---

Explanation

The NetView message queuing service request (DSIMQS) for the NETCONV START request failed because the target task *task* is not active.

Message Variables

task
The name of the task that was not active.

System action

The NETCONV START request is ignored.

Operator response

Start the indicated task and reissue the NETCONV command.

DUI104E	NETCONV START FOR LU <i>luname</i> REJECTED. DSIMQS FAILED WITH RC=<i>retcode</i>.
----------------	---

Explanation

The NetView message queueing service request (DSIMQS) for the NETCONV START request failed.

Message Variables

luname
The name of the LU specified on the NETCONV command.

retcode
The return code from the NetView Message Queueing Service (hexadecimal).

System action

The NETCONV START request is ignored.

Operator response

Notify the system programmer.

System programmer response

See *IBM Z NetView Programming: Assembler* for the meaning of the return code.

DUI105I	THE NETCONV COMMAND MAY BE ISSUED FROM STATUS FOCAL POINT HOSTS ONLY. <i>host</i> IS NOT A STATUS FOCAL POINT.
----------------	---

Explanation

The NETCONV command was issued from a host that is not a status focal point.

Message Variables

host
The name of the host.

System action

The NETCONV command is ignored.

DUI106E	COMMUNICATION TO LU <i>luname</i> TERMINATED ABNORMALLY: VTAM TPEND.
----------------	---

Explanation

VTAM ended and therefore the LU 6.2 conversations for *luname* also ended abnormally.

Message Variables

luname
The name of the LU whose LU 6.2 conversations have ended.

System action

The LU 6.2 conversations end.

Operator response

Notify the system programmer.

System programmer response

Determine the reason VTAM ended, restart VTAM, establish connectivity between the host and the workstation, and reissue the NETCONV command.

DUI107I	A DUPLICATE NETCONV START REQUEST WAS ISSUED FOR LU <i>luname</i>. THE REQUEST IS IGNORED.
----------------	---

Explanation

The NETCONV START request has already been issued.

Message Variables

luname

The name of the LU specified on the NETCONV command.

System action

The request is ignored.

Operator response

Upon receiving this message, the operator must recycle the CNMTAMEL task before attempting to issue the NETCONV command again.

DUI108I	A NETCONV STOP REQUEST FOR LU <i>luname</i> THAT WAS ISSUED BY <i>operatorid</i> COULD NOT BE PROCESSED.
----------------	---

Explanation

The system cannot process the NETCONV STOP request. This message can be generated by any of the following situations:

- Communication has already stopped because of the ending of the CNMTAMEL task
- Communication is in the process of becoming active
- The operator who issued the stop command did not issue the NETCONV START request.

Message Variables

luname

The name of the LU specified on the NETCONV command.

operatorid

The ID of the operator who issued the NETCONV STOP request.

System action

The request is ignored.

DUI109E	COMMUNICATION TO LU <i>luname</i> TERMINATED ABNORMALLY: OST ABEND.
----------------	--

Explanation

The operator station task (OST) that issued the NETCONV command for LU *luname* abended and therefore the LU 6.2 conversations ended abnormally.

Message Variables

luname

The name of the LU whose LU 6.2 conversations ended.

System action

The LU 6.2 conversations end.

Operator response

Reissue the NETCONV command from another operator station task (OST).

System programmer response

Determine the reason for the abend and correct the error.

DUI110E	COMMUNICATION TO LU <i>luname</i> TERMINATED ABNORMALLY: OPERATOR LOGOFF.
----------------	--

Explanation

The operator that issued the NETCONV command for LU *luname* logged off and therefore the LU 6.2 conversations ended abnormally.

Message Variables

luname

The name of the LU whose LU 6.2 conversations ended.

System action

The LU 6.2 conversations end.

Operator response

Reissue the NETCONV command from another operator.

DUI111E	COMMUNICATION TO LU <i>luname</i> TERMINATED ABNORMALLY: CNMTAMEL TASK IS TERMINATING.
----------------	---

Explanation

The CNMTAMEL task on the host is ending and therefore the LU 6.2 conversations to the workstation with the LU name *luname* ended abnormally.

Message Variables

luname

The name of the LU whose LU 6.2 conversations have been ended.

System action

The LU 6.2 conversations end.

Operator response

Notify the system programmer.

System programmer response

Determine why the CNMTAMEL task is ending and correct the error, if any. Restart the CNMTAMEL task and reestablish communication using the NETCONV command.

DUI112E	COMMUNICATION TO LU <i>luname</i> TERMINATED ABNORMALLY: FATAL ERROR DURING RECEIVE.
----------------	---

Explanation

The host encountered a fatal error while attempting to receive data from the workstation with the LU name *luname*. The LU 6.2 conversations have been ended abnormally.

Message Variables

luname

The name of the LU whose LU 6.2 conversations have been ended.

System action

The LU 6.2 conversations end.

Operator response

Notify the system programmer.

System programmer response

Interpret the return codes in message DSI769I, correct the error, and re-establish communication using the NETCONV command.

DUI113E	COMMUNICATION TO LU <i>luname</i> TERMINATED ABNORMALLY: FATAL ERROR DURING SEND.
----------------	--

Explanation

The host encountered a fatal error while attempting to send status data to the workstation with LU name *luname*. The LU 6.2 conversations have been ended abnormally.

Message Variables

luname

The name of the LU whose LU 6.2 conversations have been ended.

System action

The LU 6.2 conversations end.

Operator response

Notify the system programmer.

System programmer response

Interpret the return codes in message DSI769I, correct the error, and re-establish communication using the NETCONV command.

DUI114E	COMMUNICATION TO LU <i>luname</i> TERMINATED ABNORMALLY: FATAL ERROR
----------------	---

Explanation

The host encountered a fatal error while attempting to communicate with the workstation with the LU *luname*. The LU 6.2 conversations have been ended abnormally.

Message Variables

luname

The name of the LU whose LU 6.2 conversations have been ended.

System action

The LU 6.2 conversations end.

Operator response

Notify the system programmer.

System programmer response

Contact IBM Software Support.

DUI115E	COMMUNICATION TO LU <i>luname</i> TERMINATED ABNORMALLY: RECEIVED DATA THAT WAS NOT VALID.
----------------	---

Explanation

The host received data from the workstation with LU name *luname*. The data was not as expected and the LU 6.2 conversations have been ended abnormally.

Message Variables

luname

The name of the LU whose LU 6.2 conversations have been ended.

System action

The LU 6.2 conversations end.

Operator response

Notify the system programmer.

System programmer response

Contact IBM Software Support.

**DUI116E COMMUNICATION TO LU *luname*
TERMINATED ABNORMALLY:
WORKSTATION FATAL ERROR.****Explanation**

The workstation with the LU name *luname* encountered an error. The workstation initiated LU 6.2 conversation termination.

Message Variables***luname***

The name of the LU whose LU 6.2 conversations have been ended.

System action

The LU 6.2 conversations end.

Operator response

Notify the system programmer.

System programmer response

Determine the error detected by the workstation, correct it, and re-establish communications using the NETCONV command.

**DUI117I NETCONV COMMAND PROCESSED
SUCCESSFULLY.
COMMUNICATION TO LU *luname*
STOPPED.****Explanation**

A NETCONV STOP request was processed successfully.

Message Variables***luname***

The name of the logical unit (LU) specified on the NETCONV command.

System action

Processing continues on other requests.

**DUI118I STATUS OF NETWORK *network*
CANNOT BE MONITORED DUE TO
STORAGE SHORTAGE. DATA FROM
THIS NETWORK HAS BEEN
DISCARDED.****Explanation**

There is insufficient storage available to build the tables required to monitor the status of resources in *network*. This might be because of an unnecessarily

large value specified for the MAXRESOURCES keyword.

Message Variables***network***

The name of the network whose status cannot be monitored.

System action

The task continues, but the status information for *network* is not recorded.

Operator response

Notify the system programmer.

System programmer response

Check the value specified for the MAXRESOURCES keyword. If the value is larger than necessary for this network, reduce it and restart the task.

**DUI119I COMMUNICATION TO LU *luname*
TERMINATED NORMALLY DUE TO
THE CLOSING OF THE
COMMUNICATION SERVER.****Explanation**

The communication server at the specified logical unit (LU) ended and brought down the LU 6.2 connection to the status focal point.

Message Variables***luname***

The LU name of the workstation where the communication server ended.

System action

Processing continues.

Operator response

If you desire communication to the workstation, restart the communication server and reissue the NETCONV command to that LU.

**DUI120I DATA WAS LOST DUE TO
TERMINATION OF CNMTAMEL.****Explanation**

The status collector was sending data to the status focal point when the CNMTAMEL task ended.

System action

The CNMTAMEL task ends. Data is lost.

Operator response

Notify the system programmer.

System programmer response

Determine why the CNMTAMEL task ended and restart the task. The status collector attempts to resend the lost data.

DUI121E	THE NETCONV START COMMAND HAS FAILED BECAUSE LU <i>luname</i> IS COMMUNICATING WITH ANOTHER STATUS FOCAL POINT, IS RUNNING AN UNSUPPORTED LEVEL OF NMC, OR IS ALREADY COMMUNICATING WITH THIS STATUS FOCAL POINT.
----------------	--

Explanation

A NETCONV START command was issued to LU *luname*, which has failed for one of the following reasons:

- LU *luname* is communicating with another status focal point, and an LU can communicate with only one status focal point at a time.
- The workstation is running a release of the NetView program that is not compatible with the release used by the status focal point.
- The workstation is already communicating with the focal point through an LU6.2 or TCP/IP session.

Message Variables

luname

The name of the independent LU defined in the workstation.

System action

The NETCONV START command is rejected and no communication occurs between the status focal point and the LU.

Operator response

Determine if the workstation is communicating with another status focal point.

1. If it is possible, determine the host with which the workstation is to be communicating and reroute the session.
2. If the workstation is communicating with another status focal point in error, issue the NETCONV STOP command from that host, and reissue the NETCONV START command from the correct status focal point host.

3. If the workstation is not communicating with another status focal point, notify the system programmer.
4. Issue NETCONV ACTION=LIST OPID=ALL to determine which workstations currently have an LU6.2 or TCP/IP session with this host.

System programmer response

Check the version and release levels of the workstation and the NetView status focal point. Ensure that they are both running the same version and release of the NetView program.

DUI122E	CNMTAMEL FAILED TO RECEIVE DATA FROM LU '<i>luname</i>' DUE TO A STORAGE SHORTAGE. REQUESTED AMOUNT = <i>amount</i> BYTES.
----------------	---

Explanation

CNMTAMEL attempted to receive data from a server workstation, but cannot get enough storage to satisfy the request.

Message Variables

luname

The LU for which CNMTAMEL tried to receive data.

amount

The amount of storage that CNMTAMEL tried to get.

System action

The LU 6.2 session between the LU and the status focal point host ends.

Operator response

Notify the system programmer of the storage problems. Reissue the NETCONV command to restart the LU that had ended.

System programmer response

If the problem persists, contact IBM Software Support.

DUI123E	COMMUNICATION TO LU <i>luname</i> TERMINATED ABNORMALLY: WORKSTATION NOT RESPONDING.
----------------	---

Explanation

The CNMTAMEL task detected a data server workstation that is not responding, and has abnormally ended the LU 6.2 connections to the workstation.

Message Variables

luname

The name of the LU whose LU 6.2 connections ended.

System action

All LU 6.2 connections to the data server workstation that is not responding are ended.

Operator response

Notify the system programmer.

System programmer response

Locate the data server workstation that is not responding. Attempt to determine the problem with the workstation and correct it. The status focal point has detected that the workstation is not responding and cannot communicate with it. If the workstation appears to be responding properly, the problem might be the result of memory constraints at the data server workstation. Verify that you have enough memory on the workstation by using the *IBM Z NetView Tuning Guide*. Restart the LU 6.2 connections to the workstation by using the NETCONV command.

DUI124I	OPERATOR <i>operatorid</i> IS COMMUNICATING WITH WORKSTATION AT LU <i>luname</i>
----------------	---

Explanation

The specified operator has established a session with the specified workstation LU through an LU 6.2 connection. This message is a response to issuing the NETCONV command with the ACTION=LIST parameter.

Message Variables

operatorid

The ID of the NetView operator that logged on.

luname

The LU specified on the NETCONV command.

DUI125I	OPERATOR <i>operatorid</i> IS NOT COMMUNICATING WITH ANY WORKSTATIONS.
----------------	---

Explanation

The operator ID specified in the NETCONV ACTION=LIST OPID=*operatorid* does not have a session with any workstation.

Message Variables

operatorid

The ID of the NetView operator for which session data is requested.

DUI126I	NO OPERATOR IS COMMUNICATING WITH ANY WORKSTATION
----------------	--

Explanation

This message is returned when you issue the NETCONV command specifying ACTION=LIST OPID=ALL, and currently no operators have a session with any workstation.

DUI150E	ERROR IN '<i>initmem</i>' AT RECORD <i>recnum</i>. UNRECOGNIZED INITIALIZATION STATEMENT. THE STATEMENT IS IGNORED.
----------------	--

Explanation

An unrecognized initialization statement was encountered while reading the task initialization file. The format is not correct, or a keyword is misspelled.

Message Variables

initmem

The initialization member or file for the CNMTAMEL task.

recnum

The number of the record where the name was found.

System action

The initialization statement is ignored.

Operator response

Notify the system programmer.

System programmer response

Examine the member or file named in the message. Locate the line which is in error and correct it.

DUI152I	VTAM APPCCMD MACRO <i>appccmd</i> FAILED. REG15 = X'r15', REG0 = X'r0', RCPRI = X'code1', RCSEC = X'code2'.
----------------	--

Explanation

The VTAM APPCCMD macro *appccmd* failed.

Message Variables

appccmd

The VTAM APPCCMD macro that failed.

r15

The value in Register 15 (used for problem analysis).

r0

The value in Register 0 (used for problem analysis).

code1

The code used for problem analysis.

code2

The code used for problem analysis.

System action

The LU 6.2 conversations end.

Operator response

Notify the system programmer.

System programmer response

Contact IBM Software Support.

DUI153E	CNMTAMEL DETECTED A GMFHS INSTALLATION ERROR: MODULE DUIFERSM NOT FOUND.
----------------	---

Explanation

GMFHS has been installed but the module DUIFERSM was not successfully loaded.

System action

The module DUIFERSM is not loaded.

Operator response

Notify the system programmer.

System programmer response

Contact IBM Software Support.

DUI155E	DSILOD FAILED FOR MODULE module WITH RC= <i>retcode</i>.
----------------	---

Explanation

Module *module* cannot be loaded.

Message Variables**module**

The name of the module for which the load request failed.

retcode

The return code from DSILOD (hexadecimal).

System action

The module is not loaded.

Operator response

Notify the system programmer.

System programmer response

The DSILOD return code might be from the system LOAD macro. If you cannot determine the problem, contact IBM Software Support.

DUI156E	ERROR READING '<i>initmem</i>' AT RECORD <i>recnum</i>. NAME '<i>sfpmem</i>' IS TOO LONG. IT IS IGNORED.
----------------	---

Explanation

The member or file name specified in the message was too long. Names must be 1- to 8-characters.

Message Variables***initmem***

The member or file containing the erroneous record.

recnum

The number of the record where the name was found.

sfpmem

The member or file name that is not valid.

System action

The statement is ignored. If valid member or file names are found elsewhere, the CNMTAMEL task continues to initialize. Otherwise the task ends.

Operator response

Notify the system programmer.

System programmer response

Edit the member or file named in the message to check for incorrect or missing name specification in the record shown in the message.

DUI157E	DSIPUSH OF TERMINATION ROUTINE FAILED WITH RC = <i>retcode</i>. NOTIFY THE SYSTEM PROGRAMMER.
----------------	--

Explanation

The CNMTAMEL initialization module is unable to establish a termination routine.

Message Variables

retcode

The return code from the DSIPUSH macro (hexadecimal).

System action

The CNMTAMEL task ends.

Operator response

Notify the system programmer.

System programmer response

Contact IBM Software Support. See *IBM Z NetView Programming: Assembler* for more information on return codes.

DUI158W	DUPLICATE FPPARMS KEYWORD ENCOUNTERED IN 'initmem'. MEMBER NAME 'sfpname' WILL BE USED. ALL OTHERS ARE IGNORED.
----------------	--

Explanation

More than one FPPARMS statement was encountered in *initmem*.

Message Variables**initmem**

The initialization member or file for the CNMTAMEL task.

sfpname

The status focal point parameters member or file.

System action

All subsequent FPPARMS statements are ignored.

DUI159W	UNRECOGNIZED INITIALIZATION STATEMENT IN 'initmem'. THE KEYWORD 'keyword' IS IGNORED.
----------------	--

Explanation

An unrecognized initialization statement was encountered in the initialization member or file.

Message Variables**initmem**

The initialization member or file for the CNMTAMEL task.

keyword

The keyword that is not correct.

System action

The initialization statement is ignored.

Operator response

Notify the system programmer.

System programmer response

Examine the member or file named in the message. Locate the specified keyword and either correct the keyword or remove the line.

DUI160I	APPCCMD COMPLETED BUT CONVERSATIONS NO LONGER EXIST.
----------------	---

Explanation

An APPCCMD completed, but the conversations have already been ended.

System action

Processing continues.

DUI161I	LU <i>luname</i> NOT AVAILABLE FOR WORK; REQUEST TO THIS LU WAS ABORTED.
----------------	---

Explanation

A request was made to a workstation with an LU name *luname* that cannot be honored because this LU is either initializing or ending.

Message Variables**luname**

The LU that is not available for work.

System action

The LU finishes ending or initializing. Upon completing initialization it receives complete status information.

DUI163E	STATUS FOCAL POINT RECEIVED A REQUEST TO CHANGE THE STATUS FOCAL POINT - SYNCHRONIZATION SERIES NOT INITIATED.
----------------	---

Explanation

A CHANGEFP STATUS command was issued for this host, but the host is a status focal point. This is not correct. The target in the CHANGEFP STATUS command must be a status collector host. That is, the CNMTAMEL task in the target host must be defined as a status collector. Because status collector focal point hosts do not communicate (synchronize) with other status focal point hosts, an attempt was not made to initiate this communication. That is, the synchronization series was not initiated.

System action

The status focal point is changed for this host.

Operator response

Notify the system programmer.

System programmer response

Determine whether the target ID in the CHANGEFP STATUS command that was entered is correct. If so, recycle the CNMTAMEL task in this host and define it as a status collector. If not, ignore the message because this command was not entered correctly and will not affect status forwarding at this point.

DUI164E	REQUEST FROM STATUS FOCAL POINT <i>host1</i> IGNORED. <i>host2</i> IS A STATUS FOCAL POINT AND CANNOT HONOR REQUESTS FROM OTHER STATUS FOCAL POINTS.
----------------	---

Explanation

This status focal point, *host2*, received a request from another status focal point, *host1*. This is not valid. Status focal points must send requests only to status collectors.

Message Variables

host1

The domain ID of the host that sent the request.

host2

The domain ID of the host that received the request.

System action

The request is ignored.

Operator response

Notify the system programmer.

System programmer response

The request that was sent in error is a synchronization request. The sending focal point's initialization member is incorrect. The list of status collectors includes a focal point host. Correct the error.

DUI165E	REQUEST FROM STATUS FOCAL POINT <i>host1</i> IGNORED - THIS STATUS COLLECTOR HAS NOT DEFINED A STATUS FOCAL POINT.
----------------	---

Explanation

This host is a status collector that received a request from the status focal point host *host1*. However, this host has not defined a status focal point. That is, the DEFFOCPT STATUS statement in DSICRTTD has been omitted for this host. Therefore this status collector cannot honor the request.

Message Variables

host1

The domain ID of the status focal point host that sent the request.

System action

The request is ignored.

Operator response

Verify that the DSICRTR task is active. If it is and problems persist, notify the system programmer.

System programmer response

Define a status focal point for this status collector with the DEFFOCPT statement in DSICRTTD and recycle the DSICRTR task, or use the CHANGEFP STATUS command.

DUI166E	REQUEST FROM <i>host1</i> IGNORED - <i>host1</i> IS NOT DEFINED AS THE STATUS FOCAL POINT FOR THIS STATUS COLLECTOR.
----------------	---

Explanation

This status collector received a request from a foreign status focal point *host1*. The request has been discarded.

Message Variables

host1

The domain ID of the status focal point host that sent the request.

System action

The request is discarded.

Operator response

Notify the system programmer.

System programmer response

Check the definition member of the sending status focal point and remove the status collector specification for this status collector (if one is present).

This status collector is owned by another status focal point and cannot be owned by two.

DUI167I THE STATUS FOCAL POINT FOR THIS STATUS COLLECTOR HAS CHANGED FROM HOST *host1* TO HOST *host2*

Explanation

The CHANGEFP STATUS command was entered at host *host2* to take over this status collector. The statuses of the resources at this host are sent to the host *host2*. Problems encountered at the host *host1* can warrant the change.

Message Variables

host1

The domain ID of the previous status focal point host.

host2

The domain ID of the new status focal point host.

System action

This status collector sends status information to the new status focal point.

Operator response

The problems might have warranted the change of focal points for this status collector. Therefore, problems with any resources at this host might have to be detected here during the change.

DUI168I THE STATUS FOCAL POINT FOR THIS STATUS COLLECTOR HAS BEEN DEFINED AS *host1* BY THE CHANGEFP COMMAND.

Explanation

The CHANGEFP STATUS command was entered at host *host1* to take over this status collector, but this status collector had not previously defined a status focal point.

Message Variables

host1

The domain ID of the status focal point host.

System action

This status collector sends status information to the status focal point *host1*.

DUI169E REQUEST FROM STATUS COLLECTOR *host1* IGNORED. *host2* IS A STATUS COLLECTOR AND CANNOT HONOR REQUESTS

FROM OTHER STATUS COLLECTORS.

Explanation

This status collector, *host2*, received a request from another status collector, *host1*. This is not valid. Status collectors must only send requests to status focal points.

Message Variables

host1

The domain ID of the host that sent the request.

host2

The domain ID of the host that received the request.

System action

The request is discarded.

Operator response

Notify the system programmer.

System programmer response

The request that was sent in error is a request for synchronization. *host1* sent the request, therefore *host2* is defined as the status focal point of *host1*. This is not correct. Either the DEFFOCPT statement in DSICRTTD at *host1* is not correct or a CHANGEFP STATUS command was entered for *host2* from *host1* when *host1* was defined as a status focal point. (CHANGEFP STATUS command can only be entered from a status focal point host.) To correct the problem either change the DEFFOCPT statement in DSICRTTD and recycle the DSICRTR task at *host1*, or use the CHANGEFP STATUS command to change the status focal point of *host1*.

DUI170E LUC DEALLOCATE SERVICE REQUEST FROM *luctask1* TO *luctask2* HAS FAILED. RETURN CODE X'*retcode*'. SENSE CODE X'*sense*'.

Explanation

The *luctask1* attempted to deallocate the LUC conversation between itself and *luctask2*. The request failed.

Message Variables

luctask1

The name of the LUC task that requested the deallocate service.

luctask2

The name of the target LUC task for which the deallocate was intended.

retcode

The LUC conversation request service return code.

sense

The sense code.

System action

Processing continues.

Operator response

Notify the system programmer.

System programmer response

Attempt to interpret the documented return code and sense code and correct the problem. See [“LUC Conversation Request Service Return Codes and Sense Codes” on page 925](#) or use the NetView SENSE command. If you cannot correct the problem, contact IBM Software Support.

DUI171E	LUC DEALLOCATE MACRO HAS FAILED WITH A RETURN CODE OF X'<i>retcode</i>'.
----------------	---

Explanation

The LUC deallocate macro was not accepted by VTAM.

Message Variables

retcode

The LUC conversation request service return code.

System action

Processing continues.

Operator response

Notify the system programmer.

System programmer response

Attempt to interpret the return code and correct the problem. For more information, see [“LUC Conversation Request Service Return Codes and Sense Codes” on page 925](#). If you cannot correct the problem, contact IBM Software Support.

DUI172E	LUC ALLOCATE MACRO HAS FAILED WITH A RETURN CODE OF X'<i>retcode</i>'.
----------------	---

Explanation

The LUC allocate macro was not accepted by VTAM.

Message Variables

retcode

The LUC conversation request service return code.

System action

Processing continues.

Operator response

Notify the system programmer.

System programmer response

Attempt to interpret the return code and correct the problem. For more information, see [“LUC Conversation Request Service Return Codes and Sense Codes” on page 925](#). If you cannot correct the problem, contact IBM Software Support.

DUI173E	LUC ALLOCATE SERVICE REQUEST FROM <i>luctask1</i> TO <i>luctask2</i> HAS FAILED. RETURN CODE X'<i>retcode</i>'. SENSE CODE X'<i>sense</i>'. VTAM RTNCD X'<i>vtamrccd</i>'. VTAM FDBK2 X'<i>vtamfb</i>'. VTAM SENSE X'<i>vtamsens</i>'.
----------------	---

Explanation

luctask1 attempted to allocate an LUC conversation between itself and *luctask2*. The request failed. The requesting LUC task has data to send to the target LUC task but this data is not sent because the conversation cannot be allocated.

Message Variables

luctask1

The name of the LUC task that requested the allocate service.

luctask2

The name of the target LUC task to which the allocate was intended.

retcode

The LUC conversation request service return code.

sense

The NetView sense code.

vtamrccd

The VTAM internal return code.

vtamfb

The VTAM internal feedback code.

vtamsens

The VTAM sense code.

System action

Processing continues.

Operator response

Notify the system programmer.

System programmer response

Attempt to interpret the documented return code and sense code and correct the problem. For more information, use the RCFB and SENSE commands to determine the meaning of the return/feedback and sense codes, or see [“LUC Conversation Request Service Return Codes and Sense Codes” on page 925](#) to determine the meaning of the return code. If you cannot correct the problem, contact IBM Software Support.

DUI174E	LUC SEND MACRO HAS FAILED WITH A RETURN CODE OF X'<i>retcode</i>'.
----------------	---

Explanation

The LUC send macro was not accepted by VTAM.

Message Variables

retcode

The LUC conversation request service return code.

System action

Processing continues.

Operator response

Notify the system programmer.

System programmer response

See [“LUC Conversation Request Service Return Codes and Sense Codes” on page 925](#) to determine the meaning of the return code. If you cannot correct the problem, contact IBM Software Support.

DUI175E	LUC SEND SERVICE REQUEST FROM <i>luctask1</i> TO <i>luctask2</i> HAS FAILED. RETURN CODE X'<i>retcode</i>'. SENSE CODE X'<i>sense</i>'.
----------------	--

Explanation

luctask1 attempted to send data to the target LUC task *luctask2* and the request failed.

Message Variables

luctask1

The name of the LUC task that requested the send service.

luctask2

The name of the target LUC task to which the data was to be sent.

retcode

The LUC conversation request service return code.

sense

The sense code.

System action

Processing continues.

Operator response

Notify the system programmer.

System programmer response

Attempt to interpret the documented return code and sense code and correct the problem. For more information, use the SENSE command to determine the meaning of the sense code, or see [“LUC Conversation Request Service Return Codes and Sense Codes” on page 925](#) to determine the meaning of the return code. If you cannot correct the problem, contact IBM Software Support.

DUI176E	LUC RECEIVE SERVICE REQUEST FROM <i>luctask1</i> TO <i>luctask2</i> HAS FAILED. RETURN CODE X'<i>retcode</i>'.
----------------	---

Explanation

luctask1 attempted to receive data from the target LUC task *luctask2*. The request failed.

Message Variables

luctask1

The name of the LUC task that requested the receive service.

luctask2

The name of the target LUC task to which the receive request was intended.

retcode

The LUC conversation request service return code.

System action

Processing continues.

Operator response

Notify the system programmer.

System programmer response

See [“LUC Conversation Request Service Return Codes and Sense Codes” on page 925](#) to determine the meaning of the return code. If you cannot correct the problem, contact IBM Software Support.

DUI200E **CNMTAMEL RECEIVED
CORRUPTED DATA FROM LU
luname.**

Explanation

The CNMTAMEL task does not recognize the data received from NMC.

Message Variables

luname

The name of the LU that sent the data.

System action

Processing continues, but the corrupted data is not processed.

Operator response

Record the message and notify the system programmer.

System programmer response

Contact IBM Software Support.

DUI201E **CNMTAMEL FAILED TO RECEIVE
DATA THROUGH THE PROGRAM
TO PROGRAM INTERFACE DUE TO
STORAGE SHORTAGE. STORAGE
REQUESTED = *amount* BYTES.**

Explanation

CNMTAMEL attempted to receive data from the program-to-program interface, but cannot get enough storage.

Message Variables

amount

The amount of storage that CNMTAMEL tried to get.

System action

CNMTAMEL continues to run, but data is not received from the program-to-program interface. CNMTAMEL keeps trying to obtain storage to receive this buffer.

Operator response

Determine whether you received message BNH16I, which means the task has reached its storage limit. If so, notify your system programmer.

System programmer response

See the *IBM Z NetView Troubleshooting Guide* for possible causes of the storage shortage.

DUI202E **CNMTAMEL FAILED TO RECEIVE
DATA THROUGH THE PROGRAM
TO PROGRAM INTERFACE.
REASON CODE IS *reason*.**

Explanation

CNMTAMEL attempted to receive data from the program-to-program interface and failed. The reason code in the message is returned by the program-to-program interface.

Message Variables

reason

The reason why the receive failed.

System action

CNMTAMEL continues to run, but the data is not received from the program-to-program interface. CNMTAMEL keeps trying to receive this buffer.

Operator response

Notify the system programmer.

System programmer response

Check the explanation of the reason code in the *IBM Z NetView Application Programmer's Guide* for help in determining the problem. Contact IBM Software Support if necessary.

DUI203E **CNMTAMEL HAS BEEN SENT DATA
OF LENGTH *length* THROUGH THE
PROGRAM TO PROGRAM
INTERFACE. THIS EXCEEDS THE
MAXIMUM LENGTH ALLOWED OF
maxlength. THE DATA WILL BE
IGNORED. SENDER ID = *senderid*.**

Explanation

Data was sent to CNMTAMEL through the program-to-program interface that was too large for CNMTAMEL to process.

Message Variables

length

The size of the data received by CNMTAMEL in bytes.

maxlength

The maximum amount of data, in bytes, that CNMTAMEL can process.

senderid

The program-to-program interface sender ID of the program that sent the data.

System action

CNMTAMEL discards the data received and continues processing.

Operator response

Notify the system programmer.

System programmer response

Contact IBM Software Support.

DUI205I	CNMTAMEL HAS ISSUED A PROGRAM TO PROGRAM INTERFACE REQUEST THAT HAS FAILED. REQUEST TYPE = <i>reqtype</i>. REASON CODE = <i>retcode</i>.
----------------	---

Explanation

CNMTAMEL attempted to issue a program-to-program interface request and failed. The reason code in the message is returned by the program-to-program interface.

Message Variables

- reqtype***
The program-to-program interface request that was issued by CNMTAMEL.
- retcode***
The reason why the request failed.

System action

CNMTAMEL continues without processing the program-to-program interface requests.

Operator response

Notify the system programmer.

System programmer response

See the *IBM Z NetView Application Programmer's Guide* for an explanation of the reason code. If the problem persists, contact IBM Software Support.

DUI250I	----- -----
----------------	----------------

Explanation

Part of a multiline message. Message DUI251I begins the multiline message. Message DUI252I ends the multiline message. Message DUI250I precedes and succeeds both DUI251I and DUI252I as a visual aid.

DUI251I	BEGIN ERROR CHECKING FOR MEMBER <i>member_name</i>
----------------	---

Explanation

Part of a multiline message. Each NMCSTATUS policy definition in *member_name* is error checked. Any errors found will be part of the multiline message. Message DUI251I begins the multiline message. Message DUI252I ends the multiline message. Message DUI250I precedes and succeeds both DUI251I and DUI252I as a visual aid.

Message Variables

- member_name***
Name of the DSIPARM member containing the NMCSTATUS policy definitions.

DUI252I	END ERROR CHECKING FOR MEMBER <i>member_name</i>
----------------	---

Explanation

Part of a multiline message. Each NMCSTATUS policy definition in *member_name* is error checked. Any errors found will be part of the multiline message. Message DUI251I begins the multiline message. Message DUI252I ends the multiline message. Message DUI250I precedes and succeeds both DUI251I and DUI252I as a visual aid.

Message Variables

- member_name***
Name of the DSIPARM member containing the NMCSTATUS policy definitions.

DUI253E	<i>policy_def</i>: UNABLE TO CREATE BEGINNING TIMER FOR THIS POLICY DEFINITION IN MEMBER <i>member_name</i>
----------------	--

Explanation

The DSIPARM member *member_name* contains a NMCSTATUS policy definition for *policy_def*. An attempt was made to create a CHRON timer indicating the beginning of the policy. Subsequent message DUI284E indicates which command failed and why.

Message Variables

- policy_def***
Name of policy definition.
- member_name***
Name of the DSIPARM member containing the NMCSTATUS policy definitions.

System action

A timer is not set indicating the beginning of the policy.

System programmer response

Review subsequent message DUI284E.

DUI254E ***policy_def*: ONE OF THE FOLLOWING KEYWORDS IS REQUIRED FOR THIS POLICY DEFINITION IN MEMBER *member_name*: CLASS, BLDVIEWSSPEC OR COLLECTIONSPEC**

Explanation

The DSIPARM member *member_name* contains a NMCSTATUS policy definition for *policy_def*. A required keyword is missing from the definition.

Message Variables

policy_def

Name of policy definition

member_name

Name of the DSIPARM member containing the NMCSTATUS policy definitions.

System action

The DSIPARM member containing the NMCSTATUS definitions is in error. Until all errors are resolved, actions based on these policies, such as, disabling resource status changes or suspending resources from aggregation, will not occur at the NMC console.

System programmer response

All NMCSTATUS policy definitions must specify one of the following keywords: CLASS, BLDVIEWSSPEC or COLLECTIONSPEC. Correct and reload *member_name*. For additional information, see the definition of NMCSTATUS in the *IBM Z NetView Administration Reference*.

DUI255E ***policy_def*: ONE OF THE FOLLOWING KEYWORDS IS REQUIRED FOR THIS POLICY DEFINITION IN MEMBER *member_name*: SUSPENDAGG=YES OR STOPUPDATE=YES**

Explanation

The DSIPARM member *member_name* contains a NMCSTATUS policy definition for *policy_def*. A required keyword is missing from the definition.

Message Variables

policy_def

Name of policy definition

member_name

Name of the DSIPARM member containing the NMCSTATUS policy definitions.

System action

The DSIPARM member containing the NMCSTATUS definitions is in error. Until all errors are resolved, actions based on these policies, such as, disabling resource status changes or suspending resources from aggregation, will not occur at the NMC console.

System programmer response

All NMCSTATUS policy definitions must specify one of the following keywords: SUSPENDAGG=YES or STOPUPDATE=YES. Correct and reload *member_name*. For additional information, see the definition of NMCSTATUS in the *IBM Z NetView Administration Reference*.

DUI256E ***policy_def*: ONLY ONE OF THE FOLLOWING KEYWORDS IS ALLOWED FOR THIS POLICY DEFINITION IN MEMBER *member_name*: CLASS, BLDVIEWSSPEC OR COLLECTIONSPEC**

Explanation

The DSIPARM member *member_name* contains a NMCSTATUS policy definition for *policy_def*. An unallowable combination of keywords is used for this definition.

Message Variables

policy_def

Name of policy definition

member_name

Name of the DSIPARM member containing the NMCSTATUS policy definitions.

System action

The DSIPARM member containing the NMCSTATUS definitions is in error. Until all errors are resolved, actions based on these policies, such as, disabling resource status changes or suspending resources from aggregation, will not occur at the NMC console.

System programmer response

NMCSTATUS policy definitions must specify one and only one of the following keywords: CLASS, BLDVIEWSSPEC or COLLECTIONSPEC. Correct and reload *member_name*. For additional information, see the definition of NMCSTATUS in the *IBM Z NetView Administration Reference*.

DUI257E ***policy_def*: keyword IS A REQUIRED KEYWORD MISSING FOR THIS POLICY DEFINITION IN MEMBER *member_name***

Explanation

The DSIPARM member *member_name* contains a NMCSTATUS policy definition for *policy_def*. A required keyword *keyword* is missing from this definition.

Message Variables

policy_def

Name of policy definition

keyword

Keyword for NMCSTATUS policy definition

member_name

Name of the DSIPARM member containing the NMCSTATUS policy definitions.

System action

The DSIPARM member containing the NMCSTATUS definitions is in error. Until all errors are resolved, actions based on these policies, such as, disabling resource status changes or suspending resources from aggregation, will not occur at the NMC console.

System programmer response

The missing keyword is required for this NMCSTATUS policy definition. Correct and reload *member_name*. For additional information, see the definition of NMCSTATUS in the *IBM Z NetView Administration Reference*.

DUI258E	<i>policy_def</i>: ONLY ONE keyword KEYWORD IS ALLOWED FOR THIS POLICY DEFINITION IN MEMBER <i>member_name</i>
----------------	---

Explanation

The DSIPARM member *member_name* contains a NMCSTATUS policy definition for *policy_def*. A duplicate keyword *keyword* was specified for this definition.

Message Variables

policy_def

Name of policy definition

keyword

Keyword for NMCSTATUS policy definition.

member_name

Name of the DSIPARM member containing the NMCSTATUS policy definitions.

System action

The DSIPARM member containing the NMCSTATUS definitions is in error. Until all errors are resolved, actions based on these policies, such as, disabling

resource status changes or suspending resources from aggregation, will not occur at the NMC console.

System programmer response

The keyword was specified more than once for this NMCSTATUS policy definition. Correct and reload *member_name*. For additional information, see the definition of NMCSTATUS in the *IBM Z NetView Administration Reference*.

DUI259E	<i>policy_def</i>: keyword1 IS A REQUIRED KEYWORD WHEN KEYWORD keyword2 EXISTS FOR THIS POLICY DEFINITION IN MEMBER <i>member_name</i>
----------------	---

Explanation

The DSIPARM member *member_name* contains a NMCSTATUS policy definition for *policy_def*. Since keyword *keyword2* was specified for this definition, *keyword1* is a required keyword.

Message Variables

policy_def

Name of policy definition

keyword1

Required keyword missing from this definition.

keyword2

Optional keyword specified for this definition.

member_name

Name of the DSIPARM member containing the NMCSTATUS policy definitions.

System action

The DSIPARM member containing the NMCSTATUS definitions is in error. Until all errors are resolved, actions based on these policies, such as, disabling resource status changes or suspending resources from aggregation, will not occur at the NMC console.

System programmer response

Since *keyword2* was specified for this definition, *keyword1* is a required definition. Correct *keyword1* and reload *member_name*. For additional information, see the definition of NMCSTATUS in the *IBM Z NetView Administration Reference*.

DUI260E	<i>policy_def</i>: keyword IS NOT A VALID KEYWORD FOR THIS POLICY DEFINITION IN MEMBER <i>member_name</i>
----------------	--

Explanation

The DSIPARM member *member_name* contains a NMCSTATUS policy definition for *policy_def*. An incorrect keyword *keyword* was specified for this definition.

Message Variables

- policy_def*
Name of policy definition
- keyword*
Incorrect keyword.
- member_name*
Name of the DSIPARM member containing the NMCSTATUS policy definitions.

System action

The DSIPARM member containing the NMCSTATUS definitions is in error. Until all errors are resolved, actions based on these policies, such as, disabling resource status changes or suspending resources from aggregation, will not occur at the NMC console.

System programmer response

keyword is not a valid keyword for this definition. Correct *keyword* and reload *member_name*. For additional information, see the definition of NMCSTATUS in the *IBM Z NetView Administration Reference*.

DUI261I	NO ERRORS WERE FOUND IN MEMBER <i>member_name</i>
----------------	--

Explanation

No errors were found in DSIPARM member *member_name*.

Message Variables

- member_name*
Name of the DSIPARM member containing the NMCSTATUS policy definitions.

System action

Processing of the NMCSTATUS definitions continues.

DUI262E	<i>policy_def</i>: ONLY ONE OF THE FOLLOWING KEYWORDS IS ALLOWED FOR THIS POLICY DEFINITION IN MEMBER <i>member_name</i>: RESOURCE OR MYNAME
----------------	---

Explanation

The DSIPARM member *member_name* contains a NMCSTATUS policy definition for *policy_def*. An unallowable combination of keywords is used for this definition.

Message Variables

- policy_def*
Name of policy definition
- member_name*
Name of the DSIPARM member containing the NMCSTATUS policy definitions.

System action

The DSIPARM member containing the NMCSTATUS definitions is in error. Until all errors are resolved, actions based on these policies, such as, disabling resource status changes or suspending resources from aggregation, will not occur at the NMC console.

System programmer response

NMCSTATUS policy definitions might specify one and only one of the following keywords: RESOURCE or MYNAME. Correct and reload *member_name*. For additional information, see the definition of NMCSTATUS in the *IBM Z NetView Administration Reference*.

DUI263I	TIMER HANDLE <i>timer_handle</i> POPPED TO INDICATE THE SCHEDULED WINDOW FOR POLICY DEFINITION <i>policy_def</i> HAS BEGUN
----------------	---

Explanation

A CHRON timer with the timer handle *timer_handle* has popped indicating the beginning of a scheduled NMCSTATUS policy. If RODM is started, an attempt will be made to create a RODM object to represent the NMCSTATUS policy definition.

Message Variables

- timer_handle*
Timer handle of the CHRON timer
- policy_def*
Name of policy definition

System action

When the CHRON timer pops, an action, in this case, an internal REXX command list, is executed to attempt to create a RODM object representing the NMCSTATUS policy definition.

DUI264I **TIMER HANDLE *timer_handle*
POPPED TO INDICATE THE
SCHEDULED WINDOW FOR
POLICY DEFINITION *policy_def*
HAS ENDED**

Explanation

A CHRON timer with the timer handle *timer_handle* has popped indicating the end of a scheduled NMCSTATUS policy. If RODM is started, an attempt will be made to delete the RODM object representing the NMCSTATUS policy definition.

Message Variables

timer_handle
Timer handle of the CHRON timer

policy_def
Name of policy definition

System action

When the CHRON timer pops, an action, in this case, an internal REXX command list, is executed to attempt to delete the RODM object representing the NMCSTATUS policy definition.

DUI265I **ATTEMPTED TO CREATE RODM
OBJECT *myname* TO REPRESENT
POLICY DEFINITION *policy_def*
BUT AN OBJECT WITH THE SAME
MYNAME EXISTS IN RODM**

Explanation

An attempt was made to create a RODM object with a MyName value of *myname* to represent the NMCSTATUS policy definition but an object in class Aggregate_Collection_Class already exists for that *myname*. The RODM object is deleted and recreated.

Message Variables

myname
MyName value of the RODM object. Value is a concatenation of the timer handle that scheduled the beginning of the window and the name of the policy definition. For example, if timer handle NMC1 pops to indicate the beginning of policy definition POLICY1, the MyName of the RODM object representing the policy is NMC1POLICY1.

policy_def
Name of policy definition

System action

An attempt was made to create a RODM object with a MyName value of *myname* in the Aggregate_Collection_Class but an object with the

same *myname* exists in RODM. The object will be deleted, resulting in message DUI266I and created again, resulting in message DUI267I.

DUI266I **DELETED RODM OBJECT *myname*
FOR POLICY DEFINITION
policy_def IN THE
AGGREGATE_COLLECTION_CLASS**

Explanation

An object with a MyName value of *myname* representing policy definition *policy_def* was deleted from the Aggregate_Collection_Class.

Message Variables

myname
MyName value of the RODM object. Value is a concatenation of the timer handle that scheduled the beginning of the window and the name of the policy definition. For example, if timer handle NMC1 pops to indicate the beginning of policy definition POLICY1, the MyName of the RODM object representing the policy is NMC1POLICY1.

policy_def
Name of policy definition

System action

The object is deleted from RODM.

DUI267I **CREATED RODM OBJECT *myname*
FOR POLICY DEFINITION
policy_def IN THE
AGGREGATE_COLLECTION_CLASS**

Explanation

An object with a MyName value of *myname* representing policy definition *policy_def* was created in the Aggregate_Collection_Class.

Message Variables

myname
MyName value of the RODM object. Value is a concatenation of the timer handle that scheduled the beginning of the window and the name of the policy definition. For example, if timer handle NMC1 pops to indicate the beginning of policy definition POLICY1, the MyName of the RODM object representing the policy is NMC1POLICY1.

policy_def
Name of policy definition

System action

The object is created in RODM.

DUI268E **RODM PROCESSING ERROR.
PROCESSING FOR RODM OBJECT
myname FOR POLICY DEFINITION
policy_def ENDED IN MODULE
module_name WITH RETURN
CODE *return_code*.**

Explanation

Module *module_name* encountered a RODM processing error while attempting to access a RODM object in class Aggregate_Collection_Class.

Message Variables

myname

MyName value of the RODM object. Value is a concatenation of the timer handle that scheduled the beginning of the window and the name of the policy definition. For example, if timer handle NMC1 pops to indicate the beginning of policy definition POLICY1, the MyName of the RODM object representing the policy in NMC1POLICY1.

policy_def

Name of policy definition

module_name

Name of the module that was running at the time the error was discovered.

return code

The return code from the module.

System action

A RODM object representing an NMCSTATUS policy definition cannot be processed.

System programmer response

- Make sure the data model is loaded and that RODM is correctly processing function requests from applications.
- Check the NetView log for message DUI269E.
- Contact IBM Software Support if you cannot resolve the problem.

DUI269E **RODM OBJECT INFORMATION**

Explanation

A RODM processing error was encountered.

System action

The system logs the RODM object being processed at the time of the error to the NetView log along with other pertinent information.

Operator response

Notify the system programmer.

System programmer response

See message number DUI268E or DUI287E.

DUI270E **ATTEMPTED TO CREATE RODM
OBJECT *myname* TO REPRESENT
POLICY DEFINITION *policy_def*
BUT VALUE *value* FOR KEYWORD
keyword IS INCORRECTLY
SPECIFIED IN MEMBER
*member_name***

Explanation

An error occurred while NetView attempted to generate a RODM Collection Manager specification from the keyword value in the policy definition.

Message Variables

myname

MyName value of the RODM object. Value is a concatenation of the timer handle that scheduled the beginning of the window and the name of the policy definition. For example, if timer handle NMC1 pops to indicate the beginning of policy definition POLICY1, the MyName of the RODM object representing the policy is NMC1POLICY1.

policy_def

Name of policy definition

value

Keyword value

keyword

Keyword for NMCSTATUS policy definition

member_name

Name of the DSIPARM member containing the NMCSTATUS policy definitions

System action

A RODM object will not be created to represent policy definition *policy_def*.

Operator response

Notify the system programmer.

System programmer response

- Verify *value* is correct.
 - If QSAMDSN was indicated in the *value*, make sure the data set name specified in the keyword value for *policy_def* exists.

- If QSAMDD was indicated in the *value*, make sure the data definition specified in the keyword value for *policy_def* exists.
- Correct the keyword and reload *member_name*. For additional information, see the definition of NMCSTATUS in the *IBM Z NetView Administration Reference*.

DUI271E ***policy_def*: UNABLE TO READ DATA SPECIFIED IN VALUE *value* FOR KEYWORD *keyword* FOR THIS POLICY DEFINITION IN MEMBER *member_name*. MODULE *module_name* RC *return_code* PIPE STAGE *stage***

Explanation

An error occurred when NetView attempted to access data in the specified data set name or data definition file.

Message Variables

policy_def

Name of policy definition

value

Keyword value

keyword

Keyword for NMCSTATUS policy definition

member_name

Name of the DSIPARM member containing the NMCSTATUS policy definitions

module_name

Name of the module that was running at the time the error was discovered

return_code

The return code from the module. Even return codes, such as 12,28,32,36 and 100, are issued from the PIPE QSAM command. Issue a HELP PIPE QSAM for more information. Odd return codes are issued from the NMCSTATUS policy autotask:

3

A data set name was not specified for BLDVIEWSSPEC=(QSAMDSN,dataset)

5

A data definition file was not specified for BLDVIEWSSPEC=(QSAMDD, data_definition_file)

7

A data set name was not specified for COLLECTIONSPEC=(QSAMDSN,dataset)

9

A data definition file was not specified for COLLECTIONSPEC=(QSAMDD, data_definition_file)

stage

PIPE stage in error

System action

If *module_name*=DUIFSNTX, the error was found before any timers were set for the policy. Until the error is resolved, actions based on any policies defined in the DSIPARM member will not occur at the NMC console.

If *module_name*=DUIFACTV, the error occurred when the beginning timer for policy popped. This indicates that the data set or data definition file was allocated when the policies were read but has been deallocated since the timers were set. A RODM object will not be created to represent policy definition *policy_def*.

Operator response

Notify the system programmer.

System programmer response

- Verify *value* is correct.
 - If QSAMDSN was indicated in the *value*, make sure the data set name specified on keyword for *policy_def* exists.
 - If QSAMDD was indicated in the *value*, make sure the data definition file specified on keyword for *policy_def* exists.
- Correct the keyword and reload *member_name*. For additional information, see the definition of NMCSTATUS in the *IBM Z NetView Administration Reference*.

DUI272E ***policy_def*: VALUE *value* SPECIFIED FOR KEYWORD *keyword* FOR THIS POLICY DEFINITION IN MEMBER *member_name* IS NOT VALID. MODULE *module_name* GENERATED RETURN CODE *return_code***

Explanation

An incorrect value was specified for the keyword.

Message Variables

policy_def

Name of policy definition

value

Keyword value in error

keyword

Keyword of NMCSTATUS policy definition in error

member_name

Name of the DSIPARM member containing the NMCSTATUS policy definitions.

module_name

Name of the module that issued the message.

return_code

Return code set in the module.

19

No value was specified

20

Value must be enclosed with parenthesis, for example (value)

21

No value was specified inside the parenthesis, for example ()

22

A comma can not be the first or last character of the value, for example (,value) and (value,) are incorrect

23

Valid characters for the value are 0 to 9 and '.'

24

Format of the value must be (hh.mm.ss.hh.mm.ss)

25

Valid values for hh are 0 to 23, for mm are 0 to 59, for ss are 0 to 59

26

Valid length for values hh, mm, and ss is 2, for example (05.00.00.06.00) is correct and (5.00.00.6.00.00) is not

27

Expected 2 parsed values, such as (value1,value2)

28

Valid value is (QSAMDSN,definition) or (QSAMDD,definition)

29

Valid value is YES or NO

30

Multiple consecutive commas within value are not allowed, for example (50.00.00,,06.00.00) is incorrect

31

Embedded blanks within value are not allowed, for example (05.00. , 06.00.00) is incorrect

System action

The DSIPARM member containing the NMCSTATUS definitions is in error. Until all errors are resolved, actions based on these policies, such as, disabling

resource status changes or suspending resources from aggregation, will not occur at the NMC console.

System programmer response

The value of the keyword is incorrect. See the return codes for help in determining the error. Correct the policy definition and reload *member_name*.

For additional information, see the definition of NMCSTATUS in the *IBM Z NetView Administration Reference*.

DUI273E

***policy_def*: UNABLE TO CREATE
ENDING TIMER FOR THIS POLICY
DEFINITION IN MEMBER
*member_name***

Explanation

The DSIPARM member *member_name* contains a NMCSTATUS policy definition for *policy_def*. An attempt was made to create a CHRON timer indicating the end of the policy. Subsequent message DUI284E indicates which command failed and why it failed.

Message Variables***policy_def***

Name of policy definition

member_name

Name of the DSIPARM member containing the NMCSTATUS policy definitions.

System action

A timer is not set indicating the end of the policy.

System programmer response

Review subsequent message DUI284E.

DUI274E

**DUI274E MODULE *module_name*
WAS CALLED WITH INCORRECT
PARAMETERS**

Explanation

During processing of NMCSTATUS policy definitions, CHRON timers are set to indicate the beginning and end of each scheduled NMCSTATUS policy.

Either an internal error has occurred or an operator has changed the timer command of a CHRON timer that was created for a NMCSTATUS policy. It is critical that the timer command of these timers is not modified.

Message Variables***module_name***

Name of the module

System action

If the *module_name* is DUIFACTV, processing has failed to create a RODM object to represent the NMCSTATUS policy definition.

If the *module_name* is DUIFNACT, processing has failed to delete a RODM object that represents a NMCSTATUS policy definition.

System programmer response

Make sure that an operator did not modify the timer command of a CHRON timer that was created for a NMCSTATUS policy. An example of a timer command is:

```
DUIFACTV POLICYA NMC1 NMC1POLICYA
```

where DUIFACTV is the name of the clist to run when the timer pops, POLICYA is the name of the policy, NMC1 is the timer ID and NMC1POLICYA is the MyName value of the RODM object to be created. Modifications to the timer command might result in errors in NMCSTATUS policy processing. To re-initialize processing, issue the NMCPINIT command.

For additional information, see the definition of NMCSTATUS in the *IBM Z NetView Administration Reference*.

DUI275I BEGIN PROCESSING NMCSTATUS POLICY DEFINITIONS DEFINED IN MEMBER *member_name*

Explanation

Command NMCPINIT or NMCPTTEST has been issued. NMCPINIT is coded in the automation table (DSIPARM member DSITBL01).

Message Variables

member_name
Name of the DSIPARM member containing the NMCSTATUS policy definitions.

System action

Processing of NMCSTATUS policy definitions begins.

DUI276I END PROCESSING NMCSTATUS POLICY DEFINITIONS DEFINED IN MEMBER *member_name*, RETURN CODE *return_code*

Explanation

Command NMCPINIT or NMCPTTEST has been issued. NMCPINIT is coded in the automation table (DSIPARM member DSITBL01).

Message Variables

- member_name***
Name of the DSIPARM member containing the NMCSTATUS policy definitions.
- return_code***
- 0** Successful
 - 1** POLICY command failed because NMCSTATUS policy was not found
 - 2** Internal error
 - 3** POLICY command failed because of missing parameters
 - 4** POLICY command failed because of incorrect parameters
 - 5** Internal error
 - 7** POLICY command failed (SIGNAL NOVALUE)
 - 8** POLICY command failed (SIGNAL SYNTAX)
 - 9** POLICY command failed because of security authorization failure
 - 10** POLICY command failed because request cannot be processed. Make sure NMCSTATUS is uppercase and begins in column 1 in the policy file.
 - 11** Syntax error found in NMCSTATUS policy file
 - 13** No policies to syntax check
 - 14** Global EZLPOLICY.GRAPHICS was not set, indicating autotask AUTOAON did not load any policies for TOWER GRAPHICS
 - 15** Incorrect keyword on command NMCPINIT or NMCPTTEST
 - 16** Incorrect value for keyword on command NMCPINIT or NMCPTTEST
 - 1** POLICY command failed (SIGNAL FAILURE)
 - 5** POLICY command failed (SIGNAL HALT)

System action

If the *return_code* is non-zero, actions based on these policies, such as, disabling resource status changes or suspending resources from aggregation, will not occur at the NMC console.

Operator response

Browse the NetView log for errors regarding policy. Make sure the policy file containing your NMCSTATUS policy definitions was loaded and did not contain any errors.

System programmer response

For additional information, see the definition of NMCSTATUS in the *IBM Z NetView Administration Reference*.

DUI277I	COMMAND <i>command_name</i> HAS BEEN SENT TO AUTOTASK <i>autotask_name</i> FOR PROCESSING
----------------	--

Explanation

Commands NMCPINIT and NMCPTTEST must run on autotask DUIFPOLI. If the command is issued from an operator other than autotask DUIFPOLI, the command is sent to autotask DUIFPOLI to run.

Message Variables

command_name
Name of the command sent to the autotask

autotask_name
Name of the autotask the command was sent to

System action

The command runs on the DUIFPOLI autotask.

DUI278E	ATTEMPT TO SEND COMMAND <i>command_name</i> TO AUTOTASK <i>autotask_name</i> FAILED
----------------	--

Explanation

Commands NMCPINIT and NMCPTTEST must run on autotask DUIFPOLI. If the command is issued from an operator other than autotask DUIFPOLI, the command is sent to autotask DUIFPOLI to run. If necessary, the DUIFPOLI autotask is started.

Message Variables

command_name
Name of the command sent to the autotask

autotask_name
Name of the autotask the command was sent to

System action

The command is unable to run on the DUIFPOLI autotask.

Operator response

Browse the NetView log and see what messages were issued before DUI278E.

System programmer response

Make sure function.autotask.NMCpolicy = DUIFPOLI is coded in the CNMSTYLE member.

DUI279I	NMCSTATUS POLICY DEFINITIONS WERE NOT FOUND IN MEMBER <i>member_name</i>
----------------	---

Explanation

POLICY.GRAPHICS in the CNMSTYLE member indicates that *member_name* containing NMCSTATUS policy definitions were to be loaded into storage. NetView attempted to read NMCSTATUS policy definitions in *member_name* but none were found.

Message Variables

member_name
Name of the DSIPARM member containing the NMCSTATUS policy definitions

System action

Processing of NMCSTATUS policy definitions ends.

System programmer response

Make sure that your NMCSTATUS policy definitions are defined in *member_name*. Reload *member_name*. For additional information, see the definition of NMCSTATUS in the *IBM Z NetView Administration Reference*. If you have not defined NMCSTATUS policy definitions, comment out POLICY.GRAPHICS in the CNMSTYLE member.

DUI280I	----- -----
----------------	----------------

Explanation

Part of a multiline message

- Message DUI281I begins the multiline message.
- Message DUI282I ends the multiline message.
- Message DUI280I precedes and succeeds both DUI281I and DUI282I as a visual aid.

DUI281I	BEGIN SETTING TIMERS FOR NMCSTATUS POLICIES DEFINED IN MEMBER <i>member_name</i>
----------------	---

Explanation

Part of a multiline message. Each NMCSTATUS policy definition in *member_name* generates two CHRON timers. One timer indicates the beginning of the policy and the other timer indicates the end of the policy. Any errors found while setting the timers will be part of the multiline message.

- Message DUI281I begins the multiline message.
- Message DUI282I ends the multiline message.
- Message DUI280I precedes and succeeds both DUI281I and DUI282I as a visual aid.

Message Variables

member_name

Name of the DSIPARM member containing the NMCSTATUS policy definitions

DUI282I	END SETTING TIMERS FOR NMCSTATUS POLICIES DEFINED IN MEMBER <i>member_name</i>
----------------	---

Explanation

Part of a multiline message. Each NMCSTATUS policy definition in *member_name* generates two CHRON timers. One timer indicates the beginning of the policy and the other timer indicates the end of the policy. Any errors found while setting the timers will be part of the multiline message.

- Message DUI281I begins the multiline message.
- Message DUI282I ends the multiline message.
- Message DUI280I precedes and succeeds both DUI281I and DUI282I as a visual aid.

Message Variables

member_name

Name of the DSIPARM member containing the NMCSTATUS policy definitions

DUI283I	ALL TIMERS WERE SET SUCCESSFULLY
----------------	---

Explanation

No errors were found while setting CHRON timers for NMCSTATUS policies defined in DSIPARM member *member_name*.

Message Variables

member_name

Name of the DSIPARM member containing the NMCSTATUS policy definitions

System action

Processing of NMCSTATUS policy definitions continues.

DUI284E	COMMAND <i>command_name</i> FAILED WITH RETURN CODE <i>return_code</i> IN MODULE <i>module_name</i>. THE NEXT <i>num_msgs</i> MESSAGE(S) MAY HELP DETERMINE THE ERROR
----------------	--

Explanation

An attempt was made to create a timer for the policy definition referenced in message DUI253E or DUI273E but failed with the *return_code*. If any error messages were returned with the failed *command_name*, they will appear in the NetView log after message DUI284E.

Message Variables

command_name

Name of the command

return_code

Return code from the command

module_name

Name of the module that issued the command

num_msgs

Number of error messages from the command related to the error

System action

A timer is not set indicating the beginning or ending of the policy definition referenced in preceding message DUI253I or DUI273E.

System programmer response

The *num_msgs* messages following DUI284E were issued by *command_name*. If *command_name* is EZLETAPI, review these messages carefully to determine if one of the keywords specified for the policy definition referenced in preceding message DUI253E or DUI273E is incorrect. Pay special attention to the following keywords: TIME, DAYOFWEEK, EDAYOFWEEK, DAYOFMONTH, EDAYOFMONTH, CALENDARDAY, and ECALENDARDAY. Correct and reload the DSIPARM member referenced in preceding message DUI253E or DUI273E.

If *command_name* is PIPE CORRCMD (MOE) EZLETAPI, an internal error has occurred. Contact the IBM Software Support with the following information:

- The complete policy definition that is in error
- Messages DUI253E or DUI273E, message DUI284E and the subsequent errors from the command.

For additional information, see the definition of NMCSTATUS in the *IBM Z NetView Administration Reference*.

DUI285I **DELETED TIMER HANDLE**
***timer_handle* DURING**
PROCESSING OF THE *command*
COMMAND

Explanation

The *command* command processes NMCSTATUS policy definitions currently loaded in the Policy Repository. Any CHRON timers set by previous NMCSTATUS policy definitions are deleted. If the current NMCSTATUS policy definitions are error free, new CHRON timers are created.

Message Variables

timer_handle

Timer handle of the CHRON timer

command

Name of the command that deleted the CHRON timer

System action

The timer is deleted

DUI286I **DELETED RODM OBJECTID**
***object_id* DURING PROCESSING**
OF THE *command* COMMAND

Explanation

The *command* command processes NMCSTATUS policy definitions currently loaded in the Policy Repository. Any CHRON objects representing active policies defined by previous NMCSTATUS policy definitions are deleted. If the current NMCSTATUS policy definitions are error free, new CHRON timers are created. When these timers pop, new RODM objects are created to represent active policies.

Message Variables

object_id

RODM object id that is deleted

command

Name of the command that deleted the CHRON timer

System action

The RODM object id is deleted

DUI287E **RODM PROCESSING ERROR.**
LOCATE ON FIELD *field_name*
ENDED IN MODULE *module_name*
WITH RETURN CODE *return_code*

Explanation

Module *module_name* encountered a RODM processing error while attempting to locate all RODM objects with *field_name*.

Message Variables

field_name

Name of the RODM field

module_name

Name of the module that was running at the time the error was discovered.

return_code

The return code from the module

System action

A RODM LOCATE cannot be processed

System programmer response

- Make sure the data model is loaded and that RODM is correctly processing function requests from applications.
- Check the NetView log for message DUI269E.
- Contact IBM Software Support if you cannot resolve the problem.

DUI288E ***policy_def*: VALUE SPECIFIED FOR**
THIS POLICY DEFINITION IN
MEMBER *member_name* IS NOT
VALID. MODULE *module_name*
GENERATED RETURN CODE
return_code

Explanation

An incorrect value was specified for *policy_def*.

Message Variables

policy_def

Name of the policy definition

member_name

Name of the DSIPARM member containing the NMCSTATUS policy definitions.

module_name

Module that issued the message

return_code

The return code set in the module:

40

Policy definition contains a quotation mark

System action

The DSIPARM member containing the NMCSTATUS definitions is in error. Until all errors are resolved, actions based on these policies, such as, disabling

resource status changes or suspending resources from aggregation, will not occur at the NMC console.

System programmer response

The value of the policy definition is incorrect. See the return code for help in determining the error. Correct the policy definition and reload *member-name*.

For additional information, see the definition of NMCSTATUS in the *IBM Z NetView Administration Reference*.

DUI289I	COMMAND <i>command_name</i> COMPLETED WITH RETURN CODE <i>return_code</i>
----------------	--

Explanation

The command has completed.

Message Variables

command_name
The name of the command

return_code
The return code that is returned from the *command_name*

System action

Actions based on these policies do not occur at the NMC console if the *return_code* is non-zero. Some examples of such policies include disabling resource status changes or suspending resources form aggregation.

Operator response

Browse the NetView log for errors regarding policy. Make certain the policy file containing your NMCSTATUS policy definitions is loaded and does not contain any errors. See the message help for message DUI276I for information about return code values.

System programmer response

For additional information, see the definition of NMCSTATUS in *IBM Z NetView Administration Reference*.

DUI290I	TRACE MODULE <i>module_name</i>. data.
----------------	---

Explanation

This message is generated whenever ALL is entered for the NMCPINIT TRACE= keyword or the NMCPTTEST TRACE= keyword.

Message Variables

module_name
The name of the module being traced.

data
The trace information related to the option specified on the TRACE= keyword.

DUI291I	TRACE=<i>level</i> IS SET FOR NMCSTATUS PROCESSING
----------------	---

Explanation

This message is generated whenever the keyword TRACE=*level* is entered for the NMCPINIT or NMCPTTEST command.

Message Variables

level
The level of tracing that is activated

ALL
All of the trace statements are generated

NONE
None of the trace statements are generated

DUI292E	UNABLE TO CREATE RODM OBJECT <i>myname</i> FOR POLICY DEFINITION <i>policy_def</i> IN THE AGGREGATE_COLLECTION_CLASS . TIMER HANDLE <i>timer_handle</i> MODULE <i>module_name</i> RETURN CODE <i>return_code</i>
----------------	---

Explanation

A CHRON timer has popped and command list DUIFACTV is executed to indicate the beginning of a scheduled NMCSTATUS policy. The command list parameters consist of the name of the policy definition, the timer handle of the CHRON timer that popped, and the MyName of the object to be created in RODM. An attempt is made to create a RODM object to represent the NMCSTATUS policy definition. However, the policy definition in the DUIFACTV parameter list did not match any NMCSTATUS policy definitions in the Policy Repository. The RODM object is not created.

Message Variables

myname
MyName value of the RODM object. Value is a concatenation of the timer handle that scheduled the beginning of the window and the name of the policy definition. For example, if timer handle NMC1 pops to indicate the beginning of policy definition POLICYabc, the MyName of the RODM object representing the policy is NMC1POLICYabc.

policy_def
Name of the policy definition

timer_handle

Timer handle of the CHRON timer

module_name

Name of the module that was running at the time the error was discovered

return_code

10

Policy definition on CHRON timer was not found in storage

13

Global variable CNMSTYLE.POLICY.GRAPHICS is NULL

50

CollectionSpec1 field cannot be generated

51

RequestFlags field has an incorrect value of 0

System action

A RODM object representing the NMCSTATUS policy definition is not created. Actions based on the policy, such as, disabling resource status changes or suspending resources from aggregation, will not occur at the NMC console.

System programmer response

You might receive this error if your policy definition contains mixed case characters and a NetView operator enters the DUIFACTV command without NETVASIS preceding the command list. For example, a CHRON timer with a timer handle of NMC1 is generated for policy definition POLICYabc. Instead of waiting for CHRON to execute the command, a NetView operator enters the DUIFACTV command list from an OST. If NETVASIS did not precede the command, POLICYabc is changed to POLICYABC as shown in the NetView log.

```
DUIFACTV POLICYABC NMC1 NMC1POLICYABC
DSI268I EXCMD COMPLETE
DUI277I COMMAND 'DUIFACTV POLICYABC NMC1
NMC1POLICYABC' HAS BEEN SENT TO AUTOTASK
DUIFPOLI FOR PROCESSING
DUI263I TIMER HANDLE NMC1 POPPED TO INDICATE THE
SCHEDULED WINDOW FOR POLICY DEFINITION
POLICYABC HAS BEGUN
DUI292E UNABLE TO CREATE RODM OBJECT
NMC1POLICYABC
FOR POLICY DEFINITION POLICYABC IN THE
AGGREGATE_COLLECTION_CLASS.
TIMER HANDLE NMC1 MODULE DUIFACTV RETURN
CODE 50
```

To correct, enter NETVASIS in front of the command, as shown in the NetView log:

```
NETVASIS DUIFACTV POLICYabc NMC1 NMC1POLICYabc
DUI277I COMMAND 'DUIFACTV POLICYabc NMC1
NMC1POLICYabc' HAS BEEN SENT TO AUTOTASK
DUIFPOLI FOR PROCESSING
DUI263I TIMER HANDLE NMC1 POPPED TO INDICATE THE
```

```
SCHEDULED WINDOW FOR POLICY DEFINITION
POLICYabc HAS BEGUN
DUI267I CREATED RODM OBJECT NMC1POLICYabc FOR
POLICY DEFINITION POLICYabc IN THE
AGGREGATE_COLLECTION_CLASS
```

DUI353E

**UNABLE TO ALLOCATE MEMORY
FOR PROGRAM TO PROGRAM
INTERFACE RECEIVER BUFFER
FOR DUIFSSCO.**

Explanation

A call to the DSIGET macro failed in DUIFSSCO, the load module for the scope checker optional task (OPT). The system is unable to allocate memory for the program-to-program interface receiver buffer.

System action

The scope checker OPT ends.

Operator response

Notify the system programmer.

System programmer response

Ensure that the NetView region size is large enough. If it is not, resolve the storage problem and restart DUIFSSCO.

DUI354E

**UNABLE TO DELIVER NETWORK
COMMAND TEXT TO *taskid* TASK
BECAUSE THE TASK IS NOT
ACTIVE.**

Explanation

The DUIFSSCO scope checker optional task cannot deliver the network command to the specified task because it is inactive.

Message Variables

taskid

The ID of the task that is inactive.

System action

This message is sent to the NetView authorized receiver and processing continues.

Operator response

Notify the system programmer. Reenter the network command after the specified task has been activated.

System programmer response

Activate the specified task.

DUI355I	DUPLICATE REQUEST TO REGISTER DUIFSSCO.
----------------	--

Explanation

The scope checker optional task (OPT) cannot establish communication with CNMTAMEL because CNMTAMEL detected a duplicate request.

System action

This message is sent to the NetView authorized receiver and processing continues.

Operator response

Notify the system programmer.

System programmer response

Recycle both the CNMTAMEL and the scope checker tasks. If the problem persists, contact IBM Software Support.

DUI357E	AN UNRECOGNIZED SENDER senderid EXISTS IN THE DUIFSSCO PROGRAM TO PROGRAM INTERFACE BUFFER.
----------------	--

Explanation

DUIFSSCO, the load module for the scope checker optional task (OPT), received a program-to-program interface buffer from an unauthorized sender.

Message Variables**senderid**

The task identifier of the message received by DUIFSSCO.

System action

This message is sent to the authorized receiver. The scope checker OPT ignores this sender ID and processing continues.

Operator response

Notify the system programmer.

System programmer response

Determine the owner of the sender ID, and notify the owner not to send the data buffer using a program-to-program interface receiver name of DUIFSSCO.

DUI358E	DUIFSSCO RECEIVED PERMANENT FAILURE RETURN CODE FROM PROGRAM TO PROGRAM INTERFACE, REQUEST
----------------	---

**TYPE = type, RETURN CODE =
retcode**

Explanation

The scope checker optional task (OPT) received a permanent-failure return code from the program-to-program interface.

Message Variables**type**

The program-to-program interface request type.

retcode

The program-to-program interface return code that indicates the failure.

System action

This message is sent to the authorized receiver and the scope checker OPT ends.

Operator response

Notify the system programmer.

System programmer response

See the *IBM Z NetView Application Programmer's Guide* for an explanation of the return code. Determine the cause of the error and correct the problem.

DUI359E	GMFHS SCOPE CHECKER OPT DUIFSSCO RECEIVED TEMPORARY FAILURE RETURN CODE FROM PROGRAM TO PROGRAM INTERFACE, REQUEST TYPE= type, RETURN CODE = retcode
----------------	---

Explanation

The scope checker optional task, DUIFSSCO, received a temporary failure return code from the program-to-program interface.

Message Variables**type**

The program-to-program interface request type.

retcode

The program-to-program interface return code that indicates the failure.

System action

DUIFSSCO cannot communicate with the program-to-program interface, but periodically attempts to re-establish communication until it succeeds.

Operator response

Notify the system programmer.

System programmer response

See the *IBM Z NetView Application Programmer's Guide* for an explanation of return codes. Determine the cause of the error and correct the problem.

DUI360E *var* GLOBAL VARIABLE IS MISSING

Explanation

The global variable representing the procedure name is missing.

Message Variables

var

The name of the variable that is not set

System action

The command ends.

Operator response

Notify the system programmer.

System programmer response

Set the global command list variable COMMON.DUIFHPRC to the procedure name.

DUI363E UNABLE TO ALLOCATE STORAGE FOR VECTOR TABLE IN SCOPE CHECKER OPT.

Explanation

The scope checker optional task (OPT) received a failure return code from DUIFLAMC, which was called upon to allocate storage for the Graphic Monitor Facility host subsystem vector table.

System action

This message is sent to the authorized receiver and the scope checker OPT ends.

Operator response

Notify the system programmer.

System programmer response

Ensure that the NetView region size is large enough. If it is not, resolve the storage problem and restart DUIFSSCO.

DUI364E

DUIFSSCO INTERNAL ERROR OCCURRED, MODULE = *module*, NETVIEW MACRO = *macro*, RETURN CODE = *retcode*

Explanation

An internal error occurred while the scope checker optional task (OPT) processed a network control command.

Message Variables

module

The name of the module where the error condition occurred.

macro

The name of the NetView services macro.

retcode

The return code from the NetView services macro.

System action

The scope checker OPT sends this message to the authorized receiver and ends.

Operator response

Notify the system programmer.

System programmer response

See *IBM Z NetView Programming: Assembler* for an explanation of return codes. Determine the cause of the error and correct the problem. Restart DUIFSSCO. If you cannot resolve the problem, contact IBM Software Support.

DUI373E

NETVIEW SUBSYSTEM NOT AVAILABLE FOR PROGRAM TO PROGRAM INTERFACE REQUEST FROM *task*.

Explanation

An attempt by the named task to request the status of the NetView subsystem failed.

Message Variables

task

The name of the task that cannot communicate with the PPI.

System action

This message is sent to the authorized receiver, and the named task retries its status query.

Operator response

Notify the system programmer.

System programmer response

Determine whether the NetView subsystem is active. Correct the problem and restart the task. If you cannot resolve the problem, contact IBM Software Support.

DUI374E	task ATTEMPTED TO ESTABLISH COMMUNICATIONS WITH CNMTAMEL, BUT FAILED BECAUSE CNMTAMEL IS NOT ACTIVE OR IS NOT FUNCTIONING AS A STATUS FOCAL POINT
----------------	--

Explanation

The Graphic Monitor Facility host subsystem (GMFHS) tasks cannot connect to the CNMTAMEL task because CNMTAMEL is not functioning as a status focal point, or is not active. The GMFHS tasks cannot serve the Graphic Monitor Facility workstations.

Message Variables

task

The name of the GMFHS task that attempted to communicate with the CNMTAMEL task.

System action

The Graphic Monitor Facility host subsystem tasks periodically attempt to communicate with the CNMTAMEL task.

Operator response

Start the CNMTAMEL task as a status focal point. If you cannot start it as a status focal point, notify the system programmer.

System programmer response

Ensure that the Graphic Monitor Facility host subsystem is installed at a NetView host using the central system installation option.

DUI375I	COMMAND <i>command</i> NOT AVAILABLE.
----------------	--

Explanation

The specified command was invoked in an incorrect environment. If *command* is DUIFECMV, this command processor can only be invoked under the DUIFEAUT autotask. Otherwise, *command* is a command processor that cannot be invoked from an operator console.

Message Variables

command

The name of the command that was invoked incorrectly.

System action

The command is not executed.

DUI376E	GMFHS SCOPE CHECKER OPT PROGRAM TO PROGRAM INTERFACE SEND FAILURE, SENDER ID = <i>sender</i>, RECEIVER ID = <i>recvrid</i>, RETURN CODE = <i>retcode</i>
----------------	---

Explanation

An attempt to send a data buffer to a program-to-program interface failed.

Message Variables

sender

The ID used by the sender to identify itself in the program-to-program interface Send a Data Buffer to a Receiver request.

recvrid

The ID used by the sender to identify the receiver in the program-to-program interface Send a Data Buffer to a Receiver request.

retcode

The program-to-program interface return code that describes the failure.

System action

The data buffer is not sent to the receiver.

Operator response

Notify the system programmer.

System programmer response

See the *IBM Z NetView Application Programmer's Guide* for an explanation of the return code. Determine the cause of the error and correct the problem. If you cannot correct the problem, contact IBM Software Support.

DUI377E	GMFHS SCOPE CHECKER OPT PROGRAM TO PROGRAM INTERFACE RECEIVE FAILURE, SENDER ID = <i>sender</i>, RECEIVER ID = <i>recvrid</i>, RETURN CODE = <i>retcode</i>
----------------	--

Explanation

An attempt to receive a data buffer from the receiver's program-to-program interface receiver buffer queue failed.

Message Variables

sender

The ID used by the sender to identify itself in the program-to-program interface Receive a Data Buffer to a Receiver request.

recvid

The ID used by the sender to identify the receiver in the program-to-program interface Receive a Data Buffer to a Receiver request.

retcode

The program-to-program interface return code that describes the failure.

System action

The data buffer is not received by the receiver.

Operator response

Notify the system programmer.

System programmer response

See the *IBM Z NetView Application Programmer's Guide* for an explanation of the return code. Determine the cause of the error and correct the problem. If you cannot correct the problem, contact IBM Software Support.

DUI378I ALERT LOST, SUBSYSTEM MEMORY NOT AVAILABLE

Explanation

An attempt to send an alert or resolution to the Graphic Monitor Facility host subsystem host failed either because memory was not available in the NetView subsystem or because the program-to-program interface queue is full.

System action

The status information contained in the alert or resolution is not received by the Graphic Monitor Facility host subsystem host. If the resource identified in the alert or resolution is defined as an object in RODM, the status information is not applied to that object. If the object is also represented in a view, the status information is not reported in the view.

Operator response

Notify the system programmer.

System programmer response

Determine the cause of the memory shortage in the NetView subsystem and correct the problem.

DUI380I DUIFSSCO SCOPE CHECKER OPT SUCCESSFULLY INITIALIZED.

Explanation

The scope checker optional task, DUIFSSCO, has initialized successfully.

System action

This message is sent to the authorized receiver and processing continues.

DUI381I DUIFSSCO SCOPE CHECKER OPT HAS TERMINATED.

Explanation

The scope checker optional task (OPT), DUIFSSCO, has ended successfully.

System action

This message is sent to the authorized receiver and the scope checker OPT ends.

DUI382E ALERT AUTOMATION BUFFER DOES NOT CONTAIN AIFR

Explanation

You automated an alert or resolution, but the buffer received by the alert automation command processor does not contain an automated internal function request (AIFR).

This message is related to DUI384E and DUI385E.

System action

The alert automation command processor does not send the alert or resolution to the Graphic Monitor Facility host subsystem. Any status information contained in the alert or resolution is lost.

Operator response

Notify the system programmer.

System programmer response

Contact IBM Software Support.

DUI383I DUIFSSCO SCOPE CHECKER OPT TERMINATION IN PROGRESS.

Explanation

The scope checker optional task (OPT), DUIFSSCO, has received a termination notice from the NetView program.

System action

This message is sent to the authorized receiver and the scope checker OPT waits for the outstanding timer to be posted by the primary program operator interface task (PPT). DUIFSSCO ends after the outstanding timer is posted. The maximum timer value is 30 seconds.

DUI384E	ALERT AUTOMATION BUFFER DOES NOT CONTAIN THE MSU.
----------------	--

Explanation

You automated an alert or resolution, but the buffer received by the alert automation command processor contains an AIFR that is missing the MSU.

This message is related to DUI382E and DUI385E.

System action

The alert automation command processor does not send the alert or resolution to the Graphic Monitor Facility host subsystem. Any status information contained in the alert or resolution is lost.

Operator response

Notify the system programmer.

System programmer response

Contact IBM Software Support.

DUI385E	ALERT AUTOMATION BUFFER DOES NOT CONTAIN THE XTALERT.
----------------	--

Explanation

You automated an alert or resolution, but the buffer received by the alert automation command processor contains an AIFR that is missing the hardware monitor resource hierarchy.

This message is related to DUI382E and DUI384E.

System action

The alert automation command processor does not send the alert or resolution to the Graphic Monitor Facility host subsystem. Any status information contained in the alert or resolution is lost.

Operator response

Notify the system programmer.

System programmer response

Contact IBM Software Support.

DUI390I	COS GATEWAY COMMAND PROCESSOR SUCCESSFULLY INITIALIZED.
----------------	--

Explanation

The common operations services (COS) gateway command processor has initialized its environment after being invoked by autotask DUIFCSGW.

DUI391E	COS GATEWAY COMMAND PROCESSOR FAILED WITH RETURN CODE <i>retcode</i>
----------------	---

Explanation

The common operations services (COS) gateway command processor was invoked under autotask DUIFCSGW, but was unable to initialize its environment.

Message Variables

retcode

The return code. The values are:

Code

Meaning

100

Unable to obtain storage for the DUIFCSGB control block.

104

Unable to issue DSIPUSH for the DUIFCSGB control block.

108

Unable to determine the RUNCMD verb.

System action

The COS gateway is unable to service Graphic Monitor Facility host subsystem requests.

Operator response

Notify the system programmer.

System programmer response

If you received return code 108, ensure that a CMDDEF for load module DSIYORNP exists in CNMCMD. If you received return code 100 or 104, contact IBM Software Support.

DUI392E	COS GATEWAY STORAGE REQUEST FAILED IN MODULE <i>module</i>, LOCATION X'<i>locid</i>'
----------------	---

Explanation

The common operations services (COS) gateway command processor was unable to obtain storage in the specified module.

Message Variables

module

The name of the module where storage was requested.

locid

The identifier of the storage requested.

System action

The COS gateway request ends.

Operator response

Determine whether you received message BNH16I, which means the task has reached its storage limit. If so, notify your system programmer.

System programmer response

See the *IBM Z NetView Troubleshooting Guide* for possible causes of the storage shortage. If necessary, contact IBM Software Support.

DUI393E	COS GATEWAY MS TRANSPORT REQUEST: <i>request</i> FAILED WITH RETURN CODE <i>retcode</i> IN MODULE <i>module</i>
----------------	--

Explanation

The common operations services (COS) gateway command processor failed while attempting to use the management services (MS) transport.

Message Variables

request

The MS transport request type, such as REGISTER or DSI6SNDS.

retcode

The return code from the MS transport request.

module

The module that issued the request.

System action

The COS gateway request ends.

Operator response

Notify the system programmer.

System programmer response

See *IBM Z NetView Programming: Assembler* for an explanation of the return code accompanying the MS transport request, or contact IBM Software Support.

DUI394E	COS GATEWAY COMMAND REQUEST FOR SERVICE POINT <i>servpt</i> FROM <i>source</i> WITH INPUT CORRELATOR X'<i>inpcorr</i>' LOCAL CORRELATOR X'<i>lclcorr</i>' FAILED WITH RETURN CODE X'<i>retcode</i>'
----------------	--

Explanation

A common operations services (COS) gateway request from either the Graphic Monitor Facility host subsystem (GMFHS) or the management services (MS) transport failed.

Message Variables

servpt

The service point name, or N/A (not available).

source

Either the GMFHS or the MS transport.

inpcorr

The input correlator associated with the request from *source*. If the source is the MS transport, this is the correlator on the input agent unit of work.

lclcorr

The local correlator generated by the COS gateway for this request. If the local correlator value is 0, a local correlator was not generated.

retcode

A hexadecimal value indicating the nature of the error. The values are:

Code

Meaning

2020

Input was not recognized or there was a length field mismatch.

2021

An error was received from the RUNCMD command processor.

2022

The COS gateway was unable to obtain storage.

2023

The DSIGDS task was unable to deliver the command. This might be a temporary error if the service point is busy.

2024

The COS gateway was unable to initialize its environment.

2025

A response that is not valid was received from the service point.

2026

A response was received from the service point but it did not contain data.

2027

Input from the GMFHS is missing a required parameter.

2028

The service point reply contained an error subvector.

2029

The service point did not reply within the timeout value. This might be a temporary error if the service point is busy.

202A

The command request was canceled because the COS gateway task ended.

202B

The command request was canceled because of an MS transport error.

202C

The target service is busy. This might be a temporary error.

System action

The COS gateway request ends.

Operator response

Notify the system programmer.

System programmer response

If you receive return code X'202A', determine why the COS gateway task, DUIFCSGW, ended. Examine the network log for an error message received by task DUIFCSGW. If you are unable to resolve the problem, contact IBM Software Support.

DUI395E

**COS GATEWAY PROGRAM TO
PROGRAM INTERFACE SEND
FAILED WITH RETURN CODE =
X'*retcode*'**

Explanation

The common operations services (COS) gateway failed to communicate with the Graphic Monitor Facility host subsystem across the program-to-program interface.

Message Variables***retcode***

The value received from utility routine DUIFEXPP.

System action

The COS gateway request ends.

Operator response

Notify the system programmer.

System programmer response

Examine the network log for error messages related to program-to-program interface processing.

DUI396E

**COS GATEWAY RECEIVED A
REPLY FROM *source value*,
INTERNAL CORRELATOR X'*corr*'
THAT DID NOT MATCH ANY
OUTSTANDING COMMAND
REQUESTS**

Explanation

The common operations services (COS) gateway received a reply from the service point or the management services (MS) transport, but was unable to correlate it with any outstanding request.

Message Variables***source***

Either the service point or the MS transport.

value

Either the service point name or, for the MS transport, the origin NetView program name.

corr

The internal correlator value associated with this reply. This is the value that did not match any outstanding requests.

System action

The reply is discarded.

Operator response

Notify the system programmer.

System programmer response

Examine the network log for error messages related to COS gateway processing. Look for a DUI394E message that contains the same internal correlator value.

DUI397E

**COS GATEWAY RECEIVED SENSE
X'*sense*' FOR MS-TRANSPORT TO
NETWORK: *network* NODE: *node*
APPLICATION: *applid***

Explanation

The common operations services (COS) gateway application in the issuing NetView program was unable to communicate with the COS gateway application in the specified NetView program.

Message Variables

sense

The Systems Network Architecture (SNA) sense code received in the SNA condition report.

network

The network name received in the SNA condition report.

node

The name of the node received in the SNA condition report.

applid

The application name received in the SNA condition report. It should be DUIFCSGW.

System action

The COS gateway request ends.

Operator response

Notify the system programmer.

System programmer response

Determine whether the COS gateway autotask, DUIFCSGW, is started in the specified NetView program.

DUI400W	IP COMMUNICATIONS SETUP FOR IP '<i>ipid:port</i>' HAS FAILED. THE NETCONV START COMMAND IS REJECTED.
----------------	---

Explanation

The IP communication setup has failed.

Message Variables

ipid:port

The IP name or address and, if specified, the port associated with the value of the IP keyword on the NETCONV command. It is in the form *ipv4address:port* for an IPv4 address or *[ipv6address]:port* for an IPv6 address.

System action

The NETCONV command is ignored.

Operator response

Notify the system programmer.

System programmer response

Check the NetView log for accompanying messages DUI403 and DUI430. If you are unable to resolve the problem, contact IBM Software Support and provide the accompanying messages.

Check the NetView log for accompanying messages BNH821I or BNH822I. If either of these messages is displayed, this might signal incompatibility with the setting for the TAMEL.TTLS statement in the CNMSTYLE member and the configuration of the TCP/IP stack or with the policies defined to the z/OS Communications Server Policy Agent.

DUI401I	NETCONV COMMAND PROCESSED SUCCESSFULLY. COMMUNICATION TO IP '<i>ipid:port</i>' STARTED.
----------------	--

Explanation

The NETCONV START request processed successfully.

Message Variables

ipid:port

The IP name or address and, if specified, the port associated with the value of the IP keyword on the NETCONV command. It is in the form *ipv4address:port* for an IPv4 address or *[ipv6address]:port* for an IPv6 address.

System action

Processing continues.

DUI402I	IP '<i>ipid:port</i>' HAS ALREADY BEEN STARTED BY <i>operatorid</i>. CONDITION CODE = <i>condcode</i>
----------------	--

Explanation

The NETCONV START request is ignored because communication to the specified IP has already been established, or a NETCONV START command is currently being processed.

Message Variables

ipid:port

The IP name or address and, if specified, the port associated with the value of the IP keyword on the NETCONV command. It is in the form *ipv4address:port* for an IPv4 address or *[ipv6address]:port* for an IPv6 address.

operatorid

The ID of the operator who had previously issued the NETCONV START request.

condcode

The condition code, which is one of the following:

- 1 Communication has already been established by the other operator.
- 2 A NETCONV START command issued by the listed operator is currently outstanding.

System action

The request is ignored.

Operator response

Upon receiving this message, the operator must recycle the CNMTAMEL task before attempting to issue the NETCONV command again.

DUI403I **CONNECTION *socketnum*
EXCEEDED THE MAXIMUM
*maxsocket***

Explanation

The maximum number of NETCONV connections were exceeded for this *socketnum*.

Message Variables

socketnum

The number of NETCONV connections that was attempted.

maxsocket

The maximum number of NETCONV connections allowed. The number will be one less than the number specified on the SOCKETS keyword in DSIPARM member DUIFPMEM.

System action

Processing continues but the NETCONV START command is rejected.

System programmer response

Increase the value for the SOCKETS keyword in DSIPARM member DUIFPMEM. Verify that TCP/IP is active and configured correctly. Verify that the workstation server has been started and is currently operating. Contact IBM Software Support if the problem persists.

DUI404E **NETCONV START FOR IP '*ipid:port*'
REJECTED. DSIMQS FAILED WITH
RC=*retcode*.**

Explanation

The NetView message queueing service request (DSIMQS) for the NETCONV START request failed.

Message Variables

ipid:port

The IP name or address and, if specified, the port associated with the value of the IP keyword on the NETCONV command. It is in the form *ipv4address:port* for an IPv4 address or [*ipv6address*]:*port* for an IPv6 address.

retcode

The return code from the NetView Message Queueing Service (hexadecimal).

System action

The NETCONV START request is ignored.

Operator response

Notify the system programmer.

System programmer response

See *IBM Z NetView Programming: Assembler* for the meaning of the return code.

DUI405E **COMMUNICATION TO IP '*ipid:port*'
TERMINATED ABNORMALLY:
TCP/IP HAS TERMINATED.**

Explanation

TCP/IP has ended. Therefore, the IP conversations for *ipid:port* have ended abnormally.

Message Variables

ipid:port

The IP name or address and, if specified, the port associated with the value of the IP keyword on the NETCONV command. It is in the form *ipv4address:port* for an IPv4 address or [*ipv6address*]:*port* for an IPv6 address.

System action

The conversations end.

Operator response

Notify the system programmer.

System programmer response

Determine the reason TCP/IP ended and restart TCP/IP. When connectivity has been established, reissue the NETCONV command.

Note: When NETCONV is ended because TCP/IP ended, it can take from 1–60 seconds before CNMTAMEL is updated with this information.

**DUI406E COMMUNICATION TO IP '*ipid:port*'
TERMINATED ABNORMALLY:
VTAM TPEND.**

Explanation

VTAM ended and therefore the IP conversations for *ipid:port* also ended abnormally.

Message Variables***ipid:port***

The IP name or address and, if specified, the port associated with the value of the IP keyword on the NETCONV command. It is in the form *ipv4address:port* for an IPv4 address or *[ipv6address]:port* for an IPv6 address.

System action

The conversations end.

Operator response

Notify the system programmer.

System programmer response

Determine the reason VTAM ended, restart VTAM, establish connectivity, and reissue the NETCONV command.

**DUI407I A DUPLICATE NETCONV START
REQUEST WAS ISSUED FOR IP
'*ipid:port*'. THE REQUEST IS
IGNORED.**

Explanation

The NETCONV START request has already been issued.

Message Variables***ipid:port***

The IP name or address and, if specified, the port associated with the value of the IP keyword on the NETCONV command. It is in the form *ipv4address:port* for an IPv4 address or *[ipv6address]:port* for an IPv6 address.

System action

The request is ignored.

Operator response

Upon receiving this message, the operator must recycle the CNMTAMEL task before attempting to issue the NETCONV command again.

**DUI408I A NETCONV STOP REQUEST FOR
IP '*ipid:port*' THAT WAS ISSUED
BY *operatorid* COULD NOT BE
PROCESSED.**

Explanation

The system cannot process the NETCONV STOP request. This message can be generated by any of the following situations:

- Communication has already stopped because of the ending of the CNMTAMEL task.
- Communication has not been started for this IP address/name and port.
- Communication is in the process of becoming active.
- The operator who issued the stop command did not issue the NETCONV START request.

Message Variables***ipid:port***

The IP name or address and, if specified, the port associated with the value of the IP keyword on the NETCONV command. It is in the form *ipv4address:port* for an IPv4 address or *[ipv6address]:port* for an IPv6 address.

operatorid

The ID of the operator who issued the NETCONV STOP request.

System action

The request is ignored.

**DUI409E COMMUNICATION TO IP '*ipid:port*'
TERMINATED ABNORMALLY: OST
ABEND.**

Explanation

The operator station task (OST) that issued the NETCONV command for IP *ipid:port* abended and therefore the conversations ended abnormally.

Message Variables***ipid:port***

The IP name or address and, if specified, the port associated with the value of the IP keyword on the NETCONV command. It is in the form *ipv4address:port* for an IPv4 address or *[ipv6address]:port* for an IPv6 address.

System action

The conversations end.

Operator response

Reissue the NETCONV command from another operator station task (OST).

System programmer response

Determine the reason for the abend and correct the error.

DUI410E	COMMUNICATION TO IP '<i>ipid:port</i>' TERMINATED ABNORMALLY: OPERATOR LOGOFF.
----------------	---

Explanation

The operator that issued the NETCONV command for IP *ipid:port* logged off; therefore, the conversations ended abnormally.

Message Variables

ipid:port
The IP name or address and, if specified, the port associated with the value of the IP keyword on the NETCONV command. It is in the form *ipv4address:port* for an IPv4 address or *[ipv6address]:port* for an IPv6 address.

System action

The conversations end.

Operator response

Reissue the NETCONV command from another operator station task (OST).

DUI411E	COMMUNICATION TO IP '<i>ipid:port</i>' TERMINATED ABNORMALLY: CNMTAMEL TASK IS TERMINATING.
----------------	--

Explanation

The CNMTAMEL task on the host is ending and therefore the conversations with the workstation with IP *ipid:port* ended abnormally.

Message Variables

ipid:port
The IP name or address and, if specified, the port associated with the value of the IP keyword on the NETCONV command. It is in the form *ipv4address:port* for an IPv4 address or *[ipv6address]:port* for an IPv6 address.

System action

The conversations end.

Operator response

Notify the system programmer.

System programmer response

Determine why the CNMTAMEL task is ending and correct the error, if any. Restart the CNMTAMEL task and reestablish communication using the NETCONV command.

DUI412E	COMMUNICATION TO IP '<i>ipid:port</i>' TERMINATED ABNORMALLY: FATAL ERROR DURING RECEIVE.
----------------	--

Explanation

The host encountered a fatal error while attempting to receive data from the workstation with the *ipid:port*. The conversations ended abnormally.

Message Variables

ipid:port
The IP name or address and, if specified, the port associated with the value of the IP keyword on the NETCONV command. It is in the form *ipv4address:port* for an IPv4 address or *[ipv6address]:port* for an IPv6 address.

Note: If, for this connection, the CNMTAMEL task is the server, then the IP address that is displayed is the client IP address, and no port number is in the message variable.

System action

The conversations end.

Operator response

Notify the system programmer.

System programmer response

Interpret the return codes in message DUI430I, correct the error, and re-establish communication using the NETCONV command.

DUI413E	COMMUNICATION TO IP '<i>ipid:port</i>' TERMINATED ABNORMALLY: FATAL ERROR DURING SEND.
----------------	---

Explanation

The host encountered a fatal error while attempting to send status data to the workstation with IP *ipid:port*. The conversations ended abnormally.

Message Variables

ipid:port

The IP name or address and, if specified, the port associated with the value of the IP keyword on the NETCONV command. It is in the form *ipv4address:port* for an IPv4 address or *[ipv6address]:port* for an IPv6 address.

System action

The conversations end.

Operator response

Notify the system programmer.

System programmer response

Interpret the return codes in message DSI769I, correct the error, and re-establish communication using the NETCONV command.

DUI414E	COMMUNICATION TO IP '<i>ipid:port</i>' TERMINATED ABNORMALLY: FATAL ERROR
----------------	--

Explanation

The host encountered a fatal error while attempting to communicate with the workstation with the IP *ipid:port*. The conversations ended abnormally.

Message Variables***ipid:port***

The IP name or address and, if specified, the port associated with the value of the IP keyword on the NETCONV command. It is in the form *ipv4address:port* for an IPv4 address or *[ipv6address]:port* for an IPv6 address.

System action

The conversations end.

Operator response

Notify the system programmer.

System programmer response

Contact IBM Software Support.

DUI415E	COMMUNICATION TO IP '<i>ipid:port</i>' TERMINATED ABNORMALLY: RECEIVED DATA THAT WAS NOT VALID.
----------------	--

Explanation

The host received data from the workstation with IP *ipid:port*. The data was not as expected and the conversations ended abnormally.

Message Variables***ipid:port***

The IP name or address and, if specified, the port associated with the value of the IP keyword on the NETCONV command. It is in the form *ipv4address:port* for an IPv4 address or *[ipv6address]:port* for an IPv6 address.

System action

The conversations end.

Operator response

Notify the system programmer.

System programmer response

Contact IBM Software Support.

DUI416E	COMMUNICATION TO IP '<i>ipid:port</i>' TERMINATED ABNORMALLY: WORKSTATION FATAL ERROR.
----------------	---

Explanation

The workstation with IP *ipid:port* encountered an error. The workstation initiated conversation termination.

Message Variables***ipid:port***

The IP name or address and, if specified, the port associated with the value of the IP keyword on the NETCONV command. It is in the form *ipv4address:port* for an IPv4 address or *[ipv6address]:port* for an IPv6 address.

System action

The conversations end.

Operator response

Notify the system programmer.

System programmer response

Determine the error detected by the workstation, correct it, and re-establish communications using the NETCONV command.

DUI417I	NETCONV COMMAND PROCESSED SUCCESSFULLY.
----------------	--

COMMUNICATION TO IP '*ipid:port*' STOPPED.

Explanation

A NETCONV STOP request was processed successfully.

Message Variables

ipid:port

The IP name or address and, if specified, the port associated with the value of the IP keyword on the NETCONV command. It is in the form *ipv4address:port* for an IPv4 address or *[ipv6address]:port* for an IPv6 address.

System action

Processing continues on other requests.

DUI419I	COMMUNICATION TO IP '<i>ipid:port</i>' TERMINATED NORMALLY. THE COMMUNICATION SERVER CLOSED THE SOCKET.
----------------	--

Explanation

The communication server at the specified IP *ipid:port* brought down the IP connection to the status focal point. The communication server either ended or rejected the connection from the status focal point.

Message Variables

ipid:port

The IP name or address and, if specified, the port associated with the value of the IP keyword on the NETCONV command. It is in the form *ipv4address:port* for an IPv4 address or *[ipv6address]:port* for an IPv6 address.

System action

Processing continues.

Operator response

If you desire to communicate with the workstation, verify that the communication server is active, verify that there is not an LU 6.2 connection to the communication server and reissue the NETCONV START command.

DUI421E	THE NETCONV START COMMAND HAS FAILED BECAUSE IP '<i>ipid:port</i>' IS COMMUNICATING WITH ANOTHER STATUS FOCAL POINT, IS RUNNING AN UNSUPPORTED LEVEL OF NMC, OR IS ALREADY COMMUNICATING WITH THIS STATUS FOCAL POINT.
----------------	---

Explanation

A NETCONV START command was issued to IP *ipid:port*, which has failed for one of the following reasons:

- IP *ipid:port* is communicating with another status focal point, and can communicate with only one status focal point at a time.
- The workstation is running a release of the NetView program that is not compatible with the release used by the status focal point.
- The workstation is already communicating with the focal point through an LU6.2 or TCP/IP session.

Message Variables

ipid:port

The IP name or address and, if specified, the port associated with the value of the IP keyword on the NETCONV command. It is in the form *ipv4address:port* for an IPv4 address or *[ipv6address]:port* for an IPv6 address.

System action

The NETCONV START command is rejected and no communication occurs between the status focal point and the IP host name, address, and port.

Operator response

Determine if the workstation is communicating with another status focal point.

1. If it is possible, determine the host with which the workstation is to be communicating and reroute the session.
2. If the workstation is communicating with another status focal point in error, issue the NETCONV STOP command from that host, and reissue the NETCONV START command from the correct status focal point host.
3. If the workstation is not communicating with another status focal point, notify the system programmer.
4. Issue NETCONV ACTION=LIST OPID=ALL to determine which workstations currently have an LU6.2 or TCP/IP session with this host.

System programmer response

Check the version and release levels of the workstation and the NetView status focal point. Ensure that they are both running the same version and release of the NetView program.

DUI422E	CNMTAMEL FAILED TO RECEIVE DATA FROM IP '<i>ipid:port</i>' DUE TO A STORAGE SHORTAGE.
----------------	--

**REQUESTED AMOUNT = *amount*
BYTES.**

Explanation

CNMTAMEL attempted to receive data from a server workstation, but cannot get enough storage to satisfy the request.

Message Variables

ipid:port

The IP name or address and, if specified, the port associated with the value of the IP keyword on the NETCONV command. It is in the form *ipv4address:port* for an IPv4 address or *[ipv6address]:port* for an IPv6 address.

amount

The amount of storage that CNMTAMEL attempted to get.

System action

The IP connection between the status focal point host and the IP host name and address ends.

Operator response

Notify the system programmer of the storage problems. Reissue the NETCONV command.

System programmer response

If the problem persists, contact IBM Software Support.

DUI423E	COMMUNICATION TO IP '<i>ipid:port</i>' TERMINATED ABNORMALLY: WORKSTATION NOT RESPONDING.
----------------	--

Explanation

The CNMTAMEL task detected a data server workstation that is not responding, and has abnormally ended the IP connections to the workstation.

Message Variables

ipid:port

The IP name or address and, if specified, the port associated with the value of the IP keyword on the NETCONV command. It is in the form *ipv4address:port* for an IPv4 address or *[ipv6address]:port* for an IPv6 address.

System action

All IP connections to the data server workstation that is not responding are ended.

Operator response

Notify the system programmer.

System programmer response

Locate the data server workstation that is not responding. Attempt to determine the problem with the workstation and correct it. The status focal point has detected that the workstation is not responding and cannot communicate with it. If the workstation appears to be responding properly, the problem might be the result of memory constraints at the data server workstation.

Verify that you have enough memory on the workstation. See the *IBM Z NetView Tuning Guide*. Restart the IP connections to the workstation by using the NETCONV command.

DUI424I	OPERATOR <i>operatorid</i> IS COMMUNICATING WITH WORKSTATION AT IP '<i>ipid:port</i>'.
----------------	---

Explanation

The specified operator has established a session with the specified workstation IP identifier through an IP connection. This message is a response to issuing the NETCONV command with the ACTION=LIST parameter.

Message Variables

operatorid

The ID of the NetView operator that logged on.

ipid:port

The IP name or address and, if specified, the port associated with the value of the IP keyword on the NETCONV command. It is in the form *ipv4address:port* for an IPv4 address or *[ipv6address]:port* for an IPv6 address.

DUI427E	ERROR. CNMTAMEL ATTEMPTED TO TERMINATE COMMUNICATION TO AN UNRECOGNIZED WORKSTATION.
----------------	---

Explanation

An internal function either made an attempt to end a connection from the host to a workstation that does not exist or through a connection path that does not exist.

System action

Processing continues.

Operator response

Notify the system programmer.

System programmer response

Recycle the CNMTAMEL task.

DUI430I **UNSUCCESSFUL CALL TO
function, ERRNO= *errorcode*.**

Explanation

The CNMTAMEL, DSIRTTR, or DUIDGHB task received an error on a library function call.

This message can be issued by the CNMTAMEL, DSIRTTR, or DUIDGHB task. The operator ID field in the NetView log contains the name of the task that logs the message. This task name can be the task that issues the message or the name of the NetView authorized receiver. If column 24 of this message in the NetView Log contains a percent sign (%), then the message is logged by the authorized receiver and not by the task that issues the message. To determine which of the above tasks issued this message, issue the DEFAULTS MSGMODID=YES command. When the MSGMODID operand is specified, the DSI799I message is logged whenever a message is issued and the operator ID field in the DSI799I message contains the name of the task that issues the message.

Message Variables

function

The name of the library function:

- Accept
- Bind
- Close
- Connect
- GetAddrInfo
- GetClientID
- GetHostName
- GetNameInfo
- InitAPI
- IOCTL
- Listen
- Recv
- Select
- Send
- ShutDown
- Socket

errorcode

The return code from the function call.

System action

Processing continues.

Operator response

Notify the system programmer.

System programmer response

If TCP/IP is used, verify that TCP/IP is active and configured correctly. Verify that the workstation server has been started and is currently operating. If TCP/IP is not used, ensure that the TASK.DUIDGHB.INIT statement in the CNMSTYLE member is set to NO. Otherwise, the NetView program continues to attempt to attain the host name from the TCP/IP address.

For more information about the return codes, refer to the TCP/IP library. Note the library function and return code and contact IBM Software Support.

DUI431E **COMMUNICATION CANNOT BE
ESTABLISHED VIA A TCP/IP
CONNECTION. THE NETCONV
COMMAND IS IGNORED.**

Explanation

The host NetView cannot connect to an IP workstation. The initialization parameter that enables TCP/IP sessions was not set.

System action

The NETCONV command is ignored. Processing continues. The host NetView is still able to establish LU 6.2 sessions.

Operator response

Notify the system programmer.

System programmer response

Set the CNMTAMEL initialization parameter USETCPIP to YES in the CNMTAMEL initialization member DUIFPMEM.

DUI432I **AN UNSUCCESSFUL CALL TO
INITAPI HAS BEEN MADE BY
TASK=*task* DUE TO AN INVALID
TCPANAME VALUE = *value* IN THE
INPUT FILE *file*.**

Explanation

An error occurred calling the TCP/IP function INITAPI because of a TCPANAME value that is not valid being specified in the initialization member of the given task.

Message Variables

task

The task that attempted to use the TCPANAME that was not valid.

value

The TCPANAME value that was not valid.

file

The input file that is being read.

System action

The TCP/IP function for this task is not enabled. For the DSIRTR task, the task ends after this message is received.

Operator response

Notify the system programmer.

System programmer response

Check the input file and correct the TCPANAME value that is not valid.

DUI433I	PASSIVE SOCKET INITIALIZATION FAILED DUE TO UNSUCCESSFUL <i>function</i> FUNCTION CALL
----------------	---

Explanation

CNMTAMEL received an error on a library function call which was attempting to set up a passive (listen) socket for which workstation servers can listen.

Message Variables***function***

The name of the library function. (Socket, Bind, or Listen)

System action

CNMTAMEL ends.

Operator response

Notify the system programmer.

System programmer response

Verify that TCP/IP is active and configured correctly. Verify that port number specified in DUIFPMEM is not currently being used. Check the NetView log for message DUI430I for more details about the specific function call error return code. For more information about the return codes, refer to the TCP/IP library. Note the library function and return code and contact IBM Software Support.

DUI461I

**IP *ipid:port* NOT AVAILABLE FOR
WORK; REQUEST TO THIS IP WAS
ABORTED.**

Explanation

A request was made to a workstation with IP *ipid:port* that cannot be honored because this IP *ipid:port* is either initializing or ending.

Message Variables***ipid:port***

The IP name or address and, if specified, the port associated with the value of the IP keyword on the NETCONV command. It is in the form *ipv4address:port* for an IPv4 address or [*ipv6address*]:*port* for an IPv6 address.

System action

The IP host name, address, and host finish ending or initializing. Upon completing initialization it receives complete status information.

DUI500E

**CNMTAMEL RECEIVED
CORRUPTED DATA FROM IP
ipid:port.**

Explanation

The CNMTAMEL task does not recognize the data received from NMC.

Message Variables***ipid:port***

The IP name or address and, if specified, the port associated with the value of the IP keyword on the NETCONV command. It is in the form *ipv4address:port* for an IPv4 address or [*ipv6address*]:*port* for an IPv6 address.

System action

Processing continues, but the corrupted data is not processed.

Operator response

Record the message and notify the system programmer.

System programmer response

Contact IBM Software Support.

DUI502E

**RECORD *recnum* IN '*member*'
CANNOT BE PARSED. RETURN
CODE FROM DSIPRS WAS *retcode*.**

Explanation

The record indicated by *recnum* in the member or file named *member* cannot be parsed because it contains an error such as unbalanced quotation marks.

Message Variables

recnum

The number of the record where the error was found.

member

The member or file being read.

retcode

The return code given by DSIPRS for the type of error found (hexadecimal).

System action

Processing continues with the next record.

Operator response

Check the input file for typographical errors. If none are found, contact the system programmer.

System programmer response

Check the input file for errors. An explanation of the return codes for DSIPRS can be found in *IBM Z NetView Programming: Assembler*.

DUI504I NO VALID SC SPECIFICATIONS IN USER-SUPPLIED INPUT FILE 'file'.

Explanation

No valid status collectors (SCs) were specified in the input file.

Message Variables

file

The user-supplied input file.

System action

Processing continues.

Operator response

Check the input file for the SC specifications. There are either none in the file, or none of the specifications are valid. Incorrect SC specifications were to have been flagged when processing was attempted. Replace or remove any SC specification that is not valid from the file.

System programmer response

Check the input file for incorrect or nonexistent SC specifications.

DUI505A ERROR CONNECTING TO MEMBER. RETURN CODE FROM DSIDKS WAS retcode.

Explanation

An error occurred while attempting to connect to the member or file noted in message DUI513I.

Message Variables

retcode

The hexadecimal return code from DSIDKS.

System action

The CNMTAMEL task ends.

Operator response

Notify the system programmer.

System programmer response

Check for errors initializing the NetView program. Most likely this is a storage allocation error. Check return code from DSIDKS (*retcode*).

DUI506E ERROR FINDING FILE 'file' OR READING FIRST RECORD. RETURN CODE FROM DSIDKS WAS retcode.

Explanation

An error occurred while attempting to find the file in the data set.

Message Variables

file

The name of the file causing this error.

retcode

The hexadecimal return code from DSIDKS.

System action

The command or processing ends.

If the message is issued during CNMTAMEL task initialization, then CNMTAMEL task initialization ends.

Operator response

Check the file name in the error message, and ensure that it is correct and exists in the data set being read. The file can be empty.

System programmer response

Locate the source of the problem by checking the DSIDKS return code. See *IBM Z NetView Programming: Assembler*.

DUI507E	ERROR READING FILE '<i>file</i>'. RETURN CODE FROM DSIDKS WAS <i>retcode</i>.
----------------	--

Explanation

An error occurred while attempting to read from a member in the data set.

Message Variables

- file*
The file being read when the error occurred.
- retcode*
The hexadecimal return code from DSIDKS.

System action

The command or processing ends.

If the message is issued during CNMTAMEL task initialization, then CNMTAMEL task initialization ends.

Operator response

Ensure that the file (member) was set up correctly for reading. If it was, notify the system programmer.

System programmer response

Locate the source of the problem by checking the DSIDKS return code. See *IBM Z NetView Programming: Assembler*. Further action must be based on the problem source.

DUI513I	STATUS FOCAL POINT READING INITIALIZATION PARAMETERS FROM '<i>sfpname</i>' AS SPECIFIED IN '<i>initmem</i>'.
----------------	---

Explanation

The initialization parameters for the status focal point are being read.

Message Variables

- sfpname*
The status focal point parameters member or file.
- initmem*
The initialization member or file for the CNMTAMEL task.

System action

The CNMTAMEL task is initializing as a status focal point.

DUI526E	ERROR. THE KEYWORD '<i>keyword</i>' IN THE INPUT FILE '<i>file</i>' CONTAINS AN INVALID VALUE '<i>value</i>'.
----------------	--

Explanation

A value was entered for *keyword* that is not valid.

Message Variables

- keyword*
The keyword whose value is in error.
- file*
The input file that is being read.
- value*
The value that is in error.

System action

CNMTAMEL task initialization ends.

Operator response

Notify the system programmer.

System programmer response

Check the input file and correct the statement that contains the keyword with the value that is not valid.

DUI527E	RESOURCE STATUS '<i>status</i>' IS SPECIFIED MORE THAN ONCE IN '<i>member</i>'.
----------------	--

Explanation

Each status known to the resource status manager must be specified only once on a STATUSTABLE statement. The status *status* was specified more than once on the STATUSTABLE statement in the *member* member.

Message Variables

- status*
The status name that is specified more than once
- member*
The name of the member or file being read

System action

CNMTAMEL task initialization fails.

Operator response

Notify the system programmer.

System programmer response

Correct the status decision table in the member specified or specify a member with a correct STATUSTABLE statement on the FPPARMS parameter of the AMELINIT statement.

DUI528E	RESOURCE STATUS '<i>status</i>' ENCOUNTERED IN '<i>member</i>' IS NOT VALID.
----------------	---

Explanation

A value that is not valid, *status*, was encountered while reading the STATUSTABLE values from the DSIPARM member *member*.

Message Variables

status

The incorrect status name.

member

The member or file being read.

System action

CNMTAMEL task initialization fails.

Operator response

Notify the system programmer.

System programmer response

Correct the status decision table in the member specified or specify a member on the FPPARMS parameter of the AMELINIT statement with a correct STATUSTABLE. See the *IBM Z NetView Administration Reference* for more information.

DUI530I	THE REQUIRED NUMBER OF PARAMETERS WAS NOT SPECIFIED FOR THE DUIFECMV COMMAND.
----------------	--

Explanation

The DUIFECMV command can be issued with:

- No parameters
- One optional GMFHSDOM parameter
- Five parameters that are DOMAIN, CLASS, STATUS, OBJNAME, and INDICAT
- Six parameters that are DOMAIN, CLASS, STATUS, OBJNAME, INDICAT, and the optional GMFHSDOM

System action

The DUIFECMV command ends.

Operator response

Notify the system programmer.

System programmer response

Verify the syntax of the DUIFECMV command for the proper number and combination of parameters. For more information on the DUIFECMV command, see the *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide*.

DUI531E	THE KEYWORD GMFHSDOM IN THE DUIFECMV COMMAND CONTAINS THE VALUE <i>domain</i> WHICH IS AN INVALID DOMAIN ID.
----------------	---

Explanation

The domain name given is incorrect for one of the following reasons:

- The DOMAIN keyword is specified without a domain name.
- The specified domain name is longer than 5 characters.
- The domain name contains one or more non-alphanumeric characters.

Message Variables

domain

The incorrect user-specified domain ID for the GMFHSDOM parameter on the DUIFECMV command.

System action

The status information contained in the alert or resolution is not received by the NMC.

Operator response

Notify the system programmer.

System programmer response

Correct the domain name specified by the DUIFECMV command in the automation table.

DUI532E	UNRECOGNIZED BUFFER '<i>buffer</i>' FROM SNA TOPOLOGY MANAGER RECEIVED BY STATUS COLLECTOR. THE BUFFER IS IGNORED.
----------------	---

Explanation

The status collector received an unrecognized buffer from the SNA topology manager.

Message Variables

buffer

Up to 32 bytes of the received buffer.

System action

The buffer is discarded.

Operator response

Notify the system programmer.

System programmer response

Trace the RU through which the message travels and determine if the error originates from the SNA topology manager or is caused by the underlying communication component. A status collector must never receive buffers from the SNA topology manager. This error can occur as a result of terminating the CNMTAMEL task which was running as the status focal point and recycling it as a status collector. Recycle the CNMTAMEL task as a status focal point.

DUI533E	ERROR. INCOMPLETE STATUS DECISION TABLE IN THE INPUT FILE '<i>file</i>'. <i>count</i> ENTRIES FOUND, <i>total</i> REQUIRED.
----------------	--

Explanation

The status decision table being read from the input file contains only *count* status names. There must be *total* entries.

Message Variables

file

The input file that is being read.

count

The number of entries specified in the status decision table.

total

The number of entries that must be supplied for the status decision table.

System action

CNMTAMEL task initialization ends.

Operator response

Notify the system programmer.

System programmer response

Compare your copy of the status decision table with the one you received from IBM. The order can be changed, but the number of entries must remain the

same. See the *IBM Z NetView Administration Reference* for more information.

DUI534E	ERROR. THE KEYWORD '<i>keyword</i>' WAS NOT SPECIFIED IN THE INPUT FILE '<i>file</i>'.
----------------	---

Explanation

The required keyword *keyword* is not specified in the input file.

Message Variables

keyword

The keyword that is missing.

file

The input file that is being read.

System action

CNMTAMEL task initialization ends.

Operator response

Notify the system programmer.

System programmer response

Update the input file so that it contains the required keyword. See the *IBM Z NetView Administration Reference* for more information.

DUI535E	ERROR. DUPLICATE KEYWORD '<i>keyword</i>' SPECIFIED IN THE INPUT FILE '<i>file</i>'.
----------------	---

Explanation

You can specify the keyword *keyword* only once, and it is specified more than once in the input file.

Message Variables

keyword

The keyword that is specified more than once.

file

The input file that is being read.

System action

CNMTAMEL task initialization ends.

Operator response

Notify the system programmer.

System programmer response

Check the input file and remove the duplicate keyword *keyword*.

DUI536E ERROR. DUPLICATE VALUE '*value*' SPECIFIED FOR THE KEYWORD '*keyword*' IN THE INPUT FILE '*file*'.

Explanation

The value *value* is specified more than once in the input file.

Message Variables

value

The value that is specified more than once.

keyword

The keyword that is assigned the value more than once.

file

The input file that is being read.

System action

CNMTAMEL task initialization ends.

Operator response

Notify the system programmer.

System programmer response

Check the input file and remove the duplicate value from the keyword.

DUI537E ERROR. THE KEYWORD '*keyword*' IN THE INPUT FILE '*file*' CONTAINS A NON-NUMERIC VALUE '*value*'.

Explanation

The keyword *keyword* expects a numeric value but was assigned a non-numeric value.

Message Variables

keyword

The keyword whose value is in error.

file

The input file that is being read.

value

The value that is in error.

System action

CNMTAMEL task initialization ends.

Operator response

Notify the system programmer.

System programmer response

Check the input file and correct the statement containing the keyword with the value in error.

DUI538E ERROR. THE RECORD '*record*' IN THE INPUT FILE '*file*' IS NOT VALID.

Explanation

An error was found on the record *record* of file *file*. It is possible that the end of file was encountered while reading a continued record in the input file *file*. Check for a comma at the end of the last line or a keyword that has not been assigned a value.

Message Variables

record

The record where the error occurred.

file

The input file that is being read.

System action

CNMTAMEL task initialization ends.

Operator response

Notify the system programmer.

System programmer response

Check the record in the input file. If the error was on the last record, determine whether a continuation is desired.

DUI539E ERROR. THE KEYWORD '*keyword1*' MUST BE SPECIFIED BEFORE THE KEYWORD '*keyword2*' IN THE INPUT FILE '*file*'.

Explanation

You must specify the keyword *keyword1* before any occurrence of the keyword *keyword2*.

Message Variables

keyword1

The keyword that must be specified before the keyword *keyword2*.

keyword2

The keyword that cannot be specified before the keyword *keyword1*.

file

The input file that is being read.

System action

CNMTAMEL task initialization ends.

Operator response

Notify the system programmer.

System programmer response

Move the location of *keyword1* so that it precedes any occurrence of *keyword2*.

**DUI540E ERROR. THE KEYWORD '*keyword*'
IN THE INPUT FILE '*file*'
CONTAINS THE VALUE '*value*'
THAT IS LONGER THAN THE
MAXIMUM ALLOWABLE LENGTH
OF '*length*' CHARACTER(S).**

Explanation

The keyword value is too long. This value cannot exceed *length* characters.

Message Variables

keyword

The keyword whose length exceeds the maximum allowable length.

file

The input file that is being read.

value

The value that exceeds that maximum allowable length.

length

The maximum allowable length for the value of the keyword.

System action

CNMTAMEL task initialization ends.

Operator response

Notify the system programmer.

System programmer response

Change the value of the keyword in the input file so that it contains no more than *length* characters.

**DUI541E ERROR. THE KEYWORD '*keyword*'
IN THE INPUT FILE '*file*' IS NOT
VALID.**

Explanation

The input file contains an incorrect keyword.

Message Variables

keyword

The keyword that is in error.

file

The input file that is being read.

System action

CNMTAMEL task initialization ends.

Operator response

Notify the system programmer.

System programmer response

Modify DUIFPMEM so that it contains a valid keyword. The valid keywords are:

- CODEPAGE
- DIAGNOSE
- ENABLE31GDS
- MAXRESOURCES
- MAXSCCOUNT
- MAXNETWORKDS
- NULLGDSOPIDS
- PORT
- SC
- SOCKETS
- STATUSTABLE
- TCPANAME
- USETCPIP

**DUI542E ERROR. UNEXPECTED END OF
FILE IN THE INPUT FILE '*file*'.**

Explanation

The end of the file was encountered while reading a continued record in the input file *file*. In most cases, this is caused by a comma at the end of the last line, or by a keyword that was not assigned a value.

Message Variables

file

The name of the input file being read.

System action

CNMTAMEL task initialization ends.

Operator response

Notify the system programmer.

System programmer response

Check the last record in the input file and determine whether a continuation is desired.

DUI546I **THE KEYWORD *keyword* IN THE INPUT FILE *file* CONTAINS THE VALUE *value* WHICH IS INVALID. THE DEFAULT VALUE OF *defvalue* WILL BE USED.**

Explanation

A non-valid value was specified for *keyword*. The default value will be used.

Message Variables

keyword

The keyword whose value is in error.

file

The input file that is being read.

value

The value that is in error.

defvalue

The default value that will be used.

System action

Processing continues.

Operator response

Notify the system programmer.

System programmer response

Check the input file and correct the statement containing the keyword with the value in error. If the keyword is TTLS, you might have specified a value that is not valid for the level of z/OS that is currently running. The AT-TLS (Application Transparent Transport Layer Security) function is only available for z/OS V1.7 and later. The TTLS keyword can be specified in the CNMSTYLE member by the user and then inserted into the file identified in this message using Data REXX.

DUI551I **UNRECOGNIZED BUFFER '*buffer*' RECEIVED BY STATUS FOCAL POINT. THE BUFFER IS IGNORED.**

Explanation

The status focal point received an unrecognized buffer.

Message Variables

buffer

Up to 25 bytes of the received buffer.

System action

The buffer is discarded.

Operator response

Verify that you specified the correct name on the TASK statement for MOD=CNMTARCA in the CNMSTASK member. The name must be your DOMAINID concatenated with 'VMT', such as, CNM01VMT, where in this example DOMAINID=CNM01. If you started STATMON dynamically, ensure that you typed the START TASK= command correctly. For example:

```
START TASK=CNM01VMT,MOD=CNMTARCA,PRI=5
```

It is recommended that you start STATMON using the TASK definitions in the CNMSTASK member to avoid these errors.

You might also receive this message for internal errors. If the TASK statements are valid, notify your system programmer.

System programmer response

Look at the discarded buffer. Bytes 9–17 will contain the domain with which the focal point is attempting to communicate. The data must be converted from EBCDIC. This will be the domain of the Resource Status Collector attempting to send data to this focal point. For example:

```
DUI551I UNRECOGNIZED BUFFER
'0018010100000000C3D5D4F0F140404005700001050000
RECEIVED BY STATUS FOCAL POINT. THE BUFFER IS
IGNORED.
```

where C3D5D4F0F1404040 represents CNM01.

Trace the RU through which this message travels and determine if the error originates from its sender or is caused by the underlying communication components.

DUI552I **SYNCHRONIZATION FAILED WITH STATUS COLLECTOR *scname* DUE TO STORAGE SHORTAGE PROBLEMS.**

Explanation

The status focal point cannot complete synchronization with a status collector because of storage problems.

Message Variables

scname

The status collector that cannot be synchronized.

System action

The focal point does not synchronize with the status collector, but continues processing other requests.

Operator response

Determine whether you received message BNH16I, which means the task has reached its storage limit. If so, notify your system programmer.

System programmer response

See the *IBM Z NetView Troubleshooting Guide* for possible causes of the storage shortage.

DUI563I	STATUS FOCAL POINT FAILED TO COMMUNICATE WITH STATUS COLLECTOR <i>scname</i>.
----------------	--

Explanation

An attempt to send the SYNCH command to the status collector failed.

Message Variables

scname

The domain ID of the status collector.

System action

The status of all resources monitored by this status collector are set to UNKNOWN. After your specified retry interval has passed, the SYNCH command is sent again.

Operator response

Notify the system programmer.

System programmer response

Check the underlying communication components and possible non-released storage.

DUI564E	STATUS FOCAL POINT CANNOT COMMUNICATE WITH STATUS COLLECTOR <i>scname</i>. SYNCH RETRY THRESHOLD WAS EXCEEDED.
----------------	---

Explanation

There are several situations that can generate this message. It is also possible to receive DUI564E more than once for a single status collector. This message occurs whenever something happens to cause the status focal point to begin attempting synchronization again. The following are reasons for receiving this message:

- The status collector is running at a distributed host and it does not have a status focal point defined.
- The status collector host *scname* is not running as a status collector.
- All required tasks have not been started at either the status focal point host, the status collector host, or both.
- The status collector is running at a distributed host and there are underlying communication problems between the status collector host and the status focal point host.
- The timer values can be set inappropriately for your configuration.

Message Variables

scname

The domain ID of the status collector.

System action

The status of all resources monitored by this status collector are set to UNKNOWN.

Operator response

Notify the system programmer.

System programmer response

Determine the appropriate action from the following list:

- Define a status focal point for the status collector and issue the CHANGEFP command.
- Verify that the status monitor preprocessor has been run with a valid GRAPHOPT statement. See the *IBM Z NetView Administration Reference* for information on coding the GRAPHOPT statement.
- Ensure that the appropriate tasks are active. These tasks include CNMTAMEL and status monitor in all cases, and also LUC and DSICRTR in cross-domain situations.
- Determine the cause of the problem from the communication error messages.
- Determine if the timers are set inappropriately. If so, reset the timeout values in DSICTMOD to higher values and restart the CNMTAMEL task.

DUI565E	STATUS FOCAL POINT <i>fpname</i> HAS RECEIVED DATA FROM AN UNSUPPORTED LEVEL STATUS COLLECTOR <i>scname</i>. THE DATA IS DISCARDED.
----------------	--

Explanation

A status collector *scname* was initialized with a level of code that is unsupported by its status focal point, *fpname*. The status focal point recognizes that it cannot communicate with this status collector, so it rejects all data received from it and puts out this message.

Message Variables

fpname

The name of the status focal point that received data from an unsupported level status collector.

scname

The name of the status collector that sent data to a status focal point that cannot support it.

System action

This message is displayed and the data is discarded. Everything else progresses normally. The status focal point is not able to synchronize with the status collector or to collect status from it.

Operator response

Notify the system programmer.

System programmer response

Determine the level of code installed on the *fpname* host and the level of code installed on the *scname* host. Reinstall the correct level of code on either the *fpname* host or the *scname* host so that the status collector and the focal point are compatible.

DUI567I	RESOURCE STATUS MANAGER CANNOT ESTABLISH A SESSION WITH SNA TOPOLOGY MANAGER
----------------	---

Explanation

The resource status manager cannot establish a session with the topology services manager.

Operator response

Notify the system programmer.

System programmer response

Verify that the FLBTOPO autotask is active. If not, start the FLBTOPO autotask. If it is active or if problems persist, contact IBM Software Support.

DUI568I	RESOURCE STATUS MANAGER HAS LOST ITS SESSION WITH SNA TOPOLOGY MANAGER
----------------	---

Explanation

The resource status manager has lost its session with the topology services manager.

Operator response

Notify the system programmer.

System programmer response

Verify that the FLBTOPO autotask is active. If not, restart the FLBTOPO autotask. If it is active or if problems persist, contact IBM Software Support.

DUI569E	STATUS COLLECTOR <i>domainid</i> DOES NOT HAVE REQUIRED PTF FOR FORWARDING STATUS TO THE SNA TOPOLOGY MANAGER
----------------	--

Explanation

The resource status collector for a NetView Version 2 program is trying to establish a session with a resource status manager. The resource status collector does not have the required PTF applied. For information on required PTFs, see the *IBM Z NetView* program directory.

Message Variables

domainid

The domain ID of the resource status collector.

System action

The status focal point has detected that the status collector does not have the required PTF for forwarding status to the SNA topology manager. Status will not be forwarded to the SNA topology manager.

Operator response

Notify the system programmer.

System programmer response

Apply the required PTF to the resource status collector.

DUI579I	STATUS FOCAL POINT <i>fpname</i> AND STATUS COLLECTOR <i>scname</i> ARE SYNCHRONIZED.
----------------	--

Explanation

The status focal point received a complete REPLY SYNCH from a status collector.

Message Variables

fpname

The domain ID of the status focal point.

scname

The domain ID of the status collector.

System action

Processing continues.

DUI593I STATUS FOCAL POINT UNABLE TO COMMUNICATE WITH STATUS COLLECTOR *scname* - OUT OF STORAGE CONDITION

Explanation

The status collector does not have enough storage to send status to its status focal point.

Message Variables**scname**

The domain ID of the status collector.

System action

The status focal point sets the status of any resources reported by this status collector to UNKNOWN, and does not attempt to resynch with the status collector.

Operator response

Notify the system programmer.

System programmer response

Check the status collector for an out-of-storage condition. When the storage shortage is relieved, reinitialize the status collector.

DUI601E STATUS UPDATE WAS LOST FROM STATUS COLLECTOR *scname*.

Explanation

The status collector sent an update with an unexpected sequence number to its status focal point.

Message Variables**scname**

The domain ID of the status collector.

System action

If the SYNCH retry threshold is not exceeded, the status focal point tries to resynch with the status collector.

Operator response

Notify the system programmer.

System programmer response

Trace the messages from the status collector.

DUI610E CNMTAMEL FAILED TO SEND TO SERVER PWS AT LU *luname*

Explanation

The resource status manager attempted to send data to a data server, and the send failed. There is a problem with the LU 6.2 connection to the server workstation.

Message Variables**luname**

The name of the LU where the send failed.

System action

The resource status manager continues processing, but halts sending to the failed server workstation until the LU 6.2 sessions are re-established and the data server re-initializes.

Operator response

Notify the system programmer.

System programmer response

Check the LU 6.2 sessions between the status focal point host and the server workstation LU indicated in the message. When the connection is reestablished, reissue the NETCONV command to the LU indicated in the message.

DUI611I THE OPERATOR ID AND PASSWORD FOR GRAPHIC MONITOR OPERATOR *operatorid* HAS BEEN VERIFIED. *ipid:port* IS THE SERVER PWS SERVING THIS GRAPHIC MONITOR.

Explanation

The graphic monitor operator identified in the message now has the authority to send commands to the status focal point through the graphic monitor commands function.

Message Variables**operatorid**

The ID of the operator that logged on

ipid:port

The IP name or address and, if specified, the port of the server workstation that is serving the graphic monitor. It is in the form *ipv4address:port* for an IPv4 address or [*ipv6address*]:*port* for an IPv6 address.

System action

The NetView operator ID and password or password phrase entered at the graphic monitor are valid and authorized to enter NetView commands from the graphic monitor.

Operator response

Information message only.

System programmer response

This message is logged and provides an audit trail of the operators who have attempted to use the graphic monitor commands function.

DUI612E	A GRAPHIC MONITOR OPERATOR HAS ATTEMPTED TO LOG ON TO GRAPHIC MONITOR WITH <i>operatorid</i> BUT THE OPERATOR ID IS NOT LOGGED ONTO NETVIEW PROGRAM.
----------------	---

Explanation

The graphic monitor operator must be logged on to the NetView system before commands can be accepted.

Message Variables

operatorid

The ID of the NetView operator attempting to log on.

System action

The logon attempt fails and commands cannot be accepted from the graphic monitor.

Operator response

If you are authorized to issue commands from the graphic monitor, ensure you are logged on to the NetView system before attempting to log on to the graphic monitor. If you have not been issued a NetView operator ID and password or password phrase, notify the system programmer.

System programmer response

If certain graphic monitor operators can enter host commands from the graphic monitor, they must be provided with valid NetView operator IDs and passwords or password phrases.

DUI613E	CNMTAMEL IS UNABLE TO ALLOCATE <i>bytes</i> BYTES OF STORAGE FOR SENDING A REQUIRED RESPONSE TO SERVER PWS AT LU <i>luname</i>
----------------	---

Explanation

A GETMAIN command issued by the CNMTAMEL task failed. The CNMTAMEL task tried to obtain the number of bytes indicated in the message. This storage was to be used to respond to a request from a server workstation. Examples of these requests are:

- Verify an operator ID and password or password phrase for logging on to the graphic monitor.
- Execute a command request.

Message Variables

bytes

The number of bytes is the amount of storage that the CNMTAMEL task tried to obtain

luname

The name of the LU

System action

The server workstation times out on its outstanding request to the CNMTAMEL task. Normal operations resume at the workstation after the time-out processing is complete. Depending on the conditions of NetView storage, normal operations might be resumed at the host focal point.

System programmer response

See the *IBM Z NetView Troubleshooting Guide* for possible causes of the storage shortage.

DUI614I	CNMTAMEL HAS RECEIVED A REQUEST FROM A DATA SERVER AT LU <i>luname</i> THAT IS RUNNING AT AN UNSUPPORTED LEVEL. THE REQUEST IS IGNORED.
----------------	--

Explanation

The data server at the LU *luname* is not running a compatible level of code with the status focal point to which it is attached. The data server's code must be upgraded.

Message Variables

luname

The name of the LU where the unsupported data server is running.

System action

The data server request is ignored.

Operator response

Notify the system programmer.

System programmer response

Upgrade the down-level data server.

DUI615E	CNMTAMEL COULD NOT SEND A DATA PACKET TO THE DATA SERVER AT LU <i>luname</i> BECAUSE OF A STORAGE SHORTAGE.
----------------	--

Explanation

The CNMTAMEL task attempted to send data to a particular data server, but ran out of storage.

Message Variables

luname

The name of the LU where the data server is running.

System action

The CNMTAMEL task continues processing, but the data server has missed some data. Message DUI2028 might appear at the specified data server, but the host and workstation will resynchronize automatically, so the loss of data is only a temporary problem.

Operator response

Notify the system programmer to correct storage problems. To force the data server and the CNMTAMEL task to resynchronize, you can recycle the LU 6.2 session connecting the host and workstation by using the NETCONV command.

System programmer response

If the problem persists, contact IBM Software Support.

DUI616E	CNMTAMEL COULD NOT BROADCAST A DATA PACKET BECAUSE OF A STORAGE SHORTAGE.
----------------	--

Explanation

The CNMTAMEL task attempted to send data to all connected data servers, but ran out of storage.

System action

The CNMTAMEL task continues processing, but the data servers has missed some data. Message DUI2028 might appear at any connected data server, but the host and workstations will resynchronize automatically, so the loss of data is only a temporary problem.

Operator response

Notify the system programmer to correct storage problems. To force the data server and the CNMTAMEL task to resynchronize, you can recycle the LU 6.2 session connecting the host and workstation by using the NETCONV command.

System programmer response

If the problem persists, contact IBM Software Support.

DUI617E	CNMTAMEL FAILED TO SEND DATA TO THE DATA SERVER AT LU <i>luname</i> DUE TO AN MQS FAILURE.
----------------	---

Explanation

The CNMTAMEL task attempted to send data to the specified data server, but encountered a message queuing service (MQS) failure.

Message Variables

luname

The name of the LU where the data server is running.

System action

The CNMTAMEL task continues processing, but the data server has missed some data. Message DUI2028 might be displayed at the data server, but the host and workstation will resynchronize automatically.

Operator response

The MQS failure is probably because of storage problems. If the problem persists, notify the system programmer to investigate storage shortages, and issue the NETCONV ACTION=STOP command for the specified LU. When the problems have been cleared, reissue the NETCONV ACTION=START command to reconnect the workstation with the host.

System programmer response

If the problem persists, contact IBM Software Support.

DUI618I	THE OPERATOR ID AND PASSWORD FOR COMMAND PROFILE EDITOR OPERATOR <i>operatorid</i> HAS BEEN VERIFIED. <i>name</i> IS THE SERVER PWS SERVING THIS COMMAND PROFILE EDITOR.
----------------	---

Explanation

The command profile editor operator identified in the message now has the authority to send commands to

the status focal point through the command profile editor commands function.

Message Variables

operatorid

The ID of the operator that logged on

name

The LU or IP name or ID of the server workstation that is serving the command profile editor

System action

The NetView operator ID and password or password phrase entered at the command profile editor are valid and authorized to enter NetView commands from the command profile editor.

Operator response

Information message only.

System programmer response

This message is logged and provides an audit trail of the operators who have attempted to use the command profile editor commands function.

DUI619E	A COMMAND PROFILE EDITOR OPERATOR HAS ATTEMPTED TO LOG ONTO COMMAND PROFILE EDITOR WITH <i>operatorid</i> BUT THE OPERATOR ID IS NOT LOGGED ONTO NETVIEW PROGRAM.
----------------	--

Explanation

The command profile editor operator must be logged on to the NetView system before commands can be accepted.

Message Variables

operatorid

The ID of the NetView operator attempting to log on

System action

The logon attempt fails and command profiles cannot be edited from the command profile editor.

Operator response

If you are authorized to edit command profiles from the command profile editor, ensure you are logged on to the NetView system before attempting to log on to the command profile editor. If you have not been issued a NetView operator ID and password or password phrase, notify the system programmer.

System programmer response

If certain command profile editor operators can enter host commands from the graphic monitor, they must be provided with valid NetView operator IDs and passwords or password phrases.

DUI620E	CNMTAMEL FAILED TO SEND TO SERVER PWS AT IP <i>ipid</i>
----------------	--

Explanation

The resource status manager attempted to send data to a data server, and the send failed. There is a problem with the IP connection to the server workstation.

Message Variables

ipid

The IP name and address associated with the value of the IP keyword on the NETCONV command. It is in the form *IPname (IPaddress)*.

System action

The resource status manager continues processing, but halts sending to the failed server workstation until the IP sessions are reestablished and the data server has been reinitialized.

Operator response

Notify the system programmer.

System programmer response

Check the IP sessions between the status focal point host and the server workstation indicated in the message. When the connection is reestablished, reissue the NETCONV command to the IP host name and address indicated in the message.

DUI623E	CNMTAMEL IS UNABLE TO ALLOCATE <i>bytes</i> BYTES OF STORAGE FOR SENDING A REQUIRED RESPONSE TO SERVER PWS AT IP <i>ipid:port</i>
----------------	--

Explanation

A GETMAIN command issued by the CNMTAMEL task failed. The CNMTAMEL task tried to obtain the number of bytes indicated in the message. This storage was to be used to respond to a request from a server workstation. Examples of these requests are:

- Verify an operator ID and password or password phrase for logging on to the graphic monitor.
- Execute a command request.

Message Variables

bytes

The number of bytes is the amount of storage that the CNMTAMEL task tried to obtain.

ipid:port

The IP name or address and, if specified, the port associated with the value of the IP keyword on the NETCONV command. It is in the form *ipv4address:port* for an IPv4 address or *[ipv6address]:port* for an IPv6 address.

System action

The server workstation times out on its outstanding request to the CNMTAMEL task. Normal operations resume at the workstation after the timeout processing is complete. Depending on the conditions of NetView storage, normal operations might be resumed at the host focal point.

System programmer response

See the *IBM Z NetView Troubleshooting Guide* for possible causes of the storage shortage.

DUI625E	CNMTAMEL COULD NOT SEND A DATA PACKET TO THE DATA SERVER AT IP <i>ipid:port</i> BECAUSE OF A STORAGE SHORTAGE.
----------------	---

Explanation

The CNMTAMEL task attempted to send data to a particular data server, but ran out of storage.

Message Variables

ipid:port

The IP name or address and, if specified, the port associated with the value of the IP keyword on the NETCONV command. It is in the form *ipv4address:port* for an IPv4 address or *[ipv6address]:port* for an IPv6 address.

System action

The CNMTAMEL task continues processing, but the data server has missed some data. Message DUI2028 might appear at the specified data server, but the host and workstation will resynchronize automatically, so the loss of data is only a temporary problem.

Operator response

Notify the system programmer to correct storage problems. To force the data server and the CNMTAMEL task to resynchronize, you can recycle the IP connection between the host and workstation by using the NETCONV command.

System programmer response

If the problem persists, contact IBM Software Support.

DUI627E	CNMTAMEL FAILED TO SEND DATA TO THE DATA SERVER AT IP <i>ipid:port</i> DUE TO AN MQS FAILURE.
----------------	--

Explanation

The CNMTAMEL task attempted to send data to the specified data server, but encountered a message queuing service (MQS) failure.

Message Variables

ipid:port

The IP name or address and, if specified, the port associated with the value of the IP keyword on the NETCONV command. It is in the form *ipv4address:port* for an IPv4 address or *[ipv6address]:port* for an IPv6 address.

System action

The CNMTAMEL task continues processing, but the data server has missed some data. Message DUI2028 might appear at the data server, but the host and workstation will resynchronize automatically.

Operator response

The MQS failure is probably because of storage problems. If the problem persists, notify the system programmer to investigate storage shortages, and issue the NETCONV ACTION=STOP command for the specified IP host name and address. When the problems have been cleared, reissue the NETCONV ACTION=START command to reconnect the workstation with the host.

System programmer response

If the problem persists, contact IBM Software Support.

DUI3900E	DISPLAYSTATUS OF ONE OR MORE AGGREGATES IS INCORRECT, RECALCULATE DISPLAYSTATUS FOR ALL AGGREGATES
-----------------	---

Explanation

A processing error has prevented the DisplayStatus field value of one or more aggregate objects in the Resource Object Data Manager (RODM) data cache from being recalculated as required.

System action

Graphic Monitor Facility host subsystem (GMFHS) processing continues. One or more RODM log entries are written to describe the cause of the error and to indicate on which aggregate object processing failed.

Operator response

Notify the system programmer.

System programmer response

Print the RODM log entries (types 1, 2, 3, and 4) to determine what caused the calculation of the DisplayStatus value to fail. Correct the condition causing the error and use the RODM load utility to start the DUIFFRAS method. This method recalculates the DisplayStatus of all aggregate objects.

DUI3901I FLUSHING GMFHS IN STORAGE TRACE TABLE

Explanation

You requested that the contents of the Graphic Monitor Facility host subsystem (GMFHS) in-storage trace table be written to the data set specified by the CNMT ddname in the GMFHS job control language (JCL).

System action

The contents of the in-storage trace table are written to the specified data set, and the in-storage trace table is reinitialized.

DUI3902I TRACE – DISPLAY OR CHANGE TRACE PARAMETERS

Explanation

This is one of the messages generated in response to your HELP command. This message describes the Graphic Monitor Facility host subsystem (GMFHS) TRACE command

System action

The system displays a summary of the possible Graphic Monitor Facility host subsystem (GMFHS) commands that you can enter.

Operator response

Enter the appropriate command. If you need help, see the NetView online help for more information about the listed commands.

DUI3903I FLUSH OF GMFHS IN STORAGE TRACE TABLE COMPLETE

Explanation

The requested flush of the Graphic Monitor Facility host subsystem (GMFHS) trace table is complete.

System action

The contents of the in-storage trace table are written to the data set specified in the CNMT ddname, and the in-storage trace table is reinitialized.

DUI3904I GMFHS DOMAIN MISSING FROM INITIALIZATION PARAMETERS

Explanation

The DOMAIN statement is missing from the GMFHS initialization member, the GMFHS start procedure, or the GMFHS start command.

System action

GMFHS ends.

Operator response

Notify the system programmer.

System programmer response

Specify the GMFHS DOMAIN parameter and restart GMFHS. See the *IBM Z NetView Administration Reference* for more information.

DUI3905I GMFHS NETWORK CONFIGURATION *insert1* FOR DOMAIN = *insert2*

Explanation

GMFHS network configuration initialization has completed and has ended in one of the following states:

- COMPLETED SUCCESSFULLY
- COMPLETED WITH ERRORS
- FAILED

Operator response

Notify the system programmer.

System programmer response

If the GMFHS network configuration initialization has completed with errors, see the output log entries between and including the configuration initialization start and end times in the message; the default output log is the internal trace log (CNMT DD). In RODM, correct the objects that contain errors. See the *IBM Z NetView Data Model Reference* for more information.

You might need to issue a GMFHS CONFIG command to make the changes effective.

If the initialization has failed, see the output log entries between and including the configuration initialization start and end times in the message and contact IBM Software Support; the default output log is the internal trace log (CNMT DD).

**DUI3912E AN ERROR WAS ENCOUNTERED
INITIALIZING GMFHS METHODS**

Explanation

The initial RODM method invoked by GMFHS did not complete successfully.

System action

GMFHS ends because of a critical error. One or more RODM log entries are issued to report the failure and to provide diagnostic information. If the RODM reason code is 45092, another GMFHS was already connected to RODM. If the reason code is 45093, the level of the GMFHS methods is incompatible with the version of the GMFHS application that attempted the connection to RODM.

Operator response

Notify the system programmer.

System programmer response

Print the RODM log entries associated with the failure. The return and reason codes in the messages along with the information in the log entries can help to determine the action to be taken to correct the problem. See the *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide* for more information.

**DUI3913E GMFHS TASK *task* HAS LOGGED
AN IMPORTANT MESSAGE AT *time*
FOR DOMAIN = *domainid***

Explanation

A message describing an application error has been written to the Graphic Monitor Facility host subsystem (GMFHS) audit log. This message can represent multiple log entries because it is issued a maximum of every 30 seconds.

Message Variables***task***

The name of the GMFHS task that logged the message.

time

The time that the first or only message was logged within the 30-second interval. This is in the format *hhmmss*, where *hh* is the hour (00–23), *mm* is the minutes (00–59), and *ss* is the seconds (00–59).

domainid

The domain ID to which this GMFHS is connected or attempting to connect.

System action

Processing continues.

Operator response

Notify the system programmer.

System programmer response

Use the GMFHS Dbserver audit log print program to list the error synopsis entries from the log at the approximate time of the error. Use the time provided in the message to limit the period for which the entries are printed. Investigate and correct the error described in the printout.

**DUI3932I GMFHS IN STORAGE TRACE
TABLE NOT ALLOCATED**

Explanation

A request to flush the in-storage trace table was issued, but no table has been allocated.

System action

Processing continues.

System programmer response

The in-storage trace table must always be available; this is an internal error. Dump the GMFHS address space and contact IBM Software Support for more information. You can use either GTF or GMFHS job output files for more job output as a problem workaround.

**DUI3933I THE CONFIG VIEW COMMAND IS
NO LONGER REQUIRED. THE
RODM LOADER WILL BE RUN IF
LOAD=YES IS SPECIFIED**

Explanation

The CONFIG VIEW command is no longer required when changes are made to Resource Object Data Manager (RODM). The RODM loader or user-written methods or applications can be used to add, delete, or change views directly. If LOAD=YES is specified, the RODM loader is started as specified.

System action

The RODM loader is started if LOAD=YES is specified.

Operator response

Run the RODM loader directly instead of using the CONFIG command. If the CONFIG command was invoked by a command list, contact the system programmer.

System programmer response

If the CONFIG VIEW command is in a command list, remove it or replace it with a command to invoke the RODM loader directly.

DUI3934I	THE MSG OPTION OF THE CONFIG COMMAND IS NO LONGER SUPPORTED AND IS IGNORED
-----------------	---

Explanation

The MSG option is no longer supported on the CONFIG DOMAIN or the CONFIG VIEW command. This option has been ignored.

System action

The MSG option is ignored.

Operator response

Do not specify the MSG option on the CONFIG command. Users monitoring views will be notified, automatically, if any of the views they are monitoring change. If the CONFIG command was invoked by a command list, contact the system programmer.

System programmer response

If the CONFIG DOMAIN or the CONFIG VIEW command was in a command list, remove the usage of the MSG option.

DUI3935E	THE RODMPASS PARAMETER IS NO LONGER SUPPORTED. THE PARAMETER IS IGNORED
-----------------	--

Explanation

The RODMPASS parameter specified in DUIGINIT file is no longer needed.

System action

Processing continues.

System programmer response

Modify DUIGINIT to remove the RODMPASS parameter for future invocations of GMFHS.

DUI3936E	GMFHS IS NOT AUTHORIZED TO CONNECT TO RODM.
-----------------	--

Explanation

The security system did not allow GMFHS to obtain a connection with RODM.

System action

GMFHS ends because of a critical error.

System programmer response

Verify that the RODMID parameter in the DUIGINIT file has the correct value. Also verify that the security system is set up to authorize the RODM ID value to connect to RODM.

DUI3937E	GMFHS HAS DETECTED THAT ITS RODM USERID HAS BEEN DISCONNECTED FROM RODM BY ANOTHER RODM USER
-----------------	---

Explanation

Another user of the Resource Object Data Manager (RODM) gained access to RODM using the same RODM user ID and password or password phrase as the Graphic Monitor Facility host subsystem (GMFHS) and has now disconnected from RODM. As a result, GMFHS has lost its connection to RODM.

System action

GMFHS ends because of a critical error.

Operator response

Notify the system programmer.

System programmer response

Determine what other user of RODM is using the same user ID and password or password phrase as GMFHS. Either change the GMFHS user ID and password or password phrase or change the other RODM user's user ID and password or password phrase. Then, restart GMFHS. Ensure that all RODM users have different RODM user IDs and passwords or password phrases.

DUI3965I	GMFHS COMPLETED LINK OF DOMAIN: <i>domainid</i> TO NMG: <i>nmgid</i>
-----------------	---

Explanation

GMFHS processing of a dynamic link between a network management gateway (NMG) and domain has completed.

Message Variables

domainid

Specifies the domain to which the NMG is linked.

nmgid

Specifies the NMG to which the domain is linked.

System action

GMFHS begins normal processing of the domain and NMG.

**DUI3981I GMFHS RESOURCE STATUS WARM
 START IS IN EFFECT**

Explanation

You started GMFHS with keyword RESWS=YES. This will force GMFHS to bypass setting initial status for domains in RODM if the information in RODM for that domain indicates the status in RODM is accurate. Without this keyword GMFHS will solicit the status of every resource again.

System action

GMFHS processing continues.

**DUI3982I GMFHS IS STARTING
 SOLICITATION FOR NMG *nmgid*
 DOMAIN *domainid***

Explanation

The Graphic Monitor Facility host subsystem (GMFHS) starts status solicitation for resources in domain *domainid* for the network management gateway (NMG) *nmgid*.

Message Variables

nmgid

Specifies the name of the NMG associated with this domain.

domainid

Specifies the name of the domain. It is the MyName field value of a System Network Architecture (SNA) domain object, or the EMDomain value of a non-SNA domain object.

System action

GMFHS processing continues.

**DUI3985I GTF IS SPECIFIED FOR OUTPUT,
 BUT GTF IS NOT ACTIVE**

Explanation

The user specified the GTF value for PRINT on the TRACE command or for PRINTPDU38 in DUIGINIT, but GTF is not active.

System action

Output will not be stored in a GTF trace data set. Output data will continue to be stored in the in-storage trace facility or in GMFHS job data sets, if requested.

Operator response

Start GTF or set GTF tracing off.

**DUI3986I RECORDING TO GTF FAILED WITH
 RETURN CODE *retcode***

Explanation

The user was writing output to GTF, but GTF has stopped.

Message Variables

retcode

Specifies the return code from the MVS GTRACE MACRO.

System action

Trace data after the stop is not recorded to GTF. Output data will continue to be stored in the in-storage trace facility or in GMFHS job data sets, if requested.

Operator response

Restart GTF or set GTF tracing off.

System programmer response

If the return code is not 4 (GTF not active) or 24 (GTF buffers are full), consult the MVS library for the GTRACE assembler macro return code responses. If the problem persists, contact IBM Software Support.

**DUI3987I RECORDING TO GTF HAS
 RESUMED**

Explanation

The user received message DUI3986I and has restarted GTF.

System action

Job output from GMFHS to the GTF trace data set resumes.

**DUI3990E LOAD FAILED FOR MODULE
 *modname***

Explanation

GMFHS was unable to load the identified module.

Message Variables

modname

The name of the module GMFHS was trying to load.

System action

Dependent upon which module GMFHS was trying to load.

Operator response

Dependent upon the action GMFHS takes following the load failure. Notify the system programmer.

System programmer response

Ensure that required modules are available to GMFHS.

DUI3991I	ARM REGISTRATION FAILED WITH RETURN CODE <i>retcode</i>, REASON CODE <i>rescode</i>
-----------------	--

Explanation

GMFHS attempted to register with automatic restart manager (ARM) and was unsuccessful.

Message Variables

retcode

Specifies the IXCARM macro return code.

rescode

Specifies the IXCARM macro reason code.

System action

GMFHS processing continues.

System programmer response

If no ARM policy was active and restart capability is desired, activate an ARM policy and restart GMFHS. Otherwise, contact IBM Software Support.

DUI3992E	ARM READY FAILED WITH RETURN CODE <i>retcode</i>, REASON CODE <i>rescode</i>
-----------------	---

Explanation

GMFHS was unsuccessful in notifying automatic restart manager (ARM) that it was ready.

Message Variables

retcode

Specifies the IXCARM macro return code.

rescode

Specifies the IXCARM macro reason code.

System action

GMFHS processing continues.

System programmer response

Contact IBM Software Support.

DUI3993E	ARM DEREGISTRATION FAILED WITH RETURN CODE <i>retcode</i>, REASON CODE <i>rescode</i>
-----------------	--

Explanation

During termination processing, GMFHS attempted to deregister from automatic restart manager (ARM) and was unsuccessful.

Message Variables

retcode

Specifies the IXCARM macro return code.

rescode

Specifies the IXCARM macro reason code.

System action

GMFHS termination continues.

System programmer response

Contact IBM Software Support.

DUI3994E	UNRECOGNIZED JCL EXEC STATEMENT PARAMETER
-----------------	--

Explanation

GMFHS cannot recognize a parameter found in the JCL EXEC parameter string.

System action

GMFHS ends.

System programmer response

Correct the JCL EXEC parameter string and restart GMFHS.

DUI3995E	JCL EXEC STATEMENT PARAMETER <i>parmname</i> IS NOT VALID OR IS DUPLICATED
-----------------	---

Explanation

The value of a GMFHS JCL EXEC statement parameter was not valid or the JCL EXEC statement keyword was duplicated.

Message Variables

parmname

Specifies the incorrect parameter.

System action

GMFHS ends.

System programmer response

Correct the error and restart GMFHS.

DUI3996I **GMFHS COMMUNICATION
STARTED WITH WORKSTATION
workstation FOR DOMAIN =
domainid**

Explanation

A session between GMFHS and the designated workstation has been established.

Message Variables

workstation

Either the LU name or IP address of the workstation. If this is an LU name, the name begins with LU. If this is in an IP address, it is in the form IPname:port (IPaddress:port).

domainid

Specifies the domain ID to which this GMFHS is connected or attempting to connect.

DUI3997I **GMFHS COMMUNICATION
STOPPED WITH WORKSTATION
workstation FOR DOMAIN =
domainid**

Explanation

A session between GMFHS and the designated workstation has ended.

Message Variables

workstation

Either the LU name or IP address of the workstation. If this is an LU name, the name will begin with LU. If this is in an IP address, it will be in the form IPname:port (IPaddress:port).

domainid

Specifies the domain ID to which this GMFHS is connected or attempting to connect.

DUI3999I **GMFHS IS ALREADY ACTIVE FOR
DOMAIN = domainid**

Explanation

You attempted to start the Graphic Monitor Facility host subsystem while it was already active.

Message Variables

domainid

Specifies the domain ID to which this GMFHS is attempting to connect.

System action

The most recently started Graphic Monitor Facility host subsystem ends.

DUI4000E **NETVIEW SUBSYSTEM NOT
AVAILABLE FOR PPI REQUEST**

Explanation

An attempt to use the program-to-program interface (PPI) of the NetView subsystem failed because the NetView subsystem is inactive.

System action

The Graphic Monitor Facility host subsystem periodically attempts to use the program-to-program interface.

Operator response

Notify the system programmer.

System programmer response

Determine why the NetView subsystem is inactive. Correct the error and activate the NetView subsystem.

DUI4001E **ALERT TRANSLATION TABLE *table*
NOT FOUND**

Explanation

The Graphic Monitor Facility host subsystem (GMFHS) expected to find two alert translation tables in the STEPLIB data set. These tables are load modules named DUIFEIBM and DUIFEUSR. The table was not found.

Message Variables

table

Specifies the name of the load module that was not found.

System action

If this message appears twice (once for each table), GMFHS is unable to interpret the status contained in alerts and resolutions and is unable to monitor the status of non-SNA resources contained in NetView Graphic Monitor Facility views. If the message appears only once, GMFHS uses the status-translation information contained in the table that it found to

provide status monitoring for non-SNA resources contained in NetView Graphic Monitor Facility views.

Operator response

Notify the system programmer.

System programmer response

Verify that both DUIFEIBM and DUIFEUSR are in the STEPLIB data set concatenation.

DUI4002E **ALERT PROCESSOR *processor* NOT FOUND, ALERTS GENERATED: *number***

Explanation

An alert processor load module used by the Graphic Monitor Facility host subsystem (GMFHS) was not found. GMFHS uses this module to determine the name of a Resource Object Data Manager (RODM) object to which to apply the status information contained in an alert.

Message Variables

processor

Specifies the name of the alert processor load module that is to supply the name of a RODM object to GMFHS.

number

Specifies the number of alerts that have not been processed between the last and current appearances of this message. The minimum interval for this message is 30 seconds.

System action

GMFHS cannot identify any objects in RODM that represent non-SNA resources. This occurs because an element manager, whose non-SNA domain object in RODM is defined by the processor as its AlertProc attribute, reports on those resources. As a result, GMFHS cannot report status information for any of these resources.

Operator response

Notify the system programmer.

System programmer response

Review the RODM object definitions supplied by your installation for objects in the non-SNA domain class. Review the STEPLIB data set concatenation in the GMFHS job control language (JCL). Ensure that all user-supplied alert processor load modules that are named in the non-SNA domain definitions are also present in the STEPLIB data set concatenation. See

the *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide* for more information.

DUI4003I **GMFHS NETWORK CONFIGURATION INITIALIZED SUCCESSFULLY**

Explanation

The network configuration definition used by the Graphic Monitor Facility host subsystem (GMFHS) has initialized successfully. No errors occurred during this initialization.

System action

GMFHS begins to establish communication sessions with server workstations or client workstations and to query the current display status of non-SNA real resources.

DUI4004E **GMFHS CONFIGURATION INITIALIZATION COMPLETED BUT ERRORS WERE LOGGED - CONFIGURATION START: *starttime* END: *endtime***

Explanation

The configuration definition used by the Graphic Monitor Facility host subsystem (GMFHS) has been initialized successfully, but errors were found in objects in the Resource Object Data Manager (RODM).

Message Variables

starttime

The time that the configuration initialization started, in the format hhmmss, where hh is the hour (00–23), mm is the minutes (00–59), and ss is the seconds (00–59).

endtime

The time that the configuration initialization ended, in the format hhmmss, where hh is the hour (00–23), mm is the minutes (00–59), and ss is the seconds (00–59).

System action

Processing continues.

Operator response

Notify the system programmer.

System programmer response

See the output log entries between and including the configuration initialization start and end times in the message; the default output log is the internal trace log (CNMT DD). In RODM, correct the objects that

contain errors. See message DUI3905I and the *IBM Z NetView Data Model Reference* for more information. You might need to issue a GMFHS CONFIG command to make the changes effective.

DUI4005A **GMFHS CONFIGURATION
INITIALIZATION FAILED, RETURN
CODE = *retcode* - CONFIGURATION
START: *starttime* END: *endtime***

Explanation

The initialization of the configuration definition used by the Graphic Monitor Facility host subsystem (GMFHS) has failed for the reason identified in the message.

Message Variables

retcode

Specifies the return code indicating the reason that the initialization of the configuration failed. The return code is one of the following:

- 1. There was a Resource Object Data Manager (RODM) internal error.
- 2. GMFHS lost its connection with RODM.
- 3. There was a class or field definition error with RODM.
- 4. There was a GMFHS internal error.

starttime

Specifies the time that the configuration initialization started, provided in the format hhmmss, where hh is the hour (00–23), mm is the minutes (00–59), and ss is the seconds (00–59).

endtime

Specifies the time that the configuration initialization failed, provided in the format hhmmss, where hh is the hour (00–23), mm is the minutes (00–59), and ss is the seconds (00–59).

System action

If the reason the initialization of the configuration failed is because of a RODM internal error (return code 1), a class or field definition error (return code 3), or a GMFHS internal error (return code 4), the GMFHS job ends. If the reason is that GMFHS lost its connection with RODM (return code 2), it is possible that the RODM to which GMFHS was connected ended. GMFHS waits for its RODM connection to be reestablished and restarts the configuration initialization.

Operator response

If RODM ended, try to restart the initialization. If it does not restart, notify the system programmer.

System programmer response

See message DUI3905I. See the output log entries between and including the configuration initialization start and end times in the message and contact IBM Software Support; the default output log is the internal trace log (CNMT DD).

DUI4006E **THE COMMAND *command1*
REQUEST IN PROGRESS, NEW
command2 REQUEST IGNORED**

Explanation

A command request was in process when you entered another command. This message is displayed in response to a Graphic Monitor Facility host subsystem (GMFHS) CONFIG NETWORK command for one of the following reasons:

- A previously issued CONFIG NETWORK command is still being processed.
- The RODM session is not available.

Message Variables

command1

Specifies the name of the command in process.

command2

Specifies the name of the command you entered that was ignored.

System action

The command you entered is ignored.

Operator response

You can reenter *command2* after the first command is completed. The system issues a message to indicate when processing of the first command ends. To determine whether the RODM session is available, enter a CONFIG VIEW or a CONFIG DOMAIN command. Message DUI4092 is issued in response to these commands if the RODM session is not available.

DUI4007A **GMFHS TERMINATING DUE TO
CRITICAL ERROR FOR DOMAIN =
*domainid***

Explanation

The Graphic Monitor Facility host subsystem (GMFHS) is ending because a critical error has been encountered. The error that caused GMFHS to end is displayed in a preceding message.

Message Variables

domainid

Specifies the domain ID to which this GMFHS is connected or attempting to connect.

System action

GMFHS ends.

Operator response

Notify the system programmer.

System programmer response

Restart GMFHS after correcting the error indicated in the preceding message.

DUI4008E	INITIALIZATION PARAMETER parameter IS NOT VALID, OR IS DUPLICATED
-----------------	--

Explanation

The Graphic Monitor Facility host subsystem encountered a parameter in the initialization file that it did not recognize or found to be duplicated.

Message Variables

parameter

Specifies the parameter encountered in the initialization file that was not recognized or was duplicated.

System action

The parameter is ignored.

Operator response

Notify the system programmer.

System programmer response

Correct or remove the displayed parameter in the DUISINIT member. See the *IBM Z NetView Administration Reference* for more information.

DUI4009E	A TYPE OF NETWORK, DOMAIN OR VIEW MUST BE SPECIFIED WITH THE CONFIG COMMAND
-----------------	--

Explanation

An incorrect parameter for the CONFIG command was issued or no parameter was specified. You must specify a CONFIG type of either NETWORK, DOMAIN, or VIEW.

System action

The CONFIG command is rejected.

Operator response

Correct and reenter the CONFIG command. For more information about the CONFIG command, see the NetView online help.

DUI4010E	objecttype objectid NOT FOUND, command COMMAND REJECTED
-----------------	--

Explanation

You entered a command containing a domain or network management gateway (NMG) identifier that is not defined to the Graphic Monitor Facility host subsystem (GMFHS).

Message Variables

objecttype

Specifies the type of the object that was not found, either NMG or DOMAIN.

objectid

Specifies the identifier of the undefined object.

command

Specifies the name of the command that was rejected.

System action

The command is rejected.

Operator response

Determine whether the identifier has been defined or was entered incorrectly. If the name was entered incorrectly, reenter the command with the valid names. If you entered the domain name or NMG identifier correctly, notify the system programmer.

System programmer response

Ensure that each domain or NMG is defined in the Resource Object Data Manager and that its EMDomain (for non-SNA domains) or MyName (for SNA domains and NMGs) attribute value is the name entered in the command. If the attribute has been defined in the database since the GMFHS host job was started, enter a CONFIG NETWORK command to make the domain or NMG known to GMFHS.

DUI4011E	GMFHS ATTEMPTED TO SEND A MESSAGE TO SCOPE CHECKER OPTIONAL TASK BUT FAILED
-----------------	--

Explanation

The Graphic Monitor Facility host subsystem (GMFHS) attempted to send a message to the scope checker optional task (DUIFSSCO) using the NetView program-to-program interface, but cannot because DUIFSSCO

was not an active program-to-program interface receiver.

System action

GMFHS is unable to complete the process that required the services of DUIFSSCO. Other GMFHS functions requiring DUIFSSCO cannot complete normally as long as DUIFSSCO is not an active program-to-program interface receiver. For example, the alert logging and alert retrieval functions require DUIFSSCO, so GMFHS cannot log or retrieve alerts when it cannot communicate with DUIFSSCO.

Operator response

Notify the system programmer.

System programmer response

Verify that DUIFSSCO is inactive, and then start it. If DUIFSSCO is active and the problem persists, review the network log to determine the cause of the problem.

DUI4012E NO *objecttype*S ARE DEFINED

Explanation

You issued a SHOW NMG command, but no network management gateways (NMGs) are defined in the Resource Object Data Manager (RODM). Or you issued a SHOW DOMAIN command and no Systems Network Architecture (SNA) or non-SNA domains are defined in RODM.

Message Variables

objecttype

Either NMG or DOMAIN, depending on what was specified in the associated GMFHS SHOW command.

System action

Processing of the SHOW command ends.

Operator response

Ensure that the network definition has been loaded in RODM. If not, it must be loaded before any NMGs or domains are recognized by GMFHS. If the network definition has been loaded in RODM, notify the system programmer.

System programmer response

Verify that the NMG, SNA domain, and non-SNA domain definitions are included in the network definition loaded in RODM.

**DUI4013I TASK = *task* STATUS = WAIT
QUEUE DEPTH = *qcount***

Explanation

This message is part of a multiline response generated by the TASK command you issued using the MVS MODIFY command or the GMFHS command list. This message is for each Graphic Monitor Facility host subsystem (GMFHS) subtask with a status of WAIT, meaning that the subtask will wait until you enter a command or the timer expires.

Message Variables

task

Identifies a GMFHS subtask. One report line is issued for each task. The subtask can be one of the following:

DBSERVER

Dbserver subtask.

EVENTMGR

Event manager subtask.

IPC

Interprocess communications subtask.

NETCMD

Network commands subtask.

NETCON

Network configuration subtask.

OPERIF

Operator interface subtask.

RTMGR

Resource traits manager subtask.

IRMGR

IPC-RODM manager subtask.

VIEWMGR

View manager subtask.

VSTATMGR

View status manager subtask.

qcount

Specifies the number of messages waiting in the queue to be delivered to the subtask.

**DUI4014I CONFIG COMMAND ERROR: THE
INDD PARAMETER WAS CODED
WITH LOAD=NO**

Explanation

You entered a CONFIG command using LOAD=NO, which is not valid with the INDD parameter.

System action

The CONFIG command is rejected.

Operator response

If LOAD=NO is correct, delete the INDD parameter and retry the command. If LOAD=YES was intended, code this with the INDD parameter and retry the command. See the NetView online help for more information about the correct parameter values for the CONFIG command.

DUI4016I	CONFIG COMMAND PROCESSING INITIATED
-----------------	--

Explanation

The CONFIG command has been successfully initiated. Any informational or error messages that occur while the CONFIG command is completing are issued to the system console.

System action

Processing continues.

DUI4017E	<i>command</i> COMMAND PROCESSING COMPLETED WITH ERRORS - START: <i>starttime</i> END: <i>endtime</i>
-----------------	--

Explanation

A CONFIG NETWORK, CONFIG DOMAIN, or CONFIG VIEW command has completed. Errors were found when applying changes to the Resource Object Data Manager (RODM) database (if the INDD parameter was included in the command) or in the resulting configuration definition in the RODM database.

Message Variables

command

Specifies the name of the command for which processing has completed.

starttime

Specifies the time that the configuration command processing started, in the format hhmmss, where hh is the hour (00-23), mm is the minutes (00-59), and ss is the seconds (00-59).

endtime

Specifies the time that the configuration command processing ended, in the format hhmmss, where hh is the hour (00-23), mm is the minutes (00-59), and ss is the seconds (00-59).

System action

Processing continues.

Operator response

Notify the system programmer.

System programmer response

See the output log entries between and including the start and end times in the message ; the default output log is the internal trace log (CNMT DD). IF LOAD=YES was specified in the CONFIG command, check the messages issued to the EKGPRINT data set by the RODM loader.

DUI4018A	<i>command</i> COMMAND PROCESSING FAILED -REASON = <i>reason</i> - START: <i>starttime</i> END: <i>endtime</i>
-----------------	---

Explanation

A command has failed for the reason identified in the message.

Message Variables

command

Specifies the name of the failing command.

reason

Specifies the reason that the CONFIG command processing failed is one of the following:

PROGLOAD

An error occurred while attempting to load the Resource Object Data Manager (RODM) load utility from the program library (STEPLIB) used by the Graphic Monitor Facility host subsystem (GMFHS).

INTERNAL

An internal processing error occurred during CONFIG command processing.

LOAD-RC

Specifies the RODM load utility return code was greater than 4.

RODMERR

Unrecoverable errors were encountered in requesting service from RODM.

starttime

Specifies the time that the configuration initialization started, in the format hhmmss, where hh is the hour (00-23), mm is the minutes (00-59), and ss is the seconds (00-59).

endtime

Specifies the time that the configuration initialization ended, in the format hhmmss, where hh is the (00-23), mm is the minutes (00-59), and ss is the seconds (00-59).

System action

Diagnostic information is written to the GMFHS output log, and processing of the CONFIG command ends.

Operator response

Notify the system programmer.

System programmer response

If the reason in the message is PROGLOAD, the RODM load utility program, EKGLOTLM, cannot be loaded. Verify that this load module is in a library that is available to the GMFHS job and that there is sufficient virtual storage for GMFHS. If the reason in the message is LOAD-RC, check the output in the EKGPRINT data set for messages issued by the RODM load utility describing the problem. If the reason is INTERNAL or RODMERR, see the system error synopsis entries from the GMFHS output log; the default output log is the internal trace log (CNMT DD). See the output log when you contact IBM Software Support.

DUI4019I NETWORK CONFIGURATION DEFINITION WILL BE REINITIALIZED

Explanation

A Resource Object Data Manager (RODM) disconnection or the CONFIG NETWORK command has made it necessary for the system to reinitialize the network configuration definition used by the Graphic Monitor Facility host subsystem (GMFHS).

System action

All sessions between GMFHS and graphic data servers are ended. GMFHS services are unavailable to workstation users. The displayed status of all non-SNA resources in open views become Unknown. GMFHS stops and restarts all of its subtasks. When the RODM connection is reestablished, the network configuration definition is reinitialized. Then sessions with graphic data servers are reestablished and GMFHS services become available.

DUI4020A METHOD *method* FAILED AT *endtime*, RETURN CODE = *retcode* REASON CODE = *reason* TRANSACTION = *transactionid*

Explanation

A Resource Object Data Manager (RODM) method has failed. Depending upon the reason for the failure, the DisplayStatus or other field of one or more objects in the RODM data cache might now have an incorrect or inconsistent value.

Message Variables

method

Specifies the name of the method that has failed.

endtime

Specifies the time of the failure in the format hhmmss, where hh is the hour (00–23), mm is the minutes (00–59), and ss is the seconds (00–59).

retcode

Specifies the return code from the transaction information block for the method.

reason

Specifies the reason code from the transaction information block for the method.

transactionid

Specifies the transaction identifier for the particular invocation of the failed method.

System action

One or more RODM log entries are issued to report the failure and to provide diagnostic information. If the reason code is 45081, the method completed processing, but the log entries written identify an object and field that contains an incorrect value for which a default value was used. For all other reason codes, the method ends when the error is detected.

Operator response

Notify the system programmer.

System programmer response

Print the RODM log entries associated with the failure. The return and reason codes in the message along with the information in the log entries can help you determine the action to be taken to correct the problem. See the *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide* for an explanation of the return and reason codes in the message and log entries.

DUI4021I *value* IS REPEATED IN THE *parameter* PARAMETER OF THE *command* COMMAND

Explanation

A name (for example, the name of a domain) is duplicated in the value list provided for the parameter.

Message Variables

value

Specifies the name that is repeated in the parameter value list.

parameter

Specifies the name of the keyword parameter for which the list was specified.

command
Specifies the name of the command containing the error.

Operator response

Enter the command again without the repeated value.

DUI4022A	GMFHS INITIALIZATION CHECKPOINT PARAMETER keyword IS INVALID OR CONFLICTS
-----------------	--

Explanation

You supplied a keyword parameter on the CHECKPOINT statement of the Graphic Monitor Facility host subsystem (GMFHS) initialization member DUGINIT. The keyword supplied is either not valid or in conflict with other keywords supplied for this statement.

Message Variables

keyword
Specifies the keyword parameter you supplied on the CHECKPOINT statement in DUGINIT. Valid keywords for CHECKPOINT are:

STARTUP
A checkpoint is taken at GMFHS startup time.

TERM
A checkpoint is taken when GMFHS ends.

CONFIG
A checkpoint is taken after GMFHS processes a CONFIG command.

NONE
No checkpoints are taken. This keyword is mutually exclusive with any others.

ALL
All checkpoints are taken at the following occurrences:

- At GMFHS startup time
- When GMFHS ends
- After GMFHS processes a CONFIG command.

This keyword is mutually exclusive with any others.

System action

GMFHS is initialized with a checkpoint default of NONE.

Operator response

Notify the system programmer.

System programmer response

Correct the keyword parameter on the CHECKPOINT statement in member DUGINIT. See the *IBM Z NetView Administration Reference* for more information.

DUI4023E	STATUS SOLICITATION FOR DOMAIN <i>domainid</i> FAILED. SOLICITATION START: <i>starttime</i> END: <i>endtime</i>
-----------------	--

Explanation

An attempt to obtain the current display status of the real resources for the indicated domain was not successful.

Message Variables

domainid
Specifies the identifier of the non-SNA domain for which the status was being queried.

starttime
Specifies the start time of the status solicitation in the format hhmmss, where hh is the hour (00–23), mm is the minutes (00–59), and ss is the seconds (00–59).

endtime
Specifies the end time of the status solicitation in the format hhmmss, where hh is the hour (00–23), mm is the minutes (00–59), and ss is the seconds (00–59).

System action

Status solicitation for the domain ends. The status of the domain is set to SOL-FAIL.

Operator response

If this message is accompanied by other messages indicating that a network management communications gateway has failed (program-to-program interface or COS transport errors) and can be restored, restore the gateway. Otherwise, notify the system programmer.

System programmer response

Check the system operator's console log for messages that indicate why the status solicitation failed. The Graphic Monitor Facility host subsystem (GMFHS) output log also contains one or more error synopsis entries that explain the reason for the failure.

DUI4024A	GMFHS TASK <i>taskid</i> LOGGED AN INTERNAL ERROR AT <i>errortime</i> FOR DOMAIN = <i>domainid</i>
-----------------	---

Explanation

A logic error occurred in the Graphic Monitor Facility host subsystem (GMFHS). An error synopsis that provides more information is written to the GMFHS output log.

Message Variables

taskid

Specifies the identifier of the GMFHS task that detected and logged the error.

errortime

Specifies the time when the error occurred, in the format hhmmss, where hh is the hour (00–23), mm is the minutes (00–59), and ss is the seconds (00–59).

domainid

Specifies the domain ID to which this GMFHS is connected.

System action

The specific process involved ends, and processing continues.

Operator response

Notify the system programmer.

System programmer response

Use the time provided in the message to determine which entries in the GMFHS output log might see the error. If you contact IBM Software Support for assistance, see the error synopsis messages available.

DUI4025A	RODM CHECKPOINT FAILED AT failtime RETURN CODE = <i>retcode</i> REASON CODE = <i>reason</i>
-----------------	--

Explanation

The Resource Object Data Manager (RODM) rejected a request to checkpoint the RODM database.

Message Variables

failtime

Specifies the time when the error occurred, in the format hhmmss, where hh is the hour (00–23), mm is the minutes (00–59), and ss is the seconds (00–59).

retcode

Specifies the return code from the RODM checkpoint request.

reason

Specifies the reason code from the RODM checkpoint request.

System action

Graphic Monitor Facility host subsystem (GMFHS) processing continues.

Operator response

Notify the system programmer.

System programmer response

Use the return and reason codes in the message to find the error and correct the problem. See the *IBM Z NetView Administration Reference* for more information.

DUI4026A	RODM CONNECTION LOST AT losstime
-----------------	---

Explanation

The Graphic Monitor Facility host subsystem (GMFHS) network configuration manager subtask is notified that the connection between GMFHS and Resource Object Data Manager (RODM) has ended.

Message Variables

losstime

Specifies the time when network configuration manager receives the notification that the RODM connection has ended. This is provided in the format hhmmss, where hh is the hour (00–23), mm is the minutes (00–59), and ss is the seconds (00–59).

System action

The network configuration manager asks the GMFHS main task to reinitialize GMFHS to prepare for when the connection to RODM is established again. While the host is reinitializing, all graphic data server sessions end. All non-SNA resources in open views at the GMFHS workstations are displayed as Unknown. GMFHS finishes initializing and starts all of its subtasks again. When the RODM connection is reestablished, GMFHS initializes the network configuration definition. When this is done, the graphic data server sessions are established again and the GMFHS services are available.

Operator response

If RODM ends in error, start RODM again.

DUI4027I	GMFHS MAIN TASK INITIALIZATION IS COMPLETE FOR DOMAIN = <i>domainid</i>
-----------------	--

Explanation

The initialization process for the Graphic Monitor Facility host subsystem (GMFHS) main task is complete.

Message Variables

domainid

Specifies the domain ID to which this GMFHS is attempting to connect.

System action

GMFHS processing continues.

**DUI4028E INITIALIZATION MEMBER
 DUIGINIT WAS NOT FOUND IN
 THE CNMPARM DATASET**

Explanation

DUIGINIT, which is part of the Graphic Monitor Facility host subsystem (GMFHS) main task initialization, cannot be found in the CNMPARM data set.

System action

GMFHS ends.

Operator response

Notify the system programmer.

System programmer response

Change the CNMPARM DD statement to address the data set that contains DUIGINIT, or recreate DUIGINIT and restart GMFHS. See the *IBM Z NetView Administration Reference* for more information.

**DUI4029E GMTOFFSET PARAMETER IS NOT
 FORMATTED CORRECTLY**

Explanation

The GMTOFFSET statement in DUIGINIT s is not formatted correctly. It must be in the form of *shhmm*, where *s* is a positive (+) or negative (N) sign, *hh* is the hour (00–23), and *mm* is the minutes (00–59).

System action

The Graphic Monitor Facility host subsystem (GMFHS) ends.

Operator response

Notify the system programmer.

System programmer response

Correct the format of the GMTOFFSET parameter in DUIGINIT and restart GMFHS. See the *IBM Z NetView Administration Reference* for more information.

**DUI4030E *parameter* MISSING FROM GMFHS
 INITIALIZATION PARAMETERS**

Explanation

The Resource Object Data Manager (RODM) application name statement (RODMNAME) is missing from the DSIPARM member containing GMFHS initialization values.

Message Variables

parameter

Specifies the missing parameter.

System action

GMFHS ends.

Operator response

Notify the system programmer.

System programmer response

Change the RODMNAME parameter in DUIGINIT and restart GMFHS. See the *IBM Z NetView Administration Reference* for more information.

**DUI4031I GMFHS IS TERMINATING OR IS IN
 THE PROCESS OF TERMINATING
 DUE TO OPERATOR REQUEST FOR
 DOMAIN = *domainid***

Explanation

The Graphic Monitor Facility host subsystem (GMFHS) is terminating because of an operator request.

Message Variables

domainid

Specifies the domain ID to which this GMFHS is connected or attempting to connect. If this message is issued as a result of a missing domain (message DUI3904E), this value is set to MISSING.

System action

GMFHS ends.

**DUI4033I RODM CONFIGURATION STATUS =
 PENDING**

Explanation

This message is displayed as part of the multiline response to your GMFHS STATUS command. PENDING is the status in the Resource Object Data Manager (RODM) database during configuration initialization.

DUI4034E THE COMMAND *command* IS NOT VALID. USE THE "HELP" COMMAND FOR A LIST OF THE VALID COMMANDS

Explanation

You entered a command that is not valid.

Message Variables

command
Specifies the command that you entered.

Operator response

Use the HELP GMFHS command to obtain a list of valid Graphic Monitor Facility host subsystem commands and enter the correct command.

DUI4035I NETWORK MANAGEMENT DOMAIN DISPLAY

Explanation

This is the first line of the display generated in response to the SHOW DOMAIN command.

**DUI4036I NAME = *domainid* TYPE = *domtype*
STATE = *domstate* CFGTM =
timestamp SESS = *sessionstat*
NMG = *nmgid***

Explanation

This is part of a multiline response generated by the SHOW DOMAIN command. There is one DUI4036I message for each domain delivered.

Message Variables

domainid
Specifies the name of the domain. It is the MyName field value of a Systems Network Architecture (SNA) domain object, or the EMDomain value of a non-SNA domain object, or an alias for EMDomain value that equal 'NODISP.'. Domain ID aliases are composed of seven numeric characters followed by a period (.). To correlate this alias to a unique object in the Non_SNA_Domain_Class in RODM, the MyName field of the object appears in succeeding message DUI3966I.

domtype
Specifies the type of domain, either SNA or non-SNA.

domstate
Specifies the state of the domain. The domain state indicates the last known state of the domain, as recognized by NETCON, through the completion of status solicitation.

If the network management gateway (NMG) for the domain goes down, these states will not be reset until the NMG comes back up.

The domain states are:

Value
Meaning

INITIAL
Specifies the initial state prior to configuration initialization.

PENDING
Reconfiguration was requested but has not started.

RECONFIGURING
Waiting for a response to a RECONFIGURE generic network control command.

RELEASING
Waiting for the release of the gateway communication session.

LOADING
Waiting for the RODM load utility to run.

SETTING
Setting (as part of the reconfiguration) the DisplayStatus of the resources within the domain to the InitialResourceStatus value for the domain.

CHECKPOINTING
Waiting for a checkpoint to be taken on the RODM data cache.

WAITING
Waiting for a gateway communication session to be established.

SOLICITING
Waiting for a response to a Display Status or Display Abnormal Status network control command.

RETRYING
Waiting to retry the sending of a Display Status or Display Abnormal Status network control command.

FAILED
Solicitation of the current DisplayStatus of the non-SNA domain resources has failed.

ACTIVE

Solicitation of the current DisplayStatus of the non-SNA domain resources has been completed.

COMPLETE

DisplayStatus solicitation does not apply to this domain, but initialization or reconfiguration has been completed.

INVALID

Specifies the domain's state is not valid. There is an internal processing error.

timestamp

Specifies the day and time of the initialization or last reconfiguration of this domain. The format of the time stamp is mm/dd/yy hhmm where mm is the month (01-12), dd is the day (01-31), yy is the year (01-99), hh is the hour (00-23), and mm is the minutes (00-59).

sessionstat

Specifies the value YES, NO, or N/A, which indicates whether a gateway communication session is established for this domain.

nmgid

Specifies the name of the NMG associated with this domain. This field is not applicable for SNA domains.

DUI4037I END**Explanation**

This is the last line of a multiline response generated by one of the following Graphic Monitor Facility host subsystem (GMFHS) commands:

- SHOW DOMAIN
- SHOW NMG
- STATUS
- TASK
- TRACE (without parameters)

**DUI4038I NETWORK MANAGEMENT
GATEWAY DISPLAY****Explanation**

This is part of a multiline response generated by the SHOW NMG command.

**DUI4039I NMG = nmgrname STATUS =
nmgstatus TRAN = transport
WINDOW = winsize OUT = cmdssout
SENT = cmdssent****Explanation**

This is part of a multiline response generated by the SHOW NMG command. There is one DUI4039I message for each Graphic Monitor Facility host subsystem (GMFHS) network management gateway (NMG) object defined in the Resource Object Data Manager (RODM) data cache.

Message Variables**nmgrname**

Specifies the name of the NMG.

nmgstatus

Specifies the AgentStatus value of the NMG. This value is one of the following:

SATISFACTORY

Satisfactory status.

UNSATISFACTORY

Unsatisfactory status

UNKNOWN

Unknown status

transport

Specifies the TransportProtocolName

value

This value is one of the following:

COS

Common operations services.

OST

Operator station task.

PPI

Program-to-program interface.

NONE

Protocol was not used.

winsize

Specifies the number of commands that the NMG can handle at once. It is the maximum number of commands to which the system has not yet responded that can be present in the NMG at once.

cmdssout

Specifies the number of network command controls sent to and recognized by the NMG. A response is expected but has not yet been received for these commands.

cmdssent

Specifies the number of commands sent through this NMG.

DUI4040I STATUS DISPLAY**Explanation**

This message is displayed as part of the multiline response to the STATUS command you issued using

the MVS MODIFY command or the GMFHS command list.

DUI4041I RODM CONFIGURATION STATUS = COMPLETE

Explanation

This message is displayed as part of the multiline response to your GMFHS STATUS command. COMPLETE is the status in the Resource Object Data Manager (RODM) database after network configuration initialization.

DUI4042I TYPE = *sesstype* STATUS = *sessionstat* SESSION = *session* PPIST = *ppistatus*

Explanation

This is part of a multiline response generated by the STATUS command you issued using the MVS MODIFY command or the GMFHS command list. This message is displayed for each active session of type SCOPT, CNMTAMEL, and PPI.

Message Variables

sesstype

Specifies the type of the session. The types are as follows:

SCOPT

A session with the Graphic Monitor Facility host subsystem (GMFHS) scope checker optional task (OPT).

CNMTAMEL

A CNMTAMEL task session.

PPI

A session with a program-to-program interface (PPI) network management gateway.

?????

Specifies the session type is not valid because of an internal error.

sessionstat

Specifies the session status. The values are as follows:

REGISTER

Specifies the CNMTAMEL session state—Register request has been sent.

ACTIVE

The session is active.

FAILED

The session has failed.

N/A

The session has not been established.

INVALID

The session status is not valid because of an internal error.

session

Identifies a session that GMFHS has with another entity. This is a NetView task name for the sessions with the NetView CNMTAMEL data services task (DST) and the GMFHS scope checker OPT within the NetView address space. If there is a program-to-program interface network management gateway receiver, the value is the name of the gateway receiver.

ppistatus

Specifies the program-to-program interface transport status for applicable sessions. The values are as follows:

INITIAL

Not activated (initial state)

QUERYING

Query receiver

SENDING

Send data buffer

OK

Message sent successfully

TEMPORARY

Temporary error

PERMANENT

Permanent error

INVALID

The value is not valid; an internal error occurred.

Operator response

If the system has detected an internal error, notify the system programmer.

System programmer response

Contact IBM Software Support.

DUI4043I TYPE = *sesstype* STATUS = *sessionstat* SESSION = *session*

Explanation

This is part of a multiline response generated by the STATUS command you issued using the MVS MODIFY command or the GMFHS command list. This message is displayed for each active session of type RODM and GDS.

Message Variables

sesstype

Indicates the type of the session. The types are as follows:

RODM

Specifies the connection to the Resource Object Data Manager (RODM).

GDS

A session with a graphic data server.

?????

Specifies the session type is not valid because of an internal error.

sessionstat

Indicates the session status. The values are as follows

CONNECTED

Specifies the connection to RODM or to the graphic data server has been established.

ADDED

RODM session state—Notification queue added

COMPLETE

RODM session state—Notification queue establishment is complete

INSTALLED

RODM session state—Methods installed

FOUND

RODM session state—Methods found

ACTIVE

Session is active

FAILED

Session has failed

DOWN

Session has not been established

INVALID

Session status is not valid because of an internal error

session

Identifies a session that Graphic Monitor Facility host subsystem (GMFHS) has with another entity.

If the session has a session type of RODM, then *session* is the name of the RODM for the connection that GMFHS has or is attempting to make.

If the session has a session type of GDS, then *session* is either the name of the LU associated with the graphic data server, or the IP address and the port number in the format *ipaddress:portnumber* (xxx.xx.xxx.xxx:xxxx). This IP identifier applies only to sessions with a type of GDS.

Operator response

If the system has detected an internal error, notify the system programmer.

System programmer response

Contact IBM Software Support.

DUI4044I**GMFHS TASK DISPLAY****Explanation**

This is part of a multiline response generated by the TASK command you issued using the MVS MODIFY command or the GMFHS command list.

DUI4045I

**TASK = *task* STATUS = ACTIVE
QUEUE DEPTH = *qcount***

Explanation

This message is part of a multiline response generated by the TASK command you issued using the MVS MODIFY command or the GMFHS command list. This message is for each Graphic Monitor Facility host subsystem (GMFHS) subtask with a status of ACTIVE, meaning the subtask is processing a user command or the timer is running.

Message Variables**task**

Identifies a GMFHS subtask. The subtask can be one of the following:

DBSERVER

Dbserver subtask

EVENTMGR

Event manager subtask

IPC

Interprocess communications subtask

NETCMD

Network commands subtask

NETCON

Network configuration subtask

OPERIF

Operator interface subtask

RTMGR

Resource traits manager subtask

IRMGR

IPC-RODM manager subtask

VIEWMGR

View manager subtask

VSTATMGR

View status manager subtask

One report line is issued for each task

qcount

Specifies the number of messages waiting in the queue to be delivered to the subtask.

DUI4046I

**AGGREGATION PROFILE
UPDATED AT: *time***

Explanation

This message is issued to indicate that an operator has updated either the aggregation parameters associated with a resource type, or the aggregation parameters associated with a real or aggregate object.

Message Variables***time***

Specifies the time of update.

System action

Processing continues.

DUI4048I OPERATOR HELP MENU

Explanation

This is part of a multiline response generated by your HELP command.

System action

The system displays a summary of the possible commands that you can enter.

Operator response

See the NetView online help for more information about the listed commands.

**DUI4049I GMFHS DOMAIN CONFIGURATION
INITIALIZED SUCCESSFULLY**

Explanation

The domain configuration definition used by the Graphic Monitor Facility host subsystem (GMFHS) has initialized successfully. No errors occurred during this initialization.

System action

GMFHS begins to establish communication sessions with server workstations or client workstations and query the current display status of non-SNA real resources.

**DUI4050I GMFHS VIEW CONFIGURATION
INITIALIZED SUCCESSFULLY**

Explanation

The view configuration definition used by the Graphic Monitor Facility host subsystem (GMFHS) has initialized successfully. No errors occurred during this initialization.

System action

Processing continues.

DUI4051E TASK *task* NOT FOUND

Explanation

You entered a TRACE command, and the requested task cannot be found.

Message Variables***task***

Specifies the task that you tried to initialize.

Operator response

Verify the name of the task that you are trying to initialize and reenter the command. To display a list of all tasks, enter the TASK command.

**DUI4052I RODM CONFIGURATION STATUS
IS NOT INITIALIZED**

Explanation

This message is displayed as part of the multiline response to your GMFHS STATUS command. NOT INITIALIZED is the status in the Resource Object Data Manager (RODM) database before network configuration initialization begins.

System programmer response

If you are running multiple copies of NetView or GMFHS, ensure that the domain ID to which your GMFHS is attempting to connect is active and is not already connected to another GMFHS.

**DUI4053I CONFIG COMMAND ERROR: THE
DD NAME *ddname* WAS NOT
FOUND**

Explanation

You entered a command using a parameter value that is not valid for the specified parameter.

Message Variables***ddname***

Specifies the data definition name from the CONFIG command INDD parameter.

System action

The CONFIG command is rejected.

Operator response

If the INDD parameter value you entered was incorrect, correct the value and try the command

again. If the INDD parameter was correct, notify the system programmer.

System programmer response

Determine why the data set called by the parameter does not exist. See the NetView online help for more information about the correct parameter values for the command. Correct and reenter the command.

**DUI4054I INITIALIZATION PARAMETER
 DISPLAY**

Explanation

This is part of a multiline response generated by a LISTINIT command, which displays a list of the Graphic Monitor Facility host subsystem initialization parameters currently being used by GMFHS.

DUI4056I TRACE IS ALREADY ACTIVE

Explanation

You entered a command to activate Graphic Monitor Facility host subsystem tracing, but it was already active.

System action

Processing continues.

DUI4057I TRACE HAS BEEN ACTIVATED

Explanation

Graphic Monitor Facility host subsystem tracing has been activated by your command.

System action

Processing continues.

DUI4058I TRACE HAS BEEN DEACTIVATED

Explanation

Graphic Monitor Facility host subsystem tracing has been inactivated by your command.

System action

Processing continues.

**DUI4059I TRACE COMMAND MUST INCLUDE
 keyword1, keyword2, or keyword3
 KEYWORD**

Explanation

You entered a TRACE command but did not include one of the specified keywords.

Message Variables

keyword1

Specifies the first keyword option

keyword2

Specifies the second keyword option

keyword3

Specifies the third keyword option

Operator response

Enter the TRACE command again using the correct keywords. See the NetView online help for information about the keywords of the TRACE command.

DUI4060I CURRENT TRACE SETTINGS

Explanation

This is part of a multiline response generated by a TRACE command you issued without parameters. This message is followed by DUI4090I and DUI4091I.

**DUI4061I command COMMAND IS NOT
 FORMATTED CORRECTLY**

Explanation

You entered a Graphic Monitor Facility host subsystem command using an incorrect format. You might have unmatched parentheses or an open quoted string.

Message Variables

command

Specifies the command you entered.

Operator response

See the NetView online help for information about the correct format of the command. Correct and reenter the command.

**DUI4062I parameter IS NOT VALID IN A
 command COMMAND**

Explanation

You entered a command using an incorrect keyword parameter.

Message Variables

parameter

Specifies the parameter keyword you entered.

command

Specifies the command you entered.

Operator response

See or enter the HELP command for information about the correct keyword parameters of the command. Correct and reenter the command.

DUI4063I *value IS NOT VALID IN THE
parameter PARAMETER OF THE
command COMMAND*

Explanation

You entered a command using a parameter value that is not valid for the specified parameter.

Message Variables

value
Specifies the incorrect value.

parameter
Specifies the parameter you entered.

command
Specifies the command you entered.

Operator response

See the NetView online help for information about the correct parameter values for the command. Correct and reenter the command.

DUI4064I **A VALUE MUST BE SUPPLIED
WITH THE *parameter* PARAMETER
OF THE *command* COMMAND**

Explanation

You entered a command using a parameter that required a value, but a value was not supplied.

Message Variables

parameter
Specifies the parameter you entered.

command
Specifies the command you entered.

Operator response

See the NetView online help for information about the correct parameter values for the command. Correct and reenter the command.

DUI4065I *value IS UNEXPECTED IN THE
parameter PARAMETER OF THE
command COMMAND*

Explanation

You entered a command using a parameter that did not require a value, but a value was supplied.

Message Variables

value
Specifies the value you entered.

parameter
Specifies the parameter you entered.

command
Specifies the command you entered.

Operator response

See the NetView online help for information about the correct parameter values for the command. Correct and reenter the command.

DUI4066I **THE *parameter* PARAMETER IS
DUPLICATED IN THE *command*
COMMAND**

Explanation

You entered a command using a parameter that occurred more than once, but the parameter is valid only once.

Message Variables

parameter
Specifies the parameter you entered.

command
Specifies the command you entered.

Operator response

See the NetView online help for information about the correct use of parameters in the command. Correct and reenter the command.

DUI4067I **A DOMAIN OR NMG PARAMETER
IS REQUIRED IN THE SHOW
COMMAND**

Explanation

You entered the SHOW command without the DOMAIN or NMG keyword. One of these keywords is required.

Operator response

See the NetView online help for information about the correct use of the parameter in the command. Correct and reenter the command.

DUI4068I *command COMMAND PROCESSED
FOR task*

Explanation

You entered a Graphic Monitor Facility host subsystem (GMFHS) command that has been processed for the specified GMFHS task. If command is GMFHS TRACE, this message was issued in response to a GMFHS

TRACE command that included a TASK parameter, and is issued for each task included in the parameter value.

Message Variables

command

Specifies the name of the command that was processed.

task

Specifies the ID for the GMFHS task for which the command was processed.

System action

The parameters are changed for the indicated task.

DUI4069A RODM CLASS *class* NOT FOUND

Explanation

The Graphic Monitor Facility host subsystem (GMFHS) specified that the Resource Object Data Manager (RODM) is to provide notification of changes to objects in the specified class; however, this class is not valid.

Message Variables

class

Specifies the name of the RODM class.

System action

GMFHS continues to function but does not receive notifications of changes to objects. Functions dependent on notifications provided by the missing class will not work properly.

Operator response

Notify the system programmer.

System programmer response

Verify that the data model is loaded correctly. See "Loading the GMFHS Data Model" in the *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide* for more information. If the data model is loaded correctly, but the problem persists, contact IBM Software Support.

DUI4070E GMFHS ATTEMPTED TO ESTABLISH COMMUNICATIONS WITH CNMTAMEL BUT FAILED FOR DOMAIN = *domainid*

Explanation

The Graphic Monitor Facility host subsystem (GMFHS) tasks cannot communicate with the CNMTAMEL task because the CNMTAMEL task is not functioning as a

status focal point or is not active. Therefore, GMFHS tasks cannot provide service to workstations.

Message Variables

domainid

Specifies the domain ID to which this GMFHS is attempting to connect

System action

GMFHS is not able to send view or status data to the workstations.

Operator response

Notify the system programmer.

System programmer response

Verify that the CNMTAMEL task is running and is configured as a status focal point. See *IBM Z NetView Installation: Configuring Additional Components* for information about this configuration. Also, if you are running multiple NetViews and GMFHSs, ensure that the domain ID to which your GMFHS is attempting to connect is:

- An active NetView domain
- Not already connected to another GMFHS
- Not a downlevel NetView domain

Check the log or issue the DISPPI command to see information about PPI senders and receivers.

DUI4071E RODM METHOD *method* NOT FOUND

Explanation

The Graphic Monitor Facility host subsystem (GMFHS) attempted to subscribe to notification of changes to Resource Object Data Manager (RODM) objects by a notification method not known to RODM.

Message Variables

method

Specifies the name of the RODM method by which GMFHS expected to be notified of changes to RODM objects.

System action

GMFHS continues to function but does not receive notifications of changes to objects. Functions dependent on notifications provided by the missing method do not work properly. This message can be issued more than once for the same RODM notification method. This occurs if the same notification method is used to report changes on more than one object and this method is not found.

Operator response

Notify the system programmer.

System programmer response

Verify that the data model is loaded correctly. See the *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide* for more information. If the data model is loaded correctly, but the problem persists, contact IBM Software Support.

DUI4072E	PPI SEND FAILURE, SENDER ID = <i>sender</i>, RECEIVER ID = <i>recvrid</i>, RETURN CODE = <i>retcode</i>
-----------------	--

Explanation

Your attempt to send a data buffer to a program-to-program interface (PPI) receiver failed.

Message Variables

sender

Specifies the ID used by the sender to identify itself in the program-to-program interface Send a Data Buffer to a Receiver request.

recvrid

Specifies the ID used by the sender to identify the receiver in the program-to-program interface Send a Data Buffer to a Receiver request.

retcode

Specifies the program-to-program interface return code that describes the failure.

System action

The data buffer is not sent to the receiver.

Operator response

Notify the system programmer.

System programmer response

See the *IBM Z NetView Application Programmer's Guide* for an explanation of the return code.

DUI4073E	PPI RECEIVE FAILURE, RECEIVER ID = <i>recvrid</i>, RETURN CODE = <i>retcode</i>
-----------------	--

Explanation

Your attempt to receive a data buffer from the receiver's program-to-program interface (PPI) receiver buffer queue failed.

Message Variables

recvrid

Specifies the ID used by the sender to identify itself in the program-to-program interface Receive a Data Buffer request.

retcode

Specifies the program-to-program interface return code that describes the failure.

System action

The data buffer is not received by the receiver.

Operator response

Notify the system programmer.

System programmer response

See the *IBM Z NetView Application Programmer's Guide* for an explanation of the return code.

DUI4074E	GMFHS INITIALIZATION PARAMETER <i>parameter_name</i> VALUE IS NOT VALID OR IS OUTSIDE ALLOWED LIMITS
-----------------	---

Explanation

You supplied an initialization parameter in the Graphic Monitor Facility host subsystem (GMFHS) DUGINIT initialization member that was not valid.

Message Variables

parameter_name

The parameter name supplied in the DUGINIT member of the CNMPARM data set.

System action

GMFHS continues to function using the default value for the parameter.

Operator response

Notify the system programmer.

System programmer response

Supply the correct parameter value in the DUGINIT member. See the *IBM Z NetView Administration Reference* for more information.

DUI4075E	<i>parameter_name</i> LIMITS ARE: LOWER LIMIT = <i>lowlimit</i>, UPPER LIMIT = <i>highlimit</i>
-----------------	--

Explanation

A parameter value in the GMFHS DUGINIT initialization member is not valid. The value is outside

of the valid limits. This message is associated with message DUI4074E.

Message Variables

parameter_name

The parameter name supplied in the DUIGINIT member of the CNMPARM data set.

lowlimit

The valid lower limit for the parameter value.

highlimit

The valid upper limit for the parameter value.

System action

GMFHS continues to function using the default value for the parameter.

Operator response

Notify the system programmer.

System programmer response

Correct the specification of the appropriate value in the GMFHS initialization parameters. Restart GMFHS.

DUI4076E	ERROR ENCOUNTERED IN THE INITIALIZATION ROUTINE FOR TRACE PARAMETER <i>traceparm</i>
-----------------	---

Explanation

The Graphic Monitor Facility host subsystem initialization routines encountered an error in processing the TRACE parameters in the GMFHS initialization member.

Message Variables

traceparm

The trace parameter in error:

TRACE

Sets trace on or off.

TRACEPAGES

Number of pages allocated for the in-storage trace table.

TRACEBYTES

Number of bytes per trace record written to the in-storage trace table.

TASK

The list of tasks to trace.

LEVEL

The trace level.

API

The list of APIs to trace.

TYPE

The list of interface or message types to trace for APIs

STORAGE

Sets storage trace on or off.

PRINTPDU38

Causes the system error synopsis records to be printed.

System action

The message is written to the console and processing continues.

Operator response

Notify the system programmer.

System programmer response

Correct the TRACE parameter in the DUIGINIT initialization member and recycle GMFHS. See the *IBM Z NetView Administration Reference* for more information.

DUI4077A	RODM CLASS <i>class</i> FIELD <i>field</i> NOT FOUND
-----------------	---

Explanation

The specified field is not defined to the class in the Resource Object Data Manager (RODM). This field is critical to the operation of the VIEWMGR task, and its absence causes the Graphic Monitor Facility host subsystem (GMFHS) to end.

Message Variables

class

Name of the class under which the field must be defined.

field

Name of the field that is missing.

System action

GMFHS ends.

Operator response

Notify the system programmer.

System programmer response

Ensure that RODM is properly loaded and that the field exists. Then restart the GMFHS task.

DUI4078I	SHOW NMG - DISPLAYS ALL NMGs DEFINED IN RODM
-----------------	---

Explanation

This is one of the messages generated in response to your HELP GMFHS command. This message describes the Graphic Monitor Facility host subsystem (GMFHS) SHOW NMG command.

System action

The system displays a summary of the possible GMFHS commands that you can enter.

Operator response

See the NetView online help for more information about the listed commands.

DUI4079I	SHOW DOMAIN - DISPLAYS ALL DOMAINS DEFINED IN RODM
-----------------	---

Explanation

This is one of the messages generated in response to your HELP GMFHS command. This message the Graphic Monitor Facility host subsystem (GMFHS) SHOW DOMAIN command.

System action

The system displays a summary of the possible GMFHS commands that you can enter.

Operator response

See the NetView online help for more information about the listed commands.

DUI4080I	STATUS - DISPLAYS STATUS OF GMFHS
-----------------	--

Explanation

This is one of the messages generated in response to your HELP GMFHS command. This message the Graphic Monitor Facility host subsystem (GMFHS) STATUS command.

System action

The system displays a summary of the possible GMFHS commands that you can enter.

Operator response

See the NetView online help for more information about the listed commands.

DUI4081I	TASK = <i>task</i> STATUS = STOPPED QUEUE DEPTH = <i>qcount</i>
-----------------	--

Explanation

This message is part of a multiline response generated by the TASK command you issued using the MVS MODIFY command of the GMFHS command list. This message is for each Graphic Monitor Facility host subsystem (GMFHS) subtask with a status of STOPPED, meaning the subtask is inactive because an abnormal end occurred.

Message Variables

task

Identifies a GMFHS subtask. The subtask can be one of the following:

DBSERVER

Dbserver subtask

EVENTMGR

Event manager subtask

IPC

Interprocess communications subtask

NETCMD

Network commands subtask

NETCON

Network configuration subtask

OPERIF

Operator interface subtask

RTMGR

Resource traits manager subtask

IRMGR

IPC-RODM manager subtask

VIEWMGR

View manager subtask

VSTATMGR

View status manager subtask

One report line is issued for each task.

qcount

The number of messages waiting in the queue to be delivered to the subtask.

DUI4082I	TASK - DISPLAYS CURRENT TASK INFORMATION
-----------------	---

Explanation

This is one of the messages generated in response to your HELP GMFHS command. This message the Graphic Monitor Facility host subsystem (GMFHS) TASK command.

System action

The system displays a summary of the possible GMFHS commands that you can enter.

Operator response

See the NetView online help for more information about the listed commands.

DUI4083I HELP - DISPLAYS THE HELP MENU

Explanation

This is one of the messages generated in response to your HELP GMFHS command. This message the Graphic Monitor Facility host subsystem (GMFHS) HELP command.

System action

The system displays a summary of the possible GMFHS commands that you can enter.

Operator response

See the NetView online help for more information about the listed commands.

**DUI4084I TASK = *task* STATUS = ENQUEUED
 QUEUE DEPTH = *qcount***

Explanation

This message is part of a multiline response generated by the TASK command you issued using the MVS MODIFY command of the GMFHS command list. This message is for each Graphic Monitor Facility host subsystem (GMFHS) subtask with a status of ENQUEUED, meaning the subtask is waiting for a resource.

Message Variables

task

Identifies a GMFHS subtask. The subtask can be one of the following:

DBSERVER

Dbserver subtask

EVENTMGR

Event manager subtask

IPC

Interprocess communications subtask

NETCMD

Network commands subtask

NETCON

Network configuration subtask

OPERIF

Operator interface subtask

RTMGR

Resource traits manager subtask

IRMGR

IPC-RODM manager subtask

VIEWMGR

View manager subtask

VSTATMGR

View status manager subtask

One report line is issued for each task.

qcount

The number of messages waiting in the queue to be delivered to the subtask.

DUI4085I TERM – TERMINATES GMFHS

Explanation

This is one of the messages generated in response to your HELP GMFHS command. This message describes the Graphic Monitor Facility host subsystem (GMFHS) TERM command.

System action

The system displays a summary of the possible GMFHS commands that you can enter.

Operator response

See the NetView online help for more information about the listed commands.

**DUI4086I LISTINIT – DISPLAYS THE
 INITIALIZATION PARMS**

Explanation

This is one of the messages generated in response to your HELP GMFHS command. This message describes the Graphic Monitor Facility host subsystem (GMFHS) LISTINIT command.

System action

The system displays a summary of the possible GMFHS commands that you can enter.

Operator response

See the NetView online help for more information about the listed commands.

**DUI4087I CONFIG – SYNCHRONIZE GMFHS
 WITH RODM UPDATES**

Explanation

This is one of the messages generated in response to your HELP GMFHS command. This message describes the Graphic Monitor Facility host subsystem (GMFHS) CONFIG command

System action

The system displays a summary of the possible GMFHS commands that you can enter.

Operator response

See the NetView online help for more information about the listed commands.

DUI4088I ***** END OF MENU DISPLAY

Explanation

This is the last message generated in response to the HELP GMFHS command you issued.

System action

The system displays a summary of the possible Graphic Monitor Facility host subsystem (GMFHS) commands that you can enter.

Operator response

See the NetView online help for more information about the listed commands.

DUI4089I JAPANESE=*off* GMTOFFSET = *shhmm* RODMNAME = *rodmname* RODMID = *rodmid* DOMAIN = *domainid* TRACE = *traceind* TASK = (*taskidx*, *taskidx*,...*taskidx*) LEVEL = *tracelvl* API = *api* TYPE = *typeind* STORAGE = *storageind* PRINTPDU38 = *yyy* TRACEPAGES = *pages* TRACEBYTES = *bytes* CHECKPOINT = *check-point* LCON-NMG-POLL-INTERVAL = *lcon-value1* LCON-NCC-RETRY-LIMIT = *lcon-value2* LCON-NCC-RSC-LIMIT = *lcon-value3* LCON-EVCHANGE-BUFFER-INTERVAL=*lcon-value4* LCON-AIP-RESET-INTERVAL=*lcon-value5* LCON-AGG-BUNDLE-INTERVAL=*lcon-value6* LCON-STATUS-DELAY-TIME = *lcon-value7* LCON-STATUS-DELAY-MAX = *lcon-value8* LCON-REPORT-UNKNOWN-STATUS = *lcon-value9* LCON-HEX-SUBVECTOR-DISPLAY = *lcon-value10* LCON-OPERATOR-CMD-AUDIT = *lcon-value11* LCON-ASSOCIATE-NUL-Node-WITH-LINK=*lcon-value12* LCON-AGGRST-REQUIRED=*lcon-value13* LCON-MAX-LOCATE-RESOURCE-VIEWS=*lcon-value14* LCON-

SNATM-TIMEOUT=*lcon-value15* LCON-ALERT-CMD-TIMEOUT=*lcon-value16* LCON-MAX-QUEUE-IPC = *lcon-value17* LCON-MAX-QUEUE-OPERIF = *lcon-value18* LCON-MAX-QUEUE-DBSERVER = *lcon-value19* LCON-MAX-QUEUE-NETCON = *lcon-value20* LCON-MAX-QUEUE-EVENTMGR = *lcon-value21* LCON-MAX-QUEUE-VIEWMGR = *lcon-value22* LCON-MAX-QUEUE-VSTATMGR = *lcon-value23* LCON-MAX-QUEUE-NETCMD=*lcon-value24* LCON-MAX-QUEUE-RTMGR=*lcon-value25* LCON-MAX-QUEUE-IRMGR = *lcon-value26* LCON-MAX-QUEUE-RCMGR=*lcon-value27* LCON-MAX-QUEUE-MAINTASK = *lcon-value28*

Explanation

This is one of the lines generated in response to a LISTINIT command, which displays a list of the Graphic Monitor Facility host subsystem (GMFHS) initialization parameters currently in use.

Message Variables

JAPANESE

Specifies whether or not GMFHS uses Japanese text for displayable text on the NMC console.

on

Specifies that GMFHS uses Japanese text for displayable text on the NMC console.

off

Specifies that GMFHS does not use Japanese text for displayable text on the NMC console. The default is *off*.

shhmm

The Coordinated Universal Time offset, which is the number of hours and minutes the time differs from Coordinated Universal Time, where *s* is a positive (+) or negative (N) sign, *hh* is the hour (00-23), and *mm* is the minutes (00-59).

rodmname

The Resource Object Data Manager (RODM) jobname.

rodmid

The RODM user ID.

domainid

The 1 to 5 alphanumeric character domain to which this GMFHS is to be connected.

traceind

The TRACE ON or OFF indicator.

pages

The number of pages allocated for the in-storage trace table.

bytes

The number of bytes per trace record written to the in-storage trace table.

taskidx

The GMFHS tasks to be traced.

tracelvl

The program tracing level.

api

The API to trace: RODM, IPC, or NONE.

typeind

The type of trace entries included.

storageind

Indicates whether trace storage is requested: possible values are YES or NO.

yyy

Indicates which output log is being used by GMFHS to log PDU38 data.

NO or INTERNAL

The PDUs are written to the internal trace log.

YES or FILE

The PDUs are written to output data sets defined by DD statements for each GMFHS component.

GTF

The PDUs are written to the GTF.

checkpoint

The times when GMFHS requests a RODM checkpoint.

storeset

Controls how event reports are logged to the event report database in the CNMDB VSAM file. This setting enables a trade off between DASD use and CPU time. NONALERT causes Dbserver to store all event reports that are not forwarded to the hardware monitor in the event report database. This is the default setting. ALL causes Dbserver to store all event reports in the event report database, even if they are forwarded to the hardware monitor. NONE causes Dbserver not to store event reports in the event report database. However, some event reports are still forwarded to the hardware monitor and recorded in the hardware monitor database.

lcon-value

See the *IBM Z NetView Administration Reference* for information about *lcon-value1* – *lcon-value28*.

Explanation

This is the second line displayed in response to a TRACE command you issued without parameters.

Message Variables**globtracestat**

Specifies either ON or OFF to indicate whether tracing has been activated. This must be ON for parameters to be effective.

DUI4091I **subtask tasktracestat LEVEL**
tracelevel PRINT printstatus API =
(api1, api2, ..., apin) STORAGE
storagegettrace IPCAPI = (ipcap1,
ipcap12, ..., ipcapin)

Explanation

This is part of a multiline response generated by a TRACE command you issued without parameters. This message shows the status of tracing for each Graphic Monitor Facility host subsystem (GMFHS) task, including the main task.

Message Variables**subtask**

The subtask can be one of the following:

MAIN

GMFHS main task

RTMGR

Resource traits manager subtask

IPC

Interprocess communications subtask

OPERIF

Operator interface subtask

VIEWMGR

View manager subtask

VSTATMGR

View status manager subtask

DBSERVER

Database server subtask

EVENTMGR

Event manager subtask

IRMGR

IPC-RODM manager subtask

NETCMD

Network commands subtask

NETCON

Network configuration subtask

RCMGR

Resource Collection Manager subtask

One report line is issued for each task.

DUI4090I **TRACING IS globtracestat**

tasktracestat

Specifies either one (1) to indicate tracing is enabled, or zero (0) to indicate that it is not.

tracelevel

A level from 0–99 at which trace has been activated for the task. Level 00 is the lowest level of detail and 99 is the highest.

printstatus

A letter that indicates whether trace entries are being written to the internal trace log (I), an output data set (F), or GTF (G).

storagetrace

Specifies either 1 or zero (0) to indicate that all requests the task makes to allocate or free memory are to be traced. A zero indicates that they are not traced.

api1, api2, ..., apin

Specifies the types of APIs to be traced. The possible types are:

NONE

Turns off tracing for all APIs.

RODM

Turns on tracing for user API requests to RODM.

IPC

Turns on tracing for interprocess communication messages. The types of messages are further classified with the IPCAPI parameter.

PPI

Turns on tracing for data sent to or received from the program-to-program interface.

RCM

Turns on tracing for event flows within the Resource Collections Manager subtask.

ALL

Turns on tracing for all APIs.

storagetrace

Specifies either one (1) or zero (0) to indicate that all requests the task makes to allocate or free memory are to be traced.

ipcapi1, ipcapi2, ..., ipcapiN

Specifies the types of IPC messages to be traced if the IPC API is enabled. The types are:

NONE

Turns off tracing for all IPC messages.

SCO

Turns on tracing for messages exchanged with the Scope Checker optional task (OPT).

PPI

Turns on tracing for the IPC subtask messages sent across the program-to-program interfaces.

GDS

Turns on tracing for requests and responses from the NMC and the NMC server.

CNMTAMEL

Turns on tracing for requests and responses from the CNMTAMEL data services task (DST).

NOTIFY

Turns on tracing for RODM notification blocks.

PDU

Turns on tracing for protocol data units exchanged between GMFHS subtasks.

ALL

Turns on tracing for all IPC messages.

DUI4092E**GMFHS UNABLE TO
COMMUNICATE WITH RODM *rodm*****Explanation**

The Graphic Monitor Facility host subsystem (GMFHS) attempted to connect with Resource Object Data Manager (RODM) and failed. At least one RODM is active, but RODM *rodm* was not found by GMFHS.

Message Variables***rodm***

Specifies the name of RODM that cannot be connected with GMFHS. This is the value of the RODMNAME parameter supplied in DSIPARM member DUGINIT.

System action

GMFHS must be able to connect to RODM before it is able to perform any of its applications. GMFHS periodically attempts to connect to RODM until it succeeds.

Operator response

Notify the system programmer.

System programmer response

Verify that the RODMNAME parameter in DUGINIT is the same as the started task name of the RODM *rodm*. This is the same RODM that contains the GMFHS structure load and the object definitions for the network that is to be monitored by GMFHS.

If the RODMNAME parameter is not the same as RODM started task name, do the following:

1. End the GMFHS job with the TERM console command.
2. Change the value of the RODMNAME parameter in member DUIGINIT so that it is the same as the started task name of RODM *rodm*. See the *IBM Z NetView Administration Reference* for more information.
3. Start the GMFHS job.

If the RODMNAME parameter is the same as the RODM started task name, then:

- If RODM with this started task name is not active, start the task.
- If RODM is active, contact IBM Software Support.

DUI4093E THERE ARE NO ACTIVE RODM SESSIONS FOR GMFHS TO CONNECT TO

Explanation

The Graphic Monitor Facility host subsystem (GMFHS) attempted to connect with the Resource Object Data Manager (RODM) but failed because no RODM systems are active.

System action

GMFHS must be able to connect to RODM before it is able to perform any of its applications. GMFHS periodically attempts to connect to RODM until it succeeds.

Operator response

Notify the system programmer.

System programmer response

Start a RODM that has a task name that is identical to the RODMNAME parameter in DSIPARM member DUIGINIT.

DUI4094E RODM USERID NOT DEFINED

Explanation

The Graphic Monitor Facility host subsystem (GMFHS) attempted to connect with the Resource Object Data Manager (RODM) but failed. This message is followed by message DUI4007A.

System action

GMFHS ends.

Operator response

Notify the system programmer.

System programmer response

If you are not using security software, verify that the RODM user ID for GMFHS is correct as specified by the RODMID parameter in DSIPARM member DUIGINIT. If the RODMID parameter is not correct:

1. Correct the value of the RODMID parameter in DUIGINIT. See the *IBM Z NetView Administration Reference* for more information.
2. Start the GMFHS host job. If you are using security software, take the steps necessary to correct the problem.

If you are using security software, take the necessary steps to correct the problem.

DUI4095E RODM PASSWORD NOT AUTHORIZED

Explanation

The Graphic Monitor Facility host subsystem (GMFHS) attempted to connect with the Resource Object Data Manager (RODM) but failed. This message is followed by message DUI4007A.

System action

GMFHS ends.

Operator response

Notify the system programmer.

System programmer response

Make sure that the USERID specified by the RODMID parameter in DUIGINIT has an authorized password or password phrase in your security product.

DUI4096E AN ERROR REQUIRING RESYNCHRONIZATION HAS BEEN FOUND IN THE AGGREGATION HIERARCHY

Explanation

A Resource Object Data Manager (RODM) method has encountered an error in the value of a field of a real or aggregate object. This error causes status aggregation to fail for the object and its aggregation ancestors.

System action

Graphic Monitor Facility host subsystem (GMFHS) processing continues. information about the object, field, and value in error is issued to the RODM log.

Operator response

Notify the system programmer.

System programmer response

Print the RODM log entries (types 1, 2, 3, and 4) to determine what caused the error to be introduced into the aggregation hierarchy. Correct the condition causing the error and resynchronize the aggregation hierarchy. You can do this by starting the DUIFFAWS method using the RODM load utility or by reinitializing GMFHS.

DUI4097E RODM CONNECT FAILURE

Explanation

The Graphic Monitor Facility host subsystem (GMFHS) attempted to connect with the Resource Object Data Manager (RODM) and failed. The failure might have occurred because security software is active, but the class specified in the customization file is not defined or active in the security software.

System action

GMFHS periodically attempts to connect to RODM until it succeeds.

Operator response

Notify the system programmer.

System programmer response

Verify that the customization file is active and defined in the security software. If both of these conditions are met and this message continues to be issued, contact IBM Software Support.

DUI4098E GENERAL RODM FAILURE, RETURN CODE = *retcode*, REASON CODE = *reason*

Explanation

Either the Graphic Monitor Facility host subsystem (GMFHS) attempted to connect with the Resource Object Data Manager (RODM) but failed, or GMFHS successfully connected to RODM but later had a nonrecoverable RODM failure.

Message Variables

retcode

The value of the return code reported by RODM to GMFHS.

reason

The value of the reason code reported by RODM to GMFHS.

System action

GMFHS periodically attempts to connect to the RODM until it succeeds.

Operator response

Notify the system programmer.

System programmer response

See the *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide* for more information. If the problem persists, contact IBM Software Support.

DUI4099E GENERAL PPI FAILURE, RETURN CODE = *retcode*

Explanation

An attempt to use the program-to-program interface (PPI) failed. As a result, the Graphic Monitor Facility host subsystem (GMFHS) cannot communicate with the graphic data server.

Message Variables

retcode

The program-to-program interface return code that describes the failure.

System action

The action depends on the value of *retcode*:

- If *retcode* is 24 or 32, GMFHS periodically attempts to connect with the program-to-program interface.
- If *retcode* is any other value, GMFHS cannot attempt to connect with the program-to-program interface.

Operator response

Notify the system programmer.

System programmer response

The action taken depends on the value of *retcode*:

24

The NetView subsystem is not active. Start the NetView subsystem.

28

NetView is not supporting user requests. Verify that the NetView program is installed so it can support user requests.

32

The NetView program has experienced a storage shortage. If this problem does not clear within a short time period, contact IBM Software Support.

If the return code is any other value, contact IBM Software Support.

DUI4200E	RODM CONNECT/DISCONNECT LOOP
-----------------	-------------------------------------

Explanation

GMFHS has discovered that its user object still exists in RODM (from a previous invocation). GMFHS then deletes the object, attempts to reconnect with RODM, and once again discovers that its user object is present. This condition resulted from an problem within RODM which has since be fixed.

System action

GMFHS ends.

Operator response

Notify the system programmer.

System programmer response

Contact IBM Software Support.

DUI4201E	INVALID PPI DATA RECEIVED FROM PPI SENDER <i>sender</i>
-----------------	--

Explanation

GMFHS was unable to correctly interpret the data in the PPI buffer that was received from *sender*.

Message Variables

sender

Identifies the PPI sender.

System action

PPI message is discarded and processing continues.

Operator response

Notify the system programmer.

System programmer response

More information is sent to the GMFHS output logs describing the error. The error is likely a result of data being sent to the GMFHS PPI receiver from an unauthorized source. If you cannot determine the unauthorized source, contact IBM Software Support for assistance in interpreting the additional information.

DUI4202E	TEMPORARY PPI FAILURE, RETURN CODE = <i>retcode</i>, ECB POST CODE = <i>postcode</i>
-----------------	---

Explanation

The program-to-program interface (PPI) return code indicates that an error has occurred from which GMFHS can recover.

Message Variables

retcode

PPI return code.

postcode

ECB post code

System action

Processing continues.

Operator response

Notify the system programmer.

System programmer response

Use the PPI return code and ECB post code for assistance in determining the cause of the error. Ensure that the NetView Subsystem Interface is active, and the PPI is active within the subsystem.

DUI4203E	RODM OVERFLOW DATA DISCARDED
-----------------	-------------------------------------

Explanation

The value of EKG_RBOverflowAction has changed, causing RODM to discard response block overflow data.

System action

Processing continues.

Operator response

Notify the system programmer.

System programmer response

Change the value of EKG_RBOverflowAction so that response block overflow data is saved for GMFHS. If the value of EKG_RBOverflowAction is correct and the message still occurs, contact IBM Software Support.

DUI4204E	GMFHS USER OBJECT CANNOT BE DELETED FROM RODM
-----------------	--

Explanation

An attempt was made to delete an existing GMFHS user object from RODM, but there were existing notification queues or subscriptions on the object and the EKG_StopMode field on the object was set to

indicate that these queues and subscriptions must not be purged.

System action

GMFHS ends.

Operator response

Notify the system programmer.

System programmer response

Change the value of EKG_StopMode so that queues and subscriptions will be purged when the object is deleted.

DUI4205E	ELEMENT MANAGER COMMAND FAILED, COS TASK NOT ACTIVE
-----------------	--

Explanation

A command cannot be delivered to an element management system through the common operations services (COS) gateway task. The task is inactive.

System action

The command fails, processing continues.

Operator response

Notify the system programmer.

System programmer response

If the COS task is not operational, start the COS task. Otherwise, contact IBM Software Support.

DUI4206E	AN RCMGR INITIALIZATION ERROR HAS OCCURRED, ERROR CODE <i>errorcode</i>
-----------------	--

Explanation

An error occurred during the initialization of the RCMGR task of GMFHS. The error is the result of a configurable setting; in most cases, it is a result of the RCMGR interacting with RODM.

Message Variables

errorcode

A numeric code that indicates the type of error. Additional information related to the specific error is written to the RCMGR output file (to the CNMN DD from the GMFHS startup procedure, the GTF output file, the internal trace file, or any combination of these three files depending on the PRINT options that have been requested on the GMFHS TRACE command). The error codes are:

- 11**

A RODM Query Multiple Subfield function for the fields on an object during the evaluation of a collection specification failed. Additional information on this failure is logged following this message in the RCMGR output file. This information includes a dump of the function block and response block (if available).
- 12**

A RODM Execute Function List function used to issue Query Multiple Subfield functions for multiple objects during the evaluation of a collection specification failed. Additional information on this failure is logged following this message in the RCMGR output file. This information includes a dump of the function block and response block (if available).
- 26**

A RODM Query Field function failed for the MyObjectChildren field of a class during the evaluation of a collection specification. Additional information on this failure is logged following this message in the RCMGR output file. This information includes a dump of the function block and response block (if available).
- 38**

A RODM Query Entity Structure function failed attempting to query the CDO class structure on the Network_View_Collection_Class. Additional information about this failure, is logged following this message in the RCMGR output file. This information includes a dump of the function block and response block (if available)
- 39**

A CollectionSpecn field in the Collection_Definition_Class is badly formed. The value of *n* is either not an integer, or it is less than or equal to zero. There is no additional information logged with this error. Review the CollectionSpecn fields on the Collection_Definition_Class and correct the error.
- 40**

A RODM Add Notification Subscription function failed for the Trigger field of the Network_View_Collection_Class. Additional information on this failure is logged following this message in the RCMGR output file. This information includes a dump of the function block and response block (if available).
- 41**

A RODM Add Notification Subscription function failed for the Trigger field of the Aggregate_Collection_Class. Additional information on this failure is logged following

- this message in the RCMGR output file. This information includes a dump of the function block and response block (if available)
- 49** A RODM Query Field function on the Network_View_Collection_Class MyObjectChildren field failed. Additional information on this failure is logged following this message in the RCMGR output file. This information includes a dump of the function block and response block (if available).
- 50** A RODM Query Field function on the Aggregate_Collection_Class MyObjectChildren field failed. Additional information on this failure is logged following this message in the RCMGR output file. This information includes a dump of the function block and response block (if available).
- 58** A RODM Locate function failed while attempting to locate all resources scheduled for status updates. Additional information on this failure is logged following this message in the RCMGR output file. This information includes a dump of the function block and response block (if available).
- 59** A RODM Locate function failed while attempting to locate all resources scheduled for suspend aggregation. Additional information on this failure is logged following this message in the RCMGR output file. This information includes a dump of the function block and response block (if available).
- 60** A RODM Change Field function failed for the PolicyCtrSU field of an object linked to a CCO. Additional information on this failure is logged following this message in the RCMGR output file. This information includes a dump of the function block and response block (if available).
- 61** A RODM Change Field function failed for the DisplayStatus field of an object linked to a CCO. Additional information on this failure is logged following this message in the RCMGR output file. This information includes a dump of the function block and response block (if available).
- 62** A RODM ChangeField function failed for the PolicyCtrSA field of an object linked to a CCO. Additional information on this failure is logged

following this message in the RCMGR output file. This information includes a dump of the function block and response block (if available).

- 63** A RODM Trigger Named Method function failed for the UpdateUserStatus field of an object linked to a CCO. Additional information on this failure is logged following this message in the RCMGR output file. This information includes a dump of the function block and response block (if available).

System action

The RCMGR task ends, forcing GMFHS to end.

Operator response

Notify the system programmer.

System programmer response

Locate the additional information in the RCMGR output file. In most cases, the error is accompanied by a RODM return and reason code for a failure on a RODM object or class. These errors can occur as a result of errors with the GMFHS data model or incorrectly defined Network_View_Collection_Class or Aggregate_Collection_Class objects. Use the logged information as an aid in resolving the problem with RODM.

DUI4207E	AN RCMGR FIELD SUBSCRIPTION ERROR HAS OCCURRED, ERROR CODE <i>errorcode</i>
-----------------	--

Explanation

An error occurred when the RCMGR task of GMFHS attempted to add a notification subscription to a field in RODM.

Message Variables

errorcode

A numeric code that indicates the type of error. Additional information related to the specific error is written to the RCMGR output file (to the CNMN DD from the GMFHS startup procedure, the GTF output file, the internal trace file, or any combination of these three files depending on the PRINT options that have been requested on the GMFHS TRACE command). The error codes are:

- 24** The add notification subscription for a class/field pair failed. This might cause one or more collections to be incorrect. Determine the cause of the error from the additional

information that is logged following this message in the RCMGR output file. This information includes a dump of the function block and response block (if available). The recycle GMFHS to Cold Start all collections.

System action

The RCMGR task ignores the subscription and continues processing.

Operator response

Notify the system programmer.

System programmer response

Locate the additional information in the RCMGR output file. In most cases, the error is accompanied by a RODM return and reason code for a failure on a RODM object or class. These errors can occur as a result of errors with the GMFHS data model or incorrectly defined `Network_View_Collection_Class` or `Aggregate_Collection_Class` objects. Use the logged information as an aid in resolving the problem with RODM.

DUI4208E	ALERT PROCESSOR <i>alertp</i> OVERLAID WORKAREA 1 LENGTH
-----------------	---

Explanation

The alert processor changed the length of the first work area supplied to it. Changing the length is not allowed. The alert associated with this error is dropped.

Message Variables

alertp

Specifies the name of the alert processor.

System action

The alert is ignored, processing continues.

Operator response

Notify the system programmer.

System programmer response

If you are using the default alert processor (DUIFEDEF), this is an internal error. Contact IBM Software Support.

If you have supplied an alert processor, correct the alert processor. The work area is written to the GMFHS output logs.

DUI4209E	ALERT PROCESSOR <i>alertp</i> RETURNED GARBLED RESPONSE
-----------------	--

Explanation

The list of candidate resource names returned by the alert processor is garbled. The alert associated with this error is dropped.

Message Variables

alertp

Specifies the name of the alert processor.

System action

The alert is ignored, processing continues.

Operator response

Notify the system programmer.

System programmer response

If you are using the default alert processor (DUIFEDEF), this is an internal error. Contact IBM Software Support.

If you have supplied an alert processor, correct the alert processor. The work area is written to the GMFHS output logs.

DUI4210E	ALERT PROCESSOR <i>alertp</i> EXCEEDED MAXIMUM ALLOWED WORKAREA
-----------------	--

Explanation

The alert processor requested a larger work area after the maximum work area has been provided. The current maximum is one MB of storage. The alert associated with this error is dropped.

Message Variables

alertp

Specifies the name of the alert processor.

System action

The alert is ignored, processing continues.

Operator response

Notify the system programmer.

System programmer response

If you are using the default alert processor (DUIFEDEF), this is an internal error. Contact IBM Software Support.

If you have supplied an alert processor, correct the alert processor. The work area is written to the GMFHS output logs.

**DUI4211E ALERT PROCESSOR *alertp*
WORKAREA LENGTH REQUEST
ERROR**

Explanation

The alert processor requested a smaller work area. The alert associated with this request is dropped.

Message Variables***alertp***

Specifies the name of the alert processor.

System action

The alert is ignored and processing continues.

Operator response

Notify the system programmer.

System programmer response

If you are using the default alert processor (DUIFEDEF), this is an internal error. Contact IBM Software Support.

If you have supplied an alert processor, correct the alert processor.

**DUI4212E ALERT PROCESSOR *alertp*
REPORTED PARAMETER ERROR**

Explanation

The alert processor reported that it was called with incorrect parameters. The alert associated with this request is dropped.

Message Variables***alertp***

Specifies the name of the alert processor.

System action

The alert is ignored and processing continues.

Operator response

Notify the system programmer.

System programmer response

If you are using the default alert processor (DUIFEDEF), this is an internal error. Contact IBM Software Support.

If you have supplied an alert processor, correct the alert processor.

**DUI4213E AN RCMGR ERROR HAS
OCCURRED PROCESSING A
NETWORK_VIEW_
COLLECTION_CLASS CDO, ERROR
CODE *errorcode***

Explanation

An error occurred while processing a Network_View_Collection_Class object. The error is the result of a configurable setting; in most cases, it is a result of the RCMGR interacting with RODM

Message Variables***errorcode***

A numeric code that indicates the type of error. Additional information related to the specific error is written to the RCMGR output file (to the CNMN DD from the GMFHS startup procedure, the GTF output file, the internal trace file, or any combination of these three files depending on the PRINT options that have been requested on the GMFHS TRACE command). If known, the name of the MyName of the CDO object is logged first, followed by information specific to the error. The error codes are:

1

A RODM Query Subfield function failed while attempting to query the MyId value subfield of the *classname* class in the collection specification; this failure can be because of an incorrectly specified class. Additional information on this failure is logged following this message in the RCMGR output file. This information includes a dump of the function block and response block (if available). If the RODM reason code indicates that the class cannot be found, correct the *classname* in the collection specification.

2

A RODM Query Field Structure function failed while attempting to query the *fieldname* field in the collection specification; this failure can be because of an incorrectly specified field. Additional information on this failure is logged following this message in the RCMGR output file. This information includes a dump of the function block and response block (if available). If the RODM reason code indicates that the field cannot be found, correct the *fieldname* in the collection specification.

3

The collection specification value at position xxx of the full collection specification failed to compile for the regular expression *regex*. xxx is the character position of the value in error. *regex* is the regular expression that was

compiled. If the collection specification value was already a regular expression, the value and *regexp* must be identical. The CDO is ignored. Check the *CollectionSpecn* fields, delete the CDO object, and reload the corrected object.

4 The *CollectionSpec* is a null string. The CDO is ignored. Check the *CollectionSpecn* fields, delete the CDO object, and reload the corrected object.

5 There are no tokens in the collection specification. The CDO is ignored. Check the *CollectionSpecn* fields, delete the CDO object, and reload the corrected object.

6 The collection specification is syntactically incorrect at the conjunction at position *xxx* of the full collection specification. When the conjunction was found, processing was not at the end of a leaf specification. *xxx* is the character position of the conjunction in error. The CDO is ignored. Check the *CollectionSpecn* fields, delete the CDO object, and reload the corrected object.

7 The collection specification is syntactically incorrect at the conjunction at position *xxx* of the full collection specification. One side of the logic tree was missing. *xxx* is the character position of the conjunction in error. The CDO is ignored. Check the *CollectionSpecn* fields, delete the CDO object, and reload the corrected object.

8 The end of the full collection specification was reached, and there was not exactly one node on the logic tree stack. This is usually the result of a missing conjunction. The CDO is ignored. Check the *CollectionSpecn* fields, delete the CDO object, and reload the corrected object.

9 The end of the full collection specification was reached, and there was an incomplete leaf specification. The CDO is ignored. Check the *CollectionSpecn* fields, delete the CDO object, and reload the corrected object.

10 A RODM Query Multiple Subfields function for the fields on the CDO failed. Additional information on this failure is logged following this message in the RCMGR output file. This

information includes a dump of the function block and response block (if available).

13 The data type for the field at position *xxx* of the full collection specification is not allowed; data type is *datatype*. *xxx* is the character position of the field with the incorrect datatype; *datatype* is the name of the RODM data type in error. The CDO is ignored. Check the *CollectionSpecn* fields, delete the CDO object, and reload the corrected object.

14 A RODM Add Delete Notification Subscription function for the CDO failed. Additional information on this failure is logged following this message in the RCMGR output file. This information includes a dump of the function block and response block (if available).

15 A RODM Query Field function failed for the *MyName* field of the CCO object. If the CCO object did not exist, it will not generate this error. Additional information on this failure is logged following this message in the RCMGR output file. This information includes a dump of the function block and response block (if available).

16 A RODM Query Entity Structure function failed during an attempt to delete an object from RODM. Additional information on this failure is logged following this message in the RCMGR output file. This information includes a dump of the function block and response block (if available).

17 A RODM Query Field function failed during an attempt to delete an object from RODM. Additional information on this failure is logged following this message in the RCMGR output file. This information includes a dump of the function block and response block (if available).

18 A RODM Trigger Unlink function failed during an attempt to delete an object from RODM. Additional information on this failure is logged following this message in the RCMGR output file. This information includes a dump of the function block and response block (if available).

20 A RODM Create Object function failed for the creation of the CCO object. Additional information on this failure is logged following

this message in the RCMGR output file. This information includes a dump of the function block and response block (if available).

21

A RODM Change Multiple Fields function failed for multiple fields on the CCO object. Additional information on this failure is logged following this message in the RCMGR output file. This information includes a dump of the function block and response block (if available).

29

A RODM Execute Function List function failed for linking collection objects into the CCO object. Additional information on this failure is logged following this message in the RCMGR output file. This information includes a dump of the function block and response block (if available).

64

The field value *value* is not allowed for the data type *datatype* of a field within the collection specification; *datatype* is the name of the RODM datatype in error. This problem occurs when a wild card is used with a value that does not allow a wild card. The CDO is ignored. Check the CollectionSpecn fields, delete the CDO object and reload the corrected object.

65

A RODM Query Field function failed for the MyID field of an object from an NMC wizard CREATE request. Additional information on this failure is logged following this message in the RCMGR output file. This information includes a dump of the function block and response block (if available).

System action

The RCMGR task ignores this collection object and continues processing.

Operator response

Notify the system programmer.

System programmer response

Locate the additional information in the RCMGR output file. In most cases, the error is accompanied by a RODM return and reason code for a failure on a RODM object or class. Use the logged information as an aid in resolving the problem with RODM.

**DUI4214E AN RCMGR ERROR HAS
 OCCURRED PROCESSING AN**

**AGGREGATE_COLLECTION_CLASS
CDO, ERROR CODE *errorcode***

Explanation

An error occurred while processing an Aggregate_Collection_Class object. The error is the result of a configurable setting; in most cases, it is a result of the RCMGR interacting with RODM.

Message Variables

errorcode

A numeric code that indicates the type of error. Additional information related to the specific error is written to the RCMGR output file (to the CNMN DD from the GMFHS startup procedure, the GTF output file, the internal trace file, or any combination of these three files depending on the PRINT options that have been requested on the GMFHS TRACE command). If known, the name of the MyName of the CDO object is logged first, followed by information specific to the error. The error codes are the same as those for message DUI4213E; see that message for a description of the codes. There are a few codes that are unique for this message. These codes are:

22

A RODM Query Field function failed for the MyId field of the Aggregate CCO Display Resource Type object. Check the DisplayResourceType field of the CDO and insure that it is the name of an object in the Display_Resource_Type class. Additional information on this failure is logged following this message in the RCMGR output file. This information includes a dump of the function block and response block (if available).

23

A RODM TriggerOIMethod for method DUIFCLRT failed attempting to link the Aggregate CCO object to a DRT object. Check the LayoutType field of the CDO and insure that it is valid. Additional information on this failure is logged following this message in the RCMGR output file. This information includes a dump of the function block and response block (if available).

32

A RODM TriggerOIMethod for method DUIFCUAP failed attempting to unlink the Aggregate CCO object from its child object. Additional information on this failure is logged following this message in the RCMGR output file. This information includes a dump of the function block and response block (if available).

- 51** A RODM Query Field function failed for the MyId field of the Layout_Parameter_For_View_Class object. Additional information on this failure is logged following this message in the RCMGR output file. This information includes a dump of the function block and response block (if available).
- 52** A RODM Trigger Link function failed attempting to link the Layout_Parameters_For_View_Class object to the CCO object. Additional information on this failure is logged following this message in the RCMGR output file. This information includes a dump of the function block and response block (if available).
- 53** A RODM ChangeField function failed for the DisplayStatus field of an object linked to a CCO. Additional information on the change failure is logged following this message in the RCMGR output file. This information includes a dump of the function block and response block (if available).
- 54** A RODM Trigger Named Method function failed for the UpdateUserStatus field of an object linked to a CCO. Additional information on the trigger failure is logged following this message in the RCMGR output file. This information includes a dump of the function block and response block (if available).
- 55** A RODM ChangeField function failed for the DisplayStatus field of an object linked to a CCO. Additional information on the change failure is logged following this message in the RCMGR output file. This information includes a dump of the function block and response block (if available).
- 56** A RODM Trigger Named Method function failed for the UpdateUserStatus field of an object linked to a CCO. Additional information on the trigger failure is logged following this message in the RCMGR output file. This information includes a dump of the function block and response block (if available).
- 57** A RODM Query field function on the Aggregation Child field of an object failed during an attempt to delete a collection. Additional information on the query failure is logged following this message in the RCMGR output file. This information includes a dump of

the function block and response block (if available).

System action

The RCMGR task ignores this collection object and continues processing.

Operator response

Notify the system programmer.

System programmer response

Locate the additional information in the RCMGR output file. In most cases, the error is accompanied by a RODM return and reason code for a failure on a RODM object or class. Use the logged information as an aid in resolving the problem with RODM.

DUI4215E **DUPLICATE SUBTASK
REGISTERED WITH HTM, NAME =
subtask**

Explanation

The Host Task Manager program (CNMTAMEL) reported that it is already registered with the specified name.

Message Variables

subtask

Specifies the name of the subtask

System action

GMFHS abends.

Operator response

Notify the system programmer.

System programmer response

Attempt to determine what other process may be registered with the host task manager using the given name. For more information, contact IBM Software Support.

DUI4216E **MYNAME FIELD NOT DEFINED ON
GMFHS_SHADOW_OBJECTS_CLAS
S OBJECT *objectname***

Explanation

The MyName field for the RODM object cannot be found during an object query.

Message Variables

objectname
Specifies the name of the RODM object.

System action
Processing continues.

Operator response
Notify the system programmer.

System programmer response
This is an internal RODM error; the MyName field should be found on any RODM object. Contact IBM Software Support.

**DUI4217E RECEIVED UNEXPECTED EVENT
MAJOR VECTOR *vector***

Explanation
A major vector was received by the event manager subtask that was neither an alert, resolution, or transparent coded data stream.

Message Variables
vector
Specifies the major vector in error.

System action
The major vector is discarded; processing continues.

Operator response
Notify the system programmer.

System programmer response
The major vector in error is written to the GMFHS output logs. This is probably an internal error within the NetView address space. Contact IBM Software Support.

**DUI4218E STATUS CHANGE REJECTED,
OBJECT ID = *objectid***

Explanation
The time stamp of a change non-SNA status command request is earlier than the last time the status was changed for the resource, denoted by its object identifier. This is reported by the DUIFECDS method, which is run to make the change. This message is similar to DUI4225E; for this message, the RODM object ID of the object whose DisplayStatus field cannot be changed is given because a query of the MyName field failed.

Message Variables

objectid
Specifies the RODM ObjectID.

System action
The status change is discarded; processing continues.

Operator response
Notify the system programmer.

System programmer response
This can happen if alerts are received from the network that have earlier time stamps than an alert that previously changed the status of a resource. If you feel you have received this message in error, contact IBM Software Support for assistance.

**DUI4219E MYNAME ATTRIBUTE DOES NOT
START WITH A DOMAIN
IDENTIFIER**

Explanation
The MyName attribute of a RODM object is expected to contain a domain identifier as a prefix, but does not.

System action
This error occurs during the parsing of a major vector to determine a resource status change. The major vector is discarded, processing continues.

Operator response
Notify the system programmer.

System programmer response
Ensure that the non-SNA domain definitions in RODM are correct. See the output logs for more information about the object in error.

If you are using your own alert processor, the alert processor might be returning incorrect candidate names for the resource. Contact IBM Software Support for assistance.

**DUI4220E UNKNOWN ALERT TYPE
REPORTED FOR ELEMENT
DOMAIN *emdomain***

Explanation
The status of an alert major vector cannot be translated into a valid DisplayStatus value.

Message Variables

emdomain

Specifies the Element Management Domain identifier.

System action

The status change is discarded; processing continues.

Operator response

Notify the system programmer.

System programmer response

An alert was received with an alert code that cannot be translated by either the IBM or USR status translation tables. See the output logs for more information about the alert. If the alert status is not translated by the IBM translation table and you expect the alert status to be translated by the USR translation table, correct the USR table. If you expect the status of this alert to be translated by the IBM translation table, contact IBM Software Support.

DUI4221E A MAJOR VECTOR SUBVECTOR IS NOT VALID

Explanation

An alert or resolution major vector subvector had either an incorrect length, or the subfields within the vector were incorrect. This occurred during the parsing of the major vector.

System action

The alert or resolution major vector is discarded; processing continues.

Operator response

Notify the system programmer.

System programmer response

An erroneous alert was received. More information concerning the subvector is written to the output logs. Ignore or correct the alert if possible.

DUI4223E DBSERVER RECEIVED AN UNEXPECTED REQUEST FROM A DATA SERVER

Explanation

The DataBase Server subtask of GMFHS received a function request from a Graphic Data Server that it did not understand.

System action

The request is ignored; processing continues.

Operator response

Notify the system programmer.

System programmer response

More information concerning the unexpected request is written to the GMFHS output logs. This is probably because of an error in the data server. Contact IBM Software Support for assistance.

DUI4224E AN RCMGR GENERAL ERROR HAS OCCURRED, ERROR CODE *errorcode*

Explanation

A general error has occurred during normal operation of the RCMGR task of GMFHS. The error is not related to a specific Aggregate_Collection_Class or NetView_View_Collection_Class object in RODM.

Message Variables***errorcode***

A numeric code that indicates the type of error. Additional information related to the specific error is written to the RCMGR output file (to the CNMN DD from the GMFHS startup procedure, the GTF output file, the internal trace file, or any combination of these three files depending on the PRINT options that have been requested on the GMFHS TRACE command). The error codes are:

16

A RODM Query Entity Structure function failed during an attempt to delete an object from RODM. Additional information on this failure is logged following this message in the RCMGR output file. This information includes a dump of the function block and response block (if available).

17

A RODM Query Field function failed during an attempt to delete an object from RODM. Additional information on this failure is logged following this message in the RCMGR output file. This information includes a dump of the function block and response block (if available).

18

A RODM Trigger Unlink function failed during an attempt to delete an object from RODM. Additional information on this failure is logged following this message in the RCMGR output file. This information includes a dump of the

function block and response block (if available).

19

A RODM DeleteObject function failed during an attempt to delete an object from RODM. Additional information on this failure is logged following this message in the RCMGR output file. This information includes a dump of the function block and response block (if available).

66

A RODM Query Field function failed for the MyObjectChildren field of a class from an NMC wizard QUERY request. Additional information on this failure is logged following this message in the RCMGR output file. This information includes a dump of the function block and response block (if available).

67

A RODM Query Entity Structure function failed for the class from an NMC wizard QUERY request. Additional information on this failure is logged following this message in the RCMGR output file. This information includes a dump of the function block and response block (if available).

68

A RODM Query Multiple Subfields function failed for the class/object/field from an NMC wizard QUERY request. Additional information on this failure is logged following this message in the RCMGR output file. This information includes a dump of the function block and response block (if available).

System action

The RCMGR task ends, forcing GMFHS to end.

Operator response

Notify the system programmer.

System programmer response

Locate the additional information in the RCMGR output file. In most cases, the error is accompanied by a RODM return and reason code for a failure on a RODM object or class. These errors can occur as a result of errors with the GMFHS data model or incorrectly defined Network_View_Collection_Class or Aggregate_Collection_Class objects. Use the logged information as an aid in resolving the problem with RODM.

**DUI4225E STATUS CHANGE REJECTED,
 RESOURCE = *resource***

Explanation

The time stamp of a change non-SNA status command request is earlier than the last time the status was changed for the resource, denoted by its resource name. This is reported by the DUIFECDS method, which is run to make the change. This message is similar to DUI4218E.

Message Variables

resource

Specifies the resource on which the status change failed.

System action

The status change is ignored; processing continues.

Operator response

Notify the system programmer.

System programmer response

This can happen if alerts are received from the network that have earlier time stamps than an alert that previously changed the status of a resource. If you feel you have received this message in error, contact IBM Software Support for assistance.

**DUI4226E ELEMENT MANAGER COMMAND
 FAILED. DOMAIN NOT FOUND FOR
 TARGET RESOURCE**

Explanation

The RODM resource which is the target of an element management system command is missing a RODM domain object link. This link is needed to determine where the element management system that executes the command exists.

System action

The command is ignored; processing continues.

Operator response

Notify the system programmer.

System programmer response

Check the command target object in RODM to determine why it is not linked with a domain object. If you feel you have received this message in error, contact IBM Software Support for assistance.

**DUI4227E RODM QUERY FAILURE IN
 NETCMD**

Explanation

The NETCMD subtask reported an error while querying an object in RODM

System action

The command is ignored; processing continues.

Operator response

Notify the system programmer.

System programmer response

Look in the GMFHS output log for additional information about the type of query failure. Contact IBM Software Support for assistance.

DUI4228E ELEMENT MANAGER COMMAND TARGET IS A DOMAIN

Explanation

The target of an element management system command is the management system domain; this is not allowed.

System action

The command is ignored; processing continues.

Operator response

Notify the system programmer.

System programmer response

See the GMFHS output log for additional information about the domain in error. Contact IBM Software Support for assistance.

DUI4229E NETCMD ERROR QUERYING TARGET RESOURCE

Explanation

Either the display resource name or generic command RODM data type is incorrect for the target resource. Generic commands can be retrieved from either the target resource, or from the target resources domain object.

System action

The command is ignored, processing continues.

Operator response

Notify the system programmer.

System programmer response

Verify that the resource definition file loads without error. The field in error is the DisplayResourceName field or one of the generic command text fields, and the error detected indicates that the field type of the field in error is incorrect. Contact IBM Software Support for assistance.

DUI4230E UNKNOWNTHRESHOLD FIELD MISSING FROM GLOBAL AGGREGATE CLASS

Explanation

The UnknownThreshold field is not defined on the Global_Aggregation_Parameters_Class.

System action

The data server request for this unknown threshold fails; processing continues.

Operator response

Notify the system programmer.

System programmer response

Check the RODM and GMFHS output logs. Verify that the resource definition file loads without error. Contact IBM Software Support for assistance.

DUI4231E FIND OF RODM OBJECT FOR *myname* FAILED

Explanation

No RODM object can be found with a MyName field value that matches a CP resource name in a DOMP010 protocol command response. The status provided in the response for that component is discarded.

Message Variables

myname

RODM object for which the search failed.

System action

Processing continues.

Operator response

Notify the system programmer.

System programmer response

Verify that the resource definition file loads without error. Contact IBM Software Support for assistance.

**DUI4235E NOTIFICATION METHOD ON THE
field FIELD OF object FAILED
AFTER FIELD VALUE CHANGED TO
value**

Explanation

The task changed the value of the indicated field of the named object but the reason code from the RODM change request is in the range used by the EKGNOTF method to report a failure. The field value has been changed, but notifications of this change were not sent to subscribers.

Message Variables**field**

Specifies which field was changed.

object

Specifies the object that the field is part of.

value

Specifies the value to which field was changed.

System action

Processing continues.

Operator response

Notify the system programmer.

System programmer response

More information about the query failure is written in the output logs. Contact IBM Software Support for assistance.

**DUI4237E LIST OF SUSPENDED RESOURCES
TOO LARGE TO SEND TO
WORKSTATION. ONLY PARTIAL
LIST WAS SENT**

Explanation

The List Suspended Resources request resulted in a response that contained too much data. The list of resources has been truncated.

System action

Processing continues.

**DUI4238E WARNINGS LOGGED BY THE
METHOD: CHECK RODM LOG FOR
MORE INFORMATION**

Explanation

The NETCMD subtask was performing a List Suspended Resources or Aggregation Update request,

and one of the RODM methods used to complete the request failed.

System action

Processing continues.

Operator response

Notify the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS and RODM output logs. Contact IBM Software Support for more information.

**DUI4239E RODM REQUEST FAILED:
SLOW/NO RESPONSE**

Explanation

The NETCON subtask has made a RODM request, and RODM response came back after a timeout or did not come back at all.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

See the *IBM Z NetView Troubleshooting Guide* for more information. More information regarding the failure is written in the GMFHS and RODM output logs. Contact IBM Software Support for assistance.

**DUI4240E ERROR TRIGGERING RESOURCE
TYPE PROFILE UPDATE METHOD**

Explanation

The NETCMD subtask received an error while attempting to trigger an aggregation class profile update method.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS and RODM output logs. Contact IBM Software Support for more information.

DUI4246E RODM REQUEST FAILED: RODM SETUP INCORRECT

Explanation

The NETCON subtask has made a RODM request, and RODM response indicated a failure because of a RODM installation or customization error.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

See the *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide* for more information. More information regarding the failure is written in the GMFHS and RODM output logs. Contact IBM Software Support for assistance.

DUI4248E THE GET AGGREGATION PROFILE REPLY HAS TIMED OUT

Explanation

The NETCMD subtask was waiting for a RODM notification containing the information for the requested aggregation profile, which timed out. RODM did not return the reply for Get Aggregation Profile in the time allowed.

System action

Processing continues.

Operator response

Retry the aggregation profile command.

DUI4249E THE LIST SUSPENDED RESOURCES REPLY HAS TIMED OUT

Explanation

The NETCMD subtask was waiting for a RODM notification containing the information for the List Suspended Resources request, which timed out. The list of suspended resources might require more than one notification when a large number of resources are

suspended. One of the notifications was not returned in the time allowed. If any notifications are received, the partial list of suspended resources is displayed at the workstation.

System action

Processing continues.

Operator response

Retry the list suspended resources command.

DUI4251E ALERT PROCESSOR *alertp* OVERLAID WORKAREA 2 LENGTH

Explanation

The alert processor changed the length of the second work area supplied to it. This is not allowed. The alert associated with this error is dropped.

Message Variables

alertp

Specifies the alert processor.

System action

The alert is ignored, processing continues.

Operator response

Contact the system programmer.

System programmer response

If you are using the default alert processor (DUIFEDEF), this is an internal error. Contact IBM Software Support.

If you have supplied an alert processor, correct the alert processor. The work area is written to the GMFHS output logs.

DUI4252E COULD NOT QUERY THE *timestamp* TIMESTAMP SUBFIELD OF *object*

Explanation

The EVENTMGR subtask updated the DisplayStatus field of the indicated object but cannot successfully query the time stamp subfield to provide a system time for the event report that is logged.

Message Variables

timestamp

Name of the timestamp subfield.

object

Object for which query attempted.

System action

The DisplayStatus update is ignored, processing continues.

Operator response

Contact the system programmer.

System programmer response

Contact IBM Software Support for assistance.

DUI4253E	TASK <i>sender</i> DISCARDING MESSAGE; MAXIMUM REACHED FOR TASK <i>receiver</i>
-----------------	--

Explanation

The number of messages queued to a given task has reached the maximum. The sending task discards the message.

Message Variables

sender

Identifies the GMFHS sending subtask.

receiver

Identifies the GMFHS receiving subtask.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

Contact IBM Software Support for assistance.

DUI4254E	AGGREGATION WARMSTART METHOD FAILED
-----------------	--

Explanation

The Aggregation Warmstart method, triggered by the NETCON subtask, did not run successfully.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS and RODM output logs. Contact IBM Software Support for assistance.

DUI4255E	GLOBAL_NLS_PARAMETERS_CLASSES ATTRIBUTE VALUE ERROR ATTRIBUTE: <i>attribute</i> VALUE: <i>value</i>
-----------------	--

Explanation

The value on one of the Global_NLS_Parameters_Class attributes is not valid.

Message Variables

attribute

Specifies the RODM field (attribute).

value

Specifies the RODM field value in error.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

Correct the RODM field and restart GMFHS.

DUI4256E	CONFIGURATION INITIALIZATION FAILED DUE TO ERROR IN RODM
-----------------	---

Explanation

The RODM data type of a field in the Global_NLS_Parameters_Class is not of the expected type for the field.

System action

Network Configuration will fail, GMFHS processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS and RODM output logs. Contact IBM Software Support for assistance.

DUI4257E	UNEXPECTED DATA TYPE, FIELD = <i>field</i>
-----------------	---

Explanation

Issued in association with other messages that indicate the termination of configuration initialization. This message indicates that the data type of the field is not the data type expected.

Message Variables

field

Data type of field which received bad data.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS and RODM output logs. Contact IBM Software Support for assistance.

DUI4258E MISSING FIELD = *field*

Explanation

Issued in association with other messages that indicate the termination of configuration initialization. This message indicates that the field specified by *field* is missing from the class definition.

Message Variables

field

Field missing from class definition.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS and RODM output logs. Contact IBM Software Support for assistance.

DUI4259E NMG CLASS DEFINITION ERROR

Explanation

While parsing the data from an NMG Class object, the network configuration subtask determined that the object contains erroneous data.

System action

Network Configuration will fail, GMFHS processing continues.

Operator response

Contact the system programmer.

System programmer response

A following message has more information about the type of error. More information regarding the failure is written in the GMFHS and RODM output logs. Contact IBM Software Support for assistance.

DUI4260E DOMAIN OBJECT INFORMATION MISSING

Explanation

While parsing the data for SNA or non-SNA domain Class objects, the network configuration subtask determined that an object or fields on an object are missing. This can be the MyObjectChildren field on the class object, or required fields within the child domain object.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

A following message has more information about the type of error. More information regarding the failure is written in the GMFHS and RODM output logs. Contact IBM Software Support for assistance.

DUI4261E DOMAIN OBJECT DEFINITION ERROR

Explanation

While parsing the data for SNA or non-SNA domain Class objects, the network configuration subtask determined that a field on the object has an incorrect data type.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

A following message has more information about the type of error. More information regarding the failure is written in the GMFHS and RODM output logs. Contact IBM Software Support for assistance.

DUI4264E	NMG OBJECT INFORMATION MISSING
-----------------	---------------------------------------

Explanation

While parsing the data for NMG Class objects, the network configuration subtask determined that an object or fields on an object are missing.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

A following message has more information about the type of error. More information regarding the failure is written in the GMFHS and RODM output logs. Contact IBM Software Support for assistance.

DUI4265E	STATUS SOLICITATION FAILED FOR RESOURCE <i>domain.component</i>
-----------------	--

Explanation

The network configuration subtask is reporting that a status solicitation command to the element management system at *domain* failed for the specified *component*.

Message Variables

domain

Specifies the domain to which the command was issued.

component

Specifies the component, or resource, to which the command was issued.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

A following message has more information about the type of error. More information regarding the failure is written in the GMFHS and RODM output logs. Ensure that the element manager on the remote system is operational.

DUI4266E	NMG ATTRIBUTE VALUE ERROR
-----------------	----------------------------------

Explanation

A field on an NMG class object has an unsupported value.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS and RODM output logs. Ensure that the element manager on the remote system is operational.

DUI4267E	ATTRIBUTE VALUE ENCOUNTERED IN SNA_DOMAIN
-----------------	--

Explanation

A field on a SNA Domain Class object has an incorrect value.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS and RODM output logs. Correct the problem and reload the information in RODM.

DUI4268E	AGGREGATION WARMSTART METHOD COMPLETED WITH WARNINGS
-----------------	---

Explanation

The aggregation warmstart method issued a warning return code when invoked by the network configuration subtask.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS and RODM output logs. If the source of the error cannot be determined from the output logs, contact IBM Software Support for assistance.

**DUI4269E UNSUPPORTED PROTOCOL
COMBINATION -- OST AND
DOMP010**

Explanation

The specified protocol combination of operator station task (OST) and DOMP010 are not supported on an NMG and domain pairing.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

Correct the protocol mismatch and reload the information in RODM.

**DUI4270E ATTRIBUTE VALUE ERROR
ENCOUNTERED IN
NON_SNA_DOMAIN**

Explanation

A field on a non-SNA domain class object has an incorrect value.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS and RODM output logs. Correct the problem and reload the information in RODM.

**DUI4271E MANAGER STATUS MONITOR
SETUP FAILED (*returncode/
reasoncode*). NO MANAGER
STATUS WILL BE REPORTED**

Explanation

The NETCON manager status monitor function was not able to install notification methods. Manager status cannot be reported.

Message Variables***returncode***

Specifies the RODM return code.

reasoncode

Specifies the RODM reason code.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS and RODM output logs. Correct the problem and reload the information in RODM. Contact IBM Software Support for assistance.

**DUI4272E MANAGER STATUS MONITOR
FIELD CHANGE FAILED
(*returncode/reasoncode*). FIELD:
field, CLASS: *class***

Explanation

An attempt was made to change a field related to the manager status monitor function, but the change failed.

Message Variables***returncode***

Specifies the RODM return code.

reasoncode

Specifies the RODM reason code.

field

Specifies the field for which RODM change was requested.

class

Specifies the class for which RODM change was requested.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS and RODM output logs. Correct the problem and reload the information in RODM. Contact IBM Software Support for assistance.

DUI4273E	EMDOMAIN <i>emdomain</i> WAS DUPLICATED IN THE FOLLOWING NON-SNA DOMAIN OBJECTS:
-----------------	---

Explanation

A duplicate EMDomain value was detected in another non-SNA object EMDomain field, or in a SNA Domain object's MyName field.

Message Variables

emdomain
EMDomain name.

System action

Message DUI4274 is issued after this message once for every duplicate object. Processing continues.

Operator response

Contact the system programmer.

DUI4274E	--DUPLICATED NON_SNA_DOMAIN OBJECT: <i>object</i>
-----------------	--

Explanation

A list of the duplicate domain objects MyName field.

Message Variables

object
SNA or non-SNA domain object name.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

Correct the duplicate EMDomain field problem and reload the information in RODM. The EMDomain field MUST be unique among the individual domains.

DUI4275E	SET INITIAL OR SET UNKNOWN STATUS METHOD COMPLETED WITH WARNINGS
-----------------	---

Explanation

Either DUIFFIRS or DUIFFSUS completed with a warning return code.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS and RODM output logs. If the source of the error cannot be determined from the output logs, contact IBM Software Support for assistance.

DUI4276E	SET INITIAL STATUS METHOD COMPLETED WITH ERRORS
-----------------	--

Explanation

DUIFFIRS completed with an error return code.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS and RODM output logs. If the source of the error cannot be determined from the output logs, contact IBM Software Support for assistance.

DUI4277E	COMMAND BUFFER FOR ELEMENT MANAGER COMMANDS IS FULL
-----------------	--

Explanation

The NETCMD subtask cannot add the command to its internal command buffer because the buffer is full. The command is discarded.

System action

Processing continues.

DUI4278E	ALL TRANSPORT CORRELATORS FOR AN ELEMENT MANAGER
-----------------	---

COMMAND ARE CURRENTLY IN USE

Explanation

The maximum number of command blocks have been allocated.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

Contact IBM Software Support for additional information.

**DUI4279E OBJECT ATTRIBUTE WRONG TYPE
- EXPECTED *type1* - FOUND *type2***

Explanation

The NETCMD subtask received an unexpected data type when attempting to query an object field.

Message Variables

type1

Expected field type.

type2

Found field type.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS and RODM output logs. If the source of the error cannot be determined from the output logs, contact IBM Software Support for assistance.

**DUI4280E DOMAIN *domain* ENCOUNTERED
AN ERROR CHANGING THE
DISPLAYSTATUS TO *displaystatus*.**

Explanation

The NETCMD subtask attempted to change the DisplayStatus field value of a Non_SNA_Domain_Class object to reflect the status of its gateway communications session. The attempt failed, or it was

successful, but a warning condition is reported from RODM.

Message Variables

domain

Specifies the domain ID.

displaystatus

Specifies the new DisplayStatus value.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS and RODM output logs. If the source of the error cannot be determined from the output logs, contact IBM Software Support for assistance.

**DUI4281E UNABLE TO ACQUIRE THE
DISPLAY NAME FROM RODM**

Explanation

NECMD was not able to get the value of a DisplayResourceName field; the field was not found on the object.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS and RODM output logs. If the source of the error cannot be determined from the output logs, contact IBM Software Support for assistance.

**DUI4282E NATIVE COMMAND TEXT FOR AN
ELEMENT MANAGER COMMAND
NOT FOUND IN RODM**

Explanation

The command text for an element management system native command cannot be found on the domain or class object in RODM.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS and RODM output logs. If the source of the error cannot be determined from the output logs, contact IBM Software Support for assistance.

DUI4283E	THE REQUESTED ELEMENT MANAGER COMMAND SERVICE TYPE IS NOT SUPPORTED, TYPE <i>type</i>
-----------------	--

Explanation

The NETCMD subtask received a command request from a data server that has an unsupported command request type.

Message Variables***type***

Command type.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS and RODM output logs. This is an internal error. Contact IBM Software Support for assistance.

DUI4284E	GATEWAY NAME NOT FOUND OR INCORRECT FOR DOMAIN <i>domain</i>.
-----------------	--

Explanation

The NETCMD subtask found that an element management system gateway name was not found or was unusable for this domain.

Message Variables***domain***

Domain name.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

Correct the gateway name in RODM and reload the RODM information. Contact IBM Software Support for assistance.

DUI4285E	EMDOMAIN NAME NOT FOUND OR INCORRECT
-----------------	---

Explanation

The NETCMD subtask found that an element management system EMDomain name was not found or was unusable for this domain.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

Correct the EMDomain name in RODM and reload the RODM information. Contact IBM Software Support for assistance.

DUI4286E	TARGET RESOURCE OBJECT FOR AN ELEMENT MANAGER COMMAND NOT DEFINED IN RODM
-----------------	--

Explanation

The target resource object cannot be found in RODM.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

Correct the target resource name or add the target resource object to RODM and reload RODM. Contact IBM Software Support for assistance.

DUI4287E	TARGET RESOURCE OBJECT FOR AN ELEMENT MANAGER COMMAND IS NOT DEFINED CORRECTLY IN RODM
-----------------	---

Explanation

The target resource object is not defined correctly in RODM.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

Correct the target resource object entry in RODM and reload RODM. Contact IBM Software Support for assistance.

**DUI4288E COMMAND TEXT SUBSTITUTION
PARAMETER IS NOT SUPPORTED**

Explanation

The text of a command that is about to be sent to an element management system by the NETCMD task contains an unsupported substitution variable.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS output logs. Use this information to determine what object in RODM contains the failing command text. Correct the substitution parameter and reload the information in RODM.

**DUI4289E THE SESSION WITH THE ELEMENT
MANAGER GATEWAY IS NOT
ACTIVE**

Explanation

The NETCMD subtask is attempting to route a command to an element management system and there is no active session with the element manager gateway.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

Attempt to determine from other messages what caused the session to be lost with the element manager gateway. Reestablish the session.

**DUI4290E THE SESSION WITH THE ELEMENT
MANAGER GATEWAY WAS LOST
BEFORE COMMAND RESPONSE
RECEIVED**

Explanation

An element management system command was discarded because of the session being lost with the element manager gateway.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

Attempt to determine from other messages what caused the session to be lost with the element manager gateway. Reestablish the session.

**DUI4291E ELEMENT MANAGER COMMAND
NOT ALLOWED ON THIS
RESOURCE**

Explanation

The NETCMD subtask has attempted to send a command to the element management system for a particular resource, but the command is not valid for this resource.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

Use the GMFHS output logs and other GMFHS messages to determine why the command is not valid for this resource. Contact IBM Software Support for assistance.

DUI4292E **ELEMENT MANAGER COMMAND
RESPONSE TYPE MISMATCH.
EXPECTED *expectedtype*, GOT
*receivedtype***

Explanation

The element management system response for a command that was issued by the NETCMD subtask did not contain the expected command type.

Message Variables

expectedtype

The expected command type.

receivedtype

The received command type.

System action

The command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

Contact IBM Software Support for assistance.

DUI4293E **ELEMENT MANAGER COMMAND
RESPONSE DID NOT CONTAIN
RESPONSE KEYWORD**

Explanation

The element management system response for a command that was issued by the NETCMD subtask did not contain the expected response keyword.

System action

The command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

Contact IBM Software Support for assistance.

DUI4294E **COMMAND RESPONSE SEQUENCE
NUMBER INCORRECT. GOT
receivedsq, EXPECTED *expectedsq***

Explanation

The element management system response for a command that was issued by the NETCMD subtask did not contain the expected sequence number value.

Message Variables

receivedsq

Received sequence number.

expectedsq

Expected sequence number.

System action

The command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

Contact IBM Software Support for assistance.

DUI4295E **SEQUENCE NUMBER NOT
PRESENT IN ELEMENT MANAGER
COMMAND RESPONSE**

Explanation

The element management system response for a command that was issued by the NETCMD subtask did not contain any sequence number value.

System action

The command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

Contact IBM Software Support for assistance.

DUI4296E **DISPLAYSTATUS COMMAND
DOESN'T CONTAIN ST = KEYWORD**

Explanation

The element management system response for a command that was issued by the NETCMD subtask did not contain a status value.

System action

The command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

Contact IBM Software Support for assistance.

**DUI4297E STATUS (*status*) FROM ELEMENT
MANAGER COMMAND RESPONSE
CANNOT BE CONVERTED****Explanation**

The element management system response for a command that was issued by the NETCMD subtask did not contain a status value that can be converted to NetCenter status.

Message Variables***status***

Received status.

System action

The command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

Contact IBM Software Support for assistance.

**DUI4298E STATUS (*status*) FROM ELEMENT
MANAGER COMMAND RESPONSE
IS NOT VALID****Explanation**

The element management system response for a command that was issued by the NETCMD subtask did not contain a valid status value.

Message Variables***status***

Received status.

System action

The command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

Contact IBM Software Support for assistance.

**DUI4299E TIMESTAMP FROM ELEMENT
MANAGER COMMAND RESPONSE
IS NOT PRESENT OR NOT VALID****Explanation**

The element management system response for a command that was issued by the NETCMD subtask did

not contain a valid time stamp, or the time stamp was not present.

System action

The command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

Contact IBM Software Support for assistance.

**DUI4300E REASONCODE FROM ELEMENT
MANAGER COMMAND RESPONSE
IS NOT PRESENT OR NOT VALID****Explanation**

The element management system response for a command that was issued by the NETCMD subtask did not contain a valid reasoncode, or the reasoncode was not present.

System action

The command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

Contact IBM Software Support for assistance.

**DUI4301E PROTOCOLCODE FROM ELEMENT
MANAGER COMMAND RESPONSE
IS NOT VALID****Explanation**

The element management system response for a command that was issued by the NETCMD subtask did not contain a valid protocolcode.

System action

The command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

Contact IBM Software Support for assistance.

**DUI4302E COMMAND STATUS FROM
ELEMENT MANAGER COMMAND**

**RESPONSE IS NOT PRESENT OR
NOT VALID**

Explanation

The element management system response for a command that was issued by the NETCMD subtask did not contain a valid command status, or the command status was not present.

System action

The command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

Contact IBM Software Support for assistance.

DUI4303E	YEAR PORTION OF TIMESTAMP FROM ELEMENT MANAGER COMMAND RESPONSE IS NOT VALID, YEAR <i>year</i>
-----------------	---

Explanation

The element management system response for a command that was issued by the NETCMD subtask did not contain a time stamp with a valid year.

Message Variables

year

Specifies the year the response was received.

System action

The command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

Contact IBM Software Support for assistance.

DUI4304E	MONTH PORTION OF TIMESTAMP FROM ELEMENT MANAGER COMMAND RESPONSE IS NOT VALID, MONTH <i>month</i>
-----------------	--

Explanation

The element management system response for a command that was issued by the NETCMD subtask did not contain a time stamp with a valid month.

Message Variables

month

Specifies the month the response was received.

System action

The command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

Contact IBM Software Support for assistance.

DUI4305E	DAY PORTION OF TIMESTAMP FROM ELEMENT MANAGER COMMAND RESPONSE IS NOT VALID, DAY <i>day</i>
-----------------	--

Explanation

The element management system response for a command that was issued by the NETCMD subtask did not contain a time stamp with a valid day.

Message Variables

day

Specifies the day the response was received.

System action

The command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

Contact IBM Software Support for assistance.

DUI4306E	HOURLY PORTION OF TIMESTAMP FROM ELEMENT MANAGER COMMAND RESPONSE IS NOT VALID, HOUR <i>hour</i>
-----------------	---

Explanation

The element management system response for a command that was issued by the NETCMD subtask did not contain a time stamp with a valid hour.

Message Variables

hour

Specifies the hour the response was received.

System action

The command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

Contact IBM Software Support for assistance.

DUI4307E **MINUTES PORTION OF
TIMESTAMP FROM ELEMENT
MANAGER COMMAND RESPONSE
IS NOT VALID, MINUTES *minutes***

Explanation

The element management system response for a command that was issued by the NETCMD subtask did not contain a time stamp with a valid minute.

Message Variables***minutes***

Specifies the minute the response was received.

System action

The command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

Contact IBM Software Support for assistance.

DUI4308E **SECONDS PORTION OF
TIMESTAMP FROM ELEMENT
MANAGER COMMAND RESPONSE
IS NOT VALID, SECONDS *seconds***

Explanation

The element management system response for a command that was issued by the NETCMD subtask did not contain a time stamp with a valid seconds.

Message Variables***seconds***

Specifies the second the response was received.

System action

The command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

Contact IBM Software Support for assistance.

DUI4309E **UNABLE TO COMPLETE A
SEGMENTED COMMAND TO
*domain***

Explanation

The element management system response for a command segment indicates that the command cannot be completed. The entire command is discarded.

Message Variables***domain***

Specifies the destination element management system domain.

System action

The command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

Contact IBM Software Support for assistance.

DUI4310E **AGGREGATION PROFILE
NOTIFICATION NOT CORRELATED
-- CHECK FOR COMMAND
TIMEOUT**

Explanation

The NETCMD subtask received a response for an aggregation profile request that cannot be correlated to any outstanding commands in its command list. This may be because of a timeout, which caused the command to be removed from the internal command list.

System action

The command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

If this happens persistently, contact IBM Software Support for assistance. Otherwise, retry the command.

DUI4311E **NETCMD ERROR TRIGGERING
UPDATE USER STATUS METHOD**

Explanation

The NETCMD subtask received an error when attempting to trigger the DUIFCUUS (Update User Status) method.

System action

The update is ignored, processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS and RODM output logs. Contact IBM Software Support for assistance.

DUI4312E	NO RESPONSE TO SESSION PROTOCOL SET TIME COMMAND FOR DOMAIN <i>domain</i>
-----------------	--

Explanation

The NETCMD subtask did not receive a response to a set time command from the element management system. The command has timed out.

Message Variables

domain

Specifies the destination element management system domain.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

Ensure that the element management system for the gateway uses the DOMS010 session protocol. Make sure that the element management system is active. If the problem persists for this domain, contact IBM Software Support for assistance.

DUI4313E	GATEWAY DOMAIN NAME CANNOT BE LOCATED FOR ELEMENT MANAGER COMMAND PROCESSING
-----------------	---

Explanation

The NETCMD subtask cannot find the gateway domain name for the element management system that this

command is being routed to, or from which the response has come.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

This is an internal error. Contact IBM Software Support for assistance.

DUI4314E	COMMAND TYPE <i>type</i> WITH PASSTHRU PRESENTATION PROTOCOL IS NOT ALLOWED
-----------------	--

Explanation

The NETCMD subtask cannot find the gateway domain name for the element management system that this command is being routed to, or from which the response has come.

Message Variables

type

Specifies the command type. 1 indicates the Generic command type

System action

The command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

Generic commands are not valid to be sent using the PASSTHRU presentation protocol. Change the presentation protocol for the element management system, or send a resource specific or native command instead.

DUI4315E	COMMAND BLOCK ERROR, UNKNOWN DOMAIN OR NMG OBJECT
-----------------	--

Explanation

The NETCMD subtask cannot find either the domain name or the NMG agent name for the transport of the command.

System action

The command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

This is an internal error. Contact IBM Software Support for assistance.

DUI4316E COMMAND BLOCK ERROR, DOMAIN NAME NOT VALID

Explanation

The NETCMD subtask found a domain name that is not valid while building a command.

System action

The command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

This is an internal error. Contact IBM Software Support for assistance.

DUI4317E PRESENTATION PROTOCOL TYPE IS NOT VALID, TYPE=*type*

Explanation

The NETCMD subtask found that the presentation protocol is not of a supported type.

Message Variables

type

Specifies the presentation protocol type.

System action

The command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

This is an internal error. Contact IBM Software Support for assistance.

DUI4318E %RESOURCE% SUBSTITUTION FAILED. COULD NOT PARSE RESOURCE FROM RESOURCE STRING *string*

Explanation

The NETCMD subtask cannot create a resource name for the %resource% substitution variable.

Message Variables

string

Specifies the resource string.

System action

The command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

This is an internal error. Contact IBM Software Support for assistance.

DUI4319E %TYPE% SUBSTITUTION FAILED. COULD NOT GET TYPE FROM COMMAND BLOCK

Explanation

The NETCMD subtask cannot find the %type% substitution variable in the command block.

System action

The command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

This is an internal error. Contact IBM Software Support for assistance.

DUI4320E %APPL% SUBSTITUTION FAILED. COULD NOT GET TRANSACTION PROGRAM FROM COMMAND BLOCK

Explanation

The NETCMD subtask cannot find the %appl% substitution variable in the command block.

System action

The command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

This is an internal error. Contact IBM Software Support for assistance.

DUI4321E	%SPNAME% SUBSTITUTION FAILED. COULD NOT GET NMG NAME FROM COMMAND BLOCK
-----------------	--

Explanation

The NETCMD subtask cannot find the %sname% substitution variable in the command block.

System action

The command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

This is an internal error. Contact IBM Software Support for assistance.

DUI4322E	CP NAME IN COMMAND RESPONSE DOES NOT MATCH NAME IN REQUEST
-----------------	---

Explanation

There is a name in the list of names provided by the CP keyword of a response that does not match any of the names that were given on the command request.

System action

The command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS output logs. Contact IBM Software Support for assistance.

DUI4323E	TIMESTAMP IN COMMAND RESPONSE NOT FORMATTED CORRECTLY
-----------------	--

Explanation

The time stamp provided by the TM keyword of a response is not formatted correctly.

System action

The command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS output logs. Contact IBM Software Support for assistance.

DUI4324E	REASON IN COMMAND RESPONSE NOT FORMATTED CORRECTLY
-----------------	---

Explanation

The reason provided by the RN keyword of a response is not formatted correctly.

System action

The command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS output logs. Contact IBM Software Support for assistance.

DUI4325E	PROTOCOL IN COMMAND RESPONSE NOT FORMATTED CORRECTLY
-----------------	---

Explanation

The protocol provided by the PT keyword of a response is not formatted correctly.

System action

The command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS output logs. Contact IBM Software Support for assistance.

DUI4326E	SEQUENCE NUMBER (<i>seqnumber</i>) IN COMMAND RESPONSE NOT FORMATTED CORRECTLY
-----------------	---

Explanation

The sequence number provided by the SQ keyword of a response is not formatted correctly or has an out of sequence number.

System action

The command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS output logs. Contact IBM Software Support for assistance.

**DUI4327E RESPONSE INDICATOR NOT
PRESENT IN COMMAND
RESPONSE**

Explanation

The response indicator RP was not sent in the command response.

System action

The command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS output logs. Contact IBM Software Support for assistance.

**DUI4328E RESPONSE TEXT DID NOT
CONTAIN A LEFT PARENTHESIS**

Explanation

The response text TX did not start with a left parenthesis.

System action

The command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS output logs. Contact IBM Software Support for assistance.

**DUI4329E STATUS IN COMMAND RESPONSE
NOT FORMATTED CORRECTLY**

Explanation

The status provided by the ST keyword of a response is not formatted correctly.

System action

The command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS output logs. Contact IBM Software Support for assistance.

**DUI4330E STATUS IN COMMAND RESPONSE
DID NOT HAVE A KNOWN VALUE**

Explanation

The status provided by the ST keyword of a response does not contain a recognized value.

System action

The command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS output logs. Contact IBM Software Support for assistance.

**DUI4331E DOMAIN IN COMMAND RESPONSE
NOT FORMATTED CORRECTLY**

Explanation

The domain provided by the DM keyword of a response is not formatted correctly.

System action

The command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS output logs. Contact IBM Software Support for assistance.

DUI4332E EXTRANEIOUS DATA FOUND IN THE COMMAND RESPONSE

Explanation

A command response had additional data that was unnecessary.

System action

The command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS output logs. Contact IBM Software Support for assistance.

DUI4333E ERROR RETRIEVING INITIAL CLASS AND FIELD IDENTIFIER INFORMATION FROM RODM

Explanation

A class or field identifier that is used by GMFHS cannot be retrieved from RODM at GMFHS initialization.

System action

If the class or field is a critical class or field, GMFHS ends. Otherwise, processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS output logs. Contact IBM Software Support for assistance.

DUI4334E CRITICAL CLASS INFORMATION CANNOT BE RETRIEVED – GMFHS TERIMATING

Explanation

This message appears in association with DUI4333E. It indicates that critical class information cannot be retrieved.

System action

GMFHS ends.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS output logs. Contact IBM Software Support for assistance.

DUI4335E NON-CRITICAL CLASS INFORMATION CANNOT BE RETRIEVED – GMFHS TERMINATING

Explanation

This message appears in association with DUI4333E. It indicates that non-critical class information cannot be retrieved.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS output logs. Contact IBM Software Support for assistance.

DUI4336E CRITICAL FIELD INFORMATION CANNOT BE RETRIEVED

Explanation

This message appears in association with DUI4333E. It indicates that critical filed information cannot be retrieved.

System action

GMFHS ends.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS output logs. Contact IBM Software Support for assistance.

DUI4337E	NON-CRITICAL FIELD INFORMATION CANNOT BE RETRIEVED
-----------------	---

Explanation

This message appears in association with DUI4333E. It indicates that non-critical field information cannot be retrieved.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS output logs. Contact IBM Software Support for assistance.

DUI4338E	ELEMENT MANAGER SESSION ESTABLISHMENT REQUEST TIMED OUT FOR DOMAIN <i>domain</i>
-----------------	---

Explanation

The NETCMD subtask did not receive a response to a session protocol request within a specified period of time.

Message Variables

domain

Specifies the domain to which the command was sent.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS output logs. Contact IBM Software Support for assistance.

DUI4339E	EXCEPTION VIEW REQUEST COULD NOT BE PROCESSED
-----------------	--

Explanation

A method failed during an exception view request.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS and RODM output logs. Contact IBM Software Support for assistance.

DUI4340E	NETWORK VIEW REQUEST COULD NOT BE PROCESSED
-----------------	--

Explanation

A method failed during a Network view request.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS and RODM output logs. Contact IBM Software Support for assistance.

DUI4341E	UNABLE TO INVOKE METHOD <i>method</i>
-----------------	--

Explanation

This message appears with DUI4339E, DUI4340E, DUI4342E, DUI4343E, DUI4344E. This message indicates that the indicated method cannot be invoked.

Message Variables

method

Specifies the method that failed

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS and RODM output logs. Contact IBM Software Support for assistance.

DUI4342E FAST PATH VIEW REQUEST COULD NOT BE PROCESSED

Explanation

A method failed during a Fast Path view request.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS and RODM output logs. Contact IBM Software Support for assistance.

DUI4343E MORE DETAIL RESOURCE VIEW REQUEST COULD NOT BE PROCESSED

Explanation

A method failed during a More Detail Resource view request.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS and RODM output logs. Contact IBM Software Support for assistance.

DUI4344E GLOBAL FIND VIEW REQUEST COULD NOT BE PROCESSED

Explanation

A method failed during a Global Find view request.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS and RODM output logs. Contact IBM Software Support for assistance.

DUI4345E SESSION PROTOCOL RESPONSE NOT SUPPORTED

Explanation

The session protocol response is not supported for this type of domain session.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS and RODM output logs. Contact IBM Software Support for assistance.

DUI4346E START UPDATES REQUEST COULD NOT BE PROCESSED

Explanation

A method failed during a Start Updates view request.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS and RODM output logs. Contact IBM Software Support for assistance.

DUI4347E STOP UPDATES REQUEST COULD NOT BE PROCESSED

Explanation

A method failed during a Stop Updates view request.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS and RODM output logs. Contact IBM Software Support for assistance.

**DUI4348E NETWORK/MDR VIEW LIST
REQUEST COULD NOT BE
PROCESSED**

Explanation

A method failed during a Network/MDR view list request.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS and RODM output logs. Contact IBM Software Support for assistance.

**DUI4349E GET VIEW (BY RESOURCE LIST)
REQUEST COULD NOT BE
PROCESSED**

Explanation

A method failed during a Get View (by resource list) view request.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS and RODM output logs. Contact IBM Software Support for assistance.

**DUI4350E GET NAME MAP REQUEST COULD
NOT BE PROCESSED**

Explanation

A method failed during a Get Name Map request.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS and RODM output logs. Contact IBM Software Support for assistance.

**DUI4351E UNABLE TO RETRIEVE THE ID OF
THE *method* METHOD**

Explanation

An attempt to retrieve the id of the specified method failed.

Message Variables***method***

Specifies the method whose ID cannot be retrieved.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS and RODM output logs. Contact IBM Software Support for assistance.

**DUI4352E EXCEPTION VIEW REQUEST
COULD NOT BE PROCESSED**

Explanation

A method failed during an Exception view request.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS and RODM output logs. Contact IBM Software Support for assistance.

DUI4353E	NAME TO ID REQUEST COULD NOT BE PROCESSED
-----------------	--

Explanation

A method failed during a Name to ID request.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS and RODM output logs. Contact IBM Software Support for assistance.

DUI4354E	GET DRT REQUEST COULD NOT BE PROCESSED
-----------------	---

Explanation

A method failed during a Get Display Resource Type request.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS and RODM output logs. Contact IBM Software Support for assistance.

DUI4355E	SESSION RELEASE MISSING FOR GRAPHIC DATA SERVER LU <i>server</i>
-----------------	---

Explanation

A method failed during a Get Display Resource Type request.

Message Variables

server

Specifies the server for which the session release was not received.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

None; GMFHS will cleanup from the missing session release normally.

DUI4356E	CLOSE VIEW REQUEST COULD NOT BE PROCESSED
-----------------	--

Explanation

A method failed during a Close View request.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS and RODM output logs. Contact IBM Software Support for assistance.

DUI4357E	FAILURE RETRIEVING VIEW NOTIFICATION NEGATIVE ACK FROM DATA SERVER
-----------------	---

Explanation

A negative acknowledgment view notification from a data server cannot be retrieved from the View Manager task internal data queue.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

This is an internal error. Contact IBM Software Support for assistance.

DUI4358E	DATA SERVER LU NAME <i>lname</i> IS NOT KNOWN TO VIEW MANAGER SUBTASK
-----------------	--

Explanation

The data server specified by the luname is not currently in session with GMFHS.

Message Variables***luname***

Specifies the luname which cannot be found in the View Manager subtask list.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

This is probably because of a timing window in which the session was ended at the same time that a view notification request was issued. This message can be ignored.

DUI4359E	METHOD <i>method</i> ERROR (<i>returncode/reasoncode</i>), INVOKED FROM RESOURCE TRAITS MANAGER SUBTASK
-----------------	--

Explanation

The data server specified by the luname is not currently in session with GMFHS.

Message Variables***method***

Specifies the method returning the error.

returncode

Specifies the RODM return code.

reasoncode

Specifies the RODM reason code.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS and RODM output logs. Contact IBM Software Support for assistance.

DUI4360E	COMMAND BLOCK ERROR, UNKNOWN TRANSPORT TYPE
-----------------	--

Explanation

The NETCMD subtask has an incorrect transport protocol type in the saved command block.

System action

The command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

This is an internal error. Contact IBM Software Support for assistance.

DUI4361E	NEGATIVE PROTOCOL ACKNOWLEDGMENT FROM THE COS GATEWAY
-----------------	--

Explanation

A command sent to the COS gateway resulted in a negative protocol acknowledgment from the gateway.

System action

The command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS and RODM output logs. If the problem cannot be determined from this information, contact IBM Software Support for assistance.

DUI4362E	PPI TRANSPORT COMMAND RESPONSE FAILURE -- MAJOR VECTOR <i>vector</i> PARSING ERROR
-----------------	---

Explanation

A command response from the PPI transport did not contain a valid major vector.

Message Variables***vector***

Specifies the vector in error.

System action

The command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS and RODM output logs. If the problem cannot be determined from this information, contact IBM Software Support for assistance.

DUI4363E *command* **COMMAND FOR resource FROM subtask HAS TIMED OUT**

Explanation

A command response for the specific resource has timed out. The command response originated from the specific subtask.

Message Variables

command

Specifies the command that timed out.

resource

Specifies the resource on which the command was to execute.

subtask

Specifies the subtask from which the command response was sent.

System action

The command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS output logs. If the problem cannot be determined from this information, contact IBM Software Support for assistance.

DUI4364E *command* **COMMAND FOR DOMAIN domain FROM subtask HAS TIMED OUT**

Explanation

A command response for the specific domain has timed out. The command response originated from the specific subtask.

Message Variables

command

Specifies the command that timed out.

domain

Specifies the domain on which the command was to execute.

subtask

Specifies the subtask from which the command response was sent.

System action

The command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS output logs. If the problem cannot be determined from this information, contact IBM Software Support for assistance.

DUI4365E *command* **COMMAND FOR resource HAS TIMED OUT**

Explanation

A command response for the specific resource has timed out. No information about the originating task is provided.

Message Variables

command

Specifies the command that timed out.

resource

Specifies the resource on which the command was to execute.

System action

The command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS output logs. If the problem cannot be determined from this information, contact IBM Software Support for assistance.

DUI4366E **DOMAIN UNKNOWN -- EXECUTE CONFIG NETWORK COMMAND**

Explanation

The domain object for a command cannot be found. The Config Network command must be done whether

new domains have been added to RODM since the last time GMFHS has been started.

System action

The command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

Execute the CONFIG NETWORK command. If the problem for this domain persists, contact IBM Software Support.

DUI4367E COMMAND BLOCK ERROR, UNKNOWN TRANSPORT TYPE

Explanation

The NETCMD subtask has an incorrect transport protocol type in the saved command block.

System action

The command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

This is an internal error. Contact IBM Software Support for assistance.

DUI4368E RESOURCE TYPE PROFILE UPDATE METHOD FAILED

Explanation

The NETCMD subtask received an error from the aggregation profile update method.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS and RODM output logs. Contact IBM Software Support for more information.

DUI4369E PPI TRANSPORT COMMAND RESPONSE FAILURE -- MAJOR VECTOR *vector* UNKNOWN

Explanation

A command response from the PPI transport did not contain a known major vector.

Message Variables

vector

Specifies the vector in error.

System action

The command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS and RODM output logs. If the problem cannot be determined from this information, contact IBM Software Support for assistance.

DUI4370E IPC WAS UNABLE TO DELIVER COMMAND TO PPI GATEWAY

Explanation

A command sent to the PPI transport cannot be sent across the PPI.

System action

The command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS and RODM output logs. If the problem cannot be determined from this information, contact IBM Software Support for assistance.

DUI4371E RODM CHECKPOINT REQUEST FAILED

Explanation

The network configuration subtask attempted to checkpoint RODM. The checkpoint request failed.

System action

The checkpoint is ignored, processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure is written in the GMFHS and RODM output logs. If the problem cannot be determined from this information, contact IBM Software Support for assistance.

**DUI4372E COMMUNICATIONS SESSION
WITH ELEMENT MANAGER LOST**

Explanation

The session with the element management system of a particular domain is no longer active.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

The session will be reestablished after a timeout. If the session cannot be reestablished, contact IBM Software Support.

**DUI4373E NETWORK CONFIGURATION
COMMAND RETRY LIMIT
EXCEEDED**

Explanation

A command that originated with the network configuration subtask has been retried the maximum number of times.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure may be written in the GMFHS and RODM output logs. If the problem cannot be determined from this information, contact IBM Software Support for assistance.

**DUI4374E subtask REPORTS THAT THE
NETWORK CONFIGURATION
COMMAND WAS REJECTED**

Explanation

A command that originated with the network configuration subtask has been rejected by the indicated subtask for an unknown reason.

Message Variables**subtask**

Specifies the subtask reporting the error.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure may be written in the GMFHS and RODM output logs. If the problem cannot be determined from this information, contact IBM Software Support for assistance.

**DUI4375E FIELD TYPE ERROR IN NON-SNA
DOMAIN OBJECT**

Explanation

The ContainsResource field on a non-SNA domain object is not of type ObjectLinkList.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

Change the definition in the RODM data model and reload the data model. Contact IBM Software Support for assistance.

**DUI4376E EXPECTED NON-SNA DOMAIN
OBJECT IS MISSING**

Explanation

A non-SNA domain object no longer exists in RODM.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure may be written in the GMFHS and RODM output logs. If the problem cannot be determined from this information, contact IBM Software Support for assistance.

DUI4377E FIELD TYPE ERROR IN NON-SNA DOMAIN OBJECT

Explanation

The DisplayStatus field on a non-SNA domain object is not of type Integer.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

Change the definition in the RODM data model and reload the data model. Contact IBM Software Support for assistance.

DUI4378E EXPECTED NON-SNA DOMAIN OBJECT IS MISSING

Explanation

A non-SNA domain object no longer exists in RODM.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure may be written in the GMFHS and RODM output logs. If the problem cannot be determined from this information, contact IBM Software Support for assistance.

DUI4379E NON-SNA DOMAIN OBJECT DOES NOT HAVE A DISPLAYSTATUS FIELD

Explanation

A non-SNA domain object is missing it's DisplayStatus field.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

Change the definition in the RODM data model and reload the data model. Contact IBM Software Support for assistance.

DUI4380E NON-SNA DOMAIN OBJECT CLASS DEFINITION ERROR

Explanation

The non-SNA domain object class is not defined correctly.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

Change the definition in the RODM data model and reload the data model. Contact IBM Software Support for assistance.

DUI4381E MANAGER STATUS UPDATE FAILED

Explanation

The network configuration subtask attempted to build the Manager Status message and failed.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

This is an internal error. Contact IBM Software Support for assistance.

**DUI4382E UNRECOGNIZED CONSOLE
COMMAND RECEIVED**

Explanation

The network configuration subtask received a command which it did not understand.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

This is an internal error. Contact IBM Software Support for assistance.

**DUI4383E OBJECT NOT INCLUDED IN
STATUS SOLICITATION FOR
DOMAIN: *domain***

Explanation

The network configuration subtask cannot generate a status solicitation for the specified domain because of an error in the domain object.

Message Variables***domain***

Specifies the domain in error.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

Change the definition in the RODM data model and reload the data model. Contact IBM Software Support for assistance.

**DUI4384E MANAGER STATUS UPDATE
FAILED -- NMG CLASS ERROR**

Explanation

The network configuration subtask attempted to build the Manager Status message and failed because of an error in the NMG Class definition.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

Change the definition in the RODM data model and reload the data model. Contact IBM Software Support for assistance.

**DUI4386E GMFHS WILL NOT MONITOR
STATUS FOR THE TOPOLOGY
MANAGER**

Explanation

This message appears in combination with the following messages and indicates that the a particular manager will not be monitored.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure may be written in the GMFHS and RODM output logs. If the problem cannot be determined from this information, contact IBM Software Support for assistance.

**DUI4387E SOME OF THE GDA
CHARACTERISTICS WERE
MASKED OUT**

Explanation

This message appears in combination with DUI4388E and indicates that some of the domain characteristics from the DomainCharacterstics field have been masked because of a protocol mismatch.

System action

Processing continues.

Operator response

Contact the system programmer.

**DUI4388E TRANSPORT PROTOCOL WAS NOT
PPI, OST, COS, OR IP**

Explanation

This message appears in combination with DUI4387E and indicates that some of the domain characteristics

from the DomainCharacterstics field have been masked because of a protocol mismatch.

System action

Processing continues.

Operator response

Contact the system programmer.

DUI4389E	<i>destsubtask</i> REJECTED A REQUEST FROM <i>origsubtask</i>
-----------------	--

Explanation

This message appears in combination with DUI4387E and indicates that some of the domain characteristics from the DomainCharacteristics field have been masked because of a protocol mismatch.

Message Variables

destsubtask

Specifies the destination subtask for the request.

origsubtask

Specifies the originating subtask for the request.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

Contact IBM Software Support for assistance.

DUI4390E	TURN TRACING ON FOR <i>origsubtask</i> AND <i>destsubtask</i> FOR MORE INFORMATION
-----------------	---

Explanation

This message appears in combination with DUI4374E and DUI4395E.

Message Variables

destsubtask

Specifies the destination subtask for the request.

origsubtask

Specifies the originating subtask for the request.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

Turn on the requested tracing.

DUI4391E	<i>subtask</i> REPORTS THAT A PROCESS FAILED
-----------------	---

Explanation

The reporting subtask cannot complete a request because of a process failure.

Message Variables

subtask

Specifies the reporting subtask.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

Contact IBM Software Support for assistance.

DUI4392E	<i>subtask</i> REPORTS THAT THERE WAS NO OBJECT
-----------------	--

Explanation

The reporting subtask cannot complete a request because of not being able to find the target object in RODM.

Message Variables

subtask

Specifies the reporting subtask.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

Contact IBM Software Support for assistance.

DUI4393E	<i>subtask</i> REPORTS THAT THE COMMAND WAS NOT AUTHORIZED
-----------------	---

Explanation

The reporting subtask cannot complete a request because of the command not being authorized.

Message Variables**subtask**

Specifies the reporting subtask.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

Contact IBM Software Support for assistance.

**DUI4394E *subtask* REPORTS THAT THE
COMMAND IS NOT SUPPORTED**

Explanation

The reporting subtask cannot complete a request because of the command not being supported.

Message Variables**subtask**

Specifies the reporting subtask.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

Contact IBM Software Support for assistance.

DUI4395E COMMAND CANNOT BE RETRIED

Explanation

This is an informational message that comes out with other messages indicating that a status solicitation command from the network configuration subtask failed to execute successfully.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

Contact IBM Software Support for assistance.

**DUI4396E WAITING FOR SESSION WITH
SCOPE CHECKER**

Explanation

The Network Configuration task must have a session with the Scope Checker optional task to begin status solicitation for non-SNA domains

System action

Processing continues.

Operator response

Contact the system programmer.

**DUI4397E NON-SNA SESSION
ESTABLISHMENT HAS NOT
COMPLETED**

Explanation

This message accompanies message DUI4396E

System action

Processing continues.

Operator response

Contact the system programmer.

**DUI4398E THIS WILL RESUME WHEN THE
SCOPE CHECKER SESSION IS UP**

Explanation

This message accompanies message DUI4396E

System action

Processing continues.

Operator response

Contact the system programmer.

**DUI4399E THE DOMAIN *domain* WAS NOT
FOUND IN RODM - CONFIG
DOMAIN CANNOT COMPLETE**

Explanation

A CONFIG DOMAIN=*domain* command was issued, and the specified domain cannot be found in RODM. The domain in question was deleted from RODM prior to the CONFIG DOMAIN=*domain* command.

Message Variables

domain

Specifies the domain that was not found.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

Reissue the command with another domain name, or add the domain to RODM and issue a CONFIG NETWORK command.

DUI4400E	ALL TRANSACTIONS INVOLVING THIS DOMAIN ARE SUSPECT. THE DOMAIN WAS IN RODM BUT NOW IS NOT
-----------------	--

Explanation

This message accompanies message DUI3399E.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

Reissue the command with another domain name, or add the domain to RODM and issue a CONFIG NETWORK command.

DUI4401E	IT IS RECOMMENDED THAT A GMFHS CONFIG NETWORK BE DONE
-----------------	--

Explanation

This message accompanies message DUI3399E.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

Reissue the command with another domain name, or add the domain to RODM and issue a CONFIG NETWORK command.

DUI4402E	RODM QUERY FAILED (returncode/ reasoncode). FIELD: field, CLASS: class
-----------------	---

Explanation

This message accompanies message DUI3386E, and indicates the RODM query failure that caused the status monitoring failure.

Message Variables

returncode

Specifies the RODM return code.

reasoncode

Specifies the RODM reason code.

field

Specifies the field for which RODM change was requested.

class

Specifies the class for which RODM change was requested.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure may be written in the GMFHS and RODM output logs. If the problem cannot be determined from this information, contact IBM Software Support for assistance.

DUI4403E	RODM DATA TYPE NOT VALID. FIELD: field, CLASS: class
-----------------	---

Explanation

This message accompanies message DUI3386E, and indicates the RODM data type error that caused the status monitoring failure.

Message Variables

field

Specifies the field for which RODM change was requested.

class

Specifies the class for which RODM change was requested.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure may be written in the GMFHS and RODM output logs. If the problem cannot be determined from this information, contact IBM Software Support for assistance.

DUI4404E	ERROR ENCOUNTERED IN PROCESSING A REQUEST TO UPDATE THE GLOBAL UNKNOWN_THRESHOLD TO <i>value</i>.
-----------------	--

Explanation

A RODM error was received in the attempt to change the UnknownThreshold field in RODM.

Message Variables

value

Requested unknown threshold value.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure may be written in the GMFHS and RODM output logs. If the problem cannot be determined from this information, contact IBM Software Support for assistance.

DUI4405E	MAXIMUM RESPONSE TEXT SIZE REACHED
-----------------	---

Explanation

A response to a DOMP010 presentation protocol command contained too much data in the response text area.

System action

Command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

More information regarding the failure may be written in the GMFHS and RODM output logs.

DUI4406E	COMMAND RESPONSE FROM PPI GATEWAY MISSING TEXT DATA PARAMETER MAJOR VECTOR
-----------------	---

Explanation

A command response from the PPI transport did not contain a Text Data Parameter major vector.

System action

Command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

This is a problem with the PPI gateway application. The gateway application must provide this major vector on all command responses.

DUI4407E	<i>objectname</i> IN CLASS <i>classname</i> IS NOT LINKED TO A <i>linkclass</i> OBJECT
-----------------	---

Explanation

The Domain object link of the object specified by *classname* and *objectname* is not linked to an appropriate class object.

Message Variables

objectname

Specifies the object name in the link error.

classname

Specifies the class name in the link error.

linkclass

Specifies the class which the object is to be linked with.

System action

Command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

Change the specified object to have a Domain link to an object in the correct class. Contact IBM Software Support for assistance.

**DUI4408E OBJECT NAME *objname* TOO LONG
FOR COMMAND FOR DOMAIN
*domain*****Explanation**

The specified object name, when added to a command, makes the command too long to be issued.

Message Variables***objname***

Specifies the object name of the resource that makes the command too long.

domain

Specifies the domain to which the command is to be issued.

System action

Command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

This command cannot be issued with this object name. Shorten the object name if possible. Contact IBM Software Support for assistance.

**DUI4409E COMMAND TEXT FOR DOMAIN
domain IS TOO LONG****Explanation**

The command text for a domain makes the command too long to be issued.

Message Variables***domain***

Specifies the domain to which the command is to be issued.

System action

Command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

This command cannot be issued with this command text. Shorten the command text if possible. Contact IBM Software Support for assistance.

**DUI4410E THE MYNAME VALUE OF
objectname IN CLASS *objectclass*****IS INCONSISTENT WITH THE
emdname NAME OF THE *classtype*
OBJECT IT IS LINKED TO****Explanation**

The specified object from the specified class has an EMDomain field that is not consistent with the Domain object to which it is linked. The EMDomain field must be the prefix of the MyName field of the Domain object.

Message Variables***objectname***

Specifies the objectname of the target resource.

classname

Specifies the class name of the target resource.

emdname

Specifies the EMDomain field name from the target resource.

classtype

Specifies the type of class of the Domain object.

System action

Command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

Correct either the Domain object MyName, or the EMDomain field of the linking object. Contact IBM Software Support for assistance.

**DUI4411E DATA CORRELATION SUBVECTOR
NOT FOUND IN REPLY TO
EXECUTE VECTOR****Explanation**

A command response from the PPI transport did not contain a correlation subvector.

System action

Command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

This is a problem with the PPI gateway application. The gateway application must provide this subvector on all command responses.

**DUI4412E PCID SUBFIELD IS MISSING OR
INVALID REPLY TO EXECUTE
VECTOR**

Explanation

A command response from the PPI transport did not contain a correlation subvector with a valid PCID subfield.

System action

Command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

This is a problem with the PPI gateway application. The gateway application must provide this subfield on all command responses.

**DUI4414E SOLICITATION COMMAND RETRY
LIMIT EXCEEDED**

Explanation

A network configuration solicitation command failed because of the retry limit for the command being exceeded.

System action

Command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

This error may be because of a problem with the element management system. Contact IBM Software Support for assistance.

**DUI4415E NO SESSION WITH THE DOMAIN'S
ELEMENT MANAGER**

Explanation

A network configuration solicitation command failed because of the session with the domains element manager having been lost

System action

Command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

This error may be because of a problem with the element management system. Contact IBM Software Support for assistance.

**DUI4416E COMMAND NOT KNOWN TO THE
DOMAIN'S ELEMENT MANAGER**

Explanation

A network configuration solicitation command failed because of the command not being recognized by the element management system.

System action

Command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

This error may be because of a problem with the element management system. Contact IBM Software Support for assistance.

**DUI4417E COMMAND REJECTED BY
ELEMENT MANAGER : BAD
PARAMETERS**

Explanation

A network configuration solicitation command failed because of the command having bad command parameters.

System action

Command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

This error may be because of a problem with the element management system. Contact IBM Software Support for assistance.

**DUI4418E COMMAND NOT ALLOWED BY THE
DOMAIN'S ELEMENT MANAGER**

Explanation

A network configuration solicitation command failed because of the command not being valid by the element management system.

System action

Command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

This error may be because of a problem with the element management system. Contact IBM Software Support for assistance.

**DUI4419E COMMAND NOT CURRENTLY
ALLOWED BY THE DOMAIN'S
ELEMENT MANAGER**

Explanation

A network configuration solicitation command failed because of the command being temporarily disallowed by the element management system.

System action

Command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

This error may be because of a problem with the element management system. Contact IBM Software Support for assistance.

**DUI4420E COMMAND ABORTED BY THE
DOMAIN'S ELEMENT MANAGER**

Explanation

A network configuration solicitation command failed because of the command being cancelled by the element management system.

System action

Command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

This error may be because of a problem with the element management system. Contact IBM Software Support for assistance.

**DUI4421E COMMAND CANCELLED BY THE
DOMAIN'S ELEMENT MANAGER**

Explanation

A network configuration solicitation command failed because of the command being cancelled by the element management system.

System action

Command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

This error may be because of a problem with the element management system. Contact IBM Software Support for assistance.

**DUI4422E COMMAND PREEMPTED BY THE
DOMAIN'S ELEMENT MANAGER**

Explanation

A network configuration solicitation command failed because of the command being preempted by the element management system.

System action

Command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

This error may be because of a problem with the element management system. Contact IBM Software Support for assistance.

**DUI4423E COMMAND FAILED BY THE
DOMAIN'S ELEMENT MANAGER**

Explanation

A network configuration solicitation command failed because of the command being failed by the element management system.

System action

Command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

This error may be because of a problem with the element management system. Contact IBM Software Support for assistance.

DUI4424E THE ELEMENT MANAGER HAD INSUFFICIENT RESOURCES TO PROCESS THE COMMAND

Explanation

A network configuration solicitation command failed because of the element management system not having enough system resources to process the command.

System action

Command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

This error may be because of a problem with the element management system. Contact IBM Software Support for assistance.

DUI4425E COMMAND TIMED OUT BY THE DOMAIN'S ELEMENT MANAGER

Explanation

A network configuration solicitation command failed because of the element management system timing out the command.

System action

Command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

This error may be because of a problem with the element management system. Contact IBM Software Support for assistance.

DUI4426E COMMAND CONTAINS TOO MANY RESOURCE NAMES

Explanation

A network configuration solicitation command failed because of the command containing too many resource names.

System action

Command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

This error may be because of a problem with the element management system. Contact IBM Software Support for assistance.

DUI4427E COMMAND NOT SUPPORTED BY THE DOMAIN'S ELEMENT MANAGER

Explanation

A network configuration solicitation command failed because of the command not being supported by the domain's element management system.

System action

Command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

This error may be because of a problem with the element management system. Contact IBM Software Support for assistance.

DUI4428E INCORRECT LOGIN REPORTED BY THE DOMAIN'S ELEMENT MANAGER

Explanation

A network configuration solicitation command failed because of an incorrect login at the domain's element management system.

System action

Command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

This error may be because of a problem with the element management system. Contact IBM Software Support for assistance.

DUI4429E	INSUFFICIENT PRIVILEGE FOR THE GATEWAY TO RUN THIS COMMAND
-----------------	---

Explanation

A network configuration solicitation command failed because of insufficient privilege for the gateway to run the command at the domain's element management system.

System action

Command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

This error may be because of a problem with the element management system. Contact IBM Software Support for assistance.

DUI4430E	COMMAND'S TARGET RESOURCE IS UNKNOWN BY RODM OR THE GATEWAY
-----------------	--

Explanation

A network configuration solicitation command failed because of the command's target resource being unknown to the element management system.

System action

Command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

This error may be because of a problem with the element management system. Contact IBM Software Support for assistance.

DUI4431E	COMMAND RESPONSE DATA IS NOT VALID
-----------------	---

Explanation

A network configuration solicitation command failed because of the command response being incorrect for the gateway.

System action

Command is discarded and processing continues.

Operator response

Contact the system programmer.

System programmer response

This error may be because of a problem with the element management system. Contact IBM Software Support for assistance.

DUI4432E	A VALUE OF ZERO (0) FOR THE TRACEPAGES PARAMETER IS NO LONGER SUPPORTED. THE DEFAULT VALUE OF 100 WILL BE USED INSTEAD.
-----------------	--

Explanation

Zero is no longer a valid value for the TRACEPAGES command. You cannot use the TRACEPAGES command to enable or disable internal tracing. If zero (0) is specified, the value 100 is used instead.

System action

TRACEPAGES is set to 100 and processing continues.

Operator response

Contact the system programmer.

System programmer response

Remove or comment out the TRACEPAGES statement in initialization member DUIGINIT, or change its value from zero (0) to 100.

DUI4433E	POSSIBLE CONSOLE FLOOD FROM SUBTASK <i>subtask</i>. CONSOLE MESSAGES FROM THIS SUBTASK ARE SUSPENDED FOR 30 SECONDS.
-----------------	---

Explanation

This message occurs when GMFHS detects a possible flood of console messages from a subtask. GMFHS disables console messages from a subtask if more than 30 console messages from the subtask are generated within a 1 second interval. All messages continue to be sent to any active output logs,

regardless of whether they are suspended from appearing on the console.

Message Variables

subtask

The subtask generating the console messages.

System programmer response

If the condition persists, contact IBM Software Support.

Chapter 2. DWO Prefix Messages

DWO prefix messages are sent to the NetView terminal operator or the authorized message receiver. If an authorized message receiver is not defined in the system or is not logged on, the messages destined for the authorized message receiver are sent to the system console operator.

DWO000I **COMMAND FACILITY MESSAGE**
***msgid* ISSUED BUT DOES NOT**
EXIST IN MESSAGE TABLE
DSIMDMV - CALL IGNORED

Explanation

The specified message number does not exist in the message table.

Message Variables

msgid

The message number.

System action

The NetView program ignores the message call and continues processing.

Operator response

Notify the system programmer.

System programmer response

Contact IBM Software Support.

DWO001I **REQID *reqid* : NEGATIVE**
RESPONSE RECEIVED WITH
SENSE CODE = X'*code*'

Explanation

The specified request has been rejected by VTAM.

Message Variables

reqid

The ID of the request to which this message is responding.

code

The sense code from VTAM.

System action

The request is not processed.

Operator response

Notify the system programmer.

System programmer response

Interpret the sense codes and make the appropriate changes. Refer to the z/OS Communications Server library for more information.

DWO002I **VTAM FAILURE FUNCTION =**
***function* RTNCD = X'*vtamrcd*'**
FDBK2 = X'*vtamfb*' SENSE =
X'*vtamsens*' MODNAME = *module*

Explanation

A request has been rejected by VTAM, and a corresponding request ID is not available. Use the RCFB command list for a description of the return code and feedback code. Use the SENSE command list for a description of the sense code.

Message Variables

function

Specifies which VTAM service failed.

vtamrcd

The VTAM internal return code.

vtamfb

The VTAM internal feedback code.

vtamsens

The VTAM internal sense code.

module

The module name that issued this message.

System action

The request is not processed.

Operator response

Determine if the request was sent to the correct PU. If the request was correct, notify the system programmer.

System programmer response

Use the RCFB and SENSE command lists to determine the meaning of the return/feedback and sense codes. See the device specific documentation for the meaning of the user sense data.

DWO003I **VPDTASK OPTIONS ARE AS**
FOLLOWS : ACBNAME = *acbname*

SNAPRQ = *snapopt* VPDWAIT = *vpdwait* VPDREQ = *vpdreq* VPDSTOR = *vpdstor*

Explanation

This message is the response to the VPDCMD OPTIONS or the VPDCMD SNAP ON | OFF command. It lists the current values of the VPDTASK options.

Message Variables

acbname

The ACBNAME specified on the VPDINIT definition statement.

snapopt

Indicates whether the trace for the SNAP record is ON or OFF.

vpdwait

The maximum waiting period for a VPDTASK before a time-out.

vpdreq

The maximum number of simultaneous requests specified for VPDTASK.

vpdstor

The storage estimate that is specified on the VPDINIT definition statement.

**DWO004I ACBNAME NOT FOUND - VPDTASK
INITIALIZATION TERMINATED**

Explanation

The VPDTASK initialization routines cannot find the ACBNAME specified on the VPDINIT definition statement.

System action

VPDTASK does not start.

Operator response

Contact the system programmer.

System programmer response

Verify that the ACBNAME is specified in VTAM APPLS definition member. Then ensure that the ACBNAME on the VPDINIT statement in the DSIVPARM member of DSIPARM is the same as the ACBNAME specified in VTAM APPLS definition member.

**DWO005I VTAM SERVICES FAILURE.
FUNCTION = *function* REG15 =
X'*code*' REG0 = X'*code*' MODNAME
= *module***

Explanation

A VTAM error occurred during the processing of a VPDCMD command or during the initialization of VPDTASK.

Message Variables

function

Specifies which VTAM service failed.

code

The problem analysis codes.

module

The module that issued the message.

System action

If the error was detected during initialization, VPDTASK is not started. If the error was detected while processing a VPDCMD command, the request is not processed.

Operator response

Contact the system programmer.

System programmer response

Determine whether the values for registers 0 and 15 are acceptable. If not, correct the values and start VPDTASK again. Refer to the z/OS Communications Server library for more information.

**DWO006I task IS READY FOR WORK
(ACBNAME = *acbname* SNAPRQ =
snapopt VPDWAIT = *vpdwait*
VPDREQ = *vpdreq* VPDSTOR =
vpdstor)**

Explanation

VPDTASK has successfully initialized.

Message Variables

task

The task name of the VPDTASK.

acbname

The ACBNAME specified on the VPDINIT definition statement.

snapopt

Indicates whether the trace for the SNAP record is to be turned on.

vpdwait

The maximum waiting period for a VPDTASK before a time-out.

vpdreq

The maximum number of simultaneous requests specified for VPDTASK.

vpdstor
The storage estimate that is specified on the VPDINIT definition statement.

System action
Processing continues.

**DWO007I REQID *reqid* TERMINATED BY
 TIMEOUT**

Explanation
A VPD request was ignored because it was waiting longer than the value specified for the VPDWAIT on the VPDINIT definition statement, or a link failure occurred after the request was accepted.

Message Variables
reqid
The ID of the request to which this message is responding.

System action
The request is not processed.

Operator response
If a link failure occurred, retry the VPD request when the link comes up. If a link failure did not occur, contact the system programmer.

System programmer response
Ensure that the specified time-out value (VPDWAIT) allows the network sufficient time to transport the replies.

**DWO008I REQID *reqid* VTAM FAILURE
 FUNCTION = *function* RTNCD =
 X'*vtamrcd*' FDBK2 = X'*vtamfb*'
 SENSE = X'*vtamsens*' MODNAME =
 *module***

Explanation
A request has been rejected by VTAM. Use the RCFB command list for a description of the return code and feedback code. Use the SENSE command list for a description of the sense code.

Message Variables
reqid
The ID of the request to which this message is responding.
function
The failed VTAM service.

vtamrcd
The VTAM internal return code.
vtamfb
The VTAM internal feedback code.
vtamsens
The VTAM internal sense code.
module
The module that issued this message.

System action
The request is not processed.

Operator response
Determine if the request was sent to the correct PU. If the request was correct, notify the system programmer.

System programmer response
Use the RCFB and SENSE command lists to interpret return, feedback, and sense codes and make the appropriate changes.

**DWO009I REQUEST '*keyword*' ACCEPTED
 FOR *puname* , REQID = *reqid***

Explanation
VTAM accepted your request for vital product data from the specified PU.

Message Variables
keyword
The keyword (OWN or ALL) you used on the VPDCMD command.

puname
The PUNAME specified in your command.

reqid
The ID of the request to which this message is responding.

**DWO010I INVALID REQUEST QUEUED TO
 *task***

Explanation
An incorrect request was queued to VPDTASK or DSIATOPT.

Message Variables
task
The task name of VPDTASK or DSIATOPT

System action
The request is not processed.

Operator response

Contact the system programmer.

System programmer response

Verify that user-written requests are not being queued to VPDTASK or DSIATOPT.

**DW0011I UNKNOWN RU RECEIVED -
IGNORED**

Explanation

An unexpected RU was delivered by VTAM to VPDTASK.

System action

The received RU is ignored.

Operator response

Contact the system programmer.

System programmer response

The RU is saved if the SNAP option, which was specified in the VPDINIT definition statement, and the NetView internal trace are on. If not, the RU needs to be created again with those options on. Print the SNAP record and ensure you did not start VPDTASK with an ACBNAME that VTAM knows as manager for unsolicited RUs. Keep the SNAP and contact IBM Software Support.

**DW0012I REQID *reqid* : UNKNOWN MAJOR
VECTOR X'*vector*' RECEIVED -
IGNORED**

Explanation

An unexpected major vector was returned for a VPD request.

Message Variables

reqid

The ID of the request to which this message is responding.

vector

The major vector that was received.

System action

The request is not processed.

Operator response

Contact the system programmer.

System programmer response

The RU is saved if the SNAP option, which was specified in VPDINIT definition statement, and the NetView internal trace are on. If not, the RU needs to be created again with those options on. Analyze the SNAP record received using *Systems Network Architecture Formats* and the vendor device documentation. For an IBM device, keep the SNAP and contact IBM Software Support.

**DW0013I CDE CONTROL BLOCK CHAIN
MODIFIED WHILE DISPMOD WAS
RUNNING, RETRY.**

Explanation

You entered a DISPMOD command, but while the command was running the CDE control block chain was modified. The DISPMOD command cannot continue.

System action

The command stops running.

Operator response

Enter the command again.

DW0014I REQID *reqid* COMPLETED

Explanation

The VPD request is complete.

Message Variables

reqid

The ID of the request to which this message is responding.

System action

Processing continues.

**DW0015I REQUEST '*keyword*' ACCEPTED
FOR *ncp pu*, LSL = *lsl* - REQID =
*reqid***

Explanation

A request to solicit data from the DCEs was accepted.

Message Variables

keyword

The keyword, DCE, of the VPDCMD command.

ncp

The name of the NCP specified on the VPDCMD command.

pu

The name of the PU specified on the VPDCMD command.

lsl

The starting link segment level specified on the VPDCMD command request.

reqid

The ID of the request to which this message is responding.

System action

Processing continues.

DW0016I **REQID *reqid* : REQUESTED LSL 'rlsl' IS GREATER THAN THE NUMBER IN YOUR CONFIGURATION 'alsl'**

Explanation

A request soliciting data the from the DCEs specified a level of *rlsl* while the configuration shows only *alsl* link segment levels.

Message Variables

reqid

The ID of the request to which this message is responding.

rlsl

The link segment level specified in the request.

alsl

The actual link segment level in the existing configuration.

System action

The request is not processed.

Operator response

Enter the command again with a correct link segment level.

DW0017I **MAXIMUM NUMBER OF VPD REQUESTS HAS BEEN EXCEEDED - RETRY LATER. VPDREQ = *vpdreq***

Explanation

The VPDTASK is servicing the maximum number of simultaneous VPD requests.

Message Variables

vpdreq

The maximum number of simultaneous VPDCMD command requests allowed.

System action

The request is not processed.

Operator response

Wait until another VPDCMD request completes (look for a DW0014I message), then submit your request again, or contact the system programmer.

System programmer response

Increase the value of VPDREQ on your VPDINIT definition statement.

DW0018I **NETVIEW TRACE IS INACTIVE FOR *task***

Explanation

VPD SNAP ON was specified before the NetView program internal trace (TRACE) is turned on.

Message Variables

task

The task name of VPDTASK.

System action

The request is not processed.

Operator response

Activate the TRACE command, then issue the VPDCMD command.

DW0019I **REQID *reqid* : VPDSTOR PARAMETER '*vpdstor*' IS INSUFFICIENT. MODNAME = *module***

Explanation

There is not sufficient storage to receive the vital product data. This message is issued to the operator that initiated the request.

Message Variables

reqid

The ID of the request to which this message is responding.

vpdstor

The value specified in VPDSTOR parameter in VPDINIT definition statement.

module

The module that issued this message.

System action

The request is not processed.

Operator response

Contact the system programmer.

System programmer response

Increase the value of VPDSTOR on your VPDINIT statement and restart the VPDTASK.

DW0020I	REQID <i>reqid</i> : INVALID RU RECEIVED - MODNAME = <i>module</i>
----------------	---

Explanation

The received RU from the VPD request does not adhere to NMVT architecture.

Message Variables

reqid

The ID of the request to which this message is responding.

module

The module that issued this message.

System action

The received RU is ignored.

Operator response

Contact the system programmer.

System programmer response

To determine the device sending the RU that is not valid, print the snap record (the RU is saved in a snap record if the SNAP option and the NetView trace for VPDTASK are on). The information contained in the snap record, along with the PU that received the request, allows you to identify the device sending the RU that is not valid. Contact the service representative of the device sending the RU that is not valid.

DW0021I	MEMBER <i>mbrid</i> IN DSIPARM IS EMPTY OR MISSING
----------------	---

Explanation

This message can be issued for one of the following reasons:

- The DSIPARM member *mbrid* either contains no lines (is empty) or does not exist.
- For some commands, no non-comment lines were found.
- A particular type of statement was requested from the specified member and no statement of the type requested can be found.

The VPDTASK initialization routines issue this message either when the member is not specified in DSIPARM, or when the member is specified in DSIPARM but does not contain a statement necessary to start the VPDTASK.

Message Variables

mbrid

The name of a DSIPARM data set member, for example, the member name specified for VPDTASK in the CNMSTASK member.

System action

The request or command is not processed.

Operator response

Contact the system programmer.

System programmer response

Verify that the correct member name is being used. Verify that the member exists in DSIPARM, and that the member contains lines that specify the required information.

For VPDTASK initialization, verify that the correct member name is specified in the CNMSTASK member and that the member contains initialization parameters.

DW0022I	TASKNAME TYPE DPR CPU-TIME N-CPU% S-CPU% MESSAGEQ STORAGE-K CMD
----------------	--

Explanation

This message is a multiline response to your TASKUTIL command. The data includes CPU and storage usage information. See the NetView online help for more information on the TASKUTIL command.

System action

Processing continues.

DW0023I	INVALID INPUT (<i>input</i>) '<i>statement</i>'
----------------	--

Explanation

The VPDTASK initialization routine encountered an error in the VPDINIT definition statement.

Message Variables

input

One of the following:

STATEMENT

If the DSIVPARM member contains a statement other than VPDINIT.

KEYWORD

If the VPDINIT statement contains an incorrect keyword.

VALUE

If the VPDINIT statement contains an incorrect parameter value.

statement

The entire statement coded in DSIVPARM.

System action

VPDTASK does not start.

Operator response

Contact the system programmer.

System programmer response

See the VPDINIT definition statement in the *IBM Z NetView Administration Reference* for the correct syntax of the statement. Correct the initialization parameters in the VPDINIT definition statement.

DW0024I YOUR REQUEST CANNOT BE SATISFIED DUE TO VPDTASK TERMINATION

Explanation

You receive this message if VPDTASK ends while one of your requests is queued.

System action

VPDTASK ends.

DW0025I INTERNAL ERROR IN MODULE module, FUNCTION = function

Explanation

The NetView program encountered an internal logic error or a system macro gave an unexpected return code.

Message Variables**module**

The module that issued the error.

function

The type of service that failed.

System action

The request ends.

Operator response

Notify the system programmer.

System programmer response

Contact IBM Software Support.

DW0026I VPDSTOR PARAMETER 'vpdstor' IS INSUFFICIENT - INCREASE THE VALUE

Explanation

There is not sufficient storage to receive vital product data. This message is issued to the starter of VPDTASK.

Message Variables**vpdstor**

The value specified on the VPDSTOR parameter in the initialization deck.

System action

The request is not processed.

Operator response

Notify the system programmer.

System programmer response

Increase the value of VPDSTOR on your VPDINIT statement and restart the VPDTASK.

DW0027I num1 VPDPDU COMMANDS AND num2 VPDDCE COMMANDS CREATED

Explanation

A VPDALL command generated VPDPDU and VPDDCE commands for the PUs and link segments in your VTAMLST member of DSIVTAM.

Message Variables**num1**

The number of VPDPDU commands generated.

num2

The number of VPDDCE commands generated.

System action

Processing continues.

DW0028I num1 VPDPDU COMMANDS AND num2 VPDDCE COMMANDS EXECUTED

Explanation

A VPDALL command was issued with the EXECUTE option and executed the numbers of VPDPDU and

VPDDCE commands specified in the message to be executed.

Message Variables

num1

The number of VPDPU commands executed.

num2

The number of VPDDCE commands executed.

System action

Processing continues.

DW0029I THE MEMBER '*member*' ALREADY EXISTS, YOU MUST REPLACE IT

Explanation

A VPDALL command attempted to create a command list that already exists in DSICLD; or, an AUTOCNT, AUTOTBL, AUTOTEST, or QRYGLOBL command attempted to create a member that already exists.

Message Variables

member

The name of the command list that the VPDALL command attempted to create; or, the member that the AUTOCNT, AUTOTBL, AUTOTEST, or QRYGLOBL command attempted to create

System action

The command is ignored.

Operator response

Check the existing command list or member, to determine whether you want to replace it. If you do not, enter the VPDALL command with the name of a command list; you can also enter the AUTOCNT, AUTOTBL, AUTOTEST, or QRYGLOBL command with the name of a member that does not already exist.

If you want to replace the existing command list or member, enter the VPDALL command with the same command list name; or, enter the AUTOCNT, AUTOTBL, AUTOTEST, or QRYGLOBL command with the same member name and the REPLACE option.

DW0030I UNABLE TO CREATE THE MEMBER '*member/member ddname*'. IT IS IN USE, TRY LATER. — or — UNABLE TO CREATE THE FILE '*file type mode*'. IT IS IN USE, TRY LATER.

Explanation

A VPDALL command attempted to create the specified command list; or, the AUTOCNT, AUTOTBL,

AUTOTEST, or the QRYGLOBL command attempted to create the specified member, but the command list or the member is currently being used.

Message Variables

member

The name of the command list or member that the AUTOCNT, AUTOTBL, AUTOTEST, QRYGLOBL, or VPDALL command attempted to create

ddname

For AUTOTEST, the DD name in which *member* cannot be created

System action

The command is ignored.

Operator response

Wait until the command list, or member, is no longer being used and execute the AUTOCNT, AUTOTBL, AUTOTEST, QRYGLOBL, or VPDALL command again.

DW0031A MESSAGE FAILED TO AUTOMATE, MESSAGE CONTENTION PROBLEM.

Explanation

An internal NetView error has caused NetView automation to fail. The message that failed to automate is concatenated to this message.

System action

The failed message is not automated.

Operator response

Notify the system programmer.

System programmer response

Contact IBM Software Support.

DW0032E AUTOMATION ACTION *action* COULD NOT BE ROUTED TO TASK(S) *task*.

Explanation

The NetView automation process attempted to route an automation action to the task or tasks listed in the message. The task or tasks are not active, not defined, or not defined as a valid OST, NNT or PPT.

If the task is the name of a DST (for example, BNJDSERV or CNMCSSIR), the action cannot be routed to the OST that started the DST. If a list of tasks is specified, the action was not routed to at least one of

the tasks in the list. If UNKNOWN appears in the *task* field, the task cannot be determined.

A message can be truncated for an action or task, or both, because of the limitations in the network log.

This message is written to the network log only and does not drive installation exit DSIEX02A, and by default is not displayed. It is, however, eligible for NetView automation table processing, and subject to automation table actions (for example, it can be routed, and displayed) and processing by installation exit DSIEX16.

Message Variables

action

The automation table action.

task

The task or a list of tasks.

System action

The actions associated with the automation table entry are not processed.

Operator response

Notify the system programmer of the errors.

System programmer response

If the task is not defined as an appropriate OST, NNT, or PPT then correct the definition or route the action to an appropriate task. If the task is defined properly, then determine why the task was not active. All actions are routed to an active task using the ROUTE keyword of the EXEC action of the automation table (an autotask is recommended). See *IBM Z NetView Automation Guide* for more information on automation table routing.

DW0033I ***command* COMMAND, OPID =
operatorid, RESUMED
PROCESSING**

Explanation

The RESUME routine received a response from data services and passed the data to the command processor.

Message Variables

command

The GLOBALV command.

operatorid

The operator ID.

System action

Processing continues.

DW0034I ***command* COMMAND, OPID =
operatorid WAITING FOR DATA
SERVICE RESPONSE**

Explanation

The RESUME routine received control because of a console interruption, but did not receive a response from data services.

Message Variables

command

The GLOBALV command

operatorid

The operator ID

Operator response

Wait for the data services response. If the message continues, notify the system programmer.

DW0035A **MSU FAILED TO AUTOMATE, MSU
CONTENTION PROBLEM.**

Explanation

An internal NetView error has caused NetView automation to fail.

System action

The MSU that failed to automate is not concatenated to this message.

Operator response

Notify the system programmer.

System programmer response

Contact IBM Software Support.

DW0038I ***function* IS NOT ALLOWED IN THE
product ENVIRONMENT**

Explanation

A command or function was attempted that is not allowed in the specified product environment.

Message Variables

function

The disallowed function

product

The product environment in which the function is not allowed

Important: Some disallowed function names are in the following form:

In these cases, *ssn* is the subsystem name that is associated with the given instance of the CNMCSSIR task. The message also specifies the allowed subsystem name, which is the first NetView subsystem name that is defined to z/OS (if one exists).

System action

The specified function does not run.

Operator response

Review the product documentation.

**DW0039I INVALID X'31' SUBVECTOR
RECEIVED.**

Explanation

A X'31' subvector that is not valid was received for a message text buffer.

System action

Processing continues.

Operator response

Notify the system programmer.

System programmer response

The subvector can be found as part of a X'3100' major vector. The buffer can be analyzed using a VTAM buffer trace and *Systems Network Architecture Formats*.

**DW0040I AUTOMATION TABLE *table*
ACTIVATED *mm/dd/yy hh:mm:ss*
BY *operatorid***

Explanation

You receive this message in response to an AUTOTBL STATUS request, if there is an active automation table. This message describes the current active NetView automation table.

Message Variables

table

The name of the active automation table.

mm/dd/yy hh:mm:ss

The date and time the active automation table was loaded. The date and time formats depend on the TRANSMG member, when in effect, and on the date and time operands of the DEFAULTS and OVERRIDE commands.

operatorid

The ID of the operator who requested the load of the current active table.

**DW0044I AUTOMATION TABLE LISTING
listingname SUCCESSFULLY
GENERATED**

Explanation

This message indicates that the automation table listing *listingname* you specified on a previous AUTOTBL command invocation was successfully generated.

Message Variables

listingname

The member or file name of the listing member specified on the AUTOTBL command.

**DW0045E LOGICAL ERROR ON VSAM RPL.
RC= X'*retcode*'. MSGAREA=
X'*msgarea*'. RPL FEEDBACK=
X'*fdbkcode*'.**

Explanation

VSAM encountered a logical error while attempting to execute a GET or PUT for a RPL.

This message is written only to the NetView log.

Message Variables

retcode

The return code error in VSAM register 15.

msgarea

The 5 bytes of data returned by VSAM in the MSGAREA of the RPL control block.

fdbkcode

The feedback field returned by VSAM.

System action

Processing continues, but the hardware monitor VSAM database was not properly initialized.

Operator response

Notify the system programmer.

System programmer response

See the appropriate VSAM documentation for your system.

**DW0046E PHYSICAL ERROR ON VSAM RPL.
RC= X'*retcode*'. MSGAREA=
msgarea. RPL FEEDBACK=
X'*fdbkcode*'. I/O BUFFER ADDR=
X'*bufferaddr*'**

Explanation

VSAM encountered a physical error while attempting to execute a GET or PUT for a RPL. This message is written only to the network log.

Message Variables

retcode

The return code error in VSAM register 15.

msgarea

The 116 bytes of data returned by VSAM in the MSGAREA of the RPL control block

fdbkcode

The feedback field returned by VSAM

bufferaddr

The address of the I/O buffer associated with the data where the error occurred

System action

Processing continues, but the hardware monitor VSAM database was not properly initialized.

Operator response

Notify the system programmer.

System programmer response

Refer to the z/OS Communications Server library for more information.

DW0047I UNABLE TO ROUTE DATA TO TASK
task, REASON CODE = reason

Explanation

An attempt to MQS a buffer to the specified task failed for the reason specified.

Message Variables

task

The name of the task to which the data was sent.

reason

The reason for the failure. The value is one of the following:

04

Buffer length not valid.

08

The task is not active.

12

Unable to obtain buffer storage.

For reason codes not listed here, see the DSIMQS macro in *IBM Z NetView Programming: Assembler*.

System action

The data is not sent.

Operator response

If the reason code is 08, determine why the task is not active. If possible, restart the task. For 04 or 12, notify the system programmer.

System programmer response

If the reason code is 12, determine why there is a shortage of storage. If the reason code is 04, contact IBM Software Support.

DW0048E AUTOMATION TABLE LISTING
HALTED DUE TO SEVERE ERROR.

Explanation

The process was halted because of a severe I/O error. This error can be a result of:

- Attempting to write records to a member or file for which there is no write access
- Filling the data set or the disk to which the records are being written
- Attempting to replace an existing member or file of the wrong type, or that is missing a required key field

System action

The process ends.

Operator response

Notify the system programmer.

System programmer response

Determine the cause of the error and correct the problem. Check the system log for additional messages that might better describe the problem.

Ensure that your test of the automation table member was successful. If it was, the member is loaded, but the automation table listing is not generated. You can generate a listing using the active, in-storage table after you have cleaned up the DSILIST data set.

DW0049W A STORAGE OVERLAY CONDITION
WAS DETECTED, AND A STORAGE
DUMP IS BEING ATTEMPTED

Explanation

The DSIFRE or DSIGET storage macro service detected that storage was overlaid or that internal storage table damage occurred. Possible reasons are:

- A program moved data beyond the end of the storage it owned.
- A DSIFRE specified the wrong length for the storage being freed.
- A DSIFRE was used to free storage that was not owned using DSIGET. The storage area specified overlaps storage that the NetView program is managing.
- NetView storage management tables have been overlaid.

If the error is detected by the DSIFRE service, message DWO115W is also issued. DWO115W describes the storage being freed and the task where the DSIFRE was invoked.

If the problem was detected by the DSIGET service, message DWO115W is not issued. The NetView program detected a problem in the tables needed to obtain storage for the request.

System action

A storage dump is taken and NetView processing continues.

Operator response

Notify the system programmer.

System programmer response

When the storage dump is complete, investigate the reason for the storage overlay dump. See the *IBM Z NetView Troubleshooting Guide* for more information on debugging the problem. You might want to recycle the NetView program as soon as possible to avoid other problems resulting from the storage overlay conditions.

DWO050E	FOR PROBLEM DEBUG: COMPONENT <i>component</i> MODULE: <i>module</i> RC: <i>retcode3 retcode4</i> <i>retcode5 retcode6 retcode7</i> <i>retcode8 retcode9</i>
----------------	---

Explanation

This message is written only to the network log and is intended for IBM Software Support to use in debugging internal NetView errors. This message accompanies other messages that are sent to the authorized receiver.

Message Variables

component

The component involved in the error.

module

The module involved in the error.

retcode3 — retcode9

These inserts are conditionally present and contain additional data, such as, module return codes to assist IBM Software Support in problem determination.

System action

Processing continues.

System programmer response

If the problem is the result of an error in NetView code, contact IBM Software Support.

DWO051I	FOCALPT <i>function</i> COMMAND FOR CATEGORY <i>category</i> COMPLETED SUCCESSFULLY
----------------	--

Explanation

A FOCALPT DROP or FOCALPT ACQUIRE command executed successfully. Messages that follow will fully describe any acquisition of a focal point that might have taken place. The internal representation of the focal point names is updated. You can use this message for automation, as it is the first message within a multiple-line message block.

Message Variables

function

The function of the FOCALPT command issued from an entry point (DROP or ACQUIRE).

category

The category of data for which the FOCALPT command was issued.

System action

Processing continues.

DWO052I	FOCALPT <i>function</i> COMMAND FOR CATEGORY <i>category</i> FAILED
----------------	--

Explanation

A FOCALPT DROP or FOCALPT ACQUIRE command failed to execute. Messages that follow fully describe the reason for the failure.

You can use this message for automation, as it is the first message within a multiple-line message block.

Message Variables

function

The function of the FOCALPT command issued from an entry point (DROP or ACQUIRE).

category

The category of data for which the FOCALPT command was issued.

System action

Processing ends.

Operator response

Take appropriate action as indicated by the messages that follow this message.

DWO053I CATEGORY IS UNKNOWN

Explanation

A FOCALPT DROP or FOCALPT ACQUIRE command failed to execute. The category specified is syntactically correct, but it is not known to the focal point function at this node. This message follows a DWO052I message. You cannot use this message for automation, as it is a message within a multiple-line message block.

System action

Processing ends.

Operator response

Enter the command again with a category known to the focal point function. You can use the FOCALPT QUERY command to determine the current status of categories known to the focal point function.

System programmer response

Determine if an MS application was not registered. This indicates that the focal point function was never informed of its category of interest.

**DWO054I NO REMOTE FOCAL POINTS
 DEFINED: CATEGORY *category***

Explanation

The FOCALPT DROP command was issued to a registered category that does not currently have a primary or backup focal point.

Message Variables

category

The category of data for which the FOCALPT command was issued.

System action

Processing ends.

Operator response

Enter the command again with a category known to the focal point function and that has focal points defined. You can use the FOCALPT QUERY command to determine the current status of categories known to the focal point function.

**DWO055I NO BACKUP FOCAL POINT
 DEFINED: CATEGORY *category***

Explanation

A FOCALPT DROP command specifying the BACKUP keyword was issued to a registered category that does not currently have a backup focal point.

Message Variables

category

The category of data for which the FOCALPT command was issued.

System action

Processing ends.

Operator response

Enter the command again with a category known to the focal point function and that has backup focal points defined. You can use the FOCALPT QUERY command to determine the current status of categories known to the focal point function.

**DWO056I REASON CODE OF X'*reason*'
 ENCOUNTERED**

Explanation

A FOCALPT DROP command failed to execute. The command failed for the reason indicated by the reason code. This message follows a DWO052I message.

You cannot use this message for automation, as it is a message within a multiline message block.

Message Variables

reason

The reason code that identifies the reason for the failure. The possible values are:

100

nn

An application notification failure with the following specific *nn* codes:

04

Storage shortage.

08

Fatal error.

12

Non-fatal error.

300nn

A failure concerning the locating of internal control blocks with the following specific *nn* codes:

04

Storage shortage.

08

Control block access failed.

System action

Processing ends.

Operator response

Notify the system programmer.

System programmer response

Identify the problem from the above reason codes and take the necessary corrective action. If you need further assistance, contact IBM Software Support.

DWO057I THE *type* FOCAL POINT *name* HAS BEEN DROPPED

Explanation

A FOCALPT DROP command executed successfully and the primary or backup focal point specified was dropped. The internal representation of the focal point is null. This message follows a DWO051I message. You cannot use this message for automation, as it is a message within a multiline message block.

Message Variables

type

Either PRIMARY or BACKUP.

name

The qualified name of the focal point that was dropped (*netid.luname*).

System action

Processing continues.

DWO058I THE OLD CURRENT FOCAL POINT *name* HAS BEEN SENT A REVOCATION

Explanation

A FOCALPT DROP command executed successfully. The previous current focal point was sent a revocation to inform it that it is no longer the focal point for this entry point for this category. This message follows a

DWO051I message. You cannot use this message for automation, as it is a message within a multiple-line message block.

Message Variables

name

The name of the previous current focal point (*netid.luname*).

System action

Processing continues.

DWO059I THE CURRENT FOCAL POINT *name* REMAINS UNCHANGED

Explanation

A FOCALPT DROP command executed successfully. The existing current focal point you specified was not affected by the results of the FOCALPT DROP command and is still the current focal point for this category for this entry point. This message follows a DWO051I message. You cannot use this message for automation, as it is a message within a multiple-line message block.

Message Variables

name

The name of the current focal point (*netid.luname*).

System action

Processing continues.

DWO060I CATEGORY ALERT SUPPORTS BOTH SNA-MDS AND NETVIEW-UNIQUE FOCAL POINTS

Explanation

This message is issued in response to a FOCALPT QUERY command with a category of ALERT. ALERT is unique in the NetView program because the NetView program supports both architected local SNA-MDS focal points and NetView-unique focal points for this category. As SNA-MDS focal points, non-NetView entry point applications can forward ALERT data to NetView over the NetView MS transport. As NetView-unique focal points, NetView entry points can forward ALERT data to the NetView focal point over LUC sessions. Because of this unique situation for category ALERT, the FOCALPT QUERY command provides two sets of information. One set is for the NetView program as an SNA-MDS local focal point, and another set is for the NetView program as a NetView-unique focal point.

You cannot use this message for automation, as it is a message within a multiple-line message block.

System action
Processing continues.

**DWO061I THE SNA-MDS FOCAL POINT
INFORMATION FOR CATEGORY
ALERT FOLLOWS:**

Explanation
This message is issued in response to a FOCALPT QUERY command with a category of ALERT. The messages that follow this message provide the current focal point state for category ALERT in regard to the architected SNA-MDS focal pointing method. You cannot use this message for automation, as it is a message within a multiple-line message block.

System action
Processing continues.

**DWO062I THE NETVIEW-UNIQUE FOCAL
POINT INFORMATION FOR
CATEGORY *category* FOLLOWS:**

Explanation
This message is issued in response to a FOCALPT QUERY command with a category of ALERT or STATUS. The messages that follow this message provide the current focal point state for the specified category in regard to the NetView-unique focal pointing method. STATUS supports only the NetView-unique focal pointing method. ALERT supports both NetView-unique and architected SNA-MDS focal pointing methods. NetView-unique focal pointing uses LUC sessions to forward ALERT or STATUS data from a NetView entry point to a NetView focal point.

You cannot use this message for automation, as it is a message within a multiple-line message block.

Message Variables
category
Either ALERT or STATUS.

System action
Processing continues.

**DWO063I NOT APPLICABLE, NETVIEW-
UNIQUE FOCAL POINTS ARE
ALWAYS REMOTE**

Explanation
This message is issued in response to a FOCALPT QUERY with a category of ALERT or STATUS. This message appears after message DWO173 for LOCAL focal points. Unlike the SNA-MDS method, the

NetView-unique focal pointing method does not support the concept of a local focal point application.

You cannot use this message for automation, as it is a message within a multiple-line message block.

System action
Processing continues.

**DWO064I THERE ARE CURRENTLY NO
NETVIEW-UNIQUE FOCAL POINTS
FOR CATEGORY *category***

Explanation
This message is issued in response to a FOCALPT QUERY command with a category of ALERT or STATUS. It indicates that no NetView-unique focal points currently exist for the specified category.

You cannot use this message for automation, as it is a message within a multiple-line message block.

Message Variables
category
Either ALERT or STATUS.

System action
Processing continues.

**DWO065I THERE ARE CURRENTLY NO SNA-
MDS FOCAL POINTS FOR
CATEGORY ALERT**

Explanation
This message is issued in response to a FOCALPT QUERY command with a category of ALERT. It indicates that no SNA-MDS local focal point currently exists for the ALERT category. The NetView program does not support SNA-MDS remote focal points for the ALERT category. This message appears after message DWO061.

You cannot use this message for automation, as it is a message within a multiple-line message block.

System action
Processing continues.

**DWO066I CATEGORY STATUS SUPPORTS
ONLY NETVIEW-UNIQUE FOCAL
POINTS**

Explanation
This message is issued in response to a FOCALPT QUERY command with a category of STATUS. STATUS supports only the NetView-unique focal pointing

method, so no SNA-MDS related messages are present. This message is issued instead of message DWO061.

You cannot use this message for automation, as it is a message within a multiple-line message block.

System action

Processing continues.

DWO067I *fptype* **NAME: name**

Explanation

This message is issued in response to a FOCALPT QUERY command and displays focal point information for the specified category.

You cannot use this message for automation, as it is a message within a multiple-line message block.

Message Variables

fptype

Either PRIMARY or BACKUP.

name

The current name of the remote focal point.

System action

Processing continues.

DWO068I **BACKUP NAME: N/A, NOT
ALLOWED FOR CATEGORY
STATUS**

Explanation

This message is issued in response to a FOCALPT QUERY command with a category of STATUS. STATUS does not currently support backup focal points. This message is issued instead of message DWO067 for a backup focal point.

You cannot use this message for automation, as it is a message within a multiple-line message block.

System action

Processing continues.

DWO069E ***command* COMMAND FAILED DUE
TO INTERNAL NETVIEW ERROR.
REENTER THE COMMAND.**

Explanation

The NetView program encountered an internal error while processing your command, and the command cannot continue.

This message can be accompanied by additional messages such as DWO138E or DWO335E that are sent to the authorized receiver.

Message Variables

command

The name of the command that failed.

System action

Processing of the command ends.

Operator response

Reenter the command. If the message persists, notify the system programmer.

System programmer response

Contact IBM Software Support.

DWO070I **THE FOCAL POINT DETAILS ARE
AS FOLLOWS:**

Explanation

A FOCALPT ACQUIRE command executed successfully. The messages that follow this message give detailed information on the current state of the focal points for this category.

You cannot use this message for automation, as it is a header message within a multiple-line message block.

System action

Processing continues.

DWO071I **NEW *fptype*: netid1.fpname1 OLD
fptype: netid2.fpname2**

Explanation

A FOCALPT ACQUIRE command completed successfully. This message displays the current and previous focal point details. The *fptype* can be either PRIMARY, BACKUP, or CURRENT. The primary and backup focal points are as exists in the internal focal point representation. When it exists, the CURRENT (or active) focal point is the primary or backup focal point.

You cannot use this message for automation, as it is a message within a multiple-line message block.

Message Variables

fptype

Either PRIMARY, BACKUP, or CURRENT.

netid1.fpname1

The qualified name of the NEW focal point for the *fptype* specified, or NONE.

netid2.fpname2

The qualified name of the OLD focal point for the *fptype* specified, or NONE.

System action

Processing continues.

**DW0072I FOCALPT *function* ISSUED FROM
 NODE *nodeid***

Explanation

This message is issued when a FOCALPT CHANGE command is received at an entry point on which a FOCALPT ACQUIRE is in progress. The FOCALPT ACQUIRE command is overridden.

You cannot use this message for automation, as it is a message within a multiple-line message block.

Message Variables

function
CHANGE.

nodeid
The qualified name of the focal point node from which the command was issued (*netid.luname*).

System action

Processing of the FOCALPT ACQUIRE command ends.

DW0073I LOCAL FOCAL POINT REGISTERED

Explanation

This node already contains an active local focal point application for the specified category. The FOCALPT DROP and FOCALPT ACQUIRE commands can be issued only on an entry point node. Therefore, they are disallowed because this node is a focal point node for the specified category.

You cannot use this message for automation, as it is a message within a multiple-line message block.

System action

Processing of the command ends.

**DW0074I *function* COMMAND ISSUED BY
 OPERATOR *operatorid* STILL IN
 PROGRESS**

Explanation

An operator issued a FOCALPT ACQUIRE command. Before it completes, another (or the same) operator issues a FOCALPT DROP or FOCALPT ACQUIRE command for the same category. The second request is rejected.

You cannot use this message for automation, as it is a message within a multiple-line message block.

Message Variables

function
ACQUIRE

operatorid
The NetView operator who issued the outstanding command.

System action

Processing ends on the FOCALPT DROP or FOCALPT ACQUIRE command.

Operator response

Issue the FOCALPT command again with the OVERRIDE keyword.

**DW0075I *function* WITH OVERRIDE ISSUED
 BY OPERATOR *operatorid***

Explanation

The specified operator *operatorid* has overridden your outstanding FOCALPT ACQUIRE command.

You cannot use this message for automation, as it is a message within a multiple-line message block.

Message Variables

function
Either ACQUIRE or DROP.

operatorid
The NetView operator who issued the overriding command.

System action

Processing on the FOCALPT ACQUIRE ends.

**DW0076I NO PRIMARY FOCAL POINT
 DEFINED**

Explanation

A FOCALPT ACQUIRE command explicitly or implicitly specified PRIMARY=KEEP with an explicit BACKUP value when no primary focal point is defined.

You cannot use this message for automation, as it is a message within a multiple-line message block.

System action

Processing ends.

**DW0077I INVALID DATA STRUCTURE
 RECEIVED FROM FOCAL POINT
 *name***

Explanation

A FOCALPT ACQUIRE command failed because the focal point function in this node received data that is not valid from the focal point function in the focal point node.

You cannot use this message for automation, as it is a message within a multiple-line message block.

Message Variables

name

The qualified name of the focal point
(*netid.luname*).

System action

Processing ends.

Operator response

Enter the command again. If the message persists, contact the system programmer.

System programmer response

Validate the software running on the focal point. Contact IBM Software Support and provide the NetView internal trace and log.

DW0078I NOTE -- THERE IS NO CURRENT REMOTE FOCAL POINT

Explanation

A FOCALPT ACQUIRE command successfully updated the internal representation of focal points, but did not obtain a new active focal point. The NetView program attempts to acquire the primary focal point first, and then the backup focal point (if one exists). When the timer expires, another attempt is automatically made to acquire the primary focal point.

You cannot use this message for automation, as it is a message within a multiple-line message block.

System action

Processing continues.

Operator response

If a focal point is required, issue the FOCALPT ACQUIRE command again for a node on which an active local focal point application exists. You can issue the DEFAULTS REACQPRI command to modify the timer interval for subsequent acquisition attempts of the primary focal point.

DW0079I

NOTE -- THE BACKUP FOCAL POINT IS THE CURRENT REMOTE FOCAL POINT

Explanation

The FOCALPT ACQUIRE command successfully updated the internal representation of focal points and obtained the backup focal point as the new active focal point. An unsuccessful attempt was made to acquire the primary focal point prior to acquiring the backup. When the timer expires, another attempt is automatically made to try to acquire the primary focal point.

You cannot use this message for automation, as it is a message within a multiple-line message block.

System action

Processing continues.

DW0080I TASK NAME '*taskname*' IS INVALID. IT IS A NETVIEW RESERVED NAME

Explanation

The *taskname* cannot be used as an optional task name. The name is reserved for NetView use only. These are the NetView reserved names: ALL, DPR, DST, HCL, HCT, LOG, MNT, NNT, OPT, OST, PPT, SYSOP, TCT, and any names that begin with DSI#.

Message Variables

taskname

The task name defined in the CNMSTYLE member or the value for the TASK parameter in the START command.

System action

NetView ignores the TASK statement or the START TASK command.

Operator response

If the message is issued as a result of a START TASK command, enter the command again using a different TASK value. If the message is issued at NetView initialization, notify the system programmer.

System programmer response

Correct the TASK definition in the CNMSTYLE member. See *IBM Z NetView Installation: Getting Started* for information on how to modify the CNMSTYLE member.

DW0081I *token* is *verb* implemented in *module*. Type = *type*

DWO082I	(no text)	DWO085E	The value 'MEM-' was specified for the MODFILT keyword without a member name following 'MEM-'.
Explanation This message is the control line for a multiline message listing the applications active on a NetView task. The following line is a label line naming the columns of data that follow. Each application is identified by the command verb that was used to start the application, except that NCCF identifies the standard command facility screen. Each application is also identified by a serial number in the range 1-4294967295 and is unique across each instance of the NetView program.		Explanation The MEM-<i>member</i> value was specified for the MODFILT keyword of the TRACE command with a missing <i>member</i>. For example, MODFILT=(MEM-) was specified. This is incorrect; a non-null DSIPARM member name must be specified. For example, MODFILT=(MEM-FILT1) specifies a DSIPARM member named FILT1.	
DWO083I	text	System action The NetView program stops processing the command.	
Explanation This message is used to display the NetView trace entries at the monitoring operator task when the TRACE command is issued with the MONOPER keyword.		Operator response Correct the command and enter it again.	
Message Variables text The text of the message varies depending on the type of NetView trace entries that are being displayed. For example, OPTION=MOD trace entries are displayed with a different format than OPTION=PSS trace entries. See the <i>IBM Z NetView Troubleshooting Guide</i> for examples.		DWO086I	<i>ddname</i> member <i>member</i> contains no MODFILT filter entries.
Explanation MODFILT=(MEM-<i>member</i>) was specified on the TRACE command; however, the specified data set member contains no MODFILT filter entries. For example, the member might contain only comment lines or blank lines. This is not an error, but it is unusual, because normally the specified member is expected to contain one or more MODFILT filter entries.		Message Variables <i>ddname</i> The data set name, for example, DSIPARM. <i>member</i> The name of a data set member.	
DWO084E	The value <i>value</i> specified for keyword <i>keyword</i> on the command command is incorrect. It is too long.	System action The NetView program continues processing the command.	
Explanation The value specified for the keyword is too long.		DWO087E	<i>ddname</i> member <i>member</i> contains the following incorrect MODFILT filter entry: 'MEM-badmem'. Nesting members is not permitted.
Message Variables <i>value</i> The specified value. <i>keyword</i> The keyword. <i>command</i> The command.		Explanation MODFILT=(MEM-<i>member</i>) was specified on the TRACE command. A MODFILT filter entry in the data set member incorrectly attempts to include another data set member. Nesting members is not permitted. A MODFILT filter entry within a data set member cannot attempt to include another data set member.	
System action The NetView program stops processing the command.			
Operator response Correct the command and enter it again.			

Message Variables

ddname

The data set name, for example, DSIPARM.

member

The name of a data set member.

MEM-badmem

The MODFILT filter entry present in the data set member that incorrectly attempts to include another data set member.

System action

The NetView program stops processing the command.

Operator response

Remove the *MEM-badmem* entry from the data member; then enter the command again.

DWO088E **An error was encountered while processing *ddname* member *member*.**

Explanation

The NetView program encountered an error while reading and processing lines in the data set member. Other error messages will always accompany this message, and they will precisely identify the problem. These accompanying messages can either precede or follow the DWO088E message.

Message Variables

ddname

The data set name, for example, DSIPARM.

member

The name of a data set member.

System action

See the accompanying messages.

Operator response

See the accompanying messages.

DWO089I ***type* not currently decoded. The trace record follows.**

Explanation

The NCCF TRACE command was previously issued with the MONOPER keyword. The current trace record that is being displayed at the MONOPER monitoring task has a trace record type that is not recognized. Presently, not all types of trace records are recognized and decoded by MONOPER processing. When these unrecognized trace records are encountered, message

DWO089I is issued, followed by one or more DWO083I messages which display the undecoded trace record in hexadecimal.

Message Variables

type

The trace record type. See the *IBM Z NetView Troubleshooting Guide* for a list of the trace record types.

DWO090A ***action* error for *component*. Maintenance required.**

Explanation

A serious error occurred when attempting to perform the specified action by the component named.

This message will be accompanied by other system or NetView messages providing details of the failure.

Message Variables

action

Either ALLOCATE or WRITE. An action necessary to the proper function of the component.

component

A function of the NetView program.

Operator response

Notify the system programmer.

System programmer response

Examine the log for messages that provide details about the failure.

If the component is the Canzlog log, the failure prevents data from being saved in the Canzlog archive. Take manual or automated steps to correct the error. One of the following actions occurs at the time of the failure:

- The NetView program retries the action approximately every 5 minutes until it succeeds.
- Archiving stops.
- The NetView program ends.

If the CNMSTYLE definitions indicate that archiving is enabled and the RESTYLE ARCHIVE command is run, the NetView program retries the action. To avoid the loss of data, correct the problem as soon as possible and before a system IPL.

DWO091I ***action* received. No operator dataset defined for *DDN*.**

Explanation

The action specified was partially processed, but could not be completed because of a lack of access to the DDN named.

Message Variables

action

Previously specified command, subcommand, or keyword.

DDN

A data definition name.

Operator response

None required unless completion of the action is necessary.

System programmer response

Determine why the DDN was unavailable. User the OVERRIDE command to specify a correct value for the DDN.

DW0092I **action ignored. Insufficient input provided.**

Explanation

You entered a command or subcommand, possibly from a panel, but did not provide enough input parameters, panel selections, or both input parameters and panel selections. The action is ignored.

Message Variables

action

Previously specified command, subcommand, or keyword.

Operator response

Provide additional parameters or enter another command.

DW0093W **Required automation at risk.
Member *tblName* not activated.**

Explanation

The automation in the table or include member named is considered necessary for proper operation of the NetView product. It is not an active part of the current automation table list.

Message Variables

tblName

The name of an automation table member or an include member in an automation table.

Operator response

Notify the system programmer.

System programmer response

Review the log to determine whether the member specified contained an error or if the required automation activation command was in error. Determine whether the required automation was included in a member of a different name. If this message occurred during NetView initialization, then it may be necessary to restart the NetView program after correcting the problem.

DW0094W **NetView at ASID *asidno* is using
SSI *ssiname* - *procname***

Explanation

The subsystem router task cannot connect with or receive messages or commands from the subsystem interface because another instance of the NetView program is so connected.

Message Variables

asidno

The Address Space ID number of the other program.

ssiname

The four-character name of the SSI that is in contention.

procname

The Job name of the instance of the NetView program that is contending for connection to the named subsystem interface.

System action

The NetView program ends.

Operator response

Notify the system programmer.

System programmer response

This contention is caused by two instances of the NetView program in the same LPAR having the same first four characters in the job name. The job name is usually the same as the procedure name. Change the job name of one NetView instance and then restart that instance.

DW0095A **NetView at ASID *asidno* forced
OFF SSI *ssiname* - *procname***

Explanation

The subsystem router task removed a connection to the subsystem interface from another instance of the NetView program.

Message Variables

asidno

The Address Space ID number of the other program.

ssiname

The four-character name of the SSI that is in contention.

procname

The Job name of the instance of the NetView program that is contending for connection to the named subsystem interface.

System action

The subsystem router task connected to the subsystem and removed the connection from the procedure named in the message. If the procedure named by *procName* is active, it might not tolerate the disconnection.

Operator response

Notify the system programmer.

System programmer response

If the procedure named by *procName* is active, stop the subsystem router task for that instance of the NetView program. Otherwise, review the log to determine why the contending instance of the NetView program was unable to shut down cleanly.

DW0096E	<i>part</i> incorrectly installed with <i>attr_name</i> attribute
----------------	--

Explanation

The *part* part is incorrectly installed with the *attr_name* attribute.

Message Variables

attr_name

The erroneous attribute.

part

The name of the failing part.

System action

The system action is determined by how critical the part is to the overall NetView operation. If the part is DSIRXPRM, the NetView program ends.

Operator response

Notify the system programmer.

System programmer response

Install the part with the correct attribute. If the part is DSIRXPRM, delete the current copy of DSIRXPRM from your load library. Make sure that the job that is used to link edit DSIRXPRM (such as the CNMSJM11 sample job) uses only the REUS attribute, and then run the job. After the job completes successfully, restart the NetView program.

DW0097E	Configuration not supported <i>reason text</i>
----------------	---

Explanation

The configuration is not supported.

Message Variables

reason_text

Text describing the configuration that is not supported.

DW0098W	UNAUTHORIZED CLIENT <i>username</i> SENT DATA TO <i>service</i>, ID = '<i>symbol</i>'
----------------	--

Explanation

Data has been received from a program or client identified by *username*. This user is not authorized to use the *service*. If the data contains an identifier, that is given as "ID".

Message Variables

username

An identifier for a job or client, usually an SAF ID.

service

A service or a command that requires authorization.

symbol

If the request data contains a sequence number or other identifying text, that information is given as *symbol*.

System action

The *service* request is ignored.

Operator response

Notify the system programmer.

System programmer response

Determine whether the client should have access to the specified service. If so, configure the client's

access to the service using the appropriate configuration steps documented in the NetView library.

If the service is APSERV, see the APSERV.PREFIX statements in the *IBM Z NetView Administration Reference* and the sections that discuss APSERV in the *IBM Z NetView Security Reference*.

DWO100I	REQID reqid : ORIG nodetype nodename CNFG nodetype nodename [...]
----------------	--

Explanation

This message reflects the configuration of the node that answered the VPD request. The data returned in this message is built while the system is running.

Message Variables

reqid

The ID of the request to which this message is responding.

nodetype and nodename

The *nodetype* and *nodename* following ORIG describe the node where the VPD request originated. The pair or pairs of *nodetypes* and *nodenames* following CNFG describe the configuration of the originating node. For more information on the data returned in *nodetype* and *nodename*, see the *IBM Z NetView Application Programmer's Guide*.

DWO101I	REQID reqid : vpdfield=xxx [...]
----------------	---

Explanation

This message contains attached device configuration data. The data is returned in subvector X'82' and is built while the system is running.

Message Variables

reqid

The ID of the request to which this message is responding.

vpdfield=xxx [...]

Various fields and values that describe the attached device. For details on these fields and values, see the *IBM Z NetView Application Programmer's Guide*.

DWO102I	REQID reqid : prodid vpdfield=xxx [...]
----------------	--

Explanation

This message contains data about the type of product of a particular node. The data is returned in subvectors

X'10' and X'11' and is built while the system is running.

Message Variables

reqid

The ID of the request to which this message is responding.

prodid

Identifies the type of product.

vpdfield=xxx [...]

Various fields and values that describe the type of product. For details on these fields and values, see the *IBM Z NetView Application Programmer's Guide*.

DWO103I	REQID reqid : ORIG nodetype nodename CNFG nodetype nodename [...]
----------------	--

Explanation

This message is issued instead of DWO100 if the configuration reported by VTAM includes more names than the routine can manage. This happens when the amount of storage allocated during initialization (on the VPDSTOR operand of the VPDINIT statement) is not sufficient. The data returned in this message is built while the system is running.

Message Variables

reqid

The ID of the request to which this message is responding.

nodetype and nodename.

The *nodetype* and *nodename* following ORIG describe the node where the VPD request originated. The pair or pairs of *nodetypes* and *nodenames* following CNFG describe the configuration of the originating node. For more information on the data returned in *nodetype* and *nodename*, see the *IBM Z NetView Application Programmer's Guide*.

Operator response

Contact the system programmer.

System programmer response

Increase the size specified in the VPDSTOR parameter in the VPDINIT definition statement.

DWO105I	REQID reqid : vpdfield=xxx [...]
----------------	---

Explanation

This message contains product set attribute data. The data is returned in subvector X'84' and is built while the system is running.

Message Variables

reqid

The ID of the request to which this message is responding.

vpdfield=xxx [...]

Various fields and values that describe the product set attributes. For details on these fields and values, see the *IBM Z NetView Application Programmer's Guide*.

DWO106I **REQID reqid : vpdfield=xxx [...]**

Explanation

This message contains additional product set attribute data. The data is returned in subvector X'86' and is built while the system is running.

Message Variables

reqid

The ID of the request to which this message is responding.

vpdfield=xxx [...]

Various fields and values that describe the additional product set attributes. For details on these fields and values, see the *IBM Z NetView Application Programmer's Guide*.

DWO110I **REQID reqid : vpdfield=xxx [...]**

Explanation

This message contains link configuration data. The data is returned in subvector X'52' and is built while the system is running.

Message Variables

reqid

The ID of the request to which this message is responding.

vpdfield=xxx [...]

Various fields and values that describe the link connection. For details on these fields and values, see the *IBM Z NetView Application Programmer's Guide*.

DWO111I **REQID reqid : SNS sensecode**

Explanation

This message contains SNA sense data supplied by a node that cannot satisfy a VPD request. The data is returned in subvector X'7D'.

Message Variables

reqid

The ID of the request to which this message is responding.

sensecode

The 8-character hexadecimal sense code of the node that cannot satisfy the VPD request.

DWO115W **A STORAGE OVERLAY WAS DETECTED WHEN STORAGE AT ADDRESS X'address' WAS FREED BY TASK task**

Explanation

An overlay of storage was detected by the DSIFRE macro service. This message follows either message DWO049W or DWO316W and identifies the address of the storage being freed and the task where the DSIFRE macro was invoked.

Message Variables

address

Address of storage being freed by the DSIFRE macro.

task

Name of the task where the DSIFRE macro was invoked.

System action

NetView processing continues.

Operator response

Notify the system programmer.

System programmer response

Using the address of the storage being freed and the task name where the NetView service macro DSIFRE was invoked, investigate the reason for the storage overlay condition. Consider recycling the NetView task identified in the message as soon as possible to avoid other problems resulting from the storage overlay conditions.

DWO119A **FOCAL POINT DEFINITION IS NOT VALID, DSICRTR IS NOT ACTIVE**

Explanation

A LIST FOCPT command was entered, but the DSICRTR task was not active.

Operator response

Start the DSICRTR task.

**DWO120I STATUS NOT FORWARDED, THIS
 HOST IS A STATUS FOCAL POINT**

Explanation

A LIST FOCPT command was entered, but this NetView host is a status focal point and therefore is not forwarding status.

**DWO130I *command* COMMAND FAILED.
 REASON CODE OF X'*reason*'
 ENCOUNTERED**

Explanation

The command entered failed because of the reason indicated.

Message Variables***command***

The name of the command that failed

reason

The reason code that identifies the problem

If *reason*=X'000010nn', it is only valid for the FOCALPT command. The destination of the FOCALPT command sent back an MS capabilities reply rejecting the MS capabilities request for this node to be its focal point. *nn* represents the rejection reason. These codes can be:

00

No specific reason stated.

01

The function is not supported.

02

There is an existing focal point defined for this category that has a higher rank.

06

The receiving node does not support having an explicit focal point.

Otherwise, the reason code is the same as the SNA sense code. Refer to the Systems Network Architecture library for more information about SNA sense codes.

System action

The command is not processed.

Operator response

Notify the system programmer.

System programmer response

Identify the problem by finding the SNA sense code in the Systems Network Architecture library and take corrective action.

**DWO131I FOCALPT COMMAND FAILED, NO
 MS APPLICATION IS CURRENTLY
 REGISTERED AS A LOCAL FOCAL
 POINT APPLICATION FOR TYPE
 *type***

Explanation

The FOCALPT command failed because there are no local management services (MS) applications currently registered as a local focal point for the type specified. That is, the command failed because you are requesting that the target node in the FOCALPT command change its focal point to be your node for the specified type. However, your node is not allowed to be a focal point for this type because no local MS application in your node currently qualifies as a focal point for this type.

Message Variables***type***

The type of data for which no local focal point exists in your node

System action

The command is not processed.

Operator response

The FOCALPT command failure can result from either the hardware monitor's BNJDSERV task not being active, or the multiple-domain support (MDS) transport's DSI6DST task not being active. Ensure that both tasks are active and retry the command. If the command fails with both tasks active, notify the system programmer.

System programmer response

First determine if a local MS application must be registered as a focal point for the type specified in the node. If not, simply inform the operator that this node is not defined to be a focal point for the specified type. If the node is defined, determine why there is no local focal point registered for the specified type.

See *IBM Z NetView Installation: Configuring Additional Components* to determine why there is no local focal point registered for the specified type.

**DWO132I FOCALPT *function* COMMAND
 FAILED - TARGET DOMAIN *target*
 CANNOT BE ITS OWN PRIMARY
 REMOTE FOCAL POINT**

Explanation

The command failed because the target node name you specified (also known as the LU name or the

domain name) matches the local domain name. For the FOCALPT CHANGE command, the target domain cannot be a remote focal point for itself. A single domain can be its own local focal point for various types (such as ALERT or OPS_MGMT), but it is never allowed to be its own remote focal point (either primary or backup) for a type.

Message Variables

function

The function of the FOCALPT command issued (ACQUIRE or CHANGE).

target

The target domain specified in the command.

System action

The command is not processed.

Operator response

Enter the command again with a valid remote focal point domain name.

DWO133I	WARNING: PRIMARY AND BACKUP FOCAL POINTS FOR CATEGORY <i>fpcat</i> HAVE THE SAME VALUE=<i>value</i>. BACKUP VALUE IS IGNORED.
----------------	--

Explanation

In either a DEFFOCPT statement in the DSI6INIT member of DSI6DST task initialization data set, or in a FOCALPT command, both the remote primary (or target) focal point and the backup focal point names have the same value. This is not allowed and the backup value is ignored. The primary (or target) focal point name is accepted and processed.

Message Variables

fpcat

PRIMARY for the DEFFOCPT statement or TARGET for the FOCALPT command.

value

The value of the primary and backup focal points.

System action

Processing continues.

Operator response

If the error occurs on a FOCALPT command, enter the command again without the backup specified, or specify the backup as being something other than the primary. For example, specify something other than the node name from which you are entering the command.

If the error occurs on the DEFFOCPT statement, notify the system programmer.

System programmer response

If the error occurred on a DEFFOCPT statement, either remove the backup specification, or change it so that it differs from the primary focal point name.

DWO134I	IDENTICAL VALUES DETECTED FOR THE REMOTE PRIMARY AND BACKUP FOCAL POINT NAMES FOR TYPE <i>type</i>. THE BACKUP FOCAL POINT NAME HAS BEEN REMOVED.
----------------	--

Explanation

A request was received to change the value of the remote primary (and possibly the remote backup as well) focal point for the indicated focal point. The request most likely originated from a FOCALPT CHANGE command in another node. The value or values were changed, and after the change it was found that both the remote primary and backup focal points had the same value for the specified type. This is not allowed, so the backup focal point is set to null and no backup focal point now exists for this type. You can use the FOCALPT QUERY command to verify the set focal points.

Note: This message is sent to the authorized receiver and must be held until explicit action is taken.

Message Variables

type

The type of data for which focal point information is being given.

System action

Processing continues.

Operator response

If you want to acquire a backup focal point, issue the FOCALPT ACQUIRE command. If you want to restore the focal points defined in the SYSDEF instead of the currently active focal points, stop the DSI6DST task and restart it. Otherwise, no action is needed.

DWO136I	<i>function function2 command</i> REQUEST FAILED DURING <i>process</i> PROCESS REASON= <i>reason</i>
----------------	---

Explanation

The command request failed during the *process* process because of *reason* indicated.

Message Variables

function

The first function name, such as FOCALPT or FPINFO.

function2

The second function name, such as SAVE/RESTORE or MSCAPS.

command

The command requested, such as SAVE, RESTORE, DELETE, or REPLACE.

process

The process where the command failed. It has one of the following values:

01

Initialization.

61

Explicitly acquiring a focal point through a FOCALPT CHANGE command.

64

Implicitly acquiring a focal point through a DEFFOCPT statement.

reason

The reason why the command failed. It has one of the following values:

04

Storage shortage.

08

Save/Restore task (DSISVRT) abend.

12

Buffer length is not valid.

16

Combination of buffers is not valid.

20

Number of buffers is not valid.

System action

Processing continues, but the focal point does not perform any SAVE and RESTORE functions until the error is corrected. No more focal point information is saved, restored, or deleted to and from the VSAM file.

Operator response

Notify the system programmer.

System programmer response

Determine the reason for the failure. If the reason code is 08 (ABEND), see the related messages to find out why DSISVRT abends. If the reason code is 04, 12, 16, or 20, contact IBM Software Support.

After you have corrected the error, recycle subtask DSI6DST. Recycle the NetView program if the focal point information needs to be saved in VSAM.

DWO137I

**FOCAL POINT AUTHORIZATION
FOR CATEGORY *category* HAS
BEEN REVOKED BY DISTRIBUTED
NODE *node***

Explanation

A FOCALPT DROP or FOCALPT ACQUIRE command was successfully issued at the specified distributed node. Data for the specified category is no longer sent to this focal point.

Message Variables**category**

A focal point category name (for example, OPS_MGMT).

node

The qualified LU name of the distributed node that was an entry point of the specified category for this focal point.

System action

The entry point data for this category is no longer sent to this focal point.

DWO138E

**FOCAL POINT FUNCTION
ENCOUNTERED INTERNAL ERROR.
UNEXPECTED RESULTS MAY
OCCUR AS PROCESSING
CONTINUES.**

Explanation

The focal point function encountered an internal error during processing from which it is unable to recover. As a result, the focal point function might be unable to function properly and unexpected results can occur. These results can be:

- Local management services (MS) applications might not be notified of a focal point change. For example, the focal point changed but one or more local MS applications were not made aware of it.
- The focal point function was unable to build and send a request or reply to another node, so normal focal point communication between nodes was unable to complete successfully. For example, a focal point cannot be obtained or revoked.
- The focal point function was unable to properly maintain internal tables, and they might be corrupted. This results in incorrect focal point being sent to a local MS application, or incorrect focal point status information being displayed from a FOCALPT QUERY command.
- The focal point function might stop trying to reacquire its remote primary focal point.

- The focal point function might improperly process the registration of a local MS application that has registered as either a focal point itself, or as interested in a category. (Interested in a category means that the application wants to be sent notice whenever the focal point status changes for the interested category).

This message is accompanied by message DWO050E in the network log. DWO050E is present to help IBM Software Support debug the internal NetView errors.

System action

Processing continues, but unexpected results can occur in the focal point function.

Operator response

Notify the system programmer.

System programmer response

Stop and restart the DSI6DST task to reinitialize the focal point function. You can delay this recycling until your system is at an acceptable point for recycling. However, the unexpected results discussed previously might occur.

If this message persists, contact IBM Software Support.

DWO139I **FOCALPT CHANGE COMMAND
FAILED - TARGET DOMAIN *target*
CANNOT BE ITS OWN BACKUP
REMOTE FOCAL POINT**

Explanation

The command failed because the target node name you specified (also known as the LU name or the domain name) matches the local domain name. For the FOCALPT CHANGE command, the target domain cannot be a remote focal point for itself. A single domain can be its own local focal point for various types (such as ALERT or OPS_MGMT), but it is never allowed to be its own remote focal point (either primary or backup) for the same type.

Message Variables

target

The target domain specified in the command.

System action

The command is not processed.

Operator response

Enter the command again with a valid remote focal point domain name.

DWO142I ***resource* REMOVED FROM
REGISTRATION FILE BECAUSE OF
X'*sensecode*' SENSE CODE**

Explanation

A resource was removed from the registration file because of a sense code that is not valid.

Message Variables

resource

The name of the resource for which the sense code was issued.

sensecode

The hexadecimal sense code.

System action

The request is ignored.

Operator response

Notify the system programmer.

System programmer response

Determine the source of the error from the sense code and correct the problem.

DWO143I **DSIROVS [NOT | NO LONGER]
AVAILABLE TO PROCESS
REGISTRATIONS**

Explanation

A PU type 2 gateway attempted to register a configuration change with the NetView program, but the DSIROVS registration task was not available.

Message Variables

NOT

DSIROVS was never started. This message is issued for each attempt by a PU gateway to register.

NO LONGER

DSIROVS was previously started but is no longer active. This message is only issued once.

System action

If a registration table exists, it is disabled and the registration request is discarded.

Operator response

Issue a START command for task DSIROVS.

System programmer response

It is recommended that DSIROVS be started during NetView initialization.

**DWO144I FRONT END GATEWAY *puname*
HAS REGISTERED**

Explanation

A front end gateway registered one attached device. Subsequent device registrations to this gateway are not reported.

Message Variables

puname

The name of the front end gateway that registered the device.

System action

Processing continues.

**DWO145I FRONT END GATEWAY *puname* NO
LONGER REGISTERED**

Explanation

A front end gateway, that previously had devices registered to it, reset all registered devices.

Message Variables

puname

The name of the front end gateway that reset all the registered devices.

System action

Processing continues.

**DWO150I NETVIEW BRIDGE FAILURE IN
TASK *task*. INVALID BUFFER
RECEIVED**

Explanation

This message is usually issued alone, and rarely occurs. It can be created if a token sent from the server is neither a READY nor a QUIESCE token, or if a buffer is received from the server that is all blanks. Both of these failures occur in the NetView Bridge task. This message can also be created if a buffer greater than 32767 bytes is received in the cross-domain receive component of NetView Bridge. This failure is in the Remote Bridge task.

Message Variables

task

The name of the task that failed.

System action

The function fails.

Operator response

Notify the system programmer.

System programmer response

Take any necessary corrective action. If you need further assistance, contact IBM Software Support.

**DWO151I NETVIEW BRIDGE FAILURE IN
TASK *task*. SNA SENSE CODE OF
X'sensecode' ENCOUNTERED**

Explanation

The function listed in the message failed because of the reason indicated by the SNA sense code. DWO546I is issued along with DWO151I.

Message Variables

task

The name of the task that encountered the error

sensecode

The SNA sense code that identifies the problem. Refer to the Systems Network Architecture library for more information about the SNA sense codes.

System action

The function fails.

Operator response

Notify the system programmer.

System programmer response

Identify the problem by finding the SNA sense code in the Systems Network Architecture library. Take the necessary corrective action. If you need further assistance, contact IBM Software Support.

**DWO152I NETVIEW BRIDGE FAILURE IN
TASK *task*. *macro* RETURN CODE =
*retcode***

Explanation

A macro failed with a return code in register 15. This message is usually issued alone and often indicates a severe error that causes the task to abend.

Message Variables

task

The name of the task that failed.

macro

The name of the macro that failed.

retcode

The return code in register 15 of the macro that failed.

System action

The macro or function fails.

Operator response

Notify the system programmer.

System programmer response

If the program-to-program interface function fails, identify the problem by finding the return code in the *IBM Z NetView Application Programmer's Guide*.

If the MDS_MU_DECODE function fails, the return codes are:

- 0** Successful.
- 4** Type for decoding request is not valid.
- 10** Data truncated.
- 12** Cursor is not valid.
- 16** No parameter exists in the encoded data.
- 18** Fatal.

Otherwise, identify the problem by finding the return code in *IBM Z NetView Programming: Assembler*. Take any necessary corrective action. If you need further assistance, contact IBM Software Support.

DWO153I **task : IEFSSREQ MACRO ERROR:**
(REQUEST | RETURN) JOBID, R15=
retcode15 RC= retcode

Explanation

The specified task was unable to request or release a *jobid* to the primary job entry subsystem.

Message Variables

task

The name of the task that issued the IEFSSREQ macro.

retcode15

The return code from the IEFSSREQ macro. The value will be one of the following:

X'04'

The primary job entry subsystem does not support this function.

X'08'

The primary job entry subsystem exists, but is not up.

X'0C'

The primary job entry subsystem does not exist.

X'10'

The function is not completed—disastrous error.

X'14'

A logical error. For example, bad subsystem options block (SSOB), incorrect length.

retcode

The return code from SSOBRETN. The value will be one of the following:

X'04'

The request or return *jobid* was unsuccessful.

X'08'

The request is without a matching return.

X'0C'

The return is without a matching request.

X'24'

A program error.

System action

The request or release *jobid* function is not processed.

System programmer response

Verify that the primary job entry subsystem is defined correctly and is active. This problem prevents submission of batch jobs using the SUBMIT command and allocating system output files using the ALLOCATE command.

DWO154I **'task' : NETVIEW HAS (RECEIVED |**
RELEASED) JES JOBID 'jobid'

Explanation

If the NetView program is started under the master subsystem (SUB=MSTR), it is not assigned a JES *jobid*. A JES *jobid* is required for the SUBMIT command to submit batch jobs, and for the ALLOCATE command to allocate system output data sets. When started under the master subsystem, the NetView program requests a *jobid* from JES. The NetView program releases the *jobid* when JES or the NetView program ends.

However, after NetView receives a *jobid* from JES, if JES abends or ends without notifying NetView to release the jobid, NetView might not be able to end before JES becomes active again.

Message Variables

task

The name of the task that requested or released the JES *jobid*.

jobid

The JES *jobid*.

**DWO155I NETVIEW DOES NOT HAVE A JES
JOBID**

Explanation

This message is a response to a SUBMIT or ALLOCATE command. The NetView program does not have a JES *jobid* and the services requested by these commands require a JES *jobid*.

System action

The command is not processed.

Operator response

Verify that the primary job entry subsystem is defined correctly and is active. Verify that NetView task DSIRQJOB is active by issuing a LIST TASK=DSIRQJOB command. If it is not active, issue START TASK=DSIRQJOB. If this message occurs frequently, notify the system programmer.

System programmer response

To start this task every time the NetView program is started, change your CNMSTUSR or CxxSTGEN member as follows:

- Override the TASK.DSIRQJOB.MOD=*NONE* entry in the CNMSTYLE member by adding the following entry:

TASK.DSIRQJOB.MOD=DSIRQJOB

- Override the TASK.DSIRQJOB.INIT=N entry in the CNMSTYLE member by adding the following entry:

TASK.DSIRQJOB.INIT=Y

**DWO156I NETVIEW BRIDGE TRANSACTION
REQUEST TERMINATED IN TASK
task. macro RETURN CODE =
*retcode***

Explanation

A macro failed with a return code in register 15. DWO546I and DSI384I might be issued along with this message.

Message Variables

task

The name of the task that failed.

macro

The name of the macro that failed.

retcode

The return code in register 15 of the macro that failed.

System action

The macro or function fails.

Operator response

Notify the system programmer.

System programmer response

If the program-to-program interface function fails, identify the problem by finding the return code in the *IBM Z NetView Application Programmer's Guide*.

If the MDS_MU_DECODE function fails, the return codes are:

- 0** Successful.
- 4** Type for decoding request is not valid.
- 10** Data truncated.
- 12** Cursor is not valid.
- 16** No parameter exists in the encoded data.
- 18** Fatal.

Otherwise, identify the problem by finding the return code in *IBM Z NetView Programming: Assembler*. If you need further assistance, contact IBM Software Support.

**DWO157I NETVIEW BRIDGE TRANSACTION
REPLY TERMINATED IN TASK
task. macro RETURN CODE =
*retcode***

Explanation

A macro failed with a return code in register 15. This message is usually issued alone, but DWO546I might be issued with this message.

Message Variables

task

The name of the task that failed.

macro

The name of the macro that failed.

retcode

The return code in register 15 of the macro that failed.

System action

The macro or function fails.

Operator response

Notify the system programmer.

System programmer response

If the MDS_MU_SEARCH function failed, the return codes are:

- 0** Search successful.
- 4** Search failure.
- 08** Field length is zero.

If the MDS_MU_DECODE function failed, the return codes are:

- 0** Search successful.
- 4** Type for decoding request is not valid.
- 10** Data truncated.
- 12** Cursor is not valid.
- 16** No parameter exists in the encoded data.
- 18** Fatal.

Otherwise, identify the problem by finding the return code in *IBM Z NetView Programming: Assembler*. Take any necessary corrective action. If you need further assistance, contact IBM Software Support.

**DWO158W A CONTROL BLOCK OVERWRITE
CONDITION WAS DETECTED, AND**

**A STORAGE DUMP IS BEING
ATTEMPTED**

Explanation

A control block overwrite of a DSISWB/DSICWB control block was detected. The most common cause of this problem is a program that attempts to free the same control block twice at two different places using the DSILCS macro.

System action

A storage dump is taken and NetView processing continues.

Operator response

Notify the system programmer.

System programmer response

When the storage dump is complete, investigate the reason for the control block overwrite. See the *IBM Z NetView Troubleshooting Guide* for more information on debugging the problem. Consider recycling the NetView program as soon as possible to avoid other problems resulting from the control block overwrite.

**DWO159W A CONTROL BLOCK OVERWRITE
CONDITION WAS DETECTED, BUT
A STORAGE DUMP WAS NOT
REQUESTED**

Explanation

A control block overwrite of a DSISWB/DSICWB control block was detected. The most common cause of this problem is a program that attempts to free the same control block twice at two different places using the DSILCS macro.

System action

A dump did not occur because the limit for the number of storage dumps to occur for control block overwrite conditions (specified on the DEFAULTS STORDUMP command) has been exceeded. Processing continues.

Operator response

Notify the system programmer.

System programmer response

If you have not been able to find the problem from previous dumps, consider resetting the STORDUMP counter with the DEFAULTS command to get a storage dump if this problem reoccurs. Recycle the NetView program as soon as possible to avoid other problems.

**DWO161I OPERATION SAVE FAILED FOR
type WITH QUALIFIER id**

Explanation

The SAVE request failed for the element described by *type* and *id*.

Message Variables***type***

The type of data for which the request failed. This can be TIMER or FPINFO.

id

The timer element identification, or MSCAPS if the type is FPINFO.

System action

If the type is TIMER, the timer event remains in the internal timer list but is not saved. If the type is FPINFO, the focal point information is not saved to VSAM. When a failure occurs and the type is FPINFO, this NetView program might not acquire the correct focal point.

Operator response

Notify the system programmer.

System programmer response

Message DWO165I, DWO166I, DWO167I, or DWO168I is issued with this message. See the system programmer response of the associated message for details of the failure.

**DWO162I OPERATION RESTORE FAILED FOR
type WITH QUALIFIER id**

Explanation

The RESTORE request failed for the element described by *type* and *id*.

Message Variables***type***

The type of data for which the request failed. This can be TIMER or FPINFO.

id

The timer element identification, or MSCAPS if the type is FPINFO.

System action

If the type is FPINFO, the function was unable to re-acquire any information that it might have had before the task was started. For FPINFO, the NetView program is unable to send an MS capabilities revocation to any previous focal point. When a failure

occurs and the type is FPINFO, this NetView program might not acquire the correct focal point. If the NetView program is brought down and restarted, the program might not acquire the correct information when it is restarted.

Operator response

Notify the system programmer.

System programmer response

Message DWO165I, DWO166I, DWO167I, or DWO168I is issued with this message. See the system programmer response of the associated message for details of the failure.

**DWO163I OPERATION DELETE FAILED FOR
type WITH QUALIFIER id**

Explanation

The DELETE request failed for the element described by *type* and *id*.

Message Variables***type***

The type of data for which the request failed. This can be TIMER or FPINFO.

id

The timer element identification, or MSCAPS if the type is FPINFO.

System action

If the type is FPINFO, the focal point information is not saved to VSAM. The NetView program does not attempt to perform a SAVE after the DELETE has failed. When a failure occurs and the type is FPINFO, this NetView program might not acquire the correct focal point.

Operator response

Notify the system programmer.

System programmer response

Message DWO165I, DWO166I, DWO167I, or DWO168I is issued with this message. See the system programmer response of the associated message for details of the failure.

**DWO164I OPERATION REPLACE FAILED FOR
type WITH QUALIFIER id**

Explanation

The REPLACE request failed for the element described by *type* and *id*. REPLACE is a combination of RESTORE,

DELETE, and SAVE when *type* is FPINFO and *id* is MSCAPS.

Message Variables

type

The type of data for which the request failed. This can be TIMER or FPINFO.

id

The timer element identification, or MSCAPS if the type is FPINFO.

System action

If the type is FPINFO, one of the following occurs to any focal point information in the VSAM database:

- The information is left intact if the failure occurred during RESTORE or DELETE.
- The information is erased if the failure occurred during SAVE.

When a failure occurs and the type is FPINFO, this NetView program might not acquire the correct focal point. If the NetView program is brought down and restarted, the program might not acquire the correct information when it is restarted.

Operator response

Notify the system programmer.

System programmer response

Message DWO165I, DWO166I, DWO167I, or DWO168I is issued with this message. See the system programmer response of the associated message for details of the failure.

DWO165I	REASON FOR FAILURE: STORAGE FAILURE
----------------	--

Explanation

The request has failed because of insufficient storage.

System action

Message DWO161I, DWO162I, DWO163I, DWO164I, DWO190I, DWO191I, DWO192I, or DWO193I is issued before this message, to indicate whether the request type is SAVE, RESTORE, DELETE, or REPLACE.

Operator response

Notify the system programmer.

System programmer response

Allocate more storage for the NetView program before it is restarted.

DWO166I	REASON FOR FAILURE: TASK NOT ACTIVE
----------------	--

Explanation

The request has failed because DSISVRT is inactive.

System action

Message DWO161I, DWO162I, DWO163I, DWO164I, DWO190I, DWO191I, DWO192I, or DWO193I is issued before this message to indicate whether the request type is SAVE, RESTORE, DELETE, or REPLACE.

Operator response

Notify the system programmer.

System programmer response

Activate the DSISVRT task.

DWO167I	REASON FOR FAILURE: DUPLICATE ID
----------------	---

Explanation

The request has failed because a duplicate TIMER element has been found.

System action

Message DWO161I, DWO162I, DWO163I, DWO164I, DWO190I, DWO191I, DWO192I, or DWO193I is issued before this message to indicate whether the request type is SAVE, RESTORE, DELETE, or REPLACE.

Operator response

Notify the system programmer.

System programmer response

If the request type is SAVE, a RESTORE has not been issued for timer events since the NetView program was started. An accurate saving of timer elements requires that the saved timer elements be a subset of the internal timer element list. If you require that the timer element be saved, purge the event from the internal timer list and issue the timer command again with a unique ID.

DWO168I	REASON FOR FAILURE: VSAM ERRORS
----------------	--

Explanation

The request has failed because of VSAM I/O errors.

System action

Message DWO161I, DWO162I, DWO163I, DWO164I, DWO190I, DWO191I, DWO192I, or DWO193I is issued before this message to indicate whether the request type is SAVE, RESTORE, DELETE, or REPLACE.

Operator response

Notify the system programmer.

System programmer response

Correct the VSAM I/O errors before attempting any other action.

DWO169I	REASON FOR FAILURE: INVALID BUFFER LENGTH
----------------	--

Explanation

The request has failed because of a buffer length that is not valid.

System action

Message DWO191I or DWO192I is issued before this message to indicate whether the request type is RESTORE or DELETE.

Operator response

Notify the system programmer.

System programmer response

Correct the buffer length before attempting any other action.

DWO170I	DISPLAY OF CURRENT FOCAL POINT INFORMATION
----------------	---

Explanation

This is the starting delimiter for information returned as a result of issuing the FOCALPT QUERY command. This is the first line of a multiline message.

System action

Processing continues.

DWO172I	CATEGORY (ARCH): X'hexcat' CATEGORY (EBCDIC): category
----------------	---

Explanation

The FOCALPT QUERY command is returning information about its focal point for the category listed. The category information is returned in both architected hexadecimal value and EBCDIC value. This is part of a multiline message.

Message Variables

hexcat

The architecturally-defined hexadecimal value for the category.

category

The EBCDIC value of the category.

DWO173I	type FOCAL POINT
----------------	-------------------------

Explanation

The FOCALPT QUERY command is returning information about its focal point for the category listed. This message separates local focal point information from remote focal point information. This is part of a multiline message.

Message Variables

type

The type of focal point (either LOCAL or REMOTE).

DWO174I	APPL NAME: name ACTIVE: aind
----------------	-------------------------------------

Explanation

This message returns the local focal point application name, and an indication of whether or not it is currently active. The presence of an application name indicates the presence of a local focal point application. This is part of the information returned as a result of a FOCALPT QUERY command. This is part of a multiline message.

Message Variables

name

The application name of the local focal point for this category.

aind

The active indicator:

Y

Active

N

Inactive

Operator response

If the local focal point is supposed to be active, and it is inactive, try to activate it.

DWO175I	type NAME: name ACTIVE: aind PENDING: pind
----------------	---

Explanation

This message returns the remote focal point application name, and an indication of whether or not it is currently active, or if acquisition of this focal point authorization is currently pending a response. This is

part of the information returned as a result of a FOCALPT QUERY command. This is part of a multiline message.

Message Variables

type

The type of remote focal point (either PRIMARY or BACKUP).

name

The application name of the remote focal point for this category. A NetView name in this field indicates that the focal point is an LUC focal point. A netid.nau name in this field indicates that the focal point is an LU 6.2 focal point.

aind

The active indicator:

Y

Active

N

Inactive

pind

The pending indicator. Y=currently pending.

DWO176I RETRY TIMER SET: *sind*

Explanation

If the remote focal point type is BACKUP, this indicator lets you know whether the timer to retry the primary focal point has been set. This is part of a multiline message.

Message Variables

sind

The primary focal point retry timer set. Y means the NetView program tries to reacquire the primary focal point. N means the NetView program does not try to reacquire the primary focal point.

**DWO177I THERE ARE CURRENTLY NO
FOCAL POINTS FOR CATEGORY
*category***

Explanation

There is currently no focal point (local or remote) for the category requested in the FOCALPT QUERY command. This is part of a multiline message.

Message Variables

category

The focal point category requested.

**DWO178I THERE ARE CURRENTLY NO
FOCAL POINTS FOR THIS NODE**

Explanation

There is currently no focal point (local or remote) for the category for this node. This is part of a multiline message.

System action

Processing continues.

**DWO179I FOCAL POINT CATEGORY *category*
IS NOT REGISTERED**

Explanation

There is currently no focal point category registered for the category requested in the FOCALPT QUERY command. This is part of a multiline message.

Message Variables

category

The focal point category requested.

System action

Processing continues.

**DWO180I NO MATCHING CATEGORIES ARE
REGISTERED**

Explanation

There are currently no focal point categories registered. This is part of a multiline message.

System action

Processing continues.

**DWO181I ALERT AND STATUS
INFORMATION MAY BE
INCOMPLETE : DSICRTR
INACTIVE**

Explanation

A FOCALPT QUERY command was issued for category ALERT or STATUS and the DSICRTR task was not active. DSICRTR supports both SNA_MDS and NetView unique applications for the ALERT and STATUS keywords. This message indicates that data cannot be provided for NetView unique applications.

Operator response

Start the DSICRTR task and issue the command again.

**DWO182I FOCALPT CHANGE STATUS
COMPLETED SUCCESSFULLY BUT
SYNCHRONIZATION SERIES NOT**

**INITIATED -- THIS NODE IS A
STATUS FOCAL POINT.**

Explanation

The status focal point was changed for this host but this host is a status focal point. This is not correct. The target host in the FOCALPT CHANGE command must be a status collector. Because status focal point hosts do not communicate (synchronize) with other status focal point hosts, no attempt was made to initiate this communication. That is, the synchronization series was not initiated.

System action

The status focal point for this host changes.

Operator response

If you want to forward status data, start the CNMTAMEL task, defining this host as a status collector. The host then begins sending status to its status focal point. If you do not want to forward status data, ignore the message.

DW0183E	FOCALPT CHANGE STATUS ACCEPTED BY DISTRIBUTED NODE <i>node</i> BUT SYNCHRONIZATION SERIES NOT INITIATED -- DISTRIBUTED NODE IS A STATUS FOCAL POINT
----------------	--

Explanation

The distributed node received the FOCALPT CHANGE STATUS command and processed it successfully, but cannot communicate with this node because both nodes are defined as status focal points. Therefore, no attempt was made to initiate the synchronization series between the two nodes.

Message Variables

node

The name of the distributed node.

System action

The status focal point for the distributed *node* is defined as this node.

Operator response

Notify the system programmer.

System programmer response

Verify that the target ID in the FOCALPT CHANGE command was entered correctly. If it was, determine whether or not the CNMTAMEL task on the distributed

host must be defined as a status focal point. Recycle it as a status collector, and issue the FOCALPT CHANGE STATUS command again if status forwarding is desired. If the target ID was not correct, change it and issue the FOCALPT CHANGE STATUS command again.

DW0184E	FOCALPT CHANGE COMMAND TO NODE <i>node</i> FOR STATUS FAILED: CNMTAMEL TASK MUST BE ACTIVE AND DEFINED AS A STATUS FOCAL POINT.
----------------	--

Explanation

The FOCALPT CHANGE command for status failed because either the CNMTAMEL task was not active, or it was active but not running as a status focal point.

Message Variables

node

The name of the distributed node.

System action

The status focal point is not changed.

Operator response

Start the CNMTAMEL task if it is not active. If it is active, stop the CNMTAMEL task and restart it as a status focal point.

DW0185E	FOCALPT CHANGE STATUS COMPLETED SUCCESSFULLY BUT SYNCHRONIZATION SERIES NOT INITIATED -- REASON CODE <i>reason</i>.
----------------	--

Explanation

The status focal point for this host was changed, but this host cannot communicate (synchronize) with the new status focal point because of the reason code *reason*. Therefore, no attempt was made to initiate the synchronization series between the two hosts.

Message Variables

reason

The reason that the synchronization series cannot be initiated.

Note: These errors occurred at this host.

The reason code is one of the following values:

01

Cannot load the module DUIABUFF to build the buffer to initiate the synchronization series; installation error.

02

Cannot get storage to build the buffer to initiate the synchronization series.

03

Cannot send the buffer to the CNMTAMEL task to initiate the synchronization series.

System action

The status focal point for this host is changed.

Operator response

If you want to forward status data, notify the system programmer. If not, ignore this message.

System programmer response

If you want to forward status data, contact IBM Software Support. If not, ignore this message.

DW0186I	FOCALPT CHANGE STATUS COMPLETED SUCCESSFULLY BUT SYNCHRONIZATION SERIES NOT INITIATED -- CNMTAMEL TASK NOT ACTIVE.
----------------	---

Explanation

The status focal point for this host has changed, but this host cannot communicate (synchronize) with the new focal point because the CNMTAMEL task is not active. Therefore, the synchronization series to the new status focal point cannot be initiated.

System action

The status focal point for this host has changed.

Operator response

If you want to forward status data, start the CNMTAMEL task, defining this host as a status collector. The host then begins sending status to its status focal point. If you do not want to forward status data, ignore the message.

DW0187E	FOCALPT CHANGE STATUS ACCEPTED BY DISTRIBUTED NODE <i>node</i> BUT SYNCHRONIZATION SERIES NOT INITIATED -- CNMTAMEL TASK NOT ACTIVE.
----------------	---

Explanation

The distributed node received the FOCALPT CHANGE STATUS command and processed it successfully, but because the CNMTAMEL task is not active at the distributed node, the two hosts cannot communicate

(synchronize). Therefore, no attempt was made to initiate the synchronization series between the two nodes.

Message Variables

node

The name of the distributed node.

System action

The status focal point for the distributed *node* is defined as this node.

Operator response

Notify the system programmer.

System programmer response

Verify that the target ID in the FOCALPT CHANGE command was entered correctly. If it was, contact an operator at the distributed host to determine why the CNMTAMEL task is not active and therefore not forwarding status information to this host. If the target ID was not correct, change it and issue the FOCALPT CHANGE STATUS command again.

DW0188E	FOCALPT CHANGE STATUS ACCEPTED BY DISTRIBUTED NODE <i>node</i> BUT SYNCHRONIZATION SERIES NOT INITIATED -- REASON CODE <i>reason</i>.
----------------	--

Explanation

The distributed node received the FOCALPT CHANGE STATUS command and processed it successfully, but cannot communicate (synchronize) with the new status focal point because of the reason code *reason*. Therefore, no attempt was made to initiate the synchronization series between the two hosts.

Message Variables

node

The name of the distributed node.

reason

The reason code indicating why the synchronization series cannot be initiated.

Note: These errors occurred at the distributed node.

The reason code is one of the following values:

01

Cannot load the module DUIABUFF to build the buffer to initiate the synchronization series; installation error.

02

Cannot get storage to build the buffer to initiate the synchronization series.

03

Cannot send the buffer to the CNMTAMEL task to initiate the synchronization series.

System action

The status focal point for the distributed *node* has been defined as this host.

Operator response

Notify the system programmer.

System programmer response

Contact IBM Software Support.

DWO189I END OF CURRENT FOCAL POINT INFORMATION

Explanation

This is the ending delimiter for information returned as a result of issuing the FOCALPT QUERY command. This is the last line of a multiline message.

System action

Processing continues.

DWO190I OPERATION SAVE FAILED FOR *type*

Explanation

The SAVE request failed for the element described by *type*.

Message Variables

type

The type of data for which the request failed. This can be TIMER, FPINFO, or GLOBALV.

System action

If the type is TIMER, the timer event remains in the internal timer list but is not saved. If the type is FPINFO or GLOBALV, the focal point or global variable information is not saved to VSAM. When a failure occurs and the type is FPINFO or GLOBALV, this NetView program might not acquire the correct focal point.

Operator response

Notify the system programmer.

System programmer response

Message DWO165I, DWO166I, DWO167I, or DWO168I is issued with this message. See the system programmer response of the associated message for details of the failure.

DWO191I OPERATION RESTORE FAILED FOR *type*

Explanation

The RESTORE request failed for the element described by *type*.

Message Variables

type

The type of data for which the request failed. This can be TIMER, FPINFO, or GLOBALV.

System action

If the type is FPINFO or GLOBALV, the function was unable to reacquire any information that it might have had before the task was started. For FPINFO, the NetView program is unable to send an MS capabilities revocation to any previous focal point. When a failure occurs and the type is FPINFO or GLOBALV, this NetView program might not acquire the correct focal point. If the NetView program is brought down and restarted, the program might not acquire the correct information when it is restarted.

Operator response

Notify the system programmer.

System programmer response

Message DWO165I, DWO166I, DWO168I, DWO169I, or DWO398I is issued with this message. See the system programmer response of the associated message for details of the failure.

DWO192I OPERATION DELETE FAILED FOR *type*

Explanation

The DELETE request failed for the element described by *type*.

Message Variables

type

The type of data for which the request failed. This can be TIMER, FPINFO, or GLOBALV.

System action

If the type is FPINFO, the focal point or global variable information is not saved to VSAM. The NetView program does not attempt to perform a SAVE after the DELETE has failed. When a failure occurs and the type is FPINFO or GLOBALV, this NetView program might not acquire the correct focal point.

Operator response

Notify the system programmer.

System programmer response

Message DWO165I, DWO166I, DWO168I, DWO169I, or DWO398I is issued with this message. See the system programmer response of the associated message for details of the failure.

DWO193I OPERATION REPLACE FAILED FOR type

Explanation

The REPLACE request failed for the element described by *type*.

Message Variables

type

The type of data for which the request failed. This can be TIMER, FPINFO, or GLOBALV.

System action

If the type is FPINFO or GLOBALV, one of the following occurs to any focal point information in the VSAM database:

- The information is left intact if the failure occurred during RESTORE or DELETE.
- The information is erased if the failure occurred during SAVE.

When a failure occurs and the type is FPINFO or GLOBALV, this NetView program might not acquire the correct focal point. If the NetView program is brought down and restarted, the program might not acquire the correct information when it is restarted.

Operator response

Notify the system programmer.

System programmer response

Message DWO165I, DWO166I, DWO168I, DWO169I, or DWO398I is issued with this message. See the system programmer response of the associated message for details of the failure.

DWO195I VTAM MACRO *macid* FAILURE FOR TASK *taskid*: RTNCD = X'*vtamrc*', FDBK2 = X' *vtamfb*'.

Explanation

A VTAM macro failure occurred for the task, which might have caused the task to end. The return and feedback codes associated with the failure are shown.

Message Variables

macid

The name of the VTAM macro returning the error.

taskid

The name of the task where the failure occurred.

vtamrc

The VTAM RPL return code.

vtamfb

The VTAM RPL feedback code.

System action

If the session ended, the NetView program does not restart the session.

Operator response

Notify the system programmer.

System programmer response

Use the RCFB command list to determine the meaning of the return/feedback code.

DWO196I THE FOLLOWING MSU RECORD IS INVALID

Explanation

The command facility has a table of valid MSU types. The MSU being examined is not contained in this table or the MSU has a format error. See *Systems Network Architecture Formats* and the *Systems Network Architecture Management Service Reference* for information on MSUs.

Messages DWO197I and DWO198I follow this message.

System action

No further processing is done on this MSU.

Operator response

Notify the system programmer.

System programmer response

Determine the device generating the MSU, obtain a copy of the associated DWO197I message from the network log, and contact IBM Software Support.

DWO197I *data*

Explanation

This message follows a command facility message. The preceding message indicates why the command facility rejected the data. DWO197I contains the vectorized data that was rejected (for example, an MDB or MSU). Multiple DWO197I messages can be used to display all of the data. The message can be longer than the width of the operator's console, so use the network log to view all of the data. The last DWO197I message is followed by DWO198I.

System action

See the message that preceded this message.

Operator response

Notify the system programmer.

System programmer response

See the message that preceded this message.

DWO198I **END**

Explanation

This message indicates the end of a multiline message.

DWO199I **UNABLE TO PROCESS VTAM
COMMAND 'command'. TASK ACB
IS NOT OPENED.**

Explanation

The NetView program has not been able to forward the VTAM command that the operator entered to the VTAM address space. The task ACB has not yet been opened.

Message Variables

command

The VTAM command that was entered by the operator.

System action

The command is not processed.

Operator response

Notify the system programmer.

System programmer response

If VTAM is not active, bring up VTAM. If VTAM is active, analyze the ACB error. Refer to the appropriate VTAM manual for more information. The most probable cause of the error is an incorrect definition of NetView application IDs applids or passwords to VTAM.

DWO200I **INTERNAL ERROR IN MODULE
module , FUNCT = function -
ABENDING**

Explanation

The NetView program encountered an internal logic error.

Message Variables

module

The module that issued this message.

function

The type of service that failed.

System action

The request is not processed and VPDTASK ends with abend code 27 (X'1B').

Operator response

Notify the system programmer.

System programmer response

Contact IBM Software Support.

DWO201I **EXTENDED CONSOLE 'console'
REACHED THE CONSOLE
STORAGE LIMIT. SYSTEM
MESSAGE QUEUING TO THIS
CONSOLE IS TEMPORARILY
HALTED.**

Explanation

The MVS system messages queued to the specified console have completely filled the storage allocated for the specified console.

Message Variables

console

The name of the console affected.

System action

Message queuing to the specified console ends. The NetView program retrieves system messages until all the messages in the extended console's queue are processed. When all of the queued system messages have been processed, system message queuing to the specified console is automatically resumed.

Operator response

Notify the system programmer.

System programmer response

Determine whether the STORAGE and QLIMIT settings need adjustment. If you received this message without first receiving DWO202I or DWO204I, the storage allocated for the specified console is not large enough to contain the number of messages specified in QLIMIT. For information on the STORAGE and QLIMIT keywords, see the GETCONID command in the NetView online help.

Note: Messages can be lost while message queuing is halted.

DWO202I	EXTENDED CONSOLE '<i>console</i>' REACHED THE QUEUE LIMIT. MESSAGE QUEUING TO THIS EXTENDED CONSOLE IS TEMPORARILY HALTED.
----------------	---

Explanation

The maximum number of messages as specified by QLIMIT has arrived for processing by the specified extended console.

Message Variables

console

The name of the console affected.

System action

Message queuing to the specified console ends. The NetView program retrieves and processes messages. Message queuing resumes automatically when the queue reaches the set QRESUME percentage.

Operator response

Notify the system programmer.

System programmer response

Determine whether the settings for QLIMIT, QRESUME, and STORAGE need adjustment. If you raise the QLIMIT, you might also have to adjust the STORAGE value. For information on the STORAGE and

QLIMIT keywords, see the GETCONID command in the NetView online help.

Note: System messages can be lost while message queuing to the specified extended console is halted.

DWO203I	AN INTERNAL ERROR OCCURRED IN THE MESSAGE QUEUE FOR EXTENDED CONSOLE '<i>console</i>'. THIS CONSOLE WILL BE RELEASED BY TASK '<i>task</i>'.
----------------	--

Explanation

An MVS error occurred from which the NetView program cannot recover.

Message Variables

console

The name of the console affected.

task

The name of the task.

System action

All messages that can be retrieved are processed, and the console is inactivated.

Operator response

Notify the system programmer.

System programmer response

An error has occurred in the MVS message queue. Try to restart the console. If the problem persists, contact IBM Software Support.

DWO204I	EXTENDED CONSOLE '<i>console</i>' REACHED THE MESSAGE QUEUING THRESHOLD
----------------	--

Explanation

The extended console has reached the defined ALERTPCT limit.

Message Variables

console

The name of the console affected.

System action

Message queuing and processing continue.

Operator response

Notify the system programmer.

System programmer response

Determine whether the ALERTPCT definition for the specified console needs to be changed. If this message is received frequently and the QLIMIT is never reached (message DWO202I), you might want to raise the ALERTPCT or QLIMIT value. Adjust the ALERTPCT value so that this message is issued only when the queue limit exceeds your expectations for the specified console. Redirect message traffic to another extended console, if possible. For information on the ALERTPCT keyword, see the GETCONID command in the NetView online help.

**DWO205I A SYSTEM REQUEST TO RELEASE
EXTENDED CONSOLE '*console*'
HAS BEEN RECEIVED BY TASK
'*task*'.**

Explanation

A system request to inactivate the extended console has been received.

Message Variables

console

The name of the console affected.

task

The name of the task that received the request.

System action

Queued messages are retrieved and processed, and the console is released.

Operator response

Notify the system programmer.

System programmer response

This message appears when an MVS console SWITCH command for the specified console has been entered. If the SWITCH command was entered in error, issue the GETCONID command with the appropriate parameters to reactivate the console.

**DWO206I VARIABLE '*stemvar*' RECORD
COUNT MUST BE ZERO OR
POSITIVE AND NOT LARGER THAN
maxstem: '*value*'**

Explanation

The STEM variable *stemvar* did not have a valid record count. The record count must be zero or a positive number and not larger than *maxstem*.

If '*value*' = '*stemvar*', the variables being accessed by the STEM stage have not been initialized in the clist,

REXX, or HLL command procedure which invoked the PIPE command.

Message Variables

stemvar

The STEM variable containing the expected record count.

maxstem

The maximum allowed STEM variable record count.

value

The value of *stemvar*, which was not a valid record count.

System action

The STEM is rejected and the PIPE command fails.

Operator response

Notify the system programmer.

System programmer response

Set the *stemvar* variable to a valid number before using the STEM stage as a first stage. Also, a stage STEM with the APPEND option requires the *stemvar* variable to be a valid number.

**DWO207I TRACING TO GTF FAILED WITH
RETURN CODE *retcode***

Explanation

The NetView program can no longer write trace records to the generalized trace facility (GTF).

System action

Tracing to GTF stops.

Operator response

See the return codes from the GTRACE macro to determine the problem. Correct the problem with GTF.

**DWO208I NETVIEW TRACING TO GTF HAS
RESUMED**

Explanation

The problem that caused tracing to the generalized trace facility (GTF) to cease has been fixed.

System action

NetView resumes writing trace records to GTF.

**DWO209I Match not found for *direction*
*search_parms***

Explanation

A search has failed to find any records matching the search parameters.

Message Variables

direction

A plus sign (+) indicates a search from older to newer records.

A minus sign (-) indicates a search from newer to older records.

search_parms

The parameters for the search in question.

Operator response

Issue a new search request, possibly in the opposite direction.

System programmer response

If a message is not found in Canzlog but is expected or has been previously seen in a browse session, the reason might be archive management. If your Canzlog archive data has been trimmed for space (or you have chosen not to archive the Canzlog data), then the missing message might be in the data that was removed (or not written). Issue the TOP subcommand from your Canzlog browse session. Note the date and time of the topmost message. If the date and time of the missing message is earlier than this, then the problem can be addressed by restoring Canzlog data for the appropriate time range.

DWO210I	<i>task</i> ENCOUNTERING CONGESTION SENDING DATA TO CNMTAMEL. <i>loc</i>
----------------	---

Explanation

The task *task* is unable to send data to CNMTAMEL because of congestion. *loc* indicates the type of congestion.

Message Variables

task

The name of the task encountering congestion.

loc

'LOC 01' indicates the maximum number of unacknowledged requests have been sent. 'LOC 02' indicates the CNMTAMEL Program to Program interface buffer is full.

System action

When *task* is the DSIAL2WS task, alerts will no longer be sent to the workstation until the congestion stops.

Operator response

Notify the system programmer.

System programmer response

If *loc* is LOC 01, contact IBM Software Support. If *loc* is LOC 02, use the DISPPI and SETBQL commands to display and change the Program to Program Interface receiver queue for DUIATMGR.

DWO211I	<i>task</i> NO LONGER ENCOUNTERING CONGESTION SENDING DATA TO CNMTAMEL. <i>loc</i>
----------------	---

Explanation

The task *task* is able to send data to CNMTAMEL again. *loc* indicates the type of congestion no longer occurring.

Message Variables

task

The name of the task encountering congestion.

loc

'LOC 01' indicates the number of unacknowledged requests sent to CNMTAMEL below the threshold. 'LOC 02' indicates the Program to Program interface buffer is no longer full.

System action

When *task* is the DSIAL2WS task, alerts will be sent to the workstation.

DWO212I	<i>task1</i> IS ABLE TO COMMUNICATE WITH <i>task2</i>
----------------	--

Explanation

The task *task1* is able to use task or function *task2*.

Message Variables

task1

The name of the task attempting to use functions provided by *task2*.

task2

The name of the task or function being used by *task1*.

DWO213I	'<i>task1</i>' IS UNABLE TO COMMUNICATE WITH '<i>task2</i>'. WILL RETRY IN <i>sec</i> SECONDS.
----------------	---

Explanation

The task *task1* is unable to use services provided by *task2*. *task1* will retry in *sec* seconds.

Message Variables

task1

The name of the task attempting to use functions provided by *task2*.

task2

The name of the task or function unavailable to *task1*. If *task2* is Program to Program interface, verify the Program to Program interface is active. If *task2* is CNMTAMEL, verify that the CNMTAMEL task is active and functioning as a status focal point. If *task2* is a NetView domain, verify the following:

- The Hardware Monitor is active on the host designated by *task2*
- SNA connectivity between this host and the host designated by *task2*

If *task2* is an IP address or an IP host name, verify the following:

- The Hardware Monitor and DSIRTTR are active on the host designated by *task2*
- IP connectivity between this host and the host designated by *task2*

sec

The number of seconds until retry.

System action

task1 will retry to use the services of *task2* in *sec* seconds.

DWO214I ALERTS WILL BE SENT TO LU=
***luname*.**

Explanation

The DSIAL2WS task has successfully processed a request from *luname* and will now forward alerts to it. This message is written to the NetView log only.

Message Variables***luname***

The name of the LU to which the DSIAL2WS task will send alerts.

System action

The DSIAL2WS task will now send alerts to *luname*

DWO215I NO LONGER SENDING ALERTS TO
LU= *luname*. LOC= *loc* RC= *rc*,

Explanation

The DSIAL2WS task has determined that it is unable to send alerts to *luname* and will no longer forward alerts to it. This message is written to the NetView log only.

Message Variables***luname***

The name of the LU to which the DSIAL2WS task cannot send alerts.

loc

The *loc* will indicate why DSIAL2WS stopped sending alerts. A '01' indicates that the LU sent a stop request, a '02' indicates that the session went down, a '03' indicates that the send failed and a '04' indicates that the receiver at the LU was unable to forward the alert.

rc

The return code.

System action

The DSIAL2WS task will no longer send alerts to *luname*.

Operator response

Use the *loc* code to determine why the message is being issued and take corrective action, if necessary.

DWO294I NO CLIENTS IN CONFIGURATION.
***service* IS DISABLED.**

Explanation

The service or command named cannot function without configuration.

Message Variables***service***

A service or a command that requires configuration.

System action

The service named is disabled.

Operator response

Notify the system programmer.

System programmer response

Determine and follow the proper configuration for the specified service.

If the service is APSERV, see the APSERV.PREFIX statements in the *IBM Z NetView Administration Reference* and the **APSERV** command in the *IBM Z NetView Command Reference Volume 1 (A - N)*.

DWO295I Command changed by
procedure_name

Explanation

This message is issued as a result of a REISSUE command, following a NETVONLY action by the Command Revision Table. The DWO295I message is issued only when the ISSUE.IEE295I=YES option was used when loading the Command Revision Table.

This is the first line of a multiline message. The second and third lines show the command before and after the changes made by the REXX procedure named in the DWO295I message.

Message Variables

procedure_name
The name of the NETVONLY REXX procedure that caused a change to the MVS command being revised.

DWO296I	Time expired for message search. Press <i>keySpec</i> to continue.
----------------	---

Explanation

A request has taken longer than the time allowed for it. If you are browsing Canzlog data, the time allowed is determined by the setting of DEFAULTS CZBRWAIT.

Message Variables

keySpec
The name of a keyboard action (programmed function key or Enter key) that will continue the request that timed out. If no key is defined for the operation, a command is named instead.

System action

The request is suspended.

Operator response

Use the key or command named to continue or enter a different command. On the Canzlog display, take note of the time range in the upper right corner. If an operation repeatedly times out, the times reported in the display will indicate how far your search has proceeded.

System programmer response

If time expires frequently, consider increasing the value of DEFAULTS CZBRWAIT.

DWO310I	FOR SESSION <i>sessid</i>, THE FOLLOWING MESSAGE(S) ARE WAITING:
----------------	---

Explanation

This message is the header line for a multiline write-to-operator (MLWTO) message. The lines following this

header are from an incomplete message received over *sessid*. The message is displayed when a transmission is received, but not complete, and a time-out period expires.

This message is often displayed after a session is established with VM/SNA console services (VSCS), since this application deliberately sends an incomplete message as part of its startup procedure. The text of this incomplete message instructs you to PRESS ATTN KEY. To perform this function over a TAF OPCTL session, enter:

```
SENDSMESS sessid,*
```

Message Variables

sessid
The session ID for the session displaying an incomplete message.

Operator response

The text of the message can indicate what action is required. If it does not, notify the system programmer.

System programmer response

Determine the reason for the message not being complete. If an attention signal (SENDSMESS *sessid*,*) is not appropriate, the session must be stopped and restarted. This must not occur.

DWO311E	MEMBER <i>member</i> IS NOT VALID FOR TASK <i>task</i>. TASK ABORTED.
----------------	--

Explanation

The initialization member specified is not a valid initialization member for the task specified.

Message Variables

member
The initialization member or file for the specified task.

task
The name of the task to be started.

System action

The specified task fails.

Operator response

Use the default initialization member or specify a valid initialization member for the task specified.

DWO312I	REQUEST TO NODE <i>node</i> FAILED. SNA SENSE CODE OF X'<i>sensecode</i>' RETURNED.
----------------	--

Explanation

A focal point request to a node failed because the node does not support the requested function.

Message Variables

node

The node to which the command was directed

sensecode

The sense code returned from the node

System action

Processing of the command ends.

Operator response

Notify the system programmer.

System programmer response

Check the sense code in the Systems Network Architecture library and take corrective action.

DWO313I NODE *node* RESPONDED WITH A SENSE CODE OF X'*sensecode*'.

Explanation

The node you attempted to acquire does not support the function requested.

Message Variables

node

The node to which the command was directed

sensecode

The sense code returned from the node

System action

Processing of the command ends.

Operator response

Notify the system programmer.

System programmer response

Check the sense code in the Systems Network Architecture library and take corrective action.

DWO314I COMMAND *command* WAS UNABLE TO RESOLVE THE BACKUP NETID. BACKUP IS DEFAULTED TO BLANKS.

Explanation

You issued a FOCALPT command with the BACNET=* operand, but the attempt to resolve the backup *netid* was not successful.

Message Variables

command

The command that issued the request.

System action

No backup focal point node is assigned.

Operator response

Check that the backup LU name is valid. If it is valid, issue the FOCALPT CHANGE command again with the LU name's *netid*. If this does not correct the problem, notify the system programmer.

System programmer response

Identify a valid backup node and issue the FOCALPT CHANGE command again with the valid backup node's *netid*.

DWO315I MAXIMUM RETRY COUNT HAS BEEN EXCEEDED FOR *id1 id2*. THE SESSION WITH *id1* HAS BEEN TERMINATED.

Explanation

The specified subtask ended abnormally because the maximum allowed number of times (MAXABEND) has been exceeded. If the subtask was running under an OST, *id1* specifies the terminal that was logged off and is no longer in the NetView session. A RESET IMMED or STOP UNCOND command might have also caused this message to be displayed.

Note: The MAXABEND count for a task will be reset to zero if the task has run for at least one hour since the lastabend.

Message Variables

id1

The name of the logical unit for an OST or a task identifier.

id2

The operator identifier for an OST or further task identification.

System action

Processing continues.

Operator response

Notify the system programmer.

System programmer response

For an OST, the specified operator ID is available to the NetView program. The operator can log back on to the NetView program. Depending upon the cause of the MAXABEND, the NetView program might have dumped the specified operator ID. You can restart the failing task using the START command.

DWO316W A STORAGE OVERLAY CONDITION WAS DETECTED, BUT A STORAGE DUMP WAS NOT REQUESTED

Explanation

The DSIFRE or DSIGET storage macro service detected that storage was overlaid or that internal storage table damage occurred. Possible reasons are:

- A program moved data beyond the end of the storage it owned.
- A DSIFRE specified the wrong length for the storage being freed.
- A DSIFRE was used to free storage that was not owned using DSIGET. The storage area specified overlaps storage that NetView is managing.
- NetView storage management tables have been overlaid.

If the error is detected by the DSIFRE service, message DWO115W is also issued. DWO115W describes the storage being freed and the task where the DSIFRE was invoked.

If the problem was detected by the DSIGET service, message DWO115W is not issued. NetView detected a problem in the tables needed to obtain storage for the request.

System action

A dump did not occur because the limit for the number of storage dumps to occur for storage overlay conditions (specified on the DEFAULTS STORDUMP command) has been exceeded. Processing continues.

Operator response

Notify the system programmer.

System programmer response

If you have not been able to find the problem from previous dumps, consider resetting the STORDUMP counter with the DEFAULTS command to get a storage

dump if this problem reoccurs. Recycle the NetView program as soon as possible to avoid other problems.

DWO320I task IS ACTIVATING WITH SECURITY LEVEL: *seclevel*

Explanation

The DSIUDST task is activating and the RMTSECUR statement coded in the initialization member for this task determines what security is used for incoming RMTCMD and ENDTASK requests. This message informs the task starter what the security setting is. If there is no RMTSECUR statement in the initialization member, then NONE is assumed and no security is used with DSIUDST.

Message Variables

task

The task that is activating (DSIUDST).

seclevel

The security level coded on the RMTSECUR statement in the initialization member for DSIUDST.

DWO321I command REJECTED: *operatorid* ON *networkid.domainid* IS NOT AUTHORIZED FOR *autotask* ON *rejnetworkid.rejdomainid*

Explanation

This message is routed to an operator who issues a RMTCMD or ENDTASK command that is rejected by the target NetView program's DSIUDST security. An unauthorized RMTCMD or ENDTASK request indicates that the security software defined at the target of the RMTCMD or ENDTASK command was unable to validate the request. This generally indicates that security definitions do not permit the request, but might also result from various errors with the security software. See the system programmer response for more information.

Message Variables

command

The requested command (RMTCMD or ENDTASK).

operatorid

The operator ID of the RMTCMD or ENDTASK issuer, or the operator ID of the originator of the request that eventually resulted in the RMTCMD or ENDTASK that is rejected, depending on a setting in the rejecting NetView program.

networkid

The network ID of the RMTCMD or ENDTASK issuer, or the network ID of the originator of the request that eventually resulted in the RMTCMD or

ENDTASK that is rejected, depending on a setting in the rejecting NetView program.

domainid

The domain ID of the RMTCMD or ENDTASK issuer, or the domain ID of the originator of the request that eventually resulted in the RMTCMD or ENDTASK that is rejected, depending on a setting in the rejecting NetView program.

autotask

The autotask that was the target of the RMTCMD or ENDTASK request.

rejnworkid

The network ID of the NetView program that rejected the request.

rejdomainid

The domain ID of the NetView program that rejected the request.

System action

The request is ignored and message DWO322 is routed to the authorized receiver on the target NetView system to inform the receiver of the unauthorized request.

Operator response

Notify the system programmer.

System programmer response

Determine whether the request must be authorized and if so, update the security being used in the target NetView program's DSIUDST task. The LIST DSIUDST command issued on the target NetView system shows the current security setting of the task.

Note: This message might also result from various errors or availability with the security software at the target of the RMTCMD or ENDTASK command. For example, when using SAF security if the SAF product is no longer available or active or the RMTOPS class is not active then RMTCMD and ENDTASK requests will be rejected. To determine the error in these situations, it might be helpful to recycle the DSIUDST task at the target and review the system and network logs for any messages issued during DSIUDST initialization. Such messages can help determine any problems with the security software.

DWO322I **operatorid ON networkid.domainid
ISSUED AN UNAUTHORIZED
command REQUEST FOR
localautotask ON
tarnetworkid.tardomainid**

Explanation

This message is routed to the authorized receiver whenever the security being used by the DSIUDST task rejects an incoming RMTCMD or ENDTASK request. An unauthorized RMTCMD or ENDTASK request indicates that the security software defined at the target of the RMTCMD or ENDTASK command was unable to validate the request. This generally indicates that security definitions do not permit the request, but might also result from various errors with the security software. See the system programmer response for more information.

Message Variables

operatorid

The operator ID of the RMTCMD or ENDTASK issuer, or the operator ID of the originator of the request that eventually resulted in the RMTCMD or ENDTASK that is rejected, depending on a setting in the rejecting NetView program.

networkid

The network ID of the RMTCMD or ENDTASK issuer, or the network ID of the originator of the request that eventually resulted in the RMTCMD or ENDTASK that is rejected, depending on a setting in the rejecting NetView program.

domainid

The domain ID of the RMTCMD or ENDTASK issuer, or the domain ID of the originator of the request that eventually resulted in the RMTCMD or ENDTASK that is rejected, depending on a setting in the rejecting NetView program.

command

The requested command (RMTCMD or ENDTASK).

localautotask

The local autotask that was the target of the RMTCMD or ENDTASK request.

tarnetworkid

The target network ID of the RMTCMD or ENDTASK request.

tardomainid

The target domain ID of the RMTCMD or ENDTASK request.

System action

The RMTCMD or ENDTASK command is ignored. The operator who issued this request is notified by message DWO321 that the request was rejected

System programmer response

Determine whether the request must be authorized. If the request is allowed, use the LIST DSIUDST command to determine the security level of DSIUDST and update the appropriate security environment.

Note: This message might also result from various errors or availability with the security software at the target of the RMTCMD or ENDTASK command. For example, when using SAF security if the SAF product is no longer available or active or the RMTOPS class is not active then RMTCMD and ENDTASK requests will be rejected. To determine the error in these situations, it might be helpful to recycle the DSIUDST task at the target and review the system and network logs for any messages issued during DSIUDST initialization. Such messages can help determine any problems with the security software.

**DWO323I SAF SECURITY ENVIRONMENT
FAILED TO CREATE WITH SAF
RETURN CODE *retcode***

Explanation

The RMTCMD data services task (DSIUDST) was unable to successfully create an SAF environment using the RACROUTE REQUEST=VERIFY,ENVIR=CREATE macro.

When the DSIUDST task activates, the NetView program attempts to create an SAF environment. This environment is used for RMTCMD security checking, unless SAFREFSH=NO is specified on the RMTSECUR card in the DSIUINIT initialization member or unless RMTINIT.SAFrefresh=No is specified in the CNMSTYLE member.

This SAF security environment is created even when SAF security is not explicitly requested to allow the REFRESH command to dynamically switch to SAF security checking. To prevent the creation of the SAF environment, specify RMTINIT.SAFrefresh=No in the CNMSTYLE member.

Message Variables

retcode

The SAF return code returned by the RACROUTE REQUEST=VERIFY,ENVIR=CREATE macro.

System action

SAF security is disabled for DSIUDST. If the DSIUDST task is initializing and SAF is coded on the RMTSECUR card of the initialization member, DSIUDST is not allowed to initialize. For security settings of TABLE or NONE, if an ACEE is not successfully created, DSIUDST activates and the refresh command does not allow a switch to SAF.

Operator response

Notify the system programmer.

System programmer response

Determine the problem associated with the SAF return code. Correct the problem and restart or recycle the DSIUDST task to allow SAF security to be used.

If *retcode* is 255, there was a severe error when the task tried to use the interface to the NetView save segment. This is probably because of an installation error associated with the save segment.

**DWO324I NO VALID *secclass* SECURITY
STATEMENTS FOUND IN *member***

Explanation

Either no statements of the security class were found in the specified *member*, or none of the statements for a particular security class were valid.

Message Variables

secclass

Security class (RMTSEC).

member

The DSIPARM member containing the security statements.

System action

A RMTCMD security table is not built for the specified security class.

System programmer response

Correct the missing or incorrect statements in the specified *member*.

**DWO325W REFRESH COMMAND FAILED.
DSIUDST IS INACTIVE.**

Explanation

Required task DSIUDST was not active. No changes to the RMTCMD security were made.

System action

The command is ignored.

Operator response

Start task DSIUDST.

**DWO326I SAF INITIALIZATION FAILED. SAF
PRODUCT IS NOT AVAILABLE.**

Explanation

The user specified SAF on the REFRESH command, but there was no SAF product installed, or DSIUDST was

unable to create the necessary environment for the SAF product.

System action

The command is ignored.

System programmer response

Start the SAF product. Recycle DSIUDST to initialize the SAF environment.

DWO327I	<i>secclass</i> SECURITY REFRESHED FROM <i>oldvalue</i> TO <i>newvalue</i> BY <i>operatorid</i>
----------------	--

Explanation

This message is sent to the operator who started the DSIUDST task.

Message Variables

secclass

Security class (RMTSEC).

oldvalue

Old security class (NONE|TABLE|SAF).

newvalue

New security class (TABLE|SAF).

operatorid

The operator who entered the REFRESH command.

DWO328W	BACK SLASH NOTATION SPECIFIED IN THE <i>secclass</i> SECURITY TABLE IS IN ERROR
----------------	--

Explanation

The BACKSLASH (\) notation used in the TARGOP and RMTOP keywords on the RMTSEC statement in the RMTCMD security table is not valid. The backslash must appear as the first character in both keywords. If neither keyword is specified on the RMTSEC statement, the default is the backslash notation.

Note: Use the backslash notation when the intention is for both the TARGOP and the RMTOP to have the same operator ID.

Message Variables

secclass

Security class (RMTSEC).

System action

The statement is ignored. Processing of the RMTCMD security table continues.

System programmer response

Correct the statement in the RMTCMD security table.

DWO329W	SYNTAX ERRORS ENCOUNTERED WHILE BUILDING <i>secclass</i> SECURITY TABLE
----------------	--

Explanation

Syntax errors were found in the RMTCMD security table for statements pertaining to a particular security class.

Message Variables

secclass

Security class (RMTSEC).

System action

If one or more valid statements are found, the security table is built.

System programmer response

Correct the statements in the RMTCMD security table.

DWO330I	<i>secclass</i> SECURITY TABLE HAS BEEN INITIALIZED
----------------	--

Explanation

The RMTCMD security table has been created by starting the DSIUDST task or by issuing the REFRESH command.

Message Variables

secclass

Security class (RMTSEC).

DWO331E	<i>secclass</i> SECURITY TABLE HAS FAILED TO INITIALIZE
----------------	--

Explanation

The RMTCMD security table for a particular security class was not created because of severe errors.

Message Variables

secclass

Security class (RMTSEC).

System action

The RMTCMD security table is not created. Any authorization calls to the table result in an unauthorized response.

System programmer response

Determine the reason for the failure from the previous error message. Correct the problem and use the REFRESH command to rebuild the table.

DWO332I **DISTRIBUTED AUTOTASK
autooper ON rmtnet.rmtdomain
FAILED TO BEGIN PROCESSING
THE FOLLOWING COMMAND:
'cmdtext'**

Explanation

A RMTCMD command was entered and the command text of the RMTCMD command was passed to the destination distributed autotask. However, the distributed autotask ended before processing the command. This message is generated for each RMTCMD command that failed to process.

Message Variables

autooper

The operator ID of the distributed autotask that did not process the command.

rmtnet.rmtdomain

The network identifier for the NetView program in which the distributed autotask did not process the command.

cmdtext

The command text that the distributed autotask was unable to process. The command text is truncated at 100 characters.

System action

The command that was passed to the distributed autotask is not processed.

Operator response

Issue the RMTCMD command again. This establishes the session again if the distributed autotask is not already in use. The command text is then passed to the distributed autotask again for processing. If reissuing the RMTCMD command fails, notify the system programmer.

System programmer response

If the distributed autotask ended as a result of an ENDTASK FORCE command, determine whether this request must be authorized and update your RMTCMD security table to limit the use of the ENDTASK command.

DWO333W **task: WARNING, UNABLE TO
DEALLOCATE RESOURCES FOR**

THIS TERMINATING TASK - TASK TERMINATION CONTINUES.

Explanation

Task termination was unable to complete processing of *task's* message queues. An attempt to free the storage causes unpredictable results.

Message Variables

task

Is the LU name of the task, if the task is a data services task (DST). If the task is an operator station task (OST), this is the operator ID of the operator.

System action

Task termination continues, but *task's* queued messages are not freed.

Operator response

Notify the system programmer.

System programmer response

This message is preceded by message DSI528I or DSI529I and, possibly, a task abend. Determine the cause of the error and restart the NetView program to reclaim the lost resources.

DWO334I **THE secclass SECURITY TABLE
HAS BEEN REFRESHED.**

Explanation

This message is sent to the operator who started the DSIUDST task. It informs the operator that the RMTCMD security table statements have been refreshed.

Message Variables

secclass

Security class (RMTSEC).

DWO335E **HARDWARE MONITOR
ENCOUNTERED AN INTERNAL
ERROR. UNEXPECTED RESULTS
MAY OCCUR AS PROCESSING
CONTINUES.**

Explanation

The hardware monitor encountered an internal error during processing from which it cannot fully recover. The error might also have occurred while processing a hardware monitor command.

This message is accompanied by message DWO050E in the network log to assist IBM Software Support in debugging internal NetView errors. In the case of a failing hardware monitor command, message DWO069E is also issued.

System action

Hardware monitor processing continues, but unexpected results might occur.

Operator response

Notify the system programmer.

System programmer response

Stop and restart the BNJDSERV task to reinitialize the hardware monitor. If your system is in a state where it cannot recycle the BNJDSERV task, delay recycling. However, unexpected results might occur as hardware monitor processing continues. If the message persists, contact IBM Software Support.

DWO336I	DISTRIBUTED AUTOTASK autooper ON autonet.autodomain NOT TERMINATED
----------------	---

Explanation

The RMTCMD command was issued to establish a session with a distributed autotask on a remote node. The RMTCMD issuer who established this session logged off, causing a request to be sent to the remote node to end all active autotasks started by the issuer. This message indicates that the communication path between the RMTCMD issuer who logged off and the issuer's autotasks is not available. Therefore, the distributed autotasks were not ended. This message is usually issued because the DSIUDST or DSIHPDST tasks were inactive at the time the RMTCMD issuer logged off.

Note: For TCP/IP remote operations, the DSIHPDST task is not involved, but if host names are used task DUIDGHB is used.

Message Variables

autooper

The operator ID of the distributed autotask that was not ended. If the value is ALL, all distributed autotasks on the remote node started by the RMTCMD issuer were not ended.

autonet

The network ID of the distributed autotasks that were not ended.

autodomain

The domain id of the distributed autotasks that were not ended.

System action

The active distributed autotasks established by the operator receiving this message, and the remote NetView program being reported on remain active.

Operator response

Notify the system programmer.

System programmer response

If this message is issued because the DSIUDST or DSIHPDST tasks are not active, restart them. Issue the ENDTASK STOP or ENDTASK FORCE command to end the sessions after the communications path has been established again.

DWO337I	TASK 'task' OBTAINED EXTENDED CONSOLE 'console'.
----------------	---

Explanation

The specified extended console was obtained by the specified task.

Message Variables

task

The name of the task that issued the GETCONID command.

console

The name of the console specified by the GETCONID command.

System action

Processing continues.

DWO338I	CONSOLE NOT OBTAINED FOR TASK 'task'. CONSOLE 'console' IS ALREADY IN USE.
----------------	---

Explanation

You attempted to obtain an MVS extended console by issuing a GETCONID command or an MVS command. The console name requested is already being used in the system or sysplex.

Message Variables

task

The name of the task that attempted to obtain the console.

console

The name of the console that was requested.

System action

No console is obtained. If the command was MVS, the system command that was entered is not executed.

Operator response

Use the GETCONID or SETCONID command to specify a different console name to be used by the task. If you continue to have problems obtaining a console, notify the system programmer.

System programmer response

Ensure that all NetView operators who need to issue MVS system commands are able to access the necessary consoles. Each console name must be unique within each system or sysplex. Console names for multiple console support or subsystem consoles defined in the CONSOLxx data sets for your system or sysplex cannot be used as extended console names.

If you are running the NetView program in the extended console mode, use the ConsMask statement in the CNMSTUSR member to generate unique console names (see the CNMSTYLE member for more information), or use the GETCONID or SETCONID command in each operator's initial command list to obtain a unique name. Otherwise, the first MVS command issued by an operator will attempt to obtain a console name equal to the NetView task's operator ID. Any duplication of NetView operator IDs in your system or sysplex can create a console name conflict. Also consider that extended consoles might be in use by other applications.

DW0339I ***command* COMMAND FAILED.
TASK *task* HAS ALREADY
OBTAINED CONSOLE *console*.**

Explanation

The specified task has already obtained an extended console.

Message Variables

command

The name of the command that failed.

task

The task that issued the request for a console.

console

The name of the console being used by the task.

System action

The console is not obtained. Processing continues.

Operator response

If you need to obtain a different console for issuing MVS system commands or receiving system messages, release your current MVS extended console by issuing the RELCONID command. Retry the command that failed.

DW0340E ***'command' 'definition' WAS NOT
FOUND***

Explanation

The command cannot read the specified definitions. Definitions with that name were not found.

Message Variables

command

The name of the command

definition

The name of the definitions

System action

The command is not processed. The previous definitions remain in effect.

Operator response

Check for spelling errors. If the definition name is spelled correctly, notify the system programmer to verify that the data exists.

System programmer response

Ensure the definitions have the right name and are filed in the correct data set or file.

DW0341E ***'command' I/O ERROR READING
'file' LINE 'number'***

Explanation

The command cannot read the specified definitions. The specified line in the definition cannot be read.

Message Variables

command

The name of the command.

file

The name of the definitions.

number

The number of the 80-byte statement of *file* that cannot be read.

System action

The command is not processed. The previous definitions remain in effect.

Operator response

Notify the system programmer.

System programmer response

Check the *file* for data damage.

DWO342I 'command' 'file' DROPPED

Explanation

The definitions named by the command are taken out of use.

Message Variables**command**

The name of the command.

file

The name of the definitions.

Note: If the value is *UNKNOWN*, the NetView program cannot find any active definitions for the DEFAULTS or OVERRIDE command. The * symbols allow you to distinguish the values from real and valid definition names.

System action

The existing default values for the definitions become active according to the precedence rules for those definitions that are currently in effect.

**DWO343E 'command' 'file' LINE 'number'
 'data' IS INVALID**

Explanation

The definition statement cannot be understood. The command did not recognize the words used.

Message Variables**command**

The name of the command.

file

The name of the definitions.

number

The 80-byte statement in *file* that is not understood.

data

The word in the definition that is not recognized.

System action

The command is not processed. The previous definitions remain in effect.

Operator response

Notify the system programmer to correct the definitions.

System programmer response

Check the spelling of the statement in error.

**DWO344E 'command' 'file' LINE 'number'
 NUMBER OF PREFIX COLUMNS
 EXCEEDS MAXIMUM**

Explanation

The sum of the columns reserved for previous prefixes plus the calculated size needed by the prefix on this line number exceeds the maximum allowed value.

Message Variables**command**

The name of the command.

file

The name of the definitions.

number

The line number of the statement in the file where the error was found.

System action

The command is not processed. The previous definitions remain in effect.

Operator response

Notify the system programmer to correct the definitions.

System programmer response

Reduce the number of PREFIX statements, make the COLTAG values smaller, or use a sub-string of the prefix fields to make the prefix smaller. When you use TIME or DATE in the PREFIX statement, set the time and date format prior to the first PREFIX statement if you are not using the default time and date format. This ensures that the correct length of the prefix fields is calculated.

See the *IBM Z NetView Customization Guide* and sample CNMSCNFT for additional usage information.

**DWO345E 'command' 'file' LINE 'number'
 HAS EXTRA 'data'**

Explanation

The definition had duplicate or unnecessary data.

Message Variables**command**

The name of the command.

file

The name of the definitions.

number

The 80-byte statement in *file* that is not understood.

data

The word in the definition that is duplicated or unnecessary.

System action

The command is not processed.

Operator response

Notify the system programmer to correct the definition.

System programmer response

Check the definitions and remove duplicate or unnecessary data.

DWO346E **'command' 'file' LINE 'number' IS MISSING THE 'keyword' VALUE**

Explanation

You did not specify a value for the specified information.

Message Variables

command

The name of the command.

file

The name of the definitions.

number

The 80-byte statement in *file* that is not understood.

keyword

The information you tried to define, but for which you did not provide a value.

Typical keywords are:

DATE

The calendar date format in a SCRNFMT definition.

TIME

The time-of-day format in a SCRNFMT statement.

COLTAG

A column-tag value in the SCRNFMT definitions.

BACKGROUND

The background color when the ON keyword was used in a SCRNFMT definition.

System action

The command is not processed.

Operator response

Notify the system programmer to correct the definition.

System programmer response

Check the definitions and add the missing information, or remove the definition.

DWO347E **'command' 'file' LINE 'number' HAS AN UNMATCHED 'deltype' DELIMITER**

Explanation

The definition did not have both beginning and ending delimiters.

Message Variables

command

The name of the command.

file

The name of the definitions.

number

The 80-byte statement in *file* that is not understood.

deltype

The kind of delimiter that is missing.

Values are:

COMMENT

A comment delimiter is missing.

LITERAL

A literal data delimiter is missing.

Note: If *deltype* is OE/OF, there is a problem with the number of shift-ins and shift-outs in your double-byte character set (DBCS) string.

System action

The data is not processed.

Operator response

Notify the system programmer to correct the definition.

System programmer response

Check the definitions and add the missing delimiter, or remove the definition.

DWO348E **'command' 'file' LINE 'number' TOO MANY PREFIXES ARE DEFINED**

Explanation

You defined more than 16 prefixes, or had more than four prefixes combined into one field.

Message Variables

command

The name of the command.

file

The name of the definitions.

number

The 80-byte statement in *file* that is not understood.

System action

The data is not processed.

Operator response

Notify the system programmer to correct the definition.

System programmer response

Check the definitions and remove the extra prefix statements.

**DWO349E 'command' 'file' HAS NO
DEFINITION STATEMENTS**

Explanation

You attempted to use a SCRNfmt definition or a command definition that was empty or had only comment statements.

Message Variables

command

The name of the command.

file

The name of the definitions.

System action

The data is not processed.

Operator response

Notify the system programmer to correct the definition.

System programmer response

Check the definitions and add statements or fix the comment delimiters.

**DWO350I A MULTIPLE LINE MESSAGE
DISPLAY WAS TRUNCATED**

Explanation

You entered a RESET command during the display of a multiline message, or pressed the attention key (the attention key is available on SNA LU type 2 3270 sessions).

System action

Message lines written to the screen prior to the RESET command are displayed. Subsequent lines of the message are not. The NetView program then ends the RESET condition. If the message is a held or action message, it is saved and displayed in the held output area. Command procedures running at the same time messages are displayed are subject to the RESET command, even though the message being displayed is not from that command procedure.

Operator response

Continue normal operations.

Note: When you are running with AUTOWRAP 0, use the HOLD command to stop the screen before using the RESET command. The last message displayed can be reset if it is a multiline message, and if the last line has not been displayed. You can also reset a command procedure when there is not a partial display of a multiline message by using the HOLD command to stop the screen. You can then enter a RESET command. Remember that the messages displayed on your screen usually are displayed after the corresponding command procedure. This is important when deciding that you want to reset a command procedure.

**DWO353I INVALID TIMER ELEMENT
DETECTED. ID= 'reqname' FOR
TASK 'opid:' LOC= 'location'**

Explanation

Either while queuing a new EVERY timer element (LOC=1) or requeuing an EVERY command that has just been processed (LOC=2), an element with an interval of less than a second (which is not valid) was detected. This message is sent as a held message to the authorized receiver and the issuer of the EVERY command.

Message Variables

reqname

The ID of the EVERY request.

opid

The TVBOPID value of the task that issued the EVERY command.

location

Indicator at which point in module DSITIMGR detection occurred.

System action

A dump of NetView is attempted. Message DWO050I is logged with further information from the incorrect element. The element is not requeued and the storage is freed.

System programmer response

If the specifics of the EVERY timer can be determined from the information in the DWO353I and the associated DWO050I, the NetView EVERY command can be used to reschedule the timer request. An EVERY timer with an interval of less than a second cannot be built by the EVERY command. If this message is issued, either some code (other than the NetView EVERY command processor) is not valid for building or modifying the timer elements or a storage overlay has occurred. Thus, making a once valid EVERY timer element incorrect. A dump titled 'NETVIEW INVALID TIMER DUMP SEE MSGDWO353I' was attempted. In the dump, register 5 points to the incorrect timer element. Contact IBM Software Support as needed for assistance.

Note: DWO353I is issued with attributes to force the message to be displayed and held regardless of the AUTOTBL or DEFAULT settings which usually affect it.

**DWO354I NETVIEW PASSWORD CHECKING
FOR OPERATOR '*operatorid*'
BYPASSED DUE TO NOCHECK
OPTION SPECIFIED IN DSIOPF**

Explanation

The NOCHECK keyword was specified on the OPERATOR statement in DSIOPF. Because of this, the NetView program did not verify the password associated with the *operatorid*.

Message Variables***operatorid***

The ID of the operator who logged on.

System action

The password was not verified.

System programmer response

Correct DSIOPF if necessary. When the NOCHECK keyword is specified, you can install a logon user exit to verify the password. For more information, see *IBM Z NetView Programming: Assembler* or *IBM Z NetView Programming: PL/I and C*.

DWO360E

**IMPROPER OPTION *option*
SPECIFIED. *cmdname* REJECTED.**

Explanation

You specified an option that is not known to the stage command.

Message Variables***option***

The unknown option.

cmdname

The command that rejected the unknown option.

System action

Processing ends.

Operator response

Specify a correct option. If necessary, enter HELP *cmdname* for information.

DWO361E

**DUPLICATE OPTION *option*
SPECIFIED. *cmdname* REJECTED.**

Explanation

You specified an option twice.

Message Variables***option***

The option that was repeated.

cmdname

The command that found the duplicate option.

System action

Processing ends.

Operator response

Specify a correct option. If necessary, enter HELP *cmdname* for information.

DWO362E

**PIPELINE TERMINATED. ERROR
IN STAGE *stagenum* IN PIPELINE
'*pipename*':**

Explanation

This is the first line of a multiline message. The message text, which follows the text of the stage in error, can help you find the error. The specified stage command reported an error. This message is usually preceded by another message giving details of the error.

Note: Stage commands inserted with the INTERPRT stage command always have a stage number greater

than 10,000. If *stagenum* is greater than 10,000 the *stagenume* was inserted by INTERPRT. Enter HELP PIPE INTERPRT for more information from the online help facility.

Message Variables

stagenum
The number of the stage command that reported the error

pipename
The pipeline name

System action

Processing ends.

Operator response

Correct the stage command specification. Review previous messages for details of the error.

DWO363E	PIPELINE TERMINATED. NULL SPECIFICATION
----------------	--

Explanation

You specified a pipeline without stage commands.

System action

Processing ends.

Operator response

Specify the stage commands you need for your pipeline.

DWO364E	PIPELINE TERMINATED. NO STAGE <i>stagename</i> EXISTS.
----------------	---

Explanation

The stage command cannot be found.

Message Variables

stagename
The stage command from the pipeline specification that cannot be found.

System action

Processing ends.

Operator response

Enter HELP PIPE to determine the correct stage command specification. Then enter the command again.

DWO365E	KEYWORD '<i>keyword</i>' IS POSITIONAL AND NOT IN ITS EXPECTED POSITION.
----------------	---

Explanation

The syntax of the command you entered requires the specified keyword to be in a certain position in relation to the command's other keywords. The keyword is out of position, and must be specified either preceding or following the command's other keywords.

Message Variables

keyword
The keyword that is out of position.

System action

Processing ends.

Operator response

Move the keyword to its correct position and reenter the command.

DWO366E	NUMERIC VALUE <i>number</i> IS NOT VALID. IT IS NOT WITHIN THE RANGE REQUIRED BY THE COMMAND OR KEYWORD ON WHICH IT IS SPECIFIED.
----------------	--

Explanation

The numeric value specified is not within the numeric range required by the command or keyword on which it is specified.

Message Variables

number
The numeric value that was specified.

System action

Processing ends.

Operator response

Correct the numeric specification.

DWO367E	UNSUPPORTED DELIMITER FOUND.
----------------	-------------------------------------

Explanation

A delimited string is required or allowed. The string found does not have an acceptable delimiter character, or an option has an improper value for the delimiter.

System action

Processing ends.

Operator response

Correct the delimited string or option value and enter the command again. Consult the help panels for the command entered, if necessary. Some characters are not permitted as delimiters.

DW0368E IMPROPER DELIMITER '*delimiter*' FOLLOWS KEYWORD '*keyword*'. A BLANK DELIMITER IS REQUIRED.

Explanation

The specified keyword is valid for the command you entered; however, it is followed by a non-blank delimiter. The command syntax requires a blank delimiter.

Message Variables

delimiter
The non-blank delimiter.

keyword
The valid keyword.

System action

Processing ends.

Operator response

Replace the non-blank delimiter with a blank and reenter the command.

DW0369I *stagename* STAGE (*stagenum*) HAD RETURN CODE *retcode*.

Explanation

You specified the message on error (MOE) option in a stage command specification. The stage command encountered an error.

Message Variables

stagename
The name of the stage command that reported the error.

stagenum
The number of the stage command that reported the error.

retcode
The return code for the error encountered.

System action

Processing continues.

Operator response

Enter HELP PIPE *stagename* for the stage command reporting the error to determine the meaning of the return code.

DW0370E *command* REQUEST REJECTED. THE *function* FUNCTION ON *orignet.origlu* IS NOT COMPATIBLE WITH *destnet.destlu*.

Explanation

The specified command request was rejected because the specified function in the originating NetView program is not compatible with the target NetView program.

Message Variables

command
The name of the rejected command.

function
The function that was being performed when the *command* request was rejected.

orignet.origlu
The fully qualified network name for the origin of the *command* request.

destnet.destlu
The fully qualified network name for the target of the *command* request.

System action

The *command* request is rejected and processing of the request ends.

DW0371E *command* REQUEST REJECTED. THE INPUT PARAMETERS TO THE *function* FUNCTION ARE NOT SUPPORTED.

Explanation

The *command* request cannot be satisfied because its input parameters are not supported or are not valid. If the *command* is RMTCMD, RMTCMD was driven with an automation internal function request (AIFR) that was too large to include in the outbound LU 6.2 request. (LU 6.2 does not support outbound buffers larger than 31000 bytes.) This might be the case when a large AIFR is trapped in the automation table and the RMTCMD command is scheduled using that same AIFR.

Message Variables

command
The name of the rejected command.

function

The function that was being performed when the *command* request was rejected.

System action

Your *command* request is rejected and processing of the request ends.

Operator response

Notify the system programmer.

System programmer response

Reduce the size of the outbound request AIFR.

DWO372E	ENDING DELIMITER NOT FOUND FOR DELIMITED STRING: '<i>string</i>'.
----------------	--

Explanation

The specified delimited string keyword has a valid beginning delimiter; however it has no matching ending delimiter. A delimited string requires matching beginning and ending delimiters.

Message Variables

string

The delimited string that is missing an ending delimiter.

System action

Processing ends.

Operator response

Add the ending delimiter to the delimited string, and reenter the command.

DWO373E	ERROR: IMPROPER TRAPPING OF MESSAGES WITHIN A PIPELINE. <i>command</i> FAILED.
----------------	---

Explanation

A command procedure cannot use &WAIT or message trapping if executing in a pipeline.

Message Variables

command

The command procedure that included the improper message trapping.

System action

The *command* procedure ends according to one of the following conditions:

- NetView command list language error

The command list ends immediately and message DSI678I is inserted into the pipeline.

- REXX error

- If SIGNAL ON FAILURE is in effect for the REXX procedure, the FAILURE label takes control.
- If SIGNAL ON FAILURE is not in effect for the REXX procedure, the procedure ends immediately and a REXX symptom string is absorbed into the pipeline.

- HLL error

A PL/I or C procedure ends immediately and message CNM996I is inserted into the pipeline.

Operator response

Notify the system programmer.

System programmer response

Do one of the following:

- Recode the procedure using the PIPE command instead of message trapping.
- Consider adding an EXPOSE stage to your pipeline. See *IBM Z NetView Programming: Pipes* for additional information about the EXPOSE stage.

DWO374E	<i>stagename</i> STAGE COMMAND CONTAINS TOO MANY DELIMITED STRINGS, THE MAXIMUM OF <i>number</i> IS EXCEEDED.
----------------	--

Explanation

You specified too many delimited strings.

Message Variables

stagename

The name of the stage command where the error was detected.

number

The maximum number of delimited strings that are supported.

System action

Processing ends.

Operator response

Remove delimited strings until the allowable maximum is reached, then reenter the command. If necessary, consult the stage command's help panels by entering the HELP PIPE *stagename* command.

DWO375E	IMPROPER DELIMITER '<i>delimiter</i>' PRECEDES STRING '<i>string</i>'.
----------------	---

Explanation

The syntax of the command you entered does not permit the specified delimiter to precede the specified string.

Message Variables***delimiter***

The delimiter that cannot precede the specified string.

string

The string that had an improper delimiter preceding it. The string can be one of the keywords.

System action

Processing ends.

Operator response

Correct the command specification and reenter the command.

DW0376E ERROR: STAGE *stagename* CANNOT BE FIRST IN A PIPELINE.

Explanation

The indicated stage command is not allowed as the first stage command in a pipeline. You can specify it only as a subsequent stage command.

Message Variables***stagename***

The name of the stage command.

System action

Processing ends.

Operator response

Correct the PIPE command so that *stagename* is not the first stage command. If necessary, consult the stage command's help panels by entering the HELP PIPE *stagename* command.

DW0377E ERROR: STAGE *stagename* CAN ONLY BE FIRST IN A PIPELINE.

Explanation

The indicated stage command can only be specified as the first stage command in a pipeline; it cannot be specified as a subsequent stage command.

Message Variables***stagename***

The name of the stage command.

System action

Processing ends.

Operator response

Correct the PIPE command so that *stagename* is used only as the first stage command in the pipeline. If necessary, consult the stage command's help panels by entering the HELP PIPE *stagename* command.

DW0378E *stringtype* STRING IS TOO LONG, GREATER THAN *maxlength* CHARACTERS IN LENGTH: '*string*'.

Explanation

The specified *string* is too long for its type.

Message Variables***stringtype***

One of the following types of strings:

- INTEGER
- POSITION.LENGTH
- DELIMITED
- DDNAME.MEMBER
- TOKEN
- MORE-TOKENS
- LABEL
- HEX

maxlength

The maximum length allowed for the specified type of string.

string

The string that is longer than 255 characters; only the first 255 characters are displayed.

System action

The command that has this syntax error ends.

Operator response

Correct the length of the string and enter the command again. The types of strings and their maximum lengths are:

INTEGER

10 characters

POSITION.LENGTH

21 characters

DELIMITED

255 characters (257 including delimiters)

DDNAME.MEMBER

17 characters

TOKEN
255 characters

MORE-TOKENS
255 characters

LABEL
8 characters

HEX
254 characters

Consult the command help panels if necessary.

DWO379E ***command* FAILED. *task* IS NOT AUTHORIZED FOR KEYWORD '*keyword*'.**

Explanation

The command request cannot be satisfied because *task* is not authorized to specify *keyword* with the specified command.

Message Variables

command
The name of the command that failed.

task
The task that tried to invoke the unauthorized command.

keyword
The keyword that the task is not authorized to specify on the command.

System action

The *command* request is rejected and processing of the request ends.

Operator response

Notify the system programmer.

System programmer response

Determine if task *task* can issue command *command* with keyword *keyword*. If so, update the operator's security access appropriately.

DWO380E **IMPROPER DELIMITER '*delimiter*' FOLLOWS STRING '*string*'**

Explanation

The syntax of the command you entered does not permit the specified delimiter to follow the specified string.

Message Variables

delimiter
The delimiter that cannot follow the specified string.

string
The string that had an improper delimiter following it. The string can be one of the keywords.

System action

Processing ends.

Operator response

Correct the command specification and enter the command again. Consult the command's help panels, if necessary.

DWO381E **POSITION.LENGTH STRING CONTAINS ZERO AS EITHER THE POSITION OR THE LENGTH: '*string*'.**

Explanation

The position.length string contains zero as either the position or the length specification. Both the position and length specifications must be greater than zero.

Message Variables

string
The position.length string.

System action

Processing ends.

Operator response

Correct the position.length string and reenter the command.

DWO382E **IMPROPER USE OF ESCAPE CHARACTER. *command* REJECTED.**

Explanation

You are not allowed to use the escape character as the last character in a pipeline specification.

Message Variables

command
The command that was rejected.

System action

The *command* request is rejected and processing of the request ends.

Operator response

Consult the help panels for the correct syntax of the PIPE command, correct your command, and resubmit the command.

DWO383E **AN INTERPRT STAGE (*stagenum1*) IS NESTED WITHIN AN INTERPRT STAGE (*stagenum2*). NESTING OF INTERPRT STAGES IS NOT ALLOWED.**

Explanation

The INTERPRT stage command is used to dynamically insert stage commands into a NetView pipeline. When the INTERPRT stage command identified by stage number *stagenum2* executed and began inserting stage commands into the pipeline, it found that one of the stage commands being inserted was itself an INTERPRT stage command, identified by stage number *stagenum1*. Nesting of INTERPRT stage commands is not allowed.

Note: Stage commands inserted with the INTERPRT stage command always have a stage number greater than 10,000, so *stagenum1* is greater than 10,000. For more information, consult the INTERPRT stage command's help panels by entering HELP PIPE INTERPRT.

Message Variables

stagenum1

The number of the nested INTERPRT stage command.

stagenum2

The number of the outer INTERPRT stage command.

System action

Processing ends.

Operator response

Correct the pipeline specification so that the INTERPRT stage command's input data does not contain an INTERPRT stage command. Then reenter the command.

DWO384I **TIME-OUT OCCURRED. '*command*' FOR '*target*' IS TERMINATED.**

Explanation

The command cannot complete because the expected response was not received within the allotted time.

Message Variables

command

The name of the command that did not complete its function.

target

The name of the resource or domain from which the response was expected.

System action

Processing ends.

Operator response

Try the command again. If it still fails, consult the help information for *command*.

System programmer response

Determine why the expected response was not received by checking the following:

- Whether *target* is active
- Whether *target* is at the proper level
- Whether there is an active session with *target*
- Whether *target* was too busy with other requests to respond in a reasonable amount of time

DWO385E **THE MAXIMUM NUMBER OF STAGES THAT MAY BE INSERTED BY INTERPRT STAGE (*stagenum*) HAS BEEN EXCEEDED. THE MAXIMUM IS *maxnum*.**

Explanation

The INTERPRT stage command is used to dynamically insert stage commands into a NetView pipeline. At most *maxnum* stage commands can be inserted by a single INTERPRT stage command. When the INTERPRT stage command identified by stage number *stagenum* executed, it attempted to insert more than *maxnum* stage commands into the pipeline. Consult the INTERPRT stage command's help panels for more information.

Message Variables

stagenum

The stage number of the INTERPRT stage command.

maxnum

The maximum number of stage commands that can be inserted by a single INTERPRT stage command.

System action

Processing ends.

Operator response

Correct the pipeline specification so that the INTERPRT stage command's input data does not contain more than *maxnum* stage commands. Then reenter the command.

**DWO386I THE FOLLOWING MESSAGES
WERE RECEIVED WHILE
PROCESSING THE PRECEDING
COMMAND:**

Explanation

This message is preceded by a message line displaying a command that was executed from within a command procedure. When this command executed, it failed and returned a nonzero return code, causing the command procedure to end. This nonzero return code is present in message DWO369I, which immediately follows the command and immediately precedes this DWO386I message. Normally whenever a command fails, one or more error messages accompany the nonzero return code. If such error messages are present, they are displayed after this DWO386I message.

System action

The command procedure ends.

Operator response

Notify the system programmer.

System programmer response

Use the command, return code, and messages displayed to help you determine why the command failed. If you cannot determine why the command failed, or if you determine that the cause of the failure is something that you cannot correct, contact IBM Software Support.

**DWO387I THE FOLLOWING MESSAGES
WERE RECEIVED PRIOR TO THE
PRECEDING COMMAND TIMING
OUT:**

Explanation

This message is preceded by a message line displaying a command that was executed from within a command procedure. When this command executed, certain messages that normally result from issuing this command were expected to be received. These expected messages were not received within a specified period of time. A time-out occurred and the command procedure ended. Other unexpected messages were received, and they are displayed after this DWO387I message.

System action

The command procedure ends.

Operator response

Notify the system programmer.

System programmer response

Use the command and messages displayed to help you determine why the command timed out. If you are unable to determine why the command timed out, or if you determine that the cause of the time-out is something that you cannot correct, contact IBM Software Support.

**DWO388I NO MESSAGES WERE RECEIVED
PRIOR TO THE PRECEDING
COMMAND TIMING OUT.**

Explanation

This message might be preceded by a message line displaying a command that was run from within a command procedure or a command that was relayed to the NetView application. The command might or might not be running as expected, but the allowed response time has expired.

System action

The command results are not shown.

Operator response

If you received this message from WINDOW, a labeled command, the web browser, or a command entered remotely to NetView, and it is safe to reissue the command, and then enter the command again preceded by a timeout value (in seconds). For z/OS commands, consult the system log for possible responses. Otherwise, notify the system programmer.

System programmer response

Determine which command is without response. Use that information and the fact that it received no messages to help you determine why the timeout occurred. A larger timeout value might be needed in DSICCDEF or in a command procedure issuing the command. If you are unable to determine why the command timed out, or if the cause of the timeout cannot be corrected, then contact IBM Software Support.

**DWO390I UNABLE TO SEND DATA TO TASK
task, STORAGE FAILURE**

Explanation

An attempt to MQS a buffer from a foreign domain to the specified task failed because of a shortage of storage.

Message Variables

task

The name of the task to which the data was being sent.

System action

The buffer storage is freed.

Operator response

Notify the system programmer.

System programmer response

Determine why there is a shortage of storage.

DWO391I	UNABLE TO SEND DATA TO TASK <i>task</i>, INVALID BUFFER LENGTH
----------------	---

Explanation

An attempt to MQS a buffer from a foreign domain to the specified task failed because of an incorrect buffer length.

Message Variables

task

The name of the task to which the data was being sent.

System action

The buffer storage is freed.

Operator response

Notify the system programmer.

System programmer response

Contact IBM Software Support.

DWO392I	RESETDB COMMAND FAILED, '<i>ddname</i>' DD STATEMENT MISSING
----------------	---

Explanation

The RESETDB command failed to clear the specified VSAM database because the DD statement is missing.

Message Variables

ddname

The data definition name of the VSAM file.

System action

The command is not processed.

Operator response

Notify the system programmer.

System programmer response

Update the NetView startup procedure by adding a DD statement containing the information related to the VSAM database you want to clear. Restart the NetView system.

DWO393I	RESETDB COMMAND FAILED, '<i>ddname</i>' DLBL STATEMENT MISSING
----------------	---

Explanation

The RESETDB command failed to clear the specified VSAM database because the DLBL statement is missing.

Message Variables

ddname

The data definition name of the VSAM file.

System action

The command is not processed.

Operator response

Notify the system programmer.

System programmer response

Update the NetView startup procedure by adding a DLBL statement containing the information related to the VSAM database you want to clear. Restart the NetView system.

DWO394I	RESETDB COMMAND FAILED, '<i>ddname</i>' DATA BASE IS OPEN
----------------	--

Explanation

The RESETDB command failed to clear the specified VSAM database because the VSAM database is open.

Message Variables

ddname

The data definition name of the VSAM file.

System action

The command is not processed.

Operator response

Notify the system programmer.

System programmer response

To clear the VSAM database, you need to stop the task using the database before issuing the RESETDB command. Restart the task after the command is completed.

DWO395I	RESETDB COMMAND FAILED, 'ddname' IS NOT A VSAM DATA BASE
----------------	---

Explanation

The RESETDB command failed to clear the specified VSAM database because the file referred to by the ddname is not a VSAM database.

Message Variables

ddname

The data definition name of the VSAM file.

System action

The command is not processed.

DWO396I	RESETDB COMMAND FAILED, 'ddname' WAS NOT DEFINED WITH REUSE
----------------	--

Explanation

The RESETDB command failed to clear the specified VSAM database because the file referred to by ddname was defined without the REUSE option.

Message Variables

ddname

The data definition name of the VSAM file.

System action

The command is not processed.

Operator response

Notify the system programmer.

System programmer response

Redefine the VSAM database with the REUSE option specified.

DWO397I	REPLY OUTSTANDING FOR WTOR COMMAND ISSUED BY <i>operatorid</i>
----------------	---

Explanation

A command list that issued the WTOR command is still waiting for a reply from the operator.

Message Variables

operatorid

The operator ID of the task that issued the WTOR command in a command list.

System action

The command list stops until the corresponding reply is received. The operator's terminal is still free to perform other functions.

Operator response

Use the RESET command to cancel the command list that issued the WTOR command if the WTOR does not expect or need a reply.

Note: More than one command list might be waiting for replies to their respective WTOR commands. The RESET command cancels these command lists in last in, first out (LIFO) order.

DWO398I	REASON FOR FAILURE: OPERATION TIMED OUT
----------------	--

Explanation

The request has failed because the operation timed out.

System action

Message DWO191I or DWO192I is issued before this message to indicate whether the request type is RESTORE or DELETE.

Operator response

Notify the system programmer.

System programmer response

Correct the cause of the time-out before attempting any other action.

DWO402I	VPDLOG REQUEST HAS BEEN ACCEPTED FOR PROCESSING
----------------	--

Explanation

A VPDLOG request is syntactically correct and queued for processing by DSIELTSK.

System action

The request is queued to DSIELTSK for processing.

DWO403I TASK *task* IS INACTIVE. REQUEST FAILED.

Explanation

A correct VPD request was issued, but VPDTASK is inactive.

Message Variables***task***

The task name of VPDTASK.

System action

The request is not processed.

Operator response

Start VPDTASK and issue the request again.

DWO404I SYNTAX ERROR - INSUFFICIENT PARAMETERS FOR VPDCMD [OWN | ALL | DCE | SNAP] REQUEST

Explanation

The indicated type of VPD request does not contain all the required parameters.

System action

The request is not processed.

Operator response

Correct the request and issue it again.

DWO405I SYNTAX ERROR - INSUFFICIENT PARAMETERS

Explanation

A VPD request is missing a required parameter. For example, if you entered VPDCMD or VPDLOG 222 you receive this message.

System action

The request is not processed.

Operator response

Correct the request and issue it again.

DWO406I SYNTAX ERROR - '*parameter*' IS AN UNSUPPORTED OPTION FOR VPDCMD SNAP

Explanation

The parameter following SNAP on a VPDCMD command is not valid. ON or OFF are the valid parameters following SNAP.

Message Variables***parameter***

The parameter following SNAP.

System action

The request is not processed.

Operator response

Correct the request and issue it again.

DWO407I SYNTAX ERROR - TOO MANY PARAMETERS FOR VPDCMD [OWN | ALL | DCE | SNAP | OPTIONS] REQUEST

Explanation

The indicated type of VPD request has too many parameters specified.

System action

The request is not processed.

Operator response

Correct the request and issue it again.

DWO408I SYNTAX ERROR - PARAMETER *parmnum* CANNOT BE ZERO

Explanation

A VPD request contains a zero (0) as a link segment level on a VPDCMD command, or as a starting position or the record type number on a VPDLOG command.

For example, in the command:

```
VPDLOG 0 1 aaa 4 cccc
```

the record type number is 0. The message shows *parmnum* as 1.

Message Variables***parmnum***

The number of the parameter that has a value of 0.

System action

The request is not processed.

Operator response

Correct the request and issue it again.

DWO409I MAXIMUM LSL EXCEEDED (MAX = *maxlsl*)

Explanation

The VPDCMD DCE request specifies a link segment level greater than the maximum level supported.

Message Variables***maxlsl***

The maximum acceptable link segment level.

System action

The request is not processed.

Operator response

Correct the request and issue it again.

DWO410I SYNTAX ERROR - IN PARAMETER *parmnum* 'value' IS TOO LONG

Explanation

The specified parameter on a VPD request is too long. For example, in the command:

```
VPDLOG 222 99999999 ABC
```

the 99999999 parameter is too long. The message shows *parmnum* as 2 and *value* as 99999999.

Message Variables***parmnum***

The number of the parameter in error.

value

The value of the parameter in error.

System action

The request is not processed.

Operator response

Correct the request and issue it again.

DWO411I SYNTAX ERROR - *value* CONTAINS INVALID CHARACTERS

Explanation

A request contains characters that are not valid. The request was one of the following:

- A vital product data (VPD) request
- An ATTACH command

- A PIPE label

Message Variables***value***

The value of the parameter in error

System action

The request is not processed.

Operator response

Correct the request and issue it again. Valid characters are any alphanumerics, \$, #, and @.

DWO412I SYNTAX ERROR - IN PARAMETER *parmnum* 'value' IS NOT NUMERIC

Explanation

Either the link segment level you specified in your VPDCMD command is not numeric, or a position you specified in your VPDLOG command is not numeric.

Message Variables***parmnum***

The number of the parameter in error.

value

The value of the parameter in error.

System action

The request is not processed.

Operator response

Correct the request and issue it again.

DWO413I SYNTAX ERROR - VPDCMD '*keyword*' IS AN UNSUPPORTED REQUEST

Explanation

A VPDCMD command contains an incorrect keyword. See the NetView online help for the valid keywords.

Message Variables***keyword***

The keyword that is not valid.

System action

The request is not processed.

Operator response

Correct the request and issue it again.

DWO414I SYNTAX ERROR - PARAMETERS ARE NOT PAIRED

Explanation

A VPDLOG request contains parameters that are not paired correctly. VPDLOG requests must contain a record identifier followed by pairs of parameters. The first parameter of a pair indicates the offset position in the record where the second parameter of the pair is to be written.

System action

The request is not processed.

Operator response

Correct the request and issue it again.

DWO415I CURRENT RECORD SIZE '*size*' EXCEEDS THE MAXIMUM (*max*) ALLOWED

Explanation

The length of a record or data structure created by your request exceeds its maximum allowed length.

Message Variables***size***

The total length of the record or data structure created by your request.

max

The maximum allowable length.

System action

The request is not processed.

Operator response

Correct the request and issue it again. If the problem persists, contact the system programmer.

System programmer response

If a VPDLOG request is causing this condition, change your command list so that it splits the record that is too long into multiple records. Otherwise, you must reduce the input data.

DWO416I CURRENT RECORD ID '*record*' IS INVALID

Explanation

The specified record ID, in the VPDLOG request, is neither in the user-defined range of 128-255 nor a

default value used for the record formats that are provided by IBM.

Message Variables***record***

The specified record number that is not valid.

System action

The request is not processed.

Operator response

Contact the system programmer to get a valid record number to use. Valid record numbers are in the range of 128-255.

DWO417I SYNTAX ERROR - THE STRING AT RECORD OFFSET '*offset*' IN PARAMETER *parmnum* WOULD OVERLAY PREVIOUS STRING

Explanation

The vital product data record cannot be written correctly. The specified parameter overwrites the previously written field.

For example, in the command:

```
VPDLOG 222 1 aaaa 3 cccc 10 fff
```

the fourth parameter specifies a starting position of three, but the previously written field ends in position four. The message shows *parmnum* as 4 and *offset* as 3.

Message Variables***offset***

The starting position indicated by the parameter in error.

parmnum

The number of the parameter in error.

System action

The request is not processed.

Operator response

Correct the request and issue it again.

DWO418I SYNTAX ERROR - THE STRING AT RECORD OFFSET '*offset*' IN PARAMETER *parmnum* WOULD BEGIN BEYOND THE LAST STRING

Explanation

You did not enter the parameter pairs of a VPDLOG request in the proper sequence. The parameter indicates a starting position greater than the starting position for the last pair of parameters.

For example, in the command:

```
VPDLOG 222 1 aaaa 10 cccc 7 fff
```

the fourth parameter specifies a starting position of ten, but the last pair of parameters uses a starting position of seven and an ending position of nine. The message shows *parmnum* as 4 and *offset* as 10.

Message Variables

offset

The starting position indicated by the parameter in error.

parmnum

The number of the parameter in error.

System action

The request is not processed.

Operator response

Correct the request and issue it again.

DWO421I	LOG REQUEST CANNOT BE SATISFIED
----------------	--

Explanation

A VPDLOG was unable to queue a record to the external logging task.

System action

The request is not processed.

Operator response

Use the LIST DSIELTSK command to determine if the external logging task is active. If not, start the task. If the task is active, contact the system programmer.

System programmer response

Check the error return code for DSIWLS macro with EXTLOG option in *IBM Z NetView Programming: Assembler*.

DWO422I	VPDINIT STATEMENT CONTAINS TOO MANY PARAMETERS
----------------	---

Explanation

Your VPDINIT definition statement is coded with too many parameters.

System action

VPDTASK is not initialized.

Operator response

Notify the system programmer.

System programmer response

Correct your VPDINIT definition statement in DSIVPARM or DSIPARM, then start VPDTASK. See the *IBM Z NetView Administration Reference* for the correct syntax of the VPDINIT statement.

DWO424I	SYNTAX ERROR - A STRING IS LONGER THAN 255 CHARACTERS
----------------	--

Explanation

A VPDLOG command contains a string longer than 255 characters, which is the maximum length of a string.

System action

The request is not processed.

Operator response

Correct the request and issue it again.

DWO430I	FOCALPT CHANGE FAILED - TIME-OUT CONDITION OCCURRED
----------------	--

Explanation

A FOCALPT CHANGE request sent to the distributed node failed because a response was not received within the allotted amount of time. A time-out condition occurred.

System action

The request is ignored.

Operator response

Verify that the distributed node where the request was sent has a NetView program release of Version 2 Release 2 or later. If it does not, use the CHANGEFP command for ALERT and STATUS type because the FOCALPT CHANGE command is not supported in earlier releases. If this is not the problem, notify the system programmer.

System programmer response

Increase the time-out value for FOCALPT CHANGE (default set to 120 seconds) in DSICTMOD.

DWO431I	FOCALPT CHANGE FAILED - THE task IS INACTIVE
----------------	---

Explanation

The FOCALPT CHANGE request failed because the task at the issuing node was not active.

Message Variables

task

The task that is not active.

System action

The request is ignored.

Operator response

Notify the system project.

System programmer response

Start the task and issue the command again.

DWO432I	FOCALPT CHANGE FAILED - OUT OF STORAGE
----------------	---

Explanation

A FOCALPT CHANGE request sent to the distributed node failed because of a storage shortage.

System action

The request is ignored.

Operator response

Notify the system programmer.

System programmer response

If the message persists, check the NetView storage and adjust if necessary. See the *IBM Z NetView Tuning Guide*.

DWO433I	FOCALPT CHANGE FAILED - REASON CODE = X'<i>retcode</i>'
----------------	--

Explanation

A FOCALPT CHANGE request sent to the distributed node failed.

Message Variables

retcode

The return code in hexadecimal. The return code has one of the following values:

0C

The LUC task is not active.

Others

A NetView internal program error occurred.

System action

The request is ignored.

Operator response

Notify the system programmer.

System programmer response

If the return code is 0C, verify that the LUC task is active. For other return codes, contact IBM Software Support.

DWO434I	FOCALPT CHANGE FAILED - REASON CODE = X'<i>retcode</i>', SNA SENSE CODE = X'<i>sensecode</i>'
----------------	--

Explanation

A FOCALPT CHANGE request sent to the distributed node failed.

Message Variables

retcode

The return code in hexadecimal. The return code has one of the following values:

04

A session is not available.

06

Resources or storage is not available.

34

An allocation error occurred.

36

DSICRTR at the distributed node is not available and a retry is allowed.

F0

A system error occurred indicating a problem outside the issuing NetView program.

others

A NetView internal program error occurred.

sensecode

The SNA sense code.

System action

The request is ignored.

Operator response

If *sensecode* is '084B6031, 084C0000', or '10086021', try to activate the DSICRTR task at the distributed node with which you are attempting to communicate.

If *sensecode* is '087D0001', ensure that the cross-domain session to the distributed node is set up and the LUC task at the distributed node is active.

If you receive other sense codes, notify the system programmer.

System programmer response

If *retcode* is 04, retry at a later time or consider changing the MAXSESS operand on the CNMAUTH definition statement to allow more sessions.

If *retcode* is 06, increase the available resources or storage.

If *retcode* is 34 or 36, ensure the DSICRTR task is active at the distributed node. If the problem persists, see the Systems Network Architecture library for information on the sense code.

If *retcode* is F0, ensure VTAM and LUC are active at both domains. Also, confirm that communication can be established between the two domains.

For other return codes, see *Systems Network Architecture Reference Summary*. If necessary, contact IBM Software Support.

DWO435I FOCAL POINT AUTHORIZATION IS REVOKED BY 'ephost' FOR type DATA. NEW FOCAL POINT IS 'newfp'

Explanation

This host is no longer a focal point for the data you specified.

Message Variables

ephost
The distributed entry point node.

type
The type of data for which the focal point is being changed (such as alert, status, or ops_mgmt).

newfp
The new focal point host.

System action

The specified type of data is not forwarded to this host.

DWO444I ERROR IN type DEFFOCPT STATEMENT - LOCAL DOMAIN

CANNOT BE ITS OWN FOCAL POINT

Explanation

The DEFFOCPT statement in DSICRTTD or DSI6INIT contains a primary or backup focal point name that is not valid. Forwarding messages, alerts, status data, OPS_MGMT data, and user data from the local domain to the local domain is not allowed.

When the host is defined to be a status focal point itself, status data will be not be forwarded, regardless of whether there is a valid status focal point definition.

Message Variables

type
The type of DEFFOCPT statement.

System action

The DEFFOCPT statement is ignored.

Operator response

Notify the system programmer.

System programmer response

Correct the statement that is not valid.

DWO450I NO REGISTERED APPLICATIONS FOUND

Explanation

No applications were found for the REGISTER QUERY request. If you use QUERY (with no options) or QUERY=ALL, this message indicates that there were no applications found for any of the application types.

System action

Processing continues.

DWO452I TASK 'task' IS TERMINATING. 'nnnnnn' SYNCHRONOUS REQUESTS CANCELLED.

Explanation

A task is ending that has a number of outstanding synchronous send requests that have not yet received replies.

This message is written only in the network log.

Message Variables

task
The name of the task that is ending.

nnnnnn

The total number of outstanding synchronous requests that originated from the ending task and are being canceled.

System action

Synchronous requests issued from the ending task are canceled. MDS error messages are sent to the applications to whom the original requests were sent informing them that the requests are canceled and replies are no longer expected.

**DWO453I OPERATIONS MANAGEMENT
SERVED APPLICATION 'appl'
DEREGISTERED. 'nnnnnn'
INCOMING REQUESTS
CANCELLED.**

Explanation

An operations management served application has deregistered. A number of requests expecting a reply were received by the served application to which it has not yet replied. These incoming outstanding requests are canceled since they are not satisfied.

This message is written only in the network log.

Message Variables**appl**

The name of the operations management served application that deregistered. It is either an 8-byte EBCDIC (0-9 or capital A-Z only) name, or a 4-byte architecturally defined or reserved hexadecimal value preceded by the character X to indicate that this is a 4-byte hexadecimal name.

nnnnnn

The total number of outstanding incoming requests that are canceled.

System action

The outstanding incoming requests for the application are canceled because of deregistration of the operations management served application. MDS error messages are sent to the applications that sent the requests, informing them that they will not receive the requested replies.

**DWO454I OPERATIONS MANAGEMENT
SERVED APPLICATION 'appl'
DEREGISTERED. 'nnnnnn'
OUTGOING REQUESTS
CANCELLED.**

Explanation

An operations management served application has deregistered. A number of requests expecting a reply

were sent by the served application and have not yet been answered. These outgoing outstanding requests are canceled.

This message is written only in the network log.

Message Variables**appl**

The name of the operations management served application that deregistered. It is either an 8-byte EBCDIC (0-9 or capital A-Z only) name or a 4-byte architecturally defined or reserved hexadecimal value preceded by the character X to indicate that this is a 4-byte hexadecimal name.

nnnnnn

The total number of outstanding outgoing requests that are canceled.

System action

The outstanding outgoing requests are canceled because of deregistration of the operations management served application. MDS error messages are sent to the applications to whom the original requests were sent, informing them that the requests are canceled and replies are no longer expected.

**DWO455I OPERATIONS MANAGEMENT
RECEIVED ERROR MESSAGE FOR
UNKNOWN TRANSACTION.
ORIGIN NODE = 'netid.luname',
ORIGIN APPLICATION =
'oapplname', DESTINATION
APPLICATION = 'dapplname',
SENSE CODE = X'code'.**

Explanation

Operations management received an MDS error message or a Routing Report for a unit of work with a unit of work correlator that does not match any of those in the operations management transaction lists. The MDS error message or Routing Report is discarded.

Message DWO461 might be sent after this message.

This message is written only in the network log.

Message Variables**netid.luname**

The network ID and LU name of the originator of the MDS error message or the Routing Report.

oapplname

The application name of the origin of the MDS error message or the Routing Report. It is either an 8-byte EBCDIC (0-9 or capital A-Z only) name, or a 4-byte architecturally defined or reserved

hexadecimal value preceded by the character X to indicate that this is a 4-byte hexadecimal name.

dapplname

The application name of the destination of the MDS error message or the Routing Report. It is either an 8-byte EBCDIC (0-9 or capital A-Z only) name, or a 4-byte architecturally defined or reserved hexadecimal value preceded by the character X to indicate that this is a 4-byte hexadecimal name.

code

A 4-byte architecturally defined sense code that describes the error. See the *Systems Network Architecture* library for a description of the sense codes.

System action

The MDS-MU is discarded because it does not match any existing unit of work.

**DWO456I THE VALUE FOR KEYWORD
'keyword' CONFLICTS WITH
OTHER OPTIONS**

Explanation

The *keyword* is not consistent with the value of the other keywords specified.

Message Variables

keyword

The keyword with the conflicting value.

System action

Processing continues.

Operator response

Verify the keyword values that are in conflict and enter the command again with the correct keyword values. See the NetView online help for more information on keyword values.

**DWO457I 'luappl' IS NOT A REGISTERED
APPLICATION**

Explanation

The REGISTER command was issued to deregister an application, but *luappl* is not registered.

Message Variables

luappl

The LU 6.2 application that was to be deregistered.

System action

Processing continues.

Operator response

Verify that the application name is spelled correctly.

**DWO458I 'luappl' IS ALREADY A
REGISTERED APPLICATION**

Explanation

The REGISTER command was issued, with the REPLACE=NO option, to register an application that is already registered.

Message Variables

luappl

The LU 6.2 application that is already a registered application.

System action

Processing continues.

Operator response

Do not use the REPLACE=NO option if this registration is to replace the registration already made for this application.

**DWO459I INVALID MDS_MU, NODE =
'netidluname', SENSE =
X'sensecode', PARTIAL DATA =
X'data'**

Explanation

An MDS-MU with format errors was received by the NetView program. The sender, sense code, and up to 100 bytes of data are included in the message. An alert was created and sent to the operator. The purpose of this message is to assist in further problem determination.

This message is written only in the network log.

Message Variables

netidluname

The netid and the LU name of the node where the MDS-MU that is not valid originated.

sensecode

The sense code.

data

Up to 100 bytes of the MDS-MU in error.

System action

The MDS-MU in error is not processed. Processing continues.

Operator response

Notify the system programmer.

System programmer response

Determine the source of the MDS-MU in error using the supplied information in the message and the NetView-generated alert. If the origin is an application that is supplied by IBM, contact IBM Software Support.

**DWO460I REGISTRATION FOR 'applname'
FAILED. RETURN CODE FROM
REGISTRATION = 'retcode'.**

Explanation

A NetView application failed to register itself as an MS application. This error can occur if a particular command definition statement is in error or is missing, or if the NVAUTO application is already registered.

Message Variables

applname

The application that failed to register.

retcode

The return code from registration.

System action

Depending on the NetView application, the task might not continue to initialize. If the task continues to initialize, the application indicated is not registered as an MS application.

System programmer response

Determine the reason for the registration failure and take appropriate action.

One of the following must be defined in CNMCMDC:

- DSIOURCP for OPSMGMT applications
- BNJNETOP for ALERTNET applications
- DSIFPRCV for MS CAPS applications
- DSINVGRP for NVAUTO applications, or you can verify that a user-defined NVAUTO is registered.

The return codes from registration are documented in *IBM Z NetView Programming: PL/I and C*.

**DWO461I REPORTED-ON NODE =
'netid.luname', REPORTED-ON
APPLICATION = 'applid'.**

Explanation

This message follows message DWO455. It is sent when the reported-on node name and reported-on

application name are available in the MDS error message or the Routing Report.

This message is written only in the network log.

Message Variables

netid.luname

The reported-on network ID and LU name in the SNA Condition Report (SNACR) of the MDS error message or the Routing Report. If *netid.luname* is an *, NetView cannot determine the network ID of the LU.

applid

The reported-on application name in the SNACR of the MDS error message or the Routing Report. It is either an 8-byte EBCDIC (0-9 or capital A-Z only) name, or a 4-byte architecturally defined or reserved hexadecimal value preceded by the character X to indicate that this is a 4-byte hexadecimal name.

**DWO462I 'keyword' VALUE OF 'value1'
CANNOT EXCEED MAXREPLY
VALUE OF 'value2'. CURRENT
VALUES ARE: MAXREPLY =
'maxreply', RCVREPLY = 'rcvreply',
NOREPLY = 'noreply'.**

Explanation

The value of *rcvreply* or *noreply* exceeded the value of *maxreply*.

Message Variables

keyword

The keyword RCVREPLY or NOREPLY.

value1

The entered value for RCVREPLY or NOREPLY.

value2

The value for MAXREPLY.

maxreply

The current value of MAXREPLY.

rcvreply

The current value of RCVREPLY.

noreply

The current value of NOREPLY.

System action

The new CNMSENDMU time-out values (MAXREPLY, RCVREPLY, and NOREPLY), as entered in the DEFAULTS command, are not saved.

Operator response

Enter the command again with the correct values.

DWO463I **'keyword' VALUE OF 'value1' CANNOT EXCEED ALLOWABLE LIMIT OF 'value2'. CURRENT VALUES ARE: MAXREPLY = 'maxreply', RCVREPLY = 'rcvreply', NOREPLY = 'noreply'.**

Explanation

The value entered for MAXREPLY exceeded the allowable range.

Message Variables

keyword

The keyword MAXREPLY as it is entered with the DEFAULTS command.

value1

The entered value for MAXREPLY.

value2

The maximum valid MAXREPLY value; which is 31622400.

maxreply

The current value of MAXREPLY.

rcvreply

The current value of RCVREPLY.

noreply

The current value of NOREPLY.

System action

The new default value for MAXREPLY is not saved. If RCVREPLY, NOREPLY, or both have values entered, those values are not saved either.

Operator response

Enter the command again with the correct values.

DWO464I **INVALID VALUE 'value' SPECIFIED FOR 'keyword' - 'statement' STATEMENT IGNORED.**

Explanation

The value of EPONLY is not valid. Valid values for EPONLY are YES or NO.

Message Variables

value

The value for EPONLY that is not valid.

keyword

The incorrect keyword, EPONLY.

statement

The statement (DEFENTPT) in which the incorrect value is specified.

System action

The *statement* statement is ignored and the default value for EPONLY is used.

Operator response

Notify the system programmer.

System programmer response

If the defaulted value is acceptable, you do not need to do anything. If it is not acceptable, correct the value and restart the DST.

DWO465I **'task' INITIALIZATION ERROR. REASON CODE = 'reason'.**

Explanation

The task you specified in *task* encountered an initialization error. The error is identified by the reason code field *reason*.

Message Variables

task

The name of the task being initialized.

reason

The hexadecimal reason code. The valid reason codes are:

0001

An attempt to define an LU 6.2 transaction program to the command facility failed. Contact IBM Software Support.

0002

The PUSH of the logoff routine failed. This can be caused by a missing CMDDEF statement. Review required command definition statements. If all statements are defined, contact IBM Software Support.

0003

An attempt to issue a timer services request during initialization failed. Contact IBM Software Support.

0004

Operations management initialization failed. Contact IBM Software Support.

0005

Focal point initialization failed. Contact IBM Software Support.

0006

Bad syntax on the PARTNER statement. Correct the error.

0007

VTAM is not active. Start VTAM before starting the task.

System programmer response

Determine the type of error identified by the reason code and take corrective action. See the reason code descriptions for more information. If necessary, contact IBM Software Support.

DWO466I **ALERT LENGTH *length* RECEIVED BY TASK *task* EXCEEDS THE ALLOWABLE MAXIMUM *maxlength*. IT IS NOT PROCESSED.**

Explanation

An alert was received that was longer than the allowable maximum. The alert is not processed. This message is followed by message DWO467, which gives the first 100 bytes of the alert.

Message Variables

length

The length of the alert received (in decimal).

task

The task that received the alert.

maxlength

The maximum length for an alert.

System action

The alert is not processed (the hardware monitor does not receive the alert).

System programmer response

Find the origin of the alert and change the alert content, if possible.

DWO467I **THE FIRST 100 BYTES OF THE ALERT IS X'*alert*'.**

Explanation

This message shows the first 100 bytes of an alert. This message usually follows message DWO466.

Message Variables

alert

The first 100 bytes of the alert in hexadecimal value.

DWO468I **TYPE APPL COMMAND TASK
FPCAT FOCALPT LOGMODE
NOTIFY PRI**

Explanation

This is the title line that is used to arrange the output into columns when you issue the REGISTER command with the QUERY option.

System action

Processing continues.

DWO469I ***appltype applname cmdproc task
fpcat focalpt logmode notify priority***

Explanation

This message displays the actual data for the QUERY request when you issue a REGISTER command with the QUERY option.

Message Variables

appltype

The type of application that is registered. It can be one of the following:

MS

A management services application.

OM

An operations management (OPS_MGMT) application.

HP

A high performance application.

applname

The name of the application.

cmdproc

The name of the command processor run for unsolicited data.

task

The name of the task under which the application is registered.

fpcat

The focal point category of interest. You must specify this during registration.

focalpt

Indicates if the application is a focal point.

logmode

The log mode used by the application. This field is only relevant for high performance (HIPERF) applications.

notify

The type of session outage notification requested. It can be one of the following:

NONE

The application does not require session outage notification.

ERROR

The application requests only error session outage notification.

ALL

The application requests all session outage notification.

priority

The MQS priority for incoming unsolicited requests and error messages. It can be one of the following:

HIGH

The incoming unsolicited request or error message is sent to the destination application with a MQS of high priority.

NORMAL

The incoming unsolicited request or error message is sent to the destination application with a MQS of normal priority.

LOW

The incoming unsolicited request or error message is sent to the destination application with a MQS of low priority.

TEST

The incoming unsolicited request or error message is sent to the destination application with a MQS of the current NetView command priority.

System action

Processing continues.

DW0515I ***command* PURGE ALREADY RUNNING**

Explanation

A requested purge of panel templates from the *command* database is already in progress.

Message Variables***command***

The name of the NetView command that established the given session with a remote device.

System action

The request is ignored and processing continues.

Operator response

Wait for the first PURGE to complete, and then issue the request again.

DW0516I **NUMBER OF *command* RECORDS PURGED : *number***

Explanation

This message indicates the number of panel templates that were purged from the *command* database in response to the operator's request.

Message Variables***command***

The name of the NetView command that established the given session with a remote device.

number

The number of records purged.

System action

This message is written only to the network log.

DW0517I ***command* PURGE REQUEST IN PROGRESS**

Explanation

The requested purge of panel templates from the database is being processed by the system.

Message Variables***command***

The name of the NetView command that established the given session with a remote device.

Operator response

Wait until the purge processing completes. Or, enter NetView commands or other *command* subcommands while waiting.

DW0518I ***command* SESSION ALREADY IN PROGRESS**

Explanation

You already have a CSCF session in progress, or another NetView operator has a CSCF session with the requested PU.

Message Variables***command***

The name of the NetView command that established the given session with a remote device.

Operator response

Wait until the first session is complete before reissuing the *command* request to this PU.

DW0519I ***command* SESSION TERMINATED DUE TO NO ACTIVITY FOR *timeout* MINUTES**

Explanation

The NetView program ended the specified session. There were no requests over this session for the number of minutes indicated by *timeout*. Other

operators now have the opportunity to establish the same type of session with the remote device.

Message Variables

command

The name of the NetView command that established the given session with a remote device.

timeout

The number of minutes that the NetView program allows you to remain idle before ending the session.

Operator response

Enter the *command* again if you wish to resume your *command* session.

System programmer response

If you want to change the time-out value, make the change in DSICTMOD (the NetView constants module), where this time value is identified as the CSCF APPLICATION IDLE TIMEOUT. DSICTMOD is shipped as sample CNMS0055.

DWO520I	task: VSAM DATASET 'CLOSE' COMPLETED, DDNAME='ddname', RETURN CODE= X'<i>retcode</i>', ACB ERROR FIELD= X'<i>errcode</i>'
----------------	--

Explanation

A CLOSE completed for the VSAM data set indicated by *ddname*. This message is issued when a SWITCH, SWLD, or SWPD command is issued which causes an open data set to be closed.

Message Variables

task

The name of the task.

ddname

The name of the VSAM data set.

retcode

The return code used for problem analysis.

errcode

The error code used for problem analysis.

System action

This message is routed to the task that issued the SWITCH command causing an open data set to be closed. CLOSE processing has completed and additional processing (such as IDCAMS) can now be issued for this data set. When the SWITCH command is issued within a NetView pipeline, message DWO520I will correlate to the pipeline. See the

NetView online help for more information on messages issued by the SWITCH command.

Operator response

If *retcode* or *errcode* are not zero (0), notify the system programmer.

System programmer response

If the *retcode* and *errcode* are zero (0), the CLOSE completed successfully. Otherwise, refer to the appropriate VSAM manual for CLOSE return codes and ACB error fields.

DWO521I	TASK <i>task</i> IS NOT AUTHORIZED BY THE SECURITY SOFTWARE TO OBTAIN EXTENDED CONSOLE <i>console</i>
----------------	--

Explanation

The specified task attempted to obtain an EMCS console using the GETCONID command or the MVS command, but was prevented from doing so by the installed security software.

Message Variables

task

The name of the task.

console

The name of the EMCS console.

System action

The console is not obtained. If the MVS command was entered, the system command is not issued.

Operator response

See your security administrator to obtain authorization for the desired EMCS console resource. Notify the system programmer.

System programmer response

Determine which command was issued when the operator tried to obtain an EMCS console. If the MVS command was used, the task attempted to obtain the EMCS console with the console name equal to the operator's ID. If the GETCONID command was used, the console name might have been explicitly specified, or it might have defaulted to the operator's ID.

Ensure that the method the operator used to obtain an EMCS console is consistent with the security administrator's definitions for the EMCS consoles.

DWO522E	TASK '<i>task</i>' DETECTED FORMAT ERRORS IN DSIAIFRO
----------------	--

VECTORIZED DATA DURING AUTOMATION PROCESSING

Explanation

The message being processed by automation has one or more format errors in the DSIAIFRO extensions of the message.

Message Variables

task

The name of the task reporting the error.

System action

The message in error is not automated. The message is discarded. The message in error and the associated vectorized data from the DSIAIFRO extensions are written to the network log.

Operator response

Notify the system programmer.

System programmer response

Search for the error in the diagnostic dump that was written to the network log. See messages DWO523E and DWO604E in the dump for more information. If there are installation exits in use that modified or returned buffers for this message, ensure that the exits have properly formed the DSIAIFRO vectorized data extensions. Verify that the length fields are correct.

DWO523E DIAGNOSTIC DUMP OF DSIAIFRO VECTORIZED DATA FOR TASK 'task'

Explanation

This message is a title line within a diagnostic dump.

Message Variables

task

The name of the task reporting the error.

System action

The vectorized data from the DSIAIFRO extensions is written to the network log.

Operator response

Notify the system programmer.

System programmer response

See the description for message DWO522E.

DWO524I

DISTRIBUTED AUTOTASK *autooper* ON *autonet.autodomain* WAS TERMINATED BY *termoper* ON *termnet.termdomain*

Explanation

An operator issued an ENDTASK FORCE command to end a distributed autotask that the operator did not start. This message informs the operator who started the distributed autotask that the DSIUDST task has ended the autotask. If the DSIUDST task ends, it forces off all the active distributed autotasks defined to the same NetView program. This message is presented to each operator who started a distributed autotask that has been forced off by autotask DSIUDST.

Message Variables

autooper

The operator ID of the distributed autotask that was ended.

autonet

The network ID of the distributed autotask that was ended.

autodomain

The domain id of the distributed autotask that was ended.

termoper

The operator ID of the task that issued the ENDTASK FORCE request. The value is DSIUDST if the ending of DSIUDST caused active distributed autotasks to end.

termnet

The network ID of the operator that issued the ENDTASK FORCE request.

termdomain

The domain id of the operator that issued the ENDTASK FORCE request.

System action

The ENDTASK FORCE request or the ending of the DSIUDST task causes the distributed autotask to end. If an operator issues the ENDTASK FORCE command to a distributed autotask that the operator did not start, the operator receives message DWO571I and the operator who started the distributed autotask receives message DWO524I.

If the DSIUDST task ends and logs off the active distributed autotasks, no RMTCMD security table authorization checking is done. The RMTCMD security table checking applies only to explicit invocations of the ENDTASK command.

Operator response

Notify the system programmer. Issue another RMTCMD command to the autotask that was ended. This establishes the session again if that operator is not already in use.

System programmer response

If this message is issued because the DSIUDST task ended, restart the DSIUDST task when appropriate. If this message is issued because of an ENDTASK FORCE command, determine whether this request must be authorized and update your security tables to limit the use of the ENDTASK command.

DWO525I	TEST OF NETVIEW AUTOMATION FILE "<i>member</i>" WAS UNSUCCESSFUL
----------------	---

Explanation

A test of a NetView automation member has detected errors in the automation statements. You will receive additional error messages indicating the incorrect NetView automation statements.

Message Variables

member

The name of the member specified by AUTOTBL.

DWO530I	INVALID MESSAGE ID FOR NETVIEW BRIDGE TRANSACTION REPLY
----------------	--

Explanation

The TRANRCV command was invoked with something other than message DWO548I.

System action

Transaction reply processing is ended.

Operator response

Notify the system programmer.

System programmer response

Modify the command list that issues the TRANRCV command.

DWO531I	NETVIEW BRIDGE INITIALIZATION COMPLETE FOR TASK = <i>task</i>
----------------	--

Explanation

The initialization process for NetView Bridge has successfully completed.

Message Variables

task

The name of the task.

DWO533I	NETVIEW BRIDGE DATABASE SERVER <i>serverid</i> QUIESCED
----------------	--

Explanation

The NetView Bridge dispatcher has completed cleanup for the specified server.

Message Variables

serverid

The database server name.

DWO534I	<i>command</i> COMMAND FAILED, <i>task</i> ALREADY ACTIVE FOR THIS FUNCTION
----------------	--

Explanation

The request for *command* failed. A command can only be invoked once from each task in the NetView program, and while the task that issued that command is active, it performs the function that this command sets up. *task* is active and has already issued the command.

Message Variables

command

The name of the command that failed.

task

The name of a task that is already active and providing this function.

System action

The command is ignored and processing continues.

Operator response

Notify the system programmer.

System programmer response

Verify that only one task is active at a time using this command. Remove the cause for the second task trying to issue the command while the first task is still active.

DWO535I	PPI RECEIVER <i>queue</i> HAS BEEN REACTIVATED BY <i>task</i>
----------------	--

Explanation

The receiver queue in this message has already been defined to the program-to-program interface (PPI). This is a warning message to prevent another task

from reactivating predefined queues that were defined but not active.

Message Variables

queue

The program-to-program interface queue being reactivated.

task

The name of the task that the command is running under.

System action

The specified queue is reactivated.

Operator response

Notify the system programmer.

System programmer response

Verify that the task reactivating this queue is the desired task. If not, provide a unique queue name and recycle the task.

**DW0536I NETVIEW BRIDGE PROCESSING
RESUMED FOR TASK = *task***

Explanation

A full-screen component panel interrupted the NetView Bridge autotask processing. NetView Bridge processing has resumed.

Message Variables

task

The name of the task that has been resumed.

**DW0537I NETVIEW BRIDGE TRANSACTION
PARAMETER VALUE FOR *variable*
IS TOO LONG. RETURN CODE =
*retcode***

Explanation

A parameter in the transaction request or reply has a value that is too long.

Message Variables

variable

The variable that is too long.

retcode

The return code.

System action

Transaction processing is ended (return code = 4), or the parameter value is truncated (return code = 2).

Operator response

Notify the system programmer.

System programmer response

Modify the incorrect parameter.

**DW0539I *command* COMMAND FAILED,
queue IS ALREADY DEFINED**

Explanation

You did not enter the command text correctly. All program-to-program interface queue names must be unique. The *queue* specified is already active in the program-to-program interface.

Message Variables

command

The name of the command that failed.

queue

The name of the queue in error.

System action

The NetView program ignores the entire command entry.

Operator response

Notify the system programmer.

System programmer response

Provide a unique queue name and issue the command again.

**DW0540I UNEXPECTED ERROR FROM
CONVCON-RETURN CODE =
*retcode***

Explanation

The MVS CONVCON service encountered an error condition.

Message Variables

retcode

The value of register 15 at the time of the error.

System action

Processing continues and the command request is not executed.

Operator response

Notify the system programmer of the return code value and the console ID or console name that you entered.

System programmer response

Verify that the console ID or console name entered is valid.

DWO541I CONVCON SERVICE IS NOT AVAILABLE

Explanation

The MVS CONVCON service is not operational at this time.

System action

Processing continues and the command request is not executed.

Operator response

Notify the system programmer.

DWO542E DIAGNOSTIC DUMP OF DATA FOR TASK *task* CANCELED DUE TO NON-ADDRESSABLE STORAGE

Explanation

The NetView program encountered non-addressable storage while trying to create a diagnostic dump of vectorized data for the network log.

Message Variables

task

The name of the task for which a diagnostic dump was being made.

System action

The diagnostic dump is canceled.

Operator response

Notify the system programmer.

System programmer response

There was an error in the vectorized data that was passed to the NetView program. Ensure that there are no errors in any command procedures that invoke the CNMPMDB or DSIMMDB services.

DWO543I PREVIOUS VALUE OF COSTIME IS INVALID WITH THE NEW VALUE OF MAXREPLY. COSTIME VALUE HAS BEEN SET TO MAXREPLY

Explanation

MAXREPLY has been reset to a value that is less than the current value of COSTIME. COSTIME cannot be

greater than MAXREPLY, so COSTIME has been set to X'FFFFFFFF', which causes COSTIME to use the MAXREPLY value.

System action

The time-out value used is now equal to the MAXREPLY value. The value of COSTIME is reset to MAXREPLY.

Operator response

Notify the system programmer.

System programmer response

If a time-out value greater than MAXREPLY is required, change the value of MAXREPLY using the DEFAULTS command. If a time-out value less than MAXREPLY is required, change the value of COSTIME using the DEFAULTS command.

DWO546I TRANSACTION PARAMETERS ARE AS FOLLOWS: DESTTASK = *desttask*, DESTDOM = *destdom*, DESTNET = *destnet*, ORIGTASK = *origtask*, ORIGDOM = *origdom*, ORIGNET = *orignet*, TRANSID = *transid*, CORRID = *corrid*, RESPCODE = *respcode*, TRTYPE = *trtype*, ORIGDOME = *origdome*, ORIGNETE = *orignete*

Explanation

This message accompanies DWO151I, DWO152I, DWO156I, or DWO157I when transaction data is available. This is an information message. If one of the following fields is unknown, UNKNOWN is placed in the field. Some of the fields might be lost on errors if the information is cleaned up before the reply is received. The time-out for this cleanup might be adjusted using DEFAULTS NOREPLY=x, where x is the time in seconds. The initial default is 120 seconds (2 minutes).

Message Variables

desttask

The destination task operand.

destdom

The destination domain operand.

destnet

The destination network operand.

origtask

The originating task operand.

origdom

The originating domain operand.

orignet
The originating network operand.

transid
The transaction ID operand.

corrid
The correlator ID operand.

respcode
The response code operand.

trtype
The transaction type operand.

origdome
The originating domain of the error (displayed only with DWO151I).

orignete
The originating network of the error (displayed only with DWO151I).

DWO548I **TRANSID = transid, CORRID = corrid, VOCAB = vocab, DESTTASK = desttask, DESTDOM = destdom, DESTNET = destnet, ORIGTASK = origtask, ORIGDOM = origdom, ORIGNET = orignet, RESPCODE = respcode, TRTYPE = trtype**

Explanation

This message contains the parameters of a transaction reply. Blank fields indicate the data was not provided.

Message Variables

transid
The transaction ID parameter.

corrid
The correlator ID parameter.

vocab
The vocabulary parameter.

desttask
The destination task parameter.

destdom
The destination domain parameter.

destnet
The destination network parameter.

origtask
The originating task parameter.

origdom
The originating domain parameter.

orignet
The originating network parameter.

respcode
The response code parameter.

trtype
The transaction type parameter.

DWO550I **PROGRAM TO PROGRAM QUEUE**
queue IS FULL.

Explanation

The program-to-program interface receiver queue has exceeded its specified limit.

Message Variables

queue
The name of the program-to-program interface queue that has exceeded its limit.

System action

The program-to-program interface buffer has not been added to the queue.

Operator response

Notify the system programmer.

System programmer response

- For the HOLD queue, issue the RTRINIT command again with a larger HOLD queue limit.
- For the READY or OUTPUT queue, contact IBM Software Support for programming assistance.
- For the TIIN queue associated with the database server, see the documentation for your database server.

Note: You might want to consider adding additional database servers to reduce traffic congestion.

DWO551I **STATUS FOCAL POINT: PRIMARY**
fpname

Explanation

This message is the response to a LIST FOCPT=STATUS command or the response when the NetView program processes a DEFFOCPT TYPE=STATUS definition statement.

Message Variables

fpname
The name of the NetView program in the remote node that is the primary status focal point for the specified NetView program.

System action

Processing continues.

DWO552I **CHANGEFP STATUS COMPLETED**
SUCCESSFULLY BUT
SYNCHRONIZATION SERIES NOT
INITIATED -- CNMTAMEL TASK
NOT ACTIVE.

Explanation

The status focal point for this host has changed, but this host cannot communicate (synchronize) with the new focal point because the CNMTAMEL task is not active. Therefore, the synchronization series to the new status focal point cannot be initiated.

System action

The status focal point for this host is changed.

Operator response

If you want to forward status data, start the CNMTAMEL task, defining this host as a status collector. The host then begins sending status to its status focal point. If you do not want to forward status data, ignore the message.

DWO553I	CHANGEFP STATUS COMPLETED SUCCESSFULLY BUT SYNCHRONIZATION SERIES NOT INITIATED -- THIS HOST IS A STATUS FOCAL POINT.
----------------	--

Explanation

The status focal point was changed for this host but this host is a status focal point. This is not correct. The target host in the CHANGEFP STATUS command must be a status collector. Because status focal point hosts do not communicate (synchronize) with other status focal point hosts, no attempt was made to initiate this communication. That is, the synchronization series was not initiated.

System action

The status focal point for this host is changed.

Operator response

If you want to forward status data, stop the CNMTAMEL task and restart it, defining this host as a status collector. The host then begins sending status to its status focal point. If you do not want to forward status data, ignore the message.

DWO554E	DISTRIBUTED HOST <i>host1</i> ACCEPTED CHANGEFP STATUS COMMAND BUT SYNCHRONIZATION SERIES NOT INITIATED -- CNMTAMEL TASK NOT ACTIVE AT <i>host1</i>.
----------------	---

Explanation

The distributed host received the CHANGEFP STATUS command and processed it successfully, but because

the CNMTAMEL task is not active at the distributed host, the two hosts cannot communicate (synchronize). Therefore, no attempt was made to initiate the synchronization series between the two hosts.

Message Variables

host1

The domain ID of the distributed host.

System action

The status focal point for the distributed host *host1* is defined as this host.

Operator response

Notify the system programmer.

System programmer response

Verify that the target ID in the CHANGEFP command was entered correctly. If it was, contact an operator at the distributed host to determine why the CNMTAMEL task is not active and therefore not forwarding status information to this host. If the target ID was not correct, change it and issue the CHANGEFP STATUS command again.

DWO555E	DISTRIBUTED HOST <i>host1</i> ACCEPTED CHANGEFP STATUS COMMAND BUT SYNCHRONIZATION SERIES NOT INITIATED -- <i>host1</i> IS A STATUS FOCAL POINT.
----------------	---

Explanation

The distributed host received the CHANGEFP STATUS command and processed it successfully, but cannot communicate with this host because both hosts are defined as status focal points. Therefore, no attempt was made to initiate the synchronization series between the two hosts.

Message Variables

host1

The domain ID of the distributed host.

System action

The status focal point for the distributed host *host1* is defined at this host.

Operator response

Notify the system programmer.

System programmer response

Verify that the target ID in the CHANGEFP command was entered correctly. If it was, contact an operator at the distributed host to determine why it is running as a status focal point and is therefore not forwarding status information to this host. If it was not entered correctly, correct the ID and issue the CHANGEFP command again.

Note: This change at the distributed host that is running as a status focal point does not affect status forwarding at this host.

DWO556E	DISTRIBUTED HOST <i>host1</i> ACCEPTED THE CHANGEFP STATUS COMMAND BUT SYNCHRONIZATION SERIES NOT INITIATED -- REASON CODE <i>code</i>.
----------------	--

Explanation

The distributed host received the CHANGEFP STATUS command and processed it successfully, but cannot communicate (synchronize) with the new status focal point because of the reason code *code*. Therefore, no attempt was made to initiate the synchronization series between the two hosts.

Message Variables

host1

The domain name of the distributed host.

code

The reason code indicating why the synchronization series cannot be initiated.

Note: These errors occurred at the distributed host.

The reason code is one of the following values:

01

Cannot load the module DUIABUFF to build the buffer to initiate the synchronization series; installation error.

02

Cannot get storage to build the buffer to initiate the synchronization series.

03

Cannot send the buffer to the CNMTAMEL task to initiate the synchronization series.

System action

The status focal point for the distributed host *host1* is defined as this host.

Operator response

Notify the system programmer.

System programmer response

Contact IBM Software Support.

DWO557E	CHANGEFP STATUS COMPLETED SUCCESSFULLY BUT SYNCHRONIZATION SERIES NOT INITIATED -- REASON CODE <i>reason</i>.
----------------	--

Explanation

The status focal point for this host was changed, but this host cannot communicate (synchronize) with the new status focal point because of the reason code *code*. Therefore an attempt was not made to initiate the synchronization series between the two hosts.

Message Variables

reason

The reason that the synchronization series cannot be initiated.

Note: These errors occurred at this host.

The reason code is one of the following values:

01

Cannot load the module DUIABUFF to build the buffer to initiate the synchronization series; installation error.

02

Cannot get storage to build the buffer to initiate the synchronization series.

03

Cannot send the buffer to the CNMTAMEL task to initiate the synchronization series.

System action

The status focal point for this host is changed.

Operator response

If you want to forward status data, notify the system programmer. If not, ignore this message.

System programmer response

If you want to forward status data, contact IBM Software Support. If not, ignore this message.

DWO558E	CHANGEFP COMMAND FOR STATUS FAILED: CNMTAMEL TASK MUST BE ACTIVE AND DEFINED AS A STATUS FOCAL POINT.
----------------	--

Explanation

The CHANGEFP command for status failed because either the CNMTAMEL task was not active, or it was active but not running as a status focal point.

System action

The status focal point is not changed.

Operator response

Start the CNMTAMEL task if it is not active. If it is active, stop the CNMTAMEL task and restart it as a status focal point.

DW0559E CHANGEFP COMMAND FOR STATUS FAILED: NOT ABLE TO DETERMINE STATE OF CNMTAMEL TASK -- DSILCS RETURN CODE *retcode*.

Explanation

The CHANGEFP command for status failed because the system was not able to determine the state of the CNMTAMEL task.

Message Variables

retcode

The return code from the DSILCS macro.

System action

The status focal point is not changed.

Operator response

Notify the system programmer.

System programmer response

Contact IBM Software Support.

DW0560E THE NETVIEW PROGRAM TO PROGRAM INTERFACE IS TERMINATING.

Explanation

The program-to-program interface is ending because of a previous error.

System action

The program-to-program interface job ends.

System programmer response

Correct the previous errors and restart the program-to-program interface job.

DW0561E ATTACH FAILED FOR SUBTASK "SYSNVSAM"

Explanation

The program-to-program interface VSE subtask SYSNVSAM was not attached by the VSE operating system.

System action

Processing ends.

Operator response

Notify the system programmer.

System programmer response

Correct the previous errors and restart the program-to-program interface job.

DW0562E THE NETVIEW PROGRAM TO PROGRAM INTERFACE IS ALREADY ACTIVE

Explanation

The program-to-program interface job is already started. Only one program-to-program interface is allowed per system.

System action

Processing ends.

DW0563E VSE SUBSID FAILED FOR TASK *task*, RETURN CODE = X'*retcode*'

Explanation

The program-to-program interface's attempt to identify itself as a VSE subsystem failed.

Message Variables

task

The name of the task (either SYSNVRAM or SYSNVSAM).

retcode

The return code in register 15 from the SUBSID macro.

System action

Processing ends.

Operator response

Notify the system programmer.

System programmer response

Check to see if the program-to-program interface is already active in the system.

DW0564E **UNEXPECTED *dtlayer* ERROR FOR
FUNCT = *function*. RETURN CODE =
retcode REASON CODE = *reason***

Explanation

An unexpected error occurred while using the XPCC or IUCV data transport layer of the operating system.

Message Variables

dtlayer

The XPCC or IUCV data transport layer

function

Is IDENT, CONNECT, SEND, RECEIVE, DISCONN, PURGE, or SEVER

retcode

The return code in register 15 from the XPCC or IUCV macro

reason

The reason code in IJBXRETC or IPRCODE

System action

Processing continues even though the specific action fails. The action is not retried and the data is lost.

Operator response

Notify the system programmer.

System programmer response

Verify that XPCC and IUCV are installed and functioning properly.

DW0565I ***command* FOR STORAGE FAILED
FOR TASK *task* FOR NUMBER OF
bytes BYTES**

Explanation

An attempt to obtain or free storage for processing failed.

Message Variables

command

The GET or FREE command.

task

The name of the task (either SYSNVRAM or SYSNVSAM).

bytes

The amount of storage, in bytes, that was requested.

System action

Processing continues without the needed storage. The request that caused the need for storage might not be honored.

Operator response

Notify the system programmer.

System programmer response

If this problem persists, increase the amount of storage available to the program-to-program interface.

DW0566E **THE *dtlayer* CONNECTION FOR PPI
TASK *task* FAILED**

Explanation

The initial communication connection was not established. Data cannot be sent through the program-to-program interface (PPI) until the connection is made.

Message Variables

dtlayer

The XPCC or IUCV data transport layer.

task

The task name (SYSNVRAM).

System action

Processing ends.

Operator response

Notify the system programmer.

System programmer response

Verify that XPCC and IUCV are installed and functioning.

DW0567I **NETVIEW PROGRAM TO
PROGRAM INTERFACE
INITIALIZATION IS COMPLETE**

Explanation

The program-to-program interface is active.

DW0568I **TOTAL SIZE OF NETVIEW BRIDGE
TRANSACTION REQUEST IS
GREATER THAN 31K BYTES**

Explanation

The transaction being sent exceeds the allowed maximum of 31K bytes.

System action

Transaction request processing ends.

Operator response

Notify the system programmer.

System programmer response

Modify the transaction request to reduce its size.

DWO569I **NETVIEW BRIDGE TRANSACTION
PARAMETER NAME *variable* IS
TOO LONG. RETURN CODE =
*retcode***

Explanation

A parameter name in the transaction request or reply is too long.

Message Variables

variable

The name of the variable in error.

retcode

The return code.

System action

The transaction processing ends (return code = 4), or the parameter value is truncated (return code = 2).

Operator response

Notify the system programmer.

System programmer response

Modify the parameter to conform to the appropriate size restriction.

DWO570I **UNABLE TO ESTABLISH REMOTE
SESSION ON *netid.luname* WITH
SENSE: X'*sensecode*'**

Explanation

Your system was not able to establish a remote session with the target NetView system because of the reason indicated by the SNA sense code received.

Message Variables

netid.luname

The network identifier for the reported-on node.

sensecode

The SNA sense code received. This code is one of the following:

X'08A80001'

Origin or destination NAU name unknown. For the NetView program, either the origin or the destination network ID in the MDS header is not valid.

X'08A80003'

The target NetView system does not know the MS application name specified. This usually indicates that the target application is not registered with the LU 6.2 transport. Verify that the DSIUDST and DSIHPDST tasks at the target NetView are active.

X'08A8000A'

Three attempts were made to converse with the specified *netid.luname* without success. This usually indicates that a *netid.luname* that is not valid was specified in the command or a communication link failure has occurred.

X'08A8000B'

Data cannot be sent because of a failure in the target NetView transport support.

X'08A8000C'

Data cannot be sent because of a problem communicating with the target application. Verify that the DSIUDST and DSIHPDST tasks at the target NetView are active.

X'08A8000D'

Communication has been lost because of a failure in the originating NetView transport support.

X'08A90005'

Data cannot be sent because of a failure in the originating NetView transport support, for example, a storage shortage.

System action

The session is not established.

Operator response

Resolve the problem indicated by the SNA sense code and issue the command again.

DWO571I **DISTRIBUTED AUTOTASK *taskid*
ON *netid.domainid* TERMINATED**

Explanation

An ENDTASK command was entered and, as a result, the distributed autotask *taskid* ends.

Message Variables

taskid

The distributed autotask that ended.

netid.domainid

The network and domain identifiers of the NetView program that generated this message.

System action

The association with the distributed autotask is lost. Processing continues.

DW0572I **DISTRIBUTED OPERID *operatorid* ALREADY IN USE ON *netid.domainid***

Explanation

The specified *operatorid* might already be logged on locally to the target NetView system, or the distributed autotask for the specified *operatorid* might have already been started by another operator.

Message Variables***operatorid***

The operator ID specified for the target NetView system.

netid.domainid

The network and domain identifiers for the reported-on node.

System action

The request is ignored and processing continues.

Operator response

Issue a LIST STATUS=OPS or LIST *operatorid* command through another distributed autotask to determine the status of the specified operator ID on the target NetView system. If you are authorized, you can issue a ENDTASK FORCE command to end the existing distributed autotask.

DW0573E **OPERID *operatorid* INVALID ON *netid.domainid***

Explanation

A destination *operatorid* was entered that is unknown to the target NetView system.

Message Variables***operatorid***

The operator ID specified for the target NetView system.

netid.domainid

The network and domain identifiers for the reported-on node.

System action

The request is ignored and processing continues.

Operator response

Issue the command again using a valid operator ID for the target NetView system.

System programmer response

If the destination *operatorid* was excluded from DSIOFF on the target NetView system by mistake, update DSIOFF to include the desired operator ID.

DW0574E **DISTRIBUTED AUTOTASK FAILED ON *netid.domainid***

Explanation

The request cannot be serviced because of an internal fault or failure on the target NetView system.

Message Variables***netid.domainid***

The network and domain identifiers for the node on which the report was being built.

System action

The request is ignored and processing continues.

Operator response

Issue the command again and, if unsuccessful, retain the console logs and contact the system programmer.

System programmer response

Perform NetView traces at the originating and target NetView systems to isolate the problem. After completing the traces, contact IBM Software Support.

DW0575I ***session_type* TERMINATED ON *netid.luname* WITH SENSE: *X'sensecode'***

Explanation

A session between the local NetView system and the indicated NetView system was ended with the SNA *sensecode*.

Message Variables***session_type***

The session type that ended, such as RMTCMD.

netid.luname

The network identifier and the LU name identifying the NetView system which had a session with the local NetView system.

sensecode

The SNA sense code that was received. This code can be one of the following:

X'08A80003'

The target NetView system does not know the MS application name specified. This usually indicates that the target application is not registered with the LU 6.2 transport. Verify that the DSIUDST and DSIHPDST tasks at the target NetView are active.

X'08A8000A'

Three attempts were made to converse with the specified *netid.luname* without success. This usually indicates that a *netid.luname* that is not valid was specified in the command, or that a communication link failure has occurred.

X'08A8000B'

Data cannot be sent because of a failure in the target LU 6.2 transport support.

X'08A8000C'

Data cannot be sent because of a problem communicating with the target application. Verify that the DSIUDST and DSIHPDST tasks at the target NetView are active.

X'08A8000D'

Communication has been lost because of a failure in the originating LU 6.2 transport support.

X'08A80012'

Unrecoverable failure of user-mode session. MDS has detected an error on a user-mode session (a user-mode session in this context is one with a mode name other than SNASVCMG). Retries have been exhausted. Application program data might have been lost.

X'08A90005'

Data cannot be sent because of a failure in the originating LU 6.2 transport support, for example, a storage shortage.

System action

The request is ignored and processing continues.

Operator response

Resolve the problem indicated by the SNA sense code and issue the command again.

DW0576E	COMMAND TEXT NOT PRESENT IN 'RMTCMD' COMMAND
----------------	---

Explanation

A RMTCMD was entered that did not contain any command text.

System action

The request is ignored and processing continues.

Operator response

Issue the RMTCMD command again with the appropriate command text.

DW0577E	STOP OR FORCE COMMAND INVALID FOR <i>operatorid</i> ON <i>netid.domainid</i>
----------------	---

Explanation

An ENDTASK STOP or ENDTASK FORCE was entered and the specified destination *operatorid* was not active as a distributed autotask. In the case of a STOP, the originating *operatorid* did not match the originating *operatorid* that started the distributed autotask.

Message Variables

operatorid

The operator ID specified for the target NetView system.

netid.domainid

The network and domain identifiers for the node on which the reported was being built.

System action

The request is ignored and processing continues.

Operator response

Issue a LIST STATUS=OPS or LIST *operatorid* command through another distributed autotask to determine the status of the specified *operatorid* on the target NetView system. Check to see if you entered the operator ID correctly. If you did not, issue the command again with the correct *operatorid*. If you entered the *operatorid* correctly, then you are not the operator who started this autotask and you are not allowed to stop it. If you are authorized, you can issue a ENDTASK FORCE command to end the existing distributed autotask.

DW0578E	INVALID DATA STRUCTURE RECEIVED
----------------	--

Explanation

A data structure that was not valid was received by the DSIUDST task on a target NetView system. The DSIUDST task is used by the RMTCMD and ENDTASK commands.

System action

The request is ignored and processing continues.

Operator response

Retain the console logs and contact the system programmer.

System programmer response

Perform NetView traces at the originating and target NetView systems to isolate the problem. After completing the traces, contact IBM Software Support.

DWO600E	TASK '<i>task</i>' RECEIVED INCOMPLETE MDB DATA
----------------	--

Explanation

Required vector data was not included in the MDB. The MDB was not processed.

Message Variables

task
The task ID reporting the error.

System action

The data is not processed.

Operator response

Notify the system programmer.

System programmer response

Diagnostic information about the MDB in error is written to the network log if the length of the MDB is not zero. Attempt to identify the source of the incomplete MDB. If you have customized or written applications that use the CNMPMDB or DSIMMDB NetView services, verify that you are creating a complete MDB with all of the required vectors. Ensure that there are no length field errors in the MDB.

If the source of the MDB is not installation-written code, contact the support center for the product that created the MDB.

DWO601E	TASK '<i>task</i>' RECEIVED MDB DATA WITH FORMAT ERRORS
----------------	--

Explanation

A formatting or length error was detected in an MDB vector. The MDB was not processed.

Message Variables

task
The name of the task reporting the error.

System action

The data is not processed.

Operator response

Notify the system programmer.

System programmer response

Diagnostic information about the MDB in error is written to the network log if the length of the MDB is not zero. Attempt to identify the source of the improperly formatted MDB. If you have customized or written applications that use the CNMPMDB or DSIMMDB NetView services, verify that you are creating a properly formatted MDB, giving special attention to length and type fields.

If the source of the improperly formatted MDB is not installation-written code, contact the support center for the product that created the MDB.

DWO602E	TEXT LINES OF MDB IN ERROR FOR TASK '<i>task</i>'
----------------	--

Explanation

An error occurred while processing an MDB. The following lines of the multiline write-to-operator (MLWTO) message have already been built from this MDB or previously received related MDBs.

Message Variables

task
The name of the task reporting the error.

System action

The data follows in the lines of a multiline write-to-operator (MLWTO) message.

Operator response

Notify the system programmer.

System programmer response

Use the information that follows this message to help determine the source of the error in the MDB. See the error descriptions for messages DWO600E and DWO601E for more information.

DWO603E	DIAGNOSTIC MDB DUMP FOR TASK '<i>task</i>'
----------------	---

Explanation

An EBCDIC representation of the hex data is presented on the following lines.

Message Variables

task
The name of the task reporting the error.

System action

The data follows in the lines of a multiline write-to-operator (MLWTO) message.

Operator response

Notify the system programmer.

System programmer response

Use the data provided in the diagnostic dump to determine the error in the vectorized data. See the error descriptions for messages DWO600E and DWO601E for more information.

DWO604E	DATA BUFFERS OF AIFR IN ERROR FOR TASK '<i>task</i>'
----------------	---

Explanation

This message is a title line within a diagnostic dump. The data buffers of the AIFR in error follow this message.

Message Variables

task
The name of the task reporting the error.

System action

This message and the data buffers of the AIFR in error are written to the network log.

Operator response

Notify the system programmer.

System programmer response

See the description for message DWO522E.

DWO605E	'<i>exitnum</i>' RETURNED A BUFFER WITH ERRORS. THE BUFFER IS DISCARDED.
----------------	---

Explanation

An installation exit returned an incorrect buffer. The buffer contained errors that were detected by the NetView program.

Message Variables

exitnum
The installation exit number.

System action

The returned buffer is discarded. The original buffer presented to the exit is also discarded.

Operator response

Notify the system programmer.

System programmer response

Review the exit code to verify that the buffer is being built with all fields set correctly.

DWO607E	DIAGNOSTIC SOURCE OBJECT DUMP FOR TASK '<i>task</i>'
----------------	---

Explanation

This message is a title line within a diagnostic dump. Vectorized data for the source object follows this message.

Message Variables

task
The name of the task reporting the errors.

System action

The vectorized data from the source object is written to the network log.

Operator response

Notify the system programmer.

System programmer response

Search for the error in the diagnostic dump that was written to the network log. See messages DWO522E, DWO523E, and DWO604E in the dump for more information. If installation exits are in use that modified or returned buffers for this message, ensure that the exits have properly formed the DSIAIFRO vectorized data extensions. Verify that the length fields are correct.

DWO608I	MESSAGE QUEUING RESUMED FOR EXTENDED CONSOLE '<i>console</i>'
----------------	--

Explanation

Messages are again being queued to the specified console. Message queuing to this extended console had been halted because of QLIMIT or console storage error conditions.

Message Variables

console
The name of the console affected.

System action

Messages begin queuing to the extended console and are retrieved and processed.

DWO609E TASK 'task' RECEIVED AN MDB WHICH WAS NOT PROPERLY CORRELATED.

Explanation

A correlation parameter that is not valid was passed to DSIMMDB or CNMPMDB.

Message Variables

task

The name of the task reporting the error.

System action

The MDB is not processed.

Operator response

Notify the system programmer.

System programmer response

Diagnostic information about the MDB is written to the network log if the length of the MDB is not zero. Attempt to identify the source of the improperly correlated MDB.

If you have customized or written applications that use the CNMPMDB or DSIMMDB NetView services, verify that you are passing the correct correlation parameter as described in *IBM Z NetView Programming: Assembler* and *IBM Z NetView Programming: PL/I and C*. If the source of the improperly correlated MDB is not installation-written code, contact the support center for the product that created the MDB.

DWO610I command REQUEST NOT PERFORMED BY ID node FOR (APPL | STATION | LINE | PORT) = '(name | number)', SENSE CODES = X'codes' FUNCTION NOT SUPPORTED

Explanation

The receiving node cannot perform the requested function because the request is inconsistent or in conflict with other operations within the node.

Message Variables

command

The command request issued.

node

The name of the receiving network node.

name / number

The target station, line, or port of the request.

codes

The system sense and modifier sense codes returned by the node in the error reply subvector.

System action

Processing of the command ends.

Operator response

Notify the system programmer.

System programmer response

Determine the reason that the receiving node cannot perform the function.

DWO611I command REQUEST NOT PERFORMED BY ID node FOR (APPL | STATION | LINE | PORT) = '(name | number)', SENSE CODES = X'codes' FUNCTION NOT ENABLED

Explanation

The receiving node cannot perform the requested function because the request is inconsistent or in conflict with other operations within the node.

Message Variables

command

The command request issued.

node

The name of the receiving network node.

name / number

The target station, line, or port of the request.

codes

The system sense and modifier sense codes returned by the node in the error reply subvector.

System action

Processing of the command ends.

Operator response

Notify the system programmer.

System programmer response

Determine the reason that the receiving node cannot perform the function.

DWO612I command REQUEST NOT PERFORMED BY ID node FOR (APPL | STATION | LINE | PORT) = '(name | number)', SENSE CODES = X'codes' FUNCTION IN USE

Explanation

The receiving node cannot perform the requested function because the request is inconsistent or in conflict with other operations within the node.

Message Variables

command

The command request issued.

node

The name of the receiving network node.

name / number

The target station, line, or port of the request.

codes

The system sense and modifier sense codes returned by the node in the error reply subvector.

System action

Processing of the command ends.

Operator response

Notify the system programmer.

System programmer response

Determine the reason that the receiving node cannot perform the function.

DWO614E	command REQUEST NOT PERFORMED BY ID node FOR (APPL STATION LINE PORT) = '(name number)', SENSE CODE = X'codes' FUNCTION INACTIVE
----------------	---

Explanation

The receiving node cannot perform the requested function because the request is inconsistent or in conflict with other operations within the node.

Message Variables

command

The command request issued.

node

The name of the receiving network node.

name / number

The target station, line, or port of the request.

codes

The system sense and modifier sense codes returned by the node in the error reply subvector.

System action

Processing of the command ends.

Operator response

Notify the system programmer.

System programmer response

Determine the reason that the receiving node cannot perform the function.

DWO615I	command REQUEST NOT PERFORMED BY ID node FOR (APPL STATION LINE PORT) = '(name number)', SENSE CODES = X'codes' FUNCTION NOT SUPPORTED FOR SWITCHED LINE
----------------	---

Explanation

The receiving node cannot perform the requested function because the request is inconsistent or in conflict with other operations within the node.

Message Variables

command

The command request issued.

node

The name of the receiving network node.

name / number

The target station, line, or port of the request.

codes

The system sense and modifier sense codes returned by the node in the error reply subvector.

System action

Processing of the command ends.

Operator response

Notify the system programmer.

System programmer response

Determine the reason that the receiving node cannot perform the function.

DWO616I	command REQUEST NOT PERFORMED BY ID node FOR (APPL STATION LINE PORT) = '(name number)', SENSE CODES = X'codes' FUNCTION NOT SUPPORTED FOR FAILED LINE
----------------	---

Explanation

The receiving node cannot perform the requested function because the request is inconsistent or in conflict with other operations within the node.

Message Variables

command
The command request issued.

node
The name of the receiving network node.

name / number
The target station, line, or port of the request.

codes
The system sense and modifier sense codes returned by the node in the error reply subvector.

System action
Processing of the command ends.

Operator response
Notify the system programmer.

System programmer response
Determine the reason that the receiving node cannot perform the function.

**DWO617I SCREEN COPY FUNCTION:
 SUCCESSFUL**

Explanation
The central site control facility attempted to copy the current panel to the network log and to the hard copy log. The operation succeeded.

System action
Processing continues.

Operator response
Check the network or hard copy log for the desired output.

DWO618I SCREEN COPY FUNCTION: FAILED

Explanation
The central site control facility attempted to copy the current panel to the network log and to the hard copy log. There was not enough storage available for logging.

System action
Processing continues.

Operator response
Notify the system programmer.

System programmer response
Follow the normal procedures for an out-of-storage condition.

**DWO619I SCREEN COPY FUNCTION:
 SCREEN PRINTED NOT LOGGED**

Explanation
The central site control facility attempted to copy the current panel to the network log and to the hard copy log. The panel was printed to the hard copy log but not to the network log.

System action
Processing continues.

Operator response
Activate the network log.

**DWO620I SCREEN COPY FUNCTION:
 SCREEN LOGGED NOT PRINTED**

Explanation
The central site control facility attempted to copy the current panel to the network log and to the hard copy log. The panel was logged to the network log but not to the hard copy log.

System action
Processing continues.

Operator response
Activate the hard copy log.

**DWO621I SCREEN COPY FUNCTION:
 UNSUCCESSFUL**

Explanation
The central site control facility attempted to copy the current panel to the network log and to the hard copy log. The hard copy and network logs were not active; therefore, the panel was not printed in the hard copy or network log.

System action
Processing continues.

Operator response
Activate the hard copy and network logs.

**DWO622I AUTOMATION TABLE LISTING
 listingname UNSUCCESSFULLY
 GENERATED**

Explanation

This message indicates that the automation table listing *listingname* you specified on a previous AUTOTBL command invocation was not successfully generated. A previous message is issued describing the failure.

A failure can be caused by any of the following:

- Specifying a listing destination member on the AUTOTBL command that already exists. You can reuse the name if you specify the REPLACE AUTOTBL command.
- Specifying a listing destination member that is already in use.
- An I/O error.
- A system macro failure.

Message Variables***listingname***

The member or file name of the listing member specified on the AUTOTBL command.

System action

An unsuccessful listing prevents an automation table replacement from occurring.

Operator response

Locate the previous message that indicates the listing failure and correct the source of the failure. If you are unable to correct the problem, notify the system programmer.

System programmer response

Locate the previous message that indicates the listing failure and correct the source of the failure.

**DWO624I MANAGEMENT SERVICES
 TRANSPORT INITIALIZED.**

Explanation

The management services transport layer for the NetView program has initialized.

**DWO625E MANAGEMENT SERVICES
 TRANSPORT ERROR. REASON
 CODE IS *reason code*.
 PROCESSING CONTINUES.**

Explanation

The NetView program's management services transport layer has encountered an error that has caused data to be discarded. However, it is not severe enough to recycle the function.

Message Variables***reason code***

The type of error detected can be one of the following:

**Reason Code
Reason**

- 1** Unexpected data has been received from VTAM.
- 2** Data has been received from VTAM prior to synchronization completion.
- 3** A DSIMQS macro failure or storage request failure caused data to be lost in the transport.
- 4** Data has been received from a sender ID other than VTAM.

System action

Processing continues.

Operator response

Notify the system programmer.

System programmer response

Following are the responses for *reason*.

**Reason Code
Response**

- 1** Contact IBM Software Support.
- 2** Contact IBM Software Support.
- 3** Ignore isolated instances of this message. If the problem persists, attempt to stop and restart the DSI6DST task. If this does not solve the problem, contact IBM Software Support.
- 4** Contact IBM Software Support.

**DWO626E COSTIME VALUE OF *value1*
 CANNOT EXCEED MAXREPLY
 VALUE OF *value2*. CURRENT
 VALUES ARE: COSTIME *value3*,
 MAXREPLY *value4*.**

Explanation

The time-out value specified for common operations services (COS) commands (COSTIME) exceeds the time-out value for the LU 6.2 transport (MAXREPLY).

Message Variables

value1

The value of the COSTIME requested on the DEFAULTS command.

value2

The maximum time-out value of the LU 6.2 transport.

value3

The current value of COSTIME.

value4

The current value of MAXREPLY.

System action

The COSTIME value is not updated.

Operator response

Issue the DEFAULTS command again with a valid COSTIME value.

**DWO627E MANAGEMENT SERVICES
TRANSPORT RE-INITIALIZING.
REASON CODE IS *reason code*.
NUMBER OF TRANSACTIONS
CANCELLED ARE *number*.**

Explanation

The NetView program's management services (MS) transport layer has encountered an error that has caused it to cancel outstanding transactions and reinitialize its interface with VTAM. The NetView program's management services transport is now using the program-to-program interface. The cause of this error can be the program-to-program interface.

Message Variables

reason code

The MS transport is reinitializing because of one of the following:

**Reason Code
Reason**

1

The NetView program's program-to-program interface receiver cannot be successfully defined.

2

A program-to-program interface failure was detected on a request by the NetView program.

3

A synchronization request was received from VTAM.

4

A storage shortage has caused important processing in the transport layer to fail.

5

Unexpected data was received from VTAM.

6

The NetView program's program-to-program interface receiver cannot be successfully defined, because a receiver is already defined.

number

The number outstanding transactions awaiting a reply that have been cancelled.

System action

The NetView program will disconnect its program-to-program interface receiver, if defined, and generate MDS_MU error messages for local MS applications for all outstanding transactions. The NetView program will initialize MS transport again after all transactions have been cleared. NetView might wait for up to 5 minutes before retrying initialization. The user might recycle DSI6DST to force an immediate initialization retry.

Operator response

Following are the operator responses for each *reason code*.

**Reason Code
Response**

1

Verify that the program-to-program interface is active. If not, restart it. Operators can use the DISPPI or DISBQL command to determine if the program-to-program interface is active.

2

Verify that the program-to-program interface is active. If not, restart it. Use the DISPPI or DISBQL command to verify that VTAM's program-to-program interface receiver (ISTMTRCV) is active. If not, wait until VTAM activates it.

3

None.

4

None.

5

Notify the system programmer.

6

Notify the system programmer.

If this message is received several times after the program-to-program interface has been activated, it

indicates a failure to initialize the transport. Stop task DSI6DST and notify the system programmer.

System programmer response

Following are the responses for the *reason code*.

Reason Code Response

1 - 5

If the problem cannot be fixed by activating the program-to-program interface and recycling the DSI6DST task, contact IBM Software Support.

6

If multiple NetView programs are running under the same VTAM, only one can have a program-to-program interface with VTAM. Verify that VTAMCP.USE=NO has been included (or defaulted) for all NetView programs except the one that must have the interface.

If the problem still exists, recycle the program-to-program interface. If recycling the interface fails, contact IBM Software Support.

7

Verify that the SSI level is V2R4 or greater.

DWO628I	A MACRO FAILURE OCCURRED DURING LOGON. LOGON ABORTED. LUNAME = 'luname'.
----------------	---

Explanation

This message is issued during logon processing when a presentation services error occurs while presentation services is trying to send the NetView logon screen. This message is also issued if the number of operator terminals that can logon to NetView and remain in session at the same time exceeds 4096.

Message Variables

luname

The name of the device attempting logon.

System action

The logon fails.

Operator response

Retry the logon. If the problem persists, notify the system programmer.

System programmer response

The netlog might contain a DWO050E or DWO195I message with additional information about the cause

of this error. When indicated, verify that the device is defined and initialized correctly.

DWO650I	operid NOT LOGGED ON
----------------	-----------------------------

Explanation

This message is in response to a LIST command issued for an operator ID that is either not logged on or not valid.

Message Variables

operid

The NetView operator ID given in the LIST command.

Operator response

Ensure you entered a valid operator ID.

DWO653I	DISPLAY DEFAULTS OVERRIDES
----------------	-----------------------------------

Explanation

This message provides header information for the LIST OVERRIDE command.

System action

Processing continues.

DWO654I	DISPLAY DEFAULTS
----------------	-------------------------

Explanation

This message provides header information for the LIST DEFAULTS command.

System action

Processing continues.

DWO656E	THE VALUE, <i>value</i>, IS NOT IN THE DEFAULTS SENDMSG LIST.
----------------	--

Explanation

The DEFAULTS command was issued to delete a nonexistent value from the SENDMSG list.

Message Variables

value

The value that did not exist in the SENDMSG list.

System action

The value was not deleted from the SENDMSG list because it did not exist.

Operator response

Ensure that the DEFAULTS command was coded correctly.

DWO657E	THE VALUE, <i>value</i>, ALREADY EXISTS IN THE DEFAULTS SENDMSG LIST.
----------------	--

Explanation

The DEFAULTS command was issued to add a value to the SENDMSG list, but the value already exists.

Message Variables

value

The value that already exists in the SENDMSG list.

System action

The value was not added to the SENDMSG list because it was already in the list.

Operator response

Ensure that the DEFAULTS command was coded correctly.

DWO658E	THE <i>command</i> COMMAND <i>keyword</i> MUST BE USED WITH <i>keyword2</i>.
----------------	---

Explanation

The specified keyword can only be used in conjunction with another keyword.

Message Variables

command

The name of the command that was issued.

keyword

The name of the keyword that is dependent on another keyword.

keyword2

The name of the keyword that needs to be specified.

System action

The command is not executed.

Operator response

If the command was executed because of automation, notify the system programmer that there is an error in the automation table. Otherwise, check the correct keyword usage and try again.

System programmer response

Verify the syntax of the NetView automation table entry. Correct the entry if necessary and refresh the NetView automation table.

DWO659I	THE FIELD, <i>field</i>, DATA TYPE IS NOT SUPPORTED BY <i>command</i> COMMAND.
----------------	---

Explanation

An ORCONV command was issued to update a field in the Resource Object Data Manager (RODM) but the field was not of the type INTEGER, SMALL INTEGER, FLOATING POINT, or CHARACTER.

Message Variables

field

The name of the field that was to be updated.

command

The name of the command that was issued.

System action

The command is not executed.

Operator response

If the command was executed because of automation, notify the system programmer that there is an error in the automation table. Otherwise, check the command and try again. Make certain that the field that is being updated is of a valid type.

System programmer response

Ensure that the RODM field is of a valid type. Verify the syntax of the NetView automation table entry. Correct the entry if necessary and refresh the NetView automation table.

DWO670I	AN ASSIST HAS BEEN REQUESTED FOR THE FOLLOWING COMMAND, SENDER = <i>sender</i>, SENDER TOKEN = <i>token</i>.
----------------	---

Explanation

This multiline message is queued by DSIQTSK after receiving a command request over the program-to-program interface that requests the ASSIST facility instead of a command buffer. The second line contains the command text, and subsequent lines contain sender-defined descriptor text entries.

Message Variables

sender

The name of the command sender.

token

The name of the token specified by the sender. If no sender token is sent, the value displayed is N/A.

System action

Processing continues. This message is intended for automation.

DW0671E	THE COMMAND <i>command</i> REQUEST TO FREE NETVIEW STORAGE FAILED.
----------------	---

Explanation

A FREEMAIN command request failed to free NetView storage. The Resource Object Data Manager (RODM) sends this message to the NetView system operator when a free-storage request within a NetView region fails.

Message Variables

command

The name of the command.

System action

The NetView program stops processing the command.

Operator response

Notify the system programmer.

System programmer response

Determine why the FREEMAIN command has failed, and correct the problem.

DW0672I	Message <i>msgid</i> was issued at <i>date_time_and_source</i>
----------------	---

Explanation

The indicated message was issued at the indicated time. This message is seen in the context of browsing a message log after a WHENCE command has been invoked for a particular displayed message.

Message Variables

msgid

The first blank-delimited token of the indicated message. An asterisk (*) is displayed when cursor position and highlighting is used to denote the message being referred. The message can conclude with additional information, such as the job name, the SAF user name, or the source, as in these examples. Note also that the *msgid* is not reported in these examples.

```
DW0672I Message * was issued at
10/18/19 13:11:01.043 by T610EENV
```

```
DW0672I Message * was issued at
10/18/19 13:11:23.807 by +CONSOLE
```

```
DW0672I Message * was issued at
10/18/19 13:21:16.160 by AUT01
```

date time millisec

The date and time shown in the user's preferred date/time format, with a period-delimited number indicating milliseconds after the stated time.

source

The message source:

- job name
- SAF user name for MVS messages
- operator ID for NetView messages

DW0673E	AN MVS ENQUEUE OF THE NETVIEW <i>chain</i> HAS FAILED, <i>command</i> COMMAND IS TERMINATED.
----------------	---

Explanation

The NetView program cannot successfully obtain a system enqueue on the named chain.

Message Variables

chain

The name of the access control block (ACB) or task vector block (TVB) chain.

command

The name of a NetView command.

System action

The NetView program stops processing the command.

Operator response

Notify the system programmer.

System programmer response

Determine why the enqueue failed from the DSI072E message.

DW0674E	AN MVS DEQUEUE OF THE NETVIEW <i>chain</i> HAS FAILED, <i>command</i> COMMAND IS TERMINATED.
----------------	---

Explanation

The NetView program cannot successfully dequeue the named chain.

Message Variables

chain
The name of the access control block (ACB) or task vector block (TVB) chain.

command
The name of a NetView command.

System action
The NetView program stops processing the command.

Operator response
Notify the system programmer.

System programmer response
Determine why the dequeue failed from the DSI072E message.

DWO675E THE *command* COMMAND TRUNCATED CHARACTER DATA.

Explanation
The command attempted to store character data into a field of insufficient length. The update ends.

Message Variables
command
The name of the command that was issued to store data.

System action
The NetView program stops processing the command.

Operator response
If the command was issued because of automation, notify the system programmer that there is an error in the NetView automation table entry. Otherwise check the command and retry.

System programmer response
Verify that the correct entity is being updated. Ensure that the data type of the field and data match.

DWO677E THE DATA LENGTH OF THE *command* KEYWORD, *keyword*, IS TOO LONG.

Explanation
The keyword value for *keyword* was too large.

Message Variables
command
The name of the command

keyword
The keyword in error

System action
The NetView program rejects the command.

Operator response
If the command was issued because of automation, notify the system programmer that there is an error in the NetView automation table entry.

If *command* is DSIMCAP, the command text returned by the CNMEMCXY command list is too long. Correct CNMEMCXY and retry.

Otherwise, check the command and retry.

System programmer response
Verify the syntax of the NetView automation table entry. Correct the entry if necessary and refresh the NetView automation table.

If *command* is DSIMCAP, check CNMEMCXY to make sure that the command text is 122 characters or less and that the command length is set correctly.

DWO678E THE *command* COMMAND FAILED. DATA KEYWORD OR PARAMETER KEYWORD DOES NOT CONTAIN VALID NUMERIC DATA.

Explanation
The ORCONV command processor attempted to translate character data from the message into binary or floating point data and failed.

Message Variables
command
The name of the command.

System action
The NetView program rejects the command.

Operator response
If the command occurred because of automation, notify the system programmer that there is an error in the NetView automation table entry. Otherwise check the command and retry.

System programmer response
Verify in the NetView automation table that the correct entity is being updated. Ensure that the data type of the field and the data match.

DWO679E THE OBJECT IS NOT FOUND OR SPECIFIED. THE COMMAND, *command*, IS TERMINATED.

Explanation

The object referenced by the command was not found in the Resource Object Data Manager (RODM) or was not specified in the API call.

Message Variables

command

The name of the command that was issued.

System action

The NetView program rejects the command.

Operator response

Ensure that RODM is loaded. If the command was ORCONV, notify the system programmer that there is an automation table entry that is not valid.

System programmer response

If the command was ORCONV, verify the syntax of the NetView automation table entry. Correct the entry if necessary and refresh the NetView automation table.

DWO680E THE CLASS IS NOT FOUND OR SPECIFIED. COMMAND, *command*, IS TERMINATED.

Explanation

The class referenced by the command was not found in the Resource Object Data Manager (RODM) or was not specified in the API call.

Message Variables

command

The name of the command.

System action

The NetView program rejects the command.

Operator response

Verify that RODM has been loaded. If the command was ORCONV, notify the system programmer that an automation table entry is not valid.

System programmer response

If the command was ORCONV, verify the syntax of the NetView automation table entry. Correct the entry if necessary and refresh the NetView automation table.

DWO681E THE FIELD IS NOT FOUND OR SPECIFIED. COMMAND, *command*, IS TERMINATED.

Explanation

The field referenced by the command was not found in the Resource Object Data Manager (RODM) or not specified in the API call.

Message Variables

command

The name of the command.

System action

The NetView program rejects the command.

Operator response

Ensure that RODM is loaded. If the command was ORCONV, notify the system programmer that the automation table entry is not valid.

System programmer response

If the command was ORCONV, verify the syntax of the NetView automation table entry. Correct the entry if necessary and refresh the NetView automation table. For other commands, check the command referencing the field that is not valid.

DWO682E RODM CANNOT PROCESS THE *command* COMMAND. COMMAND IS TERMINATED.

Explanation

The Resource Object Data Manager (RODM) was not available to process the command specified.

Message Variables

command

The name of the command.

System action

The NetView program rejects the command.

Operator response

Activate RODM.

DWO683E THE *command* UPDATE TO RODM FAILED; UNEXPECTED DATA TYPE=*type*.

Explanation

The data type referenced by the command is not valid.

Message Variables

command

The name of the command.

type

The unexpected data type value.

System action

The NetView program rejects the command.

Operator response

If the command was ORCONV, notify the system programmer that there is an automation table entry that is not valid.

System programmer response

Verify the syntax of the NetView automation table entry if the command was ORCONV. Ensure that the data type of the field matches that of the data. Correct the entry if necessary and refresh the NetView automation table. For other commands, check the command referencing the data type that is not valid.

DWO684E THE METHOD WAS NOT FOUND OR SPECIFIED. THE *command* COMMAND IS TERMINATED.

Explanation

The method referenced by the command was not found within the Resource Object Data Manager (RODM) API call.

Message Variables

command

The name of the command.

System action

The NetView program rejects the command.

Operator response

Ensure that RODM is loaded. If the command was ORCONV, notify the system programmer that an automation table entry is not valid.

System programmer response

Verify the syntax of the NetView automation table entry if the command was ORCONV. Correct the entry if necessary and refresh the NetView automation table. For other commands, check the command referencing the method that is not valid.

DWO685E

***command* RODM ERROR, RETURN
CODE=*retcode* REASON
CODE=*reason*.**

Explanation

An error occurred while the command was attempting to update a Resource Object Data Manager (RODM) entity or invoke a method in RODM.

Message Variables

command

The name of the command.

retcode

The RODM return code.

reason

The RODM reason code.

System action

The NetView program stops processing the command.

Operator response

Verify that RODM is loaded. If the command was ORCONV, notify the system programmer that there is a NetView automation table entry that is not valid.

System programmer response

Verify the syntax of the NetView automation table entry if the command was ORCONV. Correct the entry if necessary and refresh the NetView automation table. For other commands, check the command referencing the entity that is not valid.

DWO686E

**DSIQTSK WAS UNABLE TO OPEN
THE STARTUP DSIPARM MEMBER.**

Explanation

The DSIQTSK subtask attempted to connect to the DSIPARM member and failed.

System action

The DSIQTSK subtask ends.

Operator response

Try to start the subtask again. If it fails again, notify the system programmer.

System programmer response

Verify that the DSIPARM member is correct, then restart the subtask.

DWO687E DSIQTSK HAS NO DSIPARM MEMBER SPECIFIED IN THE STARTUP DEFINITION.

Explanation

There is no member name defined to the DSIQTSK subtask.

System action

The DSIQTSK subtask ends.

Operator response

Notify the system programmer.

System programmer response

The definition of the DSIQTSK subtask to the NetView program must have a DSIPARM member name. Ensure that a member name is specified and restart the NetView program.

DWO688E DSIQTSK WAS UNABLE TO FIND DSIPARM MEMBER, *member*.

Explanation

The DSIPARM member defined to the DSIQTSK subtask was not found.

Message Variables***member***

The name of initialization member.

System action

The DSIQTSK subtask ends.

Operator response

Notify the system programmer.

System programmer response

Ensure that the DSIPARM member name specified in the DSIQTSK task definition is valid. If incorrect, correct the name and restart the NetView program.

DWO689I DUPLICATE TASK SPECIFIED, *task*, AND IGNORED.

Explanation

A task is defined more than once within the initialization file.

Message Variables***task***

The name of the task.

System action

The duplicate task is ignored. Processing continues.

System programmer response

Remove the duplicate task name.

DWO690I DUPLICATE RODM SPECIFIED, *rodm*, AND IGNORED.

Explanation

A Resource Object Data Manager (RODM) was defined more than once within the initialization file.

Message Variables***rodm***

The name of RODM.

System action

The duplicate RODM is ignored. Processing continues.

System programmer response

Remove the duplicate RODM defined in the initialization file.

DWO691E TOO MANY TASKS WERE DEFINED AT INITIALIZATION.

Explanation

The initialization file contained more than 64 definitions for NetView tasks.

System action

The subtask ends.

Operator response

Notify the system programmer.

System programmer response

Reduce the number of tasks defined within the initialization file to a maximum of 64. Restart the DSIQTSK subtask.

DWO692E TOO MANY RODMS WERE DEFINED AT INITIALIZATION.

Explanation

The initialization file contained more than 64 Resource Object Data Manager (RODM) definitions.

System action

The subtask ends.

Operator response

Notify the system programmer.

System programmer response

Reduce the number of RODMs defined within the initialization file to a maximum of 64. Restart the DSIQTSK subtask.

**DWO693E A PARAMETER SYNTAX ERROR
WAS FOUND IN MEMBER, *member*.**

Explanation

The initialization file has a parameter syntax error.

Message Variables***member***

The name of the initialization member.

System action

The DSIQTSK subtask ends.

Operator response

Notify the system programmer.

System programmer response

Check the DSIPARM member and correct the ERROR. Restart the subtask.

**DWO694E A DUPLICATE PARAMETER WAS
SPECIFIED IN THE RODM
DEFINITION IN MEMBER *member*.**

Explanation

A Resource Object Data Manager (RODM) definition statement contained a duplicate parameter.

Message Variables***member***

The name of the DSIPARM member where the error was detected.

System action

The DSIQTSK subtask ends.

Operator response

Notify the system programmer.

System programmer response

Check the DSIPARM member and correct the error. Restart the subtask.

DWO695E

**MORE THAN ONE RODM WAS
SPECIFIED FOR AUTOMATION IN
MEMBER, *member*.**

Explanation

Multiple Resource Object Data Managers (RODMs) were defined for automation.

Message Variables***member***

The name of the initialization member.

System action

The DSIQTSK subtask ends.

Operator response

Notify the system programmer.

System programmer response

Correct the initialization member error and restart DSIQTSK.

DWO696W

**THE TASK DEFINITION IN THE
INITIALIZATION FILE IS NOT
VALID.**

Explanation

A command receiver was defined in the initialization file without any TASK statements, or tasks were defined in the initialization file without a CMDRCVR statement.

System action

The DSIQTSK task does not support receiving commands.

Operator response

Notify the system programmer.

System programmer response

Correct the initialization file and restart the DSIQTSK subtask.

DWO697I

***starttype* START OF THE RODM
CONTROL TASK IS IN PROGRESS.**

Explanation

This message shows how the subtask was started.

Message Variables***starttype***

Type of startup (COLD or WARM).

COLD

The first time DSIQTSK has been started.

WARM

The DSIQTSK subtask was previously active.

System action

In either start type, all Resource Object Data Managers (RODMs) defined within the initialization file are utilized. If the start was warm, then all parameters in the initialization deck are processed. If RODM existed on the previous initialization deck but it does not exist in the new one, RODM is disconnected and is no longer defined to the NetView program. All connections or connect retries that existed the last time the NetView program was running are maintained unless RODM is no longer defined in the initialization deck.

**DWO698I THE INITIALIZATION OF THE
RODM CONTROL TASK HAS
COMPLETED.**

Explanation

The DSIQTSK subtask has completed initialization and is ready for work.

System action

Processing continues.

Operator response

You can now issue ORCNTL commands.

**DWO699E THE CONNECTION TO RODM *rodm*
FAILED. ATTEMPTING RETRY.**

Explanation

The DSIQTSK subtask attempted to connect to the specified Resource Object Data Manager (RODM) but failed.

Message Variables***rodm***

The name of RODM.

System action

Message DWO742E is generated. The DSIQTSK retries in 60 seconds or when the operator requests a connection. This message is not generated again if the retry fails.

Operator response

Check the status of the specified RODM to ensure that it is operative. If the specified RODM has not been started, start RODM.

DWO700I

**DSIQTSK IS CONNECTED TO THE
RODM *rodm*.**

Explanation

The DSIQTSK subtask has connected to a specified Resource Object Data Manager (RODM) successfully.

Message Variables***rodm***

The name of RODM.

System action

The subtask attempts to sign on to RODM notification queue.

**DWO701E COMMUNICATION IS LOST TO
RODM, *rodm*.**

Explanation

The specified Resource Object Data Manager (RODM) has ended. The NetView program has detected this and tries to establish a new connection if a disconnect request is not outstanding. If the connect request fails, message DWO742E is issued and the NetView program attempts to connect to RODM every minute.

Message Variables***rodm***

The name of RODM.

System action

Unless the operator has requested the DSIQTSK to disconnect from the RODM, the DSIQTSK tries to reconnect to RODM.

Operator response

If you have not requested the RODM disconnection, check the status of the specified RODM. If a failure occurred, attempt to reconnect to RODM.

**DWO702I A CHECKPOINT HAS BEEN ISSUED
TO THE RODM *rodm*.**

Explanation

The DSIQTSK subtask issued a successful checkpoint request to a specified Resource Object Data Manager (RODM).

Message Variables***rodm***

The name of RODM.

System action

Processing continues.

DWO703E THE CHECKPOINT REQUEST TO RODM *rodm* HAS FAILED. CHECKPOINTING IS DISABLED.

Explanation

The DSIQTSK subtask failed in an attempt to issue a checkpoint request to the specified Resource Object Data Manager (RODM).

Message Variables

rodm
The name of RODM.

System action

The DSIQTSK subtask does not retry a checkpoint request.

Operator response

To retry a checkpoint request, issue an ORCNTL CONN request to the specified RODM. This reconnects RODM and drives the initialization of the notify queue and subscriptions.

System programmer response

Message DWO742E is generated with function code 1201. Compare the error codes with those provided by the RODM to verify the error.

DWO704I DSIQTSK IS NOW DISCONNECTED FROM RODM, *rodm*.

Explanation

The DSIQTSK subtask has disconnected from the specified Resource Object Data Manager (RODM)

Message Variables

rodm
The name of RODM.

System action

Processing continues.

Operator response

If you want RODM to be reconnected, issue the ORCNTL CONN command.

DWO705I THE KEYWORD *keyword* IS NO LONGER SUPPORTED AND WILL BE IGNORED.

Explanation

The *keyword* specified is no longer a supported keyword.

In the case of the CNMSTYLE member, the specified keyword or value is ignored. NetView initialization will continue. The statement or value should be removed.

In the case of DSIQTSK, the PASS keyword is no longer supported on the REP statement and the APF keyword is no longer supported on the CMDRCVR statement in the DSIQTSK initialization member (DSIQTSKI).

Message Variables

keyword
The name of the keyword that is no longer supported and therefore it is ignored. If this message is encountered during CNMSTYLE member processing and a period (.) is the last character of the keyword in the message, then all keywords that begin with this stem are no longer supported.

System action

The keyword is ignored.

Operator response

Remove the *keyword* from the initialization member of the task or from the CNMSTYLE member.

In the case of DSIQTSK, the PASS keyword and the APF keyword must be removed from the DSIQTSKI initialization member.

DWO706E THE SIGNON TO RODM *rodm* CHECKPOINT NOTIFY FAILED. CHECKPOINT IS DISABLED.

Explanation

The DSIQTSK task has failed to sign on to the Resource Object Data Manager (RODM) checkpoint notification queue. The checkpoint procedure failed and was disabled.

Message Variables

rodm
The name of RODM.

System action

The subtask continues with the checkpoint function of DSIQTSK disabled. Message DWO742E is also issued.

Operator response

Issue the ORCNTL CONN command to reconnect to RODM and retry the signon. The reconnection drives the initialization of the notify queue and subscriptions.

System programmer response

Message DWO742E is generated with the function codes 1401, 1409, 1412, and 1504. Compare the error codes with those provided by RODM to find the error.

DWO707E THE RODM *rodm* IS NOT DEFINED.

Explanation

The Resource Object Data Manager (RODM) specified within the ORCNTL command was not found.

Message Variables

rodm

The name of RODM.

System action

The processing of the request ends.

Operator response

Correct the RODM name specified in the ORCNTL request. If the RODM name is not known, issue the ORCNTL LIST,REP command to have the valid RODMs displayed.

DWO708E THE REQUEST TO DISCONNECT RODM *rodm* HAS FAILED.

Explanation

An ORCNTL command was issued to disconnect the Resource Object Data Manager (RODM) specified. The specified RODM is not currently connected to the DSIQTSK task.

Message Variables

rodm

The name of RODM.

Operator response

Check the ORCNTL command and verify that the specified RODM is correct. If the specified RODM was incorrect, correct the name and issue the ORCNTL command again. If the proper RODM was specified, then verify the status of the requested RODM and issue the command again, if required.

DWO709E THE REQUEST TO CONNECT RODM *rodm* IS REJECTED. PASSWORD IS NOT VALID.

Explanation

The DSIQTSK subtask attempted to connect to the specified Resource Object Data Manager (RODM) that had already failed because of a password or password phrase that was not valid.

Message Variables

rodm

The name of RODM.

System action

The request is rejected.

Operator response

Notify the system programmer.

System programmer response

Change the sign-on password or password phrase in the initialization file of the DSIQTSK subtask for this RODM. This new password or password phrase is used at the next start of the DSIQTSK subtask.

DWO710I THE RODM *rodm* WILL DISCONNECT WITHOUT A CHECKPOINT.

Explanation

An ORCNTL command was issued with the DISC option. The Resource Object Data Manager (RODM) takes a checkpoint prior to disconnection.

Message Variables

rodm

The name of RODM.

System action

The DSIQTSK task disconnects the specified RODM without taking a checkpoint.

DWO711I THE RODM *rodm* WILL DISCONNECT WITH A CHECKPOINT.

Explanation

An ORCNTL command was issued with the DISC option. The Resource Object Data Manager (RODM) takes a checkpoint prior to disconnection.

Message Variables

rodm

The name of RODM.

System action

The DSIQTSK task disconnects the specified RODM while taking a checkpoint.

DWO712E	THE REQUEST TO CONNECT THE RODM <i>rodm</i> HAS FAILED. PASSWORD IS NOT VALID.
----------------	---

Explanation

A request was made to connect the specified Resource Object Data Manager (RODM) to the subtask DSIQTSK. The request is rejected because of a password or password phrase that is not valid.

Message Variables

rodm

The name of RODM.

System action

The DSIQTSK rejects the connect request.

Operator response

Change the RODM password or password phrase using the ORCNTL command. Then issue the connect request again.

System programmer response

Change the signon password or password phrase in the initialization file of the DSIQTSK subtask for this RODM. This new password or password phrase is used at the next start of the DSIQTSK subtask.

DWO713I	THE REQUEST TO CONNECT THE RODM <i>rodm</i> HAS BEEN ISSUED.
----------------	---

Explanation

An ORCNTL CONN command has been issued for the specified Resource Object Data Manager (RODM).

Message Variables

rodm

The name of RODM.

System action

The DSIQTSK connection continues.

DWO714E	THE REQUEST TO CHECKPOINT THE RODM <i>rodm</i> FAILED.
----------------	---

Explanation

The ORCNTL command has been issued with the CHKPT option, but the checkpoint request is for a

specified Resource Object Data Manager (RODM) that is not connected.

Message Variables

rodm

The name of RODM.

System action

The request is rejected.

Operator response

Verify the RODM name, correct it if necessary, and issue the command again, if required. Verify the current status of the requested RODM by issuing the ORCNTL LIST,REP command.

DWO715E	THE REQUEST TO CHECKPOINT THE RODM <i>rodm</i> FAILED. RODM IS CURRENTLY DISCONNECTING.
----------------	--

Explanation

The ORCNTL command has been issued with the CHKPT option. The request has been rejected because the Resource Object Data Manager (RODM) specified is currently being disconnected.

Message Variables

rodm

The name of RODM.

System action

The request is rejected.

Operator response

Verify the RODM name, correct it if necessary, and issue the command again, if required. Verify the current status of the requested RODM by issuing the ORCNTL LIST,REP command.

DWO716E	THE REQUEST TO CHECKPOINT THE RODM <i>rodm</i> FAILED. REQUEST WAS ALREADY REQUESTED.
----------------	--

Explanation

The ORCNTL command has been issued with the CHKPT option. The request has been rejected because a previous checkpoint request was issued for Resource Object Data Manager (RODM).

Message Variables

rodm

The name of the Resource Object Data Manager (RODM).

System action

The request is rejected.

Operator response

Verify the RODM name. Correct and issue the command again, if necessary.

DWO717E	THE REQUEST TO CHECKPOINT THE RODM <i>rodm</i> FAILED. RODM IS CURRENTLY CHECKPOINTING.
----------------	--

Explanation

The Resource Object Data Manager (RODM) specified in the ORCNTL checkpoint request is already taking a checkpoint. Therefore, the new checkpoint request is rejected.

Message Variables

rodm

The name of RODM.

System action

The request is rejected.

Operator response

Verify the RODM name. Correct and issue the command again, if required.

DWO718I	THE REQUEST TO CHECKPOINT THE RODM <i>rodm</i> HAS BEEN RECEIVED.
----------------	--

Explanation

The ORCNTL checkpoint request has been issued and scheduled for the Resource Object Data Manager (RODM) specified.

Message Variables

rodm

The name of RODM.

DWO719E	THE <i>command</i> REQUEST FAILED. A PARAMETER ERROR WAS DETECTED.
----------------	---

Explanation

The DSIQTSK subtask has detected an error in a request block received from the issued command.

Message Variables

command

The name of the command.

System action

The request is rejected.

Operator response

Check the command and try again.

DWO720E	THE REQUEST WAS REJECTED DUE TO AN UNKNOWN SEND ERROR TO DSIQTSK. PLEASE RETRY.
----------------	--

Explanation

The ORCNTL command attempted to send a request to the subtask DSIQTSK and the command was corrupted.

System action

The request is rejected.

Operator response

Check the command and try again.

DWO721E	THE REQUEST FAILED; DSIQTSK NOT ACTIVE.
----------------	--

Explanation

The DSIQTSK subtask is not active and the command request was rejected.

System action

The command is rejected.

Operator response

Start the DSIQTSK subtask.

DWO722E	THE REQUEST TO CHECKPOINT THE RODM <i>rodm</i> FAILED. THE CHECKPOINT HAS BEEN DISABLED.
----------------	---

Explanation

The ORCNTL command that was issued with the CHKPT option failed. The request has been rejected because the checkpoint function for the specified Resource Object Data Manager (RODM) has been disabled.

Message Variables

rodm

The name of RODM.

System action

The checkpoint function is disabled because the DSIQTSK subtask has failed to issue a checkpoint request to *rodm*.

Operator response

Issue the ORCNTL CONN command.

DWO723E THE REQUEST TO CHECKPOINT THE RODM *rodm* FAILED. DSIQTSK IS NOT SIGNED ON TO RECEIVE THE CHECKPOINT NOTIFICATION.

Explanation

The ORCNTL command has been issued with the CHKPT option but the request has been rejected because the DSIQTSK has previously failed to sign on to the Resource Object Data Manager (RODM) checkpoint notification.

Message Variables

rodm
The name of RODM.

System action

The NetView program stops processing the command.

Operator response

Issue the ORCNTL CONN command.

DWO724I THE PASSWORD FOR THE RODM *rodm* HAS BEEN CHANGED.

Explanation

The ORCNTL command was issued with a PASS request. The password or password phrase for the specified Resource Object Data Manager (RODM) was changed.

Message Variables

rodm
The name of RODM.

System action

The command was rejected.

System programmer response

Update the DSIQTSK initialization file to reflect this new password or password phrase. Passwords or password phrases changed using the ORCNTL command are used only until the next restart of the DSIQTSK subtask.

DWO725I THE AUTOMATION RODM IS NOW *rodm*.

Explanation

The ORCNTL command has been issued with the CHNG request. The automation Resource Object Data Manager (RODM) has been changed to the specified RODM.

Message Variables

rodm
The name of RODM.

System action

Processing continues.

Operator response

Ensure that the new automation RODM is connected. Verify this by issuing the ORCNTL LIST,REP command.

DWO726E THE AUTOMATION RODM IS ALREADY *rodm*. THE REQUEST IS REJECTED.

Explanation

The ORCNTL command has been issued with the CHNG request. The automation Resource Object Data Manager (RODM) is already set to RODM specified in the request.

Message Variables

rodm
The name of RODM.

System action

The request is rejected.

Operator response

Ensure that the proper RODM was specified and issue the command again.

DWO727I NO RODM IS NOW DEFINED AS THE AUTOMATION RODM.

Explanation

The ORCNTL command has been issued with the NOAOREP request. No Resource Object Data Manager (RODM) is available as the automation RODM.

System action

Processing continues.

**DWO728W THE CURRENT AUTOMATION
RODM *rodm* IS NOT CONNECTED.**

Explanation

The Resource Object Data Manager (RODM) that is currently the automation RODM is not connected.

Message Variables***rodm***

The name of RODM.

Operator response

If you want RODM connected, issue the ORCNTL command with the CONN option. This connects RODM to the DSIQTSK subtask.

**DWO729E THERE IS AN ERROR READING
THE RODM *rodm* NOTIFICATION
QUEUE. CHECKPOINTING HAS
BEEN DISABLED.**

Explanation

The DSIQTSK subtask attempted to query the Resource Object Data Manager (RODM) notification queue and failed. Message DWO742E is generated to provide error codes.

Message Variables***rodm***

The name of RODM.

System action

The DSIQTSK subtask detected an error reading the RODM notification queue. The checkpoint function for this RODM is disabled.

System programmer response

Check the DWO742E message generated for return and reason codes for problem determination. After correcting the problem, enable the checkpoint function by reconnecting to RODM.

**DWO730E THERE IS AN ERROR ISSUING
WORK TO THE TASK *task*.
ATTEMPTING RETRY.**

Explanation

The DSIQTSK received an error trying to issue work to a task.

Message Variables***task***

The name of the task.

System action

The request is retried on another task defined in DSIQTSK.

**DWO731I A CHECKPOINT HAS BEEN
COMPLETED ON THE RODM *rodm*.**

Explanation

The specified Resource Object Data Manager (RODM) took a checkpoint.

Message Variables***rodm***

The name of RODM.

System action

The checkpoint is complete. Any RODM calls waiting checkpoint notification are posted.

**DWO732I EXCESSIVE ERRORS WERE FOUND
IN THE TASK *task*. THE TASK IS
NO LONGER IN USE.**

Explanation

The dispatcher has encountered an error more than once issuing a DSIMQS request to the specified task.

Message Variables***task***

The name of the task.

System action

The task is no longer used by DSIQTSK.

Operator response

Restart DSIQTSK.

System programmer response

Check for task error messages in the DSILOG to determine the problem.

**DWO733A NO NETVIEW TASKS ARE
AVAILABLE FOR WORK. ENTER
“1” TO RETRY OR “2” TO
TERMINATE THE REQUEST.**

Explanation

The NetView program has no available tasks for work.

System action

The command request to the NetView program is suspended. No work is issued to any NetView task until the request is acknowledged.

Operator response

Issue the ORCNTL LIST,TASK command. This displays all of the tasks defined to the DSIQTSK subtask. Activate at least one of the tasks defined as having the current state of NOTFOUND. Enter 1 to have the request issued. If there is no task available to activate, enter 2 to end the request. The DSIQTSK subtask ends. Update the initialization file with the name of an available task and restart the DSIQTSK subtask.

Note: If you enter 2 and commands were transmitted from the Resource Object Data Manager (RODM) through the program-to-program interface, they are processed when the DSIQTSK is returned.

DWO734E YOU MUST ENTER “1” or “2”.

Explanation

The response you entered for DWO733A was not a 1 or 2.

System action

The DSIQTSK subtask issues message DWO733A again.

Operator response

The message DWO733A is displayed. Enter a 1 to retry or a 2 to end the request.

DWO735I RCVR = status, AUTO REP= rodm

Explanation

This is a response to an ORCNTL LIST request. The status of the Resource Object Data Manager (RODM) receiver component and the name of the default automation RODM are displayed.

Message Variables

status

The status of the dispatcher. The statuses are:

Active

The dispatcher is currently ready for work.

Inactive

The dispatcher is currently inactive.

WTOR

The dispatcher is waiting for a response to message DWO733A. See message DWO733A for details.

rodm

The name of the current RODM, or NOTFOUND if a current automation RODM has not been defined to the NetView system.

**DWO736I RODM(rodm) STATE(status)
 CHKPT(checkpoint)**

Explanation

This is a response to an ORCNTL LIST,REP request. The name, status, and checkpoint state of the Resource Object Data Manager (RODM) are displayed.

Message Variables

rodm

The name of RODM.

status

The status of RODM in relation to the DSIQTSK task:

CONNECT

Connected to RODM.

CONNREQ

Connection has been requested.

DISC

Disconnected from RODM.

DISCREQ

Disconnection has been requested.

checkpoint

The status of the checkpoint:

REQUEST

Checkpoint has been requested.

INACTIVE

No checkpoint in progress.

ACTIVE

Checkpoint in progress.

DISABLE

Checkpoint function from DSIQTSK has been disabled because of checkpoint notification request error from RODM. Issue an ORCNTL CONN request to RODM in error. This reconnects the RODM, which drives the initialization of the notify queue and subscriptions.

DWO737I TASK(task) STATE(status)

Explanation

This is a response to ORCNTL LIST,TASK request. The name and status of the task are displayed.

Message Variables

task

The name of the task.

status

The status of the task:

INUSE

The task defined within the initialization file has been found in the NetView system. It currently is being used and work is being sent to it.

NOTFOUND

This is defined to DSIQTSK but not found in the NetView system.

DISABLED

The dispatcher encountered errors trying to issue DSIMQS requests to this task and has failed.

System action

The task is no longer used by the dispatcher.

Operator response

Recycle the NetView program to restart the task.

DWO738I THE END OF DISPLAY REQUEST.

Explanation

This indicates when the response to the ORCNTL LIST request is complete.

DWO739E UNABLE TO ISSUE COMMAND FROM SENDER *sender* TO TASK *task*, SENDER TOKEN = *token*.

Explanation

A program requested that a command (or assist message) be issued to a specific task only. The request failed because the task specified was not valid or not active.

Message Variables

sender

The sender name provided to the program-to-program interface by the sending program.

task

The name of the task where the command was to be executed.

token

The token sent by the sender in the command buffer. If no sender token is sent, the value displayed is N/A.

System action

The request is not processed because the task requested was not found or not active.

Operator response

Message DWO740I follows. See this message to determine which command was not issued and take appropriate action.

System programmer response

Use message DWO740I for diagnosis.

DWO740I CODE = *retcode*, TEXT = *text*.

Explanation

A command sent to DSIQTSK cannot be issued (or assisted). DWO740I follows another message, providing additional detail.

Message Variables

retcode

Reason code for command failure:

- 1** Request message has no text.
- 2** Parse of message failed.
- 3** Insufficient parameters in message.
- 4** Delimiter in message is not valid.
- 5** Parameter is not valid.
- 6** Assisted command, no assist operator.
- 7** Operator or autotask specified is not valid.
- 8** Attempt to issue command failed.

text

The text of the command that was not issued.

System action

The Resource Object Data Manager (RODM) stops processing the request.

System programmer response

Determine the problem and correct it. The problem might have originated in the program that sent the command.

DWO741E UNABLE TO ISSUE COMMAND TO TASK *task*. DSIMQS RC = *retcode*.

Explanation

A program requested that a command be assisted or issued to a specific task only. The request failed on the DSIMQS call because of the reasons indicated by the MQS return code.

Message Variables

task

The name of the task where the command was to be queued.

retcode

The DSIMQS return code.

System action

The request is canceled because the DSIMQS call failed.

System programmer response

Look up the DSIMQS return code and determine the cause of the failure. Message DWO740I is also issued in response to this message. See message DWO740I for further details.

DWO742E **RODM *rodm* ERROR, FUNCTION = *func*, RETURN CODE = *retcode*, REASON CODE = *reason*.**

Explanation

The Resource Object Data Manager (RODM) is returning error information in response to a DSIQTSK request.

Message Variables

rodm

The name of RODM.

func

The RODM function ID.

retcode

The return code from RODM.

reason

The reason code from RODM.

System action

The error message is generated for all RODM API call failures in which the error codes are unknown.

System programmer response

Use this message for problem analysis to determine why a DSIQTSK call is failing. After correcting the problem, reconnect RODM to force the DSIQTSK to sign on to the notification queue and to query it again.

DWO744I

DSIQTSK DOES NOT HAVE ANY RODMs DEFINED TO IT.

Explanation

An ORCNTL LIST,REP command was issued and no Resource Object Data Managers (RODMs) have been defined in the DSIQTSKI initialization member in DSIPARM.

DWO745I

DSIQTSK DOES NOT HAVE ANY AUTOTASKS DEFINED TO IT.

Explanation

An ORCNTL LIST,TASK command was issued and no tasks have been defined in the ORAC initialization deck.

DWO746I

THE *process* FAILED. PROGRAM-TO-PROGRAM INTERFACE REQUEST TYPE IS *request_type*, RETURN CODE IS *retcode*.

Explanation

One of the following processes failed:

- The DSIQTSK task attempted to initialize the program-to-program interface (PPI) receiver and failed after a specified number of retries.
- The Z NetView Enterprise Management Agent encountered a failure with its PPI communication layer.

Message Variables

process

The name of the process that failed. Possible values for process are:

- PPI initialization
- PPI receive
- QRYPPi Query program-to-program interface
- QRYRCVR Query PPI receiver
- INITRCVR Initialize PPI receiver
- DELRCVR Delete a PPI receiver
- RECVBUFR Receive buffer

request_type

The PPI request that failed.

retcode

The return code returned from the request type.

System action

The request is ended.

Operator response

Start the NetView subsystem interface with the PPI option enabled or notify the system programmer that there is a problem with the PPI subsystem.

System programmer response

Determine why the specified process failed. Check the request type and the return code. See the *IBM Z NetView Application Programmer's Guide* for more information.

DWO747I	AN INCORRECTLY FORMATTED BUFFER WAS RECEIVED FROM THE PROGRAM-TO-PROGRAM INTERFACE, AND WAS REJECTED.
----------------	--

Explanation

A buffer was sent through the program-to-program interface subsystem but the data was not in the correct format.

DWO748E	THE COMMAND OR COMMAND LIST, <i>errcmd</i>, SPECIFIED ON THE ERROR OPERAND OF THE <i>cmd</i> COMMAND, IS NOT WITHIN THE OPERATOR AUTHORITY.
----------------	--

Explanation

The operator is not authorized to issue the command.

Message Variables

errcmd

The command or command list which the operator is not authorized to use.

cmd

The command that was issued specifying *errcmd* as the ERROR operand.

System action

The *cmd* command is ended.

Operator response

If you need to enter the command, notify the system programmer.

System programmer response

Evaluate the operator's requirements and add appropriate security access if required.

DWO749E	THE NETVIEW COMMAND OR COMMAND LIST, <i>errcmd</i>, SPECIFIED ON THE ERROR
----------------	---

OPERAND OF THE *cmd* COMMAND, IS NOT VALID

Explanation

The error command does not exist as a command list or a command processor.

Message Variables

errcmd

The command or command list which the operator is not authorized to use.

cmd

The command that was issued specifying *errcmd* as the ERROR operand.

System action

The *cmd* command ends.

DWO750I	DSIQTSK IS UNABLE TO ISSUE WORK FROM THE <i>senderid</i>. THERE ARE NO AUTOTASKS AVAILABLE.
----------------	--

Explanation

Work was received from the specified sending application, but none of the autotasks listed in the initialization file are available to receive the work. This message might be accompanied by message DWO733A if the sending application is RODM.

Message Variables

senderid

The name of the sending application.

System action

Any work that needs to be executed on the autotask by DSIQTSK is ignored.

Operator response

Issue the ORCNTL LIST,TASK command. This displays all of the tasks defined to the DSIQTSK subtask. Activate at least one of the tasks defined as having the current state of NOTFOUND. Enter 1 to have the request issued. If there is no task available to activate, enter 2 to end the request. The DSIQTSK subtask ends. Update the initialization file with the name of an available task and restart the DSIQTSK subtask.

System programmer response

Ensure that one of the autotasks listed in the initialization file is executing properly.

DWO751I	DSIQTSK IS UNABLE TO CONNECT TO THE RODM <i>rodm</i>; THERE ARE NO AUTOTASKS AVAILABLE TO
----------------	--

PROCESS THE INITIAL COMMAND.

Explanation

A connection was made to the specified Resource Object Data Manager (RODM) that had an initial command associated with it. DSIQTSK attempted to connect to RODM every specified number of seconds. The specified number is a NetView constant.

Message Variables

rodm

The name of RODM.

System action

The request is ended.

Operator response

Start one of the autotasks listed in the initialization deck and enter R to retry.

DWO752E A LOAD FOR *apimodule* FAILED.

Explanation

A load of one of the following services has failed:

- One of the Application Programming Interface (API) modules, such as EKGUAPI.
- The Z NetView Enterprise Management Agent command service module.

Message Variables

apimodule

The name of the API module or a description of the API module. A description of RODM API INTERFACE refers to the EKGUAPI module.

System action

The operation associated with the API will fail. If this message is issued during NetView initialization, NetView initialization will continue. These are possible consequences of this failure:

- If the EKGUAPI module was not loaded, then calls related to the Resource Object Data Manager (RODM) will fail with a return code of 8 and the message DWO721E is issued.
- If the EZBCTAPI, EZBNMCTF, or EZBPTFM4 module was not loaded, the FMTPACKT pipe stage will fail.
- If the CNMPPISR module was not loaded, make sure that the NetView CNMLINK library is accessible to LLA or a library that is searched at program initialization of the Z NetView Enterprise Management Agent.

Operator response

Notify the system programmer.

System programmer response

Ensure that the API modules exist in the correct load library.

DWO753I *task*: WARNING, UNABLE TO DEALLOCATE RESOURCES FOR THIS TERMINATING TASK - TASK TERMINATION CONTINUES.

Explanation

Task termination has determined that DSIZMQEP was unable to complete processing of the task's message queues. An attempt to free the messages can cause unpredictable results.

Message Variables

task

If the task is a data services task, this is the LU name of the task. If the task is an operator station task, this is the operator ID.

System action

Task termination continues, but the task's message queues are not freed.

Operator response

Notify the system programmer.

System programmer response

This message is preceded by message DSI528I, DSI529I or a task abend. Determine the cause of the message or abend. Restart the NetView program to reclaim the lost resources.

DWO754I THE CHECKPOINT REQUEST FOR RODM *rodm* WAS CANCELLED DUE TO OPERATOR INTERVENTION

Explanation

An operator has canceled the checkpoint before it completed.

Message Variables

rodm

The name of RODM.

DWO755W The keyword *kywd* is deprecated.

Explanation

The keyword is still supported for migration purposes, but might have reduced function.

Message Variables

kywd

The name of the keyword. If this message is encountered during the CNMSTYLE member processing and a period (.) is the last character of the keyword in the message, then all keywords that begin with this stem are deprecated.

System action

Processing continues.

System programmer response

See the *IBM Z NetView Administration Reference* for details about the level of support remaining for this keyword. Try to remove any dependency on the keyword.

DWO760W	NO PRIMARY FOCAL POINT DEFINED FOR CATEGORY <i>fpcat</i>. DEFFOCPT STATEMENTS FOR THIS CATEGORY ARE IGNORED.
----------------	---

Explanation

A *primary* focal point has not been defined with a DEFFOCPT statement for this category, but DEFFOCPT statements defining *backup* focal points for this category have been detected. The definition of a primary focal point for each category is mandatory. All DEFFOCPT statements pertaining to this category are ignored.

Message Variables

fpcat

The category for which the focal point information is being given.

System action

Processing continues. DEFFOCPT statements for this category will not be used.

Operator response

Notify the system programmer.

System programmer response

Either remove the DEFFOCPT statements for this category if no longer required or add a DEFFOCPT statement defining the primary focal point for this category. Any change in the DEFFOCPT definition for a

category will cause the new DEFFOCPT definition to be used when DSI6DST is restarted.

DWO761W	BACKUP FOCAL POINT <i>fpname</i> PREVIOUSLY DEFINED FOR CATEGORY <i>fpcat</i>. FIRST OCCURRENCE USED.
----------------	--

Explanation

A backup focal point name has been defined more than once for a specified category. The subsequent definitions are ignored.

Message Variables

fpname

The name of the remote node that is a backup focal point for the specified category

fpcat

The category for which the information is being given

System action

Processing continues. The NetView program uses the first definition of the backup focal point. Subsequent definitions are ignored.

Operator response

If the error occurred on a FOCALPT ACQUIRE command, verify that you entered the backup focal point name correctly. If incorrect, enter the FOCALPT ACQUIRE command again with the correct backup focal point name and the OVERRIDE keyword. If this message is not the result of issuing a FOCALPT ACQUIRE command, notify the system programmer.

System programmer response

Remove the duplicate definition of the backup focal point for this category. Any change in the DEFFOCPT definition for a category will cause the new DEFFOCPT definition to be used when DSI6DST is restarted.

DWO762W	MULTIPLE PRIMARY FOCAL POINTS DEFINED FOR CATEGORY <i>fpcat</i>. FOCAL POINT <i>fpname</i> ACCEPTED.
----------------	---

Explanation

In DEFFOCPT statements in the DSI6INIT initialization member, two different primary focal point names have been defined for the same category. The NetView program uses the last definition it reads.

Message Variables

fpcat

The category of data for which the focal point information is being given.

fpname

The name of the remote node that is a primary focal point for the specified type.

System action

Processing continues. The NetView program uses the last definition of a primary focal point. Previous definitions are ignored.

System programmer response

Remove the duplicate DEFFOCPT statements. You can only define one primary focal point per category. Any change in the DEFFOCPT definition for a category will cause the new DEFFOCPT definition to be used when DSI6DST is restarted.

DWO763W	MAXIMUM NUMBER OF BACKUP FOCAL POINTS DEFINED FOR CATEGORY <i>fpcat</i>. BACKUP FOCAL POINT <i>fpname</i> IGNORED.
----------------	---

Explanation

More than 8 backup focal points have been defined for this category. The NetView program ignores the extraneous backup focal points.

Message Variables***fpcat***

The category of data for which the focal point information is being given.

fpname

The name of the remote backup node that has been ignored.

System action

Processing continues. The first 8 backup focal points defined are used.

Operator response

If the error occurred on a FOCALPT ACQUIRE ADDBKUP command, enter the FOCALPT ACQUIRE command again:

- Without the ADDBKUP keyword
- With the BACKLIST operand specifying the complete backup list

The FOCALPT ACQUIRE command will replace the existing list with the backup list supplied.

If the error occurred on a FOCALPT ACQUIRE command without the ADDBKUP keyword, enter the

FOCALPT ACQUIRE command again with a maximum of 8 backup focal points specified.

If this message is not the result of issuing a FOCALPT ACQUIRE command, notify the system programmer.

System programmer response

Remove the extra DEFFOCPT BACKUP statements. Any change in the DEFFOCPT definition for a category will cause the new DEFFOCPT definitions to be used when DSI6DST is restarted.

DWO764W	RESTORE OF ALL CURRENT FOCAL POINTS UNSUCCESSFUL. DEFFOCPT STATEMENTS USED WHEN DETAILS NOT RESTORED.
----------------	--

Explanation

A failure was detected when restoring the saved focal points from the save/restore database. Some focal point information might have been returned and will be used. If no information is returned from the database, the DEFFOCPT statements are used.

System action

Processing continues.

Operator response

Issue the FOCALPT QUERY command to determine what information from the save/restore database was returned.

System programmer response

Use the save/restore error messages that appear at the authorized receiver console to determine the cause of the error.

DWO765W	QUALIFIED BACKUP FOCAL POINT <i>fpname1</i> DEFINED FOR CATEGORY <i>fpcat</i>. UNQUALIFIED BACKUP FOCAL POINT <i>fpname2</i> IGNORED.
----------------	--

Explanation

Both a qualified and an unqualified network name have been supplied for a category with the same network addressable unit (NAU). If a qualified network name is supplied for a category, MS_CAPS does not support the inclusion of an unqualified network name for the same NAU because it cannot predict how the netid will be resolved by VTAM and duplicates are not valid.

Message Variables

fname1

The qualified network name.

fpcat

The category for which the focal points are being specified.

fname2

The unqualified network name.

System action

Processing continues. The qualified network name is kept in the backup focal point list for the category selected.

Operator response

Check that the qualified network name entered is correct. If not, issue a FOCALPT DROP command for the qualified network name to remove the added name from the category's backup list. Issue the FOCALPT ACQUIRE command again, adding the unqualified network name removed by the first FOCALPT ACQUIRE command and the corrected new backup focal point name.

System programmer response

Check that the focal point names defined in the DEFFOCPT statements are correct.

**DW0766I NO DEFFOCPT FOCAL POINTS
DEFINED FOR THIS CATEGORY.**

Explanation

A FOCALPT ACQUIRE command with the DEFFOCPT parameter specified that the focal points defined in the DSI6DST DSI6INIT initialization member be restored for a specific category. However, no focal points were defined in this member for the category requested.

System action

The command is not processed.

Operator response

Enter the command again with focal point names or corrected category name.

**DW0767W PRIMARY FOCAL POINT *fname1*
DEFINED FOR CATEGORY *fpcat*.
BACKUP FOCAL POINT *fname2*
IGNORED.**

Explanation

A primary and backup focal point have the same network addressable unit (NAU). The backup focal

point is removed from the backup focal point list for the category. Although the backup focal point might have been fully qualified, the primary focal point is considered to be of higher priority than the backup focal point; thus the primary focal point is kept.

Message Variables***fname1***

The primary focal point name.

fpcat

The category for which the focal points are being specified.

fname2

The backup focal point name removed.

System action

Processing continues. The primary focal point is kept and the backup focal point ignored.

Operator response

Check that the primary focal point name entered is correct. Issue the FOCALPT ACQUIRE command again, adding the backup focal point removed by the first FOCALPT ACQUIRE command and the corrected new primary focal point name.

System programmer response

Check that the focal point names defined in the DEFFOCPT statements are correct.

**DW0768I THE FOLLOWING BACKUP FOCAL
POINT(S) HAS BEEN DROPPED:**

Explanation

This message precedes the display of the dropped backup focal points.

This message follows a DW0051I message that is displayed upon successful completion of a FOCALPT DROP command. You cannot use this message for automation because it is a message within a multiple-line message block.

**DW0769I *fname1 fname2 fname3*
*fname4***

Explanation

This message displays the names of backup focal points that have been dropped.

This message follows a DW0051I message that is displayed upon successful execution of a FOCALPT DROP command. You cannot use this message for automation because it is a message within a multiple-line message block.

Message Variables

- fpname1***
The backup focal point name.
- fpname2***
The backup focal point name.
- fpname3***
The backup focal point name.
- fpname4***
The backup focal point name.

**DWO770W A LOOP HAS BEEN DETECTED FOR
CATEGORY *fpcat*. *node1* HAS
ISSUED A REVOKE TO *node2* TO
BREAK THE LOOP.**

Explanation

MS_CAPS has detected that the focal points for this category are in a loop and has issued a revocation to an active remote focal point to break the loop. This message is sent to the authorized receiver and appears in the NetView log.

Message Variables

- fpcat***
The category that the loop has been detected.
- node1***
The node that detected the existence of a loop.
- node2***
The node that has been issued a revocation, to break the loop.

System action

The entry point drops the focal point, thus ending the loop.

Operator response

Notify the system programmer of the detection of the loop.

System programmer response

Messages DWO772I and DWO773I in the NetView log display all nodes that were detected in the loop. Check that MS_CAPS dropped the right focal point. If not, issue a FOCALPT CHANGE, ACQUIRE or DROP command to end the loop and to reacquire the focal point that MS_CAPS dropped.

**DWO771W BACKUP FOCAL POINT *fpname*
HAS BEEN DROPPED FROM THE
BACKUP LIST FOR CATEGORY
fpcat DUE TO THE DETECTION OF
A LOOP.**

Explanation

MS_CAPS has detected that the focal points for this category are in a loop. The active remote focal point for this category is a backup and its name has been removed from the category's backup list to ensure that it is not able to create the loop again. This message appears only in the NetView log.

Message Variables

- fpname***
The name of the remote backup focal point that has been dropped.
- fpcat***
The category that the loop has been detected for.

System action

The focal point name is removed from the backup focal point list for the category.

System programmer response

Ensure that the action taken by MS_CAPS is correct. Check that the backup focal point is not required for the category. If it is required, issue a FOCALPT ACQUIRE or FOCALPT CHANGE command to include the backup focal point in the category's backup focal point list. Ensure that the addition of the backup focal point will not create the loop again.

**DWO772I A LOOP HAS BEEN DETECTED FOR
CATEGORY *fpcat*. THE NODES
INVOLVED IN THE LOOP ARE:**

Explanation

This message precedes the display of the nodes involved in the loop. This message appears only in the NetView log.

Message Variables

- fpcat***
The category that the loop has been detected for.

**DWO773I *node1 node2 node3 node4 node5*
*node6 node7 node8 node9***

Explanation

This message lists all the nodes involved in a loop. It might be repeated multiple times to list all nodes involved in the loop. This diagnostic message can be used to determine how a loop was created for the category. This message appears only in the NetView log.

Message Variables

node1

The name of a node within the loop. Node1 was forwarding data to node2.

node2

The name of a node within the loop. Node2 was forwarding data to node3.

node3

The name of a node within the loop. Node3 was forwarding data to node4.

node4

The name of a node within the loop. Node4 was forwarding data to node5.

node5

The name of a node within the loop. Node5 was forwarding data to node6.

node6

The name of a node within the loop. Node6 was forwarding data to node7.

node7

The name of a node within the loop. Node7 was forwarding data to node8.

node8

The name of a node within the loop. Node8 was forwarding data to node9.

node9

The name of a node within the loop. Node9 was forwarding data to node1 of the next message.

System programmer response

Use this information to determine how your focal point nodes created the loop.

DW0774I **END NODE DOES NOT SUPPORT**
applname AS A FOCAL POINT.

Explanation

An application was registered or is being registered as a focal point on an end node. Applications on end nodes do not receive focal point services. If the application registered as being interested in a category, it will still be served as an interested application, but no applications will be notified by the NetView program that this application is available as a focal point.

This message is sent to the authorized receiver and can appear at the start of DSI6DST to inform the authorized receiver that applications registered prior to the start of DSI6DST will not be treated as focal points. It will also be issued after DSI6DST is started whenever an application tries to register as a focal point on an end node.

Message Variables**applname**

The name of the application that has previously registered, or is now registering.

Operator response

If this message appears at DSI6DST startup time, report the message to the system programmer. Do not try to register applications as focal points while you are operating on an end node.

System programmer response

Modify any startup procedures on this end node that try to register applications as focal points. Any change in the DEFFOCPT definition for a category will cause the new DEFFOCPT definition to be used when DSI6DST is restarted.

DW0775I **SAVE/RESTORE TASK DSISVRT IS**
INACTIVE. DSI6DST SAVE/
RESTORE PROCESSING WILL
CONTINUE.

Explanation

The NetView program will use data from its internal table to restore the focal points that existed prior to stopping DSI6DST. The NetView program cannot access the data in the save/restore database because the save/restore task is not active.

System programmer response

Modify the startup procedures on this node to have the save/restore task start prior to starting DSI6DST.

DW0776I **SAVE/RESTORE TASK DSISVRT IS**
INACTIVE. USING DEFFOCPT
DEFINITIONS.

Explanation

The NetView program will use the DEFFOCPT statements in the DSI6INIT initialization member to establish focal points. Previous focal point states are unknown:

- The NetView internal table of focal points does not exist.
- The NetView program's attempt to access data in the save/restore database failed because the save/restore task was not active.

System programmer response

Modify the startup procedures on this node to have the save/restore task start prior to starting DSI6DST.

**DWO777W TARGNET PARAMETER IGNORED.
FULLY QUALIFIED NETWORK
NAME PROVIDED.**

Explanation

A FOCALPT DISPSOC or FOCALPT DELETE command was issued with both the TARGNET parameter and a fully qualified network name specified by the TARGET parameter.

System action

The TARGNET parameter is ignored and the command is processed using the fully qualified network name specified by the TARGET parameter.

**DWO779W NO APPLICATIONS INTERESTED
IN THAT CATEGORY.**

Explanation

A FOCALPT ACQUIRE command has been issued specifying a category in which no application has registered an interest. This message follows message DWO052I.

System action

The command is not processed.

Operator response

Ensure that the category specified on the FOCALPT ACQUIRE command was correct. Do one of the following:

- If the incorrect category was specified, enter the command again with the correct category specified.
- If the correct category was specified, use the REGISTER command to define an application with an interest in the category before entering the FOCALPT ACQUIRE command again.

**DWO780I THE CURRENT REMOTE FOCAL
POINT IS *fpname*. TYPE : *type***

Explanation

This message displays details of the current remote focal point.

This message follows a DWO051I message that is displayed upon successful execution of a FOCALPT DROP command when the focal points dropped do not include the current focal point. You cannot use this message for automation because it is a message within a multiple-line message block.

Message Variables

fpname

The current focal point name.

type

The type of focal point, PRIMARY, DOMAIN, or BACKUP(n), where (n) indicates which node in the backup list is the current focal point.

System action

Processing continues.

**DWO781I NO BACKUPS MATCH SUPPLIED
LIST**

Explanation

There are currently no backup focal points which match the backup list supplied on the FOCALPT DROP command.

System action

Processing continues.

Operator response

Enter FOCALPT DROP command again with valid backup focal point names.

**DWO782I FOCAL POINT AUTHORIZATION
FOR CATEGORY *fpcat* HAS BEEN
REVOKED BY DISTRIBUTED NODE
epname DUE TO LOOP
DETECTION.**

Explanation

This node has been revoked as a focal point because a loop has been detected. This message appears only in the NetView log.

Message Variables

fpcat

The category that the loop has been detected for.

epname

The node that detected the existence of a loop.

System action

MS-CAPS drops the focal point, thus ending the loop.

System programmer response

Messages DWO772I and DWO773I in the NetView log of the Distributed Node (Entry Point) display all nodes that were detected in the loop. Check that MS-CAPS dropped the right focal point to end the loop. If not, issue a FOCALPT CHANGE, ACQUIRE or DROP

command to end the loop and to reacquire the focal point that was dropped.

DWO783W ***command subcommand* NOT ALLOWED FROM AN END NODE**

Explanation

The command *command subcommand* is not processed when entered from an end node.

Message Variables

command

The name of the command.

subcommand

The name of the subcommand.

System action

The command *command subcommand* is not processed.

Operator response

Do not enter the command *command* from an end node.

DWO790I **CURRENT: *fpname* TYPE: *type***

Explanation

This message displays the current remote focal point and its type.

This message follows a DWO051I or DWO170I message that is displayed upon successful execution of a FOCALPT QUERY or FOCALPT ACQUIRE command. You cannot use this message for automation because it is a message within a multiple-line message block.

Message Variables

fpname

The name of the current remote focal point.

type

The type of focal point, PRIMARY, DOMAIN, or BACKUP(n), where (n) indicates which node in the backup list is the current focal point.

DWO791I **PENDING: *fpname* TYPE: *type***

Explanation

This message displays the pending remote focal point and its type.

This message follows a DWO051I or DWO170I message that is displayed upon successful execution of a FOCALPT QUERY or FOCALPT ACQUIRE command. You cannot use this message for

automation because it is a message within a multiple-line message block.

Message Variables

fpname

The name of the pending remote focal point.

type

The type of focal point, PRIMARY, DOMAIN, or BACKUP(n), where (n) indicates which node in the backup list is the pending focal point.

DWO792I **PRIMARY: *fpname***

Explanation

This message displays the primary remote focal point.

This message follows a DWO051I or DWO170I message that is displayed upon successful execution of a FOCALPT QUERY or FOCALPT ACQUIRE command. You cannot use this message for automation because it is a message within a multiple-line message block.

Message Variables

fpname

The name of the primary remote focal point.

DWO793I **BACKUP LIST: *indicator***

Explanation

This message precedes the display of the backup focal point list.

This message follows a DWO051I or DWO170I message that is displayed upon successful execution of a FOCALPT QUERY or FOCALPT ACQUIRE command. You cannot use this message for automation because it is a message within a multiple-line message block.

Message Variables

indicator

--NONE-- or blank.

DWO794I ***number1* *fpname1* *number2*
fpname2 *number3* *fpname3***

Explanation

This message displays up to three focal point names from the category's backup focal point list.

This message follows a DWO051I or DWO170I message that is displayed upon successful execution of a FOCALPT QUERY and FOCALPT ACQUIRE command. You cannot use this message for automation because it is a message within a multiple-line message block.

Message Variables

number1

The sequence number of the focal point within the backup list.

fpname1

The backup focal point name.

number2

The sequence number of the focal point within the backup list.

fpname2

The backup focal point name.

number3

The sequence number of the focal point within the backup list.

fpname3

The backup focal point name.

DWO795I **DOMAIN: *fpname***

Explanation

A domain focal point is defined for the category. The FOCALPT QUERY request was issued from an APPN-served end node. The message lists the domain focal point's name if one exists.

This message follows a DWO170I message that is displayed upon successful execution of a FOCALPT QUERY or FOCALPT ACQUIRE command. You cannot use this message for automation because it is a message within a multiple-line message block.

Message Variables

fpname

The domain focal point name.

DWO796I **NEW REMOTE FOCAL POINT
DETAILS ARE AS FOLLOWS:**

Explanation

This message precedes the display of the new backup focal point list.

This message follows a DWO051I message that is displayed upon successful execution of a FOCALPT ACQUIRE command. You cannot use this message for automation because it is a message within a multiple-line message block.

DWO797I **OLD REMOTE FOCAL POINT
DETAILS ARE AS FOLLOWS:**

Explanation

This message precedes the display of the old backup focal point list.

This message follows a DWO051I message that is displayed upon successful execution of a FOCALPT ACQUIRE command. You cannot use this message for automation because it is a message within a multiple-line message block.

DWO800I **AUTOMATION TABLE *type* DETAIL
REPORT BY *taskname***

Explanation

A detailed usage report of automation table statements is displayed. The report contains statistical information given in tabular form. This report is used to assist in the tuning of automation table statements for better automation performance.

Message Variables

type

MSG or MSU.

taskname

The NetView task that issued the command.

System action

Processing continues.

System programmer response

Review the information you have requested.

DWO801I **AUTOMATION TABLE *type*
SUMMARY REPORT BY *taskname***

Explanation

A summary usage report of automation table statements is displayed. The report contains statistical information given in tabular form. This report is used to assist in the tuning of automation table statements for better automation performance.

Message Variables

type

MSG or MSU.

taskname

The NetView task that issued the command.

System action

Processing continues.

System programmer response

Review the information you have requested.

DWO802I **AUTOMATION TABLE COUNTERS
RESET BY *taskname* AT *mm/dd/yy*
*hh:mm:ss***

Explanation

The RESET option has reset the automation table usage counters to zero in the active automation table. Resetting the usage counters to zero provides a known starting point to evaluate automation statement usage.

Message Variables

taskname

The NetView task that issued the command.

mm/dd/yy hh:mm:ss

The current date and time. The date and time formats depend on the TRANSMMSG member, when in effect, and on the date and time operands of the DEFAULTS and OVERRIDE commands.

System action

Processing continues.

DW0826E	AUTOMATION TABLE USAGE REPORT HALTED DUE TO SEVERE ERROR.
----------------	--

Explanation

The process was halted because of a severe I/O error. This error can be a result of:

- Attempting to write records to a member or file for which there is no write access
- Filling the data set or the disk to which the records are being written
- Attempting to replace an existing member or file of the wrong type, or that is missing a required key field

System action

The process ends.

Operator response

Notify the system programmer.

System programmer response

Check the system log for additional messages that might better describe the problem. Determine the cause of the error, correct the problem in your DSILIST data set, and issue the AUTOCNT command again.

DW0828I	AUTOMATION TABLE REPORT '<i>filename</i>' SUCCESSFULLY GENERATED
----------------	---

Explanation

This message indicates a file containing automation table usage statistics for the current automation table was successfully generated.

Message Variables

filename

The member or file name of the generated file.

System action

Processing continues.

DW0829I	AUTOMATION TABLE REPORT '<i>filename</i>' UNSUCCESSFULLY GENERATED
----------------	---

Explanation

This message indicates a file containing automation table usage statistics for the current automation table was not successfully generated. A prior message is issued describing the failure. A failure can be caused by any of the following:

- Specifying a report destination member of the AUTOCNT command that already exists. You can reuse the name if you specify the REPLACE option on the AUTOCNT command.
- Specifying a report destination member that is already in use.
- An I/O error.
- A system macro failure.

Message Variables

filename

The member or file name of the file that was not successfully generated.

System action

Processing ends.

Operator response

Locate the prior message that indicates the failure, correct the problem, and issue the AUTOCNT command again. If you are unable to correct the problem, notify the system programmer.

System programmer response

Locate the prior message that indicates the failure and correct the problem.

DW0830I	OPERATOR <i>operid</i> IS DELETED FROM THE GROUP OF VALID NETVIEW OPERATORS
----------------	--

Explanation

You see this message:

- After a REFRESH OPERS command is processed and the specified operator ID is removed from DSIOPF.
- If you have your operators defined through an SAF product and you used the REFRESH command to change your operators to be defined in NetView through DSIOPF and the specified ID is not in DSIOPF.

Message Variables

operid

The NetView operator ID.

System action

operid is no longer a valid NetView operator ID and cannot log on to the NetView system.

System programmer response

If the definition for *operid* was accidentally deleted, update DSIOPF to include a definition for *operid* and issue the REFRESH OPERS command.

DW0831I	OPERATOR <i>operid</i> IS ADDED TO THE GROUP OF VALID NETVIEW OPERATORS
----------------	--

Explanation

You see this message after a REFRESH OPERS command is processed and DSIOPF has had an operator added.

Message Variables

operid

The NetView operator ID.

System action

operid is a valid ID and can log on to the NetView program.

Operator response

An operator can use *operid* to log on to the NetView program.

System programmer response

If the definition for *operid* was accidentally added, update DSIOPF to remove the definition for *operid* and issue the REFRESH OPERS command again.

DW0832I	<i>secclass</i> SECURITY TABLE HAS BEEN DELETED
----------------	--

Explanation

The RMTCMD security table has been deleted by stopping the DSIUDST task or by issuing the REFRESH command.

Message Variables

secclass

Security class (RMTSEC).

DW0833I	CURRENTLY DEFINED OPERATOR <i>operid</i> IS NOT FOUND IN DSIOPF
----------------	--

Explanation

You see this message after an operator has issued a REFRESH OPERS,TEST command. The specified operator ID was not found in DSIOPF, but remains available until a REFRESH OPERS command is issued.

Message Variables

operid

The NetView operator ID.

System action

The operator ID is still defined to the NetView program. This message alerts you that, if you issue a REFRESH OPERS command, the specified operator ID will no longer be a valid NetView operator ID.

System programmer response

If the definition for *operid* was accidentally deleted, update DSIOPF to contain the definition for *operid* and issue the REFRESH OPERS,TEST command again.

DW0834I	NEW OPERATOR DEFINITION FOR <i>operid</i> IS FOUND IN DSIOPF
----------------	---

Explanation

You see this message after an operator has issued a REFRESH OPERS,TEST command. The specified operator ID was found in DSIOPF, but remains unavailable until a REFRESH OPERS command is issued.

Message Variables

operid

The NetView operator ID.

System action

The operator ID is not defined to NetView program. This message alerts you that, if you issue a REFRESH OPERS command, the specified operator ID will be defined as a valid NetView operator ID.

System programmer response

If the definition for *operid* was accidentally added, update DSIOPF to remove the definition for *operid* and issue the REFRESH OPERS,TEST command again.

DWO835I	TEST OF REFRESH OPERS COMMAND SUCCESSFULLY COMPLETED
---------	--

Explanation

You see this message after a REFRESH OPERS,TEST command is processed and has finished successfully.

DWO836E	TASK NAME <i>task</i> IS ALREADY DEFINED TO THE NETVIEW PROGRAM AS AN <i>tasktype</i>
---------	---

Explanation

One of the following errors has occurred:

- A START TASK command was issued to dynamically start a task that had the same name as an existing task of a different type.
- A REFRESH OPERS command was issued with an operator definition in DSIOPF having the same name as an OPT/DST.

Message Variables

task

The task name.

tasktype

The type of task that is already defined: OST, PPT, MNT, or OPT (including DSTs).

System action

Processing continues without the *taskname* specified. For a START TASK, the task is not started. For a REFRESH OPERS, the operator is not defined to the NetView program.

Operator response

Notify the system programmer.

System programmer response

Correct the definition or keyword in error and issue the command again.

DWO837I	<i>operid</i> IS DEFINED AND LOGGED ON TO NETVIEW
---------	--

Explanation

You see this message after an operator has issued a QOS command. The operator specified is a valid NetView operator and is currently logged on.

Message Variables

operid

The NetView operator ID queried.

DWO838I	<i>operid</i> IS DEFINED TO NETVIEW BUT IS NOT LOGGED ON
---------	---

Explanation

You see this message after an operator issues a QOS command. The operator specified is a valid NetView operator, but is not currently logged on.

Message Variables

operid

The NetView operator ID queried.

DWO839I	<i>operid</i> IS NOT DEFINED TO NETVIEW BUT IS LOGGED ON
---------	---

Explanation

This message is displayed after an operator issues a QOS command. The operator is not a valid NetView operator, but is currently logged on. This message is displayed

- When an operator who is in session with the NetView program is deleted from DSIOPF and a REFRESH OPERS command is issued,
- If the current value for OPERSEC is SAFDEF and the operator is either not defined or not defined to the APPL class for this domain.
- The operator is a virtual OST (VOST) created by an ATTACH command.

After logoff, the deleted operator will not be allowed access to the NetView Program.

Message Variables

operid

The NetView operator ID queried

System action

NetView allows the operator session to continue in a limited capacity. If span of control is used to limit operator access to resources, the operator ID will no longer have access to any span and, therefore, to any resources using the DISPLAY, MODIFY, and VARY commands. If the current value of OPERSEC is SAFDEF, the operator can continue to use only those spans that are currently active.

If the operator is a VOST, the VOST will continue to run normally.

System programmer response

The operator has been deleted from DSIOFP, or if the current value of OPERSEC is SAFDEF, the operator is not defined to the SAF product or to the APPL class for this domain. Consider ending the operator session by issuing the STOP command with the FORCE keyword.

If the operator is a VOST, no action is required.

DWO840I ***operid IS NOT DEFINED TO NETVIEW***

Explanation

The operator specified is not currently defined to the NetView program.

Message Variables

operid

The ID of the specified operator.

System programmer response

If the operator ID is DSIWEB, define DSIWEB as a NetView operator before starting DSIWBTSK again.

DWO841I ***operid IS ALLOWED ACCESS TO name***

Explanation

This message is displayed after an operator issues a QRS command. The specified operator can access the specified resource. When running span of control for VTAM resources, this means that the specified resource is defined in one of the active spans for the specified operator.

Message Variables

operid

The NetView operator ID.

name

The resource queried.

DWO842I ***operid IS NOT ALLOWED ACCESS TO name***

Explanation

This message is displayed if the operator does not have access to the specified resource. For VTAM resources, the operator does not have access unless the resource is defined in one of the active spans at the necessary access level.

Message Variables

operid

The NetView operator ID.

name

The resource for which the access level was queried.

DWO843I ***command COMMAND FAILED***

Explanation

The command that you entered failed

Message Variables

command

The name of the command that failed.

Operator response

See the associated messages for error information. Correct the problem and issue the command again.

DWO850I ***SAF REFRESH INVALID. SAFREFSH SET TO NO IN DSIUDST INITIALIZATION MEMBER***

Explanation

The operator has attempted to change RMTCMD security to an SAF level with the REFRESH command. The system programmer has prohibited this change by coding RMTINIT.SAFrefresh=No in the CNMSTYLE member or by coding SAFREFSH=NO on the RMTSECUR statement in the DSIUDST initialization member.

System action

The REFRESH command fails. There is no change in the RMTCMD security level.

System programmer response

If appropriate, either change the SAFREFSH parameter on the RMTSECUR statement and recycle DSIUDST, or change the RMTINIT.SAFrefresh value in the CNMSTYLE member and recycle the NetView program before attempting the command again. See *IBM Z NetView Installation: Getting Started* for information on how to modify the CNMSTYLE member.

DWO851I ***TEST OF REFRESH OPERS COMMAND COMPLETED WITH ERRORS***

Explanation

A REFRESH OPERS,TEST command detected errors while processing DSIOFP.

Operator response

Notify the system programmer.

System programmer response

Correct the statements in DSIOPF.

**DWO852I REFRESH COMMAND COMPLETED
WITH ERRORS**

Explanation

A REFRESH OPERS or REFRESH OPERSEC command detected errors while processing DSIOPF. The associated messages describe the errors. Operator definitions which contain no errors are updated.

Operator response

Notify the system programmer.

System programmer response

Review the associated messages. Correct any errors in DSIOPF and issue the REFRESH command again.

**DWO853I REQUEST NOT COMPLETED; NO
ACTIVE DATABASE FOR TASK
taskname**

Explanation

A command to update a database for the named task cannot be completed because there is currently no active database for the task.

Message Variables

taskname

The name of the task running the command.

System action

The command ends.

Operator response

Switch to the primary or secondary database for the task and issue the command again.

System programmer response

If switching to the primary or secondary database is unsuccessful, delete or redefine the VSAM cluster and issue the SWITCH command again.

DWO854I *object* is active.

Explanation

The NetView program has recognized that *object* is now active.

- If *object* is VTAM, the NetView program has opened its ACBs and taken all other necessary actions to prepare for your use of VTAM interfaces. The

NetView program issues this message during its own initialization if VTAM is up before the NetView program.

- If *object* is Canzlog, NetView startup or restart is proceeding normally. Connection to the active Canzlog data space is required for message processing functions.
- If *object* is ?NAPOLTSKx, where x is a number, a Z NetView Enterprise Management Agent data collection autotask is active and automation is driven.
- If *object* is ?MVSCMDREVISION, the autotask that manages the NETVONLY action for the Command Revision function is now active.
- If *object* is ?COLTSKx, where x is a number, a NetView data collection autotask is active and automation is driven to begin the collection of data.

Message Variables

object

The name of the object that is now active.

System programmer response

Automate this message if action is needed to set up parameters or issue commands to VTAM.

**DWO900E CANNOT SPECIFY A VALUE WITH
A KEYWORD**

Explanation

The system console operator specified a DISPPI or TRACEPPI command with a keyword followed by an equal sign.

System action

The command is ignored.

Operator response

Issue the command again with the correct syntax.

**DWO901E INCORRECT KEYWORD
SPECIFIED**

Explanation

The system console operator specified a DISPPI or TRACEPPI command with a unknown keyword.

System action

The command is ignored.

Operator response

Issue the command again with the correct syntax.

**DWO902E TOO MANY KEYWORDS
SPECIFIED**

Explanation

A command was issued with too many keywords.

System action

The command is ignored.

Operator response

Issue the command again with the correct syntax.

**DWO903E DUPLICATE KEYWORDS
SPECIFIED**

Explanation

The system console operator specified a DISPPI or TRACEPPI command with duplicate keywords.

System action

The command is ignored.

Operator response

Issue the command again with the correct syntax.

DWO904E INCORRECT VALUE SPECIFIED

Explanation

The system console operator specified a DISPPI or TRACEPPI command with a value that was too long or was a numerical value with non-numeric characters.

System action

The command is ignored.

Operator response

Issue the command again with correct values.

**DWO905E MUST SPECIFY ON, OFF, MODIFY,
OR END**

Explanation

The system console operator specified a TRACEPPI command without specifying either ON, OFF, MODIFY, or END.

System action

The command is ignored.

Operator response

Issue the command again with ON, OFF, MODIFY or END.

**DWO906E SIZE PARAMETER IS NOT
ALLOWED WITH TRACEPPI
MODIFY**

Explanation

The system console operator specified TRACEPPI MODIFY with the SIZE parameter.

System action

The command is ignored.

Operator response

Issue the command again without the SIZE parameter.

**DWO907E SIZE PARAMETER IS NOT
ALLOWED WITH TRACEPPI OFF**

Explanation

The system console operator specified TRACEPPI OFF with the SIZE parameter.

System action

The command is ignored.

Operator response

Issue the command again without the SIZE parameter.

**DWO908E GTF PARAMETER IS NOT
ALLOWED WITH TRACEPPI OFF**

Explanation

The system console operator specified TRACEPPI OFF with the GTF parameter.

System action

The command is ignored.

Operator response

Issue the command again without the GTF parameter.

**DWO909E GTF PARAMETER IS NOT
ALLOWED WITH TRACEPPI END**

Explanation

The system console operator specified TRACEPPI END with the GTF parameter.

System action

The command is ignored.

Operator response

Issue the command again without the GTF parameter.

**DW0910E GTF PARAMETER IS NOT
ALLOWED WITH TRACEPPI
MODIFY**

Explanation

The system console operator specified TRACEPPI MODIFY with the GTF parameter.

System action

The command is ignored.

Operator response

Issue the command again without the GTF parameter.

**DW0911E SIZE PARAMETER IS NOT
ALLOWED WITH TRACEPPI END**

Explanation

The system console operator specified TRACEPPI END with the SIZE parameter.

System action

The command is ignored.

Operator response

Issue the command again without the SIZE parameter.

**DW0912E BUFSIZE PARAMETER IS NOT
ALLOWED WITH TRACEPPI OFF**

Explanation

The system console operator specified TRACEPPI OFF with the BUFSIZE parameter.

System action

The command is ignored.

Operator response

Issue the command again without the BUFSIZE parameter.

**DW0913E BUFSIZE PARAMETER IS NOT
ALLOWED WITH TRACEPPI END**

Explanation

The system console operator specified TRACEPPI END with the BUFSIZE parameter.

System action

The command is ignored.

Operator response

Issue the command again without the BUFSIZE parameter.

DW0914E TRACEPPI FAILED

Explanation

The TRACEPPI command failed.

System action

The command is ignored.

Operator response

Read the preceding message for explanation of the failure.

**DW0915I TRACEPPI COMPLETED
SUCCESSFULLY FOR RECEIVER
*receiver_id***

Explanation

The TRACEPPI command completed successfully.

Message Variables***receiver_id***

The receiver ID that is specified in the TRACEPPI command or all.

System action

The specified TRACEPPI function is performed.

**DW0916E INCORRECT COMBINATION OF
PARAMETERS**

Explanation

The system console operator specified DISPPI or TRACEPPI with conflicting keywords.

System action

The command is ignored.

Operator response

Issue the command again with correct syntax.

DW0917E TRACEPPI ON SPECIFIED FOR A RECEIVER THAT IS NOT DEFINED

Explanation

The system console operator specified TRACEPPI ON for a receiver that is not defined in the program-to-program interface.

System action

The command is ignored.

Operator response

Verify that the correct receiver ID was specified on the TRACEPPI command, and issue the command again.

DW0918E TRACEPPI OFF SPECIFIED FOR A RECEIVER THAT IS NOT DEFINED

Explanation

The system console operator specified TRACEPPI OFF for a receiver that is not defined in the program-to-program interface.

System action

The command is ignored.

Operator response

Verify that the correct receiver ID was specified on the TRACEPPI command and issue the command again.

DW0919E TRACEPPI MODIFY SPECIFIED FOR A RECEIVER THAT IS NOT DEFINED

Explanation

The system console operator specified TRACEPPI MODIFY for a receiver that is not defined in the program-to-program interface.

System action

The command is ignored.

Operator response

Verify that the correct receiver ID was specified on the TRACEPPI command, and issue the command again.

DW0920E TRACEPPI END SPECIFIED FOR A RECEIVER THAT IS NOT DEFINED

Explanation

The system console operator specified TRACEPPI END for a receiver that is not defined in the program-to-program interface.

System action

The command is ignored.

Operator response

Verify that the correct receiver ID was specified on the TRACEPPI command, and issue the command again.

DW0921E TRACEPPI ON SPECIFIED FOR A RECEIVER THAT IS ACTIVE

Explanation

The system console operator specified TRACEPPI ON for a receiver that already has an active program-to-program interface trace.

System action

The command is ignored.

Operator response

Verify that the correct receiver ID was specified on the TRACEPPI command, and issue the command again.

DW0922E TRACEPPI MODIFY SPECIFIED FOR A RECEIVER THAT DOES NOT HAVE A TRACE DEFINED

Explanation

The system console operator specified TRACEPPI MODIFY for a receiver that does not have a program-to-program interface trace defined.

System action

The command is ignored.

Operator response

Verify that the correct receiver ID was specified on the TRACEPPI command, and issue the command again. To define a new trace, issue the TRACEPPI ON command.

DW0923E TRACEPPI OFF SPECIFIED FOR A RECEIVER THAT IS INACTIVE

Explanation

The system console operator specified TRACEPPI OFF for a receiver that does not have an active program-to-program interface trace.

System action

The command is ignored.

Operator response

Verify that the correct receiver ID was specified on the TRACEPPI command, and issue the command again.

DW0924E TRACEPPI END SPECIFIED FOR A RECEIVER THAT DOES NOT HAVE A TRACE DEFINED

Explanation

The system console operator specified TRACEPPI END for a receiver that does not have a program-to-program interface trace defined.

System action

The command is ignored.

Operator response

Verify that the correct receiver ID was specified on the TRACEPPI command, and issue the command again.

DW0925I TRACEPPI OFF SPECIFIED FOR ALL RECEIVERS BUT THERE ARE NO ACTIVE TRACES

Explanation

The system console operator specified a TRACEPPI OFF with the ALL option, but there is no receiver with an active program-to-program interface trace.

System action

The default values are changed

DW0926I TRACEPPI MODIFY SPECIFIED FOR ALL RECEIVERS BUT THERE ARE NO DEFINED TRACES

Explanation

The system console operator specified a TRACEPPI MODIFY with the ALL option, but there is no receiver with a defined program-to-program interface trace.

System action

The default values are changed

Operator response

Issue a TRACEPPI ON command to define a new program-to-program interface trace.

DW0927I TRACEPPI END SPECIFIED FOR ALL RECEIVERS BUT THERE ARE NO DEFINED TRACES

Explanation

The system console operator specified a TRACEPPI END with the ALL option, but there is no receiver with a defined program-to-program interface trace.

System action

The default values are changed

DW0928I TRACEPPI ON SPECIFIED FOR ALL RECEIVERS BUT AT LEAST ONE RECEIVER IS ALREADY ACTIVE

Explanation

The system console operator specified a TRACEPPI ON with the ALL option, and at least one receiver in the program-to-program interface had a trace status of active.

System action

This TRACEPPI command has no effect on the trace characteristics of all active receivers. The TRACEPPI command continues processing for the inactive receivers.

Operator response

Issue the TRACEPPI MODIFY command with the RCVRID keyword.

DW0929I TRACEPPI OFF SPECIFIED FOR ALL RECEIVERS BUT AT LEAST ONE RECEIVER IS ALREADY INACTIVE

Explanation

The system console operator specified a TRACEPPI OFF with the ALL option, and at least one receiver in the program-to-program interface had a trace status of inactive.

System action

This TRACEPPI command has no effect on the trace characteristics of all inactive receivers. The TRACEPPI command continues processing for the active receivers.

DW0930I TRACEPPI MODIFY SPECIFIED FOR ALL RECEIVERS BUT AT LEAST ONE RECEIVER DOES NOT HAVE A TRACE DEFINED

Explanation

The system console operator specified a TRACEPPI MODIFY with the ALL option, and at least one receiver in the program-to-program interface had a trace status of not defined.

System action

This TRACEPPI command has no effect on the trace characteristics of any receivers that do not have a trace defined. The TRACEPPI command continues processing for the all receivers that have a defined trace.

Operator response

To define a trace for a program-to-program interface receiver, issue the TRACEPPI ON command.

DWO931E	GTF TRACE NOT ALLOWED. INTERNAL TRACE IS CURRENTLY DEFINED
----------------	---

Explanation

The system console operator specified a TRACEPPI command with the GTF option, but an internal trace is already defined for that receiver.

System action

The command is ignored.

Operator response

Issue a TRACEPPI END command to end the current trace. Then, issue TRACEPPI ON command with the GTF option.

DWO932E	INTERNAL TRACE NOT ALLOWED. GTF TRACE IS CURRENTLY DEFINED
----------------	---

Explanation

The system console operator specified a TRACEPPI command with the SIZE option, but a GTF trace is already defined for that receiver.

System action

The command is ignored.

Operator response

Issue a TRACEPPI END command to end the current trace. Then, issue TRACEPPI ON command with the SIZE option.

DWO933E	GTF IS NOT ENABLED TO ACCEPT PROGRAM TO PROGRAM INTERFACE TRACE RECORDS
----------------	--

Explanation

GTF is inactive or was started without enabling program-to-program interface trace records.

System action

The trace is placed into a GTF DISABLED state. When GTF becomes enabled and the program-to-program interface sends it a trace record, the program-to-program interface issues a message and the trace is placed in the GTF state.

Operator response

Start the GTF address space with program-to-program interface trace records enabled. Use X'5EF' as the ID for the program-to-program interface trace.

System programmer response

If using a user-written procedure to start the GTF address space, ensure that it enables GTF to accept program-to-program interface trace records.

DWO934E	PROGRAM TO PROGRAM INTERFACE TRACE SIZE OPERAND CANNOT BE 0
----------------	--

Explanation

The system console operator specified 0 for the SIZE parameter on a TRACEPPI command.

System action

The command is ignored.

Operator response

Issue the TRACEPPI command again with a non-zero value for SIZE.

DWO935E	BUFSIZE OPERAND CANNOT BE GREATER THAN 208 BYTES WHEN A GTF TRACE IS DEFINED
----------------	---

Explanation

On the TRACEPPI command, the system console operator specified a BUFSIZE value larger than 208 bytes when the GTF option was used.

System action

The command is ignored.

Operator response

Issue the TRACEPPI command again with a BUFSIZE value less than or equal to 208 bytes.

**DW0936E UNABLE TO ALLOCATE THE
PROGRAM TO PROGRAM
INTERFACE TRACE TABLE**

Explanation

The program-to-program interface trace facility is unable to allocate storage in the program-to-program interface for the trace table.

System action

The command is ignored.

Operator response

Issue the TRACEPPI command again with a smaller value for the SIZE parameter.

System programmer response

Allocate more virtual storage for the program-to-program interface.

**DW0937E GTRACE FAILURE, RETURN CODE
= yy. PROGRAM TO PROGRAM
INTERFACE TRACE IS SUSPENDED**

Explanation

A failure occurred when the program-to-program interface issued the GTRACE macro to send a record to GTF.

Message Variables**yy**

Return code from the GTRACE macro.

System action

The program-to-program interface is put into a GTF DISABLED state. All traces are lost until GTF is enabled again.

Operator response

Issue the TRACEPPI ON command again when the error is corrected to reactivate the trace.

System programmer response

Consult the MVS library for an explanation of the GTRACE return code, and take appropriate action.

DW0938I**PROGRAM TO PROGRAM
INTERFACE READY FOR
COMMUNICATIONS**

Explanation

A system operator issued MSG Fn initiating the program-to-program interface command facility.

System action

The program-to-program interface command facility waits for operator input.

Operator response

Issue a program-to-program interface command.

DW0939E**INVALID PROGRAM TO PROGRAM
INTERFACE COMMAND.
COMMAND IGNORED**

Explanation

A system operator issued a program-to-program interface command that was not valid.

System action

The command is ignored.

Operator response

Issue a valid program-to-program interface command.

DW0940I**PROGRAM TO PROGRAM
INTERFACE DUMP COMPLETE**

Explanation

The program-to-program interface dump completed.

System action

A formatted program-to-program interface dump is spooled.

DW0941I**TRACEPPI OFF SPECIFIED FOR
ALL RECEIVERS BUT THERE ARE
NO DEFINED TRACES**

Explanation

The system console operator specified TRACEPPI OFF for all receivers, but there is no receiver that has a defined trace.

System action

Default values are changed, but no receiver values are changed.

**DW0942E NO PROGRAM TO PROGRAM
INTERFACE TRACE DEFINED**

Explanation

The system console operator specified TRACEPPI with OFF, MODIFY, or END, but no program-to-program interface traces have been defined.

System action

The command is ignored.

System programmer response

Issue a TRACEPPI ON command to define a program-to-program interface trace.

**DW0943I GTF IS ENABLED TO ACCEPT
PROGRAM TO PROGRAM
INTERFACE TRACE RECORDS,
TRACE IS RESUMING**

Explanation

The program-to-program interface was in a GTF DISABLED state and successfully sent a trace record to GTF.

System action

The program-to-program interface trace is set to the GTF state, and the program-to-program interface trace record is sent to GTF.

**DW0944I GTF IS NOT ENABLED TO ACCEPT
PROGRAM TO PROGRAM TRACE
RECORDS, TRACE IS SUSPENDED**

Explanation

The program-to-program interface tried to send GTF a trace record, but GTF was not enabled to accept the record.

System action

The program-to-program interface trace is set to GTF DISABLED, and the trace record is lost. All further trace records are lost until GTF is enabled to accept program-to-program interface records.

System programmer response

Restart GTF with program-to-program interface trace records (ID X'5EF') enabled.

**DW0945E UNABLE TO SET UP INTERRUPT
HANDLER, RETURN CODE = yy
SUSPENDED**

Explanation

The program-to-program interface was unable to set up an interrupt handler.

Message Variables**yy**

Return code from the IMMCMD macro.

System action

The program-to-program trace facility is not available.

System programmer response

Contact IBM Software Support.

**DW0946E UNABLE TO OBTAIN STORAGE
FOR NETVIEW DATA TRANSPORT
ANCHOR BLOCK (DSIDTA)**

Explanation

During initialization, the SSI was unable to allocate storage for the data transport anchor block. This control block is an internal NetView structure. In the event that IBM Software Support needs to be contacted, provide this message ID.

System action

The SSI initialization ends.

Operator response

Contact the system programmer.

System programmer response

Verify the amount of storage allocated for the SSI address space. Increase, if necessary, and restart the SSI. If you are still unable to bring up the SSI, contact IBM Software Support.

**DW0947E Unable to obtain storage for
NetView ppi trace table anchor
block**

Explanation

During initialization, the SSI was unable to allocate storage for the program-to-program interface trace table anchor block. This control block is an internal NetView structure.

System action

SSI initialization ends.

Operator response

Contact the system programmer.

System programmer response

Verify the amount of storage allocated for the SSI address space. Increase, if necessary, and restart the SSI. If you are still unable to bring up the SSI, contact IBM Software Support.

DWO948I	RECEIVER RECEIVER BUFFER QUEUED TOTAL STORAGE RCVR
----------------	---

Explanation

This message is the first line of the header for the output from the DISPPI command with the BUFQ operand. This message is part of a multiline message. The columns contain:

- RECEIVER IDENTITY**
The program-to-program interface receiver ID.
- RECEIVER STATUS**
Indicates whether the receiver is active or inactive.
- BUFFER LIMIT**
The receiver's buffer queue limit.
- QUEUED BUFFERS**
The number of buffers in the receiver's queue.
- TOTAL BUFFERS**
The total number of buffers sent to a receiver.
- STORAGE ALLOCATED**
The total number of bytes allocated for the buffers in the receiver's queue.
- RCVR ASID**
The address space ID of the program-to-program interface receiver.

System action

Message DWO949I follows this message.

DWO949I	IDENTITY STATUS LIMIT BUFFERS BUFFERS ALLOCATED ASID
----------------	---

Explanation

This message is the second line of the header for the output from the DISPPI command with the BUFQ operand. This message is part of a multiline message. The columns contain:

- RECEIVER IDENTITY**
The program-to-program interface receiver ID.
- RECEIVER STATUS**
Indicates whether the receiver is active or inactive.

BUFFER LIMIT

The receiver's buffer queue limit.

QUEUED BUFFERS

The number of buffers in the receiver's queue.

TOTAL BUFFERS

The total number of buffers sent to a receiver.

STORAGE ALLOCATED

The total number of bytes allocated for the buffers in the receiver's queue.

RCVR ASID

The address space ID of the program-to-program interface receiver.

System action

Message DWO950I follows this message.

DWO950I	-----

Explanation

This message is the third line of the header for the output from the DISPPI command with the BUFQ operand. This message is part of a multiline message.

System action

DISPPI data follows this message.

DWO951I	&1 ACTIVE &2 &3 &4 &5 &6
----------------	---

Explanation

This message is one of the data items in response to the DISPPI BUFQ or DISPPI TRACE commands. This message is part of a multiline message.

System action

DISPPI data is included in this message.

DWO952I	&1 INACTIVE &2 &3 &4 &5
----------------	--

Explanation

This message is one of the data items in response to the DISPPI BUFQ or DISPPI TRACE commands. This message is part of a multiline message.

System action

DISPPI data is included in this message.

DWO953I	&1 NOT DEFINED
----------------	---------------------------

Explanation

This message is one of the data items in response to the DISPPI BUFQ or DISPPI TRACE commands. This message is part of multiline message.

System action

DISPPI data is included in this message.

DWO954E	THIS LEVEL OF NETVIEW PROGRAM TO PROGRAM INTERFACE DOES NOT SUPPORT THE DISPPI FUNCTION
----------------	--

Explanation

The level of program-to-program interface that is currently running is V2R3 or less.

System action

The command is ignored.

Operator response

Issue a DISBQL command.

System programmer response

Start the program-to-program interface with NetView V2R4 or higher.

DWO955I	RECEIVER TRACE TRACE
----------------	-----------------------------

Explanation

This message is the first line of the header for the output from the DISPPI command with the TRACE operand. This message is part of a multiline message. The column headings are:

RECEIVER IDENTITY

Program-to-program interface receiver ID.

TRACE STATUS

Indication of whether the receiver has a trace defined and the trace is turned on (active), has a trace defined but the trace has been turned off (inactive), or has no trace defined (not defined).

TRACE BUFFER SIZE

The number of bytes being copied into a trace record from each buffer being sent or received by the receiver.

System action

Message DWO956I follows this message.

DWO956I	IDENTITY STATUS BUFFER SIZE
----------------	------------------------------------

Explanation

This message is the second line of the header for the output from the DISPPI command with the TRACE operand. This message is part of a multiline message. The column headings are:

RECEIVER IDENTITY

Program-to-program interface receiver ID.

TRACE STATUS

Indication of whether the receiver has a trace defined and the trace is turned on (active), has a trace defined but the trace has been turned off (inactive), or has no trace defined (not defined).

TRACE BUFFER SIZE

The number of bytes being copied into a trace record from each buffer being sent or received by the receiver.

System action

DISPPI data follows this message.

DWO957I	TRACE DEFINED: YES
----------------	---------------------------

Explanation

This is one of the messages displayed when the DISPPI command is issued with the TABLE operand. This message is part of a multiline message.

TRACE DEFINED

Indication whether a program-to-program interface trace is currently defined.

System action

DISPPI data is displayed with this message.

DWO958I	TRACE DEFINED: NO
----------------	--------------------------

Explanation

This is one of the messages displayed when the DISPPI command is issued with the TABLE operand. This message is part of a multiline message.

TRACE DEFINED

Indication whether a program-to-program interface trace is currently defined.

System action

DISPPI data is displayed with this message.

DWO959I	TRACE TYPE: INTERNAL
----------------	-----------------------------

Explanation

This is one of the messages displayed when the DISPPI command is issued with the TABLE operand. This message is part of a multiline message.

TRACE TYPE

The program-to-program interface trace can be in one of three states: INTERNAL, GTF, GTF DISABLED.

System action

DISPPI data is displayed with this message.

DW0960I **TRACE TYPE: GTF**

Explanation

This is one of the messages displayed when the DISPPI command is issued with the TABLE operand. This message is part of a multiline message.

TRACE TYPE

The program-to-program interface trace can be in one of three states: INTERNAL, GTF, GTF DISABLED.

System action

DISPPI data is displayed with this message.

DW0961I **TRACE TYPE: GTF DISABLED**

Explanation

This is one of the messages displayed when the DISPPI command is issued with the TABLE operand. This message is part of a multiline message.

TRACE TYPE

The program-to-program interface trace can be in one of three states: INTERNAL, GTF, GTF DISABLED.

System action

DISPPI data is displayed with this message.

DW0962I **TABLE SIZE: xxxxxxxx**

Explanation

This is one of the messages displayed when the DISPPI command is issued with the TABLE operand. This message is part of a multiline message.

TABLE SIZE

The number of pages allocated for the program-to-program interface trace table.

System action

DISPPI data is displayed with this message.

DW0963I **TABLE ADDRESS: zzzzzzzz**

Explanation

This is one of the messages displayed when the DISPPI command is issued with the TABLE operand. This message is part of a multiline message.

TABLE ADDRESS

The address of the program-to-program interface trace table.

Message Variables

zzzzzzzz

The address of the table in hex.

System action

DISPPI data is displayed with this message.

DW0964I **TRACE ALL: YES**

Explanation

This is one of the messages displayed when the DISPPI command is issued with the TABLE operand. This message is part of a multiline message.

TRACE ALL

Indication whether all receivers are being traced.

System action

DISPPI data is displayed with this message.

DW0965I **TRACE ALL: NO**

Explanation

This is one of the messages displayed when the DISPPI command is issued with the TABLE operand. This message is part of a multiline message.

TRACE ALL

Indication whether all receivers are being traced.

System action

DISPPI data is displayed with this message.

DW0966I **DEFAULT BUFFER SIZE: yyyyyyyy**

Explanation

This is one of the messages displayed when the DISPPI command is issued with the TABLE operand. This message is part of a multiline message.

DEFAULT BUFFER SIZE

The value a receiver's BUFSIZE will be set up to when the receiver initializes with the program-to-program interface.

Message Variables

yyyyyyyy

The default buffer size.

System action

DISPPI data is displayed with this message.

DWO967E	BUFSIZE VALUE CANNOT BE LARGER THAN THE SIZE OF THE TRACE TABLE
----------------	--

Explanation

The BUFSIZE value entered causes the trace record to be too large to fit into the program-to-program interface trace table.

System action

The command is ignored.

Operator response

Specify a smaller BUFSIZE value

DWO968I	END OF DISPLAY
----------------	-----------------------

Explanation

The DISPPI command has completed.

System action

DISPPI has completed.

DWO969I	DOMAIN FOR <i>cpname</i> IS <i>domname</i>
----------------	---

Explanation

The indicated domain name matches the specified CP name.

Message Variables

cpname

The CP name that was specified.

domname

The NetView domain name at the specified CP.

DWO970I	<i>reporter</i> : <i>failcomp</i> FAILED WITH RETURN CODE <i>retcode</i>
----------------	---

Explanation

A component failed and a return code was received.

If this message indicates that DSITAQUA had a return code of 24, a DWO050I message in the netlog can indicate more information about the failure of the underlying Communications Server interface. Furthermore, if that DWO050I message indicates that the EZBNMIFR interface had a return code of 121, it

might be that a bad stack name was supplied, possibly by a TCPCONN.ROWSA definition in the CNMSTYLE member.

Message Variables

reporter

The component that reported the message

failcomp

The component that failed

retcode

The return code

Operator response

Determine the cause of the failure and try to correct the problem. Otherwise, contact your system programmer.

System programmer response

If the problem is not apparent contact IBM Software Support.

Note: If the failing component is QSAM-WRITE, the *retcode* value will be one of the return codes that are documented for the PIPE QSAM stage.

DWO971I	<i>reporter</i> : <i>listelt</i> ADDED TO <i>listtyp</i> LIST
----------------	--

Explanation

An element was added to a list.

Message Variables

reporter

The component that reported the message

listelt

The element that was added to the list

listtyp

The type of list to which the element was added

DWO972I	<i>reporter</i> : <i>listelt</i> REMOVED FROM <i>listtyp</i> LIST
----------------	--

Explanation

An element was removed from a list.

Message Variables

reporter

The component that reported the message

listelt

The element that was removed from the list

listtyp

The type of list from which the element was removed

DWO973I ***reporter* : NO TASKS EXCEED THE
LIMIT OF *nummin* MINUTE(S)**

Explanation

No attended tasks were found whose idle times, as shown in the NCCF LIST command, exceed the maximum idle time specified in the IDLEOFF command.

Message Variables

reporter

The component that reported the message

nummin

The number of minutes defined by IDLEOFF

DWO974I ***reporter* : ACTIVE TASKS EXEMPT
FROM IDLE TIME LIMITS:**

Explanation

The label line for the list of active attended tasks that are exempt from being logged off by the IDLEOFF command.

Message Variables

reporter

The component that reported the message

DWO975I ***reporter* : NO ACTIVE TASKS ARE
EXEMPT FROM IDLE TIME LIMITS**

Explanation

No active attended tasks are exempt from being logged off by the IDLEOFF command.

Message Variables

reporter

The component that reported the message

DWO976I ***reporter* : *etype edesc***

Explanation

The description of an exception.

Message Variables

reporter

The component that reported the message.

etype

The type of exception being described.

edesc

A description or name of the exception. This can be a list of names that begin on the following line.

DWO977I ***reporter* : *opid luname time***

Explanation

This describes an operator that exceeds the idle time specified by the IDLEOFF command.

Message Variables

reporter

The component that reported the message

opid

The operator name, in the form OPID=xxxxxxx

luname

The LU name associated with the operator, in the form LU=xxxxxxx

time

The number of minutes that the operator has been idle as shown in the NCCF LIST command

DWO978E **URL WAS NOT DEFINED IN
CNMSTYLE**

Explanation

A URL was requested for the web application server servlet, but the URL is not defined to the global variable in the CNMSTYLE member.

System action

The command list exits.

Operator response

Contact the system programmer.

System programmer response

From IBM Z NetView and UNIX System Services, update the URL of the servlet or servlets that are used to invoke various functions in global variables defined in the CNMSTYLE member.

DWO979I **LIMIT REACHED - OUTPUT
TRUNCATED**

Explanation

A request produced an excessive amount of data, which was truncated.

System action

The truncated data is output.

Operator response

In the case of a SESS command or other session list (NLDM.SESSION) request, consider listing the other session endpoint or issuing a SESS command specifying both session endpoints. Consider specifying a larger maximum value on the SESS command.

DWO990I *type global variable variable_name
set by command via
invoked_LRC--->calling_LRC to
value --->new_value<---*

Explanation

A GLOBALV TRACE (C or T) ON request was issued specifically or generically for the named global variable to trace changes to the named global variable value.

Message Variables

type

The type of global variable being changed. Possible values are:

Common

for a common global variable

Task

for a task global variable

variable_name

The name of the global variable being changed.

command

The name of the command changing the global variable value.

invoked_LRC

The name of the long-running command (LRC), which can be a CLIST, a PIPE, or a REXX program entered by the operator or invoked by automation, or by the timer, or by some other method.

calling_LRC

The name of the long-running command (LRC) CLIST, a PIPE, or a REXX program calling the command *command*.

Note: The invoking_LRC and the calling_LRC might be the same.

new_value

The new value being assigned to global variable *variable_name*. Only the first 255 characters are shown, if the value is longer.

System action

This message is logged in the NetView log.

Operator response

None

System programmer response

None

DWO991I *type global variable variable_name
set by command via invoked_LRC
to value --->new_value<---*

Explanation

A GLOBALV TRACE (C or T) ON request was issued specifically or generically for the named global variable to trace changes to the named global variable value.

Message Variables

type

The type of global variable being changed. Possible values are:

Common

for a common global variable

Task

for a task global variable

variable_name

The name of the global variable being changed.

command

The name of the CLIST or HLL command changing the global variable value.

invoked_LRC

The name of the long-running command (LRC), which can be a CLIST, a PIPE or a REXX program entered by the operator or invoked by automation, or by the timer, or by some other method.

new_value

The new value being assigned to global variable *variable_name*. Only the first 255 characters are shown, if the value is longer.

System action

This message is logged in the NetView log.

Operator response

None

System programmer response

None

DWO992I *type global variable variable_name
set by command to value ---
>new_value<---*

Explanation

A GLOBALV TRACE (C or T) ON request was issued specifically or generically for the named global variable to trace changes to the named global variable value.

Message Variables

type

The type of global variable being changed. Possible values are:

Common

for a common global variable

Task

for a task global variable

variable_name

The name of the global variable being changed.

command

The name of the command changing the global variable value.

new_value

The new value being assigned to global variable *variable_name*. Only the first 255 characters are shown, if the value is longer.

System action

This message is logged in the NetView log.

Operator response

None

System programmer response

None

DWO993I **List of *listType* GVtype global variables for group *GVgroup***

Explanation

A GLOBALV AUTO (C or T) or TRACE (C or T) LIST request was issued specifically or generically for the named group or groups. The variables being automated or traced and the group to which they belong are listed.

Message Variables***listType***

The global variable function being listed. Possible values are:

automated

list of variables being automated

traced

list of variables being traced

GVtype

The type of global variable being listed. Possible values are:

COMMON

for list of common global variables

TASK

for list of task global variables

GVgroup

The group of global variables being listed. Possible values are:

***ALL**

For all global variables of listType function

groupID

for the specific group of global variables being listed

System action

This is a multiline message sent to the operator.

Operator response

None

System programmer response

None

DWO994I ***type* global variable *variable_name* set to value --->*new_value***

Explanation

A GLOBALV AUTO (C or T) ON request was issued specifically or generically for the named global variable to automate changes to the named global variable value.

Message Variables***type***

The type of global variable being changed. Possible values are:

Common

for a common global variable

Task

for a task global variable

variable_name

The name of the global variable being changed.

new_value

The new value being assigned to global variable *variable_name*. Only the first 255 characters are shown, if the value is longer.

System action

This message is automated. By default, this message is not displayed and is not logged. Use the DISPLAY(Y) and NETLOG(Y) automation table actions to override these defaults.

Operator response

None

System programmer response

None

Chapter 3. EJV Prefix Messages

This chapter lists the EJV prefix messages.

EJV001I	AUTOMATION TABLE STATEMENT SAVED SUCCESSFULLY
----------------	--

Explanation

The NetView REST Server saved and stored a single automation table statement or set of automation table statements in a dataset specified by the user.

EJV002I	AUTOMATION TABLE STATEMENT SAVE FAILED
----------------	---

Explanation

An error occurred while the NetView REST Server was attempting to save a user's automation table statement. The user should verify that the Dataset where the save is to occur contains a valid HLQ and MLQ.

The server will have an output file for all messages logged by the server. Spring Boot comes with a very robust logging system. It provides filtering to control what types of messages show up in the log. The following levels are used to filter: TRACE, DEBUG, INFO, and ERROR. The server is designed to use INFO and DEBUG for troubleshooting purposes. This can be specified from the application.yml file. The sample contains a logging section at the bottom of the file.

Example logging configuration:

```
logging:
  level:
    root: DEBUG
  file: ${NVRESTCONFIG}/logs/debug.log
```

Chapter 4. EKG Prefix Messages

EKG prefix messages describe errors that occur with the Resource Object Data Manager (RODM).

EKG0001E ***jobname*: REQUIRED STORAGE
CANNOT BE OBTAINED.**

Explanation

The Resource Object Data Manager (RODM) tried to obtain the virtual storage required for internal tables, but no storage was available.

Message Variables

jobname

The RODM job name specified in the MVS START command.

System action

RODM ends.

Operator response

Notify the system programmer.

System programmer response

Analyze the appropriate RODM log file to determine the source of the error. See the *IBM Z NetView Troubleshooting Guide* for information about RODM log record formats. Increase the region size for RODM and restart it.

EKG0002I ***jobname*: THE CURRENT ACTIVE
LOG FILE IS NOW *ddname*.**

Explanation

A new Resource Object Data Manager (RODM) log file has been opened for one of the following reasons:

- The previous RODM log file is full.
- The write request to the previous RODM log file failed.
- RODM has just initialized. This is an informational message only.
- A LOGQ command has been issued. This is an informational message only.

Message Variables

jobname

The RODM job name specified in the MVS START command.

ddname

The name of the RODM log file specified in the RODM START job control language (JCL).

System action

RODM continues logging with the specified file.

Operator response

Notify the system programmer if necessary.

System programmer response

Determine whether there was a failure in writing to the previous RODM log file or whether the previous RODM log file reached capacity. If there was a write failure, analyze the appropriate RODM log file to determine the source of the error. See the *IBM Z NetView Troubleshooting Guide* for information about RODM log record formats. See the MVS system console for IEC messages.

EKG0003I ***jobname*: PRIMARY LOG FILE
CANNOT BE OPENED.**

Explanation

The Resource Object Data Manager (RODM) cannot open the primary log file for one of the following reasons:

- The primary file does not exist.
- The primary file is not properly defined.
- The primary log file is already in use.

Message Variables

jobname

The RODM job name specified in the MVS START command

System action

If the error occurs during initialization, RODM continues processing without the primary log file. RODM does not attempt to open the secondary log file. The switch log function (LOGP) is now disabled.

Operator response

After issuing the MVS MODIFY *jobname*, LOGP command, review the messages displayed. Notify the system programmer.

System programmer response

Verify that the primary log file is defined correctly. See *IBM Z NetView Installation: Getting Started* for information about the START job control language (JCL) and the associated file names. See the NetView online help for information about the MVS MODIFY command.

EKG0004I **jobname: SECONDARY LOG FILE CANNOT BE OPENED.**

Explanation

The Resource Object Data Manager (RODM) cannot open the secondary log file for one of the following reasons:

- The secondary log file does not exist.
- The secondary log file is not properly defined.
- The secondary log file is already in use.

Message Variables

jobname

The RODM job name specified in the MVS START command

System action

RODM continues processing without the secondary log file. The switch log function (LOGS) is now disabled.

Operator response

After issuing the MVS MODIFY *jobname*, LOGS command, return to the console and review the messages displayed. Notify the system programmer.

System programmer response

Verify that the secondary log file is defined properly. See the *IBM Z NetView Installation: Getting Started* for information about the START job control language (JCL) and associated file names. See the NetView online help for information about the MVS MODIFY command.

EKG0900E **jobname: THE CONTROL INFORMATION IN THE MESSAGE TEXT FILE IS NOT CORRECT.**

Explanation

The CCSID specified in the message text file, EKGMSENU, is incorrect.

Message Variables

jobname

The Resource Object Data Manager (RODM) job name specified in the MVS START command

System action

RODM ends.

Operator response

Notify the system programmer.

System programmer response

Check if the CCSID keyword is missing in the control record. The control record is the second record. Ensure the CCSID contains 00037 for English.

EKG0901E **jobname: THE MESSAGE TEXT FILE CANNOT BE READ.**

Explanation

The Resource Object Data Manager (RODM) cannot read the message text file member EKGMSENU for one of the following reasons:

- RODM cannot find the message text file.
- The message text file is empty.
- The record length is not 125.
- The record format is not fixed block (FB).
- A partitioned data set was not specified for the EKGLANG DD statement.

Message Variables

jobname

The RODM job name specified in the MVS START command

System action

The message text file is not loaded and RODM ends.

Operator response

Notify the system programmer.

System programmer response

Ensure that member EKGMSENU exists in the file specified by the EKGLANG DD statement of the RODM START job control language (JCL), and that member EKGMSENU contains the required message text. Also ensure that the record length is 125 and the format is fixed block (FB). See *IBM Z NetView Installation: Getting Started* for information about the START job control language (JCL) and associated file names. Restart RODM.

EKG0902E **jobname: THE FORMAT OF THE MESSAGE TEXT FILE IS NOT CORRECT AT LINE *linenumber*.**

Explanation

The Resource Object Data Manager (RODM) cannot process the message text file member EKGMSENU because of one of the following format errors:

- The first record of the message text file contains something other than the MVS message services (MMS) version record.
- One or more message numbers in the message text file are not in ascending order.
- One or more message numbers are not in the format EKGnnnnc, where nnnn is a decimal number and c is either E, I, or D.

Message Variables

jobname

The RODM job name specified in the MVS START command

linenumber

The number of the line where the error exists

System action

RODM ends.

Operator response

Notify the system programmer.

System programmer response

Determine which format errors exist and correct them. See *IBM Z NetView Installation: Getting Started* for information about the START job control language (JCL) and associated file names. Restart RODM.

EKG1100E jobname: THE MASTER WINDOW CANNOT BE ALLOCATED.

Explanation

The Resource Object Data Manager (RODM) cannot allocate the master window for one of the following reasons:

- The space allocation for the master-window checkpoint data set is insufficient.
- The master-window checkpoint file is not properly defined.
- The virtual storage for the master window is not available.

Message Variables

jobname

The RODM job name specified in the MVS START command

System action

RODM ends.

Operator response

Notify the system programmer.

System programmer response

Analyze the appropriate RODM log file to determine the source of the error. See the *IBM Z NetView Troubleshooting Guide* for information about RODM log record formats.

- Verify that the checkpoint data sets (DD names EKGMAST, EKGTRAN, and EKGDnnn) are properly defined.
- Ensure that the space allocated for the master-window checkpoint data set is sufficient for a 2MB window.
- Otherwise, increase the region size for RODM.
- Restart RODM.

See *IBM Z NetView Installation: Getting Started* for information about the START job control language (JCL) and associated file names.

EKG1101E jobname: THE FIRST SEGMENT OF THE TRANSLATION WINDOW CANNOT BE ALLOCATED.

Explanation

The Resource Object Data Manager (RODM) cannot allocate the first segment of the translation window for one of the following reasons:

- The space allocation for the translation-window checkpoint data set is insufficient.
- The translation-window checkpoint data set is not properly defined.
- The virtual storage for the translation window is unavailable.

Message Variables

jobname

The RODM job name specified in the MVS START command

System action

RODM ends.

Operator response

Notify the system programmer.

System programmer response

Analyze the appropriate RODM log file to determine the source of the error. See the *IBM Z NetView Troubleshooting Guide* for information about RODM log record formats.

- Verify that the translation-window checkpoint data set is properly defined.
- Ensure that the size of the translation-window checkpoint data set is sufficient. See the EKGSI101 sample for information about calculating checkpoint data set sizes.
- Otherwise, increase the region size for RODM.
- Restart RODM.

See *IBM Z NetView Installation: Getting Started* for information about the START job control language (JCL) and associated file names.

EKG1102E **jobname: THE FIRST DATA WINDOW CANNOT BE ALLOCATED FOR DDNAME ddname.**

Explanation

The Resource Object Data Manager (RODM) cannot allocate the first data window for one of the following reasons:

- The space allocation for the specified data-window checkpoint data set is insufficient.
- The specified checkpoint data set is not properly defined.
- A data space cannot be created.
- Virtual storage for RODM has been exhausted.

Message Variables

jobname

The RODM job name specified in the MVS START command.

ddname

The name of the data-window checkpoint data set.

System action

RODM ends.

Operator response

Notify the system programmer.

System programmer response

Analyze the appropriate RODM log file to determine the source of the error. See the *IBM Z NetView Troubleshooting Guide* for information about RODM log record formats.

- Verify that the data-window checkpoint data set is properly defined.
- Ensure that the size of the data-window checkpoint data set is sufficient. See the EKGSI101 sample for information about calculating checkpoint data set sizes.
- Otherwise, increase the region size for RODM.
- Restart RODM.

EKG1104E **jobname: THE MASTER WINDOW CANNOT BE CHECKPOINTED. THE CHECKPOINT FUNCTION IS NOW DISABLED.**

Explanation

The Resource Object Data Manager (RODM) cannot take a checkpoint to the master window checkpoint file. The checkpoint file might be damaged.

Message Variables

jobname

The RODM job name specified in the MVS START command.

System action

The translation and data windows do not take a checkpoint. RODM continues processing. The checkpoint function is now disabled until RODM is ended. All transactions that have occurred since the last successful checkpoint are lost.

Operator response

Notify the system programmer.

System programmer response

End RODM without taking a checkpoint (MODIFY *jobname*,TERM). Analyze the appropriate RODM log file to determine the source of the error. See the *IBM Z NetView Troubleshooting Guide* for information about RODM log record formats. See the NetView online help for information about the MVS MODIFY command. Warm start RODM using the checkpoint files from the last successful checkpoint. If no checkpoint files are available, cold start RODM.

EKG1105E **jobname: THE TRANSLATION WINDOW CANNOT BE CHECKPOINTED. THE CHECKPOINT FUNCTION IS NOW DISABLED.**

Explanation

The Resource Object Data Manager (RODM) cannot take a checkpoint to the translation window checkpoint file. The file might be damaged.

Message Variables

jobname

The RODM job name specified in the MVS START command.

System action

RODM has already successfully taken a checkpoint to the master window. RODM does not checkpoint the translation and data windows and RODM continues processing. The checkpoint function is now disabled until RODM is ended. All transactions that have occurred since the last successful checkpoint are lost.

Operator response

Notify the system programmer.

System programmer response

End RODM without taking a checkpoint (MODIFY *jobname*, TERM). Analyze the appropriate RODM log file to determine the source of the error. See the *IBM Z NetView Troubleshooting Guide* for information about RODM log record formats. Warm start RODM using the checkpoint files from the last successful checkpoint.

EKG1106E ***jobname*: A DATA WINDOW
CANNOT BE CHECKPOINTED FOR
DDNAME *ddname*.**

Explanation

The Resource Object Data Manager (RODM) cannot take a checkpoint to the data-window checkpoint file identified by the specified *ddname* for one of the following reasons:

- The data window checkpoint file might be damaged.
- There is insufficient storage for the DIV macro request.

Message Variables

jobname

The RODM job name specified in the MVS START command.

ddname

The name corresponding to the data window checkpoint file.

System action

RODM has already successfully taken a checkpoint to the master window and the translation window. All

data windows prior to the specified data window have been successfully checkpointed. RODM continues processing. The checkpoint function is now disabled until RODM is ended.

Operator response

Notify the system programmer.

System programmer response

End RODM without taking a checkpoint (MODIFY *jobname*, TERM). When RODM is ended without taking a checkpoint, all transactions occurring after the last successful checkpoint are lost. Analyze the appropriate RODM log file to determine the source of the error. See the *IBM Z NetView Troubleshooting Guide* for information about RODM log record formats. Warm start RODM using the checkpoint files from the last successful checkpoint.

EKG1107E ***jobname*: THE MASTER WINDOW
CANNOT BE LOADED.**

Explanation

The Resource Object Data Manager (RODM) cannot load the master window from the master-window checkpoint data set during a warm start. The master-window checkpoint data set might be empty or damaged. The master-window checkpoint data set is the one identified by the EKGMAST DD statement in the RODM startup JCL.

Message Variables

jobname

The RODM job name specified in the MVS START command.

System action

RODM ends.

Operator response

Notify the system programmer.

System programmer response

Verify that your RODM startup JCL points to a valid, non-empty checkpoint data set, and retry the warm start. Otherwise, cold start RODM.

EKG1108E ***jobname*: THE TRANSLATION
WINDOW CANNOT BE LOADED.**

Explanation

The Resource Object Data Manager (RODM) cannot load the translation window from the translation-

window checkpoint data set during a warm start. The translation-window checkpoint data set might be empty or damaged. The translation-window checkpoint data set is the one identified by the EKGTRAN DD statement in the RODM startup JCL.

Message Variables

jobname

The RODM job name specified in the MVS START command.

System action

RODM ends.

Operator response

Notify the system programmer.

System programmer response

Verify that your RODM startup JCL points to a valid, non-empty checkpoint data set, and retry the warm start. Otherwise, cold start RODM.

EKG1109E ***jobname: A DATA WINDOW CANNOT BE LOADED FOR DDNAME ddname.***

Explanation

The Resource Object Data Manager (RODM) cannot load a data window from the checkpoint data set into which it had been previously checkpointed. The specified checkpoint data set might be empty or damaged.

Message Variables

jobname

The RODM job name specified in the MVS START command.

ddname

The name corresponding to the checkpoint data set for the data window.

System action

RODM ends.

Operator response

Notify the system programmer.

System programmer response

Verify that your RODM startup JCL points to a valid, non-empty checkpoint data set, and retry the warm start. Otherwise, cold start RODM.

EKG1110I ***jobname: TRANSLATION WINDOW SEGMENT NUMBER nnn1 CANNOT BE ALLOCATED. nnn2 SEGMENTS ARE AVAILABLE.***

Explanation

The Resource Object Data Manager (RODM) cannot allocate a new segment of the translation window for one of the following reasons:

- The MAX_SEGMENT_NUM keyword from the customization file has been exceeded. (The sample customization file is EKGCUSTOM.)
- The virtual storage for RODM is unavailable.
- If CHECKPOINT_FUNCTION(REQUIRE) was coded in the RODM customization member, the space allocated for the translation-window checkpoint data set is insufficient. (See the EKGTRAN DD statement in the RODM startup JCL.) The most likely reason for this error is that your checkpoint data sets are too small. RODM will not attempt to allocate storage for data if the total amount of data in RODM exceeds the amount that can be written to your checkpoint data sets.

Message Variables

jobname

The RODM job name specified in the MVS START command.

nnn1

The segment number that cannot be allocated.

nnn2

The number of unused segments.

System action

RODM continues processing. Requests from user applications requiring additional storage (for example, creating an object) might not be processed.

Operator response

Notify the system programmer.

System programmer response

Verify that the MAX_SEGMENT_NUM setting in your customization file is sufficient. IBM recommends setting this keyword to its maximum value because translation window segments are only allocated when they are actually used.

Check and correct your EKGTRAN checkpoint data set size.

If this error was generated because of the checkpoint data set size, you can avoid the error in the future by

disabling the checkpoint function, or by ensuring that your checkpoint data sets are large enough.

To disable the checkpoint function, code CHECKPOINT_FUNCTION(NONE) in the customization file. Note that disabling the checkpoint function also disables the warm start option.

If the checkpoint function is enabled, ensure that your checkpoint data sets are large enough. See the EKGSI101 sample for information about calculating the proper size for your checkpoint data sets.

If you determine that this error is not related to your checkpoint data set size, or the MAX_SEGMENT_NUM keyword, increase the region size for RODM.

After performing any of the previous steps, you must restart RODM.

EKG1111I **jobname: DATA WINDOW NUMBER
nnn1 CANNOT BE ALLOCATED.
nnn2 UNUSED DATA WINDOWS
ARE STILL AVAILABLE.**

Explanation

The Resource Object Data Manager (RODM) cannot allocate a data window for one of the following reasons:

- The MAX_WINDOW_NUM keyword from the customization file has been exceeded. (The sample customization file is EKGFCUST.)
- A data space cannot be created.
- Virtual storage for RODM has been exhausted.
- If CHECKPOINT_FUNCTION(REQUIRE) is coded in the RODM customization member, the space allocated for the translation-window checkpoint data set is insufficient. (See the EKGTRAN DD statement in the RODM startup JCL.) The most likely reason for this error is that your checkpoint data sets are too small. RODM will not attempt to allocate storage for data if the total amount of data in RODM exceeds the amount that can be written to your checkpoint data sets.

Message Variables

jobname

The RODM job name specified in the MVS START command.

nnn1

The number of data windows that cannot be allocated.

nnn2

The number of unused data windows.

System action

RODM continues processing. Requests from user applications requiring additional storage (for example, creating an object) might not be processed.

Operator response

Notify the system programmer.

System programmer response

Verify that the MAX_WINDOW_NUM setting in your customization file is sufficient. IBM recommends setting this keyword to its maximum value because data windows are only allocated when they are actually used.

Check and correct your EKGDnnn checkpoint data set sizes.

If this error was generated because of the checkpoint data set size, you can avoid the error in the future by disabling the checkpoint function, or by ensuring that your checkpoint data sets are large enough.

To disable the checkpoint function, code CHECKPOINT_FUNCTION(NONE) in the customization file. Note that disabling the checkpoint function also disables the warm start option.

If the checkpoint function is enabled, ensure that your checkpoint data sets are large enough. See the EKGSI101 sample for information about calculating the proper size for your checkpoint data sets.

If you determine that this error is not related to your checkpoint data set size, or the MAX_WINDOW_NUM keyword, increase the region size for RODM.

After performing any of the previous steps, you must restart RODM.

EKG1112E **jobname: THE CHECKPOINT
FUNCTION IS DISABLED.**

Explanation

The Resource Object Data Manager (RODM) cannot perform the requested checkpoint function because the checkpoint function is disabled for one of the following reasons:

- CHECKPOINT_FUNCTION(NONE) was coded in the customization file. The sample customization file is EKGFCUST.
- CHECKPOINT_FUNCTION(REQUEST) was coded in the customization file and RODM either cannot access the checkpoint data sets, was using a translation or data window that cannot be checkpointed, or one or more of the checkpoint data

sets were too small to set up the master window, the first translation window, or the first data window.

- RODM detected an error during a previous checkpoint request.

Message Variables

jobname

The RODM job name specified in the MVS START command.

System action

RODM rejects this checkpoint request and continues processing.

Operator response

Notify the system programmer.

System programmer response

Browse the system console log for messages EKG5011I, EKG1100E, EKG1101E, EKG1102E, EKG1104E, EKG1105E, and EKG1106E. See these messages for more information.

EKG1114I	jobname: POOL_SIZE poolsize, CELL_SIZE cellsize, INCOMPATIBLE. NEW SIZES ARE newpool AND newcell.
-----------------	--

Explanation

The pool size value specified in the customization file is not valid for one of the following reasons:

- The *cellsize* is too large for the *poolsize*.
- The *poolsize* is too large.

Message Variables

jobname

The Resource Object Data Manager (RODM) job name specified in the MVS START command.

poolsize

The pool size specified (in bytes).

cellsize

The cell size specified (in bytes).

newpool

The new pool size.

newcell

The new cell size.

System action

The *poolsize* defaults to the new pool size, and *cellsize* defaults to the new cell size. RODM continues with the defaulted values.

Operator response

Notify the system programmer.

System programmer response

Update the cell size and pool size parameters in the customization file. See the *IBM Z NetView Administration Reference* for information on defining the cell pools in the customization file.

EKG1115I	jobname: THE TRANSLATION WINDOW CHECKPOINT IS COMPLETE.
-----------------	--

Explanation

The Resource Object Data Manager (RODM) has completed a checkpoint of the translation windows. The operator or a user application requested the checkpoint.

Message Variables

jobname

The RODM job name specified in the MVS START command.

System action

RODM continues processing. Users can now resume user API requests.

EKG1116I	jobname: NO MORE TRANSLATION WINDOW SEGMENTS ARE AVAILABLE. nnn SEGMENTS HAVE BEEN ALLOCATED.
-----------------	--

Explanation

The Resource Object Data Manager (RODM) cannot allocate a new segment of the translation window for one of the following reasons:

- The space allocated for the translation-window checkpoint data set is insufficient. (See the EKGTRAN DD statement in the RODM startup JCL.)
- The MAX_SEGMENT_NUM keyword from the customization file has been exceeded. (The sample customization file is EKGCUST.)
- The virtual storage for RODM is unavailable.

The most likely reason for this error is that your checkpoint data sets are too small. RODM will not attempt to allocate storage for data if the total amount of data in RODM exceeds the amount that can be written to your checkpoint data sets.

Message Variables

jobname

The RODM job name specified in the MVS START command.

nnn

The total number of segments that have been allocated.

System action

RODM continues processing. Requests from user applications requiring additional storage (for example, creating an object) might not be processed.

Operator response

Notify the system programmer.

System programmer response

Verify that the MAX_SEGMENT_NUM setting in your customization file is sufficient. Set this keyword to its maximum value because translation window segments are allocated only when they are used.

Check and correct your EKGTRAN checkpoint data set size.

If this error was generated because of your checkpoint data set size, disable the checkpoint function or ensure that your checkpoint data sets are large enough. To disable the checkpoint function, code CHECKPOINT_FUNCTION(NONE) in the RODM customization member. Optionally, you can also comment out the checkpoint data sets in the RODM startup JCL (DD statements EKGMAST, EKGTRAN, and EKG00x). Note that disabling the checkpoint function also disables the warm start option.

If the checkpoint function is enabled, ensure that your checkpoint data sets are large enough. See the EKGSI101 sample for information about calculating the proper size of the checkpoint data sets.

If you determine that this error is not related to your checkpoint data set size, or the MAX_SEGMENT_NUM keyword, increase the region size for RODM.

After performing any of the previous steps, you must restart RODM.

EKG1117I **jobname: NO MORE DATA
WINDOWS ARE AVAILABLE. nnn
DATA WINDOWS HAVE BEEN
ALLOCATED.**

Explanation

The Resource Object Data Manager (RODM) cannot allocate a data window for one of the following reasons:

- The space allocated for the data-window checkpoint data sets is insufficient. (See the EKG00x DD statement in the RODM startup JCL.)
- The MAX_WINDOW_NUM keyword from the customization file has been exceeded. (The sample customization file is EKG00x.)
- A data space cannot be created.
- Virtual storage for RODM has been exhausted.

The most likely reason for this error is that your checkpoint data sets are too small. RODM will not attempt to allocate storage for data if the total amount of data in RODM exceeds the amount that can be written to your checkpoint data sets.

Message Variables**jobname**

The RODM job name specified in the MVS START command.

nnn

The total number of data windows that have been allocated.

System action

RODM continues processing. Requests from user applications requiring additional storage (for example, creating an object) might not be processed.

Operator response

Notify the system programmer.

System programmer response

Verify that the MAX_WINDOW_NUM setting in your customization file is sufficient. IBM recommends setting this keyword to its maximum value because data windows are only allocated when they are actually used.

Check and correct your EKG00x checkpoint data set sizes.

If this error was generated because of your checkpoint data set size, you can avoid the error in the future by disabling the checkpoint function, or by ensuring that your checkpoint data sets are large enough.

To disable the checkpoint function, code CHECKPOINT_FUNCTION(NONE) in the RODM customization member. Optionally, you can also comment out the checkpoint data sets in the RODM startup JCL (DD statements EKGMAST, EKGTRAN, and EKG00x). Note that disabling the checkpoint function also disables the warm start option.

If the checkpoint function is enabled, ensure that your checkpoint data sets are large enough. See the

EKGS1101 sample for information about calculating the proper size for your checkpoint data sets.

If you determine that this error is not related to your checkpoint data set size, or the MAX_WINDOW_NUM keyword, increase the region size for RODM.

After performing any of the previous steps, you must restart RODM.

EKG1118I ***jobname:* THERE ARE *uapi_number* UAPI REQUESTS AND *asyn_number* ASYNCHRONOUS REQUESTS AHEAD OF THE CHECKPOINT REQUEST.**

Explanation

This is an informational message that is used in conjunction with EKG1326D. This message is issued when a checkpoint is requested, but is not running because of other active transactions.

Message Variables

jobname

The RODM job name specified in the MVS START command

uapi_number

The number of synchronous requests to be completed before the RODM checkpoint request can run.

asyn_number

The number of asynchronous requests to be completed before the RODM checkpoint request can run.

System action

Messages EKG1330I, EKG1324I or EKG1325I and EKG1326D accompany this message.

Operator response

This message can be reissued if you decide to continue waiting with the reply to EKG1326D. When the message is reissued, if the number of requests ahead of the checkpoint request does not decrease, there can be a loop in a method. In this case, cancel the current transaction by replying to the EKG1326D message.

EKG1119I ***jobname:* THERE ARE *uapi_number* UAPI REQUESTS AND *asyn_number* ASYNCHRONOUS REQUESTS AHEAD OF THE TERMINATION REQUEST.**

Explanation

This is an informational message that is used in conjunction with EKG1326D. This message is issued when a termination is requested, but is not running because of other active transactions.

Message Variables

jobname

The RODM job name specified in the MVS START command

uapi_number

The number of synchronous requests to be completed before the RODM termination request can run.

asyn_number

The number of asynchronous requests to be completed before the RODM termination request can run.

System action

Messages EKG1330I, EKG1324I or EKG1325I and EKG1326D accompany this message.

Operator response

This message can be reissued if you decide to continue waiting with the reply to EKG1326D. When the message is reissued, if the number of requests ahead of the termination request does not decrease, there can be a loop in a method. In this case, cancel the current transaction by replying to the EKG1326D message.

EKG1120I ***jobname:* RODM WILL BE UNABLE TO CHECKPOINT THE MASTER WINDOW**

Explanation

With the CHECKPOINT_FUNCTION(REQUEST) option in use and during cold start initialization, RODM was unable to set up the master window for future checkpointing. Typical reasons are that the master checkpoint data set was not defined or was too small.

Message Variables

jobname

The RODM job name specified in the MVS START command

System action

RODM continues without the checkpoint function.

System programmer response

If the checkpoint function is required at all times during RODM operation, then code CHECKPOINT_FUNCTION(REQUIRE) in the RODM customization member and restart RODM. You might also want to increase the size of the master checkpoint data set. See the EKGMAST DD statement in the RODM startup JCL.

EKG1121I **jobname: RODM WILL BE UNABLE TO CHECKPOINT TRANSLATION WINDOW SEGMENT NUMBER nn**

Explanation

With the CHECKPOINT_FUNCTION(REQUEST) option in use, RODM allocated a translation window segment that, when ultimately used, cannot be checkpointed. Typical reasons are that the translation checkpoint data set was not defined or was too small.

Message Variables

- jobname**
The RODM job name specified in the MVS START command
- nn**
The number of the first translation window segment for which the problem occurred

System action

If the window number is one, RODM continues without the checkpoint function. If the window number is larger than one, RODM continues with the checkpoint function until the identified translation window is used, at which time message EKG1123I will be issued.

System programmer response

If the checkpoint function is required at all times during RODM operation, then code CHECKPOINT_FUNCTION(REQUIRE) in the RODM customization member and restart RODM. You might also want to increase the size of the translation checkpoint data set. See the EKGTRAN DD statement in the RODM startup JCL.

EKG1122I **jobname: RODM WILL BE UNABLE TO CHECKPOINT DATA WINDOW NUMBER nn**

Explanation

With the CHECKPOINT_FUNCTION(REQUEST) option in use, RODM allocated a data window that, when ultimately used, cannot be checkpointed. Typical reasons are that the data window checkpoint data sets were not defined or were too small.

Message Variables

- jobname**
The RODM job name specified in the MVS START command
- nn**
The number of the first data window for which the problem occurred

System action

If the window number is one, RODM continues without the checkpoint function. If the window number is larger than one, RODM continues with the checkpoint function until the identified data window is used, at which time message EKG1123I will be issued.

System programmer response

If the checkpoint function is required at all times during RODM operation, then code CHECKPOINT_FUNCTION(REQUIRE) in the RODM customization member and restart RODM. You might also want to increase the size of the data window checkpoint data sets. See the EKGDnnn DD statements in the RODM startup JCL.

EKG1123I **jobname: THE CHECKPOINT FUNCTION IS NOW DISABLED**

Explanation

During cold start initialization with the CHECKPOINT_FUNCTION(REQUEST) or CHECKPOINT_FUNCTION(NONE) RODM customization option in use, RODM found that it will not be able to checkpoint the master window, first translation window, or the first data window. Alternatively, during operation with the CHECKPOINT_FUNCTION(REQUEST) RODM customization option in use, RODM began to use a translation window or a data window that cannot be checkpointed.

Message Variables

- jobname**
The RODM job name specified in the MVS START command

System action

RODM continues without the checkpoint function.

System programmer response

If the checkpoint function is required at all times during RODM operation, then code CHECKPOINT_FUNCTION(REQUIRE) in the RODM customization member and restart RODM. Additional

responses can include defining or increasing the size of one or more of the checkpoint data sets and restarting RODM. See the EKGMAST, EKGTRAN, and EKGDnnn DD statements in the RODM startup JCL.

EKG1301E ***jobname*: THERE ARE *uapi_number* UAPI REQUESTS AND *asyn_number* ASYNCHRONOUS REQUESTS AHEAD OF THE CHECKPOINT REQUEST.**

Explanation

This is an informational message to be used in conjunction with EKG1326D. This message will get issued when a checkpoint or termination is requested, but is not running yet because of other transactions still being active.

Message Variables

jobname

The RODM job name specified in the MVS START command.

uapi_number

The number of synchronous requests that need to be completed before RODM checkpoint or termination request can run.

asyn_number

The number of asynchronous requests that need to be completed before RODM checkpoint or termination request can run.

System action

Message EKG1330I, EKG1324I or EKG1325I and EKG1326D accompany this message.

Operator response

This message will get reissued if you decide to continue waiting with the reply to EKG1326D. When the message is reissued, if the number of requests ahead of the checkpoint request does not decrease, there can be a loop in a method. In this case, cancel the current transaction by replying to the EKG1326D message.

EKG1302I ***jobname*: RODM *rodm* IS NOW CHECKPOINTING.**

Explanation

The Resource Object Data Manager (RODM) is taking a checkpoint as a result of a checkpoint request from the operator or a user application.

Message Variables

jobname

The RODM job name specified in the MVS START command.

rodm

The internal RODM name.

System action

RODM checkpoints the master window, the translation window, and the data windows. RODM rejects all user requests until it checkpoints both the master window and translation window. After the translation window has taken a checkpoint, the user API requests are allowed while the data windows are taking a checkpoint.

EKG1303I ***jobname*: RODM *rodm* HAS COMPLETED CHECKPOINTING.**

Explanation

The Resource Object Data Manager (RODM) has completed a checkpoint of the master, translation, and data windows.

Message Variables

jobname

The RODM job name specified in the MVS START command.

rodm

The internal RODM name.

System action

RODM continues normal processing.

EKG1304I ***jobname*: THE CURRENT LOG FILE HAS BEEN OVERWRITTEN.**

Explanation

The current log file has been overwritten by a Resource Object Data Manager (RODM) logging function because the current log file is at capacity and only one log file is provided.

Message Variables

jobname

The RODM job name specified in the MVS START command.

System action

RODM continues processing.

EKG1305I ***jobname*: NO LOG RECORD IS LOGGED DUE TO A LOG FILE FAILURE.**

Explanation

An error condition was encountered when a log record write request was attempted. Possible causes for the error are:

- No log files are specified in the Resource Object Data Manager (RODM) START job control language (JCL).
- Only one log file is specified in the RODM START JCL and there was a failure when attempting to write to that file.
- Neither log file has been written.

Message Variables

jobname

The RODM job name specified in the MVS START command.

System action

RODM continues without error logging.

Operator response

Notify the system programmer.

System programmer response

See the *IBM Z NetView Troubleshooting Guide* for information about RODM log record formats and log file definition.

EKG1306I jobname: THE SYSTEM FIELD field IN OBJECT object CANNOT BE UPDATED, ERROR REASON CODE IS reason.

Explanation

The specified Resource Object Data Manager (RODM) system field cannot be updated. The required action for the application programming interface (API) was not completed successfully and a return code of 8 or greater has been recorded for the transaction. A return code of 8 or greater causes RODM to attempt to update the LastAsyncError field in the EKGUSER object. This message is issued whenever the LastAsyncError field cannot be updated in a multiple use environment, or storage cannot be obtained. If RODM runs out of storage, you receive this message for every asynchronous transaction task running in RODM.

Message Variables

jobname

The RODM job name specified in the MVS START command.

field

The RODM field name. Possible values are LastCheckPointID and LastAsyncError.

object

The name of the object.

reason

The reason code indicating the cause of the problem.

System action

RODM continues processing. The field does not contain current information because the field was not updated.

System programmer response

Analyze the appropriate RODM log data set to determine the source of the error. See the *IBM Z NetView Troubleshooting Guide* for information about RODM log record formats.

EKG1307I jobname: RODM rodM CANNOT BE CHECKPOINTED AND WAS NOT STOPPED.

Explanation

You issued a MODIFY command with the Resource Object Data Manager (RODM) or you issued an application programming interface (API) request to end RODM with a checkpoint, but you did not provide checkpoint data sets in RODM. The checkpoint data sets in the START job control language (JCL) or that you provided are being used by another user. RODM cannot perform the checkpoint function.

Message Variables

jobname

The RODM job name specified in the MVS START command.

rodM

The internal RODM name.

System action

RODM continues processing.

Operator response

Notify the system programmer.

System programmer response

Verify that the RODM START JCL contains the checkpoint data sets. If the data sets are provided, check the RODM procedure library or the MVS system

to see if another user is using the checkpoint data sets.

EKG1310I ***jobname:* THE LOG FLUSHING IS COMPLETED.**

Explanation

All buffered log records that had not yet been written to the Resource Object Data Manager (RODM) log file have now been written (flushed) successfully to the log file. The flushing of log records has completed in response to a MODIFY LOGF command.

Message Variables

jobname

The RODM job name specified in the MVS START command.

System action

The system continues processing.

EKG1311I ***jobname:* NO LOG FILE IS CURRENTLY OPEN.**

Explanation

The user has entered a LOGQ command or a MODIFY command to either flush the log buffer, switch the log file, or end logging. The log switch is triggered by a LOGP or a LOGS command. The log file was closed when these commands were issued, however, the LOGP and LOGS commands continue processing and open their respective log files.

Message Variables

jobname

The Resource Object Data Manager (RODM) job name specified in the MVS START command.

System action

RODM continues processing.

EKG1312I ***jobname:* THE LOG FLUSHING HAS FAILED.**

Explanation

The flushing of log records has failed in response to a MODIFY LOGF command because an error occurred while attempting to write to the log file.

Message Variables

jobname

The Resource Object Data Manager (RODM) job name specified in the MVS START command.

System action

The system continues without flushing.

Operator response

Notify the system programmer.

System programmer response

Verify that the log file exists and is defined correctly. See the MVS system console for messages.

EKG1313I ***jobname:* THE PRIMARY LOG FILE IS NOW CLOSED.**

Explanation

The Resource Object Data Manager (RODM) has closed the current (primary) log file in response to a log terminate or log switch MODIFY command. The primary log file has been closed for one of the following reasons:

- The primary log file was open while there was an attempt to end logging using the MODIFY command.
- The primary log file was current and a switch to the secondary log file was requested using the MODIFY command. The secondary log file was opened successfully.

Message Variables

jobname

The RODM job name specified in the MVS START command.

System action

RODM continues processing.

EKG1314I ***jobname:* THE SECONDARY LOG FILE IS NOW CLOSED.**

Explanation

The Resource Object Data Manager (RODM) closed the current (secondary) log file while ending or switching the log file. The secondary log file has been closed for one of the following reasons:

- The secondary log file was open while there was a request to end logging using the MODIFY command.
- The secondary log file was current and a switch to the primary log file was requested using the MODIFY command. The primary log file was opened successfully.

Message Variables

jobname

The RODM job name specified in the MVS START command.

System action

RODM continues processing.

EKG1315I **jobname: THE PRIMARY LOG FILE IS NOW CURRENT.**

Explanation

The primary log file is now the current log file because of either a MODIFY command or an end-of-file condition occurring on the previous (secondary) file.

Message Variables**jobname**

The Resource Object Data Manager (RODM) job name specified in the MVS START command.

System action

RODM continues processing.

EKG1316I **jobname: THE SECONDARY LOG FILE IS NOW CURRENT.**

Explanation

The secondary log file is now the current log file because of either a MODIFY command or an end-of-file condition occurring on the previous (primary) file.

Message Variables**jobname**

The RODM job name specified in the MVS START command.

System action

RODM continues processing.

EKG1317E **jobname: THE I/O TASK CANNOT BE CREATED. RETURN CODE *retcode* IS RETURNED FROM SYSTEM MACRO *macro*.**

Explanation

The Resource Object Data Manager (RODM) cannot create the I/O task.

Message Variables**jobname**

The RODM job name specified in the MVS START command.

retcode

The return code returned from the MVS system macro.

macro

The name of the MVS system macro.

System action

RODM ends.

Operator response

Notify the system programmer.

EKG1318E **jobname: THE QUIESCENCE TASK CANNOT BE CREATED. RETURN CODE *retcode* IS RETURNED FROM SYSTEM MACRO *macro*.**

Explanation

The Resource Object Data Manager (RODM) cannot create the quiescence task.

Message Variables**jobname**

The RODM job name specified in the MVS START command.

retcode

The return code returned from the MVS system macro.

macro

The name of the MVS system macro.

System action

RODM ends.

Operator response

Notify the system programmer.

System programmer response

If the cause of the failure cannot be determined from the return code given in the message, contact IBM Software Support.

EKG1319E **jobname: THE METHOD TASK CANNOT BE CREATED. RETURN CODE *retcode* IS RETURNED FROM SYSTEM MACRO *macro*.**

Explanation

The Resource Object Data Manager (RODM) cannot create the method task.

Message Variables

jobname

The RODM job name specified in the MVS START command.

retcode

The return code returned from the MVS system macro.

macro

The name of the MVS system macro.

System action

RODM ends.

Operator response

Notify the system programmer.

EKG1320E **jobname: TRANSACTION TASK CANNOT BE CREATED. RETURN CODE IS *retcode* FROM SYSTEM MACRO *macro*.**

Explanation

The Resource Object Data Manager (RODM) cannot create the transaction task.

Message Variables**jobname**

The RODM job name specified in the MVS START command.

retcode

The return code returned from the MVS system macro.

macro

The name of the MVS system macro.

System action

RODM ends.

Operator response

Notify the system programmer.

EKG1321E **jobname: THE TIMER TASK CANNOT BE CREATED. RETURN CODE *retcode* IS RETURNED FROM SYSTEM MACRO *macro*.**

Explanation

The Resource Object Data Manager (RODM) cannot create the timer task.

Message Variables**jobname**

The RODM job name specified in the MVS START command.

retcode

The return code returned from the MVS system macro.

macro

The name of the MVS system macro.

System action

RODM ends.

Operator response

Notify the system programmer.

EKG1322E **jobname: THE CONSOLE TASK CANNOT BE CREATED. RETURN CODE *retcode* IS RETURNED FROM SYSTEM MACRO *macro*.**

Explanation

The Resource Object Data Manager (RODM) cannot create the console task.

Message Variables**jobname**

The RODM job name specified in the MVS START command.

retcode

The return code returned from the MVS system macro.

macro

The name of the MVS system macro.

System action

RODM ends.

Operator response

Notify the system programmer.

EKG1323E **jobname: THE ALLOCATION TASK CANNOT BE CREATED. RETURN CODE *retcode* IS RETURNED FROM SYSTEM MACRO *macro*.**

Explanation

The Resource Object Data Manager (RODM) cannot create the allocation task.

Message Variables**jobname**

The RODM job name specified in the MVS START command.

retcode

The return code returned from the MVS system macro.

macro

The name of the MVS system macro.

System action

RODM ends.

Operator response

Notify the system programmer.

EKG1324I	<i>jobname:</i> THE WAIT PERIOD HAS EXPIRED FOR THE CHECKPOINT REQUEST, BUT THERE ARE STILL ACTIVE TRANSACTIONS.
-----------------	---

Explanation

The wait period for allowing transactions to complete before the checkpoint commences has expired. Some transaction activity is continuing after expiration of this timer interval.

Message Variables

jobname

The Resource Object Data Manager (RODM) job name specified in the MVS START command.

System action

Message EKG1326D accompanies this message. Depending on the reply to EKG1326D, RODM does one of the following:

- Repeats the checkpoint wait
- Ends all transactions and proceeds with an unconditional checkpoint
- Cancels the checkpoint request

Operator response

Notify the system programmer.

System programmer response

Investigate all active transactions and reply to message EKG1326D.

EKG1325I	<i>jobname:</i> THE WAIT PERIOD HAS EXPIRED FOR THE TERMINATE REQUEST, BUT THERE ARE STILL ACTIVE TRANSACTIONS.
-----------------	--

Explanation

The wait period for allowing transactions to complete before the Resource Object Data Manager (RODM) ends has expired. Some transaction activity is continuing after expiration of this timer interval.

Message Variables

jobname

The RODM job name specified in the MVS START command.

System action

Message EKG1326D accompanies this message. Depending on the reply to EKG1326D, RODM does one of the following:

- Repeats the termination wait
- Ends all transactions and proceeds with an unconditional end
- Cancels the terminate request

Operator response

Notify the system programmer.

System programmer response

Investigate all active transactions and reply to message EKG1326D.

EKG1326D	<i>jobname:</i> ENTER '1' TO PERFORM WAIT AGAIN, '2' TO END CURRENT TRANSACTION, '3' TO CANCEL REQUEST.
-----------------	--

Explanation

The message is generated as a result of message EKG1324I for a checkpoint request or message EKG1325I for a termination request. The wait period for checkpoint or termination has expired. The system programmer is prompted for one of three actions.

Message Variables

jobname

The Resource Object Data Manager (RODM) job name specified in the MVS START command.

System action

RODM asks the system programmer to take one of the following actions:

- Enter 1 to repeat the checkpoint or termination wait
- Enter 2 to end the current transaction. If there are no other active transactions, the checkpoint or termination will proceed. If there are other active transactions, the wait for the termination or checkpoint is repeated for the remaining active transactions.
- Enter 3 to cancel the checkpoint or termination request.

Operator response

Notify the system programmer.

System programmer response

Investigate all active transactions and reply appropriately.

EKG1327I ***jobname:* THE CHECKPOINT REQUEST IS ABORTED, AND THE CHECKPOINT FILES REMAIN UNMODIFIED.**

Explanation

A system programmer entered 3 in response to message EKG1326D. The Resource Object Data Manager (RODM) cancels the checkpoint request.

Message Variables

jobname

The RODM job name specified in the MVS START command.

System action

RODM cancels the checkpoint request. The checkpoint files are not modified.

EKG1328I ***jobname:* THE TERMINATE REQUEST IS ABORTED, AND RODM IS CONTINUING NORMAL PROCESSING.**

Explanation

A system programmer entered 3 in response to message EKG1326D. The Resource Object Data Manager (RODM) cancels the termination request.

Message Variables

jobname

The RODM job name specified in the MVS START command.

System action

RODM cancels the termination request and continues normal processing.

EKG1329E ***jobname:* THE QUIESCENCE WAIT TASK CANNOT BE CREATED. RETURN CODE *retcode* IS RETURNED FROM SYSTEM MACRO *macro*.**

Explanation

The Resource Object Data Manager (RODM) cannot create the quiescence wait task.

Message Variables

jobname

The RODM job name specified in the MVS START command.

retcode

The return code returned from the MVS system macro.

macro

The name of the MVS system macro.

System action

RODM ends.

Operator response

Notify the system programmer.

System programmer response

If the cause of the failure cannot be determined from the return code given in the message, contact IBM Software Support.

EKG1900I ***jobname:* RODM *rodm* INITIALIZATION IS COMPLETE WITH *env*.**

Explanation

The Resource Object Data Manager (RODM) has successfully initialized.

Message Variables

jobname

The RODM job name specified in the MVS START command.

rodm

The internal RODM name.

env

Indicates the specific runtime support with which RODM was installed. This value is either "PL/I" or "LE/370".

System action

RODM has successfully completed initialization and is ready to process user transactions or operator MODIFY commands.

EKG1901I ***jobname:* NO INIT METHOD IS SPECIFIED.**

Explanation

No INIT method is specified in the MVS START command or in the Resource Object Data Manager (RODM) START job control language (JCL). This

message is only informational, because INIT methods are not required.

Message Variables

jobname

The RODM job name specified in the MVS START command.

System action

RODM continues initialization without executing an INIT method.

EKG1902E ***jobname: THE INIT METHOD CANNOT BE FOUND.***

Explanation

The INIT method specified in the MVS START command or in the Resource Object Data Manager (RODM) START job control language (JCL) cannot be found in the method library. Therefore, RODM cannot execute the INIT method.

Message Variables

jobname

The RODM job name specified in the MVS START command.

System action

RODM ends.

Operator response

Notify the system programmer.

System programmer response

If an INIT method is desired, do the following:

1. Ensure that the INIT method name exists in the desired method library.
2. Ensure that the desired method library is specified in the RODM START JCL.
3. Restart RODM.

See *IBM Z NetView Installation: Getting Started* for more information on the START JCL and specifying INIT methods.

EKG1903E ***jobname: LOAD MODULE module CANNOT BE LOADED INTO THE COMMON STORAGE AREA.***

Explanation

The Resource Object Data Manager (RODM) cannot load the specified load module into the common storage area for one of the following reasons:

- The load module cannot be found in the load module library.
- The load module is not executable.

Message Variables

jobname

The RODM job name specified in the MVS START command.

module

The name of the load module that cannot be loaded.

System action

RODM ends.

Operator response

Notify the system programmer.

System programmer response

Ensure that the module exists in the RODM load module libraries and can be executed. Restart RODM.

EKG1905I ***jobname: A WARM START IS IN PROGRESS.***

Explanation

The Resource Object Data Manager (RODM) is currently being warm started. If the TYPE parameter was not specified in the MVS START command or in the RODM START job control language (JCL), the default start type (warm start) is assumed. Otherwise, the TYPE parameter had explicitly specified a warm start.

Message Variables

jobname

The RODM job name specified in the MVS START command.

System action

RODM proceeds to warm start.

EKG1906I ***jobname: THE RODM NAME IS systemname.***

Explanation

You did not specify the NAME parameter in the MVS START command or in the Resource Object Data Manager (RODM) START job control language (JCL). RODM uses the system name.

Message Variables

jobname

The RODM job name specified in the MVS START command.

systemname

The RODM START JCL procedure name or the identifier name.

System action

RODM continues initializing.

Operator response

See the NetView online help for information about specifying RODM names.

EKG1907I **jobname: THE CUSTOMIZATION FILE filename CANNOT BE READ.**

Explanation

The Resource Object Data Manager (RODM) cannot read (or open) the customization file member specified in the RODM START job control language (JCL) or START command, or use the default member EKG1907I, for one of the following reasons:

- The RODM customization file data definition (DD) name EKG1907I is not specified in the RODM START JCL.
- The RODM customization file is a sequential file, but it must be a partitioned data set.
- RODM cannot open the customization file specified in the ddname EKG1907I in the RODM START JCL.
- RODM cannot read the customization file. For the START command, the member name is specified by the CUST parameter. For the MODIFY command, the member name is specified in the RELOAD parameter. If the member name is not specified in either of these commands, the default member name EKG1907I is used.

Note: The EKG1907I ddname must be specified in the RODM START JCL and the EKG1907I member must be in the partitioned data set. Otherwise, RODM uses its internal values.

- The customization file is empty.
- The record length is not 80.
- The record format is not fixed block (FB).

Message Variables**jobname**

The RODM job name specified in the MVS START command.

filename

The member name of the customization file.

System action

RODM continues processing.

- For the START command:

If a customization parameter is not specified and default member EKG1907I cannot be read (or not found), RODM uses the default values for all the customization parameters and an EKG1907I message appears following this message.

If a customization parameter is specified and the member name specified in this parameter cannot be read, RODM uses the default values for all the customization parameters and an EKG1907I message appears following this message.

- For the MODIFY command:

If RELOAD or 'RELOAD, MEMBER=' is specified without a member name, RODM reads default member EKG1907I. If RODM cannot read EKG1907I, RODM does not use the default values for all customization parameters and an EKG1907I message appears following this message.

If 'RELOAD, MEMBER=' is specified with a member name, RODM reads this member. If RODM cannot read this member, RODM does not use the default values for all customization parameters and an EKG1907I message appears following this message.

Operator response

Notify the system programmer.

System programmer response

Ensure that the member specified in the START job control language (JCL), START command, MODIFY command, or default member EKG1907I exists in the file specified by the EKG1907I DD statement in the START job control language (JCL).

EKG1908E **jobname: THE START TYPE IS NOT VALID.**

Explanation

The value of the TYPE parameter specified in the MVS START command or in the Resource Object Data Manager (RODM) START job control language (JCL) is not valid. The start type must be either WARM, W, COLD, C, or null (for the default of WARM).

Message Variables**jobname**

The RODM job name specified in the MVS START command.

System action

RODM ends.

Operator response

Enter the MVS START command with a valid start type or notify the system programmer.

System programmer response

Verify that the start type in the RODM START JCL is valid. See the NetView online help for information on the START command. See *IBM Z NetView Installation: Getting Started* for more information on the START JCL. Restart RODM.

EKG1909I	jobname: THE MVS MODIFY COMMAND commandparm IS SUCCESSFUL.
-----------------	---

Explanation

The Resource Object Data Manager (RODM) has successfully processed the MVS MODIFY command. The possible MODIFY command parameters are:

RELOAD
Reload the customization values during RODM processing.

STATAPI
Write the application programming interface (API) statistics to the RODM log as a type 8 record.

Message Variables

jobname
The RODM job name specified in the MVS START command.

commandparm
The name of the MODIFY command parameter.

System action

RODM continues processing.

EKG1910I	jobname: THE MVS MODIFY COMMAND commandparm IS ACCEPTED.
-----------------	---

Explanation

The Resource Object Data Manager (RODM) has successfully processed the function of the MODIFY command. The possible MODIFY command parameters are:

STATAPI
Output the application programming interface (API) statistics.

STATCELL

Output the statistics information of windows and segments usage.

Message Variables

jobname
The RODM job name specified in the MVS START command.

commandparm
The name of the MODIFY command parameter.

System action

RODM continues processing.

EKG1911I	jobname: THE MVS MODIFY COMMAND commandparm HAS FAILED.
-----------------	--

Explanation

The Resource Object Data Manager (RODM) has failed to process the function of the MODIFY command. The possible MODIFY command parameters are:

STATAPI
Output the application programming interface (API) statistics to the RODM log as a type 8 record.

STATCELL
Output the statistics information of windows and segments usage.

RELOAD
Reload the customization values during RODM processing.

Message Variables

jobname
The RODM job name specified in the MVS START command.

commandparm
The name of the MODIFY command parameter.

System action

RODM continues without processing the MODIFY command.

Operator response

Notify the system programmer.

System programmer response

Analyze the appropriate RODM log file to determine the source of the error. See the *IBM Z NetView Troubleshooting Guide* for information about RODM log record formats. See the NetView online help for information about the MODIFY command.

EKG1912E **jobname: THE RODM rodm IS
ALREADY ACTIVE.**

Explanation

The Resource Object Data Manager (RODM) with the specified name is already active. Two RODMs with the same name cannot run at the same time.

Message Variables

jobname

The RODM job name specified in the MVS START command.

rodm

The internal RODM name.

System action

RODM ends.

Operator response

Start RODM using a different RODM name, or notify the system programmer.

System programmer response

Ensure that an acceptable internal RODM name is selected. All internal RODM names must be unique within the MVS system. See the NetView online help for information on the START command. See *IBM Z NetView Installation: Getting Started* for more information about the START job control language (JCL).

EKG1913E **jobname: ERROR RETURN CODE =
retcode AND REASON CODE =
reason FROM THE INIT METHOD.**

Explanation

The INIT method encountered an error and set the return code and the reason code to the specified values.

Message Variables

jobname

The Resource Object Data Manager (RODM) job name specified in the MVS START command.

retcode

The INIT method return code.

reason

The INIT method reason code.

System action

RODM ends.

Operator response

Notify the system programmer.

System programmer response

Check the INIT method for the cause associated with the specified return and reason code.

- If the INIT method is supplied by IBM, see the *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide* for information about the meaning of INIT method return code and reason code values.
- If the INIT method is a load function INIT method check the output listing for details about the error. The SYSPRINT DD statement in the RODM start-up JCL defines the name of the output listing data set.
- If the INIT method is not supplied by IBM, check the INIT method for the cause associated with the specified return code and reason code.

Analyze the appropriate RODM log file to determine the source of the error. See the *IBM Z NetView Troubleshooting Guide* for information about RODM log record formats.

EKG1914E **jobname: THE RODM SUBSYSTEM
CANNOT BE LOCATED IN THE MVS
SYSTEM.**

Explanation

The required subsystem name EKGX cannot be found in the MVS subsystem name table.

Message Variables

jobname

The Resource Object Data Manager (RODM) job name specified in the MVS START command.

System action

RODM ends.

Operator response

Notify the system programmer.

System programmer response

Add the subsystem name entry, EKGX, to the IEFSSNxx member of SYS1.PARMLIB. Re-IPL MVS and restart RODM. See *IBM Z NetView Installation: Getting Started* for information about installing a RODM in MVS.

EKG1915E **jobname: THE MVS CROSS
MEMORY ENVIRONMENT CANNOT
BE ESTABLISHED.**

System action

RODM ignores the MODIFY command and continues processing the previous request.

Operator response

Retry the MODIFY command after RODM replies to the previous request.

EKG1920I **jobname: THE COUNTERS FOR API STATISTICS HAVE BEEN CLEARED.**

Explanation

The counters for temporary application programming interface statistics have been cleared after being written to the type 8 log record.

Message Variables

jobname

The Resource Object Data Manager (RODM) job name specified in the MVS START command.

System programmer response

Flush the RODM log and print it using the RODM log formatter.

EKG1922D **jobname: DEFAULTS ARE USED FOR SOME CUSTOMIZATION VALUES. ENTER '1' TO CONTINUE OR '2' TO TERMINATE.**

Explanation

The Resource Object Data Manager (RODM) has detected an error in the customization file. Message EKG1953I has been placed on the console for each customization parameter in error. You must choose to either continue initialization or to end.

Message Variables

jobname

The RODM job name specified in the MVS START command.

System action

RODM requests operator confirmation to either continue or end.

Operator response

Enter 1 to continue or 2 to end RODM. RODM does not continue until a valid response is entered.

System programmer response

If the reply is 2, correct the customization parameters in error. See the *IBM Z NetView Administration Reference* for information about the customization file parameters.

EKG1924I **jobname: THE CUSTOMIZATION FILE CANNOT BE OPENED.**

Explanation

The Resource Object Data Manager (RODM) cannot open the customization file because the customization file data definition (DD) name is not specified in the RODM START job control language (JCL).

Message Variables

jobname

The RODM job name specified in the MVS START command.

System action

RODM continues the initialization process without the customization file and uses default values for each parameter.

Operator response

Notify the system programmer.

System programmer response

If a customization file is desired, ensure that the desired customization file is specified for EKG1953I in the RODM START JCL. See the *IBM Z NetView Administration Reference* for information on defining the customization file.

EKG1925E **jobname: JCL EXEC STATEMENT PARAMETER FOR THE AUTOMATIC RESTART OPTION IS NOT VALID**

Explanation

The value supplied for the positional RODM parameter for automatic restart manager (ARM) registration was not valid.

Message Variables

jobname

The name assigned to RODM when it was started.

System action

RODM ends, instead of completing initialization.

System programmer response

Correct the parameter and restart RODM.

EKG1926E ***jobname:* JCL EXEC STATEMENT
PARAMETER FOR THE SYMBOL
SUBSTITUTION OPTION IS NOT
VALID**

Explanation

The value supplied for the positional RODM parameter for symbol substitution was not valid.

Message Variables

jobname

The name assigned to RODM when it was started.

System action

RODM ends, instead of completing initialization.

System programmer response

Correct the parameter and restart RODM.

EKG1927E ***jobname:* JCL EXEC STATEMENT
PARAMETER FOR THE ROUTE
CODE OPTION IS NOT VALID**

Explanation

The value supplied for the positional RODM parameter for route code was not valid.

Message Variables

jobname

The name assigned to RODM when it was started.

System action

RODM ends, instead of completing initialization.

System programmer response

Correct the parameter and restart RODM.

EKG1928E ***jobname:* THE RODM NAME
rodmname IS NOT VALID**

Explanation

The Resource Object Data Manager (RODM) name specified is not valid.

Message Variables

jobname

The Resource Object Data Manager (RODM) job name specified in the MVS START command.

rodmname

The input RODM name.

System action

RODM does not start.

Operator response

Notify the system programmer.

System programmer response

Change the RODM name. See the NetView online help for the format of RODM name.

EKG1929E ***jobname:* THE RODM NAME IS TOO
LONG**

Explanation

The Resource Object Data Manager (RODM) name specified is greater than eight characters.

Message Variables

jobname

The RODM job name specified in the MVS START command.

System action

RODM does not start.

Operator response

Notify the system programmer.

System programmer response

Change the RODM name. See the NetView online help for the format of RODM name.

EKG1930E ***jobname:* OPERATOR COMMAND
ENVIRONMENT CANNOT BE
SETUP. RETURN CODE IS *retcode*
FROM SYSTEM MACRO *macro*.**

Explanation

The Resource Object Data Manager (RODM) cannot establish the operator command environment for the operator MVS MODIFY command.

Message Variables

jobname

The RODM job name specified in the MVS START command.

retcode

The return code returned from the MVS system macro.

macro

The name of the MVS system macro.

System action

RODM ends.

Operator response

Notify the system programmer.

EKG1931E ***jobname:* MAIN TASK RECOVERY
ROUTINE CANNOT BE CREATED.
RETURN CODE IS *retcode* FROM
SYSTEM MACRO *macro*.**

Explanation

The Resource Object Data Manager (RODM) cannot create the error recovery routine for the main task.

Message Variables

jobname

The RODM job name specified in the MVS START command.

retcode

The return code returned from the MVS system macro.

macro

The name of the MVS system macro.

System action

RODM ends.

Operator response

Notify the system programmer.

EKG1932E ***jobname:* THE INIT METHOD NAME
IS TOO LONG.**

Explanation

The length of the RODM INIT method name specified in the Resource Object Data Manager (RODM) START command or in the RODM START job control language (JCL) is greater than eight characters.

Message Variables

jobname

The RODM job name specified in the MVS START command.

System action

RODM ends.

Operator response

Enter the MVS START command with the correct RODM INIT method name or notify the system

programmer. See the NetView online help for information on the MVS START command.

System programmer response

Verify that the RODM INIT method name is correct in the RODM START job control language (JCL). See the *IBM Z NetView Installation: Getting Started* for information about the RODM job.

EKG1933I ***jobname:* RODM *rodsm* CANNOT
ACCEPT THE MVS STOP
COMMAND.**

Explanation

You entered an MVS STOP command for the Resource Object Data Manager (RODM), but the RODM does not allow the MVS STOP command.

Message Variables

jobname

The RODM job name specified in the MVS START command.

rodsm

The internal RODM name.

System action

RODM rejects the MVS STOP command and continues processing.

EKG1934I ***jobname:* THE MVS MODIFY
COMMAND *commandparm* IS NOT
RECOGNIZED.**

Explanation

You entered an incorrect parameter in the MODIFY command.

Message Variables

jobname

The Resource Object Data Manager (RODM) job name specified in the MVS START command.

commandparm

The incorrect parameter specified in the MODIFY command.

System action

RODM rejects the MODIFY command and continues processing.

Operator response

Enter the RODM MVS MODIFY command again with correct parameters. Acceptable RODM MODIFY command parameters are:

- CHKPT
- LOGF
- LOGP
- LOGS
- LOGT
- RELOAD
- STATAPI
- STATCELL
- TERM

See the NetView online help for more information on the MVS MODIFY command parameters.

EKG1935E ***jobname: THE SECURITY CLASS***
class IS NOT ACTIVE.

Explanation

During Resource Object Data Manager (RODM) initialization, RODM detects that the specified security class is not active.

Message Variables

jobname

The RODM job name specified in the MVS START command.

class

The name of the security class.

System action

RODM ends.

Operator response

Notify the system programmer.

System programmer response

Verify that the correct security class name is specified in the SEC_CLASS parameter of the customization file. Verify that the correct security class name is defined and activated in the security system. See the *IBM Z NetView Administration Reference* for information about the customization file and the security system setup for RODM.

EKG1936E ***jobname: THE SECURITY CLASS***
class IS NOT DEFINED.

Explanation

During Resource Object Data Manager (RODM) initialization, RODM detects that the specified security class is not defined.

Message Variables

jobname

The RODM job name specified in the MVS START command.

class

The name of the security class.

System action

RODM ends.

Operator response

Notify the system programmer.

System programmer response

Verify that the correct security class name is specified in the SEC_CLASS parameter of the customization file. Verify that the correct security class name is defined and activated in the security system. See the *IBM Z NetView Administration Reference* for information about the customization file and the security system setup for RODM.

EKG1937I ***jobname: THE SECURITY SYSTEM***
IS NOT ACTIVE.

Explanation

During Resource Object Data Manager (RODM) initialization, RODM detects that there is no active security system available.

Message Variables

jobname

The RODM job name specified in the MVS START command.

System action

RODM continues to initialize. Because the security system is not active, RODM does not perform authority checking. Users obtain the highest authority level during API connection time.

Operator response

Determine if the security system is required for RODM operation. If so, notify the system programmer.

System programmer response

End RODM. Verify that the security system is installed and activated. Restart RODM.

EKG1938I ***jobname: THE SECURITY***
RESOURCE resource IS NOT
DEFINED IN THE SECURITY CLASS
class.

Explanation

The security resource name specified in the customization file is not defined in the security class for the security system.

Message Variables

jobname

The Resource Object Data Manager (RODM) job name specified in the MVS START command.

resource

The security resource name specified in the customization file.

class

The security class name specified in the customization file.

System action

RODM continues checking other security resources. If none of the security resources specified in the customization file or the default security resource name derived by the RODM name are defined under the specific security class, users cannot connect to RODM after the RODM initialization completes. Otherwise, only users defined in security resources can perform the associated services.

Operator response

Notify the system programmer.

System programmer response

Check the security system for the specific security class and the security resources under this specific security class. See the *IBM Z NetView Administration Reference* for information about customization file security resource name selection and the security system setup for a RODM.

EKG1939E **jobname: NONE OF THE SIX RODM SECURITY RESOURCES ARE DEFINED UNDER THE SECURITY CLASS class.**

Explanation

The Resource Object Data Manager (RODM) security resources are not defined in the security class. A minimum of one and a maximum of six RODM security resources can be defined for a security class in the security system.

Message Variables

jobname

The RODM job name specified in the MVS START command.

class

The security resource name specified in the customization file.

System action

RODM ends.

Operator response

Notify the system programmer.

System programmer response

Define the required security resources under the security class specified and restart RODM. See message EKG1938I for more information. See the *IBM Z NetView Administration Reference* for information about customization file security resource name selection and the security system setup for RODM.

EKG1940I **jobname: WARNING RETURN CODE = retcode AND REASON CODE = reason FROM THE INIT METHOD.**

Explanation

The INIT method returned the specified warning return code and reason code.

Message Variables

jobname

The Resource Object Data Manager (RODM) job name specified in the MVS START command.

retcode

The value of the return code.

reason

The value of the reason code.

System action

RODM continues processing.

Operator response

Notify the system programmer.

System programmer response

If the INIT method is supplied by IBM, see the *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide* for the specified return code and reason code. If the INIT method is not supplied by IBM, check the INIT method for the cause associated with the specified return code and reason code.

EKG1941E **jobname: THE RODM START JCL STEP LIBRARY CONTAINS AN**

**UNAUTHORIZED data set. RODM
IS TERMINATING.**

Explanation

Abend S047 occurred because a data set in the START JCL is not authorized program facility (APF) authorized.

Message Variables

jobname

The Resource Object Data Manager (RODM) job name specified in the MVS START command.

System programmer response

Ensure that all data sets in the STEPLIB are APF authorized.

**EKG1952I jobname: THE CUSTOMIZATION
FILE PARAMETER custparm IS
NOT VALID.**

Explanation

The Resource Object Data Manager (RODM) does not recognize the specified parameter in the customization file.

Message Variables

jobname

The RODM job name specified in the MVS START command.

custparm

The unrecognized parameter in the customization file.

System action

RODM continues processing.

Operator response

Notify the system programmer.

System programmer response

Correct the specified parameter in the customization file. See the *IBM Z NetView Administration Reference* for information about customization parameters.

**EKG1953I jobname: CUSTOMIZATION
PARAMETER custparm IS NOT
VALID. THE DEFAULT VALUE
defvalue IS USED.**

Explanation

The Resource Object Data Manager (RODM) uses the default value for the specified parameter in the

customization file because the value specified is not valid.

Message Variables

jobname

The RODM job name specified in the MVS START command.

custparm

The parameter in the customization file containing a value that is not valid.

defvalue

The default value that RODM uses.

System action

RODM uses the specified default value and continues to initialize. Message EKG1922D is displayed when RODM has completed analyzing the customization file.

Operator response

Notify the system programmer.

System programmer response

Determine whether to end RODM and reply to EKG1922D. See the *IBM Z NetView Administration Reference* for the valid customization parameter values. Restart RODM.

**EKG1954I jobname: CUSTOMIZATION
PARAMETER custparm HAS AN
INCORRECT VALUE AND IS
IGNORED.**

Explanation

During reload processing, the Resource Object Data Manager (RODM) detected that the value specified in the customization parameter is not valid. The original value for this parameter remains unchanged.

Message Variables

jobname

The RODM job name specified in the MVS START command.

custparm

The customization parameter in error.

System action

RODM ignores this parameter and continues processing the remaining parameters.

Operator response

Notify the system programmer.

System programmer response

Check the customization file member specified in the MODIFY command RELOAD, MEMBER= or EKG CUST if no member was specified in the MODIFY command. See the *IBM Z NetView Administration Reference* for the syntax of the customization parameters. Change the syntax of the customization parameter and use the MODIFY RELOAD command to reload the customization parameters if necessary.

EKG1955I *jobname:* '/'* APPEARS IN A COMMENT. A COMMENT DELIMITER MAY BE MISSING

Explanation

The customization member processing found a comment start delimiter within a comment.

Message Variables

jobname

The name assigned to RODM when it was started.

System action

Customization member processing continues.

Operator response

The operator has the option of using the parameters as they are, or terminating RODM by replying to message EKG1922D.

System programmer response

If necessary, correct the error in the customization member.

EKG1956I *jobname:* CUSTOMIZATION PARAMETER PROCESSING ENDED WHILE IN A COMMENT. A COMMENT DELIMITER MAY BE MISSING

Explanation

A comment start delimiter (/*) was found without a corresponding end delimiter (*/) at the time the customization member processing completed.

Message Variables

jobname

The name assigned to RODM when it was started.

System action

Customization member processing continues.

Operator response

The operator has the option of using the parameters as they are, or terminating RODM by replying to message EKG1922D.

System programmer response

If necessary, correct the error in the customization member.

EKG1960E *jobname:* THE RODM MODULE *module* CANNOT BE LOADED.

Explanation

The Resource Object Data Manager (RODM) cannot load the specified module into memory for one of these reasons:

- The load module cannot be found in the RODM load module library.
- The load module is not executable.
- Virtual storage is unavailable.

Message Variables

jobname

The RODM job name specified in the MVS START command.

module

The load module that cannot be loaded.

System action

RODM ends.

Operator response

Notify the system programmer.

System programmer response

Ensure that the module exists in the RODM load module libraries and can be executed. Ensure that the region size is adequate. Restart RODM.

EKG1961E *jobname:* LOAD FAILED FOR MODULE *modname*

Explanation

RODM was unable to load the identified module.

Message Variables

jobname

The name assigned to RODM when it was started.

modname

The name of the module RODM was trying to load.

System action

Dependent upon which module RODM was trying to load.

Operator response

Dependent upon the action RODM takes following the load failure. Notify the system programmer.

System programmer response

Ensure that required modules are available to RODM.

EKG1962E	<i>jobname: ARM REGISTRATION FAILED WITH RETURN CODE retcode, REASON CODE rescodes</i>
-----------------	---

Explanation

RODM attempted to register with automatic restart manager (ARM) and was unsuccessful.

Message Variables

jobname
The name assigned to RODM when it was started.

retcode
The IXCARM macro return code.

rescode
The IXCARM macro reason code.

System action

RODM processing continues.

System programmer response

If no ARM policy was active and restart capability is desired, activate an ARM policy and restart RODM. Otherwise, contact IBM Software Support.

EKG1963E	<i>jobname: ARM READY FAILED WITH RETURN CODE retcode, REASON CODE rescodes</i>
-----------------	--

Explanation

RODM was unsuccessful in notifying automatic restart manager (ARM) that it was ready.

Message Variables

jobname
The name assigned to RODM when it was started.

retcode
The IXCARM macro return code.

rescode
The IXCARM macro reason code.

System action

RODM processing continues.

System programmer response

Contact IBM Software Support.

EKG1964E	<i>jobname: ARM DEREGISTRATION FAILED WITH RETURN CODE retcode, REASON CODE rescodes</i>
-----------------	---

Explanation

During termination processing, RODM attempted to deregister from automatic restart manager (ARM) and was unsuccessful.

Message Variables

jobname
The name assigned to RODM when it was started.

retcode
The IXCARM macro return code.

rescode
The IXCARM macro reason code.

System action

RODM termination continues.

System programmer response

Contact IBM Software Support.

EKG1973E	<i>jobname: AN ERROR OCCURRED WHILE CREATING RODM SYSTEM CLASS class.</i>
-----------------	--

Explanation

An error occurred while creating the specified Resource Object Data Manager (RODM) system class.

Message Variables

jobname
The RODM job name specified in the MVS START command.

class
The class name that cannot be created.

System action

RODM ends.

Operator response

Notify the system programmer.

System programmer response

Analyze the appropriate RODM log file to determine the source of the error. See the *IBM Z NetView Troubleshooting Guide* for more information about RODM log record formats.

EKG1974E ***jobname*: AN ERROR OCCURRED WHILE CREATING RODM SYSTEM OBJECT *object* IN CLASS *class*.**

Explanation

An error occurred while creating the specified Resource Object Data Manager (RODM) system object in the specified class.

Message Variables

jobname

The RODM job name specified in the MVS START command.

object

The object name that cannot be created.

class

The class name containing the object that cannot be created.

System action

RODM ends.

Operator response

Notify the system programmer.

System programmer response

Analyze the appropriate RODM log file to determine the source of the error. See the *IBM Z NetView Troubleshooting Guide* for more information about RODM log record formats.

EKG1975E ***jobname*: AN ERROR OCCURRED WHILE CREATING RODM SYSTEM FIELD *field* IN CLASS *class*.**

Explanation

An error occurred while creating the specified Resource Object Data Manager (RODM) system field in the specified class.

Message Variables

jobname

The RODM job name specified in the MVS START command.

field

The field name that cannot be created.

class

The class name containing the field that cannot be created.

System action

RODM ends.

Operator response

Notify the system programmer.

System programmer response

Analyze the appropriate RODM log file to determine the source of the error. See the *IBM Z NetView Troubleshooting Guide* for more information about RODM log record formats.

EKG1976E ***jobname*: AN ERROR OCCURRED WHILE INITIALIZING RODM SYSTEM FIELD *fieldname* IN CLASS *classname*.**

Explanation

An error occurred while initializing the specified system class field.

Message Variables

jobname

The Resource Object Data Manager (RODM) job name specified in the MVS START command.

fieldname

The field name of the RODM class.

classname

The class name containing the field that cannot be created.

System action

RODM ends.

Operator response

Notify the system programmer.

System programmer response

Analyze the appropriate RODM log file to determine the source of the error. See the *IBM Z NetView Troubleshooting Guide* for information about RODM log record formats.

EKG1981E ***jobname*: THE QUIESCENCE TASK HAS TERMINATED.**

Explanation

The Resource Object Data Manager (RODM) main task detects that the quiescence subtask has abnormally ended because of an error.

Message Variables

jobname

The RODM job name specified in the MVS START command.

System action

RODM ends.

Operator response

Notify the system programmer.

System programmer response

Analyze the appropriate RODM log file to determine the source of the error. See the *IBM Z NetView Troubleshooting Guide* for information about RODM log record formats.

EKG1982E *jobname:* THE I/O TASK HAS TERMINATED.

Explanation

The Resource Object Data Manager (RODM) main task detects that the input/output subtask has abnormally ended because of an error.

Message Variables

jobname

The RODM job name specified in the MVS START command.

System action

RODM ends.

Operator response

Notify the system programmer.

System programmer response

Analyze the appropriate RODM log file to determine the source of the error. See the *IBM Z NetView Troubleshooting Guide* for information about RODM log record formats.

EKG1983E *jobname:* THE METHOD TASK HAS TERMINATED.

Explanation

The Resource Object Data Manager (RODM) main task detects that the method subtask has abnormally ended because of an error.

Message Variables

jobname

The RODM job name specified in the MVS START command.

System action

RODM ends.

Operator response

Notify the system programmer.

System programmer response

Analyze the appropriate RODM log file to determine the source of the error. See the *IBM Z NetView Troubleshooting Guide* for information about RODM log record formats.

EKG1984I *jobname:* THE TRANSACTION TASK HAS TERMINATED.

Explanation

The Resource Object Data Manager (RODM) main task detected that a transaction subtask has abnormally ended because of an error.

Message Variables

jobname

The RODM job name specified in the MVS START command.

System action

RODM continues processing. If all of the transaction tasks abend, RODM ends. The number of transaction tasks is specified in the customization file.

Operator response

Notify the system programmer.

System programmer response

Analyze the appropriate RODM log file to determine the source of the error. See the *IBM Z NetView Troubleshooting Guide* for information about RODM log record formats.

EKG1986I *jobname:* THE MESSAGE TASK HAS TERMINATED.

Explanation

The Resource Object Data Manager (RODM) main task detects the message subtask has abnormally ended because of an error.

Message Variables

jobname

The RODM job name specified in the MVS START command.

System action

All PL/I error messages are not written to the console or to the RODM log file. All RODM log records generated by UAPI return code 12 and reason code 212 are not written to the log file. RODM continues processing without this subtask.

Operator response

Notify the system programmer.

System programmer response

Analyze the appropriate RODM log file to determine the source of the error. See the *IBM Z NetView Troubleshooting Guide* for information about RODM log record formats.

EKG1987E *jobname:* THE TIMER TASK HAS TERMINATED.

Explanation

The Resource Object Data Manager (RODM) main task detects that the timer subtask has abnormally ended because of an error.

Message Variables

jobname

The RODM job name specified in the MVS START command.

System action

RODM ends.

Operator response

Notify the system programmer.

System programmer response

Analyze the appropriate RODM log file to determine the source of the error. See the *IBM Z NetView Troubleshooting Guide* for information about RODM log record formats.

EKG1988E *jobname:* THE CONSOLE TASK HAS TERMINATED.

Explanation

The Resource Object Data Manager (RODM) main task detects that the console subtask has abnormally ended because of an error.

Message Variables

jobname

The RODM job name specified in the MVS START command.

System action

RODM ends.

Operator response

Notify the system programmer.

System programmer response

Analyze the appropriate RODM log file to determine the source of the error. See the *IBM Z NetView Troubleshooting Guide* for information about RODM log record formats.

EKG1989E *jobname:* THE ALLOCATION TASK HAS TERMINATED.

Explanation

The Resource Object Data Manager (RODM) main task detects that the allocation subtask has abnormally ended because of an error.

Message Variables

jobname

The RODM job name specified in the MVS START command.

System action

RODM ends.

Operator response

Notify the system programmer.

System programmer response

Analyze the appropriate RODM log file to determine the source of the error. See the *IBM Z NetView Troubleshooting Guide* for information about RODM log record formats.

EKG1990E *jobname:* THE PL/I COMMON LIBRARY DOES NOT EXIST.

Explanation

The Resource Object Data Manager (RODM) requires the runtime library corresponding to the level of PL/I or LE/370 which was used to install RODM. This library cannot be located.

Message Variables

jobname

The RODM job name specified in the MVS START command.

System action

RODM ends.

Operator response

Notify the system programmer.

System programmer response

Ensure that the runtime library is installed and correctly specified in the RODM START job control language (JCL) or in the MVS link-list. See *IBM Z NetView Installation: Getting Started* for information about runtime library requirements for RODM.

EKG1991E ***jobname:* EXECUTION
ENVIRONMENT SUPPORT NOT
INSTALLED**

Explanation

The Resource Object Data Manager (RODM) was not installed with either the V2R3 PL/I or LE/370 feature. One of these features must be installed to support RODM. If V2R3 PL/I is chosen, you must also install the V2R1 C/370 feature if you have any methods written in C or plan to use GMFHS.

Message Variables

jobname

The RODM job name specified in the MVS START command.

System action

RODM ends.

Operator response

Notify the system programmer.

System programmer response

Install the RODM language environment support feature which corresponds to the level of PL/I or LE/370 on your system. See *IBM Z NetView Installation: Configuring Additional Components* for

information about runtime library requirements for RODM.

EKG1995E ***jobname:* MODULE NAME module
ABENDS WITH ABEND CODE
abcode - reason AT OFFSET offset.**

Explanation

The Resource Object Data Manager (RODM) abended during its initialization.

Message Variables

jobname

The RODM job name specified in the MVS START command.

module

The module name where the abnormal ending occurred.

abcode

The abend code that was returned.

reason

The reason code that was returned.

offset

The offset from the entry point to the abend position.

System action

RODM ends.

Operator response

Notify the system programmer.

System programmer response

Analyze the appropriate module to determine the source of the error. See the *IBM Z NetView Troubleshooting Guide* for information about the abend that occurred during initialization.

EKG1996E ***jobname:* A SEVERE ERROR HAS
CAUSED RODM TO ABNORMALLY
TERMINATE.**

Explanation

A severe error occurred during Resource Object Data Manager (RODM) initialization.

Message Variables

jobname

The RODM job name specified in the MVS START command.

System action

RODM ends.

Operator response

Notify the system programmer.

System programmer response

Analyze the appropriate RODM log file to determine the source of the error. See the *IBM Z NetView Troubleshooting Guide* for information about abnormal RODM endings.

EKG1998I	THE AUTHORITY CHECKING FOR THE RODM IS BYPASSED.
-----------------	---

Explanation

The user specified *TSTRODM as the security resource class name in the RODM customization file to bypass any authority checking for the Resource Object Data Manager (RODM).

System action

RODM continues initialization. RODM does not perform any authority checking because of the security resource class name specified in the RODM customization file. Users gain the highest authority level at connection.

System programmer response

If authority checking is desired, specify another security resource class name. See the *IBM Z NetView Administration Reference* for more details on how to define the RODM security class.

EKG1999I	jobname: THE SECURITY SYSTEM IS NOT INSTALLED.
-----------------	---

Explanation

The security system is not installed. All users who connect to the Resource Object Data Manager (RODM) obtain the highest authority level.

Message Variables

jobname

The RODM job name specified in the MVS START command.

System action

RODM continues initialization. Because the security system is not installed, RODM does not perform any authority checking. Users gain the highest authority level at connection time.

System programmer response

See the *IBM Z NetView Administration Reference* for information about the security system setup for RODM.

EKG2000I	jobname: CONNECT REQUEST FROM APPLICATION applname IS REJECTED WITH RC = retcode AND RS = rescode.
-----------------	---

Explanation

RODM cannot process the CONNECT request from the *applname*.

This message is also issued when the RODM loader runs and RODM security is not active, because the loader will first attempt to connect with a blank user ID. The connect request is rejected with RC=8 and RS=127. The loader will then automatically attempt to connect with a non-blank user ID. In this case, this message can be ignored.

Message Variables

jobname

The RODM job name specified in the MVS START command.

applname

The name of the application that connects to RODM.

retcode

The RODM return code.

rescode

The RODM reason code.

System action

The request fails and RODM continues.

Operator response

Notify the system programmer.

System programmer response

Review the return and reason codes provided by RODM. If the failure is caused by SAF definition, correct the definition. If the failure is caused by a RODM internal error, contact IBM Software Support.

EKG2300E	jobname: THE PL/I ENVIRONMENT CANNOT BE INITIALIZED.
-----------------	---

Explanation

The Resource Object Data Manager (RODM) cannot initialize the PL/I environment for the CONCURRENT_USERS and ASYNC_TASK parameters as specified in the customization file.

Message Variables

jobname

The RODM job name specified in the MVS START command.

System action

RODM ends.

Operator response

Notify the system programmer.

System programmer response

Determine whether there is a virtual storage shortage, or if the REGION parameter in the START job control language (JCL) is too small to hold the environment. See the *IBM Z NetView Administration Reference* for information on PLI_ISA, CONCURRENT_USERS, and ASYNC_TASKS in the customization file.

EKG2302E ***jobname: THE MESSAGE TASK CANNOT BE CREATED. RETURN CODE *retcode* IS RETURNED FROM SYSTEM MACRO *macro*.***

Explanation

The Resource Object Data Manager (RODM) cannot create the message task.

Message Variables

jobname

The RODM job name specified in the MVS START command.

retcode

The return code returned from the MVS system macro.

macro

The name of the MVS system macro.

System action

RODM ends.

Operator response

Notify the system programmer.

EKG2303E ***ONE ENVIRONMENT FOR THE RODM USER API COULD NOT BE REINITIALIZED. THE IDENTIFIER IS *identifier****

Explanation

An attempt was made to reinitialize an environment for the RODM user API, but it was not successful.

Message Variables

identifier

A number representing the particular environment.

System action

The number of concurrent users is lowered by one.

Operator response

Notify the system programmer.

System programmer response

Reinitialization of an environment for the RODM user API is usually attempted after an abend. Normally, the reinitialization is successful. This message indicates that the attempt failed.

If the identifier in the message is equal to twice the number of allowable concurrent users, a storage overlay might have occurred in the area allocated for the environment. RODM continues to run, but no longer attempts to use this environment. This can indicate some other problem, so you might want to take a dump and restart RODM when convenient.

If the identifier in the message is less than twice the number of allowable concurrent users, you can continue to allow RODM to run with a reduced number of concurrent users, unless there are not enough concurrent users left to support your system. Look in the RODM log to see if there are any other instances of this message. This will help you determine if more than one environment for the RODM user API has become unavailable.

EKG2304I ***jobname: THE *command_name* COMMAND IS COMPLETE.***

Explanation

A RODM command completed.

Message Variables

jobname

The RODM job name specified in the MVS START command.

command_name

The name of the command that was issued.

System action

RODM continues.

EKG2305I ***jobname: A RODM DUMP WAS PREVENTED BECAUSE THE RODM DUMP LIMIT IS EXCEEDED FOR APPROXIMATELY THE NEXT *num_of_minutes* MINUTES.***

Explanation

The DUMP_LIMIT specified in the customization member has been exceeded. No more dumps for RODM will be taken until *num_of_minutes* passes, or a DMPRESET command is issued.

Message Variables

jobname

The RODM job name specified in the MVS START command.

num_of_minutes

The number of minutes remaining until the next dump is allowed to be scheduled.

System action

RODM continues.

Operator response

To enable more dumps, issue the DMPRESET command using the MVS modify command. (F *jobname*,DMPRESET)

System programmer response

Investigate the prior dumps to determine possible error sources. Modify the DUMP_LIMIT keyword in the customization member if you wish to allow more dumps per time interval while debugging a problem.

EKG5001E ***jobname*: TRANSLATION WINDOW TABLE CANNOT BE INITIALIZED. RETURN CODE IS *retcode* FROM SYSTEM MACRO *macro*.**

Explanation

The Resource Object Data Manager (RODM) cannot initialize or create the translation window table. Possible causes are:

- The region size specified in the START job control language (JCL) is too small.
- Virtual storage is not sufficient.

Message Variables

jobname

The RODM job name specified in the MVS START command.

retcode

The return code returned from the MVS system macro.

macro

The name of the MVS system macro.

System action

RODM ends.

Operator response

Notify the system programmer.

System programmer response

Increase the region size in the RODM START JCL and restart RODM.

EKG5002E ***jobname*: DATA WINDOW TABLE CANNOT BE INITIALIZED. RETURN CODE IS *retcode* FROM SYSTEM MACRO *macro*.**

Explanation

The Resource Object Data Manager (RODM) cannot initialize or create the data window table. Possible causes are:

- The region size specified in the START job control language (JCL) is too small.
- Virtual storage is not sufficient.

Message Variables

jobname

The RODM job name specified in the MVS START command.

retcode

The return code returned from the MVS system macro.

macro

The name of the MVS system macro.

System action

RODM ends.

Operator response

Notify the system programmer.

System programmer response

Increase the region size in the RODM START JCL and restart RODM.

EKG5003E ***jobname*: DATA SPACE TABLE CANNOT BE INITIALIZED. RETURN CODE IS *retcode* FROM SYSTEM MACRO *macro*.**

Explanation

The Resource Object Data Manager (RODM) cannot initialize or create the data space table. Possible causes are:

- The region size specified in the START job control language (JCL) is too small.
- Virtual storage is not sufficient.

Message Variables

jobname

The RODM job name specified in the MVS START command.

retcode

The return code returned from the MVS system macro.

macro

The name of the MVS system macro.

System action

RODM ends.

Operator response

Notify the system programmer.

System programmer response

Increase the region size in the RODM START JCL and restart RODM.

EKG5004E	jobname: FIRST DATA SPACE CANNOT BE CREATED. RETURN CODE IS <i>retcode</i> FROM SYSTEM MACRO <i>macro</i>.
-----------------	---

Explanation

The Resource Object Data Manager (RODM) cannot create the first data space. Possible causes are:

- The region size specified in the START job control language (JCL) is too small.
- Virtual storage is not sufficient.
- You have the IEFUSI macro installed on your system. The IEFUSI macro is not supported for use with RODM.

Message Variables

jobname

The RODM job name specified in the MVS START command.

retcode

The return code returned from the MVS system macro.

macro

The name of the MVS system macro.

System action

RODM ends.

Operator response

Notify the system programmer.

System programmer response

Increase the region size in the RODM START JCL and restart RODM.

EKG5005E	jobname: RETURN CODE IS <i>retcode</i> FROM SYSTEM MACRO <i>macro</i>. TCB TOKEN UNAVAILABLE FOR FIRST DATA SPACE.
-----------------	---

Explanation

The Resource Object Data Manager (RODM) cannot obtain the TCB token when creating the first data space.

Message Variables

jobname

The RODM job name specified in the MVS START command.

retcode

The return code returned from the MVS system macro.

macro

The name of the MVS system macro.

System action

RODM ends.

Operator response

Notify the system programmer.

EKG5007E	jobname: RODM CANNOT BE STARTED AS A BATCH JOB.
-----------------	--

Explanation

The Resource Object Data Manager (RODM) cannot be started as a batch job. Therefore, RODM does not initialize.

Message Variables

jobname

The RODM job name specified in the MVS START command.

System action

RODM ends.

Operator response

Restart RODM as a started task. See the NetView online help for more information on the START command.

EKG5008I *jobname:* **THE FILE SPECIFIED BY DDNAME *ddname* IS TOO SMALL FOR A DATA WINDOW.**

Explanation

The data set specified by *ddname* is too small. Each checkpoint data set must be large enough to contain at least one 16 MB data window.

Message Variables

jobname

The Resource Object Data Manager (RODM) job name specified in the MVS START command.

ddname

The name of the file.

System action

RODM skips this file and continues searching for the next one.

System programmer response

Check and correct your EKGD00x checkpoint data set sizes.

If this error was generated because of your checkpoint data set size, you can avoid the error in the future by disabling the checkpoint function, or by ensuring that your checkpoint data sets are large enough.

To disable the checkpoint function, code CHECKPOINT_FUNCTION(NONE) in the customization file. The checkpoint function cannot be disabled if you attempt to warm start RODM. If you attempt to warm start RODM with CHECKPOINT_FUNCTION(NONE) coded in the customization file, RODM issues message EKG1953I and attempts to set the checkpoint function to the default value CHECKPOINT_FUNCTION(REQUEST).

If the checkpoint function is enabled, ensure that your checkpoint data sets are large enough. See the EKGSI101 sample for information about calculating the proper size for your checkpoint data sets.

Restart RODM.

EKG5009E *jobname:* **RODM IS FORCED BY THE OPERATOR.**

Explanation

The Resource Object Data Manager (RODM) detects that an operator MVS FORCE command has been entered.

Message Variables

jobname

The RODM job name specified in the MVS START command.

System action

RODM ends.

EKG5010E *jobname:* **RODM IS TERMINATING DUE TO CATASTROPHIC ERROR.**

Explanation

An abnormal error occurred within the Resource Object Data Manager (RODM) after it had been successfully initialized.

Message Variables

jobname

The RODM job name specified in the MVS START command.

System action

RODM ends.

Operator response

Notify the system programmer.

System programmer response

Analyze the appropriate RODM log file to determine the source of the error:

1. Verify the RODM start job control language (JCL).
2. Verify the attributes of the checkpoint data sets.
3. Increase the region size for RODM if it is too small.
4. Verify the cell-pool size.
5. Verify that all the RODM modules are located in the STEPLIB data set.
6. Verify that the checkpoint data sets are used for the RODM warm start.

EKG5011I *jobname:* **THE NUMBER OF CHECKPOINT FILES USED BY RODM IS *numberparm*.**

Explanation

This number specifies the number of EKGDnnn checkpoint files coded in the RODM start procedure.

If the checkpoint function is enabled, this number is one less than the number shown in the EKGD nnn file name in message IEC161I. If the checkpoint function is not enabled (CHECKPOINT_FUNCTION(NONE) is coded in the customization file), the number is zero (0). The number is also 0 if the checkpoint function is enabled, but RODM was unable to access one or more of the checkpoint files (DD names EKGMAST, EKGTRAN, or EKG $Dnnn$).

Message Variables

jobname

The Resource Object Data Manager (RODM) job name specified in the MVS START command.

numberparm

The number of EKG $Dnnn$ checkpoint files coded in the RODM start procedure.

System action

RODM continues.

EKG7003I *jobname:* THE USER *userid* HAS REQUESTED A CHECKPOINT OF RODM *rodm*.

Explanation

The specified user requests a checkpoint of the Resource Object Data Manager (RODM) data cache.

Message Variables

jobname

The RODM job name specified in the MVS START command.

userid

The user application ID requesting checkpoint.

rodm

The internal RODM name.

System action

RODM checkpoints the master window, the translation window, and the data windows. RODM rejects all user API requests until both the master-window and translation-window checkpoints. After the translation window has taken a checkpoint, message EKG1115I is issued and user API requests are allowed while the data windows are taking a checkpoint.

System programmer response

See the *IBM Z NetView Administration Reference* for information about the RODM checkpoint function.

EKG7004I *jobname:* THE USER *userid* HAS REQUESTED A TERMINATION

WITH CHECKPOINT OF RODM *rodm*.

Explanation

The specified user requests that the Resource Object Data Manager (RODM) take a checkpoint and end.

Message Variables

jobname

The RODM job name specified in the MVS START command.

userid

The user requesting the termination with checkpoint.

rodm

The internal RODM name.

System action

RODM checkpoints the master window, the translation window, and the data windows. RODM ends.

EKG7005I *jobname:* THE USER *userid* HAS REQUESTED A TERMINATION WITHOUT CHECKPOINT OF RODM *rodm*.

Explanation

The specified user requests that the Resource Object Data Manager (RODM) end immediately without taking a checkpoint.

Message Variables

jobname

The RODM job name specified in the MVS START command.

userid

The user application ID requesting the termination without checkpoint.

rodm

The internal RODM name.

System action

RODM ends.

EKG8001E A CLOSE FAILURE OCCURRED ON THE FILE FOR DDNAME *ddname*.

Explanation

The MVS CLOSE macro failed to close the specified file.

Message Variables

ddname

The name on the data definition statement.

System action

If this message is received on the console, a return code of 12 is returned and processing stops. Otherwise, a return code of 8 is returned and processing stops. The system attempts to close all other files to ensure a clean termination. The loader ends.

Operator response

Notify the system programmer.

System programmer response

Determine from the accompanying system messages where the failure occurred and correct the problem.

EKG8002E	THE LENGTH <i>length</i> OF THE LIST OF ALTERNATE DDNAMES IS NOT VALID.
-----------------	--

Explanation

The list of alternate DD statement names has a length of zero, or the length is not a multiple of 16.

Message Variables***length***

The length of the DD statement name list.

System action

If this message is received on the console, a return code of 12 is returned and processing stops. Otherwise, a return code of 8 is returned and processing stops.

Operator response

Notify the system programmer.

System programmer response

Ensure that the length of the alternate DD statement name list is not 0 and is a multiple of 16. See *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide* for more information.

EKG8003E	AN OPEN FAILURE OCCURRED ON THE FILE FOR DDNAME <i>ddname</i>.
-----------------	---

Explanation

The MVS OPEN macro cannot open the specified file.

Message Variables**ddname**

The name on the data definition statement.

System action

If this message is received on the console, a return code of 12 is returned and processing stops. Otherwise, a return code of 8 is returned and processing stops.

Operator response

Notify the system programmer.

System programmer response

Determine from the accompanying system messages where the failure occurred and correct the problem.

EKG8004E	THE RECORD LENGTH OF <i>length</i> IS NOT VALID FOR DDNAME <i>ddname</i>.
-----------------	--

Explanation

The specified data control block logical record length (LRECL) is not valid for the specified data set.

Message Variables***length***

The logical record length of the data control block.

ddname

The name of the data set being opened.

System action

If this message is received on the console, a return code of 12 is returned and processing stops. Otherwise, a return code of 8 is returned and processing stops.

Operator response

Notify the system programmer.

System programmer response

Determine the correct LRECL for the data set and reallocate the data set. See *IBM Z NetView Installation: Configuring Graphical Components* for information on reallocating data sets using CNMSJ004.

EKG8005E	THE RECORD FORMAT IS NOT VALID FOR THE DDNAME <i>ddname</i>.
-----------------	---

Explanation

The data control block record format (RECFM) is not valid for this data set.

Message Variables

ddname

The name of the data set being opened.

System action

If this message is received on the console, a return code of 12 is returned and processing stops. Otherwise, a return code of 8 is returned and processing stops.

Operator response

Notify the system programmer.

System programmer response

Determine the correct RECFM for the data set and reallocate the data set. See *IBM Z NetView Installation: Configuring Graphical Components* for information on reallocating data sets using CNMSJ004.

EKG8006E	A READ FAILURE OCCURRED ON THE FILE FOR DDNAME <i>ddname</i>.
-----------------	--

Explanation

There is a failure in an attempt to read a record from the specified data set.

Message Variables

ddname

The name of the data set that was being read.

System action

If this message is received on the console, a return code of 12 is returned and processing stops. Otherwise, a return code of 8 is returned and processing stops.

Operator response

Notify the system programmer.

System programmer response

Determine from the accompanying system messages where the failure occurred and correct the problem.

EKG8007E	A WRITE FAILURE OCCURRED ON THE FILE FOR DDNAME <i>ddname</i>.
-----------------	---

Explanation

There is a failure in an attempt to write a record to the specified data set.

Message Variables

ddname

The name of the data set that was being written.

System action

If this message is received on the console, a return code of 12 is returned and processing stops. Otherwise, a return code of 8 is returned and processing stops.

Operator response

Notify the system programmer.

System programmer response

Determine from the accompanying system messages where the failure occurred and correct the problem.

EKG8008E	THE MEMBER <i>membername</i> WAS NOT FOUND IN THE PDS FOR DDNAME <i>ddname</i>.
-----------------	--

Explanation

The member cannot be located in the specified file.

Message Variables

membername

The name of the member that cannot be found.

ddname

The name of the partitioned data set that was searched.

System action

If this message is received on the console, a return code of 12 is returned and processing stops. Otherwise, a return code of 8 is returned and processing stops.

Operator response

Notify the system programmer.

System programmer response

Determine if the member exists in the specified partitioned data set (PDS). If it does not, create a PDS or refer to a PDS that contains the member.

EKG8009E	THE OBJECT INDEPENDENT METHOD <i>methodname</i> FAILED TO START. REFER TO RODM RETURN/REASON CODE <i>return/reasoncode</i>.
-----------------	--

Explanation

The Resource Object Data Manager (RODM) failed to invoke the specified object-independent method.

Message Variables

methodname

The object-independent method that cannot be invoked.

return/reasoncode

The return or reason code from RODM.

System action

The message is issued to the operator's console with a return code of 12 and processing stops.

Operator response

Notify the system programmer.

System programmer response

Determine from the RODM return or reason code in the message where the failure occurred and correct the problem. See *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide* for the RODM return and reason codes.

EKG8010E	INSUFFICIENT VIRTUAL STORAGE IS AVAILABLE WHEN SEARCHING THE DIRECTORY OF THE FILE FOR DDNAME <i>ddname</i>.
-----------------	---

Explanation

Insufficient virtual storage was available when a search was performed on the directory of the specified file.

Message Variables**ddname**

The name on the data definition statement.

System action

A return code of 8 is returned and processing stops.

System programmer response

Determine from the accompanying system messages why there is not enough storage and correct the problem.

EKG8011E	THE DATA EXTENT BLOCK WAS NOT VALID WHEN SEARCHING THE DIRECTORY OF THE FILE FOR DDNAME <i>ddname</i>.
-----------------	---

Explanation

A search of the directory of the file and the data extent block (DEB) was not valid.

Message Variables**ddname**

The name on the data definition statement.

System action

A return code of 8 is returned and the RODM load function stops processing data.

System programmer response

Determine from the accompanying system messages why the DEB is not valid and correct the problem.

EKG8012E	A PERMANENT I/O ERROR OCCURRED DURING THE DIRECTORY SEARCH OF THE FILE FOR DDNAME <i>ddname</i>.
-----------------	---

Explanation

During a directory search of the file, a permanent I/O error occurred.

Message Variables**ddname**

The name on the data definition statement.

System action

A return code of 8 is returned and processing stops.

System programmer response

Determine from the accompanying system messages where the I/O error occurred and correct the problem.

EKG8050W	EXPECTED PARAMETER COLD OR WARM NOT SPECIFIED AS START PARAMETER ON JOB INVOCATION. COLD IS ASSUMED AND PROCESSING CONTINUES.
-----------------	--

Explanation

When the Resource Object Data Manager (RODM) load utility is invoked as an RODM initialization method, a parameter is passed indicating whether a cold or warm start is invoked.

System action

If this parameter is not supplied or the value is not valid, and the RODM load utility is invoked, cold is assumed and processing continues.

System programmer response

Verify whether the correct parameter is specified. If the problem persists, contact IBM Software Support.

**EKG8101E THE PARAMETER TABLE NAME IS
REQUIRED IN THE CONTROL
TABLE, BUT IT IS NOT FOUND.**

Explanation

The parameter mapping table name is not found when the control table is searched.

System action

If the table is not supplied and the Resource Object Data Manager (RODM) load function is invoked, a return code of 8 is issued and the RODM load function stops processing.

System programmer response

Determine if the table name was specified in the control table. If not, specify the table name. The control file exists as partitioned data set (PDS) member EKGCTABL in data definition (DD) EKGLUTB.

**EKG8102E THE NAME OF THE INSTALL
METHOD TABLE IS REQUIRED IN
THE CONTROL TABLE, BUT IT IS
NOT FOUND.**

Explanation

The specified installation method table name is not found when the control table is searched.

System action

If the table name is not supplied and the Resource Object Data Manager (RODM) load function is invoked, a return code of 8 is issued and processing ends.

System programmer response

Determine if the table name was specified in the control table. If not, specify the table name. The control file exists as partitioned data set (PDS) member EKGCTABL in data definition (DD) EKGLUTB.

**EKG8103I LOADER HAS RECONNECTED TO
RODM.**

Explanation

A previous Resource Object Data Manager (RODM) load utility request or a previous user application had already successfully connected to RODM using your current user application ID and remains connected to RODM. The RODM load utility has now successfully connected to RODM using the same user application ID.

System action

Processing continues. When the RODM load utility disconnects from the RODM, all prior applications that were connected to the RODM with your user application ID are disconnected.

System programmer response

This message is a warning that more than one user application is requesting RODM transactions from the same user application ID. While RODM allows multiple connections for a given user application ID, it is your responsibility to ensure the integrity of the user application ID environment. See *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide* for more information about RODM connections and user application IDs.

**EKG8171E AN EXPECTED KEYWORD WAS
NOT SUPPLIED.**

Explanation

A keyword is missing from the input parameter list.

System action

A return code of 8 is returned and processing stops.

System programmer response

Correct the input parameter list.

**EKG8172E A KEYWORD VALUE IS NOT
SUPPLIED FOR THE KEYWORD
keyword.**

Explanation

A keyword value is missing on the input parameter list for the specified keyword.

Message Variables

keyword

The input keyword for which the value is missing.

System action

A return code of 8 is returned and processing stops.

System programmer response

Determine which keyword is missing a value and correct the input parameter list.

**EKG8173E THE MAXIMUM LENGTH *length* IS
EXCEEDED FOR KEYWORD
keyword.**

Explanation

The length of the input keyword is greater than the maximum valid length of a keyword.

Message Variables

length

The maximum length of a keyword.

keyword

The input keyword with the incorrect length.

System action

A return code of 8 is returned and processing stops.

System programmer response

Determine which keyword length is not valid and correct the input parameter list.

EKG8174E THE MAXIMUM LENGTH *length* IS EXCEEDED FOR KEYWORD VALUE *keyword*.

Explanation

The length of the input keyword is greater than the maximum valid length of a keyword.

Message Variables

length

The maximum length of a keyword.

keyword

The input keyword value that was too long.

System action

A return code of 8 is returned and processing stops.

System programmer response

Determine from the Resource Object Data Manager (RODM) message which keyword value length is not valid. Correct the input parameter list.

EKG8175E THE PARAMETER LIST IS NOT COMPLETE.

Explanation

Additional keywords and their associated values are expected, but the end of the input is reached.

System action

A return code of 8 is returned and processing stops.

System programmer response

Determine from the Resource Object Data Manager (RODM) message why the parameter list is incomplete. Correct the input parameter list.

EKG8176E THE KEYWORD OR KEYWORD VALUE IS MISSING FOR *parameter*.

Explanation

A keyword or keyword value is missing from the parameter list.

Message Variables

parameter

The parameter that is missing a keyword or a keyword value.

System action

A return code of 8 is returned and processing stops.

System programmer response

Determine from the accompanying system messages which keyword or keyword value is missing and correct the problem.

EKG8177W THE PARAMETER MAPPING TABLE *table* IS OUT OF SEQUENCE. THE DEFAULT *default* IS IGNORED.

Explanation

The order of records in the parameter table is not valid.

Message Variables

table

The name of the parameter mapping table.

default

The keyword default value that was found out of sequence in the parameter mapping table.

System action

A return code of 4 is returned and processing continues.

System programmer response

Determine from the accompanying system message which default value is out of sequence. Validate the parameter mapping table sequence by checking the sequence. The sequence is: KEYWORD, KEYWORD ABBREVIATION, KEYWORD VALUE, KEYWORD VALUE ABBREVIATION, KEYWORD DEFAULT.

**EKG8178W THE PARAMETER MAPPING TABLE
table IS OUT OF SEQUENCE. THE
KEYWORD VALUE keyword IS
IGNORED.**

Explanation

The order of records in the parameter mapping table is not valid.

Message Variables**table**

The name of the parameter mapping table.

keyword

The keyword value record that was found out of sequence in the parameter mapping table.

System action

A return code of 4 is returned and processing continues.

System programmer response

Determine from the accompanying system messages which keyword value record is out of sequence and validate the parameter mapping table. The sequence is: KEYWORD, KEYWORD ABBREVIATION, KEYWORD VALUE, KEYWORD VALUE ABBREVIATION, KEYWORD DEFAULT, KEYWORD.

**EKG8179W THE PARAMETER MAPPING TABLE
table HAS A DEFAULT VALUE FOR
A REQUIRED KEYWORD keyword.
THE DEFAULT VALUE IS IGNORED.**

Explanation

The keyword is required and does not require a default value.

Message Variables**table**

The name of the parameter mapping table.

keyword

The keyword that was present in the parameter mapping table.

System action

A return code of 4 is returned and processing continues.

System programmer response

Delete the default value record from the parameter mapping table.

**EKG8180E THE KEYWORD VALUE keyword IS
NOT VALID.**

Explanation

The specified keyword value is not valid. The default value from the parameter mapping table is used.

Message Variables**keyword**

The input keyword value or a passed parameter by a module invocation.

System action

A return code of 8 is returned and processing stops.

System programmer response

Correct the input keyword value.

**EKG8181E AN ERROR OCCURRED IN THE
PARAMETER MAPPING TABLE
table. THE MISSING INTERNAL
PROCESSING KEYWORD IS
keyword.**

Explanation

The required internal processing keyword has not been set. An error occurs in the parameter mapping table.

Message Variables**table**

The name of the parameter mapping table.

keyword

The name of the internal processing keyword.

System action

A return code of 8 is returned and processing stops.

System programmer response

Determine from the Resource Object Data Manager (RODM) message which internal processing keyword is missing and add it to the parameter mapping table.

**EKG8182E THE REQUIRED KEYWORD
keyword IS NOT SPECIFIED.**

Explanation

The specified keyword is required and is not available.

Message Variables**keyword**

The name of the missing keyword.

System action

A return code of 8 is returned and processing stops.

System programmer response

Determine from the Resource Object Data Manager (RODM) message which required keyword is missing. Correct the input parameter list.

**EKG8183E AN ERROR OCCURRED IN THE
PARAMETER MAPPING TABLE
table THE REQUIRED DEFAULT
VALUE FOR keyword IS MISSING.**

Explanation

A required default value was not available in the parameter mapping table.

Message Variables

table

The name of the parameter mapping table.

keyword

The name of the keyword that is missing a default value.

System action

A return code of 8 is returned and processing stops.

System programmer response

Determine from the Resource Object Data Manager (RODM) message which default value is missing. Add the missing value to the parameter mapping table or specify a valid keyword value on the input parameter list.

**EKG8184E THE INPUT KEYWORD VALUE
keyword IS NOT VALID.**

Explanation

The specified keyword value is not valid. The input keyword value does not have an equivalent entry in the parameter mapping table.

Message Variables

keyword

The name of the input keyword value that is not valid.

System action

A return code of 8 is returned and processing stops.

System programmer response

Determine from the Resource Object Data Manager (RODM) message which keyword value is not valid. Correct the input parameter list.

**EKG8185E AN ERROR OCCURRED IN THE
PARAMETER MAPPING TABLE
table. THE INTERNAL KEYWORD
VALUE keyword IS NOT VALID.**

Explanation

The specified internal keyword value in the parameter mapping table is not valid.

Message Variables

table

The name of the parameter mapping table.

keyword

The name of the keyword value that is not valid in the parameter mapping table.

System action

A return code of 8 is returned and processing stops.

Operator response

Notify the system programmer.

System programmer response

Determine from the Resource Object Data Manager (RODM) message which keyword value is not valid and correct the parameter mapping table.

**EKG8186E PARAMETER LIST KEYWORD
keyword IS NOT VALID.**

Explanation

The parameter list keyword specified is not valid.

Message Variables

keyword

The keyword in error.

System action

A return code of 8 is returned and processing stops.

System programmer response

Correct the input keyword.

**EKG8187E THE KEYWORD keyword IS
DUPLICATED IN THE INPUT
PARAMETER LIST.**

Explanation

The input parameter list contains more than one occurrence of the keyword.

Message Variables

keyword

The input keyword that appears more than once on the input parameter list.

System action

A return code of 8 is returned and processing stops.

System programmer response

Correct the input parameter list.

EKG8201W	THE NUMBER OF TOKENS IN THE STATEMENT EXCEEDS THE MAXIMUM.
-----------------	---

Explanation

The number of tokens given in the input syntax is greater than the allowed maximum. The maximum number of tokens allowed is 10.

System action

A return code of 4 is returned and processing continues.

System programmer response

Correct the input syntax.

EKG8202W	AN UNEXPECTED END OF THE INPUT SYNTAX FILE <i>file</i> OCCURRED.
-----------------	---

Explanation

The syntax within the named file is not complete when the end of the file is reached.

Message Variables

file

The name of the file containing the input syntax.

System action

A return code of 4 is returned and processing continues.

System programmer response

Correct the input syntax.

EKG8203W	THE START OF THE DBCS STRING IS NOT INDICATED.
-----------------	---

Explanation

When reading the syntax within a file, a shift-in character was encountered, but shift-out to double-byte character set (DBCS) was not.

System action

A return code of 4 is returned and processing continues.

System programmer response

Correct the input syntax.

EKG8204E	PROCESSING SYNTAX IN FILE <i>file</i> TERMINATED DUE TO ERROR.
-----------------	---

Explanation

The processing syntax contains an error and was ended.

Message Variables

file

The name of the file that contains the syntax in error.

System action

A return code of 8 or greater is returned.

System programmer response

Correct the syntax. See *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide* for more information about syntax.

EKG8205W	INCOMPLETE DATA FOR <i>keyword</i> OCCURRED.
-----------------	---

Explanation

For the syntax keyword, more data is required but none was supplied.

Message Variables

keyword

The keyword for the data that is incomplete.

System action

A return code of 4 is returned and processing continues.

System programmer response

Correct the syntax. If you need help correcting the syntax, see the NetView online help.

EKG8206W **THE SYNTAX PRECEDING THE
keyword KEYWORD IS NOT VALID.**

Explanation

The syntax preceding the specified keyword is not valid.

Message Variables

keyword

The keyword for the syntax that is not valid.

System action

A return code of 4 is returned and processing continues.

Operator response

Notify the system programmer.

System programmer response

Correct the syntax. If you need help correcting the syntax, see the NetView online help.

EKG8207W **A VALID MODIFIER VALUE IS
REQUIRED FOR THE ATTRIBUTE
VALUE.**

Explanation

The type of modification to the attribute value must be stated correctly.

System action

A return code of 4 is returned and processing continues.

System programmer response

Set the modifier to the desired value.

EKG8208W **A SEMI-COLON IS EXPECTED
FOLLOWING keyword.**

Explanation

A semicolon is expected as an indicator of the end of a token, but is not found.

Message Variables

keyword

The keyword that is missing a semicolon.

System action

A return code of 4 is returned and processing continues.

System programmer response

Correct the syntax.

EKG8210W **THE KEYWORD keyword IS
ALREADY SPECIFIED.**

Explanation

The named keyword has already been specified in the input data.

Message Variables

keyword

The keyword that is specified.

System action

A return code of 4 is returned and processing continues.

System programmer response

Correct the syntax.

EKG8211W **THE PUBLIC AND PRIVATE
KEYWORDS ARE NOT
COMPATIBLE.**

Explanation

A field can only be public or private, not both.

System action

A return code of 4 is returned and processing continues.

System programmer response

Remove one of the keywords so the field is defined as either PUBLIC or PRIVATE.

EKG8212W **THE ATTRIBUTE DEFINITION LIST
IS STILL ACTIVE.**

Explanation

The attribute definition list is still being processed, and must not be called again before processing is complete.

System action

A return code of 4 is returned and processing continues.

System programmer response

Correct the input data so that the attribute definition list is not called again before processing is complete.

**EKG8213W A VALID STATEMENT IS NOT
ACTIVE FOR THE KEYWORD
keyword.**

Explanation

For the specified keyword, the appropriate processing has not begun.

Message Variables

keyword

The keyword for the statement that is not active.

System action

A return code of 4 is returned and processing continues.

System programmer response

Correct the input data so that the appropriate processing is called for the specified keyword.

**EKG8214W THE QUALIFIED NAME SHOULD
NOT APPEAR IN THE ATTRIBUTE
DEFINITION LIST.**

Explanation

The attribute name is the same as the qualified name. The qualified name cannot be specified as an attribute name.

System action

A return code of 4 is returned and processing continues.

System programmer response

Correct the attribute name. See *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide* for more information about attribute names.

**EKG8215W THE INITIAL ATTRIBUTE VALUE
FOR THE INIT KEYWORD IS
MISSING.**

Explanation

The INIT keyword must precede an attribute initial value, but cannot be found.

System action

A return code of 4 is returned and processing continues.

System programmer response

Correct the attribute name structure.

**EKG8216W A PARENTHESIS MISMATCH HAS
OCCURRED.**

Explanation

The parentheses have not been set correctly. An opening or closing parenthesis is missing.

System action

A return code of 4 is returned and processing continues.

System programmer response

Find the mismatch and correct the problem.

**EKG8217W THE VALUE FOR KEYWORD
keyword IS NOT VALID OR IS
MISSING.**

Explanation

The given keyword must have a value associated with it. This value is either not valid or missing.

Message Variables

keyword

The keyword whose value is missing or not valid.

System action

A return code of 4 is returned and processing continues.

System programmer response

Find the specified assignment and set the correct number of occurrences.

**EKG8218W THIS ASSIGNMENT SYMBOL
symbol APPEARS MORE THAN
ONCE.**

Explanation

The assignment symbol must only appear one time.

Message Variables

symbol

The symbol is either '=' or '::='.

System action

A return code of 4 is returned and processing continues.

System programmer response

Find the specified assignment symbols and set the symbol only once.

**EKG8219W THIS ASSIGNMENT SYMBOL
symbol IS MISSING.**

Explanation

The specified assignment symbol is expected in the syntax but is missing.

Message Variables

symbol

The symbol is either '=' or '::='.

System action

A return code of 4 is returned and processing continues.

System programmer response

Find the place where the assignment symbol is to occur and correct the syntax.

**EKG8220W THE *insert* OF THE ATTRIBUTE IS
MISSING.**

Explanation

The specified attribute's value is missing.

Message Variables

insert

The descriptor of the piece of syntax that is missing. The descriptor is TYPE, NAME, or VALUE.

System action

A return code of 4 is returned and processing continues.

Operator response

Notify the system programmer.

System programmer response

Determine the attribute syntax that is missing and correct the syntax.

**EKG8221W THE *keyword* KEYWORD
STATEMENT IS MISSING.**

Explanation

The statement for the specified keyword is missing.

Message Variables

keyword

The keyword that is missing.

System action

A return code of 4 is returned and processing continues.

System programmer response

Determine which statement is missing and correct the syntax.

**EKG8222W AN UNMATCHED END STATEMENT
WAS ENCOUNTERED.**

Explanation

The end statement was encountered before any syntax was processed.

System action

A return code of 4 is returned and processing continues.

Operator response

Notify the system programmer.

System programmer response

Determine the location of the error and correct the end syntax.

**EKG8223W THE RODM DATA TYPE IS
MISSING OR IS NOT VALID.**

Explanation

A valid data type is not supplied for the particular attribute.

System action

A return code of 4 is returned and processing continues.

Operator response

Notify the system programmer.

System programmer response

Insert a valid data type for this attribute.

**EKG8224W EXTRANEIOUS DATA APPEARS IN
THE ATTRIBUTE DEFINITION.**

Explanation

The data specified in the attribute definition is of unknown type or form.

System action

A return code of 4 is returned and processing continues.

Operator response

Notify the system programmer.

System programmer response

Find the data that is not valid and correct the problem.

EKG8225W	AN ATTRIBUTE VALUE CANNOT BE SUPPLIED FOR THIS ATTRIBUTE TYPE <i>attribute</i>.
-----------------	--

Explanation

An attribute value is not valid for the specified attribute type.

Message Variables

attribute

The attribute type.

System action

A return code of 4 is returned and processing continues.

Operator response

Notify the system programmer.

System programmer response

Correct the input syntax so that no value is supplied for the specified attribute type.

EKG8226W	A QUOTE IS MISSING FROM THE BEGINNING OR END OF THE STRING.
-----------------	--

Explanation

A single quotation mark exists without a corresponding quotation mark to make a pair.

System action

A return code of 4 is returned and processing continues.

System programmer response

Correct the input syntax so that all quotation marks are matched.

EKG8227W	THE END OF DOUBLE BYTE CHARACTER SET (DBCS) STRING NOT INDICATED.
-----------------	--

Explanation

A shift-in character does not follow a shift-out character on the same line.

System action

A return code of 4 is returned and processing continues.

System programmer response

Correct the input to contain a valid DBCS string within the bounds of a single input line.

EKG8228W	THE DOUBLE BYTE CHARACTER SET (DBCS) STRING IS COMPOSED OF AN UNEVEN NUMBER OF SINGLE BYTE CHARACTERS.
-----------------	---

Explanation

The number of single bytes between shift-out (X'0E') and shift-in (X'0F') characters is not a multiple of two.

System action

A return code of 4 is returned and processing continues.

System programmer response

Correct the input to contain a valid DBCS character string.

EKG8251E	RODM LOADER PRIMITIVE STATEMENT <i>primitive</i> HAS FAILED. REFER TO RODM RETURN/ REASONCODE <i>retcode/reason</i>.
-----------------	---

Explanation

The Resource Object Data Manager (RODM) API call to perform the RODM function on the primitive statement failed, and a return or reason code was returned.

Message Variables

primitive

The name of the RODM primitive statement that has failed.

retcode/reason

The return or reason code issued by RODM.

System action

A return code of 8 is returned and processing stops.

System programmer response

Determine from the accompanying system messages where the error occurred and correct the problem. See *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide* for more information on return codes and reason codes.

EKG8252E	RODM LOADER PRIMITIVE STATEMENT <i>primitive</i> HAS BEEN SPECIFIED WITH AN INCORRECT NUMBER OF TOKENS.
-----------------	--

Explanation

The number of tokens specified in the primitive statement is not valid.

Message Variables

primitive

The name of the RODM primitive statement that was specified.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues. In both cases the current primitive statement is parsed.

System programmer response

Correct the primitive statement to reflect a valid number of tokens.

EKG8253E	RODM LOADER PRIMITIVE STATEMENT <i>primitive</i> CONTAINS SYNTAX ERRORS.
-----------------	---

Explanation

Syntax errors were found during primitive statement handler processing.

Message Variables

primitive

The name of the RODM primitive statement containing the syntax errors.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned

and processing continues. In both cases, the current primitive statement is parsed.

System programmer response

Determine from the accompanying messages where the error occurred, and correct the problem. See associated messages EKG8254E and EKG8256E for information.

EKG8254E	THE <i>string</i> IS NOT VALID FOR <i>token</i>.
-----------------	---

Explanation

The character string is not valid for the token name being specified. If token name is DataType or SubFieldType, the character string must be a Resource Object Data Manager (RODM) Data or SubFieldType. If the token name is ClassName, ObjectName, FieldName, or SubFieldName, the character string must:

- Begin with an alphanumeric character
- Be of a valid length for the name being specified
- Contain alphanumeric characters or special characters for the name being specified

Strings embedded in quotation marks must:

- Begin and end with a single quotation mark
- Represent each embedded single quotation mark by a pair of single quotation marks

See *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide* for more information about token names and character strings.

Message Variables

string

The input string that is not valid.

token

The descriptor of the character string that is in error: ClassName, ObjectName, FieldName, SubFieldName, DataType, or SubFieldType.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues.

System programmer response

Correct the syntax in error and retry the request.

EKG8255E	THE PRIMITIVE STATEMENT CANNOT BE RESOLVED.
-----------------	--

Explanation

The primitive statement cannot be processed.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing is halted. If the severity parameter is WARNING, a return code of 4 is returned and processing continues. In both cases, the current primitive statement is parsed.

System programmer response

Determine which primitive statement is unresolved and correct the problem. Other messages that clarify errors in the statement might accompany this one.

EKG8256E	THE VALUE <i>value</i> IS NOT VALID FOR THE RODM DATA TYPE <i>datatype</i>.
-----------------	--

Explanation

The specified value is not valid for the Resource Object Data Manager (RODM) data type.

Message Variables

value

The input value that is not valid.

datatype

The RODM data type for the value expression that is not valid.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues.

System programmer response

Correct the value expression that is not valid.

EKG8257E	AN UNEXPECTED END STATEMENT WAS FOUND WHILE PARSING <i>token</i> TOKEN.
-----------------	--

Explanation

The end of the token was prematurely encountered.

Message Variables

token

The token type for which the unexpected end was found.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues. In both cases the current primitive statement is parsed.

System programmer response

Determine where the end occurred from the accompanying system messages and correct the problem.

EKG8258I	THE <i>primitive</i> PRIMITIVE STATEMENT COMPLETED SUCCESSFULLY.
-----------------	---

Explanation

The Resource Object Data Manager (RODM) load function primitive statement, represented by *primitive*, processed successfully.

Message Variables

primitive

The name of the primitive statement.

System action

A return code of 0 is returned and processing continues.

EKG8259E	THE <i>primitive</i> PRIMITIVE STATEMENT WAS NOT SUCCESSFUL.
-----------------	---

Explanation

The Resource Object Data Manager (RODM) load utility primitive statement, represented by *primitive*, was not processed successfully.

Message Variables

primitive

The name of the primitive statement.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing will continue. In both cases, the current primitive statement continues to be parsed.

System programmer response

See the associated messages to determine the reasons for failure. Make modifications in the

definition syntax files if syntax or other definition problems exist.

**EKG8260E THIS *datatype* DATA TYPE IS NOT
VALID FOR THIS *primitive*
PRIMITIVE STATEMENT.**

Explanation

The given data type is not valid in the context of this primitive statement.

Message Variables

datatype

The name of the data type that is not valid in this context.

primitive

The name of the primitive statement.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing will continue. In both cases, the current primitive statement continues to be parsed.

System programmer response

Use a valid data type in conjunction with the desired primitive statement.

**EKG8261I RODM LOADER VERIFICATION
LOGIC IS NOT PERFORMED FOR
THE *primitive* PRIMITIVE
STATEMENT.**

Explanation

Verification cannot be performed for the specified primitive statement.

Message Variables

primitive

The name of the primitive statement.

System action

A return code of 0 is returned and processing continues.

**EKG8501E THE CLASS NAME *class* IS NOT
VALID.**

Explanation

The class name specified in the primitive statement is not valid. This message is issued as a result of Resource Object Data Manager (RODM) returning a reason code of 86.

Message Variables

class

The RODM class name that is not valid.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues.

System programmer response

Use a valid RODM class name in the syntax.

**EKG8502E THE PARENT CLASS NAME
parentclass DOES NOT EXIST.**

Explanation

The parent class name specified in the primitive statement is not found in the parent class name list.

Message Variables

parentclass

The parent class that does not exist.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues.

System programmer response

Use a valid class name for the parent class in the syntax.

**EKG8503E THE CLASS NAME *class* DOES NOT
EXIST.**

Explanation

The Resource Object Data Manager (RODM) class name specified in the primitive statement is not found in the class name list.

Message Variables

class

The RODM class that does not exist.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues.

System programmer response

Correct the input syntax to include a valid RODM class name.

**EKG8504E THE PARENT NAME FOR THE
CLASS NAME *class* IS INCORRECT.**

Explanation

The Resource Object Data Manager (RODM) class name specified in the primitive statement points to the wrong parent class.

Message Variables

class

The RODM class for which the parent name is incorrect.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues.

System programmer response

Correct the input syntax to include a valid parent/child relationship.

**EKG8505E THE CLASS NAME *class* ALREADY
EXISTS.**

Explanation

The Resource Object Data Manager (RODM) class name specified in the primitive statement already exists in the class name list.

Message Variables

class

The RODM class that already exists.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues. This message is accompanied by message EKG8535, which details the return and reason codes from RODM.

System programmer response

Correct the input syntax to process a valid RODM class name.

**EKG8506E THE FIELD NAME *field* IS NOT
VALID.**

Explanation

The Resource Object Data Manager (RODM) field name specified in the primitive statement is not valid.

Message Variables

field

The RODM field name that is not valid.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues. A reason code of 91 is returned with this message.

System programmer response

Correct the input syntax to process a valid RODM field name.

**EKG8507E THE FIELD *field* DOES NOT EXIST
OR IS NOT LOCALLY DEFINED.**

Explanation

The Resource Object Data Manager (RODM) has indicated that the specified field is not created under the specified class.

Message Variables

field

The field name specified on the primitive statement that does not exist or is not locally defined.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues.

System programmer response

Correct the primitive syntax.

**EKG8508E THE FIELD NAME *field* DOES NOT
EXIST.**

Explanation

The Resource Object Data Manager (RODM) field name specified in the primitive statement does not exist in the field name list.

Message Variables

field

The name of the field that does not exist.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues. Reason codes 56 and 92 are returned with this message.

System programmer response

Correct the input syntax to contain a valid RODM field name.

EKG8509E THE DATA TYPE DOES NOT MATCH THAT OF THE FIELD.

Explanation

The Resource Object Data Manager (RODM) data type specified in the primitive statement does not match the data type of the field.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues. Reason codes 66, 92 and 83 are returned with this message.

System programmer response

Correct the input syntax to contain a valid RODM data type for the supplied value in the primitive statement.

EKG8510E THE FIELD NAME *field* ALREADY EXISTS.

Explanation

The Resource Object Data Manager (RODM) field name specified in the primitive statement already exists in the field name list.

Message Variables

field

The name of the field that already exists.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues. Reason codes 7 and 92 are returned with this message.

System programmer response

Correct the input syntax so that it contains a valid RODM field name.

EKG8511E THE FIELD NAME *field* IS NOT PRIVATE.

Explanation

The Resource Object Data Manager (RODM) field name specified in the primitive statement is not private. This name is specified as public in the field name list.

Message Variables

field

The name of the field that is not private.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues. This message is accompanied by message EKG8535, which details the return and reason codes from RODM.

System programmer response

Correct the input syntax to specify the correct private or public attribute for this field.

EKG8512E THE SUBFIELD *subfield* IS NOT VALID.

Explanation

The Resource Object Data Manager (RODM) subfield name specified in the primitive statement is not valid.

Message Variables

subfield

The name of the subfield that is not valid.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues. This message is accompanied by message EKG8535, which details the return and reason codes from RODM.

System programmer response

Correct the input syntax to specify a valid RODM subfield name. The subfield can contain one of the following: VALUE, PREV_VALUE, TIMESTAMP, CHANGE, QUERY, or NOTIFY.

EKG8513E THE SUBFIELD *subfield* DOES NOT EXIST.

Explanation

The Resource Object Data Manager (RODM) subfield name specified in the primitive statement is not found in the subfield list.

Message Variables

subfield

The name of the subfield that does not exist.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues. This message is accompanied by message EKG8535, which details the return and reason codes from RODM.

System programmer response

Correct the input syntax to specify a valid RODM subfield name. The subfield can have the value of VALUE, PREV_VALUE, TIMESTAMP, CHANGE, QUERY, or NOTIFY.

EKG8514E	THE SUBFIELD <i>subfield</i> ALREADY EXISTS.
-----------------	---

Explanation

The Resource Object Data Manager (RODM) subfield name specified in the primitive statement already exists in the subfield list.

Message Variables

subfield

The name of the subfield that already exists.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues. This message is accompanied by message EKG8535, which details the return and reason codes from RODM.

System programmer response

Correct the input syntax to specify a valid RODM subfield name. The subfield can contain one of the following: VALUE, PREV_VALUE, TIMESTAMP, CHANGE, QUERY, or NOTIFY.

EKG8515E	THE OBJECT <i>object</i> IS NOT VALID.
-----------------	---

Explanation

The Resource Object Data Manager (RODM) object specified in the primitive statement is not valid.

Message Variables

object

The RODM object that is not valid.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues. This message is accompanied by message EKG8535, which details the return and reason codes from RODM.

System programmer response

Correct the input syntax to specify a valid RODM object.

EKG8516E	THE OBJECT <i>object</i> DOES NOT EXIST.
-----------------	---

Explanation

The Resource Object Data Manager (RODM) object specified in the primitive statement is not found in the object list.

Message Variables

object

The RODM object that does not exist.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues. This message is accompanied by message EKG8535, which details the return and reason codes from RODM.

System programmer response

Correct the input syntax to specify a valid RODM object.

EKG8517E	THE OBJECT <i>object</i> ALREADY EXISTS.
-----------------	---

Explanation

The Resource Object Data Manager (RODM) object specified in the primitive statement already exists in the object list.

Message Variables

object

The RODM object that already exists.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues. This message is accompanied by message EKG8535, which details the return and reason codes from RODM.

System programmer response

Determine the valid object name for the field and correct the input syntax.

EKG8518E	THE SPECIFIED TYPED VALUE IS NOT VALID.
-----------------	--

Explanation

The Resource Object Data Manager (RODM) TYPED value is not valid.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues. This message is accompanied by message EKG8535, which details the return and reason codes from RODM.

System programmer response

Determine the valid data type for the field being changed and correct the input syntax.

EKG8519E	THE SPECIFIED TYPED VALUE DOES NOT MATCH THAT OF THE FIELD.
-----------------	--

Explanation

The Resource Object Data Manager (RODM) TYPED value does not match the TYPED value of the field specified.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues. This message is accompanied by message EKG8535, which details the return and reason codes from RODM.

System programmer response

Correct the input syntax to specify a valid RODM value that matches the supplied field.

EKG8520E	THE FIELDS ARE NOT LINKED.
-----------------	-----------------------------------

Explanation

The Resource Object Data Manager (RODM) link fields specified in the primitive statement are not linked.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues.

System programmer response

If the fields are required to be linked, rerun the load function as an OPERATION=LOAD.

EKG8521E	THE OBJECTS ARE ALREADY LINKED.
-----------------	--

Explanation

A link already exists between the Resource Object Data Manager (RODM) objects specified. The requested link function cannot be performed.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues. This message is accompanied by message EKG8535, which details the return and reason codes from RODM.

System programmer response

Correct the input syntax to link only RODM objects that are not already linked.

EKG8523E	THE CLASS <i>class</i> HAS BOTH CLASS AND OBJECT CHILDREN AND CANNOT BE DELETED.
-----------------	---

Explanation

The Resource Object Data Manager (RODM) class specified for deletion has both class and object children and will not be deleted.

Message Variables

class

The RODM class that will not be deleted.

System action

NOT_A_CLASS RODM load function returned a reason code of 90 which causes the job to have an overall return code of either:

**Return Code
Meaning**

- 4**
The severity parameter is WARNING and processing continues.
- 8**
The severity parameter is ERROR and processing stops.

System programmer response

Correct the input syntax to delete only classes that have no children.

EKG8524E	THE CLASS <i>class</i> HAS CLASS CHILDREN AND CANNOT BE DELETED.
-----------------	---

Explanation

The Resource Object Data Manager (RODM) class specified for deletion has children and cannot be deleted.

Message Variables

class
The RODM class specified for deletion.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues. This message is accompanied by message EKG8535, which details the return and reason codes from RODM.

System programmer response

Correct the input syntax to delete only classes that have no children.

EKG8525E	THE CLASS <i>class</i> HAS OBJECT CHILDREN AND CANNOT BE DELETED.
-----------------	--

Explanation

The Resource Object Data Manager (RODM) class specified for deletion has objects and cannot be deleted.

Message Variables

class
The RODM class that cannot be deleted.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues. This message is accompanied by message EKG8535, which details the return and reason codes from RODM.

System programmer response

Correct the input syntax to delete only classes that have no children.

EKG8526E	THE OBJECT <i>object</i> HAS LINKS TO OTHER OBJECTS AND CANNOT BE DELETED.
-----------------	---

Explanation

The links to other Resource Object Data Manager (RODM) objects must be disconnected for the specified deletion to occur.

Message Variables

object
The name of the RODM object with links.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues. This message is accompanied by message EKG8535, which details the return and reason codes from RODM.

System programmer response

Correct the input syntax to delete only RODM objects that have no links to other RODM objects.

EKG8527E	THE FIELD <i>field</i> CANNOT BE DELETED BECAUSE THE CLASS OR A DESCENDENT CLASS HAS OBJECTS.
-----------------	--

Explanation

The specified field cannot be deleted because an object exists on the class of the field or on another class that is a descendent of the field.

Message Variables

field
The name of the Resource Object Data Manager (RODM) field that cannot be deleted.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues. This message is accompanied by message EKG8535, which details the return and reason codes from RODM.

System programmer response

Correct the input syntax to delete only RODM field names belonging to a class with no objects.

EKG8528E THE FIELD *field* IS ALREADY SET TO ITS INHERITED VALUE.

Explanation

The Resource Object Data Manager (RODM) field value is already set to the inherited value.

Message Variables

field

The field name set to the inherited value.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues. This message is accompanied by message EKG8535, which details the return and reason codes from RODM.

System programmer response

Correct the input syntax to no longer set this field to its inherited value.

EKG8530E THE VALUE OF THE FIELD *field* IS NOT INHERITED.

Explanation

The value of the specified field has not been inherited from its primary parent. Either the field was created on the class specified on the primitive, or the value has been changed.

Message Variables

field

The field name specified on the primitive.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues.

Operator response

Notify the system programmer.

System programmer response

Correct the primitive so that the value of the field is the same as its inherited value.

EKG8531E THE VALUE FOR THE SUBFIELD *subfield* IS NOT INHERITED.

Explanation

The value of the specified subfield has not been inherited from its primary parent. Either the subfield was created on the class specified on the primitive, or the value has been changed.

Message Variables

subfield

The subfield whose value was not inherited.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues.

System programmer response

Correct the input syntax to specify a valid value for the RODM subfield.

EKG8532E NO LINKS EXIST BETWEEN THE SPECIFIED OBJECTS.

Explanation

The links between the two specified objects either do not exist or have been deleted.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues. This message is accompanied by message EKG8535, which details the return and reason codes from RODM.

System programmer response

Correct the input syntax to reference two objects with a link already established.

EKG8533E THE SPECIFIED DATA TYPE DOES NOT MATCH THAT OF THE SUBFIELD.

Explanation

The data type specified on the primitive statement is not the data type of the Resource Object Data Manager (RODM) subfield.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues.

System programmer response

Correct the input syntax of the primitive statement to match the data type of the RODM subfield.

EKG8534E	THE SPECIFIED TYPED VALUE DOES NOT MATCH THAT OF THE SUBFIELD.
-----------------	---

Explanation

The TYPED value specified on the primitive statement is not the TYPED value of the Resource Object Data Manager (RODM) subfield.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues.

System programmer response

Correct the input syntax of the primitive statement to match the TYPED value with that of the RODM subfield.

EKG8535E	THE API CALL TO RODM FAILED, WITH RETURN/REASON CODE <i>retcode/reason</i>.
-----------------	--

Explanation

The API call to the Resource Object Data Manager (RODM) failed. A return or reason code is issued.

Message Variables

retcode/reason

The return or reason code issued by RODM.

System action

A return code of 8 is returned and processing stops.

System programmer response

Check the meaning of the reason code supplied. See *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide* for more information on return and reason codes.

EKG8536E	THE FIELD NAME <i>field</i> IS NOT LOCALLY DEFINED.
-----------------	--

Explanation

The Resource Object Data Manager (RODM) field (or subfield of the field) was not created on the specified class, but was inherited from its primary parent.

Message Variables

field

The field that is not locally defined.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues.

System programmer response

Correct the input syntax to reference a valid RODM field name.

EKG8537E	THE OBJECT NAMES ARE ALREADY LINKED.
-----------------	---

Explanation

Links exist between the specified Resource Object Data Manager (RODM) objects.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues.

EKG8538E	THE SUBFIELD <i>subfield</i> CANNOT BE DELETED BECAUSE THE CLASS HAS OBJECTS.
-----------------	--

Explanation

Objects of a class must be deleted before a subfield of that class can be deleted.

Message Variables

subfield

The name of the Resource Object Data Manager (RODM) subfield.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues. This message is accompanied by message EKG8535, which details the return and reason codes from RODM.

System programmer response

Correct the input syntax to delete the subfields.

EKG8541E THE FIELD NAME *field* IS LOCALLY DEFINED.

Explanation

The specified field is not inherited, because it is locally defined.

Message Variables

field
The field that is locally defined.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues. This message is accompanied by message EKG8535, which details the return and reason codes from RODM.

System programmer response

Correct the input syntax to reference a valid Resource Object Data Manager (RODM) field name.

EKG8542E THE DATA TYPE FOR THE REVERT FUNCTION IS NOT VALID.

Explanation

The revert function cannot be used for fields (or subfields of the field) of data type OBJECTLINK or OBJECTLINKLIST.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues. This message is accompanied by message EKG8535, which details the return and reason codes from RODM.

System programmer response

Correct the input syntax by not using the revert function for OBJECTLINK or OBJECTLINKLIST fields or subfields.

EKG8543E THE REVERT FUNCTION IS NOT VALID FOR THE REQUIRED FIELD *field*.

Explanation

The revert function cannot be specified for required fields.

Message Variables

field
The required field that is not valid in the revert function.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues. This message is accompanied by message EKG8535, which details the return and reason codes from RODM.

System programmer response

Correct the input syntax to remove required fields.

EKG8544E THE REVERT FUNCTION IS NOT VALID FOR THE SUBFIELD *subfield*.

Explanation

The revert function cannot be used with certain subfields, such as NOTIFY, TIMESTAMP, and PRE_VALUE.

Message Variables

subfield
The subfield that is not valid in the revert function.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues. This message is accompanied by message EKG8535, which details the return and reason codes from RODM.

System programmer response

Correct the input syntax to specify a valid subfield that can be inherited.

**EKG8546E THE SUBFIELD *subfield* CANNOT
BE CREATED FOR RODM
REQUIRED FIELDS.**

Explanation

The specified subfield cannot be created for any required or system fields.

Message Variables***subfield***

The subfield that cannot be created.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues. This message is accompanied by message EKG8535, which details the return and reason codes from RODM.

System programmer response

Correct the input syntax to reference valid subfields for the required fields.

**EKG8547E AN OBJECT NAME CANNOT BE
LINKED TO OR UNLINKED FROM
ITSELF.**

Explanation

Identical object names cannot be linked or unlinked.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues. This message is accompanied by message EKG8535, which details the return and reason codes from RODM.

System programmer response

Correct the input syntax to link or unlink object names.

**EKG8548E THE DATA TYPE FOR THE LINK OR
UNLINK IS NOT VALID.**

Explanation

The specified data type is not valid for a link or unlink function. The valid data types are OBJECTLINK and OBJECTLINKLIST.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues. This message is accompanied by message EKG8535, which details the return and reason codes from RODM.

System programmer response

Correct the input syntax to specify valid data types.

**EKG8549E THE PARENT CLASS *class* HAS
OBJECT CHILDREN.**

Explanation

The Resource Object Data Manager (RODM) parent class has objects.

Message Variables***class***

The class with object children.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues. This message is accompanied by message EKG8535, which details the return and reason codes from RODM.

System programmer response

Correct the input syntax to reference a parent class that has no objects.

**EKG8550E THE METHOD *method* IS A NULL
METHOD.**

Explanation

The specified method is a null module because it has previously been deleted by an unsuccessful module refresh.

Message Variables***method***

The name of the method that is null.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues. This message is accompanied by message EKG8535, which details the return and reason codes from RODM.

System programmer response

Refresh the method and retry the request. If the request fails after you refresh the method, delete the method and then install it again.

**EKG8552E THE DATA TYPE OF THE FIELD
field IS NOT VALID FOR INVOKING
A METHOD.**

Explanation

To invoke a method, a field must be specified and the data type must be MethodSpec.

Message Variables

field

The name of the field specified.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues. This message is accompanied by message EKG8535, which details the return and reason codes from RODM.

System programmer response

Correct the input syntax to specify a data type of MethodSpec.

**EKG8553E THE METHOD *method* CANNOT BE
INVOKED MORE THAN ONCE.**

Explanation

The method can only be called once.

Message Variables

method

The method that is being called more than once.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues. A reason code of 64 is returned with this message.

System programmer response

Correct the input syntax to call a method only once.

**EKG8554E THE METHOD *method* IS NOT
INSTALLED.**

Explanation

The method you called is not installed.

Message Variables

method

The method that is not installed.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues. This message is accompanied by message EKG8535, which details the return and reason codes from RODM.

System programmer response

Either add the method to the install method table or correct the input syntax to call an installed method.

**EKG8555E THE METHOD *method* HAS BEEN
DELETED.**

Explanation

The method has been deleted.

Message Variables

method

The method that has been deleted.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues. This message is accompanied by message EKG8535, which details the return and reason codes from RODM.

System programmer response

Either add the method to the install method table or correct the input syntax to call an installed method.

**EKG8556E THE CLASS NAME *class* HAS NOT
BEEN DELETED.**

Explanation

The Resource Object Data Manager (RODM) class in the primitive statement still exists in the class name list.

Message Variables

class

The name of the class that still exists.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues. This message is accompanied by message EKG8535, which details the return and reason codes from RODM.

System programmer response

Either correct the input syntax to reference the correct class name or perform an OPERATION=LOAD to delete the specified class.

EKG8557E THE OBJECT NAME *object* HAS NOT BEEN DELETED.

Explanation

The Resource Object Data Manager (RODM) object in the primitive statement still exists in the object name list.

Message Variables

object

The name of the object that still exists.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues. This message is accompanied by message EKG8535, which details the return and reason codes from RODM.

System programmer response

Either correct the input syntax to reference the correct object or perform an OPERATION=LOAD to delete the specified object.

EKG8558E THE FIELD NAME *field* HAS NOT BEEN DELETED.

Explanation

The Resource Object Data Manager (RODM) field in the primitive statement still exists in the field name list.

Message Variables

field

The name of the field that still exists.

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues. This message is accompanied by message EKG8535, which details the return and reason codes from RODM.

System programmer response

Either correct the input syntax to reference the correct field name or perform an OPERATION=LOAD to delete the specified field.

EKG8559E THE SUBFIELD *subfield* HAS NOT BEEN DELETED.

Explanation

The Resource Object Data Manager (RODM) subfield in the primitive statement still exists in the subfield list.

Message Variables

subfield

The name of the subfield.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues. This message is accompanied by message EKG8535, which details the return and reason codes from RODM.

System programmer response

Either correct the input syntax to reference the correct subfield or perform an OPERATION=LOAD to delete the specified subfield. The subfield can be either PREV_VALUE, TIMESTAMP, CHANGE, QUERY, or NOTIFY.

EKG8560E SUBFIELDS CANNOT BE DELETED FROM REQUIRED OR SYSTEM FIELDS.

Explanation

Subfields created by the Resource Object Data Manager (RODM) cannot be deleted by user applications.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues. This message is accompanied by message EKG8535, which details the return and reason codes from RODM.

System programmer response

Correct the input syntax so that there is not an attempt to delete system-created subfields.

EKG8561E THE SUBFIELD VALUE CANNOT BE DELETED.

Explanation

The subfield VALUE cannot be deleted.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues. This message is accompanied by message EKG8535, which details the return and reason codes from RODM.

System programmer response

Correct the input syntax so that the subfield VALUE is not deleted.

EKG8562E	THE CLASS <i>class</i> HAS NO OBJECT CHILDREN.
-----------------	---

Explanation

The primary parent class specified has no object children. The operation is not possible.

Message Variables

class

The name of the class with no object children.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues. This message is accompanied by message EKG8535, which details the return and reason codes from RODM.

System programmer response

Correct the input syntax to reference a parent class that has objects.

EKG8563E	REQUIRED OR RODM PREDEFINED FIELDS CANNOT BE DELETED.
-----------------	--

Explanation

Required or Resource Object Data Manager (RODM) predefined fields cannot be deleted by user applications.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues. This message is accompanied by message EKG8535, which details the return and reason codes from RODM.

System programmer response

Correct the input syntax so that there is not an attempt to delete required RODM or system fields.

EKG8564E	THE DATA TYPE <i>datatype</i> IS NOT VALID FOR THE CHANGE SUBFIELD FUNCTION.
-----------------	---

Explanation

Subfields cannot be changed for fields of data type OBJECTLINK or OBJECTLINKLIST.

Message Variables

datatype

The data type that is not valid.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues. This message is accompanied by message EKG8535, which details the return and reason codes from RODM.

System programmer response

Correct the input syntax by not changing subfields for data types OBJECTLINK or OBJECTLINKLIST.

EKG8565E	THE SUBFIELDS OF REQUIRED FIELDS CANNOT BE CHANGED.
-----------------	--

Explanation

Required subfields cannot be changed by user applications.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues. This message is accompanied by message EKG8535, which details the return and reason codes from RODM.

System programmer response

Remove the input syntax that involves changing required subfields.

EKG8566E	THE FUNCTION IS NOT VALID FOR SUBFIELD <i>subfield</i>.
-----------------	--

Explanation

The function being performed by this primitive statement is not permitted for the specified subfield.

Message Variables

subfield

The name of the subfield.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues. This message is accompanied by message EKG8535, which details the return and reason codes from RODM.

System programmer response

Correct the input syntax that is performing the function on the specified subfield. See *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide* for the correct subfield types.

EKG8567E	THE METHOD <i>method</i> HAS NOT BEEN INSTALLED. REFER TO THE RODM RETURN/REASON CODE <i>retcode/reason</i>.
-----------------	---

Explanation

The specified method is not installed. A Resource Object Data Manager (RODM) return or reason code is returned.

Message Variables

method

The name of the method that cannot be created.

retcode/reason

The return or reason code returned by RODM.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues.

System programmer response

Determine from the accompanying RODM return or reason code where the failure occurred and correct the problem. See *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide* for the return and reason codes.

EKG8568W	THE METHOD <i>method</i> HAS NOT BEEN INSTALLED BECAUSE IT ALREADY EXISTS.
-----------------	---

Explanation

The specified method cannot be installed because it already exists.

Message Variables

method

The name of the method that already exists.

System action

A return code of 4 is returned and processing continues.

System programmer response

Ensure that the method already exists.

EKG8569E	THE SUBSTITUTION CANNOT TAKE PLACE. THE VALUE WAS NOT PREVIOUSLY USED IN THE SYNTAX.
-----------------	---

Explanation

The input syntax contains an asterisk (*) to indicate that the previous value is to be substituted; however no previous value exists.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues.

System programmer response

Correct the input syntax by removing asterisks (*) in cases where no previous values exist for substitution and replacing them with valid names.

EKG8570E	THE FIELD NAME <i>field</i> IS NOT PUBLIC.
-----------------	---

Explanation

The requested operation cannot be performed on the specified field because it is a private field.

Message Variables

field

The name of the field that is not public.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues. This message is

accompanied by message EKG8535, which details the return and reason codes from RODM.

System programmer response

Correct the input syntax by removing references to the specified private field.

EKG8571E	PARENT CLASS NAME <i>class</i> HAS CLASS CHILDREN.
-----------------	---

Explanation

An attempt was made to create an object under the specified parent class, but the parent class already has class children. A parent class can have either class children or object children, but not both.

Message Variables

class

The parent class that already has class children.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues. This message is accompanied by message EKG8535, which details the return and reason codes from RODM.

System programmer response

Either remove the Create Object request, or ensure that the specified parent class has no class children before attempting to create an object under that class.

EKG8572E	THE TARGET CLASS CANNOT BE DELETED. SOME CLASS AND/OR OBJECT CHILDREN STILL EXIST.
-----------------	---

Explanation

The forced deletion of the target class is unsuccessful for the FORCE_NOT_A_CLASS RODM load function primitive statement because some class or object children cannot be force deleted. Forced deletion of all class and object children is necessary before the target class can be deleted. Note that some class or object children might have been successfully deleted.

System action

FORCE_NOT_A_CLASS RODM load function returned a reason code of 90 which causes the job to have an overall return code of either:

Return Code
Meaning

4

The severity parameter is WARNING and processing continues.

8

The severity parameter is ERROR and processing stops.

System programmer response

Retry the request after ensuring that applications are not currently modifying the class structure being deleted.

EKG8573E	THE TARGET CLASS CANNOT BE DELETED. SOME OBJECT CHILDREN STILL EXIST.
-----------------	--

Explanation

The forced deletion of the target class is unsuccessful for the FORCE_HAS_NO_CLASS primitive statement because some object children cannot be force-deleted. Forced deletion of all object children is necessary before the target class can be deleted. Note that some object children might have been successfully force-deleted.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues.

Operator response

Notify the system programmer.

System programmer response

Retry the request after ensuring that other applications are not currently modifying the class structure being deleted.

EKG8574E	THE TARGET OBJECT CANNOT BE DELETED. SOME LINKS TO OTHER OBJECTS STILL EXIST.
-----------------	--

Explanation

The forced deletion of the target object is unsuccessful for the FORCE_HAS_NO_INSTANCE primitive statement because some links to other objects cannot be force-unlinked. Forced unlinking of all linked objects is necessary before the target object can be deleted.

Note: Some object links might have been successfully force-unlinked.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues.

Operator response

Notify the system programmer.

System programmer response

Retry the request after ensuring that other applications are not currently modifying the class structure being deleted.

EKG8580E THE *datatype* DATA TYPE CANNOT EXIST WITHIN A SELFDEFINING VALUE.

Explanation

A SELFDEFINING value cannot contain the given data type. Data types that are not valid within a SELFDEFINING value are: OBJECTLINK, OBJECTLINKLIST, and ANONYMOUS.

Message Variables

datatype

The name of the data type that cannot exist with a SELFDEFINING value.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues.

System programmer response

Correct the input to contain a valid data type.

EKG8582E THE *datatype* DATATYPE CAN ONLY EXIST WITHIN A SELFDEFINING VALUE.

Explanation

The given data type is only valid within a SELFDEFINING value.

Message Variables

datatype

The data type that is valid only within the context of a SELFDEFINING statement. Data types that are valid only within a SELFDEFINING statement are:

- APPLICATIONID
- CHARVARADDR

- CLASSIDLIST
- CLASSLINKLIST
- ECBADDRESS
- METHODNAME
- METHODPARAMETERLIST
- OBJECTIDLIST
- OBJECTNAME
- RECIPIENTSPEC
- SHORTNAME
- SUBSCRIBEID
- SUBSCRIPTSPEC
- SUBSCRIPTSPECCLIST
- TRANSID

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues.

System programmer response

Correct the input to contain a valid data type.

EKG8583E SOME NOTIFICATION METHODS ARE NOT TRIGGERED FOR *primitive* PRIMITIVE.

Explanation

There is an error with at least one of the notification methods for the field in the named primitive. Possible causes are that the notification method is recursive or there are errors in executing the method.

Message Variables

primitive

The name of the RODM primitive statement. Primitive names which might incur this error are:

- HAS_PARENT
- HAS_INSTANCE
- HAS_VALUE
- IS_LINKED_TO
- NOT_A_CLASS
- FORCE_NOT_A_CLASS
- NOT_AN_INSTANCE
- FORCE_NOT_AN_INSTANCE
- IS_NOT_LINKED_TO

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues.

Operator response

Notify the system programmer.

System programmer response

Determine whether all methods in the notification list are valid.

EKG8584E	THE CLASS <i>class</i> CANNOT BE CREATED UNDER THE RODM SYSTEM CLASS <i>sysclass</i>.
-----------------	--

Explanation

The Resource Object Data Manager (RODM) does not allow classes to be created under RODM system classes.

Message Variables

class

The name of the class you are attempting to create.

sysclass

The name of the RODM system class.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues.

Operator response

Notify the system programmer.

System programmer response

Ensure that the parent class is not a RODM system class. See *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide* for more information about RODM system classes.

EKG8585E	THE LINK WITH THE OBJECT NAME <i>object</i> CANNOT BE CREATED.
-----------------	---

Explanation

The notification queue object was created successfully but the link to the user object failed.

Message Variables

object

The name of the Resource Object Data Manager (RODM) object.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues.

Operator response

Notify the system programmer.

System programmer response

Delete the notification queue object and retry the request.

EKG8586E	THE OBJECT NAME <i>object</i> CANNOT BE CREATED OR DELETED UNDER THE RODM SYSTEM CLASS NAME <i>class</i>.
-----------------	--

Explanation

The user application cannot create or delete an object under some Resource Object Data Manager (RODM) system classes.

Message Variables

object

The name of the object.

class

The name of the RODM system class.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues.

Operator response

Notify the system programmer.

System programmer response

Ensure that the class is not one of the RODM system classes which does not allow objects to be created. See *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide* for more information about RODM system classes.

EKG8587E	ONE OR BOTH OF THE FIELDS ARE READ ONLY.
-----------------	---

Explanation

One or both of the specified fields are Resource Object Data Manager (RODM) read-only fields.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues.

Operator response

Notify the system programmer.

System programmer response

Ensure that neither of the fields is read-only and retry the request.

EKG8588E THE *primitive* PRIMITIVE IS UNSUCCESSFUL DUE TO SUBFIELD TIMESTAMP ERROR.

Explanation

The system cannot update the value of the TIMESTAMP subfield. There might not be enough storage.

Message Variables

primitive

The name of the Resource Object Data Manager (RODM) primitive statement. Primitive names which might incur this error are:

- IS_LINKED_TO
- IS_NOT_LINKED_TO

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues.

Operator response

Notify the system programmer.

System programmer response

Allocate additional storage to RODM, then retry the request.

EKG8589E THE FIELD NAME *field* IS ALREADY LINKED TO ANOTHER FIELD NAME.

Explanation

The specified field (with data type OBJECTLINK) is already linked to another field, and can only be linked to one field.

Message Variables

field

The name of the Resource Object Data Manager (RODM) field.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues.

Operator response

Notify the system programmer.

System programmer response

Either delete the original link and retry the request, or ignore this message and allow the original link to remain.

EKG8590E THE RODM SYSTEM CLASS *class* CANNOT BE DELETED.

Explanation

An attempt was made to delete a universal class or a system created class. These classes cannot be deleted.

Message Variables

class

The name of the Resource Object Data Manager (RODM) class.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues.

Operator response

Notify the system programmer.

System programmer response

Ensure that the class name is not a RODM system class.

EKG8591E THE RODM METHOD *method* CANNOT BE DELETED.

Explanation

The request to delete the specified method was rejected because the method is currently referenced by other entities.

Message Variables

method

The name of the Resource Object Data Manager (RODM) method.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues.

Operator response

Notify the system programmer.

System programmer response

Ensure that the method is not referenced by other entities and retry the request.

EKG8592E	THE <i>primitive</i> PRIMITIVE IS UNSUCCESSFUL DUE TO A LOCK FAILURE.
-----------------	--

Explanation

The request was rejected because the required resources are currently locked by another application.

Message Variables

primitive

The name of the rejected primitive.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues.

Operator response

Notify the system programmer.

System programmer response

Retry the request.

EKG8593E	THE FIELD NAME <i>field</i> SPECIFIES THE NULLMETH OBJECT AS THE NAMED-METHOD TO BE TRIGGERED.
-----------------	---

Explanation

The field name on the primitive has specified the NullMeth object as the named-method to be triggered with the INVOKED_WITH primitive. For this primitive, the object specified by the field cannot be the NullMeth object, but must be a valid named-method object.

Message Variables

field

The name of the field specified on the primitive indicating the named-method to be triggered.

System action

If the severity parameter is ERROR, a return code of 8 is returned and processing stops. If the severity parameter is WARNING, a return code of 4 is returned and processing continues.

Operator response

Notify the system programmer.

System programmer response

Ensure that the indicated field contains a value for a valid method object. Retry the primitive.

Chapter 5. EKGK Prefix Messages

EKGK prefix messages are issued by the RODM unload function (EKGKUNLD).

EKGK0001E An error occurred initializing the EKGKUNLD messages

Explanation

The RODM unload function (EKGKUNLD) messages are not initialized because an error occurred.

Operator response

Contact IBM Software Support.

EKGK0002E Return/reason codes from RODM: *return_code/reason_code*

Explanation

The RODM unload function (EKGKUNLD) issued a function call to RODM. For each function call made to RODM, the RODM program returns a return code and reason code. The reason code gives you more specific information.

Message Variables

return_code

RODM return code.

reason_code

RODM reason code.

Operator response

See the NetView online help for a description of the RODM return and reason codes.

EKGK0003I RODM version identifier is *identifier*

Explanation

The *identifier* is obtained from RODM and identifies the version and release of the RODM to which you are connected.

Message Variables

identifier

RODM version and release level.

EKGK0004E Cannot connect to RODM

Operator response

See message EKGK0002E for the return code and reason code for the connection failure.

EKGK0005I Disconnected from RODM

Explanation

The RODM unload function (EKGKUNLD) successfully disconnected from RODM.

EKGK0006E Cannot disconnect from RODM

Operator response

See message EKGK0002E for the return code and reason code associated with the failure.

EKGK0009E Cannot find SYSIN DD file specified in the JCL

Explanation

The RODM unload function (EKGKUNLD) attempted to open the file specified but cannot find the file.

Operator response

Verify that the JCL is correct and that the SYSIN DD file specified is valid.

EKGK0010E No parameters found in SYSIN DD file

Explanation

The SYSIN DD file was found but no parameters were found in the file.

Operator response

Verify that the JCL is correct and that the SYSIN DD file specified is valid.

EKGK0011E The RODM parameter is longer than 8 characters

Operator response

Correct the specification for the RODM parameter.

EKGK0012E The RODM parameter must be specified

Explanation

The value for the RODM parameter is missing.

Operator response

Specify a valid value for the RODM parameter.

EKGK0013E	The CLASS parameter is longer than 64 characters
------------------	---

Operator response

Correct the specification for the CLASS parameter.

EKGK0014E	The DEPTH parameter is not valid. Valid values are ONE and ALL.
------------------	--

Operator response

Correct the specification for the DEPTH parameter.

EKGK0015E	The WRITEMODE parameter is not valid. Valid values are APPEND and OVERWRITE.
------------------	---

Operator response

Correct the specification for the WRITEMODE parameter.

EKGK0016E	The WHITESPACE parameter is not valid. Valid values are LOW and HIGH.
------------------	--

Operator response

Correct the specification for the WHITESPACE parameter.

EKGK0017E	The REPORTONLY parameter is not valid. Valid values are NO and YES.
------------------	--

Operator response

Correct the specification for the REPORTONLY parameter.

EKGK0018E	The keyword specified in the SYSIN DD file is not valid: <i>keyword</i>
------------------	--

Explanation

Valid keywords are RODM, CLASS, OBJECT, DEPTH, WRITEMODE, WHITESPACE, and REPORTONLY.

Message Variables

keyword

The keyword in error in the SYSIN DD file.

Operator response

Correct the specification for the keyword.

EKGK0019E	EKGKUNLD memory allocation failed
------------------	--

Operator response

Contact your system programmer.

System programmer response

Free system resources and retry.

EKGK0020E	The class name specified by the CLASS keyword is not found: <i>class_name</i>
------------------	--

Explanation

The RODM unload function (EKGKUNLD) queries RODM for the class name specified by the CLASS keyword. The class name was not found in RODM.

Message Variables

class_name

RODM class name.

Operator response

Correct the class name and retry.

EKGK0021E	An error occurred during a RODM query
------------------	--

Operator response

See message EKGK0002E for the return code and reason code for the failure.

EKGK0033E	An error occurred querying the contents of a subfield
------------------	--

Operator response

See message EKGK0002E for the return code and reason code for the failure.

EKGK0034E	Cannot access file for DD <i>filename</i>
------------------	--

Explanation

The 6 output data sets are specified in the start JCL with the following DD statements:

CLASSES

Class structure creation high level syntax.

CLASSVAL

Class subfield creation and value setting primitives.

OBJECTS

Object creation primitives.

OBJVAL

Object subfield value setting primitives.

LINKS

Link primitives.

REPORT

Summary report of RODM data.

Message Variables

filename

The DDNAME of the file in error.

Operator response

Verify that the JCL correctly specifies the DD file.

EKGK0035I	RODM unload function processing is complete
------------------	--

Explanation

Processing is complete with return code 0.

EKGK0036E	An error occurred and processing is halted
------------------	---

Explanation

A non-zero return code has occurred and processing is halted.

Operator response

Review previously logged errors to determine the cause of the error.

EKGK0037E	The field data type cannot be printed
------------------	--

Explanation

The data type is either one that cannot be printed such as ANONYMOUS or is not a valid RODM data type.

Operator response

If the data type is valid, no action is necessary. If the data type is not valid, contact IBM Software Support.

EKGK0038I	Attempted to unload a ClassID that does not exist
------------------	--

Explanation

The RODM unload function (EKGKUNLD) queried RODM for a ClassID and the ClassID was not found.

EKGK0039I	Attempted to unload an ObjectID that does not exist
------------------	--

Explanation

The RODM unload function (EKGKUNLD) queried RODM for an ObjectID and the ObjectID was not found.

EKGK0040I	Attempted to unload a list of ClassIDs that do not exist
------------------	---

Explanation

The RODM unload function (EKGKUNLD) queried RODM for a list of ClassIDs and none of these were found.

EKGK0041I	Attempted to unload a list of ObjectIDs that do not exist
------------------	--

Explanation

The RODM unload function (EKGKUNLD) queried RODM for a list of ObjectIDs and none of these were found.

EKGK0042I	The OBJECT parameter is longer than 254 characters
------------------	---

Operator response

Correct the specification for the OBJECT parameter.

Chapter 6. EKGV Prefix Messages

EKGV prefix messages are issued by the RODMView program.

Messages EKGV68000-EKGV68002 are issued to the console. These messages come directly from RODMView command processors. All other EKGV messages are displayed to the operator while running the RODMView program.

When messages EKGV0000-EKGV8000 are displayed, they include return and reason codes from the RODM program. For additional information on the RODM program reason and return codes, see the *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide*.

EKGV0000I	Request is successful (<i>return/reason</i>)
------------------	---

Explanation

The request completed successfully.

Message Variables

return

RODM return code.

reason

RODM reason code.

EKGV0001E	Request failed. RODM is checkpointing (<i>return/reason</i>)
------------------	---

Operator response

Retry the request.

EKGV0002E	Request failed. RODM is starting (<i>return/reason</i>)
------------------	--

Operator response

Retry the request.

EKGV0003E	Request failed. RODM is stopping (<i>return/reason</i>)
------------------	--

Operator response

Restart RODM or connect to a different RODM and then retry the request.

EKGV0005E	Request failed. RODM has stopped (<i>return/reason</i>)
------------------	--

Operator response

Restart RODM or connect to a different RODM and then retry the request.

EKGV0006E	Request failed. RODM has stopped (<i>return/reason</i>)
------------------	--

Operator response

Restart RODM or connect to a different RODM and then retry the request.

EKGV0007E	Request failed. Required resources are locked (<i>return/reason</i>)
------------------	---

Operator response

Retry the request later.

EKGV0009E	Request failed. User ID not authorized (<i>return/reason</i>)
------------------	--

Operator response

Contact your system administrator.

EKGV0013E	Request failed. Specified RODM is not found (<i>return/reason</i>)
------------------	---

Operator response

Start the specified RODM and then retry the request.

EKGV0014E	Request failed. User ID not signed on (<i>return/reason</i>)
------------------	---

Operator response

Connect to RODM and get a valid sign-on token. Retry the request.

EKGV0015E	Request failed. Too many active API calls (<i>return/reason</i>)
------------------	---

Operator response

Retry the request later.

EKGV0020E	Request not complete. Abend has occurred (<i>return/reason</i>)
------------------	--

Operator response

Contact your system administrator.

System programmer response

See the *IBM Z NetView Troubleshooting Guide*.

EKGV0024E	Request failed. Methods are not triggered (<i>return/reason</i>)
------------------	---

Operator response

Ensure all methods in the notification list are valid.

EKGV0025E	Request failed. Data is being checkpointed (<i>return/reason</i>)
------------------	--

Operator response

Retry the request later.

EKGV0026I	The new data is the same as the old data (<i>return/reason</i>)
------------------	--

Explanation

The new data value is the same as the old data value. No change took place.

Message Variables

return

RODM return code.

reason

RODM reason code.

EKGV0028E	RODM log files are not available (<i>return/reason</i>)
------------------	--

Operator response

Contact the system administrator.

EKGV0040E	Primary inheritance already exists (<i>return/reason</i>)
------------------	--

Explanation

The system does not change the field value because the field already contains the primary inheritance value.

Message Variables

return

RODM return code.

reason

RODM reason code.

EKGV0041E	Request failed. Field is locally defined (<i>return/reason</i>)
------------------	--

Explanation

The system rejects the request because the field is locally defined.

Message Variables

return

RODM return code.

reason

RODM reason code.

EKGV0052E	Request failed. Class does not exist (<i>return/reason</i>)
------------------	--

Operator response

Correct the class or parent class. Retry the request.

EKGV0053E	Request failed. Class has class children (<i>return/reason</i>)
------------------	--

Operator response

Correct the primary parent class. Retry the request.

EKGV0054E	Request failed. Object does not exist (<i>return/reason</i>)
------------------	---

Operator response

Correct the object data. Retry the request.

EKGV0056E	Request failed. Field does not exist (<i>return/reason</i>)
------------------	--

Operator response

Correct the field data. Retry the request.

EKGV0057E	Request failed. Parent has no object children (<i>return/reason</i>)
------------------	---

Operator response

Correct the primary parent class data. If the primary parent class data is correct, verify the class ID portion of the object ID. Retry the request.

EKGV0060E	Request failed. Objects exist. (<i>return/reason</i>)
------------------	--

Operator response

Delete descendent objects. Retry the request.

EKGV0063E	Request failed. System cannot load method (<i>return/reason</i>)
------------------	---

Operator response

Verify that the method exists in the method library.

EKGV0066E	The new data and field types are different (<i>return/reason</i>)
------------------	--

Operator response

Correct the data type or field. Retry the request.

EKGV0067E Function does not apply to a system field (return/reason)

Operator response

Correct the function ID or the field. Retry the request.

EKGV0072E The two target objects are already linked (return/reason)

Operator response

Correct the entity and field information. Retry the request.

EKGV0073E The two target objects are identical (return/reason)

Explanation

Objects cannot be linked to themselves with the same field.

Message Variables**return**

RODM return code.

reason

RODM reason code.

Operator response

Correct the entity information. Retry the request.

EKGV0074E The operation is not valid on the field (return/reason)

Operator response

Correct the field information. Retry the request.

EKGV0075E Request failed. The two objects are not linked (return/reason)

Operator response

Correct the field information. Retry the request.

EKGV0081E Request failed. Method is not installed (return/reason)

Operator response

Install the specified method. Retry the request.

EKGV0084E This user ID is already connected to RODM (return/reason)

Explanation

This user ID is already connected to RODM, either through RODMView or another program accessing RODM.

Message Variables**return**

RODM return code.

reason

RODM reason code.

Operator response

Try proceeding normally. If RODMView requests fail and issue message EKGV0014E, try signing on with another user ID.

EKGV0086E Class name is reserved or not valid (return/reason)

Operator response

Correct the class name. Retry the request.

EKGV0087E Class name is used by another class (return/reason)

Operator response

Correct the class name. Retry the request.

EKGV0089E The class cannot be deleted (return/reason)

Explanation

The universal or a system-created class cannot be deleted.

Message Variables**return**

RODM return code.

reason

RODM reason code.

Operator response

Correct the class information. Retry the request.

EKGV0090E Delete failed. Entities exist under this class (return/reason)

Operator response

Delete all entities under the specified class. Retry the request.

EKGV0091E Field name is not valid or is reserved (return/reason)

Operator response

Correct the field name. Retry the request.

EKGV0092E	The field exists under this class (return/reason)
------------------	--

Operator response

Correct the field data. Retry the request.

EKGV0098E	System field cannot be deleted (return/reason)
------------------	---

Operator response

Correct the field information. Retry the request.

EKGV0103E	Field does not exist under specified class (return/reason)
------------------	---

Operator response

Correct the class or field information. Retry the request.

EKGV0104E	Specified subfield already exists (return/reason)
------------------	--

EKGV0108E	The method is in use (return/ reason)
------------------	--

Explanation

Subscriptions using this method must be deleted before the method can be deleted.

Message Variables

return

RODM return code.

reason

RODM reason code.

Operator response

Retry the request later.

EKGV0109E	Object name is not valid or is reserved (return/reason)
------------------	--

Operator response

Correct the object name. Retry the request.

EKGV0110E	Object name already exists under this class (return/reason)
------------------	--

Operator response

Correct the object name. Retry the request.

EKGV0111E	The object is linked to other objects (return/reason)
------------------	--

Operator response

Unlink all other objects from the specified object. Retry the request.

EKGV0127E	User ID is not authorized to use this RODM (return/reason)
------------------	---

Operator response

Verify the user ID or contact the system administrator.

EKGV0128E	Password is not authorized or has expired (return/reason)
------------------	--

Operator response

Verify the password or password phrase. Retry the request

EKGV0139E	Field information is not valid (return/reason)
------------------	---

Operator response

Specify a valid field ID or a valid field name. Retry the request.

EKGV0140E	Class name and ID are not valid (return/reason)
------------------	--

Operator response

Specify a valid class ID or a valid class name. Retry the request.

EKGV0142I	Local copy is created (return/ reason)
------------------	---

Explanation

The system performs the request successfully and a local copy is created.

Message Variables

return

RODM return code.

reason

RODM reason code.

EKGV0143I	Returned field value is inherited (return/reason)
------------------	--

Explanation

The field value is inherited and does not contain a local copy.

Message Variables

return

RODM return code.

reason

RODM reason code.

**EKGV0144E System fields cannot be deleted
(return/reason)**

Operator response

Correct the field or subfield information. Retry the request.

**EKGV0145E The specified field is read-only
(return/reason)**

Operator response

Correct the field or subfield information. Retry the request.

**EKGV0146E The subfield does not exist
(return/reason)**

Operator response

Correct the subfield information. Retry the request.

**EKGV0148I Subfields cannot be created on
system fields (return/reason)**

Operator response

Correct the field information. Retry the request.

**EKGV0150E Object ID or name information is
not valid (return/reason)**

Operator response

Specify a valid object ID or a valid object name. Retry the request.

**EKGV0170E You cannot create or delete
system objects (return/reason)**

Operator response

Correct the parent class information. Retry the request.

**EKGV0176E The new data is not valid (return/
reason)**

Operator response

Correct the new data. Retry the request.

**EKGV0178E This user ID is already connected
to RODM (return/reason)**

Explanation

The user is already connected to RODM.

Message Variables**return**

RODM return code.

reason

RODM reason code.

**EKGV0179E Cannot create the object (return/
reason)**

Operator response

Retry the request later.

**EKGV0186E Cannot create classes under the
system classes (return/reason)**

Operator response

Correct the parent class information. Retry the request.

**EKGV0194E The method has an execution error
(return/reason)**

Operator response

The method has abended. Check the RODM log record for further information.

**EKGV0195E Cannot change system fields at
the class level (return/reason)**

Operator response

Correct the data. Retry the request.

**EKGV0200E Request failed. RODM is quiescing
(return/reason)**

Operator response

Retry the request later.

**EKGV0224E Field data type cannot be created
as indexed (return/reason)**

Explanation

Only CHARVAR and INDEXLIST field data types can be created as indexed fields.

Message Variables**return**

RODM return code.

reason

RODM reason code.

Operator response

Correct the field data type and retry.

EKGV0225E	Locate datatype does not match field or field non-indexed (return/reason)
------------------	--

Explanation

The field being used to locate objects first be created with the CHARVAR or INDEXLIST data type, and must also be an indexed field. The datatype specified on the locate command must also match the datatype of the field.

Message Variables

return

RODM return code.

reason

RODM reason code.

Operator response

Correct the field data type and retry.

EKGV8001E	Specify an option by number
------------------	------------------------------------

Operator response

Specify a valid option number as listed on the panel or place the cursor on an option and press the enter key.

EKGV8002E	The RODM name field is blank
------------------	-------------------------------------

Operator response

Specify the RODM name.

EKGV8003E	The user ID field is blank
------------------	-----------------------------------

Operator response

Specify a RODM user ID.

EKGV8005E	The RODM function field is blank
------------------	---

Operator response

Specify the RODM function. Valid functions are CConnect, Disconnect, CCheckpoint, or Stop. Only the capitalized letters of the function needs to be entered.

EKGV8007E	The RODM function is not valid
------------------	---------------------------------------

Operator response

Specify a valid RODM function. Valid functions are Connect, Disconnect, CCheckpoint, or Stop. Only the capitalized letters of the function needs to be entered.

EKGV8008E	The Class name, Class ID, and Object ID field are blank
------------------	--

Operator response

Specify a Class name, Class ID, or Object ID.

EKGV8009E	The value is not valid. The Object ID is 16 hex digits.
------------------	--

Operator response

Specify a valid object ID.

EKGV8012E	The NetView command processor did not respond
------------------	--

Explanation

NetView program timed out waiting for a reply from a RODMView command processor.

Operator response

Retry the request. If the error persists, contact your system programmer.

System programmer response

Browse the system log to determine the reason for the error. A common cause of this error is that the command processor is not correctly defined to NetView program. Correct the error and then retry the request.

EKGV8013I	The query output is copied to the netlog
------------------	---

Explanation

This message confirms that the query output has been copied to the netlog as you requested.

EKGV8014E	The Class name and the Class ID are blank
------------------	--

Operator response

Specify a Class name or Class ID.

EKGV8015E	The Object name and the Object ID are blank
------------------	--

Operator response

Specify the Object name or the Object ID.

EKGV8018E	The Field name and the Field ID are blank
------------------	--

Operator response

Specify the field name or the field ID.

EKGV8021E	Cannot create a child class and field name at the same time
------------------	--

Operator response

Create the child class first and then create the field.

EKGV8022E	Cannot create a child class and object name at the same time
------------------	---

Operator response

Create the child class first and then create the object.

EKGV8023E	Data type outside of a SelfDefining string is not valid
------------------	--

Explanation

This data type is only valid inside a SelfDefining string, or is a RODM reserved data type. See the NetView online help for a more complete explanation of RODM abstract data types that are allowed outside self-defining strings.

Operator response

Specify a different field data type.

EKGV8026E	Cannot delete an object's field
------------------	--

Operator response

Specify the object name field as blank and then retry the request.

EKGV8030I	The command is complete
------------------	--------------------------------

Explanation

The command is complete.

EKGV8033I	Find usage is F searchstring <PREVIOUS>
------------------	--

Explanation

Searchstring is the text string to find. Your search string cannot contain blanks. To search backwards, specify PREVIOUS.

Operator response

Specify the FIND command.

EKGV8034I	Characters are found
------------------	-----------------------------

Explanation

The FIND request has successfully located the specified search string. The found text is as close to the top of the panel as is possible.

EKGV8035I	Specify the find request or specify F for help information on the find command.
------------------	--

Operator response

This is a prompt to enter the find request. If you are not familiar with the find command, enter F to display find usage help.

EKGV8037E	RODM Return code/reason code is (return/reason)
------------------	--

Explanation

The *return* and *reason* codes are returned from RODM. This particular combination does not have a message associated with it, so see the NetView online help for more information on the return code and reason code pair.

Message Variables

return

RODM return code.

reason

RODM reason code.

Operator response

See the NetView online help for a more complete explanation of the *return* and *reason* code pair.

EKGV8039E	Cannot create a field on an object
------------------	---

Operator response

Make the Object Name field blank and then retry the request. You can only create a field on a class.

EKGV8040E	The parent class name and parent class ID fields are blank
------------------	---

Operator response

Specify a parent class name or parent class ID.

EKGV8041E	The child class, object name and field name fields are all blank
------------------	---

Operator response

Specify a child class, object name, or field name.

EKGV8042E	The Method type field is blank
------------------	---------------------------------------

Operator response

Specify a valid method type. Valid types are NAMED or OI.

EKGV8046I	No query output currently exists
------------------	---

Explanation

You requested that a previous query's output be displayed, but no query output exists.

EKGV8047E Display request return code is rc**Explanation**

The RODMView screen cannot be displayed.

Message Variables

rc

VIEW command return code.

Operator response

Contact your system programmer.

System programmer response

See the NetView online help for a more complete explanation of the return code displayed in the message.

EKGV8049E Length of all input concatenated together is greater than allowed**Explanation**

RODMView concatenates fields that are specified to build a command. The maximum length of the command is 240 characters. You might encounter this more frequently if you use full textual names for classes and objects.

Operator response

Use enough object and class IDs to reduce the overall length of the command or use the compound query function to issue the query. Be sure to clear out any previous input from the second and third compound query panels with the PF4 key.

EKGV8050E The function key is not defined.**Operator response**

Use one of the functions keys listed at the bottom of your screen.

EKGV8051E The Maximum lines returned field is not valid.**Explanation**

The Query request displays the maximum number of lines as specified in the Maximum lines returned field. If you specify 0, the RODMView program defaults to 5000.

Operator response

Specify a valid value for the Maximum lines returned field.

EKGV8052E The Field data value is not a valid hex value.**Operator response**

Specify a valid hexadecimal value. Valid values are strings that include the numbers 0–9 and the characters A–F.

EKGV8053E A blank User password is not valid with the User ID specified**Explanation**

The specified user ID requires a non-blank password or password phrase unless the specified user ID is the same as the NetView operator ID.

Operator response

Specify a valid password.

EKGV8054E The Class Name specified cannot be found**Operator response**

Specify a valid or blank class name.

EKGV8055E The Field Name field specified cannot be found**Operator response**

Specify a valid or blank field name.

EKGV8059E Field information cannot be specified with GMFHS method invocation**Operator response**

Erase the field name or field ID information or both for object 1 and object 2 specifications and retry the request.

EKGV8060E Place cursor on an object ID to copy, press PF10 for destinations**Explanation**

PF10 was pressed while the cursor was not on a valid object ID on the query output panel.

Operator response

Retry the request by placing the cursor on any one of the 16 hex digits of an object ID and press PF10.

EKGV8062I Object ID copied from query output

Explanation

The object ID was copied from query output to the input panel you chose.

EKGV8063E The required field is blank or is not valid

Explanation

A required field did not contain any information or contained information that was not valid. Valid entries are usually listed on the panel next to the field.

Operator response

Correct the field information and retry the request.

EKGV8064E Action canceled

Explanation

You canceled the request.

EKGV8065I *name_1* = *name_2* (*type*)

Explanation

This message contains the translation of the name to its 'dotted decimal' number or vice versa.

Message Variables

name_1

The name that was found when you pressed PF11.

name_2

The name corresponding to *name_1*.

type

Either class or field, describing if the name is a class or field name.

EKGV8066E Place cursor on a class/field, pressed PF11 for translation

Explanation

You pressed PF11 on query output data that had no translation.

Operator response

Ensure you have the cursor on a class or field name or 'dotted decimal' number and retry the request. Note that the name or dotted decimal number must be on a line by itself and cannot span more than one line in the query output.

EKGV9001E Parameters cannot contain spaces

Operator response

See the command syntax, correct the error, and retry the request.

EKGV9002E A required parameter is not found

Operator response

See the command syntax, correct the error, and retry the request.

EKGV9003E A parameter is too long

Operator response

See the command syntax, correct the error, and then retry the command.

EKGV9004E A keyword is not valid

Operator response

See the command syntax, correct the error, and then retry the command.

EKGV9005E Too many parameters exist

Operator response

See the command syntax, correct the error, and then retry the command.

EKGV9006E An error occurred parsing the parameters.

Operator response

Retry the command. If the error persists, contact IBM Software Support.

EKGV9007E A hex parameter contains a value that is not valid

Operator response

If a parameter is to be entered in hexadecimal, it must contain an even number of hexadecimal digits. It cannot contain X' delimiters, and any leading zeroes must be entered. Object ID and time stamp values must contain exactly 16 hexadecimal digits. Correct the hexadecimal parameter and retry the request.

EKGV9010E Error with CNMVARs. Sign on to RODM again.

Operator response

Sign on to RODM again. If your signon is successful but this error persists, contact IBM Software Support.

EKGV9011E The memory cannot be allocated.

Operator response

Retry the command. If the error persists, contact your system programmer.

System programmer response

Browse the system log to locate error messages that indicate potential reasons why the memory cannot be allocated. Correct the reason the memory cannot be allocated and then retry the command.

EKGV9013E	The Sign_on_token is not valid. Sign on to RODM again
------------------	--

Explanation

RODM sets the Sign_on_token field in your access block after a successful connect. RODM detects that this field has a value in your access block that is not valid when a RODM API function request is made.

Operator response

Reconnect to RODM.

EKGV9014E	The keyword is not authorized
------------------	--------------------------------------

Explanation

The keyword specified is not in your scope class definition. You are not authorized to use this keyword.

Operator response

Contact your system programmer if you need to enter the keyword.

EKGV9015E	A blank user password is not valid with user ID specified
------------------	--

Explanation

The specified user ID requires a non-blank password unless the specified user ID is the same as the NetView operator ID.

Operator response

Specify a valid password.

EKGV9311E	The data type passed to module EKGVRFLM is not valid
------------------	---

Operator response

Contact your system programmer.

System programmer response

This message appears when RODM returns a response block containing a datatype that is not valid at the time

the command processor was compiled. This message can indicate either corrupt RODM data or a RODM datatype that came into existence after your version of RODMView was compiled. Attempt to issue the same query from the command line (or using a REXX exec) and contact IBM Software Support with the output.

EKGV9314E	No match is found
------------------	--------------------------

Explanation

No entities are found that match the query criteria.

EKGV9320E	Parent of object ID is not found
------------------	---

Explanation

The parent of the object ID is not found.

EKGV9399E	An error has occurred in module EKGVQUEM
------------------	---

Operator response

Contact your system programmer.

System programmer response

Contact IBM Software Support.

EKGV9400E	Resulting IndexList string is longer than allowed
------------------	--

Explanation

Adding the specified IndexList data to the data already contained in the field exceeds the allowed length of 32768 bytes.

EKGV9699E	An error has occurred in module EKGVCREM
------------------	---

Operator response

Contact your system programmer.

System programmer response

Contact IBM Software Support.

EKGV9799E	An error has occurred in module EKGVDLM
------------------	--

Operator response

Contact your system programmer.

System programmer response

Contact IBM Software Support.

EKGV9899E	An error has occurred in module EKGVMETM
------------------	---

Operator response

Contact your system programmer.

System programmer response

Contact IBM Software Support.

EKGV9999E **An error has occurred in module
EKGVSUBM**

Operator response

Contact your system programmer.

System programmer response

Contact IBM Software Support.

EKGV68001I *return reason are the module
return/reason codes.*

Explanation

The return code and reason code are returned from the RODMView command processor.

Message Variables***return***

RODM or RODMView return code.

reason

RODM or RODMView reason code.

module

Failing command processor.

Operator response

If *module* is RODM, then the *return* and *reason* return and reason codes are from RODM. See the *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide* for a more complete explanation of the return code and reason code pair. If *module* is one of:

- EKGVACTL
- EKGVACTM
- EKGVQUEM
- EKGVL0CM
- EKGVLNKM
- EKGVCHGM
- EKGVCREM
- EKGVDELM
- EKGVMETM
- EKGVSUBM

then the *reason* reason code came from a command processor, and its explanation is a message:

reason**Corresponding message****67001**

EKGV9001E

67002

EKGV9002E

67003

EKGV9003E

67004

EKGV9004E

67005

EKGV9005E

67006

EKGV9006E

67007

EKGV9007E

67010

EKGV9010E

67011

EKGV9011E

67013

EKGV9013E

67014

EKGV9014E

67015

EKGV9015E

67310

EKGV9310E

67311

EKGV9311E

67312

EKGV9312E

67313

EKGV9313E

67314

EKGV9314E

67315

EKGV9315E

67316

EKGV9316E

67317

EKGV9317E

67318

EKGV9318E

67319

EKGV9319E

67320

EKGV9320E

67321

EKGV9321E

67322
EKG V9322E

67323
EKG V9323E

67324
EKG V9324E

67325
EKG V9325E

67398
EKG V9398E

67399
EKG V9399E

67400
EKG V9400E

67699
EKG V9699E

67700
EKG V9700E

67799
EKG V9799E

67899
EKG V9899E

67999
EKG V9999E

EKG V68002I *module level mod_level syntax:*

Explanation

This message explains the command syntax for *command_name*.

Message Variables

module

Command processor name:

- EKG VACTL
- EKG VACTM
- EKG VQUEM
- EKG VLOCM
- EKG VLNKM
- EKG VCHGM
- EKG VCREM
- EKG VDELM
- EKG VMETM
- EKG VSUBM

mod_level

Command processor modification level.

EKG V68003I *function output follows: ... End of function*

Explanation

This is the text which precedes and the MLWTO message containing a successful query or locate output. This message is repeated at the end of the display.

Message Variables

function

Either the Locate or Query function.

Chapter 7. EZL Prefix Messages

EZL message prefixes apply to Automated Operations Network (AON) messages:

- The range EZL001-EZL899 is reserved for base AON error and information messages.
- The range EZL900-EZL999 is reserved for base AON panel messages.
- The range EZL1101-EZL2036 is reserved for base AON workstation interface messages.

The following message classes apply to the AON messages:

0	Errors
1	Down
2	Up
3	Degraded/Performance
4	Manual intervention required
7	Critical threshold exceeded
8	Frequent threshold exceeded
9	Infrequent threshold exceeded
10	Systems Network Architecture (SNA)
11	Virtual Telecommunications Access Method (VTAM) detects storage problem
12	X.25
15	Switched network backup (SNBU)
20	VTAM subarea automation
21	Network Control Program (NCP), LINKSTA
22	Line
23	Physical unit (PU)
24	Cross-domain resource manager
25	Cross-domain resources
26	Application (APPL)

27	Session
30	Local area network (LAN)
31	LAN manager (LANMGR)
32	LAN segment (LANSEGMENT)
33	LAN bridge (LANBRIDGE)
34	LAN controlled access unit (LANCAU)
35	LAN adapter (LANADAPTER)
50	Advanced peer-to-peer networking (APPN)
60	Transmission Control Protocol/Internet Protocol
61	IP router
62	Name server
65	NetView/6000 (NV6000)
66	NetView/6000 service point (NV6000 SP)
67	IP host
68	Interface
69	IP link
90	AON

EZL000E **MESSAGE *number* ISSUED, BUT
THIS MESSAGE DOES NOT EXIST
IN MESSAGE TABLE DSIMDEZL -
CALL IGNORED**

Explanation

AON cannot find the specified user message.

Message Variables

number

The missing message number

Operator response

Notify your system programmer.

System programmer response

If the message is correct, notify IBM Software Support about the missing message.

EZL001I **REQUEST *request* WAS
SUCCESSFUL FOR *function***

Explanation

The specified request for the specified record completed successfully.

Message Variables

function

The name of the function

request

The name of the request

EZL002I	END
Explanation This message identifies the end of a multiline message group.	
EZL003E	RECOVERY PROCESSING CAN NOT BE PERFORMED. AON INITIALIZATION HAS NOT COMPLETED. RELATED DATA: <i>data</i>
Explanation AON was invoked to perform recovery processing for a resource, but AON was still initializing.	
Message Variables <i>data</i> Data passed to AON which indicates the type of recovery processing to perform	
System action Recovery processing cannot be performed because AON was still initializing.	
Operator response Notify your system programmer.	
System programmer response This message usually occurs infrequently and only during AON initialization. It can be ignored. However, if it occurs frequently, notify IBM Software Support and provide the data received.	
EZL004I	REQUEST <i>request</i> WAS UNSUCCESSFUL FOR <i>function</i>
Explanation The specified request for the specified function failed to process.	
Message Variables <i>request</i> The name of the request <i>function</i> The name of the function	
EZL005I	MEMBER <i>member</i> CURRENTLY BEING USED FOR THE CONTROL FILE

Explanation The control file is currently using the specified member. You receive this message after issuing the EZLCFG STATUS or POLICY REQ=STATUS command.	
Message Variables <i>member</i> The name of the control file that is currently active when only one file is loaded, or the name of the logical file that is loaded when more than one policy file has been defined in the CNMSTYLE member.	
EZL006I	<i>member</i> FILE <i>num</i> = <i>name</i>
Explanation This message is part of a multiline message group issued as a result of a POLICY REQ=STATUS or POLICY REQ=LOAD command when more than one policy file has been defined.	
Message Variables <i>member</i> The name of the logical file that is loaded when more than one policy file has been defined in the CNMSTYLE member. <i>num</i> The relative file number. <i>name</i> The real name of the policy file.	
EZL007I	AUTOMATION TABLE <i>table</i> WAS NOT LOADED SUCCESSFULLY RECEIVED MESSAGE <i>message</i>
Explanation The AUTOTBL command failed to load the specified automation table. As a result, AON automation might stop processing.	
Message Variables <i>table</i> The name of the automation table <i>message</i> The message ID and the text that explains the error that occurred when you tried to load the table	
Operator response Notify your system programmer.	
System programmer response Check for a syntax error, an unknown command, or an error generating the listing file for the Automation	

table. To test the table, issue the AUTOTBL MEMBER=*table*, TEST command. View the NETLOG for errors. If there are no errors, check the NETLOG to determine why the listing file was not created.

EZL008I **THE AUTOMATION TASK (*task*)
CANNOT BE STARTED -
AUTOMATION CANNOT PROCEED**

Explanation

AON cannot resume processing because it cannot start the specified task.

Message Variables

task

The name of the task

System action

AON initialization stops.

Operator response

Notify your system programmer.

System programmer response

Check for missing TASK definitions, correct the problem, and initialize AON again.

EZL009W **TOO MANY PARAMETERS
SPECIFIED**

Explanation

You entered more parameters than are allowed for one of the operands used for the EZLCFG command.

Operator response

Check the syntax for this command and issue the command again, using the correct number of operands.

EZL010W **TOO FEW PARAMETERS
SPECIFIED**

Explanation

You did not enter the minimum number of parameters required for the operand used for the EZLCFG command.

Operator response

Issue the command again using the correct number of parameters.

EZL011W **EXPECTING A *delimiter* FOR
*parameter***

Explanation

A policy query expected to find the specified delimiter for the specified parameter, but it cannot.

Message Variables

delimiter

The character expected as the delimiter, for example, ' (single quotation mark), " (double quotation marks), or = (equal sign)

parameter

The parameter missing the delimiter

Operator response

Correct the command or the policy definition and attempt to query the policy again.

EZL013I **MESSAGE TRUNCATED - '*text*'**

Explanation

AON issued a multiline message that was truncated because the text of the message was too long to display. This message displays the first part of the multiline message.

Message Variables

text

The first part of the multiline message

EZL015E **INVALID DELIMITER OF *delimiter*
ENCOUNTERED**

Explanation

You entered the specified delimiter, but the delimiter is not correct for the EZLCFG command.

Message Variables

delimiter

The incorrect delimiter

Operator response

Issue the command again using the correct syntax.

EZL016I **NAME = *name***

Explanation

This message is the first part of a 2-part message. This part displays the name of the common global variable (CGLOBAL) that you requested.

Message Variables

name

The name of the CGLOBAL

EZL017I **VALUE=*value***

Explanation

This message is the second part of a 2-part message. This part displays the value of the common global value (CGLOBAL) that you requested.

Message Variables

value
The CGLOBAL value

EZL018I	INVALID SEARCH RANGE SPECIFIED
----------------	---

Explanation

You specified a search range that is greater than the ending search range.

Operator response

Issue the command again using the correct syntax.

EZL020E	MACRO/TYPE REQUEST WAS UNSUCCESSFUL RC=<i>rc</i> A=<i>xx</i> I=<i>yy</i> ECB=<i>zzz</i> FOR <i>function</i>
----------------	--

Explanation

AON cannot run the specified function.

Message Variables

rc
The return code from the function

xx
The major return code from a VSAM or NetView request

yy
The minor return code from a VSAM or NetView request

zzz
The event control block error code

function
The name of the function

Operator response

Notify your system programmer.

System programmer response

Find the VSAM return code and use problem determination procedures. For more information about VSAM messages, refer to the VSAM library.

EZL023I	TEST OF CONTROL FILE MEMBER <i>member</i> WAS SUCCESSFUL
----------------	---

Explanation

The test of the specified control file member was successful.

Message Variables

member
The policy definition member that was tested. This might be the actual member name in DSIPARM or it might be a logical member name as defined in the CNMSTYLE member. The name used depends on the command used and the CNMSTYLE definitions.

EZL025E	SYNTAX ERROR IN MEMBER <i>member</i>
----------------	---

Explanation

A syntax error was encountered while attempting to read the specified member.

Message Variables

member
The policy definition member containing the error. This might be the actual member name in DSIPARM or it might be a logical member name as defined in the CNMSTYLE member. The name used depends on the command used and the CNMSTYLE definitions.

Operator response

Correct the member, and issue the command again. The statement in error will be displayed in message EZL029E which accompanies this message.

EZL026I	TEST OF CONTROL FILE MEMBER <i>member</i> WAS UNSUCCESSFUL
----------------	---

Explanation

The test of a specified control file member failed.

Message Variables

member
The policy definition member that was tested. This might be the actual member name in DSIPARM or it might be a logical member name as defined in the CNMSTYLE member. The name used depends on the command used and the CNMSTYLE definitions.

System programmer response

Correct the control file entries and repeat the test.

EZL027I	THE FOLLOWING ERRORS ENCOUNTERED IN PROCESSING MEMBER <i>member</i>
----------------	--

Explanation

This message is the header of a multiline message. It precedes the list of errors that AON encountered while processing the specified member.

Message Variables

member

The policy definition member containing the error. This might be the actual member name in DSIPARM or it might be a logical member name as defined in the CNMSTYLE member. The name used depends on the command used and the CNMSTYLE definitions.

EZL028I **END OF *member* ERROR DISPLAY**

Explanation

This message is the last line of a multiline message for the specified member.

Message Variables

member

The policy definition member containing the error. This might be the actual member name in DSIPARM or it might be a logical member name as defined in the CNMSTYLE member. The name used depends on the command used and the CNMSTYLE definitions.

EZL029E ***text***

Explanation

The control file contains incorrect data.

Message Variables

text

The statement that is in error.

System action

AON processing continues.

Operator response

Notify your system programmer.

System programmer response

Correct the data in the control file. For more information about the POLICY command, see the NetView online help.

EZL030I ***task* IS INACTIVE**

Explanation

The specified AON task is inactive.

Message Variables

task

The name of the task or the operator ID

System action

AON issues the command to start the task.

Operator response

If AON cannot start the task, issue the START TASK command to an operator that is not active, or issue START TASK=*task* to start the task. The task can be one of the following:

- EZLTLOG for the log file
- EZLTCFG for the control file
- EZLTSTS for the status file
- EZLTDDE for the Dynamic Display Facility (DDF)

If you cannot start the task, notify your system programmer.

EZL031E **SCREEN READ ERROR *text***

Explanation

AON encountered an error while reading the screen.

Message Variables

text

Additional information about the system action

System action

AON runs the function again, unless the specified text includes the text -LIMIT EXCEEDED in the message. If the message includes the text -LIMIT EXCEEDED, AON does not run the function again.

EZL032I ***task* : log AUTOMATION LOG FULL**

Explanation

The specified task found that the specified automation log file is full.

Message Variables

task

The task that detected the full log file.

log

The name of the full log file. This file can be the primary or secondary log file.

System action

AON switches to the alternate log file.

**EZL033E FIRST LEVEL OF THE TREE MUST
 BE A 1**

Explanation

You defined the structure of a tree with a number other than 1. Specify the first level of the tree as a 1.

System action

The EZLTDDF task is not active.

System programmer response

Ensure that your system tree definitions in the EZLTREE member start with a level number of 1. Issue the START TASK=EZLTDDF command again.

EZL034E INVALID LEVEL - LESS THAN 1

Explanation

You defined the structure of a tree with a number that is less than 1.

System action

The EZLTDDF task is not active.

System programmer response

Ensure that your system tree definitions in the EZLTREE member start with a level number of at least 1. Issue the START TASK=EZLTDDF command again.

**EZL036I BUFFER SIZE SPECIFIED IS TOO
 SMALL FOR SCREEN**

Explanation

The size of the screen buffer specified in the EZLINIT member is too small for the screen.

Operator response

Notify your system programmer.

System programmer response

Increase the value of the SCREENSZ keyword in the EZLINIT member in your NetView DSIPARM data set. Restart the DDF.

**EZL037I STATUS ELEMENT IN TREE NOT
 FOUND**

Explanation

AON cannot find the name of the root or status component that is specified in an SDF STATUSFIELD statement in the active SDF tree structure. This

message is issued during SDF initialization or while AON is processing an SDFPANEL ADD command.

System programmer response

Ensure that the root or status component specified in the SDF STATUSFIELD statement for the panel being loaded exists in the current SDF tree structure.

EZL039W TREE LEVELS OUT OF SEQUENCE

Explanation

The tree levels that define the dependent subsystems are out of sequence.

System action

The EZLTDDF task becomes active, but AON does not determine the status of the subsystems.

System programmer response

Ensure that your system tree definitions in the EZLTREE member start with a level number of at least 1 and that all subsystems follow in hierarchical and numerical order. Restart DDF.

EZL040I NO CONTROL FILE LOADED

Explanation

This message appears because you made a request to the control file when the control file member was not loaded or you issued the EZLCFG STATUS command.

Operator response

Load the control file member. Enter EZLCFG MEMBER=*member*, where *member* is the control file member, for example, EZLCFG MEMBER=EZLCFG01.

EZL041I UNABLE TO FIND *type name*

Explanation

An AON command, such as EZLCFG or DDF, cannot find the specified information.

Message Variables***type***

The type of information that was passed to the status file or the control file command processor

name

The name that was passed to the status file or to the control file command processor

Operator response

Notify your system programmer.

System programmer response

Review any recent changes to your control file or AON customized panel to ensure that they are syntactically correct, including any comments. If you are unable to resolve the error, record the information and contact IBM Software Support.

EZL042I **MEMBER *member* NOT FOUND**

Explanation

AON cannot find the specified member.

Message Variables

member

The name of the member

Operator response

Verify that you use the correct name of the member when you issue the request.

EZL043I ***task* IS ACTIVE**

Explanation

AON activated the specified task.

Message Variables

task

The name of the task

EZL044I ***task* TERMINATING**

Explanation

AON is ending the specified task.

Message Variables

task

The name of the task

EZL045I ***task* TERMINATED**

Explanation

The specified task stopped processing.

Message Variables

task

The name of the task

EZL046E **INTERNAL PROGRAMMING
ERROR - REQUEST *request*
MODULE *module* RETURN CODE *rc***

Explanation

AON sent a request to the specified program, but the request failed.

Message Variables

request

A request sent by AON

module

The name of the module

rc

The return code

Operator response

Notify your system programmer.

System programmer response

Record the information and contact IBM Software Support.

EZL048E **PANEL DEFINITION FOR *panel*
NOT FOUND**

Explanation

AON requested the definition for the specified panel but cannot find it.

Message Variables

panel

The name of the panel

Operator response

Notify your system programmer.

System programmer response

Note the name of the panel and contact IBM Software Support.

EZL050I **ACCESS DENIED - MAXIMUM
USERS EXCEEDED FOR DDF**

Explanation

You have exceeded the maximum limit for logging on to the Dynamic Display Facility (DDF).

System action

AON denies access to DDF.

Operator response

Notify your system programmer.

System programmer response

Increase the value of the MAXOPS keyword entry in the EZLINIT member in your NetView DSIPARM data set. Restart DDF.

EZL054I	REQUEST DENIED BECAUSE NETVIEW IS TERMINATING
Explanation The Dynamic Display Facility (DDF) is not responding. The NetView program is stopping. System action AON denies access to DDF.	
EZL055I	COMMAND DDF IS NOT SUPPORTED UNDER A NON-OST TASK
Explanation A program or an automated task ID tried to issue a DDF command, but only an operator can issue this command. System action The DDF command is not issued.	
EZL056E	TERMINAL TYPE IS NOT SUPPORTED BY DDF
Explanation Extended terminal support requires the Dynamic Display Facility (DDF) to display the panel successfully.	
EZL061I	PASSWORD IS TOO <i>length</i>
Explanation You specified a new password with an incorrect length on the GETPW command. Passwords must be a minimum of 4 characters and a maximum of 8 characters. Message Variables <i>length</i> Contains the value LONG or SHORT and explains that there are too many or too few characters. System action The GETPW command fails. Operator response Reissue the command with a new password of the correct length.	
EZL062I	NETVIEW PASSWORD DATASET NOT ALLOCATED

Explanation The password data set is not allocated in the NetView Job Control Language (JCL). Operator response Notify your system programmer. System programmer response Add an EZLPSWD DD statement to the procedure to allocate the VSAM data set.	
EZL063E	ERROR OPENING PASSWORD DATASET
Explanation AON cannot open the AON password data set. Operator response Notify your system programmer. System programmer response Ensure that the AON password data set is allocated correctly and is defined to NetView program.	
EZL064I	RECORD FOR <i>data1 data2</i> NOT FOUND
Explanation The information for the specified data cannot be found. Message Variables <i>data1</i> A unique data identifier. <i>data2</i> A second unique data identifier. Operator response If the data specified is an operator ID and a domain ID, notify your system programmer. If the data specified relates to another function, modify any filter settings that are in effect. If the problem persists, notify your system programmer. System programmer response If the data specified is an operator ID and a domain ID, use the INIT option to specify a password record for the operator on the domain. For any other data, browse the netlog for informational messages, and ensure that the relevant function has initialized successfully.	

EZL065I CURRENT PASSWORD IS *current*

Explanation

AON retrieved the specified current password from the password data set.

Message Variables***current***

The current password

Operator response

Notify your system programmer.

System programmer response

Ensure that the message is suppressed so that it does not appear in the log or on an operator terminal.

**EZL066I CURRENT/NEW PASSWORD IS
*current/new***

Explanation

The GETPW command randomly generated the specified new password because the current password was last updated more than 30 days ago.

Message Variables***current***

The current password

new

The new password

Operator response

Notify your system programmer.

System programmer response

AON suppresses this message, but the routines that perform cross-domain logons can still use it. Change the RACF® password for the affected user.

**EZL067E CURRENT PASSWORD IS
password - ERROR CREATING
NEW PASSWORD**

Explanation

This message displays the current password. The password record was last updated more than 30 days ago, but the GETPW command cannot generate a new one.

Message Variables***password***

The current password

Operator response

Notify your system programmer.

System programmer response

AON suppresses this message, but the routines that perform cross-domain logons can still use it.

**EZL069E NEW PASSWORD UPDATE FAILED
- NO NEW PASSWORD**

Explanation

VSAM cannot update the current password held in the VSAM data set to the new password because no password has been assigned.

Operator response

Notify your system programmer.

System programmer response

Wait until the password expires before issuing the UPDATE parameter, or use the REGEN parameter to generate a new password.

**EZL072E *request* ERROR PROCESSING
VSAM DATASET**

Explanation

AON issued a VSAM macro and received an error while processing a request.

request

The name of the VSAM macro request that was processing when the error occurred.

System action

The GETPW command fails and does not perform its function.

Operator response

Notify your system programmer.

System programmer response

Browse the NETLOG for the specific VSAM error message that signaled the error. Refer to the VSAM reference manuals to correct the error. If the error persists, contact IBM Software Support.

EZL076I PASSWORD MASK IS TOO LONG

Explanation

The mask for the password is too long.

System programmer response

Correct the PWMASK keyword in the control file.

EZL077I **PASSWORD MASK IS TOO SHORT**

Explanation

The mask for the password is too short.

System programmer response

Correct the PWMASK keyword.

EZL090I **IPLDATE = MM/DD/YY , IPLTIME = HH:MM**

Explanation

AON issues this message at startup to establish the system startup time.

EZL110I **controlfile BEING USED FOR THE CONFIGURATION TABLE**

Explanation

You loaded the specified control file. This message is the beginning of a multiline message. You will also see one or more EZL006I messages that list the Policy Files used to load the Policy Repository.

Message Variables

controlfile

The name of the control file (if it is the only file), or, the name of the logical file loaded when more than one policy file has been defined in the CNMSTYLE member.

EZL111I **AUTOMATION CONFIGURATION DISPLAY - ENTRY= *entry***

Explanation

This is the first message of a multiline message group that displays the entry for the current automation configuration.

Message Variables

entry

The entry for the current automation configuration.

EZL112I **ACTIVE TYPE= *type***

Explanation

This message is part of a multiline message group that starts with message EZL111I.

Message Variables

type

The type of entry AON found in the control file.

EZL113I **DATA IS *data***

Explanation

This message is part of a multiline message group that starts with message EZL111I and follows message EZL112I.

Message Variables

data

The data associated with the active type displayed in message EZL112I.

EZL115I **Entry Type Keyword Value**

Explanation

This message is part of a multiline message group issued as a result of a POLICY REQ=GET command.

Message Variables

Entry

The policy name

Type

The policy definition

Keyword

The policy keyword

Value

The value of the policy keyword

EZL150I **STATISTICS DISPLAY REQUEST FOR *highest* THROUGH *lowest***

Explanation

This message is the header for a multiline message that displays statistics from a higher-node resource and a lower-node resource.

Message Variables

highest

The name of the highest resource

lowest

The name of the lowest resource

EZL151I **ID= *resource*, TYPE= *type*, STATUS= *status***

Explanation

This message is part of a multiline message group that starts with message EZL150I and displays the ID, the type, and the status of the specified resource.

This message is also used as a single line message by NETSTAT to update DDF if the "Send to DDF" option is chosen.

Message Variables

resource

The name of the resource

type

The type of resource

status

The status of the resource

EZL152I	LAST UPDATED BY OPERATOR operatorid
----------------	--

Explanation

This message is part of a multiline message group that starts with message EZL150I. This message specifies the last operator to update the resource.

operatorid

The ID of the operator who last updated the resource

EZL153I	LAST THRESHOLD EXCEEDED - threshold
----------------	--

Explanation

This message is part of a multiline message group that starts with the message EZL150I. The last threshold setting was exceeded.

Message Variables**threshold**

The last threshold setting for the resource

EZL154I	REPLYID = reply, JOB TYPE = type, NUMBER = number, NAME = name
----------------	---

Explanation

This message is part of a multiline message group that starts with message EZL150I. This message displays the maximum number of errors allowed. NetView Access Services uses this information to set the information needed to reply to the next request for NetView Access Services.

Message Variables**reply**

The reply ID

type

The type of job

number

The maximum number of errors allowed

name

The name of the NetView Access Services as defined for the NetView on which the user is running

EZL155I	OPERATOR NOTIFIED: notify, TIMERSET:
----------------	---

Explanation

This message is part of a multiline message group that starts with message EZL150I. This message states whether an operator has been notified of the current error.

Message Variables**notify**

The message that notifies the operator. The possible answers are Y (Yes) and N (No).

EZL156I	LAST STATUS CHANGE DATE = date, TIME = time, OPID= id
----------------	--

Explanation

This message displays the ID of the operator that last updated this record, as well as the time and date when the operator updated it.

Message Variables**date**

The date of the last status change

time

The time of the last status change

id

The ID of the operator who updated the record

EZL157I	LAST MONITORED DATE = date TIME = time
----------------	---

Explanation

This message displays the time and date that AON last monitored this resource.

Message Variables**date**

The date AON last monitored the resource

time

The time AON last monitored the resource

EZL159I	NO ERROR DATA AVAILABLE
----------------	--------------------------------

Explanation

This message is part of a multiline message group starting with message EZL150I. There is no error data available for the resource.

EZL160I	ERROR COUNT DATE TIME
----------------	------------------------------

Explanation

This message is part of a multiline message group starting with message EZL150I. This message is the header line for message EZL161I.

EZL161I	count date time
----------------	------------------------

Explanation

This message is part of a multiline message group starting with message EZL150I. This message shows the current error count, date, and time of the last error.

Message Variables

count

The sequence number of the error

date

The date the error occurred

time

The time the error occurred

EZL162I **HIER 1= *hierarchy1*,2= *hierarchy2*,3= *hierarchy3***

Explanation

This message displays the hierarchy for a resource.

Message Variables

hierarchy1

The name of the Network Control Program (NCP) in the NetView Hardware Monitor Alert Hierarchy

hierarchy2

The name of the line (LINE) in the NetView Hardware Monitor Alert Hierarchy

hierarchy3

The name of the physical unit (PU) in the NetView Hardware Monitor Alert hierarchy

EZL163I **ALTPORT= *altport*,POOL= *pool*,
SPEED= *speed*, LEVEL= *level***

Explanation

This message is part of a multiline message that begins with message EZL162I. This part of the message displays the switched network back-up (SNBU) setup information for the resource.

Message Variables

altport

The port to use when not using the primary port

pool

The modem pool for SNBU

speed

The speed of the modem

level

The modem link segment in a tailed circuit, specified as 1 (local) or 2 (remote).

EZL170I **USER1= *user1*, USER2= *user2***

Explanation

This message is part of a multiline message that begins with message EZL150I.

Message Variables

user1

User data

user2

User data

EZL171I **USER3= *user3*, USER4= *user4***

Explanation

This message is part of a multiline message that begins with message EZL150I.

Message Variables

user3

User data

user4

User data

EZL172I **USER5= *user5*, USER6= *user6***

Explanation

This message is part of a multiline message that begins with message EZL150I.

Message Variables

user5

User data

user6

User data

EZL173I **USER7= *user7*, USER8= *user8***

Explanation

This message is part of a multiline message that begins with message EZL150I.

Message Variables

user7

User data

user8

User data

EZL174I **USER9= *user9*, USER10= *user10***

Explanation

This message is part of a multiline message that begins with message EZL150I.

Message Variables

user9

User data

user10

User data

EZL180I *domain restype* **STATUS INFORMATION**

Explanation

This message is the header line of a multiline message that results from a query request the operator sent to the Dynamic Display Facility (DDF).

Message Variables

domain

The domain for the resource

restype

The type of resource

EZL181I *rootname.compname,PR=priority, RV=refvalue, CO=color, HL=highlight, DP=dupcount*

Explanation

AON found a status descriptor that matches the search arguments in a request to use status descriptor information. This message identifies the status descriptor and shows some of the information it contains. This message is the first message line in the multiline response to the DDFQUERY command. Messages EZL182I, EZL183I, and EZL185I show additional information contained in the status descriptor.

Message Variables

rootname

The root (system) name of the requested status component.

compname

The status component name. If the alternate status component name was used to locate the status descriptor, it appears in parentheses following the primary status component name.

priority

The priority associated with the status descriptor. This priority is normally specified in a request to add the status descriptor to the chain of descriptors for a status component.

refvalue

The reference value for the status descriptor.

color

The variable color shows the color associated with the status descriptor. If you do not specify this color in the request to add a status descriptor,

AON uses the default color defined for the priority of the status descriptor. The colors are:

- B** Blue
- G** Green
- P** Pink
- R** Red
- T** Turquoise
- W** White
- Y** Yellow

highlight

The highlighting associated with the status descriptor. The highlighting options are:

- B** Blink
- N** Normal
- R** Reverse
- U** Underscore

dupcount

The number of duplicate status descriptors that exist. Duplicate status descriptors have identical reference value, priority, information, color, highlight, and data values.

System action

Processing continues.

EZL182I **DATE=date,TIME=time,REPORTER = reporter,PU=pu,PD=pd, PLVU=plu,PLVD=pld**

Explanation

AON found a status descriptor that matches the search arguments in a request to use status descriptor information. This message shows some of the information contained in the status descriptor and is the second message line of the multiline response to the DDFQUERY command. Messages EZL181I, EZL183I, and EZL185I contain additional information contained in the status descriptor.

Message Variables

date

The date when the status descriptor was created.
The date is shown in the *mm/dd/yy* format.

time

The time when the status descriptor was created.
The time is shown in the *hh:mm:ss* format.

reporter

The NetView operator ID that made the request to create the status descriptor. The node of the reporter, if available, appears in parentheses immediately following the operator ID.

pu

Shows whether the status condition is propagated upward through the SDF tree structure. The possible values are:

Y

Upward propagation was requested.

N

Upward propagation was not requested.

pd

Indicates whether the status condition is propagated downward through the SDF tree structure. The possible values are:

Y

Downward propagation was requested.

N

Downward propagation was not requested.

plu

The tree node past which upward propagation is not performed. An asterisk (*) indicates that upward propagation ends at the root (system) node.

pld

The tree node past which downward propagation is not performed. An asterisk (*) indicates that downward propagation is performed to all subordinate nodes of the status component.

System action

Processing continues.

EZL183I **IN=information**

Explanation

AON found a status descriptor that matches the search arguments in a request to use status descriptor information. This message shows some of the information contained in the status descriptor. This message is the third message line of the multiline response to the DDFQUERY command. Messages EZL181I, EZL182I, and EZL185I show additional information contained in the status descriptor.

Message Variables

information

The value used to replace the default STATUSTEXT information when the status descriptor is used as the basis for the STATUSFIELD and a status descriptor number other than 0 is specified in the STATUSFIELD definition.

System action

Processing continues.

EZL185I **DA=data**

Explanation

A status descriptor has been found that matches the search arguments in a request to use status descriptor information. This message shows some of the information contained in the status descriptor. This message is the fourth message line of the multiline response to the DDFQUERY command. Messages EZL181I, EZL182I, and EZL183I show additional information contained in the status descriptor.

Message Variables

data

The data displayed when the status descriptor is selected as the basis for a detail display

System action

Processing continues.

EZL199I **THE CHARACTER 'char' IS NOT
VALID IN value**

Explanation

The characters specified can not be used in the specified value.

Message Variables

char

The character that is not allowed

value

The value that contained the character in error

EZL198I **PARAMETER INVALID FOR
COMMAND command**

Explanation

A parameter that was passed to the specified command is incorrect.

Message Variables

command

The name of the command.

System action

The command fails and does not perform its function.

Operator response

Correct the parameter and re-enter the command. If necessary, view the help for the command to assist in entering a valid command.

**EZL200I AUTOMATION OPERATOR *id* HAS
 BEEN INITIALIZED**

Explanation

AON initialized an automation operator and started processing.

Message Variables

id

The ID of the automation operator

System action

AON is ready for processing.

**EZL201I "*global*" GLOBAL NOT
 COMPLETELY UPDATED - TIMED
 OUT**

Explanation

AON cannot update a global variable or value during initialization.

Message Variables

global

The type of global variable. The type is COMMON or TASK.

System action

AON operations can be affected.

Operator response

Notify your system programmer.

System programmer response

Review the NETLOG for the AON AUTOTASK ID to determine which ID is timing out and contact IBM Software Support.

**EZL202I PARAMETER "*parameter*" INVALID
 FOR REQUEST *command***

Explanation

The specified parameter that must be passed to the specified command is incorrect.

Message Variables

command

The name of the command.

parameter

The incorrect parameter

System action

The command fails and does not perform its function.

Operator response

Correct the parameter and re-enter the command. If necessary, view the help for the command to assist in entering a valid command.

**EZL203I EXPECTED PARAMETERS
 MISSING FOR REQUEST *command*
 —*request***

Explanation

The specified parameter that must be passed to the specified command is missing.

Message Variables

request

The name of the request.

command

The incorrect command

System action

The command fails and does not perform its function.

Operator response

If the message appears on an operator panel, correct the input and press Enter. If the message appears in the NETLOG, notify your system programmer.

System programmer response

Perform the problem determination function on the command. Find the error in the NETLOG and contact IBM Software Support.

**EZL204I EXPECTED PARAMETERS INVALID
 FOR REQUEST *command* -
 parameter = *value***

Explanation

The parameter that must be passed to the specified command is incorrect.

Message Variables

command

The name of the command

parameter

The parameter that is incorrect

value

The value of the parameter that is incorrect

System action

The command fails and does not perform its function.

Operator response

Notify your system programmer.

System programmer response

Perform the problem determination function on the command. Find the error in the NETLOG and contact IBM Software Support.

EZL205I **"aoncmd"COMMAND FAILED FOR**
command: interval - WAIT TIME
EXPIRED message

Explanation

Processing of the specified command took too much time and failed.

Message Variables**aoncmd**

The internal command that failed

command

The AON command

interval

The exceeded timer interval

message

The extra message text (option)

Operator response

Check the NetView log that was active when the message was received to see whether other command timers have expired. If no other timers have expired, review the syntax for the command and issue the command again. If other command timers have been exceeded or if processing of the command fails again, notify your system programmer.

System programmer response

Review the user input to determine the appropriateness of the request and instruct the operator on the proper procedure. If the user input is correct, review the NetView log that was active when the message was received to look for the cause for delays in command list processing. Note the value of the timer interval to see whether the timer default must be changed.

EZL206I

"intcmd " COMMAND FAILED FOR
command: RECEIVED "rc"
message

Explanation

The specified command was not processed. The command list received a return code or a message that indicates the problem.

Message Variables**intcmd**

The name of the internal command that failed

command

The command that issued the failing internal command

rc

The return code for the issued command

message

The message text

System action

The command stops processing.

Operator response

Notify your system programmer.

System programmer response

Check the NetView log for more information. Use problem determination procedures to solve the problem.

EZL207W

NO DEFAULTS SET FOR parameter
FOR restype resname- COMMAND
HALTED

Explanation

AON stopped processing a command because the automation defaults for the specified resource are not set.

Message Variables**parameter**

The automation defaults that must be set

restype

The type of resource

resname

The name of the resource

System action

The command stops processing.

Operator response

Notify your system programmer.

System programmer response

Correct control file entry for the specified resource.

EZL208I	THE INPUT LENGTH MUST BE length CHARACTERS. input IS INVALID.
----------------	--

Explanation

The input parameter specified has an incorrect length.

Message Variables

length

The length required for the input value

input

The value that is in error

System action

The command fails and does not perform its function.

Operator response

If the message appears on an operator panel, correct the input and press Enter. If the message appears in the NETLOG, notify your system programmer.

System programmer response

Perform the problem determination function on the command. Find the error in the NETLOG and contact IBM Software Support.

EZL209I	DEFAULT OPERATOR ID AT domain WILL BE opid
----------------	---

Explanation

The specified default operator ID is located at the specified domain.

Message Variables

domain

The name of the domain

opid

The default operator ID

EZL210I	INTERVAL NOT VALID DEFAULT OF interval BEING USED
----------------	--

Explanation

The current interval set for the automation check is incorrect, so the specified default interval is being used.

Message Variables

interval

The default interval specified in the control file.

System action

The system uses the specified default interval.

System programmer response

In the control file, correct the interval for automation check.

EZL211W	NO AUTOOPS ENTRIES HAVE BEEN DEFINED - AUTOMATION CANNOT CONTINUE
----------------	--

Explanation

No entries for automation operators are defined in the control file.

System action

AON initializing stops.

Operator response

Notify your system programmer.

System programmer response

Add the appropriate AUTOOPS keyword to the control file and reload the control file.

EZL212I	NO PRIMARY OPERATOR ID WAS SPECIFIED FOR autoop
----------------	--

Explanation

No primary operator is defined in the control file for the AUTOOP entry.

Message Variables

autoop

The AUTOOP control file entry that is in error

System action

AON uses the operator ID assigned to the BASEOPER keyword.

Operator response

Notify your system programmer.

System programmer response

Correct the specified AUTOOP keyword in the control file and reload the control file.

EZL213E ***program* - REQUIRED TABLE
ENTRY NOT DEFINED *keyword*
*component group***

Explanation

The loader table lookup command cannot locate a required table entry. This problem occurs only if the loader tables are incorrect.

Message Variables

program

The name of the program

keyword

The high-level keyword

component

The name of the component

group

The identifying group

System action

The system resumes command processing.

Operator response

Notify your system programmer with the error from the NETLOG.

System programmer response

Perform the problem determination function on the loader tables. Look at the error in the NETLOG, correct the entry in the specified table, and load the table again.

EZL214E **RESOURCE *resname* IS NOT VALID
FOR THIS NETWORK**

Explanation

You issued a command on a resource that is not known to your network. This occurs when the Network ID for the resource is different from the Network ID of the current NetView domain.

Message Variables

resname

The name of the resource

System action

AON does not issue the command.

EZL215I **OPTION *opt* NOT PROCESSED -
ACCESS NOT AUTHORIZED**

Explanation

You issued the specified AON function from the operator interface but do not have sufficient authority to issue the command.

Message Variables

opt

The number of the option that you selected from an AON component or panel

System action

The command is not issued.

Operator response

Request authority to issue the command from your system programmer. Provide the system programmer with the component and the name of the panel selection you need to access.

System programmer response

See the appropriate AON or component installation guide for documentation of all the available commands and their associated program names. For command authorization information, see the *IBM Z NetView Security Reference*.

EZL216I **COMMAND *command* NOT
PROCESSED - THE AUTOMATION
ENVIRONMENT IS NOT
INITIALIZED**

Explanation

You tried to issue a command but the command failed because the automation environment is not completely initialized.

Message Variables

command

The name of the command that failed

System action

The command exits without completing its function.

Operator response

Issue the command again after completing AON initialization.

EZL217E ***command* - UNMATCHED
DELIMITERS ENCOUNTERED
MEMBER= *table* ENTRY= *entry*
*option***

Explanation

The specified command found unmatched delimiters in a loader table. The delimiters are ' or ".

Message Variables

command

The name of the command that located the unmatched delimiters.

table

The loader table that contains the unmatched delimiters

entry

The table entry

option

The table option

System action

Loading of the table stops for the table in error.

Operator response

Notify your system programmer.

System programmer response

Correct the option definition table error and load the table again.

EZL218E ***command* - FORMAT ERROR
ENCOUNTERED IN MEMBER= *table*
ENTRY= *entry* keyword RC= *rc***

Explanation

The specified command found an error in the syntax of an entry in the specified option definition table.

Message Variables

command

The name of the command that located the error

table

The name of the table in which the error was found

entry

The table entry in error

keyword

The keyword in error

rc

The return code (RC) that identifies the particular error

RC=5

Missing keyword

RC=6

Missing key values

RC=7

Missing key parameters

RC=8

Uneven keywords

RC=9

Missing semicolon

RC=10

Missing comma

RC=11

Keyword value greater than 255

System action

Loading of the table in error stops.

Operator response

Notify your system programmer.

System programmer response

Correct the option definition table in error by looking at the specified entry and keyword. Use the return code for help in determining the error.

EZL219I **COMMAND *command* NOT FOUND**

Explanation

The specified command was set to run but the command does not exist.

Message Variables

command

The name of the command

System action

The command that calls the program stops processing.

Operator response

Notify your system programmer.

System programmer response

Perform the problem determination function on the missing command. Note the missing command and search the concatenated libraries for it.

EZL220E ***table* NOT INITIALIZED , *flag* FLAG
SET TO *setting***

Explanation

During initialization, AON tried to load a component, but the option flag for installation (INSTALLOPT) is not set correctly in the control file.

Message Variables

table

The name of the option definition table that cannot be initialized

flag

The configuration flag on the (INSTALLOPT) entry

setting

The flag setting

System action

The system logs a message.

Operator response

Notify your system programmer.

System programmer response

In the control file, correct the install option entry for the component to be loaded.

EZL221E	DUPLICATE MENU SELECTION DEFINED (<i>position</i>) FOR <i>component</i>
----------------	--

Explanation

During initialization, AON tried to load the Main Menu positions and found duplicate entries for different components.

Message Variables

(*position*)

The menu position of the specified component

component

The name of the component

System action

The duplicate entry is not loaded.

Operator response

Correct option definition table entries for the specified component in the option definition table for that component. The entry is MAINPANELPOS.

EZL222I	THERE IS NO DATA TO DISPLAY
----------------	------------------------------------

Explanation

You attempted to view data that is not available. Possible reasons that might prevent data from being displayed are filter settings, network issues, command timeouts, and system setting.

Operator response

Review any settings and retry. After retrying, if there is still no data to display, review the netlog for related messages and contact the System Programmer.

System programmer response

Review any system-wide settings (such as community name for SNMP-related functions). Review the netlog for related messages. If you are still unable to determine the cause for this message, contact IBM Software Support.

EZL223E	<i>exit_command</i> EXIT IN <i>cfentry</i> IS INVALID, RC = <i>rc</i>
----------------	--

Explanation

An exit command in a calling program failed.

Message Variables

exit_command

The exit command

cfentry

The control file entry for that exit command

rc

The return code (RC) that AON issued.

RC=4

The exit command exceeded 78 characters.

RC=8

The exit command was not found.

System action

The program fails.

Operator response

Notify your system programmer.

System programmer response

Perform problem determination on the error.

EZL224I	<i>command</i> ERROR - STATUS FILE IS EMPTY
----------------	--

Explanation

AON received a request to delete records from a status file, but the status file was empty.

Message Variables

command

The name of the status command that was issued

System action

Database maintenance stops.

EZL225E ***command* - RECORD *id* CONTAINS AN INVALID DATE FORMAT**

Explanation

A record in the status file has an incorrect date format.

Message Variables

command

The name of the status command that was issued

id

The ID of the record

System action

Processing resumes.

Operator response

Record the record number and notify your system programmer.

System programmer response

Perform problem determination on the status file date error. Try to change the date of the record in error.

EZL226I **PARAMETER *parameter* OF THE entry STATEMENT IGNORED - PARAMETER NO LONGER SUPPORTED**

Explanation

The parameter of the entry statement no longer exists.

Message Variables

parameter

The parameter name (keyword)

entry

The control file entry

System programmer response

Remove the unsupported entry from the control file.

EZL227I **RESOURCE *restype* *resname* COULD NOT BE IDENTIFIED BY ANY INSTALLED COMPONENTS**

Explanation

AON tried to identify a resource that is not defined to any AON component.

Message Variables

restype

The type of resource

resname

The name of the resource

Operator response

Correct the resource name and try the command again. Check the NetView log for messages BNH232I and BNH233I for additional information.

EZL228E ***task* NOT AUTHORIZED TO ISSUE COMMAND *command***

Explanation

You issued a command using a task that is not authorized to issue the command, one of its keywords, or one of its keyword values. Check the Netlog for additional error information.

Message Variables

task

The ID used to issue the command

command

The command issued

System action

The command fails.

Operator response

To issue the command, request authorization from your system programmer.

System programmer response

Verify that the task has the authorization to issue the command. For more information, see the *IBM Z NetView Security Reference*.

EZL229I **NO ENTRY FOR *parameter type* HAS BEEN DEFINED - DEFAULT OF *value* USED**

Explanation

The entry type is not defined in the control file member, so AON uses the default value.

Message Variables

parameter

The parameter that is defined in the control file statement and that is specified by the specified type

type

The field in the control file statement that is not defined

value

The default value assigned to the entry

System action

The system assigns the default value.

Operator response

Notify your system programmer.

System programmer response

Correct the control file member if you do not want to use the default.

EZL230E	REQUIRED PARAMETER <i>parm</i> MISSING FROM <i>entry</i> STATEMENT IN <i>name</i> FILE
----------------	---

Explanation

The parameter identified in the message as *parm* is required but was not specified in the entry statement in the file named *name*.

Message Variables

parm

The parameter that was not specified, although it is required.

entry

The statement that contains the required *parm*.

name

The name of the file containing the *entry* statement.

Operator response

Notify your system programmer.

System programmer response

Correct the error and reload the file if necessary.

EZL231I	INVALID TIMEOUT VALUE OF <i>interval</i> HAS BEEN DEFINED FOR <i>entry type</i> COMMANDS
----------------	---

Explanation

The specified timeout value defined in the control file member is incorrect.

Message Variables

interval

The timeout interval in error

entry

The first field of the affected control file entry

type

The second field of the affected control file entry

Operator response

Notify your system programmer.

System programmer response

Correct the timeout value in the control file.

EZL232I	HIERARCHY NOT BUILT - <i>restype</i> <i>resname</i> HAS NO LOWER NODES
----------------	---

Explanation

The hierarchy for the specified resource is not built because the resource has no lower nodes. When the hierarchy for resources monitored by the RECOVERY parameter is built, and if AUTO=Y, each resource is checked for any lower nodes to set.

Message Variables

restype

The type of resource

resname

The name of the resource

System action

Setup of the hierarchy cancels.

Operator response

Note the error and notify your system programmer.

System programmer response

Correct the control file entry for the resource type and resource name. The entry is RECOVERY= and the type is AUTO=. When you have made these changes, load the control file again.

EZL233E	HIERARCHY NOT BUILT - <i>restype</i> <i>resname</i> IS NOT VALID IN THIS NETWORK
----------------	---

Explanation

The hierarchy is not built for the specified resource, because the resource is not correctly defined in the local network.

Message Variables

restype

The type of resource

resname

The name of the resource

System action

AON stops setting up the hierarchy for the resource.

Operator response

Record the error for the resource and notify your system programmer.

System programmer response

Correct the control file.

EZL234I	NO ACTMON ROUTINE DEFINED FOR COMPONENT <i>component</i> OR <i>restype</i> <i>resname</i>, ACTIVE MONITORING NOT SCHEDULED
----------------	---

Explanation

AON tried to start active monitoring (ACTMON) on a resource for which no ACTMON routine is defined in the option definition table for the resource type.

Message Variables

component
The name of the component

restype
The type of resource

resname
The name of the resource

System action

The ACTMON routine does not start on the resource type or the resource name.

Operator response

Note the error and notify your system programmer.

System programmer response

Note the component and look at its option definition table, define the EZLRT ACTMON entry for the resource type and load the table again, using the LOADTBL command.

EZL235I	ACTIVE MONITORING ALREADY IN EFFECT FOR <i>restype</i> <i>resname</i> ON <i>location</i>, ACTIVE MONITORING REQUEST IGNORED
----------------	--

Explanation

AON tried to start active monitoring (ACTMON) on the specified resource, but failed, because ACTMON is already active.

Message Variables

restype
The type of resource

resname
The name of the resource

location
The domain or service point

EZL236I	RECOVERY MONITORING ALREADY IN EFFECT FOR <i>restype</i> <i>resname</i> ON <i>location</i>, ACTIVE MONITORING REQUEST IGNORED
----------------	--

Explanation

AON tried to start active monitoring (ACTMON) on a resource, but the command failed because the resource is in recovery mode.

Message Variables

restype
The type of resource

resname
The name of the resource

location
The domain or service point

System action

The request fails.

EZL237I	<i>resname</i> <i>restype</i> STATUS= "<i>resstat</i>" IS GOOD. DESIRED STATUS= "<i>desirestat</i>". ACTIVE MONITORING CONTINUES
----------------	---

Explanation

You have scheduled active monitoring for a resource, but the resource is currently in an acceptable status.

Message Variables

resname
The name of the resource being actively monitored

restype
The type of resource

resstat
The current status of the resource

desirestat
The requested status for active monitoring

System action

Active monitoring continues.

EZL238I	AUTOMATION OPERATOR <i>operator</i> IS NOT ACTIVE
----------------	--

Explanation

You issued a command on an ID that is not correctly defined or active.

Message Variables

operator

The operator ID on which the command was issued

System action

AONTEST stops.

Operator response

Check the ID of the automation operator and notify your system programmer.

EZL239I	CORRECT THE PROBLEM AND RERUN AONTEST
----------------	--

Explanation

AON encountered a problem running a test during AON initialization.

System action

AON initialization stops.

Operator response

Record all error messages and notify your system programmer.

System programmer response

Perform problem determination on all error messages, correct the problem, and reinitialize AON.

EZL241W	TRACE = <i>req</i> REQUEST IGNORED, SETTING = NONE
----------------	---

Explanation

You issued an AON trace function, but your NetView domain is not enabled for tracing. Tracing is typically disabled for improved performance.

Message Variables

req

The trace function you requested.

System action

The command is not issued.

Operator response

If you need to turn on the AON trace function, contact your System Programmer to gain access to the trace administration function.

System programmer response

Allow several NetView operators access to the AON Trace Administration function. See the *IBM Z NetView Administration Reference* for more information.

EZL242I	PROGRAM <i>program</i>-RUNCMD RETRY COUNT LIMIT OF <i>number</i> EXCEEDED FOR <i>resname</i>
----------------	---

Explanation

A REXX program issued a run command to the specified resource for the specified number of times (the limit for the specified resource) but received a busy sense code from a service point.

Message Variables

program

The name of the REXX program that issued the command

number

The number of times the REXX program issued the command

resname

The name of the resource

System action

The REXX program stops running.

Operator response

Start problem determination procedures for the resource. The problem might involve performance or looping.

EZL243I	<i>variable</i> COMMON GLOBAL UPDATED TO <i>value</i>
----------------	--

Explanation

AON updated the common global variable and value.

Message Variables

variable

The common global variable

value

The common global value

EZL244E	DSICTMOD RUNCMD TIMEOUT HAS BEEN EXCEEDED, RUNCMD TO <i>service point</i> FAILED FOR <i>program</i>.
----------------	---

Explanation

The run command (RUNCMD) timed out because the timeout value in the DSICTMOD NetView constants module is exceeded.

Message Variables

service point

The name of the service point

program

The name of the program that issued the RUNCMD

System action

The program issuing the RUNCMD ends and passes a return code of 5 back to the calling program.

Operator response

Check to see if the service point is hung. Start problem determination procedures on the resource. Also check to see if there is a problem with the NetView RUNCMD components. Make sure the DSIGDS task is not hung and that there is enough DSRBS available for the RUNCMD to run. To check this, issue the DSRBS DSIGDS command.

EZL245E **RCMD CORRWAIT TIMEOUT OF**
***seconds* SECONDS HAS BEEN**
EXCEEDED, RUNC MD TO *service*
***point* FAILED FOR *program*.**

Explanation

The run command (RUNCMD) timed out because the RCMD value (number of seconds) in the ENVIRON TIMEOUT entry is exceeded. The RCMD value is used in a PIPE command to issue the RUNCMD.

Message Variables

seconds

The number of seconds

service point

The name of the service point

program

The name of the program that issued the RUNCMD

System action

The program issuing the RUNCMD ends and passes a return code of 5 back to the calling program.

Operator response

Determine whether the service point is hung. Start problem determination procedures on the resource. Also, determine whether there is a problem with the NetView RUNCMD components. Ensure that the DSIGDS task is not hung and that there is enough

DSRBS available for the RUNCMD to run. To determine whether DSRBS is adequate, issue the DSRBS DSIGDS command.

EZL246E **RUNCMD FAILED TO SP *spname* -**
RECEIVED MESSAGE *msgnum*
SENSE CODE *sensecode*

Explanation

A RUNCMD that you sent to the specified service point abnormally ended with the specified message number and sense code.

Message Variables

spname

The name of the service point

msgnum

The number of the message received back from the RUNCMD

sensecode

The sense code information received with the message

System action

The RUNCMD stops.

Operator response

View the sense code information using the NetView SENSE command and correct the problem. If the problem persists, contact your system programmer.

System programmer response

Activate the service point, and start the agent software that accepts the RUNCMDs.

EZL247E ***command* - TGLOBAL *tglob* NOT**
INITIALIZED

Explanation

The specified command attempted to locate the specified task global variable (TGLOBAL) set but cannot find it.

Message Variables

command

The name of the command

tglob

The name of the TGLOBAL that is defined

Operator response

Notify your system programmer.

System programmer response

Perform the problem determination function to determine why the TGLOBAL parameter is not set. Set the task globals on the NetView session being used.

EZL248E	TASK GLOBAL VARIABLES NOT SET; MUST ISSUE <i>command</i> TO SET
----------------	--

Explanation

You must issue the specified command to set the required task global variables.

Message Variables

command

The command used to set the task global variables.

Operator response

Run the specified command to set the task global variables.

EZL249E	<i>command</i> - CGLOBAL <i>cglobal</i> NOT INITIALIZED
----------------	--

Explanation

The specified command cannot locate the specified common global variable (CGLOBAL) set.

Message Variables

command

The command used to set the common global variables

cglobal

The name of the CGLOBAL that is defined

Operator response

Notify your system programmer.

System programmer response

Perform the problem determination function to determine why the CGLOBAL parameter is not set. Set the common global variables.

EZL250E	TIMER ID = <i>timer</i> NOT SCHEDULED, INVALID <i>parameter</i> PARAMETER
----------------	--

Explanation

At initialization, AON cannot set the time for the specified timer.

Message Variables

timer

The timer that AON cannot set.

parameter

The parameter used to set the timer.

System action

The timer is not set.

Operator response

Notify your system programmer.

System programmer response

Correct the parameter in the control file and load the control file again.

EZL251E	TIMER ID = <i>timer</i> NOT SCHEDULED, CURRENT TIME PAST THE EXECUTION
----------------	---

Explanation

AON cannot schedule the specified timer, because the current time exceeds the time set for the timer.

Message Variables

timer

The timer

System action

The timer is not set.

Operator response

If the timer is necessary, use the AON timer function to set the timer.

EZL252E	TIMER ID = <i>timer</i> NOT SCHEDULED, <i>reason</i> RC = <i>rc</i>
----------------	--

Explanation

The specified timer cannot be scheduled because of the specified reason.

Message Variables

timer

The timer

reason

The explanation of the failure

rc

The NetView return code values

System action

The timer is not scheduled.

Operator response

Determine why the timer was not scheduled and issue the timer request again. For more information about the AFTER, AT, CHRON, and EVERY commands, see the online help.

EZL253E **REQUESTED TIMER *timer* NOT FOUND**

Explanation

AON cannot find the specified timer when it tried to purge the timer.

Message Variables

timer

The name of the timer

System action

Processing resumes.

Operator response

Verify that the timer does not exist by refreshing the timer display. Possibly, the timer exceeded its time limit before it was deleted.

EZL254E **TIMER ID = *timer* NOT SCHEDULED, *task* NOT ACTIVE**

Explanation

AON tried to set the specified timer, but the task that issues the command on the timer when the timer reaches its time limit is not active.

Message Variables

timer

The name of the timer

task

The name of the timer task

System action

Processing resumes without the timer being set.

System programmer response

Perform the problem determination function on why the task is not active. If the task must be active, start it.

EZL255E **TIMER ID = *timer* NOT SCHEDULED, DUPLICATE ID TIMER ALREADY EXISTS**

Explanation

AON tried to set the specified timer, but the timer is already set.

Message Variables

timer

The name of the timer

System action

Processing resumes.

Operator response

Select another timer to set.

EZL256E **TIMER ID = *timer* NOT SCHEDULED**

Explanation

AON cannot set the specified timer.

Message Variables

timer

The timer AON cannot define.

System action

The timer is not set.

Operator response

Notify your system programmer.

System programmer response

Determine why the timer cannot be set by trying to set it manually.

EZL258E **TIMER ID = *timer* NOT SCHEDULED, *failure* FAILED WITH REASON *reason***

Explanation

AON cannot set the specified timer because of the specified reasons.

Message Variables

timer

The timer

failure

The failure key

reason

The reason for failure

System action

The timer is not scheduled. Possibly, the timer is not set because it is inactive.

Operator response

Determine why the timer was not scheduled, correct the problem, and issue the time request again.

EZL260I *date time opid program ENTRY/EXIT parmlist*

Explanation

This message appears when the AONTRACE (RXTRACE) program starts. The message displays the entry and exit parameters for the specified REXX program, command lists, and command processors.

Message Variables

date

The date

time

The time

opid

The ID of the operator or task running the program

program

The name of the REXX program, the name of the command list, or command processors

parmlist

A list of the parameters passed to the program

EZL262E **MESSAGE ID "ID" INVALID, MUST BE "NNN" "ABCNNN" OR "ABCDNNN"**

Explanation

The specified message ID is not correct but must be like the other ones that are specified.

Message Variables

ID

The message ID that is incorrect.

NNN

Three decimal digits.

abcnnn

A 3-character prefix followed by three decimal digits. The prefix can contain numeric values.

abcdnnnn

A 4-character prefix followed by three decimal digits. The prefix can contain numeric values.

Operator response

Notify your system programmer.

System programmer response

Correct the message ID specified as the second parameter of the EZLMSG command.

EZL263I **MESSAGE ID NUMERIC "ID" IS NOT NUMERIC**

Explanation

The specified message ID is not correct because it does not end with three numeric digits.

Message Variables

ID

The message ID that is not correct. This ID is the second parameter of the EZLMSG command.

Operator response

Notify your system programmer.

System programmer response

Correct the message ID that is specified as the second parameter of the EZLMSG command.

EZL264I **TOO FEW PARMS ON EZLMSG COMMAND - 2 IS MINIMUM**

Explanation

You issued the EZLMSG command without specifying one or more of the required parameters. At least two parameters must be specified.

Operator response

Notify your system programmer.

System programmer response

Ensure that the coding of the EZLMSG command specifies a message ID value as the second parameter. If you do not want to specify a value for the first parameter, enter a comma in its position as a place holder, for example, EZLMSG, 001.

EZL271E **PROGRAM *program* FAILED - LINE *line* CONTAINS A VARIABLE WITH NO VALUE - *variable***

Explanation

AON found an error in the specified REXX program.

Message Variables

program

The failed program

line

The line in the program where the error occurred

variable

The variable in the program that is missing a value

System action

AON stops processing the REXX program.

Operator response

Notify your system programmer.

System programmer response

Contact IBM Software Support and provide the appropriate problem determination information.

EZL275E ***program FAILED - LINE line***
SYNTAX ERROR number

Explanation

The specified program failed because of a syntax error in the REXX code.

Message Variables***program***

The failed program

line

The line number

number

The REXX error number

System action

AON stops processing the program.

Operator response

Notify your system programmer.

System programmer response

Contact IBM Software Support and give the appropriate problem determination information.

EZL280E ***START OF ERROR MDS_MU***
DISPLAY RECEIVED FROM appl

Explanation

This message is the first line of a multiline message. When an error associated with an LU 6.2 MS Transport send request occurs, this line is written to the NetView log.

Message Variables***appl***

The name of the application that detected the error. MDS_ROUTER is the most probable name, but other application names are possible. If the

application name is hex data, it means that AON cannot determine its real name.

Operator response

Record the application name for your system programmer. Examine the contents of the sense code in message EZL284E to determine the cause of the failure.

Note: Only the first failure of NPDA will be shown.

EZL281E ***DESTINATION NETID = netid***

Explanation

This message identifies the destination network ID for the LU 6.2 MS Transport send.

Message Variables***netid***

The network ID as specified in the send command

Operator response

Note the network ID for the system programmer. Determine the cause of the failure based on the contents of the sense code in message EZL284E.

EZL282E ***DESTINATION LU = destlu***

Explanation

This message identifies the destination LU name for the LU 6.2 MS Transport send. This name might be the destination NetView domain ID of a Communications Manager LU0 name.

Message Variables***destlu***

The destination NetView domain or the Communications Manager LU0 name.

Operator response

Record the name of the destination LU for the system programmer. Determine the cause of the failure based on the contents of the sense code in message EZL284E.

EZL283E ***DESTINATION APPLICATION =***
destappl

Explanation

This message identifies the destination MS application for the LU 6.2 MS Transport send.

Message Variables***destappl***

The name of the destination MS application

Operator response

Record the name of the destination application for the system programmer. Determine the cause of the failure based on the contents of the sense code in message EZL284E.

EZL284E **SENSE CODE RECEIVED = X**
 'sensecode'

Explanation

This message identifies the SNA sense code that explains why the error occurred.

Message Variables

sensecode
 The SNA sense code

Operator response

Issue the NetView SENSE command to view an online explanation of the failure. If the sense code is unavailable, see *SNA Formats*.

System programmer response

See *VTAM Messages and Codes* or *SNA Formats*.

EZL285E **CORRELATOR = X'correlator'**

Explanation

This message identifies the LU 6.2 MS Transport send that caused the error.

Message Variables

correlator
 A unique hex string that MS Transport builds when a send is requested.

Operator response

Record the correlator information for the system programmer. Determine the cause of the failure from the sense code in message EZL284E.

EZL289E **END OF ERROR MDS_MU DISPLAY**

Explanation

This message identifies the end of the display group of messages for the MDS_MU error.

EZL302I **AUTOMATION STATE SET *status***
 FOR *resname*

Explanation

The specified resource is set to ON or OFF.

Message Variables

status

The status of the specified resource. The status is ON or OFF.

resname

The name of the resource.

EZL306I **PRIMARY LOG *log* IS NOW ACTIVE**

Explanation

The log task switched logs and activated the primary log.

Message Variables

log
 The name of the primary automation log

System action

AON records the log information in the primary log.

EZL307I **SECONDARY LOG *log* IS NOW**
 ACTIVE

Explanation

The log task switched logs and activated the secondary log.

Message Variables

log
 The name of the secondary automation log

System action

AON records the log information in the secondary log.

EZL308I ***resname* : TASK *status* - ALL**
 ***table(s)* ARE FULL**

Explanation

AON cannot switch log files because all of the log files are full.

Message Variables

resname
 The name of the resource

status
 The status of the task

table
 The control file literal tables that are used for task logging

System action

AON stops the log task.

Operator response

Notify your system programmer.

System programmer response

Examine the primary and secondary control file entries for EZLTLOG to determine why the controls did not switch. Use the AUTOFLIP keyword.

EZL309E	MUST OFFLOAD PRIMARY <i>log</i> MANUALLY - NO CONSOLES AVAILABLE
----------------	---

Explanation

The log autoflip function cannot issue the MVS START command to reset the primary logs.

Message Variables

log
The name of the log

System action

AON does not switch logs.

Operator response

Notify your system programmer.

System programmer response

Allocate a subsystem-allocatable console for NetView to use, or start the EZLSUP01 member in the EZL5J007 job to perform the switch.

EZL310I	MUST OFFLOAD SECONDARY <i>log</i> MANUALLY - NO CONSOLES AVAILABLE
----------------	---

Explanation

The log autoflip function cannot issue the MVS START command to reset the secondary logs.

Message Variables

log
The name of the secondary automation log

System action

AON does not switch the log.

Operator response

Notify your system programmer.

System programmer response

Allocate a subsystem-allocatable console for NetView to use, or start the EZLSUS01 member in the EZL5J007 job to perform the switch.

EZL314I	CATCHUP TIMER ID <i>timer</i> NOT EXECUTED. TASK <i>operator</i> NOT LOGGED ON
----------------	---

Explanation

The specified timer became a catch-timer because its interval passed. However, the timer cannot be issued because the operator it used to issue the command on the timer was not logged on. Therefore, the timer was deleted.

Message Variables

timer
The name of the timer

operator
The ID of the operator who issued the command on the timer

Operator response

Issue the command again manually under the appropriate operator ID.

EZL315I	TIMER <i>timer</i> PURGED
----------------	----------------------------------

Explanation

You deleted a timer from the NetView timer list.

Message Variables

timer
The deleted timer

EZL319I	OPERATOR <i>operator1</i> SCHEDULED TIMER <i>timer</i> UNDER OPERATOR <i>operator2</i> - COMMAND: <i>text</i>
----------------	--

Explanation

You created and defined a new timer.

Message Variables

operator1
The ID of the operator who created the timer

timer
The name of the timer that was scheduled.

operator2
The ID of the operator who scheduled the timer

text
The command to issue when the timer exceeds its interval

System action

AON sets the timer.

EZL320I	TIMER <i>timer</i> WAS EXECUTED ON TASK <i>operator</i> BY CATCHUP PROCESSING
----------------	--

Explanation

Catch-up processing successfully issued a command on the timer again. The timer had exceeded its running time and cannot be restored by the timer-restore component of NetView program.

Message Variables

timer

The name of the timer for which the timer command was issued again

operator

The ID of the operator who issued the timer command

EZL331I	VTAM NOT ACTIVE: COMMAND <i>command</i> CAN NOT BE INVOKED
----------------	---

Explanation

AON issued a VTAM command while VTAM was not active.

Message Variables

command

The failed command

System action

AON does not process the command.

Operator response

Notify your system programmer.

System programmer response

Start VTAM and issue the command again.

EZL332I	RECYCLING NETWORK NODE <i>resname</i>
----------------	--

Explanation

AON is issuing a RECYCLE command for the specified resource.

Message Variables

resname

The name of the resource being recycled

System action

The system recycled the resource.

EZL333I	<i>restype resname</i> ON <i>location</i> HAS BEEN RECYCLED
----------------	--

Explanation

AON recycled the specified resource.

Message Variables

restype

The type of resource

resname

The name of the resource

location

The domain or service point

EZL334I	UNABLE TO VARY <i>restype resname</i> ON <i>location</i> ACTIVE
----------------	--

Explanation

You tried to issue a VARY ACT command, but the command failed to activate the resource.

Message Variables

restype

The type of resource

resname

The name of the resource

location

The domain or service point

System action

The resource remains not active.

Operator response

Use the log to determine why the resource is not normal and notify your system programmer.

System programmer response

Determine why the resource is not normal. Correct the problem and issue the command again.

EZL335I	NO RESPONSE FOR <i>seconds</i> SECONDS - RECYCLE COMMAND ENDING
----------------	--

Explanation

The RECYCLE command waited the specified number of seconds for a response from the VARY ACT command.

Message Variables

seconds

The number of seconds the RECYCLE command waited.

System action

AON stops processing the RECYCLE command.

Operator response

Increase the timeout value and manually issue the VARY ACT command on the resource.

System programmer response

Determine why the resource is not normal. Correct the problem and issue the command again.

EZL336E 'resname' IS NOT A VALID RESOURCE NAME

Explanation

You issued a VARY ACT or VARY INACT command for the specified resource, but VTAM does not recognize the resource.

Message Variables**resname**

The name of the resource

System action

AON does not process the VARY ACT command or the INACT command on the resource.

Operator response

Verify the spelling of the resource name and issue the VTAM command again. If the problem persists, notify your system programmer.

System programmer response

Determine why the resource is not recognized by VTAM. Correct the problem and issue the command again.

EZL337I COMMAND *command* CANCELLED BY OPERATOR

Explanation

You canceled the specified command.

Message Variables**command**

The name of the canceled command

EZL338I

**IF UNABLE TO ACTIVATE AFTER
number SECONDS - RECYCLE
COMMAND WILL TERMINATE**

Explanation

The RECYCLE command waits the specified number of seconds for a response from VTAM regarding the activation of a resource. If VTAM does not respond in time, the RECYCLE command stops processing.

Message Variables**number**

The number of seconds in which AON tries to activate the RECYCLE command

System action

The RECYCLE command stops.

**EZL341I NO LARGE SCALE THRESHOLDING
CONTROL FILE ENTRY FOUND FOR
*type***

Explanation

AON received an event on which thresholding is being tracked, but the threshold type has no entry in the control file.

Message Variables**type**

The type used for large-scale thresholding

System action

Large-scale thresholding does not start.

Operator response

Notify your system programmer.

System programmer response

Correct the control file entry for the type and load the control file again.

**EZL342I *keyword* FOR *type* INVALID OR
keyword NOT FOUND IN CONTROL
FILE FOR LARGE SCALE
THRESHOLDING**

Explanation

There is an incorrect parameter in the control file or the keyword is missing from the control file.

Message Variables**keyword**

The large-scale threshold keyword

type

The type used for large-scale thresholding

System action

Large-scale thresholding does not start.

Operator response

Notify your system programmer.

System programmer response

Correct the control file entry for the type and load the control file again.

EZL343I **LARGE SCALE *type* THRESHOLD OF
number EVENTS WITHIN
timeframe HAS BEEN REACHED**

Explanation

The threshold on the specified monitored type was reached.

Message Variables

type

The type used for large-scale thresholding. The *type* value can consist simply of a valid threshold type or it can consist of a valid threshold type with the name of a resource appended to it.

number

The number of events

timeframe

The interval for the type that is defined in the control file

Operator response

View the congestion area to determine whether any action is required and reference the documentation on large-scale thresholding for the appropriate component.

EZL350I ***resname restype* IS BETWEEN
endpt1 endpt2**

Explanation

This is an informational message that identifies the endpoints of a session being actively monitored by AON. This message accompanies other messages regarding the session.

Message Variables

resname

The name of the resource being actively monitored

restype

The type of resource

endpt1

One of the session partners

endpt2

The second session partner

System action

Active monitoring continues.

EZL400W ***functionname* FUNCTION FAILED
WITH RETURN CODE *retcode* -
FUNCTION IS DISABLED**

Explanation

This message is issued when the AONAIP or AONNOIV function is unable to continue processing requests.

Message Variables

functionname

Either the Automation in Progress (AIP) or Operator Intervention View (OIV) function

retcode

The return code indicating the cause of the failure as follows:

100

The RODMNAME is not specified in Environment Setup.

104

The MSMACC command is not available.

108

The VTAM SNA Node Name was not found during initialization.

109

The current operator is not authorized to use MSMACC.

110

The AIP function is already disabled.

112

The OIV function is already disabled.

126

The required AIPOPER AUTOOPS entry in the AON control file is missing or is not valid.

System action

The specified function is already disabled or has been disabled as a result of the failure.

Operator response

If you need to enable the AIP or OIV function, contact your system programmer.

System programmer response

Examine the return code and determine the reason for the failure. This message indicates that the AONAIP or AONOIIV function is now disabled. If several EZL400W messages exist in the log, the return code in the first message will indicate the reason for the failure. Correct the problem as needed and reinitialize AON.

EZL401W	<i>functionname</i> FUNCTION FAILED. RODM <i>rodname</i> FAILED WITH RODM RETURN CODE <i>retcode</i> REASON CODE <i>rescode</i> - CORRECT THE PROBLEM
----------------	--

Explanation

This message is issued when the AONAIP function detects unexpected RODM Return and Reason codes.

Message Variables

functionname

Either the Automation in Progress (AIP) or Operator Intervention View (OIV) function

rodname

The RODM name that is defined to AON

retcode

The RODM return code

rescode

The RODM reason code

System action

The specified function is disabled because of the RODM error.

Operator response

The calls specified in *functionname* will continue to fail until the problem is corrected. If necessary, contact your system programmer.

System programmer response

Examine the RODM return and reason codes to determine the cause of the failure. Correct the problem as needed.

EZL402W	<i>functionname</i> FUNCTION FAILED. MSM ACCESS FAILED WITH RETURN CODE <i>retcode</i> - FUNCTION IS DISABLED
----------------	--

Explanation

This message is issued when the specified function detects an unexpected MSM Access return code.

Message Variables

functionname

Either the Automation in Progress (AIP) or Operator Intervention View (OIV) function

retcode

MSM Access return code

System action

The specified function is disabled because of the unexpected MSM Access error.

Operator response

If you need to enable the AIP or OIV function, contact your system programmer.

System programmer response

Examine the MSM Access return code to determine the cause of the failure. Correct the problem and reinitialize AON.

EZL403I	AUTOMATION IN PROGRESS FUNCTION WILL USE GATEWAY PREFIX <i>prefix</i> - AN ATTEMPT TO ACCESS THE FLBSYSD GATEWAY NCP SETTING FAILED
----------------	--

Explanation

This message is issued when the AONAIP function is unable to access the FLBSYSD member to obtain the gateway prefix during initialization. Or, if the member was accessed the GATEWAY_NCP entry was not found.

Message Variables

prefix

The prefix that will be used to refer to gateway objects in RODM.

System action

The Automation in Progress function, if enabled, uses the prefix when attempting to set the AIP bit for NCP gateway objects.

Operator response

Contact your system programmer.

System programmer response

Verify that the gateway prefix is correct. If it is not, determine the reason for the error. During initialization, AON attempts to read the FLBSYSD member in search of the first GATEWAY_NCP entry. AON needs access to the FLBSYSD member and

expects a GATEWAY_NCP entry. Correct the problem as needed and reinitialize AON.

**EZL404E DOMAIN *domainid* IS
FORWARDING AUTOMATION IN
PROGRESS UPDATES TO THIS
DOMAIN WHICH IS NOT DEFINED
AS EXPECTED**

Explanation

This message is issued when the AONAIP updates are forwarded to the current domain, and the current domain is not defined as an AON AIP focal point.

Message Variables

domainid

The domain that sends the AONAIP updates to the current domain

System action

The AONAIP function update is ignored.

Operator response

Contact your system programmer.

System programmer response

If this domain is not a focal point for AONAIP updates, correct the RODMDOM setting in the AON control file of the sending domain. If this domain is the focal point for AONAIP updates, verify the AONAIP function is enabled correctly. Correct the problem as needed and reinitialize the appropriate AON.

**EZL405E AN ATTEMPT TO FORWARD
AUTOMATION IN PROGRESS
UPDATES TO DOMAIN *domainid*
HAS FAILED**

Explanation

This message is issued when AONAIP updates cannot be forwarded to the selected domain.

Message Variables

domainid

The domain selected to receive the AONAIP updates, otherwise known as the AONAIP focal point

System action

The AONAIP function update has failed.

Operator response

Contact your system programmer.

System programmer response

Verify the correct domain was selected in the RODMDOM AON control file entry. If the domain is correct, verify the AON gateway session with the target domain is defined and active. Enable the gateway interface or otherwise correct the AON AIP settings as needed, reinitialize AON if appropriate.

**EZL406E *commandname* COMMANDS MUST
BE FORWARDED TO THE RODM
FOCAL POINT DOMAIN *domainid* -
commandname UPDATE IS
IGNORED**

Explanation

The specified command must be issued from the AON AIP focal point domain.

Message Variables

commandname

Contains the current command AONAIP or AONOIV

domainid

The domain that is defined as the AONAIP focal point

System action

The specified function update has failed.

Operator response

Issue the command on, or forward the command to, the AONAIP focal point domain. Contact your system programmer if necessary.

System programmer response

Both AONAIP and AONOIV commands must be issued to an AIP focal point domain. Verify the focal point is defined correctly and that the operator can issue the commands to that domain.

**EZL407E *functionname* FUNCTION FAILED.
RODM *rodname* FAILED WITH
RODM RETURN CODE *retcode*
REASON CODE *rescode* -
FUNCTION IS SUSPENDED**

Explanation

The AONAIP command cannot be executed until RODM is initialized or other initialization problems are resolved.

Message Variables

functionname

Either the Automation in Progress (AIP) or Operator Intervention View (OIV) function

rodname

The RODM name that is defined to AON

retcode

The RODM return code

rescode

The RODM reason code

System action

The current AONAIP function fails.

Operator response

No action is necessary, however AONAIP function commands cannot complete until RODM is initialized. If this error persists, contact your system programmer.

System programmer response

Ensure RODM is active with the appropriate data models loaded. This error is not considered fatal as it does not disable the AON AIP function. However no RODMAIP commands will complete successfully until the problem indicated in the return codes is corrected.

EZL408E

**functionname FUNCTION FAILED.
WAITING ON RODM
INITIALIZATION**

Explanation

The specified function cannot be executed until RODM is initialized.

Message Variables**functionname**

Either the Automation in Progress (AIP) or Operator Intervention View (OIV) function

System action

The current function fails.

Operator response

No action is necessary; however, the specified function cannot complete until RODM is initialized. If this error persists, contact your system programmer.

System programmer response

Ensure RODM is active or in the process of becoming active. AON detects when RODM has initialized. This message can only occur after AON initialization.

EZL409E

**AUTOMATION IN PROGRESS
UPDATES IGNORED FOR
RESOURCE TYPE *resctype* -
DISABLED BY ENVIRON AIP
ENTRY**

Explanation

This message is issued when the AONAIP function is unable to change the AIP bit for a supported resource type, which is disabled by the ENVIRON AIP entry. Operator Intervention View actions are also blocked by ENVIRON AIP settings for the specified resource type.

Message Variables**resctype**

The resource type passed to AONAIP

Operator response

If the AIP bit needs to be updated for this resource type, contact your system programmer.

System programmer response

Determine whether AIP support is to be used for the resource type, update ENVIRON AIP entry if necessary, and reinitialize AON.

EZL440E

**INFORM POLICY MEMBER
member_name statement
STATEMENT STARTING AT LINE
number CONTAINS THE
FOLLOWING UNKNOWN
PARAMETERS: *invalid_parms***

Explanation

An error was detected in the specified inform policy member. Unknown, duplicate, or incorrectly entered parameters were detected for the identified statement.

Message Variables**member_name**

The inform policy member which contains the error.

statement

The type of statement which contains the error.

number

The line number in the policy member where the statement in error begins.

invalid_parms

A list of incorrect parameters supplied on the current statement.

System action

The inform policy member will not be loaded until the error is corrected, or the test of inform policy member fails.

Operator response

Use the list of incorrect parameters to resolve the problem or contact your system programmer.

System programmer response

Examine the incorrect parameters and correct the reason for the failure. Attempt to reload the inform policy member after correcting the problems.

EZL441E **INFORM POLICY *policy_name* statement ENTRY STARTING AT LINE *number* CONTAINS SYNTAX ERROR *errorcode* IN *keyword***

Explanation

An error was detected in the specified inform policy member. The *errorcode* can be used to determine the exact type of the error.

Message Variables

policy_name

The inform policy or group name which contains the error.

statement

The type of statement which contains the error (GROUP, INFORM, CONTACT, or SETUP)

number

This is the line number in the policy member where the statement in error begins.

errorcode

The error code indicating the cause of the failure, as follows:

- 8** Value not found, or unexpected data found
- 10** Numeric data expected, or data format error detected
- 12** Invalid times specified
- 14** Stop time is not later than the start time
- 16** Connection type is not supported
- 18** Required service point name was omitted on both the current inform and contact entries

26

Tap access number supplied for interface other than alpha-page

keyword

The specific keyword which has the problem

System action

The inform policy member will not be loaded until the error is corrected, or the test of inform policy member fails.

Operator response

Use the errorcode to resolve the problem or contact your system programmer.

System programmer response

Examine the errorcode and determine the reason for the failure. Correct the problem as needed and attempt to reload the inform policy member.

EZL442I **INFORM LOG MEMBER NOT DEFINED**

Explanation

The inform policy logging function was unable to read from the log member because no member is defined.

System action

The command issued to access the inform policy log ends.

Operator response

If this message persists and the log contains entries, contact your system programmer.

System programmer response

Check the inform policy SETUP statement to see if logging is enabled (LOG=YES) and the log file name (MEMBER=).

EZL443E **ROUTE *route* CONFLICTS WITH CONNECTION TYPE *contype* IN THE CONTACT STATEMENT STARTING AT LINE *number* IN POLICY *policy_name***

Explanation

The routing information specified conflicts with the connection type.

Message Variables

route

Routing information specified in the failing statement.

contype

The type of connection specified in the failing statement.

number

This is the line number in the policy member where the statement in error begins.

policy_name

The inform policy name which contains the error.

System action

The inform policy member will not be loaded until the error is corrected, or the test of inform policy member fails.

Operator response

Use the inserts in the message to identify and resolve the problem or contact your system programmer.

System programmer response

Correct the route or connection type and attempt to reload the inform policy member.

EZL444E **A NUMERIC MESSAGE IS REQUIRED IN INFORM POLICY *policy_name* CONTACT ENTRY STARTING AT LINE *number* WHEN CONNECTION=NUMPAGE IS SPECIFIED**

Explanation

A numeric message is required when the connection selected is a numeric pager.

Message Variables**policy_name**

The inform policy name which contains the error.

number

This is the line number in the policy member where the statement in error begins.

System action

The inform policy member will not be loaded until the error is corrected, or the test of inform policy member fails.

Operator response

Correct the message or the connection type selected to resolve the problem or contact your system programmer.

System programmer response

Correct the inform policy as needed and attempt to reload the inform policy member.

EZL445E **INTERFACE ROUTINE *routine* IN THE CONTACT ENTRY STARTING AT LINE *number* IN POLICY *policy_name* WAS NOT FOUND**

Explanation

The routine specified in the inform policy contact entry cannot be found, or the operator is not authorized to execute it.

Message Variables**routine**

The routine name specified by interface keyword of the contact statement or EZLENETF by default.

number

This is the line number in the policy member where the statement in error begins.

policy_name

The inform policy name which contains the error.

System action

The inform policy member will not be loaded until the error is corrected, or the test of inform policy member fails.

Operator response

Insure the interface routine is available and the operator has the necessary authorization to use it, or contact your system programmer.

System programmer response

Correct the inform policy as needed and attempt to reload the inform policy member. Contact the person responsible for security in your organization if an access error exists.

EZL446I **THE CONTACT ENTRY KEYWORD *keyword* STARTING AT LINE *number* WAS TRUNCATED IN POLICY *policy_name***

Explanation

Either the contact entry name or message keyword specified was truncated. The truncation may occur when the inform policy member is loaded, when the message is built with synonym substitution, or by operator input on the INFORM command.

Message Variables

keyword

Identifies which keyword's value has been truncated.

number

This is the line number in the policy member where the affected statement begins.

policy_name

The inform policy name which contains the affected keyword.

System action

The inform policy member is loaded, the test of inform policy member completes, or the INFORM command continues.

Operator response

Ensure the contact entry name or message is adequate following the truncation. Update the inform policy or reissue the INFORM command.

System programmer response

Correct the inform policy member as needed to eliminate these messages.

EZL447E **A statement STATEMENT WAS EXPECTED AT LINE *number***

Explanation

An unexpected statement or statement out of sequence was encountered in the policy member. This message can occur for any failing %INCLUDE statements.

Message Variables**statement**

The statement that was expected.

number

The line number in the policy member where the statement in error begins.

System action

The inform policy member is not loaded, or the test of inform policy member fails.

Operator response

Remove any incorrect statements, or correct the sequence error in the statements in the inform policy member.

System programmer response

Correct the inform policy as needed and attempt to reload the inform policy member.

EZL448I **NO INFORM POLICY MEMBER IS LOADED**

Explanation

There is no inform policy member loaded at this time.

Operator response

The inform policy member cannot be disabled if no policy number is loaded.

EZL449E **INVALID INFORM POLICY NAME *policy_name* FOUND AT LINE *number***

Explanation

The inform policy name shown is not valid.

Message Variables**policy_name**

The inform policy name which contains the error.

number

This is the line number in the policy member where the statement in error begins.

System action

The inform policy member will not be loaded until the error is corrected, or the test of inform policy member fails.

Operator response

Correct the inform policy name, or contact your system programmer.

System programmer response

Correct the inform policy as needed and attempt to reload the inform policy member.

EZL450I **INFORM POLICY INACTIVE**

Explanation

No inform policy member is currently loaded.

System action

None, or discontinue the current log related function.

Operator response

An inform policy member may need to be loaded to complete your request.

EZL451I **TEST OF INFORM POLICY MEMBER *member_name* WAS *result***

Explanation

The message indicates the result of a syntax check on the inform policy member.

Message Variables

member_name

The DSIPARM member tested.

result

The result of the inform policy member test. SUCCESSFUL indicates that the inform policy member loads if the TEST keyword is omitted. UNSUCCESSFUL is accompanied by the errors encountered which must be corrected before attempting to activate this member as your active inform policy.

System action

The inform policy member is not loaded when the test keyword is specified.

Operator response

Note the results of the test and make corrections if necessary before loading the inform policy member.

EZL452I	DSIPARM MEMBER <i>member_name</i> IS BEING USED FOR INFORM POLICY
----------------	--

Explanation

The DSIPARM member shown was loaded using the INFORMTB command and is the active inform policy table.

Message Variables

member_name

The DSIPARM member currently being used for inform policy.

System action

DSIPARM member *member_name* has been or is now the active inform policy.

EZL453I	INFORM POLICY ACTIVATED AT <i>time</i> ON <i>date</i> BY <i>oper</i>
----------------	---

Explanation

This message indicates when a DSIPARM member was activated using the INFORMTB command, and became the active inform policy table.

Message Variables

time

The time the inform policy table was activated.

date

The date the inform policy table was activated.

oper

The operator task that activated the inform policy table.

System action

The inform policy table status is displayed.

EZL454E	DUPLICATE POLICY OR GROUP NAME <i>name</i> DETECTED AT LINE <i>number</i>
----------------	--

Explanation

GROUP statement policy names and INFORM statement policy names cannot be duplicated in an inform policy member.

Message Variables

name

The INFORM statement policy name or the GROUP statement group name which is a duplicate.

number

This is the line number in the policy member where the statement in error begins.

System action

The inform policy member will not be loaded until the error is corrected, or the test of inform policy member fails.

Operator response

Correct either the GROUP or the INFORM statement containing the duplicate policy name. All GROUP names and INFORM policy names must be unique.

EZL455I	PROCESSING FAILED FOR 'INFORMTB <i>member_name</i>' COMMAND
----------------	--

Explanation

The inform policy table was not loaded because of errors. See previously issued error messages for details.

Message Variables

member_name

The member name that was not activated.

System action

The inform policy member will not be loaded until the error is corrected. If an inform policy member is currently active, it is not affected by this failure.

Operator response

Correct the member as indicated by the preceding messages and attempt to reload it.

EZL456E ***statement* STATEMENT STARTING AT LINE *number* WAS NOT PROPERLY TERMINATED**

Explanation

An inform policy statement was not ended with a semicolon.

Message Variables

statement

The type of statement which was not properly ended.

number

This is the line number in the policy member where the statement in error begins.

System action

The inform policy member will not be loaded until the error is corrected.

Operator response

Each inform policy statement must end with a semicolon (;), with the exception of the %INCLUDE statement. Add the missing semicolon to inform policy member and attempt to reload it.

EZL457I **THE *keyword* KEYWORD IN THE CONTACT ENTRY STATEMENT STARTING AT LINE *number* WAS DEFAULTED TO *value***

Explanation

A contact entry keyword was assigned a default value.

Message Variables

keyword

The keyword which was defaulted.

number

The line number in the CONTACT statement.

value

The default value used.

System action

If no other errors exist, the inform policy member will be loaded using the specified values.

Operator response

If the default value is not acceptable, make the necessary changes to the inform policy member and reload it.

EZL458I **INFORM POLICY *polycname* ENTRY STARTING AT LINE *number* CONTAINS AN INCORRECT VALUE FOR KEYWORD *keyword***

Explanation

A keyword on the specified INFORM statement contains a missing or incorrect value.

Message Variables

polycname

The name of the inform policy member containing the error.

number

The line number in the CONTACT statement.

keyword

The keyword which was defaulted.

System action

The inform policy member will be loaded until the error is corrected, or the test of the inform policy member fails.

Operator response

Correct the inform policy member as indicated and try to reload it.

EZL459I **INFORM POLICY NAME *policy_name* WAS NOT FOUND IN THE ACTIVE INFORM POLICY MEMBER *member_name***

Explanation

The current inform table does not contain any GROUP or INFORM statement for the policy name specified in the command.

Message Variables

policy_name

The INFORM or GROUP statement policy name.

member_name

The DSIPARM member which was loaded to form the active inform policy.

System action

The inform action ends. Check the inform policy or group name specified and verify it corresponds to a

GROUP or INFORM statement in the active inform policy member.

Operator response

Only defined GROUP and INFORM policies can be referenced by the INFORM command and be specified in the Notification Policy.

EZL460I *connection_type* **ACTION WAS**
 result **ISSUED FOR POLICY**
 policy_name **BY OPERATOR** *operid*

Explanation

This message indicates the result of an attempt to inform an operator using a specific type of connection.

Message Variables

- connection_type**
The type of inform connection attempted (for example, EMAIL, NUPAGE).
- result**
SUCCESSFULLY indicates the interface routine did not report a failure. UNSUCCESSFULLY indicates the interface routine detected a failure.
- policy_name**
The INFORM or GROUP policy name specified in the request.
- operid**
The operator who attempted the inform action.

System action

This message is in response to an inform request. The action taken by the system is specified by the *result* insert.

Operator response

Only defined GROUP and INFORM policies can be referenced by the INFORM command or be specified in the Notification Policy. If the expected action did not occur, update the inform policy, notification policy, or INFORM command invocation accordingly.

EZL461E **INFORM POLICY MEMBER**
 member_name **SETUP ENTRY**
 STARTING AT LINE *number*
 CONTAINS SYNTAX ERROR
 errorcode **IN** *keyword*

Explanation

The subject inform policy member contains a syntax error in a SETUP statement keyword.

Message Variables

member_name
The DSIPARM member which contains the error.

number
This is the line number in the policy member where the SETUP statement in error begins.

errorcode
The error code indicating the cause of the failure, as follows:

- 8**
Value not found, or unexpected data found.
- 10**
Inform log operator task is not currently defined.
- 12**
Inform log operator task cannot be started.
- 14**
Inform exit routine was not found

keyword
The SETUP statement keyword in error.

System action

The inform policy member will not be loaded until the error is corrected, or the test of inform policy member fails.

Operator response

Correct the SETUP keyword in error and attempt to reload the inform policy table.

EZL462E **NO CONTACT ENTRIES WERE**
 FOUND IN INFORM POLICY
 MEMBER *member_name*

Explanation

The subject inform policy member contains no contact entries.

Message Variables

member_name
The DSIPARM member which contains the error.

System action

The inform policy member will not be loaded until the error is corrected, or the test of inform policy member fails.

Operator response

At least one contact statement is required in the inform policy member. Add a contact statement to inform policy member and attempt a reload.

**EZL463E THE INFORM POLICY LOGGING
FUNCTION WAS UNABLE TO
WRITE TO OR CLOSE THE *dsname*
OUTPUT MEMBER**

Explanation

The subject inform policy logging function detected a failure when attempting to write to or close the log member.

Message Variables***dsname***

The fully qualified data set name which cannot be written to or closed.

System action

The inform policy log entry may have been lost or the inform log may no longer be accessible.

Operator response

If this message persists, correct the problem with the data set to resume inform policy logging.

**EZL464I THE INFORM LOG FUNCTION IS
NOT ENABLED**

Explanation

The inform policy logging function is not enabled and cannot be accessed at this time.

System action

The command to access the inform log ends.

Operator response

The logging function must be enabled in the SETUP statement of the active inform policy member to enable ILOG® commands. Inactive inform logs can be viewed using the NetView browse command.

**EZL465E UNABLE TO READ THE INFORM
LOG MEMBER OR THE MEMBER
CONTAINS NO ENTRIES**

Explanation

The inform policy logging function was unable to read from the log member or the log member currently contains no entries.

System action

The command issued to access the inform policy log ends.

Operator response

If this message persists and the log contains entries, contact your system programmer.

System programmer response

Check the inform policy member using the NetView browse command or some other means to see if it contains entries. Check the NetView log to see if log updates are failing. Correct the problem with the log data set and retry the command.

**EZL466I NO NEW INFORM ACTIONS WERE
SUCCESSFULLY ISSUED AS A
RESULT OF INTERFACE
PROBLEMS OR THE CURRENT
POLICY SETTINGS**

Explanation

An attempt was made to perform a reinform. At the time of this attempt, either the interface was unable to communicate with the service point, or the current policy specifies that no actions are warranted for the original policy at this time.

System action

The reinform is not issued.

Operator response

Verify the service point is available by using the ILOG REINFORM/NEW option to display the policy name associated with the entry. Determine if a contact must be defined for the current time and date. If corrections are required, make the corrections, reload the inform policy member, and attempt another reinform.

**EZL467E OUTPUT MEMBER *member_name*
IN DATASET *dataset* CANNOT BE
REPLACED WITH AN INFORM
POLICY LOG MEMBER**

Explanation

Only an existing inform policy log can be overwritten by an inform policy log. This protects all other types of files from being overwritten.

Message Variables***member_name***

The member name which was not previously an inform log.

dataset

The DSILIST data set name where *member_name* was found.

System action

This attempt to update the inform policy log and all subsequent attempts will fail. The inform policy log function cannot overwrite other types of members.

Operator response

Disable the inform logging function or update the SETUP statement MEMBER keyword with a valid log member name. Reload the inform policy member and verify actions can now be logged.

EZL468E	INFORM PREPROCESSING EXIT 11 DID NOT RETURN AN EXPECTED GROUP OR POLICY NAME
----------------	---

Explanation

When AON Exit 11 returns a return code of 4 it must set the task global variable EZLPOLEX with a valid policy name, group name, or list of these names.

System action

No inform policy action is taken.

Operator response

Contact your system programmer.

System programmer response

Verify AON Exit 11 returns policy or group names defined in the current inform policy table by placing these names in the task global variable EZLPOLEX.

EZL469I	INFORM PROCESSING FOR GROUP OR POLICY <i>name</i> WAS CANCELLED BY <i>exit</i>
----------------	---

Explanation

An inform action was cancelled by an AON exit.

Message Variables

name

The group or policy name whose action was cancelled.

exit

The AON exit which cancelled the current inform status.

System action

The current processing for an inform action was cancelled by an AON inform policy exit.

Operator response

If the inform policy action was cancelled in error, or if all actions are being cancelled, contact your system programmer.

System programmer response

Verify the specified exit is functioning as expected.

EZL470E	GROUP <i>group_name</i> STATEMENT STARTING AT LINE <i>number</i> CONTAINS A REFERENCE TO ITSELF
----------------	--

Explanation

A group statement contains a reference to itself in the list of other group or policy names specified.

Message Variables

group_name

The GROUP statement which contains the error.

number

The line number in the policy member where the GROUP statement in error begins.

System action

The inform policy member will not be loaded until the error is corrected, or the test of the inform policy member fails.

Operator response

Correct the GROUP statement so it does not contain a direct reference to itself or an indirect reference through another group. Attempt to reload the inform table following the correction.

EZL471I	LOG ENTRY SEARCH START TIME DOES NOT PRECEDE THE STOP TIME
----------------	---

Explanation

The search start date and time does not precede the stop date and time.

System action

No search is performed.

Operator response

Correct the time parameters and retry the inform log search.

EZL472I	DATE OR TIME WAS NOT ENTERED ON THE PANEL IN THE SAME FORMAT AS SHOWN
----------------	--

Explanation

A format error was detected in the date or time field entered on the inform log search panel.

System action

No search is performed. The search criteria specified on the panel is reset.

Operator response

The date and time must be entered in the format shown on the inform log search panel. The format of these fields is validated; however, the contents are otherwise not validated. Correct the settings and retry the inform log search.

EZL473I	NO RECORDS MEET THE SPECIFIED SEARCH CRITERIA
----------------	--

Explanation

No inform log entries met the search criteria specified.

System action

No action is performed. The search criteria specified on the panel is reset.

Operator response

Alter the start and stop date and times, if specified, to widen the search range. If appropriate, update either the name or message field search criteria. Retry or cancel the search.

EZL474I	SEARCH CRITERIA CANNOT BE SPECIFIED FOR BOTH THE NAME AND MESSAGE FIELDS
----------------	---

Explanation

Search criteria cannot be specified in both the name and message fields.

System action

No action is performed. The search criteria specified on the panel is reset.

Operator response

Reenter the criteria with only the name or message field specified and retry the search.

EZL475I	SEARCH CRITERIA WAS NOT UPDATED, SPECIFY NEW CRITERIA OR CANCEL
----------------	--

Explanation

The default search criteria was not updated.

System action

No action is performed.

Operator response

Update the search criteria prior to attempting the search or cancel the search panel.

EZL476I	<i>connection_type</i> ACTION WAS <i>result</i> FORWARDED FOR INFORM POLICY <i>policy_name</i> BY OPERATOR <i>operid</i> TO DOMAIN <i>domainid</i>
----------------	---

Explanation

If the service point is in another domain, this message documents the attempt to forward the inform policy action.

Message Variables

connection_type

The type of inform connection attempted (for example, EMAIL, NUPAGE).

result

SUCCESSFULLY indicates the action was forwarded. UNSUCCESSFULLY indicates the action cannot be forwarded.

policy_name

The INFORM or GROUP policy name that generated the request.

operid

The operator ID forwarding the request.

domainid

The domain the request is being forwarded to.

System action

The inform policy action is either forwarded to the service point domain or the attempt to forward it fails.

Operator response

Verify the service point was correctly specified in the inform policy member. Verify the RGWAY link to the other domain has been correctly defined.

EZL477I	NO ACTIONS SPECIFIED FOR POLICY <i>policy_name</i> AT THIS TIME
----------------	--

Explanation

The INFORM policy is active but no actions are specified for the current day and time.

Message Variables

policy_name

The INFORM policy name that resulted in no action.

System action

No INFORM policy actions are issued for the current policy.

Operator response

This may be an acceptable result indicating that the contact specified in the policy is not currently available. If coverage for this policy is desired for the current day and time, the INFORM policy member must be updated and reloaded.

EZL478E **INFORM LOG MEMBER
member_name CONTAINS
INVALID DATA**

Explanation

The inform policy logging function was unable to read from the log member because it does not contain valid data.

Message Variables

member_name

The inform log file name.

System action

The command issued to access the inform policy log ends.

Operator response

If this message persists and the log contains entries, contact your system programmer.

System programmer response

If this problem persists then check the inform log file and notify IBM Software Support.

EZL479I **INFORM LOG MEMBER
member_name CONTAINS NO
ENTRIES**

Explanation

The inform policy logging function was unable to read from the log member because no entries have been logged.

Message Variables

member_name

The inform log file name.

System action

The command issued to access the inform policy log ends.

Operator response

None. This message is an indication that no inform actions have been taken, so the inform log is empty.

EZL480E **THE AUTOMATION TABLE *setting*
NAME *value* IS NOT UNIQUE**

Explanation

The automation table marker or listing name you specified was not unique. A unique name is required for markers and listing files.

Message Variables

setting

Identifies which item is not unique. Set to LISTNAME or MARKER.

value

Indicates the marker or listing name that is not unique.

System action

At least one of your requests failed.

Operator response

Enter a unique marker or listing file name and retry the task.

EZL481I **ONE OR MORE REQUESTS FAILED,
VIEW THE RESPONSE WINDOW
OR DSILOG FOR DETAILS**

Explanation

The command option selected from a panel did not successfully complete for all resources or statements.

System action

At least one of the requests failed. When this message is received while using the IPTRACE function, the failing request reflects an SNMP query and the error condition is logged.

Operator response

Check the current panel for a function key for viewing responses. If no function key is labeled for this task, view the NetView log for more information.

If the failing request is an SNMP query, resolve the SNMP issue that caused the error and retry the command.

EZL482I **THERE IS NOTHING TO DISPLAY FOR THE CURRENT REQUEST**

Explanation

You selected an option to display more detailed or error information. No information is currently available for your request.

EZL483E **THE FOCUS AUTOMATION TABLE *curtable* IS LOADED AS *curmarker***

Explanation

The automation table INSERT request cannot be completed because of the currently loaded table specified in the message.

Message Variables

curtable

The currently loaded automation table name is blocking the requested action.

curmarker

The marker for *curtable* is set to either FIRST or LAST.

System action

The INSERT request fails.

Operator response

This message is issued for one of the following conditions. Update your INSERT request and retry the task.

- A new table cannot be inserted using the AT option when the focus table is marked as FIRST.
- A new table cannot be inserted using the BEFORE option when the focus table is marked as FIRST.
- A new table cannot be inserted using the AFTER option when the focus table is marked as LAST.
- You requested a new table be loaded as FIRST or LAST; however, another table is already loaded in one of those positions.

EZL484E **THE SELECTED STATEMENT IS NOT A BLOCK ENDPOINT OR GROUP MEMBER**

Explanation

You attempted to display a block or group of automation table statements. However, your cursor is not located on a statement that is an endpoint to a block or a member of a group. For an enable or disable action, place the cursor on a group statement or at the beginning of a block.

System action

The display or disable request fails.

Operator response

Place your cursor on a different statement or select a different action for the current statement.

EZL485E **THE AUTOMAN *keyword* KEYWORD WAS REJECTED WITH RC= *retcode***

Explanation

The automation table INSERT request cannot be completed. The automation table name or listing file name is not valid.

Message Variables

keyword

Contains the TBLNAME or the LISTNAME.

retcode

Identifies the following:

100

The listing file name was omitted or is not unique.

102

The automation table name you specified is already loaded.

System action

The INSERT request fails.

Operator response

See the return code descriptions for more information.

EZL490E **THE ATTEMPT TO INSTORE THE CONTROL FILE FAILED**

Explanation

During initialization, or reinitialization, the attempt to load the control file using the PIPE INSTORE stage failed

System action

Processing continues without resolving system symbolics.

Operator response

AON may continue to function normally if no system symbolics are coded in the control file. If system symbolics are coded, the results may be unpredictable.

System programmer response

See the NetView log for additional messages that indicate why PIPE INSTORE failed. Correct the problem and restart AON if system symbolics are defined.

EZL501I	RECOVERY FOR <i>restype resname</i> ON <i>location</i> HALTED - <i>number</i> ERRORS SINCE <i>time</i> ON <i>date</i> - CRITICAL ERROR THRESHOLD EXCEEDED
----------------	--

Explanation

The specified resource experienced the specified number of errors during the time interval defined in the control file for the critical error threshold.

Message Variables

restype

The type of resource

resname

The name of the resource

location

The domain or service point

number

The number of errors that have occurred

time

The time when the first error occurred

date

The date when the first error occurred

System action

- If the specified resource is a network resource, AON stops the recovery process.
- If the specified resource is a system resource, the recovery process stops or issues the appropriate commands.

EZL502I	RECOVERY FOR <i>restype resname</i> ON <i>location</i> CONTINUING - <i>number</i> ERRORS SINCE <i>time</i> ON <i>date</i> - FREQUENT ERROR THRESHOLD EXCEEDED
----------------	--

Explanation

The specified resource experienced the specified number of errors during the interval defined in the control file for the frequent error threshold.

Message Variables

restype

The type of resource

resname

The name of the resource

location

The domain or service point

number

The number of errors that have occurred

time

The time when the first error occurred

date

The date when the first error occurred

System action

- If the specified resource is a network resource, AON resumes the recovery process.
- If the specified resource is a system resource, AON issues the appropriate commands.

EZL503I	RECOVERY FOR <i>restype resname</i> ON <i>location</i> CONTINUING - <i>number</i> ERRORS SINCE <i>time</i> ON <i>date</i> - INFREQUENT ERROR THRESHOLD EXCEEDED
----------------	--

Explanation

The specified resource experienced the specified number of errors since the specified time. The infrequent error threshold has been exceeded, but the recovery process for this resource resumes.

Message Variables

restype

The type of resource

resname

The name of the resource

location

The domain or service point

number

The number of errors that have occurred

time

The time when the first error occurred

date

The date when the first error occurred

System action

AON resumes processing.

Operator response

If necessary, report the problem to your system programmer.

System programmer response

Investigate the resource to determine what is causing the errors and correct the problem.

EZL504I *restype resname IS AVAILABLE
(REPORTED BY reporter)*

Explanation

AON determined that the specified resource is active.

Message Variables

restype

The type of resource

resname

The name of the resource

reporter

A service point or a domain ID

System action

AON returns the resource to an active status and resumes processing.

EZL505I **RECOVERY TERMINATED FOR
restype resname DUE TO ACTION
BY OPERATOR *operator***

Explanation

The specified operator stopped recovery for the specified resource.

Message Variables

restype

The type of resource

resname

The name of the resource

operator

The ID of the operator

System action

AON stops recovery for the resource and resumes processing.

EZL506I *restype resname ON location
INACTIVE - RECOVERY*

**MONITORING HAS BEEN
INITIATED**

Explanation

AON automation is trying to recover the specified resource.

Message Variables

restype

The type of resource

resname

The name of the resource

location

The domain or service point

System action

AON continues processing.

Operator response

To stop recovery, issue the Timer command with the resource name and delete the timer.

EZL507I **REMINDER: *restype resname* ON
location HAS BEEN
UNRECOVERABLE FOR *interval***

Explanation

AON automation is trying to recover the specified resource, which has been unrecoverable for the specified interval.

Message Variables

restype

The type of resource

resname

The name of the resource

location

The domain or service point

interval

The amount of time since recovery was started

Operator response

Review the status of the resource to determine whether intervention is required.

EZL508I **RECOVERY MONITORING FOR
restype resname ON *location*
HALTED - RECOVERY
MONITORING INTERVALS
EXCEEDED**

Explanation

AON cannot resume the recovery for the resource because the MONIT intervals set by the user were exceeded.

Message Variables

- restype*
The type of resource
- resname*
The name of the resource
- location*
The domain or service point

System action

AON stops the recovery process.

Operator response

Intervene manually.

EZL509I *restype resname IS UNAVAILABLE (REPORTED BY reporter)*

Explanation

AON determined that the specified resource is not available.

Message Variables

- restype*
The type of resource
- resname*
The name of the resource
- reporter*
The service point or the domain ID

System action

AON resumes processing.

Operator response

If the resource is part of a component with a help desk, consult the help desk. If problem persists, notify your system programmer.

System programmer response

Determine which AON component the resource is part of and start problem determination procedures.

EZL510I *restype resname WAS REPORTED AS UNAVAILABLE, BUT IS NOW AVAILABLE (REPORTED BY reporter)*

Explanation

The specified resource was initially reported to AON as unavailable, however AON has determined that the resource is now available (active). For example, an SNA switched PU resource might fail and then be immediately recovered before AON is alerted to the failure.

Message Variables

- restype*
The type of resource
- resname*
The name of the resource
- reporter*
The service point or the domain ID

System action

AON resumes processing.

EZL511I *member CONFIGURATION MEMBER COMMON VALUES HAVE BEEN INITIALIZED*

Explanation

AON used the control file data to create the common variables that are used throughout the automation process.

Message Variables

- member*
The name of the control file

System action

AON resumes processing.

EZL514I *RECOVERY MONITORING FOR restype resname ON reporter TERMINATED - HIGHER NODE highnode IS UNAVAILABLE*

Explanation

AON stopped monitoring the recovery of the specified resource because the higher node for the resource is inactive.

Message Variables

- restype*
The type of resource
- resname*
The name of the resource
- reporter*
The service point or domain ID

highnode

The higher node

Operator response

If the resource is part of a component with a help desk, run the help desk on the resource. If problems persist, notify your system programmer.

System programmer response

Determine which AON component the resource is part of and start problem determination procedures.

EZL515I **RECOVERY MONITORING FOR
restype resname ON reporter
TERMINATED - AUTOMATION
FLAG SET OFF**

Explanation

AON tried to recover a resource when the AUTO keyword was set to OFF.

Message Variables**restype**

The type of resource

resname

The name of the resource

reporter

The service point or the domain ID

System action

Recovery for the resource ends and processing continues.

Operator response

If recovery is necessary, change the control file entry by going to AON Base Functions and selecting Automation Settings. In Automation Settings, select Automation.

EZL517I **restype resname HAS BECOME
ACTIVE FROM INTERVENTION BY
OPERATOR operator**

Explanation

The specified resource is available because the specified operator intervened.

Message Variables**restype**

The type of resource

resname

The name of the resource

operator

The operator who activated the resource

EZL520I **NO ENTRIES HAVE BEEN DEFINED**

Explanation

There are no policy definitions in the control file.

Operator response

Notify your system programmer.

System programmer response

Update the control file with the policy definition entries. For more information about updating the control file, see the *IBM Z NetView Administration Reference*.

EZL524I **NO infotype AVAILABLE FOR
RESOURCE: resname**

Explanation

You attempted to use the AON workstation interface to display the history of the specified resource at your workstation, but no information for the resource exists.

Message Variables**infotype**

The information you requested (HISTORY)

resname

The name of the resource

System action

AON continues processing.

Operator response

Use another resource, or notify your system programmer if you think there must be information about this resource available through AON.

EZL531I **restype resname IS INACTIVE DUE
TO OPERATOR operator
INTERVENTION**

Explanation

The specified operator successfully deactivated the specified resource.

Message Variables**restype**

The type of resource

resname

The name resource

operator

The ID of the operator who deactivated the resource

System action

AON resumes processing.

EZL532I AUTOMATION ENVIRONMENT HAS BEEN INITIALIZED

Explanation

You initialized the automation environment.

System action

AON resumes processing.

EZL533I CURRENT STATUS OF *resname* IS *status*

Explanation

The specified resource currently has the specified status.

Message Variables

resname

The name of the resource

status

The status of the resource

System action

AON resumes processing.

EZL550I APPLICATION *application* WAS NOT CLOSED CORRECTLY BY *job*

Explanation

The system is closing a VTAM application program that was opened by the specified job. The closing was not successful because the application was not closed within five minutes of closing initiation.

Message Variables

application

The name of the application

job

The job that initiated the application program

System action

The application is not closed and its resources are not freed in VTAM.

Operator response

The application program cannot be successfully opened again before it is successfully closed. Notify your system programmer and provide the output from your problem determination action.

System programmer response

Browse the NetView log for VTAM messages and see the *VTAM Messages and Codes* manual.

EZL553I NO NOTIFY OPERATORS LOGGED ON TO RECEIVE THE FOLLOWING MESSAGES

Explanation

This message precedes the message that is sent to the automation log when no notification operators are logged on to receive messages.

System action

AON resumes processing.

EZL554I MESSAGE = "*text*"

Explanation

This message displays the text of the message sent to the log when no notification operator was logged on to receive it.

Message Variables

text

The text of the message

EZL561I STATUS OF *domain1* OUTBOUND GATEWAY TO DOMAIN *domain2* IS ACTIVE

Explanation

The outbound gateway from the initiating domain to the target domain is active.

Message Variables

domain1

The domain initiating the connection to the target domain

domain2

The domain to which the gateway is connected

EZL562I STATUS OF *domain1* OUTBOUND GATEWAY TO DOMAIN *domain2* IS INACTIVE

Explanation

The outbound gateway from the initiating domain to the target domain is inactive.

Message Variables

domain1

The domain initiating the connection to the gateway

domain2

The domain to which the gateway is connected

System programmer response

Ensure that the password for the gateway automation operator on the target system is stored in the AON password data set. To do this, use the GETPW command with the INIT parameter. Where a RACF-shared database is being used, ensure that the correct domain name is specified in the GETPW command. For more information about the GETPW command, see the *IBM Z NetView Administration Reference*.

EZL563E	ERROR ACCESSING <i>domain1</i> OUTBOUND GATEWAY TO DOMAIN <i>domain2</i> - RC= <i>rc</i>
----------------	---

Explanation

You tried to log on to the domain of the adjacent NetView but failed because of the specified return code (RC).

Message Variables

domain1

The domain ID of the local NetView

domain2

The domain ID of the physically adjacent NetView defined in the GATEWAY control file entry

rc

The return code:

- 4** The RACF data set was not allocated.
- 8** The Password was not found.
- 12** An incorrect operator ID was defined.
- 16** An incorrect password was specified.
- 20** The domain is not controlled with RACF.
- 24** The password has expired.
- 28** RACF failed.

- 32** The domain is unknown.
- 36** An incorrect logon was specified.
- 40** The session was ended.
- 44** The logon is incorrect.
- 48** An error occurred.
- 52** A timeout error occurred.
- 56** A GETPW error occurred.
- 60** An error occurred when the RACF password was updated.
- 64** The table that was allocated for NNT sessions reached its limit. Increase the numeric value on the RRD. *=*nn* statement that is defined in the CNMSTYLE member or its included members.

System action

The operator is not logged on.

Operator response

Note the error and correct the problem. If problems persist, notify your system programmer.

System programmer response

Note the return code and correct the problem.

EZL564E	ERROR ACCESSING <i>domain1</i> OUTBOUND GATEWAY TO DOMAIN <i>domain2</i> - <i>id</i> REVOKED ON <i>domain</i>
----------------	--

Explanation

You attempted to log on to the domain of the adjacent NetView, but the attempt failed.

Message Variables

domain1

The domain ID of the local NetView

domain2

The domain ID of a physically adjacent NetView that is defined in the GATEWAY control file entry

id

The ID of the operator

domain

The domain name of a physically adjacent NetView that is defined in a GATEWAY control file entry

System action

Revokes the operator ID.

Operator response

Notify your system programmer.

System programmer response

Reinstate the operator ID.

EZL567I **FOCAL POINT DOMAIN (*focalpt*)
FOR *domain* LOST, BACKUP
FORWARDING TO *backup*
STARTING**

Explanation

AON lost communications to the focal-point domain. The backup focal-point domain receives forwarded messages.

Message Variables***focalpt***

The focal-point domain

domain

The domain from which messages are being forwarded

backup

The backup focal-point domain

EZL568I **STATUS OF *domain1* INBOUND
GATEWAY TO DOMAIN *domain2* IS
ACTIVE**

Explanation

The inbound gateway from the target domain to the local domain is active.

Message Variables***domain1***

The domain ID of the current NetView

domain2

The domain ID of an adjacent NetView that is defined in a GATEWAY control file entry

EZL569I **STATUS OF *domain1* INBOUND
GATEWAY TO DOMAIN *domain2* IS
INACTIVE**

Explanation

The inbound gateway from the target domain to the local domain is inactive.

Message Variables***domain1***

The domain ID of current NetView

domain2

The domain ID of an adjacent NetView that is defined in a GATEWAY control file entry

EZL571I ***resname* SUBSYSTEM STATUS FOR
JOB *job* IS *status* - REQUESTED BY
OPERATOR *operator***

Explanation

The specified operator changed the status of the specified resource to the specified status.

Message Variables***resname***

The name of the resource

job

The job name

status

The status at the time of the message

operator

The operator who requested the change in status

EZL572I **OPERATOR CGLOBALS NOT
INITIALIZED - UNABLE TO ROUTE
COMMAND *command***

Explanation

AON cannot route the specified command to another operator for processing because AON did not initialize the CGLOBAL values.

Message Variables***command***

The command that AON tried to route

System action

AON does not route the command.

Operator response

Notify your systems programmer.

System programmer response

Investigate why AON did not initialize the CGLOBAL values and initialize AON again.

**EZL573I AUTOMATED *task* *restype* HAS
BEEN RESTARTED**

Explanation

AON restarted the specified automation operator.

Message Variables***task***

The task ID

restype

The type of resource

**EZL600W *program* RESUMING -
PARAMETER(S) IGNORED**

Explanation

You entered the NLOG command using parameters that the NLOG command processor ignored.

Message Variables***program***

The program that resumes processing

System action

The NLOG command processor resumes processing the specified program.

**EZL607E LOAD OF CONTROL FILE *member*
FAILED**

Explanation

The specified file cannot be successfully loaded into the policy repository.

Message Variables***member***

The name of the control file being loaded

System action

The load of the policy definitions is ended.

Operator response

Notify your system programmer.

System programmer response

Issue a POLICY REQ=TEST command and note the errors. See the *IBM Z NetView User's Guide: Automated Operations Network* for more information.

**EZL608E AON AUTOMATION
CONFIGURATION TASK EZLTCFG
INITIALIZATION HAS FAILED.**

**AON INITIALIZATION HAS BEEN
STOPPED.****Explanation**

AON issued a START command for the Automation Configuration Task, EZLTCFG. However, no messages indicating startup or failure were processed within the allotted timeout period, or the GO command was used to interrupt the wait for the startup or failure message.

System action

AON initialization is stopped.

Operator response

Notify your system programmer.

System programmer response

Logon to NetView to start the task from the Command Facility through the command: START TASK=EZLTCFG. Take action based on messages received. If EZLTCFG starts normally, resume initialization through the command: EXCMD AUTO1,EZLEANTL. If you do not use AUTO1, substitute the task to which EZLEANTL is usually run.

**EZL609E POLICY FILE(S) COULD NOT BE
LOADED**

Explanation

You attempted to load policy definitions into the Policy Repository, but there were no valid policy files defined in the CNMSTYLE member. Or, you did not specify a valid POLICY.&DOMAIN definition in the CNMSTYLE member.

System action

The load of policy definitions is ended.

Operator response

Notify your system programmer.

System programmer response

Review the policy file definitions in the CNMSTYLE member and make any necessary updates. If you need to make changes, see *IBM Z NetView Installation: Getting Started* for information on how to modify the CNMSTYLE member.

EZL610E FAILED TO OPEN LOG FILE

Explanation

You tried to open a log file, but your attempt failed.

System action

The NLOG command processing stops.

Operator response

There is a problem with the VSAM file of the automation log. Delete and redefine the active log according to the procedure in the SAMPLIB and start NetView again.

EZL615E FAILED TO CLOSE LOG FILE

Explanation

You tried to close a log file, but your attempt failed.

System action

NLOG command processing stops.

System programmer response

Notify IBM Software Support.

**EZL623E SECONDARY LOG FILE NOT
 DEFINED**

Explanation

You issued the NLOG command to view the secondary log, but a secondary log does not exist.

System action

NLOG command processing stops.

Operator response

Ensure that a secondary log has been allocated. If a secondary log has not been allocated, run job to allocate it. Ensure that the secondary log is included in the NetView JCL procedure. For more information about allocating secondary logs, see the *IBM Z NetView Administration Reference*.

**EZL627E LOG FILE IS EMPTY OR
 INACCESSIBLE**

Explanation

You attempted to browse a log that is empty or inaccessible.

System action

The NLOG command processing stops.

Operator response

Enter the NLOG parameters again to view the active log, which contains data. To browse the inactive log, verify that it contains data.

**EZL632I AON AUTOMATION LOG BROWSE
 TERMINATED**

Explanation

The NETLOG is no longer displayed.

**EZL633I AUTOMATION LOG TASK (*task*)
 NOT STARTED. - "*task*" ENTRY
 NOT SPECIFIED IN THE CONTROL
 FILE.**

Explanation

AON initialization tried to start the LOG task but the LOG task is not defined in the control file.

Message Variables

task

The name of the AON LOG task (EZLTLOG)

System action

AON continues processing.

Operator response

Notify your system programmer.

System programmer response

Define the EZLTLOG task in the AON control file and load the control file again.

**EZL634I AUTOMATION LOG TASK (*task*)
 NOT STARTED. - "*task*" COULD
 NOT BE RETRIEVED FROM THE
 CONTROL FILE.**

Explanation

AON initialization tried to start the LOG task but the EZLCFG program cannot retrieve the EZLTLOG entry from the control file.

Message Variables

task

The name of the AON LOG task (EZLTLOG).

System action

AON continues processing.

Operator response

Notify your system programmer.

System programmer response

Manually issue the 'EZLCFG REQ=DISP,ENTRY=EZLTLOG,TYPE=*' command and note the error back from EZLCFG. Make corrections based on the error message. If the problem persists, contact IBM Software Support.

EZL635I	AUTOMATION LOG TASK (task) NOT STARTED. - task NONE SPECIFIED IN THE CONTROL FILE.
----------------	---

Explanation

AON initialization tried to start the LOG task but, because the control file entry is EZLTLOG NONE, the log file does not start.

Message Variables

task

The name of the AON LOG task (EZLTLOG)

System action

AON continues processing.

Operator response

Notify your system programmer.

System programmer response

To start the LOG, change the LOG entry in the control file. See the *IBM Z NetView Administration Reference* for more information. Load the control file again.

EZL636I	AUTOMATION LOG TASK (task) NOT STARTED. - "command" HAS FAILED OR operator IS HUNG. AUTOMATION MAY FAIL.
----------------	---

Explanation

AON initialization tried to start the LOG task but the START TASK command failed, or the operator ID that started the task is hung.

Message Variables

task

The name of the AON LOG task (EZLTLOG)

command

The START TASK command

operator

The operator ID that tried to issue the START TASK command

System action

AON continues processing.

Operator response

Notify your system programmer.

System programmer response

Start the LOG task manually.

EZL637E	NO ACTIVE LOG CURRENTLY AVAILABLE
----------------	--

Explanation

You attempted to access an active automation log, but no active automation log was available.

System action

NLOG command processing stops.

Operator response

Ensure that the EZLTLOG task is active. If the current active log has recently filled, AON captures the message LOG FILLED and tries to switch logs. Switching logs may result in no active log being available at this time. Watch for the message LOG NOW ACTIVE and issue the NLOG command again.

EZL638E	NO INACTIVE LOG CURRENTLY AVAILABLE
----------------	--

Explanation

You attempted to browse an inactive automation log, but no inactive log was available.

System action

NLOG command processing stops.

Operator response

Ensure that the EZLTLOG task is active. If the current active log recently filled, AON captures the message LOG FILLED and tries to switch logs. Switching logs may result in no inactive log being available at this time. Watch for the message LOG NOW ACTIVE and issue the NLOG command again.

EZL639E	LOG CLEAR SUCCESSFUL
----------------	-----------------------------

Explanation

You cleared a log by issuing a NLOG CLEARxxxx command.

System action

If you issued the NLOG CLEAR command when the inactive log was not being viewed, the inactive log cleared. If you issued the NLOG CLEARSCND command when the secondary log was not being viewed, the secondary log cleared. If you issued the NLOG CLEARPRIM command when the primary log was not being viewed, the primary log cleared.

EZL640I	NLOG ENDED - LOG SWITCH IN PROGRESS
----------------	--

Explanation

You attempted to view an automation log while automation logs were being switched.

System action

The NLOG command processing stops.

Operator response

To view the automation log, wait for the message LOG NOW ACTIVE and issue the NLOG command again.

EZL645I	ALL NLOG BROWSE TASKS POSTED FOR INACTIVE LOG
----------------	--

Explanation

You attempted to clear the inactive log by issuing the NLOG command. The tasks that are currently viewing the inactive log are scheduled to end.

System action

The NLOG command processing stops.

EZL646I	NO OPERATORS BROWSING THE INACTIVE LOG
----------------	---

Explanation

An automation operator attempted to clear the inactive log by issuing the NLOG CLEAR command while no other operator was viewing the log.

System action

NLOG command processing stops.

EZL650I	DESTINATION DOMAIN <i>domain</i> RESPONDED
----------------	---

Explanation

While monitoring gateway sessions, AON routed a command to the specified destination domain. The destination domain currently has NNT sessions with your domain.

Message Variables

domain

The name of the destination domain

System action

AON recognizes that GATEWAY connections are available to the destination domain.

EZL652I	<i>gatoper</i> STARTING GATEWAY SESSIONS WITH TARGET DOMAINS
----------------	---

Explanation

The specified gateway operator is trying to log on to a remote domain.

Message Variables

gatoper

The automated gateway operator who is trying to log on to the remote domain

EZL655I	<i>number</i> RECORDS <i>action</i> FOR COMPONENT <i>component</i>
----------------	---

Explanation

This message goes to the log and details the results of issuing the DBMAINT command.

Message Variables

number

The number of records affected.

action

The action performed on the record. The record is DELETED, READ, KEPT, or ERROR.

component

The name of the component on which the action was performed.

EZL660I	CURRENT FOCAL POINT IS <i>newfocal</i>, WAS <i>oldfocal</i>, FOR <i>domain</i> FOR SYSTEM <i>ddf</i>
----------------	---

Explanation

AON switched gateway focal-point NetView domains because of an outage of the primary focal-point NetView or because a primary focal-point NetView domain was restarted. If the switch occurred because of an outage of the primary focal-point, AON switches to the backup focal point. If the switch occurred because a primary focal-point NetView domain was restarted, the flow switches back to the primary focal point.

Message Variables

newfocal

The new focal-point NetView domain

oldfocal

The old focal-point NetView domain or RESET or NONE

domain

The NetView from which domain messages are sent

ddf

The Dynamic Display Facility (DDF) in the NetView domain from which the messages are sent

System action

Gateway connections with the destination domains are lost or established.

EZL661I	DOMAIN <i>domain1</i> IS COMMUNICATING WITH <i>domain2</i>, VIA <i>domain3</i>, <i>product</i>
----------------	---

Explanation

The first specified NetView domain established communications with the second specified NetView domain through the third specified domain.

Message Variables***domain1***

The NetView domain that issued the request.

domain2

The NetView domain that received the request.

domain3

The NetView domain through which the request was routed.

product

The name of the product being run on *domain2*, including the system name, product name, version number, and release number. OLD refers to an old product that does not support the EZLE1REQ function.

System action

AON establishes gateway connections with the domain that received the request.

EZL662I	DOMAIN <i>domain1</i> HAS STOPPED COMMUNICATING WITH <i>domain2</i> <i>product</i>
----------------	---

Explanation

The first specified domain sent a request to the second specified domain but cannot communicate with it.

Message Variables***domain1***

The NetView domain issuing the request.

domain2

The NetView domain to which the request was sent.

product

The name of the product being run on *domain2*, including the system name, product name, version number, and release number. OLD refers to an previous product that does not support the EZLE1REQ function.

System action

AON stops gateway connections with the destination.

EZL663I	DOMAIN <i>domain</i> STATUS IS <i>status</i>, REPORTED by <i>repdomain</i>
----------------	---

Explanation

The specified reporting domain reported the status of the other specified domain but does not recognize that status. Known statuses are ACTIVE, INACTIVE, INVALID, and RESET.

Message Variables***domain***

The NetView domain whose status is being reported

status

The unrecognized status

repdomain

The domain ID of the reporting domain

Operator response

Notify your system programmer.

System programmer response

The reporting domain does not recognize the status of another domain. The reporting domain originated the status. The problem is that the product on the reporting domain is in error or that it supports statuses not recognized by the product running on the domain whose status is being reported.

EZL664I	NO FOCAL POINT IS AVAILABLE
----------------	------------------------------------

Explanation

No focal-point NetView domain is available at this time. Both the primary and backup focal-point NetView domains are unavailable.

EZL665I	OUT <i>domain</i> EZLE1REQ: <i>command</i>
----------------	---

Explanation

Gateway trace is running on the specified domain. The specified command currently being used is EZLE1REQ.

Message Variables

domain

The NetView domain to which the request was sent

command

The command that was sent to the domain

System programmer response

Use this message to analyze gateway activity.

EZL666I **IN domain EZLE1REQ: command**

Explanation

While a Gateway trace was running on the specified domain, an operator issued the specified command by using the EZLE1REQ command.

Message Variables

domain

The domain that sent the command

command

The command that sent from the domain

System programmer response

Use this message to analyze gateway activity.

EZL667I **REQUEST TO DOMAIN *domain***
 WAS REJECTED AT *adjdomain* , NO
 ROUTE DEFINED

Explanation

You attempted to route a request to the specified domain through an adjacent domain and the request failed, or an adjacent domain requested the status of a destination domain but no gateways between the domains are defined.

Message Variables

domain

The domain to which the request was sent

adjdomain

The adjacent domain through which the request is being routed

System programmer response

Define routes from the adjacent NetView domain to the destination NetView domain.

EZL668I **DOMAIN *domain* REJECTED**
 REQUEST: *command*

Explanation

The specified domain rejected the specified command.

Message Variables

domain

The domain that received the request

command

The rejected command

Operator response

Notify your system programmer.

System programmer response

The NetView domain the request was sent to does not support the request or the request is not correct. If the request is not correct, correct it and try again.

EZL669I **REQUEST LOOPED BACK TO**
 ***domain1*, SENT ON *domain2*,**
 RECEIVED FROM *domain3*,
 REQUEST: *command*

Explanation

You sent a gateway command from the first specified domain to the second specified domain, but the command erroneously returned to the first domain by way of the third specified domain. This error indicates a loop in the gateway routing.

Message Variables

domain1

The NetView domain that issued and received the command

domain2

The NetView domain to which the command was originally routed

domain3

The domain that routed the command to the issuing NetView domain

command

The issued command

System programmer response

Review the gateway definitions to determine the cause of the loop.

EZL670I **COMMAND (*command*) WAS**
 EXECUTED IN DOMAIN *domain* BY
 OPERATOR *operator*

Explanation

The specified operator issued the specified command from the specified domain.

Message Variables

command

The issued command

domain

The NetView domain that received and ran the command

operator

The operator ID that sent the command

EZL671I	COMMAND (<i>command</i>) FAILED EXECUTION IN DOMAIN <i>domain</i>, RC= <i>rc</i>
----------------	---

Explanation

The specified command cannot run in the specified domain.

Message Variables

command

The issued command

domain

The NetView domain that cannot run the command

rc

The return code from the command that cannot run

Operator response

The return code is specific to the command. Record the information for follow-up action.

EZL672I	GATEWAY CONVERSION FAILED FOR <i>command</i>
----------------	---

Explanation

The specified command, issued through a gateway, cannot be processed in the domain to which the command was sent.

Message Variables

command

The issued command

EZL673I	DOMAIN <i>domain</i> IS NOT DEFINED. GATEWAY REQUEST REJECTED. <i>ezle1req</i>
----------------	---

Explanation

The gateway request that was sent to the specified domain cannot be processed because gateways to the domain are not defined.

Message Variables

domain

The NetView domain to which the gateway request was sent

ezle1req

The gateway request that was sent

EZL674I	DOMAIN <i>domain</i> IS NOT ACTIVE. GATEWAY REQUEST REJECTED <i>ezle1req</i>
----------------	---

Explanation

You attempted to send a gateway request to the specified domain but failed because the gateway to the domain is not active.

Message Variables

domain

The destination NetView domain

ezle1req

The failed gateway request.

EZL675I	GATEWAY PREFIX UNKNOWN FOR <i>domain</i>
----------------	---

Explanation

You made a gateway connection to the specified NetView domain, but because a previous product is being run on that domain, gateway processing cannot recognize the product.

Message Variables

domain

The NetView domain running an earlier release of the product

System action

The EZLE1REQ command does not forward commands or responses to the specified NetView domain.

Operator response

Recycle NetView or end the NNT session to the specified NetView domain in order to retry to establish a session with this domain.

System programmer response

The EZLE1REQ command is not supported in the remote domain. An EZLCFG was issued to determine whether the old product in the remote domain uses the EZL or EHK prefix, but no response was received. Determine why the attempt to establish a connection failed to get a response to EZLCFG within the 2-minute timeout allowed.

**EZL676I ROUTING COMMAND *command* TO
DOMAIN ID *domain***

Explanation

AON is transferring the specified command to another domain.

Message Variables***command***

The command that was routed

domain

The domain to which the command was routed

EZL700E EZLMSG *msgnum* RC= *rc*

Explanation

EZLMSG detected an error while formatting a message.

Message Variables***msgnum***

The message number that was being formatted.

rc

The return code received from EZLMSG.

Operator response

Notify your system programmer.

System programmer response

Verify that the AON message modules and EZLMSG have been installed correctly. If there is no apparent cause for the failure, contact IBM Software Support.

**EZL710I EZL710I One or more *policy_type*
policy_name keywords found.**

Explanation

During resource discovery for stacks, one or more policy keywords was found for the stack. Those keywords will be used in place of any information that has been discovered about the stack.

Message Variables***policy_type***

A valid policy definition, such as TCP390.

policy_name

The name of the TCP390 policy statement containing the keywords.

System action

The stack discovery processing continues, using the TCP390 keywords.

Operator response

Notify your system programmer.

System programmer response

Review the TCP390 policy definition that is referred to in this message and determine whether you need any of the keywords that are defined.

**EZL872I COMMAND *command* NOT
DELIVERED TO OPERATOR
operator, REASON *errormsg***

Explanation

AON cannot route the specified command to another automation operator. AON did not receive the DSI001I or DSI268I messages, which indicate that the command has run successfully on the task.

Message Variables***command***

The name of the command to be sent to the specified operator

operator

The ID of the operator who is supposed to issue the specified command

errormsg

The message received when the attempt was made to run the specified command on the specified operator ID

Severity:

0

Operator response

Notify your system programmer.

System programmer response

Verify that the task in question is active and able to run commands and that it is not severely backlogged with programs to be run. If the task is working properly, notify IBM Software Support.

**EZL880I *type* SESSION TO *target* IS
ALREADY ACTIVE**

Explanation

You already have a known active session with the target NetView domain.

Message Variables***type***

The type of session, which are NNT and RMTCMD

target

The target NetView domain

System action

AON ignores the start request.

EZL881I **type SESSION TO target IS NOT ACTIVE**

Explanation

You selected a session with the specified target domain, but that domain is not active.

Message Variables**type**

The type of session, which are NNT and RMTCMD

target

The target NetView domain

System action

AON ignores the request.

Operator response

Start a session before attempting to send a command.

EZL882I **OPERATOR operator ALREADY LOGGED ON target**

Explanation

The specified NetView operator is already logged on in the specified target NetView domain.

Message Variables**operator**

The ID of the target operator

target

The target NetView domain name

System action

AON delays the start request until you enter another operator ID or cancel the request.

Operator response

Provide another NetView operator ID or it cancels the request.

EZL883I **INVALID SESSION INFORMATION - PLEASE REENTER**

Explanation

You provided incorrect information for starting the cross-domain NetView session.

System action

The request is delayed until an operator provides the correct information or cancels the request.

Operator response

Enter the correct session information or cancel the request.

EZL884I **CONFLICTING INFORMATION - CDLOG ENTRY SHOWN**

Explanation

AON found conflicting information when trying to run an action for the CDLOG command. AON displays the information defined in the control file.

System action

AON delays the request until an operator provides correct information or cancels the request.

Operator response

Provide correct information, such as an operator ID or password, or cancel the request. Notify your system programmer of any changes you make to the CDLOG control file entry.

System programmer response

Modify the CDLOG control file entry for the operator.

EZL887I **DOMAIN target DID NOT RESPOND**

Explanation

The CDLOG attempted to communicate with the target domain but cannot because the target domain is not responding to any requests.

Message Variables**target**

The target NetView domain

Operator response

Notify your system programmer.

System programmer response

Verify that there are no problems in the target domain.

EZL888I **UNABLE TO START SESSION TO target. PRESS F4 TO VIEW ERROR MESSAGE**

Explanation

You logged on and CDLOG attempted to start a session, but the attempt failed.

Message Variables

target

The target NetView domain

System action

The target request stops.

Operator response

Press F4 to view the error message received when you attempted to start the session.

System programmer response

Determine why the session cannot be started.

EZL889I NO MESSAGE ERRORS FOUND

Explanation

You attempted to view error messages for starting up a cross-domain NetView session, but there are no error messages to display.

EZL900I ONLY SELECTION *selection* IS VALID

Explanation

You attempted to change a selection that is already set.

Message Variables

selection

The selection the operator attempted to change

Operator response

Correct the entry and enter it again.

EZL901I SELECTION *selection* IS INVALID. TYPE A NUMBER BETWEEN *lower* AND *upper*

Explanation

The specified selection entered by the operator is incorrect.

Message Variables

selection

The selection entered

lower

The lower selection boundary

upper

The upper selection boundary

Operator response

Correct the selection and enter it again.

EZL902I CURSOR IS NOT LOCATED ON VALID RESOURCE OR SELECTION

Explanation

You selected an entry on a cursor-sensitive panel, but did not place the cursor in correct position. For automation table management (AUTOMAN), you placed your cursor on a statement that cannot be subject to the action selected.

Operator response

Move the cursor to an appropriate position and try again.

EZL903I THE INPUT FOR *variable* IS NOT SEQUENTIAL

Explanation

An ordered set of numbers or letters was expected as input, but there were one or more skipped in the sequence.

Message Variables

variable

The input in error.

Operator response

Correct the input and enter it again.

EZL904I NO ADDITIONAL HELP AVAILABLE

Explanation

AON cannot locate help for a command.

EZL905I *key* KEY NOT ACTIVE

Explanation

You pressed the specified inactive key, but the key is inactive.

Message Variables

key

The key that is inactive

Operator response

Select the correct function key and try again.

EZL906I FIRST LINE OF DATA DISPLAYED

Explanation

You attempted to scroll backwards on a list panel, but the top of the list is already displayed.

EZL907I **LAST LINE OF DATA DISPLAYED**

Explanation

You attempted to scroll forward on a list panel, but the display is already at the bottom.

EZL908I **SETTINGS REPLACED**

Explanation

You changed the setting for the message headers that are used to handle messages.

EZL909I **REQUESTED STATE ALREADY SET**

Explanation

You attempted to change a setting, but that setting is already set.

Operator response

Select another setting or command and try again.

EZL910I **ENTER A SELECTION**

Explanation

You pressed the Enter key on a selection menu without specifying an option. Select an option before you press Enter.

Operator response

Select an option and press Enter.

EZL911I **OPTION *option* NOT ACTIVE**

Explanation

You attempted to select the specified option from a panel, but the option is not active.

Message Variables***option***

The option that is inactive

Operator response

Select another option and try again. If the option is disabled and you want to use it, go to AON support functions to enable it and select it again. Otherwise, choose another option.

EZL912I **TRACE SETTINGS FOR OPERATOR *operator* DISPLAYED**

Explanation

You changed the operator ID in AONTRACE. The settings are those of the specified operator.

Message Variables***operator***

The new operator ID

Operator response

Enter the new settings or change the displayed settings.

EZL915I **OPERATION CANCELED. NO SELECTION MADE**

Explanation

You quit or canceled from a selection menu.

EZL916I **NO LOADER TABLES FOUND**

Explanation

AON cannot find any option definition tables to display.

Operator response

Notify your system programmer.

System programmer response

Check the control file for the appropriate INSTALLOPT keywords for the component. Specifically, check for a defined DEFTAB entry on the INSTALLOPT keyword.

EZL917E **ERROR OCCURRED. BROWSE LOG FOR MORE INFORMATION**

Explanation

One of the following errors occurred:

- You entered multiple actions from a list panel, resulting in at least one error.
- An unexpected error occurred while data was being processed from a request.

Operator response

Browse the NETLOG for additional information and take the appropriate action. Retry the request. If the error persists, contact IBM Software Support.

EZL918E **ERROR IN *program* PROCESSING PANEL *panel*. VIEW RC= *rc***

Explanation

The specified program attempted to view the specified panel but received the specified return code from the VIEW command processor.

Message Variables

- program*
The name of the program
- panel*
The name of the panel
- rc*
The return code

Operator response

Notify your system programmer.

System programmer response

Notify IBM Software Support.

EZL919I	ALL ACTIONS SUCCESSFULLY COMPLETED
----------------	---

Explanation

You successfully entered multiple selections from a list panel and all selections ended successfully.

EZL920I	COMPONENT <i>subcomponent</i> CANNOT BE <i>action</i> BECAUSE <i>component</i> IS NOT <i>action</i>
----------------	--

Explanation

You attempted to enable or initialize a subcomponent in AONENABL, but the higher component was not enabled or initialized.

Message Variables

- subcomponent*
The name of the lower AON component.
- component*
The name of the higher AON component.
- action*
The action attempted against the subcomponent. The action can be ENABLE or INITIALIZE.

System action

The subcomponent is not enabled or initialized.

Operator response

To enable or initialize the subcomponent, press the Tab key to move the cursor to the higher component and enable, or initialize, the higher component. This

performs the needed action on the subcomponent and on the higher component.

EZL921E	ERROR VIEWING TABLE <i>table</i>. VIEW RC= <i>rc</i>
----------------	---

Explanation

You attempted to view the specified table in the list with the VIEW command processor, but your attempt failed.

Message Variables

- table*
The name of the table.
- rc*
The return code from the NetView BROWSE command.

Operator response

Notify your system programmer.

System programmer response

See the error code in the *IBM Z NetView Customization Guide*. Check for error messages in the log to determine the cause of the error.

EZL922I	<i>command</i> COMMAND SCHEDULED FOR EXECUTION
----------------	---

Explanation

You scheduled the specified command to run.

Message Variables

- command*
The name of the command

EZL923I	ONLY NUMERIC DATA IS VALID. <i>data</i> IS INVALID
----------------	---

Explanation

You entered the specified nonnumeric data in a numeric field, or you entered an invalid scroll value.

Message Variables

- data*
The non-numeric data or invalid scroll value that was entered

Operator response

Type the correct numeric data or, for the scroll value, type a positive number, and try again.

EZL924I	PRESS <i>key</i> TO <i>action</i> OR F12 TO CANCEL
----------------	---

Explanation

You added a configuration entry and must press the specified key to process the specified action.

Message Variables

key

The function key that is used to process the action

action

The action to be processed

Operator response

To process the action, press the correct function key.
To cancel the action press F12.

EZL925I	CANNOT CHANGE VALUE <i>value</i>
----------------	---

Explanation

You attempted to change the specified value but your attempt failed.

Message Variables

value

The value you attempted to change.

System action

AON does not process the command.

EZL926I	TASK TYPE OF <i>type</i> NOT ALLOWED TO BE STARTED, STOPPED OR FORCED
----------------	--

Explanation

You cannot process a task with the specified type because the type cannot be stopped or forced inactive.

Message Variables

type

The type of task

EZL927I	TASK TYPE OF <i>type</i> NOT ALLOWED TO BE RECYCLED
----------------	--

Explanation

In the Automation Task List display, you attempted to recycle a task that was not an appropriate resource to recycle.

Message Variables

type

The type of task

EZL928I	COMPONENT <i>component</i> DOES NOT HAVE AN INITIALIZATION ROUTINE
----------------	---

Explanation

You attempted to initialize a component that does not have an initialization routine. This is not an error message. This message is for information only.

Message Variables

component

The name of the AON component

System action

The component initialization flag is set to Y.

EZL929I	COMPONENT <i>component</i> CANNOT BE <i>action</i> BECAUSE IT IS NOT INITIALIZED
----------------	---

Explanation

You attempted to enable a component that has not been initialized.

Message Variables

component

The name of the AON component.

action

The action you attempted. The action can be ENABLED or RESET.

System action

The component is not enabled or reset to its default.

Operator response

If you want to enable or reset the component, you must select the action to initialize the component and press Enter. After doing this, select the action, 1=ENABLE or 3=DEFAULT, for the component and press Enter.

EZL930I	SESSION(S) ENDED
----------------	-------------------------

Explanation

The requested CDLOG sessions stopped.

EZL931I	SESSION TYPE = <i>type</i>, NOT DEFINED FOR DOMAIN = <i>domain</i>
----------------	---

Explanation

You attempted to start a CDLOG session that is not defined for the target NetView domain.

Message Variables

type

The session type. The types are NNT and RMTCMD.

domain

The target NetView domain.

System action

The system ignores the start request.

Operator response

To start a session, notify your system programmer.

System programmer response

Add the appropriate definitions to the control file to allow the session to start.

EZL932I SESSION(S) STARTED

Explanation

AON started the cross-domain NetView sessions that you requested.

EZL934I PLEASE ENTER USER ID

Explanation

You must enter a correct NetView operator ID to start a cross-domain session.

System action

AON delays the start request until you enter a correct NetView operator ID.

Operator response

Enter a correct NetView operator ID for the target domain.

EZL935I PLEASE ENTER PASSWORD

Explanation

You must enter a password to start a cross-domain NetView session.

System action

The start request is delayed until you enter a correct NetView operator password.

Operator response

Enter a correct password for the NetView operator.

EZL936E INVALID OPERATOR ID ENTERED

Explanation

The NetView operator ID used to start the session is not correct for the target domain.

System action

The session cannot be started.

Operator response

Restart the session by using a correct NetView operator ID or notify your system programmer.

System programmer response

Define a correct NetView operator ID in the target domain.

EZL937E INVALID PASSWORD ENTERED

Explanation

The NetView operator ID password used to start the session is not correct for the target domain.

System action

The session cannot be started.

Operator response

Restart the session using a correct password or notify your system programmer.

System programmer response

Define a correct password for the NetView operator in the target domain.

**EZL938I ISSUING COMMAND = *command*.
PRESS F6 TO ROLL BACK TO
CDLOG**

Explanation

AON is running the command you requested in the target NetView domain. After the command stops processing, you must roll back to CDLOG.

Message Variables***command***

The requested command

System action

The command is routed to the target NetView domain.

Operator response

Wait until the response has completed and rollback to the previous panel.

**EZL939I PRESS ENTER TO START SESSION
USING CDLOG DEFINITIONS**

Explanation

You must confirm the start of a CDLOG session using the appropriate definitions in the control file.

Operator response

Press Enter to start the session using the CDLOG definitions displayed or press F12 to cancel the session.

EZL940E NO SYSTEM NAME SPECIFIED IN THIS DOMAIN

Explanation

You did not supply the system name for a Dynamic Display Facility (DDF) command, and AON cannot determine which system to use.

System action

The DDF command stops.

Operator response

Specify the system name and try the command again.

EZL941E UNABLE TO START *type* SESSION TO DOMAIN *target* - INVALID SESSION DEFINITION.

Explanation

The request to start a cross-domain NetView session failed because session definitions in the control file were not correct.

Message Variables

type

The type of session. The types are NNT and RMTCMD.

target

The target NetView domain.

System action

AON does not start the session.

Operator response

Notify your system programmer.

System programmer response

Determine why the error occurred and update the control file CDLOG definitions. For more information about CDLOG definitions, see the *IBM Z NetView Administration Reference*.

EZL942E UNABLE TO START *type* SESSION TO DOMAIN *target*.

Explanation

You attempted to start a cross-domain NetView session, but your attempt failed.

Message Variables

type

The type of session. The types are NNT and RMTCMD.

target

The target NetView domain.

System action

AON cannot start the session.

Operator response

Notify your system programmer.

System programmer response

Determine why the error occurred. This message is displayed when AON does not cause the error.

EZL951I DUPLICATE SELECTIONS FOUND

Explanation

You attempted to enter a program trace into the list more than once. You attempted to enter a selection into the Session Status Filters panel more than once.

System action

AONTRACE is not set and the session status filters are not changed.

Operator response

Remove the duplicate entry and press Enter again.

EZL952E INVALID CURSOR LOCATION

Explanation

You attempted to issue a command from a row that cannot issue commands. The cursor must be positioned on a row that can issue commands before you press Enter.

Operator response

Move the cursor to a valid row and press Enter.

EZL953E COMMAND LENGTH TOO LONG. MUST BE LESS THAN OR EQUAL TO *length*

Explanation

You attempted to issue a command that is too long.

Message Variables***length***

The length of the command on the RUNCMD.

System action

The command does not process.

Operator response

Change the command and press Enter.

EZL960I	DEFAULTS ENTRY CANNOT BE DELETED
----------------	---

Explanation

You attempted to delete a DEFAULTS entry from the control file, but your attempt failed because you are not authorized to delete the DEFAULTS entries. You are authorized only to change them.

Operator response

If necessary, change the DEFAULTS entries or make another selection.

EZL961W	<i>num</i> NOAUTO INTERVALS EXIST. NO CHANGES CAN BE MADE FROM THIS PANEL.
----------------	---

Explanation

The Recovery Setting command list detected more than five NOAUTO intervals defined for this resource in the control file. No changes to recovery settings are allowed from this panel.

Message Variables***num***

The number of NOAUTO intervals

Operator response

Notify your system programmer.

System programmer response

Edit the control file to make any changes to the recovery settings.

EZL962I	**** NOTICE: ENTER 'GO' WHEN READY TO RETURN TO PANEL
----------------	--

Explanation

To return to the operator interface, enter GO on the command line.

System action

When a command is issued, you are rolled to the command facility to see the response. To return to the operator interface, enter GO on the command line.

EZL965I	CURRENT DATE PAST REQUESTED DATE <i>date</i>
----------------	---

Explanation

You attempted to set a timer for the specified date, but the date had already passed.

Message Variables***date***

The date entered by the operator

System action

The timer fails to set.

Operator response

Correct the date and try again.

EZL966E	BOTH INTERVAL AND DAYS CANNOT BE 0 WHEN TIMER TYPE = AFTER.
----------------	--

Explanation

You attempted to change the timer type AFTER, but the attempt failed. The value of interval or days must be non-zero.

System action

AON cannot update the timer.

Operator response

Correct the input and try again.

EZL967E	END TIME CANNOT BE LESS THAN OR EQUAL TO START WHEN DAY IS NOT = '*'
----------------	---

Explanation

When you specify a day to turn off recovery, the end time must be greater than the start time.

Operator response

Specify an end time that is later than the start time and press Enter.

EZL970I **NO TIMERS ARE SCHEDULED FOR
THE FILTER CRITERIA '*filter*' ON
'*target*'**

Explanation

You attempted to view timers that are not scheduled.

Message Variables

filter

The filter criteria specified at the timer invocation or on the Timer main panel. A blank insert means that filter criteria was not specified.

target

The domain or system ID where the timer command was processed.

Operator response

Ensure that the filter criteria is specified correctly. If not, press PF3 to return to the main timer panel and reenter the filter criteria. If a new timer is desired, enter the appropriate information.

EZL971I **REQUESTED TIMERS WERE
DELETED ON '*target*'**

Explanation

You deleted the requested timers.

Message Variables

target

The domain or system ID where the timer command was processed.

System action

AON deletes the timers.

EZL973I **REQUESTED TIMER *timer* ADDED
ON ' *target*'**

Explanation

You added the specified timer.

Message Variables

timer

The ID of the timer

target

The domain or system ID where the timer command was processed.

System action

AON adds the timer.

EZL974I **REQUESTED TIMER *timer*
CHANGED ON '*target*'**

Explanation

You changed the specified timer.

Message Variables

timer

The ID of the timer

target

The domain or system ID where the timer command was processed.

System action

AON changes the timer.

EZL975I **REQUEST FAILED TIMER *timer*
ALREADY EXISTS ON '*target*'**

Explanation

You attempted to add the specified timer ID, but the timer was already set.

Message Variables

timer

The ID of the timer

target

The domain or system ID where the timer command was processed.

System action

AON does not set the timer.

Operator response

Specify another timer ID and try again.

EZL976I **CHANGES TO THE *variable* ENTRY
ARE NOT PERMITTED WITH
'(MORE:+)'**

Explanation

You attempted to modify an entry on a timer panel input line that contained the string '(MORE:+).'

Message Variables

variable

The entry field that was modified.

Operator response

To change the entry, remove the string '(MORE:+) and enter all of the entry data. If a change is not required, change the data to the original text and case.

EZL977I **PRESS ENTER TO SWITCH TO A
DIFFERENT TIMER TYPE**

Explanation

You attempted to set a timer from a panel interface, but the TIMER TYPE entry did not match the current panel.

Operator response

If a different timer type is required, press enter to process that request. To set the timer using the current panel, change the TIMER TYPE entry to match the current entry.

EZL978I **ITEMS *sel1* AND *sel2* ARE
MUTUALLY EXCLUSIVE**

Explanation

sel1 and *sel2* cannot be selected together.

Message Variables

sel1

The first selection that is mutually exclusive

sel2

The second selection that is mutually exclusive

Operator response

Change your input to specify only one of the selections.

EZL979I **CURRENT TIME PAST REQUESTED
TIME**

Explanation

AON attempted to set a timer type of AT for today with a time that had already passed.

System action

AON does not set the timer.

Operator response

Enter the correct time and try again.

EZL980I **OPTION *option* DOES NOT
SUPPORT ADDITIONAL PANEL
SELECTIONS**

Explanation

You selected an *option* that does not support additional panel selections.

Message Variables

option

The panel option that does not support additional panel selections.

Operator response

You must choose another option or clear other selections.

EZL981I **OPTION *option* REQUIRES
ADDITIONAL PANEL SELECTIONS**

Explanation

The *option* specified requires you to make additional selections on this panel.

Message Variables

option

The panel option that requires additional panel selections.

Operator response

You must choose another option or make additional selections on the panel.

EZL982I **A DAY OF THE WEEK WAS NOT
SPECIFIED**

Explanation

A panel selection was made without a corresponding day selection.

Operator response

You must select the day highlighted or clear the additional selection for that day.

EZL984E **KEYWORD CONFLICT BETWEEN
keywd1 AND *keywd2***

Explanation

This message is issued when you have attempted to specify two mutually exclusive keywords on a command.

Message Variables

keywd1

The first keyword specified.

keywd2

The second keyword specified.

Operator response

Choose the correct keyword and reissue the command.

EZL985I **VALID VALUES ARE *values***

Explanation

This message displays the specified range of correct values.

Message Variables**values**

The range of correct values

Operator response

Correct the entry and press the appropriate key to process the values.

EZL986I *req_val* **MUST ACCOMPANY** *value1*
*value2***Explanation**

You selected a value on an input panel but did not provide the other values that go with the selected value.

Message Variables**req_val**

The missing and required value that goes with *value1* and *value2*

value1

The first value specified

value2

The second, optional value specified

System action

AON continues processing.

Operator response

Type the required value in the missing field and press Enter to continue.

EZL991I **INVALID SELECTION** *selection***Explanation**

You requested a selection that is either incorrect or not allowed for this type of resource.

Message Variables**selection**

The incorrect selection.

System action

The action fails.

Operator response

Try again with a valid selection.

EZL992I **MULTIPLE SELECTIONS ARE NOT SUPPORTED****Explanation**

You attempted to select more than one item from the selection list, but the list does not support multiple selections. Or you attempted to obtain a selection list using a ? for an option that does not support them.

System action

AON does not process a selection.

Operator response

Select only one item and try again, or replace the ? with an appropriate entry.

EZL999I **OP** *opid* **ISSUED type CMD: "cmd"****Explanation**

This message is logged for tracking purposes. It provides detailed information about the operator and what command they issued.

Message Variables**opid**

The ID of the operator

type

The type of command issued (for example, VTAM)

cmd

The name of the command

EZL1101I **Remote request in progress.****Explanation**

This message is displayed when the AON Communications Server application is processing a request to the NetView host. The message is displayed until a response is received or the wait time has expired.

User response

The request can be stopped by selecting the CANCEL pushbutton on the message box.

EZL1102E **Confirm delete of monitor setting?****Explanation**

You have selected to delete a monitor setting. This message asks you for confirmation before the setting is deleted.

User response

Select YES to continue the deletion or NO to cancel it.

EZL1103E Storage error; Threshold data cannot be loaded. RC = *n*

Explanation

The Automation Thresholds page of the Automation Settings notebook encountered a storage error. You might have too many application windows open.

User response

Close the Automations Settings notebook and any other non-essential windows and restart the Automation Settings notebook.

EZL1106E Unable to create notebook control.

Explanation

Presentation Manager failed to obtain the required resources to initialize the Automation Settings notebook. You might have too many application windows open.

User response

Close non-essential application windows and open the Automation Settings notebook.

EZL1107E Help error.

Explanation

The Help Manager cannot be started. No online help information is available.

EZL1109I Confirm delete of Critical Threshold setting?

Explanation

You have selected to delete a threshold setting. This message asks you for confirmation before the setting is deleted.

User response

Select YES to continue the deletion or NO to cancel it.

EZL1111I Confirm delete of NOAUTO setting?

Explanation

You have selected to delete a NOAUTO setting. This message asks you for confirmation before the setting is deleted.

User response

Select YES to continue the deletion or NO to cancel it.

EZL1112E Storage error: Monit data cannot be loaded. RC = *n*

Explanation

The Automation Monitor Settings page in the Automation Notebook encountered a storage error. You might have too many application windows open.

User response

Close the Automation Settings notebook and non-essential windows. Restart the Automation Settings notebook.

EZL1114E Monitor interval insert failed. RC = *n*

Explanation

A program error stopped the insertion of a Monit interval in the intervals list.

User response

Retry the operation.

EZL1115E Storage error; Monit change dialog terminated. RC = *n*

Explanation

A program error closed the Monitor Value panel.

User response

Retry the operation.

EZL1116E Storage error; On/Off data cannot be loaded. RC = *n*

Explanation

The Automation Settings On/off page encountered a storage error. You might have too many application windows open.

User response

Close the Automation Settings notebook and non-essential application windows. Restart the Automation Settings notebook.

EZL1119E Window positioning failed!

Explanation

Presentation Manager resources were unavailable to open the window.

User response

Close non-essential application windows and retry the operation.

EZL1120E An error occurred while creating a window. RC = n

Explanation

Presentation Manager resources were unavailable to open the window.

User response

Close non-essential application windows and retry the operation.

EZL1121E Error starting History program...RC = n

Explanation

The Automation History application failed to start.

User response

Note the return code and report the failure to your support personnel.

EZL1122E Memory allocation error: RC = n

Explanation

An application request for memory was not satisfied. The application stopped.

User response

Close any non-essential application windows and restart the application.

EZL1127E NOAUTO insert/change request failed. RC = n

Explanation

A program error closed the Set NOAUTO value panel.

User response

Note the return code and notify your support personnel.

EZL1129E Error displaying Help.

Explanation

The Help Manager encountered an error while trying to start the online help facility. The requested help cannot be displayed.

EZL1130E Stop Time not greater than Start time.

Explanation

The NOAUTO stop time must be greater than the start time.

User response

Change the setting so that the stop time is greater than the start time.

EZL1131I Remote request time out occurred!!

Explanation

The Automation Settings application timed out while waiting for a response from the AON host.

User response

Verify the following:

- The AON Communications Server application is running.
- The AUTWKSTA automation operator is active on the AON host.
- The workstation interface application (EZLMSAPL) is registered on the AON host.

Retry the operation.

EZL2005E Queue create failed. RC = n

Explanation

The DosCreateQueue function call failed.

User response

Restart the program. If the failure occurs again, contact your support personnel.

EZL2008E Queue read error

Explanation

An error was detected while reading data from the response queue. The data was ignored.

User response

Retry the operation. If the failure occurs again, contact your support personnel.

EZL2011E Thread creation failed

Explanation

The DosCreateThread function call failed.

User response

Start the AON Communications Server application. If the failure occurs again, contact your support personnel.

EZL2014E Failed to load Help Manager

Explanation

Help Manager cannot be started. No help is available.

EZL2035E DosAllocSharedMem failed. RC = *n*

Explanation

The AON Communications Server application failed to acquire enough memory. The application stopped.

User response

Close any non-essential application and restart the AON Communications Server application.

**EZL2036E Register_ms_application failed,
primary RC = *n*,sec RC = *n***

Explanation

The AON Communications Server application failed to register with the communications manager.

User response

Verify that the communications manager is running. Restart the AON Communications Server application.

Chapter 8. FKV Prefix Messages

FKV messages provide error descriptions and information about AON/SNA automation.

FKV215E ***command* IS USED BY
AUTOMATION, OPERATORS OR
OTHER PROGRAMS ARE NOT
ALLOWED TO EXECUTE IT**

Explanation

An unauthorized user attempted to run the specified automation program but failed.

Message Variables

command

The name of the command

Operator response

Notify your system programmer.

System programmer response

Verify the operator profile for unauthorized users and perform problem determination.

FKV226E ***program* COULD NOT FIND
EXPECTED CONFIGURATION
DATA FROM "*command*"
COMMAND : NON-CRITICAL DUMP
REPLY FROM RECOVERY HOST**

Explanation

The specified program cannot locate the expected configuration data from the specified command because you did not specify the noncritical response to the Network Control Program (NCP) DUMP/RELOAD command in the control file.

Message Variables

program

The name of the program

command

The command issued

Operator response

Notify your system programmer.

System programmer response

Correct or add the appropriate control file entry.

FKV227E ***program* COULD NOT FIND
EXPECTED CONFIGURATION**

**DATA FROM *command* COMMAND :
CRITICAL DUMP REPLY FROM
RECOVERY HOST**

Explanation

The specified program cannot find the expected configuration data from the specified command because you did not specify the critical response to the Network Control Program (NCP) DUMP/RELOAD command in the control file.

Message Variables

program

The name of the program

command

The command issued

Operator response

Notify your system programmer.

System programmer response

Correct or add the appropriate control file entry.

FKV228E ***program* COULD NOT FIND
EXPECTED CONFIGURATION
DATA FROM "*command*"
COMMAND**

Explanation

The specified program cannot find the expected configuration data from the specified command because you did not specify the critical or non-critical response to the Network Control Program (NCP) DUMP/RELOAD command in the control file.

Message Variables

program

The name of the program

command

The command issued

Operator response

Notify your system programmer.

System programmer response

Correct or add the appropriate control file entry.

**FKV331I TAB TO SELECTION BOX OR
PRESS F10 TO VIEW SENSE CODE
DATA**

Explanation

You tried to view sense code data but your cursor was in the wrong field.

Operator response

Press the F10 or Tab key to move the cursor to the Sense Code Data field located in the lower right section of the panel.

**FKV332I UNABLE TO RUN LUDRPOOL.
resname DOES NOT HAVE AN NCP
DEFINED**

Explanation

You tried to issue the LUDRPOOL command against a resource that has no NCP defined.

Message Variables

resname

The name of the resource

Operator response

Issue the command again to a correct resource.

**FKV333I *resname1* IS status DUE TO
restype2 resname2. PRESS F11
FOR ERROR DETAILS**

Explanation

The first specified resource has the specified status because the second specified resource, which is a higher node, is not active.

Message Variables

resname1

The name of the resource that is being supported by the higher resource

status

The status of the resource that is being supported

restype2

The resource type of the higher resource

resname2

The name of the higher resource

Operator response

Press the F11 key to view the error information. Follow the menu to solve the resource problem.

**FKV334I NETVIEW ACCESS SERVICES IS
NOT ACTIVE ON *domain***

Explanation

You attempted to enter the option for NetView Access Services (NVAS) on the SNA Help Desk panel, but NetView Access Services is not active.

Message Variables

domain

The name of the domain where NetView Access Services is not active

Operator response

Notify your system programmer to start NetView Access Services.

System programmer response

Start NetView Access Services.

**FKV335I *nvasid* IS NOT LOGGED ONTO
NETVIEW ACCESS SERVICES,
*nvas***

Explanation

You entered an NetView Access Services (NVAS) user ID and selected NetView Access Services on the SNA Help Desk panel, but the NetView Access Services user ID is not logged on.

Message Variables

nvasid

The NetView Access Services user ID

nvas

The NetView Access Services name defined at installation

Operator response

Notify the user that called in that the ID is not logged on to NetView Access Services.

**FKV336I NO DATA RETURNED FOR
NETVIEW ACCESS ID *nvasid***

Explanation

AON/SNA cannot find data for the specified NetView Access Services (NVAS) user ID, even though the ID is logged onto the system.

Message Variables

nvasid

The NetView Access Services user ID

Operator response

Notify your system programmer.

System programmer response

Check the NetView Access Services user ID for any problems and correct them. Verify that the NetView Access Services application is working properly.

FKV337I *resname* IS *status*. PRESS F11 FOR ERROR DETAILS

Explanation

You selected Problem Determination on the specified resource, and the resource is not active.

Message Variables

resname

The name of the resource

status

The status of the resource

Operator response

Press the F11 key to view the error information. Take the appropriate action on the resource.

FKV338I RESOURCE *resname* IS *status*. THERE ARE NO ERROR DETAILS TO DISPLAY

Explanation

You selected Problem Determination for the specified resource and pressed F11, but the resource is normal. The F11 key is not available when the resource is normal.

Message Variables

resname

The name of the resource

status

The status of the resource.

FKV339I UNABLE TO ACTIVATE THE HIERARCHY FOR *resname*. SENSECODE= *sensecode*

Explanation

You tried to activate the hierarchy for the specified resource, but the ACTIVATE command that you issued failed because of the specified sense code.

Message Variables

resname

The name of the resource

sensecode

The sense code returned from the ACTIVATE command

Operator response

View help for the sense code for more information. Note the sense code and view the sense code information by selecting the View Sense Code option. Notify your system programmer with the sense code information.

System programmer response

Perform problem determination using the sense code and NetView and VTAM references.

FKV501I DUMP OF NCP *resname* FAILED - error

Explanation

The NCP failed to DUMP because of the specified error.

Message Variables

resname

The name of the resource

error

The reason for the failure

System action

The NCP DUMP is not completed.

Operator response

Notify your system programmer.

System programmer response

Note the reason for the DUMP failure and correct the problem.

FKV502I LOAD OF NCP *resname* FAILED - reason

Explanation

The NCP failed to LOAD because of the specified error.

Message Variables

resname

The name of the resource

reason

The reason for the failure

System action

The NCP LOAD is not completed.

Operator response

Notify your system programmer.

System programmer response

Note the reason for the LOAD failure and correct the problem.

FKV510A	LOAD OF NCP <i>ncp</i> STOPPED BECAUSE LOAD MODULE DOES NOT MATCH NEW NCP: AUTOMATION IS OFF, REPLY 'NO' TO CANCEL OR 'YES' TO RELOAD FOR REPLYID <i>replyid</i>
----------------	---

Explanation

AON/SNA stopped loading the specified Network Control Program (NCP) because the load module does not match the new NCP.

Message Variables

ncp

The name of the NCP that stopped loading

replyid

The reply number that the operator used to control the NCP load

System action

AON/SNA stops processing until an operator intervenes.

Operator response

Solve the problem with the NCP load module. Respond to the outstanding reply.

System programmer response

Determine why the load module did not match the new NCP and solve the problem.

FKV511I	COMMUNICATION WITH CDRM <i>cdrm</i> LOST DUE TO SSCP FAILURE - (RC = <i>returncode</i>): AUTOMATIC RECOVERY IN PROGRESS
----------------	--

Explanation

A System Service Control Point (SSCP) failed, so the specified Cross Domain Resource Manager (CDRM) was lost. AON/SNA started the recovery process.

Message Variables

cdrm

The CDRM that was lost

returncode

The return code X'0E' from the CDRM failure

System action

VTAM recovers the CDRM automatically.

Operator response

Notify the system programmer.

System programmer response

Try to recover the SSCP.

FKV512I	LOAD OF NCP <i>ncp</i> CANCELED - LOAD MODULE DOES NOT MATCH NEW NCP
----------------	---

Explanation

The load module in the Network Control Program (NCP) does not match the new NCP. The NCP cannot be loaded.

Message Variables

ncp

The name of the NCP

System action

AON/SNA recovery stops. The NCP is not loaded.

Operator response

Resolve the mismatch between the load module and the NCP by using the ACTIVATE command. If you cannot solve the problem, notify your system programmer.

System programmer response

Resolve the mismatch between the load module and the NCP by using the ACTIVATE command. Reference the appropriate NetView and VTAM documentation.

FKV513I	STORAGE UNAVAILABLE FOR ADJSSCP TABLE FOR <i>definition</i>
----------------	--

Explanation

AON/SNA cannot build the ADJSSCP table while processing the specified definition because of a lack of storage.

Message Variables

definition

The definition in the VTAM list

System action

AON/SNA issues a DISPLAY BFRUSE command.

Operator response

Notify your system programmer.

System programmer response

Browse the NetView log for the results of the DISPLAY BFRUSE command. Resolve the lack of storage.

**FKV514I STORAGE UNAVAILABLE FOR *type*
 BUFFER POOL**

Explanation

VTAM requested more storage for the specified buffer pool, but the request cannot be satisfied.

Message Variables

type

The type of buffer pool requested

System action

AON/SNA issues a DISPLAY BFRUSE command.

Operator response

Notify your system programmer.

System programmer response

Browse the NetView log for the results of the DISPLAY BFRUSE command. Resolve the lack of storage.

**FKV515I STORAGE UNAVAILABLE - *type*
 HAS BEEN REACHED**

Explanation

A VTAM request for storage from the specified type cannot be satisfied.

Message Variables

type

The type of storage unit requested

System action

AON/SNA issues a DISPLAY BFRUSE command.

Operator response

Notify your system programmer.

System programmer response

Browse the NetView log for the results of the DISPLAY BFRUSE command. Resolve the lack of storage.

**FKV516I STORAGE UNAVAILABLE FOR
 SUBPOOL *subpool***

Explanation

A VTAM request for storage from the specified subpool cannot be satisfied.

Message Variables

subpool

The storage subpool requested

System action

AON/SNA issues a DISPLAY BFRUSE command.

Operator response

Notify your system programmer.

System programmer response

Browse the NetView log for the results of the DISPLAY BFRUSE command. Increase storage.

**FKV517I COMMUNICATION WITH CDRM
 cdrm LOST DUE TO CLEANUP - THE
 SSCP IS RESETTING (RC =
 returncode)**

Explanation

AON/SNA lost communication with the specified Cross Domain Resource Manager (CDRM) during a System Service Control Point (SSCP) reset. AON/SNA is not started.

Message Variables

cdrm

The name of the CDRM

returncode

The return code X'0F' from the CDRM failure

System action

Communication with the CDRM is lost. Automated recovery does not start.

Operator response

Wait for the SSCP to reestablish communications. Ensure that the CDRM recovers. If the CDRM does not recover, reactivate it. If problems persist, notify your system programmer.

System programmer response

Wait for SSCP to reestablish communications. Ensure that the CDRM recovers. If the CDRM does not recover, reactivate it.

FKV518I ***restype resname* DISCONNECTION
FAILED DUE TO LACK OF STORAGE
- CURRENT STATUS IS *status***

Explanation

AON/SNA tried to disconnect the specified resource but failed because of a lack of storage for VTAM.

Message Variables

restype

The type of the resource.

resname

The name of the resource.

status

The current status of the resource.

System action

AON/SNA issues a DISPLAY BFRUSE command. The resource is inactive.

Operator response

Notify your system programmer if the problem persists.

System programmer response

Browse the NetView log for the results of the DISPLAY BFRUSE command. Resolve the lack of storage.

FKV519I **COMMUNICATION WITH CDRM
cdrm LOST DUE SSCP
CONTENTION (RC = *returncode*)**

Explanation

AON/SNA lost communication with the specified Cross Domain Resource Manager (CDRM) because of contention with a System Service Control Point (SSCP). AON/SNA cannot recover the connection.

Message Variables

cdrm

The name of the CDRM with which communication was lost

returncode

The return code X'10' that was received from VTAM when communication was lost.

System action

Communication with the CDRM is lost. Automated recovery does not start.

Operator response

Resolve the SSCP contention and reestablish communication with the CDRM. If problems persist, notify your system programmer.

System programmer response

Resolve the SSCP contention and reestablish communication with the CDRM.

FKV520I **COMMUNICATION WITH CDRM
cdrm LOST DUE TO FORCED
INACTIVATE OF THE VR (RC =
returncode); AUTOMATIC
RECOVERY IN PROGRESS**

Explanation

AON/SNA lost communications with the specified Cross Domain Resource Manager (CDRM) because the virtual route (VR) is inactive.

Message Variables

cdrm

The name of the CDRM.

returncode

The return code X'0B', which was received from VTAM when communication was lost.

System action

AON/SNA initiates recovery of the CDRM.

Operator response

If the VR is not routed, resolve the VR failure. Reactivate the CDRM. If problems persist, notify your system programmer.

System programmer response

If the VR is not routed, resolve the VR failure. Reactivate the CDRM.

FKV521I **COMMUNICATION WITH CDRM
cdrm LOST DUE TO VR INOP (RC =
returncode); AUTOMATIC
RECOVERY IN PROGRESS**

Explanation

AON/SNA issued an INACTIVATE command that disrupted the session with the specified Cross Domain Resource Manager (CDRM).

Message Variables

cdrm

The name of the CDRM

returncode

The return code X'07'

System action

AON/SNA stops the session with the CDRM without disrupting other active LU-U sessions. AON/SNA starts recovery on the CDRM.

Operator response

Notify your system programmer. Issue a VARY ACT command for the CDRM to reestablish the session.

System programmer response

Solve the problem with VR INOP.

FKV522I	COMMUNICATION WITH CDRM cdrm LOST DUE TO SSCP - FAILURE (RC = <i>returncode</i>): AUTOMATIC RECOVERY IN PROGRESS
----------------	---

Explanation

A System Service Control Point (SSCP) failure disrupted the session with the specified Cross Domain Resource Manager (CDRM).

Message Variables

cdrm

The name of the CDRM

returncode

The return code X'0C'

System action

AON/SNA stops the session with the CDRM without disrupting other active LU-U sessions. AON/SNA initiates recovery of the CDRM.

Operator response

Notify your system programmer. Issue a VARY ACT command to reestablish a session with the CDRM.

System programmer response

Resolve the SSCP failure.

FKV523I	TG SWITCH HAS TAKEN PLACE FOR <i>restype resname</i> (<i>line</i> WAS RECYCLED)
----------------	--

Explanation

AON/SNA switched transmission groups (TGs) to ensure that the lines in the TG are in order when the primary line or PHYSICAL_UNIT is activated. A TG

switch occurs when a backup line is deactivated and then reactivated.

Message Variables

restype

The type of resource

resname

The name of the resource

line

The backup line

System action

AON/SNA resumes processing.

FKV524I	SESSION LOST BETWEEN <i>resname</i> AND <i>application</i> IN SA <i>sa</i> DUE TO VR INOP RECEIVED
----------------	---

Explanation

The session between the specified resource and the specified subarea of the specified application was lost because the virtual route (VR) between the resource and application was inoperative.

Message Variables

resname

The name of the resource

application

The name of the application

sa

The subarea number

Operator response

If you have been instructed to provide backup for the application, perform the necessary operations. If problems persist, notify your system programmer.

System programmer response

Resolve the routing problem. Recover the connection between the resource and the application.

FKV525I	COMMUNICATION WITH CDRM cdrm LOST DUE TO SESSION OVERRIDE - ACTIVATE ALREADY IN PROGRESS (RC = <i>returncode</i>)
----------------	--

Explanation

The session setup for the specified Cross Domain Resource Manager (CDRM) failed. AON/SNA lost communications with the CDRM.

Message Variables

cdrm

The name of the CDRM

returncode

The return code X'0D'

System action

Communication to the CDRM is lost.

Operator response

Notify your system programmer.

System programmer response

Resolve the problem with the session setup for the CDRM.

FKV526I **restype resname IS IN AN INVALID STATE: CURRENT STATUS IS status**

Explanation

An unrecoverable or forced error occurred on the node. AON/SNA cannot act on the specified resource.

Message Variables**restype**

The type of resource

resname

The name of the resource

status

The current status of the resource

System action

AON/SNA issues a VARY INACT command for the node automatically. No other automation is started.

Operator response

None, if you want the resource to remain inactive. If the message appears to be the result of a hardware error, follow the problem determination procedure and notify your system programmer.

System programmer response

Put the resource in an active or inactive state. Resolve why the resource stayed in an unrecoverable state.

FKV527I **DEACTIVATION OF resname CANNOT BE COMPLETED BECAUSE VARY HAS FAILED WITH SENSE: sensecode**

Explanation

AON/SNA cannot deactivate the specified resource because the VARY command has failed with the sense code displayed. The node is not available to VTAM.

Message Variables**resname**

The name of the resource

sensecode

The sense code

System action

AON/SNA waits to inactivate the resource with the VARY command.

Operator response

Issue a VARY INACT,F command to deactivate the node. If the problem persists, notify your system programmer. Provide the problem determination information.

System programmer response

Using the sense code provided, resolve the deactivation problem for the resource, and inactivate the resource.

FKV528I **DISCONNECT OF resname FAILED DUE TO I/O ERROR OR INSUFFICIENT STORAGE**

Explanation

AON/SNA tried to end a session on the specified resource but the request failed because of an I/O error or insufficient storage.

Message Variables**resname**

The name of the resource

System action

AON/SNA resumes processing.

Operator response

Issue a VARY INACT,I command for the resource so that the system can release the resources allocated to it. Notify your system programmer. Provide the system programmer with output from the problem determination action that you received after issuing the DISPLAY BFRUSE command.

System programmer response

Resolve the I/O error or storage shortage. Inactivate the resource.

**FKV529I ACTIVATION OF *minornode*
 FAILED DUE TO INACTIVE HIGHER
 NODE - *highernode*, ACTIVATION
 OF *highernode* ATTEMPTED**

Explanation

AON/SNA cannot activate the specified minor node because its higher-level node is inactive. To activate the minor node, the higher node must be active.

Message Variables

minornode

The lower node of the resource

highernode

The higher node of the resource

System action

VTAM rejects the VARY command and AON/SNA tries to activate the higher node. The minor node is recovered as part of the higher node recovery.

Operator response

Watch for associated messages to verify that the attempt to activate succeeds.

System programmer response

If recovery of the higher node fails, resolve the failure and activate the higher node with SCOPE=U.

**FKV530I BYPASS THE INITIAL TEST
 ROUTINE FOR *resname*, REPLY OF
 -U- BYPASS WAS ISSUED**

Explanation

While processing a VARY ACT command or an error recovery, VTAM attempted to load the communication controller. However, the initial test routine of the load utility program cannot be used because of a permanent I/O error or because of erroneous or missing job control statements. AON/SNA issued a reply of U to the initial test routine, causing the system to bypass the routine and to initiate the Network Control Program (NCP) without testing the hardware.

Message Variables

resname

The name of the resource

System action

The NCP load continues.

Operator response

Notify your system programmer.

System programmer response

Browse the syslog for appropriate I/O error messages and verify the job control statements of the load utility program.

**FKV531I COMMUNICATION WITH CDRM
 cdrm LOST DUE TO GATEWAY
 NODE CLEANUP (RC = *returncode*)**

Explanation

You lost communications with the specified Cross Domain Resource Manager (CDRM) because of a Gateway node cleanup.

Message Variables

cdrm

The name of the CDRM

returncode

The return code X'11'

System action

AON/SNA stops communication with the CDRM and does not attempt to recover it.

Operator response

Wait for the Gateway to activate and reactivate the CDRM and notify your system programmer.

System programmer response

Resolve the Gateway node failure and reactivate the CDRM.

**FKV532I REPLY OF *-reply-* WAS ISSUED BY
 AUTOMATION FOR *resname* FROM
 origin: NON-CRITICAL DUMP
 REPLY FROM RECOVERY HOST**

Explanation

The communication controller associated with the specified Network Control Program (NCP) failed. AON/SNA issued the specified reply to the Option to dump NCP prompt. The NCP critical threshold for failures are not exceeded.

Message Variables

reply

The reply issued to the Option to dump NCP prompt. This reply is read from the NCPRECOV statement for the NCP in the control file.

resname

The name of the resource

origin

The origin of the message

System action

The NCP dumps into an allocated dump data set.

Operator response

Notify your system programmer.

System programmer response

Investigate why the NCP failed to prevent a future failure.

FKV533I **REPLY OF -reply- WAS ISSUED BY
AUTOMATION FOR *ncp* FROM
origin: CRITICAL DUMP REPLY
FROM RECOVERY HOST**

Explanation

The communication controller associated with the specified Network Control Program (NCP) failed. AON/SNA issued the specified reply to the Option to dump NCP prompt. The number of NCP failures has reached the critical threshold.

Message Variables**reply**

The reply issued to the Option to dump NCP prompt. This reply is read from the NCPRECOV statement for the NCP in the control file.

ncp

The name of the NCP.

origin

The origin of the message.

System action

The NCP performs a dump into an allocated dump data set.

Operator response

Notify your system programmer.

System programmer response

Investigate the cause of the NCP failure to prevent a future failure.

FKV534I

**REPLY OF -reply- WAS ISSUED BY
AUTOMATION FOR *ncp* FROM
origin: STANDARD DUMP REPLY
FROM NON-RECOVERY HOST**

Explanation

The communication controller associated with the specified Network Control Program (NCP) failed. AON/SNA issued the specified reply to the Option to dump NCP prompt. Channel-attached, non-recovery hosts always issue a reply of NO, so that only one AON host performs a recovery.

Message Variables**reply**

The reply issued to the Option to dump NCP prompt. This reply is read from the NCPRECOV statement for the NCP in the control file.

ncp

The name of the NCP.

origin

The origin of the message.

System action

The NCP performs a dump into an allocated dump data set.

Operator response

Notify your system programmer.

System programmer response

Investigate the NCP failure to prevent a future occurrence.

FKV535I

**REPLY OF -reply- WAS ISSUED BY
AUTOMATION FOR *ncp* FROM
origin: NON-CRITICAL RELOAD
REPLY FROM RECOVERY HOST**

Explanation

The communication controller associated with the specified Network Control Program (NCP) failed. AON/SNA issued the specified reply after receiving the Option to load NCP prompt. The threshold for a critical failure threshold has not been reached.

Message Variables**reply**

The reply issued to the prompt Option to load NCP. This reply is retrieved for the NCPRECOV control file statement.

ncp

The name of the NCP

origin

The origin of the message

System action

AON/SNA starts loading the NCP.

FKV536I **REPLY OF -reply- WAS ISSUED BY
AUTOMATION FOR *ncp* FROM
origin: CRITICAL RELOAD REPLY
FROM RECOVERY HOST**

Explanation

The communication controller associated with the specified Network Control Program (NCP) failed. AON/SNA issued the specified reply to the Option to dump NCP prompt. The critical threshold for NCP failures has been reached.

Message Variables**reply**

The reply issued to the Option to load NCP prompt. This reply is retrieved for the NCPRECOV control file statement.

ncp

The name of the NCP.

origin

The origin of the message.

System action

AON/SNA starts loading the NCP.

FKV537I **REPLY OF -reply- WAS ISSUED BY
AUTOMATION FOR *ncp* FROM
origin: NON-CRITICAL RELOAD
REPLY FROM NON-RECOVERY
HOST**

Explanation

The communication controller associated with the specified Network Control Program (NCP) failed. AON/SNA issued the specified reply to the Option to dump NCP prompt. The critical limit for NCP failures has not been exceeded.

Message Variables**reply**

The reply issued to the Option to load NCP prompt. This reply is retrieved for the NCPRECOV control file statement.

ncp

The name of the NCP.

origin

The origin of the message.

System action

AON/SNA starts loading the NCP.

FKV538I **REPLY OF -reply- WAS ISSUED BY
AUTOMATION FOR *ncp* FROM
origin: CRITICAL RELOAD REPLY
FROM NON-RECOVERY HOST**

Explanation

The communication controller associated with the specified Network Control Program (NCP) failed. AON/SNA issued the specified reply to the Option to dump NCP prompt. The critical threshold for NCP failures has been reached.

Message Variables**reply**

The reply issued to the Option to load NCP prompt. This reply is retrieved for the NCPRECOV control file statement.

ncp

The name of the NCP.

origin

The origin of the message.

System action

AON/SNA starts loading the NCP.

FKV539I **SESSION LOST BETWEEN *resname*
AND *sscp* IN SA *sa* DUE TO A
FORCED DEACTIVATION OF THE
SSCP-PU SESSION**

Explanation

AON/SNA lost the session between the specified resource and the specified System Service Control Point (SSCP) in the specified subarea of the application. AON/SNA does not initiate recovery of the session.

Message Variables**resname**

The name of the resource

sscp

The application with which the resource was in session

sa

The subarea of the SSCP

System action

AON/SNA does not start recovery.

Operator response

Notify your system programmer.

System programmer response

Determine why the session between the SSCP and the physical unit ended and solve the problem.

FKV540I **OUTSTANDING REPLY: *replyid* - *replyid msgnum* OPTION TO *action* *ncp* AVAILABLE - REPLY 'YES' OR 'NO' OR 'YES,*station*=LINKSTANAME'**

Explanation

AON/SNA automation does not respond to the specified reply.

Message Variables

replyid

The outstanding reply.

msgnum

The message number to which to reply.

action

The action taken. The actions are DUMP or RELOAD.

ncp

The name of the NCP.

station

The station type to use for DUMP or RELOAD. The type is DUMPSTA or LOADSTA.

Operator response

Reply to the outstanding reply.

FKV541I **ACTIVATION *status* FOR CDRM *cdrm*, GATEWAY PATH NOT AVAILABLE**

Explanation

AON/SNA cannot select a gateway Network Control Program (NCP) to support a session between two System Services Control Programs (SSCPs) with the specified Cross Domain Resource Manager (CDRM).

Message Variables

status

The activation status. The status is FAILED or QUEUED.

cdrm

The name of the CDRM.

System action

If the status is QUEUED, AON/SNA queues the activation of the CDRM, pending the availability of a suitable gateway NCP. If the status is FAILED, the activation of the CDRM failed, because of an unexpected error (such as a storage shortage), because all paths have been tried and failed, or because VTAM has not defined a suitable Gateway NCP that can become fully active in the future.

Operator response

Notify your system programmer. To stop the CDRM from activating, issue a VARY INACT command.

System programmer response

Resolve the path problem and reactivate the CDRM.

FKV542I **NCP *resname* REQUIRES A MANUAL ACTIVATION**

Explanation

You must activate the specified Network Control Program (NCP) manually because AON/SNA is off or because there is no entry for the NCP in the control file. The nodes associated with this communication controller are inaccessible.

Message Variables

resname

The name of the NCP

System action

AON/SNA resumes processing.

Operator response

Complete the following steps:

1. Issue a VARY ACT command for the NCP.
2. Verify the automation status of the NCP.
3. Verify that there is an entry for the NCP in the control file.

System programmer response

To recover the NCP automatically, enter the supporting controls into the control file.

FKV543I **SESSION LOST BETWEEN *resname* AND *application* IN SA *sa* DUE TO A DEACTIVATION OF THE VIRTUAL ROUTE**

Explanation

AON/SNA lost the session between the specified Network Control Program (NCP) and the specified System Service Control Point (SSCP) in the specified subarea. The session was lost because the virtual route (VR) was deactivated. AON/SNA is enabled for both the controller and the SSCP.

Message Variables

resname

The name of the NCP

application

The name of the SSCP

sa

The subarea number of the application

System action

AON/SNA stops the traffic between the resource and the SSCP.

Operator response

Notify your system programmer.

System programmer response

Resolve the VR problem.

FKV544I	RELOAD WAS SUCCESSFUL FOR <i>resname</i> AND IS AVAILABLE
----------------	--

Explanation

AON/SNA successfully loaded the communication controller with the Network Control Program (NCP) in response to a VARY ACT command or to an NCP reload after an error recovery procedure. The communication controller is ready for use.

Message Variables

resname

The name of the NCP

System action

AON/SNA resumes processing.

FKV545I	SESSION LOST BETWEEN <i>ncp</i> AND <i>sscp</i> IN SA <i>sa</i> DUE TO AN SSCP FAILURE
----------------	---

Explanation

AON/SNA lost the session between the specified Network Control Program (NCP) and the specified System Service Control Point (SSCP) in the specified subarea because the SSCP failed. AON/SNA is enabled for both the controller and the SSCP.

Message Variables

ncp

The name of the NCP

sscp

The name of the SSCP

sa

The subarea number of the SSCP

Operator response

If you have been instructed to provide backup for the SSCP, perform the necessary operations for backing up the SSCP. If problems persist, notify your system programmer.

System programmer response

Resolve the SSCP failure.

FKV546I	TIME USED TO RELOAD <i>restype</i> <i>resname</i> HAS EXCEEDED <i>number</i> MINUTES
----------------	---

Explanation

AON/SNA started loading the specified Network Control Program (NCP) but did not finish within the specified number of minutes. The number of minutes is defined in the LOADTIME parameter of the NCPRECOV statement in the control file for the NCP.

Message Variables

restype

The type of resource (NCP)

resname

The name of the resource (NCP)

number

The number of minutes AON/SNA has to load the NCP

System action

AON/SNA resumes loading the NCP.

Operator response

Determine why the loading time exceeds the allotted time or why loading failed. Notify your system programmer.

System programmer response

Check routes, links, and link capacity for any resolvable bottlenecks for the flow of a large load module and clear them.

FKV547I **TIME USED TO DUMP *restype*
resname HAS EXCEEDED *number*
MINUTES**

Explanation

AON/SNA started to dump the specified Network Control Program (NCP), but the dump did not complete within the specified number of minutes. The number of minutes is defined in the DUMPTIME parameter of the NCPRECOV statement in the control file for the NCP.

Message Variables

restype

The resource type of NCP

resname

The name of the NCP

number

The number of minutes allotted for AON/SNA to dump the NCP

System action

AON/SNA resumes the dumping process.

Operator response

Determine why the dumping time exceeds the allotted time or why dumping failed and solve the problem. If problems persist, notify your system programmer.

System programmer response

Check routes, links, and link capacity for resolvable bottlenecks for the flow of a large dump and resolve them.

FKV548I ***linkstation* HAS CONTACTED NCP
ncp - *ncp* IS AVAILABLE**

Explanation

The specified link station contacted the Network Control Program (NCP). The NCP is accessible from the host.

Message Variables

linkstation

The name of the NCP link station.

ncp

The name of the NCP

System action

AON/SNA resumes processing.

FKV549I **DUMP TIMER FOR *ncptype ncp*
EXPIRED, DUMP AUTOMATION**

**TERMINATED, *ncp* IS UNKNOWN
TO VTAM**

Explanation

AON/SNA exceeded the DUMP threshold for the specified Network Control Program (NCP), but the NCP is inactive and unknown to VTAM. An operator might have intervened during the dumping process.

Message Variables

ncptype

The type of NCP

ncp

The name of the NCP

System action

AON/SNA stops trying to recover the NCP and resumes processing.

Operator response

Recover the NCP manually.

System programmer response

Check routes, links, and link capacity for resolvable bottlenecks to the flow of a large dump and resolve them.

FKV550I **DUMP OF NCP *ncp* FAILED -
PERMANENT I/O ERROR ON NCP
OR DUMP DATASET**

Explanation

AON/SNA cannot dump the specified Network Control Program (NCP) because of its inability to access the dump data set.

Message Variables

ncp

The name of the NCP.

System action

AON/SNA stops automatic recovery.

Operator response

Notify your system programmer.

System programmer response

Resolve dump failure by recovering the NCP manually.

FKV551I **REPLY FOR BYPASS INITIAL TEST
FOR NCP *ncp* NOT ISSUED;
AUTOMATION FOR *ncp* IS OFF:**

**REPLY 'U' TO BYPASS OR CANCEL
FOR REPLY ID *replyid***

Explanation

No NCPRECOV statement exists for the Network Control Program (NCP), so AON/SNA cannot respond automatically. The initial test failed.

Message Variables

ncp

The name of the NCP.

replyid

The reply ID.

Operator response

Type **u** to continue loading or **cancel** to stop loading.

FKV552I	APPLICATION <i>application</i> HAS BEEN TERMINATED BY VTAM
----------------	---

Explanation

VTAM ended the specified application.

Message Variables

application

The name of the application

System action

AON/SNA resumes processing.

Operator response

Issue the DISPLAY NET command on the application to view its status. Issue the VARY ACT command to change its status.

FKV553I	APPLICATION <i>application</i> HAS BEEN <i>status</i> FOR <i>interval</i>
----------------	--

Explanation

The specified application has the specified status and has had this status for the specified interval.

Message Variables

application

The name of the application

status

The status of the application

interval

The time allotted to the application in the specified status

Operator response

Start the application if the application must be running. If problems persist, notify your system programmer.

System programmer response

Start the application if the application must be running. If you cannot start the application, determine why, correct the problem, and start the application again by issuing the START command.

FKV554I	DUMP OF NCP <i>ncp</i> FAILED - DUMP DATASET <i>dataset</i> CANNOT BE OPENED
----------------	---

Explanation

The dump for the specified Network Control Program (NCP) failed because AON/SNA cannot open the specified data set.

Message Variables

ncp

The name of the NCP

dataset

The name of the data set that cannot be opened

System action

AON/SNA stops automatic recovery.

Operator response

Notify your system programmer.

System programmer response

Resolve the dump data set problem by manually dumping and recovering the NCP.

FKV555I	LINK STATION <i>linkstation</i> HAS LOST CONTACT WITH <i>restype</i> <i>resname</i> - <i>resname</i> MAY NOT BE AVAILABLE
----------------	--

Explanation

The link station lost contact with a Network Control Program (NCP) that has options for NCPRECOV recovery defined in the control file. If the link station is the only path to the NCP, the NCP might not be available from the host.

Message Variables

linkstation

The link station address of the NCP

restype

The type of resource

resname

The name of the NCP

System action

AON/SNA tries to recover the NCP if VTAM issues a WTORS message for a dump and reload.

Operator response

Check the availability of the NCP. Watch for more messages on the status of the NCP. Notify your system programmer.

System programmer response

Resolve the link station failure.

**FKV556I LOAD OF *ncp* BY OPERATOR
 STARTED**

Explanation

You started loading the specified Network Control Program (NCP) by using the VARY command.

Message Variables***ncp***

The name of the NCP

System action

AON/SNA resumes loading the NCP.

**FKV557I RECOVERY TERMINATED FOR
 restype resname, VTAM
 DEFINITION NOT FOUND**

Explanation

AON/SNA tried to recover the specified resource on the MONIT intervals defined in the control file. Since the last recovery attempt, the resource has become unknown to VTAM. Potentially, the major node containing the resource definition is inactive.

Message Variables***restype***

The type of resource.

resname

The name of the resource

System action

AON/SNA stops trying to recover the resource.

Operator response

None, if the resource is not valid for this network. Otherwise, resolve the resource failure manually. If problems persist, notify your system programmer.

System programmer response

None, if the resource is not valid for this network. Otherwise, resolve the resource failure manually.

FKV558I DUMP OF *ncp* status

Explanation

AON/SNA dumped or started dumping the specified Network Control Program (NCP).

Message Variables***ncp***

The name of the NCP.

status

The status of the dump. The status is COMPLETE or PARTIALLY COMPLETE.

Operator response

If the status is COMPLETE, you can format and print the entire dump formatted by using the utility program.

**FKV559I DUMP OF *restype resname* FAILED
 - DUMP DATASET ON AN
 UNSUPPORTED DEVICE TYPE**

Explanation

The dump of the Network Control Program (NCP) cannot be stored into the dump data set because it is located on an unsupported device.

Message Variables***restype***

The type of NCP

resname

The name of the NCP

System action

AON/SNA stops recovery of the NCP.

Operator response

Notify your system programmer.

System programmer response

Resolve the data set problem. Manually dump and reload the NCP.

FKV560I	LOAD OF NCP <i>ncp</i> FAILED - RECEIVED <i>text</i>
----------------	---

Explanation

AON/SNA stopped loading the specified Network Control Program (NCP) because of an error explained in the specified message text.

Message Variables***ncp***

The name of the NCP

text

The text of the message explaining the NCP load failure

System action

AON/SNA stops for the NCP.

Operator response

Notify your system programmer.

System programmer response

Load and activate the NCP manually.

FKV561I	<i>resname</i> X25MCH DEFINITION HAS BEEN BYPASSED
----------------	---

Explanation

While AON/SNA was processing configuration files in X25INIT startup for X25MONIT, it encountered errors in the parameters of the specified resource. This message follows message EZL203I, which identifies the incorrect parameter.

Message Variables***resname***

The name of the installation-specific resource that defines the link in the configuration file.

System action

AON/SNA resumes processing with the next link definition.

System programmer response

Correct the parameter in error and run X25INIT again.

FKV563I	X25MONIT ENVIRONMENT HAS NOT BEEN INITIALIZED
----------------	--

Explanation

The user issued the X25MONIT command on a region where X25INIT is not running.

System action

The X25MONIT command fails.

System programmer response

If X25MONIT is valid for this region, initialize the environment by running X25INIT.

FKV564I	DEFINITIONS FOR <i>resname</i> ALREADY EXISTS
----------------	--

Explanation

The specified resource name is already in use for an existing link under monitoring. The resource name must be unique.

Message Variables***resname***

The name of the installation-unique resource that defines the link.

Operator response

Correct the resource name in the resource name field.

System programmer response

If the name being entered is unique, contact the support center.

FKV566I	ERRORS HAVE OCCURRED, PLEASE CORRECT HIGHLIGHTED FIELD(S)
----------------	--

Explanation

During ADD or CHANGE processing, you entered one or more fields with values that are not valid.

Operator response

Correct the values in the highlighted fields and press Enter.

System programmer response

If the values are correct, and if the problem persists, contact the support center.

FKV567I	RESTARTCAUSE BYTE = <i>vcbrec1</i>, DIAG BYTE = <i>vcbrec2</i> RECEIVED FOR FOLLOWING RESOURCE <i>hierarchy</i>
----------------	--

Explanation

A BNJ146I message was received supplying the restart and diagnostic bytes for the hierarchy in the message.

Message Variables

- vcbrec1**
The X.25 VCBREC1 byte for RESTART, CLEAR, and RESET causes
- vcbrec2**
The X.25 VCBREC2 byte for DIAGNOSTIC codes
- hierarchy**
The hierarchy for which the BNJ146I message was issued

System action
Processing continues.

Operator response
Use the codes in the message and see the *NPSI Diagnosis, Customization, and Tuning Guide* for more information.

FKV568I **RESETCAUSE BYTE = vcbrec1, DIAG BYTE = vcbrec2 RECEIVED FOR FOLLOWING RESOURCE hierarchy**

Explanation
A BNJ146I message was received supplying the restart and diagnostic bytes for the hierarchy in the message.

- Message Variables**
- vcbrec1**
The X.25 VCBREC1 byte for RESTART, CLEAR, and RESET causes
 - vcbrec2**
The X.25 VCBREC2 byte for DIAGNOSTIC codes
 - hierarchy**
The hierarchy for which the BNJ146I message was issued

System action
Processing continues.

Operator response
Use the codes in the message and see the *NPSI Diagnosis, Customization, and Tuning Guide* for more information.

FKV569I **CLEARCAUSE BYTE = vcbrec1, DIAG BYTE = vcbrec2 RECEIVED FOR FOLLOWING RESOURCE hierarchy**

Explanation
A BNJ146I message was received supplying the restart and diagnostic bytes for the hierarchy in the message.

- Message Variables**
- vcbrec1**
The X.25 VCBREC1 byte for RESTART, CLEAR, and RESET causes
 - vcbrec2**
The X.25 VCBREC2 byte for DIAGNOSTIC codes
 - hierarchy**
The hierarchy for which the BNJ146I message was issued

System action
Processing continues.

Operator response
Use the codes in the message and see the *NPSI Diagnosis, Customization, and Tuning Guide* for more information.

FKV571I **restype resname IS status AT THE reslevel LEVEL**

Explanation
AON/SNA reported the specified status for the line, PHYSICAL_UNIT, or LOGICAL_UNIT for the link.

- Message Variables**
- restype**
The resource type.
 - resname**
The name of the resource.
 - status**
The status of the resource received from VTAM.
 - reslevel**
The highest level that an inactive status was found. The possibilities are line, PU, and LU.

System action
AON/SNA notifies the Dynamic Display Facility (DDF).

Operator response
Solve the problem that is causing VTAM to report the inactive status.

FKV572I **SVC THRESHOLD EXCEEDED FOR restype resname, FREE SVCS IS number, THRESHOLD IS threshval**

Explanation

AON/SNA tripped the threshold value defined for the specified resource. The specified number of free switched virtual circuit (SVC) is less than the specified threshold value defined for the resource.

Message Variables

restype

The type of resource

resname

The name of the resource

number

The number of available switched virtual circuits (SVCs)

threshval

The threshold value for the number of free switched virtual circuits (SVCs)

System action

AON/SNA notifies the Dynamic Display Facility (DDF).

Operator response

Notify your system programmer.

System programmer response

Adjust the threshold value or define additional circuits as appropriate.

FKV573I	restype resname HAS BEEN DEFINED TO X25MONIT BUT IS UNKNOWN TO VTAM
----------------	--

Explanation

The specified resource is defined in the control file as a X25MONIT entry or through the dynamic add facility, but a VTAM Display command cannot find it.

Message Variables

restype

The type of resource

resname

The name of the resource

System action

AON/SNA marks the resource as unknown.

Operator response

If the definitions for the link are correct, activate the link in VTAM. If the definitions for the link are incorrect, correct the link definition.

System programmer response

If the definition from the control file is incorrect, correct the control file entry.

FKV574I	count FREE SVCS FOR restype resname IS WITHIN THRESHOLD LIMIT OF threshval
----------------	---

Explanation

AON/SNA notified the Dynamic Display Facility (DDF) that any exceeded condition for the specified resource is resolved.

Message Variables

restype

The type of resource

resname

The name of the resource

count

The number of switched virtual circuit (SVC) available

threshval

The threshold value for the number of free switch virtual circuits (SVCs)

FKV651I	LUDRPOOL FOR NCP ncp = count
----------------	-------------------------------------

Explanation

The specified count is the number of available dynamic reconfiguration logical units (LUs) for the specified Network Control Program (NCP).

Message Variables

ncp

The name of the NCP

count

The number of available dynamic reconfiguration LUs

FKV653I	LUDRPOOL FOR NCP ncp = count : THRESHOLD = threshval
----------------	---

Explanation

The specified number of available dynamic reconfiguration logical units (LUs) for the specified Network Control Program (NCP) is less than the specified threshold value set for the LUDRSTAT parameter.

Message Variables

ncp

The name of the NCP

count

The number of available dynamic reconfiguration LUs for the specified NCP

threshval

The threshold value defined for the LUDRSTAT parameter

System action

AON/SNA notifies the Dynamic Display Facility (DDF) about the condition.

Operator response

Notify your system programmer.

System programmer response

Adjust the threshold or define additional LUs as appropriate.

FKV654I RESOURCE *ncp* IS UNKNOWN BY VTAM: CHECK NCP NAME

Explanation

VTAM does not recognize the specified Network Control Program (NCP).

Message Variables***ncp***

The name of the NCP

Operator response

Verify the spelling of the name of the NCP and enter the name again.

FKV655I NO DIRECTORY INFORMATION RELATED TO RESOURCE *cpname* IS AVAILABLE

Explanation

The SNA Automation: APPN Directory AON panel FKVKA300 cannot be displayed. The directory database contains no information for resources served or owned by the *cpname* resource.

APPN and subarea resources are dynamically added to and deleted from the directory database by VTAM. You might notice that sometimes the SNA Automation: APPN Directory panel can be displayed (when resources related to the *cpname* have been added to the database) and sometime it can't be displayed (when resources related to the *cpname* have been removed from the database). This is normal, and is because of VTAM dynamically updating the directory database.

Message Variables***cpname***

The Control Point (CP) name

Operator response

None

FKV659I THIS NCP RELEASE IS NOT SUPPORTED

Explanation

The LUDRPOOL command cannot support downlevel Network Control Program (NCP) software.

Operator response

If you want a higher level of NCP software, notify your system programmer.

System programmer response

Upgrade the NCP software to the current level.

FKV801I *command* COMMAND IS NOT VALID FOR REMOTE RESOURCES

Explanation

You attempted to issue the specified command to a remote resource, but the resource does not support the command.

Message Variables***command***

The command issued

FKV802I *restype resname* ON domain WAS RESOLVED BY SNA HELP DESK

Explanation

The SNA Help Desk resolved the problem with the specified resource.

Message Variables***resname***

The name of the resource

restype

The type of resource

domain

The name of the domain

FKV803I *restype resname* ON domain WAS UNABLE TO BE RESOLVED BY SNA HELP DESK

Explanation

The SNA Help Desk cannot resolve the problem with the specified resource.

Message Variables

resname

The name of the resource

restype

The type of resource

domain

The name of the domain

Operator response

Notify your system programmer about the status of the resource and explain how you attempted to resolve the problem.

System programmer response

Note the status of the resource and try to resolve the problem by using the appropriate VTAM reference guides.

FKV804I ***restype resname ON domain WAS VARY INACT FORCED; THEN ACTIVATED BY SNA HELP DESK***

Explanation

You used the VARY INACT command to deactivate the specified resource. The SNA Help Desk reactivated the resource.

Message Variables

resname

The name of the resource

restype

The type of resource

domain

The name of the domain

FKV805I ***restype resname ON domain IS ALREADY ACTIVE***

Explanation

You attempted to activate the specified resource, but the resource was already active.

Message Variables

resname

The name of the resource

restype

The type of resource

domain

The name of the domain

FKV806I ***restype resname ON domain IS ACTIVE BUT IN CONNECTABLE STATUS***

Explanation

The specified resource is active and ready for connection.

Message Variables

resname

The name of the resource

restype

The type of resource

domain

The name of the domain

Operator response

If you cannot activate the resource, notify your system programmer.

System programmer response

If the resource is an application, issue the OPEN command for it. If the resource is channel-attached, power on the resource.

FKV807I ***restype resname ON domain IS A VALID LU AND SNA HELP DESK HAS STARTED PROCESSING***

Explanation

The SNA Help Desk has started processing the specified resource.

Message Variables

resname

The name of the resource

restype

The type of resource

domain

The name of the domain

FKV808I **UNSUPPORTED VTAM FUNCTION.**

Explanation

You attempted to issue an AON/SNA function that requires a level of VTAM that you are not running on your system.

FKV811I **PORT *port* ADDED TO POOL *pool***

Explanation

You added the specified port to the specified pool in the control file.

Message Variables

port

The SNBU port

pool

The SNBU pool

System action

AON/SNA resumes processing.

FKV812I **PORT *port* DELETED FROM POOL *pool***

Explanation

You deleted the specified port from the specified pool in the control file.

Message Variables

port

The SNBU port

pool

The SNBU pool

System action

AON/SNA resumes processing.

FKV813I **PU *pu* ADDED TO CONTROL FILE**

Explanation

You added the specified PHYSICAL_UNIT to the control file.

Message Variables

pu

The name of the PU (control unit)

System action

AON/SNA resumes processing.

FKV814I **PU *pu* REPLACED IN CONTROL FILE**

Explanation

You replaced the specified PHYSICAL_UNIT in the control file.

Message Variables

pu

The name of the PU (control unit)

System action

AON/SNA resumes processing.

FKV815I **PU *pu* DELETED FROM CONTROL FILE**

Explanation

You deleted the specified PHYSICAL_UNIT from the control file.

Message Variables

pu

The name of the PU (control unit)

System action

AON/SNA resumes processing.

FKV816I **DELETE STATUS REQUEST FOR PU *pu* CANCELED BY OPERATOR**

Explanation

You attempted to delete a status request for the specified PHYSICAL_UNIT but canceled the delete request.

Message Variables

pu

The name of the PU (control unit).

System action

AON/SNA resumes processing.

FKV817I **DELETE STATUS REQUEST FOR PU *pu* COMPLETED**

Explanation

You deleted a status request for the specified PHYSICAL_UNIT.

Message Variables

pu

The name of the PU (control unit)

System action

AON/SNA resumes processing.

FKV818I **DETERMINING LINE NAME FOR PU *pu***

Explanation

The program that is currently active is trying to determine the appropriate line for the Switched Network Backup Automation PHYSICAL_UNIT.

Message Variables

pu

The name of the PU (control unit)

System action

AON/SNA resumes processing.

**FKV819I ERROR DETERMINING LINE NAME
 FOR PU *pu***

Explanation

AON/SNA encountered an error while trying to find the line to which the PHYSICAL_UNIT is attached. You issued a VTAM D NET command, but VTAM does not know where the PU is located.

Message Variables

pu

The name of the PU (control unit)

System action

AON/SNA processing stops.

**FKV820I *pu* CANNOT BE MOVED TO SNBU -
 NUMBER TO DIAL MISSING.
 CHECK CONTROL FILE ENTRY.**

Explanation

You attempted to switch the specified PHYSICAL_UNIT from leased line operation to Switched Network Backup Automation, but the attempt failed because no dial numbers are specified in the control file for the PHYSICAL_UNIT.

Message Variables

pu

The name of the PU (control unit)

System action

AON/SNA resumes processing but the PU remains in leased line operation. It probably remains in inoperative or pending status.

Operator response

Determine the number to dial for the remote modem attached to the PU, and add it to the control file dynamically by using the SETSNBU command. Use the CHGSNBU command to initiate SNBU manually. Later, add the numbers permanently by using the system editor. Notify your system programmer for help.

System programmer response

Update the control file with the necessary telephone numbers.

FKV821I

***pu* HAS BEEN MOVED TO
SWITCHED NETWORK BACKUP**

Explanation

AON/SNA established Switched Network Backup Automation for the specified PHYSICAL_UNIT. The PU is back in service over one or more dialed lines.

Message Variables

pu

The name of the PU (control unit)

System action

AON/SNA resumes processing.

Operator response

Determine why the switch occurred and correct the problem. Use the CHGSNBU command to restore the PU to leased line operation. If the modem is an IBM 786x model 4y modem, it switches back automatically when the leased line is available.

**FKV831I *pu* HAS BEEN RESTORED FROM
 SNBU TO LEASED LINE**

Explanation

You moved the specified PHYSICAL_UNIT from Switched Network Backup Automation to normal leased line operation. You switched the operation when you issued the CHGSNBU command or AON/SNA switched the operation because it received a BNJ017I message.

Message Variables

pu

The remote PU (control unit)

System action

AON/SNA resumes processing.

**FKV834I SNBU ENTRIES NOT DEFINED OR
 NOT ACCESSIBLE**

Explanation

You cannot access the Switched Network Backup Automation control file entries. Either the control file is not loaded, no SNBU entries were found, or the routine wait timed out.

System action

SNBU processing stops.

Operator response

Ensure that the control file is loaded. If the control file is loaded, check that the SNBU entries in it are defined. If the entries are defined, issue the command again. If the problem persists, contact your system programmer.

FKV835I **ERROR MOVING PU *pu* , LINE = *line***

Explanation

You attempted to move the specified PHYSICAL_UNIT to the specified line, but the attempt failed.

Message Variables

pu

The remote PU (control unit)

line

The target line

System action

AON/SNA stops processing the move.

Operator response

Check the NetView log for additional VTAM messages and correct the condition before trying another move.

FKV836I **STATUS FILE DOES NOT CONTAIN ANY SNBU RESOURCES**

Explanation

You attempted to query the status file for Switched Network Backup Automation resources but failed because there are no SNBU resources in the status file.

FKV838I **MOVE OF PU *pu* FROM *line1* TO *line2* STARTING**

Explanation

You issued a VTAM MOVE command for the specified PHYSICAL_UNIT.

Message Variables

pu

The remote PU (control unit)

line1

The source line

line2

The target line

If an error occurs during the move, message FKV382I is displayed.

FKV839I **MOVE OF PU *pu* FROM *line1* TO *line2* COMPLETE**

Explanation

You issued a VTAM MOVE command for the specified PHYSICAL_UNIT.

Message Variables

pu

The remote PU (control unit)

line1

The source line.

line2

The target line.

If an error occurs during the move, you see message FKV382I.

FKV843I **ACTIVATE FOR PORT *port* STARTING**

Explanation

You issued a VTAM VARY NET ACT command for the specified port.

Message Variables

port

The SNBU port

Operator response

If the VTAM VARY NET ACT command failed, browse the NetView log for related messages.

FKV844I **ACTIVATE FOR PORT *port* COMPLETE**

Explanation

You issued a VTAM VARY NET ACT command for the specified port.

Message Variables

port

The SNBU port

Operator response

If the VTAM VARY NET ACT command failed, browse the NetView log for related messages.

FKV845I **ACTIVATE FOR PORT *port* FAILED**

Explanation

You issued a VTAM VARY NET ACT command for the specified port.

Message Variables

port

The SNBU port

Operator response

If the VTAM VARY NET ACT command failed, browse the NetView log for related messages.

FKV846I INACTIVATE FOR PORT *port* STARTING

Explanation

You issued a VTAM VARY NET INACT command for the specified port.

Message Variables**port**

The SNBU port

Operator response

If the VTAM VARY NET INACT command fails, you receive message FVK832I.

FKV847I DISCONNECT OF PU *pu* STARTING

Explanation

AON/SNA started the process for disconnecting the specified PHYSICAL_UNIT. This message is the first one you receive during the process.

Message Variables**pu**

The name of the physical unit that is starting

Operator response

If the VTAM VARY NET ACT command fails, you receive message FVK832I. The next message you receive after FVK833I is either FKV838I, which states that AON/SNA is starting to move the PU, or FKV819I, which states that an error occurred.

FKV848I DISCONNECT OF PU *pu* COMPLETE

Explanation

AON/SNA started the process for disconnecting the specified PHYSICAL_UNIT. This is the last message you receive during the process.

Message Variables**pu**

The SNBU port

If the VTAM VARY NET ACT command fails, you receive message FVK832I. The next message you receive after FVK833I is either FKV838I, which states

that AON/SNA is starting to move the PU, or FKV819I, which states that an error occurred.

FKV849I SNBU OPTION NOT ENABLED

Explanation

You cannot access the SNBU Automation option for AON.

System action

AON/SNA stops the command.

Operator response

Notify your system programmer if SNBU Automation must be enabled permanently. You can also enable SNBU Automation by going to the AON Base Functions panel and selecting Support Functions. This takes you to the AON Support Functions panel. From this panel, select Enable/Disable Automation to enable SNBU.

System programmer response

Update the FKVTABLE table for SNBU to ENABLE=Y.

**FKV850I *pu* CANNOT BE MOVED TO SNBU.
NO PORTS AVAILABLE IN POOL
*pool***

Explanation

You attempted to place a Switched Network Backup Automation PHYSICAL_UNIT into dial backup mode. Your attempt failed because placing the PU in dial backup mode requires a pooled modem and none is available.

Message Variables**pu**

The name of the PU

pool

The name of the modem

**FKV851I *pu* CANNOT BE MOVED TO SNBU.
NO MODEM POOLS DEFINED.**

Explanation

You attempted to place a Switched Network Backup Automation PHYSICAL_UNIT into dial backup mode. Your attempt failed because the PU requires a pooled modem and no modem pools are defined.

Message Variables**pu**

The name of the PU

System programmer response

If necessary, define a modem pool.

FKV858I	<i>pu</i> HAS BEEN RESTORED FROM SNBU TO LEASED LINE, BUT IS NOT ACTIVE
----------------	--

Explanation

You moved the specified physical unit (PU) from switched network backup automation (SNBU) to normal leased line operation. The operation was switched because either you issued the CHGSNBU command, or AON/SNA received a BNJ017I message. AON/SNA attempted to activate the PU, but failed.

Message Variables

pu
The name of the remote PU (control unit)

System action

AON/SNA resumes processing. The PU is in leased line operation, probably in a pending status.

Operator response

Determine why the failure occurred and correct the problem.

FKV914I	NO MORE SUBORDINATE NODES TO DISPLAY
----------------	---

Explanation

You attempted to view a lower resource, but the lowest resource is already displayed.

FKV930I	UNKNOWN ERROR CODE: <i>errorcode</i>
----------------	---

Explanation

You entered an incorrect error code.

Message Variables

errorcode
The error code entered

Operator response

Contact the person who reported the problem to verify that the error code is correct. If the error code is correct, enter it again. If the error code is correct but still not recognizable, notify your system programmer.

System programmer response

Note the error code and notify IBM Software Support.

FKV933E	INVALID X.25 ERROR CODE. MUST BEGIN WITH 'L', 'P', 'Q', OR 'R'
----------------	---

Explanation

You entered an incorrect X.25 error code.

Operator response

Correct the entry.

FKV934I	UNABLE TO FIND ANY TYPE= <i>restype</i> FOR SCOPE= <i>scope</i>, CHKAUTO= <i>ckauto</i>
----------------	--

Explanation

You issued the NETSTAT command, but NETSTAT cannot find any resources to display based on your entry.

Message Variables

restype
The type of resource
scope
The search parameter
ckauto
The check automation flag

FKV935I	SNBU IS NOT SELECTABLE BECAUSE SNBU IS DISABLED
----------------	--

Explanation

You attempted to select a Switched Network Backup Automation command from the SNA Help Desk panel, but SNBU is not enabled.

Operator response

If you want SNBU, select Support Functions from the AON Base Functions panel. From this panel, select Enable/Disable Automation to enable SNBU.

FKV937I	SNBU IS NOT SELECTABLE BECAUSE <i>resname</i> HAS NO PU
----------------	--

Explanation

You attempted to select a Switched Network Backup Automation command from a SNA Help Desk panel, but the specified resource has no physical unit for a higher resource. SNBU works only on physical units.

Message Variables

resname
The name of the resource

FKV940I	INVALID COMMAND SELECTED
----------------	---------------------------------

Explanation

You attempted to issue a command that is not correct for the type of resource.

FKV942I	INVALID SELECTION - MUST BE A REMOTE PU
----------------	--

Explanation

You attempted to act on a PHYSICAL_UNIT, but the PU is not known to VTAM.

FKV943I	INVALID MODEM SELECTION
----------------	--------------------------------

Explanation

You attempted to switch a modem speed but did not select a correct modem type.

FKV944I	INVALID REQUEST - SNBU SELECTION CONFLICT
----------------	--

Explanation

You attempted to both connect and disconnect a Switched Network Backup Automation PHYSICAL_UNIT at the same time.

Operator response

Select connect or disconnect but not both.

FKV945I	INVALID REQUEST - CANNOT MODIFY STATUS ENTRIES
----------------	---

Explanation

You attempted to modify Switched Network Backup Automation status file entries, but you are not allowed to modify SNBU status file entries.

FKV946I	INVALID REQUEST - SPEED SELECTION CONFLICT
----------------	---

Explanation

You attempted to change a modem speed but requested both SWITCH and RESTORE. These two actions cannot be selected together.

Operator response

Select SWITCH or RESTORE but not both.

FKV947I	INVALID REQUEST - MODEM NOT SPECIFIED
----------------	--

Explanation

You attempted to act upon a Switched Network Backup Automation modem but did not specify a modem.

Operator response

Select a local or remote modem or both.

FKV948I	INVALID REQUEST - NO OPERATION SELECTED
----------------	--

Explanation

You attempted to act upon a Switched Network Backup Automation PHYSICAL_UNIT but did not select an action.

Operator response

Select an action.

FKV949I	INVALID REQUEST - PLEASE RETRY
----------------	---------------------------------------

Explanation

You selected an action that is not supported, or you requested to act on an improper panel field.

Operator response

Check your request and enter it again.

FKV950I	RESOURCE NAME REQUIRED
----------------	-------------------------------

Explanation

You attempted a Switched Network Backup Automation action but did not select a resource for the action.

Operator response

Select a PHYSICAL_UNIT and enter the action again.

FKV951I	RESOURCE NAME CHANGED - PRESS ENTER TO USE
----------------	---

Explanation

While using SETSNBU, you changed the name of the PHYSICAL_UNIT to a name that is not defined.

Operator response

Press Enter to define the current PU using the values of the prior PU.

FKV952I	RESOURCE NAME CHANGED - CURRENT VALUES ARE DISPLAYED
----------------	---

Explanation

While using SETSNBU, you changed the name of the PHYSICAL_UNIT to a name that is defined.

Operator response

To change the settings, press Enter.

**FKV953I ONE OR MORE DEFAULTS ARE
 DISPLAYED**

Explanation

You entered a SETSNBU command for a Switched Network Backup Automation PHYSICAL_UNIT. One or more of the default automation settings are being used.

**FKV954I CURRENT DEFAULTS ARE
 DISPLAYED**

Explanation

You entered a SETSNBU command without specifying the name of a PHYSICAL_UNIT. The switched network backup automation default values are displayed. You pressed PF9 on the TCP/IP for OS/390® Session Status Filters panel.

**FKV955I THIS IS A NEW SNBU RESOURCE
 DEFINITION. PRESS ENTER TO
 ADD**

Explanation

You entered a SETSNBU command for an undefined physical unit (PU). The default switched network backup automation settings are displayed.

Change the default settings for this resource and press ENTER to add the definition. Press F3 to cancel the add function.

**FKV959I CANNOT SPEED SWITCH LEVEL 2
 MODEM**

Explanation

You attempted to speedswitch a Link Segment Level 2 modem. This action is not supported.

**FKV960I POOL NAME MUST BE 4
 CHARACTERS OR LESS**

Explanation

You referenced a Switched Network Backup Automation modem pool, but the name of the pool must be four or fewer characters in length.

Operator response

Try again using a correct modem pool name.

FKV961I DEFINE POOL BEFORE USING

Explanation

You attempted to define a line for a Switched Network Backup Automation modem pool, but the pool does not exist.

Operator response

Define the modem pool and try again.

**FKV962I POOL MUST BE DEFINED IF APO
 IS SPECIFIED**

Explanation

You specified APO=YES for a Switched Network Backup Automation PHYSICAL_UNIT definition. This also requires the use of a modem pool.

Operator response

Select a valid modem pool and enter the command again.

FKV963I NO MODEM POOLS DEFINED

Explanation

You attempted to define a line for a Switched Network Backup Automation modem pool, but no SNBU pools are defined.

Operator response

If necessary, notify your system programmer.

System programmer response

Add SNBUPOOL entries to the control file.

**FKV964I *line* NOT DEFINED TO A MODEM
 POOL**

Explanation

The specified line is not defined to a modem pool.

Message Variables

line

The name of the line that is not defined

FKV965I MODEM POOL NAME IS REQUIRED

Explanation

You issued the SETPOOL command for a Switched Network Backup Automation resource, but no pool is defined for the resource.

Operator response

Select a modem pool for the resource.

FKV966I **LINE NAME IS REQUIRED**

Explanation

You issued a SETPOOL command, but did not specify a line name.

Operator response

Enter a valid line name.

FKV970I **PHONE NUMBER IS REQUIRED WITH AUTOBK**

Explanation

You requested the AUTOBK command, but did not provide phone numbers for the dial command.

Operator response

Provide dial phone numbers.

FKV971I **ERROR IN PHONE NUMBER(S)**

Explanation

The phone numbers specified for a Switched Network Backup Automation dial are in error.

Operator response

Correct the phone numbers.

FKV972I **PHONE NUMBER INVALID - LOCAL MODEM**

Explanation

The phone number you specified for the local modem includes incorrect characters. Only the characters 0–8, F, P, -, (, and) are valid.

Operator response

Correct the phone number.

FKV973I **PHONE NUMBER INVALID - REMOTE MODEM**

Explanation

The phone number you specified for the remote modem includes incorrect characters. Only the characters 0–8, F, P, -, (, and) are valid.

Operator response

Correct the phone number.

FKV974I **PHONE NUMBER TOO BIG**

Explanation

You attempted to enter one or more phone numbers that are too long.

Operator response

Correct the phone numbers.

FKV980I **ENTER TYPE OF CHANGE: 1-ADD 2-DELETE**

Explanation

You did not specify an action for the SETPOOL command.

Operator response

Select 1 for Add or 2 for Delete.

FKV989I **VERIFY SELECTION AND PRESS ENTER TO CONTINUE.**

Explanation

You requested that the SNA Help Desk start a Switched Network Backup Automation action.

Operator response

Verify the action and press Enter to start it.

FKV993I **CANNOT CHANGE POOL DEFINITION**

Explanation

You attempted to change a pool definition of type POOL. This definition can be issued only against a physical unit (PU).

Operator response

Press the Tab key to move the cursor to a PU name and press F4. Then, select the Change option and press Enter.

FKV996I **INVALID SELECTION FOR SNBU - VALID RESOURCES ARE PU AND LINE**

Explanation

You attempted to issue a SNBU command against a resource that is not a physical unit (PU) or a LINE.

Operator response

Press the Tab key to move the cursor to a PU or LINE and issue the SNBU command again.

FKV997I UNABLE TO RUN SNBU ON LINE
***resname*. NO PU FOUND FOR THIS**
RESOURCE

Explanation

You attempted to issue a SNBU command on a line but there is no defined physical unit (PU) to which the LINE can send the command.

Message Variables

resname

The name of the resource

FKV998I INVALID SELECTION TO CANCEL.
LU = *resname*

Explanation

You attempted to cancel a logical unit (LU) that is in an unknown or disconnected state or has no sessions.

Message Variables

resname

The name of the resource

Operator response

Press the Tab key to move the cursor to a resource that is known and is not one of the above and enter a character to cancel the session.

Chapter 9. FKX Prefix Messages

FKX messages provide error descriptions and information about AON/TCP.

FKX101I **IDLE TIME THRESHOLD
EXCEEDED FOR CONNECTION
conn_id BETWEEN stack_ipaddr :
port AND client_ipaddr : port.
ACTION=NOTIFY SP=sp_name
POLICY=policy_name.**

Explanation

AON/TCP monitoring detected that a connection for the specified port has exceeded the IDLETIME specification.

Message Variables

conn_id

The connection which exceeded the IDLETIME threshold, in the format of decimal connection ID/ hexadecimal connection ID

stack_ipaddr

The IP address of the stack

client_ipaddr

The IP address of the client

port

The port number of the stack or client

sp_name

The TCP/IP stack name

policy_name

The IPCONN policy governing this action

System action

Based on policy definitions, the AON notification policy is invoked.

Operator response

Notify your system programmer.

System programmer response

Determine why the connection exceeded the idle time criteria and take the appropriate action, if necessary. The IPCONN policy specification for the application might need to be revised.

FKX102I **IDLE TIME THRESHOLD
EXCEEDED FOR CONNECTION
conn_id BETWEEN stack_ipaddr :
port AND client_ipaddr : port.
ACTION=DROP SP=sp_name
POLICY=policy_name.**

Explanation

AON/TCP monitoring detected that a connection for the specified port has exceeded the IDLETIME specification and has broken the connection.

Message Variables

conn_id

The connection which exceeded the IDLETIME threshold, in the format of decimal connection ID/ hexadecimal connection ID

stack_ipaddr

The IP address of the stack

client_ipaddr

The IP address of the client

port

The port number of the stack or client

sp_name

The TCP/IP stack name

policy_name

The IPCONN policy governing this action

System action

Based on policy definitions, the AON notification policy is invoked and the connection is dropped.

Operator response

Notify your system programmer.

System programmer response

Determine why the connection exceeded the idle time criteria and establish the connection again, if necessary. The IPCONN policy specification for the application might need to be revised.

FKX104I **MINIMUM BYTES THRESHOLD
EXCEEDED FOR CONNECTION
conn_id BETWEEN stack_ipaddr :
port AND client_ipaddr : port.
ACTION=NOTIFY SP=sp_name
POLICY=policy_name.**

Explanation

AON/TCP monitoring detected that a connection for the specified port has exceeded the MINBYTES specification.

Message Variables

conn_id

The connection which exceeded the MINBYTES threshold, in the format of decimal connection ID/ hexadecimal connection ID

stack_ipaddr

The IP address of the stack

client_ipaddr

The IP address of the client

port

The port number of the stack or client

sp_name

The TCP/IP stack name

policy_name

The IPCONN policy governing this action

System action

Based on policy definitions, the AON notification policy is invoked.

Operator response

Notify your system programmer.

System programmer response

Determine why the connection exceeded the minimum bytes criteria and take the appropriate action, if necessary. The IPCONN policy specification for the application might need to be revised.

FKX105I

**MINIMUM BYTES THRESHOLD
EXCEEDED FOR CONNECTION
conn_id BETWEEN stack_ipaddr :
port AND client_ipaddr : port.
ACTION=DROP SP=sp_name
POLICY=policy_name.**

Explanation

AON/TCP monitoring detected that a connection for the specified port has exceeded the MINBYTES specification and has broken the connection.

Message Variables**conn_id**

The connection which exceeded the MINBYTES threshold, in the format of decimal connection ID/ hexadecimal connection ID

stack_ipaddr

The IP address of the stack

client_ipaddr

The IP address of the client

port

The port number of the stack or client

sp_name

The TCP/IP stack name

policy_name

The IPCONN policy governing this action

System action

Based on policy definitions, the AON notification policy is invoked and the connection is dropped.

Operator response

Notify your system programmer.

System programmer response

Determine why the connection exceeded the minimum bytes criteria and establish the connection again, if necessary. The IPCONN policy specification for the application might need to be revised.

FKX107I

**MAXIMUM BYTES THRESHOLD
EXCEEDED FOR CONNECTION
conn_id BETWEEN
stack_ipaddr:port AND
client_ipaddr:port.
ACTION=NOTIFY SP=sp_name
POLICY=policy_name.**

Explanation

AON/TCP monitoring detected that a connection for the specified port has exceeded the MAXBYTES specification.

Message Variables**conn_id**

The connection which exceeded the MAXBYTES threshold, in the format of decimal connection ID/ hexadecimal connection ID

stack_ipaddr

The IP address of the stack

client_ipaddr

The IP address of the client

port

The port number of the stack or client

sp_name

The TCP/IP stack name

policy_name

The IPCONN policy governing this action

System action

Based on policy definitions, the AON notification policy is invoked.

Operator response

Notify your system programmer.

System programmer response

Determine why the connection exceeded the maximum bytes criteria and take the appropriate action, if necessary. The IPCONN policy specification for the application might need to be revised.

FKX108I **MAXIMUM BYTES THRESHOLD
EXCEEDED FOR CONNECTION
conn_id BETWEEN
stack_ipaddr:port AND
client_ipaddr:port. ACTION=DROP
SP=sp_name
POLICY=policy_name.**

Explanation

AON/TCP monitoring detected that a connection for the specified port has exceeded the MAXBYTES specification and has broken the connection.

Message Variables

conn_id

The connection which exceeded the MAXBYTES threshold, in the format of decimal connection ID/ hexadecimal connection ID

stack_ipaddr

The IP address of the stack

client_ipaddr

The IP address of the client

port

The port number of the stack or client

sp_name

The TCP/IP stack name

policy_name

The IPCONN policy governing this action

System action

Based on policy definitions, the AON notification policy is invoked and the connection is dropped.

Operator response

Notify your system programmer.

System programmer response

Determine why the connection exceeded the maximum bytes criteria and establish the connection again, if necessary. The IPCONN policy specification for the application might need to be revised.

FKX204I **INVALID IP ADDRESS FOR sp-
ADDRESS ip address**

Explanation

One or more octets of the supplied IP address is non-numeric.

Message Variables

sp

The name of the TN3270 server request

ip address

The supplied IP address from the configuration file

System action

The command ends.

Operator response

If problems persist, notify your system programmer.

System programmer response

Define a valid IP address for this TN3270 server.

FKX300I **IDS EVENT RECEIVED :
DIPADDR=dest_ip_addr,
SIPADDR=src_ip_addr,
CORRELATOR=nnnn.
MEMBER=member_name**

Explanation

This message indicates that an Intrusion Detection Automation Service (IDS) event has been processed by IDS automation services. One or more actions can have occurred. The responses to those actions are listed in DSIPARM member *member_name*. If *member_name* is NONE, there is no data to view.

Message Variables

dest_ip_addr

The destination IP address for the IDS event as determined from the message that started IDS automation services. If the *dest_ip_addr* is UNKNOWN, the destination IP address cannot be determined.

src_ip_addr

The source IP address

nnnn

The IDS correlator associated with the event

member_name

The name of the DSIPARM member containing the command responses. This name is listed in the following CNMSTYLE definition:

```
IDS.Event_Log_File = DSIPARM.member_name
```

If NONE is specified, event logging is not enabled.
If ****ERROR**** is specified, no data can be written to the file. For more information, browse DSILOG for message CNM236.

System action

Processing continues.

Operator response

For additional information on the IDS event, browse DSIPARM member *member_name*.

System programmer response

If necessary, grant the operator access to browse DSIPARM member *member_name*.

FKX301I **IDS EVENT THRESHOLD OF *nnn* EVENTS DURING INTERVAL *interval* REACHED FOR STACK *stackname***

Explanation

A number of IDS events (for which the threshold was matched or exceeded) were detected within the system. The threshold is set in the CNMSTIDS member. This message is sent to the IDS NTFYOPs.

Message Variables

nnn

The threshold for the number of IDS events as defined in the following CNMSTIDS statement:

```
IDS.Auto_Thresh = nnn
```

interval

The time interval used to determine the threshold as defined in the following CNMSTIDS statement:

```
IDS.Auto_Intvl = hh:mm:ss
```

stackname

The name of the stack as defined on a TCP390 policy definition.

System action

IDS events are ignored until enough time has passed to no longer trigger this threshold.

System programmer response

Check your CNMSTYLE definitions and update as needed. See *IBM Z NetView Installation: Getting Started* for information on how to modify the CNMSTYLE member.

FKX303I **IDS EVENT DETECTED CONTAINS UNKNOWN *probeid***

Explanation

An IDS event was sent to IDS automation services. However, IDS automation services did not recognize the *probeid* contained in the event. The event containing the unknown *probeid* is logged immediately following this message.

Message Variables

probeid

The probe ID from the IDS event.

System action

The event is discarded.

System programmer response

Browse CNMSTIDS and ensure that the *probeid* is defined in the IDS.PROBEID.* list.

FKX305I **IDS EVENT DETECTED FOR DESTINATION IP ADDRESS *dest_ip_addr* BUT COULD NOT CORRELATE TO A KNOWN TCP/IP STACK.**

Explanation

An IDS event was sent to IDS automation services. However, IDS automation services was unable to determine the TCP/IP stack associated with the destination IP address.

Message Variables

dest_ip_addr

The destination IP address for the IDS event as determined from the message that started IDS automation services. If the *dest_ip_addr* is UNKNOWN, the destination IP address cannot be determined.

System action

Processing continues. Some data (such as Summary Probe Statistics) might not include this event.

System programmer response

For more information related to the event, browse DSILOG for EZZ* messages.

FKX400I ***tracetype* SCHEDULED FOR SP *sp* BY OPERATOR *operid***

Explanation

NetView has successfully started the trace requested by operator *operid* for the service point *sp*.

Message Variables

tracetype

The type of trace requested. Valid types are CTRACE or PKT.

sp

The NetView service point for which the trace was requested.

operid

The ID of the operator who made the trace start request.

FKX401I	<i>tracetype</i> - DELAY TRACE SCHEDULED FOR SP <i>sp</i> BY <i>operid</i>
----------------	---

Explanation

NetView has successfully scheduled a timer to start the trace requested by operator *operid* for the service point *sp* at a future date and time.

Message Variables

tracetype

The type of trace requested. Valid types are CTRACE or PKT.

sp

The name of the NetView service point to be traced

operid

The ID of the operator who requested the trace

FKX402I	<i>tracetype action</i> START FOR SP <i>sp</i> FAILED - MESSAGE <i>msgid</i> RECEIVED.
----------------	---

Explanation

The attempt to start or stop the trace has failed. The *msgid* is the message received from the MVS TRACE command.

Message Variables

tracetype

The type of trace requested. Valid types are CTRACE or PKT.

action

Either START or STOP

sp

The name of the NetView service point for which the trace was requested

msgid

The error message received from the MVS TRACE command

System action

The command fails.

Operator response

Issue the command again.

System programmer response

If the problem persists, contact IBM Software Support.

FKX403I	<i>tracetype</i> STOPPED FOR SP <i>sp</i> BY OPERATOR <i>operid</i>
----------------	--

Explanation

The request to stop the trace completed successfully.

Message Variables

tracetype

The type of trace requested. Valid types are CTRACE or PKT.

sp

The name of the NetView service point that was traced

operid

The ID of the operator who requested the trace

FKX405I	TARGET DOMAIN/PROC FOR SP <i>sp</i> IS NOT VALID
----------------	---

Explanation

The target NetView domain and TCP/IP procedure name for the service point *sp* is not recognized.

Message Variables

sp

The name of the NetView service point for which the trace was requested

System action

The command fails.

Operator response

Correct the names of the target NetView domain and TCP/IP procedure and issue the command again. If you are using the 3270 interface, contact the system programmer.

System programmer response

Contact IBM Software Support.

FKX406I	<i>tracetype</i> - DELAYED TRACE FAILED FOR SP <i>sp</i> BY <i>operid</i>
----------------	--

Explanation

NetView cannot schedule the timer for a trace to start at a later date and time.

Message Variables

tracetype

The type of trace requested. Valid types are CTRACE or PKT.

sp

The name of the NetView service point for which the trace was requested

operid

The ID of the operator who requested the trace

System action

The command fails.

Operator response

Verify that the date and time were entered correctly. If they are in the correct format, contact the system programmer.

System programmer response

Determine why NetView is unable to schedule the timer. If the problem persists, contact IBM Software Support.

FKX407I	DELAYED <i>tracetype</i> BLOCKED BY SECURITY FOR SP <i>sp</i> BY <i>operid</i>
----------------	---

Explanation

Operator *operid* was attempting to schedule a timer and NetView received a security failure.

Message Variables

tracetype

The type of trace requested. Valid types are CTRACE or PKT.

sp

The name of the NetView service point for which the trace was requested

operid

The ID of the operator who requested the trace

System action

The command fails.

Operator response

Contact the system programmer.

System programmer response

Verify the operator has sufficient NetView security access to set the timer. If the problem persists, contact IBM Software Support.

FKX408I	TRACE INSTANCE STARTED FOR STACK <i>stack</i> BY OPERATOR <i>operid</i> ON TASK <i>task</i> AT SP <i>sp</i>
----------------	--

Explanation

The *operid* operator started a new packet trace instance for the indicated TCP/IP stack, and the trace is running on the indicated NetView autotask. Each trace instance is assigned to a unique NetView task.

Message Variables

operid

The ID of the operator who requested the trace.

sp

The name of the NetView service point for which the trace was requested.

stack

The name of the TCP/IP stack for which the trace was started.

task

The name of the NetView autotask to which the trace instance is assigned.

FKX409I	TRACE INSTANCE ENDED FOR STACK <i>stack</i> BY OPERATOR <i>operid</i> ON TASK <i>task</i> AT SP <i>sp</i>
----------------	--

Explanation

The *operid* operator issued a command to end the packet trace instance for the indicated TCP/IP stack that was running on the indicated NetView autotask. Each trace instance is assigned to a unique NetView task. When a trace instance is ended, all packets and storage that are associated with the trace instance in the NetView program are released.

Message Variables

operid

The ID of the operator who requested the trace.

sp

The name of the NetView service point for which the trace was requested.

stack

The name of the TCP/IP stack for which the trace was started.

task

The name of the NetView autotask to which the trace instance is assigned.

FKX410I	UNABLE TO START <i>tracetype</i> ON SP <i>sp</i> - TRACE ALREADY ACTIVE
----------------	--

Explanation

NetView has determined that a trace type of *tracetype* already exists for this service point.

Message Variables

tracetype

The type of trace requested. Valid types are CTRACE or PKT.

sp

The name of the NetView service point for which the trace was requested

System action

The command fails.

Operator response

If necessary, stop the active trace and issue the command again.

System programmer response

If the problem persists, contact IBM Software Support.

FKX411I	UNABLE TO STOP <i>tracetype</i> ON SP <i>sp</i> - TRACE NOT ACTIVE
----------------	---

Explanation

NetView has determined that no trace type of *tracetype* currently exists for this service point.

Message Variables

tracetype

The type of trace requested. Valid types are CTRACE or PKT.

sp

The name of the NetView service point for which the trace was requested

System action

The command fails.

System programmer response

If the problem persists, contact IBM Software Support.

FKX412I	START <i>tracetype</i> ON SP <i>sp</i> FAILED - TRACE ALREADY SCHEDULED
----------------	--

Explanation

NetView has determined that a delayed trace type of *tracetype* already exists for this service point.

Message Variables

tracetype

The type of trace requested. Valid types are CTRACE or PKT.

sp

The name of the NetView service point for which the trace was requested

System action

The command fails.

Operator response

If necessary, cancel the delayed trace and issue the command again.

System programmer response

If the problem persists, contact IBM Software Support.

FKX413I	THE PROCNAME <i>proc</i> IS NOT DEFINED ON SP <i>sp</i>
----------------	--

Explanation

The procname *proc* requested for this trace does not exist on this service point.

Message Variables

proc

The name of the TCP/IP procedure

sp

The name of the NetView service point for which the trace was requested

System action

The command fails.

Operator response

Contact the system programmer.

System programmer response

Verify that the FT.*sp*.TARGET common global variable for this service point is correctly set. If this is a CNMPOLCY-defined service point, ensure that the TCPNAME parameter of the TCP390 statement is set to the correct name. If the problem persists, contact IBM Software Support.

FKX414I	UNABLE TO START WRITER ON SP <i>sp</i>, PACKET TRACE ALREADY ACTIVE
----------------	--

Explanation

You tried to start a packet trace with a writer, but the packet trace component SYSTCPDA is already active.

Because NetView cannot determine why SYSTCPDA was previously started, the START command is stopped.

Message Variables

sp
The name of the NetView service point for which the trace was requested.

System action

The command fails.

Operator response

Verify the state of the SYSTCPDA component for this service point. If appropriate, stop the SYSTCPDA component and reissue the command. If the problem persists, contact the system programmer.

System programmer response

Contact IBM Software Support.

FKX415I	TRACE INSTANCE SUSPENDED FOR STACK <i>stack</i> BY OPERATOR <i>operid</i> ON TASK <i>task</i> AT SP <i>sp</i>
----------------	--

Explanation

The trace that is active on this task suspended packet data collection because of a PKTTRACE STOP action. The trace is still associated with the NetView task on which it was started. You can restart the trace by issuing a PKTTRACE START OPID=*operid* command for this trace instance. Because filters that were set previously are not retained, restarting a trace requires you to set any filters that you want (such as IPADDR or PORTNUM).

Message Variables

operid
The ID of the operator who requested the trace.

sp
The name of the NetView service point for which the trace was requested.

stack
The name of the TCP/IP stack for which the trace was started.

task
The name of the NetView autotask to which the trace instance is assigned.

FKX416I	TRACE INSTANCE RESUMED FOR STACK <i>stack</i> BY OPERATOR <i>operid</i> ON TASK <i>task</i> AT SP <i>sp</i>
----------------	--

Explanation

The trace that was previously suspended was resumed with a PKTTRACE START OPID command for this trace instance. For details about the suspension of the trace, see the FKX415I message.

Message Variables

operid
The ID of the operator who requested the trace.

sp
The name of the NetView service point for which the trace was requested.

stack
The name of the TCP/IP stack for which the trace was started.

task
The name of the NetView autotask to which the trace instance is assigned.

FKX417I	TRACE INSTANCE action FAILED FOR STACK <i>stack</i> ON SP <i>sp</i>
----------------	--

Explanation

A trace start or stop was requested, but the requested action failed.

Message Variables

action
The requested action (START, STOP, or STOPALL) that failed.

sp
The name of the NetView service point for which the trace was requested.

stack
The name of the TCP/IP stack for which the trace was started.

System action

The command fails.

Operator response

Review the NetView log for additional messages.

System programmer response

Additional messages that describe the failure are logged in the NetView log. If the problem persists, contact IBM Software Support.

FKX418I	TRACE INSTANCE STOPPED ON TASK <i>task</i> FOR STACK <i>stack</i>
----------------	--

Explanation

The trace that is active on the specified task suspended packet data collection because of a PKTS

STOPCOLL action. The trace is still associated with the NetView task on which it was started, and the trace records can be queried by using the PKTS QUERY action. You can resume the trace by issuing a PKTS START OPID=*task* command for this trace instance. Because filters that were set previously are not retained, resuming a trace requires you to set any filters that you want (such as IPADDR or PORTNUM).

Message Variables

stack

The name of the TCP/IP stack for which the trace was started.

task

The name of the NetView autotask to which the trace instance is assigned.

System action

Packet data collection for the active trace on the specified task is suspended.

FKX419I	TRACE INSTANCE ENDED ON TASK <i>task</i> FOR STACK <i>stack</i>
----------------	--

Explanation

The trace that is active or suspended on this task ended packet data collection as a result of a PKTS STOP action. The trace is no longer associated with the NetView task on which it was started, and cannot be resumed or queried.

Message Variables

stack

The name of the TCP/IP stack for which the trace was started.

task

The name of the NetView autotask to which the trace instance is assigned.

System action

Packet data collection for the active or suspended trace on the specified task is ended.

FKX430I	NO VALID CTRACE OPTIONS SPECIFIED - <i>sp</i>
----------------	--

Explanation

Either no CTRACE options were specified or none of the options were valid for this trace request.

Message Variables

sp

The name of the AON service point for which the trace was requested

System action

The command fails.

Operator response

Verify the options being requested are correct. If you are using the 3270 interface, contact the system programmer.

System programmer response

Contact IBM Software Support.

FKX431I	DUPLICATE CTRACE OPTION <i>opt</i> SPECIFIED - <i>sp</i>
----------------	---

Explanation

A duplicate option was specified in the trace start request.

Message Variables

sp

The name of the AON service point for which the trace was requested

opt

The name of the duplicate option.

System action

The command fails.

Operator response

Verify the options being requested are correct. If you are using the 3270 interface, contact the system programmer.

System programmer response

Contact IBM Software Support.

FKX432I	INVALID CTRACE OPTION <i>opt</i> SPECIFIED - <i>sp</i>
----------------	---

Explanation

An incorrect option was specified in the trace start request.

Message Variables

sp

The name of the AON service point for which the trace was requested

opt

The name of the incorrect option

System action

The command fails.

Operator response

Verify the options being requested are correct. If you are using the 3270 interface, contact the system programmer.

System programmer response

Contact IBM Software Support.

FKX433I **NO VALID CTRACE OPTIONS
SPECIFIED - *sp***

Explanation

None of the options specified in the trace start request are valid.

Message Variables

sp

The name of the AON service point for which the trace was requested

System action

The command fails.

Operator response

Verify the options being requested are correct. If you are using the 3270 interface, contact the system programmer.

System programmer response

Contact IBM Software Support.

FKX434I **INVALID IP ADDRESS *ipaddr*
SPECIFIED FOR CTRACE - *sp***

Explanation

An IP address specified for the trace start request is not in the correct format.

Message Variables

sp

The name of the AON service point for which the trace was requested

ipaddr

The IP address

System action

The command fails.

Operator response

Verify the IP address is specified correctly.

System programmer response

If the problem persists, contact IBM Software Support.

FKX435I **INVALID IP PORT *ipport*
SPECIFIED FOR CTRACE - *sp***

Explanation

An incorrect port number was found in the requested trace start.

Message Variables

sp

The name of the AON service point for which the trace was requested

ipport

The IP port number

System action

The command fails.

Operator response

Verify the IP ports being requested are valid.

System programmer response

If the problem persists, contact IBM Software Support.

FKX436I **NO PKT TRACE OPTIONS MATCH
ANY VALID LINK NAMES FOR *sp***

Explanation

NetView checks the service point for its link names and matches them to the link names in the request. No matches were found.

Message Variables

sp

The name of the AON service point for which the trace was requested

System action

The command fails.

Operator response

Verify the options being requested are correct. If you are using the 3270 interface, contact the system programmer.

System programmer response

Contact IBM Software Support.

**FKX437I INVALID option (opt) SPECIFIED
FOR PKT TRACE START - sp**

Explanation

One of the PKT trace options specified has an incorrect value.

Message Variables

sp
The name of the AON service point for which the trace was requested

option
The type of PKT trace option found in error

opt
The value in error

System action

The command fails.

Operator response

Verify the options being requested are valid.

System programmer response

If the problem persists, contact IBM Software Support.

**FKX438I SIZE OF THE TOTAL OPTIONS
REQUESTED IS TOO LARGE - sp**

Explanation

CTRACE has a limit of 1024 characters in the options field. The requested options, including values, IP address, and port, has exceeded this maximum.

Message Variables

sp
The name of the AON service point for which the trace was requested

System action

The command fails.

Operator response

Reduce the options being requested.

**FKX460I tracetype STARTED AND
AUTOSTOP SCHEDULED FOR SP sp
BY operid**

Explanation

The trace and automatic stop requests were successful.

Message Variables

tracetype
The type of trace requested. Valid types are CTRACE or PKT.

sp
The name of the AON service point for which the trace was requested

operid
The ID of the operator who requested the trace

**FKX461I tracetype STARTED BY operid FOR
SP sp BUT AUTOSTOP FAILED**

Explanation

The trace request was successful, but the requested automatic stop was not.

Message Variables

tracetype
The type of trace requested. Valid types are CTRACE or PKT.

sp
The name of the AON service point for which the trace was requested

operid
The ID of the operator who requested the trace

System action

Trace is started, but requires a manual stop.

Operator response

Stop the trace and determine why NetView was unable to schedule the timer.

System programmer response

If the problem persists, contact IBM Software Support.

**FKX462I tracetype STARTED BY operid FOR
SP sp BUT AUTOSTOP BLOCKED
BY SECURITY**

Explanation

The trace request was successful, but the requested automatic stop was not allowed by NetView security.

Message Variables

tracetype
The type of trace requested. Valid types are CTRACE or PKT.

sp

The name of the AON service point for which the trace was requested

operid

The ID of the operator who requested the trace

System action

Trace is started, but requires a manual stop.

Operator response

Contact the system programmer.

System programmer response

Verify the operator has sufficient NetView security access to set the timer. If the problem persists, contact IBM Software Support.

FKX463I OPID REQUIRED FOR STOP OR STOPALL OF TRACE INSTANCE

Explanation:

The operator entered a PKTTRACE command with a STOP or STOPALL action but did not specify the OPID parameter. The OPID parameter is needed for these actions so that the PKTTRACE request can be issued to the correct NetView autotask.

System action:

The command stops.

Operator response:

Re-enter the PKTTRACE command with the OPID parameter to indicate the NetView autotask for the trace that you want.

System programmer response:

No additional action is needed.

FKX464I OPID task DOES NOT HAVE AN ACTIVE TRACE INSTANCE

Explanation

The operator entered a PKTTRACE command with a STOP or STOPALL action, but no trace is active for the specified OPID (NetView autotask).

Message Variables

task

The name of a valid NetView autotask to which an active trace instance is assigned.

System action:

The command stops.

Operator response:

Re-enter the PKTTRACE command with the correct NetView autotask for the trace that you want.

System programmer response:

No additional action is needed.

FKX465I NO OPIDS DEFINED FOR TRACE INSTANCES

Explanation:

The operator entered a PKTTRACE START command without specifying an OPID parameter. Because the PKTTRACE command can assign an autotask from a pool of autotasks to the trace instance, this is a valid request. However, in this case, the PKTTRACE command cannot find a pool of autotasks to use.

System action:

The command stops.

Operator response:

Contact the systems programmer.

System programmer response:

The pool of autotasks is defined on the COMMON.PKTS.INSTANCE.POOL parameter in the CNMSTYLE member. Verify that the common global variable for this is set. If it is and the problem persists, contact IBM Software Support.

FKX466I NO AVAILABLE OPIDS FOR TRACE INSTANCES

Explanation:

The operator entered a PKTTRACE START command without specifying an OPID parameter. Because the PKTTRACE command can assign an autotask from a pool of autotasks to a trace instance, this is a valid request. However, in this case, all the autotasks in the pool already have active traces assigned to them.

System action:

The command stops.

Operator response:

To free autotasks, end any trace instances that are no longer needed. If more autotasks are needed, contact the systems programmer.

System programmer response

The pool of autotasks is defined on the COMMON.PKTS.INSTANCE.POOL parameter in the CNMSTYLE member. Verify that the common global variable for this is properly set. Change the number of tasks as needed for your environment.

Important:

Too many concurrent trace tasks can affect performance.

FKX467I OPID task ALREADY HAS AN ACTIVE TRACE INSTANCE

Explanation

The operator entered a PKTTRACE START command with an OPID parameter for an autotask that already

has an active trace collecting packet data. To restart the trace with different filters, the operator must first issue a PKTTRACE STOP command. The PKTTRACE STOP command sets the trace to the DORMANT status, and a new PKTTRACE START command can be issued.

Message Variables

task

The name of the requested NetView autotask to which an active trace instance is assigned.

System action:

The command stops.

Operator response:

Verify the name of the task that you are trying to start. Re-enter the command with the correct task name.

FKX470I	NO SERVICE POINTS FOUND MATCHED SP <i>sp</i>
----------------	---

Explanation

The name of the service point or stack entered by the operator does not match the SPs defined (TCP390 definition) in the DSIPARM member CNMPOLCY configuration file. The stack may be defined in CNMPOLCY but is missing required information such as a domain name or a TCP name.

Message Variables

sp

The name of the AON service point for which the trace was requested

Operator response

Enter the correct service point name as defined in the CNMPOLCY configuration member and issue the command again. If you are using the IPMAN function, ensure that the policy loaded successfully and that there is a LOCAL stack (DOMAIN=LOCAL) defined.

FKX475I	PACKET TRACE SAVED
----------------	---------------------------

Explanation

The request to save the packet trace has completed successfully.

System action

The command ends.

Operator response

None

System programmer response

None

FKX476I	PACKET TRACE DELETED
----------------	-----------------------------

Explanation

The request to delete the packet trace completed successfully.

System action

The command ends.

Operator response

None

System programmer response

None

FKX477I	NO HEADERS FOUND IN FILE FKXPKTS
----------------	---

Explanation

The LISTTRRC command did not find any packet trace headers in the FKXPKTS database.

System action

The command ends.

Operator response

Contact the system programmer.

System programmer response

Verify that the FKXPKTS database is active and whether there are active traces in the database. If there are active traces in the database, contact IBM Software Support.

FKX478I	AN UNEXPECTED ERROR HAS OCCURRED USING DSIVSMX <i>action</i>
----------------	---

Explanation

DSIVSMX is the NetView facility that is used to write, read, and delete packet traces from the database. In this case, the function has returned an unexpected response.

Message Variables

action

This can be any of the following values:

CLOSE

DELETE
OPEN
READ
WRITE

System action

The command ends.

Operator response

Contact the system programmer.

System programmer response

Check the log for any VSAM error messages. If the problem persists, contact IBM Software Support.

FKX479I	UNABLE TO <i>action</i> PACKET TRACE, AUTOTASK <i>taskname</i> IS NOT ACTIVE
----------------	---

Explanation

The autotask is not active.

Message Variables

action

The action, Write or Delete, that you were attempting to complete.

taskname

The name of the NetView autotask defined for FKXPKTS in CNMSTYLE.

System action

The command ends.

Operator response

Activate the autotask. If the problem persists, contact the system programmer.

System programmer response

Check the autotask; if it is active and available, contact IBM Software Support.

FKX480I	TIMEOUT IN COLLECTING TRACE INFO AT DOMAIN <i>dom</i>
----------------	--

Explanation

A command to collect trace information at the NetView domain *dom* was issued, but the global variable WAITTIME initialized at AON startup has expired.

Message Variables

dom

The name of the NetView domain

Operator response

The system might be busy. Try to reissue the command at a later time.

System programmer response

If necessary, increase the WAITTIME.

FKX490I	NO ESTABLISHED COMMUNICATION WITH REMOTE DOMAIN <i>dom</i>
----------------	---

Explanation

Communication with the remote domain cannot be established. There is no active session with the remote domain.

Message Variables

dom

The name of the remote domain as defined in the DSIPARM member FKXCFG01 configuration file (using TCP390 definitions).

Operator response

Activate communication with the remote system.

FKX500I	<i>restype</i> <i>resname</i> ON <i>servicept</i> FAILURE DETECTED BY PASSIVE MONITORING - RECOVERY INITIATED
----------------	--

Explanation

AON/TCP detected a failure on the specified NetView for AIX® resource.

Message Variables

restype

The type of resource

resname

The name of the resource

servicept

The name of the NetView for AIX service point

System action

AON/TCP starts recovery monitoring on the MONIT intervals defined in the control file and updates the Dynamic Display Facility (DDF). Automated recovery does not occur.

Operator response

If problems persist, notify your system programmer.

System programmer response

Resolve the failure by going to the service point workstation and correcting the problem.

FKX501I *restype resname ON servicept HAS
RECOVERED - RECOVERY
TERMINATED*

Explanation

AON/TCP recovered the specified resource.

Message Variables

restype

The type of resource

resname

The name of the resource

servicept

The name of the NetView for AIX service point

System action

Recovery monitoring stops. Active monitoring starts, if the supporting definitions exist in the control file. AON/TCP removes the resource from the display in the Dynamic Display Facility (DDF).

FKX502I *CPU LOAD THRESHOLD OF
threshold EXCEEDED FOR restype
resname ON servicept - CPU LOAD
IS currentcpu*

Explanation

AON/TCP received a CPU load alert from the NetView for AIX service point. The CPU load exceeded the percentage for the load defined in the parameter for THRESHOLDS CPU in the control file.

Message Variables

restype

The type of resource

resname

The name of the resource

servicept

The name of the NetView for AIX service point

currentcpu

The current CPU load

threshold

The threshold of the CPU load

System action

AON/TCP updates the Dynamic Display Facility (DDF).

Operator response

If the CPU load is unacceptable, notify your system programmer.

System programmer response

If the CPU is overloaded, resolve the problem.

FKX503I *DISK UTILIZATION THRESHOLD
OF threshold EXCEEDED FOR
restype resname ON servicept -
DISK UTILIZATION IS diskutil*

Explanation

AON/TCP received a disk utilization from the NetView for AIX service point. Disk utilization exceeded the percentage for disk utilization defined in the THRESHOLDS DISK parameter in the control file.

Message Variables

restype

The type of resource

resname

The name of the resource

servicept

The name of the NetView for AIX service point

diskutil

The current disk utilization

threshold

The threshold for disk utilization

System action

AON/TCP updates the Dynamic Display Facility (DDF).

Operator response

If disk utilization is unacceptable, notify your system programmer.

System programmer response

If disk utilization is unacceptable, resolve why the disk on the host is full and provide more disk space.

FKX504I *NETVIEW FOR AIX SERVICE
POINT servicept RESPONSE FOR
COMMAND*

Explanation

You issued a run command to the NetView for AIX service point.

Message Variables

servicept

The name of the service point

System action

AON/TCP continues processing.

FKX505I **LINK *linkid* IN ROUTER
router_name ON *servicept* IS NOT
ACCESSIBLE**

Explanation

A link on a router cannot be pinged. The failure was detected by active or passive monitoring.

Message Variables

linkid

The name of the failed link

router_name

The name of the router

servicept

The name of the NetView for AIX service point

System action

Failure processing, if appropriate, was initiated. DDF and operators are notified.

Operator response

Resolve link failure on router.

System programmer response

Resolve link failure on router.

FKX506I **ROUTER *router_name* ON *servicept*
HAS INACCESSIBLE LINKS
(*failed_link_list*)**

Explanation

A router has 1 or more interfaces that cannot be pinged through the NetView for AIX service point. The router IP address can be pinged so the router is still accessible through the TCP/IP network. A router can be a hub, router, or gateway.

Message Variables

router_name

The name of the router

servicept

The name of the NetView for AIX service point

failed_link_list

All the links that have failed on the router

System action

Failure processing for Link is initiated. No action is taken for the router, except that the router is in

LINKDOWN status. DDF and logs are updated. Operators receive FKX505I.

Operator response

Resolve link failure on router.

System programmer response

Resolve link failure on router.

FKX507I **AUTHORIZATION FAILURE
DETECTED ON *restype resname* BY
*servicept***

Explanation

AON/TCP detected an authorization failure on the specified resource. You see this message when a value of ALL is defined in the THRESHOLDS AUTH parameter.

Message Variables

restype

The type of resource

resname

The name of the resource

servicept

The name of the NetView for AIX service point

System action

AON/TCP does not start recovery.

Operator response

Notify your system programmer.

System programmer response

Follow procedures for following up on an authorization failure.

FKX508I **AUTHORIZATION FAILURE
THRESHOLD EXCEEDED FOR
restype resname ON *servicept* -
failures FAILURES WITHIN *interval***

Explanation

The specified resource exceeded its threshold for authorization failures. The specified number of failures occurred within the specified interval. The number of allowed authorization failures for the resource is defined in the THRESHOLDS AUTH parameter.

Message Variables

restype

The type of resource

resname

The name of the resource

servicept

The name of the NetView for AIX service point

failures

The number of authorization failures

interval

The time period

System action

AON/TCP does not start recovery.

Operator response

Notify your system programmer.

System programmer response

Follow procedures for following up on an authorization failure.

FKX509I

**restype resname ON servicept
FAILURE DETECTED BY ACTIVE
MONITORING - RECOVERY
INITIATED**

Explanation

AON/TCP active monitoring detected a failure on the specified resource.

Message Variables**restype**

The type of resource

resname

The name of the resource

servicept

The name of the NetView for AIX service point

System action

Recovery monitoring starts on the MONIT control file intervals. AON/TCP does not start automated recovery, but updates the Dynamic Display Facility (DDF).

Operator response

Notify your system programmer.

System programmer response

If necessary, intervene manually to solve the problem. Follow local procedures for recovering a NetView for AIX service point or TCP/IP host.

FKX510I

**IPPORT MONITORING CANNOT BE
STOPPED**

Explanation

You attempted to stop monitoring a port, but port monitoring cannot be stopped individually.

System action

The command fails.

Operator response

Notify your system programmer.

System programmer response

All ports under a defined stack can be stopped at the same time by purging their active and recovery timers.

FKX512I

**restype resname ON servicept
ACCESSIBLE BY IP ADDRESS
ipaddr BUT NOT BY HOST NAME
hostname, THE NAME SERVER
MAY BE DOWN**

Explanation

Active monitoring detected a failure with the specified resource. The resource is accessible at the specified IP address but not by the specified host name. This condition often occurs when the name server in the domain fails. This message appears to operators only if NTFY=ALL is defined in the LSTHRESH NAMESERVER statement in the control file.

Message Variables**restype**

The type of resource

resname

The name of the resource

servicept

The name of the NetView for AIX service point

ipaddr

The IP address of the resource

hostname

The host name of the resource

System action

AON/TCP does not process the failure because the resource is still accessible on the network by its IP address.

Operator response

Check the status of the name servers and notify your system programmer.

System programmer response

Check the status of the name servers and resolve the problem with the name servers.

FKX513I **NAME SERVER ACCESS
THRESHOLD EXCEEDED (*errors*
ERRORS IN *interval*), A NAME
SERVER MAY BE DOWN**

Explanation

You exceeded the threshold for failed attempts at accessing a name server. The specified number of failures occurred over the specified interval. You cannot access the resource by its IP address or host name. The threshold counter for name server failures is defined in the LSTHRESH NAMESERVER statement in the control file.

Message Variables

errors

The threshold of allowable access errors for the name server

interval

The time period during which the errors registered

Operator response

Check the status of the name servers and notify your system programmer.

System programmer response

Check the status of the name servers and resolve the problem with the name servers.

FKX515I ***restype* *resname* ON *servicept*
PING ROUND TRIP TIME OF
currenttrtt MS EXCEEDS
PERFORMANCE THRESHOLD OF
definedtrtt MS**

Explanation

During an active monitoring cycle, AON/TCP uses ping statistics to monitor the availability of a resource. The time it took for a ping to complete a round trip from the specified resource exceeded the time defined for the resource in the PINGRTT parameter of the ACTMON statement in the control file.

Message Variables

restype

The type of resource

resname

The name of the resource

servicept

The name of the NetView for AIX service point

definedtrtt

The defined round trip time for a ping

currenttrtt

The current round trip time for a ping

System action

AON/TCP continues active monitoring and does not process failures. AON/TCP updates the Dynamic Display Facility (DDF).

Operator response

If you cannot resolve the problem with slow traffic, notify your system programmer.

System programmer response

Follow local procedures for resolving problems with slow traffic.

FKX516I ***restype* *resname* ON *servicept*
currentlost% LOST PACKETS
EXCEEDS PERFORMANCE
THRESHOLD OF *definedlost*%**

Explanation

During an active monitoring cycle, AON/TCP uses ping statistics to monitor the availability of a resource. The percentage of packets lost during a ping from the specified resource exceeded the percentage of lost packets for the resource defined in the PKTLOSS parameter in the ACTMON statement in the control file.

Message Variables

restype

The type of resource

resname

The name of the resource

servicept

The name of the NetView for AIX service point

definedlost

The percentage of allowable lost packets for a ping, which is defined in the control file

currentlost

The current percentage of lost packets for a ping

System action		System programmer response	
AON/TCP continues active monitoring and does not start failure processing. AON/TCP updates the Dynamic Display Facility (DDF).		If you are not using the AONTCP component for automation, remove the AONTCP tower from the CNMSTYLE member in the DSIPARM data set.	
Operator response		FKX530I NO COMMANDS FOUND FOR THIS RESOURCE TYPE	
Follow local procedures for resolving problems with slow traffic. If you cannot resolve the problems with slow traffic, notify your system programmer.		Explanation	
System programmer response		There are no commands defined for the selected resource or resource type.	
Follow local procedures for resolving problems with slow traffic.		System action	
FKX518I Cannot start IPMGT because the POLICY is not loaded		The FKXK2740 panel is not displayed.	
Explanation		FKX611I SESSION <i>info</i> HAS BEEN DROPPED	
IPMGT initialization cannot continue because the CNMPOLCY file is not loaded.		Explanation	
System action		The DROP command was issued for this resource and a positive response was returned.	
IPMGT initialization ends.		Message Variables	
Operator response		<i>info</i>	
Notify your system programmer.		For TCP/IP connections, <i>info</i> contains the session number that was dropped.	
System programmer response		For DVIPA connections, <i>info</i> contains an address containing four segments, separated by periods, defined as follows:	
Determine why the policy file is not loaded. If the problem persists, contact IBM Software Support.		DVIPAAddress.DVIPAPORT. ClientAddress.ClientPort	
FKX519I AONTCP TOWER ACTIVE. IPMGT INITIALIZATION TERMINATED		FKX612I SESSION <i>info</i> COULD NOT BE DROPPED – COULD NOT BE FOUND	
Explanation		Explanation	
While attempting to initialize the IPMGT function, the AONTCP tower was found to be active in the CNMSTYLE member. If you are already using the AON component, you do not need to activate the IPMGT tower.		The DROP command was issued for this resource, and the session id was not found by NETSTAT.	
System action		Message Variables	
IPMGT initialization ends.		<i>info</i>	
Operator response		For TCP/IP connections, <i>info</i> contains the session number that was dropped.	
Notify your system programmer.		For DVIPA connections, <i>info</i> contains an address containing four segments, separated by periods, defined as follows:	
		DVIPAAddress.DVIPAPORT. ClientAddress.ClientPort	

Operator response

Verify that the session no longer exists. If the session is shown as active, but does not drop, notify your system programmer.

System programmer response

Verify that AON is properly communicating with the TCP/IP stack. If the problem persists, contact IBM Software Support.

FKX613I SESSION *info* COULD NOT BE DROPPED – ERROR UNKNOWN

Explanation

The DROP command was issued for this resource and an undetermined problem occurred.

Message Variables

info

For TCP/IP connections, *info* contains the session number that was dropped.

For DVIPA connections, *info* contains an address containing four segments, separated by periods, defined as follows:

```
DVIPAAddress.DVIPAPORT.  
ClientAddress.ClientPort
```

Operator response

Notify your system programmer.

System programmer response

Verify that AON is properly communicating with the TCP/IP stack. Check for any TCP/IP error messages that might have been issued. If the problem persists, contact IBM Software Support.

FKX614I SESSION *info* COULD NOT BE DROPPED – NOT AUTHORIZED

Explanation

The DROP command was issued for this resource and the TSO server user ID is not defined in the Obey file for the TCP/IP stack or your SAF product file.

Message Variables

info

For TCP/IP connections, *info* contains the session number that was dropped.

For DVIPA connections, *info* contains an address containing four segments, separated by periods, defined as follows:

```
DVIPAAddress.DVIPAPORT.  
ClientAddress.ClientPort
```

Operator response

Notify your system programmer.

System programmer response

Check that the NetView system user is defined in the Obey file for the TCP/IP stack which the DROP command is issued, or your SAF product file. See the *IBM Z NetView Command Reference Volume 1 (A-N)* or the NetView online help for details on identifying NetView to TCP/IP. If the problem persists, contact IBM Software Support.

FKX615I CONNECTION DOES NOT EXIST

Explanation

You issued a command, but the connection does not exist, was recently dropped, or ended.

System action

The command fails.

FKX621I NO SERVER DEFINED FOR SERVICE POINT *spnode sp*

Explanation

You issued a command to a service point, but no server was found in the AON configuration file.

Message Variables

spnode

The NetView domain of the service point.

sp

The service point name for which the command is being attempted.

The command ends.

Operator response

Notify your system programmer.

System programmer response

Check the AON configuration file TCP390 entry for the service point. Add the SERVER or UNIXSERV parameter if it is not specified. If either parameter is specified, contact IBM Software Support.

FKX622I NO ACTIVE TSO SERVERS FOR SERVICE POINT *sp*

Explanation

You tried to issue a TSO command to a service point :mv.sp:emv. and no TSO Server jobs were found active.

Message Variables

sp
The service point name for which the command is being attempted. This is an optional value.

System action

The command ends.

Operator response

Notify your system programmer.

System programmer response

Reinitialize the TSO Server jobs. If the problem persists, contact IBM Software Support.

**FKX623I NO DATACOL PROCEDURE
DEFINED FOR SERVICE POINT *sp***

Explanation

No DATACOL parameter was found on the TCP390 statement for this service point.

Message Variables

sp
The service point name for which the command is being attempted.

System action

The command ends.

Operator response

Notify your system programmer.

System programmer response

Check the AON Configuration file TCP390 entry for the service point. Add the appropriate DATACOL parameter if it is not coded. If it is, contact IBM Software Support.

**FKX624I NO DROP PROCEDURE DEFINED
FOR SERVICE POINT *sp***

Explanation

No DROP parameter was found on the TCP390 statement for this service point.

Message Variables

sp
The service point name for which the command is being attempted.

System action

The command ends.

Operator response

Notify your system programmer.

System programmer response

Check the AON Configuration file TCP390 entry for the service point. Add the appropriate DROP parameter if it is not coded. If it is, contact IBM Software Support.

**FKX625I DROP PROCEDURE *module_name*
COULD NOT BE FOUND FOR *sp***

Explanation

A DROP procedure was defined on the IPTH3270 definition in the configuration file for this service point, but it was not found in DSICLD.

Message Variables

module_name
The name of the procedure that was defined in the configuration file.

sp
The service point name for which the command is being attempted.

System action

The command ends.

Operator response

Notify your system programmer.

System programmer response

Check the AON Configuration file TCP390 entry for the service point. Correct the DROP parameter to use the appropriate procedure name. If it is, contact IBM Software Support.

**FKX651I THE DATA REQUEST *request* IS
NOT SUPPORTED**

Explanation

A data collection request was issued and the value of the Request field is not supported by the SNMPView data collector routine.

Message Variables

request

The value of the data collection request submitted.

Operator response

Notify your system programmer.

System programmer response

Correct the name of the data collection request — ensure that the name is in all upper case. If the problem persists, contact IBM Software Support.

FKX670I SET REQUEST SUCCESSFUL

Explanation

An SNMPView SNMP SET request was issued and a positive result was returned.

System action

The command ends.

FKX671I SET REQUEST FAILED

Explanation

An SNMPView SNMP SET request was issued and detected an authorization failure.

System action

The command ends.

Operator response

Notify your system programmer.

System programmer response

Check the operator's authorization to issue an SNMP SET for this resource. If the problem persists, contact IBM Software Support.

FKX680I NO TCP CONNECTIONS FOUND FOR INTERFACE *ifno* ON RESOURCE *resname*

Explanation

A request was issued to display the list of connections for the specified interface on a resource, and SNMPView has previously determined that there are no sessions for this interface.

Message Variables***ifno***

The interface number requested

resname

The name of the TCP/IP resource requested

System action

The command ends.

System programmer response

If sessions exist, and reissuing the command gives the same results, contact IBM Software Support.

FKX681I NO IP ADDRESS IS FOUND FOR INTERFACE *ifno* ON RESOURCE *resname*

Explanation

A request was issued to display the list of connections for the specified interface on a resource, but there is no IP address associated with the selected interface. SNMP needs an IP address to collect connection data.

Message Variables***ifno***

The interface number requested

resname

The name of the TCP/IP resource requested

System action

The command ends.

FKX682I FUNCTION NOT SUPPORTED FOR z/OS *release*

Explanation

A request was issued that is not supported by your release of z/OS.

Message Variables***release***

The release of z/OS you are currently using.

System action

The command ends.

FKX701I THE CURRENT STATUS OF *restype* *resname* IS *resstat*

Explanation

Active Monitoring has found the status of the named resource to be either DEGRADED, THRESH, or NOSNMP.

Message Variables***restype***

The resource type of the resource.

resname

The ALIAS name of the resource.

resstat

The status of the resource, which is either DEGRADED, THRESH, or NOSNMP:

DEGRADED

One or more interfaces on this resource is inactive.

THRESH

One or more of the MIBs requested to be tested in the control file has exceeded the defined threshold.

NOSNMP

The resource was defined to use SNMP to collect status but SNMP did not respond to the request. However, active monitoring was able to successfully PING the resource.

System action

Monitoring continues.

Operator response

Use TCP/390 Resource Manager to determine if there are inactive interfaces.

System programmer response

For NOSNMP, determine if SNMP is supported for the resource and is active. If SNMP is not supported, change the active monitoring definitions to an appropriate method. If the status reported is incorrect, contact IBM Software Support.

FKX702I	THE CURRENT STATUS OF <i>restype</i> <i>resname</i> IS NORMAL
----------------	--

Explanation

Active Monitoring has found that the status of the named resource has changed from either DEGRADED, THRESH, or NOSNMP to NORMAL.

Message Variables

restype

The resource type of the resource

resname

The ALIAS name of the resource

System action

Monitoring continues.

FKX752I	RUNCMD TO <i>restype resname</i> CANCELED BY OPERATOR <i>operator</i>-COMMAND <i>command</i> FAILED
----------------	--

Explanation

While a ping or service command was running on the specified service point, the specified operator canceled the run command (RUNCMD) sent to the service point.

Message Variables

restype

The type of the resource

resname

The name of the resource on the NetView for AIX service point

operator

The name of the operator who canceled the command

command

The name of the command canceled by the operator

System action

The command on the RUNCMD stops.

FKX753I	NO COMPONENT SERVICE POINTS DEFINED - AON TCPIP COMPONENT CANNOT FUNCTION
----------------	--

Explanation

You tried to process an alert or initialize AON/TCP, but the specified TCP/IP component is not defined in the control file.

Message Variables

component

The name of the TCP/IP component

Operator response

Notify your system programmer.

System programmer response

Define the NetView for AIX service points in the control file.

FKX755I	<i>restype resname</i> NOT ACTIVE - RECEIVED MESSAGE <i>number</i> SENSE CODE <i>sensecode</i>
----------------	---

Explanation

You sent a run command (RUNCMD) to the specified resource on the specified service point, but the resource is not active.

Message Variables

restype

The type of the resource

resname

The name of the resource on the NetView for AIX service point

number

The message ID from the RUNCMD sent to the service point

sensecode

The sense code information from the RUNCMD

System action

AON/TCP stops processing the function.

Operator response

Note the message ID and sense code information, and run first level problem determination on the service point. If problems persist, notify your system programmer.

System programmer response

Note the error information, then go to the workstation and determine why the service point is failing to process RUNCMDs.

**FKX901I INCORRECT VALUE DETECTED.
PRESS PF1 FOR HELP**

Explanation

One or more values specified for an SNMPView is not correct.

System action

The command ends.

Operator response

Use the help information to determine the valid values for setting the failing requests.

System programmer response

If the value to be set is within the accepted range, contact IBM Software Support.

**FKX902I REQUIRED PARAMETER
parmname IS INVALID**

Explanation

Explanation: One of these required parameters does not contain valid data:

- Destination IP Address
- Destination Port

- Source IP Address
- Source Port
-
-

The Source IP Address (LADDR) and Destination IP Address (RADDR) must be a single IP address and cannot be an asterisk (*). The Source Port (LPORT) and Destination Port (RPORT) must contain a single port number and cannot be an asterisk (*). The TCP/IP Stack name (TCPNAME) must be specified and cannot be an asterisk (*).

Message Variables**parmname**

The name of the parameter which was not valid

System action

The command ends.

Operator response

Retry the command with the correct values.

System programmer response

If the values specified are correct and the error persists, contact IBM Software Support.

**FKX903I UNABLE TO SUMMARIZE THE
SESSION REPORT**

Explanation

The FKXETRS3 command did not find valid data in the IP Trace Session Report.

System action

The command ends.

System programmer response

Contact IBM Software Support.

**FKX904I PROTOCOL *protocol* IS NOT
SUPPORTED FOR ANALYSIS**

Explanation

The protocol passed to packet trace analysis is not supported by this function.

Message Variables**protocol**

The protocol type that is requested. Valid protocols options are: (ALL), TCP, UDP, and ICMP.

System action

The command ends.

Operator response

Retry the command with the correct values.

System programmer response

If a value was specified and the error persists, contact IBM Software Support.

**FKX905I MULTIPLE PROTOCOL SELECTION
ONLY SUPPORTED FOR ANALYSIS**

Explanation

You selected multiple protocols from the list and requested View Packets or Extended Options. These functions do not support a multiple selection for protocol. Selecting multiple protocols (any combination of TCP, UDP, and ICMP) is only supported by the Analysis function.

System action

The command ends.

Operator response

Retry the command with the correct values.

System programmer response

Contact IBM Software Support.

FKX906I CONNECTION NOT ACTIVE

Explanation

You selected a connection to drop, but no connection ID was found for that connection. The connection information, IP addresses, and ports are in error, or the connection has already terminated.

System action

The command ends.

Operator response

If the connection information is incorrect, retry the command with the correct parameters.

System programmer response

If the connection parameters are correct and you are sure that the connection is still active, contact IBM Software Support.

**FKX907I UNABLE TO DETERMINE THE
CONNECTION ID FOR THIS
SESSION**

Explanation

A problem occurred while trying to get the connection ID for the selected session.

System action

The command ends.

Operator response

Contact your system programmer.

System programmer response

Use the TCPCONN or IPSTAT command to check the status of the requested connection.

**FKX910I SERVICE POINT NAME SET.
PRESS ENTER TO CONTINUE**

Explanation

The name of the service point is set to issue pings.

Operator response

Make other changes and press Enter to continue.

**FKX911I UNABLE TO FIND SERVICE POINT
FOR NODE *resname***

Explanation

You entered the name of the specified resource on the Ping a Service Point panel without specifying the name of a service point. AON/TCP searched each service point for the resource, but the search failed. The resource might not be accessible.

Message Variables***resname***

The name of the NetView for AIX resource

Operator response

Verify that the spelling of the resource name in the control file is correct. If the resource name is spelled incorrectly, select another service point by typing ? in the entry field for service point and pressing Enter.

System programmer response

Verify the resource entry in the AON/TCP control file. If the resource entry is not in the control file, add it. Otherwise, initialize AON/TCP again by typing AON 1.8.3.

**FKX912I ERROR ISSUING RUNCMD TO
SERVICE POINT *servicept*
RECEIVED *rc***

Explanation

You sent a run command (RUNCMD) to the specified service point but the command failed.

Message Variables***servicept***

The name of the NetView for AIX service point

rc

The return code from the RUNCMD

Operator response

Note the return code from the RUNCMD. If RC=1, the service point is not active and the PING command received no response. If RC=5, the service point is active but is not responding. Notify your system programmer to correct the problem with the service point.

System programmer response

Go to the service point and correct the problem.

FKX913I ENTER A REMOTE COMMAND

Explanation

You must enter a command to send to the NetView for AIX service point.

Operator response

Type a command and press Enter.

**FKX914I ERROR ISSUING COMMAND TO
SERVICE POINT *sp:operid*
RECEIVED *error***

Explanation

A TCP/IP command was issued to a service point and a non-zero return code was received from the command. This usually indicates a loss of communications to the MVS TCP/IP service point.

Message Variables***sp:operid***

The service point to which the command was issued and the automation operator that issued the command

error

The error return code received from the command

Operator response

Notify your system programmer.

System programmer response

Check the connection between NetView and the TCP/IP Service point. To check the error codes, issue the HELP PIPE TSO or HELP PIPE UNIX command. The command issued depends upon whether you are using a TSO or UNIX service point. If the problem persists, contact IBM Software Support.

**FKX915I INCORRECT MIB VARIABLE
FORMAT. ONE VARIABLE PER
LINE**

Explanation

More than one entry was coded on a MIB variable line in the panel. Only a single entry per-line is valid.

System action

The incorrect value is displayed in red.

Operator response

Correct the entry and issue the command again.

FKX916I NO VALUE SPECIFIED.

Explanation

Using the SET command option, a MIB variable name was entered, but no corresponding value was entered.

System action

The incorrect line is displayed in red.

Operator response

Correct the entry and issue the command again.

FKX917I NO VARIABLE NAME SPECIFIED

Explanation

Using the SET command option, a value was entered, but no corresponding MIB variable name was entered.

System action

The incorrect line is displayed in red.

Operator response

Correct the entry and issue the command again.

**FKX918I NO PACKETS MEET THE
REQUESTED CRITERIA**

Explanation

The requested filters for the PKTS QUERY command did not return packet data. The trace data might have been purged or overwritten by newer packets in the NetView PKTS dataspace.

Operator response

Validate that you requested the correct interface and that the filters that you specified are correct. Refresh the data and retry the operation.

FKX919I **UNABLE TO ACCESS PACKETS FROM REMOTE DOMAIN -**
***domain_name* EZLERGWY RC =**
return_code

Explanation

The FKXETRS2 command was unable to get the requested packet data from a remote host.

Message Variables

domain_name

The NetView domain to which the FKXETRS2 command was sent.

return_code

The return code from the EZLERGWY call to the remote host. The following return codes can be returned:

- 1** SIGNAL ON FAILURE
- 5** SIGNAL ON HALT
- 00** EZLERGWY completed successfully
- 04** Parameter missing or not valid
- 05** Wait time expired
- 07** NOVALUE variable found
- 08** REXX syntax failure
- 12** Command or Pipe command failure

Operator response

Correct the cause for the EZLERGWY return code and submit the request again.

System programmer response

If the problem persists, contact IBM Software Support.

FKX931I **NO INDEX MIB DEFINED FOR**
TABLE GROUP group

Explanation

A TABLE type group was requested, but no index variable is defined for this group in FKXSNMP.

Message Variables

group

The group name defined in the FKXSNMP file

System action

The command ends.

Operator response

Correct the entry in the FKXSNMP file and issue the command again.

System programmer response

If the problem persists, contact IBM Software Support.

FKX932I **THE REQUESTED GROUP *group***
****DOES NOT EXIST IN THE****
****FKXSNMP FILE****

Explanation

A group name was requested, but there is no entry for this group in the FKXSNMP file.

Message Variables

group

The group name defined in the FKXSNMP file

System action

The command ends.

Operator response

Add an entry in the FKXSNMP file for this group and issue the command again.

System programmer response

If the problem persists, contact IBM Software Support.

FKX933I **INVALID GROUP DEFINITION**
***group* IN FKXSNMP FILE**

Explanation

Group is incorrectly defined in FKXSNMP. Possible errors include a group name containing more than 15 characters, a group name containing more than one word, or a lower case keyword GROUP.

Message Variables

group

The group name defined in FKXSNMP file

Operator response

Correct the entry in the FKXSNMP file and issue the command again.

System programmer response

If the problem persists, contact IBM Software Support.

FKX934I **DUPLICATED GROUP NAME *group* IN FKXSNMP FILE**

Explanation

Group name cannot be duplicated.

Message Variables

group

The group name defined in the FKXSNMP file

Operator response

Correct the entry in the FKXSNMP file and issue the command again.

System programmer response

If the problem persists, contact IBM Software Support.

FKX940I **INCOMPATIBLE OPTION *opt* SPECIFIED FOR THIS RESOURCE.**

Explanation

You issued a TCP/IP command that is not supported by the target service point.

Message Variables

opt

The AON automation option or component that communicates with the target service point.

Operator response

Specify a different resource or service point and enter the command again.

FKX941I **INCORRECT *field* SPECIFIED FOR RESOURCE *resname* SNMPMIB *mibnum*.**

Explanation

An error was found in the "*field*" in the MIBVAR numbered "*mibnum*" for TCP/IP resource "*resname*".

Message Variables

field

THRESH

The threshold value specified.

OPERATOR

The operation symbol.

MIBNAME

The name of the MIB variable.

resname

The name of the TCP/IP resource.

mibnum

The MIBVAR number as listed in the AON Configuration file of the incorrect entry.

System action

The variable is ignored.

System programmer response

Correct the definition in the AON Configuration file. If the problem persists, contact IBM Software Support.

FKX942I **NO VALID SNMPMIBS FOUND FOR RESOURCE *resname***

Explanation

None of the MIBVAR entries for this resource are valid.

Message Variables

resname

The name of the TCP/IP resource.

System action

Threshold Polling for this resource is not performed.

Operator response

Contact your System Programmer.

System programmer response

Correct the definition in the AON Configuration file. If the problem persists, contact IBM Software Support.

FKX950E **INSUFFICIENT INFORMATION TO ACTIVELY MONITOR THIS RESOURCE**

Explanation

There is insufficient information defined in the current control file entry to start monitoring for this resource.

System action

The request to start active monitoring for this resource fails.

Operator response

For IPPORT resources each of the following fields are required: PROTOCOL, TCPNAME, and PORT.

FKX951E **KEYWORDS FROM OTHER
CONTROL FILE ENTRIES CANNOT
BE DELETED**

Explanation

The control file keyword value pair cannot be deleted because it is not defined to the selected control file entry.

System action

The delete request fails.

Operator response

The current keyword value pair can be changed but not deleted.

FKX952I **THE NEWLY ADDED FIELD IS
SHOWN BUT MUST BE SUBMITTED
TO TAKE EFFECT**

Explanation

The keyword value pair was added and is now displayed with the others for this control file entry. However, you must submit the changes for all the fields for this field to be added in storage.

Operator response

Press F4 to submit the control file changes including the addition of any newly added keyword value pairs.

FKX953E **ONE OF THE FOLLOWING IS
REQUIRED: *keywords***

Explanation

The action requested requires at least one of the listed keywords or parameters be properly specified.

Message Variables

keywords

One or more keywords or parameters. At least one must be supplied.

System action

The request fails.

Operator response

Supply one of the keywords or parameters listed with a value.

FKX954E **RESNAME *resname* ALREADY IN
USE**

Explanation

The resname you specified or are attempting to add is already in use.

Message Variables

resname

The resname specified that is already in use

System action

The request fails.

Operator response

Specify a unique resname or delete the duplicate resname and retry the current operation.

FKX960I **NO SERVICE POINTS FOUND FOR
SESSION MONITORING**

Explanation

FKXE2200 (Session Monitoring) was unable to find TCP390 IPTN3270.

System action

The command ends.

FKX961I **UNABLE TO RESOLVE AN IP
ADDRESS FOR HOST FVT06T**

Explanation

A host name was entered as a search parmeter. NetView was unable to determine an IP address associated with this host. Session Monitoring requires an IP address when searching a TN3270 server for sessions.

System action

The command ends.

Operator response

Check that the host name is valid. If the problem persists contact your system programmer.

System programmer response

If the host name is defined correctly in your network, contact IBM Software Support.

FKX962I **WILDCARDS ARE NOT
SUPPORTED FOR TN3270 SERVER
*sp***

Explanation

You entered a wild card character (*) in the search field. Session Monitoring does not support wild card addresses for TN3270 servers.

Message Variables

sp

The name of the TN3270 server requested.

System action

The command ends.

Operator response

Retry the command with a valid IP address or host name.

System programmer response

If the problem persists, contact IBM Software Support.

**FKX963I NO SERVICE POINT DEFINED FOR
TN3270 SERVER *sp***

Explanation

No service point is found in the IPTN3270 Configuration file entry for this TN3270 server.

Message Variables

sp

The name of the TN3270 server requested.

System action

The command ends.

Operator response

Contact your system programmer.

System programmer response

Add an SP parameter on the IPTN3270 statement for this TN3270 server. If the problem persists, contact Tivoli IBM Software Support.

**FKX970I NO SESSIONS MATCH DEFINED
FILTER CRITERIA**

Explanation

Configured filter criteria has resulted in all active sessions being filtered from your display.

Operator response

Verify that your filters and the AND or OR operands are properly defined.

FKX979E

**UNIXSERV=YES IS REQUIRED ON
TCP390 *stackname* STATEMENT
IN POLICY DEFINITION**

Explanation

During AON/TCP initialization, AON determined that there was a TCP390 statement for the local domain that did not contain a UNIXSERV=YES parameter. This parameter is required.

System action

AON/TCP initialization stops.

Operator response

Notify the system programmer.

System programmer response

Add UNIXSERV=YES to the TCP390 statement for the local domain and reinitialize AON.

**FKX980I UNIX SERVICES FUNCTION
module_name WAS NOT FOUND**

Explanation

A call was made to use a UNIX System Services function that is supplied with the NetView program, but the module was not found in any UNIX System Services searched directory.

Message Variables

module_name

The name of the called UNIX System Services function that is supplied with the NetView program.

System action

The command ends.

Operator response

Contact your system programmer.

System programmer response

Install the module in a UNIX System Services searched directory. If the problem persists, contact IBM Software Support.

**FKX981I UNABLE TO RUN UNIX SERVICES
FUNCTION *module_name***

Explanation

A call was made to use a UNIX System Services function that is provided with the NetView program,

but the permission bits for the module refused execution.

Message Variables

module_name
The name of the called UNIX System Services function that is supplied with the NetView program.

System action
The command ends.

Operator response
Contact your system programmer.

System programmer response
You need to resolve the permission bits for this module.

FKX982I	UNIX SERVICES ERROR RECEIVED: <i>message_text</i>
----------------	--

Explanation
A call was made to use a UNIX System Services function that is supplied with the NetView program, and an error was returned from UNIX System Services.

Message Variables
message_text
The text of the error message returned from UNIX System Service.

System action
The command ends.

Operator response
Contact your system programmer.

System programmer response
Resolve the problem that is detailed in the message.

FKX983I	NETVIEW TIMEOUT BEFORE RESPONSE RECEIVED FROM TCP/IP
----------------	---

Explanation
A SNMP request was sent to UNIX System Services, but the NetView timed out before any data was returned from UNIX System Services TCP/IP.

System action
The command ends.

Operator response
Try the command again. If the problem persists, contact your system programmer.

System programmer response
Adjust the amount of time the NetView Pipe waits for a response by changing the ENVIRON TIMEOUT SNMP value.

FKX984I	TIMEOUT RECEIVED FROM SNMP REQUEST
----------------	---

Explanation
An SNMP request was issued and no data was received except this SNMP Timeout response. This timeout indicates that the IP resource from which the data was requested does not have SNMP support active.

System action
The command ends.

Operator response
Retry the command, and verify that the resource has SNMP support active.

System programmer response
If the problem persists, contact IBM Software Support.

FKX985I	TCP/IP IS UNABLE TO RESOLVE HOSTNAME <i>resname</i>
----------------	--

Explanation
NetView was not able to resolve the host name.

Message Variables
resname
The host name of the IP resource

System action
The command ends.

Operator response
Verify that the host name is valid, and retry the command.

System programmer response
Check your TCP/IP domain name server definitions. If the problem persists, contact IBM Software Support.

FKX986I	UNIX SERVER IS NOT AVAILABLE, PPI ERROR 26 RECEIVED
----------------	--

Explanation

NetView was unable to send the TCP/IP command to UNIX System Services.

System action

The command ends.

Operator response

Check that the NetView PPI is initialized, and that the UNIX server is active.

System programmer response

If the problem persists, contact IBM Software Support.

**FKX987I UNIX AUTHORIZATION FAILED,
UNIX ERROR -11 RECEIVED**

Explanation

A TCP/IP command request was issued and a UNIX System Services return code -11 error was returned. This response indicates that the operator is not properly defined to use UNIX System Services.

System action

The command ends.

Operator response

Contact System Programming.

System programmer response

Define NetView to UNIX System Services.

FKX988I

**ERRORS RECEIVED FROM SNMP
REQUEST. HIT F10 FOR
MESSAGES**

Explanation

An SNMP request was issued, and in addition to or instead of TCP/IP data, TCP/IP messages were returned. Select F10 from the screen, to see the messages.

System action

The command is continued.

Operator response

Review the message to see if further action is required.

FKX989I

**NO CONNECTIONS FOUND FOR
THIS INTERFACE**

Explanation

A request was issued to display the list of connections for the specified interface on a resource, and SNMPView cannot find any connections for that interface.

System action

The command ends.

System programmer response

If sessions exist, and re-issuing the command gives the same results, contact IBM Software Support.

Chapter 10. FLB Prefix Messages

FLB prefix messages provide error descriptions and information about SNA Topology Manager.

FLB000I **MESSAGE *msgnum* WAS ISSUED
BUT THIS MESSAGE DOES NOT
EXIST IN MESSAGE TABLE
DSIMDMFB**

Explanation

The message processing routines were asked to issue a message which is not found in message table DSIMDMFB.

Message Variables

msgnum

The number of the message that cannot be found

System action

The request to issue the message is cancelled.

Operator response

Notify the system programmer.

System programmer response

Verify that message table DSIMDMFB exists and is properly installed. If it is, record the message number and contact IBM Software Support.

FLB010E **FLBTOPO RECEIVED RETURN
CODE *retcode*, ABEND CODE
abncode, REASON CODE *rsncode*,
ATTEMPTING TO LOAD MODULE
'*module*'**

Explanation

The SNA topology manager (FLBTOPO) received an error from the DSILOD macro while attempting to load the specified module.

Message Variables

retcode

The return code from the DSILOD macro

abncode

The abend code returned from the DSILOD macro

rsncode

The reason code returned from the DSILOD macro

module

The module which was being loaded

System action

The SNA topology manager is ended.

Operator response

Notify your system programmer.

System programmer response

This message is issued because of a failure to load the specified module. This is usually because NetView or VTAM has not been installed properly, or VTAM is not at the correct level. If the module name begins with FLB, verify that NetView has been installed properly. If the module name begins with ACY, verify that VTAM 4.3 or later has been installed properly and includes CMIP Services support.

FLB300W **SNA TOPOLOGY MANAGER IS
REINITIALIZING**

Explanation

The SNA topology manager detected an error that forced re-initialization.

System action

The SNA topology manager stops all command processing and reinitializes.

Operator response

This message is issued in combination with FLB481E or FLB684E. Either RODM or CMIP Services ended. Restart RODM or CMIP Services, depending upon which other message was received.

System programmer response

Determine why VTAM CMIP Services or RODM ended.

FLB301E **RODM ERROR ENCOUNTERED ON
RODM FUNCTION *type* OBJECTID
X'*objectid*' RETURN CODE *rc*
REASON CODE *xx***

Explanation

The SNA topology manager received an error on a RODM request.

Message Variables

type

The function ID of the failing RODM request

objectid

The object ID of the resource in hexadecimal

rc

The RODM return code in decimal

xx

The RODM reason code in decimal

System action

The SNA topology manager command that encountered the error fails. If the ERRLIMIT value is greater than zero, the command is retried the number of times specified by the ERRLIMIT value.

Operator response

Report this problem to the system programmer.

System programmer response

Using the information in the message and the *IBM Z NetView Troubleshooting Guide*, determine why the failure occurred. This might indicate a problem requiring you to contact IBM Software Support, or a problem introduced by user-written methods executing in the RODM address space.

FLB302E **MONITORING OF SNA *type* FROM RESOURCE *resource* FAILED DUE TO SNA TOPOLOGY MANAGER OR RODM PROCESSING ERROR**

Explanation

The SNA topology manager encountered a non-network related problem forcing the specified operation to fail.

Message Variables**type**

The type of monitor command that failed; possible values are:

- NETWORK TOPOLOGY
- LOCAL TOPOLOGY
- LU COLLECTION

resource

The name of the resource from which the *type* of monitoring was being performed.

System action

The command is retried if the error limit value (set by the TOPOSNA SETDEFS,ERRLIMIT=xxx command) is greater than zero. If the error limit value was specified as NORETRY or zero, the command is not retried.

Operator response

Report the failure to the system programmer.

System programmer response

If this message is not preceded by message FLB301E, the problem is the result of an SNA topology manager internal processing failure. Contact IBM Software Support.

If this message is preceded by message FLB301E, the problem was caused by a RODM function. Contacting IBM Software Support might be required; see message FLB301E.

FLB303W **MONITORING OF SNA *type* FROM RESOURCE *resource* IS BEING RETRIED**

Explanation

A command that previously failed, because of an error from SNA topology manager or RODM, is being retried.

Message Variables**type**

The type of the failed monitor command; possible values are:

- NETWORK TOPOLOGY
- LOCAL TOPOLOGY
- LU COLLECTION

resource

The name of the resource from which the *type* of monitoring is to be performed

System action

The command is being retried. The total number of retries is determined by the error retry limit value set by the TOPOSNA SETDEFS,ERRLIMIT=xxx command.

FLB304E **MONITORING OF SNA *type* FROM RESOURCE *resource* FAILED AND HAS EXCEEDED THE ERROR RETRY LIMIT**

Explanation

A command that previously failed, because of an error from SNA topology manager or RODM, has failed again and the error retry limit has been exceeded. The error retry limit value is set by the TOPOSNA SETDEFS,ERRLIMIT=xxx command.

Message Variables**type**

The failing monitor command type; possible values are:

- NETWORK TOPOLOGY
- LOCAL TOPOLOGY
- LU COLLECTION

resource

The name of the resource from which the *type* of monitoring was being performed

System action

The command is no longer retried.

Operator response

Report the failure to the system programmer.

System programmer response

If this message is not preceded by message FLB301E, the problem is the result of an SNA topology manager internal processing failure. Contact IBM Software Support.

If this message is preceded by message FLB301E, the problem was caused by a RODM function. Contacting IBM Software Support might be required; see message FLB301E.

**FLB305E MONITORING OF SNA *type* FROM
RESOURCE *resource* FAILED DUE
TO STORAGE SHORTAGE**

Explanation

A storage request cannot be satisfied. Message FLB419E will precede this message.

Message Variables

type

The failing monitor command type; possible values are:

- NETWORK TOPOLOGY
- LOCAL TOPOLOGY
- LU COLLECTION

resource

The name of the resource from which the *type* of monitoring was being performed

System action

The command fails and is not retried.

Operator response

Determine whether you received message BNH16I, which means the task has reached its storage limit. If so, notify your system programmer.

System programmer response

See the *IBM Z NetView Troubleshooting Guide* for possible causes of the storage shortage.

If necessary, see the *IBM Z NetView SNA Topology Manager Implementation Guide*.

See the *IBM Z NetView Tuning Guide* for more information about how to increase NetView storage.

**FLB400E TOPOSNA STOP COMMAND IS
IGNORED BECAUSE SNA
NETWORK TOPOLOGY OF NODE
nodename IS NOT BEING
MONITORED**

Explanation

The TOPOSNA STOP command was ignored by the SNA topology manager because the SNA topology manager is not monitoring the network topology of the node. The probable cause of the problem is one of the following:

- No one started monitoring the SNA topology manager of the node.
- Another operator already stopped monitoring the SNA network topology of the node.
- The operator specified an incorrect node name on the TOPOSNA STOP command.

Message Variables

nodename

The control point name of the agent node

Operator response

Verify the name of the node specified on the TOPOSNA STOP command is correct and issue the command again.

**FLB401E TOPOSNA STOP COMMAND IS
IGNORED BECAUSE SNA LOCAL
TOPOLOGY OF NODE *nodename* IS
NOT BEING MONITORED**

Explanation

The TOPOSNA STOP command was ignored by the SNA topology manager because the SNA topology manager is not monitoring the local topology of the node. The probable cause of the problem is one of the following:

- No one started monitoring the SNA local topology of the node.
- Another operator already stopped monitoring the SNA local topology of the node.

- The operator specified an incorrect node name on the TOPOSNA STOP command.

Message Variables

nodename

The control point name of the agent node

Operator response

Check the name of the node specified on the TOPOSNA STOP command. If the name is incorrect, issue the command again with the correct name.

FLB402I SNA TOPOLOGY MANAGER HAS BEGUN WARM-START PROCESSING

Explanation

The SNA topology manager has connected to RODM and CMIP services and is beginning to process the information contained in the RODM data cache. The topology manager restarts all continuous monitor operations during warm start. The topology manager uses information in the RODM data cache to determine which nodes must be monitored. Warm-start processing occurs when the PURGDAYS keyword in the FLBSYSD initialization file is specified with a value greater than zero. The amount of time required to warm-start depends on the number of objects that are in RODM.

Note: If RODM is loaded with checkpoint data, the topology manager restarts continuous monitoring of the nodes that were being monitored when the RODM checkpoint was taken.

System action

The RODM data cache is read and verified. All eligible objects in the data cache are purged, according to the PURGDAYS parameter in the initialization file FLBSYSD. All continuous monitor operations that were active when the topology manager was stopped or when the RODM checkpoint was taken (see note above) are restarted.

FLB403I REQUESTED MONITORING OF SNA NETWORK TOPOLOGY FROM NODE *nodename*

Explanation

The SNA topology manager sent the agent node a request to monitor its network topology. In response, the agent node sends the initial transfer of its topology data. Following the initial transfer, the agent node sends updates as they occur. The monitoring continues until the TOPOSNA STOP operator command is issued or the monitor time specified on

the TOPOSNA MONITOR operator command expires. If the topology manager is stopped and warm-started, it restarts the monitoring automatically.

Message Variables

nodename

The control point name of the agent node

System action

Monitoring is started.

Operator response

Look for message FLB406I to indicate that the initial transfer of topology data has completed.

FLB404I COMPLETED MONITORING OF SNA NETWORK TOPOLOGY FROM NODE *nodename*

Explanation

The SNA topology manager completed monitoring SNA network topology from the agent node. The initial transfer of topology data from the agent was completed, and the monitor time for updates expired. The monitor time is specified on the MONTIME parameter on the TOPOSNA MONITOR command.

Message Variables

nodename

The control point name of the agent node

System action

Monitoring stop.

FLB405W OPERATOR '*operid*' STOPPED MONITORING SNA NETWORK TOPOLOGY FROM NODE *nodename*

Explanation

The operator stopped monitoring SNA network topology from the agent node by issuing a TOPOSNA STOP command. Monitoring stops even if the initial transfer of topology data from the agent node is not complete.

Message Variables

operid

The name of the operator who issued the TOPOSNA STOP command

nodename

The control point name of the agent node

System action

Monitoring stop

Operator response

If you want to resume monitoring network topology, issue another TOPOSNA MONITOR command; otherwise, no response is required.

FLB406I	INITIAL TRANSFER OF SNA NETWORK TOPOLOGY FROM NODE <i>nodename</i> IS COMPLETE
----------------	---

Explanation

The SNA topology manager started monitoring SNA network topology from the agent node, and the agent node completed the initial transfer of its topology data, and stored topology data in the RODM cache. The agent node continues to send updates to the manager as they occur.

Message Variables

nodename
The control point name of the agent node

System action

Monitoring continues until a TOPOSNA STOP command is issued, the time specified on the MONTIME parameter of the TOPOSNA MONITOR command expires, or an error occurs that stops the monitoring.

FLB407E	MONITORING OF SNA NETWORK TOPOLOGY FROM NODE <i>nodename</i> FAILED
----------------	--

Explanation

The SNA topology manager cannot start the monitoring of SNA network topology from the agent node, cannot complete the initial transfer of the topology data, or has lost communications with the agent node after the initial transfer was complete. The error is considered unrecoverable and no retry occurs. The probable cause of the error is a system error at the agent node.

Message Variables

nodename
The control point name of the agent node

System action

Monitoring is not started and no retry occurs.

Operator response

See the messages in the NetView log to diagnose the error. If you are unable to fix the problem, notify your system programmer.

System programmer response

See the error messages in the NetView log and to *IBM Z NetView Troubleshooting Guide* to diagnose and correct the error. Refer also to the system error log at the agent node to determine whether an agent system error occurred; if it did, take action to fix the problem at the agent node. Restart monitoring the network topology. If necessary, contact IBM Software Support.

FLB408W	MONITORING OF SNA NETWORK TOPOLOGY FROM NODE <i>nodename</i> IS BEING RETRIED
----------------	--

Explanation

The SNA topology manager started monitoring SNA network topology from the agent node, but either the topology manager cannot complete the initial transfer of the topology data, or it lost communications with the agent node after the initial transfer was complete. The error is considered recoverable and retry occurs immediately. The topology manager will retry until it successfully completes the initial transfer, exceeds the retry limits for network topology, or encounters an unrecoverable error. The retry limits are specified on the TOPOSNA SETDEFS operator command.

The probable cause of the error is one of the following:

- The session from the NetView host to the agent node failed.
- The topology agent program has been stopped.
- The time interval specified on the MAXREPLY parameter of the NETVIEW DEFAULTS command expired before the initial transfer of the topology data was complete.

Message Variables

nodename
The control point name of the agent node

System action

The topology manager begins retrying the task.

Operator response

See the messages in the NetView log to diagnose the error. If the error is because the time interval specified on the MAXREPLY parameter of the NETVIEW DEFAULTS command expired, increase the time interval in order to reduce the frequency of this condition. Otherwise, no action is necessary in response to this message. If the topology manager cannot restart the monitoring, it will issue message FLB407E or FLB462E.

**FLB409W MONITORING OF SNA NETWORK
TOPOLOGY FROM NODE *nodename*
WILL BE RETRIED****Explanation**

The SNA topology manager cannot start the monitoring of SNA network topology from the agent node. The error is considered recoverable and retry will begin at the end of the first retry interval for network topology. The topology manager will retry until it successfully completes the initial transfer, exceeds the retry limits for network topology, or encounters an unrecoverable error. The retry intervals and limits are specified on the TOPOSNA SETDEFS operator command.

The probable cause of the error is one of the following:

- A session from the NetView host to the agent node cannot be established, or the session failed and cannot be established again.
- The agent node does not have a topology agent installed and running.
- The agent node control point name is incorrect; for example, the name was not typed correctly on the TOPOSNA MONITOR operator command.
- The agent node is not turned on, or it does not exist in the network.
- The agent node is an end node; end nodes do not support requests for network topology.

Message Variables***nodename***

The control point name of the agent node

System action

The topology manager will begin retrying after the retry interval specified for network topology.

Operator response

Ensure that the agent node is a network node. If it is, no action is necessary in response to this message. However, if the topology manager cannot start the monitoring, it will issue message FLB407E or FLB462E. You can attempt to start monitoring network topology at any time with the TOPOSNA MONITOR operator command. Otherwise, the topology manager will attempt to restart the monitoring at the intervals specified on the NETRETRY parameter of the TOPOSNA SETDEFS operator command.

**FLB410E INSUFFICIENT STORAGE TO
PROCESS TOPOSNA *requestparm*
COMMAND****Explanation**

The command processor for the SNA topology manager task cannot allocate enough storage to process the TOPOSNA operator command. The probable cause of the error is that the address space allocated to NetView is too small.

Message Variables***requestparm***

The name of the TOPOSNA request parameter

System action

The command is ignored.

Operator response

Determine whether you received message BNH16I, which means the task has reached its storage limit. If so, notify your system programmer.

System programmer response

See the *IBM Z NetView Troubleshooting Guide* for possible causes of the storage shortage. If necessary, see the *IBM Z NetView SNA Topology Manager Implementation Guide*. For storage estimates, see the *IBM Z NetView Tuning Guide*.

**FLB411I TOPOSNA *requestparm* COMMAND
COMPLETED SUCCESSFULLY****Explanation**

The SNA topology manager successfully completed the processing of the TOPOSNA operator command.

Message Variables***requestparm***

The name of the TOPOSNA request parameter

System action

The command is completed.

**FLB412E TOPOSNA *requestparm* COMMAND
CANNOT BE COMPLETED
BECAUSE OF AN ERROR****Explanation**

The SNA topology manager cannot complete the processing of the TOPOSNA operator command. This message might follow other messages that indicate the type of error. No further processing of the command can be done.

The probable cause of the error is one of the following:

- A RODM error occurred during the processing of a TOPOSNA PURGE or TOPOSNA SETDEFS command.
- A GTF error occurred during the processing of a TOPOSNA TRACE command.
- A system error occurred during the processing of any TOPOSNA command.

Message Variables

requestparm

The name of the TOPOSNA request parameter

System action

The command is ignored.

Operator response

See messages in the NetView log to diagnose the error. Correct the problem and issue the operator command again. If you cannot correct the problem, notify your system programmer.

System programmer response

See the error messages in the NetView log and to *IBM Z NetView Troubleshooting Guide* to diagnose and correct the error. If necessary, contact IBM Software Support.

**FLB413E SNA TOPOLOGY MANAGER
CANNOT PROCESS OR READ
INITIALIZATION MEMBER
'FLBSYSD'**

Explanation

The SNA topology manager cannot read the FLBSYSD initialization member in the data set named on the DSIPARM DD statement in the system-start JCL. The initialization member contains information that is needed for the topology manager to complete its initialization, such as the RODM name for connecting to RODM.

The probable cause of the error is one of the following:

- The topology manager encountered a disk I/O error when it attempted to read the member.
- The FLBSYSD member does not exist.
- The FLBSYSD member contains a syntax error or incorrect information.

System action

The topology manager stops executing.

Operator response

Notify your system programmer.

System programmer response

See the error messages in the NetView log and to the *IBM Z NetView Troubleshooting Guide* to diagnose and correct the error. If the FLBSYSD member does not exist, install it on your system. If the member is incorrectly formatted or contains incorrect information, update the member using the correct format or information. *IBM Z NetView Installation: Getting Started* contains installation instructions and the description of the member format and content. If necessary, contact IBM Software Support.

**FLB414E TOPOSNA *requestparm* COMMAND
CANNOT BE PROCESSED
BECAUSE OF AN ERROR**

Explanation

The TOPOSNA operator command cannot be processed because of an internal error condition. A probable cause is that the command processor cannot send the command to the FLBTOPO autotask.

Message Variables

requestparm

The name of the TOPOSNA request parameter

System action

The command is ignored.

Operator response

This condition might be temporary, so try to issue the command later. If this condition persists, notify your system programmer.

System programmer response

This condition occurs when the command processor is attempting to send the operator command to the topology manager. See the error messages in the NetView log and to the *IBM Z NetView Troubleshooting Guide* to diagnose and correct the error. If necessary, contact IBM Software Support.

**FLB415W SNA TOPOLOGY MANAGER
INITIALIZATION FILE CONTAINS
KEYWORDS '*keyword1*' AND
'*keyword2*' WITH STRING VALUES
THAT ARE EQUAL**

Explanation

The SNA topology manager initialization file, FLBSYSD, includes keywords and associated values expressed as:

```
KEYWORD="value"
```

Some of the keywords provide character string values used for identifying capabilities or related elements of certain APPN topology objects. The character strings are stored in RODM in the DisplayResourceOtherData field of the corresponding objects.

The topology manager detected that the keywords indicated in the message have character string values that are the same.

Message Variables

keyword1

One keyword, from the FLBSYSD initialization file

keyword2

The other keyword, from the FLBSYSD initialization file

System action

The topology manager continues, using the keywords and their character string values from the initialization file.

Operator response

Contact the system programmer.

System programmer response

Consider changing the initialization file so that the character strings assigned to the indicated keywords are not the same.

FLB416E	SNA TOPOLOGY MANAGER INITIALIZATION FILE CONTAINS A KEYWORD '<i>keyword</i>' WITH A NULL VALUE
----------------	---

Explanation

The SNA topology manager initialization file, FLBSYSD, includes keywords and associated values expressed as:

```
KEYWORD="value"
```

Some of the keywords provide character string values used for identifying capabilities or related elements of certain APPN topology objects. The character strings are stored in RODM in the DisplayResourceOtherData field of the corresponding objects. Some keywords provide prefix values used for distinguishing the displayed names of objects of different classes that have the same name structure. The prefixes are joined to the names of the objects and stored in RODM in the DisplayResourceName field. Other keywords are used to set numeric values used during initialization.

The topology manager detected that the keyword indicated in the message has no value assigned to it.

Message Variables

keyword

The keyword, from the FLBSYSD initialization file, that has no value assigned

System action

The topology manager does not initialize.

Operator response

Contact the system programmer.

System programmer response

Change the initialization file so that the keyword contains a value.

FLB417E	SNA TOPOLOGY MANAGER INITIALIZATION FILE CONTAINS KEYWORDS '<i>keyword1</i>' AND '<i>keyword2</i>' WITH PREFIX VALUES THAT ARE EQUAL
----------------	---

Explanation

The SNA topology manager initialization file, FLBSYSD, includes keywords and associated values expressed as:

```
KEYWORD="value"
```

Some of the keywords provide prefix values used for distinguishing the displayed names of objects of different classes that have the same name structure. The prefixes are joined to the names of the objects and stored in RODM in the DisplayResourceName field.

The topology manager detected that the keywords indicated in the message have prefix values that are the same.

Message Variables

keyword1

One keyword, from the FLBSYSD initialization file

keyword2

The other keyword, from the FLBSYSD initialization file

System action

The topology manager does not initialize.

Operator response

Contact the system programmer.

System programmer response

Change the initialization file so that the prefixes assigned to the indicated keywords are not the same.

FLB418I	SNA TOPOLOGY MANAGER HAS BEGUN COLD-START PROCESSING
----------------	---

Explanation

The SNA topology manager has connected to RODM and CMIP services. None of the existing APPN topology information in RODM is used by the topology manager. Cold-start processing occurs when the PURGDAY keyword in the FLBSYSD initialization file specifies a value equal to zero. The amount of time required to warm-start depends on the number of objects that are in RODM.

System action

The RODM data cache is read and verified. All APPN topology objects in the data cache are purged. No monitor operations are restarted.

FLB419E	SNA TOPOLOGY MANAGER COULD NOT ALLOCATE ENOUGH STORAGE. AMOUNT OF STORAGE ATTEMPTED WAS 'amount'
----------------	---

Explanation

The SNA topology manager cannot allocate enough storage to complete its processing.

Message Variables

amount

The amount of storage (in bytes) that the SNA topology manager attempted to allocate. If the amount of storage is unknown to the SNA topology manager, 'UNKNOWN' is displayed.

System action

If the storage request occurs during initialization, the SNA topology manager ends. Otherwise, only the command that generated the storage request ends (the command will not be retried).

Operator response

Determine whether you received message BNH16I, which means the task has reached its storage limit. If so, notify your system programmer.

System programmer response

See the *IBM Z NetView Troubleshooting Guide* for possible causes of the storage shortage.

If necessary, see the *IBM Z NetView SNA Topology Manager Implementation Guide*. For storage estimates, see the *IBM Z NetView Tuning Guide*.

FLB420I	REQUESTED MONITORING OF SNA LOCAL TOPOLOGY FROM NODE nodename
----------------	--

Explanation

The SNA topology manager sent the agent node a request to monitor its local topology. In response, the agent node sends the initial transfer of its topology data. When the initial transfer is complete, the topology manager issues message FLB423I. Following the initial transfer, the agent node sends updates as they occur. The monitoring continues until the TOPOSNA STOP operator command is issued or the monitor time specified on the TOPOSNA MONITOR operator command expires. If the topology manager is stopped and warm-started, it restarts the monitoring automatically.

Message Variables

nodename

The control point name of the agent node

System action

Monitoring is started.

Operator response

Look for message FLB423I which indicates that the initial transfer of data is complete.

FLB421I	COMPLETED MONITORING OF SNA LOCAL TOPOLOGY FROM NODE nodename
----------------	--

Explanation

The SNA topology manager completed monitoring SNA local topology from the agent node. The initial transfer of topology data from the agent node was completed. The monitor time for updates has expired. The monitor time is specified on the MONTIME parameter on the TOPOSNA MONITOR command.

Message Variables

nodename

The control point name of the agent node.

System action

Monitoring is stopped.

FLB422W	OPERATOR 'operid' STOPPED MONITORING SNA LOCAL TOPOLOGY FROM NODE nodename
----------------	---

Explanation

The operator stopped monitoring SNA local topology from the agent node by issuing a TOPOSNA STOP command. Monitoring stops even if the initial transfer of topology data from the agent node is not complete.

Message Variables

operid

The name of the operator who issued the TOPOSNA STOP command

nodename

The control point name of the agent node

System action

Monitoring is stopped

Operator response

If you wish to resume monitoring local topology, issue another TOPOSNA MONITOR command; otherwise, no response is required.

FLB423I	INITIAL TRANSFER OF SNA LOCAL TOPOLOGY FROM NODE <i>nodename</i> IS COMPLETE
----------------	---

Explanation

The SNA topology manager started monitoring SNA local topology from the agent node, and the agent node completed the initial transfer of its topology data, and the SNA topology manager has processed and stored topology data in the RODM data cache. The agent node continues to send updates to the manager as updates occur.

Message Variables

nodename

The control point name of the agent node

System action

Monitoring continues until a TOPOSNA STOP command is issued, the time specified on the MONTIME parameter of the TOPOSNA SETDEFS or TOPOSNA MONITOR command expires, or an error occurs that stops the monitoring.

FLB424E	MONITORING OF SNA LOCAL TOPOLOGY FROM NODE <i>nodename</i> FAILED
----------------	--

Explanation

The SNA topology manager cannot start the monitoring of SNA local topology from the agent node, cannot complete the initial transfer of the topology data, or lost communications with the agent node after

the initial transfer was complete. The error is considered unrecoverable and no retry occurs. The probable cause of the error is a system error at the agent node.

Message Variables

nodename

The control point name of the agent node

System action

Monitoring is not started and no retry occurs.

Operator response

See the messages in the NetView log to diagnose the error. If you are unable to correct the problem, notify your system programmer.

System programmer response

See the error messages in the NetView log and to *IBM Z NetView Troubleshooting Guide* to diagnose and correct the error. Refer also to the system error log at the agent node to determine whether an agent system error occurred; if it did, take action to correct the error at the agent node. Restart monitoring the local topology. If necessary, contact IBM Software Support.

FLB425W	MONITORING OF SNA LOCAL TOPOLOGY FROM NODE <i>nodename</i> IS BEING RETRIED
----------------	--

Explanation

The SNA topology manager started monitoring SNA local topology from the agent node, but either it cannot complete the initial transfer of the topology data, or it lost communications with the agent node after the initial transfer was complete. The error is considered recoverable and retry occurs immediately. The topology manager will retry until it successfully completes the initial transfer, exceeds the retry limits for local topology, or encounters an unrecoverable error. The retry limits are specified on the TOPOSNA SETDEFS operator command.

The probable cause of the error is one of the following:

- The session from the NetView host to the agent node failed.
- The topology agent program has been stopped.
- The time interval specified on the MAXREPLY parameter of the NETVIEW DEFAULTS command expired before the initial transfer of the topology data was complete.

Message Variables

nodename

The control point name of the agent node

System action

The topology manager immediately begins retrying.

Operator response

See the messages in the NetView log to diagnose the error. If the error is because the time interval specified on the MAXREPLY parameter of the NETVIEW DEFAULTS command expired, increase the time interval in order to reduce the frequency of this condition. Otherwise, no action is necessary in response to this message. If the topology manager cannot restart the monitoring, it will issue message FLB424E or FLB463E.

FLB426W	MONITORING OF SNA LOCAL TOPOLOGY FROM NODE <i>nodename</i> WILL BE RETRIED
----------------	---

Explanation

The SNA topology manager cannot start the monitoring of SNA local topology from the agent node. The error is considered recoverable and retry will begin at the end of the first retry interval for local topology. The topology manager will retry until it successfully completes the initial transfer, exceeds the retry limits for local topology, or encounters an unrecoverable error. The retry intervals and limits are specified on the TOPOSNA SETDEFS operator command.

The probable cause of the error is one of the following:

- A session from the NetView host to the agent node cannot be established, or the session failed and cannot be established again.
- The agent node does not have a topology agent installed and running.
- The agent node control point name is incorrect; for example, the name was not typed correctly on the TOPOSNA MONITOR operator command.
- The agent node is not powered on or it does not exist in the network.

Message Variables

nodename

The control point name of the agent node

System action

The topology manager will begin retrying after the retry interval specified for local topology.

Operator response

No action is necessary in response to this message. However, if the topology manager cannot restart the monitoring, it will issue message FLB424E or FLB463E. You can attempt to start monitoring local topology at any time with the TOPOSNA MONITOR operator command. Otherwise, the topology manager will try to restart the monitoring at the interval specified on the LCLRETRY parameter of the TOPOSNA SETDEFS operator command.

FLB427E	SNA TOPOLOGY MANAGER INITIALIZATION FILE CONTAINS A KEYWORD '<i>keyword</i>' WITH AN INCORRECT VALUE
----------------	---

Explanation

The SNA topology manager initialization file, FLBSYSD, includes keywords and associated values expressed as:

```
KEYWORD="value"
```

The values are used for initializing certain start-up and run-time parameters. The value assigned to the keyword indicated in the message has an incorrect value.

Message Variables

keyword

The keyword, from the FLBSYSD initialization file, that has an incorrect value

System action

The topology manager does not initialize.

Operator response

Contact the system programmer.

System programmer response

Change the initialization file so that the value assigned to the indicated keyword is correct.

FLB429E	SNA TOPOLOGY MANAGER HAS EXHAUSTED THE NUMBER OF RETRIES TO ESTABLISH A SESSION WITH TASK CNMTAMEL
----------------	---

Explanation

The SNA topology manager has made several attempts to establish a session with CNNTAMEL. All of these attempts have failed. The SNA topology manager will stop retrying.

The probable cause of the error is:

- The CNMTAMEL task has not been activated.
- There is a storage constraint; the SNA topology manager cannot allocate a buffer to send to the CNMTAMEL task.

System action

Communication between SNA topology manager and the CNMTAMEL task cannot occur. This will prevent the following requests from successfully executing:

- Status history of objects owned by SNA topology manager
- List the SSCP owners for an object owned by SNA topology manager
- Locate a logical unit (LU) that is not already created in RODM

Operator response

Activate the CNMTAMEL task in the NetView program.

FLB430I **NODE *nodename* OF CLASS *class1* IS UPGRADED TO CLASS *class2* WITH NEW RODM OBJECT ID *rodmobjectid***

Explanation

The node has changed its object class. This change occurs when the topology manager receives more up-to-date information about an existing node, where the new information indicates a different object class. For example:

- An agent node first reports an adjacent node as a type 2.1, and later reports it as an end node after activating a logical link to the adjacent node.
- An agent network node reports an APPN border node in an adjacent APPN subnetwork as an end node; and later an agent network node in the adjacent subnetwork reports the border node as a network node (its real node class).

The RODM class names and corresponding node types are:

RODM Class Name Node Type

1.3.18.0.0.1821
APPN end node

1.3.18.0.0.1822
APPN network node

1.3.18.0.0.1827
EN node

1.3.18.0.0.1839
snaNode

1.3.18.0.0.1843

2.1 node

1.3.18.0.0.1826

Interchange node

1.3.18.0.0.1833

Migration Data Host

1.3.18.0.0.1845

T5 Node

Message Variables

nodename

The control point name of the node that changed class

class1

The RODM class name of the existing class

class2

The RODM class name of the new class

rodmobjectid

The RODM object ID of the object with the new class.

System action

The topology manager replaces the existing node object in RODM with the updated object, preserving the links to other objects in RODM.

System programmer response

The topology manager does not copy customer-defined fields from the old object to the updated object in RODM. Set these customer-defined fields for the new RODM object. See the *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide*.

FLB431I **NODE *nodename* OF CLASS *class1* IS REPLACED WITH SAME NODE OF CLASS *class2* WITH NEW RODM OBJECT ID *rodmobjectid***

Explanation

The node has been deleted and is replaced with a new node of the same name. This change occurs when the topology manager receives information about an existing node, where the new information indicates an explicit change in object class. For example, the APPN node type is reconfigured from end node to network node. The RODM class names and corresponding node types are:

RODM Class Name Node Type

"1.3.18.0.0.1821"
APPN end node

"1.3.18.0.0.1822"
APPN network node

"1.3.18.0.0.1827"

LEN node

"1.3.18.0.0.1839"

snaNode

"1.3.18.0.0.1843"

2.1 node

"1.3.18.0.0.1826"

Interchange node

"1.3.18.0.0.1833"

Migration Data Host

"1.3.18.0.0.1845"

T5 Node

Message Variables

nodename

The control point name of the node that changed class

class1

The RODM class name of the existing class

class2

The RODM class name of the new class

rodmobjectid

The RODM object ID of the object with the new class.

System action

The topology manager replaces the existing node object in RODM with the new node object, preserving the links to other objects in RODM.

System programmer response

The topology manager does not copy customer-defined fields from the old object to the new object in RODM. Set these customer-defined fields for the new RODM object. See the *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide*.

**FLB432I NODE *nodename* OF CLASS *class*
IS CREATED WITH RODM OBJECT
ID *rodmobjectid***

Explanation

The node having the indicated object class was just created. This node was not previously known to the topology manager. This message is issued when the manager creates a real node, such as an APPN network node or end node, but not a virtual routing node. For example, the manager issues this message when:

- The agent network node reports the network node identified in this message as part of its network topology data it sent the manager.

- An agent network or end node reports the node identified in this message as one of its adjacent nodes when it sent its local topology data to the manager.

The RODM class names and corresponding node types are:

**RODM Class Name
Node Type**

1.3.18.0.0.1821

APPN end node

1.3.18.0.0.1822

APPN network node

1.3.18.0.0.1826

Interchange node

1.3.18.0.0.1827

LEN node

1.3.18.0.0.1833

Migration Data Host

1.3.18.0.0.1839

snaNode

1.3.18.0.0.1843

2.1 node

1.3.18.0.0.1844

T4 Node

1.3.18.0.0.1845

T5 Node

Message Variables

nodename

The control point name of the node that was created

class

The RODM class name of the class

rodmobjectid

The RODM object ID of the object

System action

The topology manager creates the node object in RODM.

System programmer response

The topology manager does not set any customer-defined fields in the newly created object in RODM. You might set these customer-defined fields for the new RODM object. See the *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide*.

**FLB433E SNA TOPOLOGY MANAGER COULD
NOT ALLOCATE ENOUGH
STORAGE**

Explanation

The SNA topology manager cannot allocate enough storage in command processor FLBTRCH. This command processor is used to receive data from task CNMTAMEL, and format the data from CNMTAMEL in a format that task FLBTOPO expects.

System action

The command processor stops processing this specific request.

Operator response

Determine whether you received message BNH16I, which means the task has reached its storage limit. If so, notify your system programmer.

System programmer response

See the *IBM Z NetView Troubleshooting Guide* for possible causes of the storage shortage. If necessary, see the *IBM Z NetView SNA Topology Manager Implementation Guide*. For storage estimates, see the *IBM Z NetView Tuning Guide*.

FLB434E	A REQUEST SENT TO THE SNA TOPOLOGY MANAGER CANNOT BE PROCESSED BECAUSE OF AN ERROR
----------------	---

Explanation

The DSIMQS from this command processor to FLBTOPO autotask received a non-zero return. A buffer was received from the CNMTAMEL task in command processor FLBTRCH. This command processor will change the buffer into one that the SNA topology manager will accept.

System action

The command is ignored.

Operator response

This condition might be temporary. If this condition persists, notify your system programmer.

System programmer response

This condition occurs when the command processor is attempting to send a request from the CNMTAMEL task to the SNA topology manager. See the error messages in the NetView log and to *IBM Z NetView Troubleshooting Guide* to diagnose and correct the error. If necessary, contact IBM Software Support.

FLB435E	SNA TOPOLOGY MANAGER IS NOT READY TO PROCESS THE
----------------	---

REQUEST FROM THE CNMTAMEL TASK

Explanation

The SNA topology manager is not in the proper state to process the request from the CNMTAMEL task.

Probable causes of the error are:

- The SNA topology manager initialization is not yet complete.
- The SNA topology manager has not been started or it has been stopped.

System action

The command is ignored.

Operator response

After the SNA topology manager initialization is complete, issue the operator command again, if appropriate.

FLB436E	SNA TOPOLOGY MANAGER INITIALIZATION FAILED
----------------	---

Explanation

The SNA topology manager encountered an error during its initialization and has stopped. This message is usually preceded by other messages identifying the cause of the problem.

System action

The SNA topology manager stopped.

Operator response

Notify your system programmer.

System programmer response

See the error messages in the NetView log and to *IBM Z NetView Troubleshooting Guide* to diagnose and correct the error. Restart the SNA topology manager. If necessary, contact IBM Software Support.

FLB437E	SNA TOPOLOGY MANAGER CANNOT SEND A BUFFER TO TASK CNMTAMEL BECAUSE OF AN ERROR
----------------	---

Explanation

The SNA topology manager attempted to send a buffer to the CNMTAMEL task. However, the DSIMQS macro invocation received a non-zero return code. A likely

reason for this failure is that the CNMTAMEL task is not operational.

System action

The buffer is not sent to the CNMTAMEL task.

Operator response

This condition might be temporary. If this condition persists, notify your system programmer.

System programmer response

Ensure that the CNMTAMEL task is operational. See the error messages in the NetView log and to the *IBM Z NetView Troubleshooting Guide* to diagnose and correct the error. If necessary, contact IBM Software Support.

FLB438E	SNA TOPOLOGY MANAGER COULD NOT ALLOCATE ENOUGH STORAGE
----------------	---

Explanation

The SNA topology manager cannot allocate enough storage in module FLBTRSH. This command processor is used to send data to task CNMTAMEL.

System action

The SNA topology manager stops processing the specific request.

Operator response

Determine whether you received message BNH16I, which means the task has reached its storage limit. If so, notify your system programmer.

System programmer response

See the *IBM Z NetView Troubleshooting Guide* for possible causes of the storage shortage. If necessary, see the *IBM Z NetView SNA Topology Manager Implementation Guide* and the *IBM Z NetView Tuning Guide* for more information.

FLB439E	SNA TOPOLOGY MANAGER COULD NOT ESTABLISH A SESSION WITH TASK CNMTAMEL
----------------	--

Explanation

The SNA topology manager attempted to establish a session with task CNMTAMEL. However, the CNMTAMEL task responded with a failure.

System action

The SNA topology manager will not be able to accept operator requests such as a request for status history for objects owned by the SNA topology manager.

Operator response

Notify your system programmer.

System programmer response

See the error messages in the NetView log and to the *IBM Z NetView Troubleshooting Guide* to diagnose and correct the error. If necessary, contact IBM Software Support.

FLB440I	SNA TOPOLOGY MANAGER INITIALIZATION IS COMPLETE
----------------	--

Explanation

The SNA topology manager has successfully completed its initialization, including its cold-start or warm-start processing, and is now ready to accept all TOPOSNA operator commands. The cold-start processing includes purging all APPN topology objects in the RODM data cache. The warm-start processing includes purging all eligible APPN topology objects, based on the PURGDAYS parameter in the topology manager initialization file, and restarting continuous monitoring operations.

System action

Topology manager is prepared to accept TOPOSNA operator commands.

FLB441I	SNA TOPOLOGY MANAGER IS SHUTTING DOWN NORMALLY
----------------	---

Explanation

The SNA topology manager is beginning a normal shutdown in response to the TOPOSNA STOPMGR operator command.

System action

Topology manager performs an orderly shutdown.

FLB442E	SNA TOPOLOGY MANAGER IS SHUTTING DOWN BECAUSE OF AN ERROR
----------------	--

Explanation

The SNA topology manager is beginning to shut down because it has encountered an error. This message is usually preceded by other messages identifying the cause of the problem.

System action

Topology manager attempts an orderly shutdown.

Operator response

Notify your system programmer.

System programmer response

See the error messages in the NetView log and to the *IBM Z NetView Troubleshooting Guide* to diagnose and correct the error. Restart the topology manager. If necessary, contact IBM Software Support.

**FLB443I SNA TOPOLOGY MANAGER
SHUTDOWN IS COMPLETE**

Explanation

The SNA topology manager has completed its orderly shutdown process. Logoff processing follows the shutdown, to ensure that the connections between the topology manager and other components are properly disconnected.

System action

Logoff processing begins.

**FLB444E SNA TOPOLOGY MANAGER
ENCOUNTERED A PROCESSING
ERROR**

Explanation

In the course of its processing, the SNA topology manager has encountered a processing error.

System action

Topology manager either resumes processing or begins shutting down, depending on the error.

Operator response

Notify your system programmer.

System programmer response

See the error messages in the NetView log and to *IBM Z NetView Troubleshooting Guide* to diagnose and correct the error. Restart the topology manager if it has stopped. If necessary, contact IBM Software Support.

**FLB445E TOPOSNA requestparm COMMAND
IGNORED BECAUSE SNA
TOPOLOGY MANAGER IS
SHUTTING DOWN**

Explanation

The SNA topology manager ignored the TOPOSNA operator command because it is shutting down. Either the TOPOSNA STOPMGR operator command was issued earlier or the topology manager encountered an error that caused it to shut down.

Message Variables

requestparm

The name of the TOPOSNA request parameter

System action

The command is ignored.

Operator response

After the topology manager is restarted, issue the command again, if appropriate.

**FLB446E SNA TOPOLOGY MANAGER
CANNOT BE EXECUTED UNDER
TASK taskname**

Explanation

A task other than FLBTOPO tried to start the SNA topology manager. The topology manager must be started under task FLBTOPO.

Message Variables

taskname

The name of the incorrect task

System action

Topology manager stops.

Operator response

Start the topology manager under task FLBTOPO.

**FLB447I SNA TOPOLOGY MANAGER IS
INITIALIZING**

Explanation

The SNA topology manager is beginning its initialization processing.

System action

The topology manager initializes.

Operator response

Look for message FLB440I to verify that initialization has completed successfully.

**FLB448E SNA TOPOLOGY MANAGER COULD
NOT CREATE AN EFD FOR
DEFINITIONGROUPS AT NODE
nodename****Explanation**

The SNA topology manager cannot create an Event Forwarding Discriminator at the agent node to receive Object Deletion Event Reports for definitionGroups. The error is considered unrecoverable and no retry occurs. The probable cause of the error is a system error at the agent node.

Message Variables***nodename***

The control point name of the agent node

System action

The SNA topology manager will continue to function, but the SNA topology manager will not receive Object Deletion Event Reports for definitionGroups.

Operator response

Notify your system programmer.

System programmer response

See the error messages in the NetView log and to *IBM Z NetView Troubleshooting Guide* to diagnose and correct the error. Refer also to the system error log at the agent node to determine whether an agent system error occurred; if it did, take action to fix the problem at the agent node. Restart monitoring the topology. If necessary, contact IBM Software Support.

**FLB449E SNA TOPOLOGY MANAGER FAILED
ALL RETRIES TO CREATE AN
EVENT FORWARDING
DISCRIMINATOR FOR
DEFINITIONGROUPS AT NODE
nodename****Explanation**

The SNA topology manager cannot create an Event Forwarding Discriminator at the agent node to receive Object Deletion Event Reports for definitionGroups. The error is considered recoverable, but the SNA topology manager has exceeded the retry limits of 10.

Probable causes of the error are that a session from the NetView host to the agent node cannot be established, or that the session failed and cannot be established again.

Message Variables***nodename***

The control point name of the agent node

System action

The SNA topology manager will continue to function. However, the SNA topology manager will not receive Object Deletion Event Reports for definitionGroups.

Operator response

Notify your system programmer.

System programmer response

See the error messages in the NetView log and to the *IBM Z NetView Troubleshooting Guide* to diagnose and correct the error. Then start monitoring the topology again. If necessary, contact IBM Software Support.

**FLB450E SNA TOPOLOGY MANAGER IS NOT
READY TO PROCESS THE
TOPOSNA requestparm COMMAND****Explanation**

The SNA topology manager is not in the proper state to process the TOPOSNA operator command.

The probable cause of the error is one of the following:

- The topology manager initialization is not yet complete.
- The topology manager has not been started or it has been stopped.

Message Variables***requestparm***

The name of the TOPOSNA request parameter

System action

The command is ignored.

Operator response

After the topology manager initialization is complete, issue the operator command again, if appropriate.

**FLB451E TOPOSNA requestparm COMMAND
HAS AN UNKNOWN PARAMETER
'parameter'****Explanation**

The TOPOSNA operator command contains an unknown parameter for this command.

Message Variables***requestparm***

The name of the TOPOSNA request parameter

parameter

The name of the unknown parameter

System action

The command is ignored.

Operator response

Issue the operator command again using the correct parameter. If you are not sure of the correct command parameters, enter HELP TOPOSNA *requestparm*.

FLB452E **TOPOSNA *requestparm* COMMAND HAS INCORRECT VALUE '*value*' FOR PARAMETER '*parameter*'**

Explanation

The TOPOSNA operator command contains an incorrect parameter value.

Message Variables***requestparm***

The name of the TOPOSNA request parameter

value

The value that is incorrect

parameter

The name of the parameter

System action

The command is ignored.

Operator response

Issue the operator command again using the correct parameter value. If you are not sure of the correct value, enter HELP TOPOSNA *requestparm*.

FLB453E **TOPOSNA *requestparm* COMMAND HAS INCORRECT SYNTAX**

Explanation

The TOPOSNA operator command contains a general syntax error.

The probable cause of the error is one of the following:

- Missing or misplaced comma
- Missing parenthesis
- Missing equal sign (=)
- Unbalanced parentheses
- Incorrect parameter length

Message Variables***requestparm***

The name of the TOPOSNA request parameter

System action

The command is ignored.

Operator response

Issue the operator command again using the correct syntax. If you are not sure of the correct syntax, enter HELP TOPOSNA *requestparm*.

FLB454E **TOPOSNA *requestparm* COMMAND IS MISSING PARAMETER '*parameter*'**

Explanation

The TOPOSNA operator command is missing a parameter that is required for this command.

Message Variables***requestparm***

The name of the TOPOSNA request parameter

parameter

The name of the required parameter

System action

The command is ignored.

Operator response

Issue the operator command again with the required parameter. If you are not sure of the required parameters for the command, enter HELP TOPOSNA *requestparm*.

FLB455E **TOPOSNA *requestparm* COMMAND IS MISSING A VALUE FOR PARAMETER '*parameter*'**

Explanation

The TOPOSNA operator command is missing a value that is required for the parameter for this command.

Message Variables***requestparm***

The name of the TOPOSNA request parameter

parameter

The name of the parameter that is missing a value

System action

The command is ignored.

Operator response

Issue the operator command again with a value for the parameter. If you are not sure of the values allowed for the parameter, enter HELP TOPOSNA *requestparm*.

FLB456E TOPOSNA *requestparm* COMMAND HAS CONFLICTING PARAMETERS '*parameter1*' AND '*parameter2*'

Explanation

The TOPOSNA operator command contains conflicting parameters. Check for the following:

- Two parameters must not be specified together on the same command
- The same parameter is specified twice when only one occurrence is allowed
- The values specified for the two parameters are in conflict.

Message Variables***requestparm***

The name of the TOPOSNA request parameter

parameter1

The name of the first parameter

parameter2

The name of the second parameter.

System action

The command is ignored.

Operator response

Issue the operator command again using the correct parameters or with corrected values for the parameters. If you are not sure of the correct parameters, enter HELP TOPOSNA *requestparm*.

FLB457E TOPOSNA '*requestparm*' COMMAND IS UNKNOWN

Explanation

The TOPOSNA operator command is unknown to the SNA topology manager. The probable cause is that the TOPOSNA request parameter is misspelled.

Message Variables***requestparm***

The name of the unknown TOPOSNA request parameter

System action

The command is ignored.

Operator response

Issue the correct TOPOSNA operator command. If you are not sure of the correct commands for the SNA topology manager, enter HELP TOPOSNA.

FLB458E TOPOSNA *requestparm* COMMAND IS MISSING ONE OF THE FOLLOWING PARAMETERS '*parameters*'

Explanation

The TOPOSNA operator command is missing one or more parameters that are required for this command.

Message Variables***requestparm***

The name of the TOPOSNA request parameter

parameters

The names of the missing parameters separated by commas

System action

The command is ignored.

Operator response

Issue the TOPOSNA command again with the required parameters. If you are not sure of the required parameters for the command, enter HELP TOPOSNA *requestparm*.

FLB459E TOPOSNA *requestparm* COMMAND HAS A VALUE SPECIFIED FOR THE PARAMETER '*parameter*' WHERE NONE IS ALLOWED

Explanation

The TOPOSNA command has been entered with a value where no value is allowed.

Message Variables***requestparm***

The name of the TOPOSNA request parameter

parameter

The name of the parameter that must not have a value associated with it

System action

The command is ignored.

Operator response

Remove the unnecessary value and issue the command again. If you are not sure of the correct syntax, enter HELP TOPOSNA *requestparm*.

FLB460W THE CREATION OF AN EVENT FORWARDING DISCRIMINATOR FOR DEFINITIONGROUPS AT

**NODE *nodename* IS BEING
RETRIED**

Explanation

The SNA topology manager cannot create an Event Forwarding Discriminator at the agent node to receive Object Deletion Event Reports for definitionGroups. The error was considered recoverable. The SNA topology manager is retrying the creation of this Event Forwarding Discriminator at the agent node. The probable reason for the error is that the session from the NetView host to the agent node failed.

Message Variables

nodename

The control point name of the agent node

System action

The SNA topology manager retries to create the event forwarding discriminator.

FLB461E	SNA TOPOLOGY MANAGER IS UNABLE TO DETERMINE THE AGENT CP NAME FOR CROSS DOMAIN RESOURCE MANAGER '<i>CDRMname</i>' WITH OBJECT ID '<i>objectid</i>'
----------------	---

Explanation

The SNA topology manager cannot convert the RODM object ID of a crossDomainResourceManager to the SSCP name of the agent that it represents. This can happen for the following reasons:

- The realSSCPname field value of the crossDomainResourceManager object, and the third RDN (Relative Distinguished Name) of the MyName field are not network qualified.
- The realSSCPname field value of the crossDomainResourceManager object is null. The third RDN (Relative Distinguished Name) of the MyName field is not network qualified.

The situations above can occur when the following conditions exist concurrently:

- The topology agent has reported a crossDomainResourceManager to the SNA topology manager, *and*
- This crossDomainResourceManager does not contain a NETWORK statement in the CDRM major node, *and*
- This crossDomainResourceManager is not currently in session with the adjacent SSCP.

Message Variables

CDRMname

The name of the crossDomainResourceManager

objectid

The RODM object ID of the crossDomainResourceManager

System action

Monitoring is not started.

FLB462E	MONITORING OF SNA NETWORK TOPOLOGY FROM NODE <i>nodename</i> FAILED ALL RETRIES
----------------	--

Explanation

The SNA topology manager cannot start the monitoring of SNA network topology from the agent node. The error is considered recoverable but the topology manager has exceeded the retry limits for network topology. The retry limits are specified on the TOPOSNA SETDEFS operator command.

The probable cause of the error is one of the following:

- A session from the NetView host to the agent node cannot be established, or the session failed and cannot be established again.
- The agent node does not have a topology agent installed and running.
- The agent node control point name is incorrect; for example, the name was not typed correctly on the TOPOSNA MONITOR operator command.
- The agent node is not powered on or it does not exist in the network.
- The agent node is an end node; end nodes do not support requests for network topology.

Message Variables

nodename

The control point name of the agent node

System action

Monitoring is not started.

Operator response

Ensure that the agent node is a network node. If it is, see the messages in the NetView log to diagnose the error. You might be able to later start monitoring network topology from the agent node. Issue the TOPOSNA QUERYDEF operator command to determine if the retry limits must be increased. If you are unable to correct the problem, notify your system programmer.

System programmer response

See the error messages in the NetView log and to *IBM Z NetView Troubleshooting Guide* to diagnose and correct the error. Then start monitoring the network topology again. If necessary, contact IBM Software Support.

FLB463E	MONITORING OF SNA LOCAL TOPOLOGY FROM NODE <i>nodename</i> FAILED ALL RETRIES
----------------	--

Explanation

The SNA topology manager cannot start the monitoring of SNA local topology from the agent node. The error is considered recoverable but the topology manager has exceeded the retry limits for local topology that are specified on the TOPOSNA SETDEFS operator command.

The probable cause of the error is one of the following:

- A session from the NetView host to the agent node cannot be established, or the session failed and cannot be established again.
- The agent node does not have a topology agent installed and running.
- The agent node control point name is incorrect; for example, the name was not typed correctly on the TOPOSNA MONITOR operator command.
- The agent node is not powered on or it does not exist in the network.

Message Variables

nodename

The control point name of the agent node

System action

Monitoring is not started.

Operator response

See the messages in the NetView log to diagnose the error. You might be able to later start monitoring local topology from the agent node. Issue the TOPOSNA QUERYDEF operator command to determine if the retry limits must be increased. If you are unable to correct the problem, notify your system programmer.

System programmer response

See the error messages in the NetView log and to *IBM Z NetView Troubleshooting Guide* to diagnose and correct the error. Then start monitoring the local topology again. If necessary, contact IBM Software Support.

FLB464I	SNA TOPOLOGY MANAGER INITIALIZATION FILE CONTAINS A KEYWORD '<i>keyword</i>' WITH A NULL VALUE AS FIRST ENTRY
----------------	--

Explanation

The SNA topology manager initialization file FLBSYSD includes a keyword with a null value as the first entry. The keyword indicated in the message has no value assigned to it. All the subsequent entries are ignored and not processed by the SNA Topology Manager.

Message Variables

keyword

The keyword in the file that has no value assigned to it

System action

The SNA topology manager stores this keyword value as null value and ignores the rest of the entries for this keyword.

Operator response

Notify your system programmer.

System programmer response

Read the information provided in the initialization file FLBSYSD in the comment block before this keyword and take an appropriate action.

FLB465I	SNA TOPOLOGY MANAGER INITIALIZATION FILE CONTAINS A KEYWORD '<i>keyword</i>' WITH A DUPLICATE VALUE '<i>value</i>'
----------------	---

Explanation

The SNA topology manager encountered duplicate entries for the keyword specified in the initialization file FLBSYSD.

Message Variables

keyword

The keyword that was duplicated in the file

value

The value that was duplicated in the file

System action

Processing continues and the duplicate entry is ignored.

Operator response

Notify your system programmer.

System programmer response

Remove the duplicate entry from the FLBSYSD initialization file.

FLB466I	SNA TOPOLOGY MANAGER INITIALIZATION FILE CONTAINS A KEYWORD '<i>keyword</i>' WITH AN INVALID VALUE '<i>value</i>'
----------------	--

Explanation

The SNA topology manager encountered a entry that is not valid for the keyword specified in the initialization file FLBSYSD.

Message Variables

keyword

The keyword in the file that had a value that was not valid

value

The value of the keyword

System action

Processing continues and the entry that is not valid is ignored.

Operator response

Notify your system programmer.

System programmer response

Correct the entry in FLBSYSD and restart SNA topology manager. Check the comments in FLBSYSD for information concerning valid values for this specific keyword.

FLB467E	TOPOSNA <i>command</i> COMMAND REQUIRES A SINGLE VALUE FOR KEYWORD '<i>keyword</i>'
----------------	--

Explanation

This message indicates that a TOPOSNA command was entered with multiple keyword values and the specified keyword only supports a single value.

Message Variables

command

The name of the TOPOSNA command

keyword

The name of the incorrectly specified keyword

System action

The command has no effect.

Operator response

Issue the command again with a single value for the specified keyword.

FLB468E	THE FORMAT OF THE LU NAME IS INCORRECT. IT MUST BE NETID.CPNAME.NETID.LUNAME
----------------	---

Explanation

The format of the LU name that you entered in the TOPOSNA CRITICAL command is incorrect. It must be netid.cpname.netid.luname.

System action

The command is rejected.

Operator response

Issue the command again with the correct format for the LU name.

FLB472I	SNA TOPOLOGY MANAGER RODM ACTIVITY COUNTS FOLLOW:
----------------	--

Explanation

This is the first message in response to the TOPOSNA LISTRODM operator command, which lists RODM activity and object counts. The messages containing the information about the RODM activity and object counts follow this message. The topology manager issues message FLB477I when it has finished listing the information about its storage usages.

FLB473I	OBJ. LINK/ FLBTRST RODM
----------------	--------------------------------

Explanation

This message is the first line of the header for the output from the TOPOSNA LISTRODM command that lists RODM activity and object counts. This message is part of a multi-line message.

System action

Message FLB474I follows this message.

FLB474I	TYPE CREATE DELETE UPDATE QUERY UNLINK (STATUS) COUNT
----------------	--

Explanation

This message is the second line of the header for the output from the TOPOSNA LISTRODM command that lists RODM activity and object counts. This message is part of a multi-line message.

System action

Message FLB475I follows this message.

FLB475I -----

Explanation

This message is the third line of the header for the output from the TOPOSNA LISTRODM command that lists RODM activity and object counts. This message is part of a mult-line message.

System action

LISTRODM data follows this message.

FLB476I *objtype create delete update query
Inkunlnk flbtrst rodmcnt*

Explanation

This message is one of the data items in response to the TOPOSNA LISTRODM command that list RODM activity and object counts. This message is part of a multiple-line message.

Message Variables

objtype

The RODM object class

Following is a list of the RODM object classes:

CDRM
crossDomainResourceManager

DefG
definitionGroup

EN
appnEN

ICN
interchangeNode

LEN
lenNode

MDH
migrationDataHost

NN
appnNN

BrNN
Branch Network Node object

Sna
snaNode

T2.1
t2-1Node

T4
t4Node

T5
t5Node

VRN
virtualRoutingNode

Link
logicalLink

CDR
crossDomainResource

LU
logicalUnit

LUGr
luGroup

Port
port

TG
appnTransmissionGroup

ACir
appnTransmissionGroupCircuit

SCir
subareaTransmissionGroupCircuit

AggG
aggregateGraph2

AggC
circuit2

SnaL
snaLocalTopology

TOTL
Totals (not an object class)

create
The number of EKG_CreateObject calls issued against OBJ TYPE.

delete
The number of EKG_DeleteObject calls issued against OBJ TYPE.

update
The number of EKG_ChangeMultipleFields calls issued against OBJ TYPE.

query
The number of EKG_QueryField and EKG_QueryMultipleSubfields calls issued against OBJ TYPE.

Inkunlnk
The number EKG_LinkTrigger and EKG_UnlinkTrigger calls issued against OBJ TYPE.

flbtrst
The number of times the FLBTRST method was invoked for OBJ TYPE (indicates a status change occurred). The column contains a blank entry for aggregate objects (SCir, AggG, AggC, and SnaL).

rodmcnt

Indicates the current number of object instances of OBJ TYPE currently or previously known to the SNA Topology Manager since the SNA Topology Manager was last initialized (in other words, the SNA Topology Manager must have received a status report on this object by an ongoing or previous topology monitor in order for the object to be reflected in this count). Column will contain a blank entry for aggregate objects (SCir, AggG, AggC, and SnaL).

System action

LISTRODM data for RODM activity and object counts is included in this message.

FLB477I	END OF RODM ACTIVITY COUNTS-----

Explanation

The display of RODM activity and object counts from the LISTRODM command is complete.

FLB480E	SNA TOPOLOGY MANAGER FAILED TO CONNECT TO RODM 'rodname' BECAUSE OF A LACK OF STORAGE
----------------	--

Explanation

The SNA topology manager cannot obtain enough storage to connect to RODM during the topology manager's initialization.

Message Variables**rodname**

RODM name from the FLBSYSD initialization member

System action

The topology manager stops.

Operator response

Determine whether you received message BNH16I, which means the task has reached its storage limit. If so, notify your system programmer.

System programmer response

See the *IBM Z NetView Troubleshooting Guide* for possible causes of the storage shortage. If necessary, see the *IBM Z NetView SNA Topology Manager Implementation Guide* and the *IBM Z NetView Tuning Guide* for more information.

FLB481E

SNA TOPOLOGY MANAGER DISCOVERED THAT RODM 'rodname' IS TERMINATING/ QUIESCING

Explanation

The SNA topology manager received a reason code on a call to the RODM user API that indicates RODM is terminating or quiescing, or the RODM termination ECB has been posted.

Message Variables**rodname**

RODM name from the FLBSYSD initialization member

System action

The SNA topology manager reinitializes and attempts to connect to RODM on a timed basis.

Operator response

If RODM has stopped, restart RODM. If RODM is quiescing, wait until RODM has finished quiescing, then restart RODM.

FLB482E

SNA TOPOLOGY MANAGER ENCOUNTERED AN UNRECOVERABLE ERROR ON A CALL TO RODM 'rodname'

Explanation

The SNA topology manager received an unsatisfactory return code or reason code on a call to the RODM user API. The topology manager cannot recover from the error.

Message Variables**rodname**

RODM name from the FLBSYSD initialization member

System action

The topology manager stops.

Operator response

Notify your system programmer.

System programmer response

See the error messages in the NetView log and to *IBM Z NetView Troubleshooting Guide* to diagnose and correct the error. Also, check the RODM log for an error conditions generated by the APPNTM application (APPNTM is the user application ID used by SNA

topology manager to connect to RODM). Then restart the topology manager. If necessary, contact IBM Software Support.

FLB483W SNA TOPOLOGY MANAGER FAILED TO CONNECT TO RODM 'rodname' AND WILL RETRY the RODM named in the message.

Explanation

The SNA topology manager failed to connect. The SNA topology manager attempts to establish the RODM connection based on the RODM retry value settings.

The probable cause of the error is one of the following:

- RODM is not started.
- RODM has not completed its initialization.
- The RODM name in FLBSYSD is different than the active RODM name.
- The SNA topology manager is not authorized to use RODM.

Message Variables

rodname

RODM name from the FLBSYSD initialization member

System action

The SNA topology manager attempts to establish the connection to RODM, based on the RODM retry value settings or until the TOPOSNA STOPMGR command is issued.

Operator response

If RODM has not completed its initialization, the SNA topology manager establishes the connection to RODM when the initialization is complete. In this case, no action is necessary in response to this message.

FLB484W SNA TOPOLOGY MANAGER RECEIVED AN ERROR ON A CALL TO RODM 'rodname' AND WILL RETRY

Explanation

The SNA topology manager received an unsatisfactory return code or reason code from a call to the RODM user API. The error is considered recoverable and the topology manager will try the RODM call again. If the topology data model is loaded into RODM, the retry begins in 5 seconds and is repeated 10 times at 5-second intervals. If the topology data model is *not* loaded into RODM, the retry begins in 30 seconds and is repeated 10 times at 30-second intervals.

This retrying continues until the RODM call is successful or the topology manager exceeds the retry limits. If the retry limits are exceeded, the RODM call is treated as a failing call and further RODM processing is determined by RDMRETRY value settings (see TOPOSNA SETDEFS for additional information on RDMRETRY values).

The probable cause of the error is one of the following:

- RODM is stopping or has stopped.
- The topology data model is not loaded into RODM.

Message Variables

rodname

RODM name from the FLBSYSD initialization member

System action

The topology manager begins retrying after the first 5-second interval, or 30-second interval, as appropriate.

Operator response

If the topology manager retry attempts succeed, no further action is necessary. If all retry attempts fail, the topology manager will retry the current command based on RDMRETRY settings.

FLB485E SNA TOPOLOGY MANAGER FAILED ALL RETRIES WHEN CONNECTING TO OR CALLING RODM 'rodname'

Explanation

The SNA topology manager either attempted to connect to RODM, or attempted to call RODM, and received an error indication on all attempts. The error is considered recoverable but the topology manager has exceeded its retry limit of 10 times.

Message Variables

rodname

RODM name from the FLBSYSD initialization member

System action

The topology manager writes a related error message to the NetView log and continues RODM processing based on the RDMRETRY values (set by the TOPOSNA SETDEFS,RDMRETRY command).

Operator response

Notify your system programmer.

System programmer response

See the error messages in the NetView log and to the *IBM Z NetView Troubleshooting Guide* to diagnose and correct the error. The error messages in the NetView log include the RODM return code and reason code. If RODM has not been started, start it. If the RODM name indicated in this message does not match the name under which RODM was started, enter the correct RODM name in the topology manager FLBSYSD initialization member. If the topology manager is not authorized to use RODM, give it the proper authorization; the topology manager uses the application ID 'APPNTM' when connecting to RODM. Refer also to the *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide* for information about establishing a connection to RODM and RODM error conditions. Then, restart the topology manager. If necessary, contact IBM Software Support.

FLB486I	SNA TOPOLOGY MANAGER CALLED RODM '<i>rodname</i>' DURING A RODM CHECKPOINT AND WILL RETRY
----------------	--

Explanation

The SNA topology manager received a RODM checkpoint indication on a call to the RODM user API. The retry begins in 5 seconds and is repeated at 5-second intervals until the call is successful or the topology manager receives an error return code.

Message Variables

rodname

RODM name from the FLBSYSD initialization member

System action

The topology manager begins retrying to call RODM after the first 5-second interval.

Operator response

If the topology manager retry attempts succeed, no action is necessary in response to this message. If retry attempts fail because of an error, the topology manager issues message FLB485E.

FLB487W	THE 'DISPLAY RESOURCE OTHER DATA' FIELD WAS TRUNCATED FOR RODM OBJECT ID '<i>rodobjectid</i>'
----------------	--

Explanation

The DisplayResourceOtherData field in RODM is used to provide additional information to the user concerning various RODM objects. The corresponding

NMC display field is limited to 254 characters. For the specified RODM object, the data to be written to this field or to be appended to the existing data in this field, causes the total data length to exceed this limit. Therefore, the truncation character is inserted at position 254 and only the first 254 characters (including the truncation character) are displayed by NMC. However, the topology manager stores the complete value of the DisplayResourceOtherData field in RODM.

Message Variables

rodobjectid

The RODM object identifier of the object containing partial data in the DisplayResourceOtherData field

System action

The complete value of the DisplayResourceOtherData field is stored in RODM, but with the truncation character inserted at position 254.

Operator response

If required, use RODMVIEW or another RODM tool to view the complete DisplayResourceOtherData in RODM.

FLB490I	SNA TOPOLOGY MANAGER STORED DEFAULT VALUES IN RODM
----------------	---

Explanation

This message is in response to the TOPOSNA SETDEFS operator command to change topology manager defaults. The topology manager writes the default values to RODM and then issues this message.

System action

The new default values are in effect.

FLB491E	SNA TOPOLOGY MANAGER FAILED TO STORE DEFAULT VALUES IN RODM
----------------	--

Explanation

The SNA topology manager is unable to write the topology manager default values to RODM. This message is in response to the TOPOSNA SETDEFS operator command to change the default values. The operator command is ignored and the topology manager stops execution.

System action

The topology manager stops.

Operator response

Notify your system programmer.

System programmer response

See the error messages in the NetView log and to *IBM Z NetView Troubleshooting Guide* to diagnose and correct the error. Then start the topology manager again. If necessary, contact IBM Software Support.

FLB492I **'CLASS' KEYWORD ONLY APPLIES TO THE 'SIGNALS', 'UPDATE', AND 'RODM' TRACE CATEGORIES, 'CLASS' KEYWORD IS IGNORED**

Explanation

The TOPOSNA TRACE command was issued with the 'CLASS' keyword, but no applicable trace category was specified with the 'ON' or 'OFF' keyword.

System action

The 'CLASS' keyword is ignored, the rest of the TOPOSNA TRACE command is processed.

Operator response

Issue the command again, specifying a correct trace category along with the 'CLASS' keyword.

FLB493I **ERROR RETRY LIMIT: *limit***

Explanation

As part of the TOPOSNA QUERYDEF output, this message lists the command error-retry limit. If a command fails because of an SNA topology manager or RODM error, it is retried the specified number of times. If the command fails the specified number of times, the retries are stopped.

Message Variables

limit

The retry limit (valid range is 0–65535)

Operator response

To change the retry limit value, issue the TOPOSNA SETDEFS,ERRLIMIT=xxx command. Reducing the value fails any current commands that are in error retry status and have exceeded the new retry limit.

FLB494I **SNA TOPOLOGY MANAGER DEFAULT SETTINGS FOLLOW:**

Explanation

This is the first message that lists the topology manager defaults in response to the TOPOSNA

QUERYDEF operator command. Messages containing the topology manager default values follow this message.

System action

Processing continues.

FLB495I **MONITOR SNA LOCAL TOPOLOGY FOR NEW NETWORK NODES : *defaultset***

Explanation

This message shows the default setting for whether the topology manager must automatically monitor the SNA local topology for newly discovered network nodes. The default setting indicated in the message is YES or NO.

Message Variables

The default setting for monitoring SNA local topology from network nodes

System action

Processing continues.

FLB496I **MONITOR SNA LOCAL TOPOLOGY FOR NEW END NODES : *defaultset***

Explanation

This message shows the default setting for whether the topology manager must automatically monitor the SNA local topology for newly discovered end nodes. The default setting indicated in the message is YES or NO.

Message Variables

defaultset

The default setting for monitoring SNA local topology from end nodes

FLB497I **SNA NETWORK TOPOLOGY IMMEDIATE RETRY INTERVAL: *defaultset***

Explanation

This message shows the default setting for the immediate retry time interval in seconds for monitoring SNA network topology. When the topology manager fails to complete the initial transfer of network topology for a given agent node, the topology manager retries at the indicated interval of time. The default setting indicated in the message is the time interval in seconds.

Message Variables

defaultset

The default setting for the immediate retry time interval for monitoring SNA network topology

**FLB498I SNA NETWORK TOPOLOGY
IMMEDIATE RETRY LIMIT :
defaultset**

Explanation

This message shows the default setting for the immediate retry limit for monitoring SNA network topology. When the topology manager fails to complete the initial transfer of network topology for a given agent node, it retries up to the indicated limit of retries. The default setting indicated in the message is upper limit of the number of retries.

Message Variables**defaultset**

The default setting for the immediate retry limit for monitoring SNA network topology

**FLB499I SNA NETWORK TOPOLOGY LONG-
TERM RETRY INTERVAL :
defaultset**

Explanation

This message shows the default setting for the long-term retry time interval in seconds for monitoring SNA network topology. When the topology manager fails to complete the initial transfer of network topology for a given agent node and exceeds the number of immediate retries allowed, the topology manager retries at the indicated long-term interval of time. The default setting indicated in the message is the time interval in seconds.

Message Variables**defaultset**

The default setting for the long term retry time interval for monitoring SNA network topology

**FLB500I SNA NETWORK TOPOLOGY LONG-
TERM RETRY LIMIT : defaultset**

Explanation

This message shows the default setting for the long-term retry limit for monitoring SNA network topology. When the topology manager fails to complete the initial transfer of network topology for a given agent node and exceeds the number of immediate retries allowed, the topology manager retries up to the indicated long-term limit. The default setting indicated in the message is the upper limit of the number of retries.

Message Variables**defaultset**

The default setting for the long-term retry limit for monitoring SNA network topology

**FLB501I SNA LOCAL TOPOLOGY
IMMEDIATE RETRY INTERVAL :
defaultset**

Explanation

This message shows the default setting for the immediate retry time interval in seconds for monitoring SNA local topology. When the topology manager fails to complete the initial transfer of local topology for a given agent node, it retries at the indicated interval of time. The default setting indicated in the message is the time interval in seconds.

Message Variables**defaultset**

The default setting for the immediate retry time interval for monitoring SNA local topology

**FLB502I SNA LOCAL TOPOLOGY
IMMEDIATE RETRY LIMIT :
defaultset**

Explanation

This message shows the default setting for the immediate retry limit for monitoring SNA local topology. When the topology manager fails to complete the initial transfer of local topology for a given agent node, it retries up to the indicated number of retries. The default setting indicated in the message is the upper limit of the number of retries.

Message Variables**defaultset**

The default setting for the immediate retry limit for monitoring SNA local topology

**FLB503I SNA LOCAL TOPOLOGY LONG-
TERM RETRY INTERVAL: defaultset**

Explanation

This message shows the default setting for the long-term retry time interval in seconds for monitoring SNA local topology. When the topology manager fails to complete the initial transfer of local topology for a given agent node and exceeds the allowed number of immediate retries, the topology manager retries at the indicated long-term interval of time. The default setting indicated in the message is the time interval in seconds.

Message Variables

defaultset

The default setting for the long-term retry time interval for monitoring SNA local topology

FLB504I **SNA LOCAL TOPOLOGY LONG-TERM RETRY LIMIT : *defaultset***

Explanation

This message shows the default setting for the long-term retry limit for monitoring SNA local topology. When the topology manager fails to complete the initial transfer of local topology for a given agent node, and exceeds the number of immediate retries allowed, the topology manager retries up to the indicated long-term limit. The default setting indicated in the message is the upper limit of the number of retries.

Message Variables

defaultset

The default setting for the long-term retry limit for monitoring SNA local topology

FLB505I **SNA TOPOLOGY MANAGER TRACE MODE IS *tracemode***

Explanation

As part of the TOPOSNA TRACE,QUERY output, this message lists the trace mode.

Message Variables

tracemode

Possible values are:

INTERNAL

Trace mode is set to internal.

EXTERNAL

Trace mode is set to external (GTF).

Operator response

If the trace mode setting is incorrect, issue the TOPOSNA TRACE MODE=INT|EXT command to change the value.

FLB506I **SNA TOPOLOGY MANAGER INTERNAL TRACE BUFFER SIZE IS *size* PAGES**

Explanation

As part of the TOPOSNA TRACE,QUERY output, this message lists the size of the internal TOPOSNA trace buffer in pages where each page is equal to 4096 bytes.

Message Variables

size

Size in pages (4096 bytes per page)

Operator response

If the size of the internal trace buffer is not set to the correct value, issue the TOPOSNA TRACE,SIZE=xxx command to change it. Changing the value while the SNA topology manager internal trace is active is allowed, but if the new size is smaller than the previous size, only the most recent trace entries are retained.

FLB507E ***method_name* METHOD CANNOT OBTAIN NECESSARY STORAGE**

Explanation

The SNA topology manager method cannot get enough local storage for execution.

Message Variables

method_name

The name of the SNA topology manager method that cannot get enough local storage

System action

The SNA topology manager method stops executing. This can cause the current SNA topology manager operation (such as a TOPOSNA MONITOR) to end.

Operator response

Notify your system programmer.

System programmer response

Correct the shortage of storage in RODM. Restart any SNA topology manager operations that failed.

FLB508I **SNA TOPOLOGY MANAGER TRACE CLASS *class* IS *status***

Explanation

As part of the TOPOSNA TRACE,QUERY output, this message indicates whether the trace class is enabled (ON) or disabled (OFF).

Message Variables

class

The trace class

status

Indicates whether the trace category is enabled (ON) or disabled (OFF)

Operator response

If the trace class is not set properly, use the TOPOSNA TRACE command to set the class correctly.

**FLB525I SNA TOPOLOGY MANAGER TRACE
MODE IS EXTERNAL, 'SIZE'
KEYWORD IGNORED**

Explanation

The 'SIZE' keyword was specified with 'MODE=EXT' or the current tracing mode was external and 'MODE=INT' was not specified.

System action

The TOPOSNA TRACE command is executed, but the 'SIZE' keyword is ignored.

Operator response

If internal tracing mode is desired, enter the 'MODE=INT' and 'SIZE' keywords with the TOPOSNA TRACE command (TOPOSNA TRACE,MODE=INT,SIZE=*number*). Where, the variable *number* is the number of pages (4096 bytes) of memory you want for the internal trace buffer.

**FLB528I CMIP SERVICES RETRY
INTERVAL: interval**

Explanation

As part of the TOPOSNA QUERYDEF output, this message indicates the time (in seconds) between the attempts by the SNA topology manager to connect to CMIP Services when the CMIP Services connection is lost.

Message Variables***interval***

Interval of time in seconds between retries

Operator response

If the CMIP Services retry interval is not set properly, use the TOPOSNA SETDEFS CMPRETRY command to set the limit correctly.

**FLB529I CMIP SERVICES RETRY LIMIT:
limit**

Explanation

As part of the TOPOSNA QUERYDEF output, this message indicates the maximum number of times the SNA topology manager will attempt to connect to CMIP Services when the CMIP Services connection is lost.

Message Variables***limit***

The maximum number of retries

Operator response

If the CMIP Services retry limit is not set properly, use the TOPOSNA SETDEFS CMPRETRY command to set the limit correctly.

**FLB532I SNA TOPOLOGY MANAGER
INTERNAL TRACE TABLE SIZE
CHANGED TO *number* PAGES**

Explanation

The requested internal-trace table size for the SNA topology manager was processed.

Message Variables***number***

The number of pages of memory (rounded to the nearest page size), where one page equals 4096 bytes

System action

If the trace table size is larger than the previous utilized size, all previous internal trace entries remain in the table. If the trace table size is smaller than the previously utilized size, only the most recent entries that can fit in the new size are saved.

Trace table size is applicable only when the SNA topology manager tracing mode is internal.

Operator response

This is an informational message that shows when the TOPOSNA TRACE MODE=INT,SIZE=*number* command changes the trace table size. This command must be queued to the FLBTOPO autotask. Its completion might be delayed if the FLBTOPO autotask is busy processing other TOPOSNA commands.

**FLB533W SNA TOPOLOGY MANAGER
INTERNAL TRACE TABLE SIZE
WAS NOT CHANGED**

Explanation

The requested SNA topology manager internal-trace table size request was not processed because of a storage shortage.

System action

The internal-trace table size remains unchanged.

Operator response

Request less storage for the SNA topology manager internal-trace table. Allowable size range is 10–999 pages, where each page is 4096 bytes.

To determine the current internal-trace table size, issue the TOPOSNA TRACE,QUERY command.

System programmer response

If a larger internal trace table size is required, but cannot be allocated within the current virtual-storage limit of NetView program, increase the amount of virtual storage allocated to NetView program.

FLB534E **TOPOSNA *requestparm* COMMAND HAS INCORRECT RODM OBJECT ID '*rodmobjectid*'**

Explanation

The operator issued a TOPOSNA operator command with an incorrect RODM object identifier. The specified object ID is not in RODM.

Message Variables

requestparm

The name of the TOPOSNA request parameter

rodmobjectid

The RODM object identifier specified on the operator command

System action

The command is ignored.

Operator response

Enter the command again with the correct RODM object ID.

FLB540I **REQUESTED MONITORING OF LU COLLECTION FROM *nodename***

Explanation

The manager has sent the agent node a request to monitor its LU collection, or, if the specified node is a logical link, the logical link's LU collection. The agent responds with an initial transfer of data. When response is complete, the SNA topology manager issues message FLB552I. Following the initial transfer, the agent node sends updates as they occur. Monitoring continues until the TOPOSNA STOP operator command is issued or the monitor time specified on the TOPOSNA MONITOR operator command expires. If the SNA topology manager is stopped and warm-started, it resumes monitoring automatically.

Message Variables

nodename

The control point name of the agent node, or if you were monitoring a logical link's LU collection, the name of the logical link

System action

Monitoring is started.

Operator response

Look for message FLB552I to indicate that the initial transfer of data on the LU collection has completed.

FLB541W **OPERATOR *operid* STOPPED MONITORING LU COLLECTION FROM *nodename***

Explanation

The operator stopped monitoring all of the logical units owned, controlled, supported by or directly attached to the specified node by issuing a TOPOSNA STOP command. Monitoring stopped even if the initial transfer of LU collection data was not complete.

Message Variables

operid

The name of the operator who issued the TOPOSNA STOP command

nodename

The control point name of the agent node, or if you were monitoring a logical link's LU collection, the name of the logical link

System action

Monitoring is stopped.

FLB542E **MONITORING OF THE LU COLLECTION FROM NODE *nodename* FAILED**

Explanation

The SNA topology manager cannot start the monitoring of the LU collection associated with the specified node, cannot complete the initial transfer of LU collection data, or lost communications with the agent node after the initial transfer was complete. The error is considered unrecoverable and no retry occurs.

The probable cause of the error is a system error at the agent node.

Message Variables

nodename

The control point name of the agent node, or if you were monitoring a logical link's LU collection, the name of the logical link

System action

Monitoring ends and no retry occurs.

Operator response

See the messages in the NetView log to diagnose the error. If you are unable to fix the problem, notify your system programmer.

System programmer response

See the messages in the NetView log and to the *IBM Z NetView Troubleshooting Guide* to diagnose and correct the error. Refer also to the system error log at the agent node to determine whether an agent system error occurred; if it did, take the appropriate action to fix the problem at the agent node. Then restart monitoring of the LU collection. If necessary, contact IBM Software Support.

**FLB543W MONITORING OF THE LU
COLLECTION FROM NODE
nodename IS BEING RETRIED**

Explanation

The SNA topology manager started monitoring the LU collection associated with the specified node, but either cannot complete the initial transfer of LU collection data, or lost communications with the agent node after the initial transfer was complete. The error is considered recoverable and retry occurs immediately. The SNA topology manager retries until it successfully completes the initial transfer, exceeds the retry limits for LU collection, or encounters an unrecoverable error. The retry limits are specified on the TOPOSNA SETDEFS operator command.

The probable cause of the error is:

- The session from the NetView host to the agent node failed.
- The topology agent program has been stopped.
- The time interval specified on the MAXREPLY parameter of the NETVIEW DEFAULTS command expired before the initial transfer of LU collection data was complete.

Message Variables

nodename

The control point name of the agent node, or if you were monitoring a logical link's LU collection, the name of the logical link

System action

The SNA topology manager immediately begins retrying.

Operator response

See the messages in the NetView log to diagnose the error. If the error is because the time interval specified on the MAXREPLY parameter of the NETVIEW DEFAULTS command expired, increase the time interval in order to reduce the frequency of this condition. Otherwise, no action is necessary in response to this message. If the SNA topology manager cannot restart the monitoring, it will issue message FLB542E or FLB545E.

**FLB544W MONITORING OF THE LU
COLLECTION FROM NODE
nodename WILL BE RETRIED**

Explanation

The SNA topology manager cannot start the monitoring of the LU collection associated with the specified node. The error is considered recoverable and retries begin at the end of the first LU collection retry interval. The SNA topology manager retries until it successfully completes the initial transfer, exceeds the LU collection retry limits, or encounters an unrecoverable error. The retry intervals and limits are specified on the TOPOSNA SETDEFS operator command.

The probable cause of the error is:

- A session from the NetView host to the agent node cannot be established, or the session failed and cannot be established again.
- The agent node does not have a topology agent installed and running.
- The specified node does not exist in the network, or the node name was not typed correctly on the TOPOSNA MONITOR operator command.
- The agent node is not powered on or it does not exist in the network.

Message Variables

nodename

The control point name of the agent node, or if you were monitoring a logical links' LU collection, the name of the logical link

System action

The SNA topology manager will begin retrying after the LU collection retry interval.

Operator response

No action is necessary in response to this message. However, if the SNA topology manager cannot start the monitoring, it issues message FLB542E or FLB545E. You can force a new attempt to start

monitoring the LU collection at any time with the TOPOSNA MONITOR operator command. Otherwise, the SNA topology manager tries to restart the monitoring at intervals specified on the RETRY parameter of the TOPOSNA SETDEFS operator command.

**FLB545E MONITORING OF LU COLLECTION
FROM NODE *nodename* FAILED
ALL RETRIES**

Explanation

The SNA topology manager cannot restart the monitoring of the LU collection associated with the specified node. The error is considered recoverable, but the SNA topology manager has exhausted the LU collection retry limits. The retry limits are specified on the TOPOSNA SETDEFS operator command.

The probable cause of the error is:

- A session from the NetView host to the agent node cannot be established, or the session failed and cannot be established again.
- The agent node does not have a topology agent installed and running.
- The specified node does not exist in the network, or the node name was typed incorrectly on the TOPOSNA MONITOR operator command.
- The agent node is not powered on or it does not exist in the network.

Message Variables

nodename

The control point name of the agent node, or if you were monitoring a logical link's LU collection, the name of the logical link

System action

Monitoring is not restarted.

Operator response

See the messages in the NetView log to diagnose the error.

You might be able to start monitoring the LU collection later from the agent. Issue a TOPOSNA QUERYDEF operator command to determine if the retry limits must be increased. If you are unable to correct the problem, notify your system programmer.

System programmer response

See the messages in the NetView log and to the *IBM Z NetView Troubleshooting Guide* to diagnose and

correct the error. Then, monitor the LU collection again. If necessary, contact IBM Software Support.

**FLB546I SNA LU COLLECTION IMMEDIATE
RETRY INTERVAL: *defaultset***

Explanation

This message shows the default setting for the immediate retry time interval in seconds for monitoring a node's LU collection. When the SNA topology manager fails to complete the initial transfer of LU collection data for a given node, the SNA topology manager retries at the indicated interval of time.

Message Variables

defaultset

The default setting for the immediate retry time interval for monitoring a node's LU collection

**FLB547I SNA LU COLLECTION IMMEDIATE
RETRY LIMIT: *defaultset***

Explanation

This message shows the default setting for the immediate retry limit for monitoring a node's LU collection. When the SNA topology manager fails to complete the initial transfer of LU collection data for a given node, the SNA topology manager retries up to the indicated number of retries. The default setting indicated in the message is the upper limit for the number of retries.

Message Variables

defaultset

The default setting for the immediate retry limit for monitoring a node's LU collection

**FLB548I SNA LU COLLECTION LONG-TERM
RETRY INTERVAL: *defaultset***

Explanation

This message shows the default setting for the long term retry time interval in seconds for monitoring a node's LU collection. When the SNA topology manager fails to complete the initial transfer of LU collection data for a given node and exceeds the number of immediate retries allowed, it retries at the indicated long-term interval of time.

Message Variables

defaultset

The default setting for the long term retry time interval for monitoring a node's LU collection

**FLB549I SNA LU COLLECTION LONG-TERM
RETRY LIMIT: *defaultset***

Explanation

This message shows the default setting for the long-term retry limit for monitoring a node's LU collection. When the SNA topology manager fails to complete the initial transfer of LU collection data for a given node and exceeds the number of immediate retries allowed, it retries up to the indicated long-term limit. The default setting indicated in the message is the upper limit of the number of retries.

Message Variables

defaultset

The default setting for the long term retry limit for monitoring a node's LU collection

FLB552I	INITIAL TRANSFER OF LU COLLECTION DATA FROM NODE <i>nodename</i> IS COMPLETE
----------------	---

Explanation

The SNA topology manager has requested data on all logical units owned, controlled, supported by or directly attached to the specified node (its LU collection) as a result of the TOPOSNA MONITOR operator command, or because the SNA topology manager restarted monitoring during its warm-start processing. It has received all of the initial transfer of data from the agent node, and SNA topology manager has processed and stored topology data in the RODM data cache; updates might also have been received. The agent node continues to send updates to the manager as they occur, until monitoring is stopped by issuing the TOPOSNA STOP operator command.

Message Variables

nodename

The target name of the agent node

System action

Monitoring continues until a TOPOSNA STOP command is issued, the time specified on the MONTIME parameter of the TOPOSNA MONITOR command expires, or an error occurs that stops the monitoring.

FLB553I	SNA TOPOLOGY MANAGER STORAGE POOL STATISTICS FOLLOW
----------------	--

Explanation

This is the first message in response to the TOPOSNA LISTPOOL operator command. The TOPOSNA LISTPOOL command lists SNA topology manager internal storage-pool statistics. The end of the storage-pool statistics is indicated with message FLB558I.

System action

Messages FLB554I, FLB555I, FLB556I, FLB557I, and FLB558I follow this message.

FLB554I	STORAGE SIZE ALLOCATED USED ALLOCATED USED %
----------------	---

Explanation

This message is the first line of the header that results from the TOPOSNA LISTPOOL command to list SNA topology manager internal storage-pool statistics. This message is part of a multiple-line message.

System action

Message FLB555I follows this message.

FLB555I	TYPE IN BYTES COUNT COUNT STORAGE-K STORAGE-K USED
----------------	---

Explanation

This message is the second line of the header that results from the TOPOSNA LISTPOOL command to list SNA topology manager internal storage-pool statistics. This message is part of a multiple-line message.

System action

Message FLB556I follows this message.

FLB556I	----- -----
----------------	----------------

Explanation

This message is the third (last) line of the header that results from the TOPOSNA LISTPOOL command to list SNA topology manager internal storage-pool statistics. This message is part of a multiple-line message.

System action

Multiple FLB557I messages follow this message.

FLB557I	<i>storagetype size allocated-count used-count allocated-storage used- storage percentage-used</i>
----------------	---

Explanation

This message is one of the data items in response to the TOPOSNA LISTPOOL command that lists SNA topology manager internal storage-pool statistics. This message is part of a multiple-line message.

Message Variables

storagetype

The storage subpool type. The actual name of the type will vary depending upon the internal storage structure.

size

The size of the storage structure in bytes.

allocated-count

The number of allocated storage structures of this type.

used-count

The number of used storage structures of this type.

allocated-storage

The amount of storage in kilobytes allocated for this storage type.

used-storage

The used amount of storage in kilobytes allocated for this storage type.

percentage-used

The ratio of used storage to allocated storage for this storage type expressed as a percentage.

System action

Message FLB558I follows multiple FLB557I messages to indicate the end of data for the TOPOSNA LISTPOOL command.

FLB558I	END OF STORAGE POOL STATISTICS----- -----
----------------	--

Explanation

The display of SNA topology manager internal storage pool statistics is complete.

FLB560I	SNA TOPOLOGY MANAGER PENDING REQUESTS FOLLOW:
----------------	--

Explanation

This is the first message in response to the TOPOSNA LISTREQS operator command, which lists the pending requests the topology manager currently has with its agent nodes. The messages containing the information about the pending requests follow this message. The topology manager issues message FLB411I when it has finished listing the information about its pending requests or message FLB576I if there are no pending requests.

FLB561I	NODE LOCAL MONITOR MONITOR MONITOR
----------------	---

Explanation

This message is the first line of the header for the output from the TOPOSNA LISTREQS command that lists the outstanding monitors. The outstanding monitors are a result of the TOPOSNA MONITOR operator command. This message is part of a multiple-line message.

NODE NAME

The control point name of the agent node. This is the value entered for the NODE parameter of the TOPOSNA MONITOR operator command.

LOCAL NAME

The name of the logical link that the LU collection is processing. This value is entered for the LCLNAME parameter for the TOPOSNA MONITOR LUCOL operator command.

MONITOR TYPE

The type of monitor being processed. The possible types include: NETWORK, LOCAL, and LUCOL, which are entered on the TOPOSNA MONITOR operator command.

MONITOR STATUS

The status of the monitor being processed. The possible statuses include: REQUESTED, INCOMPLETE, COMPLETE and RETRY. For a definition of these statuses, see message FLB564I.

MONITOR TIME

The time that this monitor is in effect, or the time remaining before another retry of a monitor will occur.

System action

Message FLB562I follows this message.

FLB562I	NAME NAME TYPE STATUS TIME
----------------	-----------------------------------

Explanation

This message is the second line of the header for the output from the TOPOSNA LISTREQS command that lists the outstanding monitors. The outstanding monitors are a result of the TOPOSNA MONITOR operator command. This message is part of a multiple-line message.

NODE NAME

The control point name of the agent node. This is the value entered for the NODE parameter of the TOPOSNA MONITOR operator command.

LOCAL NAME

The name of the logical link that the LU collection is processing. This value is entered for the LCLNAME parameter for the TOPOSNA MONITOR LUCOL operator command.

MONITOR TYPE

The type of monitor being processed. The possible types include: NETWORK, LOCAL, and LUCOL, which are entered on the TOPOSNA MONITOR operator command.

MONITOR STATUS

The status of the monitor being processed. The possible statuses include: REQUESTED, INCOMPLETE, COMPLETE and RETRY. For a definition of these statuses, see message FLB564I.

MONITOR TIME

The time that this monitor is in effect, or the time remaining before another retry of a monitor will occur.

System action

Message FLB563I follows this message.

FLB563I -----

Explanation

This message is the third line of the header for the output from the TOPOSNA LISTREQS command that lists the outstanding monitors. The outstanding monitors are a result of the TOPOSNA MONITOR operator command. This message is part of a multiple-line message.

System action

LISTREQS data for outstanding monitors follows this message.

FLB564I *nodename localname monitortype
monitorstatus monitortime*

Explanation

This message is one of the data items in response to the TOPOSNA LISTREQS command that will list outstanding monitors that are being processed. This message is part of a multiple-line message.

Message Variables

nodename

The control point name of the agent node. This is the value entered for the NODE parameter of the TOPOSNA MONITOR operator command.

localname

The name of the logical link that the LU collection is processing. This value is entered for the LCLNAME parameter for the TOPOSNA MONITOR LUCOL operator command.

monitortype

The type of monitor being processed. The possible types include: NETWORK, LOCAL, and LUCOL, which are entered on the TOPOSNA MONITOR operator command.

monitorstatus

The status of the monitor being processed. The possible statuses include: REQUESTED, INCOMPLETE, COMPLETE and RETRY.

REQUESTED

The SNA topology manager has not yet received any of the initial transfer of topology data from the agent.

INCOMPLETE

The SNA topology manager has received some of the initial transfer of topology data from the agent node, but not all of it.

COMPLETE

The SNA topology manager has received all of the initial transfer of topology data from the agent node, and might have also received some topology updates.

RETRY

The SNA topology manager cannot start monitoring the topology from the specified agent node, or it started monitoring the topology from the agent node and cannot complete the initial transfer of data, or it lost communication with the agent node after the initial transfer was complete.

monitortime

The time that this monitor is in effect, or the time remaining before another retry of a monitor will occur.

x MINUTES

The monitor time-out value, in minutes, specified on the MONTIME parameter of the TOPOSNA MONITOR operator time. If the monitor status is REQUESTED or INCOMPLETE, this timer has not started. The timer will start when the SNA topology manager has received all of the initial transfer of topology data from the agent node. If the monitor status is COMPLETE, the time is the remaining amount of time, in minutes, until the SNA topology manager stops monitoring the topology from the agent node. You can issue the TOPOSNA STOP operator command to stop the monitoring before time expires.

x SECONDS

The remaining time, in seconds, until the SNA topology manager will retry to start monitoring the topology from the agent node.

CONTINUOUS

The agent node continues to send updates to the manager as they occur, until monitoring is stopped by issuing the TOPOSNA STOP operator command.

System action

LISTREQS data for outstanding monitors is included in this message.

FLB565I	END OF MONITOR REQUESTS----- -----
----------------	---

Explanation

The display of outstanding monitors from the LISTREQS command is complete.

FLB566E	SNA TOPOLOGY MANAGER DETECTED A DOUBLE FREE AT ADDRESS <i>hexaddr</i> FOR STORAGE TYPE <i>storagetype</i>
----------------	--

Explanation

The SNA topology manager storage-pool support encountered an internal processing error; a storage location was freed twice.

Message Variables

hexaddr

The hex address of the storage location in error

storagetype

The storage type name, that will match one of the storage types listed by the TOPOSNA LISTPOOL command

System action

SNA topology manager issues a user abend X'186', dump, then ends.

Operator response

Contact the system programmer.

System programmer response

Contact IBM Software Support; this message is only issued for a program defect.

FLB567E	SNA TOPOLOGY MANAGER DETECTED A <i>type</i> STORAGE OVERLAY AT ADDRESS <i>hexaddr</i> FOR STORAGE TYPE <i>storagetype</i>
----------------	--

Explanation

The SNA topology manager storage-pool support encountered an internal processing error. A storage location was overlaid.

Message Variables

type

The value GET or FREE to indicate the storage operation during which the overlay was detected

hexaddr

The hex address of the storage location in error

storagetype

The storage type name, which will match one of the storage types listed by the TOPOSNA LISTPOOL command

System action

SNA topology manager issues a user abend X'186', dump, then ends.

Operator response

Contact the system programmer.

System programmer response

Contact IBM Software Support; this message is only issued for a program defect.

FLB575I	<i>nodename</i> RECYCLE PORT <i>portname</i>
----------------	---

Explanation

The operator issued a TOPOSNA RECYCLE command. The SNA topology manager has instructed the agent node to recycle the logical link. When this message is issued, the topology manager has not received a response from the agent node indicating that the link has been recycled.

Message Variables

nodename

The control point name of the agent node

portname

The name of the port as it is known to the agent node

FLB576I	NO SNA TOPOLOGY MANAGER REQUESTS PENDING
----------------	---

Explanation

This is a message in response to the TOPOSNA LISTREQS operator command, which lists the pending requests the topology manager currently has with its

agent nodes. There are no requests currently pending at this time.

**FLB577I SNA TOPOLOGY MANAGER
STORAGE USAGE FOLLOWS:**

Explanation

This is the first message in response to the TOPOSNA LISTSTOR operator command, which lists the internal topology manager storage usage. The messages containing the information about the storage usages follow this message. The topology manager issues message FLB582I when it has finished listing the information about its storage usages.

**FLB578I RESOURCE CACHE1 CACHE2
TOTAL TOTAL**

Explanation

This message is the first line of the header for the output from the TOPOSNA LISTSTOR command that lists the internal topology manager storage usages. This message is part of a multiple-line message.

System action

Message FLB579I follows this message.

**FLB579I TYPE COUNT1 STORAGE-K
COUNT2 STORAGE-K STORAGE-K
MAXIMUM-K**

Explanation

This message is the second line of the header for the output from the TOPOSNA LISTSTOR command that lists the topology manager storage usages. This message is part of a multiple-line message.

System action

Message FLB580I follows this message.

**FLB580I -----
-----**

Explanation

This message is the third line of the header for the output from the TOPOSNA LISTSTOR command that lists the topology manager storage usages. This message is part of a multiple-line message.

System action

LISTSTOR data follows this message.

**FLB581I resource count1 cache1stor count2
cache2stor totstor maxstor**

Explanation

This message is one of the data items in response to the TOPOSNA LISTSTOR command that will list topology manager storage usages. This message is part of a multiple-line message.

Message Variables

resource

The storage resource type, which might correspond to a RODM object class.

The following RESOURCE TYPE entries do NOT correspond to RODM object classes, and only the COUNT1 column, the TOTAL STORAGE-K, and TOTAL MAXIMUM-K columns have data.

AttrSets

Attribute Sets, an internal representation of the fields (attributes) of a RODM object. The COUNT column represents the current number of allocated Attribute Sets.

X-AttrSets

Extended Attribute Sets, extra storage for attributes when the standard (above) version of attribute sets is not large enough to hold all of an objects attributes.

CritLUs

Critical LUs. The COUNT column represents the current number of Critical LUs being monitored.

NodeTable

Internal node lookup cache. The COUNT column represents the current number of node table entries.

RodmMain

RODM interface storage. The COUNT column will always be 1.

StatHist

Status History entries. The COUNT column indicates how many objects are currently maintaining a status history.

Heap

SNA topology manager C run-time heap utilization. The COUNT column indicates how many storage requests are currently allocated from the heap.

The following RESOURCE TYPE entries correspond to RODM object classes, and all columns are filled in. Note that some entries represent multiple RODM classes that share common storage. For instance, the TG/Circuit entry represents both TGs and Circuits for both the APPN and subarea versions.

CDRM

Cross Domain Resource Manager objects.

DefGroup
Definition group objects.

EN
End node objects.

ICN
Interchange node objects.

LEN
Low Entry Networking objects.

MDH
Migration Data Host objects.

NN
Network node objects.

SnaNode
SNA Node objects.

T2.1
T2.1 objects.

T4
T4 objects.

T5
T5 objects.

VRN
Virtual routing node objects.

Link
Logical link objects.

LU
Logical unit objects (includes logical unit, LU group, and Cross Domain Resource RODM classes).

Port
Port objects.

TG/Circuit
Transmission group and transmission group circuit objects (includes both subarea and APPN).

IntDomCirc
InterDomain circuit objects.

IntNetCirc
InterDomainNetwork Circuit Objects.

nnDomain
nnDomain objects.

nnDomNet
nnDomainNetwork objects.

SnaLocal
SnaLocal topology objects.

TOTAL
Totals.

count1

For the resources that do not correspond to RODM objects, represents the total count of that resource type. For resources that do correspond to RODM

objects, represents the total count of that object currently active in CACHE1 (note this value might differ from the COUNT2 field).

cache1stor

The amount of storage (in kilobytes) currently utilized by the RESOURCE TYPE in CACHE1.

count2

For the resources that do not correspond to RODM objects, no entry is made. For the resources that do correspond to RODM objects, represents the total count of that object currently active in CACHE2 (note this value might differ from the COUNT1 field).

cache2stor

The amount of storage (in kilobytes) currently utilized by the RESOURCE TYPE in CACHE2.

totstor

The total amount of storage currently utilized by the RESOURCE TYPE (note that for resources that have CACHE1 and CACHE2 entries, this value is the total of the CACHE1 and CACHE2 values).

maxstor

The maximum amount of storage that this RESOURCE TYPE has utilized (the highwater mark).

System action

LISTSTOR data for topology manager storage usages is included in this message.

FLB582I	END OF SNA TOPOLOGY MANAGER STORAGE USAGE-----
----------------	---

Explanation

The display of topology manager storage usages from the LISTSTOR command is complete.

FLB583W	TOPOSNA MONITOR COMMAND FOR LU COLLECTION AT LOGICAL LINK <i>linkname</i> IS TERMINATED BECAUSE THE LU COLLECTION IS BEING MONITORED FROM SSCP <i>sscpname</i>
----------------	---

Explanation

A monitor for the LU collection residing at a logicalLink was previously requested. Then the local topology from the same agent was requested. The SNA Topology Manager discovered that this logicalLink is multiply-owned. Thus, the logicalLink needs to be converted from a non-multiply-owned resource to a multiply-owned resource. However, the multiply-owned resource already has LU collection monitoring occurring from another agent node. Thus, the LU

collection is ended by the topology manager. Note that in message FLB541W, which follows this message, the operator will be 'FLBTOPO' because the SNA Topology Manager is forcing the stop monitor of the LU collection.

Message Variables

linkname

The name of the non-multiply-owned logicalLink whose LU collection monitoring was requested, in the form of netid.sscpname.linkname

sscpname

The name of the SSCP that is already monitoring the LU collection for this multiply-owned logicalLink.

System action

The TOPOSNA STOP command is executed for the LU collection at agent nodeName1 for logicalLink linkname.

Operator response

If you want to monitor the LU collection from the agent name in the first two parts of linkname, you must first stop the monitoring of the LU collection from the agent named sscpname. Use the following TOPOSNA STOP command to perform this task:

```
TOPOSNA STOP,LUCOL,NODE=netid.sscpname,
LCLNAME=linkname
```

Caution: The above command might stop the monitoring of an LU collection that was requested by another operator.

FLB584I **COMPLETED MONITORING LU COLLECTION DATA FROM NODE nodeName**

Explanation

The SNA topology manager has completed the requested monitoring of the LU collection at the specified node.

Message Variables

nodename

The name of the node whose LU collection the SNA topology has completed monitoring.

FLB585E **TOPOSNA MONITOR COMMAND FOR LU COLLECTION AT LOGICAL LINK linkname IS IGNORED BECAUSE THE LU COLLECTION IS ALREADY BEING MONITORED FROM SSCP sscpname**

Explanation

The SNA topology manager is already monitoring the LU collection of this logicalLink from a different SSCP than the current TOPOSNA MONITOR command is requesting. A logicalLink can be owned by more than one SSCP, but only one monitor for the LU collection is allowed.

If the TOPOSNA command was entered by selecting the logicalLink object on an NMC screen, the SNA topology manager will determine the SSCP name to use for logicalLinks that can be owned by more than one SSCP. The SNA topology manager selects the SSCP name to use by examining the status history records for this logicalLink and using the first SSCP name that reports this logicalLink as active. If the SSCP name is not the one that you want, you can override this name by specifying the SSCP name in a TOPOSNA MONITOR command, as shown below:

```
TOPOSNA MONITOR,LUCOL,NODE=netid.sscpname,
LCLNAME=linkname
```

Be sure to stop the monitoring of the LU collection from the current SSCP name if you desire to monitor the LU collection from a different SSCP name.

Message Variables

linkname

The name of the logicalLink whose LU collection monitoring was requested, in the form of netid.sscpname.linkname

sscpname

The name of the SSCP that is already monitoring the LU collection for this logicalLink.

System action

The TOPOSNA command is ignored.

Operator response

If you want to monitor the LU collection from the SSCP name that you entered (or was selected for you; see the explanation above), you must first stop the monitoring of the LU collection from the previous SSCP name. Use the following TOPOSNA STOP command to perform this task:

```
TOPOSNA STOP,LUCOL,NODE=netid.sscpname,
LCLNAME=linkname
```

Caution: The TOPOSNA STOP command might stop the monitoring of an LU collection that has been requested by another operator.

FLB586E **TOPOSNA STOP COMMAND IGNORED BECAUSE LU**

**COLLECTION OF NODE *nodename*
IS NOT BEING MONITORED**

Explanation

The SNA topology manager is not monitoring the LU collection of the specified node. The request to stop monitoring is ignored.

Message Variables

nodename

The name of the node whose LU collection monitoring was asked to be stopped.

System action

The TOPOSNA command is ignored.

FLB587E	TOPOSNA MONITOR COMMAND FOR LU COLLECTION AT LOGICAL LINK <i>linkname</i> IS IGNORED BECAUSE THE LOGICAL LINK IS MULTIPLY OWNED AND THERE IS NO STATUS HISTORY AVAILABLE TO SUPPLY THE SSCP NAME
----------------	---

Explanation

The SNA topology manager was requested to monitor the LU collection at a logicalLink. An object ID was specified on the TOPOSNA command. The logicalLink was determined to be potentially owned by more than one SSCP at a time. The name for this object in RODM does not contain an SSCP name for the agent to which commands will be sent. Therefore, the SNA topology manager queried its status history cache to find the agent that last reported this logicalLink as active. However, the SNA topology manager had no status history entries in its cache for this resource, because no topology agent has reported status on this object since the SNA topology manager was initialized.

Message Variables

linkname

The name of the logicalLink, the monitoring of whose LU collection was requested as *netid.linkname*.

System action

The TOPOSNA command is ignored.

Operator response

If you know the SSCP name to which you want this command sent, provide the SSCP name on the TOPOSNA command, as shown:

```
TOPOSNA MONITOR,LUCOL,NODE=netid.sscpname,  
LCLNAME=linkname
```

FLB588E

**SNA TOPOLOGY MANAGER'S
MONITORING OF CRITICAL LU
luname FAILED**

Explanation

This message might indicate either of two situations:

- The topology manager attempted to begin monitoring a logical unit or cross domain resource that you identified as critical (it is to be monitored continuously); however, the attempt failed. The failure might be caused by one of the following reasons:
 - The logical unit or cross domain resource that you specified in the TOPOSNA CRITICAL command does not exist in the network.
 - No session with the agent has been established or an existing session has failed.
 - There is no agent at the node to which the monitor request was directed.
 - The agent at the node to which the monitor request was directed is inactive or has failed.
 - The topology manager has an internal failure.
- The topology manager was monitoring a critical logical unit or cross domain resource, but the monitor has failed. The failure might be caused by one of the following reasons:
 - The resource is a dynamically created cross domain resource that has been inactivated.
 - The session with the agent has failed.
 - The topology manager has an internal failure.

Message Variables

luname

The name of the critical logical unit or cross domain resource that the topology manager was monitoring or attempted to monitor.

System action

Topology manager processing continues, but the specified logical unit, cross domain resource will not be monitored.

Operator response

If the resource in question was a dynamically created cross domain resource, no action is required; you might however want to determine whether the inactivation was appropriate. Otherwise, check the accuracy of the logical unit or cross domain resource

name that you entered in the TOPOSNA CRITICAL command. If there is a typographical error, correct it and enter the command again. If it is correct and you believe that the problem comes from one of the other reasons listed in the explanation above, notify your system programmer.

System programmer response

Review the diagnostic messages in the NetView log. If indicated in the diagnostic messages, check the node that was the intended target of the monitor request and the communications to that node. If a topology manager internal failure is indicated, notify IBM Software Support.

FLB589E	SNA TOPOLOGY MANAGER COULD NOT LOCATE OR CREATE NODE <i>nodename</i> INTERNALLY
----------------	--

Explanation

The SNA topology manager's attempt to create an internal representation of the specified node failed, possibly because of a lack of storage.

Message Variables

nodename
The name of the node for which the topology manager attempted to create an internal representation

System action

Topology manager processing continues, but operations that are in progress relating to the specified node will be ended.

Operator response

Notify your system programmer.

System programmer response

Check for a storage shortage. If this is indicated, take the appropriate measures to relieve the shortage. If there is no storage shortage, collect all available diagnostic information from the NetView log and notify IBM Software Support.

FLB590I	SNA TOPOLOGY MANAGER CRITICAL LU LIST FOLLOWS:
----------------	---

Explanation

The operator has asked the SNA topology manager to list all the logicalUnits and crossDomainResources that it is monitoring continuously. That list follows.

System action

SNA topology manager lists the logicalUnits and crossDomainResources that it is monitoring continuously, along with the status of each monitor.

FLB591I	RESOURCE NAME RESOURCE TYPE MONITOR STATUS
----------------	---

Explanation

As part of a multiple-line message, this message is the header for the output from the TOPOSNA CRITICAL LIST command. That command lists the logicalUnits and crossDomainResources that SNA topology manager is monitoring continuously and the status of those monitors. The columns contain the following information:

RESOURCE NAME
The full name of the resource being monitored.

RESOURCE TYPE
The type of the resource being monitored. Possible values are **LU** (logicalUnit) and **CDRSC** (crossDomainResource).

MONITOR STATUS
The status of the monitor being processed. The possible statuses include MONITORING, REQUESTED, FAILED, and INITIALIZED. For an explanation of these statuses, see the message description for FLB593I.

System action

Processing continues.

FLB592I	-----

Explanation

As part of a multiple-line message, this message is the second line of the header for the output from the TOPOSNA CRITICAL LIST command.

System action

A list of the logicalUnits and crossDomainResources that the SNA topology manager is monitoring continuously follows this message.

FLB593I	<i>resname restype monstat</i>
----------------	---------------------------------------

Explanation

As part of a multiple-line message that is the output from the TOPOSNA CRITICAL LIST command, this message displays information relating to one of the logicalUnits or crossDomainResources that the SNA topology manager is monitoring continuously.

Message Variables

resname

The full name of the resource.

restype

The resource type. Possible values are: **LU** (logicalUnit) and **CDRSC** (crossDomainResource).

monstat

The status of the monitor. Possible values are:

MONITORING

SNA topology manager issued the monitor request and has received data in response

REQUESTED

SNA topology manager has issued the monitor request, but has not received a response

FAILED

SNA topology manager's attempt to monitor the resource failed

INITIALIZED

SNA topology manager is preparing to issue the monitor request, but has not yet issued it.

System action

Processing continues.

FLB594I	END OF CRITICAL LU LIST----- -----
----------------	---

Explanation

The display of logicalUnits and crossDomainResources that the SNA topology manager is monitoring continuously has completed.

System action

Processing continues.

FLB595I	REQUESTED MONITORING OF CRITICAL LU <i>luname</i>
----------------	--

Explanation

In order to begin continuous monitoring, SNA topology manager has issued the appropriate commands to the agent for the specified resource. No response has been received yet.

Message Variables

luname

The name of the logicalUnit or crossDomainResource that SNA topology manager has begun continuous monitoring

System action

Processing continues.

FLB596I	MONITORING OF CRITICAL LU <i>luname</i> ALREADY REQUESTED OR IN PROGRESS
----------------	---

Explanation

You asked the SNA topology manager to start continuous monitoring of the specified resource. The monitor for this resource is active and data is being reported, or SNA topology manager has requested data from the agent for the resource but has not yet received a response.

Message Variables

luname

The name of the logicalUnit or crossDomainResource that you asked SNA topology manager to monitor continuously

System action

Processing continues.

FLB597I	OPERATOR <i>operid</i> STOPPED MONITORING OF CRITICAL LU <i>luname</i>
----------------	---

Explanation

At the request of the specified operator, SNA topology manager has stopped continuous monitoring of the specified resource.

Message Variables

operid

The operator ID of the operator who requested SNA topology manager to stop continuous monitoring of the specified resource.

luname

The name of the logicalUnit or crossDomainResource that SNA topology manager has stopped monitoring continuously.

System action

Processing continues.

FLB598I	SNA TOPOLOGY MANAGER IS NOT CURRENTLY MONITORING ANY CRITICAL LUS
----------------	--

Explanation

You requested a list of logicalUnits and crossDomainResources that the SNA topology manager is continuously monitoring. Currently, the

SNA topology manager is not continuously monitoring these resources.

System action

Processing continues.

FLB599I	<i>lname</i> NOT FOUND AMONG CRITICAL LUS
----------------	--

Explanation

You asked the SNA topology manager to stop continuous monitoring of the specified logicalUnit or crossDomainResource. The SNA topology manager did not find that resource among the logicalUnits and crossDomainResources that it is monitoring continuously.

Message Variables

lname

The name of the logicalUnit or crossDomainResource that you asked SNA topology manager to stop monitoring

System action

Processing continues.

FLB600E	PROBEID <i>probeid</i> MAJOR CODE <i>majcode</i> MINOR CODE <i>mincode</i> LOG DATA SIZE : <i>numbytes</i> BYTES
----------------	---

Explanation

This message contains information associated with an error detected by a component of the SNA topology manager. The message is sent only to the NetView log.

If log data is associated with this log entry, FLB600E is the first part of a multiple-line message. The other messages that make up this multiple-line message (FLB603I and FLB604I) contain the data associated with this error. If log data is not associated with this log entry, FLB600E is the only message logged for this error.

Message Variables

probeid

The internal identification used by IBM Software Support. All messages for a log entry specify the same value.

majcode

The major code identifies the class of error and component.

mincode

The minor code identifies the specific type of error.

numbytes

The number of bytes of data associated with this error.

System action

Depends on the error.

System programmer response

See the preceding messages in the NetView log in conjunction with this message, and to messages FLB603I and FLB604I, if present, to determine the cause of the failure. See *IBM Z NetView Troubleshooting Guide* for more information on the cause of the error and the format of the log data and take corrective action.

FLB601W	PROBEID <i>probeid</i> MAJOR CODE <i>majcode</i> MINOR CODE <i>mincode</i> LOG DATA SIZE : <i>numbytes</i> BYTES
----------------	---

Explanation

This message contains information associated with an error detected by a component of the SNA topology manager. The message is sent only to the NetView log. This message is associated with errors from which the component attempts to recover by taking error-specific actions.

If log data is associated with this log entry, FLB601W is the first part of a multiple-line message. The other messages that make up this multiple-line message (FLB603I and FLB604I) contain the data associated with this error. If log data is not associated with this log entry, FLB601W is the only message logged for this error.

Message Variables

probeid

The internal identification used by IBM Software Support. All messages for a log entry specify the same value.

majcode

The major code identifies the class of error and component.

mincode

The minor code identifies the specific type of error.

numbytes

The number of bytes of data associated with this error.

System action

Depends on the error.

System programmer response

See the preceding messages in the NetView log in conjunction with this message, and to messages FLB603I and FLB604I, if present, to determine the cause of the failure. See the *IBM Z NetView Troubleshooting Guide* for more information on the cause of the error and the format of the log data, and take corrective action.

FLB602I	PROBEID <i>probeid</i> MAJOR CODE <i>majcode</i> MINOR CODE <i>mincode</i> LOG DATA SIZE : <i>numbytes</i> BYTES
----------------	---

Explanation

This message contains information associated with a normal event. The SNA topology manager component logs this message only to the NetView log. This message is logged, for example, when the topology manager receives APPN local topology data from an agent node, and the data contains an attribute the topology manager does not support.

If log data is associated with this log entry, FLB602I is the first part of a multiple-line message. The other messages that make up this multiple-line message (FLB603I and FLB604I) contain the data associated with this event. If log data is not associated with this log entry, FLB602I is the only message logged for this event.

Message Variables

probeid

The internal identification used by IBM Software Support. All messages for a log entry specify the same value.

majcode

The major code identifies the component.

mincode

The minor code identifies the type of information.

numbytes

The number of bytes of data associated with this event.

System programmer response

See messages FLB603I and FLB604I, if present, to obtain the data associated with this event. See *IBM Z NetView Troubleshooting Guide* for more information on the event and the format of the log data.

FLB603I	PROBEID <i>probeid</i> DATA offset: <i>data</i>
----------------	--

Explanation

This message is a part of a multiple-line message begun by message FLB600E, FLB601W, or FLB602I.

Message FLB603I logs some of the data associated with the error or event indicated by those messages. Additional FLB603I messages might follow, depending on the amount of additional data associated with the error or event being logged. The final piece of the data is logged by message FLB604I, which also indicates the end of the multiple-line message.

Message Variables

probeid

The internal identification used by IBM Software Support. All messages for a log entry specify the same value.

offset

Identifies what part of the additional data is supplied by this message. This is the byte offset of the beginning of the data in this message within the additional data.

data

Up to 32 bytes of data. The data from this message and from any additional FLB603I messages is combined with the data contained in the related message FLB604I to provide additional data associated with the error or event.

System programmer response

See the first message in this multiple-line message (either FLB600E, FLB601W, FLB602I) for the appropriate response. Combine the data contained in this message with the data from other related FLB603I messages, if present, and with the data in FLB604I to obtain the additional data associated with the error or event.

FLB604I	PROBEID <i>probeid</i> DATA offset: <i>data</i>
----------------	--

Explanation

This message is the final part of a multiple-line message begun by message FLB600E, FLB601W, or FLB602I. Message FLB604I logs the last (or only) piece of data associated with the error or event indicated by those messages.

Message Variables

probeid

The internal identification used by IBM Software Support. All messages for a log entry specify the same value.

offset

Identifies what part of the additional data is supplied by this message. This is the byte offset of the beginning of the data in this message within the additional data.

data

Up to 32 bytes of data. This data is combined with the data contained in related FLB603I messages, if present, to provide the additional data associated with the error or event.

System programmer response

See the first message in this multiple-line message (either FLB600E, FLB601W, FLB602I) for the appropriate response. Combine this data with the data contained in related FLB603I messages, if present, to obtain the additional data associated with the error or event.

FLB610I TASK *taskname* IS STARTING LOGOFF PROCESSING

Explanation

The task is starting its logoff processing in order to ensure that any connections to other components are properly disconnected.

Message Variables

taskname

The name of the task that is logging off

System action

The task begins its logoff processing.

FLB611I TASK *taskname* HAS COMPLETED ITS LOGOFF PROCESSING

Explanation

The task has completed its logoff processing.

Message Variables

taskname

The name of the task that has logged off

System action

The task ends.

FLB612E OPERATOR '*operid*' IS NOT AUTHORIZED TO ISSUE THE *command requestparm* COMMAND

Explanation

The operator issuing the SNA topology manager (TOPOSNA) command is not authorized to do so.

Message Variables

operid

The operator identification of the operator issuing the command

command

The name of the command

requestparm

The name of the request parameter the operator is not authorized to use

System action

The command is ignored.

Operator response

Notify your system programmer if you need authority to issue this command.

System programmer response

If appropriate, give the operator authority to use this command.

FLB613E OPERATOR '*operid*' IS NOT AUTHORIZED TO ISSUE THE *command requestparm* COMMAND WITH PARAMETER '*parameter*'

Explanation

The operator issuing the SNA topology manager (TOPOSNA) command is not authorized to use the indicated parameter of this command.

Message Variables

operid

The operator identification of the operator issuing the command

command

The name of the command

requestparm

The name of the request parameter

parameter

The parameter name the operator is not authorized to use

System action

The command is ignored.

Operator response

Issue the command without this parameter if the parameter is not required for the command. Notify your system programmer if you need authority to use this parameter of the command.

System programmer response

If appropriate, give the operator authority to use this parameter of the command.

**FLB614E OPERATOR '*operid*' IS NOT
AUTHORIZED TO ISSUE THE
command requestparm COMMAND
WITH PARAMETER '*parameter*'
AND VALUE '*value*'**

Explanation

The operator issuing the SNA topology manager (TOPOSNA) command is not authorized to use the indicated value of this parameter and command.

Message Variables***operid***

The name of the operator issuing the command

command

The name of the command

requestparm

The name of the request parameter

parameter

The name of the parameter

value

The value the operator is not authorized to use

System action

The command is ignored.

Operator response

Issue the command without this value or with a different value on the parameter. Notify your system programmer if you need authority to use this value on the parameter and command.

System programmer response

If appropriate, give the operator authority to use this value on the parameter and command.

**FLB615E AUTOMATED START OF TASK
taskname FAILED**

Explanation

The automation command list FLBCMIPA tried to start the autotask indicated in the message and failed all retry attempts. The probable cause is that the autotask is already started.

Message Variables***taskname***

The name of the autotask

System action

The command list FLBCMIPA does not start the autotask.

Operator response

Determine whether the autotask is already started and operational. If it is, no further action is required. If the autotask is started but it is not operational, wait for the autotask to end, or issue the EXCMD *taskname*, LOGOFF command to send the autotask a logoff command. After the autotask ends, or if the autotask is not started, issue the AUTOTASK OPID=*taskname* command to start the autotask. Otherwise, notify your system programmer.

System programmer response

See error messages in the NetView log to determine the cause of the error. Correct the error and start the autotask.

**FLB617E AN UNEXPECTED RETURN CODE
'*return_code*' WAS RECEIVED
WHEN AN AUTHORIZATION
CHECK WAS MADE FOR THE
'*cmdname*' '*requestparm*'
COMMAND**

Explanation

The specified operator command cannot be processed because of an unexpected error during a command authorization check.

Message Variables***return_code***

The return code from the CNMSCOP service

cmdname

The name of the SNA topology manager (TOPOSNA) command

requestparm

The name of the request parameter

System action

The command is ignored.

Operator response

Notify the person in your organization responsible for security administration that you are unable to issue the command.

System programmer response

Check the NetView log to determine if any other messages were issued that give an indication of what error occurred. See *IBM Z NetView Programming: PL/I and C* for a description of the CNMSCOP return code. If the cause of the error cannot be determined, contact IBM Software Support.

FLB620E	SNA TOPOLOGY MANAGER ENCOUNTERED AN ERROR ON A CALL TO RODM
----------------	--

Explanation

This message is the first line of a heading for a multiple-line message. This multiple-line message is displayed when an RODM MAPI error has been detected by the SNA topology manager method.

System action

Message FLB621E or FLB622E follows this message.

FLB621E	MAPI ERROR WAS ENCOUNTERED IN THE STATUS METHOD
----------------	--

Explanation

This message is the second line of a heading for a multiple-line message. This multiple-line message is displayed when an RODM MAPI error has been detected by the status method of the SNA topology manager.

System action

Message FLB623E follows this message.

FLB622E	MAPI ERROR WAS ENCOUNTERED IN THE EXCEPTION VIEW METHOD
----------------	--

Explanation

This message is the second line of a heading for a multiple-line message. This multiple-line message is displayed when an RODM MAPI error has been detected by the exception view method of the SNA topology manager.

System action

Message FLB623E follows this message.

FLB623E	F_ID RC REASON OBJECTID DISPLAY RESOURCE NAME
----------------	--

Explanation

This message is the third line of a heading for a multiple-line message. This multiple-line message is displayed when an RODM MAPI error has been detected by the SNA topology manager. The heading explanations follow:

F_ID

The RODM function ID.

RC

The RODM return code.

REASON

The RODM reason code.

OBJECTID

The RODM object ID. This is the object ID that the SNA topology manager method was processing when the RODM MAPI error occurred.

DISPLAY RESOURCE NAME

The name of the resource that the SNA topology manager method was processing when the RODM MAPI error occurred.

System action

Message FLB624E follows this message.

FLB624E	----- -----
----------------	----------------

Explanation

This message is the fourth line of a heading for a multiple-line message. This multiple-line message is displayed when an RODM MAPI error has been detected by the SNA topology manager.

System action

RODM MAPI error data follows this message.

FLB625E	<i>function_id return_code reason_code objectid drn</i>
----------------	---

Explanation

This message is one of the RODM MAPI errors that the SNA topology manager method detected. This message is part of a multiple-line message.

Message Variables

function_id

The RODM function ID that the SNA topology manager was executing when the RODM MAPI error occurred.

return_code

The RODM return code that the SNA topology manager received when an RODM MAPI function was executing. This variable contains NA when the RODM return code is not available to the SNA topology manager. This can occur for query field and trigger object independent customer method RODM functions.

reason_code

The RODM reason code that the SNA topology manager received when an RODM MAPI function was executing. When the RODM function is query field (1501), the reason code is an internal code rather than a RODM reason code.

objectid

The RODM objectid of the object that the SNA topology manager was processing when the RODM MAPI error occurred. This variable contains NA when the RODM MAPI error occurred when processing a RODM class rather than an RODM object.

drn

The DisplayResourceName of the object that the SNA topology manager was processing when the RODM MAPI error occurred. This variable contains the RODM class name when the RODM MAPI error occurred when processing a RODM class rather than a RODM object.

System action

For query field, query multiple subfield, and change multiple field RODM functions, the method stops executing the current object. For trigger object independent customer method RODM function, the SNA topology manager method execution continues. For query multiple subfield and change multiple field RODM functions, this might cause the current SNA topology manager operation (such as a TOPOSNA MONITOR) to end; or if the error is severe, this might cause the SNA topology manager to end.

Operator response

Notify your system programmer.

System programmer response

See the *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide* for the return code and reason code and, if possible, take corrective action. Otherwise, contact IBM Software Support.

FLB626E	ABOVE REASON CODE ENCOUNTERED WHEN INVOKING USER METHOD <i>method_name</i>
----------------	---

Explanation

This message provides more information for an RODM MAPI error that was displayed in message FLB625E. Message FLB626E is displayed when the SNA topology manager method attempted to trigger an object independent customer method. This message is part of a multiple-line message.

Message Variables***method_name***

The name of the customer object independent method that the SNA topology manager method attempted to invoke.

Operator response

Notify your system programmer.

System programmer response

See the *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide* for the return code and reason code and, if possible, take corrective action. Otherwise, contact IBM Software Support.

FLB627E	END OF MAPI RODM ERROR DISPLAY-----
----------------	--

Explanation

The display of RODM MAPI errors that were detected by the SNA topology manager method is complete.

FLB628E	ADDITIONAL MAPI ERRORS HAVE BEEN DETECTED BUT NOT DISPLAYED
----------------	--

Explanation

The SNA topology manager method detected additional RODM MAPI errors, but is not able to display the details of these additional errors. This message is part of a multiple-line message.

Operator response

Notify your system programmer.

System programmer response

See the *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide* for the return code and reason code displayed in message FLB625E of this multiple-line message. If possible take corrective action and retry the operation. This operation can be a TOPOSNA MONITOR, TOPOSNA CRITICAL, TOPOSNA REFRESH EXVIEW CLASS=, or NMC Locate Resource. If corrective action is not possible, contact IBM Software Support.

FLB629E	SNA TOPOLOGY MANAGER RECEIVED AN INVALID RESPONSE BLOCK FROM METHOD <i>method_name</i> FOR DRN <i>drn</i> OBJECTID <i>objectid</i>
----------------	---

Explanation

The SNA topology manager exception view RODM method invoked a customer exception view method successfully; however, the response block returned by the customer method is not valid.

Message Variables

method_name

The name of the customer object independent method

drn

The DisplayResourceName of the object being processed when the SNA topology manager exception view method detected the incorrect response block.

objectid

The RODM objectid of the object being processed when the SNA topology manager exception view method detected the incorrect response block.

System action

The response block from the customer method is ignored. Processing continues using the exception views defined in the FLBEXV initialization file.

Operator response

Notify your system programmer.

System programmer response

Verify that the customer method is formatting the RODM response block as documented in the sample C header file FLBTREM.

**FLB630E SNA TOPOLOGY MANAGER
RECEIVED MULTIPLE RESPONSE
BLOCK ERRORS FROM CUSTOMER
METHODS DURING EXCEPTION
VIEW PROCESSING**

Explanation

The SNA topology manager exception view RODM method invoked a customer exception view method successfully; however, the SNA topology manager method detected more than one response block error from more than one invocation of the customer method. This first response block error is displayed in message FLB629E. The incorrect response block might be from the same method as displayed in FLB629E or might be a different customer method.

Operator response

Notify your system programmer.

System programmer response

Correct the problem that was displayed in message FLB629E. Then issue TOPOSNA REFRESH EXVIEW CLASS= to invoke the customer method again.

FLB631E

**SNA TOPOLOGY MANAGER
DISCOVERED THAT RODM
rodm_name IS OUT OF STORAGE**

Explanation

The SNA topology manager received a RODM reason code that indicates that RODM is out of storage.

Message Variables**rodm_name**

The name of the RODM that the SNA topology manager is using

System action

The SNA topology shuts down.

Operator response

Notify your system programmer.

System programmer response

Correct the shortage of storage in RODM and restart the SNA topology manager, or restart the SNA topology manager and reduce the number of resources that the SNA topology must be monitoring.

FLB636W

**THE TRACE REQUEST SPECIFIES
THAT TRACING BE TURNED ON
BUT THE GTF TRACE CATEGORY
'tracecat' IS NOT ACTIVE**

Explanation

The TOPOSNA TRACE request specified ON for category 05E8. However, the attempt to start tracing on GTF failed, because either GTF is not started or the GTF trace category is inactive.

Message Variables**tracecat**

The GTF trace category for the TOPOSNA TRACE command, which is 05E8.

System action

The command is ignored, and tracing is not turned on.

Operator response

If GTF is not started, start it. Otherwise, start the GTF trace category.

FLB637E

**TASK taskname FAILED TO WRITE
TRACE DATA USING GTF
BECAUSE OF AN ERROR**

Explanation

An error occurred when the task *taskname* attempted to write trace data using GTF.

Message Variables

taskname

The task from which the trace command was issued

System action

The trace data is discarded.

Operator response

Notify your system programmer.

System programmer response

See error messages in the NetView log, and take appropriate action.

FLB650I	MONITOR SNA NETWORK TOPOLOGY FOR NEW T5 NODES: <i>defaultset</i>
----------------	---

Explanation

This message shows the default setting for whether the topology manager must automatically monitor the SNA network topology for newly-discovered t5 nodes. The default setting indicated in the message is YES or NO.

Message Variables

defaultset

The default setting for monitoring SNA network topology from t5 nodes

FLB651I	MONITOR SNA LOCAL TOPOLOGY FOR NEW T5 NODES: <i>defaultset</i>
----------------	---

Explanation

This message shows the default setting for whether the topology manager must automatically monitor the SNA local topology for newly discovered t5 nodes. The default setting indicated in the message is YES or NO.

Message Variables

defaultset

The default setting for monitoring SNA local topology from t5 nodes

FLB652E	A FAILURE OCCURRED WHEN THE SNA TOPOLOGY MANAGER SENT DATA TO TASK CNMTAMEL
----------------	--

Explanation

The SNA topology manager responded to a request from the CNMTAMEL task. However, when the topology manager sent the response to CNMTAMEL, CNMTAMEL responded with an error condition.

Operator response

Notify your system programmer.

System programmer response

See the error messages in the NetView log and to the *IBM Z NetView Troubleshooting Guide* to diagnose and correct the error. If necessary, contact IBM Software Support.

FLB660W	SNA TOPOLOGY MANAGER ENCOUNTERED AN INCLUDE ERROR '<i>code</i>' IN CUSTOMIZATION TABLE <i>table</i> WITH ENTRY '<i>record</i>'
----------------	---

Explanation

SNA topology manager encountered an error processing an include statement in the specified table.

Message Variables

code

The error code returned from CNMMEMR (CNMREADMEM).

table

The table for which this message was generated.

record

The record which was in error. This record might be from an included member.

System action

The SNA topology manager continues initialization and ignores the entry.

Operator response

Notify your system programmer.

System programmer response

Correct the error in the table using information from the return code. See *IBM Z NetView Programming: PL/I and C* for CNMMEMR return codes to help diagnose the problem. The problem might be in an included member.

FLB661W	SNA TOPOLOGY MANAGER CUSTOMIZATION TABLE <i>membername</i> CONTAINS A KEYWORD '<i>keyword</i>' WITH A NULL VALUE
----------------	---

Explanation

The SNA topology manager customization table includes keywords and associated values expressed as:

```
KEYWORD="value"
```

The keyword indicated in the message has no value assigned to it.

Message Variables

membername

The DSIPARM member name of the table that has a keyword in error: FLBOSIDS for the OSI-Display status table, FLBSRT for the Status Resolution table, or FLBEXV for the Exception View table.

keyword

The keyword in the table that has no value assigned to it

System action

The SNA topology manager skips the record and continues processing. The internal table will be created with missing data.

Operator response

Notify your system programmer.

System programmer response

Change the customization table so that the keyword has a valid value specified. Run the TOPOSNA REFRESH command to create the table again.

FLB662W	SNA TOPOLOGY MANAGER CUSTOMIZATION TABLE <i>membername</i> CONTAINS A KEYWORD '<i>keyword</i>' WITH AN INCORRECT VALUE '<i>value</i>'
----------------	--

Explanation

The SNA topology manager customization table includes keywords and associated values expressed as:

```
KEYWORD="value"
```

The keyword indicated in the message has an incorrect value assigned to it.

Message Variables

membername

The DSIPARM member name of the table that has a keyword in error: FLBOSIDS for the OSI-Display status table, FLBSRT for the Status Resolution table, or FLBEXV for the Exception View table.

keyword

The keyword in the table that has an incorrect value assigned to it.

value

The incorrect value that was specified for the keyword.

System action

The SNA topology manager skips the record and continues processing. The internal table will be created with missing data.

Operator response

Notify your system programmer.

System programmer response

Change the customization table so that the keyword has a valid value specified. Run the TOPOSNA REFRESH command to create the table again.

FLB663W	SNA TOPOLOGY MANAGER CUSTOMIZATION TABLE <i>membername</i> CONTAINS THE KEYWORD '<i>keyword</i>' MULTIPLE TIMES WITH THE SAME VALUE '<i>value</i>' FOR OBJECT CLASS <i>class</i>
----------------	---

Explanation

The SNA topology manager customization table includes keywords and associated values expressed as:

```
KEYWORD="value"
```

The keyword indicated in the message was specified multiple times for the object class contained in the message.

Message Variables

membername

The DSIPARM member name of the table that has a keyword in error: FLBOSIDS for the OSI-Display status table, FLBSRT for the Status Resolution table, or FLBEXV for the Exception View table.

keyword

The keyword in the table that was specified multiple times.

value

The value for *keyword* that was specified multiple times.

class

The object identifier of the class for which the keyword was specified multiple times.

System action

The duplicate keyword and associated value is ignored. The first keyword and value for that object class is used. Processing continues.

Operator response

Notify your system programmer.

System programmer response

Change the customization table so that the keyword is not duplicated for that object class. Run the TOPOSNA REFRESH command to create the table again.

FLB664W	SNA TOPOLOGY MANAGER CUSTOMIZATION TABLE membername CONTAINS A SYNTAX ERROR, DATA 'entry'
----------------	--

Explanation

Data was entered incorrectly in a SNA topology manager customization table.

Message Variables

membername

The DSIPARM member name of the table that has a syntax error: FLBOSIDS for the OSI-Display status table, FLBSRT for the Status Resolution table, or FLBEXV for the Exception View table.

entry

The entry in the table that contained the syntax error.

System action

SNA topology manager skips the record and continues processing. The internal table will be created with missing data and might incorrectly associate entries directly following the record-in-error with the wrong object class or resource.

Operator response

Notify your system programmer.

System programmer response

Change the customization table to correct the syntax error. Run the TOPOSNA REFRESH command to create the table again.

FLB665W	SNA TOPOLOGY MANAGER CUSTOMIZATION TABLE membername CONTAINS AN INVALID KEYWORD 'keyword'
----------------	--

Explanation

The SNA topology manager customization table includes keywords and associated values expressed as:

```
KEYWORD="value"
```

The keyword indicated in the message is not a valid keyword.

Message Variables

membername

The DSIPARM member name of the table that has a keyword in error: FLBOSIDS for the OSI-Display status table, FLBSRT for the Status Resolution table, or FLBEXV for the Exception View table.

keyword

The incorrect keyword in the table.

System action

The SNA topology manager skips the record in error and continues processing. The internal table will be created with missing data and might incorrectly associate entries directly following the record in error, with the wrong object class or resource.

Operator response

Notify your system programmer.

System programmer response

Change the customization table so that the keyword specified is a valid keyword. Run the TOPOSNA REFRESH command to create the table again.

FLB666W	SNA TOPOLOGY MANAGER CUSTOMIZATION TABLE membername DOES NOT CONTAIN ALL REQUIRED OBJECT CLASSES
----------------	---

Explanation

One or more required object classes are missing from a SNA topology manager customization table.

Message Variables

membername

The DSIPARM member name of the table that does not contain all required object classes: FLBOSIDS for the OSI-Display status table, FLBSRT for the Status Resolution table, or FLBEXV for the Exception View table.

System action

The SNA topology manager continues processing. The internal table will be created with missing data.

Statuses or views associated with the missing object classes might result in defaults that you might not want. For example, if the object class is missing from the OSI-Display status table, statuses received from an agent for a resource in that object class defaults to the unknown display statuses.

Operator response

Notify your system programmer.

System programmer response

Change the customization table to include the missing object classes. Run the TOPOSNA REFRESH command to create the table again.

FLB667W	SNA TOPOLOGY MANAGER CUSTOMIZATION TABLE membername DOES NOT SPECIFY A DEFAULT SET OF OSI/DISPLAY STATUS MAPPINGS FOR OBJECT CLASS class
----------------	---

Explanation

The initialization file FLBOSIDS does not contain a default set of OSI to DisplayStatus mappings for the object class listed in the message. This occurs when all sets of OSI to DisplayStatus mappings for this object class contain the RESOURCE keyword. There must be one set of OSI to DisplayStatus mappings without the RESOURCE keyword as the default set for this object class.

Message Variables

membername

The DSIPARM member name of FLBOSIDS

class

The object class that is missing in the information

System action

The SNA topology manager continues processing. The SNA topology manager internal copy of the FLBOSIDS table will be created with missing data.

Operator response

Notify your system programmer.

System programmer response

Change the customization table FLBOSIDS to include the set of OSI to DisplayStatus mappings for the object class listed in the message. Run the TOPOSNA REFRESH command to create the table again.

FLB668W	AN OSI STATUS OF 'status' WAS RECEIVED FOR RESOURCE
----------------	--

**resource IN CLASS class, BUT WAS
NOT FOUND IN CUSTOMIZATION
TABLE membername (statesIn-
statesOut)**

Explanation

The SNA topology manager received an OSI status from an agent or Resource Status Focal Point for a resource in the object class specified in the message. However, that OSI status was not found in the customization table specified in the message.

Message Variables

status

The OSI status that was received from an agent or Resource Status Focal Point. Browse member FLBOSIDS for a description of the OSI status.

The OSI status might have been overridden by a customer-provided RODM method. See the *IBM Z NetView SNA Topology Manager Implementation Guide* for a description on how to specify methods to override OSI status in the FLBOSIDS or FLBSRT initialization files.

An asterisk means that the SNA topology manager cannot interpret the OSI status. If the administrativeState, operationalState, or usageState contains a value that is not valid, a single asterisk is specified in its place. If availabilityStatus or proceduralStatus contain a X'FF', '*AS*' or '*PS*' are specified respectively. If any of the right three bits of proceduralStatus are '1'b, '**' is specified for each bit that is '1'b. If unknownStatus contains a value other than X'00' or X'01', '*UN*' is specified.

resource

The name of the resource for which the status was received.

class

The name of the class that did not contain the OSI status specified in the message.

membername

The DSIPARM member name of the table that did not contain the OSI status: FLBOSIDS for the OSI-Display status table or FLBSRT for the Status Resolution table.

statesIn

The hexadecimal representation of the OSI status that was received from an agent or Resource Status Focal Point, and sent to the SNA topology manager status method to calculate the DisplayStatus. If the resource is potentially multiply owned, this value is also used to resolve the overall status.

Some of the values might contain a X'FF' which means that the SNA topology manager will use the previous value reported. A value of X'FE' for nativeStatus will force the nativeStatus to a resting state of X'FF', which means that it is not currently set. See the 'states' field in the *IBM Z NetView Data Model Reference* for a description of this value.

This insert is not decoded and placed in the status insert.

statesOut

The hexadecimal representation of the OSI status that was actually used to calculate the DisplayStatus and resolved status (if the resource is multiply-owned).

When membername is FLBOSIDS and the resource is multiply-owned, this is the unresolved status used to find a match in the FLBOSIDS table. When membername is FLBOSIDS and the resource is not multiply-owned, this is the value used after all X'FF' values were replaced with the previous value.

When membername is FLBSRT, this is the OSI status that was received from an agent or Resource Status Focal Point that was not located in the FLBSRT table.

If a user method was specified in the FLBOSIDS or FLBSRT customization table, and the user method has overridden the OSI status value, this is the value after it was overridden and used to calculate DisplayStatus and resolved status (if the resource is multiply owned).

This is the value that was decoded and placed in the status insert.

System action

If the status was not found in the FLBOSIDS table, the display status is set to unknown. If the status was not found in the FLBSRT table, the resolved status that was calculated might not be the correct status.

Operator response

Notify your system programmer.

System programmer response

Change the customization table to include the OSI status for the appropriate object class.

FLB669W	SNA TOPOLOGY MANAGER CANNOT COMMUNICATE WITH THE RESOURCE STATUS FOCAL POINT
----------------	---

Explanation

The CNMTAMEL task is either not active or not a focal point.

System action

The SNA topology manager continues processing.

Operator response

Contact your system programmer.

System programmer response

Start the CNMTAMEL task as a focal point if you require status updates to be forwarded from the Resource Status Collectors and if you need the workstation to communicate with GMFHS.

FLB670I	SNA TOPOLOGY MANAGER HAS ESTABLISHED COMMUNICATIONS WITH THE RESOURCE STATUS FOCAL POINT
----------------	---

Explanation

The SNA topology manager has established or re-established communication with the Resource Status Focal Point.

System action

The SNA topology manager will continue executing.

FLB671W	SNA TOPOLOGY MANAGER CUSTOMIZATION TABLE <i>membername</i> DOES NOT SPECIFY A DEFAULT STATUS HIERARCHY FOR OBJECT CLASS <i>class</i>
----------------	---

Explanation

The initialization file FLBSRT does not contain a default status hierarchy for the object class listed in the message. This status hierarchy is used to resolve the status of a resource that can be reported by more than one topology agent. The warning condition occurs when all the status hierarchies for this object class also contain the RESOURCE keyword. There must be one status hierarchy without the RESOURCE keyword as the default status hierarchy for this object class.

Message Variables

membername

The DSIPARM member name of FLBSRT

class

The object class that is missing the information

System action

The SNA topology manager continues processing. The SNA topology manager internal copy of the FLBSRT table will be created with missing data.

Operator response

Notify your system programmer.

System programmer response

Change the customization table FLBSRT to include default status hierarchy for the object class listed in this message. Run the TOPOSNA REFRESH command to create the customization table again.

FLB672W	SNA TOPOLOGY MANAGER CUSTOMIZATION TABLE membername DOES NOT SPECIFY A DEFAULT EXCEPTION VIEW NAME FOR OBJECT CLASS class
----------------	--

Explanation

The initialization file FLBEXV does not contain a default exception view name for the object class listed in the message. This occurs when all the exception view names for this object class also contain the RESOURCE keyword. There must be one exception view name without the RESOURCE keyword that will be the default exception view name for this object class.

Message Variables

membername
The DSIPARM member name of FLBEXV

class
The object class that is missing the information

System action

The SNA topology manager continues processing. The SNA topology manager internal copy of the FLBEXV table will be created with missing data.

Operator response

Notify your system programmer.

System programmer response

Change the customization table FLBSRT to include default exception view name for the object class listed in the message. Run the TOPOSNA REFRESH command to create the customization table again.

FLB677E	SNA TOPOLOGY MANAGER FAILED TO CONNECT TO CMIP SERVICES retcode, retflag
----------------	---

Explanation

SNA Topology Manager received an error attempting to connect to VTAM CMIP Services.

Message Variables

retcode
The return code from a call to MIBConnect

retflag
The return flag from a call to MIBConnect

System action

The SNA topology manager ends.

Operator response

Notify your system programmer.

System programmer response

Refer to the appropriate manual in the z/OS Communications Server library for the meaning of the return code and flag.

FLB678W	SNA TOPOLOGY MANAGER FAILED TO CONNECT TO CMIP SERVICES AND WILL RETRY, CMIP SERVICES IS NOT ACTIVE
----------------	--

Explanation

The SNA topology manager received an error attempting to connect to the VTAM CMIP services, which indicated that the VTAM CMIP services are not active.

System action

The SNA topology manager attempts to reconnect to the VTAM CMIP services, based on the CMIP retry value settings or until the TOPOSNA STOPMGR command is issued.

Operator response

Start VTAM CMIP services. When VTAM CMIP services initialization is complete, the SNA topology manager will connect automatically.

FLB679W	SNA TOPOLOGY MANAGER CUSTOMIZATION TABLE table SPECIFIES EXVWNAME 'name' WHICH WAS NOT FOUND IN RODM
----------------	---

Explanation

SNA topology manager cannot find an Exception View in RODM with the name specified in FLBEXV.

Message Variables

table

The table that specified the EXVWNAME keyword (FLBEXV).

name

The value specified for the EXVWNAME keyword which cannot be found as an ExceptionView in RODM.

System action

The SNA topology manager continues initialization and ignores the entry.

Operator response

Notify your system programmer.

System programmer response

Correct the name of the view in FLBEXV so that it matches an ExceptionView in RODM. The name is case sensitive and must be an exact match. Refresh the table.

FLB680W	SNA TOPOLOGY MANAGER CUSTOMIZATION TABLE <i>table</i> SPECIFIES EXVWNAME '<i>name</i>' WHICH CONTAINS AN INVALID VALUE IN RODM FOR FIELD ExceptionViewName '<i>viewname</i>'
----------------	---

Explanation

SNA topology manager cannot find the Exception View indicated. However, the ExceptionViewName field is greater than 8 characters in length and cannot be used.

Message Variables

table

The table that specified the EXVWNAME keyword (FLBEXV)

name

The value that is specified for the EXVWNAME keyword, which was found in RODM

viewname

The value of the ExceptionViewName field found in RODM, which is too long

System action

The SNA topology manager continues initialization and ignores the entry.

Operator response

Notify your system programmer.

System programmer response

Correct the ExceptionViewName field in RODM so that it is 8 characters or less. Refresh the table.

FLB681E	SNA TOPOLOGY MANAGER ENCOUNTERED AN ERROR '<i>code</i>' READING A RECORD FROM CUSTOMIZATION TABLE <i>table</i>
----------------	---

Explanation

SNA topology manager encountered an error reading a record from the specified table.

Message Variables

code

The error code returned from CNMMEMR (CNMREADMEM)

table

The table for which this message was generated

System action

If the error occurred during SNA topology manager initialization, the SNA topology manager ends. If the error occurred as a result of a TOPOSNA REFRESH command, the command processing ends but the SNA topology manager continues.

Operator response

Notify your system programmer.

System programmer response

Correct the error in the table using information from the return code. See *IBM Z NetView Programming: PL/I and C* for CNMMEMR (CNMREADMEM) return codes to help diagnose the problem. The problem might be in an included member.

FLB682E	SNA TOPOLOGY MANAGER ENCOUNTERED AN ERROR '<i>code</i>' ATTEMPTING TO OPEN CUSTOMIZATION TABLE <i>table</i>
----------------	--

Explanation

SNA topology manager encountered an error opening the specified table.

Message Variables

code

The error code returned from CNMMEMO (CNMOPENMEM)

table

The table for which this message was generated

System action

If the error occurred during SNA topology manager initialization, the SNA topology manager ends. If the error occurred as a result of a TOPOSNA REFRESH command, the command processing ends but the SNA topology manager continues.

Operator response

Notify your system programmer.

System programmer response

Correct the error in the table using information from the return code. See *IBM Z NetView Programming: PL/I and C* for CNMMEMO (CNMOPENMEM) return codes to diagnose the problem.

FLB683I	SNA TOPOLOGY MANAGER INITIALIZATION FILE CONTAINS KEYWORD '<i>keyword</i>' WITH A CONFLICTING VALUE OF '<i>value1</i>'. VALUE OF '<i>value2</i>' IS USED
----------------	---

Explanation

This message relates to the FLBSYSD entries:

AGGREGATE_TO_CLUSTER
AGGREGATE_TO_NNDOMAIN_NETWORK
AGGREGATE_TO_NNDOMAIN

The possible values for these keywords are YES and NO. There is a hierarchy to the values. If AGGREGATE_TO_NNDOMAIN has a value of NO, AGGREGATE_TO_NNDOMAIN_NETWORK and AGGREGATE_TO_CLUSTER must also have a value of NO. If AGGREGATE_TO_NNDOMAIN_NETWORK has a value of NO, then AGGREGATE_TO_CLUSTER must have a value of NO.

If this hierarchy is not followed, this message will be issued and a value of NO will be used where appropriate (SNA topology manager initialization will continue with the substituted values).

Message Variables

keyword

One of the following keywords in FLBSYSD:

AGGREGATE_TO_CLUSTER
AGGREGATE_TO_NNDOMAIN_NETWORK
AGGREGATE_TO_NNDOMAIN

value1

This value is set to YES.

value2

This value is set to NO.

System action

The SNA topology manager will continue to initialize using the values as stated in the message.

Operator response

Correct the FLBSYSD entry in error by changing the keyword value to NO.

FLB684E	SNA TOPOLOGY MANAGER DISCOVERED THAT CMIP SERVICES IS TERMINATING
----------------	--

Explanation

The SNA topology manager received an indication that VTAM CMIP services is terminating.

System action

The SNA topology manager reinitializes and attempts to connect to the VTAM CMIP services, based on the CMIP retry value settings or until the TOPOSNA STOPMGR command is issued.

Operator response

Restart VTAM CMIP services.

FLB685W	NO ACTIVE PATH TO NODE <i>nodename</i> OR CMIP SERVICES NOT ACTIVE ON THIS NODE OR INCORRECT NODE NAME
----------------	---

Explanation

Request for topology to node *nodename* has failed because of one or more of the following reasons:

- There is no active path or session between these two control points.
- The CMIP services might not be active on node *nodename*, or CMIP services are not supported on this control point.
- This message is also issued if the *nodename* is incorrect.

Message Variables

nodename

The control point name of the node

System action

The SNA topology manager might retry this request.

System programmer response

Look at the NetView log for other messages. If the *nodename* is incorrect, stop the topology request.

Issue the topology request again with the correct *nodename*. If the *nodename* is correct, see if there is an active path or session from this control point to the *nodename* in this message. If there is an active path or session between the two control points check if the CMIP services are active. If the CMIP services are not active on this *nodename* activate the CMIP services. For session related problems, refer to the appropriate manual in the z/OS Communications Server library.

FLB686E SNA TOPOLOGY MANAGER DATA MODEL IS NOT COMPLETELY LOADED

Explanation

The SNA topology manager has been started and is initializing, but the SNA topology manager data model is not completely loaded into RODM. After the data model is completely loaded, initialization of the SNA topology manager continues.

System action

The SNA topology manager will retry the access to the RODM data cache based on the RODM_RETRY_INTERVAL and RODM_RETRY_LIMIT values in initialization file FLBSYSD. If this message is issued during a reinitialization, the values set by TOPOSNA SETDEFS,RDMRETRY will be used instead of the FLBSYSD values.

Operator response

Notify your system programmer.

System programmer response

If the SNA topology data model is not currently loading, load it into RODM. If the value of the SUPER_CLUSTER_VIEW_NAME keyword in FLBSYSD has been modified, the value in the MyName field of the Network_View_Class in member FLBTRDMA must also be modified (these values must be the same).

The GMFHS data model must be successfully loaded prior to loading the SNATM data model.

FLB687I SNA TOPOLOGY MANAGER ENCOUNTERED AN ERROR WHILE ATTEMPTING TO LOCATE RESOURCE '*resource*' FROM NODE '*node*'

Explanation

SNA topology manager encountered an error processing the locate resource request. Resource might or might not have been returned in conjunction with the request.

Message Variables

resource

The name of the resource that is entered in the locate resource window

node

The node to which the locate request was sent

System action

Resources that are found are returned to the operator.

Operator response

If the desired resource was not found, and CMIP Services is active at the specified node, contact your system programmer.

System programmer response

Look in the NetView log for related messages and probe IDs to diagnose the problem.

FLB688I SNA TOPOLOGY MANAGER WAS UNABLE TO INDIVIDUALLY MONITOR '*luname*', CMIP CREATE EFD FAILED

Explanation

SNA topology manager cannot individually monitor the specified LU because an error was received from the CMIP CREATE EFD request.

Message Variables

luname

The name of the Logical Unit that cannot be monitored

System action

The resource is displayed with an unknown status.

Operator response

If this is a VTAM Logical Unit and CMIP Services is active at node specified in the *luname*, then contact your system programmer. If this is not a VTAM logical Unit, then it cannot be monitored individually and this is normal processing.

System programmer response

Look in the NetView log for related messages and probe IDs to diagnose the problem.

FLB689I SNA TOPOLOGY MANAGER WAS UNABLE TO INDIVIDUALLY MONITOR '*luname*', CMIP GET FAILED

Explanation

SNA topology manager cannot individually monitor the specified LU because an error was received from the CMIP GET request.

Message Variables

luname

The name of the Logical Unit that cannot be monitored

System action

The resource is displayed with an unknown status.

Operator response

If this is a VTAM Logical Unit and CMIP Services is active at node specified in the *luname*, then contact your system programmer. If this is not a VTAM logical Unit, then it cannot be monitored individually and this is normal processing.

System programmer response

Look in the NetView log for related messages and probe IDs to diagnose the problem.

FLB690I **NODE *nodename1* OF CLASS *class* IS REPLACED WITH THE NODE *nodename2* WITH RODM OBJECT ID *rodmobjectid***

Explanation

The node was named with its subarea number in RODM and is either replaced in RODM with its real name in the same RODM class, or is merged with the new node if the new node already exists. For a VTAM node (t5Node in RODM), the new name is the SSCP name of the VTAM node. For a NCP node (t4Node in RODM), the new name is the NCP name.

The SNA topology manager creates an object in RODM named with its subarea number when the node is down level (VTAM release prior to V4R3, and NCP release prior to V7R1) and does not provide its real name when contacting adjacent nodes (see *IBM Z NetView SNA Topology Manager Implementation Guide* for more information). This change occurs when the SNA topology manager receives updated information about an existing node, where the new information provides the relationship between the subarea number and the real name.

For example:

- The *nodename1* named by netid.subarea (for example, NETA.00000001)
- The *nodename2* named by netid.name (for example, NETA.NCP1)

- An agent node first reports an adjacent node as *nodename1* and later reports this node as *nodename2* with its subarea number information. If netid is NETA and the subarea number is provided, the SNA topology manager replaces *nodename1* in RODM with *nodename2*.

Message Variables

nodename1

The old node that is named by its subarea number (netid.subarea_number).

nodename2

The new node that is named by its real name (netid.name).

class

The RODM class of the new node (*nodename2*). The new node can be created in the same class as the old node, or merged with an existing node that is already named with its real name.

rodmobjectid

The RODM object ID of the new node (*nodename2*).

System action

The SNA topology manager deletes the existing object named with its subarea number. The SNA topology manager either creates a new object in RODM with the updated name in RODM in the same class as the old node, or merges the old node into the new node if the new node already exists. The SNA topology manager preserves the links of the old node to other objects in RODM.

The SNA topology manager does not copy customer-defined fields from the old object to the updated object in RODM. Set the customer-defined fields for the new RODM object; see the *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide* for more information.

System programmer response

To enable the SNA topology manager to correctly name the node even when only the subarea number is provided, code the SN_to_NM parameter in the FLBSYSD initialization file.

FLB691E **NODE *nodename* IS AN END NODE, NETWORK MONITORING IS NOT SUPPORTED FOR END NODES**

Explanation

A network monitor command was issued against node *nodename*, but *nodename* is an end node and does not support network monitors (only local monitors are supported).

Message Variables

nodename

The name of the target node

System action

The network monitor command fails.

Operator response

Issue a local monitor command (TOPOSNA MONITOR, LOCAL,NODE=*nodename*) for topology information instead of a network monitor command.

FLB692W **SNA TOPOLOGY MANAGER
ENCOUNTERED A CMIP SERVICES
ERROR. TARGET NAME
'*targetname*'. SERVICE ERROR
CODE '*serviceErrorCode*'. ERROR
VALUE '*errorValue*'. GENERIC
VALUE '*genericValue*'. SENSE
CODE X'*senseCode*'.**

Explanation

The SNA topology manager attempted to send a CMIP request to an agent to begin a monitor operation, end a monitor operation, or locate an LU using one of the following:

- NMC locate resource function
- TOPOSNA CRITICAL command

The CMIP services responded with an error condition; either the agent node or CMIP services rejected the CMIP request.

Message Variables

targetname

The name of the node to which the SNA topology manager attempted to send a request, or the name of the resource that was the target of the request. The name will have one of the following formats:

- *netid.CP_name*
- *netid.CP_name.luName*
- *netid.CP_name.netid.luName*

The first two parts of the name are the agent name.

serviceErrorCode

A return code provided by CMIP services. Refer to the appropriate VTAM manual for a description of this code.

errorValue

The error value is an internal indicator used to map the CMIP error value into a contiguous set of error codes. The error value can be received from:

- CMIP responses
- CMIP rejects
- CMIP linked-replies

The following maps the SNA topology manager internal error value to its corresponding CMIP value ASN.1 label.

ASN.1 label

Defined in

0

The error is not a recognized CMIP error. This error is generated because either the SNA topology manager did not recognize the error value in the received CMIP response, or CMIP services cannot send the request to the agent node and generated an internal error.

1 unrecognizedAPDU

OSI Remote Operations (ISO 8072)

2 mistypedAPDU

OSI Remote Operations (ISO 8072)

3 badlyStructuredAPDU

OSI Remote Operations (ISO 8072)

4 duplicateInvocation

OSI Remote Operations (ISO 8072)

5 unrecognizedOperation

OSI Remote Operations (ISO 8072)

6 mistypedArgument

OSI Remote Operations (ISO 8072)

7 resourceLimitation

OSI Remote Operations (ISO 8072)

8 initiatorReleasing

OSI Remote Operations (ISO 8072)

9 unrecognizedLinkedID

OSI Remote Operations (ISO 8072)

10 linkedResponseUnexpected

OSI Remote Operations (ISO 8072)

11 unexpectedChildOperation

OSI Remote Operations (ISO 8072)

12 unrecognizedInvocation

OSI Remote Operations (ISO 8072)

13 resultResponseUnexpected

OSI Remote Operations (ISO 8072)

14 mistypedResult

OSI Remote Operations (ISO 8072)

15 errorResponseUnexpected

OSI Remote Operations (ISO 8072)

16 unrecognizedError

OSI Remote Operations (ISO 8072)

17 unexpectedError

OSI Remote Operations (ISO 8072)

- 18 mistypedParameter**
OSI Remote Operations (ISO 8072)
- 19 accessDenied**
OSI CMIP (ISO 9596)
- 20 classInstanceConflict**
OSI CMIP (ISO 9596)
- 21 complexityLimitation**
OSI CMIP (ISO 9596)
- 22 duplicateManagedObjInstance**
OSI CMIP (ISO 9596)
- 23 getListError**
OSI CMIP (ISO 9596)
- 24 invalidArgumentValue**
OSI CMIP (ISO 9596)
- 25 invalidAttributeValue**
OSI CMIP (ISO 9596)
- 26 invalidFilter**
OSI CMIP (ISO 9596)
- 27 invalidObjectInstance**
OSI CMIP (ISO 9596)
- 28 invalidScope**
OSI CMIP (ISO 9596)
- 29 missingAttributeValue**
OSI CMIP (ISO 9596)
- 30 mistypedOperation**
OSI CMIP (ISO 9596)
- 31 noSuchAction**
OSI CMIP (ISO 9596)
- 32 noSuchArgument**
OSI CMIP (ISO 9596)
- 33 noSuchAttribute**
OSI CMIP (ISO 9596)
- 34 noSuchEventType**
OSI CMIP (ISO 9596)
- 35 noSuchInvokeId**
OSI CMIP (ISO 9596)
- 36 noSuchObjectClass**
OSI CMIP (ISO 9596)
- 37 noSuchObjectInstance**
OSI CMIP (ISO 9596)
- 38 noSuchReferenceObject**
OSI CMIP (ISO 9596)
- 39 operationCancelled**
OSI CMIP (ISO 9596)
- 40 processingFailure**
OSI CMIP (ISO 9596)
- 41 setListError**
OSI CMIP (ISO 9596)
- 42 syncNotSupported**
OSI CMIP (ISO 9596)

genericValue

The processing failure error code is an internal indicator used to map the CMIP generic error values into a contiguous set of error codes. These generic error values are optional and are supplied when the CMIP request fails because of a processing failure (CMIP error value of processingFailure). The following maps the SNA topology manager internal generic error value to its corresponding CMIP generic error ID (ASN.1 label).

CMIP Generic Error ID (ASN.1 label) ASN.1 Object Identifier

0

The error response did not include a generic error, or the SNA topology manager did not recognize it.

1 actionCancelled
1.3.18.0.0.2253

2 associationLostError
1.3.18.0.0.2254

3 internalProcessingError
1.3.18.0.0.2255

4 memoryAllocationError
1.3.18.0.0.2256

5 objectDeletedError
1.3.18.0.0.2257

6 resourceDefinitionError
1.3.18.0.0.2258

7 stateCheckError
1.3.18.0.0.2259

8 createFailureNameBinding
1.3.18.0.0.2261

9 createFailureNoNameBinding
1.3.18.0.0.2262

10 deleteFailureNameBinding
1.3.18.0.0.2263

11 deleteFailureContdObjs
1.3.18.0.0.2264

12 deleteFailureForContdObjs
1.3.18.0.0.2265

13 snaDefinedError
1.3.18.0.0.2266

14 resourceProcessingError
1.3.18.0.0.2114

senseCode

The SNA sense code is provided when the request is rejected because of a CMIP processing failure (CMIP error value of processingFailure) and the CMIP generic error value indicates the problem was a SNA-defined error. Use the NetView SENSE

command to obtain a description of the sense code, including possible causes of the problem.

System action

The requested function fails. The SNA topology manager continues to process other requests. If the function was initiated by an operator command, the operator receives an error message.

The SNA topology manager automatically retries monitor operations that fail with the following CMIP error values:

- complexityLimitation
- processingFailure, without a CMIP generic error value
- processingFailure, CMIP generic error ID = actionCancelled
- processingFailure, CMIP generic error ID = associationLostError
- processingFailure, CMIP generic error ID = memoryAllocationError
- processingFailure, CMIP generic error ID = stateCheckError
- processingFailure, CMIP generic error ID = snaDefinedError, sense code = X'00000000'
- processingFailure, CMIP generic error ID = resourceProcessingError
- resourceLimitation
- initiatorReleasing

Operator response

Notify your system programmer.

System programmer response

Use the CMIP error value, the CMIP generic error value, and the SNA sense code to determine the cause of the problem. Correct the problem and retry the operation.

FLB693E	SNA TOPOLOGY MANAGER DETECTED A SEVERE ERROR CONDITION, BUT A STORAGE DUMP WAS NOT REQUESTED, PROBE <i>probeid</i> ABEND CODE X'<i>abendcode</i>'
----------------	--

Explanation

The SNA Topology Manager has detected a severe processing error condition but an user abend is not requested (FLBSYSD ABEND_AND_DUMP keyword is set to NO).

Message Variables

probeid

The hexadecimal probe identifier for IBM Software Support

abendcode

The hexadecimal abend code that would have been taken if the ABEND_AND_DUMP keyword in FLBSYSD was set to YES

System action

The SNA topology manager initiates shutdown and logoff.

System programmer response

See the NetView log for other messages and log entry. Contact IBM Software Support.

FLB694E	SNA TOPOLOGY MANAGER DETECTED A SEVERE ERROR CONDITION, ABEND X'<i>abendcode</i>' TAKEN FOR FLBTOPO TASK, PROBE <i>probeid</i>
----------------	---

Explanation

The SNA Topology Manager has detected a severe processing error condition and an user abend occurred. This user abend is taken when the ABEND_AND_DUMP keyword is set to YES in the FLBSYSD initialization file.

Message Variables

probeid

Hexadecimal probe identifier for IBM Software Support

abendcode

Hexadecimal abend code

System action

The topology manager abends.

System programmer response

See the NetView log for other messages and log entry. Contact IBM Software Support.

FLB695E	SNA TOPOLOGY MANAGER FAILED ALL RETRIES WHEN CONNECTING TO CMIP SERVICES
----------------	---

Explanation

The CMIP Services connection retry limit has been exceeded. This implies that the CMIP Services component of VTAM has not been started. This can be

verified by issuing the VTAM command D
NET,VTAMOPTS, OPTION=OSIMGMT.

System action

The SNA topology manager ends.

Operator response

The TOPOSNA SETDEFS,CMPPRETRY command can be
used to set the retry limit to a higher value if

necessary. Start the CMIP Services component of
VTAM.

System programmer response

Check to ensure that the VTAM CMIP Services
component is started prior to starting the SNA
topology manager or within the retry parameters.

Chapter 11. FLC Prefix Messages

FLC prefix messages are issued by MultiSystem Manager.

FLC000I **MESSAGE *message_number***
ISSUED, BUT THIS MESSAGE
DOES NOT EXIST IN MESSAGE
TABLE DSIMDMFL - CALL
IGNORED

Explanation

MultiSystem Manager attempted to issue the listed message, but cannot find the message member containing the message text.

Message Variables

message_number

The message number of the missing message

System action

The message is not displayed.

Operator response

Notify the system programmer.

System programmer response

If *message_number* is a user-coded message, add it to the message definition module. Otherwise, contact IBM Software Support.

FLC001E **UNABLE TO INITIALIZE**
MULTISYSTEM MANAGER.
MULTISYSTEM MANAGER *version*.
IS NOT COMPATIBLE WITH
NETVIEW *version*. RETURN CODE =
***return_code*.**

Explanation

The versions of MultiSystem Manager and NetView that are installed on your system are not compatible.

Message Variables

version

The version and release of MultiSystem Manager and NetView

return_code

The return code from the module

System action

- MultiSystem Manager cancels the INITTOPO command.

- MultiSystem Manager does not perform Network topology initialization.
- MultiSystem Manager status changes to INITIALIZATION_FAILED.

Operator response

Contact your system programmer.

System programmer response

Install a compatible version of MultiSystem Manager or NetView and reissue the INITTOPO command.

FLC002E **ALL GETTOPO COMMANDS FROM**
MULTISYSTEM MANAGER
INITIALIZATION FILE *file_name*
WILL NOT BE PROCESSED.

Explanation

The MultiSystem Manager topology manager is ENABLED, but an error occurred during the second phase of initialization.

Message Variables

file_name

The name of the MultiSystem Manager initialization file that is specified on the INITTOPO command

System action

The GETTOPO commands coded in the referenced MultiSystem Manager initialization file are not processed.

Operator response

Contact your system programmer.

System programmer response

Check the NetView log for messages FLC070E or FLC076E. If they were issued, an error occurred while attempting to create objects in RODM. See the description of messages FLC070E and FLC076E to solve the problem.

It is also possible that other FLC messages were generated if syntax errors were found in any of the GETTOPO statements in the MultiSystem Manager

initialization file. Check the NetView log for other FLC messages and take appropriate action.

If messages FLC070E and FLC076E were not generated, all of the GETTOPO statements in the MultiSystem Manager initialization file were coded incorrectly. Check the NetView log for associated FLC messages and take appropriate action.

Reissue the INITTOPO command once the problems have been resolved.

FLC003I **TRACE MODULE *module_name*.
data.**

Explanation

This message is generated whenever YES, ALL, ENTRY, or EXIT is entered for the GETTOPO TRACE= keyword.

Message Variables

module_name

The name of the module being traced by MultiSystem Manager.

data

The trace information related to the option specified on the TRACE= keyword. This is one or all of the following:

- For ALL, the trace information displayed for ENTRY, EXIT, and YES.
- For ENTRY, the parameter list passed to the module.
- For EXIT, the return code value when the module is exited.
- For YES, the RUNCMD command issued by *module_name*.

FLC006E **OBJECT REPRESENTING SERVICE
POINT *sp_name* DOES NOT EXIST
IN RODM. *command_name*
COMMAND ENDED IN MODULE
module_name WITH RETURN
CODE *return_code*.**

Explanation

A request was issued to retrieve topology data and status from a resource whose associated service point is not defined to RODM. The service point must be defined to RODM in order to send topology requests to resources reporting to the topology agent associated with this service point.

Message Variables

sp_name

The name of the service point to which the command was sent

command_name

The command that was issued

module_name

The name of the module that was running at the time the error was discovered

return_code

The return code from the module

System action

MultiSystem Manager cancels the command.

Operator response

1. Ensure that the service point name is spelled correctly.
2. If spelled incorrectly, fix the spelling error and reenter the command.
3. If this does not resolve the problem, or if the name was spelled correctly:
 - a. Issue the appropriate GETTOPO xxxONLY command for the network for which you are requesting topology data and status. This retrieves the topology data and status and adds it to RODM.
 - b. Retry the original command.
 - c. If the problem is still unresolved, contact your system programmer.

System programmer response

Determine that the correct service point name is specified on the GETTOPO command. Ensure that the topology information for this service point is in RODM. This is accomplished during MultiSystem Manager initialization or by issuing a GETTOPO command.

FLC008E **RUNCMD RETRY COUNT LIMIT OF
runcmd_retry_count EXCEEDED.
command_name COMMAND
ENDED IN MODULE *module_name*
WITH RETURN CODE *return_code*.**

Explanation

An error has occurred while processing a RUNCMD command. The command has been retried the number of times set by the RUNCMDRETRY initialization statement.

Message Variables

runcmd_retry_count

The retry count specified in the RUNCMDRETRY initialization file statement

command_name

The command that was issued

module_name
The name of the module that was running at the time the error was discovered

return_code
The return code from the module

System action
MultiSystem Manager cancels the command.

Operator response
Examine the associated RUNCMD failure messages to determine which commands have failed. Follow the recommended actions to resolve the problem. If the problem still exists, contact your System Programmer.

System programmer response

- Change the RUNCMDRETRY parameter for your network.
- Check the RUNCMD Timeout variable and update it if appropriate. See the DEFAULTS COSTIME command in *IBM Z NetView Command Reference Volume 1 (A-N)* for information on changing this value.

FLC010E **FIELD NAME LENGTH *field_length* IS NOT VALID. FUNCTION = *function*, OBJECT CLASS = *object_class*, OBJECT NAME = *object_name*, LAST VALID FIELD = *last_valid_field* *last_valid_type* *last_valid_value*, SERVICE POINT = *sp_name*, APPLICATION NAME = *application.element*.**

Explanation
This message is generated when the *field_length* specified has a value less than 1.

Message Variables

- field_length***
The length of the field name.
- function***
The function to be performed on the target object.
- object_class***
The RODM object class of the target object.
- object_name***
The RODM object name of the target object.
- last_valid_field***
The field name used in the last successful request.
- last_valid_type***
The RODM type used in the last successful request.

last_valid_value
The value used in the last successful request.

sp_name
The name of the service point to which the command was sent.

application.element
The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

System action
MultiSystem Manager cancels the command.

Operator response
Notify the system programmer.

System programmer response
Ensure the *field_length* is being calculated correctly and is greater than 1.

FLC011W **RESPONSE COMPLETE WITH NETWORK ERRORS AT SERVICE POINT *sp_name* WHILE PROCESSING RUNCMD *runcmd***

Explanation
A NetWare network error occurred while processing a NetWare QUERY STATUS command.

Message FLCE041W is received in conjunction with this message.

Message Variables

sp_name
The name of the service point to which the command was sent.

runcmd
The RUNCMD command containing the QUERY STATUS command.

System action
The MultiSystem Manager agent remains operational and GETTOPO commands are still processed.

Operator response
Issue the QUERY STATION ROUTES command at the failing server. If this command completes with errors, the NetWare IPX diagnostic services might not be completing successfully. Contact your NetWare system administrator for assistance.

FLC012W **GMFHS_AGGREGATE_**
OBJECTS_CLASS OBJECTS CAN
NOT USE THE DOMAIN LINK.
SERVICE POINT = *sp_name*,
APPLICATION NAME =
***application.element*. COMMAND**
ENDED IN MODULE *module_name*.

Explanation

This message is generated when the DOMAIN Link field is specified with a GMFHS_AGGREGATE_OBJECTS_CLASS Object. GMFHS does not support the domain link for its aggregate class. The MSM System View classes do support the domain link for aggregate classes.

Message Variables

sp_name

The name of the service point to which the command was sent.

application.element

The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

module_name

The name of the module that was running at the time the error was discovered.

System action

The MultiSystem Manager agent remains operational and GETTOPO commands are still processed.

Operator response

Notify the system programmer.

System programmer response

Find where the domain link is being built and change either the class name or the link name depending on what link is really wanted.

FLC013E **FIELD VALUE LENGTH**
***value_length* IS NOT VALID.**
FUNCTION = *function*, OBJECT
CLASS = *object_class*, OBJECT
NAME = *object_name*, FIELD =
***field_name field_type*, SERVICE**
POINT = *sp_name*, APPLICATION
NAME = *application.element*.
COMMAND ENDED IN MODULE
***module_name*.**

Explanation

This message is generated when the *value_length* specified is less than 1 and the *field_name* is a reserved keyword for a field that requires data.

Message Variables

value_length

The length of the value to be added to RODM.

function

The function to be performed on the target object.

object_class

The RODM object class of the target object.

object_name

The RODM object name of the target object.

field_name

The field name being used.

field_type

The RODM type being used.

sp_name

The name of the service point to which the command was sent.

application.element

The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

module_name

The name of the module that was running at the time the error was discovered.

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Ensure the calculation for *value_length* is correct and data is being sent for the field.

FLC014E **OBJECT NAME *object_name* WAS**
SPECIFIED BEFORE ANY OBJECT
CLASS WAS SPECIFIED. SERVICE
POINT = *sp_name*, APPLICATION
NAME = *application.element*.
COMMAND ENDED IN MODULE
***module_name*.**

Explanation

This message is generated when the *object_name* is specified before the object class, when building a target object.

Message Variables

object_name

The RODM object name of the target object.

sp_name

The name of the service point to which the command was sent.

application.element

The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

module_name

The name of the module that was running at the time the error was discovered.

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Ensure the object class is being built before the object name.

FLC015E **VALUE IS INCONSISTENT WITH DATA TYPE FOR FIELD *field_name* *field_type* *field_value*. FUNCTION = *function*, OBJECT CLASS = *object_class*, OBJECT NAME = *object_name*, SERVICE POINT = *sp_name*, APPLICATION NAME = *application.element*. COMMAND ENDED IN MODULE *module_name*.**

Explanation

This message is generated when the value sent by the agent for the *field_value* has a different data type than defined by the *field_type* value sent by the agent.

Message Variables

field_name

The field name being used.

field_type

The RODM type being used.

field_value

The value to be added to the RODM field.

function

The function to be performed on the target object.

object_class

The RODM object class of the target object.

object_name

The RODM object name of the target object.

sp_name

The name of the service point to which the command was sent.

application.element

The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

module_name

The name of the module that was running at the time the error was discovered.

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Ensure the value being sent for *field_type* matches the data type defined in RODM for that *field_name* and the value sent for the *field_value* is of the same type.

FLC016E **OBJECT CLASS *object_class* WAS SPECIFIED BEFORE A FUNCTION WAS SPECIFIED. FIELD = *field_name* *field_type* *field_value*, SERVICE POINT = *sp_name*, APPLICATION NAME = *application.element*, COMMAND ENDED IN MODULE *module_name*.**

Explanation

A function describes the action to perform on a RODM object. In the data stream, a function must be specified before any objects to be used by that function are specified.

Message Variables

object_class

The RODM object class of the target object.

field_name

The field name being used.

field_type

The RODM type being used.

field_value

The value to be added to the RODM field.

sp_name

The name of the service point to which the command was sent.

application.element

The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

module_name

The name of the module that was running at the time the error was discovered.

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Ensure that a function is specified before an object.

FLC017E **FLAG SPECIFIED FOR 'FROM' FIELD *link_from_field* IN LINK STRUCTURE IS NOT VALID. FUNCTION = *function*, OBJECT CLASS = *object_class*, OBJECT NAME = *object_name*, FIELD = *field_name field_type field_value*, SERVICE POINT = *sp_name*, APPLICATION NAME = *application.element*.**

Explanation

This message is generated when the option flag specified for the *link_from_field* is not valid. The option flag indicates the type of the value sent.

Message Variables**link_from_field**

The RODM link field name being used.

function

The function to be performed on the target object.

object_class

The RODM object class of the target object.

object_name

The RODM object name of the target object.

field_name

The field name being used.

field_type

The RODM type being used.

field_value

The value to be added to the RODM field.

sp_name

The name of the service point to which the command was sent.

application.element

The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Ensure the option flag sent is one of the valid values defined in the C toolkit or agent documentation.

FLC018E **FLAG SPECIFIED FOR OBJECT CLASS *link_class* IN LINK STRUCTURE IS NOT VALID. FUNCTION = *function*, OBJECT CLASS = *object_class*, OBJECT NAME = *object_name*, FIELD = *field_name field_type field_value*, SERVICE POINT = *sp_name*, APPLICATION NAME = *application.element*.**

Explanation

This message is generated when the option flag specified for the *link_class* is not valid. The option flag specifies the type of value sent.

Message Variables**link_class**

The RODM link class.

function

The function to be performed on the target object.

object_class

The RODM object class of the target object.

object_name

The RODM object name of the target object.

field_name

The field name being used.

field_type

The RODM type being used.

field_value

The value to be added to the RODM field.

sp_name

The name of the service point to which the command was sent.

application.element

The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Ensure the option flag sent is one of the valid values defined in the C toolkit or agent documentation.

FLC019E **FLAG SPECIFIED FOR OBJECT NAME = *link_object* IN LINK STRUCTURE IS NOT VALID. FUNCTION = *function*, OBJECT CLASS = *object_class*, OBJECT NAME = *object_name*, FIELD = *field_name field_type field_value*, SERVICE POINT = *sp_name*, APPLICATION NAME = *application.element***

Explanation

This message is generated when the option flag specified for the *link_object* is not valid. The option flag specifies the type of value sent.

Message Variables**link_object**

The RODM link object name.

function

The function to be performed on the target object.

object_class

The RODM object class of the target object.

object_name

The RODM object name of the target object.

field_name

The field name being used.

field_type

The RODM type being used.

field_value

The value to be added to the RODM field.

sp_name

The name of the service point to which the command was sent.

application.element

The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Ensure the option flag sent is one of the valid values defined in the C toolkit or agent documentation.

FLC020E **FLAG SPECIFIED FOR 'TO' FIELD *link_to_field* IN LINK STRUCTURE IS NOT VALID. FUNCTION = *function*, OBJECT CLASS = *object_class*, OBJECT NAME = *object_name*, FIELD = *field_name field_type field_value*, SERVICE POINT = *sp_name*, APPLICATION NAME = *application.element*.**

Explanation

This message is generated when the option flag specified for the *link_to_field* is not one of the valid choices. The option flag indicates the type of the *link_to_field*.

Message Variables**link_to_field**

The RODM link field name being used.

function

The function to be performed on the target object.

object_class

The RODM object class of the target object.

object_name

The RODM object name of the target object.

field_name

The field name being used.

field_type

The RODM type being used.

field_value

The value to be added to the RODM field.

sp_name

The name of the service point to which the command was sent.

application.element

The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Ensure the option flag sent is one of the valid values defined in the C toolkit or agent documentation.

FLC021E **VALUE FOR 'FROM' FIELD**
link_from_field IN LINK
STRUCTURE IS NOT VALID.
FUNCTION = function, OBJECT
CLASS = object_class, OBJECT
NAME = object_name, FIELD =
field_name field_type field_value,
SERVICE POINT = sp_name,
APPLICATION NAME =
application.element.

Explanation

This message is generated when the value specified for the *link_from_field* is not valid.

Message Variables**link_from_field**

The RODM link field name being used.

function

The function to be performed on the target object.

object_class

The RODM object class of the target object.

object_name

The RODM object name of the target object.

field_name

The field name being used.

field_type

The RODM type being used.

field_value

The value to be added to the RODM field.

sp_name

The name of the service point to which the command was sent.

application.element

The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Ensure a valid value is being used. If the C toolkit is being used, the valid values are a field name or a hexadecimal value in the range for field nicknames as listed in *MultiSystem Manager: Topology Agent Developer's Guide*. If the C toolkit is not being used an 8-byte hexadecimal number representing a field identifier can be used.

FLC022E **VALUE FOR OBJECT CLASS**
link_class IN LINK STRUCTURE IS
NOT VALID. FUNCTION = function,
OBJECT CLASS = object_class,
OBJECT NAME = object_name,
FIELD = field_name field_type
field_value, SERVICE POINT =
sp_name, APPLICATION NAME =
application.element.

Explanation

This message is generated when the value specified for the *link_class* is not a valid class name or a valid hexadecimal number in the range for class nicknames.

Message Variables**link_class**

The RODM link class.

function

The function to be performed on the target object.

object_class

The RODM object class of the target object.

object_name

The RODM object name of the target object.

field_name

The field name being used.

field_type

The RODM type being used.

field_value

The value to be added to the RODM field.

sp_name

The name of the service point to which the command was sent.

application.element

The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Ensure a valid value is being used. If the C toolkit is being used, the valid values are a class name or a hexadecimal value in the range for class nicknames as listed in *MultiSystem Manager: Topology Agent Developer's Guide*. If the C toolkit is not being used, an 8-byte hexadecimal number representing a field identifier can be used.

FLC023E **OBJECT ID *link_object_id* IN LINK STRUCTURE IS NOT VALID. FUNCTION = *function*, OBJECT CLASS = *object_class*, OBJECT NAME = *object_name*, FIELD = *field_name field_type field_value*, SERVICE POINT = *sp_name*, APPLICATION NAME = *application.element*.**

Explanation

This message is generated when the value specified for the object is not a 16-byte hexadecimal number and the option flag sent indicates that an object identifier is being specified.

Message Variables**link_object_id**

The RODM link object.

function

The function to be performed on the target object.

object_class

The RODM object class of the target object.

object_name

The RODM object name of the target object.

field_name

The field name being used.

field_type

The RODM type being used.

field_value

The value to be added to the RODM field.

sp_name

The name of the service point to which the command was sent.

application.element

The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Ensure a valid value is being used. If the C toolkit is being used, only object names are supported. If the C toolkit is not being used, ensure the value being sent is a 16-byte hexadecimal number.

FLC024E **VALUE FOR 'TO' FIELD *link_to_field* IN LINK STRUCTURE IS NOT VALID. FUNCTION = *function*, OBJECT CLASS = *object_class*, OBJECT NAME = *object_name*, FIELD = *field_name field_type field_value*, SERVICE POINT = *sp_name*, APPLICATION NAME = *application.element*.**

Explanation

This message is generated when the value specified for the *link_class* is not an 8-byte hexadecimal number and the option flag sent indicates that a field identifier is being specified.

Message Variables**link_to_field**

The RODM link field name being used.

function

The function to be performed on the target object.

object_class

The RODM object class of the target object.

object_name
The RODM object name of the target object.

field_name
The field name being used.

field_type
The RODM type being used.

field_value
The value to be added to the RODM field.

sp_name
The name of the service point to which the command was sent.

application.element
The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

System action
MultiSystem Manager cancels the command.

Operator response
Notify the system programmer.

System programmer response
Ensure a valid value is being used. If the C toolkit is being used, ensure a valid value was sent in the valid range for field nicknames, as specified in *MultiSystem Manager: Topology Agent Developer's Guide*. If the C toolkit is not being used, an 8-byte hexadecimal number indicating a field identifier can be used.

FLC025E **TIME STAMP** *time_stamp*
SPECIFIED FOR PURGE IS NOT
VALID. SERVICE POINT =
***sp_name*, APPLICATION NAME =**
***application.element*. COMMAND**
ENDED IN MODULE *module_name*.

Explanation
This message is generated when the *time_stamp* specified is not of the form *ddd hh mm ss*.

Message Variables

time_stamp
The time stamp in the form *ddd hh mm ss* (days hours minutes seconds).

sp_name
The name of the service point to which the command was sent.

application.element
The name of the network management application that processes the command string at this service

point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

module_name
The name of the module that was running at the time the error was discovered.

System action
MultiSystem Manager cancels the command.

Operator response
Notify the system programmer.

System programmer response
Ensure the value of *time_stamp* is in the correct format and that each value is in the correct range, as follows:

ddd
0–365 days

hh
0–23 hours

mm
00–59 minutes

ss
00–59 seconds

Minimum
:00 (0 seconds)

Default
1 day (24 hours)

FLC026E	TRACE PARAMETER <i>purge_trace</i> SPECIFIED FOR PURGE IS NOT VALID. SERVICE POINT = <i>sp_name</i>, APPLICATION NAME = <i>application.element</i>. COMMAND ENDED IN MODULE <i>module_name</i>.
----------------	--

Explanation
This message is generated when the *purge_trace* value specified is not a Y or an N.

Message Variables

purge_trace
Tells whether to trace the code or not.

sp_name
The name of the service point to which the command was sent.

application.element
The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

module_name
The name of the module that was running at the time the error was discovered.

System action
MultiSystem Manager cancels the command.

Operator response
Notify the system programmer.

System programmer response
Ensure the value being sent up is a Y or an N.

FLC027E	RESERVED FIELD <i>reserved_field</i> IS NOT VALID. FUNCTION = <i>function</i>, OBJECT CLASS = <i>object_class</i>, OBJECT NAME = <i>object_name</i>, SERVICE POINT = <i>sp_name</i>, APPLICATION NAME = <i>application.element</i>. COMMAND ENDED IN MODULE <i>module_name</i>.
----------------	--

Explanation
This message is generated when the value specified for the *reserved_field* is not one of the predefined values.

Message Variables

- reserved_field**
The reserved field indicating what action to perform.
- function**
The function to be performed on the target object.
- object_class**
The RODM object class of the target object.
- object_name**
The RODM object name of the target object.
- sp_name**
The name of the service point to which the command was sent.
- application.element**
The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.
- module_name**
The name of the module that was running at the time the error was discovered.

System action
MultiSystem Manager cancels the command.

Operator response
Notify the system programmer.

System programmer response
Ensure the value being sent is one of the Reserved field names found in *MultiSystem Manager: Topology Agent Developer's Guide*.

FLC028E	INVALID FIELD VALUE STRUCTURE. FUNCTION = <i>function</i>, OBJECT CLASS = <i>object_class</i>, OBJECT NAME = <i>object_name</i>, FIELD = <i>field_name</i> <i>field_type</i> <i>field_value</i>, SERVICE POINT = <i>sp_name</i>, APPLICATION NAME = <i>application.element</i>. COMMAND ENDED IN MODULE <i>module_name</i>.
----------------	--

Explanation
This message is generated when the requested number of bytes to get for a field value, is greater than the specified length of the structure.

Message Variables

- function**
The function to be performed on the target object.
- object_class**
The RODM object class of the target object.
- object_name**
The RODM object name of the target object.
- field_name**
The field name being used.
- field_type**
The RODM type being used.
- field_value**
The value to be added to the RODM field.
- sp_name**
The name of the service point to which the command was sent.
- application.element**
The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.
- module_name**
The name of the module that was running at the time the error was discovered.

System action
MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Ensure the lengths of the fields are being calculated correctly for this object, along with the length of the overall structure. The requested number of bytes to get is determined by the previous field length value. The length of the structure is the first length given before any information in the structure.

FLC029E **THE REQUESTED NUMBER OF BYTES *bytes_to_get* WOULD EXCEED THE BUFFER LENGTH *buffer_length*. BYTES RETURNED = *bytes_returned*, FUNCTION = *function*, OBJECT CLASS = *object_class*, OBJECT NAME = *object_name*, SERVICE POINT = *sp_name*, APPLICATION NAME = *application.element*. COMMAND ENDED IN MODULE *module_name*.**

Explanation

This message is generated when the requested number of bytes to get is greater than the overall length of the data available. The requested number of bytes to get is determined by the previous field length value.

Message Variables

bytes_to_get

The number of bytes to get for the field.

buffer_length

The length of the buffer which is in the first eight bytes of the data stream.

bytes_returned

The number of bytes read so far.

function

The function to be performed on the target object.

object_class

The RODM object class of the target object.

object_name

The RODM object name of the target object.

sp_name

The name of the service point to which the command was sent.

application.element

The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

module_name

The name of the module that was running at the time the error was discovered.

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Ensure the lengths of the fields are being calculated correctly for this object, along with the length of the overall buffer structure. If you are using the C toolkit verify that **flc_finish_func** is being called as the last thing before sending the data to the host.

FLC030E **NUMBER OF EXPECTED BYTES NOT FOUND. FUNCTION = *function*, OBJECT CLASS = *object_class*, OBJECT NAME = *object_name*, LAST VALID FIELD = *last_valid_field* *last_valid_type* *last_valid_value*, SERVICE POINT = *sp_name*, APPLICATION NAME = *application.element*. COMMAND ENDED IN MODULE *module_name*.**

Explanation

This message is generated when the number of expected bytes is not found in the data stream. Either the overall length of the buffer is incorrect or the data did not get completely built.

Message Variables

function

The function to be performed on the target object.

object_class

The RODM object class of the target object.

object_name

The RODM object name of the target object.

last_valid_field

The field name used in the last successful request.

last_valid_type

The RODM type used in the last successful request.

last_valid_value

The value used in the last successful request.

sp_name

The name of the service point to which the command was sent.

application.element

The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

module_name

The name of the module that was running at the time the error was discovered.

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Ensure the overall length of the buffer is being calculated correctly and that the data is being added to the buffer correctly.

FLC031E	HEX VALUE EXPECTED FOR CONTAINER LENGTH <i>buffer_length</i> . SERVICE POINT = <i>sp_name</i>, APPLICATION NAME = <i>application.element</i>. COMMAND ENDED IN MODULE <i>module_name</i>.
----------------	--

Explanation

This message is generated when the value specified for the *buffer_length* is not a valid 8-byte hexadecimal number.

Message Variables

buffer_length

The length of the buffer. *Buffer_length* is contained in the first 8-bytes of the data stream.

sp_name

The name of the service point to which the command was sent.

application.element

The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

module_name

The name of the module that was running at the time the error was discovered.

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Ensure the overall length of the buffer is being calculated correctly and added to the data stream as an 8-byte hexadecimal number. If you are using the C toolkit, call the **flc_finish_func** function which formats the *buffer_length* and places it in the buffer correctly.

FLC032E	HEX VALUE EXPECTED FOR PROTOCOL VERSION NUMBER <i>version</i> . SERVICE POINT = <i>sp_name</i>, APPLICATION NAME = <i>application.element</i>. COMMAND ENDED IN MODULE <i>module_name</i>.
----------------	---

Explanation

This message is generated when the value specified for the *version* is not a valid 4-byte hexadecimal number.

Message Variables

version

The version of the agent code running.

sp_name

The name of the service point to which the command was sent.

application.element

The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

module_name

The name of the module that was running at the time the error was discovered.

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Ensure the *version* is being added to the buffer as a 4-byte hexadecimal number. If you are using the C toolkit, call the **flc_finish_func** function which formats the *version* and places it in the buffer correctly.

FLC033E	HEX VALUE EXPECTED FOR SEQUENCE NUMBER <i>seq_number</i>. SERVICE POINT = <i>sp_name</i>,
----------------	--

APPLICATION NAME =
***application.element*. COMMAND**
ENDED IN MODULE *module_name*.

Explanation

This message is generated when the value specified for the *seq_number* is not a valid 8-byte hexadecimal number.

Message Variables

seq_number

The sequence number indicating which run command response contains the topology updates.

sp_name

The name of the service point to which the command was sent.

application.element

The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

module_name

The name of the module that was running at the time the error was discovered.

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Ensure the *seq_number* is being added to the buffer as an 8-byte hexadecimal number. If you are using the C toolkit, call the **flc_finish_func** function which formats the *seq_number* and places it in the buffer correctly.

FLC034E	HEX VALUE EXPECTED FOR FIELD NAME LENGTH <i>field_length</i> FUNCTION = <i>function</i>, OBJECT CLASS = <i>object_class</i>, OBJECT NAME = <i>object_name</i>, LAST VALID FIELD = <i>last_valid_field</i> <i>last_valid_type</i> <i>last_valid_value</i>, SERVICE POINT = <i>sp_name</i>, APPLICATION NAME = <i>application.element</i>.
----------------	---

Explanation

This message is generated when the value for the *field_length* is not a 4-byte hexadecimal number.

Message Variables

field_length

The length of the field name.

function

The function to be performed on the target object.

object_class

The RODM object class of the target object.

object_name

The RODM object name of the target object.

last_valid_field

The field name used in the last successful request.

last_valid_type

The RODM type used in the last successful request.

last_valid_value

The value used in the last successful request.

sp_name

The name of the service point to which the command was sent.

application.element

The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Ensure the *field_length* is being calculated correctly and added to the buffer as a 4-byte hexadecimal number.

FLC035E	HEX VALUE EXPECTED FOR FIELD TYPE <i>field_type</i>. FUNCTION = <i>function</i>, OBJECT CLASS = <i>object_class</i>, OBJECT NAME = <i>object_name</i>, LAST VALID FIELD = <i>last_valid_field</i> <i>last_valid_type</i> <i>last_valid_value</i>, SERVICE POINT = <i>sp_name</i>, APPLICATION NAME = <i>application.element</i>.
----------------	---

Explanation

This message is generated when the value for the *field_type* is not a 2-byte hexadecimal number.

Message Variables

field_type

The RODM type being used.

function

The function to be performed on the target object.

object_class

The RODM object class of the target object.

object_name

The RODM object name of the target object.

last_valid_field

The field name used in the last successful request.

last_valid_type

The RODM type used in the last successful request.

last_valid_value

The value used in the last successful request.

sp_name

The name of the service point to which the command was sent.

application.element

The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Ensure the *field_type* is being added to the buffer as a 2-byte hexadecimal number. If the C toolkit is being used the *field_type* will be converted to hexadecimal.

FLC036E **HEX VALUE EXPECTED FOR FIELD VALUE LENGTH *value_length* FUNCTION = *function*, OBJECT CLASS = *object_class*, OBJECT NAME = *object_name*, LAST VALID FIELD = *last_valid_field* last_valid_type last_valid_value, SERVICE POINT = *sp_name*, APPLICATION NAME = *application.element*.**

Explanation

This message is generated when the value for the *value_length* is not a 4-byte hexadecimal number.

Message Variables**value_length**

The length of the value to be added to RODM.

function

The function to be performed on the target object.

object_class

The RODM object class of the target object.

object_name

The RODM object name of the target object.

last_valid_field

The field name used in the last successful request.

last_valid_type

The RODM type used in the last successful request.

last_valid_value

The value used in the last successful request.

sp_name

The name of the service point to which the command was sent.

application.element

The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Ensure the *value_length* is being calculated correctly and added to the buffer as a 4-byte hexadecimal number.

FLC037W **CAN NOT AGGREGATE TO THE NETWORK VIEW CLASS OBJECT *link_object*. FUNCTION = *function*, OBJECT CLASS = *object_class*, OBJECT NAME = *object_name*, FIELD = *field_name* *field_type* *field_value*, SERVICE POINT = *sp_name*, APPLICATION NAME = *application.element*.**

Explanation

This message is generated when an aggregate link is attempted to the Network_View_Class object. There are no aggregation links defined to the Network_View_Class, so in this case, only the parent connection is made.

Message Variables

link_object

The RODM object to link the target object to.

function

The function to be performed on the target object.

object_class

The RODM object class of the target object.

object_name

The RODM object name of the target object.

field_name

The field name being used.

field_type

The RODM type being used.

field_value

The value to be added to the RODM field.

sp_name

The name of the service point to which the command was sent.

application.element

The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

System action

MultiSystem Manager agent remains operational and GETTOPO commands are still processed.

Operator response

Notify the system programmer.

System programmer response

Find where the aggregate link is being used with the Network_View_Class and change it to link to a different object, or use a different link.

FLC038E FIELD *field_name* *field_type* *field_value* SPECIFIED BEFORE ANY OBJECT WAS SPECIFIED. SERVICE POINT = *sp_name*, APPLICATION NAME = *application.element*. COMMAND ENDED IN MODULE *module_name*.

Explanation

This message is generated when *field_name*, *field_type* and *field_value* are specified before a target object is specified.

Message Variables

field_name

The field name being used.

field_type

The RODM type being used.

field_value

The value to be added to the RODM field.

sp_name

The name of the service point to which the command was sent.

application.element

The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

module_name

The name of the module that was running at the time the error was discovered.

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Ensure a target object is added to the buffer before any associated fields are specified. If you are using the C toolkit call the **target_object** function before adding fields.

FLC039E	NO OBJECTS SPECIFIED. FUNCTION = <i>function</i>, SERVICE POINT = <i>sp_name</i>, APPLICATION NAME = <i>application.element</i>. COMMAND ENDED IN MODULE <i>module_name</i>.
----------------	---

Explanation

This message is generated when a function that requires objects is specified but no target object is specified.

Message Variables

function

The function to be performed on the target object.

sp_name

The name of the service point to which the command was sent.

application.element

The name of the network management application that processes the command string at this service point. When multiple applications are supported

the format is *application.element*, where *element* is the name of the subapplication running.

module_name

The name of the module that was running at the time the error was discovered.

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Ensure a target object is specified after the function is specified.

FLC040I **OBJECT *object_name* AND ALL OF ITS LINKS WERE REMOVED.**

Explanation

The listed object and all of its links have been removed from RODM. The object's removal is subject to the Purge attribute and display-status criteria.

When a REMVOBJS command is issued with TRACE=YES, you might receive multiple FLC040I, FLC041I, and FLC042I messages tracing the removal of the object and its children.

Message Variables

object_name

The RODM object name

FLC041I **OBJECT *object_name* AND ITS LINKS WERE NOT REMOVED.**

Explanation

The listed object and its links were not removed from RODM. The object's removal is subject to the Purge attribute and display-status criteria. It is possible that some of the links met the criteria. In that case, you also receive message FLC042I for this object.

When a REMVOBJS command is issued with TRACE=YES, you might receive multiple FLC040I, FLC041I, and FLC042I messages tracing the removal of the object and its children. See the *IBM Z NetView User's Guide: NetView Management Console* for additional information concerning the removal of objects from RODM.

Message Variables

object_name

The RODM object name

FLC042I **THE LINK BETWEEN *object_name1* FIELD *field_name1* AND *object_name2* FIELD *field_name2* WAS REMOVED.**

Explanation

A link between the specified fields of two objects was removed. The link's removal is subject to the Purge attribute and display-status criteria. It is possible that some links did not meet the criteria. In that case, you also receive message FLC041I for this object.

When a REMVOBJS command is issued with TRACE=YES, you can receive multiple FLC040I, FLC041I, and FLC042I messages tracing the removal of the object and its children. See the *IBM Z NetView User's Guide: NetView Management Console* for additional information concerning the removal of objects from RODM.

Message Variables

object_name1

The RODM Object Name of the first object

field_name1

The RODM Field Name for the link of the first object

object_name2

The RODM Object Name of the second object

field_name2

The RODM Field Name for the link of the second object

FLC043I **MULTISYSTEM MANAGER PROCESSING HAS BEEN RESUMED.**

Explanation

MultiSystem Manager processing was suspended. The RESTOPO command has been issued to resume processing.

System action

MultiSystem Manager processes GETTOPO commands when they are issued.

FLC044I **MULTISYSTEM MANAGER PROCESSING HAS BEEN SUSPENDED.**

Explanation

The SUSPTOPO command has been issued to suspend MultiSystem Manager processing.

System action

MultiSystem Manager does not process GETTOPO commands.

FLC045E **MULTISYSTEM MANAGER HAS NOT BEEN INITIALIZED OR PROCESSING HAS BEEN SUSPENDED. *command_name* COMMAND ENDED IN MODULE *module_name* WITH RETURN CODE *return_code*.**

Explanation

A topology request was issued but MultiSystem Manager is currently unable to process the request. MultiSystem Manager has not been initialized, or processing has been suspended.

Message Variables

command_name

The command that was issued

module_name

The name of the module that was running at the time the error was discovered

return_code

The return code from the module

System action

MultiSystem Manager cancels the command.

Operator response

1. Issue the DISPTOPO command to determine the status of MultiSystem Manager.
 - If the status of the MultiSystem Manager is SUSPENDED:
 - a. Issue the RESTOPO command to resume processing.
 - b. Enter the topology request again.
 - If the MultiSystem Manager status is NEVER_INITIALIZED or INITIALIZATION_FAILED:
 - a. Issue the INITTOPO command to initialize the MultiSystem Manager.
 - b. Reenter the topology request.
2. If this does not resolve the problem, contact your system programmer.

System programmer response

If the INITTOPO command failed, look for coding errors in your MultiSystem Manager initialization file.

FLC046E

MULTISYSTEM MANAGER CANNOT BE RESUMED. *command_name* COMMAND ENDED IN MODULE *module_name* WITH RETURN CODE *return_code*.

Explanation

The RESTOPO command was issued to resume MultiSystem Manager processing, but MultiSystem Manager is not in SUSPENDED state.

Message Variables

command_name

The command that was issued

module_name

The name of the module that was running at the time the error was discovered

return_code

The return code from the module.

System action

MultiSystem Manager does not process the RESTOPO command.

Operator response

1. Issue the DISPTOPO command to determine the status of MultiSystem Manager. If MultiSystem Manager is already ENABLED, no further action is required.
2. If the status of the MultiSystem Manager is NEVER_INITIALIZED or INITIALIZATION_FAILED, issue the INITTOPO command to initialize MultiSystem Manager.
3. If the initialization fails, contact your system programmer.

System programmer response

1. Correct any coding errors in your MultiSystem Manager initialization file.
2. Reissue the INITTOPO command.

FLC047E

MULTISYSTEM MANAGER CANNOT BE SUSPENDED. *command_name* COMMAND ENDED IN MODULE *module_name* WITH RETURN CODE *return_code*.

Explanation

The SUSPTOPO command was issued to suspend MultiSystem Manager processing but the MultiSystem Manager is not in ENABLED state.

Message Variables

command_name The command that was issued		BEEN UPDATED FOR RESOURCE resource_name.	
module_name The name of the module that was running at the time the error was discovered		Explanation The command sent to the specified service point has been processed successfully.	
return_code The return code from module		Message Variables	
System action MultiSystem Manager does not process the SUSPTOPO command.		command_name The command that was issued.	
Operator response		sp_name The name of the service point to which the command was sent.	
1. Issue the DISPTOPO command to determine the status of MultiSystem Manager. If MultiSystem Manager is already SUSPENDED, no further action is required. 2. If the status of MultiSystem Manager is NEVER_INITIALIZED, or INITIALIZATION_FAILED, topology requests are not currently being processed. If the desired status is SUSPENDED, - Issue INITTOPO to initialize MultiSystem Manager. - Issue the SUSPTOPO command to suspend processing.		application_name The name of the network management application that processes the command string at this service point. This is also referred to as application ID.	
		keyword The keyword or keywords specified on the GETTOPO command. This defines the type of GETTOPO command that was issued. For example IPRES.	
		resource_name The name of the resource that was updated. This is the name of the resource as it was specified on the original command.	
FLC048I	GETTOPO COMMANDS FROM MULTISYSTEM MANAGER INITIALIZATION FILE file_name ARE NOW BEING PROCESSED.	FLC050E	AUTOTASK autotask CANNOT BE ACTIVATED. command_name COMMAND ENDED IN MODULE module_name WITH RETURN CODE return_code.
Explanation The listed MultiSystem Manager initialization file has been read successfully. The GETTOPO commands coded in the initialization file are being processed.		Explanation A GETTOPO command was issued to run under an autotask that was not active. Attempts to activate the autotask and reissue the command under the default autotask have failed.	
Message Variables		Message Variables	
file_name The name of the MultiSystem Manager initialization file that is specified on the INITTOPO command		autotask The name of the autotask	
System action MultiSystem Manager processes GETTOPO commands when they are issued.		command_name The command that was issued.	
		module_name The name of the module that was running at the time the error was discovered	
		return_code The return code from the module	
		System action	
		First, MultiSystem Manager attempts to run the GETTOPO command under the specified autotask.	
FLC049I	command_name COMMAND FOR SERVICE POINT sp_name WITH APPLICATION NAME application_name HAS COMPLETED SUCCESSFULLY. keyword WAS SPECIFIED ON THE command_name COMMAND. TOPOLOGY AND STATUS HAVE		

- If the autotask is inactive, MultiSystem Manager attempts to activate the autotask and reissue the GETTOPO command.
- If this fails and the specified autotask is not the default autotask, MultiSystem Manager tries to run the GETTOPO command under the default autotask.
- If both attempts fail, MultiSystem Manager cancels the GETTOPO command.

Operator response

If AUTOTASK was specified on the GETTOPO command, check the spelling of the autotask name. Correct any errors you find and reissue the command. If problem persists, notify the system programmer.

System programmer response

Check the operator definitions, for example, DSIOPF, to ensure that this autotask and the default autotask specified in the MultiSystem Manager initialization file have been defined to NetView program. Activate the autotasks.

FLC051I	AUTOTASK <i>autotask</i> IS NOT ACTIVE. THE <i>command_name</i> COMMAND HAS BEEN SENT TO THE DEFAULT AUTOTASK <i>default_autotask</i>.
----------------	---

Explanation

A GETTOPO command was issued to run under an inactive autotask. The GETTOPO command was run under the default autotask.

Message Variables

<i>autotask</i>	The name of the autotask
<i>command_name</i>	The name of the command
<i>default_autotask</i>	The name of the default autotask specified by DEF_AUTOTASK in the MultiSystem Manager initialization file

System action

After finding the specified autotask inactive, MultiSystem Manager attempts to activate the autotask and reissue the GETTOPO command. This message indicates that the second attempt failed and MultiSystem Manager ran the GETTOPO command under the default autotask.

Operator response

If AUTOTASK was specified on the GETTOPO command, check the spelling of the autotask name.

- If the autotask name was misspelled, there is no need to reissue the command since the command was sent to the default autotask.
- If the autotask name was spelled correctly, notify the system programmer.

System programmer response

Check the operator definitions, for example, DSIOPF, to ensure that the specified autotask is defined to NetView program. Activate the specified autotask.

FLC052E	<i>command_name</i> COMMAND ENDED DUE TO REXX NOVALUE ERROR FOR VARIABLE <i>variable</i> IN LINE <i>line_number</i> OF MODULE <i>module_name</i>. RETURN CODE = <i>return_code</i>.
----------------	--

Explanation

A REXX NOVALUE error occurred for the listed variable at the specified line of the specified module.

Message Variables

<i>command_name</i>	The name of the command
<i>variable</i>	The name of the variable.
<i>line_number</i>	The number of the line in which the error occurred
<i>module_name</i>	The name of the module in which the error occurred
<i>return_code</i>	The return code for the module

System action

The command is cancelled.

Operator response

Notify the system programmer.

System programmer response

Contact IBM Software Support and provide the information from this message.

FLC053E	<i>command_name</i> COMMAND ENDED DUE TO REXX SYNTAX ERROR IN LINE <i>line_number</i> OF
----------------	---

**MODULE *module_name*. RETURN
CODE = *return_code*.**

Explanation

A REXX syntax error was encountered at the specified line of the specified module.

Message Variables

command_name

The name of the command

line_number

The number of the line in which the error occurred

module_name

The name of the module in which the error occurred

return_code

The REXX return code

System action

The command is cancelled.

Operator response

Notify the system programmer.

System programmer response

Contact IBM Software Support and provide the information from this message.

FLC054E	KEYWORD <i>keyword</i> SPECIFIED MORE THAN ONCE. <i>command_name</i> COMMAND ENDED IN MODULE <i>module_name</i> WITH RETURN CODE <i>return_code</i>.
----------------	---

Explanation

A command was issued that contained a duplicate keyword.

Message Variables

keyword

The name of the keyword which was specified more than once

command_name

The command that was issued

module_name

The name of the module that was running at the time the error was discovered

return_code

The return code from the module

System action

The command is cancelled.

Operator response

Reissue the command with the keyword specified only once.

FLC055E	KEYWORD <i>keyword</i> IS NOT VALID. <i>command_name</i> COMMAND ENDED IN MODULE <i>module_name</i> WITH RETURN CODE <i>return_code</i>.
----------------	---

Explanation

The specified command contained a keyword that is not valid.

Message Variables

keyword

The keyword that is not valid

command_name

The command that was issued

module_name

The name of the module that was running at the time the error was discovered

return_code

The return code from the module

System action

The command is cancelled.

Operator response

Reissue the command with valid keywords specified. See the NetView online help for the command syntax.

FLC056E	KEYWORD <i>keyword_a</i> IS NOT VALID WHEN SPECIFIED WITH KEYWORD <i>keyword_b</i>. <i>command_name</i> COMMAND ENDED IN MODULE <i>module_name</i> WITH RETURN CODE <i>return_code</i>.
----------------	--

Explanation

The specified command contained two keywords that cannot be specified together.

Message Variables

keyword_a

A keyword that cannot be used with *keyword_b*

keyword_b

A keyword that cannot be used with *keyword_a*

command_name

The command that was issued

module_name

The name of the module that was running at the time the error was discovered

return_code

The return code from the module

System action

The command is cancelled.

Operator response

Reissue the command with valid keyword combinations specified. See the NetView online help for the command syntax.

FLC057E **VALUE *value* IS NOT VALID FOR KEYWORD *keyword*.
command_name COMMAND ENDED IN MODULE *module_name* WITH RETURN CODE *return_code*.**

Explanation

The listed value is not valid for the listed keyword.

Message Variables**value**

The value that is not valid for listed keyword

keyword

A keyword for which the value was specified

command_name

The command that was issued

module_name

The name of the module that was running at the time the error was discovered

return_code

The return code from the module

System action

The command is cancelled.

Operator response

Reissue the command with a valid value for the listed keyword. See the NetView online help for the command syntax.

FLC058E **KEYWORD *keyword* IS NOT VALID AS FIRST KEYWORD ON *command_name*.COMMAND.
command_name COMMAND ENDED IN MODULE *module_name* WITH RETURN CODE *return_code*.**

Explanation

The listed keyword cannot be used as the first keyword on the listed command.

You will also receive this message if you code something other than xxxRES or xxxONLY as the first keyword on a GETTOPO statement in a MultiSystem Manager initialization file. GETTOPO xxxRES and GETTOPO xxxONLY are the only variations of the GETTOPO command that can be coded in a MultiSystem Manager initialization file.

Message Variables**keyword**

The keyword used as the first keyword in the command

command_name

The command that was issued

module_name

The name of the module that was running at the time the error was discovered

return_code

The return code from the module

System action

MultiSystem Manager cancels the command.

Operator response

Reissue the command with a valid first keyword. See the NetView online help for the command syntax.

FLC059I **MULTISYSTEM MANAGER INITIALIZATION FILE *file_name* HAS BEEN READ SUCCESSFULLY. THE MULTISYSTEM MANAGER IS NOW ENABLED.**

Explanation

The listed MultiSystem Manager initialization file was run successfully. MultiSystem Manager is now able to process topology requests.

Message Variables**file_name**

The name of the MultiSystem Manager initialization file that is specified on the INITTOPO command

FLC060E **REQUIRED KEYWORD *keyword* MISSING. *command_name* COMMAND ENDED IN MODULE *module_name* WITH RETURN CODE *return_code*.**

Explanation

A required keyword is missing from the listed command.

Message Variables

keyword

The missing keyword. It is possible for this insert to be blank, meaning that no keywords were entered for the command.

command_name

The command that was issued.

module_name

The name of the module that was running at the time the error was discovered.

return_code

The return code from the module.

System action

MultiSystem Manager cancels the command.

Operator response

Reissue the command with all of the required keywords. See the NetView online help for the command syntax.

FLC061E **command_name COMMAND ENDED IN MODULE module_name WITH RETURN CODE return_code.**

Explanation

The listed command has failed.

Message Variables

command_name

The command that was issued

module_name

The name of the module that was running at the time the error was discovered

return_code

The return code from the module

System action

The system cancels the command.

Operator response

Notify the system programmer.

System programmer response

Contact IBM Software Support.

FLC062E **UNABLE TO INITIALIZE MULTISYSTEM MANAGER WITH**

INITIALIZATION FILE file_name. INITIALIZATION STATEMENT statement IS NOT VALID. RETURN CODE = return_code.

Explanation

MultiSystem Manager attempted to initialize the network topology but cannot do so because of an incorrect initialization file statement.

Message Variables

file_name

The name of the MultiSystem Manager initialization file specified on the INITTOPO command

statement

The statement that is not valid

return_code

The return code from the module

System action

- MultiSystem Manager cancels the INITTOPO command.
- MultiSystem Manager does not perform Network topology initialization.
- MultiSystem Manager status changes to INITIALIZATION_FAILED.

Operator response

Notify the system programmer.

System programmer response

1. Correct the specified initialization statement in the initialization file. See *IBM Z NetView Installation: Configuring Graphical Components* for the initialization statement syntax.
2. Reissue the INITTOPO command to restart the initialization process.

FLC063E **UNABLE TO INITIALIZE MULTISYSTEM MANAGER WITH INITIALIZATION FILE file_name. INITIALIZATION STATEMENT statement SPECIFIED MORE THAN ONCE. RETURN CODE = return_code.**

Explanation

The listed initialization statement is specified more than once in the initialization file. MultiSystem Manager cannot initialize topology and status.

Message Variables

file_name

The name of the MultiSystem Manager initialization file that is specified on the INITTOPO command

statement

The statement that is specified more than once

return_code

The return code from the module

System action

- MultiSystem Manager cancels the INITTOPO command.
- MultiSystem Manager does not perform Network topology initialization.
- MultiSystem Manager status changes to INITIALIZATION_FAILED.

Operator response

Notify the system programmer.

System programmer response

1. Specify the initialization statement only once in the listed initialization file.
2. Reissue the INITTOPO command to restart the initialization process.

FLC064E **UNABLE TO INITIALIZE MULTISYSTEM MANAGER WITH INITIALIZATION FILE *file_name*. REQUIRED STATEMENT MISSING. RETURN CODE = *return_code*.**

Explanation

A required initialization statement is missing from the MultiSystem Manager initialization file. MultiSystem Manager cannot initialize topology and status.

Message Variables**file_name**

The name of the MultiSystem Manager initialization file specified on the INITTOPO command or the name of the exception view file specified on the EXCEPTION_VIEW_FILE statement in the MultiSystem Manager initialization file.

return_code

The return code from the module.

System action

- MultiSystem Manager cancels the INITTOPO command.

- MultiSystem Manager does not perform Network topology initialization.
- MultiSystem Manager status changes to INITIALIZATION_FAILED.

Operator response

Notify the system programmer.

System programmer response

1. Add the missing statement to your initialization file. If the file in error is the initialization file that is specified on the INITTOPO command, see *IBM Z NetView Installation: Configuring Graphical Components* for the initialization statement syntax. If the file in error is the exception view file that is specified on the EXCEPTION_VIEW_FILE statement, see the prologue of sample FLCSEXV for direction.
2. Reissue the INITTOPO command to restart the initialization process.

FLC065I **SERVICE POINT *sp_name* NOT DEFINED TO VTAM. OBJECTS REPRESENTING THIS SERVICE POINT WILL BE STORED IN RODM.**

Explanation

You requested to retrieve topology data and status from a service point that is not defined to VTAM. The objects representing this service point are stored in RODM and GETTOPO processing continues.

Message Variables**sp_name**

The name of the service point to which the command was sent

System action

GETTOPO processing continues.

Operator response

If you specified the service point name correctly, but it was not known to VTAM at the time you issued the GETTOPO command, the objects representing the service point are stored in RODM and no action is required.

If you did not specify the service point name correctly, the objects representing the service point are still stored in RODM. Delete these extraneous objects from RODM. Contact your system programmer if you do not have authority to delete the objects from RODM. Reissue the GETTOPO command with the correct service point name.

System programmer response

If the service point name was specified correctly, define the service point to VTAM. Otherwise, remove the extraneous service point objects from RODM.

FLC066E **UNABLE TO INITIALIZE
MULTISYSTEM MANAGER WITH
INITIALIZATION FILE *file_name*.
INITIALIZATION FILE *file_name*
DOES NOT EXIST. RETURN CODE =
return_code.**

Explanation

MultiSystem Manager cannot initialize topology and status because it cannot find the specified initialization file.

Message Variables

file_name
The name of the MultiSystem Manager initialization file specified on the INITTOPO command or the name of the exception view file specified on the EXCEPTION_VIEW_FILE statement in the MultiSystem Manager initialization file.

return_code
The return code from the module.

System action

- MultiSystem Manager cancels the INITTOPO command.
- MultiSystem Manager does not perform Network topology initialization.
- MultiSystem Manager status changes to INITIALIZATION_FAILED.

Operator response

Was a valid initialization file specified on the INITTOPO command?

- No, reissue the command with a valid initialization file specified.
- Yes, notify the system programmer.

System programmer response

1. Find or create the specified MultiSystem Manager initialization file. See *IBM Z NetView Installation: Configuring Graphical Components* for the initialization statement syntax.
2. Reissue the INITTOPO command to restart the initialization process.

FLC068E **UNABLE TO INITIALIZE
MULTISYSTEM MANAGER WITH**

**INITIALIZATION FILE *file_name*.
VALUE *value* IS NOT VALID FOR
KEYWORD *keyword*. RETURN
CODE = *return_code*.**

Explanation

The listed value is not valid for the listed keyword in the initialization file.

Message Variables

file_name
The name of the MultiSystem Manager initialization file specified on the INITTOPO command

value
The value that is not valid for the listed keyword

keyword
The keyword with the value that is not valid

return_code
The return code from the module

System action

- MultiSystem Manager cancels the INITTOPO command.
- MultiSystem Manager does not perform Network topology initialization.
- MultiSystem Manager status changes to INITIALIZATION_FAILED.

Operator response

Notify the system programmer.

System programmer response

1. Correct the value for the keyword in the listed initialization file. See *IBM Z NetView Installation: Configuring Graphical Components* for the initialization statement syntax.
2. Reissue the INITTOPO command to restart the initialization process.

FLC069E **UNABLE TO INITIALIZE
MULTISYSTEM MANAGER WITH
INITIALIZATION FILE *file_name*.
RETURN CODE = *return_code*.**

Explanation

An attempt to initialize topology and status failed.

Message Variables

file_name

The name of the MultiSystem Manager initialization file that is specified on the INITTOPO command

return_code

The return code from the module

System action

- MultiSystem Manager cancels the INITTOPO command.
- MultiSystem Manager does not perform Network topology initialization.
- MultiSystem Manager status changes to INITIALIZATION_FAILED.

Operator response

Notify the system programmer.

System programmer response

Contact IBM Software Support.

FLC070E **RODM PROCESSING ERROR.**
command_name **COMMAND**
ENDED IN MODULE *module_name*
WITH RETURN CODE *return_code*.

Explanation

MultiSystem Manager encountered a RODM processing error when running the listed command.

Message Variables**command_name**

The command or initialization file statement that was issued

module_name

The name of the module that was running at the time the error was discovered

return_code

The return code from the module

System action

The system cancels the command and does not process the failed RODM request. If this request is one in a group of requests, the remaining requests in the group are not to be processed either. Message FLC076E is logged to the NetView log whenever message FLC070E is generated.

Operator response

- If this message reflects a command error, ensure that all command keyword values are correct.

- If this error was encountered during MultiSystem Manager initialization and message FLC059I was not received, the problem occurred while the system was creating the topology manager class objects in RODM. Ensure that all keyword values of the GETTOPO statements in the MultiSystem Manager initialization file are correct.
- If this error was encountered during MultiSystem Manager initialization and message FLC059I was received, ensure that all keyword values of the GETTOPO statements in the MultiSystem Manager initialization file are correct.
- If any keyword values are incorrect, reissue the command with the correct values, or correct the initialization file, as appropriate.
- If all keyword values are correct, notify the system programmer.

System programmer response

- Ensure that the data model is loaded and that RODM is correctly processing function requests from applications.
- Check the NetView log for message FLC076E.
- Contact IBM Software Support if you cannot resolve the problem.

FLC071E **UNABLE TO PROCESS** *option*
OPTION ON *command_name*
COMMAND. MULTISYSTEM
MANAGER FEATURE NOT
INSTALLED. *command_name*
COMMAND ENDED IN MODULE
module_name **WITH RETURN**
CODE *return_code*.

Explanation

The MultiSystem Manager feature required to process the listed option is not installed.

Message Variables**option**

The option specified on the listed command

command_name

The command that was issued

module_name

The name of the module that was running at the time the error was discovered.

return_code

The return code from the module

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Install the required MultiSystem Manager feature. See the *IBM Z NetView Installation: Getting Started* for installation information.

FLC072E **REQUIRED FIELD *field* IS NULL IN RODM. OBJECT IDENTIFIER = *object_identifier* OBJECT CLASS = *object_class* OBJECT NAME = *object_name* *command_name* COMMAND ENDED IN MODULE *module_name* WITH RETURN CODE *return_code*.**

Explanation

The listed command queried the value of a required RODM field but the value of the required field is null.

Message Variables

field

The RODM field that is required

object_identifier

RODM object identifier

object_class

RODM object class

object_name

RODM object name

command_name

The command that was issued

module_name

The name of the module that was running at the time the error was discovered

return_code

The return code from the module

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Contact IBM Software Support.

FLC073E ***command_name* COMMAND CANNOT BE EXECUTED UNDER TASK *task_type*. *command_name* COMMAND ENDED IN MODULE**

***module_name* WITH RETURN CODE *return_code*.**

Explanation

The listed command cannot run under the specified type of task.

Message Variables

command_name

The command that was issued

task_type

The type of task (for example, OST, PPT)

module_name

The name of the module that was running at the time the error was discovered

return_code

The return code from the module

System action

MultiSystem Manager cancels the command.

Operator response

Reissue the command under the appropriate type of task.

FLC074E **RODM NAME AND RODM APPLICATION ID HAVE NOT BEEN INITIALIZED. *command_name* COMMAND ENDED IN MODULE *module_name* WITH RETURN CODE *return_code*.**

Explanation

MultiSystem Manager cannot process this command because the RODM name and RODM application ID global variables are not initialized.

Message Variables

command_name

The command that was issued

module_name

The name of the module that was running at the time the error was discovered

return_code

The return code from the module

System action

MultiSystem Manager cancels the command.

Operator response

1. Issue the DISPTOPO command to check the values for RODM name and application ID.

2. Then,

- If the vales are incorrect or null, initialize topology and status by issuing the INITTOPO command.
- If the values are correct, notify the system programmer.

System programmer response

Contact IBM Software Support.

FLC075E	LENGTH OF RUNCMD EXCEEDS MAXIMUM OF 240 CHARACTERS. <i>command_name</i> COMMAND ENDED IN MODULE <i>module_name</i> WITH RETURN CODE <i>return_code</i>.
----------------	--

Explanation

When MultiSystem Manager built the RUNCMD for the listed command, the RUNCMD exceeded the maximum length of 240 characters.

Message Variables

command_name

The command that was issued

module_name

The name of the module that was running at the time the error was discovered

return_code

The return code from the module

System action

MultiSystem Manager cancels the command.

Operator response

Reenter the command, ensuring that it is less than 240 characters in length.

FLC076E	RODM OBJECT INFORMATION.
----------------	---------------------------------

Explanation

A RODM processing error was encountered.

System action

- The system cancels the command associated with the RODM processing error.
- The system logs the RODM objects being processed at the time of the error to the NetView log along with other pertinent information.

Operator response

Notify the system programmer.

System programmer response

See message number FLC070E.

FLC077E	FAILURE WHILE PROCESSING RUNCMD FOR SERVICE POINT <i>sp_name</i> - <i>runcmd</i>. <i>command_name</i> COMMAND ENDED IN MODULE <i>module_name</i> WITH RETURN CODE <i>return_code</i>.
----------------	--

Explanation

The RUNCMD built to process *command_name* failed during processing.

Message Variables

sp_name

The name of the service point to which the command was sent

runcmd

The RUNCMD command that failed

command_name

The command that was issued

module_name

The name of the module that was running at the time the error was discovered

return_code

The return code from the module

System action

The system cancels the command.

Operator response

- If this error was encountered while issuing a GETTOPO command, ensure that all keyword values are correct, and reissue the command.
- If this error was encountered during MultiSystem Manager initialization, ensure that all keyword values on the GETTOPO statements in the MultiSystem Manager initialization file are correct, and reissue the INITTOPO command.
- If all keyword values are correct, notify the system programmer.

System programmer response

Examine the associated RUNCMD failure messages and follow the recommended actions to resolve the problem.

FLC078I	<i>command_name</i> COMMAND HAS COMPLETED SUCCESSFULLY.
----------------	--

Explanation

The listed MultiSystem Manager command was processed successfully by MultiSystem Manager.

Message Variables

command_name
The command that was issued

FLC079I	<i>command_name</i> COMMAND HAS COMPLETED SUCCESSFULLY. <i>number</i> OBJECTS WERE REMOVED.
----------------	--

Explanation

The listed MultiSystem Manager command was processed successfully by MultiSystem Manager. The specified number of objects were removed. See the *IBM Z NetView User's Guide: NetView Management Console* for additional information concerning the removal of objects from RODM.

Message Variables

command_name
The command that was issued

number
The number of objects removed

FLC080E	NO TOPOLOGY DATA PRESENT. SERVICE POINT = <i>sp_name</i>, APPLICATION NAME = <i>application.element</i>. COMMAND ENDED IN MODULE <i>module_name</i>.
----------------	---

Explanation

This message is generated when there is no data in the buffer.

Message Variables

sp_name
The name of the service point to which the command was sent.

application.element
The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

module_name
The name of the module that was running at the time the error was discovered.

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Ensure the buffer is being built correctly and data is being sent.

FLC081E	VALUE FOR CLASS NAME IS NOT VALID. FUNCTION = <i>function</i>, FIELD = <i>field_name field_type field_value</i>, SERVICE POINT = <i>sp_name</i>, APPLICATION NAME = <i>application.element</i>. COMMAND ENDED IN MODULE <i>module_name</i>.
----------------	--

Explanation

This message is generated when the value specified for the class name is not a valid hexadecimal number, or is not in the range for valid class nicknames.

Message Variables

function
The function to be performed on the target object.

field_name
The field name being used.

field_type
The RODM type being used.

field_value
The value to be added to the RODM field.

sp_name
The name of the service point to which the command was sent.

application.element
The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

module_name
The name of the module that was running at the time the error was discovered

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Ensure a valid hexadecimal value is being used. If the C toolkit is being used, a hexadecimal number in the range for class nicknames must be specified. If the C

toolkit is not being used, a hexadecimal number representing a class identifier must be specified.

FLC082E **OBJECT ID IS NOT VALID.**
FUNCTION = *function*, **OBJECT CLASS =** *object_class*, **FIELD =** *field_name field_type field_value*,
SERVICE POINT = *sp_name*,
APPLICATION NAME = *application.element*. **COMMAND ENDED IN MODULE** *module_name*.

Explanation

This message is generated when the value specified for the object is not a 16-byte hexadecimal number and the option flag sent indicates that an object identifier is specified.

Message Variables

function

The function to be performed on the target object

object_class

The RODM object class of the target object

field_name

The field name that is being used

field_type

The RODM type that is being used

field_value

The value to be added to the RODM field

sp_name

The name of the service point to which the command was sent

application.element

The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

module_name

The name of the module that was running at the time the error was discovered.

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Ensure a valid value is being used. If the C toolkit is being used, only object names are supported. If the C toolkit is not being used, ensure the value being sent is a 16-byte hexadecimal number.

FLC083E **STATUS PARAMETER** *status*
SPECIFIED FOR PURGE IS NOT VALID. **SERVICE POINT =** *sp_name*, **APPLICATION NAME =** *application.element*. **COMMAND ENDED IN MODULE** *module_name*.

Explanation

This message is generated when the value specified for *status* is not valid.

Message Variables

status

The status of the objects to remove.

sp_name

The name of the service point to which the command was sent.

application.element

The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

module_name

The name of the module that was running at the time the error was discovered.

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Ensure a valid *status* value is being used. The valid values are listed in *MultiSystem Manager: Topology Agent Developer's Guide*.

FLC084E **VALUE FOR NAME** *nickname* **IN FIELD VALUE STRUCTURE IS NOT VALID.** **FUNCTION =** *function*, **OBJECT CLASS =** *object_class*, **OBJECT NAME =** *object_name*, **FIELD =** *field_name field_type field_value*, **SERVICE POINT =** *sp_name*, **APPLICATION NAME =** *application.element*.

Explanation

This message is generated when the value specified for the *nickname* is not a valid hexadecimal number.

Message Variables

nickname

The hexadecimal number representing a field name or Field Identifier.

function

The function to be performed on the target object.

object_class

The RODM object class of the target object.

object_name

The RODM object name of the target object.

field_name

The field name being used.

field_type

The RODM type being used.

field_value

The value to be added to the RODM field.

sp_name

The name of the service point to which the command was sent.

application.element

The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Ensure a valid value is being used. If the C toolkit is being used, ensure a 4-byte hexadecimal value in the valid range for field nicknames was sent. If the C toolkit is not being used, and the value is not a 4-byte hexadecimal identifier, then it must be an 8-byte field identifier.

FLC085E

HEX VALUE EXPECTED FOR TYPE *nicktype* IN FIELD VALUE STRUCTURE. FUNCTION = *function*, OBJECT CLASS = *object_class*, OBJECT NAME = *object_name*, FIELD = *field_name* *field_type* *field_value*, SERVICE POINT = *sp_name*, APPLICATION NAME = *application.element*.

Explanation

This message is generated when the value specified for the *nicktype* is not a valid 2-byte hexadecimal number.

Message Variables**nicktype**

The 2-byte hexadecimal number representing RODM type.

function

The function to be performed on the target object.

object_class

The RODM object class of the target object.

object_name

The RODM object name of the target object.

field_name

The field name being used.

field_type

The RODM type being used.

field_value

The value to be added to the RODM field.

sp_name

The name of the service point to which the command was sent.

application.element

The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Ensure a valid RODM type is being used and sent as a 2-byte hexadecimal number.

FLC086E

'TO' FIELD LENGTH *to_field_length* IN LINK STRUCTURE IS NOT VALID. FUNCTION = *function*, OBJECT CLASS = *object_class*, OBJECT NAME = *object_name*, FIELD = *field_name* *field_type* *field_value*, SERVICE POINT = *sp_name*, APPLICATION NAME = *application.element*.

Explanation

This message is generated when the length specified for the *to_field_length* is not a valid hexadecimal number.

Message Variables

to_field_length

The length of the field.

function

The function to be performed on the target object.

object_class

The RODM object class of the target object.

object_name

The RODM object name of the target object.

field_name

The field name being used.

field_type

The RODM type being used.

field_value

The value to be added to the RODM field.

sp_name

The name of the service point to which the command was sent.

application.element

The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Ensure a valid length is being sent as a hexadecimal number.

FLC087E **'FROM' FIELD LENGTH**
***from_field_length* IN LINK**
STRUCTURE IS NOT VALID.
FUNCTION = *function*, OBJECT
CLASS = *object_class*, OBJECT
NAME = *object_name*, FIELD =
***field_name field_type field_value*,**
SERVICE POINT = *sp_name*,
APPLICATION NAME =
***application.element*.**

Explanation

This message is generated when the length specified for the *from_field_length* is not a valid hexadecimal number.

Message Variables

from_field_length

The length of the Field.

function

The function to be performed on the target object.

object_class

The RODM object class of the target object.

object_name

The RODM object name of the target object.

field_name

The field name being used.

field_type

The RODM type being used.

field_value

The value to be added to the RODM field.

sp_name

The name of the service point to which the command was sent.

application.element

The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Ensure a valid length is being sent as a hexadecimal number.

FLC088E **CLASS LENGTH *class_length* IN**
LINK STRUCTURE IS NOT VALID.
FUNCTION = *function*, OBJECT
CLASS = *object_class*, OBJECT
NAME = *object_name*, FIELD =
***field_name field_type field_value*,**
SERVICE POINT = *sp_name*,
APPLICATION NAME =
***application.element*.**

Explanation

This message is generated when the length specified for the *class_length* is not a valid hexadecimal number.

Message Variables

class_length

The length of the RODM class.

function

The function to be performed on the target object.

object_class

The RODM object class of the target object.

object_name

The RODM object name of the target object.

field_name

The field name being used.

field_type

The RODM type being used.

field_value

The value to be added to the RODM field.

sp_name

The name of the service point to which the command was sent.

application.element

The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Ensure a valid length is being sent as a hexadecimal number.

FLC089E **OBJECT LENGTH *object_length* IN LINK STRUCTURE IS NOT VALID. FUNCTION = *function*, OBJECT CLASS = *object_class*, OBJECT NAME = *object_name*, FIELD = *field_name* *field_type* *field_value*, SERVICE POINT = *sp_name*, APPLICATION NAME = *application.element*.**

Explanation

This message is generated when the length specified for the *object_length* is not a valid hexadecimal number.

Message Variables

object_length

The length of the RODM object name.

function

The function to be performed on the target object.

object_class

The RODM object class of the target object.

object_name

The RODM object name of the target object.

field_name

The field name being used.

field_type

The RODM type being used.

field_value

The value to be added to the RODM field.

sp_name

The name of the service point to which the command was sent.

application.element

The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Ensure a valid length is being sent as a hexadecimal number.

FLC090E **VALUE FOR DISPLAY RESOURCE TYPE IS NOT VALID. FUNCTION = *function*, OBJECT CLASS = *object_class*, OBJECT NAME = *object_name*, FIELD = *field_name* *field_type* *field_value*, SERVICE POINT = *sp_name*, APPLICATION NAME = *application.element*. COMMAND ENDED IN MODULE *module_name*.**

Explanation

This message is generated when the value specified for the Display Resource Type is not a valid hexadecimal number representing a nickname for a DRT, and the option flag sent indicates that a nickname is being specified.

Message Variables

- function**
The function to be performed on the target object.
- object_class**
The RODM object class of the target object.
- object_name**
The RODM object name of the target object.
- field_name**
The field name being used.
- field_type**
The RODM type being used.
- field_value**
The value to be added to the RODM field.
- sp_name**
The name of the service point to which the command was sent.
- application.element**
The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.
- module_name**
The name of the module that was running at the time the error was discovered.

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Ensure a valid 4-byte hexadecimal number is specified. This number must be in the range for valid DRT nicknames.

FLC091E **VALUE IS INCONSISTENT WITH DATA TYPE IN FIELD VALUE STRUCTURE. FUNCTION = *function*, OBJECT CLASS = *object_class*, OBJECT NAME = *object_name*, FIELD = *field_name* *field_type* *field_value*, SERVICE POINT = *sp_name*, APPLICATION NAME = *application.element*.**

COMMAND ENDED IN MODULE *module_name*.

Explanation

This message is generated when the value specified in the structure is not the same data type as the RODM predefined data type of the field to update.

Message Variables

- function**
The function to be performed on the target object.
- object_class**
The RODM object class of the target object.
- object_name**
The RODM object name of the target object.
- field_name**
The field name being used.
- field_type**
The RODM type being used.
- field_value**
The value to be added to the RODM field.
- sp_name**
The name of the service point to which the command was sent.
- application.element**
The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.
- module_name**
The name of the module that was running at the time the error was discovered.

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Ensure the value being sent for *field_type* matches the data type defined in RODM for that *field_name* and the value sent for the *field_value* is of the same type.

FLC092E **OBJECT REPRESENTING *keyword_name* *keyword_value* DOES NOT EXIST IN RODM. *command_name* COMMAND ENDED IN MODULE *module_name* WITH RETURN CODE *return_code*.**

Explanation

A request was issued to retrieve topology data. The request cannot be completed. The resource specified in the command must exist in RODM before the request can be completed.

Message Variables

- keyword_name**
The keyword specified on the related GETTOPO command.
- keyword_value**
The value specified for that keyword on the related GETTOPO command. This is the object that caused the message to be generated.
- command_name**
The command that was issued.
- module_name**
The name of the module that was running at the time the error was discovered.
- return_code**
The return code from the module.

System action

MultiSystem Manager cancels the command.

Operator response

Ensure that the resource name is spelled correctly and that the resource is in RODM. If this does not resolve the problem, notify the system programmer.

System programmer response

Determine the correct name of the resource or determine why the resource is not in RODM.

FLC093E **HEX VALUE EXPECTED FOR THE VALUE OF THE RESERVED WORD. FUNCTION = *function*, OBJECT CLASS = *object_class*, OBJECT NAME = *object_name*, FIELD = *field_name field_type field_value*, SERVICE POINT = *sp_name*, APPLICATION NAME = *application.element*. COMMAND ENDED IN MODULE *module_name*.**

Explanation

This message is generated when the value specified for the *field_value* is not a hexadecimal value.

Message Variables

- function**
The function to be performed on the target object.

- object_class**
The RODM object class of the target object.
- object_name**
The RODM object name of the target object.
- field_name**
The field name being used.
- field_type**
The RODM type being used.
- field_value**
The value to be added to the RODM field.
- sp_name**
The name of the service point to which the command was sent.
- application.element**
The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.
- module_name**
The name of the module that was running at the time the error was discovered.

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Ensure a hexadecimal number is being sent for the *field_value*.

FLC094E **MESSAGE TO OPERATOR REJECTED. REASON = *error_reason*, TYPE = *error_type*, DATA = *error_data*. COMMAND ENDED IN MODULE *module_name*.**

Explanation

This message is generated when there is an error with the Message To Operator command sent. Data is also piped to the log.

Message Variables

- error_reason**
The reason the Message To Operator failed
- error_type**
The type of error, which parameter was not valid
- error_data**
The data that was not valid

module_name

The name of the module that was running at the time the error was discovered

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Ensure the Message To Operator command is being built correctly with correct header information. Correct and reissue the command.

FLC095E **THE FORMAT OF THE DATA SENT FROM THE AGENT IS INVALID. SERVICE POINT = *sp_name*, APPLICATION NAME = *application.element*, RECORD: *record*. COMMAND ENDED IN MODULE *module_name*.**

Explanation

This message is generated when a data record is found without the **TX=**(preceding it, or a closing **)** following it.

Message Variables***sp_name***

The name of the service point to which the command was sent.

record

The data record in error.

application.element

The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

module_name

The name of the module that was running at the time the error was discovered.

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Ensure each data record starts with a **TX=**(and ends with a closing **)**.

FLC096E **THE AGENT DOES NOT SUPPORT THE VALUE SPECIFIED FOR THE PARAMETER *keyword_parm*. SERVICE POINT = *sp_name*, APPLICATION NAME = *application.element*. COMMAND ENDED IN MODULE *module_name*.**

Explanation

This message is generated when the value specified for the *keyword_parm* is not supported by the agent. This error is generated by the agent and returned to the host.

Message Variables***keyword_parm***

The value of the keyword.

sp_name

The name of the service point to which the command was sent.

application.element

The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

module_name

The name of the module that was running at the time the error was discovered.

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Reissue the GETTOPO command with a correct value in the *keyword_parm* parameter. Refer to the agent documentation.

FLC097E **THE FUNCTION *function* MUST BE SPECIFIED WITHOUT ANY OTHER FUNCTIONS. SERVICE POINT = *sp_name*, APPLICATION NAME = *application.element*. COMMAND ENDED IN MODULE *module_name*.**

Explanation

This message is generated when a function must be specified alone and other functions are sent with it.

Message Variables

function

The function to be performed on the target object.

sp_name

The name of the service point to which the command was sent.

application.element

The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

module_name

The name of the module that was running at the time the error was discovered.

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Ensure the function being sent can have data following it. If the function does not allow data, remove the excess data. Refer to the agent documentation for a list of functions that must be sent alone.

FLC098E **THE VALUE SPECIFIED FOR THE RESERVED WORD IS NOT VALID. FUNCTION = *function*, OBJECT CLASS = *object_class*, OBJECT NAME = *object_name*, FIELD = *field_name field_type field_value*, SERVICE POINT = *sp_name*, APPLICATION NAME = *application.element*. COMMAND ENDED IN MODULE *module_name*.**

Explanation

This message is generated when the value specified for the *field_value* is not valid for the *field_name* specified.

Message Variables

function

The function to be performed on the target object.

object_class

The RODM object class of the target object.

object_name

The RODM object name of the target object.

field_name

The field name being used.

field_type

The RODM type being used.

field_value

The value to be added to the RODM field.

sp_name

The name of the service point to which the command was sent.

application.element

The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

module_name

The name of the module that was running at the time the error was discovered.

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Ensure the value for *field_value* being sent is valid for the *field_name* specified. *MultiSystem Manager: Topology Agent Developer's Guide* lists the valid values.

FLC099E **THE FUNCTION *function* IS NOT VALID FOR COMMAND TYPE *command_type*. SERVICE POINT = *sp_name*, APPLICATION NAME = *application.element*. COMMAND ENDED IN MODULE *module_name*.**

Explanation

This message is generated when a *function* is sent that is not valid for the *command_type* type running.

Message Variables

function

The function to be performed on the target object.

command_type

The number indicating which command type was being run.

sp_name

The name of the service point to which the command was sent.

application.element

The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

module_name

The name of the module that was running at the time the error was discovered.

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Ensure the *function* sent is valid for the type of command running. The following are the valid command types and numbers.

- 1 Initial Contact
- 2 Send Topology
- 3 Send Topology Updates
- 4 Message to Operator
- 5 Alerts and Resolves
- 6 Heartbeat
- 7 Return Code

FLC100E	HEX VALUE EXPECTED FOR DISPLAY STATUS CODE. SERVICE POINT = <i>sp_name</i>, APPLICATION NAME = <i>application.element</i>. COMMAND ENDED IN MODULE <i>module_name</i>.
----------------	---

Explanation

This message is generated when a value sent for DISPLAY STATUS is not hexadecimal.

Message Variables

sp_name

The name of the service point to which the command was sent.

application.element

The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

module_name

The name of the module that was running at the time the error was discovered.

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Ensure the value being sent for DISPLAY STATUS is hexadecimal.

FLC101E	THE AGENT IS UNABLE TO OBTAIN SYSTEM RESOURCES NECESSARY TO CONTINUE PROCESSING. SERVICE POINT = <i>sp_name</i>, APPLICATION NAME = <i>application.element</i>. COMMAND ENDED IN MODULE <i>module_name</i>.
----------------	--

Explanation

This message is generated when the agent is unable to obtain system resources necessary to continue processing. This error is generated by the agent and returned to the host.

Message Variables

sp_name

The name of the service point to which the command was sent.

application.element

The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

module_name

The name of the module that was running at the time the error was discovered.

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Ensure the agent has enough resources to complete the command. Refer to the agent documentation for additional information.

FLC102E	THE AGENT IS UNABLE TO COLLECT TOPOLOGY INFORMATION. SERVICE POINT = <i>sp_name</i>, APPLICATION NAME = <i>application.element</i>. COMMAND ENDED IN MODULE <i>module_name</i>.
----------------	--

Explanation

This message is generated when the agent is unable to collect topology information. This error is generated by the agent and returned to the host.

Message Variables

sp_name
The name of the service point to which the command was sent.

application.element
The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

module_name
The name of the module that was running at the time the error was discovered.

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Determine why the agent can not collect topology and fix the problem. Refer to the agent documentation for additional information.

FLC103E	THE AGENT RECEIVED A SEND TOPOLOGY UPDATES COMMAND, BUT NO UPDATES EXIST. SERVICE POINT = <i>sp_name</i>, APPLICATION NAME = <i>application.element</i>. COMMAND ENDED IN MODULE <i>module_name</i>.
----------------	---

Explanation

This message is generated when the agent receives a command to send topology updates but no updates exist. This error is generated by the agent and returned to the host.

Message Variables

sp_name
The name of the service point to which the command was sent.

application.element
The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

module_name
The name of the module that was running at the time the error was discovered.

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Determine why the agent does not have any topology updates. Reissue the GETTOPO command.

FLC104E	THE AGENT RECEIVED A SEND TOPOLOGY COMMAND, BUT NO SESSION EXISTS. SERVICE POINT = <i>sp_name</i>, APPLICATION NAME = <i>application.element</i>. COMMAND ENDED IN MODULE <i>module_name</i>.
----------------	--

Explanation

This message is generated when the agent receives a command but no session has been established. This error is generated by the agent and returned to the host.

Message Variables

sp_name
The name of the service point to which the command was sent.

application.element
The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

module_name

The name of the module that was running at the time the error was discovered.

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Determine why no session exists and fix the problem.
Reissue the GETTOPO command.

FLC105E THE AGENT IS TERMINATING. SERVICE POINT = *sp_name*, APPLICATION NAME = *application.element*. COMMAND ENDED IN MODULE *module_name*.

Explanation

This message is generated when the agent is ending. This error is generated by the agent and returned to the host.

Message Variables***sp_name***

The name of the service point to which the command was sent.

application.element

The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

module_name

The name of the module that was running at the time the error was discovered.

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Determine why the agent is ending. Refer to the agent documentation for additional information.

FLC106E THE AGENT EXPERIENCED A PROBLEM. PROBLEM TEXT: *problem*. SERVICE POINT =

***sp_name*, APPLICATION NAME = *application.element*. COMMAND ENDED IN MODULE *module_name*.**

Explanation

This message is generated when the agent has experienced a problem. This error is generated by the agent and returned to the host. The agent has generated a return code value of 2000 to MultiSystem Manager and has provided MultiSystem Manager with the problem text for this message.

Message Variables***problem***

Information about the problem experienced.

sp_name

The name of the service point to which the command was sent.

application.element

The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

module_name

The name of the module that was running at the time the error was discovered.

System action

MultiSystem Manager cancels the command.

Operator response

If the PROBLEM TEXT is NULL, this error can occur if the command was issued with SECURE=NO to a port that had been set up to be secure. In this case, check the security of the port and reissue the command with the correct parameters. Notify the system programmer.

System programmer response

Determine what problem the agent experienced and fix it. Refer to the agent documentation for additional information.

FLC107E THE AGENT HAS FAILED. SERVICE POINT = *sp_name*, APPLICATION NAME = *application.element*. COMMAND ENDED IN MODULE *module_name*.

Explanation

This message is generated when the agent has failed. This error is generated by the agent and returned to

the host. The agent has not provided MultiSystem Manager with a valid return code.

Message Variables

sp_name

The name of the service point to which the command was sent.

application.element

The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

module_name

The name of the module that was running at the time the error was discovered.

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Determine why the agent failed. Refer to the agent documentation for additional information.

FLC108E	THE COMMAND RECEIVED BY THE AGENT WAS NOT VALID. SERVICE POINT = <i>sp_name</i>, APPLICATION NAME = <i>application.element</i>. COMMAND ENDED IN MODULE <i>module_name</i>.
----------------	--

Explanation

This message is generated when an incorrect command is sent to the agent. This error is generated by the agent and returned to the host.

Message Variables

sp_name

The name of the service point to which the command was sent.

application.element

The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

module_name

The name of the module that was running at the time the error was discovered.

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Determine what command was sent and correct it. Refer to the agent documentation for additional information.

FLC109E	THE AGENT DOES NOT SUPPORT THE PARAMETER <i>parameter</i>. SERVICE POINT = <i>sp_name</i>, APPLICATION NAME = <i>application.element</i>. COMMAND ENDED IN MODULE <i>module_name</i>.
----------------	--

Explanation

This message is generated when an unsupported parameter is sent to the agent. This error is generated by the agent and returned to the host.

Message Variables

parameter

The parameter sent to the agent.

sp_name

The name of the service point to which the command was sent.

application.element

The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

module_name

The name of the module that was running at the time the error was discovered.

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Determine why the parameter sent is unsupported, correct the parameter and retry the command. Refer to the agent documentation for additional information.

FLC110E	VALUE SPECIFIED FOR THE ALERT LOGGING AND STATUS CHANGE
----------------	--

**INDICATOR IS NOT VALID.
SERVICE POINT = *sp_name*,
APPLICATION NAME =
application.element. COMMAND
ENDED IN MODULE *module_name*.**

Explanation

This message is generated when the status change and alert history log parameter is incorrect.

Message Variables

sp_name

The name of the service point to which the command was sent.

application.element

The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

module_name

The name of the module that was running at the time the error was discovered.

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Determine why the specified parameter is incorrect and correct it.

**FLC111E THE AGENT REQUIRES THE
parameter PARAMETER TO BE
SPECIFIED. SERVICE POINT =
sp_name, APPLICATION NAME =
application.element. COMMAND
ENDED IN MODULE *module_name*.**

Explanation

This message is generated when the *parameter* is not specified on the GETTOPO command.

Message Variables

parameter

The name of the parameter that is required by the agent.

sp_name

The name of the service point to which the command was sent.

application.element

The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

module_name

The name of the module that was running at the time the error was discovered.

System action

MultiSystem Manager cancels the command.

Operator response

Reissue the command with the required parameter.

**FLC112E FILTER *filter_parm* IS NOT VALID
FOR THE COMMAND SPECIFIED.
SERVICE POINT = *sp_name*,
APPLICATION NAME =
application.element. COMMAND
ENDED IN MODULE *module_name*.**

Explanation

This message is generated when the value specified for the *filter_parm* is not valid for the command specified.

Message Variables

filter_parm

The filter parameter to be used with the command.

sp_name

The name of the service point to which the command was sent.

application.element

The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

module_name

The name of the module that was running at the time the error was discovered.

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Reissue the command where the value of the *filter_parm* is equal to 1STFIELD.

FLC113E	MULTISYSTEM MANAGER REQUIRES THAT THE FOLLOWING PROGRAMS ARE RUNNING ON SERVICE POINT <i>sp_name</i>. <i>command_name</i> COMMAND ENDED IN MODULE <i>module_name</i> WITH RETURN CODE <i>return_code</i> <i>required_programs</i>
----------------	--

Explanation

A request was issued to retrieve topology data. The request cannot be completed because MultiSystem Manager has determined that all required programs are not running on the specified service point.

For service points running in a distributed environment, such as IBM Z NetView, these required programs might be running on systems other than the service point.

Message Variables

- sp_name***
The name of the service point to which the GETTOPO command was sent
- command_name***
The command that was issued
- module_name***
The name of the module that was running at the time the error was discovered
- return_code***
The return code from the module
- required_programs***
A list of the programs that MultiSystem Manager expect to be running

System action

MultiSystem Manager cancels the command.

Operator response

Ensure that the required programs are running.

FLC114E	SPECIFIED OBJECT DOES NOT EXIST IN RODM. OBJECT IDENTIFIER = <i>object_identifier</i>, OBJECT CLASS = <i>object_class_id</i>, OBJECT NAME = <i>object_name</i>. <i>command_name</i> COMMAND ENDED IN MODULE <i>module_name</i> WITH RETURN CODE <i>return_code</i>.
----------------	--

Explanation

This message is generated when the object specified can not be found in RODM. If an object identifier is specified, only the *object_class_id* value will be displayed in the message. If both the object class and name are specified, both will be displayed in the message.

Message Variables

- command_name***
The command that was issued
- module_name***
The name of the module that was running at the time the error was discovered
- object_identifier***
The RODM object identifier
- return_code***
The return code from the module
- object_class_id***
The RODM object class of the object or the object identifier whichever is specified
- object_name***
The RODM object name of the object, if specified

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Reissue the command with a valid RODM object class and name or object identifier that is already defined in RODM.

FLC115E	THE ELEMENT KEYWORD MUST BE SPECIFIED FOR AGENTS WHICH SUPPORT <i>agent_type</i>. SERVICE POINT = <i>sp_name</i>, APPLICATION NAME = <i>application.element</i>. COMMAND ENDED IN MODULE <i>module_name</i>.
----------------	---

Explanation

This message is generated when the ELEMENT keyword is not specified and the *agent_type* indicates that multiple applications, known as elements, can be running on the same service point. The ELEMENT keyword is used to differentiate between different subapplications running at the service point.

Message Variables

agent_type

The type of agent that is running.

sp_name

The name of the service point to which the command was sent.

application.element

The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

module_name

The name of the module that was running at the time the error was discovered.

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Reissue the command with the ELEMENT keyword specifying a subapplication.

FLC116W	RODM PROCESSING ERROR. ERROR OCCURRED WHILE PROCESSING RESPONSE FROM AGENT. GETTOPO PROCESSING CONTINUES. SERVICE POINT = <i>sp_name</i>, APPLICATION NAME = <i>application.element</i>. COMMAND ENDED IN MODULE <i>module_name</i>.
----------------	---

Explanation

This message is generated when an error with the data the agent has sent occurs, but it was not severe enough for processing to be halted.

Message Variables

sp_name

The name of the service point to which the command was sent.

application.element

The name of the network management application that processes the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the subapplication running.

module_name

The name of the module that was running at the time the error was discovered.

System action

MultiSystem Manager cancels the command.

Operator response

Notify the system programmer.

System programmer response

Check the log for the RODM processing errors, correct the problems and reissue the command.

FLC118E	UNABLE TO INITIALIZE MULTISYSTEM MANAGER WITH INITIALIZATION FILE <i>file_name</i>. IT IS NOT VALID FOR THE <i>next_statement</i> STATEMENT TO FOLLOW THE <i>previous_statement</i> STATEMENT. <i>command_name</i> COMMAND ENDED IN MODULE <i>module_name</i> WITH RETURN CODE <i>return_code</i>.
----------------	---

Explanation

MultiSystem Manager cannot initialize topology and status because the statements in the exception view file are out of sequence.

Message Variables

file_name

The name of the MultiSystem Manager exception view file specified on the EXCEPTION_VIEW_FILE statement in the MultiSystem Manager initialization file

next_statement

The statement specified after *previous_statement*

previous_statement

The statement specified before *next_statement*

command_name

The command that was issued.

module_name

The name of the module that was running at the time the error was discovered

return_code

The return code from the module

System action

- MultiSystem Manager cancels the INITTOPO command.
- MultiSystem Manager does not perform Network topology initialization.
- MultiSystem Manager status changes to INITIALIZATION_FAILED.

Operator response

Notify the system programmer.

System programmer response

Correct the error in the MultiSystem Manager exception view initialization file and reissue the INITTOPO command. See the prologue of sample FLCSEXV for more detail regarding exception view processing.

FLC119E	UNABLE TO INITIALIZE MULTISYSTEM MANAGER WITH INITIALIZATION FILE <i>file_name</i>. EXCEPTION VIEW CLASS OBJECT <i>object</i> DOES NOT EXIST IN RODM. <i>command_name</i> COMMAND ENDED IN MODULE <i>module_name</i> WITH RETURN CODE <i>return_code</i>.
----------------	--

Explanation

MultiSystem Manager cannot initialize topology and status. An exception view class is specified in the exception view file but the RODM object representing this class does not exist.

Message Variables

- file_name***
The name of the MultiSystem Manager exception view file specified on the EXCEPTION_VIEW_FILE statement in the MultiSystem Manager initialization file
- object***
The RODM object specified in the MultiSystem Manager exception view name
- command_name***
The command that was issued
- module_name***
The name of the module that was running at the time the error was discovered
- return_code***
The return code from the module

System action

- MultiSystem Manager cancels the INITTOPO command.
- MultiSystem Manager does not perform Network topology initialization.
- MultiSystem Manager status changes to INITIALIZATION_FAILED.

Operator response

Notify the system programmer.

System programmer response

If the exception view name specified on the EXVWNAME statement in the exception view initialization file is incorrect, correct the error and reissue the INITTOPO command. If the exception view name specified on the EXVWNAME statement is correct, the exception view class object needs to be created in RODM. Modify the appropriate sample loader file to create the exception view class object. The sample loader files that create the exception view class objects start with FLCSDM6. See the prologue of sample FLCSEXV for information regarding exception view processing.

FLC120E	ELEMENT AND CMD KEYWORD CAN NOT BE SPECIFIED TOGETHER. SERVICE POINT = <i>sp_name</i>, APPLICATION NAME = <i>application.element</i>. COMMAND <i>command_name</i> ENDED IN MODULE <i>module_name</i>.
----------------	--

Explanation

The specified command contains the ELEMENT and CMD keywords which cannot be specified together.

Message Variables

- sp_name***
The name of the service point to which the command was sent.
- application.element***
The name of the network management application processing the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the running subapplication.
- command_name***
The command that was issued.
- module_name***
The name of the module that was running at the time the error was discovered.

System action

MultiSystem Manager cancels the command.

Operator response

Reissue the command with valid keywords. See the NetView online help for the command syntax.

FLC121E	UNABLE TO COMMUNICATE WITH THE AGENT AT SERVICE POINT = <i>sp_name</i>, APPLICATION NAME = <i>application.element</i>. COMMAND <i>command_name</i> ENDED IN MODULE <i>module_name</i>.
----------------	---

Explanation

The specified command was sent to the service point but the service point was unable to communicate with the agent.

Message Variables

sp_name

The name of the service point to which the command was sent.

application.element

The name of the network management application processing the command string at this service point. When multiple applications are supported the format is *application.element*, where *element* is the name of the running subapplication.

command_name

The command that was issued.

module_name

The name of the module that was running at the time the error was discovered.

System action

MultiSystem Manager cancels the command.

Operator response

Verify that the NetView for AIX GUI and the msmatm_agent process are active at the agent, and reissue the command. The agent provides a SMIT interface to check the status of its processes.

FLC122E	VALUE <i>value</i> IS NOT VALID FOR KEYWORD <i>keyword</i>. REQUIRED DOUBLE QUOTES ARE MISSING. <i>command_name</i> COMMAND ENDED IN MODULE <i>module_name</i> WITH RETURN CODE <i>return_code</i>.
----------------	--

Explanation

Double quotation marks are required around the specified value.

Message Variables

value

The value that is not valid for the specified keyword

keyword

A keyword for which the value was specified

command_name

The command that was issued

module_name

The name of the module that was running at the time the error was discovered

return_code

The return code from the module

System action

MultiSystem Manager cancels the command.

Operator response

Reissue the command with double quotation marks around the value for the listed keyword. See the NetView online help for the correct command syntax.

FLC126I	GETTOPO COMMANDS FROM MULTISYSTEM MANAGER INITIALIZATION FILE <i>file_name</i> HAVE BEEN PROCESSED.
----------------	--

Explanation

The GETTOPO commands coded in the MultiSystem Manager *file_name* have been processed.

Message Variables

file_name

The name of the initialization file that was processed.

FLC130I	THRESHOLD NAME STATUS
----------------	------------------------------

Explanation

This message contains the list of threshold names and their associated status.

FLC131I	THERE ARE NO THRESHOLDS IN NON-SATISFACTORY STATUS.
----------------	--

Explanation

The DISPTHR command was issued, but there are no threshold names in an unsatisfactory status.

FLC132I	THRESHOLD NAME MONITOR NAME STATUS
----------------	---

Explanation

This message contains the list of threshold names and their associated monitor names and status.

FLC133I	THERE ARE NO MONITORS IN NON-SATISFACTORY STATUS.
----------------	--

Explanation

The DISPMON command was issued, but there are no monitors with thresholds in an unsatisfactory status.

FLC134I	PROCESS NAME
----------------	---------------------

Explanation

This message contains the list of processes that did not load or were unable to load.

FLC135I	THERE ARE NO PROCESSES IN NON-SATISFACTORY STATUS.
----------------	---

Explanation

The DISPPRC command was issued, but there are no processes that cannot be loaded.

FLC136I	PROTOCOL NAME::ADDRESS STATUS
----------------	--------------------------------------

Explanation

This message contains the list of protocol names and addresses and their associated status.

FLC137E	THE OBJECT DOES NOT BELONG TO CLASS <i>object_class</i>. COMMAND <i>command_name</i> IS ONLY ALLOWED FOR OBJECTS BELONGING TO THIS CLASS.
----------------	--

Explanation

The command that was issued is not a valid command for the object class of the specified RODM object ID.

Message Variables

- object_class***
The RODM object class of the target object
- command_name***
The command that was issued

System action

MultiSystem Manager cancels the command.

Operator response

Reissue the command with an object ID of the correct class.

FLC140E	TCP/IP ERROR WITH <i>socket_call</i> CALL: <i>tcpip_error</i>.
----------------	---

Explanation

The following TCP/IP error occurred *tcpip_error* in the *socket_call* phase.

Message Variables

- socket_call***
The phase of the socket call that failed
- tcpip_error***
The error information returned from TCP/IP

System action

MultiSystem Manager cancels the command.

Operator response

Check that the service point and port number were specified correctly. Check the TCP/IP connectivity between the service point and NetView program.

System programmer response

Ensure TCP/IP is running and any required links to the service point are up.

FLC141E	FLCACCHK HAS DENIED ACCESS TO SERVICE POINT <i>sp_name</i> FOR APPLICATION <i>application</i> AND PORT <i>port</i> WITH RETURN CODE <i>return_code</i> FOR COMMAND <i>command_name</i>.
----------------	--

Explanation

The NetView operator does not have access to the *command_name* command being issued to the specified service point and application.

Message Variables

- sp_name***
The name of the service point to which the command was sent
- application***
The name of the network management application that processes the command string at this service point
- port***
The number of the port in which to communicate with the agent
- return_code***
The return code from the module
- command_name***
The command that was issued

System action

MultiSystem Manager cancels the command.

Operator response

Ensure the module FLCACCHK is configured to allow operators to access the correct commands.

System programmer response

Determine which authority is incorrect and update FLCACCHK with the corrections.

FLC145W **THE FOLLOWING MESSAGE(S) INDICATE TOPOLOGY INCONSISTENCIES DETECTED BY THE MSM AGENT. *command_name* keyword COMMAND FOR SERVICE POINT *sp_name* WITH APPLICATION NAME *application_name* WILL CONTINUE PROCESSING.**

Explanation

There were inconsistencies in the topology data gathered for the specified service point. The command will continue processing.

Message Variables

command_name

The command that was issued.

keyword

The keyword or keywords specified on the GETTOPO command that define the type of GETTOPO command that was issued.

sp_name

The name of the service point where the command was sent.

application_name

The name of the network management application processing the command string at this service point. The *application_name* is also referred to as the application ID.

System action

The system logs the inconsistencies found by the MultiSystem Manager agent.

The MultiSystem Manager agent remains operational and GETTOPO commands are still processed.

Operator response

Notify the system programmer.

System programmer response

Resolve the agent inconsistencies.

FLC178I **Messages**

Explanation

Any FLCV2RCM messages concerning the current invocation will follow this message.

System action

Related messages follow this one.

Operator response

Look for more related messages until message FLC179I is received.

System programmer response

Look for more related messages until message FLC179I is received.

FLC179I **PROCESSING COMPLETE**

Explanation

Any FLCV2RCM messages concerning the current invocation will follow this message.

Operator response

Previous messages concerning this invocation will be logged starting with the FLC178I message.

System programmer response

Previous messages concerning this invocation will be logged starting with the FLC178I message.

FLC180E **EMPTY *statement* STATEMENT ENDING ON LINE *line*.**

Explanation

No valid statements followed the **VIEW** or **AGGREGATE** statement.

Message Variables

statement

One of: **VIEW** or **AGGREGATE**, indicating the type of collection being defined.

line

The line number of the input that contained the **VIEW** or **AGGREGATE** statement.

System action

The indicated view or aggregate is ignored.

Operator response

Check for FLC184E messages following this message; they indicate other statements that can be present, but in error. Correct the input and retry.

System programmer response

Check for FLC184E messages following this message; they indicate other statements that can be present, but in error. Correct the input and retry.

FLC181E **NO INPUT RECEIVED**

Explanation

No input was sent to FLCV2RCM. FLCV2RCM is typically invoked as a PIPE stage; when FLCV2RCM was invoked, there was no input available.

Operator response

Check that the invocation is correct, and that input is being sent to FLCV2RCM.

System programmer response

Check that the invocation is correct, and that input is being sent to FLCV2RCM.

FLC182E ERROR INVOKING FLCARODM:

Explanation

FLCARODM was invoked as part of FLCV2RCM processing, but errors were encountered. Those error messages from FLCARODM follow this message.

System action

Processing Stops.

Operator response

Check the log for FLCARODM messages, and correct the resulting problems.

System programmer response

Common FLCARODM function problems are RODM name and RODM authority definitions. See the CNMSTYLE member for information on setting these values.

**FLC183I *return_code/reason_code* ARE THE
 FLCARODM FUNCTION *function*
 RODM RETURN/REASON CODES**

Explanation

FLCARODM was invoked as part of FLCV2RCM processing, but an error as encountered. Those error messages from FLCARODM follow this message.

Message Variables

return_code

The RODM return code of the request.

reason_code

The RODM reason code of the request.

function

The FLCARODM function being performed.

System action

Processing stops.

Operator response

Notify the system programmer.

System programmer response

Check the return and reason codes in the *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide* for help diagnosing the problem. Common FLCARODM function problems are RODM name and RODM authority definitions. See the CNMSTYLE member for information on setting these values.

**FLC184E UNSUPPORTED STATEMENT
 statement ENDING ON LINE *line***

Explanation

A statement was encountered that is not supported.

Message Variables

statement

The unsupported statement.

line

The last line number of the input that concerns this statement.

System action

Processing continues.

Operator response

Check the input from the indicated line and work backwards to find the unsupported statement. Correct that statement and retry.

If this message is from the RODM collection manager GUI, see sysprog.

System programmer response

Check the input from the indicated line and work backwards to find the unsupported statement. Correct that statement and retry.

If this message is from the RODM collection manager GUI, record the steps taken and contact IBM Software Support.

**FLC185E UNABLE TO READ CONTROL FILE
 *file***

Explanation

FLCV2RCM needs the control file to operate; this file defines the supported statements and corresponding actions to take on them. If that file cannot be found, operation cannot continue.

Message Variables

file
The name of the control file that should exist in the DSIPARM concatenation.

System action

Processing stops.

Operator response

Notify the system programmer.

System programmer response

Check that the control file exists and is in the DSIPARM concatenation of the NetView JCL procedure. Determine the cause of the error. If you edited the data set since the NetView program was initialized, the data set might need to be compressed or reaccessed using the REACC command.

FLC186E	NO OBJECT TYPES WERE RECOGNIZED IN CONTROL FILE <i>file</i>
----------------	--

Explanation

The control file *file* was found, but it did not contain usable information.

Message Variables

file
The name of the control file.

System action

Processing stops.

Operator response

Notify the system programmer.

System programmer response

Check to see that File, which exists in the DSIPARM concatenation, is the same as what was shipped with NetView program.

FLC187I	CREATED COLLECTION OBJECT <i>object</i> IN CLASS <i>class</i>
----------------	--

Explanation

The collection named *object* was successfully created.

Message Variables

object
The name of the collection.

class
The name of the RODM class that contains the collection.

Chapter 12. FLCI Prefix Messages

FLCI prefix messages are issued by MultiSystem Manager Internet Protocol agent.

FLCI000E **Processing finished, output file name is: *file_name*.**

Explanation

The MultiSystem Manager IP topology agent has successfully written the specified topology file.

FLCI001E **Unable to communicate to local AIX host.**

Explanation

The MultiSystem Manager IP topology agent driver was unable to communicate with the local AIX host system.

System action

AIX process *flcidrv* ends.

Operator response

Contact the system programmer.

System programmer response

The local AIX operating environment might have become unstable. See *NetView for AIX Problem Determination* for problem resolution.

FLCI002E **Unable to use specified socket.**

Explanation

An unusable socket number was given to AIX process *flcidrv*.

System action

AIX process *flcidrv* ends.

Operator response

Retry the operation with a socket number that is both greater than 2999 and not in use. If the operation still fails, contact the system programmer.

System programmer response

1. Verify that the socket specified in the topology agent's NetView for AIX registration file does not conflict with another socket address specified in the */etc/services* file.

If it does, you must chose another socket and specify it in the topology agent's NetView for AIX registration file *usr/OV/registration/C/flci.reg*.

2. Retry the operation.

FLCI003E **Unable to allocate socket.**

Explanation

An error occurred while trying to allocate a socket for AIX process *flcidrv*.

System action

AIX process *flcidrv* ends.

Operator response

Retry the operation. If it still fails, contact the system programmer.

System programmer response

1. Verify that the socket specified in the topology agent's NetView for AIX registration file does not conflict with another socket address specified in the */etc/services* file.

If it does, you must chose another socket and specify it in the topology agent's NetView for AIX registration file *usr/OV/registration/C/flci.reg*.

2. Retry the operation. If the problem persists, the local AIX operating environment might have become unstable. See *NetView for AIX Problem Determination* for problem resolution.

FLCI004E **Unable to connect to server: *connection_error***

Explanation

The listed connection error occurred while trying to establish a socket connection between AIX processes *flcitopo* and *flcidrv*.

System action

AIX process *flcidrv* ends.

Operator response

Retry the operation. If it still fails, contact the system programmer.

System programmer response

Restart the topology agent. If the problem persists, the local AIX operating environment might have become unstable. See *NetView for AIX Problem Determination* for problem resolution.

**FLCI005E Unable to send to server:
 send_error**

Explanation

The listed error occurred while attempting to send a message from AIX process *flcidrv* to *flcitopo*.

System action

AIX process *flcidrv* ends.

Operator response

Retry the operation. If unsuccessful, contact the system programmer.

System programmer response

The local AIX operating environment might have become unstable. See *NetView for AIX Problem Determination* for problem resolution.

**FLCI006E Unable to receive from server:
 receive_error**

Explanation

The listed error occurred while AIX process *flcidrv* attempted to receive a message from *flcitopo*.

System action

AIX process *flcidrv* ends.

Operator response

Retry the operation. If it still fails, contact the system programmer.

System programmer response

The local AIX operating environment might have become unstable. See *NetView for AIX Problem Determination* for problem resolution.

**FLCI007E Unable to use specified file name:
 file_name**

Explanation

An error occurred while attempting to use the specified file for topology data.

System action

Topology file is not created.

Operator response

Retry the operation. If it still fails, contact the system programmer.

System programmer response

Verify that file permissions allow AIX process *flcitopo* to write the file in the specified location.

**FLCI008E OVw database returned a null
 map.**

Explanation

The MultiSystem Manager IP topology agent was unable to obtain map information from NetView for AIX.

System action

Topology file is not created.

Operator response

Verify that NetView for AIX is running and responds normally to user input. Retry the operation. If it still fails, contact the system programmer.

System programmer response

Restart NetView for AIX. If the problem persists, see *NetView for AIX Problem Determination* for problem resolution.

**FLCI009E OVw database returned a null
 symbol list.**

Explanation

The MultiSystem Manager IP topology agent was unable to obtain a submap symbol list from NetView for AIX.

System action

Topology file is not created.

Operator response

Retry the operation. If the problem persists, contact the system programmer.

System programmer response

Restart NetView for AIX. If the problem persists, see *NetView for AIX Problem Determination* for problem resolution.

FLCI010E	OVw database returned a null field bind list.
-----------------	--

Explanation

The MultiSystem Manager IP topology agent was unable to obtain an object's field value list from NetView for AIX.

System action

Topology file is not created.

Operator response

Retry the operation. If it still fails, contact the system programmer.

System programmer response

Restart NetView for AIX. If the problem persists, see *NetView for AIX Problem Determination* for more information that can help you solve the problem.

FLCI011E	Topology agent is managing map: <i>attached_map_name</i>
-----------------	---

Explanation

Process FLCITOP0 is currently attached to a map that does not match the requested map.

System action

The topology file is not created.

Operator response

1. Open the desired map through the NetView for AIX end user interface.
2. Stop and restart the MultiSystem Manager topology agent.
3. Retry the operation.

FLCI012E	Incorrect invocation.
-----------------	------------------------------

Explanation

AIX process *flcidrv* was invoked with incorrect parameters.

System action

AIX process *flcidrv* ends.

Operator response

Retry the operation using the correct parameters.

FLCI013E	Undefined return code received from AIX process <i>flcitopo</i>.
-----------------	---

Explanation

AIX process *flcidrv* received an undefined return code from *flcitopo*.

System action

AIX process *flcidrv* ends.

Operator response

Retry the operation. If the problem persists, contact the system programmer.

System programmer response

The local AIX operating environment might have become unstable. See *NetView for AIX Problem Determination* for more information that can help you solve the problem.

FLCI014E	Topology agent request timed out.
-----------------	--

Explanation

A timeout occurred while AIX process *flcidrv* was waiting for a response from AIX process *flcitopo*.

System action

AIX process *flcidrv* ends.

Operator response

Stop any unnecessary processes to free system resources. Retry the operation. If the problem persists, contact the System Programmer.

System programmer response

The AIX system might be too busy to process the topology information before the mainframe NetView COS gateway timeout occurs. If the AIX system performance cannot be improved by increasing paging space or by stopping unnecessary processes, increase the mainframe NetView COS gateway timeout and specify a longer timeout value for the AIX process *flcidrv*.

FLCI015E	Topology agent fatal condition: <i>exit_condition_text</i>
-----------------	---

Explanation

The MultiSystem Manager IP topology agent logged a fatal condition.

System action

AIX process *flcitopo* ends.

Operator response

Contact the system programmer.

System programmer response

Check the file */usr/OV/log/flcitopolog* for the cause of the problem.

FLC1016E Topology agent error: *error_text*

Explanation

The MultiSystem Manager IP topology has logged an error.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

Check the file */usr/OV/log/flcitopolog* for the cause of the error.

**FLC1017I Topology agent message:
*message_text***

Explanation

The MultiSystem Manager IP topology agent logged a message.

System action

Agent processing continues.

**FLC1018I Current® topology agent
configuration: Agent=*status*
Port=*socket_port*
Host=*AIX_host_name*
NvLevel=*NetView for AIX_version*
AgentLevel=*agent_version*
DrvLevel=*driver_version*
MapName=*attached_map_name***

Explanation

The current MultiSystem Manager IP topology agent configuration.

**FLC1019E Topology agent did not find
specified resource: *resource_name***

Explanation

The specified resource does not exist in the NetView for AIX database.

System action

Topology file is not created.

Operator response

1. Verify that the resource actually exists in NetView for AIX by using NetView for AIX's Locate Objects By Selection Name function.
2. Retry the operation, specifying a resource that exists in NetView for AIX.

FLC1020E Topology agent unavailable.

Explanation

The topology agent is not currently running.

System action

AIX process *flcidrv* ends.

Operator response

Verify that NetView for AIX, including the user interface, is running.

1. If it is, select the NetView for AIX menu option to restart the MultiSystem Manager topology agent.
2. If NetView for AIX is not running, restart it.
3. Retry the operation.

**FLC1021E Topology agent unable to write
specified file: *file_name***

Explanation

The MultiSystem Manager IP topology agent was unable to write the specified file. The problem might be in the AIX file system.

System action

Topology file is not created.

Operator response

Retry the operation. If problem persists, contact the system programmer.

System programmer response

- 1. Verify that there is enough room in the specified file system and that file permissions allow the NetView for AIX operator to write.
- 2. Delete old or unnecessary files.
- 3. Retry the operation.

If the problem persists, the local AIX operating environment is probably unstable. See *NetView for AIX Problem Determination* for problem resolution information.

FLCI022I	Stop message has been sent to topology agents.
-----------------	---

Explanation

Running topology agents were instructed to stop after they complete their last pending request.

FLCI023E	OVw database contains a loop concerning these objects: <i>objects_in_error</i>
-----------------	---

Explanation

The MultiSystem Manager IP topology agent encountered a looping condition in the OVw database.

System action

Processing continues.

Operator response

Contact the system programmer.

System programmer response

Run `ovtopofix` against the database in which the looping error occurred.

FLCI024E	GETTOPO command has been issued but no response is received.
-----------------	---

Explanation

No response for GETTOPO command can indicate the agent is busy.

System action

The GETTOPO command cannot be completed.

Operator response

Retry the operation. If the condition persists, contact the system programmer.

System programmer response

Determine whether the agent is taking an abnormally long time to complete the task. This time frame can be established by system programmer experience or by looking at differences in timestamps between start and end log entries in the `/usr/OV/log/flcitopolog` log. If the command is taking too long to complete, the problem might be in database. Check the cache size of `ovwdb` versus how many objects are in the database. There should be a 15% cushion. If this is not the cause of the problem, issue the following command:

```
ovtopofix -f
```


Chapter 13. IHS Prefix Messages Issued from the Host

IHS prefix messages are used for NetView instrumentation. This chapter describes IHS prefix messages that are issued from the host. Chapter 14, “IHS Prefix Messages Issued from the NetView Management Console Workstation,” on page 699 describe IHS prefix messages that are issued from the NetView management console workstation.

Note: In some instances, a message *number* issued from the host might be identical to a message *number* issued from the NetView management console workstation, differing only in the suffix. Both the text of the message and the explanation of the message are very different. For example, IHS0200I is issued from the host, while IHS0200E is issued from the workstation.

Message IHS0200I reads:

"service: Number of ServerPorts (*number*) exceeds the maximum of *maximum*; ignoring extras."

An explanation follows, providing additional details specific to the IHS0200I message.

Message IHS0200E reads:

"The configuration file ihscacm.cfg was not found. Verify that the file exists in the \$BINDIR/TDS/Server/config directory and that the BINDIR environment variable is set."

An explanation follows, providing additional details specific to the IHS0200E message,

IHS001I HEARTBEAT INTERVAL FOR CMAS COMPONENTS IS SET TO *number* MINUTES.

Explanation

The current heartbeat interval (*number*) in minutes for the CICSplex® SM address space (CMAS) components.

Message Variables

number

The number of minutes to which the heartbeat interval is set as returned by the Query Pulse task.

IHS002E CMAS MONITORING NOT STARTED. START PARAMETER NOT VALID.

Explanation

CICSplex SM Instrumentation cannot start CICSplex SM address space (CMAS) monitoring because one or more parameters in the IHSCCMIN call in DSIAMII were missing or not valid.

System action

CMAS monitoring is not started, processing continues.

Operator response

Notify your system programmer

System programmer response

Specify the correct parameters in DSIAMII.

IHS003E CICS MONITORING NOT STARTED. START PARAMETER NOT VALID.

Explanation

CICSplex SM Instrumentation cannot start CICS® monitoring because one or more parameters in the IHSCCIIN call in DSIAMII were missing or not valid.

System action

CICS monitoring is not started, processing continues.

Operator response

Notify your system programmer.

System programmer response

Specify the correct parameters in DSIAMII.

IHS004E CICSplex SM INSTRUMENTATION RELEASE NOT VALID.

Explanation

The start parameter in the IHSCCIIN call in DSIAMII for the product release was missing or not valid.

System action

CICSplex SM Instrumentation does not proceed.

Operator response

Notify your system programmer.

System programmer response

Specify the correct parameters in DSIAMII.

IHS005I EVENT IDENTIFIER NOT FOUND.

Explanation

The Display Last Event task ran, but no events exist for the component at the present time.

IHS007E CPSMAPI FAILED *text*, RESPONSE *value*, REASON *value*, RESULT *value*

Explanation

CICSplex SM Instrumentation cannot establish a connection due a CICSplex SM API problem.

Message Variables

text

Error text that explains the API call being executed when the failure occurred. For example, "ERROR PERFORMING TPARSE".

value

The response, reason, and result values returned by the API called.

The result value is optionally returned.

System action

CICSplex SM instrumentation does not proceed.

Operator response

Notify your system programmer.

System programmer response

See the *IBM CICSplex System Manager for MVS/ESA Application Program Interface* manual for more information about the returned response, reason and result values.

IHS008E *module name* FAILED FOR *component ID*, RETURN *return code*.

Explanation

The specified IBM Z NetView Instrumentation Facility API call failed for the specified component.

Message Variables

module name

The routine to which the incorrect CID was passed.

component ID

The passed component identifier.

return code

The return code identifying the failure.

System action

The current task fails to complete.

Operator response

Notify your system programmer.

System programmer response

See the *IBM CICSplex System Manager for MVS/ESA Application Program Interface* for details about return codes for the specified API.

IHS010I IRC STATE IS *value*

Explanation

The current interregion communication (IRC) state value.

Message Variables

value

The current IRC state value as returned by the Query IRC State task.

IHS012I VTAM STATE IS *value*.

Explanation

The current VTAM state value.

Message Variables

value

The current VTAM state value as returned by the Query VTAM State task.

IHS013E INPUT PARAMETER *parm* NOT VALID.

Explanation

CICSplex SM Instrumentation ran an internal task using a parameter that was not valid.

Message Variables

parm

The incorrect parameter value.

System action

The current task fails to complete.

Operator response

Notify your system programmer.

System programmer response

Contact IBM Software Support.

IHS014I	HEARTBEAT INTERVAL FOR CICS COMPONENTS IS SET TO <i>number</i> MINUTES.
----------------	--

Explanation

The heartbeat for the CICS components is currently set at the time interval (*number*) in minutes.

Message Variables

number

The number of minutes to which the time interval is set as returned by the Query Pulse task.

IHS500E	GLOBAL VARIABLE PREFIX IHS.DB2.GLOBAL.PREFIX NOT DEFINED. INITAMI HAS NOT BEEN RUN.
----------------	--

Explanation

The INITAMI command was not run before the instrumentation routines were called. Do not issue the DB2® CLISTs directly.

System action

DB2 instrumentation ends.

Operator response

Notify the system programmer.

System programmer response

Run the NetView INITAMI command.

IHS502E	GLOBAL VARIABLE <i>variable name</i> NOT DEFINED IN CLIST <i>module name</i>.
----------------	--

Explanation

The IBM Z NetView global variable *variable name* was not initialized.

Message Variables

variable name

The name of the global variable.

module name

The name of the module from which the global variable was referenced.

System action

The current task fails to complete.

Operator response

Notify the system programmer.

System programmer response

Contact IBM Software Support.

IHS503E	LOCATE TASK CONTAINS INCORRECT INPUT VALUE <i>resource_name</i> IN CLIST <i>module_name</i>.
----------------	---

Explanation

The user has entered an incorrect resource name in the LOCATE pop-up dialog.

Message Variables

resource_name

The erroneous value passed to the LOCATE task.

module_name

The name of the module that detected the error.

System action

The LOCATE task fails to complete.

Operator response

Ensure the name entered is formatted correctly (as per DB2 SQL statement conventions). Then issue the LOCATE task again.

IHS504E	GEM API <i>API_name</i> FAILED WITH RC <i>return_code</i> FOR <i>CID</i> IN CLIST <i>module_name</i>.
----------------	--

Explanation

The Tivoli GEM API *API_name* return code was not zero.

Message Variables

API_name

The name of the Tivoli GEM API routine that failed.

return_code

The return code from the Tivoli GEM API routine.

CID

The component identifier.

module_name

The module from which the Tivoli GEM API was called.

System action

The current task fails to complete.

Operator response

Notify the system programmer.

System programmer response

Report to IBM Software Support any return codes that are more severe than the warning level as documented in the *Tivoli GEM Advanced Business System Enablement Guide*.

IHS505I	INCORRECT INPUT VALUE FOR ACCESS TYPE. VALUE MUST BE RW OR RO.
----------------	---

Explanation

The access type entered was not RW (read write) or RO (read only).

System action

The task fails to complete.

Operator response

Specify the correct access type parameter, then invoke the task again.

IHS506I	<i>subsystem</i> NOT STARTED
----------------	-------------------------------------

Explanation

The specified DB2 subsystem was not started.

Message Variables

subsystem

The DB2 subsystem name.

System action

No instrumentation will be performed for this DB2 subsystem.

IHS507I	DDF FOR <i>subsystem</i> NOT STARTED.
----------------	--

Explanation

The distributed data facility (DDF) for the specified DB2 subsystem was not started.

Message Variables

subsystem

The DB2 subsystem name.

IHS508I	UTILITY ABENDED FOR <i>subsystem</i>.
----------------	--

Explanation

A utility in the specified DB2 subsystem ended abnormally.

Message Variables

subsystem

The DB2 subsystem name.

IHS509I	DDF FOR <i>subsystem</i> UP AND OPERATIONAL.
----------------	---

Explanation

The distributed data facility (DDF) for the specified DB2 subsystem started successfully.

Message Variables

subsystem

The DB2 subsystem prefix.

IHS510I	<i>API namemessage text</i>
----------------	------------------------------------

Explanation

This message is used to prefix the output of all DB2 commands issued from the Tivoli GEM console.

Message Variables

message text

The output of all DB2 commands issued from the Tivoli GEM console.

System action

The specified Tivoli GEM API ran successfully.

IHS511I	DATABASE DSNCDB01 (SYSTEM DIRECTORY) CANNOT BE QUERIED.
----------------	--

Explanation

The LOCATE task cannot query database DSNCDB01 because it is the system directory.

IHS512E	DSIGET FAILURE.
----------------	------------------------

Explanation

The NetView DSIGET command failed in the IHSB2SQL routine.

System action

The LOCATE task fails to complete.

Operator response

Notify the system programmer.

System programmer response

Contact IBM Software Support.

IHS513E	A MINIMUM OF 2 PARAMETERS REQUIRED.
----------------	--

Explanation

A parameter that was passed to the IHSB2SQL routine was not valid.

System action

The LOCATE task fails to complete.

Operator response

Notify the system programmer.

System programmer response

Contact IBM Software Support.

IHS514E	THE DB2 SUBSYSTEM NAME MUST BE 1-4 CHARACTERS LONG.
----------------	--

Explanation

A parameter that was passed to the IHSB2SQL routine was not valid.

System action

The LOCATE task fails to complete.

Operator response

Notify the system programmer.

System programmer response

Contact IBM Software Support.

IHS515E	THE SECOND PARAMETER MUST BE "SELECT".
----------------	---

Explanation

A parameter that was passed to the IHSB2SQL routine was not valid.

System action

The LOCATE task fails to complete.

Operator response

Notify the system programmer.

System programmer response

Contact IBM Software Support.

IHS516E	THE SQL STATEMENT EXCEEDS THE MAXIMUM OF 256 CHARACTERS.
----------------	---

Explanation

A parameter that was passed to the IHSB2SQL routine was not valid.

System action

The LOCATE task fails to complete.

Operator response

Notify the system programmer.

System programmer response

Contact IBM Software Support.

IHS517E	CONNECT TO DB2 SUBSYSTEM "subsystem" FAILED. RETURN CODES <i>return_code</i>/<i>reason_code</i>
----------------	--

Explanation

The IHSB2SQL routine failed to connect to the DB2 subsystem.

Message Variables***subsystem***

The DB2 subsystem name.

return_code

The return code from the DB2 Call Attachment Facility.

reason_code

The reason code from the DB2 Call Attachment Facility.

System action

The LOCATE task fails to complete.

Operator response

Notify the system programmer.

System programmer response

Be sure that the DB2 subsystem is active before contacting your DB2 system administrator. If you continue to receive this message. Contact IBM Software Support.

IHS518E	SQL ERROR RETURNED SQLCODE=<i>return_code</i>
----------------	--

Explanation

A serious SQL error occurred when executing the LOCATE task.

Message Variables***return_code***

The SQL return code.

System action

The LOCATE task fails to complete.

Operator response

Notify the system programmer.

System programmer response

Contact IBM Software Support

IHS519E	SQL WARNING RETURNED SQLCODE=<i>return_code</i>
----------------	--

Explanation

An SQL warning level error occurred when executing the LOCATE task.

Message Variables***return_code***

The SQL return code.

System action

The LOCATE task fails to complete.

Operator response

Notify the system programmer.

System programmer response

Contact IBM Software Support.

IHS520E	TOO MANY COLUMNS REQUESTED.
----------------	--

Explanation

The data returned from the SQL request exceeds the space available to hold it.

System action

The LOCATE task fails to complete.

Operator response

Notify the system programmer.

System programmer response

Contact IBM Software Support.

IHS521E	COLUMN TYPE IS NOT SMALLINT, INT, CHAR, VARCHR.
----------------	--

Explanation

An incorrect SQL call has been attempted.

System action

The LOCATE task fails to complete.

Operator response

Notify the system programmer.

System programmer response

Contact IBM Software Support.

IHS522E	SQL DATA BUFFER OVERFLOW.
----------------	----------------------------------

Explanation

An SQL error occurred when executing the LOCATE task.

System action

The LOCATE task fails to complete.

Operator response

Notify the system programmer.

System programmer response

Contact IBM Software Support.

IHS523E	MSG DATA BUFFER OVERFLOW.
----------------	----------------------------------

Explanation

An SQL error occurred when executing the LOCATE task.

System action

The LOCATE task fails to complete.

Operator response

Notify the system programmer.

System programmer response

Contact IBM Software Support.

IHS527E **CALL TO DB2 DSNWLI FAILED.**
DB2 RETURN CODES *xxxxxxxx/*
yyyyyyyy

Explanation

The IHSB2IFI routine received a non-zero return code from DSNWLI.

Message Variables

xxxxxxxx

Register 15 value after the DSNWLI call.

yyyyyyyy

Register 0 (zero) value after the DSNWLI call.

System action

The current task fails to complete.

Operator response

Notify the system programmer.

System programmer response

Contact IBM Software Support.

IHS528E **CALL TO DB2 IFI FAILED. DB2**
RETURN CODES *xxxxxxxx/yyyyyy*

Explanation

The call to DSNWLI was successful, but non-zero return codes were returned from the DB2 Instrumentation Facility Interface (IFI).

Message Variables

xxxxxxxx

Return code from the DB2 IFI.

yyyyyyyy

Reason code from the DB2 IFI.

System action

The current task fails to complete.

Operator response

Notify the system programmer.

System programmer response

Contact IBM Software Support.

IHS529I **IDBACK=*nn* IDFORE=*nn***
CTHREAD=*nn* MAXDBAT=*nn*

Explanation

Along with the IBM Z NetView message automation table, DB2 for z/OS instrumentation uses this message to return data from the DISPLAY NUMBER OF THREADS task.

Message Variables

nn

Returned data field.

IHS532I **NO TARGET NETVIEWS FOUND IN**
THIS FOCAL POINT'S SPHERE OF
CONTROL.

Explanation

No targets are currently defined for this IBM Z NetView focal point. Instrumentation will only be performed for the DB2 subsystems that run on the system focal point.

Operator response

Notify the system programmer.

System programmer response

The IBM Z NetView FOCALPT DISPSOC command returned no target for the ALERT category. Confirm that you have correctly defined all required targets to the focal point.

IHS533W **NO RESOURCES FOUND FOR *DB2***
subsystem* ON *domain

Explanation

No databases, tablespaces, or indexes were found for the specified DB2 subsystem. This DB2 subsystem might not currently be active.

Message Variables

DB2 subsystem

The DB2 subsystem for which instrumentation is being performed.

domain

The NetView domain name associated with the operating system on which this DB2 subsystem is running.

Operator response

Notify the system programmer.

System programmer response

When the DB2 subsystem is active and no resources are discovered, contact IBM Software Support.

IHS540E **INPUT VALUES CANNOT BE ENTERED FOR BOTH TABLESPACE AND INDEX.**

Explanation

Both a tablespace name and an index name were entered in the LOCATE task dialog box. One or the other must be used.

System action

The LOCATE task fails to complete.

Operator response

Enter a tablespace name or an index name for the LOCATE task.

IHS541E **IHSB2REG FAILURE FOR suborigin. RC=return code.**

Explanation

The heartbeat routine ended because a FATAL error occurred for the Tivoli GEM Register Component API GEMREG.

Message Variables

suborigin

The suborigin name of the component being registered.

return code

Return code from Tivoli GEM API GEMREG.

System action

Heartbeat routine ends.

Operator response

Notify the system programmer.

System programmer response

Contact IBM Software Support.

IHS544I **INCORRECT OPTION *user option* FOR INSTANCE FILTERING. TRY 'YES' OR 'NO'.**

Explanation

The user entered an incorrect value for an instance filter.

Message Variables

user option

Parameter entered in the instance filter dialog.

Operator response

Ensure that the option is either YES or NO. Then issue the task again with the correct option set.

IHS545I **INSTANCE FILTERING FOR *database* ALREADY *state*. NO ACTION TAKEN.**

Explanation

No action is taken as the database is already enabled or disabled for instance filtering.

Message Variables

database

Database name.

state

Enabled or Disabled.

System action

No action taken as the database is already enabled or disabled for instance filtering.

IHS546W **GEMAPI *GEMAPI* FAILED WITH RC *RC* FOR *CID* IN *module*. PROCESSING CONTINUES.**

Explanation

A Tivoli GEM API call returned a non-fatal return code.

Message Variables

GEMAPI

Name of the Tivoli GEM API which failed.

RC

The return code.

CID

The component identifier.

module

CLIST from which the failed Tivoli GEM API was called.

System action

Processing continues.

IHS547I **INSTANCE FILTERING WILL BE *state* FOR THIS DATABASE.**

Explanation

Instance filtering for this database will be enabled or disabled.

Message Variables

state

Enabled or Disabled.

IHS548I **INSTANCE FILTERING WILL BE**
state FOR ALL DATABASES
BELONGING TO THIS
SUBSYSTEM.

Explanation

Instance filtering has been enabled or disabled for this DB2 subsystem.

Message Variables

state

Enabled or Disabled.

IHS549W **DB2 RELEASE LEVEL COULD NOT**
BE DETERMINED FOR *subsystem*

Explanation

Unable to determine the DB2 release level.

Message Variables

subsystem

The current DB2 subsystem.

System action

Processing continues.

Operator response

Notify the system programmer.

System programmer response

Contact IBM Software Support.

IHS550W **DB2 SUBSYSTEM *subsystem* WAS**
LISTED IN THE GEM
CONFIGURATION FILE. IT WAS
NOT FOUND ON *domain*

Explanation

A user specified subsystem was found in the DB2 configuration file but did not exist on the IBM Z NetView domain.

Message Variables

subsystem

DB2 subsystem entered in the DB2 configuration file.

domain

Domain name entered in the configuration file.

System action

Processing continues. The subsystem is ignored.

Operator response

Check the DB2 configuration file for correct subsystem name entry.

IHS551W **DOMAIN *domain* WAS LISTED IN**
THE GEM CONFIGURATION FILE
BUT IS NOT IN THIS NETVIEW'S
SPHERE OF CONTROL.

Explanation

A user specified IBM Z NetView domain was found in the configuration file but does not exist.

Message Variables

domain

Domain name entered in the DB2 configuration file.

System action

Processing continues. Any subsystems specified on this domain will be ignored.

Operator response

Check the DB2 configuration file for correct domain name entry.

IHS552E **THE INPUT VALUE FOR *field* MUST**
BE NUMERIC.

Explanation

A type mismatch has occurred for this field in the DB2 configuration file.

Message Variables

field

The field in the DB2 configuration file with the type mismatch.

System action

The task fails.

Operator response

Reenter the data as a numeric field.

IHS553E **MONITOR NAME *monitor* IS NOT**
VALID.

Explanation

The GEM API GEMTHRSH call failed because of a monitor name that was not valid.

Message Variables

monitor

The incorrect monitor name entered.

System action

Processing continues.

Operator response

Notify the system programmer.

System programmer response

Contact IBM Software Support.

IHS554E	UNKNOWN MONITOR NAME <i>monitor</i>
----------------	---

Explanation

The specified monitor name *monitor* is not known to DB2 for z/OS instrumentation.

Message Variables**monitor**

The unknown monitor name entered.

System action

Processing continues.

Operator response

Ensure that the name entered is a valid monitor name. If it is a valid monitor name, contact your system programmer.

System programmer response

Contact IBM Software Support.

IHS555I	THIS COMMAND VALID ONLY FOR DB2 VERSION 6.1.
----------------	---

Explanation

User error. A task valid only for DB2 V6.1 was performed on a non V6.1 DB2.

System action

The task fails and processing continues.

IHS556W	GEM CONFIGURATION FILE CONTAINED NO DB2 SUBSYSTEMS AND DISCOVERY WAS SET TO 'CONFIGURE'.
----------------	---

Explanation

With the discovery type set to 'CONFIGURE' there are no possible resources to instrument.

System action

Instrumentation can not continue.

Operator response

Edit the Tivoli GEM configuration file to specify at least one DB2 subsystem or set the discovery type to 'DYNAMIC' and issue INITAMI again.

IHS557E	GEM CONFIGURATION FILE <i>filename</i> READ FAILED. DISCOVERY TERMINATED.
----------------	--

Explanation

Tivoli GEM was unable to read the DB2 configuration file. Either the DB2 configuration file does not exist or there has been an I/O error in reading the file.

Message Variables***filename***

The name of the Tivoli GEM DB2 configuration file.

System action

Processing ends.

Operator response

Processing ends. Ensure that the configuration file exists.

System programmer response

Contact IBM Software Support.

IHS558E	GEM CONFIGURATION FILE <i>configuration filename</i> COULD NOT INCLUDE THE FILE <i>filename</i>
----------------	--

Explanation

The configuration file has one or more %INCLUDE statments specifying included files. The included file cannot be read.

Message Variables***configuration filename***

The name of the Tivoli GEM DB2 configuration file.

filename

The name of the file that cannot be included.

System action

Processing continues.

Operator response

Ensure that the included file exists and is in the NetView DSIAPRM data set concatenation.

System programmer response

Contact IBM Software Support.

IHS559W	SSNAME PARAMETER NOT FOUND IN GEM CONFIGURATION FILE ENTRY.
----------------	--

Explanation

An user error occurred in defining the GEM DB2 configuration file as a SSNAME field was not found.

System action

Processing continues. The entry is ignored.

Operator response

Edit the Tivoli GEM DB2 configuration file.

IHS560W	DOMAIN PARAMETER NOT FOUND IN GEM CONFIGURATION FILE ENTRY.
----------------	--

Explanation

A user error occurred in defining the Tivoli GEM DB2 configuration file as the DOMAIN field was not found.

System action

Processing continues. The entry is ignored.

Operator response

Edit the Tivoli GEM DB2 configuration file.

IHS561W	UNRECOGNIZED PARAMETER <i>parm</i> DEFINED FOR <i>domain.substem</i> IN <i>filename</i>. <i>parm</i> IS INGNORED.
----------------	--

Explanation

An unrecognized parameter was found in the Tivoli GEM DB2 configuration file and will be ignored.

Message Variables

parm

Value entered in the field DOMAIN.

domain.substem

Domain and subsystem specified in the Tivoli GEM DB2 configuration file.

filename

The name of the Tivoli GEM DB2 configuration file.

System action

Processing continues. The entry is ignored.

Operator response

Edit the Tivoli GEM DB2 configuration file.

IHS562W	VALUE FOR <i>fieldname</i> FIELD MUST BE NUMERIC. SET TO DEFAULT VALUE <i>value</i> FOR <i>domain.subsystem</i>
----------------	--

Explanation

A numeric parameter was specified as non-numeric.

Message Variables

fieldname

Tivoli GEM DB2 configuration file field name with non-numeric value specified.

value

Value entered.

domain.subsystem

The current domain and subsystem name for *fieldname*.

System action

The field is set to a default value and processing continues.

IHS563W	VALUE FOR <i>fieldname</i> FIELD BEYOND MAX/MIN BOUNDS. SET TO <i>value</i> FOR <i>domain.subsystem</i>
----------------	--

Explanation

A value was specified for the field that was outside of the minimum or maximum.

Message Variables

fieldname

Tivoli GEM DB2 configuration file field name for which the incorrect value was set.

value

Value entered for field name.

domain.subsystem

The domain and subsystem name.

System action

The field is given the default value and processing continues.

IHS564E	INCORECT VALUE <i>value</i> SET FOR DISCOVER FIELD IN <i>filename</i>. VALID VALUES ARE /
----------------	--

**CONFIGURE/OR/DYNAMIC.
DISCOVERY TERMINATED.**

Explanation

An incorrect value was specified for the Tivoli GEM DB2 configuration file field DISCOVERY.

Message Variables

value

Value entered for DISCOVERY field in the Tivoli GEM DB2 configuration file.

filename

Name of the Tivoli GEM DB2 configuration file.

System action

Processing ends.

Operator response

Correct the entry in the Tivoli GEM DB2 configuration file and reissue INITAMI.

IHS565I	*** END OF DISPLAY FOR LOCATE ***
----------------	--

Explanation

A trailer message issued from the LOCATE task to delimit the display.

IHS566I	THE HEARTBEAT INTERVAL IS value
----------------	--

Explanation

Informational message.

Message Variables

value

Time of the Heartbeat interval in hrs:min:sec.

IHS567I	THE STATUS MONITOR INTERVAL IS value
----------------	---

Explanation

Informational message.

Message Variables

value

Time of the monitor refresh rate in hrs:min:sec.

IHS568I	monitor parameters successfully updated.
----------------	---

Explanation

The Deadlock or Timeout threshold parameters have been updated successfully.

Message Variables

monitor

The name of the monitor updated.

IHS569I	THIS COMMAND CANNOT BE ISSUED AS THE DDF HAS NOT BEEN STARTED.
----------------	---

Explanation

A task that required the distributed data facility (DDF) to be started is failed.

Operator response

Start DDF and issue the task again.

IHS570I	INSTANCE FILTERING NOT AVAILABLE FOR SUBSYSTEMS IN EXCEPTION MODE.
----------------	---

Explanation

Exception mode and instance filtering are mutually exclusive.

Operator response

Edit the configuration file to change the exception entry to NO.

IHS571I	INCORRECT INPUT PARAMETER FOR value. ONLY 'FULL' OR 'EXCEPTION' ARE VALID.
----------------	---

Explanation

Incorrect value entered for SET DISCOVERY OPTION task.

Message Variables

value

The value entered.

Operator response

Enter the correct value.

IHS572I	field name threshold - value 1. value 2 messages per time interval.
----------------	--

Explanation

User defined value set for threshold parameters for every interval.

Message Variables

field name

The parameter name.

value 1

The number of fieldname.

value 2

The interval time.

IHS573I The time interval is *value* seconds.

Explanation

The specified threshold interval value.

Message Variables**value**

Interval time in seconds.

**IHS574I Command not
issued.*domain.subsys* is down.**

Explanation

Because the specified sub-system is in a down state, the issued task cannot be run.

Message Variables***domain.subsys***

The name of the sub-system that is in the down state.

Operator response

If you want to run the task, do the following:

- 1** Start the specified sub-system.
- 2** Issue the task again.

**IHS575I This task only available when
discovery is DYNAMIC. Update
config file and issue Refresh
Config task.**

Explanation

The issued task can only be run when the DISCOVERY type is DYNAMIC.

Operator response

If you want to run this task, follow these steps:

- 1** Edit the DB2 configuration file, changing the DISCOVERY option to DYNAMIC.
- 2** Refresh the configuration file.
- 3** Issue the task again.

**IHS576I *subsys* WILL NOT BE
REGISTERED, AS IT IS RUNNING
A LEVEL OF DB2 NOT SUPPORTED
BY THIS PRODUCT.**

Explanation

An unsupported level of DB2 was discovered.

Message Variables***subsys***

Name of the unsupported DB2 sub-system.

Operator response

If you want to run this task, follow these steps:

- 1** Remove the *subsys* from the DB2 configuration file.
- 2** Refresh the configuration file.

System programmer response

Ensure the unsupported version of DB2 is required. If it is not required, shut down the DB2 system with the unsupported level.

**IHS577E KEYWORD *field* NOT FOUND IN
THE DB2 CONFIGURATION FILE.
THIS DISCOVERY TERMINATED.**

Explanation

A mandatory field field in the DB2 configuration file was not located. Instrumentation remains the same.

Message Variables***field***

The field not found in the DB2 configuration file.

Operator response

If you want to run this task, follow these steps:

- 1** Edit the DB2 configuration file.
- 2** Ensure the flagged field is present in the DB2 configuration file.
- 3** Refresh the configuration file.

**IHS578W INCORRECT VALUE
DISCOVERY=*value1* IN *filename*.
DISCOVERY CONTINUES USING
PREVIOUS VALUE OF
DISCOVERY=*value2*.**

Explanation

A value other than that permitted was entered in the SET DISCOVERY task option. Discovery continues with previous value set.

Message Variables

value1
Incorrect value entered for field.

filename
Name of the DB2 configuration file.

value2
Value which was set previously.

Operator response

If you want to run this task, follow these steps:

- 1** Edit the DB2 configuration file.
- 2** Ensure the permissible value is specified.
- 3** Refresh the configuration file.

IHS579W	value1 IS NOT VALID. 'YES' OR 'NO' ARE VALID. DEFAULT SET TO 'YES'.
----------------	--

Explanation

Value other than that permissible was specified for DB2 configuration field. Value is set to default value. Discovery continues.

Message Variables

value1
Incorrect value entered for field.

Operator response

If you want to run this task, follow these steps:

- 1** Edit the DB2 configuration file.
- 2** Ensure the permissible value is specified.
- 3** Refresh the configuration file.

IHS0000I	Message msgnum is not in the message file IHSAMSG1.
-----------------	--

Explanation

An Event/Automation Service module issued an IHS prefix message that was not defined in the message definition module.

Message Variables

msgnum
The number of the missing message.

System action

System action is unpredictable.

Operator response

Notify the system programmer.

System programmer response

Contact IBM Software Support.

IHS0001E	errorcode parm1 parm2 parm3
-----------------	------------------------------------

Explanation

An error occurred during initialization before the console message file can be correctly loaded. The error code and the parameters indicate the cause of the error, which is described below.

Message Variables

errorcode
One of the following error codes was returned:

- 1** An error occurred while attempting to install an error handler. *parm1* can be SIGTERM, SIGINT, or SIGPIPE.
- 3** An error occurred while attempting to open the console message file. *parm1* contains the name of the message file.
- 4** A message in the message file does not have a valid format. *parm1* contains the name of the message file. *parm2* contains the line number in the message file of the message in error.
- 5** The message number was defined earlier in the file. *parm1* contains the name of the message file. *parm2* contains the line number in the message file of the message in error.
- 6** The message was longer than the valid maximum length, which is 1024 characters. *parm1* contains the name of the message file. *parm2* contains the line number in the message file of the message in error.
- 7** The standard output stream file for the task cannot be opened. *parm1* contains the name of the standard output stream that cannot be opened. *parm2* contains an error number.

System action

The Event/Automation Service ends.

Operator response

Notify the system programmer.

System programmer response

If you receive error code 1, contact IBM Software Support.

If you receive error code 3, ensure that the console messages file is in the correct data set or HFS directory, and is named correctly when starting the Event/Automation Service.

If you receive error codes 4, 5, and 6, ensure you are using the installed copy of the console messages file. If so, contact IBM Software Support.

For error code 7, ensure that the data set definition statements for IHSASTD, IHSBSTD, IHSCSTD, IHSESTD, IHSMSTD, IHSNSTD and IHSTSTD files exist in your startup procedure (these must not be modified from their settings in the installation sample).

IHS0008I **EVENT ADAPTER IS DUMPING
FOR TASK *task*, COMPLETION
CODE = X'*hhhhhh*'**

Explanation

An Event/Automation Service task has ended abnormally and an SVC dump is being requested using the SDUMP macro.

Message Variables

task

The name of the Event/Automation Service task where the abend occurred.

hhhhhh

The completion code, in hexadecimal. Nonzero values in the first three digits indicate a system abend, and nonzero values in the last three digits indicate a user abend.

System action

An SVC dump is requested and a message with the results follow.

Operator response

Notify the system programmer.

System programmer response

Investigate the reason for the abend.

IHS0009I

**EVENT ADAPTER SDUMP FOR
TASK *task* COMPLETED, RETURN
CODE = X'*retcode*', REASON CODE
= X'*rescode*'**

Explanation

An Event/Automation Service request for SVC dump, using the SDUMP macro, completed on the indicated task with the return code and reason code shown.

Message Variables

task

The name of the Event/Automation Service task whose abend is the reason for the SVC dump request.

retcode

The return code from the SDUMP macro.

rescode

The reason code from the SDUMP macro.

System action

If SDUMP succeeds, the SVC dump is captured and is expected to be written to a dump data set.

Operator response

Notify the system programmer.

System programmer response

Investigate the reason for the abend that caused the SVC dump.

IHS0010E

***adapter*: Line *line* could not be
retrieved from FMT file *file*.**

Explanation

The next line from the specified format (FMT) file cannot be retrieved because of a file I/O error. The file I/O error is provided in the Event/Automation Service log.

Message Variables

adapter

The event adapter designator.

line

The file line number that was to be retrieved.

file

The name of the format file.

System action

The *adapter* task ends.

Operator response

Notify the system programmer.

System programmer response

Find message IHS0010E in the Event/Automation Service log. Message IHS0114E will precede this message in the log. IHS0114E contains specific information about the type of I/O error that occurred. If the problem cannot be resolved from this information, notify IBM Software Support.

IHS0011A ***adapter: FMT file file could not be opened.***

Explanation

The attempt to open the specified format (FMT) file received a file I/O error. The file I/O error is provided in the Event/Automation Service log.

Message Variables

adapter

The event adapter designator.

file

The name of the format file.

System action

The *adapter* task ends.

Operator response

Notify the system programmer.

System programmer response

Find message IHS0011A in the Event/Automation Service log. Message IHS0114E will precede this message in the log. IHS0114E contains specific information on the type of file I/O error that occurred. If the problem cannot be resolved from this information, notify IBM Software Support.

IHS0012A ***adapter: Incomplete comment in FMT file file.***

Explanation

A comment was not closed before the specified format file completed.

Message Variables

adapter

The event adapter designator.

file

The name of the format file.

System action

The *adapter* task ends.

Operator response

Notify the system programmer.

System programmer response

Find message IHS0012A in the Event/Automation Service log. Message IHS0015A will follow this message in the log. IHS0015A contains the line number and position of the beginning of the comment. Inspect the format file and correct the problem.

IHS0013A ***adapter: Incomplete string in FMT file file, line line.***

Explanation

A string map slot value was not closed before the end of the current line in the specified format file.

Message Variables

adapter

The event adapter designator.

file

The name of the format file.

line

The line in the format file with the incomplete string.

System action

The message adapter task ends.

Operator response

Notify the system programmer.

System programmer response

Find message IHS0013A in the Event/Automation Service log. Message IHS0015A will follow this message in the log. IHS0015A contains the line number and position of the beginning of the string. Inspect the format file and correct the problem.

IHS0014A ***adapter: Incorrect map state token in FMT file file.***

Explanation

A format specification map statement in the *file* format file is not valid.

Message Variables

adapter

The event adapter designator.

file

The name of the format file.

System action

The *adapter* task ends.

Operator response

Notify the system programmer.

System programmer response

Find message IHS0014A in the Event/Automation Service log. Message IHS0015A will follow this message in the log. IHS0015A contains the line number and position of the map statement error. Inspect the format file and correct the problem.

IHS0015A **==>line number *line*, character position *position*.**

Explanation

This message will be issued only to the Event/Automation Service log. It indicates the line number and position on the line of the syntax error indicated by the previous message in the log.

Message Variables***line***

The line number of the format file.

position

The position on the line of the format file.

System action

The *adapter* task ends.

Operator response

Notify the system programmer.

System programmer response

Use the information in this message and the preceding message to correct the problem in the format file.

IHS0016A ***adapter*: FOLLOWS event class not defined in FMT file *file*.**

Explanation

The event class specified on the FOLLOWS statement in the specified format file was not previously defined.

Message Variables***adapter***

The event adapter designator.

file

The name of the format file.

System action

The message adapter task ends.

Operator response

Notify the system programmer.

System programmer response

Find message IHS0016A in the Event/Automation Service log. Message IHS0015A will follow this message in the log. IHS0015A contains the line number and position of the map statement error. It is possible that either the FOLLOWS or base class name was misspelled, or the base class was left out of the format file.

IHS0017A ***adapter*: Incorrect FORMAT line token in FMT file *file*.**

Explanation

A syntax error was encountered in a format specification between the FORMAT keyword and the beginning of the format string for the specified format file.

Message Variables***adapter***

The event adapter designator.

file

The name of the format file.

System action

The *adapter* task ends.

Operator response

Notify the system programmer.

System programmer response

Find message IHS0017A in the Event/Automation Service log. Message IHS0015A will follow this message in the log. IHS0015A contains the line number and position of the FORMAT line error. Inspect the format file and correct the error.

IHS0018A ***adapter*: Incorrect format begin state token in FMT file *file*.**

Explanation

A syntax error was encountered in a format file between the end of one format specification and the beginning of another.

Message Variables

- adapter*
The event adapter designator.
- file*
The name of the format file.

System action

The *adapter* task ends.

Operator response

Notify the system programmer.

System programmer response

Find message IHS0018A in the Event/Automation Service log. Message IHS0015A will follow this message in the log. IHS0015A contains the line number and position of the format file error. Inspect the format file and correct the error.

IHS0019E *adapter: Processing for this event has prematurely terminated.*

Explanation

An error occurred that caused the processing of the current event to end. Additional log or console messages will be issued to help determine the cause of the error.

Message Variables

- adapter*
The event adapter designator.

System action

The current event is discarded.

Operator response

Notify the system programmer.

System programmer response

Find message IHS0019E in the Event/Automation Service log. Other messages will follow this message to determine the cause of the error.

IHS0020A *adapter: Slot map variable \$variable out of range. It must be between \$1 and \$maxvar*

Explanation

The number of variables declared in the format string portion of the format specification exceeds the number of format string variable components (those that are %s, %s*, and %s+).

Message Variables

- adapter*
The event adapter designator.
- variable*
The variable that is out of range.
- maxvar*
The maximum number of variables allowed in this format specification.

System action

The message adapter task ends.

Operator response

Notify the system programmer.

System programmer response

Change the variable substitution to correspond to a number within the allowable range of format string variables.

IHS0021A *adapter: Maximum number of variable mappings (maxvar) exceeded in FMT file file.*

Explanation

The number of variables declared in the format string portion of the format specification exceeds the maximum number allowed.

Message Variables

- adapter*
The event adapter designator.
- maxvar*
The maximum number of variables allowed in a format specification.
- file*
The name of the format file.

System action

The message adapter task ends.

Operator response

Notify the system programmer.

System programmer response

Redefine the format specifications so that the maximum number of variable substitutions is not exceeded.

IHS0022E Unable to open DD *member* for initialization.

Explanation

The *member* specified as the event receiver configuration file cannot be opened.

Message Variables

member

The name of the file being used to provide the configuration parameters for an Event/Automation Service task

System action

Initialization of the task fails.

Operator response

Notify the system programmer.

System programmer response

Verify that the DD member defined by the user on the start command of the default initialization member (IHSAINIT) is present. Correct the error and reinitialize the event receiver task.

IHS0023E Incorrect data received by event receiver. Data will be discarded.

Explanation

An event was received that cannot be properly parsed.

System action

Processing will continue. The current event data will be discarded.

Operator response

Notify the system programmer.

System programmer response

Check the Event/Automation Service log for related messages. Verify that other events are properly received and processed. If the problem persists, notify IBM Software Support.

IHS0024E *service: request failed, errno number*

Explanation

A request failed with the indicated error number.

Message Variables

service

The name of the service

request

The request that failed

number

The error number associated with the failure

System action

If the message was issued for a socket used for communication in an IP network, the socket is closed. Processing continues.

Operator response

Notify the system programmer.

System programmer response

Perform problem determination procedures. If the error cannot be attributed to a specific user action, contact IBM Software Support.

IHS0025I *service: Negative response limit for an event exceeded. The event will be discarded*

Explanation

For an event that was sent (and resent) by a confirmed adapter, the number of negative responses received exceeded the BufEvtNegRespLimit value. The event was then discarded.

Message Variables

service

The confirmed adapter that detected the condition. The possible values are:

- Confirmed Message Adapter
- Confirmed Alert Adapter

System action

The confirmed adapter logs the discarded event to its log or trace file. Processing continues.

Operator response

Notify the system programmer.

System programmer response

Perform problem determination procedures. Check for log information at the event server or servers to

determine the reason for the negative responses. If the error is not temporary or you cannot correct it, contact IBM Software Support.

IHS0026I **service: Connection with server at IP address *ipaddress* closed**

Explanation

The identified adapter discovered that the event server closed the connection that was initiated by that adapter.

Message Variables

service

The adapter that detected the loss of the connection

ipaddress

The IP address of the event server with which the connection was lost

System action

For a confirmed adapter, the loss of connection occurred while waiting for the event server to reply to an event that was sent by that adapter. The confirmed adapter treats the condition as a failed send and enters retry processing. Retry processing might include sending the event to the next server in the ServerLocation list (if any) and caching the event (if the confirmed adapter was configured with BufferEvent=yes).

Operator response

Notify the system programmer.

System programmer response

Perform problem determination procedures. Check the event server log information to determine the status of the connection. If the error is not due to network failure, contact IBM Software Support.

IHS0027E **Unable to receive data from socket.**

Explanation

The event receiver task was unsuccessful in attempting to receive data from a socket.

System action

Processing continues. If a partial event was received, it is discarded.

Operator response

Notify the system programmer.

System programmer response

Check the Event/Automation Service log for related messages, including IHS0114E. Verify that the TCP/IP stack is properly configured and active. If the problem persists, notify IBM Software Support.

IHS0028E **Incorrectly delimited value in event.**

Explanation

The event receiver cannot parse the event.

System action

Processing continues. The event is discarded.

Operator response

Notify the system programmer.

System programmer response

Check the Event/Automation Service log to find the event that is not valid. If the event is correct in the log, notify IBM Software Support. Otherwise, contact the service organization for the sender of the event.

IHS0029I **service: The current ServerLocation is location *location*, address *address*, port *port*.**

Explanation

A connection is made to the server for the given ServerLocation. This message is issued only when an event is sent to a server that is not the same as the server used for the previous event.

Message Variables

service

The service that is issuing this message.

location

The location in the ServerLocation list. The first server in the list is indexed as location 1.

address

The IP address of the server.

port

The IP port of the server.

System action

Processing continues.

IHS0030W **Unable to allocate a new socket. The retry limit is exceeded.**

Explanation

A remote program was unsuccessful in attempting to connect to the Event Receiver task.

System action

Processing continues; however, the program attempting to connect cannot send data to the event receiver task.

Operator response

Notify the system programmer.

System programmer response

Check the Event/Automation Service log for related messages, including IHS0114E. Verify that TCP/IP is properly configured and active. If the problem persists, notify IBM Software Support.

IHS0031E Unable to allocate a new socket.

Explanation

A remote program was unsuccessful in attempting to connect to the Event Receiver task.

System action

The event receiver task ends.

Operator response

Notify the system programmer.

System programmer response

Check the Event/Automation Service log for related messages, including IHS0114E. Verify that TCP/IP is properly configured and active. If the problem persists, notify IBM Software Support.

IHS0032E Unable to make socket non-blocking.

Explanation

A service was not able to make (subsequent) requests on a socket non-blocking.

System action

The event receiver task ends.

Operator response

Notify the system programmer.

System programmer response

Check the Event/Automation Service log for related messages, including IHS0114E. Verify that TCP/IP is properly configured and active. If the problem persists, notify IBM Software Support.

IHS0033E Retry limit exceeded on socket close.

Explanation

The event receiver task was unsuccessful in attempting to close a socket.

System action

Processing continues; however, the socket will remain open.

Operator response

Notify the system programmer.

System programmer response

Check the Event/Automation Service log for related messages, including IHS0114E. Verify that TCP/IP is properly configured and active. If the problem persists, notify IBM Software Support.

IHS0034E Unable to close socket.

Explanation

The event receiver task, the confirmed message adapter, or the confirmed alert adapter was unsuccessful in attempting to close a socket.

System action

Processing continues; however, the socket will remain open.

Operator response

Notify the system programmer.

System programmer response

Check the Event/Automation Service log for related messages, including IHS0114E. Verify that TCP/IP is properly configured and active. If the problem persists, notify IBM Software Support.

IHS0035E If you do not want to use portmapper you must specify an initial port for the event receiver.

Explanation

There is an inconsistency in the statements in the configuration file for the event receiver. One of the statements, UsePortmapper=no or PortNumber=0, must be changed.

System action

Initialization of the event receiver task fails.

Operator response

Notify the system programmer.

System programmer response

If you want to use portmapper, code UsePortmapper=yes. If you do not want to use portmapper, code a valid number on the PortNumber statement. The default configuration file is IHSAECFG.

IHS0036E Setup for ASCII to EBCDIC conversion failed.

Explanation

The event cannot be processed because a call to 'setlocale' failed. If the trap-to-alert conversion task issued the message, an SNMP trap cannot be processed because a call to 'setlocale' failed.

System action

The task that issued the message ends and the Event Integration Facility (EIF) event or SNMP trap is discarded.

Operator response

Notify the system programmer.

System programmer response

Check the Event/Automation Service log for related messages. Also, check other system logs for TCP/IP-related problems. Verify that TCP/IP is properly configured and active. If the problem persists, notify IBM Software Support.

IHS0037E ASCII to EBCDIC conversion failed.

Explanation

Event data that was received by the event receiver, confirmed message adapter, or confirmed alert adapter could not be converted from ASCII to EBCDIC.

Trap data that was received by the trap-to-alert conversion task could not be converted from ASCII to EBCDIC.

System action

Processing continues; however, the event or trap is discarded.

Operator response

Notify the system programmer.

System programmer response

Check the Event/Automation Service log for related messages, including IHS0114E. If the problem persists, notify IBM Software Support.

IHS0038E The event received was incomplete or not valid.

Explanation

The event receiver task received data that was not recognized as an event.

System action

Processing continues; however, the data will be discarded.

Operator response

Notify the system programmer.

System programmer response

Check the Event/Automation Service log for related messages. If the problem persists, notify IBM Software Support.

IHS0039E Unsuccessful attempt to wait for socket activity.

Explanation

A call to 'selectex' was unsuccessful.

System action

The task that is experiencing the problem ends. The task might be the event receiver or the trap-to-alert conversion task.

Operator response

Notify the system programmer.

System programmer response

Check the Event/Automation Service log for related messages, including IHS0114E. Verify that TCP/IP is properly configured and active. If the problem persists, notify IBM Software Support.

IHS0040E **TCP/IP may not be active.**

Explanation

The TCP/IP program is not active.

System action

Processing continues; however, the Event/Automation Service will not be able to send or receive events.

Operator response

Notify the system programmer.

System programmer response

Start the TCP/IP program.

IHS0041W **Unable to make socket non-blocking. Retry limit exceeded.**

Explanation

A service was not able to make (subsequent) requests on a socket non-blocking.

System action

Processing continues; however, the program attempting to connect will not be able to send data to the event receiver task.

Operator response

Notify the system programmer.

System programmer response

Check the Event/Automation Service log for related messages, including IHS0114E. Verify that TCP/IP is properly configured and active. If the problem persists, notify IBM Software Support.

IHS0042E **Maximum connections, *number*, exceeded.**

Explanation

A remote program was unsuccessful in attempting to connect to the Event Receiver task.

Message Variables

number

The maximum number of connections allowed.

System action

Processing continues; however, the program attempting to connect will not be able to send data to the event receiver task.

Operator response

Notify the system programmer.

System programmer response

Try using a connection-less transport for programs attempting to connect to the event receiver task. If the problem persists, notify IBM Software Support.

IHS0043W **The data received is not valid. *numbytes* bytes discarded.**

Explanation

The event receiver or the trap-to-alert conversion task that was not recognized.

Message Variables

numbytes

The number of bytes discarded.

System action

Processing continues; however, the data will be discarded.

Operator response

Notify the system programmer.

System programmer response

Check the Event/Automation Service log for related messages, including a hexadecimal dump of the discarded data. If the problem persists, notify IBM Software Support.

IHS0044W **Unsuccessful call to *pmap_unset*.**

Explanation

During the termination of the event receiver task, an unsuccessful attempt was made to unregister with the portmapper.

System action

event receiver task termination will continue. However, the portmapper registration might not have been removed. The next time you start the Event Receiver, you might get message IHS0052W indicating that the registration has been replaced.

Operator response

Notify the system programmer.

System programmer response

Verify that TCP/IP is properly configured and active. Verify that the portmapper is active. If the problem persists, notify IBM Software Support.

IHS0045E Unable to obtain a socket.

Explanation

The event receiver task was unable to initialize.

System action

The event receiver task ends.

Operator response

Notify the system programmer.

System programmer response

Check the Event/Automation Service log for related messages, including IHS0114E. Verify that TCP/IP is properly configured and active. If the problem persists, notify IBM Software Support.

IHS0046E Unable to bind a socket to a port.

Explanation

The event receiver task was unable to initialize.

System action

The event receiver task ends.

Operator response

Notify the system programmer.

System programmer response

Check the Event/Automation Service log for related messages, including IHS0114E. Verify that TCP/IP is properly configured and active. If the problem persists, notify IBM Software Support.

IHS0047E Unable to set up socket queue.

Explanation

The event receiver task was unable to initialize.

System action

The event receiver task ends.

Operator response

Notify the system programmer.

System programmer response

Check the Event/Automation Service log for related messages, including IHS0114E. Verify that TCP/IP is properly configured and active. If the problem persists, notify IBM Software Support.

IHS0048E Unable to determine port number.

Explanation

The event receiver task was unable to initialize.

System action

The event receiver task ends.

Operator response

Notify the system programmer.

System programmer response

Check the Event/Automation Service log for related messages, including IHS0114E. Verify that TCP/IP is properly configured and active. If the problem persists, notify IBM Software Support.

IHS0049E Unsuccessful call to pmap_set.

Explanation

The event receiver task was unable to initialize.

System action

The event receiver task ends.

Operator response

Notify the system programmer.

System programmer response

Verify that TCP/IP is properly configured and active. Verify that the portmapper is active. If the problem persists, notify IBM Software Support.

IHS0050E For Tivoli Customer Support use only: *servicedata*

Explanation

This message is written only to the Event/Automation Service network log and is intended for IBM Software Support to use in debugging internal Event/Automation Service errors. This message accompanies message IHS0081E, which is displayed at the console.

Message Variables

servicedata

The data to assist IBM Software Support in problem determination.

System action

Processing continues.

Operator response

Notify the system programmer.

System programmer response

Notify IBM Software Support. Depending on the nature of the internal error, you might need to recycle either the entire Event/Automation Service or one of its tasks.

IHS0051E The alert received is too large to be processed.

Explanation

The event receiver task received an alert that was too large to be processed.

System action

Processing continues; however, the alert will be discarded.

Operator response

Notify the system programmer.

System programmer response

Check the Event/Automation Service log for related messages, including a hex dump of the discarded alert. If the problem persists, notify IBM Software Support.

IHS0052W Event Receiver portmapper registration will be replaced.

Explanation

The event receiver task was already registered with the portmapper.

System action

Portmapper registration is replaced and processing continues.

Operator response

Notify the system programmer.

System programmer response

If the Event/Automation Service was previously cancelled, you might be able to ignore this message. If you are running multiple copies of the Event/Automation Service, ensure that only one copy is started with UsePortmapper=yes specified in the event receiver configuration file. The default configuration file is IHSAECFG.

IHS0053E Retry limit exceeded on receive from socket.

Explanation

The event receiver task was unsuccessful in attempting to receive data from a socket.

System action

Processing continues. If a partial event was received, it will be discarded.

Operator response

Notify the system programmer.

System programmer response

Check the Event/Automation Service log for related messages, including IHS0114E. Verify that TCP/IP is properly configured and active. If the problem persists, notify IBM Software Support.

IHS0054E Detected incorrect data *number* bytes into '*string*'.

Explanation

The event receiver is unable to parse the event.

Message Variables

number

The number of bytes into the value where a parsing error was detected.

string

The value portion of a 'keyword=value' slot in an event.

System action

Processing continues. The event will be discarded.

Operator response

Notify the system programmer.

System programmer response

Check the Event/Automation Service log to find the event that is not valid. If the event is correct in the log,

notify IBM Software Support. Otherwise, contact the service organization for the sender of the event.

IHS0055E Unable to open *member* for initialization.

Explanation

The *member* specified as the initialization file on the start command cannot be opened.

Message Variables

member

The name of the file being used by the Event/Automation Service to provide initialization parameters.

System action

Initialization of the Event/Automation Service fails.

Operator response

Notify the system programmer.

System programmer response

Verify that the DD member defined by the user on the start command or the default initialization member IHSAINIT is present. Correct the error and reinitialize the Event/Automation Service.

IHS0056W *number1* of *number2* connections are already being used.

Explanation

number1 out of a maximum of *number2* connections are already in use.

Message Variables

number1

The number of active connections.

number2

The maximum number of connections allowed by the E/AS event receiver task.

System action

Processing continues. This is a warning message only.

Operator response

If this message is issued repeatedly in a short period of time, notify the system programmer.

System programmer response

When the maximum number of connections is reached (IHS0042E is issued), the E/AS event receiver task

cannot accept new connections to receive events. Using a connectionless transport for programs that are attempting to connect to the event receiver task might free up unused connections.

IHS0057I Unable to set the socket option SO_KEEPALIVE, Error code is *errcode*.

Explanation

The event receiver task encountered an error when setting the setsockopt SO_KEEPALIVE keepalive socket option. The socket might be lost if the connection is ended before the socket can be shut down and closed.

Message Variables

errcode

The error code for the setsockopt failure.

System action

Processing continues.

Operator response

Notify the system programmer.

System programmer response

Check the Event/Automation Service log for related messages, including IHS0114E. Verify that TCP/IP is properly configured and active. If the problem persists, notify IBM Software Support.

IHS0058E The PPI receiver ID *receiverid* is not valid.

Explanation

The *receiverid* specified is not a valid value. The *receiverid* must be 1–8 alphanumeric characters.

Message Variables

receiverid

The program-to-program interface receiver ID for IHSAEVNT.

System action

Initialization of the Event/Automation Service fails.

Operator response

Notify the system programmer that an incorrect value was specified for the PPI receiver ID in the Event/Automation Service initialization file.

System programmer response

Determine the error with the specified PPI receiver ID in the initialization file and correct it. Reinitialize the Event/Automation Service.

IHS0073I **Current TRACE settings:**

Explanation

This is part of a multiline display generated in response to a TRACE command you issued without parameters. This message is followed by IHS0076I.

IHS0075I **Event/Automation service started.
Subtask initialization is in
progress for task**

Explanation

The Event/Automation Service CONTROL task has completed its initialization, and all tasks that are to be started have been attached.

Message Variables

task
The name of the task.

System action

Initialization proceeds for the tasks.

IHS0076I **TASK=task LEVEL=level IP=iptrace**

Explanation

This is part of a multiline display generated in response to a TRACE command you issued without parameters. This message shows the status of tracing for each Event/Automation Service task.

Message Variables

task
The identifier of the Event/Automation Service task. The task can be one of the following:

ALERTA
The alert adapter

ALERTC
The confirmed alert adapter

ALRTTRAP
The alert-to-trap service

CONTROL
The main control task

EVENTRCV
The event adapter

MESSAGEA
The message adapter

MESSAGEC
The confirmed message adapter

TRAPALRT
The trap-to-alert service

level
The tracing level, which is one of the following:

OFF
No tracing

LOW
Low tracing level

NORMAL
Normal tracing level

VERBOSE
Full tracing

iptrace
Whether tracing of IP connection data is enabled, which is one of the following:

OFF
No tracing

ON
Tracing is enabled

IHS0079I **GTF specified for output, but the
GTF is not active.**

Explanation

The user specified a value of GTF for OUTPUT on the TRACE command, or for OUTPUT in IHSAINIT. However, GTF has not been started.

System action

Trace output will be written to the system audit log.

Operator response

Start GTF or issue the TRACE command with OUTPUT=SYSOUT.

IHS0080E **Recording to GTF failed with
return code retcode.**

Explanation

The user was writing output to GTF, but GTF has been stopped.

Message Variables

retcode
The return code from the MVS GTRACE macro.

System action

Trace data is no longer being recorded to GTF. Messages that are not from the console are being routed to the system audit log.

Operator response

Restart GTF or issue the TRACE command with OUTPUT=SYSOUT.

System programmer response

If the return code is other than 4 or 24, see the GTRACE macro in *z/OS MVS Authorized Assembler Macros* and take appropriate action. Contact IBM Software Support if necessary.

IHS0081E	Event Service encountered an internal error in task <i>taskname</i>. Unexpected results may occur as processing continues.
-----------------	---

Explanation

An Event/Automation Service component encountered an internal error. This message is accompanied by one or more IHS0050E messages in the Event/Automation Service network log. Save the log entries to assist IBM Software Support in debugging internal errors.

Message Variables

taskname

The data to assist IBM Software Support in problem determination.

System action

Event/Automation Service processing continues, but unexpected results can occur.

Operator response

Notify the system programmer.

System programmer response

Notify IBM Software Support. Depending on the nature of the internal error, you might need to recycle the IHSAEVNT procedure.

IHS0082E	<i>adapter</i>: Encountered a null Name in a Name/Value pair. Name/Value pair is ignored.
-----------------	--

Explanation

The name in a Name/Value pair binding has a null name (zero length). Name/Value pair names can be 1–31 characters in length and begin with an alphabetic character. See the NetView sample CNMSIHSA and

the NetView CLISTs CNMEALUS and CNMEMSUS for examples of Name/Value pair bindings.

Message Variables

adapter

The adapter that detected the error.

System action

Processing continues with the next Name/Value pair.

Operator response

Notify the system programmer.

System programmer response

Find message IHS0082E in the Event/Automation Service network log. Following this message is a hex dump that displays the incorrect Name/Value pair. The first two bytes of the dump contain the length of the name (including the length bytes), which is 0x0002 because the name is null. The next two bytes contain the length of the value, followed by the value. Inspect this data to determine the source of the incorrect Name/Value pair and correct it.

IHS0083E	<i>adapter</i>: Encountered a Name in a Name/Value pair that contains only spaces. The Name/Value pair is ignored.
-----------------	---

Explanation

The name in a Name/Value pair binding contains only spaces. Name/Value pair names can be 1–31 characters in length and begin with an alphabetic character. See the NetView sample CNMSIHSA and the NetView CLISTs CNMEALUS and CNMEMSUS for examples of Name/Value pair bindings.

Message Variables

adapter

The adapter that detected the error.

System action

Processing continues with the next Name/Value pair.

Operator response

Notify the system programmer.

System programmer response

Find message IHS0083E in the Event/Automation Service network log. Following this message is a hex dump that displays the incorrect Name/Value pair. The first two bytes of the dump contain the length of the name (including the length bytes), followed by the

name. The next two bytes contain the length of the value, followed by the value. Inspect this data to determine the source of the incorrect Name/Value pair and correct it.

IHS0084E ***adapter: Encountered a Name in a Name/Value pair that contains leading spaces. The Name/Value pair is ignored.***

Explanation

The name in a Name/Value pair binding contains leading spaces. Name/Value pair names can be 1–31 characters in length and begin with an alphabetic character. See the NetView sample CNMSIHSA and the NetView CLISTs CNMEALUS and CNMEMSUS for examples of Name/Value pair bindings.

Message Variables

adapter
The adapter that detected the error.

System action

Processing continues with the next Name/Value pair.

Operator response

Notify the system programmer.

System programmer response

Find message IHS0084E in the Event/Automation Service network log. Following this message is a hex dump that displays the incorrect Name/Value pair. The first two bytes of the dump contain the length of the name (including the length bytes), followed by the name. The next two bytes contain the length of the value, followed by the value. Inspect this data to determine the source of the incorrect Name/Value pair and correct it.

IHS0085E ***The alert received has an improperly formed header.***

Explanation

The event receiver task received an alert with an improperly formed header.

System action

Processing continues; however, the alert will be discarded.

Operator response

Notify the system programmer.

System programmer response

Check the Event/Automation Service log for related messages, including a hex dump of the discarded alert. If the problem persists, notify IBM Software Support.

IHS0086A ***Incorrect startup procedure parameter 'parameter'.***

Explanation

One of the Event/Automation Service initialization parameters provided by the startup procedure is in error.

Message Variables

parameter
The parameter and its value.

System action

The Event/Automation Service program ends.

Operator response

If you provided a parameter override value to the Event/Automation Service startup procedure, the provided value is in error. Correct the value and restart the procedure.

System programmer response

If you have modified the default Event/Automation Service startup procedure, ensure that the parameters passed to the Event/Automation Service entry point module are correct. A parameter keyword that is not recognized by the Event/Automation Service program or a default value that is not valid for one of these parameters will cause this error. Correct the error and restart the procedure.

IHS0087A ***PPI receiver ID *ppi-id* is already in use.***

Explanation

The PPI receiver ID that the Event/Automation Service program uses to register with the NetView program-to-program interface is already in use.

Message Variables

ppi-id
The PPI identifier for the Event/Automation Service program.

System action

The Event/Automation Service program ends.

Operator response

Another program is registered to the PPI with this identifier. If you are starting more than one Event/Automation Service program, ensure that you have provided different PPI identifiers for each. Use a different PPI identifier for the current invocation of the Event/Automation Service program.

This error will result if you are starting more than one copy of the Event/Automation Service program and using the default PPI identifier for both.

System programmer response

If you have modified the default Event/Automation Service startup procedure and provided a PPI identifier default within the procedure, ensure that it does not conflict with existing users of the PPI.

IHS0088A PPI inaccessible; timeout of *time* seconds in progress.

Explanation

The PPI or the NetView subsystem is unavailable. After the specified timeout, an attempt to reconnect to the PPI will occur. This timeout will continue indefinitely until the PPI becomes available or the procedure is ended.

Message Variables

time

The PPI timeout value.

System action

The Event/Automation Service program will ignore all data until the PPI becomes available.

Operator response

Notify the system programmer.

System programmer response

Ensure the NetView subsystem interface is active and the program-to-program interface option is enabled.

IHS0089A Send to PPI receiver *ppi-id* failed with return code *retcode*.

Explanation

The attempt to send data to the PPI receiver was unsuccessful. The return code indicates the possible causes. The data is discarded in all cases.

Message Variables

ppi-id

The PPI mailbox identifier that receives the message.

retcode

The SendBuffer function return code. The possible return values are:

- 1** The PPI is temporarily unavailable. This type of problem might resolve itself or require intervention by the operator (for example, the NetView subsystem might be unavailable).
- 2** The PPI is permanently unavailable. This is usually the result of an error that should not have occurred.
- 3** Data was not provided. This is an error that should not occur.
- 4** A incorrect input parameter was passed to a PPI service routine. This is an error that should not occur.
- 5** The PPI interface is being recycled by the Event/Automation Service program. The reason for the PPI interface being recycled has been given in a previous error message.

System action

The Event/Automation Service program will discard the data and recycle the PPI.

Operator response

Notify the system programmer.

System programmer response

Ensure the NetView subsystem interface is active and the program-to-program interface option is enabled. If this was not the source of the problem, notify IBM Software Support.

IHS0090A Receive from PPI receiver *ppi-id* failed with return code *retcode*.

Explanation

The attempt to receive data from the PPI mailbox identifier was unsuccessful. The return code indicates the possible causes.

Message Variables

ppi-id

The PPI mailbox receiver identifier.

retcode

The RecvBuffer function return code. The possible return codes are:

- 1**
The PPI is temporarily unavailable. This type of problem might resolve itself or require intervention by the operator (for example, the NetView subsystem might be unavailable).
- 2**
The PPI is permanently unavailable. This is usually the result of an error that should not have occurred.
- 3**
Data was not provided. This is an error that should not occur.
- 5**
The PPI interface is being recycled by the Event/Automation Service program. The reason for the PPI interface being recycled has been given in a previous error message.

System action

For return codes 3 and 5, processing continues. For the other return codes, an attempt to reconnect to the PPI interface will be made after a timeout.

Operator response

Notify the system programmer.

System programmer response

Ensure the NetView subsystem interface is active and the program-to-program interface option is enabled. If this was not the source of the problem, notify IBM Software Support.

IHS0091E	<i>adapter: The event length of eventlength exceeds the max length of maxeventlength. The event cannot be sent to the event server.</i>
-----------------	--

Explanation

The *adapter* was constructing an event to send to the event server, and the length exceeds the maximum allowable length of *maxeventlength*. The event was not sent to the event server.

Message Variables

- adapter***
The adapter that detected the error.
- eventlength***
The length specified for an event.

maxeventlength

The maximum length allowed for an event. The default value is 4096. It can be overridden with the EventMaxSize keyword in the adapter configuration file.

System action

Processing continues.

Operator response

Notify the system programmer.

System programmer response

Find message IHS0091E in the Event/Automation Service network log. The constructed event is displayed following this message. Inspect the event and the EventMaxSize keyword in the configuration file. Then, either change the appropriate files (for example, CDS and FMT) to build a shorter event, or specify a larger EventMaxSize in the configuration file.

IHS0092E	<i>adapter: EIF function eif_function failed. The event cannot be sent to the event server.</i>
-----------------	--

Explanation

The *adapter* was in the process of constructing an event to send to the event server. The *adapter* invoked *eif_function* as part of this processing and the function failed. The event was not sent to the event server.

Message Variables

- adapter***
The adapter that detected the error.
- eif_function***
The EIF function that failed.

System action

Processing continues.

Operator response

Notify the system programmer.

System programmer response

Find message IHS0092E in the Event/Automation Service network log. Other messages related to this same error will be near this message in the log. These messages contain information that can help you identify the problem.

IHS0094E	<i>service: Initialization failed. The configuration file is configfile.</i>
-----------------	---

Explanation

The initialization of the service failed because of an incorrect or missing statement in the service configuration file.

Message Variables

service

The name of the service.

configfile

The name of the configuration file.

System action

The service ends.

Operator response

Notify the system programmer.

System programmer response

Additional information appears in the Event/Automation Service output log that describes the problem. Inspect the configuration file and correct the error. Restart the service.

IHS0096E	<i>adapter: Initialization failed. filetype file file contains incorrect statements.</i>
-----------------	---

Explanation

The *adapter* encountered a syntax error in *file*. Initialization ends, the adapter task ends, and the adapter is now inactive.

Message Variables

adapter

The adapter that detected the error.

filetype

The file type is either CDS for a CDS file or FMT for a Message Adapter format file.

file

The file that contains incorrect statements.

System action

Processing continues.

Operator response

Notify the system programmer.

System programmer response

Find message IHS0096E in the Event/Automation Service network log. Other messages related to this same error will be near this message in the log. These

messages contain information that can help you identify the problem. Correct the incorrect statements and recycle the IHSAEVNT procedure.

Note:

The file name indicated on message IHS0096E is always the first file that was processed. Included file names (that is, files that might be included by using a \$INCLUDE statement) are not used on message IHS0096E.

IHS0097E	<i>adapter: Encountered a Name in a Name/Value pair that has a length that exceeds maxlenlength. It is truncated.</i>
-----------------	--

Explanation

The *adapter* encountered an error when processing an event that contains an appended Name/Value pair. The length of the name exceeds the maximum allowable length of *maxlength*. The name is truncated to *maxlength* characters and processing for the event continues.

Message Variables

adapter

The adapter that detected the error.

maxlength

The maximum length allowed for a name in a Name/Value pair.

System action

Processing continues.

Operator response

Notify the system programmer.

System programmer response

Find message IHS0097E in the Event/Automation Service network log. Following this message is a hex dump that displays the incorrect name of the Name/Value pair. The first two bytes of the dump contain the length of the name (including the length bytes), followed by the name. Inspect this data to determine the source of the incorrect Name/Value pair and correct it.

IHS0098I	<i>adapter: Encountered a Value in a Name/Value pair that has a length that exceeds maxvalulength. It is truncated.</i>
-----------------	--

Explanation

The *adapter* encountered an error when processing an event that contains an appended Name/Value pair. The length of the value exceeds the maximum allowable length of *maxvaluelength*. The value is truncated to *maxvaluelength* characters and processing for the event continues.

Message Variables

adapter

The adapter that detected the error.

maxvaluelength

The maximum length allowed for a value in a Name/Value pair.

System action

Processing continues.

Operator response

Notify the system programmer.

System programmer response

Find message IHS0098E in the Event/Automation Service network log. Following this message is a hex dump that displays the incorrect value of the Name/Value pair. The first two bytes of the dump contain the length of the value (including the length bytes), followed by the value. Inspect this data to determine the source of the incorrect Name/Value pair and correct it.

IHS0099E	Improper variable reference <i>varname</i> on line <i>line</i>, index <i>index</i>.
-----------------	--

Explanation

The adapter was reading and parsing the adapter CDS file during initialization processing when a syntax error was detected. Console message IHS0096E identifies the adapter and the CDS file name. An incorrect reference was detected involving *varname* on the indicated *line* and *index* in the CDS file.

Consider the following example:

```
CLASS SNA_Equipment_Malfunction
SELECT
  1: ATTR(=,$ALERT_CDPT),  VALUE(PREFIX,$V3);
                                # Error, can't reference
                                # $V3 at this point
END
```

In this example, \$V3 is an incorrect variable reference because no previous SELECT statement established this value.

Message Variables

varname

The variable being referenced.

line

The line number in the CDS file where the reference was detected.

index

The index number in the CDS file where the reference was detected.

System action

Processing continues.

Operator response

Notify the system programmer.

System programmer response

Correct the variable reference in the CDS file and recycle the IHSAEVNT procedure.

IHS0100I	<i>servicedata</i>
-----------------	---------------------------

Explanation

This message is written only to the Event/Automation Service network log and is intended to assist IBM Software Support in debugging errors when the customer requires assistance.

IHS0100I differs from IHS0050E. IHS0050E is issued when Event/Automation Service internal errors are detected. IHS0100I is issued to provide extra information concerning usage errors. For example, if you modify a configuration file and receive an error message identifying an improper keyword or value, the error message might be accompanied by one, or more, IHS0100I messages in the log.

Message Variables

servicedata

The data to assist IBM Software Support in problem determination.

System programmer response

If the error message does not provide enough information to identify the problem, contact IBM Software Support, which can use the information in any corresponding IHS0100I messages to resolve the problem.

IHS0101E	Incorrect line numbering on line <i>line</i>. <i>correctnumber</i> must be used instead of <i>incorrectnumber</i>.
-----------------	---

Explanation

The adapter was reading and parsing the adapter CDS file during initialization processing when a syntax error was detected. Console message IHS0096E identifies the adapter and the CDS file name. The line numbering on the specified *line* is incorrect.

Consider the following example:

```
CLASS SNA_Equipment_Malfunction
  SELECT
    2: ATTR(=,$ALERT_CDPT), VALUE(PREFIX,"10");
                                # Error, improper line
  numbering.
                                # Should be 1, not 2.
END
```

Message Variables

line

The line number in the CDS file where the incorrect line numbering was detected.

correctnumber

The expected line number.

incorrectnumber

The incorrect line number.

System action

Processing continues.

Operator response

Notify the system programmer.

System programmer response

Correct the line numbering in the CDS file and recycle the IHSAEVNT procedure.

IHS0102E	Incorrect syntax detected on line <i>line_number</i>. The current token is <i>token</i>.
-----------------	---

Explanation

The adapter was reading and parsing the adapter CDS file during initialization processing when a syntax error was detected. Console message IHS0096E identifies the adapter and the CDS file name. The error was detected on *line_number* near token *token*.

Note: If one or more %INCLUDE statements was used to include CDS files, the *line_number* indicated in message IHS0102E might not be the actual line number in the CDS file that contains the error. This is because a single CDS file is created from all included CDS files. The %INCLUDE statement itself is replaced with the first line of the CDS file that is being included. Therefore, the *line_number* indicated in message

IHS0102E is the line number relative to the single CDS file.

For example, if the error was at line 20 of CDS file CDS2, and file CDS2 was included in file CDS1 with a %INCLUDE CDS2 statement at line 30, the message IHS0096E indicates that the line in error to be line 49; this is because the %INCLUDE on line 30 of file CDS1 is replaced with line 1 of file CDS2.

The CDS file name indicated on message IHS0096E is always the first CDS file that was processed. Included CDS file names are not used on message IHS0096E.

Consider the following example:

```
CLASS SNA_Equipment_Malfunction
  SELECT
    1: ATXR(=,$ALERT_CDPT), VALUE(PREFIX,"10");
                                # Error, "ATXR" rather than "ATTR".
  END
```

Message Variables

line_number

The line number in the CDS file where the syntax error was detected.

token

The token at, or near, the syntax error.

System action

Processing continues.

Operator response

Notify the system programmer.

System programmer response

Correct the syntax error in the CDS file and recycle the IHSAEVNT procedure.

IHS0103E	Required keyword <i>keyword</i> is not present.
-----------------	--

Explanation

The adapter was processing an event against the statements in the CDS file when a syntax error was detected. Console message IHS0104E identifies the adapter and the CDS file name. The required keyword *keyword* is missing.

Consider the following example:

```
CLASS SNA_Equipment_Malfunction
  # Error, the SELECT statement is
  # missing
END
```

Message Variables

keyword
The required keyword that is missing.

System action
Processing continues.

Operator response
Notify the system programmer.

System programmer response
Correct the syntax error in the CDS file and recycle the IHS0104E procedure.

IHS0104E **adapter: Syntax error detected in CDS file *file* involving class *class*.**

Explanation
The *adapter* was constructing an event to send to the event server when a syntax error was encountered in CDS file *file*. The event was not sent to the event server.

Message Variables

adapter
The adapter that detected the error, such as the alert adapter.

file
The CDS file that contains improper statements.

class
The syntax error was detected under this CLASS statement in the CDS file.

System action
Processing continues.

Operator response
Notify the system programmer.

System programmer response
See message IHS0104E in the Event/Automation Service network log. Other messages related to this same error will be close to IHS0104E in the log. These messages, along with the *class*, will help you identify the syntax error in the CDS file. Correct the incorrect statements and recycle the IHS0104E procedure.

IHS0105E **Type mismatch: ATTR variable 'name' has type 'vartype'; keyword keyword has type 'keywordtype'.**

Explanation
The adapter was processing an event against the statements in the CDS file when a syntax error was detected. Console message IHS0104E identifies the adapter and the CDS file name. The attribute variable in a CDS SELECT ATTR statement has a type that differs from the type in its corresponding KEY or VALUE statement.

Consider the following example:

```
CLASS SNA_Equipment_Malfunction
SELECT
  1: ATTR(=,$ALERT_CDPT), VALUE(PREFIX,10);
      # Error, type mismatch. $ALERT_CDPT
      # has type 'string', 10 has type
      # 'integer'. Use double quotes around
      # 10, i.e. "10", to make it a
      'string'.
END
```

Message Variables

name
The name of the attribute variable in a CDS SELECT ATTR statement. Built-in keywords such as \$ALERT_CDPT are displayed without the leading \$. In this example, ALERT_CDPT is displayed.

vartype
The type of the attribute variable, such as 'string' or 'integer'.

keyword
The VALUE or KEY clause.

keywordtype
The type of the value in the VALUE or KEY clause.

System action
Processing continues.

Operator response
Notify the system programmer.

System programmer response
Correct the syntax error in the CDS file and recycle the IHS0104E procedure.

IHS0106E **Type mismatch: ATTR variable 'name' has type 'vartype', but 'operator' operator for keyword keyword requires type 'requiredtype'.**

Explanation
The adapter was processing an event against the statements in the CDS file when a syntax error was detected. Console message IHS0104E identifies the adapter and the CDS file name. The attribute variable

in a CDS SELECT ATTR statement has a type that conflicts with the type required by the operator *operator*.

Consider the following example:

```
CLASS SNA_Equipment_Malfunction
SELECT
  1: ATTR(=,$ALERT_CDPT), VALUE(>=,"10");
      # Error, type mismatch. $ALERT_CDPT
      # has type 'string', however the >=
      # operator does not support type
      # 'string', it supports only
integers.
END
```

Message Variables

name
The name of the attribute variable in a CDS SELECT ATTR statement. Built in keywords such as \$ALERT_CDPT are displayed without the leading \$. In this example, ALERT_CDPT is displayed.

vartype
The type of the attribute variable, such as 'string' or 'integer').

operator
The operator, for example >, >=, PREFIX.

keyword
The VALUE or KEY clause.

requiredtype
The type required by the operator.

System action
Processing continues.

Operator response
Notify the system programmer.

System programmer response
Correct the syntax error in the CDS file and recycle the IHSAEVNT procedure.

IHS0109W The *taskname* task will be recycled in *time* seconds.

Explanation
An Event/Automation Service task is unable to initialize or receive data. A required service, such as TCP/IP, might be unavailable. After the specified timeout, the task will be stopped and restarted. This message will be reissued until the task is initialized or stopped by an operator command.

Message Variables

taskname
The name of the task

time
The time in seconds that the event receiver will wait before recycling

System action
The task will not perform its function until it is successfully initialized.

Operator response
Notify the system programmer.

System programmer response
If the task requests a service, such as TCP/IP, ensure that the TCP/IP program is active.

IHS0110W The Event Receiver task will be recycled in *time* seconds.

Explanation
The event receiver is unable to initialize or receive data. TCP/IP might be unavailable. After the specified timeout, the event receiver will be stopped and restarted. This message will be reissued indefinitely until the event receiver is initialized or stopped by an operator command.

Message Variables

time
The time in seconds that the event receiver will wait before recycling.

System action
The event receiver will ignore all data until reinitialization.

Operator response
Notify the system programmer.

System programmer response
Ensure the TCP/IP program is active.

IHS0111A *adapter*: Incorrect %INCLUDE line in FMT file *file*.

Explanation
A format file line with the %INCLUDE keyword has a syntax error.

Message Variables

adapter
The event adapter designator.

file

The name of the format file.

System action

The message adapter task ends.

Operator response

Notify the system programmer.

System programmer response

Find message IHS0111A in the Event/Automation Service log. Message IHS0015A follows this message and contains the line number and position of the format file error. Inspect the format file and correct the error.

IHS0112A ***adapter: Too many %INCLUDE statements in file file1, including file2.***

Explanation

The maximum number of format files that are concurrently open for processing has been reached. The maximum number of nested files is currently 20. An attempt to open the specified file for processing exceeds this limit.

Message Variables***adapter***

The event adapter designator.

file1

The file where the %INCLUDE statement resides.

file2

The name of the file to be included.

System action

The message adapter task ends.

Operator response

Notify the system programmer.

System programmer response

Reorganize the format file information so that there is no need to have more than 20 nested files. Message IHS0015A follows this message and contains the line number and position of the format file error. Inspect the format file and correct the error. Restart the Event/Automation Service.

IHS0113A ***adapter: Incomplete format specification in FMT file file.***

Explanation

The format file processing ended before the completion of the current format specification.

Message Variables***adapter***

The event adapter designator.

file

The member name of the format file.

System action

The message adapter task ends.

Operator response

Notify the system programmer.

System programmer response

Correct the format file information so that a complete format specification is at the end of the file. Message IHS0015A follows this message and contains the line number and position of the format file error. Inspect the format file and correct the error. Restart the Event/Automation Service.

IHS0114E ***Unsuccessful call to function, errno=errno, description***

Explanation

The Event/Automation Service received an error on a library function call.

Message Variables***function***

The name of the library function.

errno

The *errno* returned from the function call.

description

A description of the returned *errno*.

System action

Processing continues.

Operator response

Notify the system programmer.

System programmer response

If the problem persists, notify IBM Software Support.

IHS0115E ***Unable to access the C runtime library. OpenEdition MVS may not be started.***

Explanation

A call to a library function returned an error of 167.

System action

Processing continues.

Operator response

Notify the system programmer.

System programmer response

Check the Event/Automation Service log for related error messages. Start z/OS UNIX System Services (formerly named OpenEdition MVS). If the problem persists, notify IBM Software Support.

IHS0116A ***adapter: Generic class does not follow from bind class; input message is discarded.***

Explanation

A message that is bound to a particular format specification in the format file cannot successfully bind to the more generic format specifications indicated by the FOLLOWS keyword. A format specification that follows another **must** be a more specific derivation of the base format specification.

Message Variables***adapter***

The event adapter designator.

System action

The input message is discarded.

Operator response

Notify the system programmer.

System programmer response

Correct the format specification in error. Recycle the message adapter task. If the problem persists, recycle the Event/Automation Service.

IHS0117A ***==>Generic class : *baseclass*, Bind class : *bindclass*.***

Explanation

This message is issued only to the Event/Automation Service log. It indicates the base format specification class name and the format specification class name that was bound from the input message for message IHS0116A.

Message Variables***baseclass***

The base format specification class name.

bindclass

The bound format specification class name.

System action

The input message is discarded.

Operator response

Notify the system programmer.

System programmer response

Use the information in this message and the message preceding this one to correct the problem in the format file.

IHS0118I ***adapter task has terminated.***

Explanation

This message indicates that an Event/Automation Service task has ended.

Message Variables***Adapter***

The task identifier can be one of the following values:

Alert Adapter

The alert adapter task

Alert to Trap Conversion

The alert-to-trap conversion task

Confirmed Alert Adapter

The confirmed alert adapter task

Confirmed Message Adapter

The confirmed message adapter task

Event Receiver

The event receiver task.

Message Adapter

The message adapter task

Trap to Alert Conversion

The trap-to-alert conversion task

System action

Processing continues for other Event/Automation Service tasks. If the entire Event/Automation Service ends, all Event/Automation Service tasks end prior to the Event/Automation Service ending.

IHS0119I ***Event/automation service is terminating due to an operator request.***

Explanation

The Event/automation service is ending. All tasks end normally.

System action

The Event/automation service ends.

IHS0121I	<i>service: Reset of backup server connection was successful.</i>
-----------------	--

Explanation

A RESETSRV command was successfully processed.

Message Variables

service
The service that is issuing this message.

IHS0122I	<i>adapter task already started or start in progress.</i>
-----------------	--

Explanation

An Event/Automation Service task START modify command cannot be executed because the task has already started or is in the process of starting.

Message Variables

adapter
The task identifier can be one of the following values:

Alert Adapter
The alert adapter task

Alert to Trap Conversion
The alert-to-trap conversion task

Confirmed Alert Adapter
The confirmed alert adapter task

Confirmed Message Adapter
The confirmed message adapter task

Event Receiver
The event receiver task

Message Adapter
The message adapter task

Trap to Alert Conversion
The trap-to-alert conversion task

System action

Processing continues.

IHS0123I	<i>adapter task already stopped or stop in progress.</i>
-----------------	---

Explanation

An Event/Automation Service task STOP modify command cannot be executed because the task has already stopped or is in the process of stopping. This message might occur with the RECYCLE modify command if the task is already stopped.

Message Variables

adapter
The task identifier can be one of the following values:

Alert Adapter
The alert adapter task.

Alert to Trap Conversion
The alert-to-trap conversion task

Confirmed Alert Adapter
The confirmed alert adapter task

Confirmed Message Adapter
The confirmed message adapter task

Event Receiver
The event receiver task.

Message Adapter
The message adapter task.

Trap to Alert Conversion
The trap-to-alert conversion task.

System action

Processing continues.

IHS0124I	<i>adapter task initialization complete.</i>
-----------------	---

Explanation

An Event/Automation Service task has completed its initialization and is ready to handle input messages, alerts, or events.

Message Variables

adapter
The task identifier can be one of the following values:

Alert Adapter
The alert adapter task.

Alert to Trap Conversion
The alert-to-trap conversion task

Confirmed Alert Adapter
The confirmed alert adapter task

Confirmed Message Adapter
The confirmed message adapter task

Event Receiver
The event receiver task.

Message Adapter

The message adapter task.

Trap to Alert Conversion

The trap-to-alert conversion task.

System action

Processing continues.

IHS0125A The NetView subsystem has terminated.

Explanation

The NetView subsystem is no longer available. The NetView subsystem includes the program-to-program (PPI) interface.

System action

The Event/Automation Service attempts to reconnect with the PPI every 30 seconds.

Operator response

Restart the NetView subsystem.

IHS0126A The FMT file *file* contains no FORMAT specifications.

Explanation

The specified format file does not contain valid format specifications.

Message Variables***file***

The name of the format file.

System action

The message adapter task ends.

Operator response

Notify the system programmer.

System programmer response

Check for block comments that are out of position. If the format file specifications are included in a commented-out block, there are no valid format specifications processed by the message adapter.

IHS0127E Connection was refused.

Explanation

An Event/Automation Service adapter cannot establish a connection to an event server. The connection was refused.

System action

An attempt will be made to connect to an alternate event server if one is specified in the configuration file for the adapter. If connection_less mode is being used, this can be an indication that the event server was recycled. In this case, an attempt is made to connect using a different port. If the second attempt is also unsuccessful, an attempt to connect to another server is made. If another server is not specified or a connection cannot be established to any server, then the event is buffered.

Operator response

Notify the system programmer.

System programmer response

Ensure that the event server is active.

IHS0128E OpenEdition MVS is not active.

Explanation

An Event/Automation Service adapter attempted to use a z/OS UNIX System Services (formerly named OpenEdition MVS) function, but the z/OS UNIX System Services program is not available.

System action

The adapter ends.

Operator response

Notify the system programmer.

System programmer response

Activate z/OS UNIX System Services and restart the adapter.

IHS0130E EAS initialization file error ==>

Explanation

This is a message header indicating that there was some error while processing the initialization file. More messages will follow this message indicating the specific error.

System action

The job ends.

Operator response

Notify the system programmer.

System programmer response

Use the following messages to determine the actual cause of the failure.

IHS0131E **File *file*, line *line*, position *position*.**

Explanation

This message contains file, line number, and line position information for any configuration file initialization errors. More messages will follow this message indicating the specific error.

Message Variables

- file***
The configuration file name of the configuration file in error.
- line***
The line number of the configuration file in error.
- position***
The character position after which the error has occurred. Depending on the specific error, the actual position on the line where the error occurred is anywhere from the specified character position to the end of the line.

System action

The Event/Automation Service address space or the specific service task ends, depending on the configuration file in error.

Operator response

Notify the system programmer.

System programmer response

Use the following messages to determine the actual cause of the failure.

IHS0132E ***command command* unknown.**

Explanation

This message indicates that the command in the configuration file or on the MODIFY command line is not supported.

Message Variables

- command***
The unsupported command.

System action

If the error occurred in a configuration file, the Event/Automation Service's address space or the specific service task ends, depending on the configuration file

in error. If the error occurred on a MODIFY command line, the MODIFY command is ignored.

Operator response

Notify the system programmer or reissue the correct MODIFY command.

System programmer response

Correct the statement in the configuration file.

IHS0133E ***command command* syntactically incorrect.**

Explanation

This message indicates that the command in the configuration file or on the MODIFY command line contains syntax that is not valid.

Message Variables

- command***
The command with the incorrect syntax.

System action

If the error occurred in a configuration file, the Event/Automation Service address space or the specific service task ends, depending on the configuration file in error. If the error occurred on a MODIFY command line, the MODIFY command is ignored.

Operator response

Notify the system programmer or reissue the correct MODIFY command.

System programmer response

Correct the statement in the configuration file.

IHS0134E ***command command value value* not supported.**

Explanation

This message indicates that the value given for a command in a configuration file was not supported, such as a nonnumeric value where a number is expected, or a value that is too long.

Message Variables

- command***
The command that failed.
- value***
The value in error.

System action

The Event/Automation Service address space or the specific service task ends, depending on the configuration file in error.

Operator response

Notify the system programmer.

System programmer response

Correct the statement in the configuration file.

IHS0135E *keyword keyword unknown.*

Explanation

This message indicates that the keyword in the configuration file, the MODIFY command line, or an Event/Automation Service input parameter is unknown.

Message Variables

keyword

The unsupported keyword.

System action

If an input parameter or configuration file statement is in error, the Event/Automation Service address space or the specific service task ends. If the error occurred on a MODIFY command line, the MODIFY command is ignored.

Operator response

Notify the system programmer or reissue a correct MODIFY command.

System programmer response

Correct the statement in the configuration file or the Event/Automation Service input parameter.

IHS0136E *keyword keyword syntactically incorrect.*

Explanation

This message indicates that the keyword in the configuration file, the MODIFY command line, or an Event/Automation Service input parameter contains syntax that is not valid.

Message Variables

keyword

The keyword with the incorrect syntax.

System action

If an input parameter or configuration file statement is in error, the Event/Automation Service address space or the specific service task ends. If the error occurred on a MODIFY command line, the MODIFY command is ignored.

Operator response

Notify the system programmer or reissue a correct MODIFY command.

System programmer response

Correct the statement in the configuration file or the Event/Automation Service input parameter.

IHS0137E *keyword keyword value value not supported.*

Explanation

This message indicates that the keyword value in the configuration file, the MODIFY command line, or an Event/Automation Service input parameter was not supported. For example, a nonnumeric value where a number is expected or a value that is too long.

Message Variables

keyword

The keyword that failed.

value

The value in error.

System action

If an input parameter or configuration file statement is in error, the Event/Automation Service address space or the specific service task ends. If the error occurred on a MODIFY command line, the MODIFY command is ignored.

Operator response

Notify the system programmer or reissue a correct MODIFY command.

System programmer response

Correct the statement in the configuration file or the Event/Automation Service input parameter.

IHS0138E **MODIFY command error, position
position ==>**

Explanation

This message header indicates that there was an error while processing a MODIFY command. Additional messages will follow indicating the specific error.

Message Variables

position

The character position after which the error has occurred. Depending on the specific error, the position on the line where the error occurred can be from the specified character position to the end of the line.

System action

The MODIFY command is ignored.

Operator response

Use the following messages to determine the actual cause of the failure, or notify the system programmer.

System programmer response

Use the following messages to determine the actual cause of the failure.

IHS0139E **Program input parameter error**
 ==>

Explanation

This message header indicates that there was an error while processing a program input parameter. Additional messages will follow indicating the specific error.

System action

The Event/Automation Service ends.

Operator response

Notify the system programmer.

System programmer response

Use the following messages to determine the actual cause of the failure.

IHS0140E **Parameter *parameter* is incorrect.**

Explanation

This message indicates that the parameter value in the event receiver configuration file was incorrect.

System action

The event receiver subtask ends.

Operator response

Notify the system programmer.

System programmer response

Correct the parameter in the event receiver configuration file.

IHS0141I **SERVICE STATUS ADDITIONAL**
 INFO

Explanation

This is a message header that occurs in response to a DISPLAY STATUS command issued to the Event/Automation Service.

IHS0142I -----

Explanation

This is a message header that occurs in response to a DISPLAY STATUS command issued to the Event/Automation Service.

IHS0143I *service status addinfo*

Explanation

This message contains inserts to fill in the service name, status, and other information that relates to the service.

Message Variables

service

The name of the service being reported:

- ALERTA
- ALERTC
- ALRTTRAP
- EVENTRCV
- MESSAGEA
- MESSAGEC
- PPI
- TRAPALRT
- TCP/IP

These values represent the Event/Automation Service subtasks, the NetView Subsystem PPI interface, and the connection to the TCP/IP service.

status

The status of the service. See the DISPLAY STATUS command in the NetView online help for more information.

addinfo

The additional information for each service. See the DISPLAY STATUS command in the NetView online help for more information.

IHS0144E Event Receiver CFG file error ==>

Explanation

This message header indicates that there was an error while processing the event receiver configuration file. Additional messages will follow indicating the specific error.

System action

The event receiver subtask ends.

Operator response

Notify the system programmer.

System programmer response

Use the following messages to determine the actual cause of the failure.

**IHS0145I TASK QCOUNT TOTAL SENT TOTAL
RCVD**

Explanation

This message header occurs in response to a DISPLAY QSTATS command issued to the Event/Automation Service.

IHS0146I ---- -----

Explanation

This message header occurs in response to a DISPLAY QSTATS command issued to the Event/Automation Service.

IHS0147I task qcount sent recvd

Explanation

This message contains inserts to fill in the task name, current task queue count, number of messages received, and number of messages sent.

Message Variables**task**

The name of the task being reported:

- ALERTA
- ALERTC
- ALRTTRAP
- CONTROL

- EVENTRCV
- MESSAGEA
- MESSAGEC
- TRAPALRT

qcount

The number of data buffers that have been sent to the subtask, but have not yet been processed by the subtask.

sent

The number of data buffers that have been sent by this subtask to another subtask.

recvd

The number of data buffers that have been processed by this subtask.

IHS0148E adapter: CDS file file cannot be opened.

Explanation

The attempt to open the specified CDS file received a file I/O error. The file I/O error is provided in the Event/Automation Service log.

Message Variables**adapter**

The event adapter designator.

file

The name of the CDS file.

System action

The *adapter* task ends.

Operator response

Notify the system programmer.

System programmer response

Find message IHS0148E in the Event/Automation Service log. Message IHS0114E will follow this message in the log. IHS0114E contains specific information on the type of file I/O error that occurred. If the problem cannot be resolved from this information, notify IBM Software Support.

IHS0149E adapter: File read error in CDS file file.

Explanation

The next line from the specified CDS file cannot be retrieved because of a file I/O error. The file I/O error is provided in the Event/Automation Service log.

Message Variables

adapter

The event adapter designator.

file

The name of the CDS file.

System action

The *adapter* task ends.

Operator response

Notify the system programmer.

System programmer response

Find message IHS0149E in the Event/Automation Service log. Message IHS0114E will precede this message in the log. IHS0114E contains specific information on the type of file I/O error that occurred. If the problem cannot be resolved from this information, notify IBM Software Support.

IHS0150E	<i>adapter</i>: CDS INCLUDE file name file is incorrect.
-----------------	---

Explanation

A CDS file line with the %INCLUDE keyword has a syntax error.

Message Variables

adapter

The event adapter designator.

file

The name of the CDS file.

System action

The *adapter* task ends.

Operator response

Notify the system programmer.

System programmer response

Inspect the CDS file and correct the error.

IHS0151E	Startup parameters for <i>system1</i> are incorrect; started from <i>system2</i>.
-----------------	--

Explanation

An attempt was made to start the Event/Automation Service from an environment that does not match the format of the input parameters.

Message Variables

system1

The environment for which the specified startup parameters match.

system2

The environment under which the Event/Automation Service was started.

System action

The Event/Automation Service ends.

Operator response

Correct the startup parameters to match the startup environment or notify the system programmer.

System programmer response

Correct the startup parameters to match the startup environment.

IHS0152E	The \$CDS_GROUP keyword is missing from a select group.
-----------------	--

Explanation

The CDS file, which is used by the event receiver, has a CDS that is missing a check for the \$CDS_GROUP keyword in one of its Select segments.

System action

The event receiver ends.

Operator response

Correct the CDS file and restart the event receiver or notify the system programmer.

System programmer response

Correct the CDS file and restart the event receiver.

IHS0153E	A CONTINUE slot value of "slotvalue" is incorrect.
-----------------	---

Explanation

The CDS file used by the event receiver has a CONTINUE slot with an incorrect value.

Message Variables

slotvalue

The incorrect slot value.

System action

The event receiver ends.

Operator response

Correct the CDS file and restart the event receiver or notify the system programmer.

System programmer response

Correct the CDS file and restart the event receiver.

IHS0154E **An NMVT_TYPE slot value of "slotvalue" is incorrect.**

Explanation

The CDS file used by the event receiver has an NMVT_TYPE slot with an incorrect value.

Message Variables

slotvalue

The incorrect slot value.

System action

The event receiver ends.

Operator response

Correct the CDS file and restart the event receiver or notify the system programmer.

System programmer response

Correct the CDS file and restart the event receiver.

IHS0155E **A BUILD_SV31LIST slot value of "slotvalue" is incorrect.**

Explanation

The CDS file used by the event receiver has a BUILD_SV31LIST slot with an incorrect value.

Message Variables

slotvalue

The incorrect slot value.

System action

The event receiver ends.

Operator response

Correct the CDS file and restart the event receiver or notify the system programmer.

System programmer response

Correct the CDS file and restart the event receiver.

IHS0156E **Found a closing subvector length brace without an opening brace.**

Explanation

While attempting to translate a subvector slot, there were more closing subvector length braces found in the slot value than opening braces. This applies to the event receiver and the trap-to-alert conversion task.

System action

The translation of the Event Integration Facility (EIF) event or SNMP trap ends.

Operator response

Correct the CDS file and restart the event receiver or notify the system programmer.

System programmer response

Correct the CDS file and restart the event receiver. This error message and the untranslated slot value will be logged in the error/output file for the event receiver.

IHS0157E **Found a closing suspend translation brace without an opening brace.**

Explanation

While attempting to translate a subvector slot, there were more closing suspend translation braces found in the slot value than opening braces. This error message and the untranslated slot value will be logged in the error/output file for the task that issued the message, which is either the event receiver or the trap-to-alert conversion task.

System action

The translation of the Event Integration Facility (EIF) event or SNMP trap ends.

Operator response

Correct the CDS file and restart the event receiver or notify the system programmer.

System programmer response

Correct the CDS file and restart the event receiver.

IHS0158E **Found an incorrect character in the subvector translation stream.**

Explanation

While attempting to translate a subvector slot, a nonhexadecimal character was found in an unsuspended translation stream. This applies to the event receiver and the trap-to-alert conversion task.

System action

The translation of the Event Integration Facility (EIF) event or SNMP trap ends.

Operator response

Correct the CDS file and restart the event receiver or notify the system programmer.

System programmer response

Correct the CDS file and restart the event receiver.

IHS0159I The calculated length (*calclength*) and user specified length (*userlength*) of a subvector do not match. Using calculated length.

Explanation

An error occurred while translating a subvector slot because the total length of a subvector does not match the length that was coded in the subvector slot value.

Message Variables

calclength

The length of the subvector as calculated by the event receiver or the trap-to-alert conversion task

userlength

The length of the subvector as specified in the CDS file

System action

The calculated length is used and processing continues.

Operator response

Correct the CDS file to avoid receiving this message in the future and restart the event receiver, or notify the system programmer.

System programmer response

Correct the CDS file to avoid receiving this message in the future and restart the event receiver.

IHS0160E The calculated length (*calclength*) of a subvector is not between 2 and 255 bytes.

Explanation

While attempting to translate a subvector slot, the actual total length of a subvector is not in the range of 2–255 bytes. This message applies to the event receiver and the trap-to-alert conversion task.

Message Variables

calclength

The length of the subvector as calculated by the task that issued the message

System action

The translation of the Event Integration Facility (EIF) event or SNMP trap ends.

Operator response

Correct the CDS file and restart the event receiver or notify the system programmer.

System programmer response

Correct the CDS file and restart the event receiver.

IHS0161E The length (*length*) of a subfield runs beyond the subvector or is zero.

Explanation

During the calculation of the alert ID for the generic alert subvector, a subfield length was found to extend beyond the end of the subvector. This applies to the event receiver and the trap-to-alert conversion task.

Message Variables

length

The length of the subfield.

System action

The translation of the Event Integration Facility (EIF) event ends.

Operator response

Correct the CDS file and restart the event receiver or notify the system programmer.

System programmer response

Correct the CDS file and restart the event receiver.

IHS0162E Found at least one opening subvector length brace without a corresponding closing brace.

Explanation

An error occurred while attempting to translate a subvector slot because there were fewer closing subvector length braces found in the slot value than opening braces. This error message and the untranslated slot value will be logged in the error/

output file for the event receiver or the trap-to-alert conversion task.

System action

The translation of the Event Integration Facility (EIF) event or SNMP trap ends.

Operator response

Correct the CDS file and restart the event receiver or notify the system programmer.

System programmer response

Correct the CDS file and restart the event receiver.

IHS0163E	Found at least one opening suspend translation brace without a corresponding closing brace.
-----------------	--

Explanation

An error occurred while attempting to translate a subvector slot because there were fewer closing suspend translation braces found in the slot value than opening braces. This error message and the untranslated slot value will be logged in the error/output file for the event receiver or the trap-to-alert conversion task.

System action

The translation of the Event Integration Facility (EIF) event or SNMP trap ends.

Operator response

Correct the CDS file and restart the event receiver or notify the system programmer.

System programmer response

Correct the CDS file and restart the event receiver.

IHS0164E	The Alert Receiver PPI mailbox mailbox is not defined. The alert will be discarded.
-----------------	--

Explanation

An attempt to send a Event Integration Facility (EIF) event that has been translated to an alert to the designated PPI receiver has failed because the PPI mail box for the designated receiver is not defined.

Message Variables

mailbox

The name of the PPI mail box.

System action

The alert is discarded and processing continues.

Operator response

If the alert was created because of translation of a Event Integration Facility (EIF) event by the event receiver, then correct the configuration file for the event receiver and restart the conversion task. If the alert was created because of translation of an SNMP trap by the trap-to-alert conversion task, then correct the configuration file for the trap-to-alert conversion task and restart it. Otherwise, notify the system programmer.

System programmer response

If using the event receiver to convert Event Integration Facility (EIF) events to alerts, then correct the event receiver configuration file and restart the conversion task. If using the trap-to-alert conversion task to convert SNMP traps to alerts, then correct the trap-to-alert conversion task and restart it.

IHS0165I	The OUTPUT is set to <i>destination</i>.
-----------------	---

Explanation

This is the first line generated in response to an OUTPUT command that was issued without parameters.

Message Variables

destination

The destination of Event/Automation Service output (GTF, SYSOUT, or both).

IHS0166E	Unable to set the socket option SO_LINGER.
-----------------	---

Explanation

The event receiver task was unable to initialize.

System action

The event receiver task ends.

Operator response

Notify the system programmer.

System programmer response

Check the Event/Automation Service log for related messages, including IHS0114E. Verify that TCP/IP is properly configured and active. If the problem persists, notify IBM Software Support.

IHS0167I	The OUTSIZE is set to <i>size</i> bytes.
-----------------	---

Explanation

This is the second line generated in response to an OUTPUT command that was issued without parameters. It specifies the setting of the OUTSIZE parameter.

Message Variables

size

The number of bytes to write before the output file is closed and switched.

IHS0168I *task output file is file*

Explanation

This is the third and following lines generated in response to an OUTPUT command that was issued without parameters. It specifies the current output file for each task.

Message Variables

task

The name of the task.

file

The name of the output file. If the output file is not an HFS, or a sequential data set or PDS member, the name will be the data set definition of the file.

IHS0169E **Failure opening or writing to OUTPUT file *outfile*. Standard output will be used.**

Explanation

The specified output file cannot be opened. The standard output stream will instead be used.

Message Variables

outfile

The name of the output file.

System action

The output file is ignored. All output for the service task will be placed in the standard output stream.

Operator response

Notify the system programmer.

System programmer response

Specify a valid output file, within the startup procedures output data set definitions, or with the -E option when starting from the OE command shell.

IHS0178E *taskname task CFG file error ==>*

Explanation

This message header indicates that there was an error while processing the named task's configuration file. Additional messages indicating the specific error will follow.

Message Variables

taskname

The name of the task whose configuration file has an error.

System action

The task that issued the message ends.

Operator response

Notify the system programmer.

System programmer response

Use the messages that follow this header to determine the actual cause of error.

IHS0179E **Found a closing translation bracket without an opening bracket.**

Explanation

While attempting to translate a subvector slot in the CDS file, there were more closing translation brackets found in the slot value than opening brackets. This error message and the untranslated slot value will be logged in the error/output file for the trap-to-alert conversion task.

System action

The translation of the SNMP trap ends.

Operator response

Correct the CDS file and restart the trap-to-alert conversion task or notify the system programmer.

System programmer response

Correct the CDS file and restart the trap-to-alert conversion task.

IHS0180E **Found at least one opening translation bracket without a corresponding closing bracket.**

Explanation

An error occurred while attempting to translate a subvector slot in the CDS file because there were fewer closing translation brackets found in the slot

value than opening brackets. The error message and the untranslated slot value will be logged in the error/output file for the trap-to-alert conversion task.

System action

The translation of the SNMP trap ends.

Operator response

Correct the CDS file and restart the trap-to-alert conversion task or notify the system programmer.

System programmer response

Correct the CDS file and restart the trap-to-alert conversion task.

IHS0181E	The <i>service</i> will continue recycling until it can successfully define a socket.
-----------------	--

Explanation

The named service cannot successfully define and register a server socket with TCP/IP.

Message Variables

service

The name of the service which cannot register its socket.

System action

The service waits for 60 seconds before again attempting to define and register a socket. The service continues to recycle until the socket is registered or the service ends.

Operator response

Notify the system programmer.

System programmer response

Use the information in the output log and any corresponding console messages which preceded this message to determine why the service is not able to register with TCP/IP.

IHS0182I	<==Current <i>service</i> Service Settings==>
-----------------	--

Explanation

This is a message header in response to a SETTINGS command issued to the Event/Automation Service.

Message Variables

service

The name of the service for which the settings are displayed. It can have the following values:

Alert Adapter

The alert adapter service.

Alert to Trap Conversion

The alert-to-trap conversion service.

Confirmed Alert Adapter

The confirmed alert adapter service.

Confirmed Message Adapter

The confirmed message adapter service.

E/AS Global

The global settings for the Event/Automation Service.

Event Receiver

The event receiver service.

Message Adapter

The message adapter service.

Trap to Alert Conversion

The trap-to-alert conversion service.

IHS0183I	CFG file : <i>cfgfilename</i> (<i>fromtype</i>)
-----------------	--

Explanation

This is a message in response to a SETTINGS command issued to the Event/Automation Service.

Message Variables

cfgfilename

The full name of the configuration file used by this service.

fromtype

An indication of how the configuration file was specified. It can have the following values:

C

The configuration file was specified on a global initialization file statement.

D

The configuration file was specified by default.

P

The configuration file was specified as a startup parameter.

IHS0184I	** The service is not active **
-----------------	--

Explanation

This is a message in response to SETTINGS command issued to the Event/Automation Service. This message indicates that there is no SETTINGS data available for this service because the service is not active.

IHS0185I	<i>setting</i> = <i>value</i> (<i>fromtype</i>)
-----------------	--

Explanation

This is a message in response to a SETTINGS command issued to the Event/Automation Service.

Message Variables

setting

The name of the setting that is displayed.

value

The value of the setting.

fromtype

An indication of how the setting was specified. It can have the following values:

C

The configuration file was specified on a global initialization file statement.

D

The configuration file was specified by default.

P

The configuration file was specified as a startup parameter.

IHS0186I **Filter *number* slots:**

Explanation

This is a message in response to a SETTINGS command issued to the Event/Automation Service.

Message Variables

number

The number of the Filter statement for which the settings are displayed. This number corresponds to the position of this Filter statement in the service configuration file, relative to the other Filter statements in the file.

IHS0187I ***slotname=slotvalue;***

Explanation

This is a message in response to a SETTINGS command issued to the Event/Automation Service.

Message Variables

slotname

The name of a slot from a Filter or FilterCache statement.

slotvalue

The value of a slot from a Filter or FilterCache statement.

IHS0188I **FilterCache *number* slots:**

Explanation

This is a message in response to a SETTINGS command issued to the Event/Automation Service.

Message Variables

number

The number of the FilterCache statement for which the settings are displayed. This number corresponds to the position of this FilterCache statement in the service configuration file relative to the other FilterCache statements in the file.

IHS0189I **The adapter services are running in secure mode.**

Explanation

This is a message in response to a SETTINGS command issued to the Event/Automation Service. This message appears only for the alert adapter or message adapter service if the service has been started with the -S option from a UNIX System Services command shell. The SETTINGS data is not available for services started with the -S option.

IHS0190E ***service:* Could not access the TestMode file.**

Explanation

The service is operating in test mode as specified by the TestMode statement. The event data is written to the file specified by the ServerLocation statement when the service is running in test mode. This message indicates that there is a problem accessing this file.

Message Variables

service

The name of the service which issued the message.

System action

The event is not copied to the test mode file. Processing continues.

Operator response

Notify the system programmer.

System programmer response

Additional information describing the problem is written to the output log for this service. Use this information to correct the problem and recycle the service task. If the source of the problem cannot be determined from this information, contact IBM Software Support.

IHS0191I ***service:* Number of ServerLocations (*number*) exceeds the maximum of *maximum*; ignoring extras.**

Explanation

The ServerLocation statement for the service contains more locations than the maximum allowed.

Message Variables

service

The name of the service which issued the message.

number

The number of locations that are defined on the ServerLocation statement.

maximum

The maximum number of locations that are allowed on the ServerLocation statement.

System action

The additional locations are ignored. Processing continues.

Operator response

Notify the system programmer.

System programmer response

Change the ServerLocation statement to remove the extra locations and recycle the service task.

IHS0192I	service: Server connections are suspended.
-----------------	---

Explanation

This message occurs when an event cannot be sent to any of the locations specified on the ServerLocation statement. This message is issued only if the connections are not already suspended. When this message appears, events are not sent to any of the locations on the ServerLocation statement until message IHS0193I is issued.

Message Variables

service

The name of the service which issued the message.

System action

If event buffering is allowed, the event is copied to the cache file. Otherwise, the event is discarded. Processing continues with the next event.

Operator response

Notify the system programmer.

System programmer response

If this is not an expected condition, such as a known outage by the event server or servers, see the *IBM Z NetView Troubleshooting Guide* for more information on diagnosing TCP/IP connectivity problems for the Event/Automation Service.

IHS0193I	service: Server connections have been resumed.
-----------------	---

Explanation

This message occurs if the server connections are currently suspended and an event is successfully sent to one of the locations specified on the ServerLocation statement.

Message Variables

service

The name of the service which issued the message.

System action

If events were saved in the cache file, the cache file is flushed. Processing continues.

IHS0194E	service: A file access error occurred for the cache file.
-----------------	--

Explanation

The service is attempting to cache an event and there is a problem accessing the cache file. When this message appears, events are not cached until message IHS0196I is issued.

Message Variables

service

The name of the service which issued the message.

System action

The current operation ends and processing continues with the next event. If the cache file cannot be accessed during an attempt to buffer an event, the event is not buffered. The state of the cache file depends on when and what type of error occurred.

Operator response

Notify the system programmer.

System programmer response

Additional information describing the problem is written to the output log for this service. Use this information to correct the problem and recycle the

service task. If the source of the problem cannot be determined from this information, contact IBM Software Support.

IHS0195E **service: An event cannot be cached: The event size is greater than the maximum cache file size.**

Explanation

The service attempted to cache an event that has a size greater than the maximum size allowed for the cache file. The maximum cache file size is specified on the BufEvtMaxSize statement.

Message Variables

service

The name of the service which issued the message.

System action

The current event is discarded and processing continues with the next event.

Operator response

Notify the system programmer.

System programmer response

Additional information describing the problem is written to the output log for this service. This problem occurs only if an event is unusually large or the BufEvtMaxSize statement contains a value which is unusually small. Increase the BufEvtMaxSize to handle this event size and recycle the service task.

IHS0196I **service: File access errors have been corrected. Caching is resumed.**

Explanation

This message occurs if the event caching was previously stopped because of a cache file access error and the error was corrected. The current event is successfully cached.

Message Variables

service

The name of the service which issued the message.

System action

The current event is cached and processing continues with the next event.

IHS0197E **service: Cache file corrupted. The current contents will be discarded.**

Explanation

This message can occur during an attempt to cache an event in the cache file. The event at the end of the cache file does not end with a valid event separator. This indicates that the cache file has been corrupted.

Message Variables

service

The name of the service which issued the message.

System action

The current contents of the cache file are discarded. The event that is to be cached is then written to the cache file and processing continues.

Operator response

Notify the system programmer.

System programmer response

Additional information describing the problem is written to the output log for this service. This problem can occur if the cache file was modified by an operator with a system editor. If the file was not intentionally modified by an operator and the problem cannot be determined from the information in the output log, contact IBM Software Support.

IHS0198E **service: An event in the cache file is not properly terminated. The event will be discarded.**

Explanation

This message can occur during an attempt to flush events from the cache file. The event at the end of the cache file does not end with a valid event separator. This indicates that the cache file has been corrupted.

Message Variables

service

The name of the service which issued the message.

System action

The current event is discarded. Since it is the last event in the cache file, the flushing of the cache completes and processing continues.

Operator response

Notify the system programmer.

System programmer response

Additional information describing the problem is written to the output log for this service. This problem can occur if the cache file was modified by an operator with a system editor. If the file was not intentionally modified by an operator and the problem cannot be determined from the information in the output log, contact IBM Software Support.

IHS0199E **service: An event in the cache file is too large for the Read buffer. The event will be discarded.**

Explanation

This message can occur during an attempt to flush events from the cache file. The event currently being flushed is larger than the size of the buffer used to read data from the cache file. The size of this buffer is specified by the BufEvtRdBlkLen statement.

Message Variables

service

The name of the service which issued the message.

System action

The current event is discarded and processing continues with the next event in the cache file.

Operator response

Notify the system programmer.

System programmer response

Additional information describing the problem is written to the output log for this service. This problem can occur if the BufEvtRdBlkLen setting is unusually small or if an event written to the cache file is unusually large. Increase the BufEvtRdBlkLen to handle this event size and recycle the service task.

IHS0200I **service: Number of ServerPorts (number) exceeds the maximum of maxnum; ignoring extras.**

Explanation

The ServerPort statement for the service contains more ports than the maximum allowed.

Message Variables

service

The name of the service which issued the message.

number

The number of ports that are defined on the ServerPort statement.

maxnum

The maximum number of ports that are allowed on the ServerPort statement.

System action

The additional ports are ignored. Processing continues.

Operator response

Notify the system programmer.

System programmer response

Change the ServerPort statement to remove the extra ports and recycle the service task.

IHS0201I **service: At least one ServerLocation must be specified.**

Explanation

The configuration file of the named service did not contain a ServerLocation statement. This service requires at least one ServerLocation.

Message Variables

service

The name of the service which issued the message.

System action

The service terminates.

Operator response

Notify the system programmer.

System programmer response

Add a ServerLocation to the services configuration file.

IHS0317E **No valid CDS statements found in adapter CDS file name.**

Explanation

No CDS statements were found during CDS file processing. Alerts cannot be converted to traps or Event Integration Facility (EIF) events (depending on which adapter is initializing).

Message Variables

adapter

The name of the adapter that is initializing.

name

The name of the CDS file being processed.

System action

The task that issued the message ends.

Operator response

Notify the system programmer.

System programmer response

Verify that the correct CDS file is being processed by adapter initialization. If so, examine the CDS file and ensure there are valid CDS statements in the file.

IHS0318W Unable to format alert to trap.

Explanation

The alert-to-trap conversion task was unable to create an SNMP trap from an alert. Possible causes include errors in the Class Definition File or internal errors in z/OS TCP/IP services.

System action

The alert is discarded and processing continues.

Operator response

Notify the system programmer.

System programmer response

Examine the Event/Automation Service network log for error messages pertaining to the failure, such as an incorrect format for the SPECIFIC value in the CDS file. If CDS errors are detected, correct the CDS file and recycle the ALRTTRAP task. If the cause of the error cannot be determined, contact IBM Software Support.

**IHS0319W Unable to send trap to OS/390
 SNMP agent.**

Explanation

The Event/Automation Service was unable to send a trap to the z/OS SNMP agent for processing.

System action

The alert is discarded and processing continues.

Operator response

Verify that the z/OS SNMP agent is active. If not, activate it and recycle the ALRTTRAP task. Otherwise, contact the system programmer

System programmer response

Examine the Event/Automation Service log and the log output for the z/OS SNMP agent for error messages pertaining to the failure. If the failure cannot be determined, IBM Software Support.

**IHS0320E Unable to connect to OS/390
 SNMP agent.**

Explanation

The Event/Automation Service ALRTTRAP task was unable to obtain a connect to the z/OS SNMP agent.

System action

ALRTTRAP initialization is stopped.

Operator response

Verify that the z/OS SNMP agent is active. If not, activate it and restart the ALRTTRAP task. Otherwise, notify the system programmer.

System programmer response

If the SNMP agent is active, examine the Event/Automation Service network log and the SNMP agent log for error messages pertaining to the failure. Possible causes of failure include:

- Invalid host name or community specification in the IHSAAATCF file. In particular, the community name might need to be defined in the TCP/IP PW.SRC file.
- Inability to start the SNMP agent because of errors in the TCP/IP configuration for the SNMP agent.

Chapter 14. IHS Prefix Messages Issued from the NetView Management Console Workstation

This chapter describes IHS prefix messages that are issued from the NetView management console workstation. Chapter 13, “IHS Prefix Messages Issued from the Host,” on page 643 describe IHS prefix messages that are issued from the host.

Note:

1. In some instances, a message *number* issued from the host might be identical to a message *number* issued from the NetView management console workstation, differing only in the suffix. Both the text of the message and the explanation of the message are very different. For example, IHS0200I is issued from the host, while IHS0200E is issued from the workstation.

Message IHS0200I reads:

"service: Number of ServerPorts (*number*) exceeds the maximum of *maximum*; ignoring extras."

An explanation follows, providing additional details specific to the IHS0200I message.

Message IHS0200E reads:

"The configuration file ihscacm.cfg was not found. Verify that the file exists in the \$BINDIR/TDS/Server/config directory and that the BINDIR environment variable is set."

An explanation follows, providing additional details specific to the IHS0200E message,

2. The IHS prefix messages for the NetView management console topology console and the NetView management console topology server are available on the workstation where the console or server is installed. You can access the help for these messages from an active NetView management console, or directly from a Web browser on a computer that has the NetView management console or NetView management console server installed by entering one of these URLs on your Web browser:

- On a NetView management console

```
file:///basedir/bin/generic_unix/TDS/client/  
help/ihs_hlp_using_languageid.html
```

- On a NetView management server

```
file:///basedir/bin/w32-ix86/TDS/server/db/current  
/help/ihs_hlp_using_languageid.html
```

where *basedir* is the base path of the NetView management console or NetView management console server and *languageid* is the numeric language identifier (for example, 437 for English or 932 for Japanese) for the type of help that is installed on your system.

On Windows systems, the default for *basedir* is

```
C:\usr\local\Tivoli
```

On UNIX and AIX platforms, the default for *basedir* is

```
/usr/local/Tivoli
```

IHS0200E	The configuration file ihscacm.cfg was not found. Verify that the file exists in the \$BINDIR/TDS/Server/config directory and that the BINDIR environment variable is set.	Explanation
		The topology communications server cannot find the configuration file ihscacm.cfg. Verify that the BINDIR environment variable is properly set and that the file exists in the \$BINDIR/TDS/server/config directory.

System action

The topology communications server ends.

Operator response

Check that the file exists in the \$BINDIR/TDS/server/config directory. If not, contact your system programmer.

System programmer response

Reinstall the topology server.

IHS0201E The configuration file ihscacm.cfg is not valid.

Explanation

The format of the configuration file is not valid. This occurs when the file is unintentionally modified.

System action

The topology communications server ends.

Operator response

Notify the system programmer.

System programmer response

Reinstall the topology server.

IHS0202E An unexpected error occurred during initialization.

Explanation

A system error occurred during the initialization of the topology communications server. This error can be caused by an out-of-memory condition.

System action

The topology communications server ends.

Operator response

When an out-of-memory condition exists, you can free some memory by stopping other applications or by adding memory to the system. Also confirm that swapping is enabled. If you cannot resolve the error, contact the system programmer.

System programmer response

Check for an out-of-memory condition. If the condition does not exist, contact IBM Software Support.

IHS0203E The communications server program is already active. Only

one instance of the communications server can be active at a time.

Explanation

An attempt was made to start the topology communications server, but the program was already active.

System action

The second attempt to load the topology communications server is ignored.

Operator response

Contact your system programmer.

System programmer response

If you want to restart the server, stop the server that is currently running, then restart the server. Otherwise, no action is required.

IHS0204E The communications server program's name is not properly defined in the SNA communications server transaction program profile.

Explanation

The remotely attachable transaction program profile, in the IBM Communications Server configuration file, does not contain the topology communications server transaction program's name (30F0F4F4) or is not properly defined.

System action

The topology communications server logs the error and continues operation.

Operator response

Notify the system programmer.

System programmer response

Check the configuration of the IBM Communications Server. If you cannot resolve the error, contact IBM Software Support.

IHS0205E The communications server program is ending due to an internal error.

Explanation

An internal error occurred in the topology communications server. This error can be caused by configuration errors.

System action

The topology communications server ends.

Operator response

Notify the system programmer.

System programmer response

Check the configuration of the IBM Communications Server. If you cannot resolve the error, contact IBM Software Support.

IHS0206E	The APPC attach manager is not active.
-----------------	---

Explanation

The IBM Communications Server LU 6.2 attach manager is not active. The topology communications server logs the error and continues.

System action

The topology communications server retries the operation.

Operator response

Activate the attach manager using the IBM Communications Server Subsystem Management menu. Notify the system programmer.

System programmer response

Modify the IBM Communications Server SNA base profile in the IBM Communications Server configuration file to automatically activate the attach manager.

IHS0207E	The SNA processing is ending because the SNA communications server APPC subsystem has ended abnormally.
-----------------	--

Explanation

The topology communications server is ending because the IBM Communications Server LU 6.2 subsystem stopped unexpectedly. Further LU 6.2 communications with the host are not possible. To re-enable LU 6.2 support, recycle the topology communication server.

System action

Depending on the severity of the SNA error, the topology communications server might end.

Operator response

Notify the system programmer.

System programmer response

Restart the SNA communications server, then restart the topology server.

IHS0208E	The SNA communications server APPC subsystem is not loaded.
-----------------	--

Explanation

The IBM Communications Server LU 6.2 subsystem was not active before the topology communications server transaction program was started.

System action

The topology communications server logs the error and continues.

Operator response

Notify the system programmer.

System programmer response

Check the configuration of the IBM Communications Server. For more information, refer to the IBM communications server online documentation. If you cannot resolve the error, contact IBM Software Support.

IHS0209E	An error occurred while attempting to start a thread in the communications server program.
-----------------	---

Explanation

An out-of-memory condition causes the topology communications server to end.

System action

The topology communications server ends.

Operator response

You can free some memory by stopping other applications, or by adding memory to the system. Also check that swapping is enabled. If the error still exists, notify the system programmer.

System programmer response

Confirm that an out-of-memory condition exists. If the condition does not exist, contact IBM Software Support.

IHS0210E The communications server program is ending due to a memory allocation error.

Explanation

An out-of-memory condition causes the topology communications server to end.

System action

The topology communications server ends.

Operator response

You can free some memory by stopping other applications, or by adding memory to the system. Also check that swapping is enabled. If the error still exists, notify the system programmer.

System programmer response

Confirm that an out-of-memory condition exists. If the condition does not exist, contact IBM Software Support.

IHS0211E An error occurred while deallocating a SNA session.

Explanation

An LU 6.2 error occurred when the LU 6.2 session was deallocated. This warning can be caused by errors in other components, or by the unexpected stopping of the IBM Communications Server. This warning is not critical and does not impact the use of the topology server.

System action

The server continues to run.

Operator response

Notify your system programmer.

System programmer response

If the warning occurs often and you cannot resolve the error, contact IBM Software Support.

IHS0212E The SNA processing is ending due to an APPC protocol error.

Explanation

An error occurred because a partner transaction program did not follow the correct protocol, or because an error was encountered in a partner transaction program. Further LU 6.2 communications with the host are not possible. To re-enable LU 6.2 support, recycle the topology communication server.

System action

The topology communications server logs the error and continues.

Operator response

Notify the system programmer.

System programmer response

Contact IBM Software Support.

IHS0213E An APPC session has ended abnormally.

Explanation

The session with a partner transaction program ended unexpectedly. This warning is caused by the unexpected stopping of a partner transaction program, the IBM Communications Server, or VTAM.

Operator response

Check for the cause of the session termination, and restart the session.

IHS0214E An error occurred while converting a string from EBCDIC to ASCII.

Explanation

This error can be the result of an error in the configuration of the IBM Communications Server.

System action

The topology communications server logs the error and continues.

Operator response

Notify the system programmer.

System programmer response

Correct the configuration of the IBM Communications Server.

IHS0215E Communications Server configuration file. Sense code

**code1. Primary Return Code code2.
Secondary Return Code code3.**

Explanation

The IBM Communications Server LU 6.2 subsystem is not properly configured.

Message Variables

code1

Sense code

code2

Primary return code

code3

Secondary return code

System action

The topology communications server logs the error and continues.

Operator response

Notify the system programmer.

System programmer response

Correct the configuration of the IBM Communications Server.

IHS0216E	An error occurred while attempting to allocate a session to LU <i>luname</i>. Verify that the LU is active.
-----------------	--

Explanation

This error can occur because the destination LU is not active. The error can also occur when an LU 6.2 configuration error exists in the IBM Communications Server.

Message Variables

luname

The name of the destination LU.

System action

Communication to the destination LU is not established.

Operator response

Check that the destination LU is active. If the destination LU is active and the error still exists, notify the system programmer.

System programmer response

Correct the configuration of the IBM Communications Server LU 6.2 subsystem.

IHS0217E	The maximum number of transaction programs has been exceeded for LU <i>luname</i>.
-----------------	---

Explanation

An LU 6.2 configuration error existed in the IBM Communications Server.

Message Variables

luname

The name of the local LU.

System action

The transaction program ends.

Operator response

Notify the system programmer.

System programmer response

Set the Maximum Number of Transaction Programs parameter to zero in the IBM Communications Server local LU profile. When the Maximum Number of Transaction Programs=0, IBM Communications Server allows an unlimited number of transaction programs.

IHS0218E	The communications server program received bad data. The data will be logged to the error log.
-----------------	---

Explanation

The topology communications server program received a data packet that contained a format that is not valid. This message can be caused by an error in another component of the topology server, or by another application erroneously sending data to the topology communications server.

System action

The bad data is logged and the topology communications server continues.

Operator response

Notify the system programmer.

System programmer response

If this error exists because an error occurred in another component of the topology server, disregard the error message. Check whether another application

is sending data to the topology communications server and correct the error.

IHS0223E The topology communications server program encountered an error during initialization.

Explanation

The topology communications server program encountered an error while performing initialization processing. The error might be caused by one of the following reasons:

- An IP address cannot be determined for the TCP/IP host name of the NetView management console server. For example, a `gethostbyname()` call failed for the host name.
- The `ihscacm.cfg` configuration file in the `$BINDIR/TDS/server/config` directory might be missing or corrupted.
- Some other internal error was encountered.

System action

The topology communications server ends.

Operator response

Do the following:

- Ensure that the host name of the NetView management console server has a corresponding valid IP address. For example, an incorrect host name in the `/etc/hosts` file (or its equivalent, depending on the operating system) can cause this problem.
- Ensure the `ihscacm.cfg` file is present in the `$BINDIR/TDS/server/config` directory. If not, the NetView management console server installation files have been corrupted. You must uninstall and reinstall the NetView management console server.

Stop the server and then start it again. If the problem persists, contact your system programmer.

System programmer response

Contact IBM Software Support.

IHS0227E An operating system error occurred during initialization. The topology communications server program was unable to attach to the required shared memory or was unable to allocate required semaphores.

Explanation

A system error occurred during the initialization of the topology communications server. This error can be caused by the topology server being unable to attach to the required IPC resources.

System action

The topology server ends.

Operator response

When the error occurs, stop all of the topology server processes by issuing `tstop`, then issue `tstop -f` to ensure that all of the IPC resources have been cleaned up. If the problem persists, contact your system programmer.

System programmer response

If the condition persists, contact IBM Software Support.

IHS0228I The SNA communications server subsystem is not active. If SNA LU 6.2 communication services are needed, verify that the subsystem has been started.

Explanation

The topology communications server was unable to connect to the SNA communications server.

System action

The topology communications server logs the error and continues.

Operator response

When the error occurs, verify that the SNA communications server daemons have been started. If not, then start them. If the problem persists, contact your system programmer.

System programmer response

If the condition persists, contact IBM Software Support.

IHS0229E The communications server program was unable to establish a connection with the host. Verify that the Transaction Program Name (TPN) 30F0F4F4 does not appear in a SNA Communications Server TPN Profile.

Explanation

The topology communications server was unable to establish an LU 6.2 connection, possibly because of an error in the Transaction Program profile.

System action

The topology communications server logs the error and continues.

Operator response

When the error occurs, verify that the Transaction Program Name (TPN) 30F0F4F4 does not appear in the SNA communications server TPN Profile. If the problem persists, contact your system programmer.

System programmer response

If the condition persists, contact IBM Software Support.

IHS0230E	The communications server program received incorrect data from the host during connection establishment. The connection failed.
-----------------	--

Explanation

The topology communications server received incorrect data from the host during connection establishment.

System action

The topology communications server logs the error and continues.

Operator response

When the error occurs, verify that the profiles for the session that the topology server is using are correct. Check the host logs for additional information. If the problem persists, contact your system programmer.

System programmer response

If the condition persists, contact IBM Software Support.

IHS0231E	The communications server program was unable to establish a connection with the host. Data received from a GET_PARAMETERS request was incorrect.
-----------------	---

Explanation

The topology communications server received incorrect data from the host during connection establishment. A GET_PARAMETERS request failed.

System action

The topology communications server logs the error and continues.

Operator response

When the error occurs, verify that the profiles for the session that the topology server is using are correct. Check the host logs for additional information. If the problem persists, contact your system programmer.

System programmer response

If the condition persists, contact IBM Software Support.

IHS0232E	The communications server program failed on a SNA OPEN request.
-----------------	--

Explanation

The topology communications server received incorrect data from the host during connection establishment. An OPEN request failed.

System action

The topology communications server logs the error and continues.

Operator response

When the error occurs, verify that the profiles for the session that the topology server is using are correct. Check the host logs for additional information. If the problem persists, contact your system programmer.

System programmer response

If the condition persists, contact IBM Software Support.

IHS0233E	The communications server program failed on a SNA Open. The maximum number of allowed file descriptors is currently open.
-----------------	--

Explanation

The topology communications server received incorrect data from the host during connection establishment. An OPEN request failed because the

maximum number of allowed file descriptors has been reached.

System action

The topology communications server logs the error and continues.

Operator response

When the error occurs, stop daemons and programs that are running that are not needed. Increase the system limit for the number of allowed file descriptors. If the problem persists, contact your system programmer.

System programmer response

If the condition persists, contact IBM Software Support.

IHS0234E	The communications server program failed on a SNA ALLOCATE_LISTEN request. SNA processing is ending.
-----------------	---

Explanation

ALLOCATE_LISTEN registers a list of LU 6.2 TPNs for which the server wants to accept allocate requests from remote transaction programs. This registration failed. This problem is generally caused by a configuration error. Further LU 6.2 communications with the host are not possible. To re-enable LU 6.2 support, recycle the topology communication server.

System action

The topology communications server logs the error and ends.

Operator response

When the error occurs, verify that the profiles for the session that the topology server is using are correct. Check the host logs for additional information. If the problem persists, contact your system programmer.

System programmer response

If the condition persists, contact IBM Software Support.

IHS0235E	The communications server program failed on a SELECT request. Possible storage allocation problem.
-----------------	---

Explanation

The SELECT function is used to check the I/O status of one or more connections. An unexpected error was returned from this function.

System action

The topology communications server logs the error and ends.

Operator response

Stop all of the topology daemons with tstop. Run tstop with the -f flag and then restart the daemons. If the problem persists, contact your system programmer.

System programmer response

If the condition persists, contact IBM Software Support.

IHS0236E	The communications server program failed on a SNA GET_PARAMETERS request. SNA processing is ending.
-----------------	--

Explanation

The server was attempting to retrieve data associated with the receipt of an allocate request for the server's TPN, when an error occurred on the connection.

System action

The topology communications server logs the error and ends.

Operator response

Stop all of the topology server daemons by issuing tserver stop, followed by tserver stop -f. Then restart the daemons. If the problem persists, contact your system programmer.

System programmer response

If the condition persists, contact IBM Software Support.

IHS0237E	The communications server program encountered an error while allocating a conversation with the host. The session from the host to the workstation is terminated.
-----------------	--

Explanation

The topology communications server encountered an error while allocating a conversation with the host. The

session from the host to the workstation ends. This problem is generally caused by a configuration error.

System action

The topology communications server logs the error and continues.

Operator response

When the error occurs, verify that the profiles for the session that the topology server is using are correct. Check the host logs for additional information. If the problem persists, contact your system programmer.

System programmer response

If the condition persists, contact IBM Software Support.

IHS0238E	The communications server program encountered an error while allocating a conversation with the host. The session parameters conflicted with those at the host.
-----------------	--

Explanation

The topology communications server encountered an error while allocating a conversation with the host. The session parameters conflicted with those at the host.

System action

The topology communications server logs the error and continues.

Operator response

When the error occurs, verify that the profiles for the session that the topology server is using are correct. Check the host logs for additional information. If the problem persists, contact your system programmer.

System programmer response

If the condition persists, contact IBM Software Support.

IHS0239E	The communications server program received an incorrect number of parameters from a GET_PARAMETERS request. The connection to the host has failed.
-----------------	---

Explanation

The topology communications server received an incorrect number of parameters from a

GET_PARAMETERS request. The connection to the host has failed.

System action

The topology communications server logs the error and continues.

Operator response

When the error occurs, verify that the profiles for the session that the topology server is using are correct. Check the host logs for additional information. If the problem persists, contact your system programmer.

System programmer response

If the condition persists, contact IBM Software Support.

IHS0240E	The communications server program was unable to allocate a session with the host. The connection to the host has failed.
-----------------	---

Explanation

The topology communications server was unable to allocate a session with the host. The connection to the host has failed.

System action

The topology communications server logs the error and continues.

Operator response

When the error occurs, verify that the profiles for the session that the topology server is using are correct. Check the host logs for additional information. If the problem persists, contact your system programmer.

System programmer response

If the condition persists, contact IBM Software Support.

IHS0241E	The communications server program received a SIGUSR1 signal. Communications with the host may be lost.
-----------------	---

Explanation

The topology communications server received a SIGUSR1 signal. The SNA communications server issues a SIGUSR1 when a connection is lost. It is possible the communications with the host might have been ended.

System action

The topology communications server logs the error and continues.

Operator response

A SIGUSR1 is generated when the communications server is stopped. Restart the SNA communications server. If the problem persists, contact your system programmer.

System programmer response

If the condition persists, contact IBM Software Support.

IHS0243E	The communications server program was unable to send data to the host. Either the session was deactivated or data was delivered to the host in error. The session is terminated.
-----------------	---

Explanation

The topology communications server was unable to send data to the host. Either the session was deactivated or data was delivered to the host in error. The session ends.

System action

The topology communications server logs the error and continues.

Operator response

When the error occurs, verify that the profiles for the session that the topology server is using are correct. Check the host logs for additional information. If the problem persists, contact your system programmer.

System programmer response

If the condition persists, contact IBM Software Support.

IHS0244E	The communications server program received a SIGDANGER signal. A paging space shortage may exist.
-----------------	--

Explanation

The communications server received a SIGDANGER signal.

System action

The topology communications server logs the error and continues.

Operator response

A SIGDANGER signal indicates that paging space is low. Stop unneeded programs or increase paging space. If the shortage continues, stop the topology server. If the problem persists, contact your system programmer.

System programmer response

If the condition persists, contact IBM Software Support.

IHS0245E	TCP socket connection failed (connection refused).
-----------------	---

Explanation

The topology communications server received a "connection refused" error code while attempting to set up a socket.

System action

The topology communications server logs the error and continues.

Operator response

When the error occurs, verify that the server that you are trying to connect to is running and ready to accept connections. Verify that a path exists to the server. If the problem persists, contact your system programmer.

System programmer response

If the condition persists, contact IBM Software Support.

IHS0246E	The topology communications server program was unable to load the SNA stack DLLs wappc32.dll and wincsv32.dll. The LU 6.2 communications function has been disabled.
-----------------	---

Explanation

The topology communications server was unable to load the SNA DLLs wappc32.dll and wincsv32.dll. These DLLs are required if LU 6.2 communications is to be used for conversation with IBM Z NetView.

System action

The topology communications server logs the error and continues.

Operator response

If LU 6.2 communications is not needed, then ignore this message. If LU 6.2 communications is needed, then verify that the location of these DLLs is included in the PATH environment variable. If the problem persists, contact your system programmer.

System programmer response

If the condition persists, contact IBM Software Support.

IHS0252I Issue the tserver stop command to end this process.

System action

After issuing tstop, the process ends.

Operator response

Contact your system programmer.

System programmer response

Stop the process by issuing the tstop command from the \$BINDIR/TDS/server/bin directory.

IHS0253I SNA communications have been disabled. Recycle the communications server to reestablish the service.

Explanation

The topology communication server thread controlling SNA communications has ended. See previous messages indicating why the thread was ended.

System action

The server continues to operate, but SNA communications are disabled.

Operator response

If you need SNA communications, resolve the problem that caused SNA co

IHS0260I The communications server is terminating due to an internal error.

Explanation

An unrecoverable error occurred in the topology communications server.

System action

The communications server ends.

Operator response

Contact the system programmer responsible for the topology communications server.

System programmer response

Try to restart the communications server. If the problem persists, check the message and error logs. If you cannot correct the problem, contact IBM Software Support.

IHS0400E The path specified for the error log file does not exist. Create the directory.

Explanation

The directory specified for the error log does not exist.

System action

The log entry was not written to the error log.

Operator response

Either change the log file directory with the IHSZSET tool, or create the specified directory.

IHS0401E The error log could not be opened because too many files are already open. Stop other applications in the system.

Explanation

The error log cannot be opened because too many files are already open.

System action

The log entry was not written to the error log.

Operator response

Stop other applications that are running in the system, until the error is corrected.

IHS0402E The error log file was not opened because the disk is full.

Explanation

The error log file was not opened because the disk is full.

System action

The log entry was not written to the error log.

Operator response

Free some space on the disk or change the trace log path to a different disk.

IHS0403E The error log file name is not valid.

Explanation

The file name specified for the error log is not valid.

System action

The log entry was not written to the error log.

Operator response

Change the error log file name with the IHSZSET tool.

IHS0404E An error log entry failed because storage could not be allocated.

Explanation

The error logging facility was unable to obtain system memory.

System action

The log entry was not written to the error log.

Operator response

Free some storage by stopping other applications or by adding storage to the system. Also, confirm that swapping is enabled.

IHS0405E An attempt was made to log a trace entry that was larger than the trace buffer.

System action

The system continues, but trace data is discarded.

Operator response

Contact your system programmer.

System programmer response

If the problem persists, recycle the topology server. If this does not correct the problem, contact IBM Software Support.

IHS0406E Message *message* in file *file* was not found

Explanation

A message was to be issued, but cannot be found in the message file.

Message Variables

message

Message ID to be issued.

message variable

File where the message was expected to be found.

Operator response

Contact your system programmer.

System programmer response

Contact IBM Software Support.

IHS0411E A time out occurred while waiting for all tasks to complete.

Explanation

This condition occurs when a task ends abnormally while logging a trace entry.

System action

The trace buffer has been cleaned up and logged to the disk.

Operator response

Contact your system programmer.

System programmer response

Contact IBM Software Support.

IHS0412E The path specified for the trace log file does not exist. Create the directory.

Explanation

The directory specified for the trace log does not exist.

System action

The log entry was not written to the trace log.

Operator response

Either change the log file directory with the IHSZSET tool, or create the specified directory.

IHS0413E The trace log could not be opened because too many files are already open. Stop other applications in the system.

Explanation

The trace log cannot be opened because too many files are already open.

System action

The log entry was not written to the trace log.

Operator response

Stop other applications that are running in the system until the error is corrected.

IHS0414E The trace log file was not opened because the disk is full.

System action

The log entry was not written to the trace log.

Operator response

Free some space on the disk or change the trace log path to a different disk.

IHS0415E The trace log file name is not valid.

System action

The log entry was not written to the trace log.

Operator response

Change the trace log file name with the IHSZSET tool.

IHS0416E An internal error occurred in *module* at line number *line*

System action

The action being performed is cancelled.

Operator response

Contact your system programmer.

System programmer response

Contact IBM Software Support.

IHS0419E An operating system error occurred in *module* at line number

***line*. The operating system error code is *error code*.**

Explanation

During internal processing, an operating system function call has returned an error code that was unexpected for the requested function.

Message Variables

module

Module where error occurred.

line

Line number within the module where error occurred.

error code

Error code returned by the operating system.

System action

The action being performed is cancelled.

Operator response

Contact your system programmer.

System programmer response

Contact IBM Software Support.

IHS0420E The path specified for the message log file does not exist. Create the directory.

Explanation

The directory specified for the message log does not exist.

System action

The log entry was not written to the message log.

Operator response

Either change the log file directory with the IHSZSET tool, or create the specified directory.

IHS0421E The message log could not be opened because too many files are already open. Stop other applications in the system.

System action

The log entry was not written to the message log.

Operator response

Stop other applications that are running in the system until the error is corrected.

IHS0422E The message log file was not opened because the disk is full.

System action

The log entry was not written to the message log.

Operator response

Free some space on the disk or change the message log path to a different disk.

IHS0423E The message log file name is not valid.

System action

The log entry was not written to the message log.

Operator response

Change the message log file name with the IHSZSET tool.

IHS0525E The command exit facility is ending due to a missing dll file.

Explanation

The command exit facility cannot find either the IHSX.DLL file or the IHSUR.DLL file. Verify that the \$BINDIR/TDS/Server/bin directory is in the PATH.

System action

The command exit facility ends without completing the command.

Operator response

Contact your system programmer.

System programmer response

Verify that both IHSX.DLL and IHSUR.DLL exist in the path specified by PATH.

IHS0526E The command exit facility is ending due to an internal error.

Explanation

An internal error occurred in the command exit facility. The cause of this error is normally related to constraints on system resources, such as storage or disk space. Detailed error information has been logged to the topology server error log.

System action

The command exit facility ends without completing the command.

Operator response

When an out-of-storage condition exists, you can free some storage by stopping other applications or by adding storage to the system. Also confirm that swapping is enabled. If you cannot resolve the error, contact the system programmer.

System programmer response

Check for an out-of-storage condition. If the condition does not exist, contact IBM Software Support.

IHS0527E An error occurred while loading the string table from the dynamic load library *dllname*.

Explanation

An error occurred while loading the string table from the specified dynamic load library.

Message Variables

dllname

The name of the DLL that cannot be found.

Operator response

Notify your system programmer. table-driven command exit.

System programmer response

Ensure that the correct version of the dynamic load library file is the first file of that name encountered in the PATH statement. If this does not resolve the problem, contact IBM Software Support.

IHS0528E An error occurred during semaphore initialization. Press enter to terminate the command exit facility.

Explanation

An internal error occurred during semaphore initialization in the table driven command exit.

Operator response

Press Enter to end the table-driven command exit. Retry the command.

System programmer response

Contact IBM Software Support.

IHS1000W Unable to connect to the topology server at host *hostname*.

Explanation

The topology console was unable to connect to the topology server at *hostname*. The host name might be incorrect or the topology communication server is not running at the specified host.

Message Variables***hostname***

The name entered in the Hostname field.

System action

The sign-on request was not completed. The Sign On window remains open.

Operator response

Correct the host name and try to sign on again. If this does not resolve the problem, contact your system programmer.

System programmer response

Ensure that the communications server has been started on *hostname*. If you cannot resolve the problem, contact IBM Software Support.

IHS1001I User *username* is not authorized as an administrator.

Explanation

You selected Administrator access when signing on to the topology server, but you are not authorized to act as an administrator.

Message Variables***username***

The name entered in the User name field.

System action

The sign on request does not complete. The Sign On window remains open.

Operator response

Retry the sign-on request, but do one of the following:

- Specify a user name that is authorized for administrator access.
- Do not select Administrator access.

IHS1002I User *username* is not authorized to sign on to the NetView management console.

Explanation

You are not authorized, with the user name specified in the User name field of the Sign On window, to sign on to the topology server.

Message Variables***username***

The name entered in the User name field of the Sign On window.

System action

The sign on request does not complete. The Sign On window remains open.

Operator response

Do one of the following:

- Retry the sign on request, specifying a user name that is authorized for NetView management console sign on.
- Contact your system administrator.

IHS1003I The user name and password are not authorized to connect to this topology server. Make sure the user name and password are correctly specified.

Explanation

This error might be caused by any of the following:

- The user name is not defined to the topology server.
- The password is not correct for the specified user name.
- The user name is not a member of the tsadm or tsuser group at the server.

System action

The sign-on request does not complete. The Sign On window remains open.

Operator response

Correct the user name or password and retry the sign-on request.

IHS1004I A session with host *hostname* is already established.

Explanation

The console has detected that a previous connection to a topology server is still active.

Message Variables

hostname

The name entered in the Hostname field.

System action

The sign-on request does not complete. The Sign On window remains open.

Operator response

Close and re-open the console and retry the sign-on request.

IHS1005I **Host *hostname* is not known.**
Explanation

hostname is not an existing host on the visible network.

Message Variables**hostname**

The name entered in the Hostname field.

System action

The sign on request does not complete. The Sign On window remains open.

Operator response

Correct the host name and retry the sign-on request.

IHS1006W **The processing of a request at the topology server was interrupted.
*Exception***
Explanation

A request sent to the topology server was interrupted before the expected response was received.

Message Variables***exception***

Additional exception text.

System action

The request does not complete.

Operator response

If this was a sign-on request, the topology communications server is running at the specified host, but the topology server is not.

Contact the system programmer if you are unable to resolve the problem.

System programmer response

Contact IBM Software Support if you are unable to resolve the problem.

IHS1007W **An error occurred while sending a request to the topology server.**
Explanation

An error was detected as a request was being sent to the topology server.

System action

The request does not complete.

Operator response

Contact your system programmer if you are unable to resolve the problem.

System programmer response

Contact IBM Software Support if you are unable to resolve the problem.

IHS1008W **The CLASSPATH environment variable does not include either ihseuc.jar or ihseucd.jar. Correct and restart the console.
CLASSPATH=*classpath*.**
Explanation

While initializing the topology console, the analysis of the Java™ CLASSPATH definition did not locate the required JAR file.

Message Variables***classpath***

The CLASSPATH value when the console started.

System action

The console closes.

Operator response

Contact your system programmer.

System programmer response

Contact IBM Software Support.

IHS1010W **The session with *hostname* was lost; accurate information cannot be displayed. Select OK to sign off.**

Explanation

The communications session with the topology server has unexpectedly disconnected. Any currently open views no longer correctly reflect the information at the server.

To resynchronize the views, sign off and sign on to the server again.

Message Variables

hostname

The host name of the server.

System action

You are signed off the topology console and all unsaved changes are lost.

Operator response

Sign on to the server again.

IHS1011W	Unable to start a Java application. Class: <i>class</i> Why: <i>exception</i> Phase: <i>phase</i>
-----------------	--

Explanation

The specified Java application cannot be started.

Message Variables

class

The application's fully qualified Java class name.

exception

The Java exception that prevented the successful start of the application. If *exception* is `java.lang.NoClassDefFoundError`, then the class name that follows was not available at the topology console. The software providing this class might not have been installed at the console or was not included in the CLASSPATH specification when the console was started.

phase

The specific phase in the Java application starting process during which the exception was detected. This value is intended for problem analysis, if necessary.

System action

The *class* application is not started. The console continues.

Operator response

Contact your system programmer if you are unable to resolve the problem.

System programmer response

The *class* value is obtained from the user's command profile. Check the command definition of the selected command.

IHS1018E	Syntax to the IBM Z NetView domain ID is not correct. Domain ID: <i>"domainID"</i>
-----------------	---

Explanation

The NetView domain ID contains incorrect syntax. The domain ID must meet the following criteria:

- It must be between 1 and 5 characters in length.
- The first character must be alphabetic (either upper or lower case) or one of the following national characters: @ # \$.
- The remaining characters (second through fifth) must be alphabetic (either upper or lower case), numeric, or one of the following national characters: @ # \$.

Message Variables

domainID

The IBM Z NetView domain ID.

System action

The console ignores the specified value.

Operator response

Correct the domain ID and retry.

IHS1021W	The request could not be completed because the topology server was unable to communicate with IBM Z NetView.
-----------------	---

Explanation

The topology server is unable to communicate with IBM Z NetView, or IBM Z NetView is experiencing a heavy workload and did not respond to the topology server within a reasonable amount of time.

System action

The request is ignored.

Operator response

If the problem persists, contact the system programmer.

System programmer response

Ensure that the communication session between IBM Z NetView and the topology server is started. If necessary, issue the NETCONV ACTION=START command from IBM Z NetView to start the communication session with the topology server. Determine if the IBM Z NetView, including Graphic Monitor Facility Host System (GMFHS), is experiencing a heavy workload.

IHS1022W The IBM Z NetView hardware monitor encountered an error while processing the request.

Explanation

IBM Z NetView encountered an error while processing a request.

System action

Data is not sent for the request.

Operator response

Contact your system programmer.

System programmer response

Check the IBM Z NetView log for error messages from the DUIFSSCO and BNJDSESV tasks. If you cannot resolve the errors, contact IBM Software Support.

IHS1023W The IBM Z NetView GMFHS encountered an error while processing the request.

Explanation

The Graphic Monitor Facility host subsystem (GMFHS) encountered errors while processing the request.

System action

Data is not sent for the request.

Operator response

Contact the system programmer.

System programmer response

Locate the error report in the GMFHS error log and have the information available when you contact IBM Software Support.

See the *IBM Z NetView Troubleshooting Guide* for additional information.

IHS1024W The IBM Z NetView task DUIFSSCO is not active.

Explanation

You must start the scope checker DUIFSSCO IBM Z NetView task before you can issue this command. This task performs scope checking, span checking, and alert history request support for the IBM Z NetView Graphic Monitor Facility host subsystem (GMFHS).

System action

The request is ignored.

Operator response

Start the DUIFSSCO task in IBM Z NetView. If DUIFSSCO remains unavailable, contact your system programmer.

System programmer response

Verify that the GMFHS interface to the scope checker is available by issuing the GMFHS STATUS command from the NetView operator. See *IBM Z NetView Command Reference Volume 1 (A-N)* for information on GMFHS operator commands.

IHS1025W IBM Z NetView detected a formatting error in the command sent from the topology server.

Explanation

The workstation submitted a command request the host cannot recognize.

System action

The error is logged in the GMFHS error log.

Operator response

Contact your system programmer.

System programmer response

Find the error report in the GMFHS error log and have the information available when you contact IBM Software Support.

See the *IBM Z NetView Troubleshooting Guide* for additional information.

IHS1026W The request to the IBM Z NetView task DUIFSSCO timed out.

Explanation

The request to the Tivoli NetView DUIFSSCO task has timed out.

System action

The request is not processed.

Operator response

Retry the request. If the error occurs again, contact your system programmer.

System programmer response

Increase the value of LCON-ALERT-CMD-TIMEOUT in DUISINIT, if necessary. See the *IBM Z NetView Security Reference* for information.

IHS1027W	The user name and password are not authorized to sign on to IBM Z NetView. Make sure the user name and password are specified correctly.
-----------------	---

Explanation

This user name is not authorized to access IBM Z NetView for one of the following reasons:

- The operator ID is not defined.
- The password or password phrase is not correct.
- The password or password phrase is expired.

System action

The request is not completed.

Operator response

Verify that you typed the user name and password or password phrase correctly, then try to sign on again.

IHS1028W	An error occurred while querying one or more monitor counts. <i>monitor-name</i> with arguments "<i>monitor-arguments</i>" on <i>resource-name</i>.
-----------------	--

Explanation

The topology server was unable to successfully query the current value for one or more monitors selected with the Monitor Counts function.

Message Variables

At least one, but up to four, of the following can be displayed in one message:

monitor-name

The name of the failing monitor.

monitor-arguments

The optional argument list that, combined with *monitor-name*, uniquely identifies the failing monitor.

resource-name

The name of the resource associated with the failing monitor.

System action

The view is not updated with the current values for the specified monitors. The topology server continues to periodically poll the specified monitors. The frequency with which the server queries the selected monitors is set in the Polling Interval field on the Information page of the Resource Properties notebook.

Operator response

Do the following:

- If the error occurs again when the polling interval for the resource expires, contact your system programmer.
- Use the Monitor Counts function to deselect the failing monitors on the specified resources to avoid the periodic display of this message. To do this, select Monitor Counts For each of the resources identified by the *resource-name* message insert, then deselect the failing monitor, identified by the *monitor-name* and *monitor-argument* inserts.

System programmer response

You can find additional messages that describe the exact cause of this error in the *ihsmessage.log* file in the topology server's LOG directory. Search the *ihsmessage.log* file for a reference to message IHS2221I that identifies *resource-name*. Subsequent messages will detail the execution of the Query Task, any response from the Query Task, and the parsing of the Query Task response by the topology server. These messages will provide additional detail about the error.

Depending on the nature of the error, you might need to contact the provider of the instrumentation. For example, if the IHS22xx messages in the *ihsmessage.log* indicate that the Query Task is returning a response that is not syntactically correct, the provider of the instrumentation for the failing resource will need to correct the Query Task implementation.

IHS1033W	Unable to sign on to IBM Z NetView. Null operator IDs are not supported on this system.
-----------------	--

Explanation

You did not enter a user name in the Sign On window and one is required for your system.

System action

The Sign On window displays again.

Operator response

Enter a valid user name and password or password phrase.

If you think that you received this message in error, contact your system programmer or the person responsible for security administration.

System programmer response

If null operator IDs must be allowed on your system, verify that the NULLGDSOPIDS keyword in DUIFPMEM is set to YES.

IHS1034W IBM Z NetView has not responded to the topology server within the expected time period.

Explanation

The topology server sent a request to IBM Z NetView. A response was not received within the expected time period.

This message can occur if requests are temporarily overloading the server or the server is waiting on a response from the host.

System action

If error occurred while signing on, the Sign On window is displayed again. Otherwise the request is ignored.

Operator response

Retry the request. If the problem persists, contact your system programmer.

System programmer response

Try the following:

- If you suspect that the server is running on a computer that does not have enough speed or capacity, increase the size of the computer.
- Ensure that the networking links between the server and IBM Z NetView are not overloaded.
- Ensure that the IBM Z NetView computer is not overloaded.

IHS1035W

Unable to sign on to IBM Z NetView. The operator is not logged on.

Explanation

This operator ID is not logged on IBM Z NetView.

System action

The Sign On window displays again.

Operator response

Log on to IBM Z NetView and try to sign on again.

IHS1036W

The topology server is connected to a IBM Z NetView system that does not support networking views.

Explanation

The topology server is connected to a IBM Z NetView in which one of the following has occurred:

1. IBM Z NetView is not at the minimum software level required to display networking views for the current level of the NetView management console.
2. GMFHS is not started.
3. GMFHS and IBM Z NetView are not in communication. For example, the DOMAIN of the NetView is not specified correctly to GMFHS.

System action

The request cannot be completed.

Operator response

Contact your system programmer.

System programmer response

1. Ensure that the IBM Z NetView is running at the same or later level than the NetView management console.
2. Ensure that GMFHS is started.
3. Ensure that GMFHS contains the DOMAIN name of the IBM Z NetView program, where the NETCONV command was issued.

IHS1040W

An error occurred while accessing TEC. Error: error

Explanation

An error was detected while trying to access Tivoli Enterprise Console® for event services.

Message Variables

error

The initial lines of the error that was detected.

System action

The originating request is ignored.

Operator response

Contact your system programmer if you are unable to resolve the problem.

System programmer response

Typically, *error* is either a Tivoli platform or Tivoli Enterprise Console services message. Ensure that the topology server has adequate authorization to access Tivoli Enterprise Console. The server message log might contain additional information.

IHS1050W	You must specify at least one <i>type</i> column.
-----------------	--

Explanation

No fields were defined for use as either display or sort columns.

Message Variables

type

The type of column to be specified, for example a display column or sort column.

System action

The properties are not saved.

Operator response

Specify one or more fields to be used for the specified column.

IHS1051W	The value entered in the <i>field</i> field is not valid.
-----------------	--

Explanation

An improper value was entered in the specified field.

Message Variables

field

The name of the field which contains the improper value.

System action

The request is not processed.

Operator response

Correct the value in the specified field.

IHS1052W	You must enter a value in the <i>field</i> field.
-----------------	--

Explanation

Input is required in the specified entry field.

Message Variables

field

The name of the field which requires a value.

System action

The request is not processed.

Operator response

Enter a value in the specified field.

IHS1053W	An internal error has occurred. Exception: <i>exception</i> Method: <i>method</i>
-----------------	--

Explanation

An unexpected error was detected.

Message Variables

exception

The Java exception that was detected.

method

The method in which the exception was detected and reported.

System action

The requested action does not complete.

Operator response

Retry the action. If the problem persists, contact your system programmer.

System programmer response

Contact IBM Software Support if you are unable to resolve the problem.

IHS1054W	An error occurred while opening a file. File: <i>file</i> Type: <i>type</i> Description: <i>desc</i>
-----------------	---

Explanation

An error was detected while trying to open the specified file at the topology server.

Message Variables

file

The name of the file being opened.

type

The type of the file being opened.

desc

Optional additional description text.

System action

The requested file operation cannot be completed.

Operator response

Retry the operation. Contact your system programmer if you are unable to resolve the problem.

System programmer response

Check the server message log for additional information. Contact IBM Software Support if you are unable to resolve the problem.

IHS1055W	An error occurred while reading a file. File: <i>file</i> Type: <i>type</i> Description: <i>desc</i>
-----------------	---

Explanation

An error was detected while reading the specified file at the topology server.

Message Variables

file

The name of the file being read.

type

The type of the file being read.

desc

Optional additional description text.

System action

The requested file operation cannot be completed.

Operator response

Retry the operation. Contact your system programmer if you are unable to resolve the problem.

System programmer response

Check the server message log for additional information. Contact IBM Software Support if you are unable to resolve the problem.

IHS1056W	An error occurred while writing a file. File: <i>file</i> Type: <i>type</i> Description: <i>desc</i>
-----------------	---

Explanation

An error was detected while writing to the specified file at the topology server.

Message Variables

file

The name of the file being written.

type

The type of the file being written.

desc

Optional additional description text.

System action

The requested file operation cannot be completed.

Operator response

Retry the operation. Contact your system programmer if you are unable to resolve the problem.

System programmer response

Check the server message log for additional information. Contact IBM Software Support if you are unable to resolve the problem.

IHS1057W	An error occurred in the topology server. Data 1: <i>data1</i> Data 2: <i>data2</i> Data 3: <i>data3</i> Data 4: <i>data4</i>
-----------------	--

Explanation

An error was detected in the topology server while processing a request.

Message Variables

data1

Problem diagnosis data supplied by the server.

data2

Problem diagnosis data supplied by the server.

data3

Problem diagnosis data supplied by the server.

data4

Problem diagnosis data supplied by the server.

System action

The requested action cannot be completed.

Operator response

Contact your system programmer if you are unable to resolve the problem.

System programmer response

Check the server message log for additional information. Contact IBM Software Support if you are unable to resolve the problem.

IHS1058W	The value entered in the <i>field</i> field must be in the range <i>min</i> to <i>max</i>.
-----------------	---

Explanation

The value in *field* is not within the required range.

Message Variables

field

The name of the field containing the incorrect value.

min

The minimum value for the field.

max

The maximum value for the field.

System action

The properties are not saved.

Operator response

Correct the value in the specified field so that it falls within the given range.

IHS1059W	An error occurred while deleting a file. File: <i>filename</i> Type: <i>type</i> Description: <i>desc</i>
-----------------	--

Explanation

An error was detected while deleting the specified file at the server.

Message Variables

file

The name of the file being read.

type

The type of the file being read.

desc

Optional additional description text.

System action

The requested file operation cannot be completed.

Operator response

Retry the operation. Contact your system programmer if you are unable to resolve the problem.

System programmer response

Check the server message log for additional information. Contact IBM Software Support if you are unable to resolve the problem.

IHS1070W	The data for window <i>command</i> was not found.
-----------------	--

Explanation

The expected data required to construct the command dialog window was not received from the topology server.

Message Variables

command

The name of the command selected from the resource context menu.

System action

The dialog window for the command is not displayed.

Operator response

Contact your system programmer if you are unable to resolve the problem.

System programmer response

Check the server message log for additional information.

If *command* is a TME library task, verify its definition. Contact IBM Software Support if you are unable to resolve the problem.

IHS1071W	The command string is null.
-----------------	------------------------------------

Explanation

The command string in the dialog window contains no text.

System action

The send request is ignored.

Operator response

Enter data in the dialog window, then retry the send request.

IHS1072W	The resource was not found.
-----------------	------------------------------------

Explanation

The resource list for the selected GUI component contained no entries. This might not be a problem if the task performed a dynamic query and no appropriate resources were found.

System action

The resource list is not displayed. The dialog remains open.

Operator response

Contact your system programmer if you are unable to resolve the problem.

System programmer response

Rerun the task from the Tivoli desktop. Compare its resource list contents with this dialog. If necessary, check the TME task library definition for the command selected from the resource context menu. Contact IBM Software Support if you are unable to resolve the problem.

IHS1073W **Too much text has been entered in the *field* field. This field allows a maximum of *length* characters.**

Explanation

You have entered too many characters in *field*.

Message Variables

field

The name of the text field in which too many characters were entered.

length

The maximum number of characters that can be entered in *field*.

System action

The request is not processed.

Operator response

Specify fewer characters in the appropriate field.

IHS1074W **The default value that was supplied is not correct and will be ignored. Threshold: *threshold* Reason: *reason* Value: *value***

Explanation

The default value supplied for the threshold is not correct and will be ignored.

Message Variables

threshold

The name of the threshold.

reason

One of the following:

- The number of items in the default value is not a multiple of 3.
- Too many items were supplied.
- The operator value is out of the range 0-11.
- The severity value is out of the range 0-5.

value

The default value that was not correct.

System action

The dialog is displayed, but the default for *threshold* is ignored. *threshold* is displayed with an empty threshold value.

Operator response

Contact your system programmer.

System programmer response

Check the TME task library definition for the command selected from the resource context menu.

A threshold default value is specified as a comma delimited list of one to six threshold triplets. Each triplet consists of the following:

1. A threshold value
2. A relative operator enum value
3. A severity enum value

Contact IBM Software Support if you are unable to resolve the problem.

IHS1075W **The specified value is not correct. Threshold: *threshold* Severity: *severity* Reason: *reason***

Explanation

The value entered in the *severity* value cell is not correct.

Message Variables

threshold

The name of the threshold.

severity

The specific severity row.

reason

One of the following:

- There is no input for this specified operator.
- There is a comma in the input value.
- The length of value string exceeds the required number.

System action

The send request is not processed.

Operator response

Correct the *severity* cell and retry the send request.

IHS1076W **All operators are "Not used." At least one must be specified. Threshold: *threshold***

Explanation

All values in the operator column cannot be set to "Not Used" at the same time.

Message Variables***threshold***

The name of the threshold.

System action

The send request is not processed.

Operator response

Specify at least one *threshold* operator cell value and retry the send request.

IHS1077W **The value entered in the *field* field is not valid. Value: *value* Pattern: *pattern***

Explanation

The value entered in the text field is not valid. The value must match the required pattern.

Message Variables***field***

The text field containing the incorrect value.

value

The value entered.

pattern

The regular expression that the input must match.

System action

The command is not sent.

Operator response

Enter a valid value in the text field.

IHS1080I **The requested view was not found.**

Explanation

The topology server did not find the requested view. This can happen for one of the following reasons:

- A lower-level view cannot be dynamically created
- If the view is from IBM Z NetView and you selected a configuration view or a more detailed view, the RODM definitions do not exist for that type of view
- If you selected Locate Failing Resources, all real resources have a satisfactory status
- If the view is from IBM Z NetView, IBM Z NetView has an out-of-storage condition
- You might not have span authorization to the view itself or to resources within the view

System action

The request does not complete.

Operator response

Contact your system programmer if the view exists.

System programmer response

Do one of the following:

- Determine if the view exists on the server. If not, create it.
- For GEM instrumented views, ensure that the AMS definition files are correctly created.
- For IBM Z NetView views, if the RODM definitions do not exist, create the RODM definitions.
- If the IBM Z NetView operator console messages indicate a storage shortage, correct the problem.
- If the IBM Z NetView operator console messages indicate that a timeout has occurred, try to increase the View Request Timeout Value specified in DSICTMOD at the status focal point. Increasing this value allows the resource status manager to wait longer before it sends a view list back to the server. After increasing the value, retry the request.

IHS1081I **Resource *resourcename* already exists in this view.**

Explanation

You cannot move or copy this resource to the target view it already exists in that view.

Message Variables***resourcename***

The name of the duplicate resource.

System action

The resource is not moved or copied.

IHS1082W **Do you want to save changes to view *viewname*?**

Explanation

You have made customization changes to a view and one of the following has happened:

- You have closed the view without saving your changes to the topology server.
- The view has received an update from the server before you saved your changes.
- You have signed off or exited the topology console before saving your changes.

If you choose not to save your changes, all changes are lost.

Message Variables***viewname***

The name of the view to be saved.

System action

- If Yes is selected, the changes to the view are saved to the server before being closed, or before updates are applied to the view.
- If No is selected, the changes to the view are not saved.

Operator response

- Select Yes to save your changes.
- Select No to discard your changes.

IHS1083W **You cannot copy or move text to another view.**

Explanation

You have attempted to copy or move text from one view to another. This is not allowed.

System action

The operation is not completed.

IHS1084I **You have requested to save your window characteristics when you exit. In order to preserve this state, you must set it in the Console Properties notebook.**

Explanation

The current look of the topology console window is saved, as well as any windows you have detached with the Tear Away functions. This selection overrides the save setting you have specified on the General page of the Console Properties notebook.

The following things are saved:

- Window positions
- Window sizes
- Slider positions
- Display and tear away selections on the View menu

If you use the Save Preferences on Exit function, the next time you sign on to the topology console, you can specify whether you want these saved settings restored. You can continue to restore these settings until they are overwritten by another save action.

System action

The current look of the console window and any windows you have detached with the Tear Away functions are saved when you exit.

Operator response

If you want to toggle your selection, select Save Preferences on Exit again.

If you want to prevent this message from displaying whenever you change your Save Preferences on Exit selection, select Do not show this dialog again. This prevents the message from displaying for any future changes to the Save Preferences on Exit selection.

IHS1085I **You have requested not to have your window characteristics saved when you exit. In order to preserve this state, you must set it in the Console Properties notebook.**

Explanation

The current look of the console window is not saved, nor are any windows you have detached with the Tear Away functions. This selection overrides the save setting you have specified on the General page of the Console Properties notebook.

The following things are not saved:

- Window positions
- Window sizes
- Slider positions
- Display and tear away selections on the View menu

System action

The current look of the console window and any windows you have detached with the Tear Away functions are not be saved when you exit.

Operator response

If you want to toggle your selection, select the Save Preferences on Exit option again.

If you want to prevent this message from displaying whenever you change your Save Preferences on Exit selection, select Do not show this message again. This prevents the message from displaying for any future changes to the Save Preferences on Exit selection.

IHS1086W	You must have administrator access to perform this operation.
-----------------	--

Explanation

You have attempted an operation that requires administrator access.

System action

The operation is not completed.

Operator response

To perform the desired operation, you must be authorized as an administrator and request Administrator access when you sign on.

IHS1088W	You cannot copy or move resources to another view.
-----------------	---

Explanation

You have attempted to copy or move resources from one view to another. This operation is not allowed at this time.

System action

The copy or move is not completed.

IHS1090I	These views have been modified. Select the view(s) you want to save.
-----------------	---

Explanation

The views in the list have been modified. You must specify which changes you wish to save.

System action

If you select Save Selected View, the requested changes are saved. If you select Save None, changes

are not. If you select Cancel, the requested action is canceled.

Operator response

Initially, all of the changed views in the list are selected. Deselect any views whose changes are not to be saved, then do one of the following:

- Select Save Selected Views to save the selected views and continue the requested action.
- Select Save None to discard all of the changes and continue the requested action.
- Select Cancel to cancel the requested action.

IHS1092I	You have requested to close view <i>viewname</i>. It is the parent of at least one other open view. You must close these descendant views first.
-----------------	---

Explanation

You have attempted to close a view that has one or more child views still open.

Message Variables

viewname
The name of the view you are attempting to close.

System action

The view is not closed.

Operator response

First close any open views that are descendants of the view you are attempting to close, then close the parent view. You can determine which views are descendants by looking for the parent view in the available view tree and then checking child "branches" underneath the parent view.

IHS1093W	Do you want to remove all customization changes from view <i>viewname</i>?
-----------------	---

Explanation

You have requested to remove all changes from the customized version of *viewname*. This is a confirmation to verify the requested action.

Message Variables

viewname
The name of the customized view.

System action

- If Yes is selected, all customization changes are deleted and the view will be replaced with the version currently defined at the topology server.
- If No is selected, no action is taken.

Operator response

- Select Yes to remove all customization from this view.
- Select No to preserve the customization.

IHS1094W **Do you want to delete *resource* from all views?**

Explanation

You have chosen to delete a resource from all views. This is a confirmation to verify the requested action. This action deletes the resource from the topology server and removes it from all views that contain it.

Message Variables

resource

The name of the resource to be deleted.

System action

- If Yes is selected, the resource is deleted from the server. All views containing the resource receive an update.
- If No is selected, no action is taken.

Operator response

- Select Yes to remove the resource from the server and from all views.
- Select No to keep the resource.

IHS1095W **You have requested to run *command*. Do you wish to proceed?**

Explanation

You have selected to run *command*. The command profile definition of this command specifies that its use be verified whenever it is issued.

Message Variables

command

The command selected from a context menu.

System action

- If Yes is selected, the specified command is run.
- If No is selected, the specified command is not run.

Operator response

- Select Yes if you want to run the command.
- Select No if you do not want to run the command.

IHS1096W **An update or refresh is pending for view *view name*. Do you want to save changes to this view before refreshing?**

Explanation

A view with unsaved customization changes has received an update or a refresh request. You can save your changes and merge them with the update prior to the refresh, or discard the changes.

Message Variables

view name

The name of the view for which a refresh is pending.

System action

- If Yes is selected, changes are saved. The view is refreshed immediately after the changes are merged with the current state of the view.
- If No is selected, the view is refreshed immediately and any changes are discarded.

Operator response

- Select Yes to save your changes before the view is refreshed. The view is refreshed as soon as your changes are merged.
- Select No to refresh the view now and discard your changes.

IHS1097W **The server is unable to delete resource *resource name*.**

Explanation

A request to delete a resource from the topology server was unsuccessful.

Message Variables

resource name

The name of the resource that cannot be deleted.

System action

Processing continues after OK is selected. The resource is not deleted.

Operator response

Select OK to continue. Contact your system programmer.

System programmer response

Check the server for error messages to determine why the resource cannot be deleted.

IHS1098W The topology server is unable to remove all customization changes from view *view name*.

Explanation

An attempt to remove all customization changes from the view was unsuccessful.

Message Variables

view name

The name of the view from which customization changes cannot be removed.

System action

Processing continues after OK is selected. The customization changes remain.

Operator response

Select OK to continue. Contact your system programmer.

System programmer response

Check the topology server for error messages to determine why the customization changes cannot be deleted.

IHS1099I All resources have been deleted from view *view name*. This view will be closed.

Explanation

An open view has had all resources deleted from it and is no longer a valid view. The view is closed after OK is selected.

Message Variables

view name

The name of the view from which all resources have been deleted.

System action

The view is closed.

IHS1100W Not all stored preferences were restored because the topology server database has changed.

Explanation

The server database has been modified in a manner that might have caused some stored console preferences to be lost.

System action

Some stored console preferences might have been lost.

Operator response

If any preferences were lost, reconfigure the console and save preferences.

IHS1101I The selected views have been saved. Do you wish to *action* now?

Explanation

All selected views have been saved.

Message Variables

action

The action you wish to continue or stop; either Exit or Sign off.

System action

- If Yes is selected, you will continue to exit or sign off.
- If No is selected, you are returned to the console window.

Operator response

Select Yes to sign off or exit, or No to return to the console window.

IHS1104W There are connections that cannot be displayed because of collapsed nodes.

Explanation

You requested to show connections for a particular object in the Verify view. However, at least one connection points to an object that is not currently visible in the Verify view because nodes have been collapsed.

System action

Some connections are not displayed.

Operator response

To see all connections, expand your nodes and request to show the connections again.

IHS1105W **There are outstanding requests.
There must not be any outstanding
requests before switching modes.
Select Yes to cancel all requests.
Select No to allow requests to
complete.**

Explanation

You attempted to switch into or out of the a life cycle mode while there were outstanding requests to the server or tasks in process.

System action

If you select Yes, all outstanding requests and tasks are canceled and the mode is switched. If you select No all requests and tasks continue running and you remain in the current mode.

Operator response

Select Yes to cancel all outstanding requests and tasks and switch modes. Select No to keep requests and tasks running and remain in the current mode.

IHS1107W **Resource *resource* was not located in
any view.**

Explanation

A view that satisfied your Locate Resource request was not found. Possible explanations for this message are:

- The resource name was not entered correctly.
- If this is a RODM resource, the resource might not have the proper connectivity relationships defined. See the *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide* for more information.
- The resource is a SNA LU that does not currently exist in RODM.

Message Variables

name

The resource name specified in the Locate Resource window

System action

The locate request is not completed.

Operator response

Retry the request and correct the resource name. If applicable, select the Extended search checkbox.

If the problem persists, contact your system programmer.

System programmer response

If the resource is a IBM Z NetView RODM resource, check the RODM definitions to make sure the resource is properly defined.

IHS1108W **Resource *resource* was not located
in any view and extended search
cannot be performed.**

Explanation

Either the SNA topology manager is inactive, or GMFHS timed out while waiting for a response from the manager.

Message Variables

resource

The resource name specified in the Locate Resource window.

System action

GMFHS cannot provide a view. It is possible that another view source might provide a view to satisfy your request.

Operator response

If you know the name of the manager that is registered with RODM, check for its presence or status in the Topology Display Subsystem view.

System programmer response

Ensure that the SNA topology manager is active. If necessary, increase the GMFHS timeout value. This is controlled by the LCON-SNATM-TIMEOUT statement in initialization member DUGINIT. You might also need to increase the workstation timeout value. Refer to the NGMF documentation for more information on customizing the workstation timeout values.

IHS1109W **An unknown exception was
received from the topology server.
ID: *id* Data 1: *data1* Data 2: *data2*
Data 3: *data3* Data 4: *data4***

Explanation

An exception was received from the server. The topology console does not recognize the exception.

Message Variables

id

Topology server exception ID.

data1

Problem diagnosis data supplied by the server.

data2

Problem diagnosis data supplied by the server.

data3

Problem diagnosis data supplied by the server.

data4

Problem diagnosis data supplied by the server.

Operator response

Contact your system programmer.

System programmer response

Contact IBM Software Support.

IHS1110W You requested to clear *number* suspended resources. Do you wish to proceed?

Explanation

You have selected a number of resources to clear. You are requested to verify your request.

Message Variables***number***

The number of resources elected.

System action

If you select Yes, the suspended flags of the resources are cleared. If you select No, the suspended flags are not cleared and the List Suspended Resources window is displayed again.

Operator response

Select Yes to clear the suspended flags of the selected resources. Select No if you do not want to clear the suspended flags. You will return to the List Suspended Resources window.

IHS1111W The view created for this request may not be complete.

Explanation

The view created might not show one or more resources. This can happen if IBM Z NetView has an out-of-storage condition.

System action

The partial view opens.

Operator response

Contact your system programmer.

System programmer response

If the IBM Z NetView operator console messages indicate that a storage shortage exists, correct the problem.

IHS1112I The view list created for this request may not be complete.

Explanation

The view list created might not show all of the views that actually contain the resource. This can happen for one of the following reasons:

- The GMFHS found more views than can be returned in one request, so the view list was truncated.
- A RODM method failed while creating a view.
- One or more view names in RODM are too long.
- IBM Z NetView has an out-of-storage condition.

System action

The view list is displayed.

Operator response

Contact your system programmer.

System programmer response

Check for one or more of the following:

- If the IBM Z NetView operator console messages indicate that a storage shortage exists, perform any required error recovery.
- For performance reasons, no more than 12 views are returned in a view list, unless you customized the LCON-MAX-LOCATE-RESOURCE-VIEWS parameter in DUIGINIT. However, it is possible to receive a partial view list with fewer than 12 views. This might happen if views have a missing view information object and cannot be opened. If you suspect that a view is missing for this reason, check the RODM log for specific information. This can help you determine which view is in error, so you can correct the problem.
- If you receive this message and there are 12 views in the lists, increase the number of views returned to the server by GMFHS. Increasing this number might cause timeouts on the server.
- If a RODM method failed while creating a view, check the GMFHS and RODM logs for specific information about the method failure.

To determine which view in the list encountered a method failure, do the following:

1. Select the GMFHS views in the list.

2. Open the views.

IHS1113W is displayed for the view containing the method failure.

- The value of the MyName field of objects in the Network_View_Class and the Configuration_Peer_View class are limited to 32 bytes. You can increase the DUEINIT value. However, increasing the value can cause timeouts at the workstation.

IHS1113W A RODM method failed while creating *view*. Notify the system programmer responsible for RODM.

Explanation

A RODM method failure occurred during the creation of the view.

view

The view name.

If this is the first time you are attempting to open the view, the view does not open. If this occurs while refreshing the view, the view closes.

Operator response

Record the information in the message window and contact your system programmer.

System programmer response

Check the GMFHS and RODM logs for specific information about the method failure. This information is needed to isolate and correct any RODM definition error. Correct any RODM errors.

See *IBM Z NetView Troubleshooting Guide* for more information.

IHS1114W Objects required to create *view* are not defined. The RODM view definition is incomplete or in error. Notify the system programmer responsible for RODM.

Explanation

The RODM definition for the view is incomplete or in error.

Message Variables

view

The view name.

System action

If this is the first time you are attempting to open the view, the view does not open. If you are attempting to refresh the view, the view closes.

Operator response

Record the information in the message window and contact your system programmer.

System programmer response

Check the RODM log for information about the objects that are not defined and define the missing objects.

See the *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide* and the *IBM Z NetView Troubleshooting Guide* for more information.

IHS1115W A layout error was detected while processing *view*. Layout code: *code*. Notify the system programmer responsible for RODM.

Explanation

The view was successfully created and transferred to the server. A layout error occurred while positioning resources according to their LayoutType attributes.

Message Variables

view

The name of the view.

code

The specific layout error code.

System action

If this is the first time you are attempting to open the view, the view does not open. If this occurs while refreshing the view, the view closes.

Operator response

Record the information in the message window and contact your system programmer.

System programmer response

1. See the following list of error codes for the explanation of the detected problem. Use the LC_RC_xxxx value as the look-up key. If the error code is not listed in the table, contact IBM Software Support.
2. See the *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide* for a mapping of layout utility to RODM terminology.

3. Correct the layout attribute in the RODM definition for the view.

LC_RC_BAD_BUS_CONNECTION

A view with LayoutType set to five contains a node that is connected to the bus node by multiple links, or a node connected to the bus node in addition to other nodes on the main site circle.

LC_RC_BAD_LAYOUT_TYPE

The LayoutType field contains a value that is not valid.

LC_RC_BROKEN_TOKEN_RING

A view with LayoutType set to four has nodes on the main site circle that do not form a complete ring. Note that this condition might also generate the return codes

LC_RC_INVALID_FIRST_NODE_ID or
LC_RC_BROKEN_TOKEN_RING.

LC_RC_INSUFF_MEMORY

The requested function cannot complete because of insufficient free memory.

LC_RC_INVALID_BUS_NODE_ID

BusNode specified a node that was not in the view.

LC_RC_INVALID_FIRST_NODE_ID

FirstNode specified a node that was not in the view or on the main site circle. This condition might also be caused by a broken main site circle or a view with multiple rings.

LC_RC_INVALID_LINK_OPT

LinkCrossOption is not in the range of zero to six.

LC_RC_INVALID_SECOND_NODE_ID

SecondNode specified a node that was not in the view or on the main site circle. This condition might also be caused by specifying a node that is not connected to the first_node_id node.

LC_RC_MULTI_TOKEN_RINGS

A view with LayoutType set to four contains multiple token rings that are interconnected.

LC_RC_OVERFLOW

The area required to lay out the view overflows the current coordinate system. Reduce the number of nodes, links, and tackpoints in the view, or reduce the field in the VS_SEG_HEADER.

LC_RC_TOO_MANY_LINKS_RADIAL

A view with LayoutType set to one, two, three, four, or five contains more than the maximum number of links.

LC_RC_TOO_MANY_LINKS_CON_TREE

A view with LayoutType set to eight contains more than the maximum number of links.

LC_RC_TOO_MANY_LINKS_ELLIPSE

A view with LayoutType set to seven contains more than the maximum number of links.

LC_RC_TOO_MANY_LINKS_HIER

A view with LayoutType set to six contains more than the maximum number of links.

LC_RC_TOO_MANY_LINKS

A view contains more than the maximum number of links.

LC_RC_TOO_MANY_NODES_ELLIPSE

A view with LayoutType set to seven contains more than the maximum number of nodes.

LC_RC_TOO_MANY_NODES_CON_TREE

A view with LayoutType set to eight contains more than the maximum number of nodes.

LC_RC_TOO_MANY_NODES_HIER

A view with LayoutType set to six contains more than the maximum number of nodes.

LC_RC_TOO_MANY_NODES_RADIAL

A view with LayoutType set to one, two, three, four, or five contains more than the maximum number of nodes.

LC_RC_TOO_MANY_NODES

A view contains more than the maximum number of nodes.

LC_RC_TOO_MANY_TEXTS

The view exceeds the maximum number of text strings.

LC_RC_VIEW_TOO_COMPLEX

The view is too complex for the layout function. Reduce the total number of links, tackpoints, and nodes in the view.

IHS1116I

The list created for this request may not be complete.

Explanation

The list created for your request might not show all possible values. Possible reasons for this are:

- GMFHS is not currently available, so information about RODM resources cannot be included.
- The topology server timed out while waiting for a response from GMFHS.
- The session between the topology server and IBM Z NetView has ended.

System action

The requested action continues, but some expected information will not be available.

Operator response

This problem might occur because the Tivoli NetView OST task was stopped while the request for data was being processed. The OST task is the task used by the NETCONV command to establish a session between

IBM Z NetView and the server. If necessary, restart the OST task and re-issue the NETCONV command.

If this does not fix the problem, contact your system programmer responsible for GMFHS or for the session between the topology server and IBM Z NetView.

IHS1117I The layout parameters specified for view are not correct. Default layout parameters have been used. Notify the system programmer responsible for RODM.

Explanation

The layout parameters specified in RODM for the view are not correct. Default parameters have been automatically substituted.

Message Variables

view

The name of the view.

System action

The view created with default layout parameters opens.

Operator response

Record the information in the message window and contact your system programmer.

System programmer response

Check the GMFHS and RODM logs for specific information about which layout parameters are not correctly specified. Correct the RODM definition error.

See the *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide* and the *IBM Z NetView Troubleshooting Guide* for more information.

IHS1118W The layout parameters specified for view are not correct. The view cannot be created. Notify the system programmer responsible for RODM.

Explanation

The layout parameters specified in RODM for the view are not correct. Default parameters cannot be automatically substituted.

Message Variables

view

The view name.

System action

If this is the first time you are attempting to open the view, the view does not open. If this occurs while refreshing the view, the view closes.

Operator response

Record the information in the message window and contact your system programmer.

System programmer response

Check the GMFHS and RODM logs for specific information about which layout parameters are not correctly specified. Correct the RODM definition error. See the *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide* and the *IBM Z NetView Troubleshooting Guide* for more information.

IHS1119W Objects required to create view are in error. Notify the system programmer responsible for RODM.

Explanation

The view cannot be created because an error was detected in a RODM class, object, or attribute specification.

Message Variables

view

The view name.

System action

If this is the first time you are attempting to open the view, the view does not open. If this occurs while refreshing the view, the view closes.

Operator response

Record the information in the message window and contact your system programmer.

System programmer response

Check the IBM Z NetView GMFHS and RODM logs for specific information about which class, object, or attribute is not correctly specified. Correct the RODM definition error.

IHS1120I The view created is not complete. Notify the system programmer responsible for RODM.

Explanation

The view created will not display all RODM-defined resources for one of the following reasons:

- The view contained more resources than allowed by the RODM ObjectSetCriteriaCount attribute.
- The view contains more than the maximum allowed number of nodes or links.

System action

The view opens, but it does not include all possible resources.

Operator response

Contact your system programmer.

System programmer response

Do one or both of the following:

- Increase the RODM ObjectSetCriteriaCount attribute.
- Reduce the number of nodes or links in the specified view to the allowed maximum.

IHS1121I The resource does not support this view request.

Explanation

IBM Z NetView GMFHS cannot create a view for this request on a particular resource. The RODM class definition for this resource does not include the requested view type.

System action

If this is the first time you are attempting to open the view, the view does not open. If this occurs while refreshing the view, the view closes.

Operator response

Contact your system programmer.

System programmer response

Check the GMFHS and RODM logs for specific information about which class, object, or attribute caused the problem. To support the view type, add the appropriate VIO to the RODM definition. If necessary, correct the RODM definition error.

IHS1122W An unknown reason code was received from the topology server. RC: reason code

Explanation

The reason code returned by the server was not an expected value.

Message Variables

reason code

The reason code supplied by the server.

System action

The reason code is ignored. The request processing continues, but functions might be disabled.

Operator response

Notify your system programmer.

System programmer response

Contact IBM Software Support.

IHS1123I A RODM method failed while creating the view_name view

Explanation

A RODM method failure occurred during the creation of the view. The view is too large and complex to open. Notify the system programmer responsible for RODM.

Message Variables

view_name

The view name

System action

If you are trying to open the view, the view does not open. If you are trying to refresh the view, the view closes.

Operator response

Record the information in the message window and contact your system programmer.

System programmer response

Reduce the size and complexity of the view by reducing the number of nodes or links in the specified view to the allowed maximum.

See the ObjectSetCriteriaCount information in the *IBM Z NetView Data Model Reference* for details on view limits.

IHS1132W A general processing exception was received from the topology server. ID: id Data 1: data1 Data 2: data2 Data 3: data3 Data 4: data4

Explanation

A general processing exception was received from the server.

Message Variables

id

The topology server exception ID.

data1

Problem diagnosis data supplied by the server.

data2

Problem diagnosis data supplied by the server.

data3

Problem diagnosis data supplied by the server.

data4

Problem diagnosis data supplied by the server.

Operator response

Contact your system programmer.

System programmer response

Contact IBM Software Support.

IHS1133W	The topology server could not complete the request because of insufficient memory.
-----------------	---

Explanation

A request to allocate either system or topology communication server memory failed. The requested memory resource is exhausted.

System action

The topology server closes.

Operator response

Record the information from the message window. Try the following at the server workstation:

- Close unnecessary applications to free system memory.
- Close all topology server applications (including command exits) to free server memory.
- Free disk space by deleting files that are no longer required.
- Install more memory.

IHS1134W	An error occurred while deleting view.
-----------------	---

Explanation

An error occurred while deleting a view from the topology server databases.

Message Variables**view**

The name of the view being deleted.

System action

Whether the view is deleted depends on where the error occurred. If the view still displays in the business tree, it was not completely deleted from the server databases.

If the view does not display, it was completely deleted.

Operator response

Contact your system programmer.

System programmer response

Save the server error log and contact IBM Software Support.

IHS1135W	An error occurred while saving view.
-----------------	---

Explanation

An error occurred while saving a customized view.

Message Variables**view**

The name of the view being saved.

System action

The request is ignored.

Operator response

Retry the request. If the problem persists, contact your system programmer.

System Operator Response: Contact IBM Software Support.

IHS1136W	You have requested to delete resource. This will also delete any contained resources and cannot be undone. Any affected view will be saved with the resource deleted. Do you wish to proceed?
-----------------	--

Explanation

You selected to delete a resource. If the resource contains other resources (for example, a subsystem that contains applications), the contained resources will also be deleted.

System action

If Yes is selected, the resource and all contained resources are permanently deleted. The delete operation cannot be undone.

Operator response

Select Yes to delete the resource and all contained resources. Select No if you do not want to delete the resource.

IHS1137W	A newer version of one or more files is required to communicate with this topology server. You must download the newer version before you can sign on. Choosing "No" returns you to the Sign On window. Do you want to update to the newer version now?
-----------------	--

Explanation

To sign on to the specified server, you must update the files to the newer version.

System action

If you select Yes, the newer version of the files is installed from the server. The console is recycled and the Sign On window is redisplayed.

If you select No, the files are not updated and you are returned to the Sign On window.

Operator response

Select Yes if you want to update the files and sign on to the specified server. Select No if you do not want to update the files.

IHS1138W	You have requested to delete the last subsystem in this business system. This will delete the business system. Do you wish to proceed?
-----------------	---

Explanation

Business systems must contain at least one subsystem. You have selected to delete the last subsystem in the business system, which will also delete the business system.

System action

If Yes is selected, the subsystem and its parent business system are deleted. The delete operation cannot be undone.

Operator response

Select Yes to delete the subsystem and its parent business system. Select No if you do not want to delete the subsystem.

IHS1139W	You have requested to delete the component type <i>component type</i>. Any instances of this component type will be changed to the Undefined generic component type. Do you want to proceed?
-----------------	---

Explanation

You have requested to delete the specified component type.

Message Variables

component type
The name of the component type.

System action

If the user selects Yes, the application type is deleted. All existing applications that use this application type will change to the default type. The delete operation cannot be undone.

If the user selects No, the application type is not deleted.

Operator response

Do one of the following:

- Select Yes to delete the specified application type.
- Select No if you do not want to delete the specified application type.

IHS1140W	Application type <i>name</i> cannot be deleted because it is currently reference by one or more open views. Close all views that contain this application type, then retry the Remove operation.
-----------------	---

Explanation

You selected to delete an application type that is currently referenced by one or more open views.

System action

The specified application type is not deleted.

Operator response

Close all views that contain the application type, then retry the delete operation.

IHS1141W	You have deselected the Aggregate checkbox. Any aggregate views and their contained resources will be
-----------------	--

deleted. You cannot undo this action. Do you wish to proceed?

Explanation

You deselected the Aggregate checkbox, then selected to save the application. If the application contains any aggregate views, those views and all contained resources will be deleted.

System action

If you select Yes, the application is no longer an aggregate and all aggregated views and their contained resources are deleted. The delete operation cannot be undone.

Operator response

Select Yes to specify that the application is no longer an aggregate and to delete the aggregated views. Select No to return to the properties window.

IHS1142W	Properties have been changed. Do you want to save the changes?
-----------------	---

Explanation

You changed the properties for a resource, then selected to cancel or close the window without saving changes.

System action

If you select Yes, the changes are saved. If you select No, the changes are discarded. If you select Cancel, you are returned to the properties window.

Operator response

Select Yes to save the changes. Select No to discard the changes. Select Cancel to return to the properties window.

IHS1143W	A required field is empty.
-----------------	-----------------------------------

Explanation

No data was entered in a required field.

System action

You are returned to the properties window.

Operator response

Ensure that all required fields are filled in.

IHS1144W	The source and target cannot be the same application.
-----------------	--

Explanation

You attempted to create a connection with the same application as both source and target.

System action

You are returned to the properties window.

Operator response

Ensure that the source and target applications are different.

IHS1145W	There must be at least two applications in the current view before a connection can be created.
-----------------	--

Explanation

You attempted to create a connection, but there are less than two applications in the current subsystem.

System action

You are returned to the console.

Operator response

Ensure that there are at least two applications in the current subsystem before creating a connection.

IHS1146W	Aggregate <i>name</i> already exists.
-----------------	--

Explanation

The specified aggregate name exists. Only one aggregate can exist with that name.

Message Variables

name

The name of the aggregate.

System action

You are returned to the console.

Operator response

Specify a different aggregate name.

IHS1147W	Aggregate <i>name</i> already exists. The resources were not added.
-----------------	--

Explanation

The specified aggregate already exists. Only one aggregate can exist with that name.

Message Variables

name

The name of the aggregate.

System action

You are returned to the console. The resources are not added.

Operator response

Specify a different aggregate name.

IHS1148W The aggregate no longer exists.

Explanation

The aggregate has been deleted.

System action

The resource is not added to the aggregate.

Operator response

Create the aggregate or add the resource to another aggregate.

IHS1149W Application *name* cannot be deleted because it has connections to other applications.

Explanation

You attempted to delete an application that still has connections to other applications.

System action

You are returned to the console.

Operator response

Delete all connections to the application, then try to delete the application.

IHS1150W You have changed the name of this item. Do you want the "Export file name" and "Product" fields updated with the new name?

Explanation

You changed the name of the item. You can have the Export file name and Product fields automatically updated with the new name, if you desire.

System action

If you select Yes, the Export file name and Product fields are updated with the new name. Otherwise, they are not.

Operator response

Select Yes if you want the Export file name and Product fields updated with the new name. Select No if you do not.

IHS1151I The specified directory *directory name* does not exist. Do you wish to create it?

Explanation

The directory specified in the Export window does not exist.

Message Variables***directory name***

The directory name that does not exist.

System action

If you select Yes, the directory is created. If you select No, the operation is canceled and you are returned to the Export window.

Operator response

Select Yes to create a directory with the specified name. Select No to cancel the operation and return to the Export window. .

IHS1152I The specified file *filename* already exists. Do you wish to overwrite it?

Explanation

The file specified in the Export window already exists.

Message Variables***filename***

The name of the file that already exists.

System action

If you select Yes, the file is overwritten. If you select No, the operation is canceled and you are returned to the Export window.

Operator response

Select Yes to overwrite file. Select No to cancel the operation and return to the Export window.

IHS1153W Any existing business definition files in the directory *directory name* will be overwritten. Do you wish to continue?

Explanation

If any BDF files with the same file names as the ones being written out exist in the specified directory, they will be overwritten.

Message Variables

directory name

The name of the directory containing the BDFs.

System action

If you select Yes, files might be overwritten. If you select No, the operation is canceled and you are returned to the Export window.

Operator response

Select Yes to continue. Files might be overwritten. Select No to cancel the operation and return to the Export window.

IHS1154I A product incompatibility exists between the console and the server. The console product is *consoleproduct*. The server product is *serverproduct*.

Explanation

The topology console cannot connect to the topology server because of a product incompatibility.

Message Variables

consoleproduct

The product name of the console.

serverproduct

The product name of the server.

System action

The sign-on request was not completed. The Sign On window remains open.

Operator response

If the servers from both products are installed, change the host name to use the correct server, then sign on again. If the problem persists, contact your system programmer.

System programmer response

Ensure that the correct products are installed for both the console and the server.

IHS1155I You have requested to close view *view*. This view has one or more properties windows open. You

must close these properties windows first.

Explanation

The view that you have requested to close has one or more properties windows open. These windows must be closed before you can close the view.

Message Variables

view

The name of the view you requested to close.

System action

The view is not closed.

Operator response

Close all properties windows associated with the view, then close the view.

IHS1156E Unable to create a Monitor view due to missing or corrupt data in the *filename* file.

Explanation

The file used to store resource information has missing or corrupt information. This can be the result of manual editing of the file.

Message Variables

filename

The name of the affected data file.

System action

The monitor view will not be shown.

Operator response

The original file will need to be restored for monitor views to be available in Plan mode. .

IHS1157E Unable to launch bean due to invalid bean name *name*.

Explanation

The bean name is not specified correctly.

Message Variables

name

The name of the bean that was to be launched.

Operator response

Verify that the name of the bean was specified correctly in the command profile editor.

IHS1158E Unable to instantiate bean *name*.**Explanation**

The bean cannot be instantiated by the Java Virtual Machine.

Message Variables***name***

The name of the bean that was to be launched.

Operator response

Verify the following:

- That the name of the bean was specified correctly in the command profile editor
- That the JAR file for the bean is available at the topology server in the %BINIDIR%\TDS\server\db\current\lib
- That the JAR file contains the bean.

IHS1159I Non-visual bean loaded *name*.**Explanation**

The bean that was launched does not have a window.

Message Variables***name***

The name of the bean that was launched.

System action

Processing continues.

Operator response

Check the log for any output.

IHS1160E The entered task arguments are not valid. Task: *task name* Reason: *reason code***Explanation**

The values entered in the entry fields for the bean are not valid.

Message Variables***task name***

The name of the task whose arguments are collected by the bean.

reason code

The reason the entry fields were not valid.

Operator response

Close the message window and reenter the values in the entry fields for the bean.

IHS1161E Aggregate thresholds are not valid.**Explanation**

The value of the aggregate thresholds not correct.

Operator response

Close the message window and specify valid aggregation threshold values.

IHS1162E Aggregation priority is not valid.**Explanation**

The value of the aggregation priority is outside the accepted range.

Operator response

Close the message window and specify a valid aggregation priority.

IHS1163E Flag is not valid.**Explanation**

One of the flags that has been changed cannot be set on the Resource Properties window.

Operator response

Close the message window and set the flag correctly.

IHS1164E Polling interval is not valid.**Explanation**

The value for the polling interval is outside the permitted range.

Operator response

Close the message window and specify a valid polling interval.

IHS1165E Resource name is not valid.**Explanation**

The name of the resource is not valid.

Operator response

Close the message window and specify a valid resource name.

IHS1166W You have requested to delete the application *name*. This will also delete any software components

defined for the application. Do you want to continue?

Explanation

You have requested to delete an application. Deleting an application also deletes all information about any software components that have been defined as part of this application.

Message Variables

name

The name of the application to be deleted.

System action

If you select Yes, the application and any associated software components are deleted. If you select No, the application is not deleted.

Operator response

Select Yes to delete the Application and all associated software components. Select No if you do not want to delete this application.

IHS1167W	You have requested to delete the software component <i>name</i>. This will also delete all information about the component. Do you want to continue?
-----------------	---

Explanation

You have requested to delete a software component. Deleting this component will delete all information about the component.

Message Variables

name

The name of the software component you have asked to delete.

System action

If you select Yes, the software component is deleted. If you select No, it is not deleted.

Operator response

Select Yes to delete the software component. Select No if you do not want to delete this software component.

IHS1174E	\{0\} field must be greater than the \{1\} field.
-----------------	--

Explanation

Field {0} can not be less than field {1}.

Message Variables

{0}

Name of the field which must contain a greater value.

{1}

Name of the field which must contain a lesser value.

Operator response

Ensure that the value in field {0} is greater than the value in field {1}.

IHS1175W	On the Web Server page, the default value for the port number cannot be restored without first stopping the web server.
-----------------	--

Explanation

To restore the default value for the web server port number, you must first stop the web server.

System action

The default port number cannot be restored.

Operator response

To restore the port number to its default value, follow these steps:

1. On the web server page of the Console Properties notebook, stop the web server.
2. On the web server page of the Console Properties notebook, click Default.

IHS1176W	The specified port <i>port number</i> is already in use. On the Web Server page of the Console Properties notebook, select a different port number. Apply the change and then restart the web server.
-----------------	--

Explanation

This console currently uses a port number that is already in use by another web server. Multiple web servers cannot use the same port number.

Message Variables

Port Number

The port number used by the web server.

System action

The web server was not started.

Operator response

To specify a unique port number, follow these steps:

1. On the web server page of the Console Properties notebook, specify a different port number.
2. Apply the change.
3. Start the web server again.

IHS1177W **You are about to stop your web server. Doing this will result in all servable files being deleted.**

Explanation

When you stop the web server, all views that are serviced by the web server for this console are deleted so that another client on this computer cannot obtain that same port number and serve the views you have opened.

System action

Any views which have already been created for the web server will be removed from the servable list.

Operator response

Do one of the following:

- Click Stop web server to stop the web server and delete the views.
- Click Cancel to leave the web server running.

IHS1178W **All ports in the specified range (*startportnum* to *endportnum*) are already in use. On the Web Server page of the Console Properties notebook, select a different start of port range or end of port range. Apply the change and then restart the web server.**

Explanation

All the ports defined for the web server in the Console Properties notebook are currently in use.

Message Variables

startportnum

The start of the port number range

endportnum

The end of the port number range

System action

The web server was not started.

Operator response

Specify a different port number range as follows:

1. On the web server page of the Console Properties notebook, change the port number range.
2. Apply the change.
3. Start the web server again.

IHS1179I **The web server has been successfully started using port *portnum*.**

Explanation

The web server was started using the port number indicated.

Message Variables

portnum

The port number used by the web server.

System action

None

Operator response

None

IHS1180W **The AMP packaging file should end with ".amp" or ".pkg" Do you want to continue processing file *filename*? Select Yes to continue. Select No to choose another file.**

Explanation

The file you selected does not end with one of the preferred extensions: ".amp" or ".pkg". You can continue processing, but this indicates that the file is not a valid package file.

Message Variables

filename

The name of the selected file.

System action

If you select Yes, the system tries to process the file. If you select No, you can choose another file.

Operator response

Do one of the following:

- Select Yes to continue processing the file.
- Select No to choose another package file.

IHS1181I **An AMP was added to the server by user *user name*. The console log has additional details.**

Explanation

The AMP was successfully loaded by the specified user.

Note: If you have used the Verify function in this console session (this is indicated in the message) your verification business tree and views might not accurately represent the newly added AMP. To see the new AMP information, sign off and back onto the console.

Message Variables

user name

The user who loaded the new AMP.

System action

The AMP is now available for use.

Operator response

Check the console log for more information about the specific entities that were added.

IHS1182E **The AMP was not successfully processed. Please check the console log for details.**

Explanation

There was a failure in loading the selected AMP package file.

System action

The system cannot load the selected AMP package file. The AMP is not available for use.

Operator response

Check the console log for specific failure information.

IHS1183W **The same JAR file is being loaded more than once. Please check the console log for details.**

Explanation

You tried to load a JAR file that has already been loaded and processed.

System action

The system will not load the JAR file if it has already been loaded.

Operator response

Make sure that duplicate JAR files are not present in multiple AMPs.

IHS1184W **Problems were encountered in loaded JAR files. One or more applications may fail. Please check the console log for details.**

Explanation

The JAR files cannot be loaded and processed successfully.

System action

The system will not process the JAR file if there was any error while loading it.

Operator response

Make sure that duplicate JAR files are not present in multiple AMPs or that the same fully qualified class names are not stored in more than one JAR file.

IHS1185W **Multiple definitions of the same class name occur in different JAR files. One or more applications may fail. Please check the console log for details.**

Explanation

You tried to load the more than one JAR file, each of which contains the same fully qualified class name.

System action

The system will not load the JAR files.

Operator response

Make sure that the JAR files do not contain the same fully qualified class names.

IHS1186W **File *filename* does not exist.**

Explanation

The file you specified in the file selection dialog does not exist.

Message Variables

filename

The file specified in the file selection dialog.

System action

The system is not able to load the specified file.

Operator response

Specify another file or cancel the operation.

IHS1187E **Command exit *exitname* on the server has timed out. *numresponses* command responses were received. The command responses may not be complete. Command String: *stringname* Time out value: *value***

Explanation

The topology console started a command exit on the topology server, but the topology server timed out while waiting on the command responses. It is very likely that the command responses are not complete.

Message Variables

exitname

The name of the command exit that was invoked on the server.

numresponses

The number of command responses that the console received from the server, and thus, this is the number of responses that the server received from the command exit.

stringname

The command string that was sent to the command exit on the server to carry out.

value

The number of seconds that the server waited for all command responses.

System action

It is likely that the command responses were processed by the console; however, this depends on what program started the server command exit on the console. This might have been a customer-provided console command exit, which might or might not process the available command responses.

Operator response

Try the request again. If the same failure occurs, increase the request timeout on the General page of the Console Properties dialog. If this does not resolve the problem, contact your system programmer.

System programmer response

Do one or more of the following:

- If the program that started the server command exit on the console is a customer-provided command exit, then increase the time out value.

- If the command exit on the server is provided by the customer, then ensure that this command exit can get to the source of its data.
- If the command exit is IHSXTHCE, ensure that the network traffic between the topology server and IBM Z NetView is acceptable.

If you cannot resolve the problem, contact IBM Software Support.

IHS1188E **Command exit *exitname* on the server failed. Return Code: *Oxreturncode* Command String: *stringname***

Explanation

The topology console invoked a command exit on the topology server, but the topology server received a non-zero return code from the command exit. The return code came from the IhsiSend API on the server.

Message Variables

exitname

The name of the command exit that was invoked on the server.

returncode

The return code that the server received from the IhsiSend API while calling the command exit.

stringname

The command string that was sent to the command exit on the server for execution.

System action

The server command exit failed. The command did not complete.

Operator response

Contact your system programmer.

System programmer response

Look up this return code in the *IBM Z NetView User's Guide: NetView Management Console* and take the appropriate action. If you cannot resolve the problem, contact IBM Software Support.

IHS1190E **The URL variable is not defined in the command string.**

Explanation

You attempted to connect to a web page, but no web page address was provided.

System action

The request for a web page will not be completed.

Operator response

Contact the system programmer.

System programmer response

Using the CPE utility to ensure that there is a %url% entry in the command string for this command.

IHS1191E	The process invoked returned a non-zero return code.
-----------------	---

Explanation

The selected command invoked a process on this workstation. The launched application process returned a non-zero return code to the operating system. This might or might not be an error, depending on the process invoked.

System action

The system continues.

Operator response

Contact the system programmer to see if this message is expected.

System programmer response

Look in the error log to see the name of the process and the return code. Verify that this return code is acceptable for this process.

IHS1192E	The system could not invoke the process <i>process</i>
-----------------	---

Explanation

The selected command attempted to invoke a process on this workstation, but that process cannot be started.

Message Variables

process

The complete string that was passed to the operating system to invoke the process.

System action

The command cannot be completed. The system continues.

Operator response

Contact your system programmer.

System programmer response

Verify that the command specified in the message is executable from the command line of this system in any directory. Also verify that security is configured properly.

IHS1193E	No match for operating system <i>operating_system</i> and a program type of <i>program_type</i> could be found in the properties file.
-----------------	---

Explanation

The command invoked attempted to start a process on this workstation, but an entry for this program type and operating system cannot be found in the properties file.

Message Variables

operating_system

The name of the operating system.

program_type

The alias for the process that attempted to be started.

System action

Since this operating system and program type cannot be resolved in the properties file, no action is taken. The system continues.

Operator response

Contact your system programmer.

System programmer response

Edit the *usercmdinv.properties* or *defaultcmdinv.properties* file and add an entry for this program type and operating system. The properties files are located in the settings directory of the current server database.

IHS1194E	Unable to retrieve session data from session monitor because a required task on IBM Z NetView is not active.
-----------------	---

Explanation

The session monitor task AAUTSKLP was not activated or failed to initialize on the NetView program that the console has logged onto. This prevents retrieval of session data from this and any other NetView domain.

Operator response

Start the session monitor task on host NetView by entering STARTCNM NLDM on a host NetView

command line. For more information, enter HELP AAU923 on a host NetView command line, or contact your system programmer.

System programmer response

On a host NetView command line, enter HELP AAU923 for more information on what actions to take.

IHS1195W	No data exists for the resources specified. Resource: <i>resourcename</i> Partner resource: <i>partnername</i> Domain ID: <i>domainID</i>
-----------------	--

Explanation

There is no data in the session monitor VSAM database or in session monitor storage for the resources specified at the specified view domain. The resource name might not be valid or there might not be any data for that resource.

Message Variables

resourcename
The name of the resource entered in the Session Data window.

partnername
The name of the partner resource entered in the Session Data window, or <empty> if no resource was entered.

domainID
The name of the NetView domain ID entered in the Session Data window.

Operator response

If a partner resource name was entered in the Session Data window, verify that this resource name was entered correctly. For more information, enter HELP AAU925 on a host NetView command line, or contact your system programmer.

System programmer response

On a host NetView command line, enter HELP AAU925 for more information on what actions to take.

IHS1196E	Unable to retrieve data from IBM Z NetView domain <i>domainID</i>. Reason: The NetView program cannot establish a cross-domain session at the adjacent NetView domain.
-----------------	---

Explanation

The session monitor in the NetView program which the console is logged onto, cannot communicate with the

session monitor in the specified domain. A cross-domain session cannot be established.

Message Variables

domainID
The NetView domain ID entered in the Session Data window, or the domain ID that was converted from the NETID and SSCP name of the selected resource, when no NetView domain ID was entered in the Session data dialog.

Operator response

If you entered a domain ID in the Session Data window, ensure that you specified the correct domain identifier, Verify that the session monitor is active in the specified domain. For more information, enter HELP AAU926 on the host NetView command line or contact your system programmer.

System programmer response

On a host NetView command line, enter HELP AAU926 for information on what actions to take.

IHS1197E	The SSCP name could not be translated into a IBM Z NetView domain ID. Resource: <i>resourcename</i> Partner resource: <i>partnername</i> NetID: <i>netid</i> SSCP name: <i>sscpname</i>
-----------------	--

Explanation

The NetView that the console has logged onto cannot translate the NETID and the SSCP name to a NetView domain ID. The session monitor does not have any internal information to map the SSCP name into a NetView domain ID.

Message Variables

resourcename
The name of the resource entered in the Session Data window.

partnername
The name of the partner resource entered in the Session Data window, or (empty) if no resource was entered.

netid
The network identifier of the selected resource. It can be none if the name of the selected resource does not contain a netID.

sscpname
The system services control point that reported the selected resource.

Operator response

If the NetView domain ID is known, provide this information in the Session Data window. For more information, enter HELP AAU974 on a host NetView command line, or contact your system programmer.

System programmer response

On a host NetView command line, enter HELP AAU974 for more information on what actions to take.

IHS1198E **A failure occurred on IBM Z NetView while retrieving session data. Resource: *resourcename* Partner resource: *partnername* Domain ID: *domainid* NetView message: *netviewmessage***

Explanation

Message Variables

resourcename

The name of the resource entered in the Session Data window.

partnername

The name of the partner resource entered in the Session Data window, or (empty) if no resource was entered.

domainid

The name of the NetView domain ID entered in the Session Data window.

netviewmessage

The host NetView error message that was generated when the session data was retrieved.

Operator response

For more information, enter HELP messagenum on a host NetView command line, where messagenum is the message number in netviewMessage, or contact your system programmer.

System programmer response

For more information, enter HELP messagenum on a host NetView command line, where messagenum is the message number in netviewMessage.

IHS1199E **The system could not invoke the process: *process* or the process returned a non-zero return code: *return code***

Explanation

The selected command attempted to invoke a process on this workstation, but either the process cannot be

started or the process returned a non-zero return code to the operating system.

Message Variables

process

The complete string that was passed to the operating system to invoke the process.

return code

The return code that the process returned.

System action

The command cannot be completed.

Operator response

Contact your system programmer. This message might or might not be expected.

System programmer response

Do either of the following:

- Verify that the command specified in the message is executable from the command line of this system in any directory. Also verify that security is configured properly.
- Look in the error log to review the name of the process and the return code. Verify that this return code is acceptable for this process.

IHS1200W **No selected resources are applicable for processing.**

Explanation

You tried to update the flags for one or more resources via the resource-specific pop-up menu. However, none of the selected resources allows you to update the flag as requested. You are not allowed to update the flags for a resource if:

- You are setting (or clearing) a flag on a resource that has already been set (or cleared).
- You are trying to update a flag on a resource for which that flag is not applicable.

System action

The request is ignored.

Operator response

Select OK to close the message window.

IHS1201I **The More Detail function is not available from customized dynamic views.**

Explanation

Invocation of the More Detail function is not supported from customized dynamic views.

System action

The NetView management console topology server does not support the More Detail function when invoked from a customized dynamic view.

Operator response

Perform the More Detail function from the dynamic view in the Network Views or Located Views list.

IHS1202I The view list created for this request is not complete. One or more views are not within your span of control.

Explanation

One or more views were found that match your selection criteria but are not within your span of control.

System action

The number of views in the created list determines the action:

- If no views are found, the request is ignored.
- If one view is found, it is opened.
- If more than one view is found, a selection list is displayed.

Operator Response: Do the following:

1. Select OK to close the message window.
2. Ensure that the appropriate spans are started.
3. If you cannot fix the problem, contact your system programmer or the person in your organization responsible for security administration.

System Programmer Response: Do the following:

1. Determine which views are involved.
2. See the *IBM Z NetView Security Reference* for information about using spans to protect resources and views, and also for debugging security problems.

IHS1203I The requested view *name* is not within your span of control.

Explanation

You are not authorized to display the requested view.

Message Variables

name

The name of the view that you requested.

System action

If you are attempting to open a view, the view does not open. If you are attempting to refresh the view, the view closes.

Operator response

Do the following:

1. Select OK to close the message window.
2. Ensure that the appropriate spans are started.
3. If you cannot fix the problem, contact your system programmer or the person in your organization responsible for security administration.

System Programmer Response: Do the following:

1. Determine which view is involved.
2. See the *IBM Z NetView Security Reference* for information about using spans to protect resources and views, and also for debugging security problems.

IHS1204I The view list created for this request is not complete. No resources in one or more views are within your span of control.

Explanation

One or more views were found that match your selection criteria, but you are not authorized to display any of the resources in one or more of those views.

System action

The number of views in one or more of the created list determines the action:

- If no views are found, the request is ignored.
- If one view is found, it is opened.
- If more than one view is found, a selection list is displayed.

Operator Response: Do the following:

1. Select OK to close the message window.
2. Ensure that the appropriate spans are started.
3. If you cannot fix the problem, contact your system programmer or the person in your organization responsible for security administration.

System Programmer Response: Do the following:

1. Determine which views are involved.

2. See the *IBM Z NetView Security Reference* for information about using spans to protect resources and views, and also for debugging security problems.

IHS1205I **No resources in the requested view *name* are within your span of control.**

Explanation

You are not authorized to display any resources in the requested view.

Message Variables

name

The name of the view that you requested.

System action

If you are attempting to open a view, the view does not open. If you are attempting to refresh the view, the view closes.

Operator response

Do the following:

1. Select OK to close the message window.
2. Ensure that the appropriate spans are started.
3. If you cannot fix the problem, contact your system programmer or the person in your organization responsible for security administration.

System Programmer Response: Do the following:

1. Determine which view is involved.
2. See the *IBM Z NetView Security Reference* for information about using spans to protect resources and views, and also for debugging security problems.

IHS1206I **The specified resource is not within your span of control.**

Explanation

One or more resources were found that match your selection criteria, but you are not authorized to display them.

System action

The request is ignored.

Operator response

Do the following:

1. Select OK to close the message window.
2. Ensure that the appropriate spans are started.

3. If you cannot fix the problem, contact your system programmer or the person in your organization responsible for security administration.

System Programmer Response: Do the following:

1. Determine which resources are involved.
2. See the *IBM Z NetView Security Reference* for information about using spans to protect resources and views, and also for debugging security problems.

IHS1207I **The specified resource is not within your span of control. Unable to display view *name*.**

Explanation

The view is not displayed because you do not have authorization to view the selected resource. If you selected the resource from an open view, the authorization for this resource might have changed since you opened the original view.

Message Variables

name

The view name that is not displayed.

System action

The request is ignored.

Operator response

Do the following:

1. Select OK to close the message window.
2. Ensure that the appropriate spans are started.
3. If you cannot fix the problem, contact your system programmer or the person in your organization responsible for security administration.

System Programmer Response: Do the following:

1. Determine which resource is involved.

IHS1208I **One or more resources are not within your span of control.**

Explanation

If changing flags or aggregation values, this request will not affect one or more of the selected resources because you do not have the proper span authority to issue commands against these resources. If listing suspended resources, one or more resources were found that you are not authorized to display.

System action

If changing flags or aggregation values, the request is ignored for those resources that are not within your span of control. When listing suspended resources, the resources that you are not authorized to display will not appear in the window.

Operator response

Do the following:

- 1. Select OK to close the message window.
- 2. Ensure that the appropriate spans are started.
- 3. If you cannot fix the problem, contact your system programmer or the person in your organization responsible for security administration.

System Programmer Response: Do the following:

- 1. Determine which resources are involved.
- 2. See the *IBM Z NetView Security Reference* for information about using spans to protect resources and views, and also for debugging security problems.

IHS1209I Unable to perform span authorization.

Explanation

A span authorization failure occurred for the request. This can happen for one of the following reasons:

- The span authorization table has not been loaded.
- The NetView host scope checker task (DUIFSSCO) might be down.
- GMFHS or RODM is not currently available, so information about RODM resources cannot be included.
- The server timed out while waiting for a response from GMFHS.
- The session between the server and IBM Z NetView has gone down.
- The scope checker detected an error during the span authorization check.
- GMFHS found more views than can be returned in one request, so the view list was truncated.
- A RODM method failed while creating a view.
- One or more view names in RODM are too long.
- The NetView domain name has insufficient authority to query RODM.

System action

The action depends upon the user's request.

- If you are attempting to open a single view, the view does not open.
- If you are attempting to open multiple views, and exactly one view is valid, it is opened.
- If you are attempting to open multiple views, and more than one view is valid, a selection list is displayed.
- If you are attempting to refresh a view, the view closes.
- If you are attempting to list suspended resources, suspended RODM resources are not displayed.
- If you are attempting to update user status or aggregation values, RODM resources will not be updated.

System programmer response

Check for one or more of the following:

- Load the span authorization table.
 - Ensure that the host scope checker task (DUIFSSCO) is started.
 - Ensure that GMFHS and RODM are active.
 - Ensure that the session between the graphic data server and IBM Z NetView is active.
 - Look in the IBM Z NetView log for span authorization messages.
 - If a RODM method failed while creating a view, check the GMFHS and RODM logs for specific information about the method failure.
 - To determine which view in the list encountered a method failure, do the following:
 - 1. Select the GMFHS views in the list.
 - 2. Open the views.
- IHS1113W is displayed for the view containing the method failure.
- The value of the MyName field of objects in the Network_View_Class and the Configuration_Peer_View class are limited to 32 bytes. You can increase the DUIGINIT value. However, increasing the value can cause timeouts at the workstation.

IHS1210I Unable to perform span authorization because the operator is no longer logged on to host IBM Z NetView.

Explanation

A span authorization failure occurred because you are no longer logged on to IBM Z NetView.

System action

The action depends upon the user's request.

- If you are attempting to open a single view, the view does not open.
- If you are attempting to open multiple views, and exactly one view is valid, it is opened.
- If you are attempting to open multiple views, and more than one view is valid, a selection list is displayed.
- If you are attempting to refresh a view, the view closes.
- If you are attempting to list suspended resources, suspended RODM resources are not displayed.
- If you are attempting to update user status or aggregation values, RODM resources will not be updated.

Operator response

Log on to the NetView program.

IHS1211I	The view list created for this request is not complete. The specified resource is not within your span of control.
-----------------	---

Explanation

One or more resources were found that match your selection criteria, but you are not authorized to display them.

System action

The number of views in the created list determines the action:

- If there is one view, it is opened.
- If there is more than one view, a selection list is displayed.

Operator response

Do the following:

1. Select OK to close the message window.
2. Ensure that the appropriate spans are started.
3. If you cannot fix the problem, contact your system programmer or the person in your organization responsible for security administration.

System programmer response

Do the following:

1. Determine which resources are involved.

2. See the *IBM Z NetView Security Reference* for information about using spans to protect resources and views, and also for debugging security problems.

IHS1214I	The displayed view tree is not complete. One or more views in the tree are not within your span of control.
-----------------	--

Explanation

The displayed view tree is incomplete. Some views in the view tree are not within your span of control and thus are not displayed.

System action

The partial view tree is displayed. It contains only views within your span of control.

Operator response

Do the following:

1. Select OK to close the message window.
2. Ensure that the appropriate spans are started.
3. If you cannot fix the problem, contact your system programmer or the person in your organization responsible for security administration.

System programmer response

Do the following:

1. Determine which views are involved.
2. See the *IBM Z NetView Security Reference* for information about using spans to protect resources and views, and also for debugging security problems.

IHS1215I	The displayed view tree is not complete. Unable to perform span authorization.
-----------------	---

Explanation

The displayed view tree is incomplete because a span authorization failure occurred while trying to obtain the view tree. This can happen for one of the following reasons:

- The span authorization table has not been loaded.
- The NetView host scope checker task (DUIFSSCO) might be down.
- GMFHS or RODM is not currently available, so information about RODM resources cannot be included.

- The server timed out while waiting for a response from GMFHS.
- The session between the server and IBM Z NetView has gone down.
- The scope checker detected an error during the span authorization check.
- GMFHS found more views than can be returned in one request, so the view list was truncated.
- A RODM method failed while creating a view.
- One or more view names in RODM are too long.
- The NetView domain name has insufficient authority to query RODM.

System action

The partial view tree is displayed. It contains only views that do not require span authorization.

Operator response

Do the following:

1. Select OK to close the message window.
2. Ensure that the appropriate spans are started.
3. If you cannot fix the problem, contact your system programmer responsible for security administration.

System programmer response

Check for one or more of the following:

- Load the span authorization table.
- Ensure that the host scope checker task (DUIFSSCO) is started.
- Ensure that GMFHS and RODM are active.
- Ensure that the session between the graphic data server and IBM Z NetView is active.
- Look in the IBM Z NetView log for span authorization messages.
- If a RODM method failed while creating a view, check the GMFHS and RODM logs for specific information about the method failure.
- To determine which view in the list encountered a method failure, do the following:
 1. Select the GMFHS views in the list.
 2. Open the views.

IHS1113W is displayed for the view containing the method failure. The value of the MyName field of objects in the Network_View_Class and the Configuration_Peer_View class are limited to 32 bytes. You can increase the DUIGINIT value. However,

increasing the value can cause timeouts at the workstation.

IHS1216I **The displayed view tree is not complete. Unable to perform span authorization because the operator is no longer logged on to host IBM Z NetView.**

Explanation

The displayed view tree is incomplete because a span authorization failure occurred while trying to obtain the view tree. This happened because the operator is no longer logged on to host IBM Z NetView.

System action

The partial view tree is displayed. It contains only views that do not require span authorization.

Operator response

Select OK to close the message window. Log on to IBM Z NetView.

IHS1217I **NETCONV session started from IBM Z NetView host *hostname*.**

Explanation

NETCONV session has started from host NetView to the NetView management console server.

Message Variables

hostname
The IBM Z NetView from which the NETCONV was started.

IHS1218I **NETCONV session stopped from IBM Z NetView host *hostname*.**

Explanation

The NETCONV session from NetView host to the NetView management console server has been stopped.

Message Variables

hostname
The IBM Z NetView from which the NETCONV was started.

Operator response

Start the NETCONV session from NetView host.

IHS1219I **No matching resources were found.**

Explanation

An attempt to find one or more resources using the Find or Advanced Find dialog failed. There were no resources in the view that matched the Find or Advanced Find search criteria.

Operator response

Review and change the search criteria if you expect one or more objects to be found.

IHS1220I	Syntax of the resource pattern is not correct.
-----------------	---

Explanation

An attempt to find one or more resources using the Find or Advanced Find dialog failed. The search pattern for one or more fields does not have the correct syntax for the selected expression type (either DOS wild card or regular expression type).

Operator response

Correct the search pattern and retry the request.

IHS1221I	Resource navigation is terminating. <i>viewname</i> has changed such that it contains fewer than two matching resources.
-----------------	---

Explanation

Viewname has changed such that it contains fewer than two matching resources.

Message Variables

viewname

The name of the view for which resource navigation is terminating.

IHS1222E	This command can not be defined as resource independent.
-----------------	---

Explanation

This command has been defined as resource independent in the commands database.

System action

The command is not issued.

Operator response

Contact your system programmer.

System programmer response

Using the Command Profile Editor (CPE), edit the definition for this command and ensure that it is not defined as resource independent.

IHS1223E	The object <i>objectname</i> does not have a valid RODM object ID.
-----------------	---

Explanation

The selected resource does not have a valid RODM ID, which is required by this command. This might occur if the command was issued against an aggregate object.

Message Variables

objectname

The display name of the object the command was issued against.

System action

The command is not issued.

Operator response

Verify that you selected the correct object for this command and retry the command. If the problem persists, contact your system programmer.

System programmer response

Using the Command Profile Editor (CPE), verify that the command is valid for the defined object types.

IHS1224E	The object <i>objectname</i> does not have a valid TCP/IP address.
-----------------	---

Explanation

A TCP/IP command was issued against a selected object, but that object does not have a TCP/IP address defined in RODM.

Message Variables

objectname

The display name of the object the command was issued against.

System action

The command is not issued.

Operator response

Verify that the command is valid for the selected resource.

System programmer response

Verify that the object has a TCP/IP address and that the address is being added to the object in RODM.

IHS1225E **Not authorized to issue this command.**

Explanation

You attempted to issue a command that your operator ID is not authorized to issue.

System action

The command is not issued.

Operator response

Contact your system programmer.

System programmer response

See the appendix in the *IBM Z NetView Security Reference* for instructions on setting up security.

IHS1226E **This command is not installed at the host.**

Explanation

The command issued interacts with modules on the host. Those modules cannot be located.

System action

The command is not issued.

Operator response

Contact your system programmer.

System programmer response

Verify that the NetView host is at the proper level. Also, verify that the command CNMMIBBR is available on NetView host.

IHS1227E **SNMP is not installed on object *objectname*.**

Explanation

A command was issued to start the MIB Browser, but the selected object does not have MIB Information defined in RODM.

Message Variables

objectname

The display name of the object the command was issued against.

System action

The command is not issued.

Operator response

Verify that you selected the correct object for this command and that it has MIB information. Then, retry the command.

IHS1228I **A message could not be delivered.
Reason: *reason* Message: *message***

Explanation

An attempt to send a message using the Send Message dialog failed. The reason for the failure is specified in the *reason* message insert.

Message Variables

reason

The reason that the message cannot be sent. The reason is one of the following:

- No other operators are signed on to the same server to receive the broadcast message
- The operator is either not signed on or is the message originator.

message

The message that cannot be sent.

System action

The message is not sent.

Operator response

Verify that the operator identifier that you want to send the message to is correct and send the message again.

IHS1229E **The requested status minutes are not valid.**

Explanation

The value specified for the status minutes search criteria on the Find Advanced dialog is not valid.

Operator response

Change the status minutes search criteria and try the request again.

IHS1230E **Error loading file *filename* from the server. A default set of wrappable characters will be used.**

Explanation

The system cannot find the specified file in the following directory:

- For Intel: %BINDIR%\TDS\server\db\current\settings
- For UNIX: \$BINDIR/TDS/server/db/current/settings

The wraplabelbreaks.properties file defines the set of characters that is used to determine where to wrap labels.

Message Variables

filename

Typically, this is the wraplabelbreaks.properties file.

System action

The system uses the following default set of characters to determine where to wrap the labels:

- Space (' ')
- Dash ('-')
- Period ('.')
- A colon (':')
- A dollar sign ('\$')
- A percent sign ('%')
- At symbol ('@')
- Slash ('/')
- Backslash ('\')
- A right parenthesis (')')
- A right curly bracket ('}')
- A right bracket (']')

Operator response

Do one of the following:

- Specify that you do *not* want to wrap labels on the View properties page.
- Use the default set of characters for wrapping the labels.
- If you do not want to use the default character set for wrapping labels, verify that the file has not been renamed. If it has not been renamed, contact your system programmer to reinstall the program.

System programmer response

Verify that the file has not been renamed. If it has not been renamed, reinstall the program.

IHS1231E Error attempting to launch external browser for help.

Explanation

This error occurs when the "Use my default web browser" or the "Let me specify my own browser" command is chosen on the General tab of the Console Properties dialog, and the system encounters a problem starting the external browser.

System action

The external browser did not start and the online help did not display.

Operator response

Do one of the following:

- If you want to use an external browser for viewing the online help, verify that your system has sufficient resources to start a program. Then, try to open the help facility again. If the problem persists, contact your system programmer.
- Use the built-in help facility. On the General tab of the Console Properties dialog, select Use built-in Help facility.
- If you are on a platform other than Windows, verify that the name of your Internet browser is in your executable path statement.
- If you are on a SUN system, you must execute "xhost +" on the system prior to launching the external browser for help.
- If you choose "Let me specify my own browser", verify that you entered the correct command. The error message that is displayed when the error occurs shows the command that is issued.

System programmer response

Verify that the system has sufficient resources to start a program. If you cannot resolve the problem, contact IBM Software Support.

IHS1232I	Because this is the first instance of the <i>component type</i> component type in this business system, you must complete the component type settings. The Component Type Properties window will be opened for you.
-----------------	--

Explanation

You must define each component type in a business system using the Component Type Properties window. Because this is the first instance of the specified component type you have added to this business system, the Component Type Properties window opens automatically for you.

Message Variables

component type

Component type name

Operator response

Click OK to open the Component Type Properties window.

IHS1233E **An error occurred opening the following file: *file name***

Explanation

An error occurred when trying to open the specified file.

Message Variables

file name

file name

System Response: The export operation ends.

Operator response

Verify that the file exists and can be read.

IHS1234E **An error occurred creating the following file: *file name***

Explanation

An error occurred when trying to create the specified file.

Message Variables

file name

file name

System Response: The export operation ends.

Operator response

Verify that the specified subdirectory exists and that the user has write access to the specified subdirectory.

IHS1235E **An error occurred deleting the following file: *file name***

Explanation

An error occurred when trying to delete the specified file.

Message Variables

file name

file name

System Response: The export operation ends.

Operator response

Verify that the specified file exists and that the user has write access to the specified subdirectory.

IHS1236E **An error occurred closing the following file: *file name***

Explanation

An error occurred when trying to close the specified file.

Message Variables

file name

file name

System Response: The export operation ends.

Operator response

Verify that the specified subdirectory exists and that there is disk space available.

IHS1237E **An error occurred adding the following file *file name* to the package file.**

Explanation

An error occurred when trying to add the specified file to the package file (.pkg).

Message Variables

file name

file name

System Response: The export operation ends.

Operator response

Verify that there is disk space available.

IHS1238E **An error occurred writing to the following directory: *directory name*.**

Explanation

An error occurred when trying to write to the specified directory.

Message Variables

directory name

directory name

System action

The export operation ends.

Operator response

Verify that the specified directory exists and that the user has write access to the specified subdirectory.

IHS1239E	The Tivoli Module Builder or Tivoli Module Designer is already running.
-----------------	--

Explanation

Only one instance of the Tivoli Module Builder or the Tivoli Module Designer can be launched from the Tivoli GEM Console at a time.

System Response: The Tivoli Module Builder or the Tivoli Module Designer is not launched.

Operator response

Close the instance of the Tivoli Module Builder or the Tivoli Module Designer that is currently running.

IHS1240E	The specified command to launch the Tivoli Module Designer is not valid.
-----------------	---

Explanation

The Tivoli GEM Console failed to launch the Tivoli Module Designer using the command given by the user.

System Response: The Tivoli Module Designer is not launched.

Operator response

Do the following:

1. Verify that the Tivoli Module Designer has been installed correctly on the same computer as the Tivoli GEM Console.
2. Verify that the specified command points to the correct subdirectory in which the Tivoli Module Designer was installed.

IHS1241E	The specified command to launch the Tivoli Module Builder is not valid.
-----------------	--

Explanation

The Tivoli GEM Console failed to launch the Tivoli Module Builder using the command given by the user.

System Response: The Tivoli Module Builder is not launched.

Operator response

Do the following:

1. Verify that the Tivoli Module Builder has been installed correctly on the same computer as the Tivoli GEM Console.
2. Verify that the specified command points to the correct subdirectory in which the Tivoli Module Builder was installed.

IHS1242E	There are no real components in the current subsystem.
-----------------	---

Explanation

You can filter out instances of real component types from a subsystem, based on filter criteria that you specify. To use instance membership filtering, you must have at least one real component in the subsystem before you can specify the filter criteria.

Operator response

Follow these steps:

1. Click OK to return to the subsystem.
2. Place at least one real component in the subsystem.
3. Click Filter to bring up the Instance Membership Filter Properties window and specify the filter criteria.

IHS1243W	You have requested to delete all instances of the component type <i>type</i> in the current view. You cannot undo this action. Do you want to continue?
-----------------	--

Explanation

You have requested to delete all instances of the specified component type in the current view. You cannot undo this action.

Message Variables

type

The type of the component to be deleted.

Operator response

Do one of the following:

1. Click Yes to delete all instances of the specified component type.
2. Click No to cancel the operation. No instances of the specified component are deleted.

IHS1244E	The selected component cannot be included in an aggregate, because it has no component information tasks defined.
-----------------	--

Explanation

To include a component in an aggregate, the component type must have component information tasks defined in the component definition file (CDF).

Operator response

To include the component in the aggregate, do either of the following:

- Select another component type that has component information tasks.
- Contact the provider of the component definition file (CDF) and have the appropriate component information tasks added to the CDF.

IHS1245E	To define a connection, you must have two (and only two) components selected. Note: To select multiple components, hold down the Ctrl key.
-----------------	---

Explanation

To define a connection, you must first select two components before clicking the Connection button. To select multiple components, hold down the Ctrl key.

Operator response

To define a connection, follow these steps:

1. Select two components.
2. Click the Connection button.

IHS1246E	The <i>component</i> component, which is an instance of the <i>component type</i> component type, has no connection types defined as part of its business definition.
-----------------	--

Explanation

To define a connection between component types, the component types must have at least one connection type defined as part of their business definitions.

Message Variables

component
Component name

component type
Component type name

Operator response

Do the following:

1. Open the Component Type Properties window.

2. For real components, select the connection types that apply for this component type. For generic components, add the connection types that apply for this component.
3. Select the two components and then click the Connection button.

IHS1247E	A connection cannot be made between the selected components, because they have no connection types in common.
-----------------	--

Explanation

To make a connection between two components, the components must have a connection type in common.

Operator response

To add the connection, follow these steps:

1. For one of the components, open the Component Type Properties window.
2. Do one of the following:
 - For real components, in the Connections list select the connection types that apply for this component type.
 - For generic components, in the Connections list, click the Add button to add the connection types that apply for this component.
3. Select the two components and then click the Connection button.

IHS1248I	The connection <i>connection type name</i> between <i>resource name</i> and <i>resource name</i> in view <i>view name</i> has been deleted because it is no longer valid.
-----------------	--

Explanation

One of the endpoints of a connection no longer supports that connection type. The connection has been deleted from the view. When component type properties are changed, such as deleting or renaming a connection type associated with that component type, any connections of that type in that view are no longer valid and are automatically deleted.

Message Variables

connection type name
Name of the connection type

resource name
Name of the resource

view name
Name of the view

Operator response

If you want to restore the connection between the two component types, do either of the following:

- In the Business Component Properties window, specify the connection type.
- Redefine the connection with a valid connection type that is supported by the two component types.

IHS1249I **One or more resources have been changed to the Undefined Generic component type in the *view name* view.**

Explanation

A component type has been deleted. Resources defined with that component type are no longer valid and have been changed to the "Undefined generic" component type.

Message Variables

view name
Name of the view

Operator response

Do the following:

1. Open the Business Component Properties window for the resource identified with the "Undefined generic" component type.
2. Specify a new component type.

IHS1250W **User *username* has accessed Plan mode on the same Tivoli GEM server and may still be using it. If two people use Plan mode on the same Tivoli GEM server simultaneously, data might be lost. Select OK if you know that the above user is no longer using Plan mode. Select Read-only to use Plan mode in read-only mode.**

Explanation

According to the PlanMode.user file, another user currently has Plan mode open on the same Tivoli GEM server. When you open a view in Plan mode in read/write mode, your username is stored in the PlanMode.user file.

If two people use Plan mode on the same Tivoli GEM server simultaneously, changes might be overwritten and data might be lost.

To ensure that no data is lost, open Plan mode in read-only mode until you can verify that no one else has Plan mode open.

Message Variables

username
The name of the user in the following format:
username@hostname

Operator response

Do one of the following:

- If you are sure that the specified user is not using Plan mode, click the OK button to open this view with all editing controls enabled.
- Click the Read-only button to open this view with all editing controls disabled, in read-only mode. Then, if you need to make changes while in Plan mode, try to open this view again later.

IHS1251E **The aggregate *aggregate name* is empty, and it will not be exported.**

Explanation

The specified aggregate is empty. To export the aggregate to the Tivoli GEM server, you must have at least one real component in the aggregate.

Message Variables

aggregate name
The fully qualified name of the aggregate, including the names of all of its parents.

System action

Validation stops with an error.

Operator response

Do one of the following:

- Remove the aggregate.
- Add at least one component to the aggregate and then export the business system again.

IHS1252E **There are no components in this business system.**

Explanation

There are no components in the business system. To export the business system, at least one component must be defined.

System action

Validation stops with an error.

Operator response

Add at least one component to the business system and then export the business system again.

IHS1253E **There are no real components in this business system.**

Explanation

There are no real components in the business system. To export the business system to the Tivoli GEM server, you must define at least one real component.

System action

Validation stops with an error.

Operator response

Do the following:

1. Add at least one real component
2. Export the business system again.

IHS1254W **There are some generic components in this business system that will not be exported.**

Explanation

The business system contains generic components that will not be exported to the Tivoli GEM server. However, if you export the business system as a package file or to the Tivoli Module Designer, these generic components will be exported.

System action

Validation continues with a warning.

Operator response

Do one of the following:

- Click Ignore to ignore the warning message and export the business system.
- Click Cancel to cancel the export operation. If you want these components to be exported, convert them to real components and then export the business system again.

IHS1255W **The CDF file *CDF filename* has been changed on the Tivoli GEM server and may be inconsistent with the local version you are using.**

Explanation

The CDF file has been changed on the Tivoli GEM Server and might be inconsistent with the local version you are using. To include the latest information from the CDF file on the Tivoli GEM server, you must make

the corresponding changes in the component properties.

Message Variables

CDF filename

The CDF filename for the real component.

System action

Validation continues with a warning.

Operator response

Do the following:

- Select Ignore to continue exporting the current version of the business system.
- Make the appropriate changes to the component properties from the new CDF on the Tivoli GEM server.
- Export the business system again.

IHS1256E **The CDF file *CDF filename* does not exist.**

Explanation

The CDF file for a component in the business system is missing.

Message Variables

CDF filename

The CDF filename for the real component.

System action

Validation stops with an error.

Operator response

Do one of the following:

- Delete the component that uses that CDF and then export the business system again.
- Install the CDF for that component and then export the business system again.

IHS1257E **The CDF *CDF triplet* is used in multiple levels of aggregation.**

Explanation

The specified real component is used in multiple levels of aggregation. Components can only be used in one level of aggregation.

Message Variables

CDF triplet

The Manufacturer, Product and Version of the real component.

System action

Validation stops with an error.

Operator response

Do the following:

1. Delete the component from the multiple levels of aggregation.
2. Export the business system again.

IHS1258E	The generic component <i>generic component name</i> is used in multiple levels of aggregation.
-----------------	---

Explanation

The specified generic component is used in multiple levels of aggregation. Components can only be used in one level of aggregation.

Message Variables

generic component name

The name of the generic component.

System action

Validation stops with an error.

Operator response

Do the following:

1. Delete the component from the multiple levels of aggregation.
2. Export the business system again.

IHS1259W	There are no real components in this business system.
-----------------	--

Explanation

There are no real components in the business system. The business system can be exported as a package file or to the Tivoli Module Designer (TMD) for further definition.

Operator response

Click the Ignore button and continue with validation.

IHS1260E	The CDF file for the <i>component type</i> component type does not exist.
-----------------	--

Explanation

The CDF file for this component type cannot be found on the local GEM console computer. The business system will not be exported.

Message Variables

component type

Component type name

System action

The command is not issued.

System programmer response

Examine the NetView log for more details. The command issued can be trying to request a field in RODM that is not available for the resource selected. Correct the command in the server command response file and rerun CPEBATCH.

IHS1270E	A failure occurred on IBM Z NetView while executing a command. NetView message: <i>netviewmessage</i>
-----------------	--

Explanation

A command was executed on IBM Z NetView and an error message was returned.

Message Variables

netviewmessage

The Tivoli NetView host message that was generated.

System action

The topology server ends.

Operator response

For more information, enter HELP messagenumber on a host Tivoli NetView command line, where messagenumber is the message number in netviewmessage, or contact your system programmer.

System programmer response

For more information, enter HELP messagenumber on a host NetView command line, where messagenumber is the message number in netviewmessage.

IHS1271E	An error occurred retrieving a variable from RODM.
-----------------	---

Explanation

A command was issued that required information from RODM. Either RODM cannot be contacted, or the information requested does not exist in RODM.

Operator response

Do the following to export the business system:

1. Open the business system. All components of the specified component type are converted to undefined generic components.
2. Export the business system again.

IHS1272E **Too many Service Points are selected. Only one selection is allowed when the global wild card is specified.**

Explanation

The wild card "*"*.*)" was entered in the Host name or IP address field, and more than one service point was selected in the list. Only a single selection is allowed for this wild card. This is restricted because of performance considerations.

Operator response

Either specify a different host name or IP address, or only select a single service point in the list.

IHS1273E **Wild card characters are not supported for TN3270 Service Points. Deselect the TN3270 Service Points or do not use wild card characters.**

Explanation

Wild card characters are not supported by TN3270 Service Points.

Operator response

Either deselect the TN3270 Service Points, or specify the specific TCP/IP host name or IP address for which to collect IP connection data.

IHS1300W **This AMP has been previously loaded. To reload the AMP, all clients connected to the server must be resynchronized. Do you want to continue? Select Yes to continue. Select No to cancel the operation.**

Explanation

When you change an AMP and load the modified AMP, the clients connected to the server must be resynchronized. To synchronize the clients, no users can be logged on, so you might have to force users off of the clients.

System action

The system responds based on the operator's response.

Operator response

Do one of the following:

- Click the Yes button to synchronize the clients connected to the server. You are prompted for a message and time range to broadcast to all users requesting that they log off. Once the time range has expired, you can either force the users off of the clients or cancel your Load AMP request.
- Click the No button to cancel the operation.

IHS1301I **All clients are currently in the resynchronization process. No AMP can be loaded at this time.**

Explanation

A previous request to load an AMP occurred and the clients are currently being resynchronized. The AMP cannot be loaded during a resynchronization process.

System action

The AMP is not loaded.

Operator response

When the resynchronization process completes, load the AMP again.

IHS1302W **The server is currently resynchronizing. You can wait until the resynchronization process ends or cancel the sign on request. Click the Ok button to wait. Click the Cancel button to sign off.**

Explanation

You cannot sign on to the server during a resynchronization process.

System action

You are not signed on.

Operator response

Do one of the following:

- Click the Ok button to wait for the resynchronization process to complete and to sign on to the server.
- Click the Cancel button to sign off of the server and sign on at a later time.

IHS1401W **You must enter an integer in the field field**

Explanation

A non-integer was entered into the field.

Message Variables

field

The field in which to enter an integer.

System action

The request is not processed.

Operator response

Correct the value in the specified field.

IHS1402W **The text in the *field* field does not contain a valid IP Address or valid TCP Host Name.**

Explanation

An IP address cannot contain blanks or commas.

Message Variables

field

The field in which to enter the IP address or TCP host name of the resource.

System action

The request is not processed.

Operator response

Enter a valid IP address in the specified field.

IHS1403W **The text in the *field* field does not contain a valid IP Address.**

Explanation

An IP address cannot contain blanks or commas.

Message Variables

field

The field in which to enter the IP address of the resource.

System action

The request is not processed.

Operator response

Enter a valid IP address in the specified field.

IHS1404W **The value entered in the *field* field must be in the *Min* to *Max* range. Since you are not an Administrator, the max has been**

altered from the normal max allowed by Unix. You can change this max in DefaultScheme.properties. WARNING: Changing this max can potentially cause problems to your network.

Explanation

Unless you are an administrator, the value for the number of probes to be sent must be between 1 and the maximum value defined in the defaultscheme.properties file.

Note: Caution: This maximum value can be changed, but if it is set too high, this can cause serious problems to the network.

Message Variables

field

the number of Probes to be sent.

Min

will always be 1.

Max

a number between 1 and 20, as defined in the defaultscheme.properties file.

System action

The request is not processed.

Operator response

Enter a valid number between *Min* and *Max* or change the defaultscheme.properties file.

Caution: If the maximum is set too high in the defaultscheme.properties file, this can cause serious problems to the network.

IHS1410W ***CollectionType* collection "CollectionName" will be deleted. Are you sure?**

Explanation

You have requested to delete a collection; this message requests confirmation.

Message Variables

CollectionType

The type of collection: either View or Aggregate.

CollectionName

The name of collection to be deleted.

System action

The system responds based on the operator response.

Operator response

Do one of the following:

- Click the Yes button if you are sure you want to delete the collection.
- Click the No button if you do not want to delete the collection.

IHS1411W	Values must be greater than or equal to -2.
-----------------	--

Explanation

You have entered an exact value for a threshold that is less than -2; these values must be at least -2 or greater.

System action

Progression to the next panel is suspended until the value is corrected. The cursor is placed on the field in error.

Operator response

Enter a value that is at least -2 or greater.

IHS1412W	Percentage values must be between 0 and 100.
-----------------	---

Explanation

You have entered a percentage value that is not between 0 and 100.

System action

Progression to the next panel is suspended until the value is corrected. The cursor is placed on the field in error.

Operator response

Enter a value that is between 0 and 100.

IHS1413W	Values must not decrease as severities increase.
-----------------	---

Explanation

The threshold values must not decrease in number as severity increases. For example, if you have "exactly 1" set for the first severity value, and "exactly 2" set for the second severity value, you cannot set "exactly 1" for the third severity value as this is a decrease.

System action

Progression to the next panel is suspended until the value is corrected. The cursor is placed on the field in error.

Operator response

Correct the value.

IHS1414W	The collection must have a name.
-----------------	---

Explanation

The collection name field cannot be left blank; it must contain a name.

System action

Progression to the next panel is suspended until the value is corrected. The cursor is placed on the field in error.

Operator response

Enter a name for this collection.

IHS1415W	The collection name cannot contain spaces.
-----------------	---

Explanation

The collection name cannot contain space or other special characters; see the *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide* for specific object naming rules.

System action

Progression to the next panel is suspended until the value is corrected. The cursor is placed on the field in error.

Operator response

Correct the name so that it does not contain spaces.

IHS1416W	The host data set name cannot be blank.
-----------------	--

Explanation

When saving collection text in RODM loader format to the host, the specified data set name cannot be left blank.

System action

Progression to the next panel is suspended until the value is corrected.

Operator response

Correct the error. If you decide not to save the collection text to the host, uncheck the "Save to host data set" checkbox.

IHS1417W	At least one status must be selected. Select the "All" button to allow all statuses.
-----------------	---

Explanation

The "Selected" radio button is active, but no status values from the table have been selected. If you want to use individual statuses as opposed to all status values, at least one value from the table must be selected.

System action

Progression to the next panel is suspended until the value is corrected.

Operator response

Either choose All to ignore status as part of the collection criteria, or select at least one status value from the table.

IHS1418W	Changes will not be saved. Are you sure you want to cancel?
-----------------	--

Explanation

You have indicated that you want to cancel the collection that is currently open; this message requests confirmation.

System action

The system responds based on the operator response.

Operator response

Do one of the following:

- Click the Yes button if you are sure you want to cancel editing the collection.
- Click the No button if you do not want to cancel editing the collection.

IHS1419W	At least one type of object (other than the "Selection" types) must be chosen and moved over to the right side.
-----------------	--

Explanation

There are no object types to collect. The Selected Types/Names table is either empty or contains only "Selection" types of objects (for example, SNA Domain

Selection or IP Service Point Selection) that serve only to refine the search criteria for other objects.

System action

Progression to the next panel is suspended until the value is corrected.

Operator response

Choose at least one object type to collect by moving it from the Available Types table to the Selected Types/Names table. Alternatively, an object visible in a view can be dragged and dropped onto the area marked "Drag and drop individual resources here."

IHS1420W	Enter the name of the object (or objects, using pattern matching characters) to collect. Enter "ALL" to collect all objects of a particular type.
-----------------	--

Explanation

The Object name field has been left blank; it must contain a value.

System action

Progression to the next panel is suspended until the value is corrected.

Operator response

Enter the name of the object to be collected. If you want to collect all objects of this type, enter ALL into the field.

IHS1421I	Do you want this new collection to be represented as a View or as an Aggregate object? Views are visible in the console view tree. Aggregate objects eventually need to be included in a view to be visible.
-----------------	---

Explanation

This message is asking what type of collection to create. There are two types of collections:

View

Collections that are visible on the NetView management console console view tree, like all other networking views.

Aggregate

Collections that only exist in RODM, and do not become visible until they are included in a networking view or view collection.

System action

The system responds based on the operator response.

Operator response

Do one of the following:

- Click the View button to create a view collection.
- Click the Aggregate button to create an aggregate collection.
- Click the Cancel button to cancel creating this collection.

IHS1422W A collection with this name already exists. Overwrite it?

Explanation

You have specified that you want to create a collection, but a collection with this name and type already exists. You are being asked to confirm the decision to overwrite the existing collection.

System action

The system responds based on the operator response.

Operator response

Do one of the following:

- Click the Yes button to overwrite the collection.
- Click the No button to indicate that you do not want to overwrite the collection. You can then go back and change the collection name to one that does not exist.

IHS1423E The collection could not be sent to the host.

Explanation

The request to send the collection to the host has encountered a communication failure.

System action

The collection is not sent to the host.

Operator response

Check communication between the NetView management console client and the NetView management console server, and from the NetView management console server to NetView program. Ensure that GMFHS is available. Retry the request.

IHS1424E The collection text could not be saved. Host message: Message

Explanation

When attempting to save the collection in RODM loader format at the host, an error was encountered when accessing the requested host data set.

Message Variables

Message

The message as received from NetView program.

System action

The collection, in some circumstances, is sent to RODM, but the data set does not contain the RODM loader format data.

Operator response

See the NetView online help for the message and correct the problem.

IHS1425E Warning or error messages from FLCV2RCM were encountered when processing the collection request: Messages

Explanation

Collections are first sent to NetView to be processed by an Executable file, FLCV2RCM. That EXEC encountered warning or error messages while processing the collection. These messages are in the netlog of NetView program, and up to five of them are also available in this message box.

Message Variables

Messages

Up to the first five messages as issued by FLCV2RCM in the range of FLC003 and FLC178 through FLC187

System action

The collection might or might not have been added, based on the severity of the FLCV2RCM messages.

Operator response

Notify the system programmer.

System programmer response

Review the messages as logged in the netlog of NetView. Follow the procedures as described in this book for the messages received.

IHS1426E The collection could not be created. Error code from GMFHS: ReturnCode:GMFHSMessagesNumber

Explanation

GMFHS encountered an error when processing the collection.

Message Variables

ReturnCode

The return code associated with GMFHSMessagesNumber.

GMFHSMessagesNumber

The message number issued by GMFHS.

Note: If this value is 100, contact IBM Software Support.

System action

The collection definition object is created in RODM, but the collection creation object is not. The collection is not complete because either the collection is in error or a RODM processing error occurred.

Operator response

Notify the system programmer.

System programmer response

Follow procedures as described in this book for the message and return code received, unless the value for GMFHSMessagesNumber is 100. In that case, contact IBM Software Support.

IHS1427E	The collection could not be sent to the host due to a communications timeout.
-----------------	--

Explanation

The collection was sent to the NetView management console server, but a response was not received within the expected timeout period.

Operator response

Ensure that other NetView management console operations are still functioning. Retry the request.

IHS1428E	The collection could not be deleted due to a communications timeout.
-----------------	---

Explanation

The delete request was sent to the NetView management console server, but a response was not received within the expected timeout period.

Operator response

Ensure that other NetView management console operations are still functioning. Retry the request.

IHS1429E	The list of collections could not be retrieved due to a communications timeout.
-----------------	--

Explanation

The request for the collection was sent to the NetView management console server, but a response was not received within the expected timeout period.

Operator response

Ensure that other NetView management console operations are still functioning. Retry the request.

IHS1430E	The delete request could not be sent to the host.
-----------------	--

Explanation

The request to delete the collection encountered a communication failure.

Operator response

Ensure that GMFHS is available. Retry the request.

IHS1431E	The delete request could not be sent to the host.
-----------------	--

Explanation

The request to refresh the list of collections encountered a communication failure.

Operator response

Ensure that GMFHS is available. Retry the request.

IHS1432E	The entry field cannot contain the reserved sequence of characters, <i>sequence</i>.
-----------------	---

Explanation

The sequence of characters sequence are reserved for use by the RODM Collection Manager. The entry field cannot contain this sequence of characters.

Message Variables

sequence

The character string that was entered into an entry field.

System action

After the OK button is pushed on the message box, the entry field containing the sequence string is activated, enabling the character string to be replaced.

Operator response

Remove the sequence of characters sequence from the entry field and retry the request.

IHS1450W ***Name of Resource is an object of a SNA Topology Manager Class that is not supported when launching to TBSM from NMC.***

Explanation

There are 4 classes from the SNA Topology Manager Data Model that are not supported when launching from the NetView management console to Tivoli Business Service Manager. These classes are as follows:

- SNA Node
- T2-1Node
- SNA Local Topology (EN)
- SNA Local Topology (NN)

Message Variables

Name of Resource

The SNA Topology Manager resource object that is not supported.

System action

The resource is not displayed in Tivoli Business Service Manager.

IHS1451E ***An error occurred while attempting to display the resource in TBSM.***

Explanation

An error occurred in launching Tivoli Business Service Manager.

System action

The resource is not displayed in Tivoli Business Service Manager.

Operator response

Ensure that Tivoli Business Service Manager is installed. If the TBSMLaunch.data file does not fully qualify the command line to the program, add the appropriate Tivoli Business Service Manager directory to the PATH.

IHS1452E ***The Display ID of NMC and TBSM does not match. TBSM will not be launched.***

Explanation

This message only applies to UNIX environments. The NetView management console \$DISPLAY ID does not match Tivoli Business Service Manager.

System action

The resource is not displayed in Tivoli Business Service Manager.

Operator response

Change the NetView management console display ID to match that of the computer on which Tivoli Business Service Manager is installed.

IHS1453E ***There is an error on line *line number* in TBSMLaunch.dat. Launch will not proceed. Error code: *error code*. Refer to online help for code description.***

Explanation

There is an error on the *line number* indicated in this message which is located in the TBSMLaunch.dat file in the settings directory on the server.

Message Variables

line number

The line number, in the TBSMLaunch.dat file, on which the error occurred.

error code

This field can contain any of the following error codes:

- 1001 - Line did not contain a required KEY. Valid keys are:
 - PLATFORM
 - MIN_PORT
 - WAIT_TIME
 - RETRY_COUNT
 - PROGRAM_NAME
 - ROGRAM_DATA
- 1002 - The field on the *line number* indicated must contain an integer.
- 1003 - The *line number* indicated must contain a ":" delimiter between the key and the data of the key. For example: PLATFORM: Windows.
- 1004 - The data on the *line number* indicated is a blank. This field requires data.

- 1005 - An ambiguous problem exists on the *line number* indicated.

System action

The resource is not displayed in Tivoli Business Service Manager.

Operator response

Correct the data on the *line number* indicated in the TBSMLaunch.dat file.

IHS1454E **There is no definition for *operating system* Operating System in the launch. TBSM will not be launched.**

Explanation

An entry for the operating system on which you are running does not exist in the TBSMLaunch.dat file. The operating system name is case sensitive.

Message Variables

operating system

Name of operating system on which you are running.

System action

The resource is not displayed in Tivoli Business Service Manager.

Operator response

Add an entry for the operating system on which you are running or correct the syntax for your operating system in the TBSMLaunch.dat file.

IHS1455E **TBSM application can not be started.**

Explanation

The Tivoli Business Service Manager application cannot be started.

System action

Tivoli Business Service Manager is not launched.

Operator response

Ensure that the PROGRAM_NAME field in the TBSMLaunch.dat file is set correctly. The fully qualified path to the TBSMConsole.exe file must be either in the PATH or PROGRAM_NAME field.

IHS1456E **An error occurred during launch processing. TBSM will not be launched.**

Explanation

The Tivoli Business Service Manager launch failed during processing of the TBSMLaunch.dat file.

System action

Tivoli Business Service Manager is not launched.

Operator response

Check the TBSMLaunch.dat file for incorrect syntax.

IHS1457E **The ports specified in TBSMLaunch.dat cannot be acquired.**

Explanation

The ports specified in the TBSMLaunch.dat file cannot be acquired.

System action

Tivoli Business Service Manager is not launched.

IHS1500E **An error has occurred while processing a command request. Exit name: *exitName* Exit RC: *exitRC* Command: *command***

Explanation

An error occurred on the server while calling a command exit.

Message Variables

exitName

The name of the command exit.

exitRC

Return value from the exit invocation.

command

The text of the command.

System action

The command request is ignored.

Operator response

Contact your system programmer.

System programmer response

Save the server workstation error log file. Contact the Tivoli Support Center to check records of logged errors for more information.

IHS1501E **An error has occurred while processing a command request. The command exit was not installed. Exit name: *exitName* Exit RC: *exitRC* Command: *command***

Explanation

The command exit is not installed at the server workstation.

Message Variables

exitName

The name of the command exit.

exitRC

Return value from the exit invocation.

command

The text of the command.

System action

The command request is ignored.

Operator response

Contact your system programmer.

System programmer response

Install the program specified in the Exit name field of the selected command on the server workstation. The Exit name field is defined using the command profile editor.

IHS1502E **An error has occurred while processing a command request. The topology server was unable to communicate with IBM Z NetView. Exit name: *exitName* Exit RC: *exitRC* Command: *command***

Explanation

An error occurred for one of the following reasons:

- The required IP or LU 6.2 communication session between the server and the IBM Z NetView program is not active.
- IBM Z NetView is busy processing other requests.

Message Variables

exitName

The name of the command exit.

exitRC

Return value from the exit invocation.

command

The text of the command.

System action

The command request is ignored.

Operator response

If you cannot solve the problem, contact your system programmer.

System programmer response

Ensure that the IP or LU 6.2 communication session between IBM Z NetView and the server is started. If necessary, issue the NETCONV ACTION=START name command from IBM Z NetView to start the communication session.

IHS1503E **An error has occurred while processing a command request. The operator is no longer logged on to host IBM Z NetView. Exit name: *exitName* Exit RC: *exitRC* Command: *command***

Explanation

The command request cannot be verified for authorization because of one of the following reasons:

- The operator is not logged onto IBM Z NetView.
- The operator ID is not defined.
- The password or password phrase is not correct.
- The password or password phrase is expired.

Message Variables

exitName

The name of the command exit.

exitRC

Return value from the exit invocation.

command

The text of the command.

System action

The command request is ignored.

Operator response

If you are not currently logged on to the IBM Z NetView program, log on and retry the request.

If you are currently logged on to the IBM Z NetView program, correct the operator ID and password or password phrase.

IHS1504E	The command request could not be processed. A previous command request has not completed. Exit name: <i>exitName</i> Exit RC: <i>exitRC</i> Command: <i>command</i>
-----------------	--

Explanation

The command exit cannot complete this request because a prior request is still processing. The command exit might be waiting for a user action.

Message Variables

exitName

The name of the command exit.

exitRC

Return value from the exit invocation.

command

The text of the command.

System action

The command request is ignored.

Operator response

At the workstation where the command exit is running, complete the actions required by the command exit. These might include closing any active windows, completing entry fields, and others.

IHS1505E	An error has occurred while processing a command request. The operator is not authorized to use commands on NetView host. Exit name: <i>exitName</i> Exit RC: <i>exitRC</i> Command: <i>command</i>
-----------------	--

Explanation

The operator ID you specified in either the topology console Sign On window or the IBM Z NetView Sign On window is not authorized to use IBM Z NetView commands.

Message Variables

exitName

The name of the command exit.

exitRC

Return value from the exit invocation.

command

The text of the command.

System action

The command request is ignored.

Operator response

Ensure that the operator ID was entered correctly, or enter another operator ID that is authorized to use commands.

System programmer response

If the operator ID must have authorization for commands, change the NGMFCMDS keyword in the operator profile to YES.

IHS2000E	The topology server is ending due to an internal error. The databases will not be saved, therefore they may not reflect the latest changes.
-----------------	--

Explanation

The topology server is ending because of an internal error. The databases will not be saved, therefore they will not reflect the latest changes.

System action

The topology server ends.

Operator response

Contact your system programmer.

System programmer response

Collect the logs in \$BINDIR/TDS/Server/log. Restart the topology server processes. If the problem persists, contact IBM Software Support.

IHS2001W	Views from RODM are not supported. The level of IBM Z NetView is incompatible with the server.
-----------------	---

Explanation

A NETCONV command was issued from an incompatible version of the IBM Z NetView program and specified this workstation as the destination.

System action

The NETCONV session is still established, commands to IBM Z NetView are still allowed, and business views (instrumentation) can still be supported. However, views that are retrieved by GMFHS (Graphic Monitor Facility host subsystem) out of RODM (Resource Object Model) are not supported.

Operator response

Contact your system programmer.

System programmer response

If you need to display the views out of RODM, then install the correct version of the IBM Z NetView program. See the *IBM Z NetView Installation: Migration Guide* for information on migration.

IHS2002E The topology server is ending due to a missing DLL file.

Explanation

The topology server is ending because of a missing library.

Operator response

Check that the \$BINDIR/TDS/Server/bin directory is included in the PATH environment variable. Check this directory to ensure that the DLL is in this directory.

System programmer response

If the problem persists, contact IBM Software Support.

IHS2003E The topology server is already active. Only one instance of the server is allowed. This instance of the topology server will end.

Explanation

You can only start one instance of the topology server at a time.

System action

This instance of the topology server ends.

Operator response

Contact your system programmer.

Operator response

If you want to restart the server, stop the current instance of the server, then restart. Otherwise, no action is required.

IHS2020E Corrupt datab databases detected. Restoring from the backup databases.

Explanation

The current database was corrupted.

System action

The backup database is copied to the current database and initialization continues.

Operator response

If the topology server initializes, no additional action is needed.

System programmer response

Determine the cause of database corruption. Possible causes are:

- A server trap
- Out of disk space during server termination
- Files deleted from the database.

If the backup databases are also corrupted, stop the server, erase the backup databases, and then restart the server using the default databases.

IHS2021E The topology server is ending due to an internal error. The databases will not be saved, therefore they may not reflect the latest changes.

Explanation

These errors are usually caused by a failure associated with the execution of a system function that is unrecoverable. The topology server is unable to save the databases because of this error. Therefore, any changes that have been made since the topology server was last started might be lost.

System action

The topology server process ends. It does not write the databases out to disk. Therefore, updates, such as added resources and customization, might be lost.

Operator response

Contact your system programmer.

System programmer response

Stop the remaining server processes, then restart the topology server.

IHS2022E The topology server is ending due to insufficient available threads. The maximum number of threads has been started.

Explanation

The topology server allows a maximum of 64 threads to run concurrently. The maximum number is already

running. This error might be the result of an earlier error which has prevented previously started threads from terminating.

System action

The topology server process ends. All databases are written to disk before termination.

Operator response

Contact your system programmer.

System programmer response

Restart the topology server daemon. If the problem persists, contact IBM Software Support.

IHS2023E	The topology server is ending due to insufficient memory. Free or add memory in the system, then restart the topology server.
-----------------	--

Explanation

The topology server tried to obtain (malloc) storage but was unable to.

System action

The topology server process ends. All databases are written to disk before termination.

Operator response

Contact your system programmer.

System programmer response

Do the following:

1. Increase the amount of swapping or paging space on the system.
2. Add more memory, if possible.
3. Restart the topology server. If the problem persists, contact IBM Software Support.

IHS2025E	The topology server cannot continue due to insufficient memory.
-----------------	--

Explanation

The system has a resource shortage, either with swapping, paging space, or physical memory.

System action

The server process ends.

Operator response

Contact your system programmer.

System programmer response

Do the following:

1. Add more swapping or paging space to the system.
2. Add more physical memory, if possible.
3. Restart the topology server. If the problem persists, contact IBM Software Support.

IHS2026E	Corrupt backup databases detected. Restoring from the default databases.
-----------------	---

Explanation

The backup databases are corrupted. The databases are located in one of the following directories:

- Intel: %BINDIR%\TDS\server\db\backup\datab
- UNIX: \$BINDIR/TDS/server/db/backup/datab

System action

The default database is copied to the current database and initialization continues.

Operator response

If the server initializes satisfactorily, no additional action is needed.

System programmer response

Determine the cause of the database corruption. Possible causes are:

- A server trap
- Out of disk space during server termination
- Files deleted from the database.

Erase the backup databases and restart the server using the default databases.

IHS2027E	The topology server cannot continue due to insufficient disk space. The topology server will terminate.
-----------------	--

Explanation

One of the disks used by the topology server is full.

System action

The topology server process will end.

Operator response

Contact your system programmer.

System programmer response

Do the following:

- 1. Add more space to the file system, if possible.
- 2. If the disk that is full contains the topology server databases and additional space cannot be added to the drive or file system, move the topology server databases to a new disk and filesystem by copying all files and directories below and including \$BINDIR/TDS/Server/db to the new disk. Set the topology_DB environment variable to the new location. Also make sure you update the \$BINDIR/TDS/Server/bin/tserver.sh file.
- 3. Restart the topology server.

IHS2028E	The workstation has received information that is not valid from the host.
-----------------	--

Explanation

Data was received that did not contain valid header information. The topology server does not understand how to process the data. The data will be written to the error log and then discarded.

System action

The data is written to the topology server error log and then discarded.

Operator response

Contact your system programmer.

System programmer response

If the problem persists, stop and restart the topology server. If this does not correct the problem, contact IBM Software Support.

IHS2030W	An incompatible version of IBM Z NetView has attempted to establish a session to the topology server. The data sent over this connection is ignored.
-----------------	---

Explanation

A NETCONV command was issued from an incompatible version of the IBM Z NetView program and specified this workstation as the destination.

System action

The data sent over this connection is ignored.

Operator response

Contact your system programmer.

System programmer response

Install the correct version of the IBM Z NetView program. This workstation cannot communicate with down-level versions of IBM Z NetView. See the *IBM Z NetView Installation: Migration Guide* for information on migration.

IHS2032W	The session between topology server and host NetView program had ended. Contact your system programmer responsible for the topology server.
-----------------	--

Explanation

The communications session between IBM Z NetView and the topology server has ended. The reason is unknown.

System action

The topology server continues to run, but is unable to send commands to IBM Z NetView or to query information.

Operator response

Contact your system programmer.

System programmer response

Restart the connection between host IBM Z NetView and the topology server by issuing the NetView NETCONV command. If the connection continues to fail, contact IBM Software Support. The topology server error and message logs might provide additional information.

IHS2035E	No backup databases found. Restoring from the default databases.
-----------------	---

Explanation

The backup database was empty or missing files.

System action

The default database is copied to the current database and initialization continues.

Operator response

If the server initializes, no additional action is needed.

System programmer response

Determine why the backup database files were not found. The most likely reason is that files in the backup directory were deleted.

IHS2037E	The topology server is ending due to missing subdirectories. Contact the system programmer responsible for the topology server.
-----------------	--

Explanation

The topology server is dependent on a specific directory structure below \$BINDIR/TDS/Server/db. This structure does not exist, so specific files such as databases, icons, help, backgrounds, and BDF and CDF files might be missing.

System action

The topology server ends.

Operator response

Contact your system programmer.

System programmer response

This problem is generally the result of directories missing below \$BINDIR/TDS/Server/db. Restore the missing subdirectories and restart the topology server.

IHS2038E	The topology server is ending due to missing default databases. Contact your system programmer responsible for the topology server.
-----------------	--

Explanation

The topology server cannot find databases under the current or backup subdirectories, so it is looking for databases under the default subdirectory. The topology server must have a set of databases to start. The default databases under \$BINDIR/TDS/server/db/default/datab (UNIX) or %BINDIR%/TDS/server/db/default/datab (Intel) are shipped with the product, but have either been erased or are inaccessible because of directory permissions.

System action

The topology server ends.

Operator response

Contact your system programmer.

System programmer response

Restore the default databases in directory \$BINDIR/TDS/Server/db/default/datab, then restart the topology server.

IHS2042E	IHS2042E: The topology server is ending due to a failure copying databases. Contact your system programmer responsible for the topology server.
-----------------	--

Explanation

The topology server was writing data to its database when a write action failed. The specific write action that failed is written to the topology error log.

System action

The topology server ends.

Operator response

Contact your system programmer.

System programmer response

Do the following:

1. Ensure that there is sufficient disk space and proper permissions on the \$BINDIR/TDS/Server/db directory and subdirectories.
2. Restart the topology server.
3. If the problem persists, contact your Tivoli Support Center.

IHS2048E	The topology server cannot initialize because the databases are being accessed by another process. The topology server will end.
-----------------	---

Explanation

Only one process can access the topology databases at a time. Another process, possibly another instance of the topology server, has the databases open.

System action

The topology server process ends.

Operator response

Contact your system programmer.

System programmer response

If the topology server is currently running, you will need to stop it before another image can be started. If the topology server is not running, do the following:

- UNIX: Run `tserver stop -f` twice, then restart the server.
- Intel: Use the Task Manager to check that no topology server processes or command exits are running. If they are, stop them, then restart the server.

If the problem persists, reboot the computer. If this does not correct the problem, contact IBM Software Support.

IHS2049E	The topology server is ending due to an error accessing a database. The databases will not be saved, therefore they may not reflect the latest changes.
-----------------	--

Explanation

The topology server was trying to either read from or write to a database when the action failed.

System action

The topology server ends.

Operator response

Contact your system programmer.

System programmer response

Restart the topology server. If the error persists, then contact IBM Software Support.

IHS2053E	Objects required to create <i>view</i> are in error. Contact your system programmer responsible for RODM.
-----------------	--

Explanation

The view cannot be created because an error was detected in a Resource Object Data Manager (RODM) class, object, or attribute specification.

Message Variables

view
The view name.

System action

The view is not created.

Operator response

Record the view name from the message window. Contact your system programmer responsible for RODM.

System programmer response

Check the IBM Z NetView Graphic Monitor Facility host subsystem (GMFHS) and RODM logs for specific information about which class, object, or attribute is not correctly specified. Correct the RODM definition error.

IHS2056E	The host reported an error while processing a request from the topology server. Information may not be correct at the workstation. Contact your system programmer responsible for RODM.
-----------------	--

Explanation

The host cannot fully process a request from the topology server. The information presented at the workstation might not be accurate.

System action

The topology server continues.

Operator response

Contact your system programmer responsible for RODM.

System programmer response

Check the IBM Z NetView Graphic Monitor Facility host subsystem (GMFHS) and RODM logs for specific information about the error. Once the error has been corrected, recycle the connection to the topology server that reported the error.

IHS2057W	The host detected view names that were not valid while processing a request from the topology server. Contact your system programmer responsible for RODM.
-----------------	---

Explanation

- There are two possible causes for this message:
- The host detected network or exception view names that were the same except for case. All except the first were discarded.
 - The host detected a network or exception view name that is longer than 32 characters.

System action

The topology server continues.

Operator response

Contact your system programmer responsible for RODM.

System programmer response

Check the RODM log for specific information about the error. Once the error has been corrected, recycle the connection to the topology server that reported the error.

IHS2058W	The resource does not support this view request.
-----------------	---

Explanation

The IBM Z NetView Graphic Monitor Facility host subsystem (GMFHS) cannot create a view for the view request on a particular resource.

The Resource Object Data Manager (RODM) class definition for a resource does not include the requested view type.

System action

The topology server continues.

Operator response

Contact your system programmer.

System programmer response

Check the GMFHS and RODM logs for specific information about which class, object, or attribute caused the problem.

To support the view type, add the appropriate VIO to the RODM definition. If necessary, correct the RODM definition error.

IHS2067W	An error has occurred while sending a command request to the topology server. Command: <i>command</i> Resource: <i>resource</i> Exit RC: <i>exitRC</i> Exit Parms: <i>exit parameters</i>
-----------------	--

Explanation

An error occurred on the server while calling a command exit.

Message Variables

command

The selected command.

resource

The name of the selected resource or None, if a resource was not required to be selected for the command.

exitRC

Return value from IhsiSend function call.

exit parameters

Key value pairs displaying the fields from the EGVE_PARAMETERS32 structure in ihsixit.h.

System action

The command request is ignored.

Operator response

Contact your system programmer.

System programmer response

Save the server workstation error log file. Contact the Tivoli Support Center to check records of logged errors for more information.

IHS2068I	An error has occurred while processing a command request. Necessary system resources were not available for command exit execution. Command: <i>command</i> Resource: <i>resource</i> Exit RC: <i>exitRC</i> Exit Parms: <i>exit parameters</i>
-----------------	--

Explanation

A command request cannot be processed because of inadequate system resources, such as memory or disk space, at the command exit workstation.

Message Variables

command

The selected command.

resource

The name of the selected resource or None, if a resource was not required to be selected for the command.

exitRC

Return values from IhsiSend function call.

exit parameters

Key value pairs displaying the fields from the EGVE_PARAMETERS32 structure in ihsixit.h.

System action

The command request is ignored.

Operator response

At the server workstation, do one or more of the following:

- Close unnecessary views to free system resources.
- Close unnecessary applications to free system resources.
- Check the amount of free disk space of the paging file.
- If necessary, free disk space by deleting files that are no longer required.
- If necessary, install more workstation memory.

Then retry the request. If you cannot solve the problem, contact your system programmer.

System programmer response

Save the server workstation error log file. Contact the Tivoli Support Center to check records of logged errors for more information.

IHS2069W	An error has occurred while processing a command request. The command exit was not installed. Command: <i>command</i> Resource: <i>resource</i> Exit RC: <i>exitRC</i> Exit Parms: <i>exit parameters</i>
-----------------	--

Explanation

The command exit is not installed at the server workstation.

Message Variables

command

The selected command.

resource

The name of the selected resource or None, if a resource was not required to be selected for the command.

exitRC

Return values from IhsiSend function call.

exit parameters

Key value pairs displaying the fields from the EGVE_PARAMETERS32 structure in ihsixit.h.

System action

The command request is ignored.

Operator response

Contact your system programmer.

System programmer response

Install the program specified in the Exit name field of the selected command on the server workstation. The Exit name field is defined using the command profile editor.

IHS2070W	An error has occurred while processing a command request. The topology server was unable to communicate with the NetView program. Command: <i>command</i> Resource: <i>resource</i> Exit RC: <i>exitRC</i> Exit Parms: <i>exit parameters</i>
-----------------	--

Explanation

An error occurred for one of the following reasons:

- The required IP or LU 6.2 communication session between the server and the IBM Z NetView program is not active.
- IBM Z NetView is busy processing other requests.

Message Variables

command

The selected command.

resource

The name of the selected resource or None, if a resource was not required to be selected for the command.

exitRC

Return values from IhsiSend function call.

exit parameters

Key value pairs displaying the fields from the EGVE_PARAMETERS32 structure in ihsixit.h.

System action

The command request is ignored.

Operator response

If you cannot solve the problem, contact your system programmer.

System programmer response

Ensure that the IP or LU 6.2 communication session between IBM Z NetView and the server is started. If necessary, issue the NETCONV ACTION=START name command from IBM Z NetView to start the communication session.

IHS2071W	An error has occurred while processing a command request. No domains were found for the resource. Command: <i>command</i>
-----------------	--

Resource: *resource* **Exit RC:** *exitRC*
Exit Parms: *exit parameters*

Explanation

resource was not found in any NetView domain. For resources managed by the SNA topology manager, this can occur when translating the SSCP names that have reported this resource into a NetView domain name. This can happen if:

1. Task DSI6DST is not active in the IBM Z NetView that resides at the SSCP node.
2. The PPI is not active in the IBM Z NetView that resides at the SSCP node.
3. The NetView program is not using VTAMCP USE=YES in DSIDMN in the IBM Z NetView that resides at the SSCP node.

Message Variables

command

The selected command.

resource

The name of the selected resource or None, if a resource was not required to be selected for the command.

exitRC

Return values from IhsiSend function call.

exit parameters

Key value pairs displaying the fields from the EGVE_PARAMETERS32 structure in ihsixit.h.

System action

The command request is ignored.

Operator response

Contact your system programmer.

System programmer response

It might be necessary to start the DSI6DST or the PPI task at the remote NetView program or code VTAMCP USE=YES in DSIDMN at the remote NetView program.

IHS2072W	An error has occurred while processing a command request. The operator is no longer logged on to host NetView. Command: <i>command</i> Resource: <i>resource</i> Exit RC: <i>exitRC</i> Exit Parms: <i>exit parameters</i>
-----------------	---

Explanation

The command request cannot be verified for authorization because of one of the following reasons:

- The operator is not logged onto IBM Z NetView.
- The operator ID is not defined.
- The password or password phrase is not correct.
- The password or password phrase is expired.

Message Variables

command

The selected command.

resource

The name of the selected resource or None, if a resource was not required to be selected for the command.

exitRC

Return values from IhsiSend function call.

exit parameters

Key value pairs displaying the fields from the EGVE_PARAMETERS32 structure in ihsixit.h.

System action

The command request is ignored.

Operator response

If you are not currently logged on to the NetView program, log on and retry the request.

If you are currently logged on to the NetView program, correct the operator ID and password or password phrase.

IHS2073W	An error has occurred while processing a command request. The command string does not represent a valid command. Command: <i>command</i> Resource: <i>resource</i> Exit RC: <i>exitRC</i> Exit Parms: <i>exit parameters</i>
-----------------	---

Explanation

The command string is not a valid command.

Message Variables

command

The selected command.

resource

The name of the selected resource or None, if a resource was not required to be selected for the command.

exitRC

Return values from IhsiSend function call.

exit parameters

Key value pairs displaying the fields from the EGVE_PARAMETERS32 structure in ihsixit.h.

System action

The command request is ignored.

Operator response

Correct the command string if it is one you entered yourself. If not, contact your system programmer.

System programmer response

Use the command profile editor to correct the command string, if necessary.

IHS2074W **The command request for resource *resource* could not be processed. A previous *command* request has not completed.**

Explanation

The command exit cannot complete this request because a prior request is still processing. The command exit might be waiting for a user action.

Message Variables

command

The selected command.

resource

The name of the selected resource or None, if a resource was not required to be selected for the command.

System action

The command request is ignored.

Operator response

At the workstation where the command exit is running, complete the actions required by the command exit. These can include closing any active windows, completing entry fields, and others.

IHS2075W **The command exit detected an error or inconsistency while validating the command exit data. Command: *command* Resource: *resource* Exit RC: *exitRC* Exit Parms: *exit parameters***

Explanation

The data passed to the command exit was either not valid or was not consistent with the exit's requirements. The command request cannot be processed.

The most probable cause is that the command definition is not correctly specified. When the command exit is driven, data necessary for proper

operation is not available. Some possible definition errors are:

- A command exit expects to receive control information in the command string field, but the command definition has left the field empty.
- A command exit expects to receive information about a specific resource, but the command definition specifies a command enablement attribute of Resource independent.

Another possible reason for this error is that you issued the command against an aggregate resource, but the command you issued does not support aggregates.

Message Variables

command

The selected command.

resource

The name of the selected resource or None, if a resource was not required to be selected for the command.

exitRC

Return values from IhsiSend function call.

exit parameters

Key value pairs displaying the fields from the EGVE_PARAMETERS32 structure in ihsexit.h.

System action

The command request is ignored.

Operator response

Contact your system programmer.

System programmer response

Use the command profile editor to correct the command definition, if necessary.

IHS2076W **An error has occurred while processing a command request. The return code is in the user specified range. Command: *command* Resource: *resource* Exit RC: *exitRC* Exit Parms: *exit parameters***

Explanation

A command exit returned a return code from the IhsiSend API in the user-specified range. This range is defined in the ihsexit.h header file.

Message Variables

command

The selected command.

resource

The name of the selected resource or None, if a resource was not required to be selected for the command.

exitRC

Return values from IhsiSend function call.

exit parameters

Key value pairs displaying the fields from the EGVE_PARAMETERS32 structure in ihsiexit.h.

System action

The command request is ignored.

Operator response

Contact your system programmer.

System programmer response

Contact the provider of the command exit.

IHS2077W **An error has occurred while processing a command request. The operator is not authorized to use commands on NetView host. Command: *command* Resource: *resource* Exit RC: *exitRC* Exit Parms: *exit parameters***

Explanation

The operator ID you specified in either the topology console Sign On window or the IBM Z NetView Sign On window is not authorized to use IBM Z NetView commands.

Message Variables**command**

The selected command.

resource

The name of the selected resource or None, if a resource was not required to be selected for the command.

exitRC

Return values from IhsiSend function call.

exit parameters

Key value pairs displaying the fields from the EGVE_PARAMETERS32 structure in ihsiexit.h.

System action

The command request is ignored.

Operator response

Make sure that you entered the operator ID correctly, or enter another operator ID that is authorized to use commands.

System programmer response

If the operator ID must have authorization for commands, change the NGMFCMDS keyword in the operator profile to YES.

IHS2078E **Unable to sign on to IBM Z NetView. User name '*username*' is not authorized to use administration functions.**

Explanation

The specified user name is not authorized to perform administration functions.

Message Variables**username**

The user name you entered. It can be blank if no user name was entered.

System action

The IBM Z NetView Sign On Window displays again.

Operator response

If you do not want to perform administration, do the following:

1. Select the Cancel button.
2. Sign off the console
3. Sign on again, but this time deselect Administrator access in the Sign On window.

If you want to perform administration, make sure that you entered the name correctly, or enter another name that is authorized to use administration functions.

If the problem recurs, contact your system programmer or the person in your organization responsible for IBM Z NetView security administration.

System programmer response

If the operator ID must have authorization for administration functions, change the NGMFADMN keyword in the operator profile to YES.

IHS2079E **Unable to sign on to IBM Z NetView. User name *username* is not authorized to use IBM Z NetView.**

Explanation

The specified user name is not authorized to sign on to IBM Z NetView for one of the following reasons:

- The user name is not defined.
- The password or password phrase is not correct.
- The password or password phrase has expired.

System action

The IBM Z NetView Sign On Window displays again.

Operator response

Make sure that you entered the user name and password or password phrase correctly, then try to sign on again.

IHS2080E Topology server internal error.

Explanation

An internal error occurred in the topology server.

Operator response

Contact your system programmer.

System programmer response

Contact IBM Software Support.

IHS2081E Unable to sign on to IBM Z NetView. User name *username* is not logged onto IBM Z NetView.

Explanation

You cannot sign on because you are not currently logged on to IBM Z NetView. You must be logged onto IBM Z NetView so that the topology server can send commands from the console to IBM Z NetView for execution.

Message Variables

username
The user name you entered.

System action

The IBM Z NetView Sign On Window displays again.

Operator response

Log on to IBM Z NetView and try to sign on again.

System programmer response

If you want IBM Z NetView to automatically log on this user name, use the AUTOLOGN parameter of the IBM Z NetView DEFAULTS command.

IHS2082W An error has occurred while processing a command request. The IBM Z NetView domain ID is syntactically incorrect. Command: *command* Resource: *resource* Exit RC: *exitRC* Exit Parms: *exit parameters*

Explanation

The NetView domain ID contains incorrect syntax. The domain ID must meet the following criteria.

- It must be between 1 and 5 characters in length.
- The first character must be alphabetic (either upper or lower case) or one of the following national characters: @ # \$.
- The remaining characters (second through fifth) must be alphabetic (either upper or lower case), numeric, or one of the following national characters: @ # \$.

Message Variables

command
The selected command.

resource
The name of the selected resource or None, if a resource was not required to be selected for the command.

exitRC
Return values from IhsiSend function call.

exit parameters
Key value pairs displaying the fields from the EGVE_PARAMETERS32 structure in ihsixit.h.

System action

The command request is ignored.

Operator response

Correct the domain ID and retry.

IHS2083E Database checkpoint failed. Databases may be corrupt.

Explanation

An error occurred during the database checkpoint process. The checkpoint cannot be completed.

System action

The topology server ends.

Operator response

Restart the server to restore from the backup databases.

IHS2128E ***correlator Error code locating command response for command.***

Explanation

The topology server was unable to locate the command response for a topology server command.

Message Variables***correlator***

A code that corresponds to the previous informational message.

code

The command error code.

command

The command for which no response was located.

Operator response

Contact your system programmer.

System programmer response

Contact IBM Software Support.

IHS2129E ***correlator Error code issuing command command.***

Explanation

An error was received while attempting to issue an topology server command.

Message Variables***correlator***

A code that corresponds to the previous informational message.

code

The command error code.

command

The issued command.

Operator response

Contact your system programmer.

System programmer response

If you cannot correct the problem, contact IBM Software Support.

IHS2130E ***correlator Error code waiting for command response for command.***

Explanation

An error was encountered while waiting for a command response.

Message Variables***correlator***

A code that corresponds to the previous informational message.

code

The command error code.

command

The command for which a response is expected.

Operator response

Contact your system programmer.

System programmer response

Contact IBM Software Support.

IHS2131E ***Incorrect discover connections response.***

Explanation

An incorrect response was received from an discover connections task issued by the topology server.

Operator response

Contact your system programmer.

System programmer response

Contact the support group responsible for the instrumentation of the application.

IHS2132I ***Deleting non-reported connection name.***

Explanation

A connection that was previously reported for this component was not reported in the discover connections response and will be deleted.

Message Variables***name***

The name of the connection that was not reported.

IHS2133I ***The server must be run under a user ID that has 'Act as part of the operating system' user right. The server is ending.***

Explanation

'Act as part of the operating system' user rights are not assigned to the NT user account under which the server runs.

System action

The server ends.

Operator response

Contact your NT system administrator responsible for user accounts.

System programmer response

See the *IBM Z NetView Installation: Getting Started* for information on installing the topology server on an NT system. You must grant specific user rights to the account where the server is run.

IHS2134E	Unknown event class received class.
-----------------	--

Explanation

An unknown event was received.

Message Variables

class

The name of the event class that was received.

Operator response

Contact your system programmer.

System programmer response

Investigate to determine whether the instrumentation is sending the correct information event class.

IHS2135E	The server detected an installation error: <i>rc</i>.
-----------------	--

Explanation

The server detected a corrupted file during initialization.

Message Variables

Description of message variables, if any.

rc

The server internal return code.

System action

The server ends.

Operator response

Contact your system programmer.

System programmer response

Reinstall the server.

IHS2152I	Waiting up to <i>number</i> seconds for <i>command_exit</i> to terminate.
-----------------	--

System action

The topology server will eventually end.

IHS2164E	The topology server is ending due to an internal error. The resource type database has been corrupted. It appears that BDF or CDF files have been deleted or modified.
-----------------	---

Explanation

The current set of description files is missing data that the server needs to initialize properly. The server cannot start.

System action

The topology server ends.

Operator response

Do one of the following:

- Replace the old set of description files.
- Erase the current and backup server databases and restart.

IHS2165E	No <i>missingCompType</i> was found below <i>lastDescFile</i> in the description file hierarchy. Component ID Group information: Manufacturer: <i>manufacturer</i> Product: <i>product</i> Version: <i>version</i> Component Type:<i>lastCompType</i>
-----------------	--

Explanation

The topology server has found an incomplete branch in the tree. The information expected to be in the missing M;P;V triplet is displayed.

Message Variables

missingCompType

Component type that is missing

lastDescFile

Filename of the description file with missing component type

manufacturer

Manufacturer of missing component type

product

Product of missing component type

version

Version of missing component type

lastCompType

Component type of the description file with missing component type

Below are the possible combinations of *lastDescFile* type and *missingCompType*:

For Business systems only:

- *lastDescFile* = business system description file
- *missingCompType* = business subsystem component type

For Business systems only:

- *lastDescFile* = business subsystem description file
missingCompType = business subsystem component type
- *missingCompType* = business component component type

The first two are for business systems only because applications, databases and middleware do not have subsystems.

For applications, databases middleware systems only

lastDescFile = business system description file

missingCompType = business component component type

The next pairs can apply to any of the types of software systems:

- – *lastDescFile* = business subsystem description file
- *missingCompType* = business component component type

lastDescFile = business component description file

missingCompType = business mapping component type

lastDescFile = business mapping description file

missingCompType = software component component type

You will not see this combination because GDFs are optional: *lastDescFile* = component description file
missingCompType = application component type

System action

The topology server continues with missing information.

Operator response

Do the following:

1. Check the description files for a missing or incorrect file and correct the problem.
2. Restart the server.
3. If the server restarts with no errors and information is still missing, erase the server databases and restart the server. Erasing the databases will cause you to lose any customization you might have done. For that reason, create a backup prior to erasing the databases so that you can restore them if the problem persists.

IHS2166W

Unable to find match for relationship in CDF file.
Relationship type: *relationship type* **Direction:** *relationship direction* **Mapping file:** *BDF filename* **Component file:** *CDF filename*

Explanation

The topology server cannot find the specified relationship (found in a mapping or business component file) in the CDF.

Message Variables**relationship type**

The relationship type name specified in the BDF.

relationship direction

The relationship direction specified in the BDF.

BDF filename

Filename of the BDF that the relationship is referenced.

CDF filename

Filename of the CDF that is referenced by the specified BDF.

System action

The topology server continues with missing information.

Operator response

Do the following:

1. Check the description files for a missing or incorrect group descriptions and correct the problem.
2. Restart the server.
3. If the server restarts with no errors and information is still missing, erase the server databases and restart the server. Erasing the databases will cause you to lose any customization you might have done.

For that reason, create a backup prior to erasing the databases so that you can restore them if the problem persists.

IHS2167W **Unable to find match for task *task name* in CDF file. Mapping file: *BDF filename* Component file: *CDF filename***

Explanation

The topology server cannot find the specified task (found in a mapping or business component file) in the CDF.

Message Variables

task name

Name of task that was not found in CDF.

BDF filename

Filename of the BDF that specified or tried to map the specified task.

CDF filename

Filename of the CDF that is referenced by the specified BDF.

System action

The topology server continues with missing information.

Operator response

Do the following:

1. Check the description files for a missing or incorrect task and correct the problem.
2. Restart the server.
3. If the server restarts with no errors and information is still missing, erase the server databases and restart the server. Erasing the databases will cause you to lose any customization you might have done. For that reason, create a backup prior to erasing the databases so that you can restore them if the problem persists.

IHS2168W **Unable to find match for monitor *name* instance *instance* in component file. Mapping file: *BDF filename* Component file: *CDF filename***

Explanation

The topology server cannot find the specified monitor (found in a Mapping or Business Component file) in the CDF.

Message Variables

name

Name of the monitor that was not found in CDF.

instance

Monitor instance value of the monitor that was not found. If this instance value if 0 it represents an Asynchronous Monitor, any other value indicates a Synchronous Monitor Instance.

BDF filename

Filename of the BDF that specified or tried to map the specified monitor.

CDF filename

Filename of the CDF that is referenced by the specified BDF.

System action

The topology server continues with missing information.

Operator response

Do the following:

1. Check the description files for a missing or incorrect monitor and correct the problem.
2. Restart the server.
3. If the server restarts with no errors and information is still missing, erase the server databases and restart the server. Erasing the databases will cause you to lose any customization you might have done. For that reason, create a backup prior to erasing the databases so that you can restore them if the problem persists.

IHS2169E **Internal error message in file *filename*.**

Explanation

An internal error occurred during processing of the specified file. The error message will indicate the problem.

Message Variables

message

Message indicating problem.

filename

Filename of BDF or CDF being processed at the time of the error.

System action

The topology server continues with missing information.

Operator response

Do the following:

1. Check for available system resources, memory, and disk space, and correct the problem.
2. Restart the server.
3. If the server restarts with no errors and information is still missing, erase the server databases and restart the server. Erasing the databases will cause you to lose any customization you might have done. For that reason, create a backup prior to erasing the databases so that you can restore them if the problem persists.
4. If the problem recurs, contact IBM Software Support.

IHS2171I **No information found for group *group* in file *filename*.**

Explanation

The topology server cannot find a group description, or a table, for the specified group. The group is not a required group, so this does not necessarily indicate an error. Some groups that the topology server uses are optional. For example, groups like the Icon and Help groups provide additional information to make the product more usable. Specifying monitors or connections for a business system is also optional. If information appears to be missing on the topology console, a missing or improperly defined group might be the problem. If the desired group must be present, corrective action is needed.

Message Variables

group

Name of group in description file.

file name

File name of BDF or CDF with missing group information.

System action

The topology server continues.

Operator response

Do the following, if necessary:

1. Check the description files for missing information and correct the problem, if desired.
2. Restart the server.
3. If the server restarts with no errors and information is still missing, erase the server databases and restart the server. Erasing the databases will cause you to lose any customization you might have done. For that reason, create a backup prior to erasing the databases so that you can restore them if the problem persists.

IHS2172W **No synchronous monitor group information was found. Insufficient data to create monitors.**

Explanation

A synchronous monitor instance group was defined, but the topology server cannot find a synchronous monitor group or table. The monitor instances cannot be properly created. The next message will indicate the file in which the error was found. The topology server uses synchronous monitor instances as specified in the AMS (Application Management Specification). In order to create these instances it needs to correlate information from the synchronous monitor instance group, which specifies monitor instances, and the synchronous monitor group, which contains a base template of information. If a monitor name specified in a monitor instance is not included in the synchronous monitor group, the topology server does not have sufficient information available to use the monitor.

System action

The topology server continues with missing information.

Operator response

Do the following:

1. Correct or replace the file in which the error was found.
2. Restart the server.
3. If the server restarts with no errors and information is still missing, erase the server databases and restart the server. Erasing the databases will cause you to lose any customization you might have done. For that reason, create a backup prior to erasing the databases so that you can restore them if the problem persists.

IHS2173E **Internal error parsing group *group* in file *filename*. RC = *return code***

Explanation

An error occurred while parsing the specified group.

Message Variables

group

Name of group where error occurred.

filename

Filename of BDF or CDF that contains the specified group.

return code

Return code from parser. Used for

System action

The topology server continues with missing information.

Operator response

Do the following:

1. Check the syntax of the specified group and make any necessary corrections.
2. Restart the server.
3. If the server restarts with no errors and information is still missing, erase the server databases and restart the server. Erasing the databases will cause you to lose any customization you might have done. For that reason, create a backup prior to erasing the databases so that you can restore them if the problem persists.

IHS2174W	No match was found in the synchronous monitor group for monitor instance <i>name</i> in file <i>file</i>?
-----------------	--

Explanation

The topology server cannot find a monitor with the specified name in the synchronous monitor group, so a monitor instance cannot be created. The topology server uses synchronous monitor instances as specified in the AMS (Application Management Specification). In order to create these instances it needs to correlate information from the synchronous monitor instance group, which specifies monitor instances, and the synchronous monitor group, which contains a base template of information. If a monitor name specified in a monitor instance is not included in the synchronous monitor group, the topology server does not have sufficient information available to use the monitor.

Message Variables

name

Name of monitor being looked for.

file

Filename of CDF with error.

System action

The topology server continues with missing information.

Operator response

Do the following:

1. Correct or replace the specified file.
2. Restart the server.
3. If the server restarts with no errors and information is still missing, erase the server databases and restart the server. Erasing the databases will cause you to lose any customization you might have done. For that reason, create a backup prior to erasing the databases so that you can restore them if the problem persists.

IHS2175W	Error - duplicate path definition.
-----------------	---

Explanation

A duplicate path description was specified in the CDF file. A previous message indicated the file in which the error was found.

System action

The topology server continues.

Operator response

Do the following:

1. Correct or replace the specified file.
2. Restart the server.
3. If the server restarts with no errors and information is still missing, erase the server databases and restart the server. Erasing the databases will cause you to lose any customization you might have done. For that reason, create a backup prior to erasing the databases so that you can restore them if the problem persists.

IHS2176E	Error opening file <i>file</i>. Component information may be incomplete or unavailable.
-----------------	--

Explanation

The topology server is unable to open the specified file.

Message Variables

file

Filename of BDF or CDF that cannot be opened.

System action

The topology server is unable to open the file, and continues with missing information.

Operator response

Do the following:

1. Check the file permissions, and availability of system resources.

2. Restart the server.
3. If the server restarts with no errors and information is still missing, erase the server databases and restart the server. Erasing the databases will cause you to lose any customization you might have done. For that reason, create a backup prior to erasing the databases so that you can restore them if the problem persists.

IHS2177W Error getting command indicator for resource.

Explanation

The topology server was unable to create a command indicator for the resource indicated. No commands will be available for this resource.

Message Variables***resource***

The name of the resource that did not get a command indicator.

System action

The topology server continues with missing information.

Operator response:

IHS2178W Error parsing group *group*. Group has no key or ID.

Explanation

The specified group does not have an ID or key specified. The AMS specification requires one of these. A previous message will indicate the file that is in error.

Message Variables***group***

The name of the group with the missing key or ID.

System action

The topology server continues with missing information.

Operator response

Do the following:

1. Correct or replace the appropriate file.
2. Restart the server.
3. If the server restarts with no errors and information is still missing, erase the server databases and restart the server. Erasing the databases will cause you to lose any customization you might have done. For that reason, create a backup prior to erasing

the databases so that you can restore them if the problem persists.

IHS2179W Error with group *group* while creating object for file *file*.

Explanation

A previous error indicates the actual problem. This message is provided to help isolate the area in which the error occurred.

Message Variables***group***

Name of group where error occurred.

file

Filename of BDF or CDF with incorrect group information.

System action

The topology server continues with missing information.

Operator response

Do the following:

1. Correct or replace the appropriate file.
2. Restart the server.
3. If the server restarts with no errors and information is still missing, erase the server databases and restart the server. Erasing the databases will cause you to lose any customization you might have done. For that reason, create a backup prior to erasing the databases so that you can restore them if the problem persists.

IHS2180E Internal error during object construction for file *file*.

Explanation

An error occurred while constructing an internal object for the specified file.

Message Variables***file***

Filename of BDF or CDF object was being created for.

System action

The topology server continues with missing information.

Operator response

Do the following:

1. Correct or replace the appropriate file.
2. Restart the server.
3. If the server restarts with no errors and information is still missing, erase the server databases and restart the server. Erasing the databases will cause you to lose any customization you might have done. For that reason, create a backup prior to erasing the databases so that you can restore them if the problem persists.

IHS2181E **Problem parsing file *file*.
Component information may be
incomplete or unavailable.**

Explanation

An error occurred while parsing the specified file.

Message Variables

file

Filename of BDF or CDF that had parsing problem.

System action

The topology server continues with missing information.

Operator response

Do the following:

1. Correct or replace the appropriate file.
2. Restart the server.
3. If the server restarts with no errors and information is still missing, erase the server databases and restart the server. Erasing the databases will cause you to lose any customization you might have done. For that reason, create a backup prior to erasing the databases so that you can restore them if the problem persists.

IHS2182W **Error parsing group *group*.
Component information may be
incomplete or unavailable.**

Explanation

An error occurred while parsing the specified group. Other messages will indicate the actual error and file.

Message Variables

group

The name of the group where the error occurred.

System action

The topology server continues with missing information.

Operator response

Do the following:

1. Correct or replace the appropriate file.
2. Restart the server.
3. If the server restarts with no errors and information is still missing, erase the server databases and restart the server. Erasing the databases will cause you to lose any customization you might have done. For that reason, create a backup prior to erasing the databases so that you can restore them if the problem persists.

IHS2183W **Error parsing table *table*, row *row*,
col *column*.**

Explanation

An error occurred while parsing the specified table.

Message Variables

table

Name of table where error occurred.

row

Table row number of error.

column

Column number of attribute with error.

System action

The topology server continues with missing information.

Operator response

Do the following:

1. Correct or replace the appropriate file.
2. Restart the server.
3. If the server restarts with no errors and information is still missing, erase the server databases and restart the server. Erasing the databases will cause you to lose any customization you might have done. For that reason, create a backup prior to erasing the databases so that you can restore them if the problem persists.

IHS2184W **Error parsing attribute *attribute*.**

Explanation

An error occurred while parsing the specified attribute. Additional messages will provide more details on the error.

Message Variables

attribute

Name of the attribute in error.

System action

The topology server continues with missing information.

Operator response

Do the following:

1. Correct or replace the appropriate file.
2. Restart the server.
3. If the server restarts with no errors and information is still missing, erase the server databases and restart the server. Erasing the databases will cause you to lose any customization you might have done. For that reason, create a backup prior to erasing the databases so that you can restore them if the problem persists.

IHS2185W **Value missing for required attribute. Group: *group* Attribute ID: *attribute***

Explanation

The specified attribute requires a value, but none was specified in the table and no default is defined in the group description.

Message Variables

group

Name of group with missing attribute.

attribute

ID of attribute with missing value.

System action

The topology server continues with missing information.

Operator response

Do the following:

1. Correct or replace the appropriate file.
2. Restart the server.
3. If the server restarts with no errors and information is still missing, erase the server databases and restart the server. Erasing the databases will cause you to lose any customization you might have done. For that reason, create a backup prior to erasing the databases so that you can restore them if the problem persists.

IHS2186W **Data type mismatch for group *group*, attribute *attribute*. Expected type: *expected* Found type: *found***

Explanation

The data type of the specified attribute did not match the one specified in the group description.

Message Variables

group

Group where error occurred.

attribute

Name of attribute in error.

expected

Data type expected.

found

Data type found.

System action

The topology server continues with missing information.

Operator response

Do the following:

1. Correct or replace the appropriate file.
2. Restart the server.
3. If the server restarts with no errors and information is still missing, erase the server databases and restart the server. Erasing the databases will cause you to lose any customization you might have done. For that reason, create a backup prior to erasing the databases so that you can restore them if the problem persists.

IHS2187W **Error - duplicate attribute ID specified. Group: *group* Attribute name: *attribute*, ID: *id***

Explanation

The specified group contained two attributes with the same attribute ID. Attribute IDs must be unique within a group.

Message Variables

group

Name of group with error.

attribute

Name of second attribute with matching id.

id

Attribute ID number that is duplicated in this group.

System action

The topology server continues with missing information.

Operator response

Do the following:

1. Correct or replace the appropriate file.
2. Restart the server.
3. If the server restarts with no errors and information is still missing, erase the server databases and restart the server. Erasing the databases will cause you to lose any customization you might have done. For that reason, create a backup prior to erasing the databases so that you can restore them if the problem persists.

IHS2188W **Data type mismatch for attribute *attribute*. Expected type: *expected* Found type: *found***

Explanation

The data type of the specified attribute does not match that defined in the group description.

Message Variables

attribute

Name of attribute in error.

expected

Data type expected.

found

Data type found.

System action

The topology server continues with missing information.

Operator response

Do the following:

1. Correct or replace the appropriate file.
2. Restart the server.
3. If the server restarts with no errors and information is still missing, erase the server databases and restart the server. Erasing the databases will cause you to lose any customization you might have done. For that reason, create a backup prior to erasing the databases so that you can restore them if the problem persists.

IHS2190W **Error - too many attributes in table row. Table: *table*, row *row***

Explanation

The specified table had too many attributes specified for the group definition.

Message Variables

table

Name of table in error.

row

Table row where error occurred.

System action

The topology server continues with missing information.

Operator response

Do the following:

1. Correct or replace the appropriate file.
2. Restart the server.
3. If the server restarts with no errors and information is still missing, erase the server databases and restart the server. Erasing the databases will cause you to lose any customization you might have done. For that reason, create a backup prior to erasing the databases so that you can restore them if the problem persists.

IHS2191W **Attribute error in table *table*, row *row*, attribute *attribute*.**

Explanation

An error occurred while processing the specified attribute. Other messages will indicate the problem, and the file where the error occurred.

Message Variables

table

Name of table with error.

row

Table row in error.

attribute

Name of attribute in error.

System action

The topology server continues with missing information.

Operator response

Do the following:

1. Correct or replace the appropriate file.
2. Restart the server.
3. If the server restarts with no errors and information is still missing, erase the server databases and restart the server. Erasing the databases will cause you to lose any customization you might have done. For that reason, create a backup prior to erasing

the databases so that you can restore them if the problem persists.

IHS2192W Error - enum found with no name.

Explanation

An enumeration was specified with no name.

System action

The topology server continues with missing information.

Operator response

Do the following:

1. Correct or replace the appropriate file.
2. Restart the server.
3. If the server restarts with no errors and information is still missing, erase the server databases and restart the server. Erasing the databases will cause you to lose any customization you might have done. For that reason, create a backup prior to erasing the databases so that you can restore them if the problem persists.

IHS2193W Error - enum *name* not found.

Explanation

The enumerated type specified was not found in the group description.

Message Variables***name***

Name of the enum being looked for.

System action

The topology server continues with missing information.

Operator response

Do the following:

1. Correct or replace the appropriate file.
2. Restart the server.
3. If the server restarts with no errors and information is still missing, erase the server databases and restart the server. Erasing the databases will cause you to lose any customization you might have done. For that reason, create a backup prior to erasing the databases so that you can restore them if the problem persists.

IHS2194W Error - enum symbol *symbol* not found.

Explanation

The enumeration symbol value was not found in the group description.

Message Variables***symbol***

Enumeration symbol that had no corresponding integer value.

System action

The topology server continues with missing information.

Operator response

Do the following:

1. Correct or replace the appropriate file.
2. Restart the server.
3. If the server restarts with no errors and information is still missing, erase the server databases and restart the server. Erasing the databases will cause you to lose any customization you might have done. For that reason, create a backup prior to erasing the databases so that you can restore them if the problem persists.

IHS2195W Error - enum error in attribute *attribute*.

Explanation

There was a general syntax error in the specified attribute. Additional messages will provide more detail.

Message Variables***attribute***

Name of attribute where error occurred.

System action

The topology server continues with missing information.

Operator response

Do the following:

1. Correct or replace the appropriate file.
2. Restart the server.
3. If the server restarts with no errors and information is still missing, erase the server databases and restart the server. Erasing the databases will cause you to lose any customization you might have done. For that reason, create a backup prior to erasing

the databases so that you can restore them if the problem persists.

IHS2196W **Error - unsupported type *type* in table *table*, row *row*, col *column*.**

Explanation

A table entry contains a type not supported by the current code.

Message Variables

type

Type of data provided.

table

Name of table with error.

row

Table row with error.

column

Column number in table with error.

System action

The topology server continues with missing information.

Operator response

Do the following:

1. Correct or replace the appropriate file.
2. Restart the server.
3. If the server restarts with no errors and information is still missing, erase the server databases and restart the server. Erasing the databases will cause you to lose any customization you might have done. For that reason, create a backup prior to erasing the databases so that you can restore them if the problem persists.

IHS2197W **Error - table missing class name. Table ID = *table*.**

Explanation

A table was found that did not have a class name specified.

Message Variables

table

ID of table with missing class name.

System action

The topology server continues with missing information.

Operator response

Do the following:

1. Correct or replace the appropriate file.
2. Restart the server.
3. If the server restarts with no errors and information is still missing, erase the server databases and restart the server. Erasing the databases will cause you to lose any customization you might have done. For that reason, create a backup prior to erasing the databases so that you can restore them if the problem persists.

IHS2198I **Parsing file *file*.**

Explanation

The specified file is being parsed.

Message Variables

file

Name of file currently being parsed.

System action

The topology server parses file.

IHS2202W **Unable to place BDF file in the BDF hierarchy. File name: *filename*
Description: *file description***

Explanation

topology typically uses the following four types of BDF files:

- Business system
- Business subsystem
- Business system component
- Mapping

When the topology server starts, it reads all of the BDF and CDF files from the %BINDIR%\TDS\Server\db\current\appdefs subdirectory on non-UNIX platforms or the \$BINDIR/TDS/Server/db/current/appdefs subdirectory on UNIX platforms. BINDIR is an environment variable by the installation code to indicate the root location of the topology server code. It then places the BDF files into an internal BDF hierarchy according to the following rules:

1. Place all of the business system BDFs on the top row of the hierarchy as peers.
2. Repeatedly iterate through all of the BDFs that have not been placed in the hierarchy until you make a complete pass through all BDFs without placing any.

3. Examine each of the remaining BDFs. If its parent is already placed in the BDF hierarchy, then place the unplaced BDF in the hierarchy as a child of that parent BDF.

When this process is complete, all BDF files must be placed in the hierarchy. This message is written to the message log for each BDF file that is not placed in the hierarchy.

Message Variables

filename

The file name of the BDF file the was not placed.

file description

The description of the BDF file that was extracted from the BDF file.

System action

The specified BDF file is not used by the server. Events defined by this BDF file might not be recognized.

Operator response

Contact your system programmer or the person responsible for the BDF files.

System programmer response

Correct the BDF file or contact someone who can. The most common causes of this problem are:

• For a Business Subsystem BDF

- The parent ID is incorrect in the subsystem BDF.
- The component ID is incorrect in the business system BDF that should be this BDF's parent.
- The business system BDF that should be this BDF's parent is missing or was not placed in the BDF hierarchy because of some other error.

• For a Business System Component BDF:

- The component ID of the business system component BDF is incorrect.
- The subcomponent group of the business system BDF or business subsystem BDF that should be this BDF's parent is incorrect.
- The business system BDF or business subsystem BDF that should be this BDF's parent is missing or was not placed in the BDF hierarchy because of some other error.

• For a Mapping BDF:

- The parent ID group of the mapping BDF is incorrect.
- The component ID of the BDF that should be this BDF's parent is incorrect.

- The BDF that should be this BDF's parent is missing or was not placed in the BDF hierarchy because of some other error.

IHS2206E

Remap of a customized view failed: rc=return code, layout_rc=layout return code.

Explanation

During the creation of a customized view, the server positions the resources and creates view information for use by the console. The function that handles the positioning of resources in the view has failed. This error might be caused by the database file containing the customized view information being corrupt or missing.

Message Variables

return code

Global return code from the function.

layout return code

Internal return code from layout

System action

In order to position the resources, the server invokes another function. The result is that the customized view information will not be displayed.

Operator response

Undo the customization for the view. Make view changes and save it again.

System programmer response

Examine the error log for additional information.

IHS2207E

An error occurred during the Save View request.

Explanation

An error occurred when the topology console requested to save a view on the server. This is caused by an internal error in the server, such as the view not being found in the server database.

System action

The topology server ignores the request to save the view.

Operator response

Contact the server administrator.

System programmer response

Examine the log file for additional information.

IHS2208E	An installation error was detected (rc). The server will terminate. Please contact IBM Software Support.
-----------------	---

Explanation

The server detected a corrupted file during initialization.

Message Variables

rc

The server internal return code.

System action

The server ends.

Operator response

Contact your system programmer.

System programmer response

Reinstall the server.

IHS2211E	Enclosing parenthesis for Query Task response entry are not matched or ordered correctly.
-----------------	--

Explanation

Each entry in the Query Task response must begin with an open parenthesis and end with a closed parenthesis. The topology server detected that the Query Task response contained an entry that did not begin with an open parenthesis or did not end with a closed parenthesis. This message is also issued when two open parentheses are found without an intervening closed parenthesis.

System action

The topology server ignores any remaining Query Task response entries. The monitor associated with the failing Query Task is not updated.

Operator response

Contact the provider of the Query Task instrumentation.

IHS2212E	Entry identifier <i>entry-identifier</i> for a Query Task response entry is missing or not a valid identifier.
-----------------	---

Explanation

The topology server detected an entry identifier in the Query Task response that is not valid. Valid identifiers for Query Task response entries are: 1, 2, 3, 4, 5, 7, and 8.

Message Variables

entry-identifier

The identifier of the Query Task response entry.

System action

The topology server ignores any remaining Query Task response entries. The monitor associated with the failing Query Task is not updated.

Operator response

Contact the provider of the Query Task instrumentation.

IHS2213E	Query Task response entry with identifier <i>entry-identifier</i> has <i>number-received</i> data tokens. Expected <i>number-expected</i> data tokens.
-----------------	---

Explanation

The topology server detected an entry in the Query Task response that specified an incorrect number of data tokens.

Message Variables

entry-identifier

The identifier of the Query Task response entry.

number-received

The actual number of data tokens in the Query Task response entry.

number-expected

The correct number of data tokens for the Query Task response entry.

System action

The topology server ignores any remaining Query Task response entries. The monitor associated with the failing Query Task is not updated.

Operator response

Contact the provider of the Query Task instrumentation.

IHS2214E	No entry with identifier <i>entry-identifier</i> found in Query Task response.
-----------------	---

Explanation

The topology server detected a missing entry in the Query Task response.

Message Variables

entry-identifier

The identifier of the entry which is required but not present in the Query Task response entry.

System action

The topology server ignores any remaining Query Task response entries. The monitor associated with the failing Query Task is not updated.

Operator response

Contact the provider of the Query Task instrumentation.

IHS2215E	Found <i>number-received</i> entries with identifier <i>entry-identifier</i> in Query Task response. Only one such entry permitted.
-----------------	--

Explanation

The topology server detected multiple entries having an entry identifier of *entry-identifier*. The Query Task response can have only one entry with that entry identifier.

Message Variables

number-received

The actual number of entries with the specified entry identifier found in the Query Task response.

entry-identifier

The identifier of the Query Task response entry.

System action

The topology server ignores any remaining Query Task response entries. The monitor associated with the failing Query Task is not updated.

Operator response

Contact the provider of the Query Task instrumentation.

IHS2216E	Query Task response contains incorrect syntax. No monitor value updates will be performed.
-----------------	---

Explanation

The topology server detected one or more errors in the syntax of the Query Task response returned from the instrumentation.

System action

The monitor associated with the failing Query Task is not updated.

Operator response

Contact the provider of the Query Task instrumentation.

IHS2217I	Query Task response contains valid syntax. Proceeding with monitor value updates.
-----------------	--

Explanation

The topology server successfully parsed the syntax of the Query Task response returned from the instrumentation.

System action

The topology server proceeds with monitor updates based on the information in the Query Task response.

IHS2218E	No entry with identifier <i>entry-identifier-1</i> or <i>entry-identifier-2</i> found in Query Task response. At least one expected.
-----------------	---

Explanation

The Query Task response must have at least one entry with either of the specified entry identifiers.

Message Variables

entry-identifier-1

Identifier of a Query Task response entry.

entry-identifier-2

Identifier of a Query Task response entry.

System action

The topology server ignores any remaining Query Task response entries. The monitor associated with the failing Query Task is not updated.

Operator response

Contact the provider of the Query Task instrumentation.

IHS2219E	Each Query Task response entry must start with open parenthesis.
-----------------	---

Explanation

The topology server detected that the Query Task response contained an entry that did not begin with an open parenthesis.

System action

The topology server ignores any remaining Query Task response entries. The monitor associated with the failing Query Task is not updated.

Operator response

Contact the provider of the Query Task instrumentation.

IHS2220I **Setting value of monitor resource *monitor-name* to *monitor-value*.**

Explanation

The topology server is updating the value for a monitor resource.

Message Variables

monitor-name

The name of the monitor being updated.

monitor-value

The new value for the monitor.

IHS2221E **Performing periodic polling of selected monitors on resource *resource-name*.**

Explanation

The polling interval for the specified resource has expired. The topology server will begin querying selected monitors on that resource and updating views with the current monitor values.

Message Variables

resource-name

The name of the resource whose monitors will be queried.

IHS2222E **The file *descriptionFile2* has the same manufacturer, product, version and abstraction level as *descriptionFile1* which was parsed earlier. This is not allowed.**

Explanation

Description files must be uniquely identified by the combination of their following four key identifiers:

Identifier	Source group
manufacturer	component ID group
product	component ID group
version	component ID group
abstraction level	component type group

All four of these identifiers are the same in *descriptionFile1* and *descriptionFile2*, so *descriptionFile2* is not used.

Message Variables

descriptionFile1

The description file that was already parsed by the server and contained the same four key identifiers as *descriptionFile2*.

descriptionFile2

The description file that has the same four key identifiers as *descriptionFile1*.

System action

The server logs this message and continues running.

Operator response

Contact your system programmer.

System programmer response

Remove or modify one or both of the files in order to resolve the conflict. If you are unable to fix the problem, contact the suppliers of the description files.

IHS2223E **Aggregation task *aggregation_task_name* for exit *exit_name* failed with return code *return_code_value*.**

Explanation

IHSXSRV.EXE encountered an error while invoking the designated aggregation query task.

Message Variables

task_name

The name of the invoked aggregation task, prior to variable substitution.

exit_name

The name of the exit that is handling the task invocation.

return_code_value

Error code returned from the exit.

System action

The component for which this task was defined is added to the last successfully queried aggregate, and marked for retry. The next time a heartbeat is received for this component, the aggregation tasks are retried (unless this component is manually moved to another aggregate).

Operator response

Verify that the specified aggregation task is correctly defined and installed. If the problem persists, contact your system programmer.

System programmer response

If the specified aggregation task is correctly defined and installed, contact IBM Software Support.

IHS2229E **Component information task**
task_name* for exit *exit_name
failed with return code
***return_code_value*.**

Explanation

The topology server encountered an error while invoking the specified component information task.

Message Variables

task_name

The name of the invoked component information task, prior to variable substitution.

exit_name

The name of the exit that is handling the task invocation.

return_code_value

Error code returned from the exit.

System action

The instance of the component for which this task was defined is not included as a member of the business system to which it is being mapped. This task is marked for retry and will be attempted again on the next heartbeat.

Operator response

Verify that the specified component information task is correctly defined and installed. If the problem persists, contact your system programmer.

System programmer response

If the specified component information task is correctly defined and installed, contact IBM Software Support.

IHS2230I **Component *component_name* is**
not a member of business system
***business_system_name*. Origin:**
origin* Suborigin: *suborigin
Subsource: *subsource*

Explanation

This instance of the component was not included as a member of the specified business system. This is usually a normal condition and indicates that membership criteria specifications supplied in the business system mapping were not met by this component instance. It can also mean that the criteria are not valid or the component information tasks cannot be run.

Message Variables

component_name

The name of the affected component.

business_system_name

The name of the business system from which the component instance is being excluded.

origin*, *suborigin*, and *subsource

These fields help identify the particular component instance that is being excluded.

System action

The specified instance of the component is not included in any views related to the business system.

Operator response

If the component instance is a member of the business system, check the message log for additional messages indicating a problem. The membership criteria specified in the instrumentation might not have been valid or the component information tasks might not have run successfully. Check the helps for any messages for more information.

If no other messages were logged, then the output from the component information tasks does not meet the membership criteria, and one or both must be modified in order for the component instance to be included.

IHS2231E **Component *component_name* in**
business system
***business_system_name* had errors**
in the membership criteria
specification.

Explanation

A component information change event was received, but there was no resource in the resource database, or there was no previous component information available for the specified task.

Message Variables

component_name

The name of the affected component.

business_system_name

The name of the business system to which the component is being mapped.

System action

The specified instance of the component is not included in any views related to the business system.

Operator response

Check the message log for additional messages indicating a problem with instance membership criteria specification.

IHS2232E	Component information change event did not have a matching resource or any matching component information. Business system: <i>business_system_name</i> Origin: <i>origin</i> Suborigin: <i>suborigin</i> Subsource: <i>subsource</i> Task Name: <i>component_information_task_name</i> Task Value: <i>component_information_task_value</i> Change: <i>type_of_change</i>
-----------------	--

Explanation

The mapping of the business system to the component had errors in the specification of the membership criteria in the management tool extensions.

Message Variables

business_system_name

The name of the business system to which the component is being mapped.

origin, suborigin, and subsource

These fields help identify the particular component instance that is being excluded.

component_information_task_name

The name of the component information task for which the output values are changing.

component_information_task_value

The actual value being added or removed from the output of the component information task.

type_of_change

1 = value has been added; 2 = value has been removed.

System action

The change event is ignored and the instance membership is unaffected.

Operator response

If this component information task is being used for specifying aggregation information, but not membership information, ignore this message. In other cases, check the error log for additional messages that might indicate that the task did not run successfully.

IHS2234E	Component information substitution value <i>substitution_value</i> could not be resolved.
-----------------	--

Explanation

The topology server was unable to substitute any resource instance data for the specified substitution value. The value is probably not one of the support values.

Message Variables

substitution_value

The name of the substitution value that was not resolved.

System action

The instance of the component for which this substitution value was defined is not included in the business system to which it is being mapped. This message will continue to be logged each time membership evaluation is attempted for this resource.

Operator response

Make sure that the substitution value is one of the values supported. If it is supported, notify your system programmer.

System programmer response

Contact IBM Software Support.

IHS2235I	Do you want to delete Customized Dynamic View <i>view_name</i>?
-----------------	--

Explanation

This message is a confirmation message to insure you want to delete the customization of the dynamic view you have selected.

Message Variables

view_name

The name of the customized dynamic view you have selected for deletion.

System action

If you respond YES, the view will be deleted, if you respond NO, no action is taken.

Operator response

Confirm either YES or NO for deleting or not deleting the customized dynamic view.

System programmer response

None

IHS2250E Unable to open configuration file *configuration_file_name*.

Explanation

The topology server encountered an error while trying to open the specified configuration file.

Message Variables

configuration_file_name

The name of the configuration file the server tried to open. This contains a directory specification appended with the file name ihstec.cfg.

System action

No events will be sent to the Tivoli Enterprise Console from this topology server.

Operator response

Verify that the configuration file exists exactly as shown in the message and can be accessed by the computer on which the topology server is running.

System programmer response

If the configuration file exists in the expected location, contact IBM Software Support.

IHS2251E Error in server specification or connecting to server specified on line *line_number* of configuration file.

Explanation

The topology server encountered an error while trying to parse the specified line in the specified configuration file. Another possible cause is that the line was successfully parsed, but communications cannot be established with the server specified on the line.

Message Variables

line_number

The line number of the failed entry in the specified configuration file.

configuration_file_name

The name of the configuration file the server tried to open. This contains a directory specification appended with the file name ihstec.cfg.

System action

No events will be sent to the specified Tivoli Enterprise Console server from this topology server.

Operator response

Verify that the specified Tivoli Enterprise Console server exists and is listening on the specified port (if the portmapper is not in use on the Tivoli Enterprise Console server computer). Check the syntax of the configuration file entry using the instructions in the comments contained in the file.

System programmer response

If the Tivoli Enterprise Console server specification is correct and specifies a valid active Tivoli Enterprise Console server, contact IBM Software Support.

**IHS2252E Error sending
APM_NOTIFICATION event to
server *server_name*, port
port_number. Resource:
resource_label Old status:
old_status New status: *new_status***

Explanation

The specified event was created but cannot be successfully sent to the specified Tivoli Enterprise Console server. The server was located and communications was established, but the topology server was unsuccessful in opening a port and sending the event data to the Tivoli Enterprise Console server.

Message Variables

server_name

The name of the Tivoli Enterprise Console server as read from the configuration file.

port_number

The port number determined to be used by the Tivoli Enterprise Console server either as specified in the configuration file is determined from the portmapper.

resource_label

The label used to identify the resource whose status changed.

old_status

The previous status of the resource.

new_status

The updated status of the resource.

System action

No event was sent to the specified Tivoli Enterprise Console server, but the topology server will attempt to send the event to any other Tivoli Enterprise Console servers specified in the configuration file.

Operator response

Consult with your system programmer to determine if the specified server/port combination represents a valid active Tivoli Enterprise Console server.

System programmer response

If the Tivoli Enterprise Console server specification is correct and specifies a valid active Tivoli Enterprise Console server, contact IBM Software Support.

IHS2260I The server is terminating due to an internal error, RC=retcode.

Explanation

An unrecoverable error occurred in the topology server.

Message Variables

retcode

The return code from the function in error.

System action

The topology server ends. Databases might not be saved.

Operator response

Contact your system programmer responsible for the topology server.

System programmer response

Try to restart the server. If the problem persists, check the message and error logs for information. If you are unable to fix the problem, contact IBM Software Support.

IHS2262E An error was encountered during the compilation of an extended regular expression used for instance membership filtering. Type of error: ErrType Extended regular expression: ExtRegExp Filename: Filename

Explanation

An error was encountered while compiling an extended regular expression used for instance membership filtering. This indicates that the specified *ExtRegExp* is not a valid extended regular expression. The source of the *ExtRegExp* in error is an entry in the management tool extensions group with a variable name of InstanceMembershipCondition or InstanceMembershipTest in *Filename*.

Message Variables

ErrType

The type of error that was encountered. Possible values are:

- Invalid regular expression
- Invalid collating element
- Invalid character class
- Last character is \
- Invalid number in \digit
- [] imbalance
- \(\) or () imbalance
- \{ \} or { } imbalance
- Invalid \{ \} range expression
- Invalid range expression endpoint
- Out of memory
- ?*+ not preceded by valid regular expression
- Invalid multibyte character
- Unknown

ExtRegExp

The extended regular expression that is causing the error.

Filename

The name of the file containing the management tool extensions group that contains the *ExtRegExp* entry that is in error.

System action

The InstanceMembershipCondition and InstanceMembershipTest entries in the management tool extensions group of the specified file are not used for instance membership filtering.

Operator response

Correct the extended regular expression that is in error and restart the topology server.

IHS2263E An error was encountered during the evaluation of an extended regular expression used for instance membership filtering.

Type of error: *ErrType* Extended
regular expression: *ExtRegExp*
Filename: *Filename* String
evaluated: *StringEvaluated*

Explanation

An error was encountered while evaluating the specified string using the extended regular expression *ExtRegExp* for the purpose of instance membership filtering. This indicates that the extended regular expression is not valid. The source of the erroneous expression is an entry in the management tool extensions group with a variable name of InstanceMembershipCondition or InstanceMembershipTest in *Filename*.

Message Variables

ErrType

The type of error that was encountered. Possible values are:

- Invalid regular expression
- Invalid collating element
- Invalid character class
- Last character is \
- Invalid number in \digit
- [] imbalance
- \ (\) or () imbalance
- \{ \} or { } imbalance
- Invalid \{ \} range expression
- Invalid range expression endpoint
- Out of memory
- ?*+ not preceded by valid regular expression
- Invalid multibyte character
- Unknown

ExtRegExp

The extended regular expression that is causing the error.

Filename

The name of the file containing the management tool extensions group that contains the *ExtRegExp* entry that is in error.

StringEvaluated

The string that was being evaluated when the error occurred.

System action

Some or all of the resources of the type described by *Filename* might not be included in the appropriate views.

Operator response

Correct the extended regular expression that is in error and restart the topology server.

IHS2264E

An invalid sequence number was found in an InstanceMembershipCondition entry in the management tool extensions group. Filename: *Filename* Sequence number: *SeqNumber*

Explanation

Sequence numbers are used to determine the order in which InstanceMembershipCondition entries must be evaluated. These sequence numbers must have the following characteristics:

- They must range in value from 1 to the number of InstanceMembershipCondition entries in the management tool extensions group of the specified file.
- They must be distinct within the management tool extensions group of a given file. Duplicates are not allowed.
- They do not have to be in any particular order, but, if sorted, they must be contiguous. No holes in the sequence are allowed.

The sequence number of the entry in error violates one of these required characteristics.

Message Variables

Filename

The filename of the file containing the management tool extensions group with the InstanceMembershipCondition entry whose sequence number is in error.

SeqNumber

The sequence number that is in error.

System action

The InstanceMembershipCondition and InstanceMembershipTest entries in the management tool extensions group of the specified file are not used for instance membership filtering.

Operator response

Correct the sequence number or numbers that are in error and restart the topology server.

IHS2265E

More than one InstanceMembershipTest entry was found in the management tool extensions group. Filename: *Filename*

Explanation

More than one InstanceMembershipTest entry was encountered in the management tool extensions group in the specified file. Only one InstanceMembershipTest entry is allowed per management tool extensions group.

Message Variables

Filename

The name of the file whose management tool extensions group contains more than one InstanceMembershipTest entry.

System action

The InstanceMembershipCondition and InstanceMembershipTest entries in the management tool extensions group of the specified file are not used for instance membership filtering.

Operator response

Remove all but one of the InstanceMembershipTest entries from the management tool extensions group of the specified file and restart the topology server.

IHS2266E	A syntax error was encountered in an InstanceMembershipCondition entry in the management tool extensions group. Filename: <i>Filename</i>
-----------------	--

Explanation

The syntax is not valid in one or more InstanceMembershipCondition entries in the management tool extensions group of the specified file.

Message Variables

Filename

The filename of the file containing the management tool extensions group that has one or more InstanceMembershipCondition erroneous entries.

System action

The InstanceMembershipCondition and InstanceMembershipTest entries in the management tool extensions group of the specified file are not used for instance membership filtering.

Operator response

Correct the syntax of the InstanceMembershipTest entries in the management tool extensions group of the specified file and restart the topology server.

IHS2267I	Message from sender <i>sender_name: the_message</i>
-----------------	--

Explanation

A message has been sent to you from the topology server or another topology console.

Message Variables

sender_name

The topology console that sent the message, or 'topology server' if this was sent by the topology server that the topology console is signed on.

the_message

The message that was sent.

IHS2268I	Keyword <i>keyword name</i> Value <i>keyword value seconds</i>
-----------------	---

Explanation

This message displays a keyword and its value in seconds read from the server.properties file. For more information, see the server.properties file.

Message Variables

keyword name

The name of the keyword read from the server.properties file.

keyword value

The value in seconds of the keyword read from the server.properties file.

IHS2269I	Keyword <i>keyword name</i> Value <i>keyword value intervals</i>
-----------------	---

Explanation

This message displays a keyword and its value in intervals read from the server.properties file. For more information, see the server.properties file.

Message Variables

keyword name

The name of the keyword read from the server.properties file.

keyword value

The value in intervals of the keyword read from the server.properties file.

IHS2270I	Keyword <i>keyword name</i> Value <i>keyword value percent</i>
-----------------	---

Explanation

This message displays a keyword and its value in percent read from the server.properties file. For more information, see the server.properties file.

Message Variables

keyword name

The name of the keyword read from the server.properties file.

keyword value

The value in percent of the keyword read from the server.properties file.

IHS2271I	Keyword keyword name Value keyword value
-----------------	---

Explanation

This message displays a keyword and its value read from the server.properties file. For more information, see the server.properties file.

Message Variables

keyword name

The name of the keyword read from the server.properties file.

keyword value

The value of the keyword read from the server.properties file.

IHS2272I	Message sent from sender to all consoles. Message is the message
-----------------	---

Explanation

This message confirms that a broadcast message has been sent to all consoles logged on to the server.

Message Variables

sender

The name of the topology console or topology server sending the message.

the message

The message text that was sent.

IHS2273I	Message sent from sender to receiver. Message is the message
-----------------	---

Explanation

This message confirms that a broadcast message has been sent to a specific console.

Message Variables

sender

The name of the topology console or topology server sending the message.

receiver

The name of the console receiving the message

the message

The message text that was sent.

IHS2274I	Message from sender to receiver not sent. receiver is either not signed on or is the message originator. Message was the message.
-----------------	--

Explanation

The message cannot be delivered because the receiver is either not signed or is the originator of the message.

Message Variables

sender

The name of the topology console or topology server sending the message.

receiver

The name of the console receiving the message

the message

The message text that was trying to be sent.

IHS2275I	Message from sender to all consoles not sent. No applicable consoles signed on. Message was the message
-----------------	--

Explanation

This message indicates that a broadcast message cannot be delivered because no receiving consoles were signed on.

Message Variables

sender

The name of the topology console or topology server sending the message.

the message

The message text that was trying to be sent.

IHS2276I	Keyword keyword name Value keyword value milliseconds
-----------------	--

Explanation

This message displays a keyword and its value in milliseconds read from the server.properties file. For more information, see the server.properties file.

Message Variables

keyword name

The name of the keyword read from the server.properties file.

keyword value

The value in milliseconds of the keyword read from the server.properties file.

IHS2277I	Keyword keyword name Value keyword value ticks
-----------------	---

Explanation

This message displays a keyword and its value in ticks read from the server.properties file. For more information, see the server.properties file.

Message Variables

keyword name

The name of the keyword read from the server.properties file.

keyword value

The value in ticks of the keyword read from the server.properties file.

IHS2278I	Keyword <i>keyword name</i> Value <i>keyword value</i> statusUpdateIntervals
-----------------	--

Explanation

This message displays a keyword and its value in statusUpdateIntervals read from the server.properties file. For more information, see the server.properties file.

Message Variables

keyword name

The name of the keyword read from the server.properties file.

keyword value

The value in statusUpdateIntervals of the keyword read from the server.properties file.

IHS2279I	Keyword <i>keyword name</i> Value <i>keyword value</i> viewChangeIntervals
-----------------	--

Explanation

This message displays a keyword and its value in viewChangeIntervals read from the server.properties file.

Message Variables

keyword name

The name of the keyword read from the server.properties file.

keyword value

The value in viewChangeIntervals of the keyword read from the server.properties file.

IHS2305I	Unable to determine operating system platform using command: <i>command</i>
-----------------	---

Explanation

The server attempted to determine the platform of an operating system resource, but was not successful.

The specified Tivoli Framework command was run by the server, but did not produce a valid value.

Message Variables

command

The command the server executed to determine the value for an operating system resource. The operating system name is included in the command string.

System action

The operating system resource is placed under a default platform aggregate.

Operator response

Run the specified Tivoli Framework command outside the context of the server and try to determine the reason for the failure. If you cannot resolve the problem, contact your system programmer.

System programmer response

Run the specified Tivoli Framework command outside the context of the server and try to determine the reason for the failure. If you cannot resolve the problem, contact IBM Software Support.

IHS2306W	A blank host name was encountered. No system resource is created. Origin: <i>origin</i> Suborigin: <i>suborigin</i>
-----------------	--

Explanation

The server was trying to create a system resource from a heartbeat or system monitor event, but the host name passed in the event was blank. A system resource cannot be created from this event.

Message Variables

origin and suborigin

These fields help identify the event for which the server was trying to create a system resource.

System action

A system resource is not created for the heartbeat or system monitor event. For heartbeat events, the corresponding business resource will not reflect any status information for the operating system on which it is running.

Operator response

No response is necessary if system information is not required for the resources in question.

If you want system information to be shown, then a host name must be provided with the events:

- For a system monitor event, the event can be resent after a host name is provided.
- For a heartbeat event, you must delete the affected business resource, then resend the heartbeat containing the host name.

IHS2307W **While writing to the databases, a string was truncated to the maximum length of *maximum length*. This may cause unexpected results if you continue to use the databases. Truncated string: *string***

Explanation

Strings associated with database resources, such as the display name, are limited to the specified number of characters when written to disk. The string committed to the database was longer than the specified number of characters and was truncated.

Message Variables

maximum length

The maximum number of characters for the string.

string

The specified database resource string that was truncated.

System action

The topology server continues to operate normally, unless you were shutting down when the databases were being written. If you continue to use the databases without removing the corrupted resource, unexpected results can occur. Your results will depend on which string is truncated and how that string gets used by the topology server.

Operator response

Do the following:

1. Locate the resource that contains the truncated string.
2. Remove the resource.
3. Shorten the string for the database resource.
4. Resend the heartbeat for the resource or wait for the next heartbeat cycle.

IHS2400E **An invalid parameter was passed to the AMP open routine. AMP Filename: *AMPFilename* Replace the AMP file, and if the problem**

persists, contact IBM Software Support.

Explanation

The topology server or ihsaunpk command line utility attempted to open an AMP file, but the open failed because of an incorrect parameter. This is probably caused by an AMP file that is not valid.

Message Variables

AMPFilename

The filename of the AMP for which the open failed.

System action

The action being attempted on the AMP file was not completed successfully.

Operator response

Ensure that the AMP file is valid and retry the operation. One test of validity is to run the ihsaunpk utility with the -v parameter in order to list its contents.

IHS2401E **An attempt was made to open an AMP file whose format is not valid. Filename: *AMPFilename* Replace the AMP file and, if the problem persists, contact the provider of the AMP.**

Explanation

The topology server or ihsaunpk command line utility attempted to open an AMP file whose format is not valid.

Message Variables

AMPFilename

The filename of the AMP file whose format is not valid.

System action

The action being attempted on the AMP file was not completed successfully.

Operator response

Ensure that the AMP file is valid, replacing it if necessary, and retry the operation. One test of validity is to run the ihsaunpk utility with the -v parameter in order to list its contents.

IHS2402E **An internal error occurred while processing an AMP file. AMP Filename: *AMPFilename***

Explanation

The topology server or ihsaunpk command line utility encountered an internal error while processing an AMP file.

Message Variables

AMPFilename

The filename of the AMP file that was being processed when the internal error was encountered.

System action

The action being attempted on the AMP file was not completed successfully.

Operator response

Ensure that the AMP file is valid, replacing it if necessary, and retry the operation. One test of validity is to run the ihsaunpk utility with the -v parameter in order to list its contents.

IHS2403E A CRC error was detected while opening an AMP file. AMP Filename: *AMPFilename*

Explanation

The topology server or ihsaunpk command line utility detected a CRC error indicating that the AMP file being processed is not valid.

Message Variables

AMPFilename

The filename of the AMP file that was being processed when the CRC error was encountered.

System action

The action being attempted on the AMP file was not completed successfully.

Operator response

Ensure that the AMP file is valid, replacing it if necessary, and retry the operation. One test of validity is to run the ihsaunpk utility with the -v parameter in order to list its contents.

IHS2404E A syntax error was encountered in the AMP unpacking configuration file. Filename: *AMPUnpackingConfigFilename* Line number: *lineNumber*

Explanation

The topology server or ihsaunpk utility read a line from the AMP unpacking configuration file whose syntax was not valid.

Message Variables

AMPUnpackingConfigFilename

The filename of the AMP file unpacking configuration file in which the syntax error was encountered.

lineNumber

The line number of the line in *AMPUnpackingConfigFilename* on which the syntax error was encountered.

System action

The line with the syntax error and any lines that follow it in the AMP unpacking configuration file are not processed. The AMP files being processed might have been processed successfully, but not according to the rules specified in the AMP file unpacking configuration file.

Operator response

Correct the syntax error in the AMP unpacking configuration file and retry the operation.

IHS2405E An error occurred opening the AMP unpacking configuration file. Filename: *AMPUnpackingConfigFilename*

Explanation

The topology server or ihsaunpk utility cannot open the AMP unpacking configuration file.

Message Variables

AMPUnpackingConfigFilename

The filename of the AMP file unpacking configuration file which cannot be opened.

System action

The action requested on the AMP file is performed using the default AMP file unpacking rules.

Operator response

Check the file permissions on the AMP file unpacking configuration file and change them if necessary. Ensure that the file is not locked by some other application.

IHS2406E An error occurred opening an AMP file. AMP Filename: *AMPFilename*

Explanation

The topology server or ihsaunpk utility was unable to open the specified AMP file.

Message Variables

AMPFilename

The filename of the AMP file that cannot be opened.

System action

The action requested on the specified AMP file was not performed.

Operator response

Check the file permissions on the AMP file unpacking configuration file and change them if necessary. Ensure that the file is not locked by some other application. Ensure that the AMP file is valid, replacing it if necessary, and retry the operation. One test of validity is to run the ihsaunpk utility with the -v parameter in order to list its contents.

IHS2407E **An error occurred while closing an AMP file. AMP Filename: AMPFilename Replace the AMP file and if the problem persists contact Tivoli Service.**

Explanation

The topology server or ihsaunpk utility was unable to close the specified AMP file after processing it.

AMPFilename

The filename of the AMP file that cannot be closed.

System action

The action requested on the specified AMP file might or might not have been performed successfully.

Operator response

Make sure that the file has not been locked by some other application. Terminate the program that generated this message and retry the operation.

IHS2408E **An error occurred getting the global information from an AMP file. AMP Filename: AMPFilename**

Explanation

The topology server or ihsaunpk utility was unable to access the global information in the specified AMP file.

Message Variables

AMPFilename

The filename of the AMP file in which the global information cannot be accessed.

System action

The action requested on the AMP file is not performed.

Operator response

Ensure that the specified file is a valid AMP file and retry the operation. The most likely cause of this error is a corrupted AMP file or attempting an AMP file operation on a file that is not an AMP file.

IHS2409E **An error occurred getting the information for an entry in an AMP file. AMP Filename: AMPFilename**

Explanation

The topology server or ihsaunpk utility was unable to access the information for an AMP file entry in the specified AMP file.

Message Variables

AMPFilename

The filename of the AMP file in which the information for an AMP file entry cannot be accessed.

System action

The requested action is not successfully performed on the specified AMP file.

Operator response

Ensure that the specified file is a valid AMP file and retry the operation. The most likely cause of this error is a corrupted AMP file or attempting an AMP file operation on a file that is not an AMP file.

IHS2410E **An error occurred seeking to an entry in an AMP file. AMP Filename: AMPFilename Previous entry name: PreviousEntryName**

Explanation

The topology server or ihsaunpk utility was unable to access the information for an AMP file entry in the specified AMP file.

Message Variables

AMPFilename

The filename of the AMP file in which the information for an AMP file entry cannot be accessed.

PreviousEntryName

The name of the AMP file entry in the specified AMP file that immediately preceded the AMP file entry that cannot be accessed.

System action

The requested action is not performed successfully on the specified AMP file.

Operator response

Ensure that the specified file is a valid AMP file and retry the operation. The most likely cause of this error is a corrupted AMP file or attempting an AMP file operation on a file that is not an AMP file.

IHS2411E **An error occurred while extracting an entry from an AMP file. AMP Filename: *AMPFilename* Entry name: *AMPEnterName***

Explanation

The topology server or ihsaunpk utility encountered an error while trying to extract the specified entry from the specified AMP file.

Message Variables**AMPFilename**

The filename of the AMP file from which the entry failed to be extracted.

AMPEnterName

The name of the AMP file entry that failed to be extracted.

System action

The specified entry is not extracted from the specified AMP file.

Operator response

Ensure that the specified file is a valid AMP file and retry the operation. The most likely cause of this error is a corrupted AMP file or attempting an AMP file operation on a file that is not an AMP file.

IHS2412E **An error occurred while closing an entry in an AMP file. AMP Filename: *AMPFilename* Entry name: *AMPEnterName***

Explanation

The topology server or ihsaunpk utility encountered an error while trying to close the specified entry in the specified AMP file.

Message Variables**AMPFilename**

The filename of the AMP file in which the entry failed to be closed.

AMPEnterName

The name of the AMP file entry that failed to be closed.

System action

The requested action might or might not have been performed on the specified AMP file.

Operator response

Ensure that the specified file is a valid AMP file and retry the operation. The most likely cause of this error is a corrupted AMP file or attempting an AMP file operation on a file that is not an AMP file.

IHS2413E **An error occurred during AMP file extraction while opening a target file. Target Filename: *targetFilename***

Explanation

The topology server or ihsaunpk utility encountered an error opening the specified target file while trying to extract an entry from an AMP file.

Message Variables**targetFilename**

The filename of the target file that cannot be opened.

System action

The specified target file is not written and the corresponding AMP entry is not extracted.

Operator response

Ensure that the specified target file is a valid filename and that the subdirectory actually exists. Also ensure that the file permission settings on the subdirectory and the target file itself will allow the file to be created or overwritten. If the target filename was acquired from the AMP unpacking configuration file and is not correct, make corrections to the AMP unpacking configuration file. Then retry the operation.

IHS2414E **An error occurred during AMP file extraction while writing to a target file. Target Filename: *targetFilename***

Explanation

The topology server or ihsaunpk utility encountered an error writing to the specified target file while trying to extract an entry from an AMP file.

Message Variables

targetFilename

The filename of the target file that had the write error.

System action

The specified target file is not successfully written and the corresponding AMP entry is not completely extracted.

Operator response

Ensure that the specified target file is a valid filename and that the subdirectory actually exists. Also ensure that the file permission settings on the subdirectory and the target file itself will allow the file to be created or overwritten. If the target filename was acquired from the AMP unpacking configuration file and is not correct, make corrections to the AMP unpacking configuration file. Ensure that the target disk is not full. Then retry the operation.

IHS2415E	An error occurred during AMP file extraction while closing a target file. Target Filename: targetFilename
-----------------	--

Explanation

The topology server or ihsaunpk utility encountered an error closing the specified target file while trying to extract an entry from an AMP file.

Message Variables

targetFilename

The filename of the target file that had the close error.

System action

The specified target file might not be successfully written and the corresponding AMP entry might not be not completely extracted.

Operator response

Ensure that the specified target file is a valid filename and that the subdirectory actually exists. Also ensure that the file permission settings on the subdirectory and the target file itself will allow the file to be created or overwritten. If the target filename was acquired from the AMP unpacking configuration file and is not correct, make corrections to the AMP unpacking

configuration file. Ensure that the target disk is not full. Then retry the operation.

IHS2416I	A file was successfully created from an AMP file entry. AMP Filename: AMP_filename Entry name: AMPEntryName File created: FileCreated
-----------------	--

Explanation

The topology server or ihsaunpk utility successfully extracted the specified entry from the specified AMP file and created the specified file.

Message Variables

AMP_filename

The filename of the AMP file from which the entry was extracted.

AMPEntryName

The name of the AMP file entry that was extracted.

FileCreated

The filename of the file that was created as a result of the extraction.

System action

An entry is extracted from the AMP file and a new file is created.

IHS2417I	A file was successfully overwritten by an AMP file entry. AMP Filename: AMP_filename Entry name: AMPEntryName File overwritten: FileOverwritten
-----------------	--

Explanation

The topology server or ihsaunpk utility successfully extracted the specified entry from the specified AMP file and overwrote the specified file.

Message Variables

AMP_filename

The filename of the AMP file from which the entry was extracted.

AMPEntryName

The name of the AMP file entry that was extracted.

FileOverwritten

The filename of the file that was overwritten as a result of the extraction.

System action

An entry is extracted from the AMP file and an older file is overwritten.

IHS2418I	AMP entry was not extracted. AMP entry is not newer than the target file. AMP Filename: <i>AMP_filename</i> Entry name: <i>AMPEnterName</i> Target Filename: <i>targetFilename</i>	Operator response
Explanation	The topology server or ihsaunpk utility did not extract the specified entry from the specified AMP file because the AMP file entry has a timestamp that is not newer than the last modification timestamp of the specified target file.	Invoke ihsaunpk using the correct command line syntax.
Message Variables	<i>AMP_filename</i> The filename of the AMP file from which the entry was not extracted. <i>AMPEnterName</i> The entry that was not extracted. <i>targetFilename</i> The target file that was not overwritten.	IHS2420E No files meeting the file specification were found. File specification: <i>AMPFileSpecification</i>
System action	The specified target file is not modified and the specified entry is not extracted.	Explanation The ihsaunpk utility found no files meeting the specified AMP file specification that was passed on the command line. Message Variables <i>AMPFileSpecification</i> The AMP file specification for which no files were found. System action No AMP files are processed and the command line syntax message is displayed.
Operator response		Re-start the utility using one or more valid AMP file specifications.
IHS2419I	Syntax is: ihsaunpk [-v -k -K] [-t <i>testbedDirName</i>] [-n] <i>amp1spec</i> [<i>amp2spec</i> ... [<i>ampNspec</i>]]	IHS2421E Unable to delete <i>fileToDelete</i>
Explanation	The ihsaunpk utility was invoked with incorrect command line syntax.	Explanation The topology server or ihsaunpk utility was unable to delete the specified file. Message Variables <i>fileToDelete</i> The filename of the file that cannot be deleted.
Message Variables	<i>testbedDirName</i> The name of the testbed subdirectory in which the AMP file is to be unpacked. <i>amp1name</i> The file specification of one or more AMP files to be processed. <i>amp2name</i> Another file specification of one or more AMP files to be processed. <i>ampNname</i> Yet another file specification of one or more AMP files to be processed.	System action The specified file is not deleted.
System action	This informational message is displayed.	Operator response Check the file permissions on the specified files and modify them if necessary. Ensure that no other applications have the file locked. Then retry the operation.
IHS2422I	Deleted <i>fileToDelete</i>.	
Explanation	The topology server or ihsaunpk utility deleted the specified file.	Message Variables

fileToDelete

The filename of the file that was deleted.

System action

The specified file is deleted.

IHS2423W **The AMP file being imported contains an entry with the same name as an existing instrumentation file. AMP Filename: *AMP_filename* Existing Instrumentation Filename: *existingFilename***

Explanation

A request was made to the topology server to dynamically load a new AMP file. The AMP file contains an entry with the same filename as an existing instrumentation that has previously been installed. This is not allowed. New in this context means not containing any files that collide with instrumentation files already installed on the topology server.

Message Variables***AMP_filename***

The filename of the new AMP file for which the dynamic load request was made.

existingFilename

The filename of the already installed instrumentation file to be overwritten if the requested new AMP file had been dynamically loaded.

System action

The AMP file is not loaded by the server.

Operator response

Verify that the correct AMP filename has been specified. If so, notify your system programmer.

System programmer response

Contact the provider of the AMP file and ask that the entry in the AMP file be renamed to a name that does not collide with any previously installed files. This might or might not require that corresponding changes be made to other entries in the AMP file that reference the renamed entry. You might want to use the `ihsaunpk` utility on the topology server to try to manually install the AMP. You can then examine the AMP file unpacking log to determine if there are any additional conflicts.

IHS2424E **The AMP file cannot be imported because an AMP file with this**

name has already been installed.

AMP Filename: *AMP_filename*

Explanation

A request was made to the topology server to dynamically load a new AMP file. An AMP file with the specified filename already exists on the topology server. This is not allowed.

Message Variables***AMP_filename***

The filename of the new AMP file for which the dynamic load request was made.

System action

The AMP file is not loaded by the server.

Operator response

Verify that the correct AMP filename has been specified. If so, notify your system programmer.

System programmer response

If the AMP files are actually different sets of instrumentation, rename one of them and try again.

IHS2425I **The AMP file import completed. AMP Filename: *AMP_filename***

Explanation

The topology server successfully loaded the specified AMP file.

Message Variables***AMP_filename***

The filename of the AMP file that was successfully loaded.

System action

The AMP file is successfully loaded by the topology server.

IHS2426E **The AMP file was not imported because an error occurred during extraction. AMP Filename: *AMP_filename***

Explanation

A request was made to the topology server to dynamically load a new AMP file. An error occurred during the extraction of one or more entries. The AMP file was not loaded.

Message Variables

AMP_filename

The filename of the new AMP file for which the dynamic load request was made.

System action

The AMP file is not loaded by the server.

Operator response

Verify that the correct AMP filename has been specified.

System programmer response

Verify that the format of the AMP file is correct by using the tserver ihsaunpk utility on the server with the -v parameter to list its contents.

IHS2429I	The instrumentation description files for the following business system have been installed on the topology server. Manufacturer: Manufacturer Product: Product Version: Version
-----------------	---

Explanation

The AMP file for the specified business system was successfully loaded by the topology server.

Message Variables

Manufacturer

The manufacturer of the business system for which the AMP was installed.

Product

The product name of the business system for which the AMP was installed.

Version

The product version of the business system for which the AMP was installed.

System action

The instrumentation description files for the specified business system were loaded by the topology server.

IHS2430E	The AMP file cannot be imported because one of its entries contains a syntax error or is missing a required group. AMP Filename: ampFilename AMP Entry: ampEntryFilename
-----------------	---

Explanation

A request was made to the topology server to dynamically load a new AMP file. One or more of the entries in the specified AMP file are description files

that contain a syntax error or are missing a required group.

Message Variables

ampFilename

The filename of the new AMP that was requested to be loaded.

ampEntryFilename

The filename of the entry within the AMP file that contains the syntax error or is missing a required group.

System action

The AMP file is not loaded.

Operator response

Verify that the correct AMP filename was specified.

System programmer response

Correct the syntax error or add the missing required group in the specified AMP file entry and try importing the AMP file again.

IHS2431E	The AMP file cannot be imported because the internal identifiers of one of its entries are the same as an existing file. AMP Filename: ampFilename AMP Entry: ampEntryFilename Existing Filename: existingFilename
-----------------	---

Explanation

A request was made to the topology server to dynamically load an AMP file. The specified AMP file contains one or more entries which are description files whose internal identifiers are the same as an existing description file that is already installed on the topology server. This is not allowed.

Message Variables

ampFilename

The AMP file that the topology server was requested to load.

ampEntryFilename

The entry in the specified AMP file which is a description file whose internal identifiers are the same as an existing description file that is already installed on the topology server.

existingFilename

The existing description file that is already installed on the server with which the specified AMP file entry conflicted.

System action

The AMP file is not imported.

Operator response

Verify that the correct AMP file was specified. If so, notify your system programmer.

System programmer response

Modify the contents of the conflicting AMP file entry to eliminate the conflict and modify any other entries in the AMP that reference the entry being modified. The internal identifiers for a description file are the following:

- Manufacturer
- Product
- Version
- Abstraction level

IHS2432E	The AMP file cannot be imported because it would overwrite an existing file. AMP Filename: <i>ampFilename</i> Existing Filename: <i>existingFilename</i>
-----------------	---

Explanation

A request was made to the topology server to dynamically load an AMP file. The specified AMP file contains one or more entries whose filenames are the same as files already installed on the topology server, but whose contents are different than the files that they overlay if the AMP file were loaded. This is not allowed.

Message Variables

ampFilename

The AMP file that the topology server was requested to load.

existingFilename

The existing file that is already installed on the server whose filename is the same as one of the entries in the specified AMP file.

System action

The AMP file is not imported.

Operator response

Verify that the correct AMP file was specified.

System programmer response

Change the file name of the conflicting AMP file entry to a filename that does not already exist on the

topology server. Then change any entries in the AMP file that reference the renamed entry to the new name, and try reloading the AMP file.

IHS2433W	The AMP file contained no entries to be extracted that were not already installed on the server. AMP Filename: <i>ampFilename</i>
-----------------	--

Explanation

A request was made to the topology server to dynamically load an AMP file. All of the entries to be extracted from the specified AMP were already installed on the topology server and they are identical to the entries in the specified AMP file.

Message Variables

ampFilename

The AMP file that the topology server was requested to load.

System action

The AMP file is not imported.

Operator response

Verify that the correct AMP file was specified.

IHS2500E	xdfmaint command queue file not found.
-----------------	---

Explanation

The server attempted to read the xdfmaint command queue file but was not successful.

System action

No queued xdfmaint commands are processed.

Operator response

Before you execute the run or runforce commands, queue the xdfmaint commands.

System programmer response

If the xdfmaint commands were queued prior to executing the run or runforce commands, and you cannot resolve the problem, contact IBM Software Support.

IHS2501I	Removing MIF object ID: <i>mpvTriplet</i> Abstraction Level: <i>absLevel</i> Filename: <i>xdFilename</i>
-----------------	---

Explanation

The server is removing a MIF Object from its database.

Message Variables

mpvTriplet

The "Manufacturer;Product;Version" triplet that uniquely identifies the MIF object that is being removed.

absLevel

The abstraction level of the MIF object that is being removed.

xdfFilename

The filename of the BDF, CDF, or GDF file that contains the MIF object that is being removed.

System action

The MIF object is removed from the server database.

IHS2502E **Error deleting BDF file Filename: *bdfFilename* ID: *mpvTriplet* Level: *absLevel***

Explanation

The server attempted to delete a BDF file from its database but was not successful.

Message Variables

bdfFilename

The filename of the BDF file that is being removed.

mpvTriplet

The "Manufacturer;Product;Version" triplet that uniquely identifies the component that is being removed.

absLevel

The abstraction level of the component that is being removed.

System action

The BDF file is not removed from the server database.

Operator response

Ensure the BDF file is the correct one to be removed.

System programmer response

Ensure the BDF file is the correct one to be removed. If you cannot resolve the problem, contact IBM Software Support.

IHS2503E **Error deleting file Filename: *xdfFilename***

Explanation

The server attempted to delete an BDF, CDF, or GDF file from its database but was not successful.

Message Variables

xdfFilename

The filename of the BDF, CDF, or GDF file that is being removed.

System action

The file is not removed from the server database.

Operator response

Ensure the file is the correct one to be removed.

System programmer response

Ensure the file is the correct one to be removed. If you cannot resolve the problem, contact IBM Software Support.

IHS2504E **Error deleting CDF file Filename: *cdfFilename***

Explanation

The server attempted to delete a CDF file from its database but was not successful.

Message Variables

cdfFilename

The filename of the CDF file that is being removed.

System action

The CDF file is not removed from the server database.

Operator response

Ensure the CDF file is the correct one to be removed.

System programmer response

Ensure the CDF file is the correct one to be removed. If you cannot resolve the problem, contact IBM Software Support.

IHS2505E **An error occurred while deleting a resource type database entry ID: *mpvTriplet* Abstraction Level: *absLevel* Filename: *xdfFilename***

Explanation

The server attempted to delete a resource type from its database but was not successful.

Message Variables

mpvTriplet

The "Manufacturer;Product;Version" triplet that uniquely identifies the resource type that is being removed.

absLevel
The abstraction level of the resource type that is being removed.

xdfFilename
The filename of the BDF, CDF, or GDF file that is being removed.

System action
The resource type is not removed from the server database.

Operator response
Ensure the resource type is the correct one to be removed.

System programmer response
Ensure the resource type is the correct one to be removed. If you cannot resolve the problem, contact IBM Software Support.

IHS2506E **The CDF cannot be removed because it is still referenced by a GDF. CDF ID: *cdfMpvTriplet* CDF Filename: *cdfFilename* GDF ID: *gdfMpvTriplet* GDF Filename: *gdfFilename***

Explanation
The server attempted to delete a CDF from its database but was not successful because the CDF was referenced by an existing GDF.

Message Variables

cdfMpvTriplet
The "Manufacturer;Product;Version" triplet that uniquely identifies the CDF that is being removed.

cdfFilename
The filename of the CDF file that is being removed.

gdfMpvTriplet
The "Manufacturer;Product;Version" triplet that uniquely identifies the GDF that references the CDF.

gdfFilename
The filename of the GDF file that references the CDF.

System action
The CDF is not removed from the server database.

Operator response
Ensure the CDF is the correct one to be removed.

System programmer response
Ensure the CDF is the correct one to be removed. If you cannot resolve the problem, contact IBM Software Support.

IHS2507I **Command added to queue**

Explanation
The xdfmaint command has been successfully added to the server xdfmaint command queue file.

System action
The xdfmaint command has been successfully queued. It will be processed when the run or runforce command is executed.

IHS2508E **File not found. Filename: *filename***

Explanation
The server cannot find the required file.

Message Variables

filename
The filename that the server was looking for.

System action
Since the required file cannot be found, no action was taken by the server.

Operator response
Ensure that the specified file exists.

System programmer response
Ensure that the specified file exists. If you cannot resolve the problem, contact IBM Software Support.

IHS2509E **Clients remained logged on. Requests not processed.**

Explanation
The server attempted to process the queued xdfmaint commands but was not successful because all of the clients did not log off within the required time period.

System action
No action was taken by the server, because some clients remained logged on.

Operator response
Do the following:

1. Ensure all clients log off the server.

2. Run the command again.

System programmer response

Do the following:

1. Ensure all clients log off the server.
2. Run the command again.

IHS2510E	Unable to lock databases. Requests not processed.
-----------------	--

Explanation

The server attempted to process the queued *xdfmaint* commands but was not successful because it cannot lock its databases.

System action

No action was taken by the server, because the databases cannot be locked.

Operator response

Do the following:

1. Verify that the server is in a proper state.
2. Run the command again.

System programmer response

Do the following:

1. Verify that the server is in a proper state.
2. Run the command again.

IHS2511E	An invalid <i>xdfmaint</i> command was found and ignored. Command: <i>command</i>
-----------------	--

Explanation

The server has found an incorrect command queued in the *xdfmaint* command queue file.

Message Variables

command

The incorrect command found in the *xdfmaint* command queue file.

System action

The incorrect command is ignored and the processing of the command queue continues.

Operator response

Processing continues, so no intervention required.

System programmer response

Processing continues, so no intervention required.

IHS2512E	A file being extracted from the AMP already exists with a different M;P;V triplet. AMP filename: <i>ampFile</i> Existing filename: <i>existFile</i>
-----------------	--

Explanation

The server has found a file being extracted from the specified AMP already exists, and the existing file has a different M;P;V triplet. This cannot be resolved.

Message Variables

ampFile

The filename of the AMP being loaded.

existFile

The filename of the existing file containing a deferent M;P;V triplet.

System action

Since the M;P;V discrepancy cannot be resolved, the load AMP/load changed AMP command is stopped.

Operator response

Either remove the package that contains the conflicting M;P;V, or the new package cannot be added. Contact the vendor of the package to report the error in conflicting file names.

System programmer response

Either remove the package that contains the conflicting M;P;V, or the new package cannot be added. Contact the vendor of the package to report the error in conflicting file names.

IHS3700I	The command <i>command</i> for resource <i>resource</i> is scheduled.
-----------------	--

Explanation

The generic command is scheduled for delivery to the appropriate gateway. Response data is expected.

Message Variables

command

The generic command that is delivered. Examples of the generic command are Current status, Activate, Inactivate, and Recycle.

IHS3701I	<i>command</i>
-----------------	-----------------------

Explanation

The network command or resource-specific command is scheduled for delivery to the appropriate gateway. Response data is expected.

Message Variables

command

The command that is delivered.

IHS3702I **A status of status for resource resource was returned from the command command. This message displays after an IHS3700I message.**

Explanation

The generic command successfully completed. The resulting resource status is displayed as part of the message.

Message Variables

status

The status of the resource after the command is completed.

resource

The resource name.

command

The generic command that is issued.

IHS3703I **response**

Explanation

This is a network command response or resource-specific command response. The associated command was previously displayed with an IHS3701I message.

Message Variables

response

The text of the command response.

IHS3704I **No response is expected for this domain.**

Explanation

A response is not sent back for this command for either of the following reasons:

- The IBM Z NetView system processing this command is not at the correct level to return responses to commands. The command is still executed.
- The command response bit of the DomainCharacteristics attribute in RODM is set to zero. When this bit is set to zero, command responses are not supported for the domain.

System action

The IBM Z NetView Graphic Monitor Facility host subsystem (GMFHS) processes the command.

Operator response

Contact your system programmer if responses are expected or needed.

System programmer response

If responses for this domain are wanted, verify that the command response bit of the DomainCharacteristics attribute in RODM is not set to zero. If changes are made and loaded into RODM, issue the GMFHS command CONFIG NETWORK from a IBM Z NetView operator to allow GMFHS access to the configuration changes.

See the *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide* for additional information.

IHS3705E **The NMG NMG reported that the command was not recognized.**

Explanation

The Network Management Gateway (NMG) or element management system did not recognize the command as a valid command. The associated command was previously displayed with an IHS3700I or an IHS3701I message.

Message Variables

NMG

The name of the NMG.

Operator response

Ensure that the command was entered correctly and then retry the command. If the command was entered correctly and the problem persists, contact your system programmer.

System programmer response

Ensure that the command was correctly defined in the Resource Object Data Manager (RODM) for this NMG or element management system. See the *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide* for additional information.

IHS3706E **The gateway gateway reported that it cannot send the command to the NMG or the element management system.**

Explanation

The gateway cannot transport the command to the Network Management Gateway (NMG) or the element management system. The associated command was previously displayed with an IHS3700I or an IHS3701I message.

Message Variables

gateway
The name of the gateway.

Operator response

Contact your system programmer.

System programmer response

Restore the connection to the NMG or the element management system.

IHS3707E	The element management system reported that the resource resource is unknown to it.
-----------------	--

Explanation

The target resource of the command is not known to the element management system.

Message Variables

resource
The name of the resource that is unknown to the element management system.

Operator response

Contact your system programmer.

System programmer response

Ensure that the Resource Object Data Manager (RODM) is correctly defined for this resource and that the element management system is correctly set up to recognize this resource. See the *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide* for additional information.

IHS3708E	The NMG or element management system for domain domain reported that a command parameter was not valid.
-----------------	--

Explanation

The Network Management Gateway (NMG) or element management system for this domain reports that the command contains an incorrect or unknown parameter. The associated command was previously displayed with an IHS3700I or an IHS3701I message.

Message Variables

domain
The name of the IBM Z NetView Graphic Monitor Facility host subsystem (GMFHS) domain.

Operator response

Enter a valid command parameter and retry the command.

IHS3709I	The NMG or element management system reported that the command is not allowed.
-----------------	---

Explanation

The Network Management Gateway (NMG) or element management system rejected the command as not being allowed from this operator. The associated command was previously displayed with an IHS3700I or an IHS3701I message.

Operator response

Ensure that the command was entered correctly. If the command was entered correctly and you get this message, contact your system programmer.

System programmer response

Correct the span and scope authorization tables for this NMG or element management system.

IHS3710E	The command is currently not allowed.
-----------------	--

Explanation

The Network Management Gateway (NMG) or the element management system rejected the command as not being allowed currently (but not permanently disallowed) from this operator. The associated command was previously displayed with an IHS3700I or an IHS3701I message.

Operator response

Retry the command. If the condition persists, contact your system programmer.

System programmer response

Determine the cause of the problem at the NMG or element management system and then correct the problem.

IHS3711I	The command was cancelled in the native network.
-----------------	---

Explanation

The Network Management Gateway (NMG) or element management system reports that the command has been cancelled. The associated command was previously displayed with an IHS3700I or an IHS3701I message.

Operator response

Retry the command. If the condition persists, contact your system programmer.

System programmer response

Determine the cause of the cancellation at the NMG or element management system and correct the problem.

IHS3712E	The native element manager reported that the command failed due to a permanent failure.
-----------------	--

Explanation

The Network Management Gateway (NMG) or element management system reports that the command failed because of a permanent failure. The associated command was previously displayed with an IHS3700I or an IHS3701I message.

Operator response

Retry the command. If the problem persists, contact your system programmer.

System programmer response

Determine the cause of the failure at the NMG or element management system and correct the problem.

IHS3713E	The command timed out.
-----------------	-------------------------------

Explanation

The Common Operations Services (COS) gateway or the IBM Z NetView Graphic Monitor Facility host subsystem (GMFHS) reports that a response was not received for the command within a timeout interval. If the CommandTimeoutInterval domain attribute was not defined, then the default timeout interval is 2 minutes.

System action

The command is cancelled by GMFHS and an important message will be logged in the GMFHS error log by the Network Command Manager.

Operator response

Retry the command. If the condition persists, contact your system programmer.

System programmer response

Determine which task, COS gateway, or GMFHS, timed out the command and, if defined, verify that the domain attribute CommandTimeoutInterval is properly defined in the Resource Object Data Manager (RODM). See the *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide* for information about attributes for timeout intervals.

IHS3714E	The NMG NMG reported a system error.
-----------------	---

Explanation

The Network Management Gateway (NMG) reports a system error. The associated command was previously displayed with an IHS3700I or an IHS3701I message.

Message Variables

NMG

The name of the NMG.

System action

The error is logged in the IBM Z NetView Graphic Monitor Facility host subsystem (GMFHS) error log.

Operator response

Contact your system programmer.

System programmer response

Locate the error report in the GMFHS error log and determine the cause of the error. If you cannot correct the error, save the error log file and have the information available when you contact your IBM Support Center. See the *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide* additional information.

IHS3715E	The command is not supported.
-----------------	--------------------------------------

Explanation

The Network Management Gateway (NMG), element management system, or the IBM Z NetView Graphic Monitor Facility host subsystem (GMFHS) reports that the command is not supported.

If the PresentationProtocolName that is defined in the IBM Z NetView Resource Object Data Manager (RODM) for this domain is PASSTHRU, then Activate, Inactivate, Recycle, and Display status are rejected by

GMFHS. The associated command was previously displayed with an IHS3700I or an IHS3701I message.

Operator response

Verify that the command was entered correctly. If the problem persists, contact your system programmer.

System programmer response

Ensure that the NMG or element management system is configured correctly and is initialized to support this command. See the *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide* for additional information.

IHS3716E The command failed, please retry later.

Explanation

The Network Management Gateway (NMG) or element management system reports that the command failed for a temporary reason and that you can resubmit it at a later time. The associated command was previously displayed with an IHS3700I or an IHS3701I message.

Operator response

Retry the command. If the condition persists, contact your system programmer.

System programmer response

Determine the reason for the failure at the NMG or element management system and correct the problem.

IHS3717E The operator is no longer logged on to IBM Z NetView or is not authorized to issue this command.

Explanation

You are not authorized to issue this command or you are not logged on to IBM Z NetView. The associated command was previously displayed with an IHS3700I or an IHS3701I message.

Operator response

Ensure that you entered the correct command and that you are logged on to IBM Z NetView. If the problem persists, contact your system programmer.

System programmer response

Ensure that the operator is authorized to issue this command and that the operator is logged on to IBM Z NetView.

IHS3718E You are not allowed to enter this command for resource *resource*.

Explanation

You are not authorized to issue this command for this resource. The resource is not in your span of control.

The associated command was previously displayed with an IHS3700I or an IHS3701I message.

Message Variables

resource

The name of the resource.

Operator response

Do the following:

1. Ensure that you entered the command correctly.
2. Check your profile to see if this resource is in your span of control.
3. If the problem persists, contact your system programmer.

System programmer response

Ensure that the operator is authorized to issue this command for this resource.

IHS3719I GMFHS is not ready to accept commands.

Explanation

The IBM Z NetView Graphic Monitor Facility host subsystem (GMFHS) is not ready to accept commands. This can be because:

- The Resource Object Data Manager (RODM) application program interface is temporarily unavailable.
- The configuration initialization of GMFHS is not complete.
- The Network Management Gateway (NMG) session is not completely established.

The associated command was previously displayed with an IHS3700I or an IHS3701I message.

Operator response

Retry the command. If the condition persists, contact your system programmer.

System programmer response

Verify that RODM, GMFHS, and NMG sessions have completed initialization.

IHS3720E The resource *resource* is unknown to GMFHS.

Explanation

The target resource of a command is not defined within the Resource Object Data Manager (RODM). This error can be caused by the dynamic reconfiguration of a domain's resources in RODM or because the resource has been deleted.

Message Variables***resource***

The name of the resource.

Operator response

Retry the command. If the condition persists, contact your system programmer.

System programmer response

Verify that the resource is defined and that it is loaded correctly into RODM. See the *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide* for additional information.

IHS3722I The command is not supported by the gateway *gateway*.

Explanation

The command is not supported by the required gateway. The associated command was previously displayed with an IHS3700I or an IHS3701I message.

Message Variables***gateway***

The name of the IBM Z NetView Graphic Monitor Facility host subsystem (GMFHS) gateway.

Operator response

Ensure that you entered the correct command. If you entered the correct command and the error persists, contact your system programmer.

System programmer response

Ensure that the gateway is defined to support this command.

IHS3723I Network commands are not allowed for domain objects.

Explanation

A network command was entered against a view object which is a domain object. Domain objects are

not real resources and cannot be acted upon with network control commands.

System action

The command is not executed. An important message will be logged in the IBM Z NetView Graphic Monitor Facility host subsystem (GMFHS) error log by the Network Command Manager.

Operator response

Do not issue network commands against domain objects. Their status must only be monitored as an indication of the status of the session between GMFHS and the domains.

IHS3724I Parameter substitution is incorrect for this resource *resource*.

Explanation

A network command or resource-specific command included substitution parameters, but the Resource Object Data Manager (RODM) was not configured properly to support the substitution of the service point name or application name for this resource. The associated command was previously displayed with a IHS3700I or a IHS3701I message.

Message Variables***resource***

The name of the resource.

System action

The command is not delivered to the element management system.

Operator response

Verify that you are using the correct parameter substitution and then retry the command. If the substitution failure persists, contact your system programmer.

System programmer response

Ensure that RODM attributes for the resource are defined to support parameter substitution. See the *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide* for additional information.

IHS3725E The gateway *gateway* session is unavailable. The status of the command is unknown.

Explanation

The command cannot be delivered because of one of the following reasons:

- The gateway session is inactive.
- The gateway session across which the command was sent was lost before the command response was received.

The associated command was previously displayed with a IHS3700I or a IHS3701I message.

Message Variables

gateway

The name of the Network Management Gateway (NMG).

Operator response

Retry the command later. If the gateway session is not restored, contact your system programmer.

System programmer response

Restore the gateway session.

IHS3726E	A system error occurred in GMFHS.
-----------------	--

Explanation

An internal error occurred while the Tivoli NetView Graphic Monitor Facility host subsystem (GMFHS) was processing a network command. An error report is logged by the Network Command Manager in the GMFHS error log. The associated command was previously displayed with a IHS3700I or a IHS3701I message.

System action

The error is logged in the GMFHS log.

Operator response

Contact your system programmer.

System programmer response

Locate the error report in the GMFHS error log and determine the cause of the system error. If you cannot correct the error, save the error log file and have the information available when you contact your IBM Support Center

See *IBM Z NetView Troubleshooting Guide* for additional information.

IHS3727E	A system error occurred in DUIFSSCO while processing this command.
-----------------	---

Explanation

A system error occurred in the scope-checker task DUIFSSCO while processing this command. The associated command was previously displayed with a IHS3700I or a IHS3701I message.

System action

The error is logged in the IBM Z NetView error log.

Operator response

Contact your system programmer.

System programmer response

Locate the error in the IBM Z NetView log and have the information available when you contact your IBM Support Center.

See *IBM Z NetView Troubleshooting Guide* for additional information.

IHS3728I	The total length of the command text exceeds the maximum allowed by GMFHS.
-----------------	---

Explanation

The command text that was entered is greater than the maximum that is allowed by the Tivoli NetView Graphic Monitor Facility host subsystem (GMFHS).

System action

The command is not sent.

Operator response

Determine the maximum length that is allowed. If possible, shorten the command and then send the command again. If the problem persists, contact your system programmer.

System programmer response

Shorten the length of the command text. See the *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide* for information about commands that are to be sent to Network Management Gateways and element management systems using GMFHS.

IHS3729E	A system error has occurred formatting the command in the workstation.
-----------------	---

Explanation

The workstation created a command that the host cannot recognize. The associated command was

previously displayed with a IHS3700I or a IHS3701I message.

System action

The error is logged by the Network Command Manager in the IBM Z NetView Graphic Monitor Facility host subsystem (GMFHS) error log.

Operator response

Contact your system programmer.

System programmer response

Find the error report in the GMFHS error log and have the information available when you contact your IBM Support Center.

See *IBM Z NetView Troubleshooting Guide* for additional information.

IHS3733E	A system error occurred on the workstation.
-----------------	--

Explanation

A general system error has occurred during the command exit execution.

System action

The command exit fails and the error is logged in the Tivoli NetView Graphic Monitor Facility error log.

Operator response

Contact your system programmer.

System programmer response

Locate the error report in the Tivoli NetView Graphic Monitor Facility error log and have the information available when you contact your IBM Support Center.

See *IBM Z NetView Troubleshooting Guide* for additional information.

IHS3755E	GMFHS has determined that the PPI receiver application is not active.
-----------------	--

Explanation

The Tivoli NetView Graphic Monitor Facility host subsystem (GMFHS) Network Command Manager has determined that the program-to-program Interface (PPI) Network Management Gateway (NMG) transport application is not active.

System action

The command execution fails because it cannot be delivered to the NMG. This error is logged in the GMFHS error log for the Network Command Manager component.

Operator response

Contact your system programmer.

System programmer response

Activate the program-to-program receiver application. See the *IBM Z NetView Application Programmer's Guide* for information about setting up a program-to-program receiver application, and see *IBM Z NetView User's Guide: NetView* for information about activating program-to-program applications.

IHS3759I	The remote console string is not defined correctly.
-----------------	--

Explanation

An error occurred while looking for the remote console command or its parameters.

System action

The remote console is not started.

Operator response

Contact your system programmer.

System programmer response

Do the following:

- See the *IBM Z NetView Customization Guide* for information about remote console support, and correct the remote console command string definition for the appropriate resources in the Resource Object Data Manager (RODM).
- Reload RODM.

See the *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide* for additional information.

IHS3760I	The remote console support failed to start.
-----------------	--

Explanation

An error occurred starting the remote console. The error was caused by one of the following reasons:

- The remote console command is not executable on the console's operating system.

- There are insufficient system resources to start the program.
- Incorrect parameters were supplied to the remote console command.

System action

A remote console is not started.

Operator response

Contact your system programmer.

System programmer response

Do the following:

- Correct the definition in the remote console command string for the appropriate resources in the Resource Object Data Manager (RODM).
- Reload RODM.

See the *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide* for additional information.

IHS3761I **GMFHS is not available or the command has timed out at the workstation.**

Explanation

The Tivoli NetView Graphic Monitor Facility host subsystem (GMFHS) session is inactive for one of the following reasons:

- GMFHS has not been started.
- The connection to GMFHS is inactive.
- The graphic data server timed out the request to GMFHS.

Operator response

Do the following:

- If the session with IBM Z NetView failed, issue a NETCONV command to re-establish your session with the topology server and IBM Z NetView.
- Contact your system programmer to start GMFHS if NETCONV is successful and the GMFHS session is still inactive.

System programmer response

Start GMFHS if it is not active. If GMFHS is active, verify that all GMFHS subtasks are initialized and ready to receive requests.

Verify that the timeout values that are specified for the workstation application issuing this message are

appropriately defined. Increase the appropriate timeout values if necessary.

See *IBM Z NetView Troubleshooting Guide* for additional information on command request timeout scenarios.

IHS3762I **The NetView task DUIFSSCO is not active.**

Explanation

You must start the scope checker DUIFSSCO IBM Z NetView task before you can issue this command. This task performs scope checking, span checking, and Alert history request support for the Tivoli NetView Graphic Monitor Facility host subsystem (GMFHS).

Operator response

Start the DUIFSSCO task in IBM Z NetView. If DUIFSSCO remains unavailable, contact your system programmer.

System programmer response

Verify that the GMFHS interface to Scope checker is available by issuing the GMFHS STATUS command from the IBM Z NetView operator.

See *IBM Z NetView Command Reference Volume 1 (A-N)* for information on GMFHS operator commands.

IHS3763E **GMFHS has encountered an error in the RODM configuration attributes.**

Explanation

An error occurred when the Tivoli NetView Graphic Monitor Facility host subsystem (GMFHS) attempted to process a network command. The resource configuration definition in the Resource Object Data Manager (RODM) is not valid and GMFHS has been initialized with configuration errors.

System action

The error is logged in the GMFHS error logs.

Operator response

Contact your system programmer.

System programmer response

Do the following:

- Locate the information in GMFHS error logs for Network Configurator Manager.

- Reconfigure the resource definitions in the RODM database to enable the command execution.
- Synchronize GMFHS with RODM by issuing a GMFHS CONFIG NETWORK command.

See *IBM Z NetView Troubleshooting Guide* and the *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide* for additional information.

IHS3764I The RODM configuration attributes for the NMG or domain are not defined for commands.

Explanation

The Tivoli NetView Graphic Monitor Facility host subsystem (GMFHS) cannot process the network control command. The resource configuration definition for the Network Management Gateway (NMG) or domain in the Resource Object Data Manager (RODM) database is valid, but is not applicable for the attempted network control command.

Possible reasons for the error are:

- The TransportProtocolName in the NMG_Class is NONE.
- The TransportProtocolName in the NMG_Class is OST and the SessionProtocolName in the Non_SNA_Domain_Class is DOMS010.
- The SessionProtocolName in the Non_SNA_Domain_Class is NONE.
- The PresentationProtocolName in the Non_SNA_Domain_Class is NONE.
- The PresentationProtocolName in the Non_SNA_Domain_Class is DOMP020 and no command text is specified in the command text attributes of the Non_SNA_Domain_Class of the GMFHS_Managed_Real_Resources_Class.

System action

The error is logged in the GMFHS error log.

Operator response

Contact your system programmer.

System programmer response

Do the following:

- Locate the information in the GMFHS error log.
- Reconfigure the resource definitions in the RODM database to enable the command execution.
- Issue a GMFHS CONFIG NETWORK command to give GMFHS access to the configuration changes.

See *IBM Z NetView Troubleshooting Guide* and the *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide* for additional information.

IHS3767I The COS gateway reported an error from the service point application.

Explanation

The Common Operations Services (COS) gateway attempted to deliver the command to the service point application and received an error condition that indicated either no response was received or that the response was not valid.

Operator response

If the error persists, contact your system programmer.

System programmer response

Verify that the service point application is working correctly.

IHS3768I The COS gateway task is not active.

Explanation

The Common Operations Services (COS) gateway task DUIFCSGW is not available for one of the following reasons:

- COS gateway autotask is not initialized.
- COS gateway ended abnormally.

Operator response

Contact your system programmer.

System programmer response

Start the COS gateway autotask. If this is unsuccessful, retrieve the IBM Z NetView log and contact your IBM Support Center.

See *IBM Z NetView Troubleshooting Guide* for additional information.

IHS3769I The COS gateway cannot establish a session with a distributed NetView program.

Explanation

The Common Operations Services (COS) gateway cannot establish a session with a distributed NetView program for one or more of the following reasons:

- The distributed IBM Z NetView is not active.

- The COS gateway autotask is not active on a distributed IBM Z NetView.
- The Resource Object Data Manager (RODM) attribute CommandRouteLUName does not match the distributed IBM Z NetView name.

Operator response

Contact your system programmer.

System programmer response

Do the following:

- Verify that the distributed IBM Z NetView and COS gateway autotasks are active.
- Verify that the RODM attribute CommandRouteLUName matches the distributed IBM Z NetView name.

See the *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide* for additional information.

IHS3770E The COS gateway does not recognize the command or received an error from the Tivoli NetView RUNCMD processor task DSIGDS.

Explanation

The Common Operations Services (COS) gateway does not recognize the command for one of the following reasons:

- The RUNCMD command processor DSIGDS is not active.
- The command contains characters that are not valid or has an incorrect length.
- The operator is not authorized to issue the command.
- Installation exit DSIEX19 rejected the command.

Operator response

Contact your system programmer.

System programmer response

Do the following:

- If necessary, activate the RUNCMD command processor DSIGDS.
- Verify that the command is correct.
- Verify that the operator is authorized to issue the command.

- Browse the IBM Z NetView log. If installation exit DSIEX19 rejected the command, message BNH192E is logged.

IHS3771E The RODM NMG attributes are not defined correctly or the NMG has detected an error while attempting to deliver a command.

Explanation

This error might have occurred for one of the following reasons:

- The Resource Object Data Manager (RODM) TransportProtocolName attribute is not defined correctly.
- An incorrect service point name was entered in the command.
- The PU or LU is not active.
- The service point application is on an SSCP-PU NMG and the RODM NMG WindowSize attribute is not set to one.
- The service point application is on an SSCP-PU NMG and another application has generated a command to the service point application that has caused a collision.

System action

The command is not delivered and command execution fails. An error report is logged to the Tivoli NetView Graphic Monitor Facility host subsystem (GMFHS) database. An error message will also be logged by the COS Gateway autotask in the IBM Z NetView system log. The associated command was previously displayed with a IHS3700I or a IHS3701I message.

Operator response

Retry the command. If the error persists, contact your system programmer.

System programmer response

First ensure that the RODM TransportProtocolName and the NMG WindowSize attributes are correctly defined. Then ensure that the PU and LU are active. Check the IBM Z NetView log for error messages related to COS Gateway processing errors to determine if this failure occurred because of a collision or some other related failure. The associated COS Gateway message is DUI394E.

See the *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide* and *IBM Z NetView User's Guide: NetView* for additional information.

IHS3772I The OST or PPT is not active.**Explanation**

You issued a command but your IBM Z NetView OST is not active or IBM Z NetView is in the process of ending.

Operator response

Log on to IBM Z NetView if your previous session ended. If IBM Z NetView is down, notify your system programmer.

System programmer response

Restart IBM Z NetView.

IHS3781E An error has been detected in the response returned from the NMG for domain *domain*.**Explanation**

The NetView Graphic Monitor Facility host subsystem (GMFHS) detected missing data or data that is not valid in the response that was returned from the Network Management Gateway (NMG) for the specified domain.

Message Variables***domain***

The domain name.

System action

The status of the command at the service point is unknown.

Operator response

Retry the command. If the error persists, contact your system programmer.

System programmer response

Do the following:

- Locate the message that is logged by the Network Command Manager in the GMFHS error log and determine the cause for the error.
- Determine the cause of the problem at the NMG or element management system and fix the problem.

IHS3783I The domain *domain* was added to RODM after GMFHS was configured and commands are not currently allowed for resources within this domain.**Explanation**

The NetView Graphic Monitor Facility host subsystem (GMFHS) cannot complete a command because the targeted resource's domain was added to the Resource Object Data Manager (RODM) after GMFHS was configured. Commands will not be executed for resources within this domain until GMFHS is reconfigured.

Message Variables***domain***

The name of the domain.

System action

The command will not be sent to the native element management system. The error is logged in the GMFHS error log by the Network Command Manager.

Operator response

Contact your system programmer.

System programmer response

Issue the GMFHS CONFIG NETWORK command to reconfigure the entire network with the current RODM definitions. Or, locate the error report in the GMFHS error log and issue the GMFHS CONFIG DOMAIN command for the domain that has been reported as uninitialized to GMFHS.

See the *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide* for additional information about reconfiguring GMFHS.

IHS3813I The command *command* is scheduled to be run.**Explanation**

The command is scheduled for running by the host IBM Z NetView program. The response data will be displayed with a IHS3814I message. The correlator number connects the command to the response.

Message Variables***command***

The command that is run by the IBM Z NetView program.

IHS3814I *response***Explanation**

The associated command was previously displayed with a IHS3813I message. The same correlator number is on both the response and the command.

Message Variables

response

The text of the command response.

IHS3815I	The task DUIFSSCO has encountered a RODM query failure.
-----------------	--

Explanation

The IBM Z NetView task DUIFSSCO cannot successfully query the Resource Object Data Manager (RODM) for a list of resource span names. The associated command was previously displayed with a IHS3700I or IHS3701I message.

System action

The resource specific command is not processed. A message will be logged in the IBM Z NetView log by the scope checker task DUIFSSCO.

Operator response

Contact your system programmer.

System programmer response

Locate the IBM Z NetView scope checker host message BNH088I which indicates the return code and reason code that are associated with the RODM query request that failed. Take the appropriate corrective actions and have the user retry the request if necessary. See the *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide* for additional information.

IHS3816I	No response is expected for this command.
-----------------	--

Explanation

You have issued either the Cancel or the Go command. No response is generated for either of these commands. As a result of this command, responses can be generated for previously issued commands and will be displayed under the previous command's correlator number. There is no action to be taken.

IHS3817I	The request to the NetView task DUIFFSCO timed out.
-----------------	--

Explanation

The request to the NetView DUIFSSCO task has timed out. The timeout value is defined by LCON-ALERT-CMD-TIMEOUT in DUIGINIT.

System action

The request is not processed.

Operator response

Retry the command. If the error occurs again, contact your system programmer.

System programmer response

Increase the value of LCON-ALERT-CMD-TIMEOUT in nDUIGINIT, if necessary. See the Graphic Monitor Facility host subsystem keywords section in the *IBM Z NetView Troubleshooting Guide* for information.

IHS4000I	Server Properties file could not be accessed. Program Defaults will be used.
-----------------	---

Explanation

The server.properties file which contains customization parameters for the NetView management console topology server cannot be accessed.

System action

The topology server will utilize predetermined default values for all of the customization parameters.

Operator response

Issue the tserver utility -p command to obtain a summary of the current settings for all customization parameters.

System programmer response

Do the following:

1. Verify the BINDIR setting and determine if the \BINDIR\TDS\server\config\server.properties file exists.
2. If server.properties file can not be found reinstall the topology server.

IHS4001I	Unknown keyword <i>unknown_keyword</i> found in server properties file on line <i>linenum</i>.
-----------------	---

Explanation

While reading the server.properties configuration file, an unknown keyword was found. The keyword and its value, if any, are disregarded.

Message Variables

unknown_keyword

The name of the unknown keyword that was detected.

linenum

The line number in the server.properties file where the unknown key word was detected.

System action

The topology server disregards the unknown keyword and its value, if any.

System programmer response

Edit the server.properties file and remove or comment out the unknown keyword. This will keep this message from reappearing if the topology server is reinitialized.

IHS4002I **No = delimiter found for keyword *keyword* on line *linenum*. Default will be used.**

Explanation

While reading the server.properties configuration file no '=' delimiter was found for a valid keyword. In this case the default value for the keyword will be used.

Message Variables***keyword***

The name of a valid keyword which has no '=' delimiter.

linenum

The line number in the server.properties file where the keyword without '=' delimiter was found.

System action

The NetView management console topology server uses the default value for the keyword.

System programmer response

Edit the server.properties file and add the '=' delimiter. Reinitialize the topology server.

IHS4003I **Multiple entry found for keyword *keyword* on line *linenum*. Last one read will be used.**

Explanation

While reading the server.properties configuration file multiple entries were found for the same keyword. In this case the value for the last one read will be used.

Message Variables***keyword***

The name of a valid keyword which has no '=' delimiter.

linenum

The line number in the server.properties file where the keyword without '=' delimiter was found.

System action

The NetView management console topology server uses the value of the last entry found.

System programmer response

Edit the server.properties file and remove or comment out the unwanted entry. Reinitialize the topology server.

IHS4004I **Invalid value found for keyword *inv_keyword* on line *linenum*. Default will be used.**

Explanation

While reading the server.properties configuration file an incorrect value was found for a specific keyword. The default value for this keyword will be used.

Message Variables***inv_keyword***

The name of a valid keyword which was found to have an incorrect value.

linenum

The line number in the server.properties file where the incorrect value was found.

System action

The topology server uses the default value of the keyword.

System programmer response

Edit the server.properties file and correct the incorrect value. Reinitialize the NetView management console topology server.

IHS4005I **Invalid syntax found for keyword *inv_keyword* on line *linenum*. Default will be used.**

Explanation

While reading the server.properties configuration file incorrect syntax was found for a specific keyword. The default value for this keyword will be used.

Message Variables***inv_keyword***

The name of a valid keyword which was found to have an incorrect syntax.

linenum
The line number in the server.properties file where the incorrect syntax was found.

System action
The topology server uses the default value of the keyword.

System programmer response
Edit the server.properties file and correct the incorrect syntax. Reinitialize the topology server.

IHS4006I **No entry found for keyword *no_keyword*. Default will be used.**

Explanation
While reading the server.properties configuration file no entry was found for one of the defined keywords. Default value for this keyword will be used.

Message Variables
no_keyword
The name of a valid keyword which was found to have no entry.

System action
The topology server uses the default value of the keyword.

System programmer response
Edit the server.properties file and add an entry for the missing keyword. Reinitialize the topology server.

IHS4007I **No value found for BINDIR. Can not access Server Properties file. Program Defaults will be used.**

Explanation
While trying to read the server.properties file the topology server found no value for the BINDIR environment variable. As a result program defaults for all the customization parameters will be used.

System action
The NetView management console topology server uses the program defaults for all values normally found in the server.properties file.

System programmer response
Ensure that the command to start the topology server component defined the BINDIR environment variable, which gives access to server.properties file. For

example, the tserver command file or script sets up the environment for the component of the topology server to run under. Reinitialize the topology server.

IHS4008I **Value for keyword *max_keyword* on line *linenum* is greater than *max_default*. Maximum value *max_default* will be used.**

Explanation
Many of the configuration parameters used in the server.properties file have maximum limits. If the user enters a value which exceeds the maximum allowed, the topology server will adjust the value to the maximum allowed.

Message Variables
max_keyword
The name of a valid keyword which was found to have exceeded its maximum value.
linenum
The line number in the server.properties file where the incorrect value was specified.
max_default
The maximum value allowed for this keyword.

System action
The topology server uses the maximum default value of the keyword.

System programmer response
Follow these steps:

1. Edit the server.properties file and correct the value to the maximum allowed.
2. Reinitialize the server.

IHS4009I **Value for keyword *min_keyword* on line *linenum* is less than *min_default*. Minimum value *min_default* will be used.**

Explanation
Many of the configuration parameters used in the server.properties file have minimum limits. If the user enters a value which is less than the minimum allowed, the topology server will adjust the value to the minimum allowed.

Message Variables
min_keyword
The name of a valid keyword which was found to be less than its minimum value.

linenum
The line number in the server.properties file where the incorrect value was specified.

min_default
The minimum value allowed for this keyword.

System action
The topology server uses the minimum default value of the keyword.

System programmer response

- Follow these steps:
1. Edit the server.properties file and correct the value to the minimum allowed.
 2. Reinitialize the topology server.

IHS4010I	Value for keyword <i>time_keyword</i> has been adjusted to <i>time_value</i> +1, 1 greater than <i>time_value</i>.
-----------------	---

Explanation
The keywords timeoutSmall, timeoutMedium, timeoutLarge, and timeoutHuge are dependent on one another:

- Medium must be at least one greater than Small
- Large must be at least one greater than Medium
- Huge must be at least one greater than Large.

This message is issued when the topology server must adjust one of these keyword values to conform to this dependency.

Message Variables

time_keyword
The name of a valid timeout keyword which had to be adjusted.

time_value+1
The new value that this timeout keyword was adjusted to.

time_value
The name of a timeout keyword which this keyword must be one greater than.

System action
The topology server adjusts the timeout values to conform to the keyword dependency.

System programmer response

Follow these steps:

1. Edit the server.properties file and correct the timeout values to conform to the keyword dependency.
2. Reinitialize the topology server.

IHS4011I	Value for keyword <i>max_keyword</i> on line <i>linenum</i> is greater than <i>max_default</i>. Maximum value <i>max_default</i> will be used.
-----------------	---

Explanation
Many of the configuration parameters used in the server.properties file have maximum limits. If the user enters a value which exceeds the maximum allowed, the topology server will adjust the value to the maximum allowed.

Message Variables

max_keyword
The name of a valid keyword which was found to have exceeded its maximum value.

linenum
The line number in the server.properties file where the incorrect value was specified.

max_default
The maximum value allowed for this keyword.

System action
The topology server uses the maximum default value of the keyword.

System programmer response

- Follow these steps:
1. Edit the server.properties file and correct the value to the maximum allowed.
 2. Reinitialize the server.

IHS4012I	Value for keyword <i>min_keyword</i> on line <i>linenum</i> is less than <i>min_default</i>. Minimum value <i>min_default</i> will be used.
-----------------	--

Explanation
Many of the configuration parameters used in the server.properties file have minimum limits. If the user enters a value which is less than the minimum allowed, the topology server will adjust the value to the minimum allowed.

Message Variables

min_keyword
The name of a valid keyword which was found to be less than its minimum value.

linenum
The line number in the server.properties file where the incorrect value was specified.

min_default
The minimum value allowed for this keyword.

System action
The topology server uses the minimum default value of the keyword.

System programmer response
Follow these steps:

1. Edit the server.properties file and correct the value to the minimum allowed.
2. Reinitialize the topology server.

IHS4013I **String size *string_size* for keyword *keyword* on line *linenum* is greater than allowed. String is truncated to maximum length of *max_length*.**

Explanation
The string value for this keyword in the server.properties file can not exceed the maximum length. If the user enters a value which is greater than the maximum length allowed, the topology server will truncate the value to the maximum length allowed.

Message Variables

string_size
The size of the user-specified string value for keyword.

keyword
The name of a valid keyword, in the server.properties file, that was found to contain a value which was greater in length than the maximum length allowed.

linenum
The line number, in the server.properties file, where the incorrect value was specified.

max_length
The maximum length of the value allowed for this keyword.

System action
The topology server truncates the value of the keyword to the maximum allowed length.

System programmer response
Follow these steps:

1. Edit the server.properties file and correct the length of the value to the maximum allowed.

2. Reinitialize the topology server.

IHS4014E **Unable to write to audit log. Error occurred in *module1* on line *line1*. Audit entry originated in *module2* *line2* is not written to the audit log.**

Explanation
An error occurred while attempting to write to the audit log.

Message Variables

module1
The module name in which the error occurred.

line1
The line number, in module1, where the error occurred.

module2
The module name in which the audit log entry originated.

line2
The line number, in module2, where the audit log entry originated.

System action
The message is also written to the message log, ihsmessage.log. The audit log entry is not written to the audit log. Processing of the topology server continues.

System programmer response
Ensure that your operating system is able to access the audit log. The audit log, ihsaudit.xml, is located in one of the following directories:

- For Windows: %BINDIR%\TDS\server\log
- For UNIX: %BINDIR%/TDS/server/log

More information about the audit log can be found in the *IBM Z NetView User's Guide: NetView Management Console*.

Though this is a suspected operating system file access error, rename the audit log so that a new ihsaudit.xml file will be created the next time an audit log entry is generated.

If the error persists, contact IBM Software Support.

IHS4015E **Return code *rc* from module *module1* called from module *module2* on line *line_num* indicates an error when accessing the audit log.**

Explanation

An error occurred while attempting to access the audit log.

Message Variables

rc

The return code indicating the error.

module1

The module name returning the error.

module2

The module name in which the error occurred.

line_num

The line number, in module2, where the error occurred.

System action

The message is also written to the message log, ihsmessage.log. The audit log entry is not written to the audit log. Processing of the topology server continues.

System programmer response

Ensure that your operating system is able to access the audit log. The audit log, ihsaudit.xml, is located in one of the following directories:

- For Windows: %BINDIR%\TDS\server\log
- For UNIX: %BINDIR%/TDS/server/log

More information about the audit log can be found in the *IBM Z NetView User's Guide: NetView Management Console*.

Though this is a suspected operating system file access error, rename the audit log so that a new ihsaudit.xml file will be created the next time an audit log entry is generated.

If the error persists, contact IBM Software Support.

IHS4120I	An error occurred trying to determine the PID (process ID) for a process. Command processing terminates.
-----------------	---

Explanation

A process ID (PID) was needed to execute a command, but the information was not available.

System action

The command stops.

Operator response

Re-issue the command. If the problem persists, contact your system programmer.

System programmer response

Check the error and message logs for information. If you cannot fix the problem, contact IBM Software Support.

IHS4121E	Error sending data to task <i>task_name</i>. Error code <i>major_error_code</i> - <i>minor_error_code</i>.
-----------------	---

Explanation

The command was not able to send data to the process that handles your request.

Message Variables

task_name

The name of the task that processes the request.

major_error_code

The major error code.

minor_error_code

The minor error code.

System action

The command stops.

System programmer response

Re-issue the command.

If the problem persists, check the error and message logs for information. If you cannot fix the problem, contact IBM Software Support.

IHS4122E	Error sending data to task <i>task_name</i>. Error code <i>major_error_code</i> - <i>minor_error_code</i>. Ensure that the destination task is running.
-----------------	--

Explanation

The command was not able to send data to the process that handles your request, most likely because the task that processes your request is not running.

Message Variables

task_name

The name of the task that processes the request.

major_error_code

The major error code.

minor_error_code

The minor error code.

System action

The command stops.

System programmer response

Ensure that the task is running. If the task is running, try the operation again.

If the problem persists, check the error and message logs for information. If you cannot fix the problem, contact IBM Software Support.

IHS4123E	Ihscmd was invoked with only <i>parameter_number</i> parameters. At least three parameters are required.
-----------------	---

Explanation

The script that invoked the ihscmd executable did not include the correct number of parameters.

Message Variables

parameter_number

The number of parameters passed to the ihscmd executable.

System action

The command stops.

System programmer response

Contact IBM Software Support.

IHS4124E	Error registering task <i>task_name</i>. The task is already registered. Rerun the command. If the problem persists restart the system.
-----------------	--

Explanation

The command being run is trying to register a task with the ACM communications subsystem. The registration is failing because the task is already registered and duplicate registrations are not allowed. The problem might result from a process that temporarily has the task registered.

Message Variables

task_name

The name of the task being registered.

System action

The command stops.

System programmer response

Try the operation again. If the problem persists, follow these steps:

1. Stop the topology server and the topology communications server.

On UNIX, after stopping these processes, run the tserver stop -f command).

2. Restart the server.

If the problem persists, contact IBM Software Support.

IHS4125E	Error registering task <i>task_name</i>. Error code <i>major_error_code</i> - <i>minor_error_code</i>. Contact the system programmer.
-----------------	--

Explanation

The command being run is trying to register a task with the ACM communications subsystem. The registration is failing.

Message Variables

task_name

The name of the task being registered.

major_error_code

The major error code.

minor_error_code

The minor error code.

System action

The command stops.

System programmer response

Contact IBM Software Support.

IHS4126E	Error freeing ACM memory. Error code <i>major_error_code</i> - <i>minor_error_code</i>. Function completed, but future work may be impaired.
-----------------	---

Explanation

The command attempted to free ACM memory, but the free operation failed. The command that was executing at the time completed successfully, but this error might indicate a more serious problem in the system.

Message Variables

major_error_code

The major error code.

minor_error_code

The minor error code.

System action

The command completed successfully, but the ACM memory was not freed.

System programmer response

If these types of errors persist, stop and restart the server.

If the problem persists, contact IBM Software Support.

IHS4127E	Error allocating ACM memory. Error code <i>major_error_code</i> - <i>minor_error_code</i>.
-----------------	---

Explanation

The command attempted to allocate memory from the ACM memory pool. The allocation failed and the command did not complete successfully.

Message Variables

major_error_code
The major error code.

minor_error_code
The minor error code.

System action

The memory allocation failed and the command failed.

System programmer response

Try the command again. If the problem persists, reinitialize the server.

If the problem still persists, contact IBM Software Support.

IHS4128E	Error deregistering task <i>task_name</i>. Error code <i>major_error_code</i> - <i>minor_error_code</i>. If future errors occur, restart the system.
-----------------	---

Explanation

A task registered to the ACM subsystem cannot be deregistered. This might stop you from executing commands in the future.

Message Variables

task_name
The name of the task.

major_error_code
The major error code.

minor_error_code
The minor error code.

System action

The command completed.

System programmer response

If task registration errors occur for this task in the future, reinitialize the server.

If the problem continues, contact IBM Software Support.

IHS4131E	Unable to queue request for later processing. Error at location <i>location</i>, error code <i>error_code</i>.
-----------------	---

Explanation

The command cannot be queued for later processing. The error code identifies a possible explanation as to the cause of this error.

Message Variables

location
The location of the error.

error_code
On UNIX systems, the error codes are located in the /usr/include/sys/errno.h file. On Intel systems, the error codes are:

- 1253 - Error writing to the specified file
- 1254 - Error closing the specified file
- 1250 - Error opening the specified file
- 1251 - Out of memory error
- 1252 - Out of memory error

System action

The command is not queued.

System programmer response

Do one of the following:

- If an out of memory condition occurred, verify that the system has enough virtual memory.
- If an error occurred reading, writing, or closing a file, verify that the filename is valid.

Try the command again. If the problem persists, contact IBM Software Support.

IHS5001A	Unable to sign on to the topology server. User name: <i>name</i>. Reason: User name and password not authorized to connect to the topology server.
-----------------	---

Explanation

The specified user name is not defined to the server, or the password is incorrect for the user name.

Message Variables***name***

The user name entered as a command parameter or at the command prompt.

System action

The program ends.

Operator response

Correct the user name or the password.

IHS5002A Unable to sign on to the topology server. Reason: Unable to communicate with NetView host.

Explanation

The topology server is unable to communicate with NetView host.

System action

The program ends.

Operator response

Ensure that the communications session between the topology server and host NetView program is started. If necessary, issue the host NetView command NETCONV to establish the session.

IHS5003A Unable to sign on to the topology server. User name: *name*

Explanation

An error occurred when you signed on to the topology server, but the specific reason cannot be determined.

Message Variables***name***

The user name entered as a command parameter or at the command prompt.

System action

The program ends.

Operator response

Save the topology server error log file. The file name is defined by the EGVERRORFILE in the CONFIG.SYS file. Contact the IBM Support Center for assistance in examining this file.

IHS5004A

Unable to sign on to the topology server. Reason: Versions are not compatible.

Explanation

The version of the topology server is not compatible with this version of the command profile editor.

System action

The program ends.

Operator response

Ensure that the topology server and the command profile editor are running the same versions.

IHS5005A Unable to sign on to the topology server. Reason: User name *name* already signed on to command profile editor.

Explanation

The user specified in *name* is already signed on to the command profile editor. Only one user can be signed on to the command profile editor at a time.

Message Variables***name***

The user is already signed on to the command profile editor.

System action

The program ends.

Operator response

Wait until the instance currently running ends, and then try to sign on again.

IHS5006A Unable to sign on the topology server. Reason: The topology server is not available.

Explanation

This message is issued when the topology server does not reply at the given IP host name or address.

System action

The program ends.

Operator response

Contact the IBM Support Center.

IHS5008A The connection to the topology server has been lost.

Explanation

The command profile editor has lost connectivity with the topology server.

System action

The command profile editor cannot continue to operate without the services of the topology server. The command profile editor program ends.

Operator response

Note any other messages and see the *IBM Z NetView Troubleshooting Guide* for more information regarding this error.

IHS5011A The topology server has not responded within the expected time period.

Explanation

The topology server failed to respond to a request from the command profile editor.

System action

The command profile editor ends.

Operator response

Contact the IBM Support Center.

IHS5013A The command indicator *name* cannot be deleted because it is in use by the following commands: *commands*

Explanation

Each command set name must be unique. During the creation of a new command set or the update of an existing command set, a name was entered that was already in use.

Message Variables***name***

The name of command set being used.

commands

The commands using the current command indicator.

System action

The command indicator description is reset to its original text.

Operator response

If the command indicator must be deleted, first remove it from each command that is using it.

IHS5015A Unable to run the command profile editor. The command profile editor is already in use.

Explanation

Only one instance of the command profile editor can be run at one time.

System action

The program ends.

Operator response

Wait until the instance currently running ends, and then try to sign on again.

IHS5016A Unable to sign on to the topology server while view conversion is in progress.

Explanation

The topology server is currently converting views. A sign on is not allowed at this time.

System action

The program ends.

Operator response

Wait until topology server has completed converting views, and then try to sign on again.

IHS5017A A command set cannot contain itself.

Explanation

You attempted to include a command set inside itself.

System action

The addition is ignored.

IHS5018A Removal of *object name* failed - not found in the command set or profile.

Explanation

The object specified was not removed.

Message Variables

object name
The name of the object being removed.

System action
The program continues processing the response file and updates the command database.

Operator response
If the object to be removed is incorrect, update the response file with the correct information and run the utility again. Otherwise, no action is required.

IHS5020A **An internal error has occurred.**
Function: *function* **Line:** *line*
Exception Name: *exception name*
Error ID: *errorid*

Explanation
Each command profile must have a unique name. The name of the command profile being created or updated is already in use.

Message Variables
function
The name of the function that caused the error.
line
The line in which the error occurred.
exception name
The name of the exception generated.
errorid
The error ID of the exception.

System action
The program ends.

Operator response
Copy the information from the message and save a copy of the error log. The error log is specified in the CONFIG.SYS file in the EXQERRORFILE line. Contact the IBM support center.

IHS5022A **Unexpected system error has occurred. See log log file for more information.**

Explanation
An unexpected system error was encountered. The error log file will contain additional information, such as the system call that failed and the return code.

Message Variables
log file
The name of the error log file.

System action
The program ends.

Operator response
Examine the error log file to determine the cause of the system error. If the cause of the system error cannot be determined or corrected, save the log file and contact the IBM support center.

IHS5024A **Response file *response file* has one or more syntax errors. See log log file for more information.**

Explanation
The response file contains one or more syntax errors. The error log file lists each of the errors along with the line numbers in the response file where each was found.

Message Variables
response file
The name of the response file.
log file
The name of the log file.

System action
The program ends.

Operator response
Examine the error log file and correct each response file syntax error listed. Run the utility again with the modified response file.

IHS5025A **Response file *response file* could not be generated. Possible disk write failure.**

Explanation
An attempt to write the response file to the disk failed.

Message Variables
response file
The name of the response file.

System action
The program ends.

Operator response
Ensure that enough free disk space exists to generate the response file. Run the utility again.

IHS5026A **Response file *response file* could not be processed successfully. See log log file for more information.**

Explanation

The response file contains errors which prevent the utility from properly updating the command database. These errors are listed in the error log file.

Message Variables

response file

The name of the response file being processed.

log file

The name of the error log file being processed.

System action

The program ends.

Operator response

Examine the error log file and correct each response file error listed. Run the utility again with the modified response file.

IHS5027A **Unable to open file *file name*.**

Explanation

A file cannot be opened for one of the following reasons:

- The file cannot be found.
- The file is protected or is being used by another process.

Message Variables

file name

The path and file name of the file to be opened.

System action

The program ends.

Operator response

Ensure that the path and file name are correctly specified on the command line. Ensure that the file is not being used by another process and is not protected. Examine the error log file for any system errors that might have been logged.

IHS5028A **DOS error encountered, function=*function*, rc = *rcode*, file = *file name*, line = *line*.**

Explanation

A DOS error was encountered while processing the response file.

Message Variables

function

The function being performed when the error occurred.

rcode

The DOS return code.

file name

The name of the response file being processed.

line

The line in the response file that was being processed when the error occurred.

System action

The program ends.

Operator response

Ensure that the path and file name are correctly specified on the command line. Ensure that the file is not being used by another process and is not protected. Examine the error log file for any system errors that might have been logged.

If the cause of the error cannot be determined, contact the IBM support center.

IHS5029A **Utility started processing response file *response file* on date at time**

Explanation

This message marks the date and time when the utility began processing or generating a response file.

Message Variables

response file

The response file being processed.

date

The start date.

time

The start time

System action

The program continues running.

Operator response

None

IHS5030A **Utility completed processing on date at time.**

Explanation

This message marks the date and time when the utility ended.

Message Variables

date

The end date.

time

The end time.

System action

The program ends.

Operator response

None

IHS5031A Out of memory.

Explanation

There is not enough memory to run the utility program.

System action

The program ends.

Operator response

Stop any unnecessary processes to make more memory available. Run the utility again.

IHS5032A Invalid file specification *file name*.

Explanation

The path, file name, or both are incorrectly specified on the command line.

Message Variables

file name

The path and file name of the file being opened.

System action

The program ends.

Operator response

Ensure that the path and file name are correctly specified on the command line.

IHS5033A Duplicate parameter *parameter*.

Explanation

A command line parameter was specified more than once.

Message Variables

parameter

The duplicated parameter.

System action

The program ends.

Operator response

Run the utility again without the duplicate parameter.

IHS5034A The *parameter1* and *parameter2* parameters are mutually exclusive.

Explanation

Only one of the two listed command line parameters can be used in a single invocation of the utility program.

Message Variables

parameter1

The first command line parameter.

parameter2

The second command line parameter.

System action

The program ends.

Operator response

See the syntax of the cpebatch command to determine which of the two parameters is required for the task. Run the utility again.

IHS5035A No input response file specified.

Explanation

The /I parameter was specified on the command line, but no response file name was specified.

System action

The program ends.

Operator response

Run the utility again with a valid response file path and name. See the syntax of the cpebatch command for more information.

IHS5036A Parameter *parameter* has invalid value *value*.

Explanation

A command line parameter has an incorrect value.

Message Variables

parameter

The command line parameter.

value

The incorrect value of the parameter.

System action

The program ends.

Operator response

See the syntax of the cpebatch command to determine the correct value for the parameter. Run the utility again.

IHS5037A **Unknown parameter *parameter*.**

Explanation

An unrecognized command line parameter was specified.

Message Variables

parameter

The unknown command line parameter.

System action

The program ends.

Operator response

See the syntax of the cpebatch command to determine the correct value for the parameter. Run the utility again.

IHS5038A **Missing parameter *parameter*.**

Explanation

A required command line parameter is missing.

Message Variables

parameter

The missing command line parameter.

System action

The program ends.

Operator response

See the syntax of the cpebatch command to determine the correct value for the parameter. Run the utility again.

IHS5039A **Unable to locate response file *response file*.**

Explanation

The input response file was not found in the specified path.

Message Variables

response file

The input response file name.

System action

The program ends.

Operator response

Ensure that the path and file name are correctly specified on the command line. Run the utility again.

IHS5040A **Unmatched parenthesis detected in response file *response file*.**

Explanation

The input response file has an unmatched parenthesis.

Message Variables

response file

The input response file name.

System action

The program ends.

Operator response

Determine the location of the unmatched parenthesis in the response file and correct the problem. Run the utility again with the modified response file.

IHS5041A **Invalid keyword *keyword*.**

Explanation

A keyword in the response file is unrecognized or contains an incorrect character.

Message Variables

keyword

The incorrect keyword.

System action

The program continues processing the response file to find other possible errors, then ends without changing the command database.

Operator response

Correct the keyword, then run the utility again with the modified response file.

IHS5042A Unmatched right parenthesis.

Explanation

A right parenthesis does not have a corresponding left parenthesis.

System action

The program ends.

Operator response

Match the parenthesis, then run the utility again with the modified response file.

IHS5043A Line is too long.

Explanation

A line in the response file is too long.

System action

The program continues processing the response file to find other possible errors, then ends without changing the command database.

Operator response

Shorten the line or, if possible, break it into multiple statements. Run the utility again with the modified response file.

IHS5044A Keyword *keyword* used improperly.

Explanation

A keyword is improperly used if the keyword is one of the following:

- a list keyword that does not begin a list.
- a single value keyword that begins a list.
- improperly nested.
- not contained within a stanza.

Message Variables***keyword***

The improperly used keyword.

System action

The program continues processing the response file to find other possible errors, then ends without changing the command database.

Operator response

Correct the keyword, then run the utility again with the modified response file.

IHS5045A Duplicate keyword *keyword* is not allowed.

Explanation

A keyword was encountered that is already in use.

Message Variables***keyword***

The duplicate keyword.

System action

The program continues processing the response file to find other possible errors, then ends without changing the command database.

Operator response

Remove the duplicate keyword, then run the utility again with the modified response file.

IHS5046A Required keyword *keyword* missing in *stanza stanza*.

Explanation

A stanza is missing a required keyword.

Message Variables***keyword***

The required keyword.

stanza

The stanza requiring the keyword.

System action

The program continues processing the response file to find other possible errors, then ends without changing the command database.

Operator response

Add the required keyword to the stanza, then run the utility again with the modified response file.

IHS5047A Keyword *keyword* does not belong in *stanza stanza*.

Explanation

A stanza contains a keyword that does not belong there.

Message Variables

keyword

The incorrect keyword.

System action

The program continues processing the response file to find other possible errors, then ends without changing the command database.

Operator response

Remove the keyword from the stanza, then run the utility again with the modified response file.

IHS5048A Object *object name* is incomplete.

Explanation

An object being added to the command database with incomplete information.

Message Variables***object name***

The name of the object being added.

System action

The program continues processing the response file to find other possible errors, then ends without changing the command database.

Operator response

Ensure that the object has all required keywords correctly specified. Run the utility again with the modified response file.

IHS5049A Update is not allowed. Use /M option.

Explanation

The response file will cause the utility program to modify or delete existing information in the current command database. The /M option must be used to alter the database in this way.

System action

The program continues processing the response file to find other possible errors, then ends without changing the command database.

Operator response

Run the utility again with the /M option.

IHS5051A Delete of *object name* failed.

Explanation

The DELETE keyword is improperly used to delete an object that was not found in a folder.

Message Variables***object name***

The name of the object being deleted.

System action

The program continues processing the response file and updates the command database.

Operator response

If the object to be deleted is incorrect, update the response file with the correct information and run the utility again. Otherwise, no action is required.

IHS5052A Undefined object *object name* referenced.

Explanation

An object references another object which has not yet been defined.

Message Variables***object name***

The name of the unknown object being referenced.

System action

The program continues processing the response file to find other possible errors, then ends without changing the command database.

Operator response

Ensure that the referenced object is defined before the current object in the response file. Run the utility again with the modified response file.

IHS5053A Field *field name* has invalid value *value*.

Explanation

An attempt to set a field was not successful because the value is incorrect. The value is incorrect for one of the following reasons:

- The text is null.
- The text contains an incorrect character.
- The command indicator is assigned a value that is not an integer.

Message Variables

field name

The name of the field containing the incorrect value.

value

The incorrect value.

System action

If this message occurs while running the utility program, the program continues processing the response file to find other possible errors, then ends without changing the command database.

Operator response

Correct the field value. If this message occurs while running the utility program, run the utility again with the modified response file.

IHS5054A **Field *field name* has too long a value.****Explanation**

An attempt to set a field was unsuccessful because the value exceeds the maximum length for that field.

Message Variables**field name**

The name of the field.

System action

The program continues processing the response file to find other possible errors, then ends without changing the command database.

Operator response

Shorten the length of the field value, then run the utility again with the modified response file.

IHS5055A **An *object type* with name *object name* already exists.****Explanation**

An attempt to add an object to a menu was unsuccessful because the menu already contains that object.

Message Variables**object type**

The type of object being added to the menu.

object name

The name of object being added to the menu.

System action

If this message occurs while running the utility program, the program continues processing the response file to find other possible errors, then ends without changing the command database.

Operator response

If this message occurs while running the utility program, remove the duplicate object from the MENU stanza, then run the utility again with the modified response file.

IHS5057A **Field *field name* value *value* is out of range.****Explanation**

An attempt to set a field was unsuccessful because the value is beyond the acceptable range of values.

Message Variables**field name**

The name of the field.

value

The incorrect value.

System action

The program continues processing the response file to find other possible errors, then ends without changing the command database.

Operator response

Correct the field value, then run the utility again with the modified response file.

IHS5058A **Field *field* value *value* is not contiguous.****Explanation**

An attempt to set a field was unsuccessful because the field value is not contiguous with existing values.

Message Variables**field name**

The name of the field.

value

The incorrect value.

System action

If this message occurs while running the utility program, the program continues processing the response file to find other possible errors, then ends without changing the command database.

Operator response

If this message occurs while running the utility program, make the value contiguous, then run the utility again with the modified response file.

IHS5059A **Keyword *field name* has already been set.**

Explanation

A field which can only be set once has already been set.

Message Variables

field name

The name of the field.

System action

The program continues processing the response file to find other possible errors, then ends without changing the command database.

Operator response

Remove the field from the stanza, then run the utility again with the modified response file.

IHS5060A **Field *field name* value *value* is already being used.**

Explanation

An attempt to set a field was unsuccessful because the same value is used elsewhere.

Message Variables

field name

The name of the field.

value

The value assigned to the field.

System action

The program continues processing the response file to find other possible errors, then ends without changing the command database.

Operator response

Change the value to one that is unique, then run the utility again with the modified response file.

IHS5061A **Add of object *object name* failed - folder is full.**

Explanation

An attempt to add an object to a folder failed because the folder contains the maximum number of objects.

Message Variables

object name

The name of the object which cannot be added.

System action

If this message occurs while running the utility program, the program continues processing the response file to find other possible errors, then ends without changing the command database.

Operator response

Remove unneeded objects from the folder, then try to add the new object.

IHS5062A **Add of object *object name* failed - invalid position.**

Explanation

An attempt to add an object to a menu was unsuccessful because it is being added at an incorrect position. This is an internal error.

Message Variables

object name

The name of the object being added.

System action

The program continues processing the response file to find other possible errors, then ends without changing the command database.

Operator response

Contact the IBM support center.

IHS5064A **Delete of object *manager name* failed - manager in use by the following commands: *command list*.**

Explanation

The manager cannot be deleted because it is used by one or more commands.

Message Variables

manager name

The name of the manager to be deleted.

command list

The list of commands using the manager.

System action

If this message occurs while running the utility program, the program continues processing the

response file to find other possible errors, then ends without changing the command database.

Operator response

Remove the dependency of each of the listed commands before deleting each of them.

IHS5065A	Delete of command <i>command name</i> failed - command in use by the following profiles or command sets: <i>object list</i>.
-----------------	---

Explanation

The command cannot be deleted because it is used by one or more profiles or command sets.

Message Variables

command name

The name of the command being deleted.

object list

The list of profiles or command sets using the command.

System action

If this message occurs while running the utility program, the program continues processing the response file to find other possible errors, then ends without changing the command database.

Operator response

Remove the dependency of each of the listed profiles or command sets before deleting each of them

IHS5066A	Delete of profile <i>profile name</i> failed - profile in use by the following operators: <i>operator list</i>.
-----------------	--

Explanation

The profile cannot be deleted because it is used by one or more operators.

Message Variables

profile name

The name of the profile being deleted.

operator list

The list of operators using the profile.

System action

If this message occurs while running the utility program, the program continues processing the response file to find other possible errors, then ends without changing the command database.

Operator response

Remove the dependency of each of the listed operators before deleting each of them.

IHS5067A	Delete of command set <i>command set name</i> failed - command set in use by the following profiles: <i>profile list</i>.
-----------------	--

Explanation

The command set cannot be deleted because it is used by one or more profiles.

Message Variables

command set name

The name of the command set being deleted.

profile list

The list of profiles using the command set.

System action

If this message occurs while running the utility program, the program continues processing the response file to find other possible errors, then ends without changing the command database.

Operator response

Remove the dependency of each of the listed profiles on the command set before deleting each of them.

IHS5068A	Field <i>field name</i> cannot be set - manager undefined.
-----------------	---

Explanation

An attempt to set a field was unsuccessful because it references an undefined manager.

Message Variables

field name

The name of the field.

System action

The program continues processing the response file to find other possible errors, then ends without changing the command database.

Operator response

Ensure that the referenced manager is defined earlier in the response file, then run the utility again with the modified response file.

IHS5069A	Field <i>field name</i> cannot be set - command is resource independent.
-----------------	---

Explanation

An attempt to set PAGE_ID or INDICATOR_LIST on a command page was unsuccessful because the command is resource independent. A resource independent command cannot specify command indicators.

Message Variables

field name
The name of the field.

System action

The program continues processing the response file to find other possible errors, then ends without changing the command database.

Operator response

Remove this field from the command page stanza, then run the utility again with the modified response file.

IHS5070A	Field <i>field name</i> cannot be set - command page has defined command indicators.
-----------------	---

Explanation

An attempt to set a field was unsuccessful because the command has specified command indicators.

Message Variables

field name
The name of the field.

System action

The program continues processing the response file to find other possible errors, then ends without changing the command database.

Operator response

Remove this field from the command page stanza, then run the utility again with the modified response file.

IHS5071A	Field <i>field name</i> cannot be set - command applies to any manager.
-----------------	--

Explanation

An attempt to set PAGE_ID or INDICATOR_LIST on a command page was unsuccessful because the command page has MANAGER_NAME = ANY. A command which applies to any manager cannot specify command indicators.

Message Variables

field name
The name of the field.

System action

The program continues processing the response file to find other possible errors, then ends without changing the command database.

Operator response

Remove this field from the command page stanza, then run the utility again with the modified response file.

IHS5072A	Field <i>field name</i> cannot be set - any manager not allowed.
-----------------	---

Explanation

An attempt to set MANAGER_NAME to 'ANY' on a command page was unsuccessful because the command already has pages with indicators defined.

Message Variables

field name
The name of the field.

System action

The program continues processing the response file to find other possible errors, then ends without changing the command database.

Operator response

Remove all pages with defined indicators from this command, then set MANAGER_NAME to ANY. Run the utility again with the modified response file.

IHS5073A	Field <i>field name</i> cannot be set - command indicator undefined.
-----------------	---

Explanation

An attempt to add a command indicator to a command page was unsuccessful because the command indicator is undefined.

Message Variables

field name
The name of the field.

System action

The program continues processing the response file to find other possible errors, then ends without changing the command database.

Operator response

Define the command indicator to a manager in the response file, then run the utility again with the modified response file.

IHS5074A **Unknown error.**

Explanation

An unknown error was encountered. This is an internal error.

System action

If this message occurs while running the utility program, the program continues processing the response file to find other possible errors, then ends without changing the command database.

Operator response

Contact the IBM support center.

IHS5077A **The topology server has encountered an internal error.**

Explanation

The topology server notified the command profile editor of an internal error in the server.

System action

The command profile editor closes without saving any changes to your data.

Operator response

See the *IBM Z NetView Troubleshooting Guide* for more information regarding this error. Contact the IBM Support Center for further assistance.

IHS5078A **Field *field name* has duplicate value *value* in the following profiles or command sets: *object list*.**

Explanation

The listed fields have identical values. The values must be unique.

Message Variables

field name

The name of the field.

value

The duplicated value.

object list

The list of profiles or command sets.

System action

If this message occurs while running the utility program, the program continues processing the response file to find other possible errors, then ends without changing the command database.

Operator response

Change the field to a unique value. If this message occurs while running the utility program, run the utility again with the modified response file.

IHS5079A ***object type* *object name* has duplicate information in the following profiles or command sets: *object list*.**

Explanation

An attempt to add a command or command set to a folder was unsuccessful because it creates duplicate information in one or more profiles or command sets.

Message Variables

object type

The type of object being added.

object name

The name of object being added.

object list

The list of profiles or command sets.

System action

If this message occurs while running the utility program, the program continues processing the response file and updates the command database.

IHS5083A **The resource description *description* is already in use for this resource manager**

Explanation

Resource descriptions must be unique for each command indicator under a resource manager.

Message Variables

description

The resource description which is not unique for this resource manager.

Operator response

Change the resource description and run the utility again.

IHS5084A **Field *field name* cannot be set to *value* - command indicators exist outside this boundary.**

Explanation

You attempted to set a field to an incorrect value.

Message Variables

field name

The name of the field containing the incorrect value.

value

The incorrect value.

Operator response

Correct the value.

IHS5085A	Name or address <i>hostname</i> cannot be resolved to a valid IP address or an LU name.
-----------------	--

Operator response

Correct the host name.

IHS5086I	(rc=return code)
-----------------	-------------------------

Explanation

The Command Profile Editor utility has completed processing.

Message Variables

0

No errors

4

Warning logged - processing continues and the database is updated.

8

Error logged - processing continues but the database is not updated.

12

Error logged - immediate termination.

Operator response

Correct the host name.

IHS5087A	Response file <i>Response file</i> already exists.
-----------------	---

Explanation

The output response file already exists and will not be overwritten.

Message Variables

response file

The name of the existing response file that cannot be overwritten.

Operator response

Remove the existing response file or specify a different file name for the output response file and run the utility again.

IHS5088I	Command profile editor utility program. usage: cpebatch filename -I -O [-U:userID] [-P:password] [-L1:log file] [-G -M] [-V]
-----------------	---

Explanation

The utility was invoked without parameters or with the -? (help) parameter.

Operator response

Invoke the utility using the syntax described in the message. See the syntax of the cpebatch command for more information.

IHS5200E	The command profile editor is ending due to a missing DLL file.
-----------------	--

Explanation

The command profile editor cannot find the IHSE.DLL file. Verify that the \$BINDIR/TDS/server/bin (UNIX) or %BINDIR%\TDS\server\bin (Intel) directory is in the PATH.

System action

The command profile editor ends.

Operator response

Notify the system programmer.

System programmer response

Verify that IHSE.DLL exists in the path specified by PATH.

IHS5201E	The command profile editor is out of memory.
-----------------	---

Explanation

The command profile editor was unable to obtain system memory.

System action

The command profile editor ends.

Operator response

Free some storage by stopping other applications or by adding storage to the system. Also, confirm that swapping is enabled.

IHS5800E The specified task was not found

System action

The task is not executed.

Operator response

Contact your system programmer.

System programmer response

Investigate the TMR environment and verify that the task exists.

IHS5803E Bad CommandString: Invalid input parms

Explanation

The command string in the command profile editor is not valid.

Operator response

Contact your system programmer.

System programmer response

Make sure that the command string in the command profile editor is valid.

IHS5811E No return message was posted by the task.

Explanation

The task either timed out or did not return any messages.

Operator response

Increase the timeout value in the Console Properties window.

**IHS5951E *NT_service_name NT_service_call*
API call failed with NT return code
of *NT_specific_return_code*.**

Explanation

IHSXSRV.EXE encountered an NT API error during execution.

Message Variables***NT_service_name***

The name of the NT service specified on the API call.

NT_service_call

The name of the NT service API call that failed.

NT_specific_return_call

The enum name or numeric value of the error return code as specified in the error.h file that ships with the Microsoft Windows SDK.

System action

The IHSXSRV command fails.

Operator response

Retry the request. Many of the possible errors are self-explanatory. Take corrective action if necessary.

System programmer response

If the error persists, contact IBM Software Support.

IHS5962I Requesting server send message processing.

Explanation

This message confirms that you have requested server send message processing.

System action

The topology server will complete the send message processing you have requested.

IHS5965I Requesting server configuration properties display.

Explanation

This message confirms that you have requested to display the current settings of the configuration properties.

System action

The topology server will display the server configuration properties in the window in which the server is running.

**IHS5969E Unrecognized service state for
Windows_service_name, state
returned is
Windows_service_state.**

Explanation

IHSXSRV.EXE encountered a QueryServiceStatus API error. An unexpected service state was returned.

Message Variables

Windows_service_name

The name of the Windows service specified on the API call

Windows_service_state

The service state value

System action

The IHSXSRV command fails.

Operator response

Retry the request. If the problem persists, contact your system programmer.

System programmer response

If the problem persists, analyze the unrecognized state. States are documented in the Microsoft Windows SDK help for the QueryServiceStatus API call for Windows.

IHS5973E Unable to find the PID for process ihsctp.

Explanation

While trying to stop the topology communications server (ihsctp) process, the process id (PID) for this process cannot be found. Usually, this error occurs because the process is not currently running. Additional information might be printed on the line following this message.

System action

The topology communications server process is not stopped.

System programmer response

If the ihsctp process was not already running, no action is required.

If the ihsctp process is running, contact IBM Software Support.

IHS5974I Processing completed for this command. Requested processes stopping.

Explanation

Each of the processes that you requested to stop have been signaled. These processes are stopping, although it might take several minutes to complete.

IHS5976E Cannot open Services Control Manager, OpenSCManager rc = NT_specific_return_code

Explanation

IHSXSRV.EXE encountered an OpenSCManager API error.

Message Variables

NT_specific_return_code

The enum name or numeric value of the error return code as specified in the error.h file that ships with the Microsoft Windows SDK.

System action

The IHSXSRV command fails.

Operator response

Retry the request. Many of the possible errors are self-explanatory. Take corrective action if necessary.

System programmer response

If the error persists, contact IBM Software Support.

IHS5981I Run 'tserver dbtransfer' before attempting to start the server.

Explanation

You have installed a new version of the topology server, and are using the TSERVER_DB variable to store the topology server databases in another location, rather than the default installation directories. However, you have not run the 'tserver dbtransfer' utility to copy the newly installed databases into the location defined by the TSERVER_DB variable.

System action

The topology server program ends.

Operator response

Notify the system programmer.

System programmer response

Run the 'tserver dbtransfer' utility, and restart the topology server.

IHS5982I Record Count: count Bytes Used: bytes Average Record Size: size

Explanation

Displays data relevant to the Event Enablement cache.

Message Variables

count

The number of events in the cache.

bytes

The number of bytes of data in the cache.

size

The average size of an event contained in the cache.

will be queued until the cache request has completed.

Explanation

The utility -c command was issued to clear the Event Enablement cache. The cache is currently in use. The request to clear the cache will be queued until the cache is free, at which time the cache will be cleared.

IHS5983I A request for cached data is pending. The clear cache request

Chapter 15. Graphic Monitor Facility Host Subsystem

Method Error Messages

These messages are written to the RODM log when an error has occurred when executing a Graphic Monitor Facility host subsystem (GMFHS) method. There is no online message help available for these messages.

**0001 Error in log message build request:
 Incorrect message index (*insert_1*)**

Explanation

A request has been made to build a message for the RODM log but the message index provided is less than 1 or greater than the maximum index.

Message Variables

insert_1
 Message index value.

System action

This message is issued to the log and processing continues.

System programmer response

There is a programming error or incompatibility between program component levels. Contact IBM Software Support for assistance.

**0002 Error in log message build request:
 Incorrect argument or argument
 list**

Explanation

A request has been made to build a message for the RODM log but the parameters provided to the function which builds the message are incorrect.

System action

This message is issued to the log and processing continues.

System programmer response

There is a programming error. Contact IBM Software Support for assistance.

**0003 Error in log message build request:
 Incorrect argument number in
 message skeleton: *insert_1***

Explanation

A request has been made to build a message for the RODM log but the message skeleton contains a variable substitution number of zero or greater than nine.

Message Variables

insert_1
 variable substitution.

System action

This message is issued to the log and processing continues.

System programmer response

There is a programming error or an error in the string table where the messages are defined. Contact IBM Software Support for assistance.

**0004 Error in log message build request
 processing: incorrect return code
 (*insert_1*) from DUIFLSVS**

Explanation

A request has been made to build a message for the RODM log. The function which substitutes variable information into the message skeleton completed with an unknown return value.

Message Variables

insert_1
 Message index value.

System action

This message is issued to the log and processing continues.

System programmer response

There is a programming error. Contact IBM Software Support for assistance.

0016 Important message:

Explanation

Specifies that this log entry is documenting a condition for which eventual action is required.

System action

This message is issued to the log and processing continues.

System programmer response

Correct the error situation and retry the operation.

0017 Internal error:

Explanation

Specifies that this log entry is documenting an error condition which requires immediate attention.

System action

This message is issued to the log and processing continues.

System programmer response

Correct the error situation and retry the operation.

0020 Internal error: Storage overlay detected. First 64 and last 64 bytes follow (or dumped if less than 128 bytes).

Explanation

The GMFHS storage macros pad all storage requests with recognizable values. When freeing storage, if the values have changed, we have a storage overlay. The module and line number where the storage was allocated are contained within the storage header, assuming the storage header was not affected by the overlay.

0021 Internal error: Storage not deallocated. First 64 bytes of each buffer will be dumped.

Explanation

The storage header will contain the module and line number that allocated the storage. Use this information to determine who should have freed the storage. Note that when this error was detected, the storage was deallocated.

0022 Tried doing a locate on an Indexed list field (*insert1*) for more than one value – searches with only one value are allowed. A dump of the

search structure follows if given a good pointer.

0023 The method attempted to obtain the MSA but has a dependency on GMFHS being active and GMFHS is not active.

0025 Important message:

Explanation

GMFHS attempted to connect to a RODM that was already connected to another GMFHS.

System action

The message is logged and the method ends.

System programmer response

Ensure that the name of the RODM application as specified in the GMFHS initialization member (DUIGINIT) is correct. No more than one GMFHS application is allowed to connect to RODM.

0026 Important message:

Explanation

An attempt was made to connect a GMFHS application to a RODM that has an incompatible version of the GMFHS methods installed.

System action

The message is logged and the method ends.

System programmer response

Ensure that the name of the RODM application as specified in the GMFHS initialization member (DUIGINIT) is correct. The version of the GMFHS application must be the same as the version of the GMFHS methods installed in RODM.

0101 malloc() failed

Explanation

Unable to allocate memory

System action

This message is issued to the log and caused the abend.

System programmer response

There is a system error. Contact IBM Software Support for assistance.

0103	RODM data is longer than View Manager allows. Truncation will occur. The RODM data is:	0109	Method Response Block Overflow RODM Error
Explanation	The data specified in RODM for this field is longer than view manager allows. The RODM data is displayed to help you identify the problem.	Explanation	RODM reported that a response block was too small to satisfy a request. RODM did not report the proper size required.
System action	The message is logged and processing continues.	System action	This message is issued to the log and the current request ends.
System programmer response	Determine if this is a problem. Certain data can be truncated with no significant effect. On the other hand, resource names and other data might cause problems. Correct the RODM load statements.	System programmer response	There is a system error. Contact IBM Software Support for assistance.
0106	Unable to find the Object ID of SNA resource	0111	RODM data: VIEW NAME is longer than View Manager allows. The maximum length of VIEW NAME is 32. The VIEW NAME will be omitted from VIEW LIST. The RODM data is:
Explanation	An SNA resource is specified on the request but GMFHS is unable to locate the resource in RODM.	Explanation	The view name in RODM for this field is longer than view manager allows. The RODM data is displayed to help you identify the problem.
System action	The message is logged and processing continues.	System action	The message is logged and processing continues.
System programmer response	If the resource does exist, determine the cause of the error from the RODM log and correct it. Incomplete or erroneous RODM definitions are probable causes.	System programmer response	Determine if this is a problem. Certain data can be truncated with no significant effect. On the other hand, resource names and other data can cause problems. Correct the RODM load statements.
0107	A variable length View Manager field does not have the length field set. The data cannot be read. The RODM data is:	0114	Subscribe for Delete of objectid: <i>insert_1</i> failed. Requesting Graphic Data Server: <i>insert_2</i>.
Explanation	View manager is attempting to read a variable length field but has not set the maximum length it can read. The data cannot be read because storage overwrite might occur.	Explanation	An attempt to add an Object Deletion subscription to a resource failed.
System action	This message is issued to the log and processing of this request ends.	Message Variables	
System programmer response	There is a system error. Contact IBM Software Support for assistance.	<i>insert_1</i>	RODM ObjectID.
		<i>insert_2</i>	Graphic Data Server LU name.

System action

The message is logged and processing continues.

System programmer response

Determine from the information in the RODM log whether an error has occurred. If so, either correct the error or contact IBM Software Support for assistance.

0116 A notification queue name is not available for view: *insert_1* requested by Graphic Data Server: *insert_2*.

Explanation

A notification queue was not provided to the view building method for use with topology subscriptions.

Message Variables

insert_1
View name.

insert_2
Graphic Data Server LU name.

System action

Building of the view ends.

System programmer response

This is a system error. Contact IBM Software Support for assistance.

0120 Unable to send output response to caller

Explanation

An attempt to return the response block failed. Processing of this request is ended.

System action

The message is logged and processing of this request is ended.

System programmer response

There is a system error. Contact IBM Software Support for assistance.

0127 During installation of view notification subscriptions for view: *insert_1* requested by Graphic Data Server: *insert_2*, error *insert_3* - *insert_4*, was detected during *insert_5* processing.

Explanation

Because of this error, a view building method is unable to install notification subscriptions.

Message Variables

insert_1
View name.

insert_2
Graphic Data Server LU name.

insert_3
Return code number.

insert_4
Return code description.

insert_5
RODM object class.

System action

Building of the view ends.

System programmer response

This is a system error. Contact IBM Software Support for assistance.

0128 Unrecognized View type in request block *insert_1*

Explanation

View Notification Granularity initialization method DUIFVNGI does not recognize an input view_type.

Message Variables

insert_1
View Type.

System action

GMFHS VIEWMGR ends.

System programmer response

This is a system error. Contact IBM Software Support for assistance.

0132 The error: *insert_1* - *insert_2* occurred while processing ClassID: *insert_3* / ClassName: *insert_4* for view: *insert_5* requested by Graphic Data Server: *insert_6*.

Explanation

This message displays the class information that caused a View Notification Granularity error.

Message Variables

insert_1

Return code number.

insert_2

Return code description.

insert_3

ClassID.

insert_4

ClassName.

insert_5

View name.

insert_6

Graphic Data Server LU name.

System action

GMFHS VIEWMGR ends, and an error is returned to Graphic Data Server.

System programmer response

This is a system error. Contact IBM Software Support for assistance.

0133

The error: *insert_1* - *insert_2* occurred while processing ClassID: *insert_3* / ClassName: *insert_4* FieldID: *insert_5* / FieldName: *insert_6*, for view: *insert_7* requested by Graphic Data Server: *insert_8*.

Explanation

This message displays the class and field information that caused a View Notification Granularity error.

Message Variables**insert_1**

Return code number.

insert_2

Return code description.

insert_3

ClassID.

insert_4

ClassName.

insert_5

FieldID.

insert_6

FieldName.

insert_7

View name.

insert_8

Graphic Data Server LU name.

System action

GMFHS VIEWMGR ends, and an error is returned to Graphic Data Server.

System programmer response

This is a system error. Contact IBM Software Support for assistance.

0135

RODM return code *insert_1*, reason code *insert_2*, was received while installing notification method DUIFVNGN on ClassID: *insert_3* / ClassName: *insert_4*, FieldID: *insert_5* / FieldName: *insert_6*, for view: *insert_7* requested by Graphic Data Server: *insert_8*.

Explanation

This message displays the RODM return and reason codes that were received while installing a notification method at the class level.

Message Variables**insert_1**

Return code

insert_2

Reason code

insert_3

ClassID

insert_4

ClassName

insert_5

FieldID

insert_6

FieldName

insert_7

View name

insert_8

Graphic Data Server LU name

System action

View building ends, and an error is returned to Graphic Data Server.

System programmer response

Use the Data Model Reference to get an explanation for this return/reason code combination. Also check prior log entries associated with this class, field, or view. If unable to solve this problem, contact IBM Software Support for assistance.

0136

RODM return code *insert_1*, reason code *insert_2* was received while

installing notification method
DUIFVNGN on **ClassID:** *insert_3* /
ClassName: *insert_4*, **ObjectID:**
insert_5 / **ObjectName:** *insert_6*,
FieldID: *insert_7* **FieldName:**
insert_8 for view: *insert_9*.

Explanation

This message displays the RODM return and reason codes that were received while installing a notification method on an object.

Message Variables

insert_1
Return code

insert_2
Reason code

insert_3
ClassID

insert_4
ClassName

insert_5
ObjectID

insert_6
ObjectName

insert_7
FieldID

insert_8
FieldName

insert_9
View name.

System action

View building ends, and an error is returned to Graphic Data Server.

System programmer response

Use the Data Model Reference to get an explanation for this return/reason code combination. Also check prior log entries associated with this class, field, or view. If unable to solve this problem, contact IBM Software Support for assistance.

0137 **RODM return code *insert_1*, reason code *insert_1* was received while installing notification method DUIFVNGN on the MyObjectChildren of ClassID: *insert_3*.**

Explanation

This message is issued by View Notification method DUIFVNGI if it is unable to install a notification method.

Message Variables

insert_1
Return code

insert_2
Reason code

insert_3
ClassID

System action

GMFHS VIEWMGR ends.

System programmer response

Use the Data Model Reference to get an explanation for this return/reason code combination. Also check prior log entries associated with this class or field. If unable to solve this problem, contact IBM Software Support for assistance.

0141 Field not found

Explanation

A required RODM field cannot be found.

System action

The message is logged and processing continues. Subsequent processing might determine that the current request cannot be satisfied. If so, the current request ends and another message issued.

System programmer response

If processing continues and the desired results are obtained, no action is required. Otherwise, determine which field is missing and take corrective action.

0142 Query View Parent Class Error

Explanation

There was an error while querying the View Parent Class.

System action

The message is logged and processing continues. Subsequent processing might determine that the current request cannot be satisfied. If so, the current request ends and another message issued.

System programmer response

If processing continues and the desired results are obtained, no action is required. Otherwise, determine the cause of the error and take corrective action. Incomplete or erroneous RODM definitions are probable causes.

0143 Query View Info Ref Class Error

Explanation

There was an error while querying the View Info Ref Class.

System action

The message is logged and processing continues. Subsequent processing might determine that the current request cannot be satisfied. If so, the current request ends and another message issued.

System programmer response

If processing continues and the desired results are obtained, no action is required. Otherwise, determine the cause of the error and take corrective action. Incomplete or erroneous RODM definitions are probable causes.

0144 Query View Info Object Class Error

Explanation

There was an error while querying the View Info Object Class.

System action

The message is logged and processing continues. Subsequent processing might determine that the current request cannot be satisfied. If so, the current request ends and another message issued.

System programmer response

If processing continues and the desired results are obtained, no action is required. Otherwise, determine the cause of the error and take corrective action. Incomplete or erroneous RODM definitions are probable causes.

0145 Query View Layout Parms Object Class Error

Explanation

There was an error while querying the View Layout Parms Object Class.

System action

The message is logged and processing continues. Subsequent processing might determine that the current request cannot be satisfied. If so, the current request ends and another message issued.

System programmer response

If processing continues and the desired results are obtained, no action is required. Otherwise, determine the cause of the error and take corrective action. Incomplete or erroneous RODM definitions are probable causes.

0146 Query PS Global Parms Object Class Error

Explanation

There was an error while querying the PS Global Parms Object Class.

System action

The message is logged and processing continues. Subsequent processing might determine that the current request cannot be satisfied. If so, the current request ends and another message issued.

System programmer response

If processing continues and the desired results are obtained, no action is required. Otherwise, determine the cause of the error and take corrective action. Incomplete or erroneous RODM definitions are probable causes.

0147 RODM MAPI Call Error, RC/RS :

Explanation

A non-zero return or reason code was returned from the RODM method application program interface (MAPI) call.

System action

The message is logged and processing continues. Subsequent processing might determine that the current request cannot be satisfied. If so, the current request ends and another message issued.

System programmer response

If processing continues and the desired results are obtained, no action is required. Otherwise, determine the cause of the error, based on the return code and reason code, and take corrective action.

0148 Return/Reason code set error

Explanation

The method was unable to set the return and reason code.

0150 **The view type *insert_1* is not recognized.**

Explanation

View Notification granularity does not recognize the input view type.

Message Variables

insert_1
View type.

System action

Building of the view ends.

System programmer response

This is a system error. Contact IBM Software Support for assistance.

0153 **Query Display Resource Type error**

Explanation

There was an error while querying the Displayable Resource Type object.

System action

The message is logged and processing continues. Subsequent processing might determine that the current request cannot be satisfied. If so, the current request ends and another message issued.

System programmer response

If processing continues and the desired results are obtained, no action is required. Otherwise, determine the cause of the error and take corrective action. Incomplete or erroneous RODM definitions are probable causes.

0154 **Annotation field on the view named *insert_1* is too long and will be truncated**

Explanation

The data specified in RODM for this field is longer than view manager allows. The RODM data is displayed to help you identify the problem.

Message Variables

insert_1
View Name.

System action

The message is logged and processing continues.

System programmer response

Determine if this is a problem. Certain data can be truncated with no significant effect. On the other hand, resource names and other data might cause problems. Correct the RODM load statements.

0156 **Unsubscribe for Delete of objectID: *insert_1* failed. Requesting Graphic Data Server is *insert_2*.**

Explanation

An attempt to remove an Object Deletion subscription from a resource failed.

Message Variables

insert_1
ObjectID.
insert_2
Graphic Data Server LU name.

System action

This message is logged and processing continues.

System programmer response

Determine why unsubscribe failed from the data in the RODM log. Correct the problem or contact IBM Software Support for assistance.

0157 **Duplicate Layout Parm Objects**

Explanation

There are two Layout Parm objects located for the same resource.

System action

The message is logged and processing continues. Subsequent processing might determine that the current request cannot be satisfied. If so, the current request ends and another message issued.

System programmer response

If processing continues and the desired results are obtained, no action is required. Otherwise, determine the cause of the error and take corrective action. Incomplete or erroneous RODM definitions are probable causes.

0158 **RODM data: View Name is the same as another View Name with**

different case. This View Name will be omitted from the View List. The RODM data is: *insert_1*.

Explanation

The View Name in RODM for the MyName field of this view object is the same as a View Name for another view object of the same View Class, only different case. Although RODM allows the same name to be used with different case, VIEWMGR does not. The RODM data is displayed to help you identify the problem.

Message Variables

insert_1
RODM data.

System action

This message is logged and processing continues.

System programmer response

Ensure all MyNames of view object of the same class are unique regardless of case. Then correct the RODM load statements.

0159 **During construction of view: *insert_1*, RODM return code *insert_2*, reason code *insert_3*, was received during query of View_Layout_Parameters object with ObjectID: *insert_4*.**

Explanation

Query of View_Layout_Parameters object failed.

Message Variables

insert_1
View Name.

insert_2
RODM return code.

insert_3
RODM reason code.

insert_4
ObjectID.

System action

This message is logged and the view build ends.

System programmer response

Check the DetailLayoutParmListForSelectedResource attribute on the resource associated with this view. If

no error is found, contact IBM Software Support for assistance.

0160 **Mismatch datatype: actual**

Explanation

The data type expected from the RODM query does not match the actual data type received.

System action

The message is logged and processing continues. Subsequent processing might determine that the current request cannot be satisfied. If so, the current request ends and another message issued.

System programmer response

If processing continues and the desired results are obtained, no action is required. Otherwise, determine the cause of the error and take corrective action. Incomplete or erroneous RODM definitions are probable causes.

0161 **Mismatch datatype: expected**

Explanation

The data type expected from the RODM query does not match the data type received.

System action

The message is logged and processing continues. Subsequent processing might determine that the current request cannot be satisfied. If so, the current request ends and another message issued.

System programmer response

If processing continues and the desired results are obtained, no action is required. Otherwise, determine the cause of the error and take corrective action. Incomplete or erroneous RODM definitions are probable causes.

0162 **Error obtaining View Table**

Explanation

The RODM method is not able to obtain the View Table necessary for view building.

System action

The message is logged and processing ends.

System programmer response

If the problem is not corrected by subsequent retries of the view request, GMFHS must be recycled.

0163 Error obtaining storage

Explanation

The RODM method encountered a storage failure while building a view or view update.

System action

The message is logged and processing ends.

System programmer response

If the problem is not corrected by subsequent retries of the view request, storage must be added or freed in the RODM address space.

0164 Error getting access to the Method System Area

Explanation

The RODM method cannot get access to the Method System Area.

System action

The message is logged and processing ends.

System programmer response

If the problem is not corrected by subsequent retries of the request, GMFHS must be recycled.

0165 Error sending notification to IPC notification queue

Explanation

A method was unable to send a notification to the IPC notification queue DUIFI000.

System action

The message is logged and processing continues.

System programmer response

Examine the RODM log for any MAPI failures proceeding this message.

0166 RODM return code *insert_1*, reason code *insert_2* was received while installing notification method DUIFVNOT on ClassID: *insert_3*, FieldID: *insert_4*.

Explanation

This message displays the RODM return and reason codes that were received while installing a notification method.

Message Variables

insert_1

RODM return code.

insert_2

RODM reason code.

insert_3

ClassID.

insert_4

FieldID.

System action

Notification method is not installed, processing continues.

System programmer response

An explanation of the return and reason code values can be found in the *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide*. Also check prior log entries associated with this class or field. These can help to identify the source of the problem.

0167 RODM return code *insert_1*, reason code *insert_2* was received when performing a RODM query, function ID = *insert_3*.

Explanation

This message displays the RODM return and reason codes that were received when a method attempted a RODM query.

Message Variables

insert_1

RODM return code.

insert_2

RODM reason code.

insert_3

Function ID (class and field) of attempted query.

System action

The method ends.

System programmer response

For an explanation of the return and reason code values, see the *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide*. Also check

prior log entries associated with this method. These can help to identify the source of the problem.

0168 **Rule *insert_1* not recognized by the DUIFVNOT notification method**

Explanation

The rule used in the long-lived parameters of a notification subscription is not valid.

Message Variables

insert_1

Rule number.

System action

Method DUIFVNOT ends.

System programmer response

Use the *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide* for a list of the valid rules used for view notification subscriptions.

0169 **Unable to get ALET**

Explanation

Internal error occurred while attempting to obtain cross memory storage.

System action

A message is written to the log indicating the return and reason code values and the RODM method ends.

0170 **RODM data: ExceptionViewName is longer than 8 characters. ExceptionViewName is an attribute for objects under the ExceptionViewName will be omitted from VIEW LIST. The ExceptionViewName is: *insert_1***

Explanation

The ExceptionViewName in RODM is longer than eight characters. The RODM data is displayed to help the user identify the problem.

Message Variables

insert_1

ExceptionViewName value.

System action

The message is logged and processing continues.

System programmer response

Correct the RODM load statements.

0171 **New value provided to the change method is not of the appropriate data type for the *insert_1* field of object *insert_2*. The type supplied is *insert_3* and the expected type is *insert_4*.**

Explanation

The change method expects a certain data type for the new value but the value provided is of a different type.

Message Variables

insert_1

Field to be changed.

insert_2

Object to which field belongs.

insert_3

Incorrect data type.

insert_4

Expected data type.

System action

This message is issued to the log and the method ends.

System programmer response

Check to be sure that the method is installed on the correct field and class. Correct this if necessary.

0172 **New value provided to the change method is not of the appropriate length for the *insert_1* field of object *insert_2*. Length supplied is *insert_3* and the expected length is *insert_4*.**

Explanation

The change method expects a new data value of a specific length but the value provided has a different length.

Message Variables

insert_1

Field to be changed.

insert_2

Object to which field belongs.

insert_3

Incorrect length.

insert_4

Expected length.

System action

This message is issued to the log and the method ends.

System programmer response

Check to be sure that the method is installed on the correct field and class. Correct this if necessary.

0173	The ExceptionViewList field cannot be located for the resource object for which the change is intended.
-------------	--

Explanation

The change method expects the field for which the change method has been triggered to exist.

System action

This message is issued to the log and the method ends.

System programmer response

Check the RODM log to ensure an internal error condition in RODM has not occurred. Correct this if necessary.

0174	The ResourceTraits field cannot be located for the resource object for which the change is intended.
-------------	---

Explanation

The change method expects the field for which the change method has been triggered to exist.

System action

This message is issued to the log and the method ends.

System programmer response

Check the RODM log to ensure an internal error condition in RODM has not occurred. Correct this if necessary.

0175	The change method is unable to locate the ObjectID for the resource for which the change is intended.
-------------	--

Explanation

The change method expects the ObjectID for which the method has been triggered to exist.

System action

This message is issued to the log and the method ends.

System programmer response

Check the RODM log to ensure an internal error condition in RODM has not occurred. Correct this if necessary.

0176	RODM daata: ExceptionViewName is longer than eight characters. The view name of the object for this invalid ExceptionViewName will be omitted from the VIEW LIST. The omitted view name from the VIEW LIST is: insert_1.
-------------	---

Explanation

The ExceptionViewName in RODM is longer than eight characters. The RODM data is displayed to help the user identify the problem.

Message Variables

insert_1

Name of view that was omitted from the VIEW LIST.

System action

This message is issued to the log and processing continues.

System programmer response

Correct the RODM load statements.

0177	RODM daata: Error querying ExceptionViewName field for exception view name:insert_1.
-------------	---

Explanation

While processing the list of exception views, the host cannot query the ExceptionViewName field.

Message Variables

insert_1

Name of view.

System action

This message is issued to the log and processing of the graphical list of views is stopped.

System programmer response

Ensure the ExceptionViewName field for this view is defined correctly in RODM.

0179 **RODM data: Error locating
ExceptionViewList value: *insert_1*.**

Explanation

The ExceptionViewList in RODM cannot be located with the LMAH_Locate routine.

Message Variables***insert_1***

ExceptionViewList value.

System action

This message is logged and processing continues.

System programmer response

Verify any changes to the data model.

0180 **Invalid Self Defining
EKG_CHAR_VAR**

Explanation

The Self Defining EKG_CHAR_VAR field is not formatted properly.

System action

The message is logged and processing continues. Subsequent processing might determine that the current request cannot be satisfied. If so, the current request ends and another message issued.

System programmer response

If processing continues and the desired results are obtained, no action is required. Otherwise, determine the cause of the error and take corrective action.

0181 **Unable to process all Self Defining
entries**

Explanation

The SelfDefining field is not formatted properly and cannot be processed.

System action

The message is logged and processing continues. Subsequent processing might determine that the current request cannot be satisfied. If so, the current request ends and another message issued.

System programmer response

If processing continues and the desired results are obtained, no action is required. Otherwise, determine the cause of the error and take corrective action.

0183 **RODM data: Error locating
ResourceTraits for view: *insert_1*.**

Explanation

The ResourceTraits field in RODM cannot be located with the LMAH_Locate routine.

Message Variables***insert_1***

Name of view.

System action

The requested view can not be built. The message is logged and processing continues.

System programmer response

Verify any changes to the data model.

0185 **Invalid Self Defining field Type**

Explanation

The SelfDefining field is not formatted properly and cannot be processed.

System action

The message is logged and processing continues. Subsequent processing might determine that the current request cannot be satisfied. If so, the current request ends and another message issued.

System programmer response

If processing continues and the desired results are obtained, no action is required. Otherwise, determine the cause of the error and take corrective action.

0186 **Unrecognized RODM Data Type**

Explanation

The RODM data type returned on the query cannot be recognized and cannot be processed.

System action

The message is logged and processing continues. Subsequent processing might determine that the current request cannot be satisfied. If so, the current request ends and another message issued.

System programmer response

If processing continues and the desired results are obtained, no action is required. Otherwise, determine the cause of the error and take corrective action.

0189 Error retrieving Object Information**Explanation**

There was an error while querying the required information for an object.

System action

The message is logged and processing ends.

System programmer response

Use the RODM log to determine the cause of the error and take corrective action. Incomplete or erroneous RODM definitions are probable causes.

0190 Attempted to link a shadow object to a DRT object but resource name *insert_1* of the shadow object is invalid. The link operation is not performed. The resource name format for shadow objects is NETWORK.RESOURCE where NETWORK can be 0–8 characters and RESOURCE can be 1–8 characters. NETWORK and RESOURCE must adhere to the same character restrictions as VTAM network and resource names.**Explanation**

The specified resource name is not of the proper format.

Message Variables***insert_1***

Incorrect resource name of the shadow object.

System action

The message is logged. The link is not performed.

System programmer response

The RODM definitions must be updated to properly specify the resource name.

0191 ExceptionViewFilter is incorrect – RC=1. RODM data: Error with ExceptionViewFilter:**Explanation**

A bit was incorrectly set in the ExceptionViewFilter.

System action

The message is logged and processing for this view object ends.

System programmer response

Look at the description of the ExceptionViewName field in the *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide* and determine which fields you specified incorrectly. Specifically, look for a bit that was set that is designated as a reserved bit.

0192 ExceptionViewFilter is invalid – RC=2. RODM data: Error with ExceptionViewFilter: *insert_1***Explanation**

One or more UserStatus values in the ExceptionViewFilter were given an incorrect value of 3. Valid values are 0, 1 or 2.

Message Variables***insert_1***

ExceptionViewFilter value.

System action

The message is logged and processing for this view object ends.

System programmer response

Look at the description of the ExceptionViewName field in the *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide* and determine which fields you specified incorrectly. Specifically, you have set one or more UserStatus values as 3, instead of 0, 1, or 2.

0193 ExceptionViewFilter is invalid – RC=3. RODM data: Error with ExceptionViewFilter: *insert_1***Explanation**

A bit was incorrectly set in the ExceptionViewFilter. In addition, one or more UserStatus values in the ExceptionViewFilter were given an incorrect value of 3. Valid values are 0, 1, or 2.

Message Variables***insert_1***

ExceptionViewFilter value.

System action

The message is logged and processing for this view object ends.

System programmer response

Look at the description of the `ExceptionViewName` field in the *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide* and determine which fields you specified incorrectly. Specifically, look for a bit that was set that is designated as a reserved bit. In addition, look for where you have set one or more `UserStatus` values as 3, instead of 0, 1, or 2.

0195 **RODM data: Error locating ResourceTraits value: *insert_1***

Explanation

The `ResourceTraits` field in RODM cannot be located with the `LMAH_Locate` routine. The error occurred during build of an exception view, specifically while filtering `UserStatus` values.

insert_1
ResourceTraits value.

System action

The message is logged and processing continues.

System programmer response

Verify any changes to the data model.

0196 **RODM data: Error locating ResourceTraits value: *insert_1***

Explanation

The `ResourceTraits` field in RODM cannot be located with the `LMAH_Locate` routine. The error occurred during build of an exception view, specifically while filtering `UserStatus` values.

insert_1
ResourceTraits value.

System action

The message is logged and processing continues.

System programmer response

Verify any changes to the data model.

0197 **Required RootNode not specified for view: *viewname***

Explanation

A required `RootNode` attribute is not specified for this view.

System action

This message is issued to the log and construction of the view ends.

System programmer response

This message is issued when `LayoutType` = 8 and a `RootNode` has not been specified. See the description of the connectivity tree layout view in the *IBM Z NetView Resource Object Data Manager and GMFHS Programmer's Guide*. If this `LayoutType` is used, a `RootNode` must be specified.

0199 **Object name *insert_1* under Class name *insert_2* did not have a DisplayResourceType or a ViewInfoObject.**

Explanation

The object will be deleted from the view. View processing will continue.

insert_1
Name of object.

insert_2
Name of class.

System action

The message is logged and processing continues.

0200 **Alpha View Header is missing.**

Explanation

The Alpha View Header was not found.

0202 **Object name *insert_1* under Class name *insert_2* did not have a ViewInfoObject.**

Explanation

The object will be deleted from the view. View processing will continue.

insert_1
Name of object.

insert_2
Name of class.

System action

The message is logged and processing continues.

0204 **RODM data: ExceptionViewName is not unique. ExceptionViewName is an attribute for objects under the Exception_View_Class. The view name of the object for this duplicate ExceptionViewName will be omitted from VIEW LIST. The ExceptionViewName is: *insert_1*.**

Explanation

The ExceptionViewName in RODM is not unique. The RODM data is displayed to help the user identify the problem.

insert_1

ExceptionViewName value.

System action

The message is logged and processing continues.

System programmer response

Correct the RODM load statements.

0205 **RODM data: ExceptionViewName is not unique. ExceptionViewName is an attribute for objects under the Exception_View_Class. The view name of the object for this duplicate ExceptionViewName will be omitted from VIEW LIST. The ExceptionViewName is: *insert_1*.**

Explanation

The ExceptionViewName in RODM is not unique. The RODM data is displayed to help the user identify the problem.

insert_1

Name of view.

System action

The message is logged and processing continues.

System programmer response

Correct the RODM load statements.

0206 **New value provided to the change method is not of the appropriate data type for the *insert_1* field of class *insert_2*. The type supplied is *insert_3* and the expected type is *insert_4*.**

Explanation

The change method expects one data type for the new value but the value provided has a different type.

Message Variables

insert_1

Field name.

insert_2

Class name.

insert_3

Incorrect data type.

insert_4

Expected data type.

System action

This message is issued to the log and the method ends.

0208 **New value provided to the change method is invalid for the *insert_1* field of object *insert_2*. The value supplied is *insert_3* and the length of the value is *insert_4*. The value must be changed to be less than or equal to 8 characters. The change method is terminated.**

Explanation

The change method expects the value to be less than or equal to 8 characters.

Message Variables

insert_1

Field to be changed.

insert_2

Object to which field belongs.

insert_3

Incorrect data value.

insert_4

Expected data length.

System action

This message is issued to the log and the method ends.

System programmer response

Change the value to be less than or equal to 8 characters.

0211 **New value provided to the change method is invalid for the *insert_1* field of class *insert_2*. The value supplied is *insert_3* and the**

length is *insert_4*. The value must be changed to be less than or equal to 8 characters.

Explanation

The change method expects the value to be less than or equal to 8 characters.

Message Variables

insert_1

Field name.

insert_2

Class name.

insert_3

Incorrect data value.

insert_4

Incorrect data length.

System action

This message is issued to the log and the method ends.

System programmer response

Change the value to be less than or equal to 8 characters.

0217	Error encountered querying field(s) in an attempt to send an exception view update. Update will be ignored — see previous message for details.
-------------	---

Explanation

An exception view update cannot be processed because of errors in RODM. See previous message for details and correct the problem.

0219	Could not relocate Object Info structure
-------------	---

Explanation

A VCMH_OBJ_INFOP pointer cannot be relocated.

System action

This message is issued to the log and construction of the view ends.

System programmer response

There is a system error. Contact IBM Software Support for assistance.

0233	C not relocate Object Info structure
-------------	---

Explanation

A VCMH_OBJ_INFOP pointer cannot be relocated.

System action

This message is issued to the log and construction of the view ends.

System programmer response

There is a system error. Contact IBM Software Support for assistance.

0235	Error encountered while processing view connectivity
-------------	---

Explanation

An error forced the end of the processing of the view connectivity.

System action

The construction of the view ends.

System programmer response

An error was previously encountered during processing of view connectivity. Examine the RODM log for the specific error.

0236	Reset to default LinkCrossOptionValue View Name: <i>insert_1</i>
-------------	---

Explanation

The specified LinkCrossOptionValue is out of range. A default value is used.

Message Variables

insert_1

View Name.

System action

The message is logged, the default is set, and processing continues.

System programmer response

Set a valid LinkCrossOptionValue value.

0237	Reset to default BinPackingFlag View Name: <i>insert_1</i>
-------------	---

Explanation

The specified BinPackingFlag is out of range. A default value is used.

Message Variables

insert_1
View Name.

System action

The message is logged, the default is set, and processing continues.

System programmer response

Set a valid BinPackingFlag value.

0238 **Reset to default LayoutOrientation**
View Name: *insert_1*

Explanation

The specified LayoutOrientation is out of range. A default value is used.

Message Variables

insert_1
View Name.

System action

The message is logged, the default is set, and processing continues.

System programmer response

Set a valid LayoutOrientation value.

0239 **Reset to default**
DefaultRowSpacing View Name:
insert_1

Explanation

The specified DefaultRowSpacing is out of range. A default value is used.

Message Variables

insert_1
View Name.

System action

The message is logged, the default is set, and processing continues.

System programmer response

Set a valid DefaultRowSpacing value.

0241 **Reset to default LayoutType View**
Name: *insert_1*

Explanation

The specified LayoutType is out of range. A default value is used.

Message Variables

insert_1
View Name.

System action

The message is logged, the default is set, and processing continues.

System programmer response

Set a valid LayoutType value.

0243 **Reset to default**
SymbolRadiusValue View Name:
insert_1

Explanation

The specified SymbolRadiusValue is out of range. A default value is used.

Message Variables

insert_1
View Name.

System action

The message is logged, the default is set, and processing continues.

System programmer response

Set a valid SymbolRadiusValue value.

0245 **Reset to default**
EllipseAspectRatioHeight View
Name: *insert_1*

Explanation

The specified EllipseAspectRatioHeight is out of range. A default is used.

Message Variables

insert_1
View Name.

System action

The message is logged, the default is set, and processing continues.

System programmer response

Set a valid EllipseAspectRatioHeight.

0246	Reset to default EllipseAspectRatioWidth View Name: <i>insert_1</i>
-------------	--

Explanation

The specified EllipseAspectRatioWidth is out of range. A default value is used.

Message Variables

insert_1
View Name.

System action

The message is logged, the default is set, and processing continues.

System programmer response

Set a valid EllipseAspectRatioWidth.

0247	Invalid LayoutSequence specified View Name: <i>insert_1</i>
-------------	--

Explanation

The specified LayoutSequence is out of range.

Message Variables

insert_1
View Name.

System action

The message is logged, and the current request ends.

System programmer response

Set a valid LayoutSequence value.

0248	Invalid HierarchicalPriority View Name: <i>insert_1</i>
-------------	--

Explanation

The specified HierarchicalPriority is out of range.

Message Variables

insert_1
Field Name

insert_2
Object to which field belongs.

Message Variables

insert_1
View Name.

System action

This message is issued to the log and processing continues.

System programmer response

Set a valid HierarchicalPriority value.

0255	The <i>insert_1</i> field on object <i>insert2</i> is incorrect. See the RODM and GMFHS Programming Guide for a description of the field and its expected content.
-------------	---

Explanation

The method has encountered an incorrect value in a field. Another message sh follow indicating if the method can continue.

Message Variables

insert_1
Field Name.

insert_2
Object to which field belongs.

System action

This message is issued to the log and and processing continues.

System programmer response

Determine the cause of the incorrect field value, and correct if necessary.

0263	Unable to resolve specification of LINK as Root-Node
-------------	---

Explanation

A LINK is specified as the Root-Node and there is not a NULL endpoint on the LINK.

System action

The message is logged and processing continues. Subsequent processing might determine that the current request cannot be satisfied. If so, the current request ends and another message issued.

System programmer response

If processing continues and the desired results are obtained, no action is required. Otherwise, specify the LINK with at least one NULL endpoint or specify a NODE as the Root-Node.

0264	Redefine View with node object as Root-Node
-------------	--

Explanation

A LINK is specified as the Root-Node and there is not a NULL endpoint on the LINK.

System action

The message is logged and processing continues. Subsequent processing might determine that the current request cannot be satisfied. If so, the current request ends and another message issued.

System programmer response

If processing continues and the desired results are obtained, no action is required. Otherwise, specify the LINK with at least one NULL endpoint or specify a NODE as the Root-Node.

0265 NULL pointer to Object Info block

Explanation

A NULL pointer is passed as a parameter to a function that requires an Object Info block.

System action

The message is logged and processing continues. Subsequent processing might determine that the current request cannot be satisfied. If so, the current request ends and another message issued.

System programmer response

If processing continues and the desired results are obtained, no action is required. Otherwise, a RODM definition error is a probable cause.

0266 Error retrieving Object Link List

Explanation

There was an error while retrieving an Object Link List.

System action

The message is logged and processing continues. Subsequent processing might determine that the current request cannot be satisfied. If so, the current request ends and another message issued.

System programmer response

If processing continues and the desired results are obtained, no action is required. Otherwise, determine the cause of the error and take corrective action. Incomplete or erroneous RODM definitions are probable causes.

0267 Failed to locate NULL Object

Explanation

The NULL Object cannot be located. A NULL Object is required for view processing.

System action

The message is logged and processing continues. Subsequent processing might determine that the current request cannot be satisfied. If so, the current request ends and another message issued.

System programmer response

If processing continues and the desired results are obtained, no action is required. Otherwise, determine the cause of the error and take corrective action. Incomplete or erroneous RODM definitions are probable causes.

0270 Maximum number of nodes exceeded

Explanation

The Node control blocks have all been used.

System action

The message is logged and processing continues. Subsequent processing might determine that the current request cannot be satisfied. If so, the current request ends and another message issued.

System programmer response

There is a system error. Contact IBM Software Support for assistance.

0271 Maximum number of links exceeded

Explanation

The Link control blocks have all been used.

System action

The message is logged and processing continues. Subsequent processing might determine that the current request cannot be satisfied. If so, the current request ends and another message issued.

System programmer response

There is a system error. Contact IBM Software Support for assistance.

0275 Required attr, First|Second node not set:: View Name: *insert_1*

Explanation

The required First and Second Node are not set.

Message Variables**insert_1**

View Name.

System action

The message is logged and processing of this request ends.

System programmer response

Set the proper First and Second Node attributes.

0276 **Required attr, Bus node not set::**
View Name: insert_1

Explanation

The required Bus Node is not set.

Message Variables**insert_1**

View Name.

System action

The message is logged and processing of this request ends.

System programmer response

Set the proper Bus Node attribute.

0277 **Query Real Object error**

Explanation

There was an error while querying the Real Object.

System action

The message is logged and processing continues. Subsequent processing might determine that the current request cannot be satisfied. If so, the current request ends and another message issued.

System programmer response

If processing continues and the desired results are obtained, no action is required. Otherwise, determine the cause of the error and take corrective action. Incomplete or erroneous RODM definitions are probable causes.

0278 **Query Aggregate Object error**

Explanation

There was an error while querying the Aggregate Object.

System action

The message is logged and processing continues. Subsequent processing might determine that the current request cannot be satisfied. If so, the current request ends and another message issued.

System programmer response

If processing continues and the desired results are obtained, no action is required. Otherwise, determine the cause of the error and take corrective action. Incomplete or erroneous RODM definitions are probable causes.

0279 **Query Monitorable Object error**

Explanation

There was an error while querying the Monitorable Object.

System action

The message is logged and processing continues. Subsequent processing might determine that the current request cannot be satisfied. If so, the current request ends and another message issued.

System programmer response

If processing continues and the desired results are obtained, no action is required. Otherwise, determine the cause of the error and take corrective action. Incomplete or erroneous RODM definitions are probable causes.

0280 **Query Displayable Object error**

Explanation

There was an error while querying the Displayable Object.

System action

The message is logged and processing continues. Subsequent processing might determine that the current request cannot be satisfied. If so, the current request ends and another message issued.

System programmer response

If processing continues and the desired results are obtained, no action is required. Otherwise, determine the cause of the error and take corrective action.

Incomplete or erroneous RODM definitions are probable causes.

**0288 Query DisplayResourceType
children error**

Explanation

There was an error while querying the children of the DisplayResourceType class.

System action

The message is logged and processing continues. Subsequent processing might determine that the current request cannot be satisfied. If so, the current request ends and another message issued.

System programmer response

If processing continues and the desired results are obtained, no action is required. Otherwise, determine the cause of the error and take corrective action. Incomplete or erroneous RODM definitions are probable causes.

0293 Failed to allocate response buffer

Explanation

Unable to allocate memory for the response block.

System action

This message is issued to the log and processing ends.

System programmer response

There is a system error. Contact IBM Software Support for assistance.

**0295 Failed to get response block to
send response**

Explanation

Unable to allocate memory for the response block.

System action

This message is issued to the log and processing ends.

System programmer response

There is a system error. Contact IBM Software Support for assistance.

0298 PS Global Parms retrieval error

Explanation

There was an error while retrieving the PS Global Parms class.

System action

The message is logged and processing ends.

System programmer response

Determine the cause of the error and take corrective action. Incomplete or erroneous RODM definitions are probable causes.

**0300 Failed to find Fast Path View
object:: Object Name:insert_1**

Explanation

The specified resource that represents the root object for this view cannot be found.

Message Variables

insert_1
Object Name.

System action

The message is logged and construction of this view ends.

System programmer response

If this view does not exist, no action is required. If the view does exist, examine the RODM log for the cause of the error and take the appropriate corrective action.

**0301 Failed to find Network View
object:: View Name: insert_1**

Explanation

The specified object that represents this view cannot be found.

Message Variables

insert_1
View Name.

System action

The message is logged and construction of this view ends.

System programmer response

If this view does not exist, no action is required. If the view does exist, examine the RODM log for the cause of the error and take the appropriate corrective action.

0304 No Aggregate Children for this resource

Explanation

The specified resource does not have any Aggregate Children. The view is not created.

System action

The message is logged and construction of this view ends.

System programmer response

If this view does not exist, no action is required. If the view does exist, examine the RODM log for the cause of the error and take the appropriate corrective action. Also, you might have erroneous or incomplete RODM definitions.

0305 Failed to find Fast Path View class

Explanation

There was an error while retrieving the Fast Path View class.

System action

The message is logged and processing ends.

System programmer response

Determine the cause of the error and take corrective action. Incomplete or erroneous RODM definitions are probable causes.

0306 Failed to retrieve ViewInfoList

Explanation

There was an error while retrieving the View Info List.

System action

The message is logged and processing ends.

System programmer response

Determine the cause of the error and take corrective action. Incomplete or erroneous RODM definitions are probable causes.

0307 Failed to retrieve ViewInfoObject for view name *insert1*

Explanation

A specific View Info Object cannot be found.

Message Variables

insert_1
Name of view.

System action

The message is logged and processing ends.

System programmer response

Determine the cause of the error and take corrective action. Incomplete or erroneous RODM definitions are probable causes.

0309 Failed to find View Layout Parm

Explanation

A specific View Layout Parm Object cannot be found.

System action

The message is logged and processing ends.

System programmer response

Determine the cause of the error and take corrective action. Incomplete or erroneous RODM definitions are probable causes.

0310 Failed to retrieve ContainsObjects field

Explanation

The ContainsObjects field is empty or it does not exist. The ContainsObjects field is required to build this view.

System action

The message is logged and construction of the view ends.

System programmer response

If the view does not exist, no action is required. If the view does exist, examine the RODM log for the cause of the error and take the appropriate corrective action. Also, you might have incomplete or erroneous RODM definitions.

0311 Failed to build View Info Object blocks

Explanation

There was an error while obtaining storage for the View Info Object blocks.

System action

The message is logged and processing ends.

System programmer response

There is a system error. Contact IBM Software Support for assistance.

0312 **Failed to find Display Resource**
Type:: View Name: *insert_1* Object
Name: *insert_2*

Explanation

The Display Resource Type object cannot be found.

Message Variables

insert_1
View name.

insert_2
Object name.

System action

The message is logged and processing ends.

System programmer response

Determine the cause of the error and take corrective action. Incomplete or erroneous RODM definitions are probable causes.

0313 **The selected object is not**
allowed as a root object in this
view type.

Explanation

The RootObjectAllowed field in RODM is set to X'00' for the selected object.

System action

Processing ends for this view. Other views might be built.

System programmer response

If normal, ignore. Otherwise, change the value of RootObjectAllowed in RODM for the selected object.

0316 **View *insert_1* cannot be displayed**
due to requiring too many Null
nodes or links. The view is too
large and complex.

Explanation

There is too much in the view to be able to effectively lay out and display it in the available space and time.

Message Variables

insert_1
View Name.

System action

The attempt to display the view is halted, and this message is logged.

System programmer response

Check the RODM log for related messages and reduce the resources in the view.

User response

Record the view that was requested and contact the system programmer.

0317 **View *insert1* truncated due to**
ObjectSetCriteriaCount.

Explanation

The maximum number of objects allowed for this view has been reached. Objects in excess of this count are not included in this view.

Message Variables

insert_1
View Name.

System action

The message is logged and processing continues.

System programmer response

If this truncation is undesirable, set the ObjectSetCriteriaCount to a higher value.

0318 **Unable to retrieve Unique**
LayoutParmsObject

Explanation

There are two or more Layout Parm Objects for the resource. Default layout parms are used.

System action

This message is issued to the log and processing continues.

System programmer response

Determine why there are multiple layout parms for the resource. Erroneous RODM definitions are a probable cause.

0319	View Definition Changing - Request Rejected	0328	There are no Network Views defined
Explanation Your request to build the view was rejected. GMFHS is unable to build the view because the view definition is changing. The processing of this request ends.		Explanation The user has not defined any network views to RODM.	
System action The message is logged and processing of this request ends.		System action This message is issued to the log and processing continues.	
		0333	Invalid resource name (xxxxxxxx.yyyyyyyy)
System programmer response Determine the cause of the changing view definitions. Correct the problem or wait until the changes are complete and retry the request.		Explanation The specified resource name is not of the proper format.	
0320	Lock of View Objects failed - Request Rejected	System action The message is logged and processing continues. Subsequent processing might determine that the current request cannot be satisfied. If so, the current request ends and another message issued.	
Explanation GMFHS was unable to lock the objects required for this view. The processing of this request ends.		System programmer response Update the RODM definitions to properly specify the resource name.	
System action The message is logged and processing of this request ends.		0334	No SNA resources were found
System programmer response Use the RODM log to determine the cause of the lock failure. Correct the problem or wait until the other processes that have the locks complete processing and retry the request.		Explanation You have not defined SNA resources to RODM.	
0327	Failed to retrieve view data	System action This message is issued to the log and processing continues.	
Explanation Required View Class fields cannot be retrieved for this view.		0337	Root Object for this View not found
System action The message is logged and processing continues. Subsequent processing might determine that the current request cannot be satisfied. If so, the current request ends and another message issued.		Explanation The specified object that represents the root object for this view cannot be found.	
System programmer response If processing continues and the desired results are obtained, no action is required. Otherwise, determine the cause of the error and take corrective action. Incomplete or erroneous RODM definitions are probable causes.		System action The message is logged and construction of this view ends.	
		System programmer response If this view does not exist, no action is required. If the view does exist, examine the RODM log for the cause of the error and take the appropriate corrective action.	

0343 Failed to find Configuration View class

Explanation

There was an error while retrieving the Configuration View class.

System action

The message is logged and processing ends.

System programmer response

Determine the cause of the error and take corrective action. Incomplete or erroneous RODM definitions are probable causes.

0351 This view has no objects because no relationships were specified.

Explanation

The root object for this view did not have any relationship fields specified. Therefore, no objects can be found for the view.

System action

This message is issued to the log and processing continues. It is reported that this view was not found.

System programmer response

Determine if there is an error and take corrective action. Incomplete or erroneous RODM definitions are probable causes.

0362 Unable to locate specified root resource

Explanation

The specified resource that represents the root object for this view cannot be found.

System action

The message is logged and construction of this view ends.

System programmer response

If this view does not exist, no action is required. If the view does exist, examine the RODM log for the cause of the error and take the appropriate corrective action.

0380 Get Name Map Response error

Explanation

There was an error attempting to send the response for the Get Name Map request.

System action

The message is logged and processing for this request ends.

System programmer response

Use the RODM log to determine the cause of the error.

0383 Failed to find MDR view class

Explanation

There was an error while retrieving the Configuration View class.

System action

The message is logged and processing ends.

System programmer response

Determine the cause of the error and take corrective action. Incomplete or erroneous RODM definitions are probable causes.

0385 More Detail View for this resource was not found

Explanation

A More Detail View is not defined for this resource.

System action

The message is logged and construction of this view ends.

System programmer response

If this view does not exist, no action is required. If the view does exist, examine the RODM log for the cause of the error and take the appropriate corrective action. Also, incomplete or erroneous RODM definitions are probable causes.

0389 Failed to find Peer View object

Explanation

The view object that represents this view cannot be found.

System action

The message is logged and construction of this view ends.

System programmer response

If this view does not exist, no action is required. If the view does exist, examine the RODM log for the cause of the error and take the appropriate corrective action.

0391 Request type not recognized

Explanation

A View Request Type was specified that was out of range. Processing of this request ends.

System action

The message is logged and processing of this request ends.

System programmer response

There is a system error. Contact IBM Software Support for assistance.

0393 Unable to query Configuration_Peer_View_Class

Explanation

There was an error while retrieving the Configuration Peer View class.

System action

The message is logged and processing continues.

System programmer response

Determine the cause of the error and take corrective action. Incomplete or erroneous RODM definitions are probable causes.

0394 Unable to query Network_View_Class

Explanation

There was an error while retrieving the Network View class.

System action

The message is logged and processing continues.

System programmer response

Determine the cause of the error and take corrective action. Incomplete or erroneous RODM definitions are probable causes.

0395 Unable to query field *insert_1* of the Configuration_Logical_Connectivity_View class object.

The query failed with return code *insert_2* and reason code *insert_3*

Explanation

An error occurred while retrieving the value of the field on the Configuration_Logical_Connectivity_View class object.

Message Variables

insert_1

Field name.

insert_2

Return code.

insert_3

Reason code.

System action

The message is logged and the processing of the view request ends.

System programmer response

Examine the RODM log for both RODM- and GMFHS-generated error messages. Determine the cause of the error and take corrective action. Issue the view request again.

0396 Unable to query field *insert_1* of the Configuration_Physical_Connectivity_View class object. The query failed with return code *insert_2* and reason code *insert_3*

Explanation

An error occurred while retrieving the value of the field on the Configuration_Physical_Connectivity_View class object.

Message Variables

insert_1

Field name.

insert_2

Return code.

insert_3

Reason code.

System action

The message is logged and the processing of the view request ends.

System programmer response

Examine the RODM log for both RODM- and GMFHS-generated error messages. Determine the cause of the

error and take corrective action. Issue the view request again.

0397 **This resource object *insert_1* has not defined a related Display Resource Type object.**

Explanation

An error occurred while retrieving the value of the field on the Configuration_Physical_Connectivity_View class object.

Message Variables

insert_1
Object name.

System action

The message is logged and the processing of the view request ends.

System programmer response

Examine the RODM log for both RODM- and GMFHS-generated error messages. Determine the Display Resource Type object related to this resource object. Take corrective action and issue the view request again.

0398 **Unable to query Configuration_Backbone_View_Class**

Explanation

There was an error while retrieving the Configuration Backbone View class.

System action

The message is logged and processing continues.

System programmer response

Determine the cause of the error and take corrective action. Incomplete or erroneous RODM definitions are a probable cause.

0403 **SNA resource name length error. View Name: *insert_1* Object Name: *insert_2***

Explanation

The SNA resource name exceeds the maximum allowed length or the name is incomplete.

Message Variables

insert_1
View name.

insert_2
Object name.

System action

The message is logged and the construction of the view ends.

System programmer response

The resource identified by Object Name is an SNA resource that must have its name adjusted to conform to the SNA name format.

0446 **Unable to query MDR_Logical_View_Class**

Explanation

There was an error while retrieving the More Detail Logical View Class.

System action

The message is logged and processing continues.

System programmer response

Determine the cause of the error and take corrective action. Incomplete or erroneous RODM definitions are a probable cause.

0447 **Unable to query MDR_Physical_View_Class**

Explanation

There was an error while retrieving the More Detail Logical View Class.

System action

The message is logged and processing continues.

System programmer response

Determine the cause of the error and take corrective action. Incomplete or erroneous RODM definitions are a probable cause.

0449 **A required field on a RODM object was not present.**

Explanation

A query failed against a field that sh have been present.

System action

This message is issued to the log and the method ends.

System programmer response

Determine why query failed from data in the RODM log.

0502	New <i>insert_1</i> field value of <i>insert_2</i> provided to change method is not valid for this field for object <i>insert_3</i>.
-------------	---

Explanation

The change method cannot change the field's value because the new value provided to the change method is not valid for this field in an object of this class.

Message Variables

insert_1
Field to be changed.

insert_2
New value.

insert_3
Object name.

System action

This message is issued to the log and the method ends.

System programmer response

Correct the field value and retry.

0503	The <i>insert_1</i> value of object <i>insert_2</i> is incorrect (<i>insert_3</i>). A default value of <i>insert_4</i> is assumed for it.
-------------	--

Explanation

The method encountered an incorrect value in a field and substituted a default value for it.

Message Variables

insert_1
Field to be changed.

insert_2
Object name.

insert_3
Incorrect value.

insert_4
Default value.

System action

This message is issued to the log and processing continues.

System programmer response

Correct the field's value so that this log entry is no longer issued.

0504	Method has been triggered at the object level which is not allowed. This method must be triggered at the <i>insert_1</i> class level.
-------------	--

Explanation

The method can only be triggered at the indicated class level but it was triggered for an object of some class.

Message Variables

insert_1
Correct class level.

System action

The method ends.

System programmer response

Verify that the method is properly installed and is being triggered correctly.

0505	New value provided to the change method is not of the appropriate data type for the <i>insert_1</i> field of the <i>insert_2</i> class. The type supplied is <i>insert_3</i> and the expected type is <i>insert_4</i>.
-------------	---

Explanation

The method has received a new value for the field and class indicated but this value does not have a correct data type.

Message Variables

insert_1
Field to be changed.

insert_2
Class to which field belongs.

insert_3
Data type supplied.

insert_4
Expected data type.

System action

The method ends.

System programmer response

Verify that the method is installed on the correct field and class and that the field is defined as having the expected data type.

0506 **Method has been triggered for the *insert_1* field of object *insert_2* instead of the *insert_3* field as required.**

Explanation

The method has been associated with an object field other than that for which it is intended to be associated.

Message Variables

insert_1
Field for which method triggered.

insert_2
Object to which field belongs to.

insert_3
Field intended for the method.

System action

This message is issued to the log and the method is ended.

System programmer response

Remove the association of this method with the first field identified in the message.

0507 ***insert_1* method has been invoked as other than a named method.**

Explanation

The indicated method sh be invoked as a named RODM method, but was invoked as a different type of method.

Message Variables

insert_1
Method name.

System action

This message is issued to the log and the method is ended.

System programmer response

You need to properly install the method and trigger it as a named method only. If you install the method as a different method type, you sh remove this definition of the method.

0508 **Method has been triggered at the *insert_1* class level which is not allowed. This method must be triggered at the instance level.**

Explanation

The method is intended to be triggered for objects but it was triggered for an object class.

Message Variables

insert_1
Method name.

System action

This message is issued to the log and the method is ended.

System programmer response

Ensure that all requests or actions that cause this method to be triggered are done for an object.

0509 **Short lived input parameters are missing or invalid for the invocation of this method for *insert_1*. Parameter pointer = *insert_2*. If the pointer is not zero, a dump of the parameters will follow.**

Explanation

A null, short-lived parameter pointer has been passed to the method, or the parameters that are pointed to contain incorrect data.

Message Variables

insert_1
object for which method invoked.

insert_2
Parameter pointer.

System action

This message is issued to the log and the method is ended.

System programmer response

If the pointer is zero, make sure that the method is triggered with the required parameters. If the pointer

is non-zero, check the dump of the parameters, which will be in a subsequent log entry, to see what errors are in the parameters.

0510 **Update of the DisplayStatus value of *insert_1* failed after the SourceStatusUpdateTime value was updated.**

Explanation

The SourceStatusUpdateTime field of the indicated object has been updated with the time provided in the method's short-lived parameters, but the subsequent attempt to update the object's DisplayStatus field value failed.

Message Variables

insert_1

Object for which DisplayStatus updated.

System action

This message is issued to the log and the method is ended.

System programmer response

To determine why the update of the DisplayStatus field value failed, check the RODM log entries prior to the one containing this message. Correct the condition causing the error and retry the request if necessary.

0511 **Function requires a non-null pointer to an Object ID when called from an object independent method but none was specified.**

Explanation

The caller of this function did not provide an object identifier and this identifier is required.

System action

This message is issued to the log and processing continues.

System programmer response

Contact IBM Software Support for assistance. This message indicates a program logic error.

0512 **Apparent notification method failure after an update of the *insert_1* field of *insert_2*. Reason code *insert_3* (*insert_4*).**

Explanation

The field value identified in the message was changed successfully, but the reason code from the method application program interface (MAPI) field change request was in the range which might indicate that a notification method installed on the field has failed.

Message Variables

insert_1

Field name.

insert_2

Object name.

insert_3

RODM return code.

insert_4

RODM reason code.

System action

Processing related to the field change continues.

System programmer response

Check the RODM log entries preceding the one containing this message to determine what method set the reason code. Correct the condition indicated by the reason code.

0513 **Unable to query the *insert_1* field of object *insert_2*.**

Explanation

The object independent method cannot successfully query the specified field of the object identified in the message.

Message Variables

insert_1

Field name.

insert_2

Object name.

System action

This message is issued to the log and processing continues.

System programmer response

Check the RODM log entries preceding the one containing this message for one indicating why the query failed. If necessary, correct the condition causing this failure.

0514 **Unable to execute a Query Object Name RODM MAPI call for object**

***insert_1*. Return code *insert_2*,
Reason code *insert_3***

Explanation

The object-specific method cannot successfully query the object name of the object identified in the message.

Message Variables

insert_1
Object name.

insert_2
RODM return code.

insert_3
RODM reason code.

System action

This message is issued to the log and processing continues.

System programmer response

If necessary, correct the condition causing this failure. RODM return and reason codes in the message identify the reason the query failed.

0515	Cannot convert <i>insert_1</i> to a subfield name.
-------------	---

Explanation

The number identified in the message was provided to a function that, when provided with a valid subfield identifier, provides a text string containing the name for that subfield type. The number, however, is not a valid subfield identifier.

Message Variables

insert_1
Object ID.

System action

This message is issued to the log and processing continues.

System programmer response

Contact IBM Software Support for assistance. This message reports a condition caused by a program logic error.

0516	Unable to execute a Query Field Name RODM MAPI call for field ID <i>insert_1</i>. Return code <i>insert_2</i>, Reason code <i>insert_3</i>
-------------	---

Explanation

The object-specific method can not successfully query for the name of the field whose identifier is provided in the message.

Message Variables

insert_1
Field name.

insert_2
RODM return code.

insert_3
RODM reason code.

System action

This message is issued to the log and processing continues.

System programmer response

Check the RODM log entries preceding this message for one indicating why the query failed. If necessary, correct the condition causing this failure.

0517	Unable to execute a Query Field Name RODM MAPI call for field ID <i>insert_1</i> and object ID <i>insert_2</i>. Return code <i>insert_3</i>, Reason code <i>insert_4</i>.
-------------	--

Explanation

The object-independent method cannot successfully query for the name of the field whose identifier is provided in the message.

Message Variables

insert_1
Field name.

insert_2
Object name.

insert_3
RODM return code.

insert_4
RODM reason code.

System action

This message is issued to the log and processing continues.

System programmer response

Check the RODM log entries preceding this message for one indicating why the query failed. If necessary, correct the condition causing this failure.

0518 **Unable to execute a Where Am I RODM MAPI call. Return code *insert_1*, Reason code *insert_2*.**

Explanation

The 'Where Am I' method application program interface (MAPI) function did not successfully complete.

Message Variables

insert_1
RODM return code.

insert_2
RODM reason code.

System action

This message is issued to the log and the method ends.

System programmer response

Correct the condition described by the RODM method application program interface (MAPI) return and reason codes provided in the message.

0519 **Unable to execute a Query Function Block Contents RODM MAPI call. Return code *insert_1*, Reason code *insert_2*.**

Explanation

The 'Query Function Block Contents' method application program interface (MAPI) function did not successfully complete.

Message Variables

insert_1
RODM return code.

insert_2
RODM reason code.

System action

This message is issued to the log and the method ends.

System programmer response

Correct the condition described by the RODM method application program interface (MAPI) return and reason codes provided in the message.

0520 **Lock objects request failed due to function block memory allocation failure. Requested *insert_1* bytes.**

Explanation

A request to allocate a storage area of the size indicated in the message was rejected.

Message Variables

insert_1
Number of bytes requested.

System action

This message is issued to the log and the method ends.

System programmer response

Check for other log entries or console messages indicating what storage type in RODM has been exhausted. It might be necessary to change the RODM customization parameters to provide a larger storage area for this type of storage.

0521 **Lock objects request failed. Return code *insert_1*, reason code *insert_2*. List of objects with associated lock reason codes follows.**

Explanation

A method has requested that explicit object locks be obtained but RODM has rejected the request.

Message Variables

insert_1
RODM return code.

insert_2
RODM reason code.

System action

This message is issued to the log and the method ends.

System programmer response

Correct the condition associated with the RODM method application program interface (MAPI) return and reason codes provided in the message. Also see the subsequent log entries that provides the lock request reason code for each object in the request.

0522 ***insert_1* lock return code *insert_2*.**

Explanation

This message follows messages 0521 and provides the name of an object and the lock reason code associated with the attempt to lock the specific object.

There will be as many of this message as there are objects specified in the failing lock request.

Message Variables

insert_1
Object name.

insert_2
lock return code.

System action

This message is issued to the log and the method ends.

System programmer response

See the response for message 0521

0523	Unlock objects request failed. Return code <i>insert_1</i>, reason code <i>insert_2</i>.
-------------	---

Explanation

A method requested that all held object locks be released and RODM rejected the request.

Message Variables

insert_1
RODM return code.

insert_2
RODM reason code.

System action

This message is issued to the log and the method ends.

System programmer response

Correct the condition associated with the RODM method application program interface (MAPI) return and reason codes provided in the message.

0524	Error encountered attempting to set the return and reason codes to <i>insert_1</i> and <i>insert_2</i>. Return code from attempt was <i>insert_3</i>; reason code was <i>insert_4</i>.
-------------	---

Explanation

A method has made a method application program interface (MAPI) request to set return and reason codes. This request has been rejected by RODM.

Message Variables

insert_1
Attempted RODM return code.

insert_2
Attempted RODM reason code.

insert_3
RODM return code.

insert_4
RODM reason code.

System action

This message is issued to the log and an attempt is made to set the method's return code to EKG_RC_ERROR (8) and its reason code to LMAH_RS_CANNOT_SET_CODES (45074).

System programmer response

Correct the condition associated with the RODM method application program interface (MAPI) return and reason codes provided in the message.

0525	Output to log request failed due to text buffer memory allocation failure. Requested <i>insert_1</i> bytes.
-------------	--

Explanation

A request to allocate a storage area of the size indicated in the message was rejected.

Message Variables

insert_1
Number of bytes requested.

System action

This message is issued to the log and processing continues. The log entry is not written.

System programmer response

Check for other log entries or console messages indicating what storage type in RODM has been exhausted. It might be necessary to change the RODM customization parameters to provide a larger storage area for this type of storage.

0527	Failure to allocate <i>insert_1</i> bytes of memory updating the aggregation counters on <i>insert_2</i>.
-------------	--

Explanation

A request to allocate a storage area of the size indicated in the message was rejected.

Message Variables

insert_1
Number of bytes requested.

insert_2
Object name.

System action

This message is issued to the log and the method ends.

System programmer response

Check for other log entries or console messages indicating what storage type in RODM has been exhausted. It might be necessary to change the RODM customization parameters to provide a larger storage area for this type of storage.

0528 **Incorrect parameter type flag encountered in 'insert_1' at position *insert_2*.**

Explanation

A request was made to create the structure that contains all the information required to query or change a RODM object field value. The request contained an incorrect or misplaced parameter type flag.

Message Variables

insert_1
Parameter string.

insert_2
Position.

System action

This message is issued to the log. Processing continues but a subsequent query or change request might fail.

System programmer response

Contact IBM Software Support. This condition is caused by a program logic error.

0529 **Link request between 'insert_1' and 'insert_2' failed. Return code *insert_3*, reason code *insert_4*.**

Explanation

A request was made to link the indicated objects and fields. The request was rejected for the reason indicated by the RODM method application program interface (MAPI) return and reason codes in the message.

Message Variables

insert_1
Object 1 name.

insert_2
Object 2 name.

insert_3
RODM return code.

insert_4
RODM reason code.

System action

The method calling the link function might end depending upon the reason code and other circumstances. If the method does end, there are subsequent log entries to indicate why.

System programmer response

If the error caused the method to fail, see the subsequent RODM log entry from the method and follow the instructions indicated by that message.

0530 **Unlink request between 'insert_1' and 'insert_2' failed. Return code *insert_3*, reason code *insert_4*.**

Explanation

A request was made to unlink the indicated objects and fields. The request was rejected for the reason indicated by the RODM method application program interface (MAPI) return and reason codes in the message.

Message Variables

insert_1
Object 1 name.

insert_2
Object 2 name.

insert_3
RODM return code.

insert_4
RODM reason code.

System action

The method calling the unlink function might end depending upon the reason code and other circumstances. If the method does end, there will be subsequent log entries indicating why.

System programmer response

If the error caused the method to fail, see the subsequent RODM log entry from the method and perform the action indicated by that message.

0531 **Field query failed for field *insert_1* of class *insert_2*, object *insert_3*.**

Return code *insert_4*, reason code *insert_5*.

Explanation

A method application program interface (MAPI) request failed on a 'query a field' transaction.

Message Variables

insert_1

Field name.

insert_2

Class name.

insert_3

Object name.

insert_4

RODM Return Code.

insert_5

RODM Reason Code.

System action

Processing continues, but most methods end when they observe this condition.

System programmer response

Correct the condition associated with the RODM method application program interface (MAPI) return and reason codes provided in the message.

0532	EKGMAPI function <i>insert_1</i> got reason code <i>insert_2</i>.
-------------	--

Explanation

A method application program interface (MAPI) request failed with the return and reason codes indicated.

Message Variables

insert_1

RODM Return Code.

insert_2

RODM Reason Code.

System action

The method ends.

System programmer response

Check the RODM documentation for the meaning of the return and reason codes indicated. Take the corrective action indicated there.

0534	Request to schedule object-independent method <i>insert_1</i> for
-------------	--

asynchronous execution failed.
Return code *insert_2*, reason code *insert_3*.

Explanation

This message provides the method API return and reason codes from a failed request to trigger an object-independent method for asynchronous execution.

Message Variables

insert_1

Method name.

insert_2

RODM return code.

insert_3

RODM reason code.

System action

Subsequent log messages indicate the impact of this failure.

System programmer response

Check the RODM documentation for the meaning of the return and reason codes indicated. Take the corrective action as indicated.

0535	Query unsuccessful due to memory allocation failure -- size = <i>insert_1</i> bytes.
-------------	---

Explanation

A request to allocate a storage area of the size indicated in the message was rejected.

Message Variables

insert_1

Number of bytes requested.

System action

This message is issued to the log and the method ends.

System programmer response

Check for other log entries or console messages indicating what storage type in RODM has been exhausted. It might be necessary to change the RODM customization parameters to provide a larger storage area for this type of storage.

0536	Required field <i>insert_1</i> (subfield <i>insert_2</i>) not found for query. Class <i>insert_3</i>, object <i>insert_4</i>.
-------------	--

Explanation

A 'query a field' or a 'query multiple subfield' method API (MAPI) request did not succeed because the requested field does not exist on the object.

Message Variables

- insert_1*
Field name.
- insert_2*
Subfield name.
- insert_3*
Class name.
- insert_4*
Object name.

System action

The method invoking the query will probably end when it observes this error.

System programmer response

Ensure the method is using the correct object. Also, make sure that this object is in the correct RODM class, and that this class has all of its fields properly defined.

0537	Object <i>insert_1</i> not found for query.
-------------	--

Explanation

A 'query a field' or a 'query multiple subfield' method API (MAPI) transaction did not succeed because the requested object is not found.

Message Variables

- insert_1*
Object name.

System action

The method involved will probably end when it observes this error condition.

System programmer response

Ensure that the method was accessing the intended object. Also, determine if another RODM application deleted the object while the method was running.

0538	Query of field <i>insert_1</i> (subfield <i>insert_2</i>) failed on class <i>insert_3</i> object <i>insert_4</i>. Return code <i>insert_5</i>, reason code <i>insert_6</i>.
-------------	--

Explanation

An error occurred during a 'query field', 'query subfield', or 'query multiple subfield' method API (MAPI) transaction.

Message Variables

- insert_1*
Field name.
- insert_2*
Subfield name.
- insert_3*
Class name.
- insert_4*
Object name.
- insert_5*
RODM return code.
- insert_6*
RODM reason code.

System action

The method will probably end when it observes this error condition.

System programmer response

Determine the cause of the failure based on the information provided in the message and correct the problem.

0539	Query failed due to unexpected data type. Field <i>insert_1</i> (subfield <i>insert_2</i>), class <i>insert_3</i>, object <i>insert_4</i>, expected type <i>insert_5</i>, type of queried data <i>insert_6</i>.
-------------	--

Explanation

The data returned from a field query was not the data type expected by the method.

Message Variables

- insert_1*
Field name.
- insert_2*
Subfield name.
- insert_3*
Class name.
- insert_4*
Object name.
- insert_5*
Expected data type.
- insert_6*
Data type returned by RODM.

System action

The method will probably end when it observes this error.

System programmer response

Correct the definition of the field to the correct type.

0540	Field query failed due to incorrect data length. Field <i>insert_1</i> (subfield <i>insert_2</i>), class <i>insert_3</i>, object <i>insert_4</i> expected length <i>insert_5</i>, length of queried data <i>insert_6</i>.
-------------	--

Explanation

A query of a field, probably of type AnonymousVar, returned the wrong amount of data.

Message Variables

- insert_1*
Field name.
- insert_2*
Subfield name.
- insert_3*
Class name.
- insert_4*
Object name.
- insert_5*
Expected data length.
- insert_6*
Length returned by RODM.

System action

The method will probably end when it observes this error.

System programmer response

Correct the value, which might be inherited, for the field. Also ensure that no application or method changes this field to an incorrect value.

0541	Field query unsuccessful due to memory allocation failure - size = <i>insert_1</i> bytes.
-------------	--

Explanation

A request to allocate a storage area of the size indicated in the message was rejected.

Message Variables

- insert_1*
Number of bytes requested.

System action

This message is issued to the log and the method ends.

System programmer response

Check for other log entries or console messages indicating what storage type in RODM has been exhausted. It might be necessary to change the RODM customization parameters to provide a larger storage area for this type of storage.

0542	Object id <i>insert_1</i> not found for query of <i>insert_2</i>.
-------------	--

Explanation

A 'query a field' method application program interface (MAPI) transaction did not succeed because the requested object was not found.

Message Variables

- insert_1*
Object ID.
- insert_2*
Field name.

System action

The method involved will probably end when it observes this error condition.

System programmer response

Ensure that the method was accessing the intended object. Also determine if a RODM application deleted the object while the method was running.

0543	A <i>insert_1</i> request has been made for the <i>insert_2</i> object which is not of a class for which this request is allowed.
-------------	--

Explanation

A request of the type indicated was made for the object indicated. The request was rejected because the object is in the wrong class.

Message Variables

- insert_1*
Type of request.
- insert_2*
Object name.

System action

This message is issued to the log and the method ends.

System programmer response

Correct the condition causing this failure and retry the request.

0544	Short lived input parameters are missing or incorrect for UserStatus update of <i>insert_1</i>. Parameter pointer = <i>insert_2</i>. If the pointer is not zero, a dump of the parameters will follow.
-------------	---

Explanation

A null short-lived parameter pointer has been passed to the method, or the parameters pointed to contain incorrect data.

Message Variables

insert_1
Object name.

insert_2
Parameter pointer.

System action

This message is issued to the log and the method ends.

System programmer response

If the pointer is zero, make sure that the method is triggered with the required parameters. If the pointer is non-zero, check the dump of the parameters, which will be in a subsequent log entry, to determine what errors are in the parameters.

0545	The <i>insert_1</i> update mask of <i>insert_2</i> includes bits that are not relevant for the <i>insert_3</i> object.
-------------	---

Explanation

The indicated update mask includes bits that are not relevant for the indicated object. A dump of the update mask follows.

Message Variables

insert_1
insert_2
insert_3
Object name.

System action

This message is issued to the log and the method ends.

System programmer response

Check the dump of the update mask, which will be in a subsequent log entry, to see what errors are in the update mask.

0546	New value provided to the change method is not of the appropriate length for the <i>insert_1</i> field of object <i>insert_2</i>. Length supplied is <i>insert_3</i> and the expected length is <i>insert_4</i>.
-------------	---

Explanation

The change method expects a data value of a specific length for the new value but the value provided has a different length.

Message Variables

insert_1
Field name.

insert_2
Object name.

insert_3
Supplied length.

insert_4
Expected length.

System action

This message is issued to the log and the method ends.

System programmer response

Ensure that the method is installed on the correct field and class. Correct this if necessary.

0547	New <i>insert_1</i> field value of <i>insert_2</i> provided to change method is not valid for this field for object <i>insert_3</i>.
-------------	---

Explanation

The change method cannot change the field's value because the new value provided to the change method is not valid for this field in an object of this class.

Message Variables

insert_1
Field name.

insert_2
Field value.

insert_3
Object name.

System action

This message is issued to the log and the method ends.

System programmer response

Correct the new field value and retry.

0548 **Short lived input parameters are missing or incorrect for *insert_1* update request. Parameter pointer = *insert_2*. If the pointer is not zero, a dump of the parameters will follow.**

Explanation

A null short-lived parameter pointer has been passed to the method, or the parameters pointed to contain incorrect data.

Message Variables

insert_1
Type of update request.

insert_2
Parameter pointer.

System action

This message is issued to the log and the method ends.

System programmer response

If the pointer is zero, make sure that the method is triggered with the required parameters. If the pointer is non-zero, check the dump of the parameters, which will be in a subsequent log entry, to see what errors are in the parameters.

0549 **Cannot process *insert_1* update request because of a memory allocation failure. Requested *insert_2* bytes. A dump of the short-lived parameters for this method follow.**

Explanation

A request to allocate a storage area of the size indicated in the message was rejected.

Message Variables

insert_1
Type of update request.

insert_2
Number of requested bytes.

System action

This message is issued to the log and processing ends. The response block is not returned.

System programmer response

Check for other log entries or console messages indicating what storage type in RODM has been exhausted. It might be necessary to change the RODM customization parameters to provide a larger storage area for this type of storage.

0550 **Overflow has occurred for the *insert_1* field of *insert_2***

Explanation

The maximum numeric value of the indicated field is exceeded, causing the value to become negative.

Message Variables

insert_1
Field name.

insert_2
Object name.

System action

This message is issued to the log and the method ends.

System programmer response

Arrange the aggregation hierarchy again so that fewer real resources appear beneath this aggregate.

0551 **The value of the *insert1* filed on the *insert2* object must be changed at the class level.**

Explanation

The value of the field must be changed at the class level. The new value will be inherited by all objects unless the value has been changed on a lower level class.

Message Variables

insert_1
Field name.

insert_2
Object name.

System action

This message is written to the RODM log and the value of the field is unchanged.

System programmer response

Determine if the attempted change is valid for a specific class. If the change is valid, then the value of the field sh be changed on that class object.

0552	The AggregationPriorityHistogram field of <i>insert_1</i> is not consistent with the PriorityValueUnsatisfactory value (<i>insert_2</i>) of that object. A dump of the AggregationPriorityHistogram follows.
-------------	---

Explanation

Internal aggregation counters in the GMFHS data model have been corrupted.

Message Variables

insert_1
Field name.

insert_2
Value.

System action

This message is issued to the log and the method ends.

System programmer response

Resynchronize the counters by triggering DUIFFAWS or restarting GMFHS.

0553	A loop has been encountered in the aggregation hierarchy at <i>insert_1</i>. The aggregation path for this loop is shown in subsequent log entries.
-------------	--

Explanation

An illegal aggregation hierarchy has been encountered in that a resource is one of its own aggregation ancestors.

Message Variables

insert_1
Resource name.

System action

This message is issued to the log and the method ends.

System programmer response

Remove the loop from the aggregation hierarchy and resynchronize it by running the DUIFFAWS method or by restarting GMFHS.

0554	Excessive depth has been found in the aggregation hierarchy at <i>insert_1</i>. The aggregation path involved will be shown in subsequent log entries.
-------------	---

Explanation

A resource encountered in the network had too many generations of aggregation ancestors.

Message Variables

insert_1
Resource name.

System action

This message is issued to the log and the method ends.

System programmer response

Reduce the number of generations in the aggregation hierarchy and resynchronize it by running the DUIFFAWS method or by restarting GMFHS.

0556	Short lived input parameters are missing or incorrect for the trigger of this method. Parameter pointer = <i>insert_1</i>. If the pointer is not zero, a dump of the parameters will follow.
-------------	---

Explanation

A null short-lived parameter pointer has been passed to the method, or the parameters pointed to contain incorrect data.

Message Variables

insert_1
Parameter pointer.

System action

This message is issued to the log and the method ends.

System programmer response

If the pointer is zero, make sure that the method is triggered with the required parameters. If the pointer is non-zero, check the dump of the parameters, which

will be in a subsequent log entry, to see what errors are in the parameters.

0557 **The *insert_1* named method was not triggered for *insert_2* which is linked to domain *insert_3* because the *insert_4* field was not found on that object. *insert_2* might be of the wrong object class.**

Explanation

An attempt to trigger the indicated named method failed because the field on which the method is installed is not defined on the object.

Message Variables

insert_1
Method name.

insert_2
Object name.

insert_3
Domain name.

insert_4
Field name.

System action

This message is issued to the log and processing continues.

System programmer response

Correct the problem and retry.

0558 **The *insert_1* field was not found for *insert_2* which is linked to domain *insert_3*. *insert_2* might be of the wrong object class.**

Explanation

An attempt to query the indicated field failed because the field is not defined on the object.

Message Variables

insert_1
Method name.

insert_2
Object name.

insert_3
Domain name.

System action

This message is issued to the log and processing continues.

System programmer response

Correct the problem and retry.

0559 **Required field *insert_1* (subfield *insert_2*) not found for write. Class *insert_3*, object *insert_4*.**

Explanation

A 'change a field' method application program interface (MAPI) request did not succeed because the requested field does not exist on the object.

Message Variables

insert_1
Field name.

insert_2
Subfield name.

insert_3
Class name.

insert_4
Object name.

System action

The method invoking the change will probably end when it observes this error.

System programmer response

Ensure that the correct object is being used by the method. Also, ensure that this object is in the correct RODM class, and that all of the fields for this class are properly defined.

0560 **Object not found for write. Class *insert_1*, object *insert_2*.**

Explanation

A 'change a field' method application program interface (MAPI) transaction did not succeed because the requested object is not found.

Message Variables

insert_1
Class name.

insert_2
Object name.

System action

The method involved will probably end when it observes this error condition.

System programmer response

Ensure that the method was accessing the intended object. Also, determine if another RODM application deleted the object while the method was running.

0561	Field change failed for field <i>insert_1</i> (subfield <i>insert_2</i>) of class <i>insert_3</i>, object <i>insert_4</i>. Return code <i>insert_5</i>, reason <i>insert_6</i>.
-------------	--

Explanation

An unusual error occurred during a 'change a field' or 'change a subfield' method application program interface (MAPI) transaction.

Message Variables

- insert_1*
Field name.
- insert_2*
Subfield name.
- insert_3*
Class name.
- insert_4*
Object name.
- insert_5*
RODM return code.
- insert_6*
RODM reason code.

System action

The method will probably end when it observes this error condition.

System programmer response

Determine the cause of the failure based on the information provided in the message and correct the problem.

0562	Named method field <i>insert_1</i> not found. Class <i>insert_2</i>, object <i>insert_3</i>.
-------------	---

Explanation

An attempt to trigger a named method through the method application program interface (MAPI) failed because the MethodSpec field naming the method is not found.

Message Variables

- insert_1*
Field name.
- insert_2*
Class name.

insert_3
Object name.insert.

System action

The method will probably end on finding this error.

System programmer response

Ensure that the method is running on the correct object, that the object is in the correct class, and that the class is correctly defined.

0563	Object not found for <i>insert_1</i> named method trigger. Class <i>insert_2</i>, object <i>insert_3</i>.
-------------	--

Explanation

An attempt to trigger a named method through the method application program interface (MAPI) failed because the object specified in the request is not found.

Message Variables

- insert_1*
Method name.
- insert_2*
Class name.
- insert_3*
Object name.

System action

The method will probably end on finding this error.

System programmer response

Ensure that the method is running on the correct object, that the object exists, and that the object has not been recently deleted by another process.

0564	Trigger named method failed on field <i>insert_1</i> of class <i>insert_2</i>, object <i>insert_3</i>. Return code <i>insert_4</i>, reason <i>insert_5</i>.
-------------	--

Explanation

An attempt to trigger a named method failed for an unusual reason.

Message Variables

- insert_1*
Field name.
- insert_2*
Class name.
- insert_3*
Object name.

insert_4

RODM return code.

insert_5

RODM reason code.

System action

The method will probably end on finding this error.

System programmer response

Use the information contained in the log entry to resolve the problem.

0565	Request to schedule named method for asynchronous execution failed for field <i>insert_1</i> of class <i>insert_2</i>, object <i>insert_3</i>. Return code <i>insert_4</i>, reason <i>insert_5</i>.
-------------	--

Explanation

An attempt to trigger a named method using the 'message triggered action' function failed.

Message Variables**insert_1**

Field name.

insert_2

Class name.

insert_3

Object name.

insert_4

RODM return code.

insert_5

RODM reason code.

System action

The method will probably end upon encountering this error.

System programmer response

Use the information contained in the log entry to try to resolve the problem.

0566	Request to send a notification to application <i>insert_1</i> and queue <i>insert_2</i> failed. User word <i>insert_3</i> Return code <i>insert_4</i>, reason code <i>insert_5</i>. Notification data follows.
-------------	---

Explanation

A request to send a notification through the method application program interface (MAPI) to a RODM application failed.

Message Variables**insert_1**

Application name.

insert_2

Queue name.

insert_3

User word.

insert_4

RODM Return code.

insert_5

RODM Reason code.

System action

The notification is written to the RODM log, and processing continues.

System programmer response

Inspect the RODM error log for any other messages that might be related to notification queue problems. The return and reason code in this log entry sh provide additional information.

0567	Error encountered in issuing output to the response block. Return code <i>insert_1</i>, reason <i>insert_2</i>. RODM function id <i>insert_3</i>, data pointer <i>insert_4</i>. A dump of the function block and response data follows.
-------------	--

Explanation

An 'output to response block' method application program interface (MAPI) transaction failed for the indicated return and reason codes.

Message Variables**insert_1**

RODM return code.

insert_2

RODM reason code.

insert_3

RODM function ID.

insert_4

Data pointer.

System action The intended response data is written to the RODM error log. The method attempting to issue the response data will probably end.		System action This message is issued to the log and the method continues.	
System programmer response Ensure that the response block size provided to the method is sufficient. Also, check the return and reason codes in the log entry and see if they identify other causes for the problem.		System programmer response If the thresholds are in error, correct them and retry. Otherwise the problem sh correct itself.	
0568	Request to trigger object independent method <i>insert_1</i> failed. Return code <i>insert_2</i> , reason code <i>insert_3</i> .	0570	The <i>insert_1</i> value of <i>insert_2</i> cannot be calculated because the indicated object contains inconsistent field values.
Explanation A method attempted to trigger an object independent method for synchronous execution. Either the triggering mechanism or the method failed. Message Variables <i>insert_1</i> Method name. <i>insert_2</i> RODM return code. <i>insert_3</i> RODM reason code. System action The method ends. System programmer response Determine the cause of the failure from the return and reason codes given. A copy of the level-n method's short-lived parameters follow this log entry. There might be other messages in the RODM log to assist in problem determination.		Explanation The indicated field value cannot be calculated for the indicated object because field values required for the calculation are inconsistent. This might be the result of high RODM activity where asynchronous method invocations are performed out of order. If this is the case, the delayed method invocations sh run later and correct this situation. This might also be the result of having thresholds on the aggregate that are higher than the total number of resources under the aggregate. This can only be corrected by lowering the thresholds. In either case, message 0569 will be generated when the condition has been corrected. Message Variables <i>insert_1</i> Field name. <i>insert_2</i> Object name. System action This message is issued to the log and the method ends. System programmer response If the thresholds are in error, correct them and retry. Otherwise the problem sh correct itself.	
0569	The <i>insert_1</i> value of <i>insert_2</i> can now be calculated because the object's field values have been corrected.	0571	The <i>insert_1</i> field of the <i>insert_2</i> object is linked to other than a <i>insert_3</i> class instance.
Explanation This message is generated whenever the problem that generated message 0570 has been corrected. The aggregate's status will now be valid. Message Variables <i>insert_1</i> Field name.		Explanation The indicated field is linked to an object in an incorrect class. Message Variables <i>insert_1</i> Field name. <i>insert_2</i> Object name.	

insert_3

Class name.

System action

This message is issued to the log and the method ends.

System programmer response

Correct the problem and retry.

0572

An object (*insert_1*) in the aggregation hierarchy is of a class that does not include the *insert_2* field, so it is neither a real nor an aggregate object.

Explanation

A method encountered an object which does not represent a GMFHS real or aggregate resource.

Message Variables

insert_1

Object name.

insert_2

Field name.

System action

The method ends.

System programmer response

Ensure that the method is triggered on an appropriate object, that the object is in a class that contains real or aggregate objects, and that the class is properly defined in the GMFHS structure load input file.

0573

Short lived input parameters are missing or invalid for a get object profile request. Short lived parameter pointer is *insert_1*. If the pointer is not zero, a dump of the parameters will follow.

Explanation

A get aggregation profile request was made with missing or garbled input parameters.

Message Variables

insert_1

Parameter pointer.

System action

The method ends.

System programmer response

If the pointer is zero, make sure that the method is triggered with the required parameters. If the pointer is non-zero, check the dump of the parameters, which will be in a subsequent log entry, to see what errors are in the parameters.

0574

Cannot retrieve the aggregation profile for object *insert_1* because it is neither real nor aggregate (the *insert_2* field is not defined on its class).

Explanation

The object specified in a get aggregation profile request is not one that is involved in aggregation.

Message Variables

insert_1

Object name.

insert_2

Field name.

System action

The method ends.

System programmer response

Determine the object for which that retrieval was intended. Ensure that this object is in a class that is properly defined for aggregation.

0575

Cannot retrieve the aggregation profile for object *insert_1* because an object with this identifier cannot be found.

Explanation

A request to get an aggregation profile was made, but the object specified in the request does not exist.

Message Variables

insert_1

Object name.

System action

The method ends.

System programmer response

No response is required if the object was legitimately deleted from the system. If the object is to exist at this time, determine why the object is not there.

0576 **Cannot retrieve the aggregation profile for object *insert_1* because it is linked via its *insert_2* field to a *insert_3* class instance instead of a *insert_4* class instance.**

Explanation

An aggregate is not linked to a Display Resource Type object as required, but is instead linked to an object in another class.

Message Variables

insert_1
Object name.

insert_2
Field name.

insert_3
Class linked to.

insert_4
Class sh be linked to.

System action

The method ends.

System programmer response

Link the aggregate to an appropriate display resource type.

0577 **Short lived input parameters are missing or invalid for an update object profile request. Short lived parameter pointer is *insert_1*. If the pointer is not zero, a dump of the parameters will follow.**

Explanation

An update aggregation profile request was made with missing or garbled input parameters.

Message Variables

insert_1
Parameter pointer.

System action

The method ends.

System programmer response

If the pointer is zero, make sure that the method is triggered with the required parameters. If the pointer is non-zero, check the dump of the parameters, which will be in a subsequent log entry, to see what errors are in the parameters.

0578 **Cannot update the aggregation profile for object *insert_1* because it is neither real nor aggregate (the *insert_2* field is not defined on its class).**

Explanation

The object specified in an update aggregation profile request is not one that is involved in aggregation.

Message Variables

insert_1
Object name.

insert_2
Field name.

System action

The method ends.

System programmer response

Determine the object for which the update was intended. Ensure that this object is in a class that is properly defined for aggregation.

0579 **Cannot update the aggregation profile for object *insert_1* because an object with this identifier cannot be found.**

Explanation

A request to update an aggregation profile was made, but the object specified in the request does not exist.

Message Variables

insert_1
Object name.

System action

The method ends.

System programmer response

If the object was legitimately deleted from the system, no response is required. If the object sh exist at this time, determine why it is not there.

0580 **The *insert_1* field of object *insert_2* was corrected from *insert_3* to *insert_4*.**

Explanation

A method encountered an aggregation parameter that is incorrectly defined. The method opted to replace the incorrect value with a default.

Message Variables

- insert_1*
Field name.
- insert_2*
Object name.
- insert_3*
Incorrect value.
- insert_4*
Default value.

System action

Processing continues. Warning return codes and reason codes are set when the method ends.

System programmer response

Determine why the field was improperly set, and ensure that the default chosen by the method is the desired one.

0581 **Short lived input parameters are missing or incorrect for a get resource type profile request. Short lived parameter pointer is *insert_1*. If the pointer is not zero, a dump of the parameters will follow.**

Explanation

A null, short-lived parameter pointer has been passed to the method, or the parameters pointed to contain incorrect data.

Message Variables

- insert_1*
Parameter pointer.

System action

This message is issued to the log and the method ends.

System programmer response

If the pointer is zero, make sure that the method is triggered with the required parameters. If the pointer is non-zero, check the dump of the parameters, which will be in a subsequent log entry, to see what errors are in the parameters.

0582 **Get resource type aggregation profile request not processed due to memory allocation failure. Requested *insert_1* bytes. A dump of the short lived parameters including the request will follow.**

Explanation

A request to allocate a storage area of the size indicated in the message was rejected.

Message Variables

- insert_1*
Requested number of bytes.

System action

This message is issued to the log and the method ends.

System programmer response

Check for other log entries or console messages indicating what storage type in RODM has been exhausted. It might be necessary to change the RODM customization parameters to provide a larger storage area for this type of storage.

0583 **Short lived input parameters are missing or incorrect for an update resource type profile request. Short lived parameter pointer is *insert_1*. If the pointer is not zero, a dump of the parameters will follow.**

Explanation

A null short-lived parameter pointer has been passed to the method, or the parameters pointed to contain incorrect data.

Message Variables

- insert_1*
Parameter pointer.

System action

This message is issued to the log and the method ends.

System programmer response

If the pointer is zero, make sure the method is triggered with the required parameters. If the pointer is non-zero, check the dump of the parameters, which will be in a subsequent log entry, to see what errors are in the parameters.

0584 **Update resource type profile request processing failed: The request contained a type number, *insert_1* (hex *insert_2*), for which a *insert_3* class object cannot be found. A dump of the complete short lived parameters follows.**

Explanation

An object in the specified class with specified type number does not exist.

Message Variables

insert_1
Type number.

insert_2
Hexadecimal value of type number.

insert_3
Class name.

System action

This message is issued to the log and the method ends.

System programmer response

Determine whether a Display Resource Type class object with the indicated type number sh exist, and if so, restore its definition.

0585 **Update resource type profile request processing failed for a *insert_1* class object with type number *insert_2* (hex *insert_3*). A dump of the complete short lived parameters follows.**

Explanation

The update of an object in the specified class with the specified type number failed.

Message Variables

insert_1
Class name.

insert_2
Type number.

insert_3
Hexadecimal value of type number.

System action

This message is issued to the log and the method ends.

System programmer response

Check for prior log entries which indicate the reason for the failure. Correct the problem indicated in these entries and retry the request.

0586 **Aggregate *insert_1* is not linked to a *insert_2* object. *insert_3* is being used for the default aggregation threshold values.**

Explanation

An aggregate object has a null link to a display resource type object so default aggregation thresholds are not available for the aggregate object.

Message Variables

insert_1
Aggregate name.

insert_2
Object name.

insert_3
Default aggregation threshold.

System action

This message is issued to the log and -1 (never exceeded) is used as the default threshold value.

System programmer response

Establish a link between the aggregate object identified in the message and an appropriate resource type object.

0587 **Short lived input parameters provided to the change method for field *insert_1* of object *insert_2* are missing or incorrect. Parameter pointer = *insert_3*. If the pointer is not zero, a dump of the parameters will follow.**

Explanation

A null, short-lived parameter pointer has been passed to the method, or the parameters pointed to contain incorrect data.

Message Variables

insert_1
Field name.

insert_2
Object name.

insert_3
Parameter pointer.

System action

This message is issued to the log and the method ends.

System programmer response

If the pointer is zero, make sure that the method is triggered with the required parameters. If the pointer is non-zero, check the dump of the parameters, which

will be in a subsequent log entry, to see what errors are in the parameters.

0588 **Short lived input parameters are missing or invalid for a ChangeAggregationPriority request for *insert_1*. Short lived parameter pointer is *insert_2*. If the pointer is not zero, a dump of the parameters will follow.**

Explanation

A request to change a resource's aggregation priority was made with missing or unusable input parameters.

Message Variables

insert_1
Resource name.

insert_2
Parameter pointer.

System action

The method ends.

System programmer response

If you invoked this method, correct the input parameters to the method. If GMFHS invoked this method, contact IBM Software Support for assistance.

0589 **New *insert_1* field value of *insert_2* provided to change method is not valid for this field for class *insert_3*.**

Explanation

The change method cannot change the field's value because the new value provided to the change method is not valid for this field and class.

Message Variables

insert_1
Field name.

insert_2
Field value.

insert_3
Class name.

System action

This message is issued to the log and the method ends.

System programmer response

Correct the new field value and retry.

0591 **Short lived input parameters are missing or invalid for a update aggregation path request. Short lived parameter pointer is *insert_1*. If the pointer is not zero, a dump of the parameters will follow.**

Explanation

An Update Aggregation Path request made with missing or unusable input parameters.

Message Variables

insert_1
Parameter pointer.

System action

The method ends.

System programmer response

Correct the input parameters and retry the request.

0592 ***insert_1* object (object id *insert_2*) in the *insert_3* update aggregation path request was not found.**

Explanation

An object that was specified by RODM object identifier in an Update Aggregation Path request was not found.

Message Variables

insert_1
Object name.

insert_2
Object ID.

insert_3
Type of request.

System action

The method ends.

System programmer response

Ensure that the input parameters for the request are in the correct format, that the object is specified correctly, and that it exists.

0593 ***insert_1* in the update aggregation path request is not of a valid class for this request.**

Explanation

One of the objects in the Update Aggregation Path request is not a member of the appropriate class; it is not a real or aggregate object as required.

Message Variables

insert_1
Object name.

System action

The method ends.

System programmer response

Determine if the input parameters to the Update Aggregation Path request are reversed. Also, ensure that the objects specified in the request are of the correct types, and that their classes are properly defined in the GMFHS structure load.

0594	Update aggregation path request rejected because the identifiers in the input parameters are of the same object (<i>insert_1</i>).
-------------	---

Explanation

You requested that an object become its own aggregation parent. This is not allowed.

Message Variables

insert_1
Object name.

System action

The method ends.

System programmer response

Correct the request to specify a valid aggregation relationship.

0595	The ResourceTraits field of the object <i>insert_1</i> does not contain an exception status (XCPT or NOXCPT values), XCPT is assumed.
-------------	--

Explanation

GMFHS is dependent upon those values for aggregation calculation and exception views. One of those values must be present.

Message Variables

insert_1
Object name.

System action

XCPT is assumed and processing continues.

System programmer response

Update the DisplayStatus field on the object—that will cause ResourceTraits to be updated correctly.

0596	Update aggregation path request to <i>insert_1 insert_2</i> and <i>insert_3</i> failed because a stable list of the objects affected by the request cannot be built and locked. A dump of the lock function blocks follow.
-------------	---

Explanation

Either several Update Aggregation Path requests or a RODM or GMFHS structure or object load is in progress.

Message Variables

insert_1
Object name.

insert_2
Object name.

insert_3
Object name.

System action

The method ends.

System programmer response

Wait until existing RODM and GMFHS activity is substantially reduced, and retry the request. Avoid submitting a large number of requests simultaneously.

0597	A request to allocate <i>insert_1</i> bytes of memory failed.
-------------	--

Explanation

A request to allocate a storage area of the size indicated in the message is rejected.

Message Variables

insert_1
Number of bytes requested.

System action

This message is issued to the log and the method ends.

System programmer response

Check for other log entries or console messages indicating what storage type in RODM has been exhausted. It might be necessary to change the RODM customization parameters to provide a larger storage area for this type of storage.

0599 **An update aggregation path request will fail because object *insert_1* has been encountered in the aggregation hierarchy and this object's class does not have the required *insert_2* field.**

Explanation

An object in the aggregation hierarchy does not have its class correctly defined.

Message Variables

insert_1
Object name.

insert_2
Field name.

System action

The method ends.

System programmer response

Ensure that the object is in the appropriate class and that it belongs in the aggregation hierarchy. Also, ensure that the class is correctly defined in the GMFHS structure load.

0604 **Update aggregation path failed because the aggregation counters on *insert_1* are not consistent.**

Explanation

Inconsistent data was found in an object involved in an Update Aggregation Path request. The inconsistency was probably caused by the failure of an earlier method.

Message Variables

insert_1
Object name.

System action

The method is ends.

System programmer response

Check the log for evidence of methods which failed earlier, possibly corrupting aggregation counters.

Trigger DUIFFAWS or reinitialize GMFHS to resynchronize the aggregation hierarchy. Retry the request.

0605 **Short lived input parameters are missing or invalid for a list suspended resources request. Short lived parameter pointer is *insert_1*. If the pointer is not zero, a dump of the parameters will follow.**

Explanation

No short-lived parameters are provided in the List Suspended Resources request, or those that are provided are incomplete or in the wrong format.

Message Variables

insert_1
Parameter pointer.

System action

The method ends.

System programmer response

Correct the input parameters to the method and retry the list. If the method was invoked by GMFHS, contact IBM Software Support for assistance. GMFHS code should use the correct format.

0606 **The list suspended resources request cannot be processed due to a memory allocation failure. Requested *insert_1* bytes.**

Explanation

A request to allocate a storage area of the size indicated in the message is rejected.

Message Variables

insert_1
Number of bytes requested.

System action

This message is issued to the log and the method ends.

System programmer response

Check for other log entries or console messages indicating what storage type in RODM has been exhausted. It might be necessary to change the RODM customization parameters to provide a larger storage area for this type of storage.

0607	Short lived input parameters are missing or invalid for a link resource type request. Short lived parameter pointer is <i>insert_1</i> . If the pointer is not zero, a dump of the parameters will follow.	Explanation An object specified in a Link Resource Type request is not appropriate for the transaction. One object sh be a Display Resource Type, and the other sh be a real, aggregate, or shadow object.
Explanation No short-lived parameters are provided in the Link Resource Type request, or those that are provided are incomplete or in the wrong format.		Message Variables <i>insert_1</i> Object name.
Message Variables <i>insert_1</i> Parameter pointer.		System action The method ends.
System action The method ends.		System programmer response Ensure that the two resources specified in the method's input parameters are in the correct order. If they are reversed, this error w occur. Also, ensure that the resources are in the appropriate classes, and that the classes are correctly defined.
System programmer response Correct the input parameters to the method and retry the link.		
0608	<i>insert_1</i> object (object id <i>insert_2</i>) in the <i>insert_3</i> Resource Type request was not found.	0610 An invalid value (<i>insert_1</i>) was found in the <i>insert_2</i> field of the <i>insert_3</i> object in processing a link resource type request. A value of <i>insert_4</i> was used in place of the invalid value.
Explanation A Link Resource Type request was made on an object that did not exist at the time of the request or was deleted before the request completed.		Explanation An incorrect value was encountered in the indicated object for a Link Resource Type request.
Message Variables <i>insert_1</i> Object name. <i>insert_2</i> Object ID. <i>insert_3</i> Type of resource type request.		Message Variables <i>insert_1</i> Incorrect field value. <i>insert_2</i> Field name. <i>insert_3</i> Object name. <i>insert_4</i> Default value used.
System action The method ends.		System action A default value (shown in the message) is substituted for the incorrect value and processing continues.
System programmer response Determine why the object that was specified does not exist, and take corrective action. It is not necessary to resynchronize the network, because no aggregation counters have been corrupted.		System programmer response Correct the field's value. Also, determine what application or user set the wrong field value.
0609	<i>insert_1</i> in the link resource type request is not of a valid class for this request.	0611 Object <i>insert_1</i> , specified in a <i>insert_2</i> Resource Type request, was not found.

Explanation

A Link Resource Type request was made on an object that either did not exist at the time of the request or was deleted before the request completed.

Message Variables

insert_1
Object name.

insert_2
Type of resource type request.

System action

The method ends.

System programmer response

Determine why the object that was specified does not exist and take corrective action if necessary.

0612	Object <i>insert_1</i>, specified in a <i>insert_2</i> Update Aggregation Path request, was not found.
-------------	---

Explanation

An Update Aggregation Path request was made on an object that did not exist at the time of the request or was deleted before the request completed.

Message Variables

insert_1
Object name.

insert_2
Type of request.

System action

The method ends.

System programmer response

Determine why the object that was specified does not exist, and take corrective action if necessary.

0613	An attempt to over-synchronize aggregate object <i>insert_1</i> has been detected.
-------------	---

Explanation

The UpdateAggregationCounters named method, triggered for an aggregation hierarchy resynchronization (aggregation warmstart), has detected that resynchronization has already been completed for the aggregate object for which it was triggered.

Message Variables

insert_1
Object name.

System action

The method ends.

System programmer response

This is probably caused by a method logic error. If prior log entries do not contain messages that indicate why this error occurred and what corrects must be made, contact IBM Software Support for assistance.

0614	The <i>insert_1</i> field of <i>insert_2</i> had an invalid value (<i>insert_3</i>). This value was updated to <i>insert_4</i>.
-------------	--

Explanation

The indicated field has a value that is not valid for the object class to which the specified object belongs. This condition was detected during an update operation and the incorrect value has been replaced by that supplied in the update request.

Message Variables

insert_1
Field name.

insert_2
Object name.

insert_3
Incorrect field value.

insert_4
Default value used.

System action

Processing continues.

System programmer response

This message probably indicates that the value subfield of the field was changed so that the normal edit to guard against unusable values is not done. No action is required because the unusable value has been corrected.

0615	The <i>insert_1</i> field of the <i>insert_2</i> class had an invalid value (<i>insert_3</i>). This value was updated to <i>insert_4</i>.
-------------	--

Explanation

The indicated field has a value that is not valid for the object class. This was detected during an update operation and the incorrect value has been replaced by that supplied in the update request.

Message Variables

insert_1

Field name.

insert_2

Class name.

insert_3

Incorrect field value.

insert_4

Default value used.

System action

Processing continues.

System programmer response

This message probably indicates that the value subfield of the field was changed so that the normal edit to guard against unusable values was not done. No action is required because the unusable value has been corrected.

Appendix A. Codes

This appendix provides information about the followingabend and sense codes:

- NetView program abend codes, including:
 - GMFHS abend codes
 - RODM abend codes
 - SNA topology manager abend codes
- Alias sense codes
- LUC conversation request service return codes and sense codes
- Generic alert code points

NetView Abend Codes

An abend code is generated for an unrecoverable error. This completion code is issued when a logic error occurs or a serious problem is detected. The code is presented on the abend dump listing as user code Uxxxx, where xxxx is the decimal code as described in this section.

The system action for all codes is for the abending task to stop running.

This section contains abend codes issued by:

- AAU module
- Alias name translation facility
- BNJ module
- CNM module
- Command list function
- DSIOST and DSINNT
- DSIPPT
- DSIZDST
- DUI module
- DWO module
- GMFHS
- RODM
- SNA topology manager

Table 1. NetView Abend Codes

Decimal Code	Hex Code	Explanation of the Abend
001	X'001'	NetView initialization failed. See the system log for any error messages that indicate the reason for the failure.
002	X'002'	OPEN failed for the NetView main task ACB.
003	X'003'	SHOWCB failed for VTAM API control blocks.
004	X'004'	DSIGET failed for the NetView main task APPLID suffix table.
006	X'006'	SETLOGON START to accept logons failed.

Table 1. NetView Abend Codes (continued)

Decimal Code	Hex Code	Explanation of the Abend
009	X'009'	The NetView main task cannot load the NetView message definition modules DSIMDM or DSIMDMV. Verify that the required modules, panels, or tables are properly installed. Also, verify that the modules, panels, or tables can be accessed by the NetView application.
010	X'00A'	The primary POI task ended abnormally because the maximum retry count for this view was exceeded. Note: A message might have preceded thisabend.
011	X'00B'	Control blocks cannot be built for the NetView main task.
012	X'00C'	An installation exit that runs in 24-bit addressing mode needs to address a data area that resides in 31-bit storage. The data area is at least one of the following: the CNM input buffer, VSAM user data area, or VSAM key.
013	X'00D'	The NetView program encountered an unsupported internal command request code.
015	X'00F'	NPS DST initialization failed.
016	X'010'	The count fields of the control blocks DSIRAL and DSILAL or DSISAL are not equal. This causes errors when calling NetView service routines.
017	X'011'	The DSIRNK table is not large enough to hold the keywords of the command it is processing. Thisabend only occurs if more keywords are defined for a command, and the DSIRNK table in DSIYOSR is not updated to reflect the change.
018	X'012'	Storage does not belong to the caller, or the length of the data record exceeds the limit.
019	X'013'	The NetView main task uses this code in response to a CLOSE ABEND command.
020	X'014'	The NetView main task uses this code in response to a CLOSE DUMP command.
021	X'015'	STACK is exceeded because of EXIT interrupts.
023	X'017'	DSIGMN or DSIFMN is indicating that the issuing module cannot obtain a working storage area because all working storage areas are in use.
024	X'018'	LERAD/SYNAD stack was exceeded because of exit interrupts.
025	X'019'	The interface to the high-level language (MVS only) environment (DSIHLINK) was invoked for reasons other than initialization, resume,abend, logoff, or termination.
026	X'01A'	The user attempted to use DSIHLLAR to perform illegal multitasking from a task control block (TCB).
027	X'01B'	The matching RPL is not found in the queue of waiting request blocks. Issued by VPDTASK.
029	X'01D'	The DSICES macro gives a return code that is not 0 or 20. The CNMTAMEL DSCP verb name (DUIADISP) cannot be found. Abend issued from module DUIATIMR. DUMP(NO).
030	X'01E'	Resume issued for an ADX that was not suspended. Abend issued from module DUIARES. DUMP(YES).
031	X'01F'	Logic error. Abend issued from module DUISHMQA. DUMP (YES).

Table 1. NetView Abend Codes (continued)

Decimal Code	Hex Code	Explanation of the Abend
032	X'020'	The DSILOD macro failed to load message table DUIAMSGS or service module table DUIISVCT. Verify that these modules are properly installed. Also, verify that the modules can be accessed by the NetView program. Abend issued from module DUIINITA. DUMP(NO).
033	X'021'	Cannot get storage during CNMTAMEL task initialization. Abend issued from module DUIINITA. DUMP(YES).
034	X'022'	Logic error. Abend issued from module DUISHQMA. DUMP(YES).
035	X'023'	The DSILOD macro failed to load service modules. Verify that the NetView program is properly installed and that all NetView modules can be accessed. Abend issued from modules DUIDLOAD and DUALOAD. DUMP(YES).
036	X'024'	The DSIGET macro failed. Abend issued from module DUIMENTR. DUMP(YES).
037	X'025'	Logic error. Abend issued from module DUISHMQA. DUMP(YES).
038	X'026'	The LU 6.2 command processor definition macro DSIL6DFS failed. Abend issued from module DUIINITA. DUMP(NO).
039	X'027'	Cannot obtain required ADX control blocks. Abend issued from module DUIINITA. DUMP(NO).
040	X'028'	There is not enough available storage to build and initialize the resource status collector list with the user-specified MAXSCCOUNT number. Abend issued from module DUIDIMDP. DUMP(YES).
043	X'02B'	There is not enough available storage to build the resource status collector list. Abend issued from module DUIDITTP. DUMP(YES).
044	X'02C'	VTAM APPCCMD macro not accepted or bad command verb. Abend issued from modules DUIACNOS and DUIAAPPC. DUMP(YES).
045	X'02D'	Call to module DUIACMIO is not valid. Abend issued from module DUIACNOS. DUMP(YES).
046	X'02E'	CNOS APPCCMD not accepted. Abend issued from module DUIACNOS. DUMP(YES).
047	X'02F'	APPCCMD completed with return code ABEND. Abend issued from module DUIADETE. DUMP(YES).
048	X'030'	ADX pool value is not valid. Abend issued from module DUIAADXM. DUMP(YES).
049	X'031'	Incorrect task when buffer origin is DSICRTR. Abend issued from module DUISHQMA. DUMP(YES).
050	X'032'	Incorrect buffer origin. Abend issued from module DUISHQMA. DUMP(YES).
051	X'033'	Status sent by resource status collector in either a REPLY SYNCH or an UPDATE vector is not valid. Abend issued from modules DUIDGADE and DUIDGUPE. DUMP(YES).
053	X'035'	Logic error. Abend issued from module DUIDIMRP. DUMP(YES).
054	X'036'	Logic error. Abend issued from module DSIFRCFP. DUMP(YES).
055	X'037'	Logic error. Abend issued from module DSIFRCFP. DUMP(YES).
056	X'038'	Logic error. Abend issued from module DUISHMQA. DUMP(YES).

Table 1. NetView Abend Codes (continued)

Decimal Code	Hex Code	Explanation of the Abend
057	X'039'	The DSILOD macro failed to load module DUIALOAD. Verify that this module is properly installed and that it can be accessed by the NetView program. Abend issued from module DUIINITA. DUMP(NO).
058	X'03A'	The DSILOD macro failed to load module DUIDINIT. Verify that this module is installed and that it can be accessed by the NetView program. Abend issued from module DUIINITA. DUMP(NO).
059	X'03B'	Logic error. Abend issued from module DSICSND. DUMP(YES).
060	X'03C'	Call to DUIADISP is not valid. Abend issued from module DUIADISP. DUMP(YES).
061	X'03D'	Logic error. Abend issued from module DUISHSNA. DUMP(YES).
063	X'03F'	NETTYPE control block not found. Abend issued from module DUIDSSEG. DUMP(YES).
064	X'040'	Logic error. Abend issued from module DUIADISP. DUMP(YES).
065	X'041'	Logic error. Abend issued from module DUIADISP. DUMP(YES).
066	X'042'	Logic error. Abend issued from module DUIADISP. DUMP(YES).
067	X'043'	Error in hashing function. Abend issued from module DUIDFPUR. DUMP(YES).
068	X'044'	CNMTAMEL task initialization failed. Abend issued from module DUISDISP. DUMP(NO).
069	X'045'	A buffer was queued that was not valid. Abend issued from module DUIADISP. DUMP(YES).
070	X'046'	Logic error. Abend issued from module DUISHDEA. DUMP(YES).
071	X'047'	Logic error. Abend issued from module DUIADISP. DUMP(YES).
072	X'048'	Logic error. Abend issued from module DUIDHSHS. DUMP(YES).
073	X'049'	Logic error. Abend issued from module DUIDHSHS. DUMP(YES).
074	X'04A'	Logic error. Abend issued from module DUIDHSHS. DUMP(YES).
075	X'04B'	Logic error. Abend issued from module DUIDIMNP. DUMP(YES).
076	X'04C'	Logic error. Abend issued from module DUIDIMDP. DUMP(YES).
077	X'04D'	Logic error. Abend issued from module DUIDIDCP. DUMP(YES).
078	X'04E'	Logic error. Abend issued from module DUIATRPR. DUMP(YES).
079	X'04F'	Logic error. Abend issued from module DUIDMQRY. DUMP(YES).
080	X'050'	CSCF attempted to acquire storage using DSIGET. The attempt failed.
081	X'051'	This code is used by the operator station task (OST) when an incorrect data stream is received from a hardware device.
082	X'052'	Used for stack overflow or underflow.
083	X'053'	The NetView program detected an overlay of the DSICWB control block possibly caused by the abending task's misuse of the CWBADATD field. This abend might be accompanied by user abend 2304 (X'900') or other abends that indicate a storage overlay.

Table 1. NetView Abend Codes (continued)

Decimal Code	Hex Code	Explanation of the Abend
085	X'055'	The initialization routine cannot obtain storage for the primary anchor control block whose address is returned in the bhlbptr parameter of CNMETIN (CNMETINIT). Initialization of the server support API failed.
086	X'056'	The initialization routine cannot load either of the required NetView load modules DSIEHLAR, DSIEHL24, or both. Initialization of the server support API failed.
087	X'057'	This Abend code can be issued as follows: • The MDS-RECEIVE cannot be defined. • The PUSH of the logoff routine failed. • A terminating error was encountered by the other initialization modules for the transport. • Bad syntax on the PARTNER statement. • Failure in operations management or focal point initialization. • Failure when attempting to issue a timer services request during task initialization. • Failure when attempting to push a logoff routine from the task being initialized. This can be caused by a missing CMDDEF statement. • Failure when attempting to define to the command facility one of the LU 6.2 transaction programs that the transport uses.
089	X'059'	Unexpected error occurred in automation table processing. DUMP (YES).
090	X'05A'	A return code that is not valid was received during GLOBALV processing.
091	X'05B'	Should not occur: severe error returns from the NetView Bridge dispatcher.
092	X'05C'	Logic error. Abend issued from module DUIDUPRQ. DUMP(YES).
093	X'05D'	Logic error. Abend issued from module DUIDMCFV. DUMP(YES).
094	X'05E'	Logic error. Abend issued from module DUIDMLUV. DUMP(YES).
095	X'05F'	Logic error. Abend issued from module DUIDICDP. DUMP(YES).
096	X'060'	Logic error. Abend issued from module DSIIBMHL. DUMP(YES).
097	X'061'	DSIWAT time-out. A limit set in the DSIMVT control block was reached while task message queues were blocked. See DSIMVT macro label MVTCPAWT for details.
098	X'062'	Unrecoverable SELECT error. Abend issued from DUIASELE. DUMP(YES).
112	X'070'	A Graphic Monitor Facility host subsystem (GMFHS) method detected an out-of-storage condition. The Resource Object Data Manager (RODM) generates a log record type 7 containing this Abend code. The user application program triggering the abending method receives a return code 12 with reason code 194.
113	X'071'	The security software initialization for the primary POI task has failed.
115	X'073'	The DSIPUSH macro failed. Abend issued from BNJAPAMA.
257	X'101'	RESET IMMED or RESET DUMP command was issued. The error recovery routine of some system services can generate a dump. See the STOP command in NetView online help for more information.
258	X'102'	Unexpected LERAD error under non-TAF environment.

Table 1. NetView Abend Codes (continued)

Decimal Code	Hex Code	Explanation of the Abend
259	X'103'	An installation exit returned a return code that is not valid or USERSWAP is selected, but the buffer is too small to hold the new record. Register 5 contains an installation exit number, and register 6 contains a return code from the installation exit.
261	X'105'	Unexpected LOSTERM entry.
262	X'106'	An installation exit returned a return code that is not valid or USERSWAP is selected, but the buffer is too small to hold the new record. Register 5 contains an installation exit number, and register 6 contains a return code from the installation exit.
263	X'107'	Installation exit DSIEX01 returned a code that is not valid or USERSWAP is selected, but the buffer is too small to hold the new record. Register 3 contains the installation exit return code.
264	X'108'	The internal function request code is not valid.
266	X'10A'	Terminal session was lost while a command was running in DSIRCV.
267	X'10B'	Terminal session was lost while a command was running in DSIPS14.
268	X'10C'	Unexpected SYNAD error. Hardware type error, see message DSI625I.
269	X'10D'	Unexpected LERAD error under TAF environment.
270	X'10E'	Unexpected DSIGET failure while processing a RMTCMD or ENDTASK command. See NetView online help for information about the RMTCMD and ENDTASK commands.
271	X'10F'	A NetView function called another function (such as a SAF product) and the maximum amount of time allowed for that call was exceeded. The task experienced thisabend to interrupt the request that was taking too long. If the function called was an SAF product, the maximum time that is allowed is 10 seconds.
320	X'140'	Unexpected return code from DSIDKS macro in module DSICCGO.
321	X'141'	Unexpected function type returned by dictionary services in module DSICCFCN.
322	X'142'	Unexpected return code from dictionary services in the DSICCSUB module and the DSIRXFCR module.
323	X'143'	Unexpected return code from the ISGLPRG service routine in the DSILPRGI module.
336	X'150'	Should not occur: either an unknown or unexpected return code was returned from the REXX interpreter, or the requested storage length is a negative value or zero.
337	X'151'	REXX obtained storage is not freed. DSIFRE was invoked to free storage on behalf of REXX. Storage was not freed, but a dump was taken.
384	X'180'	Unexpected return code from DSIKVS macro in module DSISTP.
385	X'181'	Unexpected return code from DSIKVS macro in module DSISWCP.
386	X'182'	Unexpected return code from DSIKVS macro in module DSISRP.
387	X'183'	Unexpected return code from DSIKVS macro in module DSIEVP.
388	X'184'	Unexpected return code from DSIKVS macro in module DSIATP.

Table 1. NetView Abend Codes (continued)

Decimal Code	Hex Code	Explanation of the Abend
389	X'185'	This abend occurs only when the ABEND_AND_DUMP parameter in the FLBSYSD initialization file is set to YES and the SNA topology manager detects a severe problem with RODM.
390	X'186'	This abend occurs only when the ABEND_AND_DUMP parameter in the FLBSYSD initialization file is set to YES and the SNA topology manager detects a storage overlay condition.
391	X'187'	This abend occurs only when the ABEND_AND_DUMP parameter in the FLBSYSD initialization file is set to YES and the SNA topology manager detects an internal error.
518	X'206'	An installation exit returned a code that is not valid or USERSWAP is selected, but the buffer is too small to hold the new record. Register 5 contains the installation exit number, and register 6 contains the return code from the installation exit.
520	X'208'	A function type that is not valid was received.
550	X'226'	DSIITM has detected a BUFHDR that is not valid in a buffer being traced for either the PSS, QUE, or UEXIT trace option. Contact IBM Software Support for programming assistance.
600	X'258'	Logic error occurred in the NetView program. Contact IBM Software Support for programming assistance.
666	X'29A'	Logic error occurred in the NetView program. Contact IBM Software Support for programming assistance.
668	X'29C'	A reference to a freed CCV has been detected by the NetView program.
1024	X'400'	I/O error during VSAM VERIFY macro processing.
1025	X'401'	DSIGET failed to obtain storage.
1026	X'402'	Subtask cannot complete initialization.
1027	X'403'	Unable to send reply request unit to VTAM by the communication network management interface.
1028	X'404'	Logic error in alias application. Index value in control block is wrong.
1029	X'405'	Unrecoverable error during alias initialization. Preceded by a description message.
1030	X'406'	Unexpected return code following a DSIDKS macro.
1031	X'407'	The VSAM POINT macro failed on the event log database in the database server VSAM I/O initiate routine.
1032	X'408'	The VSAM GET macro failed on the event log database in the database server VSAM I/O initiate routine.
1033	X'409'	The VSAM POINT macro failed in the COMPUTE INITIAL DATABASE STATUS MODULE READ FIRST RECORD routine.
1034	X'40A'	The VSAM GET macro failed in the COMPUTE INITIAL DATABASE STATUS MODULE READ FIRST RECORD routine.
1035	X'40B'	The VSAM POINT macro failed in the COMPUTE INITIAL DATABASE STATUS MODULE READ MIDDLE RECORD routine.
1036	X'40C'	The VSAM GET macro failed in the COMPUTE INITIAL DATABASE STATUS MODULE READ MIDDLE RECORD routine.

Table 1. NetView Abend Codes (continued)

Decimal Code	Hex Code	Explanation of the Abend
1037	X'40D'	Logic error. The first record in a logical wrap database is a seed record but the last is not a seed.
1038	X'40E'	Logic error. The binary search to locate the absolute low and high bounds of a logical wrap database failed.
1039	X'40F'	Logic error. A record returned from the VSAM GET macro did not match the requested database ID.
1040	X'410'	The VSAM GET macro failed in the COMPUTE INITIAL DATABASE STATUS MODULE READ FIRST RECORD routine.
1041	X'411'	The VSAM POINT macro failed in the COMPUTE INITIAL DATABASE STATUS MODULE SEQUENTIAL READ RECORD routine.
1042	X'412'	The VSAM GET macro failed in the COMPUTE INITIAL DATABASE STATUS MODULE SEQUENTIAL READ RECORD routine.
1043	X'413'	The VSAM GET macro failed in the GET FIRST RECORD FORWARD routine.
1044	X'414'	The VSAM POINT macro failed in the READ PREVIOUS routine.
1045	X'415'	The VSAM GET macro failed in the READ PREVIOUS routine.
1046	X'416'	The VSAM GET macro failed in the READ LOGICAL WRAP RECORD routine.
1048	X'418'	Logic error. Address of the positioning keys pointer in the READ LOGICAL WRAP RECORD routine was zero.
1281	X'501'	NetView issues this abend to cause task recovery. Indications are that this task took an abend in NetView code running in an asynchronous exit while the task mainline code was processing a REXX command procedure. The asynchronous exit abend was intercepted by a REXX ESTAE routine that cleared REXX, then returned control to this NetView task. The REXX intercept of the asynchronous task abend did not allow NetView to correctly recover from the abend. NetView issues abend 1281 to achieve drive NetView task abend recovery. Check your system log for information pertaining to the asynchronous exit abend. A dump is taken by this abend in case it is needed to determine the cause of the asynchronous exit abend.
2000	X'7D0'	Reserved for IBM Software Support
2001	X'7D1'	Reserved for IBM Software Support
2002	X'7D2'	Reserved for IBM Software Support
2003	X'7D3'	Reserved for IBM Software Support
2004	X'7D4'	Reserved for IBM Software Support
2005	X'7D5'	Reserved for IBM Software Support
2006	X'7D6'	Reserved for IBM Software Support
2007	X'7D7'	Reserved for IBM Software Support
2008	X'7D8'	Reserved for IBM Software Support
2009	X'7D9'	Reserved for IBM Software Support
2304	X'900'	Module requires a larger work area than found, for successful entry linkage.
2305	X'901'	Status monitor did not initialize successfully.

Table 1. NetView Abend Codes (continued)

Decimal Code	Hex Code	Explanation of the Abend
2306	X'902'	Nonzero return code received from DSILOD of any status monitor module. Verify that the required modules, panels, or tables are properly installed. Also, verify that the modules, panels, or tables can be accessed by the NetView application.
2307	X'903'	Status monitor internal error.
2308	X'904'	Status monitor internal error.
2309	X'905'	Status monitor internal error.
2310	X'906'	Five consecutive SNDCMD or RVCMD failures occurred in CNMTARCA.
2311	X'907'	The module called by CNMTFLTR to process message text has returned a result larger than expected. Storage might have been overwritten.
2312	X'908'	Status monitor initialization failed. Verify that the module ISTIECCE is available to VTAM as outlined in <i>IBM Z NetView Installation: Configuring Additional Components</i> .
2320	X'910'	A DROP = YES condition was encountered while in a full-screen panel. The session was dropped.
2501	X'9C5'	Note: This is a system abend code. With Reason Code 0: RODM has cancelled the transaction based on the reply to message EKG1326D. Message EKG1326D is issued when there are transactions still running in RODM during RODM checkpoint or RODM termination. With Reason Code 33: A RODM internal error has occurred; contact IBM Software Support for programming assistance.
2816	X'B00'	NetView subsystem detected a PC call to PPI service routine that is not valid.
2977	X'BA1'	Session monitor detected a connectivity chain that is not valid. Contact IBM Software Support for programming assistance.
2978	X'BA2'	Session monitor detected a connectivity chain that is not valid. Contact IBM Software Support for programming assistance.
2979	X'BA3'	Session monitor detected a connectivity chain that is not valid. Contact IBM Software Support for programming assistance.
2980	X'BA4'	Session monitor detected a connectivity chain that is not valid. Contact IBM Software Support for programming assistance.
2981	X'BA5'	Session monitor detected a connectivity chain that is not valid. Contact IBM Software Support for programming assistance.
2982	X'BA6'	The session monitor detected a connectivity chain that is not valid. Contact IBM Software Support for programming assistance.
2983	X'BA7'	The session monitor detected a connectivity chain that is not valid. Contact IBM Software Support for programming assistance.
2989	X'BAD'	NetView has detected that a VTAM send has not completed. Either the send was issued more than 3 minutes ago or the data queues are overloaded. Presentation services output queues overload is defined as exceeding twice the value of NORMQMAX as specified in the operators SCRNFMT. This is probably either an operator terminal or VTAM problem.
3002	X'BBA'	There is no page number table primary segment address in the hierarchy table.

Table 1. NetView Abend Codes (continued)

Decimal Code	Hex Code	Explanation of the Abend
3008	X'BC0'	The NetView display panel size (PDXDVSIZ) is less than 21 lines, but it must be at least 21 (24 minus 3) lines.
3010	X'BC2'	The DSIPSS macro gives a nonzero return code. The FIRST, MIDDLE, and LAST operands are not specified in the correct order, or too many DSIPSS macros have been issued for the display panel size.
3083	X'C0B'	The DSIGET macro is unable to obtain enough storage for the DSIMQS buffer.
3085	X'C0D'	The DSIGET macro is unable to obtain enough storage for the DSIMAS buffer.
3086	X'C0E'	The DSICES macro gives a nonzero return code. The routine failed to successfully transfer control because it cannot find the task ID or the verb associated with it.
3089	X'C11'	The DSIMBS macro gives a return code not equal to 0 or 12. The NetView program cannot retrieve a message and message BNJ322I has been issued.
3339	X'D0B'	The DSIGET macro gives a nonzero return code. A GETMAIN was unsuccessful.
3341	X'D0D'	An unknown task ID was found in the CNMTAMEL request block.
3342	X'D0E'	Incorrect receiver state of receiving session found.
3345	X'D11'	Attempt to send a NetView message to authorized receiver using DSIMQS failed.
3346	X'D12'	A call to DSILCS macro to free the allocated SWB was not successful.
3347	X'D13'	Attempt to get the message size using DSIMBS failed.
3348	X'D14'	A call to DUIFSMSG was not successful.
3349	X'D15'	Testing of DSIDELAY flag is on.
3351	X'D17'	Incorrect parameters passed to service routine DUIFEXPP.
3357	X'D1D'	The MSU within an AIFR has garbled data that prevents it from being sent to the GMFHS address space.
3358	X'D1E'	Incorrect parameters passed to service routine DUIFEXPP.
3376	X'D30'	Storage overlay has occurred. The storage suffix of the area to be freed is not valid.
3377	X'D31'	Logic error in the GET QUEUE routine. A queue element in the queue map indicated as free contains data.
3378	X'D32'	Logic error in the FREE QUEUE routine. A queue entry to be freed was not found in the queue map.
3380	X'D34'	Logic error in the FREE MCB routine. The MCB entry to be freed was not found in the MCB map.
3381	X'D35'	A subtask within GMFHS did not end within 1 minute of the request to end the address space. The subtask was abnormally ended.
3399	X'D47'	An internal error in GMFHS has been detected. Contact IBM Software Support for programming assistance.
3500	X'DAC'	The DSIGET macro gives a nonzero return code. The routine was unable to load the message buffer.
3501	X'DAD'	The DSICES macro gives a return code that is not 0 or 20. The DSCP verb name cannot be found.

Table 1. NetView Abend Codes (continued)

Decimal Code	Hex Code	Explanation of the Abend
3502	X'DAE'	The DSIMQS macro gives a nonzero return code. A message to the NetView authorized operator failed.
3601	X'E11'	Neither screen buffer was flagged as active.
3602	X'E12'	BNJCGTDA returned with a nonzero return code.
3603	X'E13'	A data record that is not valid was detected.
3604	X'E14'	BNJCRHTA returned a nonzero return code.
3605	X'E15'	BNJCHUPA returned a nonzero return code.
3606	X'E16'	BNJCSNDA returned a nonzero return code.
3607	X'E17'	DSIGET failure detected.
3608	X'E18'	Unknown parameter data detected by BNJP109A or BNJP110A.
3609	X'E19'	The NetView DSCP verb is not defined in CNMCMD.
3610	X'E1A'	An attempt to send a message using DSIMQS to the authorized operator failed.
3611	X'E1B'	Internal processing error detected by BNJP101A.
3780	X'EC4'	This is a systemabend code. Thisabend is not an error; it is a normal result. If a system recovery routine is in control (for example, for the consoles component) a dump might be produced. These are some of the situations that can result in a X'EC4'abend: • OMVS was not started. • VOST timeouts (for example, SNMP timeouts during resolver calls, or agent not responding). • NetView operator logoff hangs. • The STOP FORCE command was issued against a task in the NetView address space (MVS) to force the target task to stop. • As the final step of NetView CLOSE IMMED processing, theabend was issued against remaining tasks. Note: CLOSE STOP is the recommended method to end the NetView program.
3994	X'F9A'	The DSIMQS macro gives a nonzero return code. A message to the authorized NetView operator failed.
3995	X'F9B'	The DSIMBS macro gives a return code not equal to 0, 4, or 12. The NetView program cannot construct a message.
3997	X'F9D'	The DSIGET macro failed to obtain storage for the DSX.
3998	X'F9E'	The DSIMQS macro gives a nonzero return code. A message to the NetView authorized operator failed.
3999	X'F9F'	The DSILCS macro failed for service work block (SWB).
4000	X'FA0'	A format error was detected while deblocking the logical records within a temporary database physical record.
4001	X'FA1'	AAUCLODA cannot find the current panel hierarchy entry name in the node table, and issued a return code of 4.

Table 1. NetView Abend Codes (continued)

Decimal Code	Hex Code	Explanation of the Abend
4002	X'FA2'	There is no primary segment address in the page number table of the hierarchy table.
4003	X'FA3'	DSIGET was unable to obtain storage for a temporary record buffer.
4004	X'FA4'	DSIGET was unable to obtain storage for a temporary record buffer.
4005	X'FA5'	Module AAUSPOOL did not find the page identifier PGBN when attempting to free storage. This might be caused by a bad pointer passed to AAUSPOOL.
4006	X'FA6'	DSIMQS failed.
4007	X'FA7'	DSIGET was unable to obtain storage for the NetView control block ADX.
4008	X'FA8'	The NetView display panel size (PDXDVSIZ) is less than 21 lines, or NetView termination was in progress while attempting to enter the session monitor. The display panel size for the NetView program must be at least 21 (24 minus 3) lines.
4009	X'FA9'	DSIGET was unable to obtain storage for a send or default receive control queue element, or for a default send or receive buffer.
4010	X'FAA'	An unrecoverable full-screen panel failure occurred. One possible cause for this is entering NLDM X at a terminal that does not have extended data support.
4011	X'FAB'	DSIGET was unable to obtain enough storage for a temporary buffer.
4012	X'FAC'	DSICES was unable to obtain temporary work storage.
4013	X'FAD'	AAUCGTDA cannot get a record and issued a return code greater than 4.
4015	X'FAF'	The page number was not found in the buffer.
4017	X'FB1'	No NetView control block SWB was provided by NetView macro DSILCS.
4018	X'FB2'	Abend caused by any one of the following: • Because of an incorrect SYSGEN, a PIU that is too large is sent to the terminal. • NLDM X is entered from a terminal that does not have extended data support. Use NLDM instead of NLDM X. • A permanent I/O error. No dump is provided for this Abend.
4019	X'FB3'	AAUMHTM cannot create a required session monitor hash table during initialization. The most probable cause is insufficient memory.
4020	X'FB4'	DSIGET was unable to obtain storage for the AAUTDIB pool.
4021	X'FB5'	Both screen buffers are active.
4022	X'FB6'	AAUCGTDA cannot get a record and issued a return code greater than 4.
4023	X'FB7'	AAUMGTD failed while trying to get the next logical data record because a bad record identification was retrieved.
4024	X'FB8'	AAUCRHTA failed to reset the hierarchy table and issued a nonzero return code.
4025	X'FB9'	AAUCHUPA failed to update the hierarchy table and issued a nonzero return code.
4026	X'FBA'	AAUCSND A issued a nonzero return code because of a DSIMQS failure.
4027	X'FBB'	DSIGET was unable to obtain storage for a temporary record buffer.

Table 1. NetView Abend Codes (continued)

Decimal Code	Hex Code	Explanation of the Abend
4031	X'FBF'	There is a slot in the output buffer that is not valid.
4033	X'FC1'	A named storage area was not found.
4036	X'FC4'	The address of the presentation services module to receive control is unresolved in the node table.
4047	X'FCF'	AAUCMBSA cannot retrieve a message and issued a nonzero return code.
4048	X'FD0'	AAUCHUPA failed to update the hierarchy table and issued a nonzero return code.
4050	X'FD2'	There is no space in the NetView SCT control block for a verb.
4051	X'FD3'	DSIGET failed during PSCP initialization.
4052	X'FD4'	AAUPCPEX failed to load.
4053	X'FD5'	A named storage area was not found.
4064	X'FE0'	Session monitor control block corruption detected. Contact IBM Software Support for programming assistance.
4065	X'FE1'	DSILOD failed to load module AAUDMMTA, AAUDBRPA, AAUDBINA, or the failing load module name is in message AAU083I. Verify that the required modules, panels, or tables are properly installed. Also, verify that the modules, panels, or tables can be accessed by the NetView application.
4066	X'FE2'	DSIGET cannot obtain storage for AAUTNDB.
4067	X'FE3'	This Abend is issued from AAUACMPA under one of the following conditions: • A VSAM record type cannot be found in the table of valid record types. • The calculated target address of a record expansion operation exceeds the limit of the buffer. This Abend can be caused by a record on the session monitor VSAM database that is not valid (or corrupt) or, less likely, a storage overlay of the in-storage record type table. A dump (IDCAMS print) of the session monitor VSAM database is required to diagnose this Abend (in addition to the Abend dump of the NetView address space.)
4068	X'FE4'	Session monitor detected an active session control block chain that is not valid. Contact IBM Software Support for programming assistance.
4070	X'FE6'	A named storage area was not found.
4071	X'FE7'	No free ADX control blocks are available.
4072	X'FE8'	A function that is not valid was requested for internal queue processing.
4073	X'FE9'	Module AAUAHNDA issues this Abend when: • It is driven with a DSRB containing zeroes in both the DSRBUSER and DSRBUBUF fields. • An ADX is found with both the ADXLCFLG and ADXVFLG flags set.
4082	X'FF2'	AAUZDSPA is not driven under OST or PPT.
4083	X'FF3'	The DSIGET macro is unable to obtain enough storage for the DSIMQS buffer.
4085	X'FF5'	The DSIMQS macro is unable to obtain enough storage for the DSIMQS buffer or the format of the buffer is not valid.

Table 1. NetView Abend Codes (continued)

Decimal Code	Hex Code	Explanation of the Abend
4086	X'FF6'	The DSICES macro failed to transfer control because it cannot find the task identification or the verb associated with it. DSICES issued a nonzero return code.
4087	X'FF7'	The DSIFRE service routine cannot free storage that was obtained using the DSIGET macro. DSIFRE issued a nonzero return code.
4088	X'FF8'	The control flag of the logical record cannot be found.
4092	X'FFC'	The DSIGET macro is unable to obtain enough storage.
4093	X'FFD'	DSIGET was unable to obtain storage for NetView control block SCT.
4094	X'FFE'	DSIGET was unable to obtain storage for NetView control block ADX.
4095	X'FFF'	The DSICES macro cannot find a required session monitor command processor. DSICES issues a nonzero return code.

Alias Sense Codes

This section lists the global and alias request sense codes.

Global Sense Codes

Table 2. Global Sense Codes

Sense Code	Description of Global Sense Code
0000	Request processed successfully.
1002	Inconsistent length fields in RU or too many specific requests in a single RU.
1003	A request code that is not valid is in network services (NS) header.
0812	Insufficient resources to process request.
FFFF	Internal system failure.

Specific-Request Sense Codes

Table 3. Specific-Request Sense Codes

Sense Code	Description of Sense Code
0000	Request processed successfully.
0004	Associated network ID for name to be translated is not specified or is not valid.
0008	Name type specified in request is not valid.
000C	Name length specified in request is not valid.
0014	No table exists for the origin network ID for the name.
0018	No table entry exists within the origin network table for specified name.
001C	No table entry exists within the origin network table for combination of input name and destination network ID.

Table 3. Specific-Request Sense Codes (continued)

Sense Code	Description of Sense Code
0020	No table exists for the destination of name network ID.
0024	Specific request entry length is too small.

LUC Conversation Request Service Return Codes and Sense Codes

Table 4 on page 925 lists and describes LUC conversation request service return codes displayed in messages DUI170E, DUI172E, DUI173E, DUI175E, and DUI176E.

Table 4. LUC Conversation Request Service Return Codes

Return Code	Description of Return Code
X'02'	CNM DATA TASK IS NOT AVAILABLE
X'04'	SESSION IS NOT AVAILABLE
X'06'	RESOURCES/STORAGE UNAVAIL
X'08'	RESOURCE ID INCORRECT
X'0C'	PENDING REQUEST NOT COMPLETE
X'10'	DEALLOCATE NORMAL
X'14'	DEALLOCATE ABEND: MAPPING OF INBOUND FMH7 SENSE CODES 08640000, 08640001, AND 08640002
X'18'	DEALLOCATE PENDING
X'1C'	CONVERSATION STATE ERROR
X'20'	INCOMPLETE LL SENT
X'24'	TPN DEFINED-NO TRUNCATION: MAPPING OF INBOUND FMH7 SENSE CODE 08890000
X'28'	TPN DEFINED-NO TRUNCATION: MAPPING OF INBOUND FMH7 SENSE CODE 08890001
X'2C'	SVC DEFINED-NO TRUNCATION: MAPPING OF INBOUND FMH7 SENSE CODE 08890100
X'30'	SVC DEFINED-TRUNCATION: MAPPING OF INBOUND FMH7 SENSE CODE 08890101
X'34'	ALLOCATION ERROR: MAPPING OF INBOUND FMH7 SENSE CODES 10086021, 10086031, 10086032, 10086034, 10086041, 10086042, 10086043, 084C0000, 080F6051, 10086044
X'36'	TPNAME NOT AVAIL - RETRY REQUEST: MAPPING OF INBOUND FMH7 SENSE CODE 084B6031
X'FO'	SYSTEM ERROR
X'FF'	REQUEST NOT VALID

Use the SENSE command to obtain descriptions of the sense codes listed in [Table 4 on page 925](#). See NetView online help for information about the SENSE command.

Table 5 on page 926 lists and describes LUC macro failure return codes displayed in messages DUI171E, DUI172E, and DUI174E.

Table 5. LUC Macro Failure Return Codes

Return Code	Description of Return Code
X'04'	INSUFFICIENT STORAGE
X'08'	REPLPRC IS NOT VALID
X'0C'	LUC FUNCTION NOT AVAILABLE
X'10'	SEND DATA BUFFER LENGTH < = 0
X'14'	RECEIVE DATA BUFFER LENGTH < = 0

Use the SENSE command to obtain descriptions of the sense codes listed in [Table 5 on page 926](#). See NetView online help for information about the SENSE command.

Generic Alert Code Points

This section contains a list of the generic alert code points that the NetView program provides. The code points are divided according to the subvector or subfield that carries the code point.

If you want information	Refer to
On the code points provided by the NetView program and the generic alert architecture	<i>Systems Network Architecture Formats</i>
On defining your own NetView code points	<i>IBM Z NetView Customization Guide</i>

Code Point Format

Some code points have qualifier or product set identifier information embedded within the code point text. The position of the qualifier or product set identifier is marked by a \$ within the text.

Explanation of Code Point Formats

These alerts are formatted as code points and text. The code point is a 1- or 2-byte hexadecimal value, unique to each text. The text is the message displayed on the panel.

Resource Types (X'05')

The X'05' common subvector flows in management services units (MSUs) to communicate resource names between MS components in nodes. When flowing in an MSU to a focal point, the Hierarchy/Resource List (HRL) includes the names of the resources of the domain hierarchy for the affected resource. The HRL containing the complete domain hierarchy is built from configuration knowledge in the control point, the transmission header, and, if present in the NMVT for which this CP-MSU is being sent, data from the HRL (containing a partial domain hierarchy) or the SNA address list (X'04') subvector, or both.

The HRL subvector also carries the hierarchy of control points that received, processed, and forwarded a CP-MSU, and, in some cases, the names of one or more resources; for example, session partners logically associated with the reported hierarchy.

To view a listing of both the displayed text for the code point (1–4 characters) and the actual meaning of the abbreviation, access member BNJRESTY in data set BNJPNL2.

If you want information	Refer to
On the format of code point 05	<i>Systems Network Architecture Formats</i>

Recommended Actions (X'81')

The X'81' subfield has unique recommended action codes. This subfield contains code points for stored text describing recommended actions to be taken to rectify an alert condition.

Some code points have qualifier or product set identifier information embedded within the code point text. To view a listing of Recommended Actions (X'81'), access member BNJ81TBL in data set BNJPNL1.

If you want information	Refer to
On customizing recommended action panels	<i>IBM Z NetView Customization Guide</i>
On the format of the X'81' subfield	<i>Systems Network Architecture Formats</i>

Detail Data (X'82')

The X'82' subfield contains product-specific detailed data to be displayed at an alert receiver. To view Detail Data (X'82'), access member BNJ82TBL in data set BNJPNL1.

If you want information	Refer to
On the format of the X'82' subfield	<i>Systems Network Architecture Formats</i>

Detail Data (X'85')

The X'85' subfield contains product-specific detailed data to be displayed at an alert receiver. To view Detail Data (X'85'), access member BNJ85TBL in data set BNJPNL1.

If you want information	Refer to
On the format of the X'85' subfield	<i>Systems Network Architecture Formats</i>

Actual Actions (X'86')

The X'86' subfield contains actual actions data. These major vectors are logged to the hardware monitor database. To view Actual Actions (X'86'), access member BNJ86TBL in data set BNJPNL1.

If you want information	Refer to
On the format of the X'86' subfield	<i>Systems Network Architecture Formats</i>

Generic Alert Data/Resolution Data (X'92')

The X'92' subvector transports alert information in the form of code points that correspond to strings of text stored at the alert receiver. It also transports an alert ID number that uniquely identifies a particular alert.

The X'92' subvector can have two versions of message text as follows:

- Full version message text
- Abbreviated version message text

The abbreviated version of message text appears on the Alerts panel. The full version of the message text appears on the Detail panel. To view Generic Alert Data/Resolution Data (X'92'), access member BNJ92TBL in data set BNJPNL1.

If you want information	Refer to
On the format of the X'92' subvector	<i>Systems Network Architecture Formats</i>

Probable Causes (X'93')

The X'93' subvector contains one or more code points denoting probable causes of the alert condition. The probable causes appear in order of decreasing probability.

The X'93' subvector can have two versions of message text as follows:

- Full version message text
- Abbreviated version message text

The abbreviated version of message text appears on the Alerts panel. The full version of the message text appears on the Detail panel. To view listing of Probable Causes (X'93'), access member BNJ93TBL in data set BNJPNL1.

If you want information	Refer to
On the format of the X'93' subvector	<i>Systems Network Architecture Formats</i>

User Causes (X'94')

The X'94' subvector transports code points for stored text detailing the probable user causes for the alert condition and the recommended actions to be taken in connection with these causes. This subvector can also transport additional detailed data to be inserted into the text, or indexed by the user cause or the recommended action code points, or both.

Some code points have qualifier or product set identifier information embedded within the code point text. To view a listing of User Causes (X'94'), access member BNJ94TBL in data set BNJPNL1.

If you want information	Refer to
On the format of the X'94' subvector	<i>Systems Network Architecture Formats</i>

Install Causes (X'95')

The X'95' subvector transports code points for stored text detailing the probable install causes for the alert condition and the recommended actions to be taken in connection with these causes. This subvector can also transport additional detailed data to be inserted into the text, or indexed by the install cause or the recommended action code points, or both. An install cause is a condition that results from the initial installation or setup of some equipment.

To view a listing of Install Causes (X'95'), access member BNJ95TBL in data set BNJPNL1.

If you want information	Refer to
On the format of the X'95' subvector	<i>Systems Network Architecture Formats</i>

Failure Causes (X'96')

The X'96' subvector transports code points for stored text detailing the probable failure causes for the alert condition and the recommended actions to be taken in connection with these causes. This subvector can also transport additional detailed data to be inserted into the text, or indexed by the failure cause or the recommended action code points, or both.

Some code points have qualifier or product set identifier information embedded within the code point text. To view a listing of Failure Causes (X'96'), access member BNJ96TBL in data set BNJPNL1.

If you want information	Refer to
On the format of the X'96' subvector	<i>Systems Network Architecture Formats</i>

Notices

This information was developed for products and services offered in the U.S.A.

IBM may not offer the products, services, or features discussed in this document in other countries. Consult your local IBM representative for information on the products and services currently available in your area. Any reference to an IBM product, program, or service is not intended to state or imply that only that IBM product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any IBM intellectual property right may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any non-IBM product, program, or service.

IBM may have patents or pending patent applications covering subject matter described in this document. The furnishing of this document does not give you any license to these patents. You can send license inquiries, in writing, to:

IBM Director of Licensing
IBM Corporation
North Castle Drive
Armonk, NY 10504-1785
U.S.A.

For license inquiries regarding double-byte (DBCS) information, contact the IBM Intellectual Property Department in your country or send inquiries, in writing, to:

Intellectual Property Licensing
Legal and Intellectual Property Law
IBM Japan, Ltd.
19-21, Nihonbashi-Hakozakicho, Chuo-ku
Tokyo 103-8510, Japan

The following paragraph does not apply to the United Kingdom or any other country where such provisions are inconsistent with local law:

INTERNATIONAL BUSINESS MACHINES CORPORATION PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

Some states do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement might not apply to you.

This information could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. IBM may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time without notice.

Any references in this information to non-IBM Web sites are provided for convenience only and do not in any manner serve as an endorsement of those Web sites. The materials at those Web sites are not part of the materials for this IBM product and use of those Web sites is at your own risk.

IBM may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

Licensees of this program who wish to have information about it for the purpose of enabling: (i) the exchange of information between independently created programs and other programs (including this one) and (ii) the mutual use of the information which has been exchanged, should contact:

IBM Corporation
224A/101
11400 Burnet Road

Austin, TX 78758
U.S.A.

Such information may be available, subject to appropriate terms and conditions, including in some cases payment of a fee.

The licensed program described in this document and all licensed material available for it are provided by IBM under terms of the IBM Customer Agreement, IBM International Program License Agreement or any equivalent agreement between us.

Information concerning non-IBM products was obtained from the suppliers of those products, their published announcements or other publicly available sources. IBM has not tested those products and cannot confirm the accuracy of performance, compatibility or any other claims related to non-IBM products. Questions on the capabilities of non-IBM products should be addressed to the suppliers of those products.

Programming Interfaces

This publication documents information that is NOT intended to be used as Programming Interfaces of IBM Z NetView.

Trademarks

IBM, the IBM logo, and [ibm.com](http://www.ibm.com)[®] are trademarks or registered trademarks of International Business Machines Corp., registered in many jurisdictions worldwide. Other product and service names might be trademarks of IBM or other companies. A current list of IBM trademarks is available on the Web at "Copyright and trademark information" at <http://www.ibm.com/legal/copytrade.shtml>.

Adobe is a trademark of Adobe Systems Incorporated in the United States, and/or other countries.

Java and all Java-based trademarks and logos are trademarks or registered trademarks of Oracle and/or its affiliates.

Linux is a registered trademark of Linus Torvalds in the United States, other countries, or both.

Microsoft and Windows are trademarks of Microsoft Corporation in the United States, other countries, or both.

UNIX is a registered trademark of The Open Group in the United States and other countries.

Other product and service names might be trademarks of IBM or other companies.

Privacy policy considerations

IBM Software products, including software as a service solutions, ("Software Offerings") may use cookies or other technologies to collect product usage information, to help improve the end user experience, to tailor interactions with the end user or for other purposes. In many cases no personally identifiable information is collected by the Software Offerings. Some of our Software Offerings can help enable you to collect personally identifiable information. If this Software Offering uses cookies to collect personally identifiable information, specific information about this offering's use of cookies is set forth below.

This Software Offering does not use cookies or other technologies to collect personally identifiable information.

If the configurations deployed for this Software Offering provide you as customer the ability to collect personally identifiable information from end users via cookies and other technologies, you should seek your own legal advice about any laws applicable to such data collection, including any requirements for notice and consent.

For more information about the use of various technologies, including cookies, for these purposes, See IBM's Privacy Policy at <http://www.ibm.com/privacy> and IBM's Online Privacy Statement at <http://www.ibm.com/privacy/details> the section entitled "Cookies, Web Beacons and Other Technologies" and the "IBM Software Products and Software-as-a-Service Privacy Statement" at <http://www.ibm.com/software/info/product-privacy>.



GC27-2857-08

