Finite impulse response filtering Moving average filter

Dr. Ing. Rodrigo Gonzalez

rodrigo.gonzalez@ingenieria.uncuyo.edu.ar

Control y Sistemas


Ingeniería Mecatrónica, Facultad de Ingeniería, Universidad Nacional de Cuyo

April 2020




Filtering in different domains

- Filtering in **time domain** (signal restoration, smoothing, denoising).
- Filtering in **frequency domain** (signal separation).
- Choosing filtering in time or frequency domain depends on where the information is.

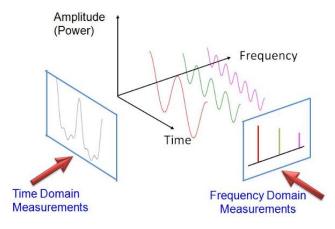


Information in time domain

- Information is contained in amplitude and time of the signal.
- Each sample contains information that is interpretable without reference to any other sample.
- The step response describes how information in time domain is being modified by the system.
- Examples: electrocardiography (ECG) signal, accelerometer, temperature...

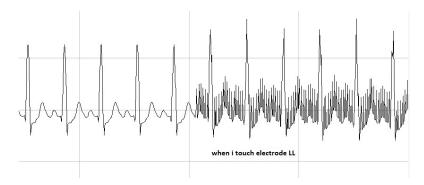

Information in frequency domain

- Information of a signal is contained in frequency response, phase and amplitude.
- Many samples in the signal are needed for frequency analysis.
- The frequency response shows how information in frequency domain is being changed.
- Examples: telephone voice channel, equalizer...

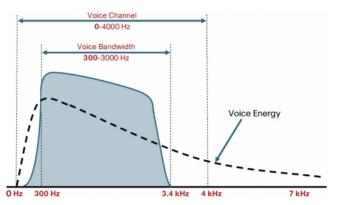


Classification of discrete filters

Table: Classification of discrete filters

| | Finite impulse response (FIR) | Infinite impulse response (IIR) |
|-------------------------------|---|---------------------------------|
| Filtering in time domain | Moving average | Leaky Integrator |
| Filtering in frequency domain | Windowed Filters Equiripple Minimax | Bilinear z-transform |

FIR filtering structure

Figure 5-1 Filters: (a) an analog filter with a noisy tone input and a reduced-noise tone output; (b) the digital equivalent of the analog filter.

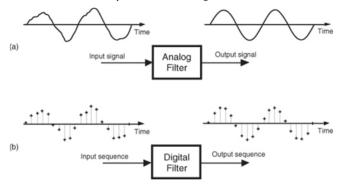



Time domain parameters, step response


- Risetime (between 10%~90% amplitude).
- Overshoot.
- Linear phase.


It is not possible to optimize a filter for both domains.


Good performance in the time domain results in poor performance in the frequency domain, and vice versa.

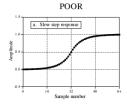


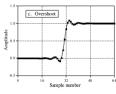

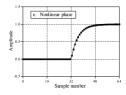

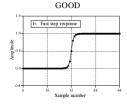

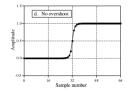

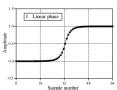

Moving average filter

- The moving average filter is a convolution of the input signal with a rectangular pulse having an area of one.
- Local average.
- There is a delay of N/2 samples between input and output.


$$h[n] = \frac{1}{N} \sum_{k=0}^{N-1} \delta[n-k],$$
 (1)

$$h[n] = \begin{cases} \frac{1}{N} & 0 \le n < N \\ 0 & \text{otherwise} \end{cases}$$
 (2)

$$y[n] = x[n] * h[n] = \frac{1}{N} \sum_{k=0}^{N-1} x[n-k]$$
 (3)


It can be seen that the moving average filter is a FIR filter. Why?

Moving average filter, example

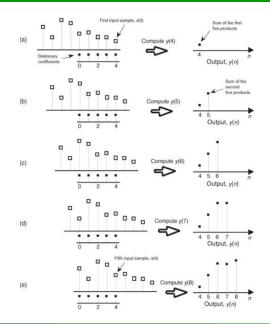

Noise Reduction vs. Step Response

MA reduces random white noise while trying to keep the sharpest step response.

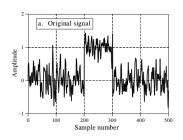


b. 11 point moving average

b. 11 point moving average


b. 11 point moving average

or of the state of the st

FIGURE 15-1
Example of a moving average filter. In (a), a rectangular pulse is buried in random noise. In (b) and (c), this signal is filtered with 11 and 51 point moving average filters, respectively. As the number of points in the filter increases, the noise becomes lower; however, the edges becoming less sharp. The moving average filter is the optimal solution for this problem, providing the lowest noise possible for a given edge sharpness.

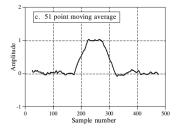


Noise Reduction

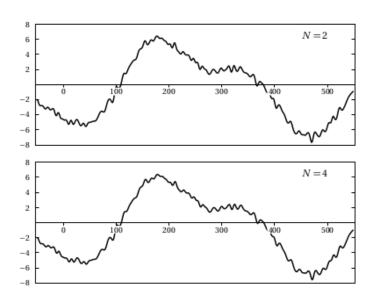


Noise Reduction, II

• Note how the signal is delayed as *N* grows.

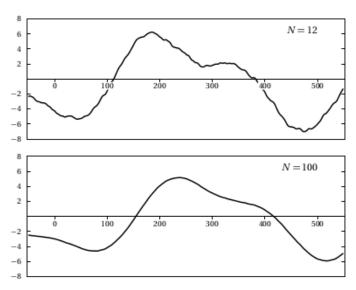


Frequency Response

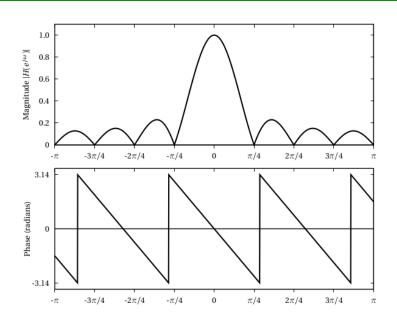

Frequency Response, II

- The moving average filter is a bad low-pass filter.
- In short, the moving average is a good smoothing filter (the action in the time domain), but a bad low-pass filter (the action in the frequency domain).

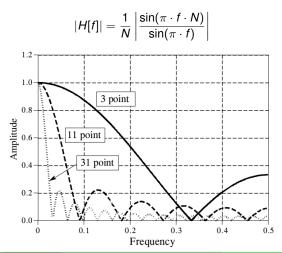

(4)

MA cut-off frequency

The cut-off frequency, f_{co} , can be defined as the frequency at which the magnitude ratio is 0.707 (-3 dB),

$$|H[f]| = \frac{1}{N} \left| \frac{\sin(\pi \cdot f \cdot N)}{\sin(\pi \cdot f)} \right| \tag{5}$$

$$0.707 = \frac{1}{N} \left| \frac{\sin(\pi \cdot f_{co} \cdot N)}{\sin(\pi \cdot f_{co})} \right|$$
 (6)

If *N* is the length of the moving average, then an approximate normalized cut-off frequency $F_{co} = f_{co}/f_s$ (valid for $N \ge 2$) is [3,4],

$$F_{co} = \frac{0.885894}{\sqrt{N^2 - 1}} \tag{7}$$

$$\implies N = \sqrt{\frac{0.885894^2}{F_{co}^2} - 1} \tag{8}$$

Maximum filter order

The following equation imposes a limit to the value of N from the maximum frequency of the signal to be smoothed.

$$N_{max} = \text{round}\left(\sqrt{\frac{0.885894^2 \cdot f_s^2}{f_{co}^2} - 1}\right)$$
 (9)

Example:

- The dynamics of a robots will be studied using an accelerometer.
- The maximum dynamic frequency of the robot it is assumed to be around 10 Hz.
- If the accelerometer is sampled at 100 Hz, the maximum order of an MA filter is:

$$N_{max} = \text{round}\left(\sqrt{\frac{0.885894^2 \cdot 100^2}{10^2} - 1}\right) = 9 \tag{10}$$

What happens if the sampling frequency is increased?

Bibliography

- 1 Paolo Prandoni and Martin Vetterli. Signal processing for communications. Taylor and Francis Group, LLC. 2008. Sections 5.2 and 5.3.1. https://www.sp4comm.org/.
- 2 Steven W. Smith, The Scientist and Engineer's Guide to Digital Signal Processing. Chapters 14 and 15. www.dspguide.com.
- 3 What is the cut-off frequency of a moving average filter? Link.
- 4 3 dB cut-off frequency of moving average. Link.